



8. Level 3 Repair

8-1. Components Layout

MAIN PBA (TOP SIDE)

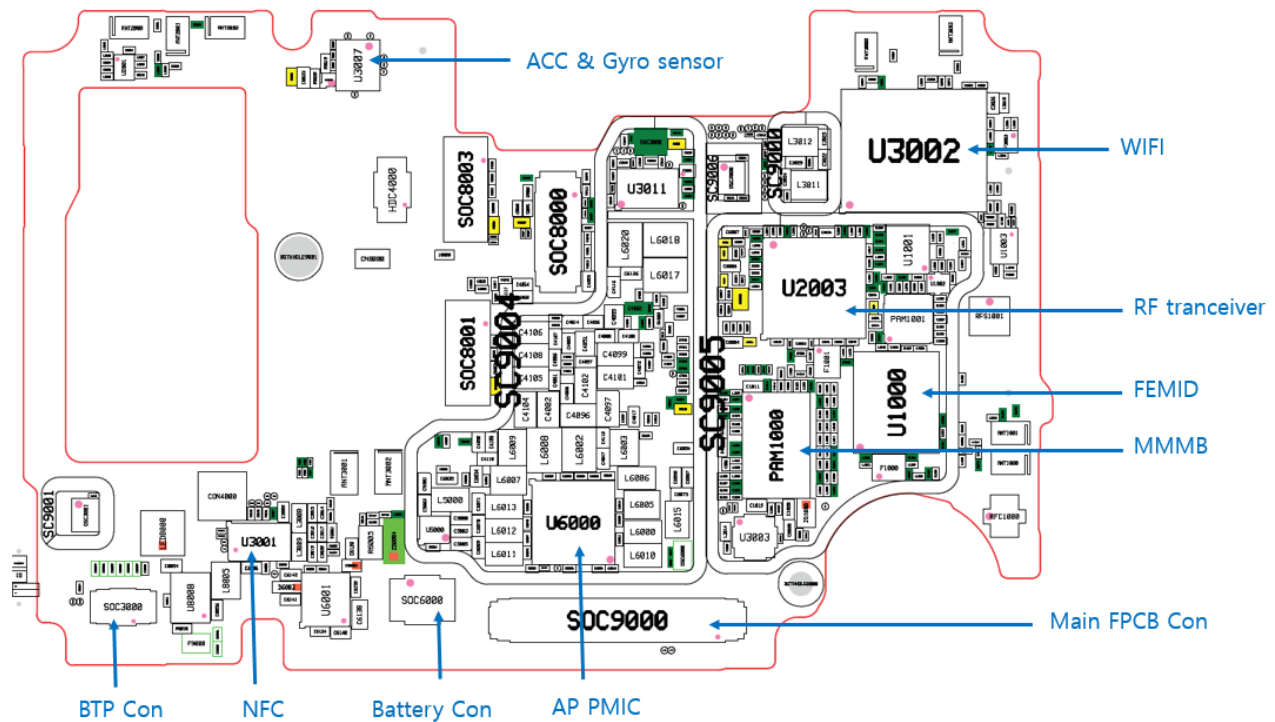


MAIN PBA (BOTTOM SIDE)

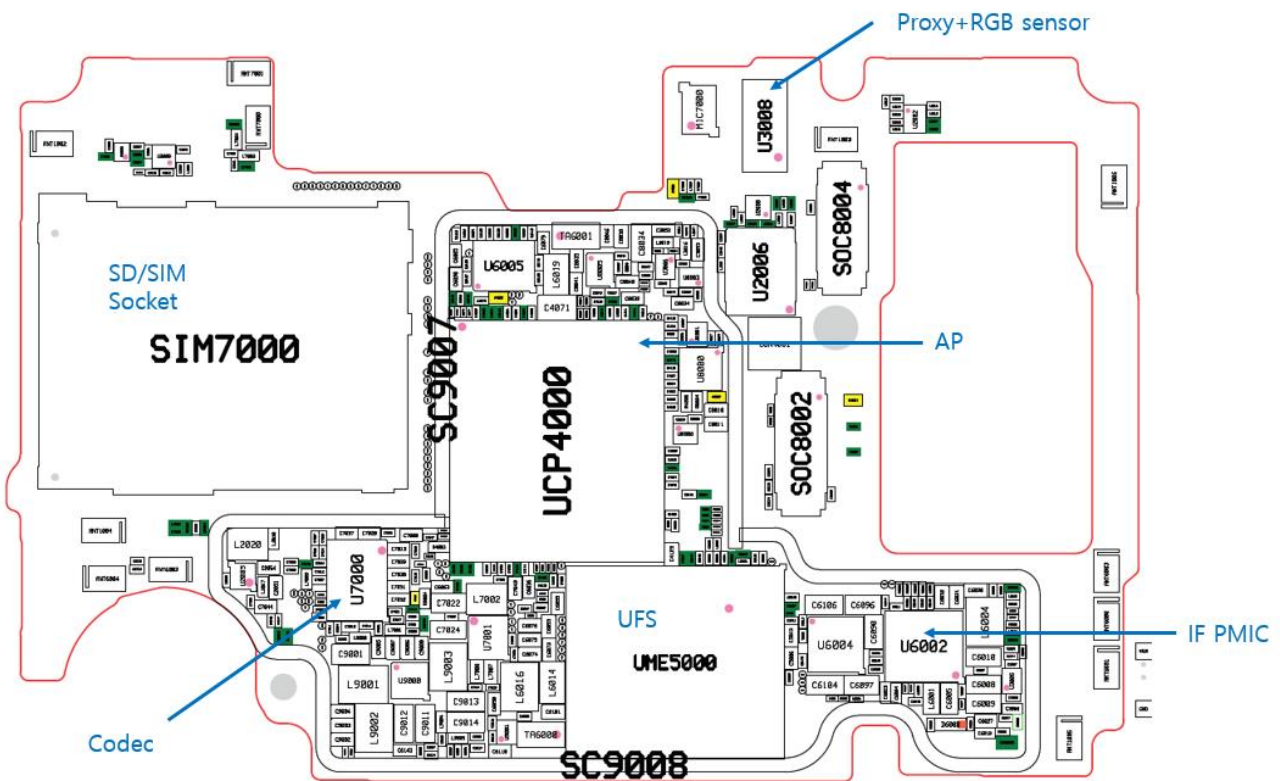


8. Level 3 Repair

SUB PBA (TOP SIDE)

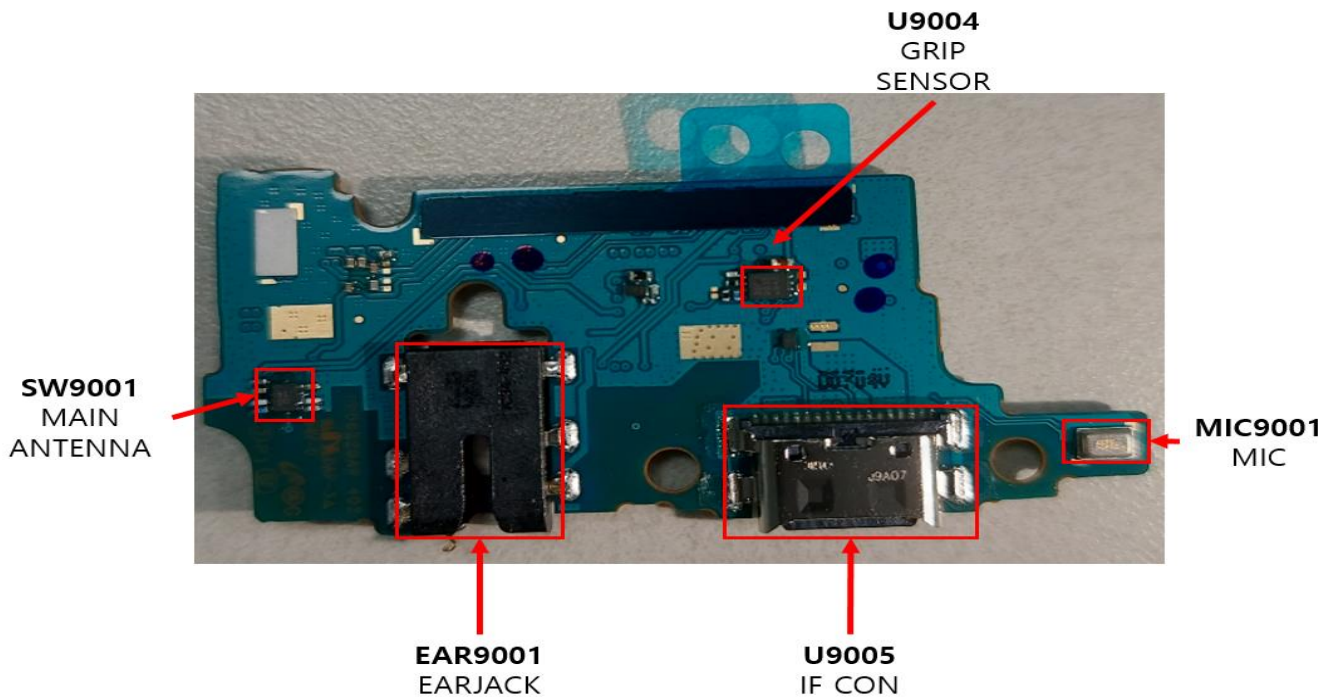



SUB PBA (BOTTOM SIDE)

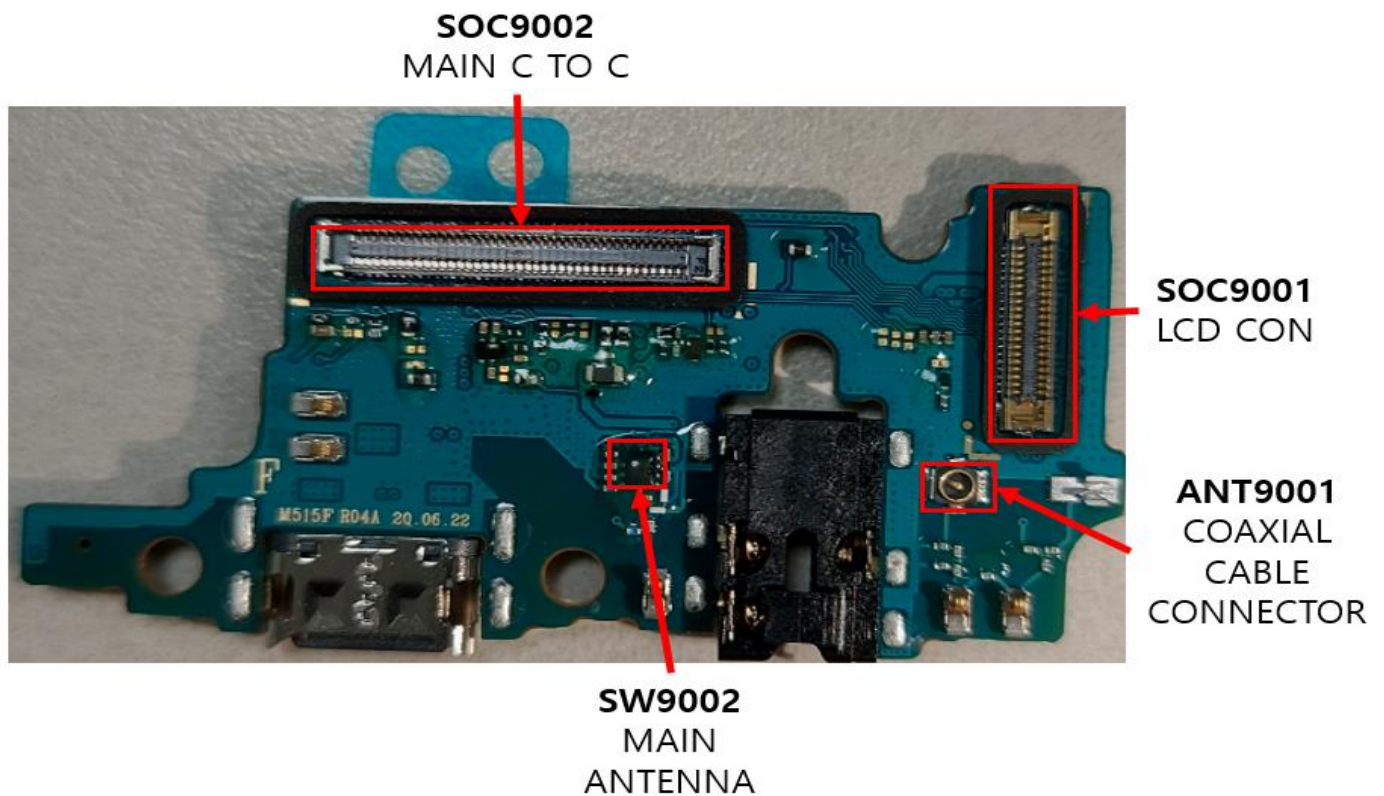

BlockDiagram

Confidential

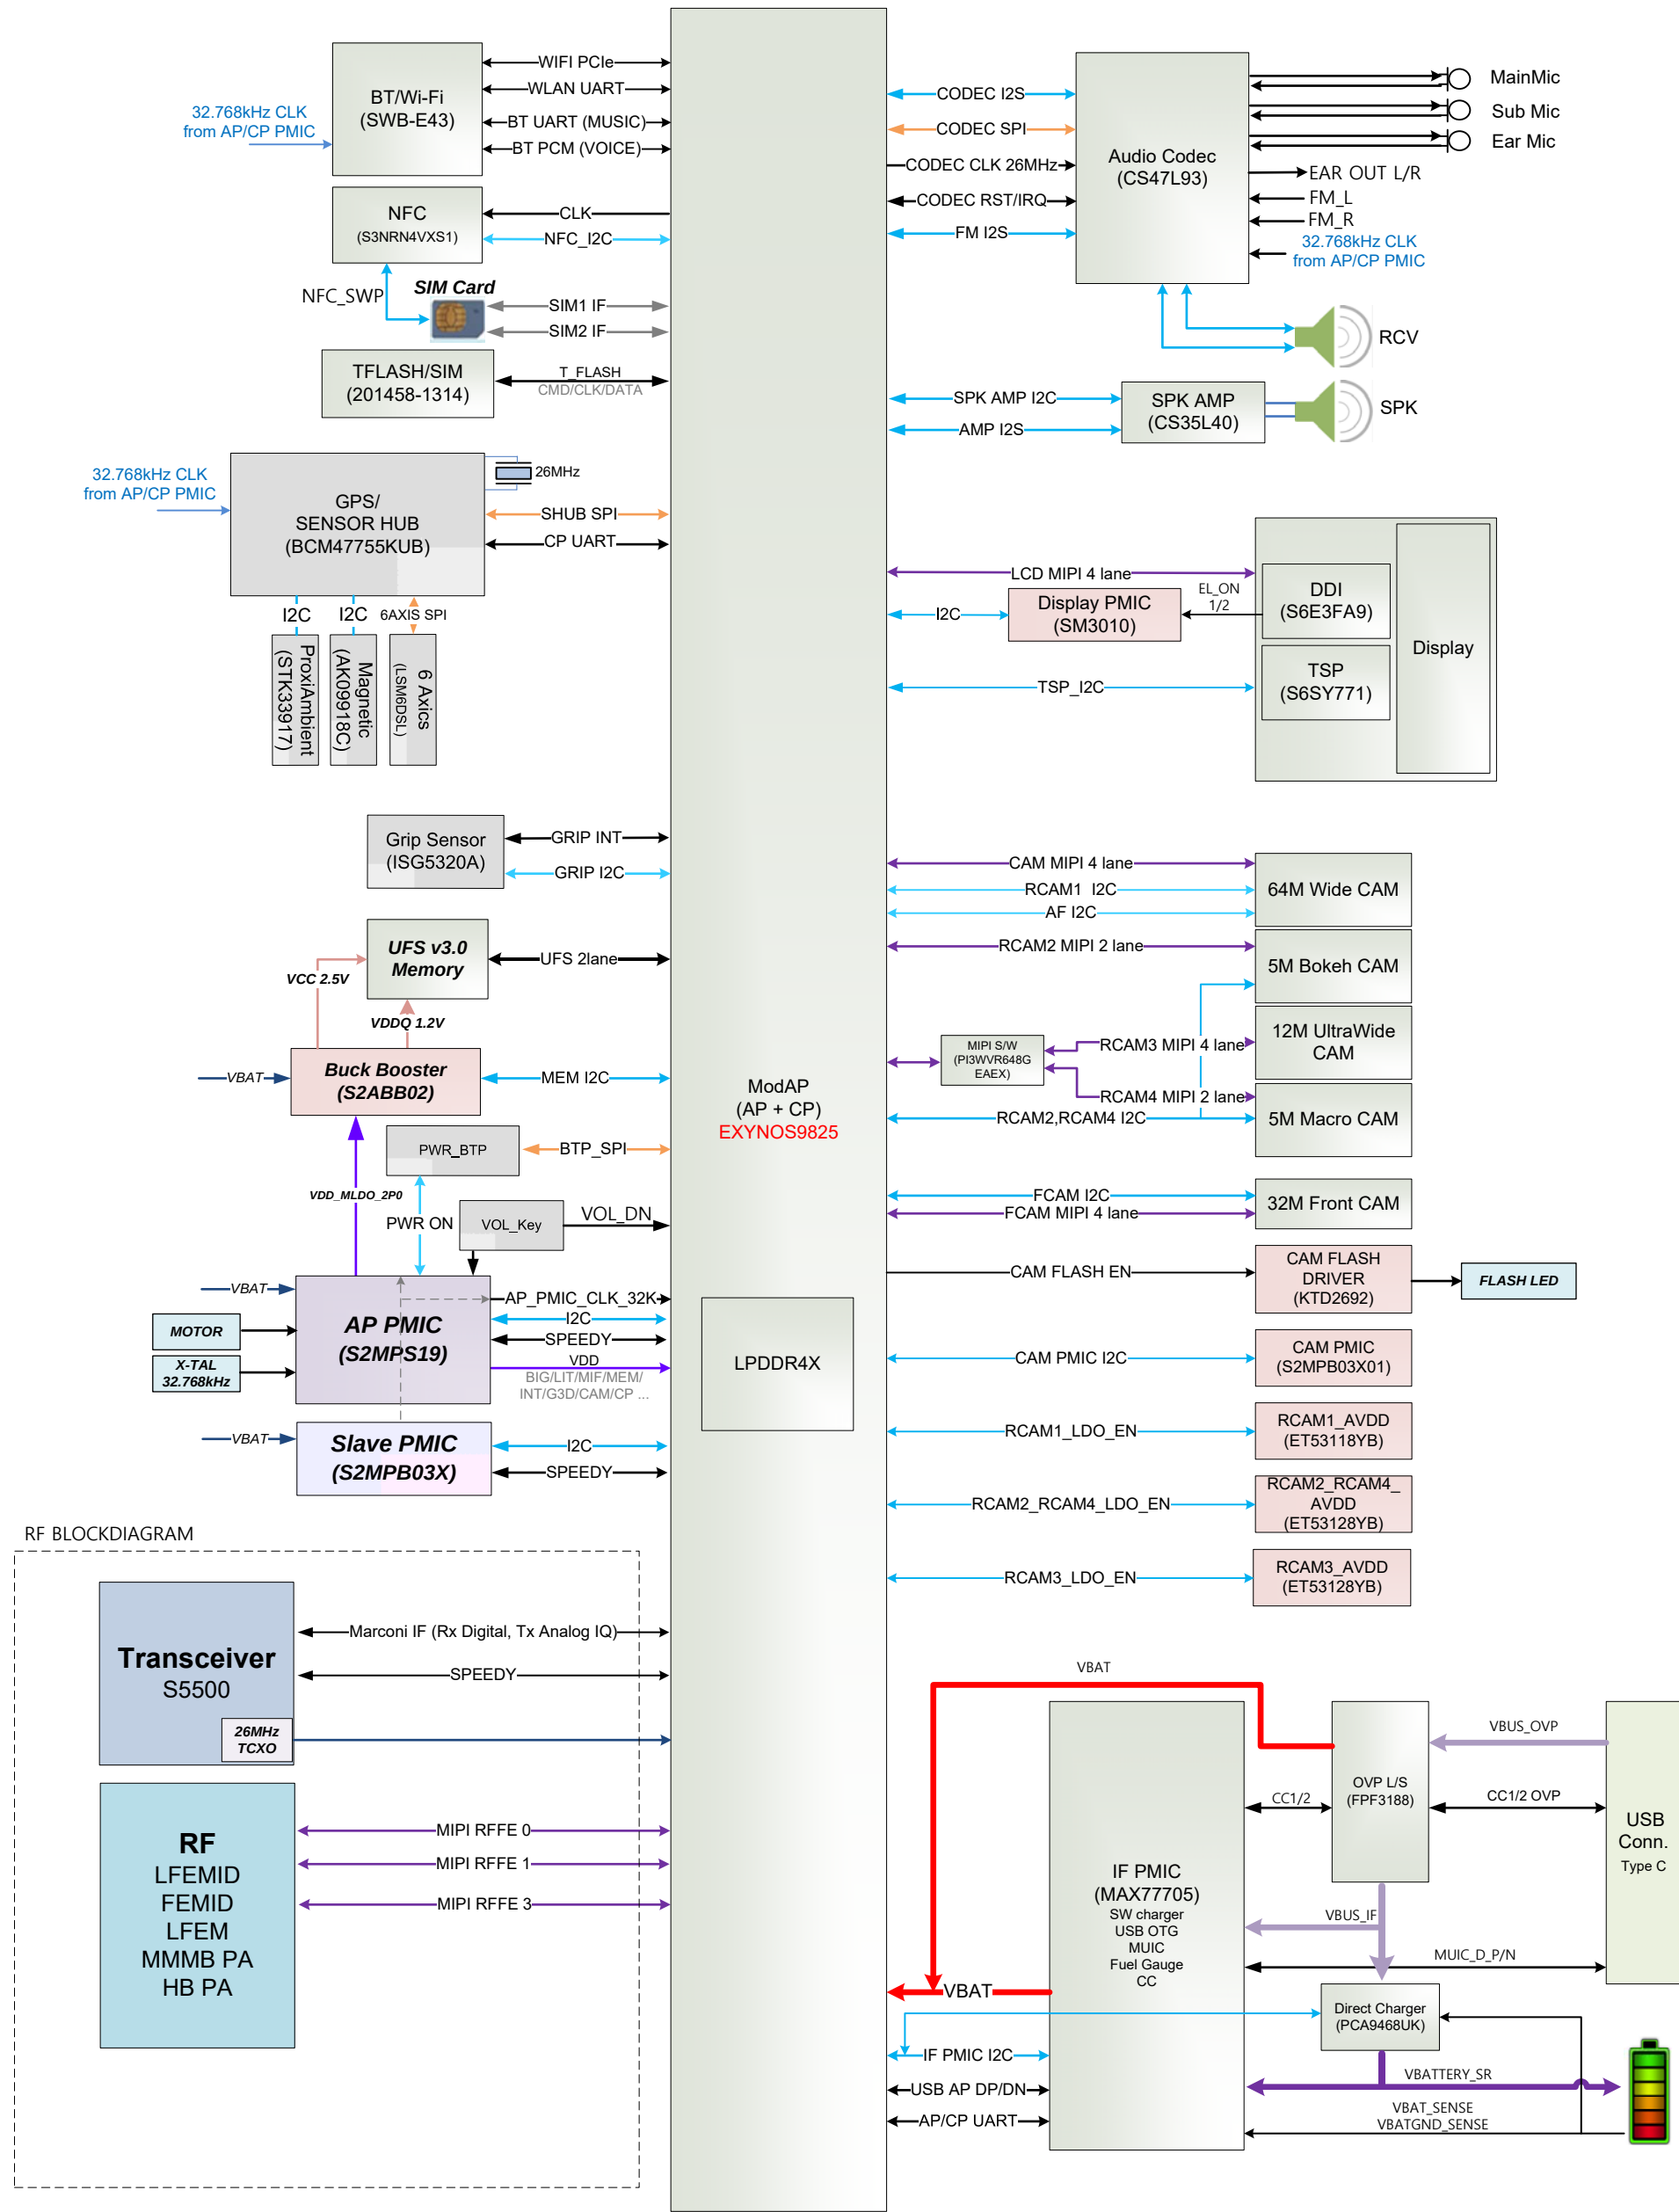

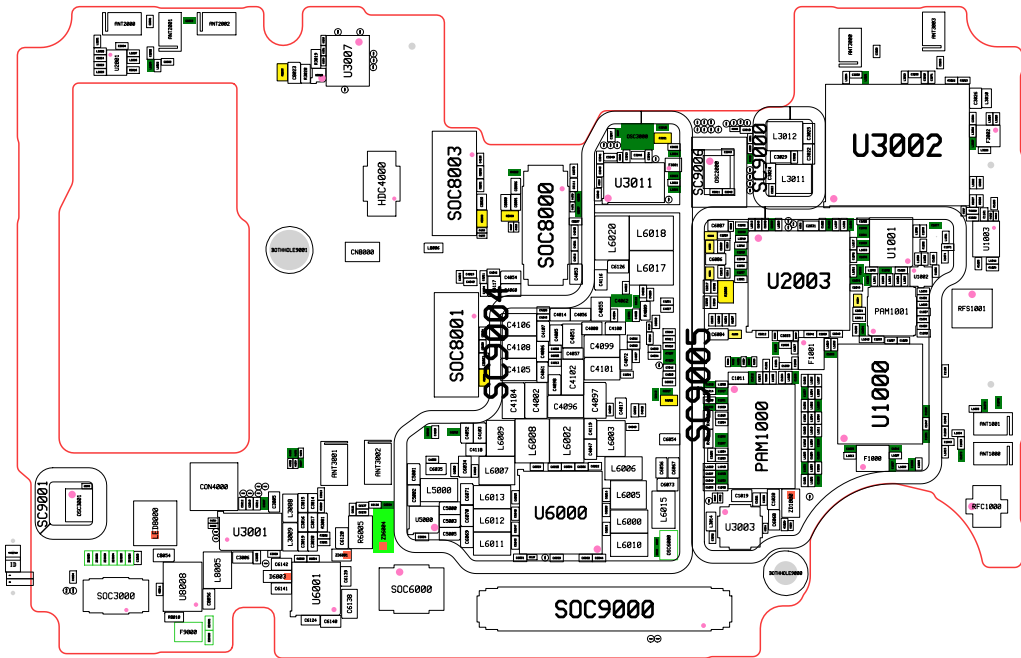

SIM7000

SC9007

UCP4000

UME5000

SC9008

SOC8002

SOC8004

U3008

U2006

CON4001

U7000

U6002

U6004

L6004

U6005

L6019

C4071

TR6001

MIC7000

U3008

INT1000

INT1000

INT1000

INT1000

INT1000

INT1000

INT1004

INT1002

INT1004


INT1000

INT1000

INT1002

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

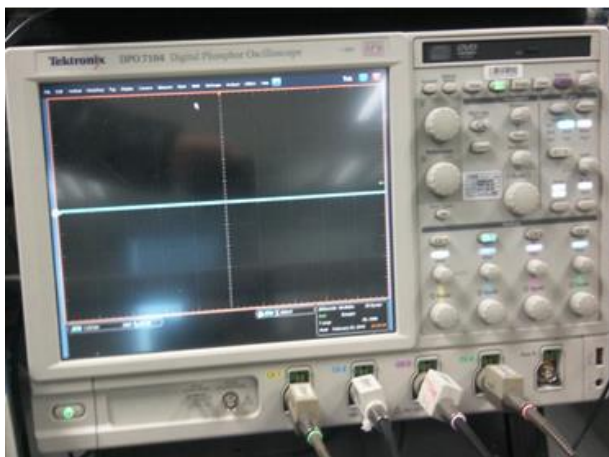

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

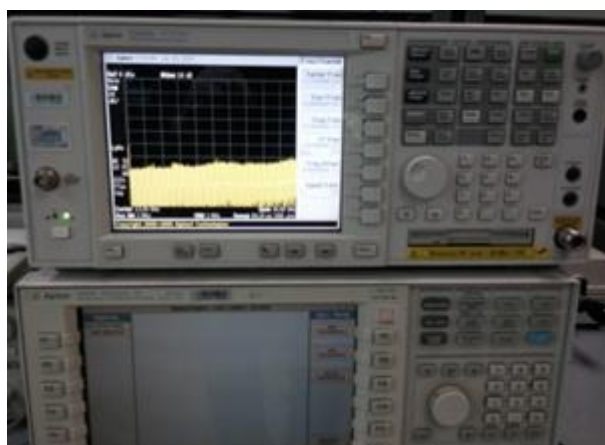


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

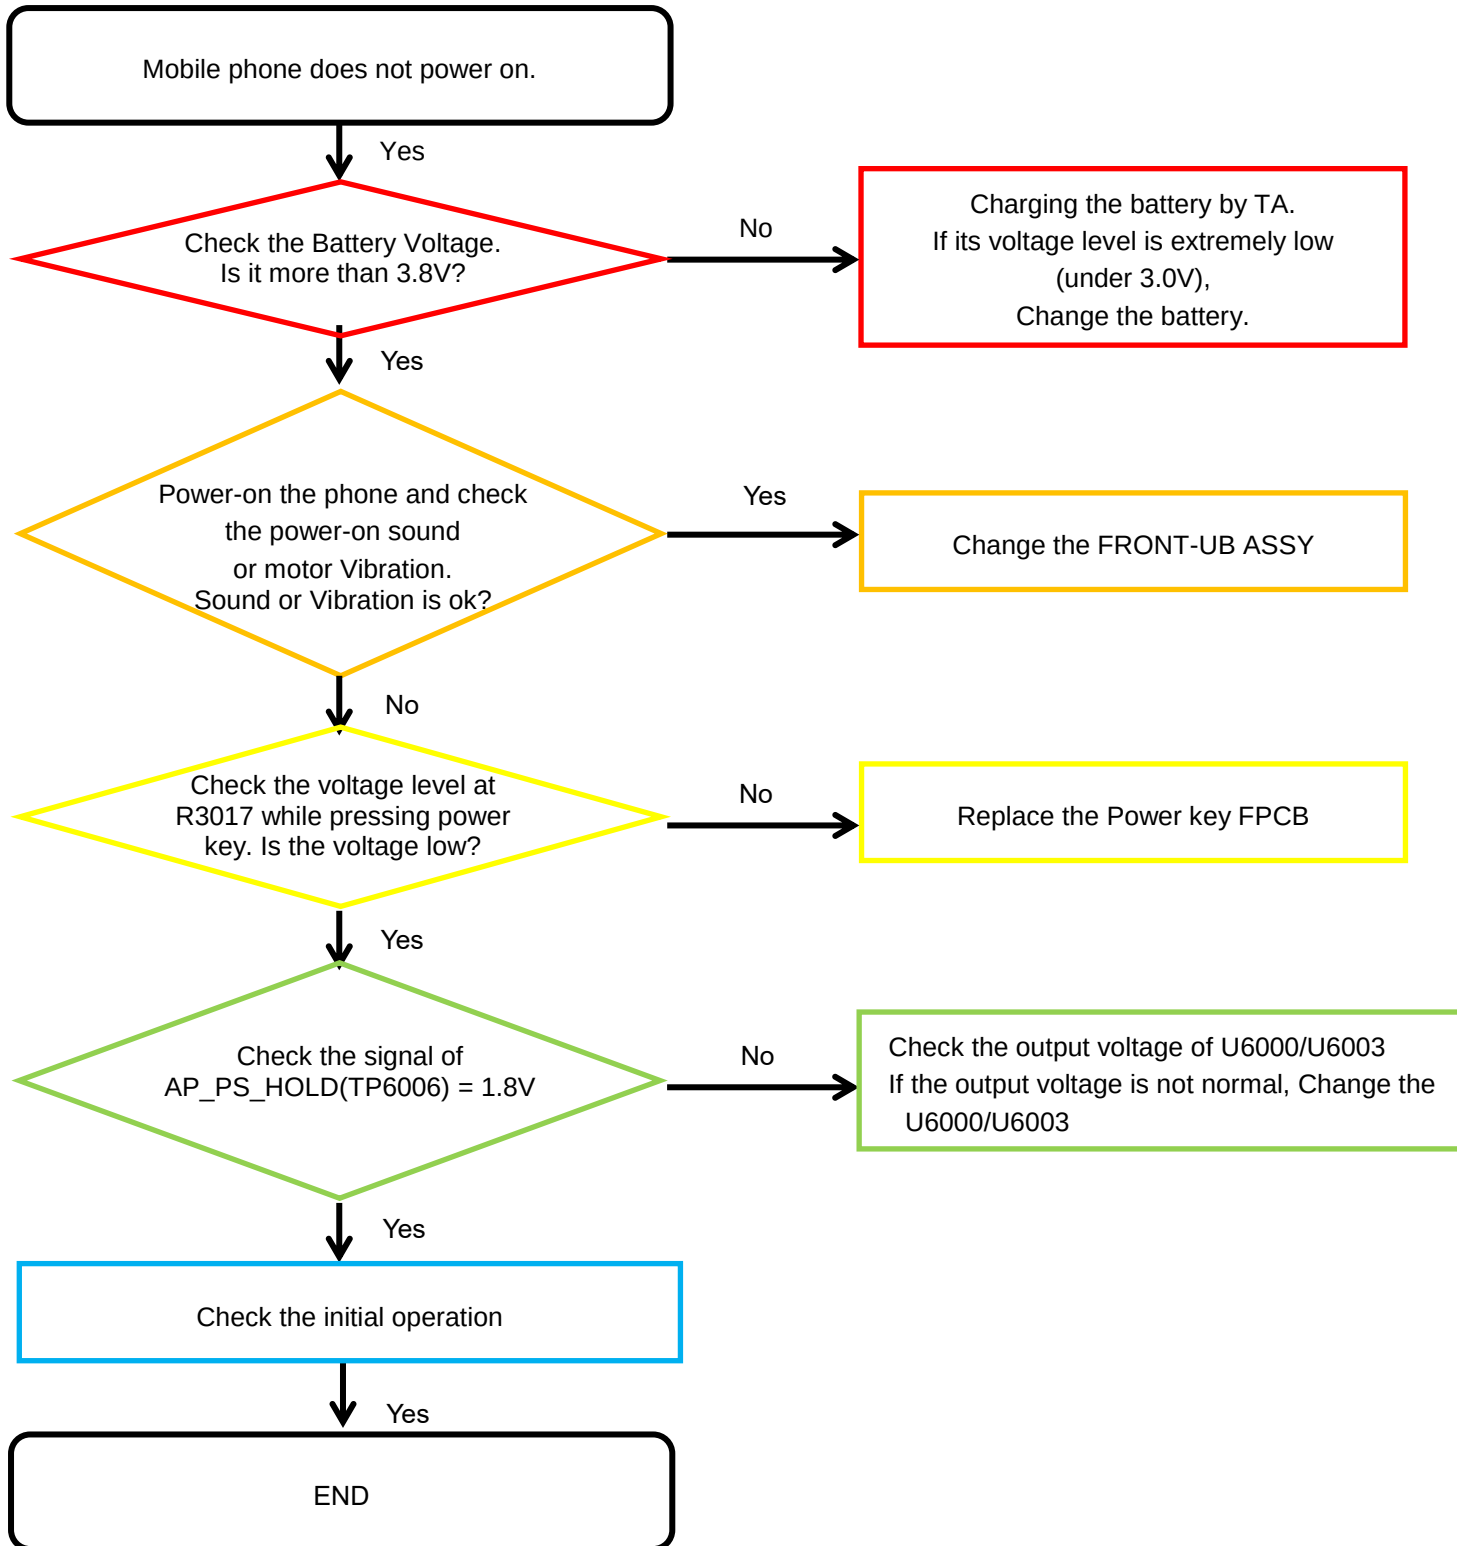


8. Level 3 Repair

8-4-2. Initial

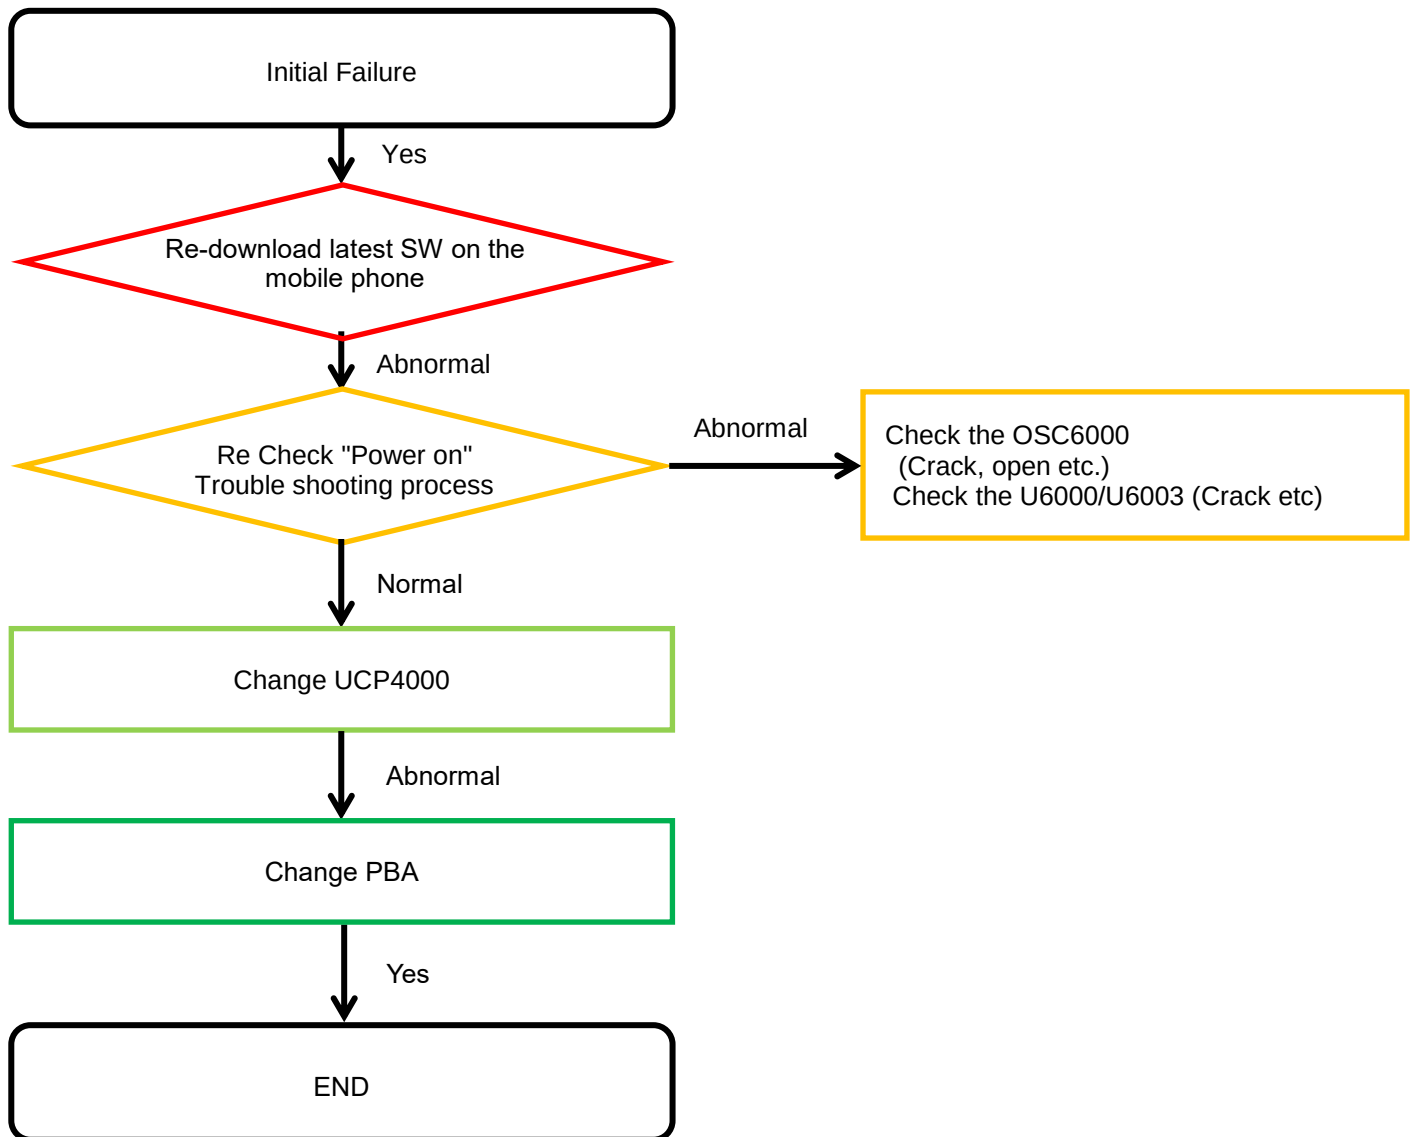


8. Level 3 Repair

8-4-3. No Service

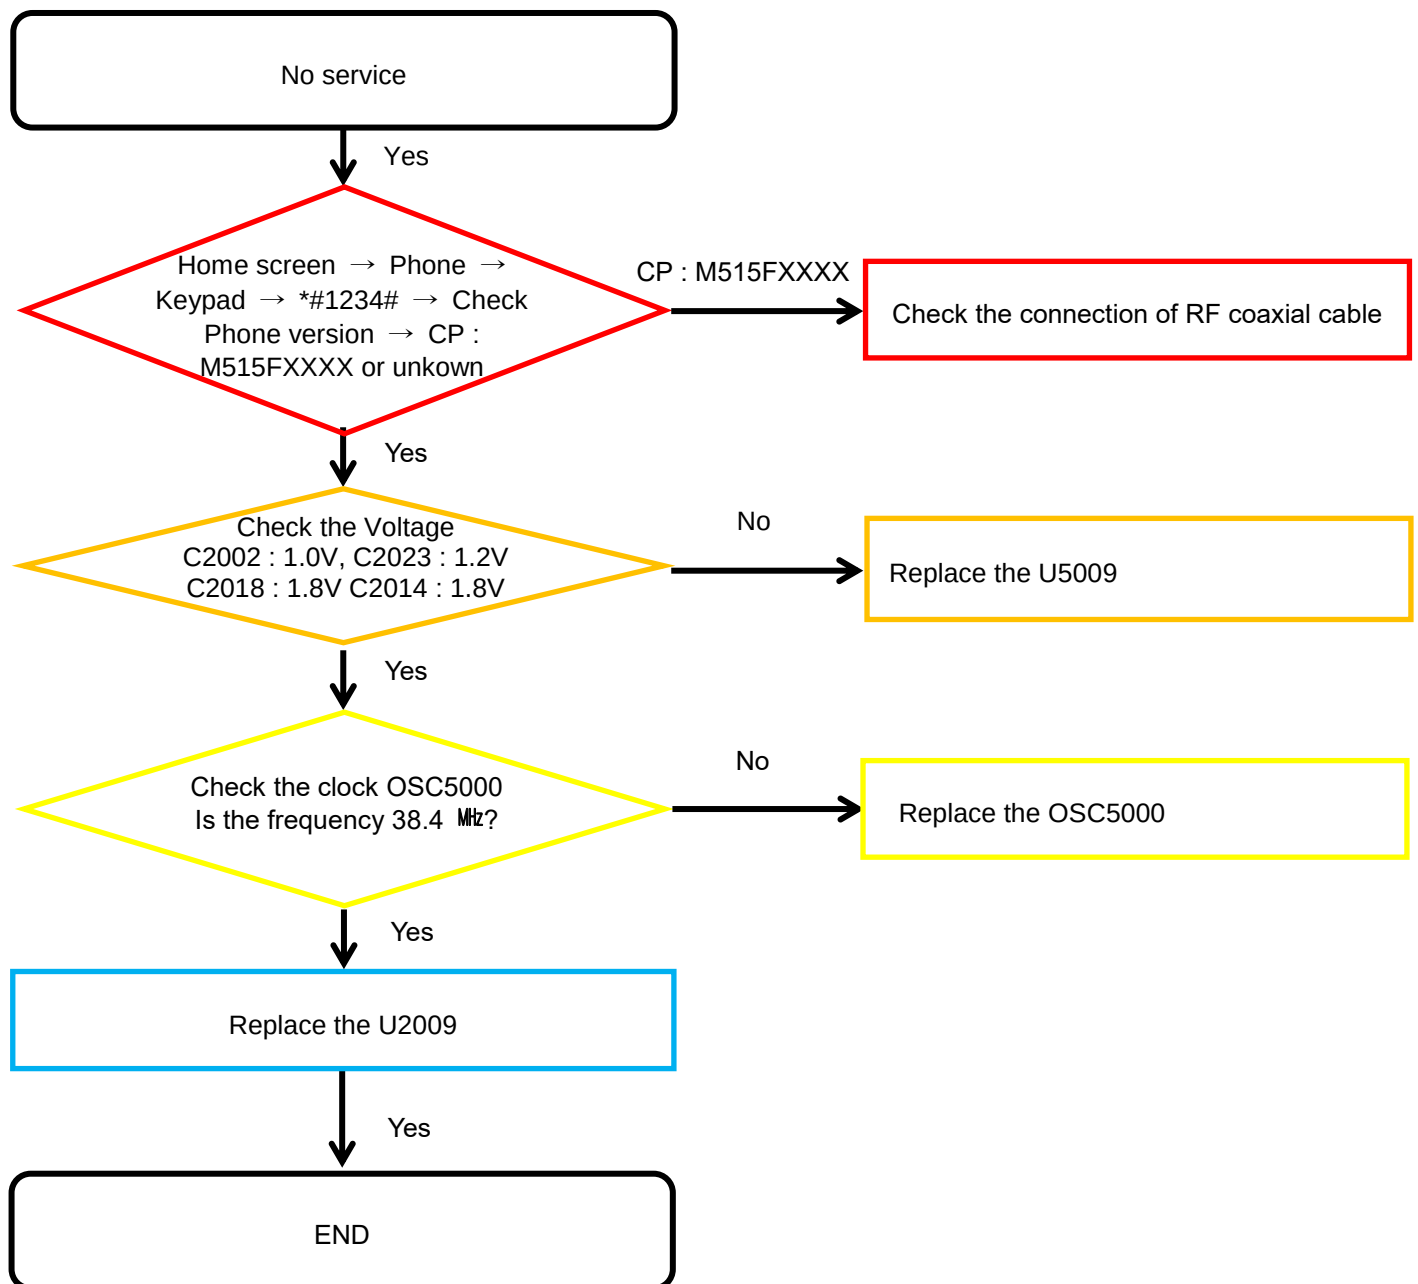


8. Level 3 Repair

8-4-4. SIM Part

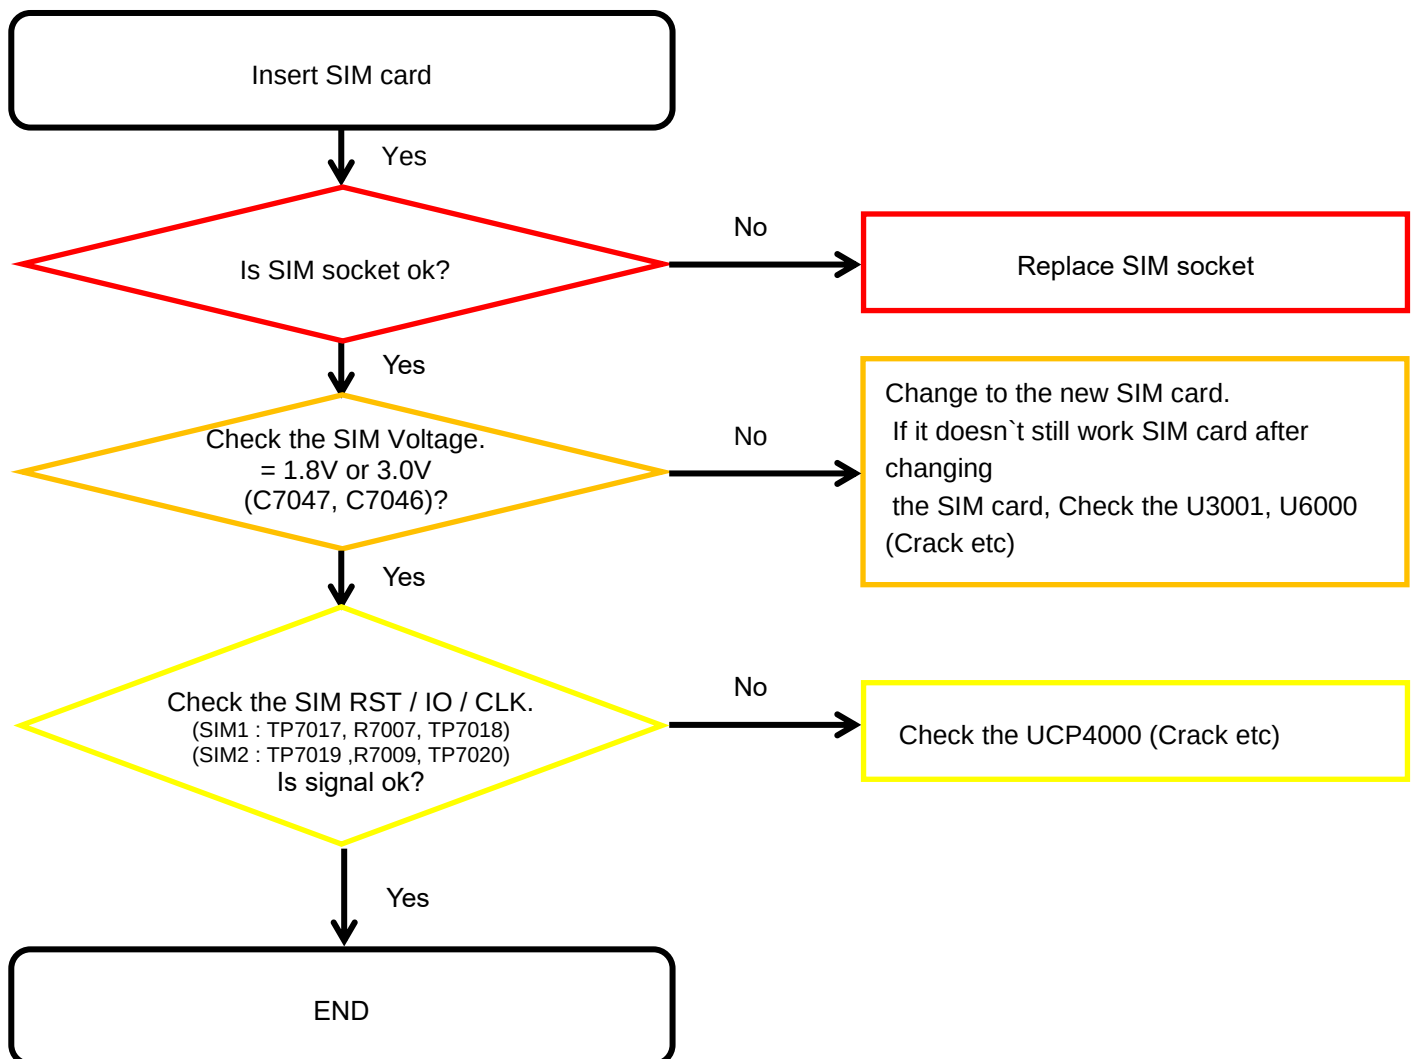


8. Level 3 Repair

8-4-5. T-Flash Part

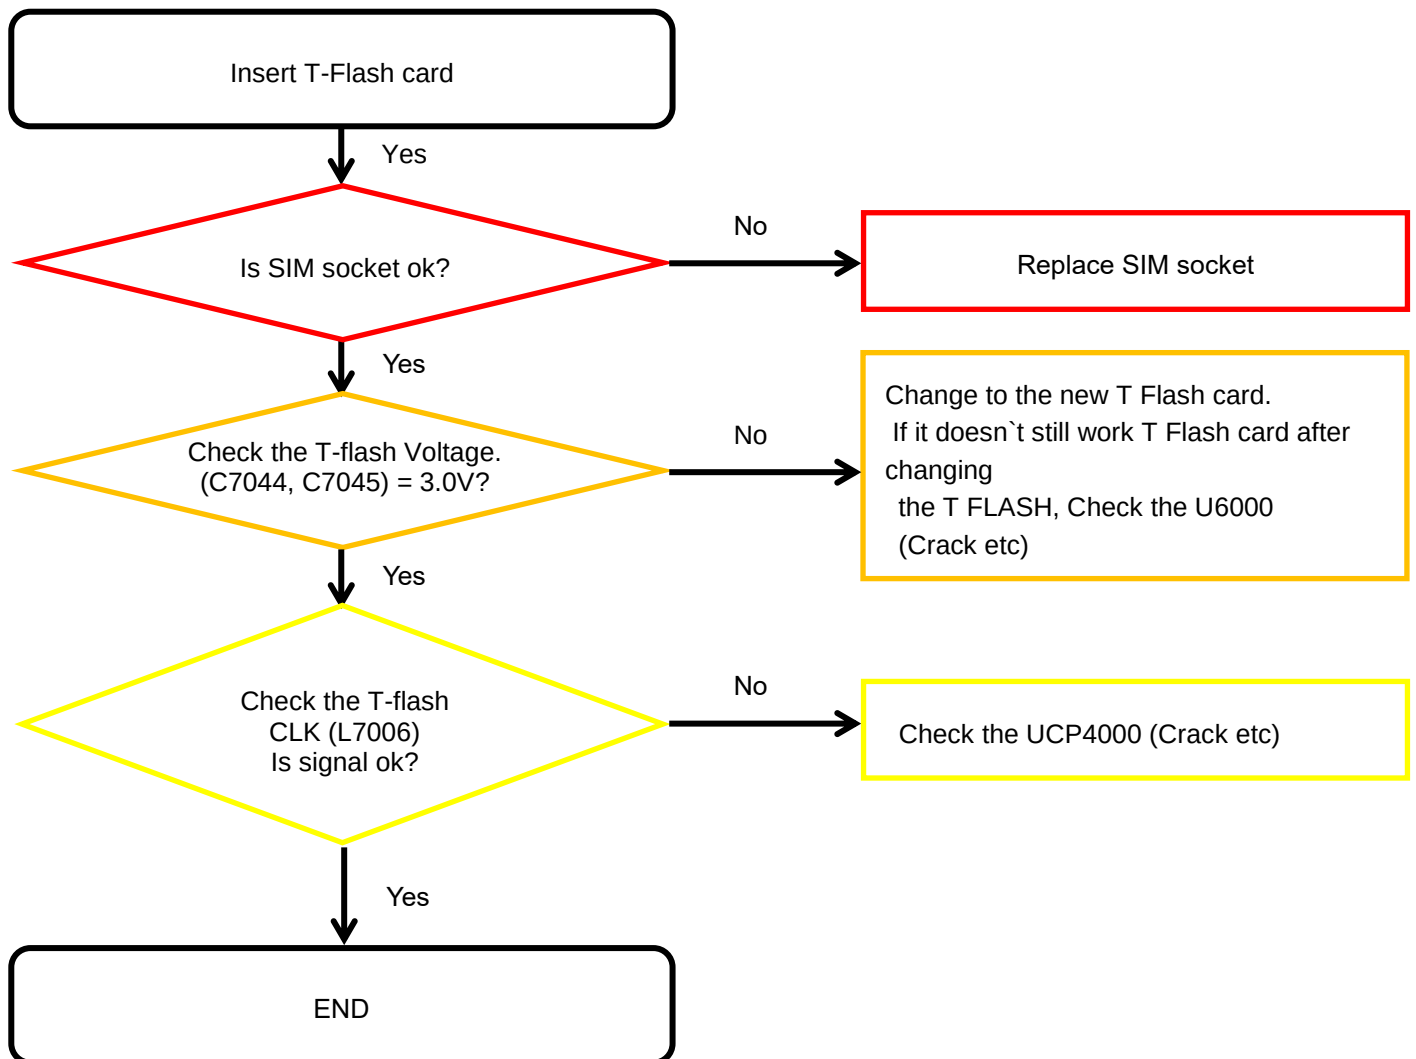


8. Level 3 Repair

8-4-6. Cable Charging Part

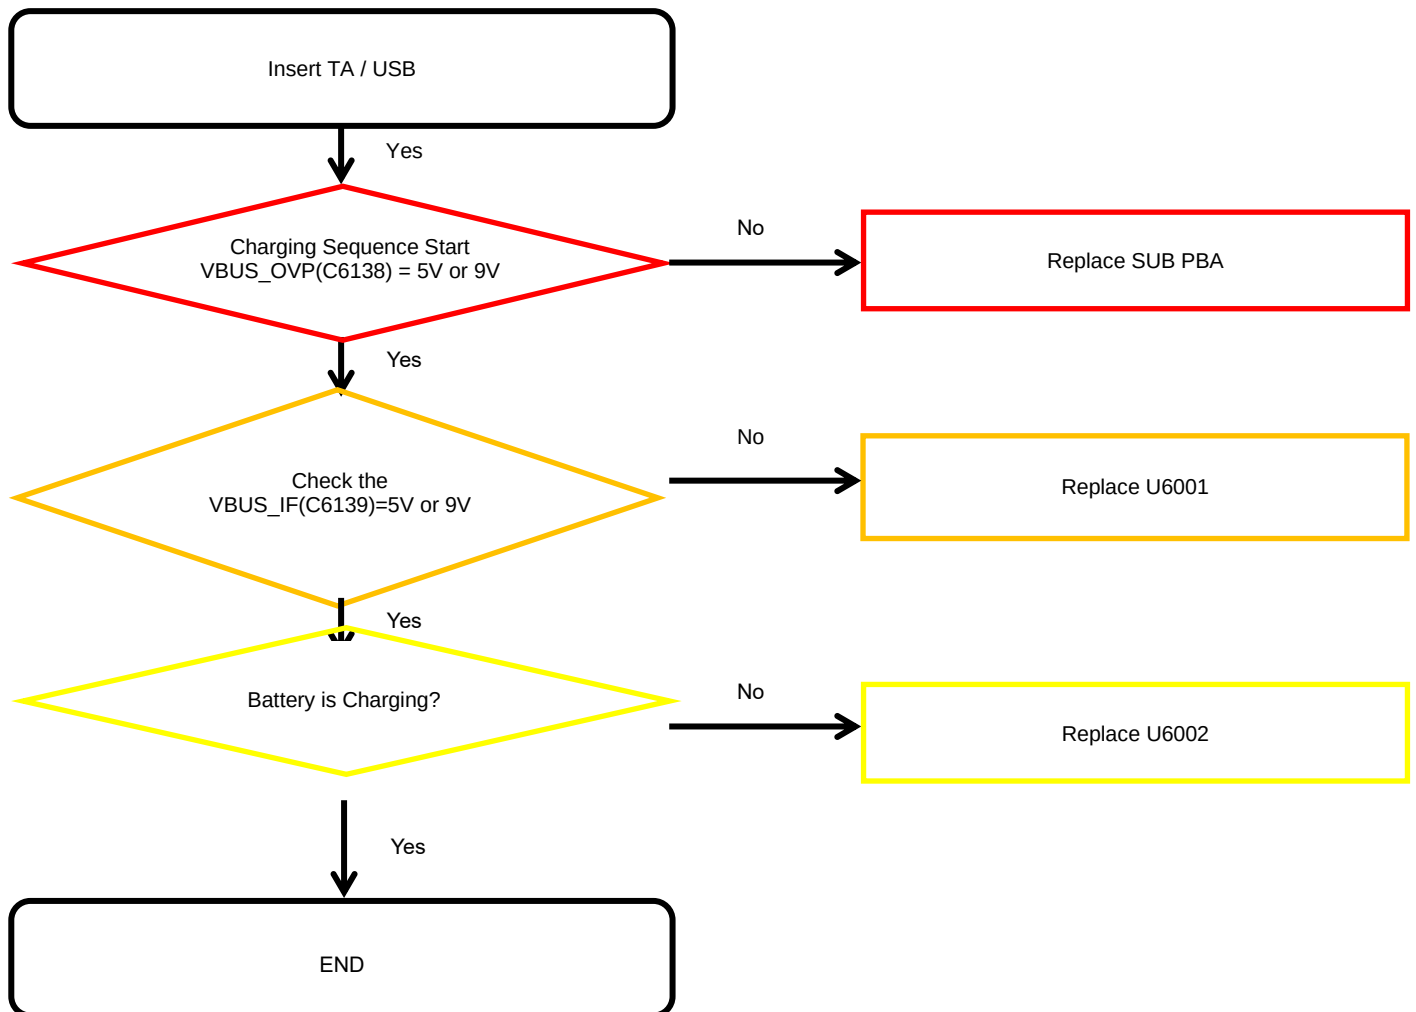


8. Level 3 Repair

8-4-7. OTG

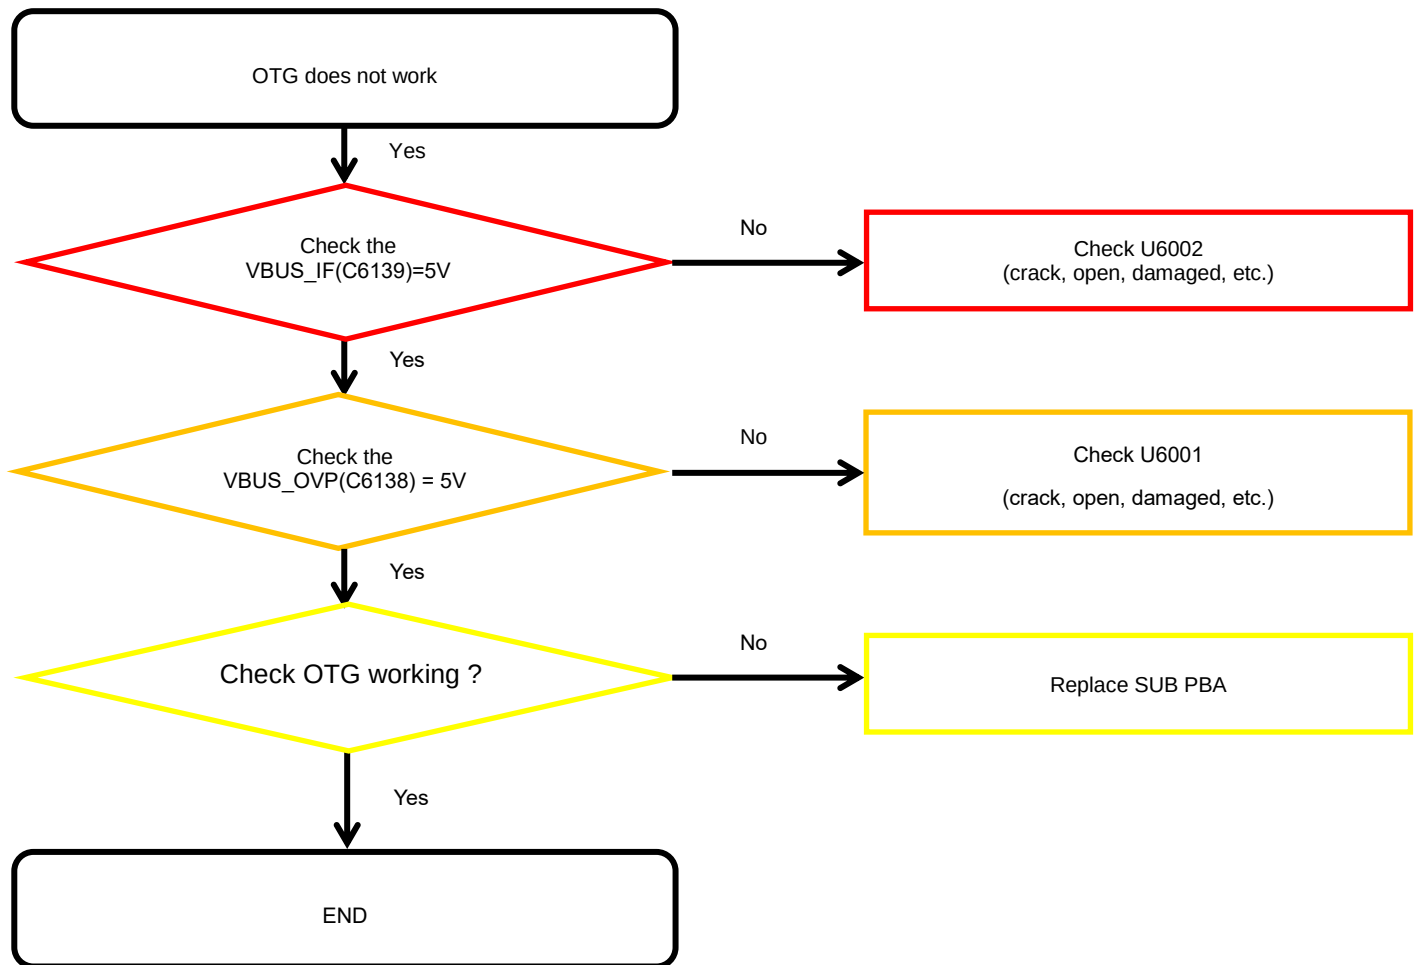


8. Level 3 Repair

8-4-8-1. Magnetic Sensor

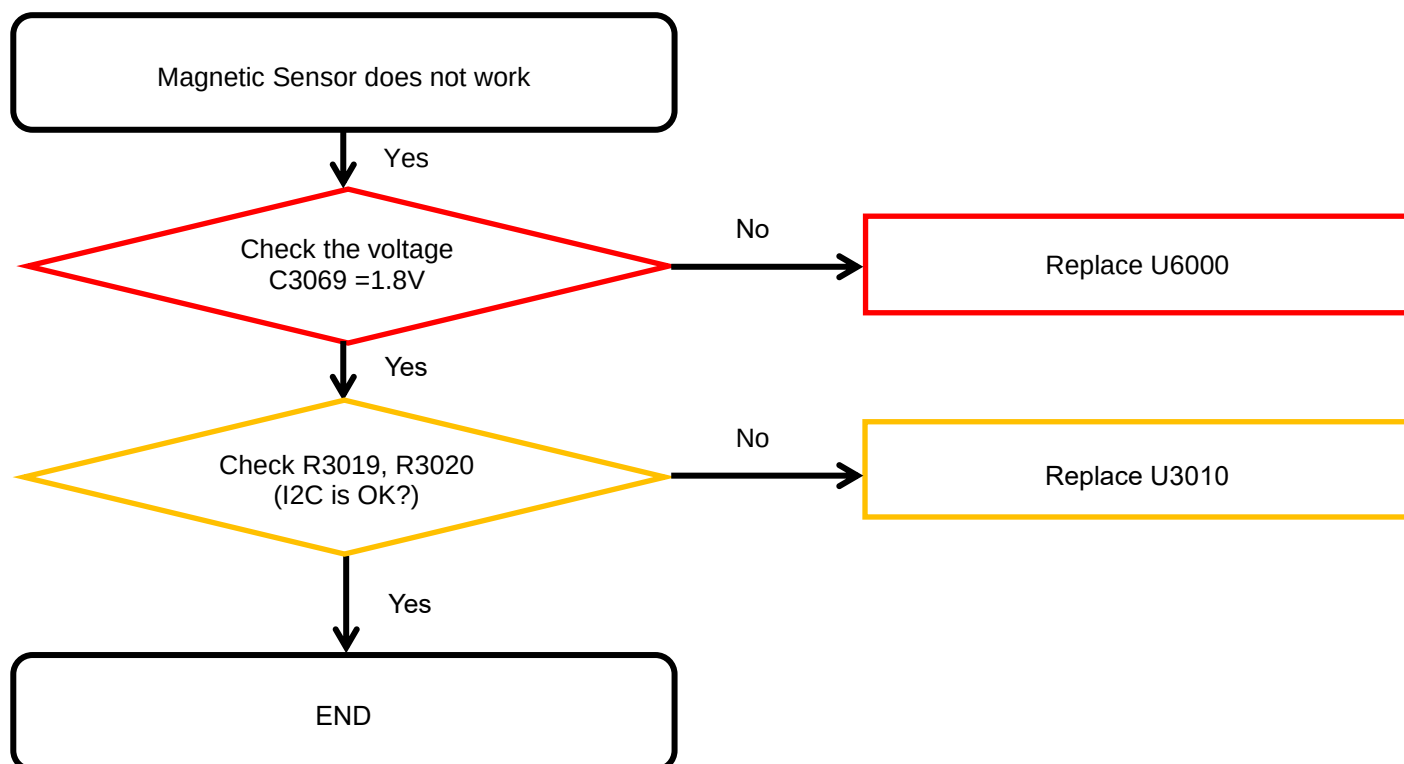


8. Level 3 Repair

8-4-8-2. 6Axis Sensor

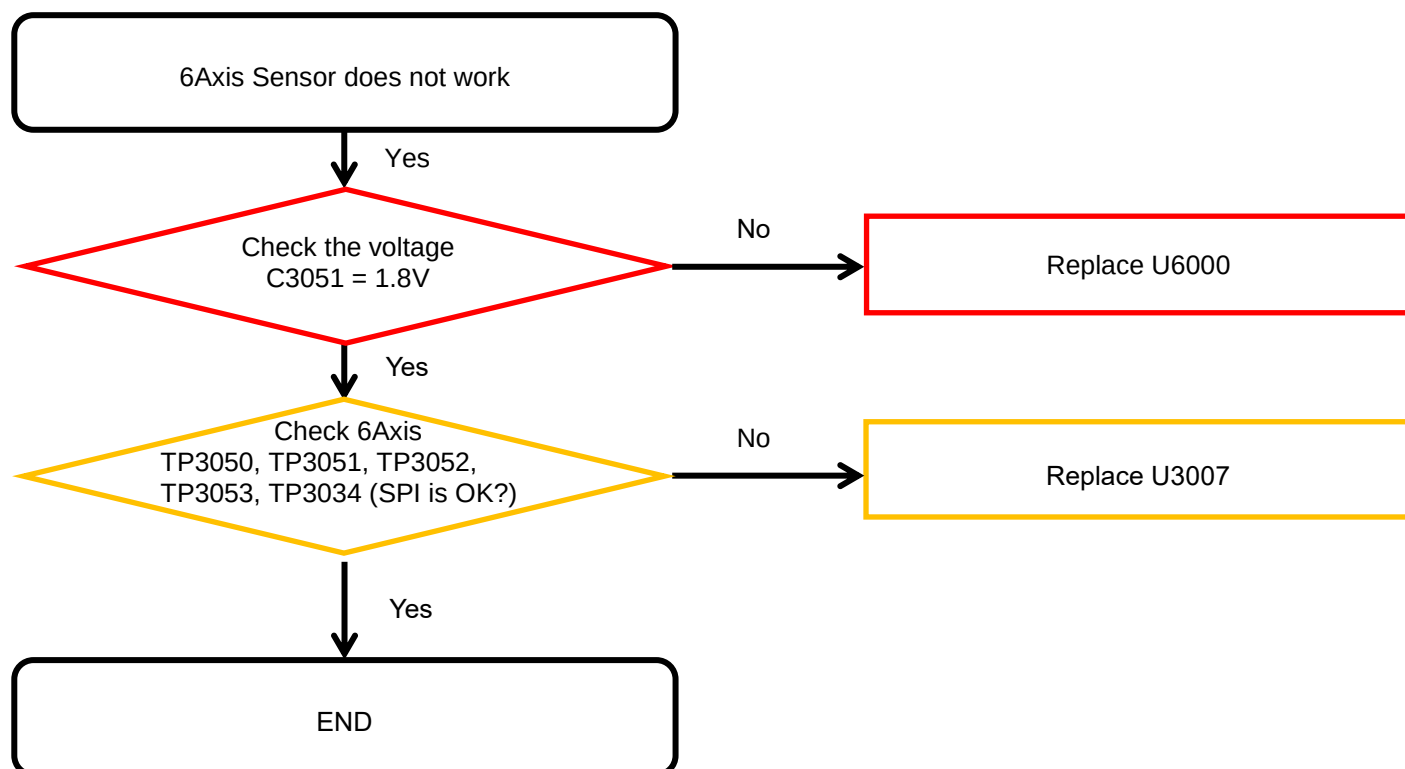


8. Level 3 Repair

8-4-8-3. Fingerprint Sensor

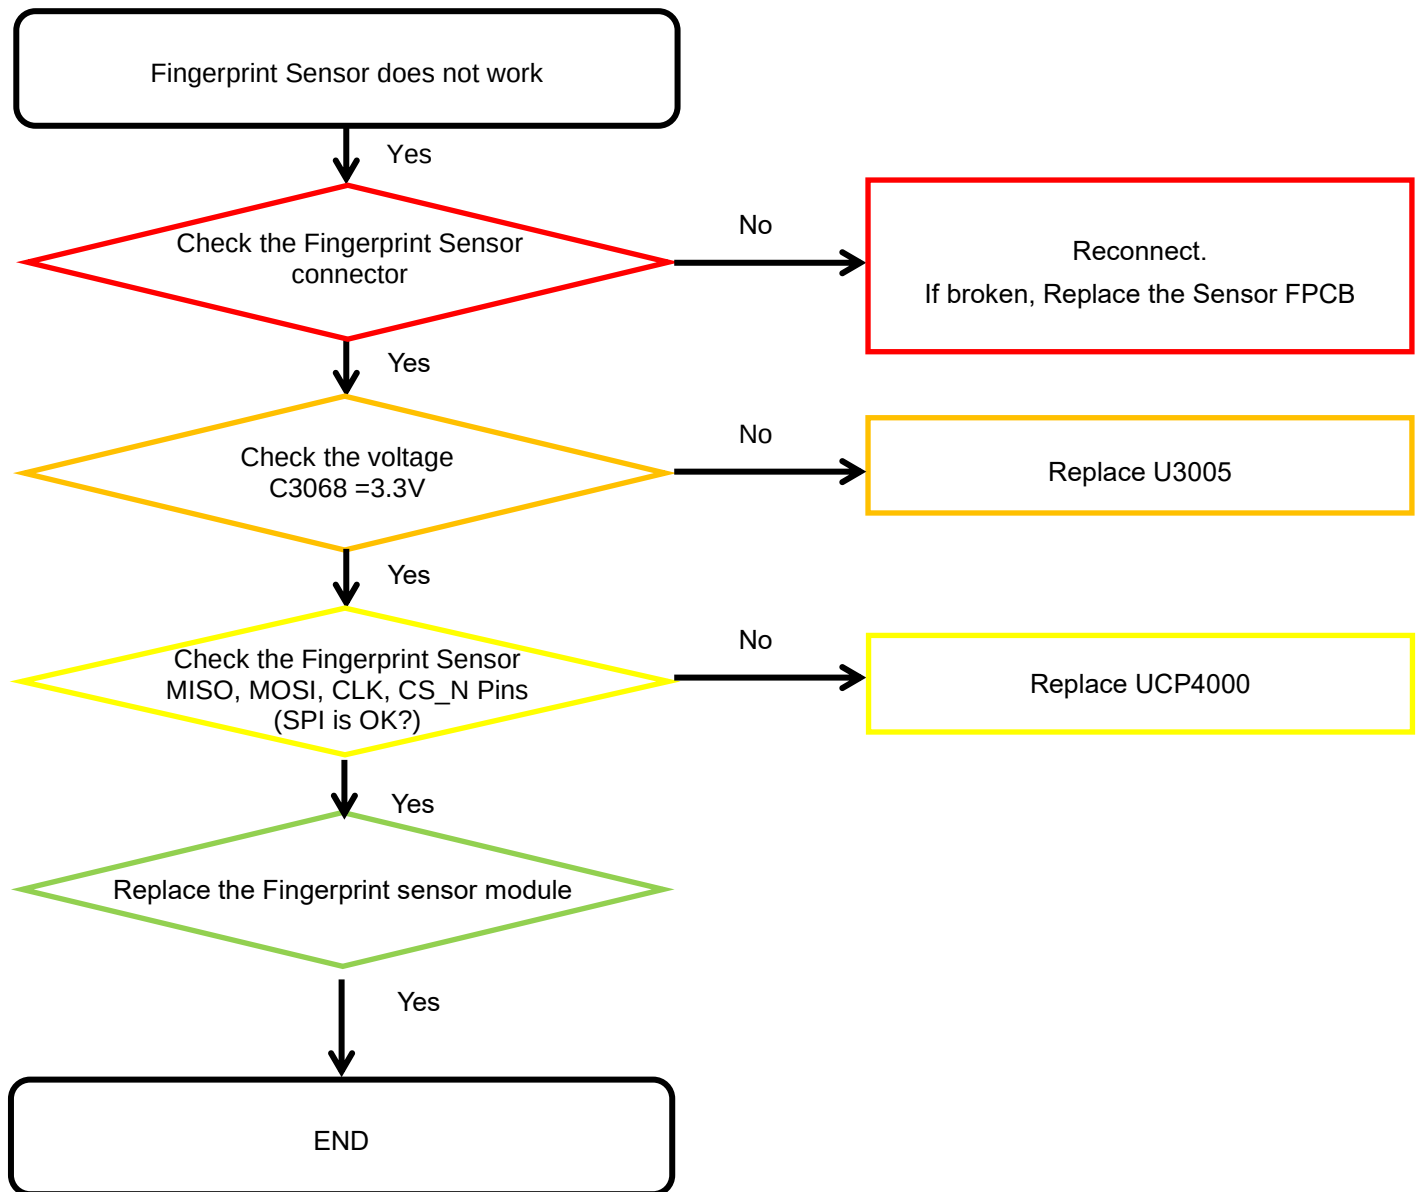


8. Level 3 Repair

8-4-8-4. Proximity / Light Sensor

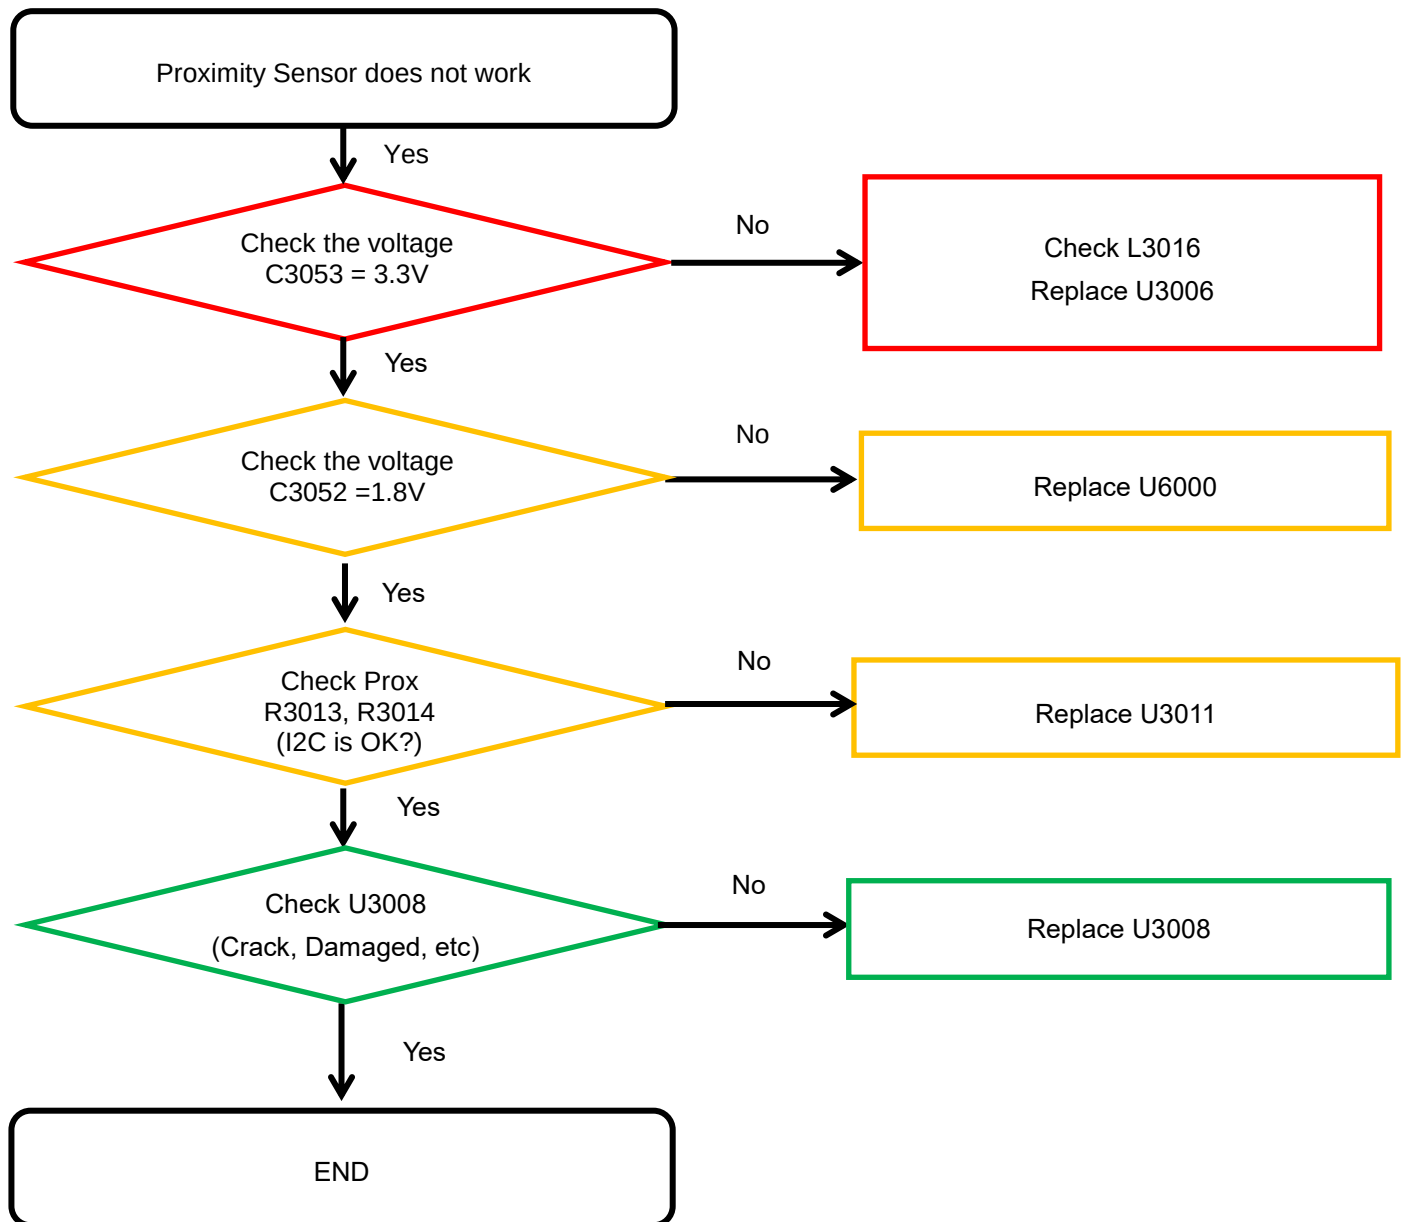


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC

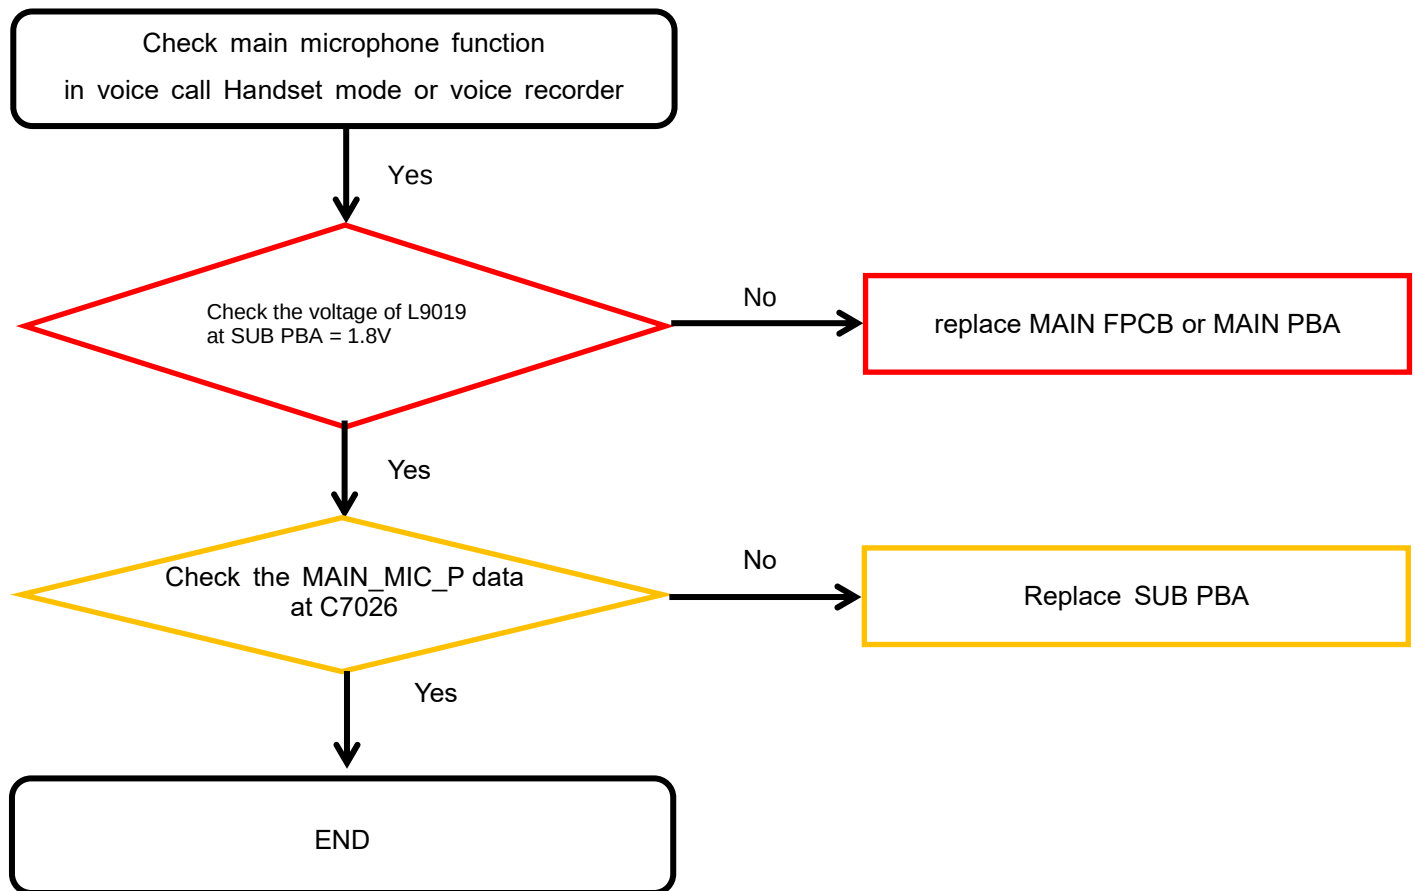


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

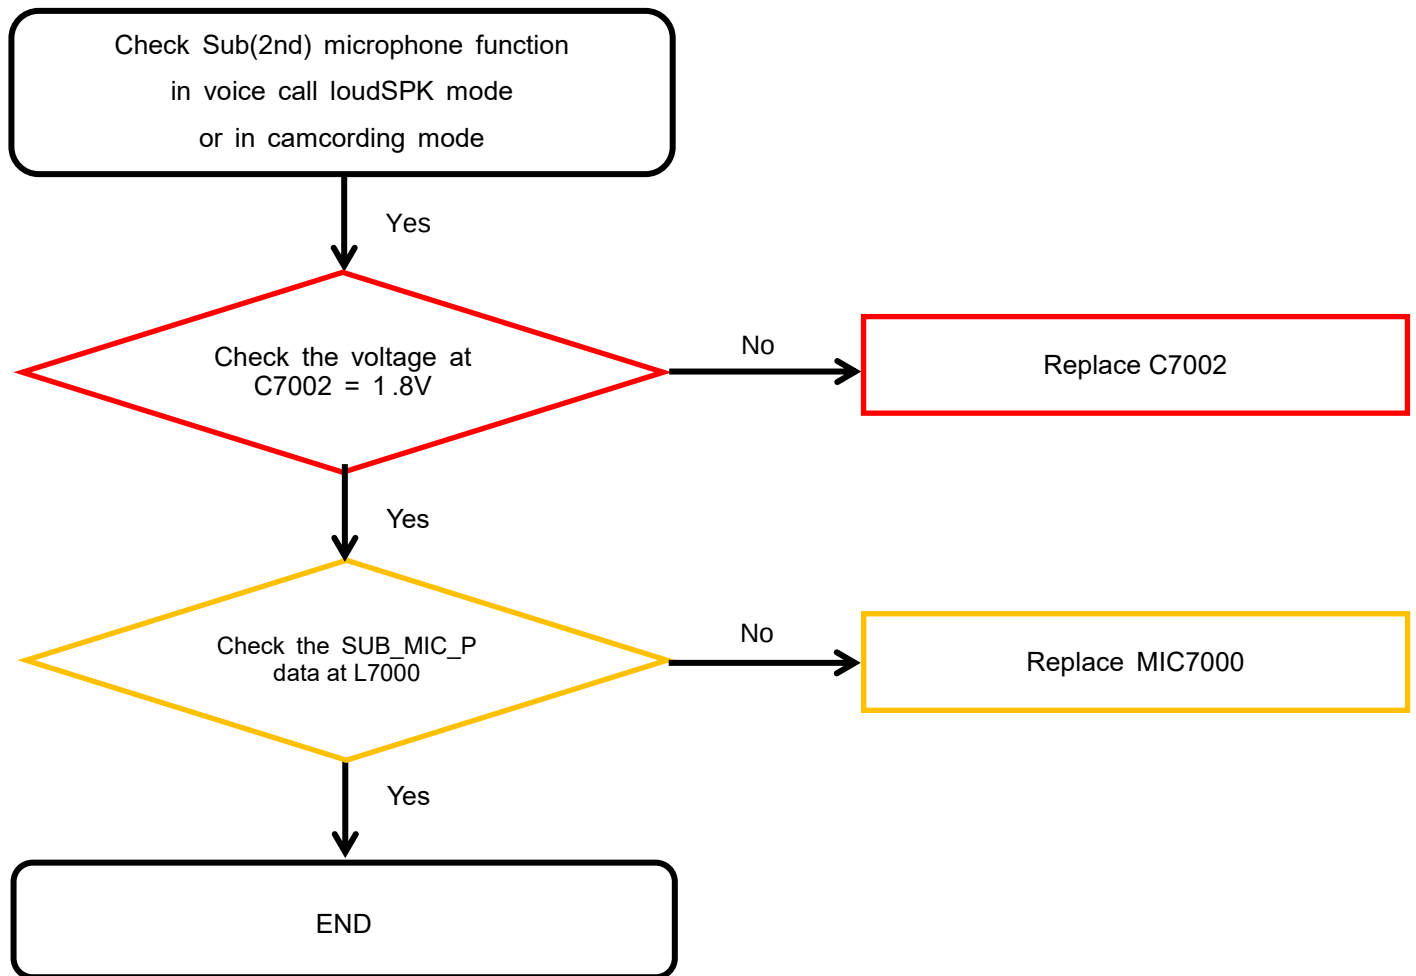


8. Level 3 Repair

8-4-10. Speaker Part

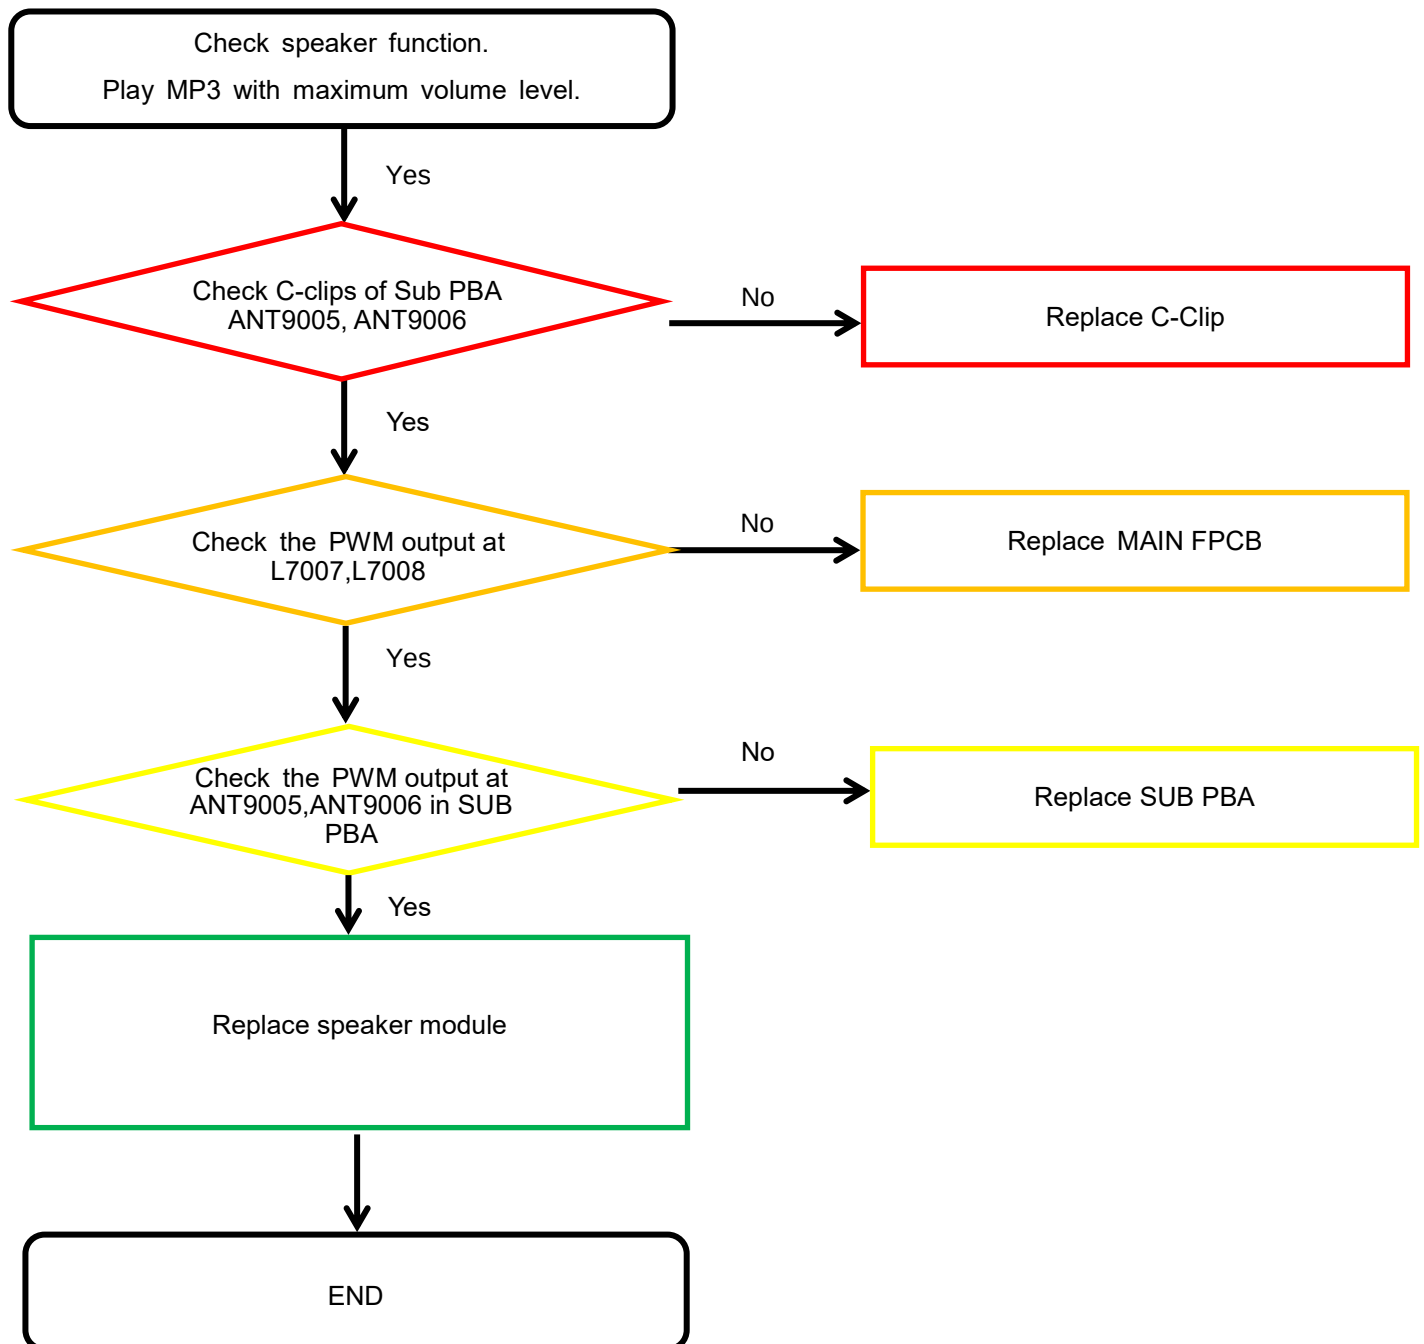


8. Level 3 Repair

8-4-11. Receiver Part

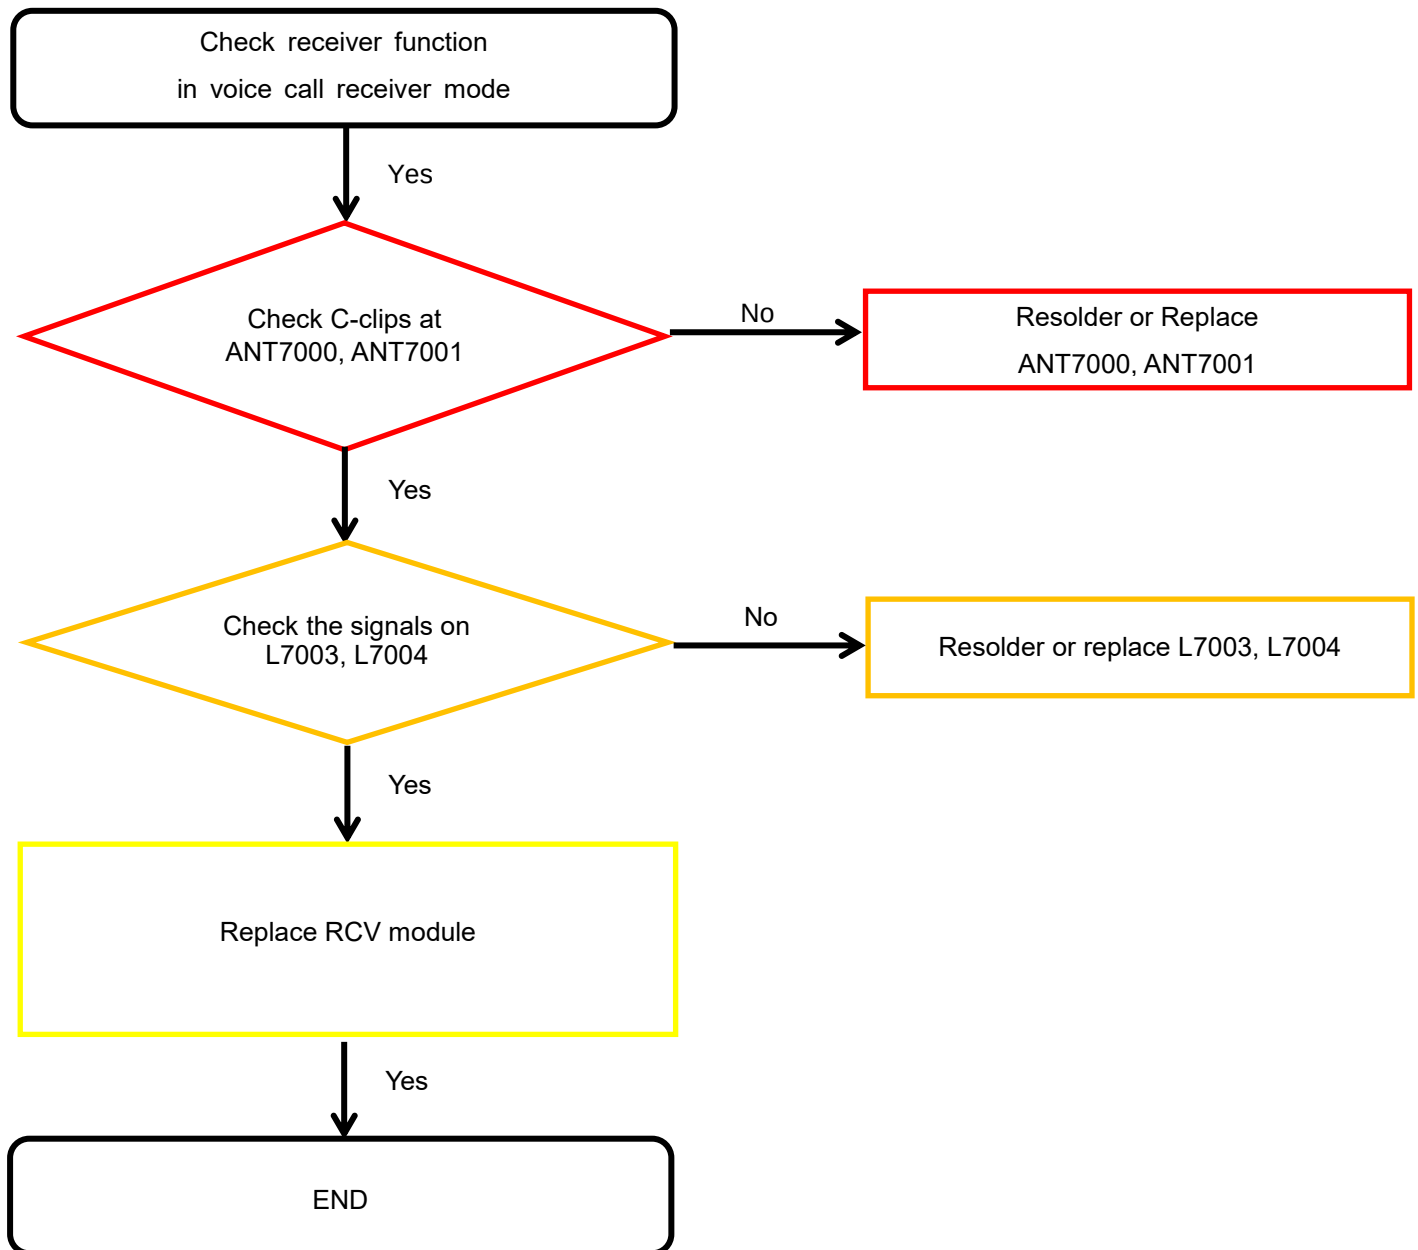


8. Level 3 Repair

8-4-12. BT/WIFI

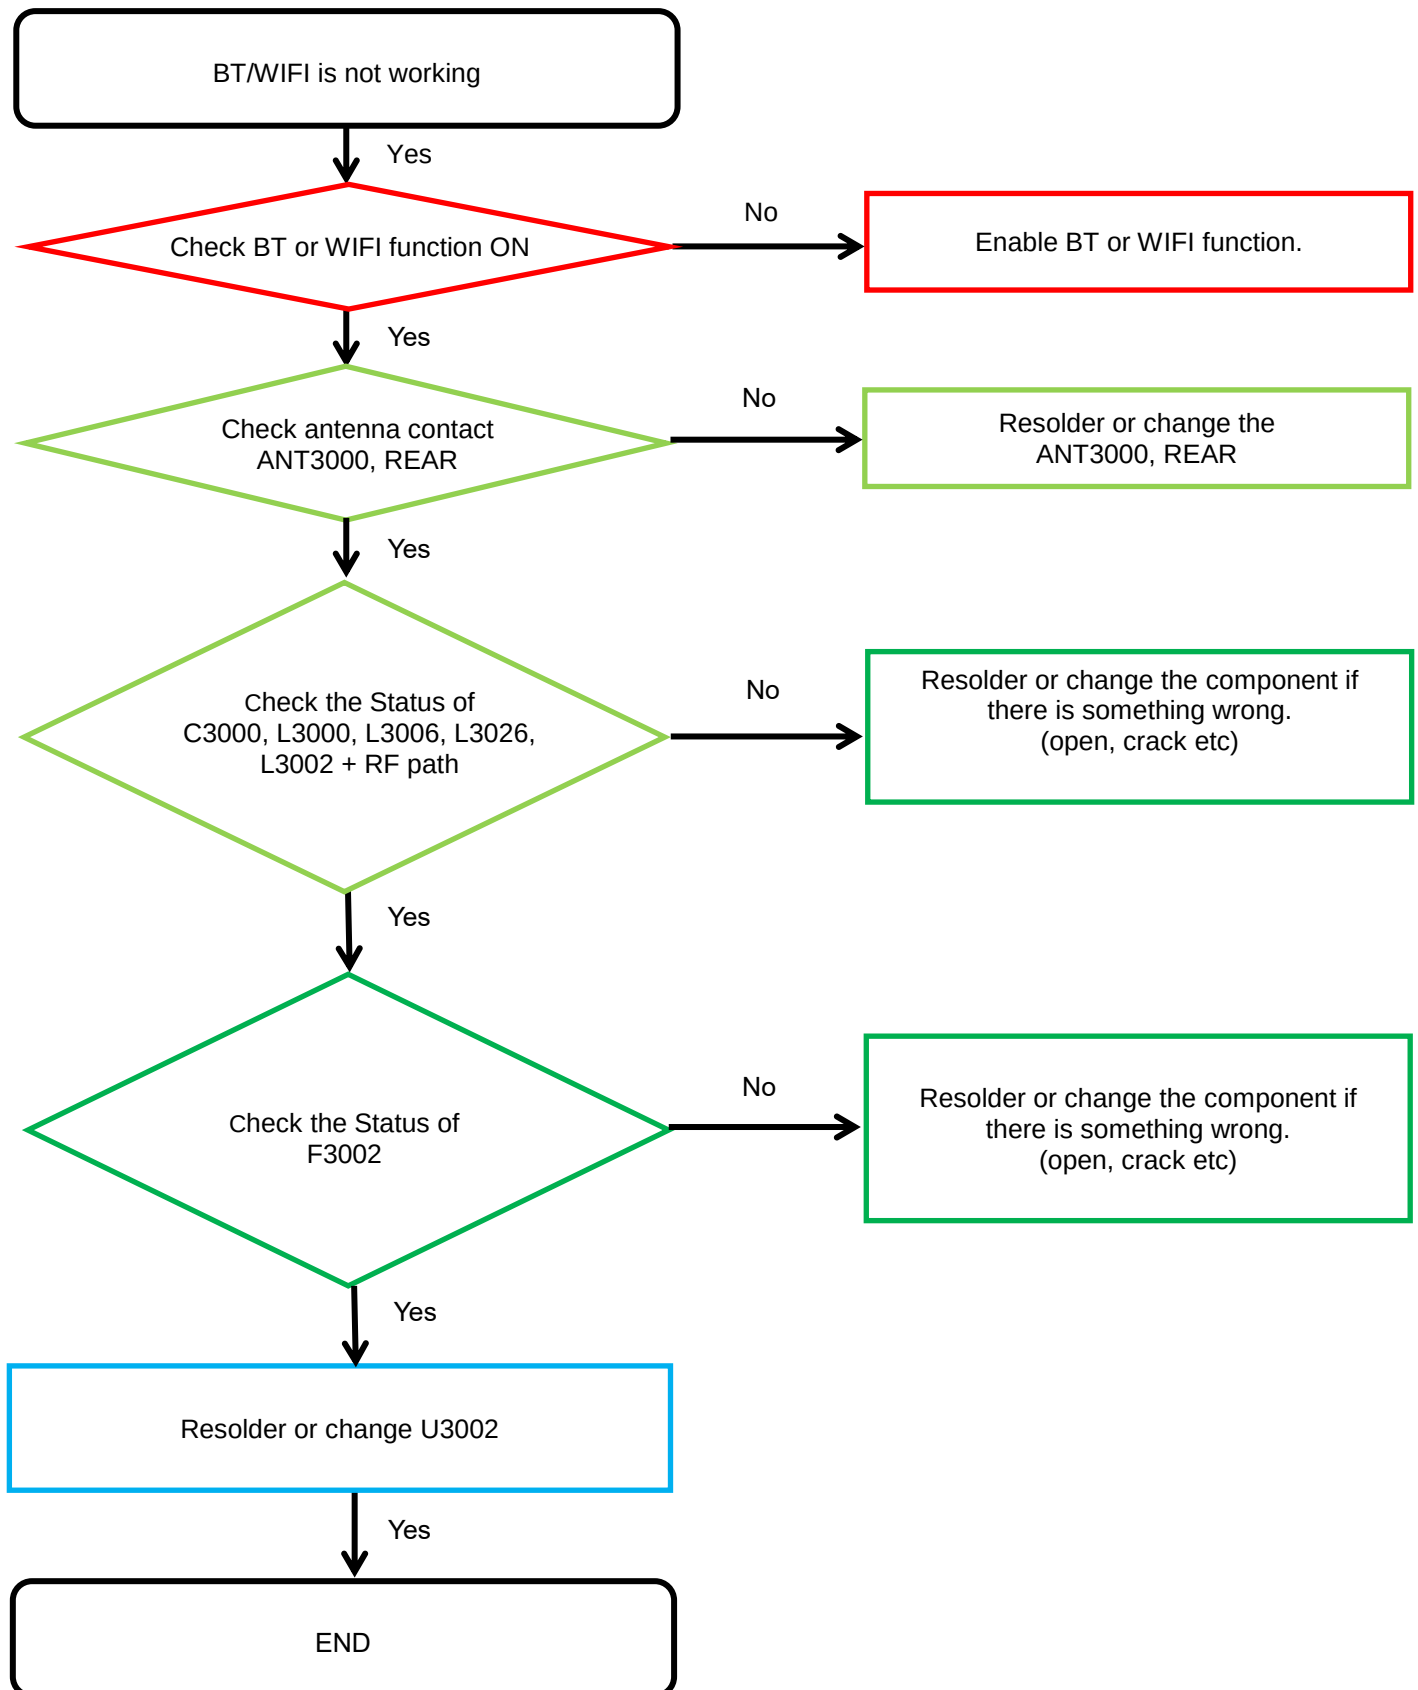


8. Level 3 Repair

8-4-13. GPS

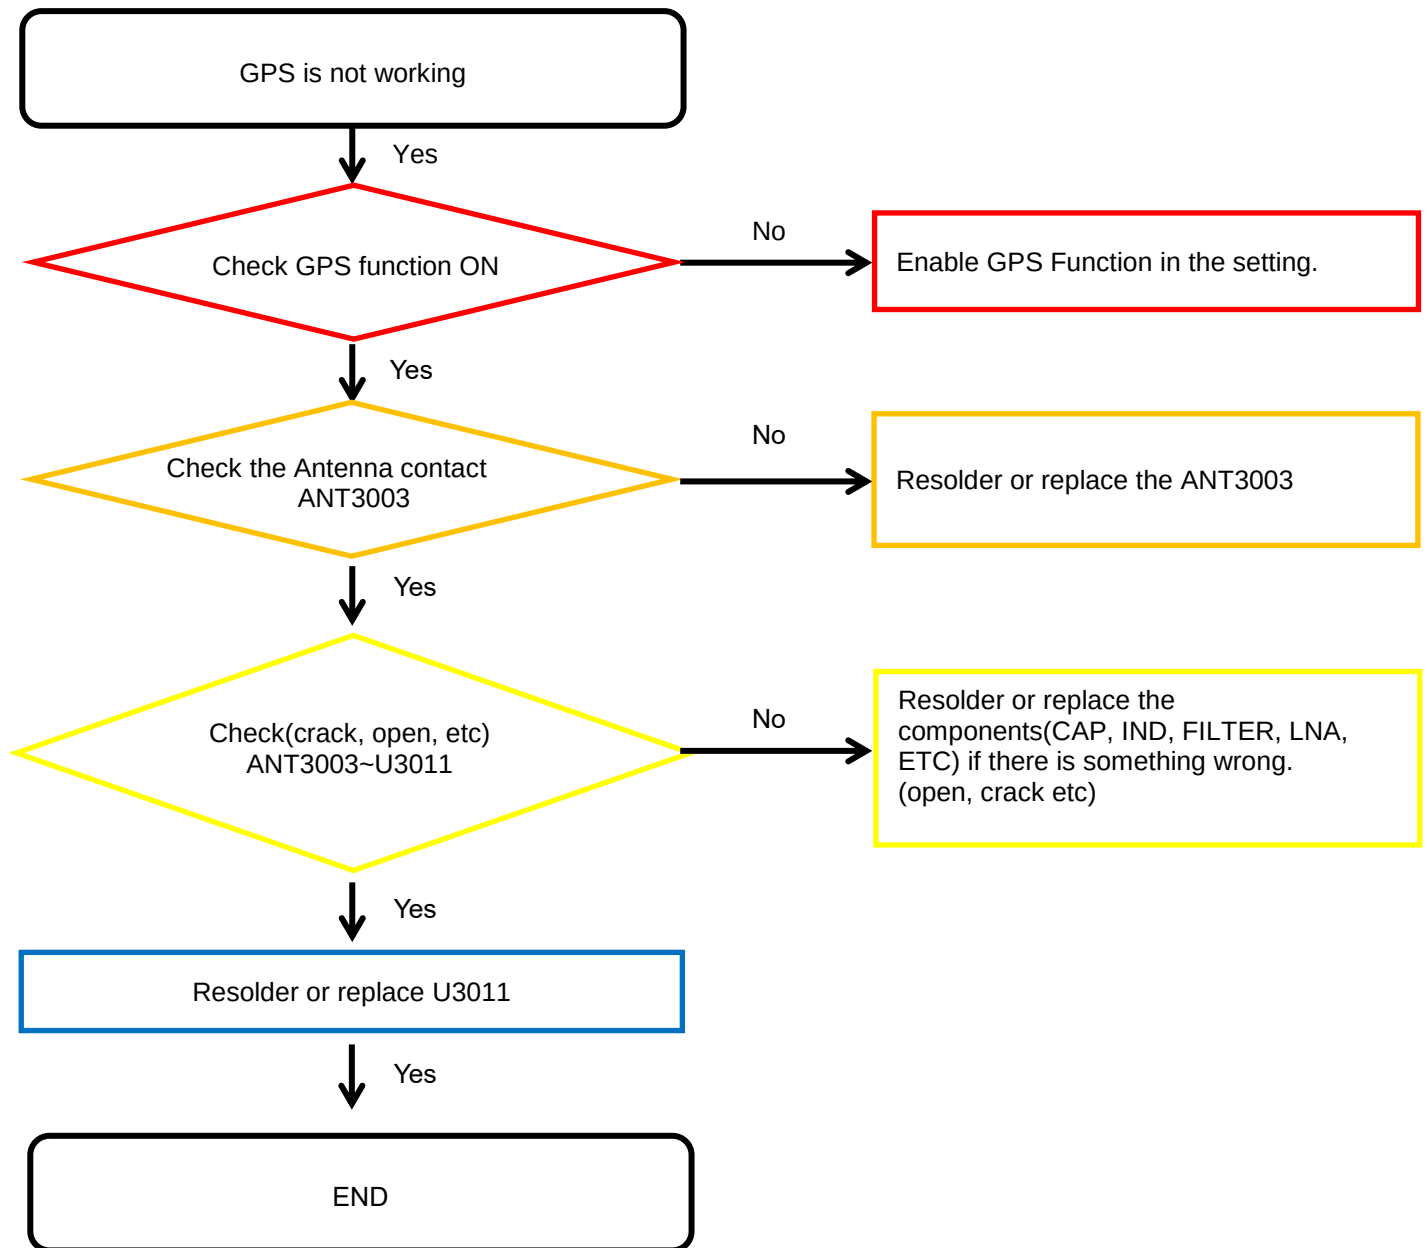


8. Level 3 Repair

8-4-14. NFC

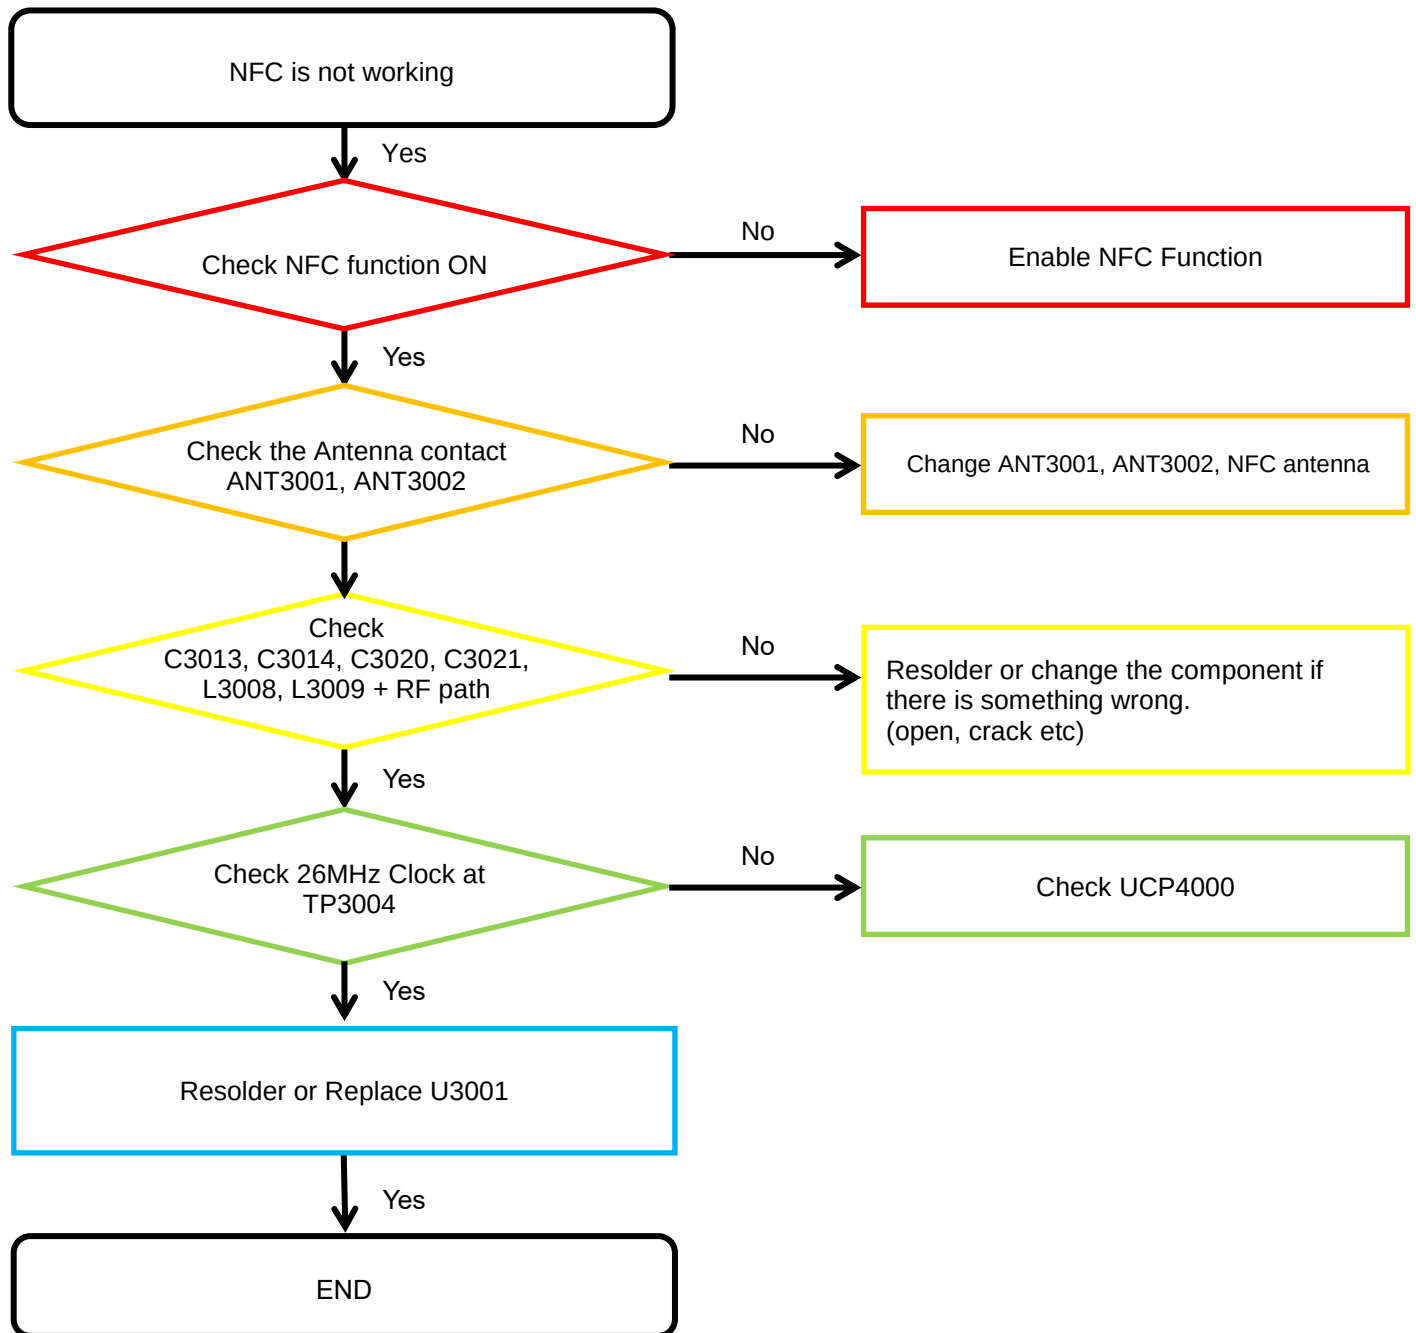


8. Level 3 Repair

8-4-15. FM radio part

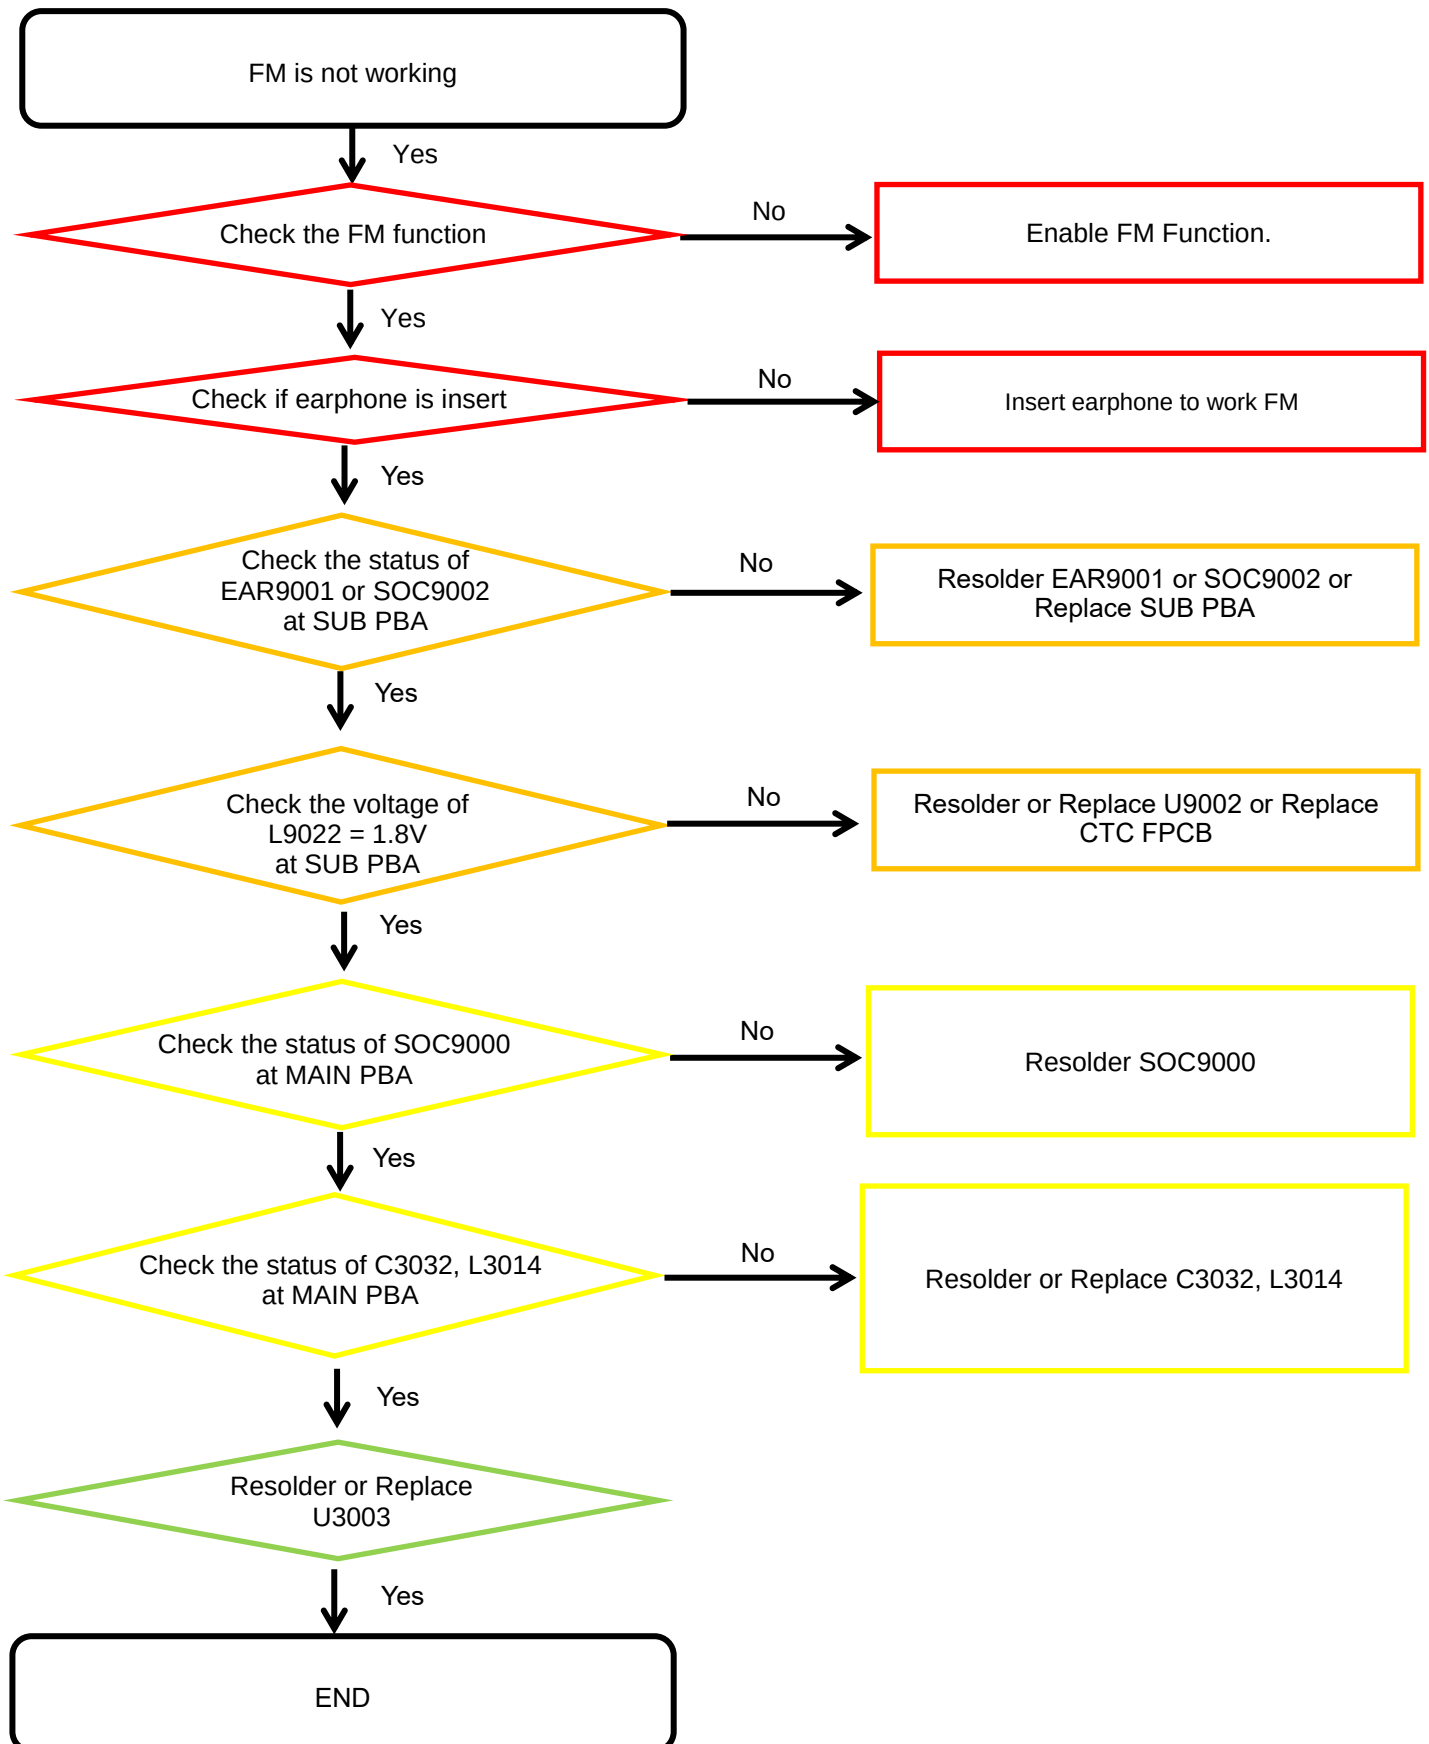


8. Level 3 Repair

8-4-16. Display

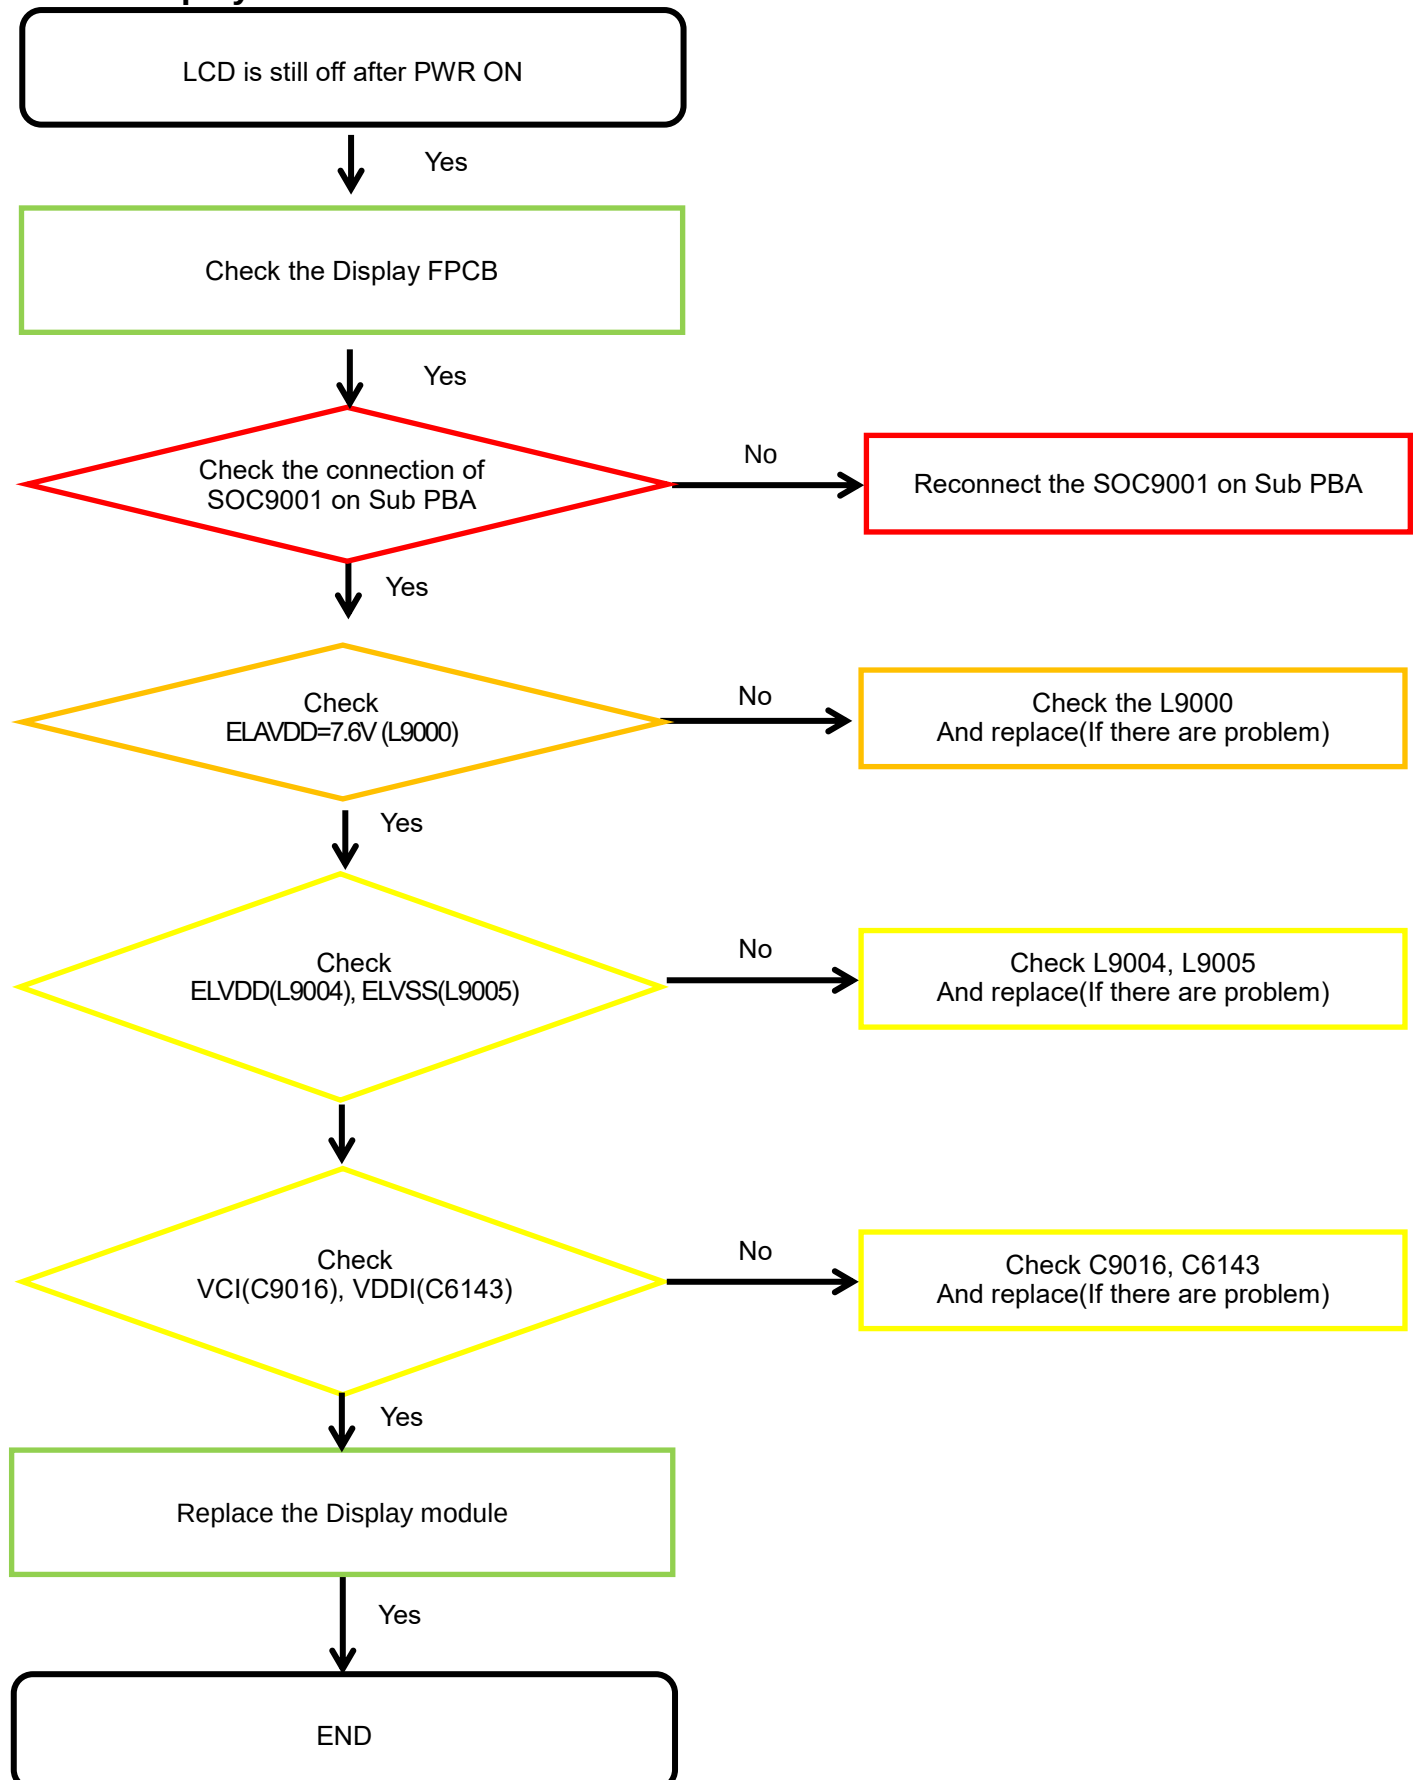


8. Level 3 Repair

8-4-17. Quad Camera

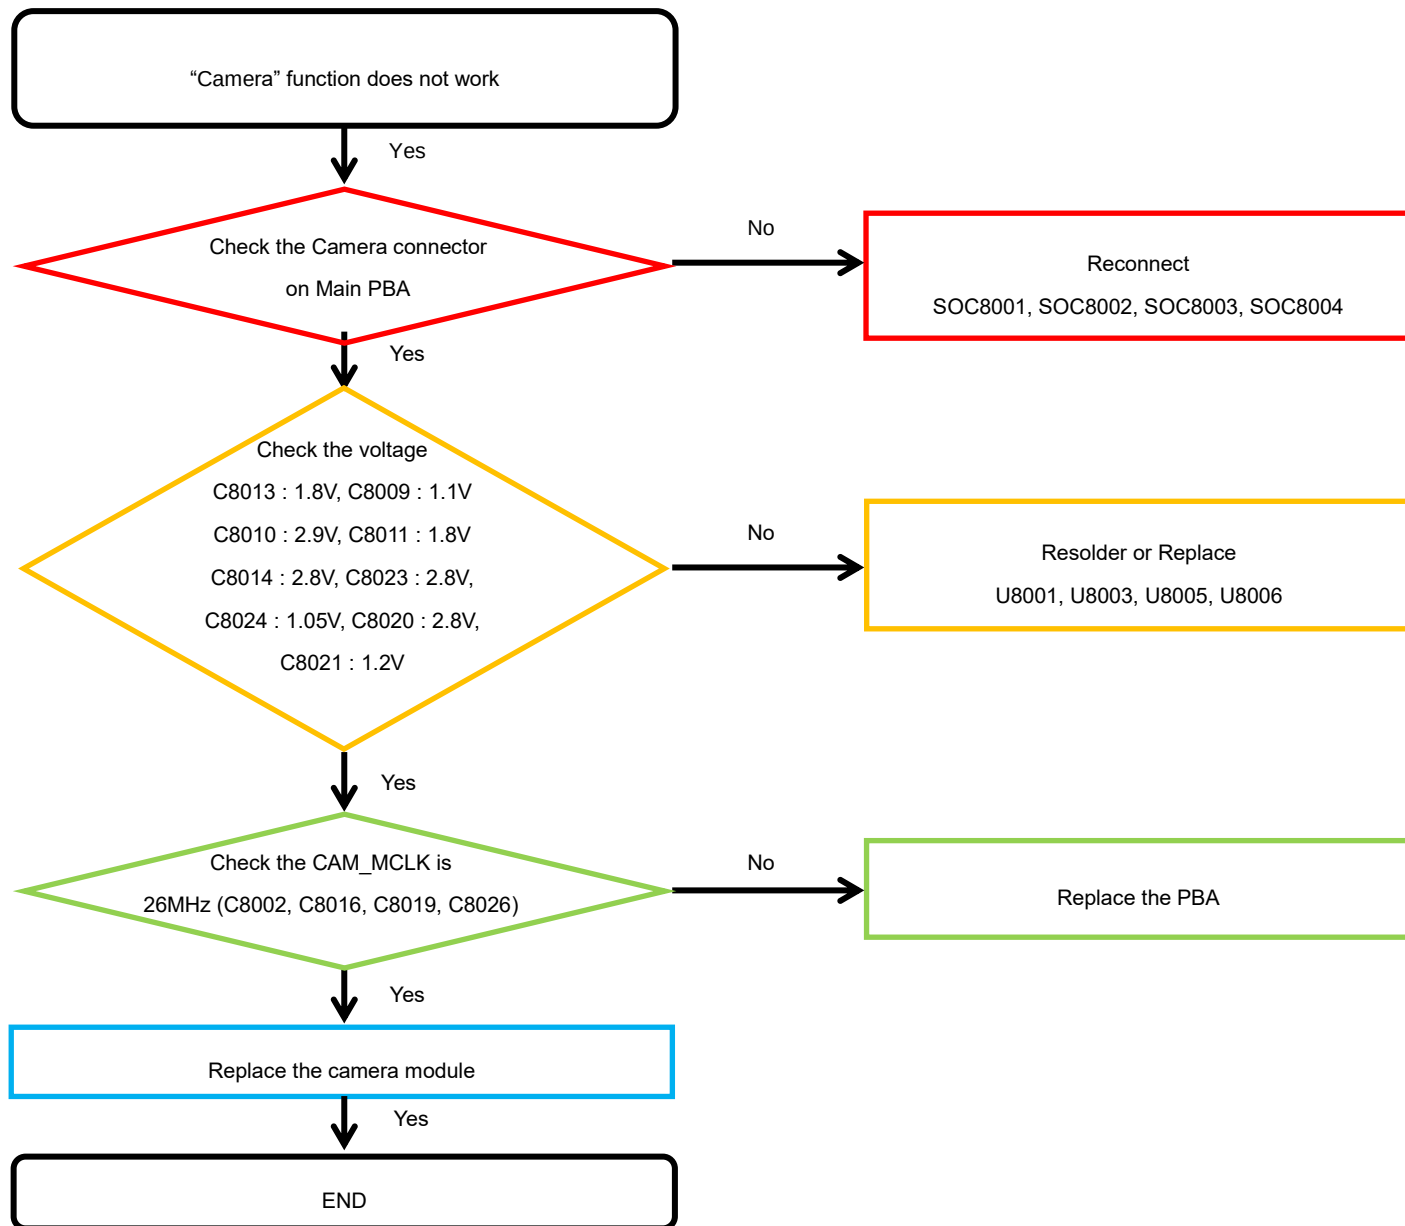


8. Level 3 Repair

8-4-18. VT CAMERA

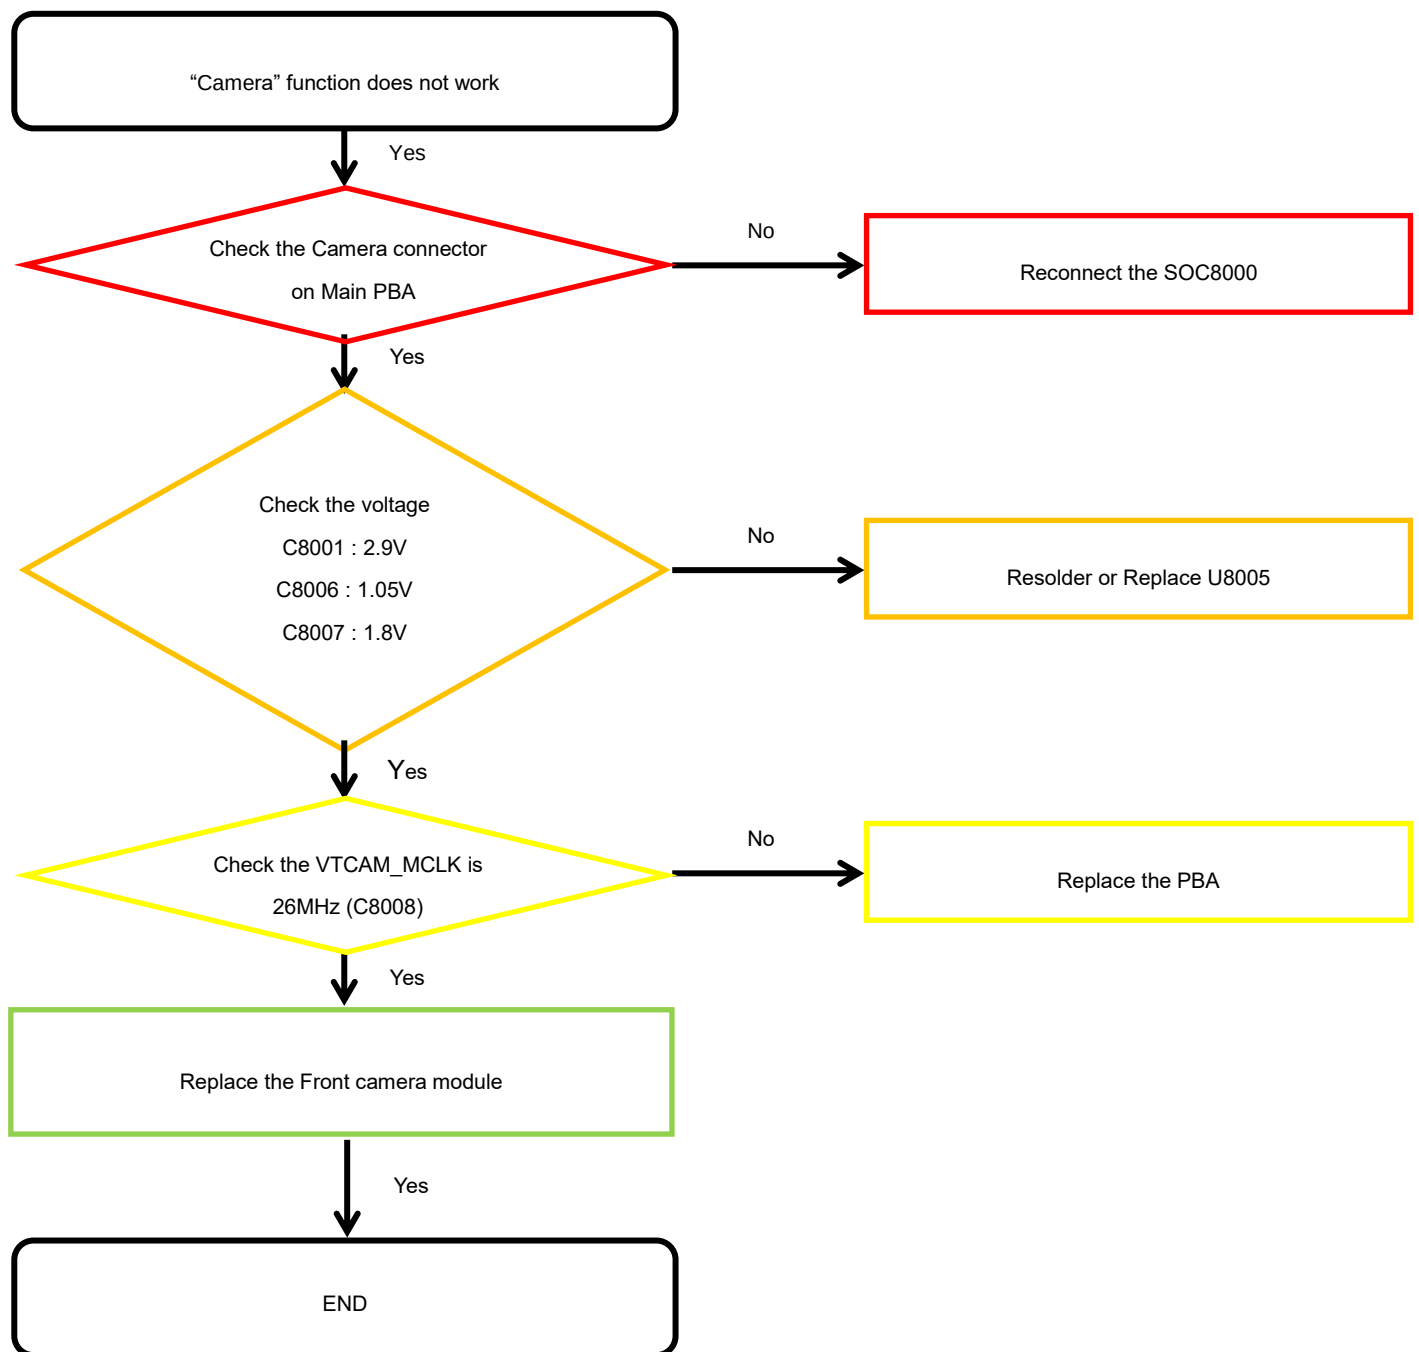


8. Level 3 Repair

8-4-19. Motor

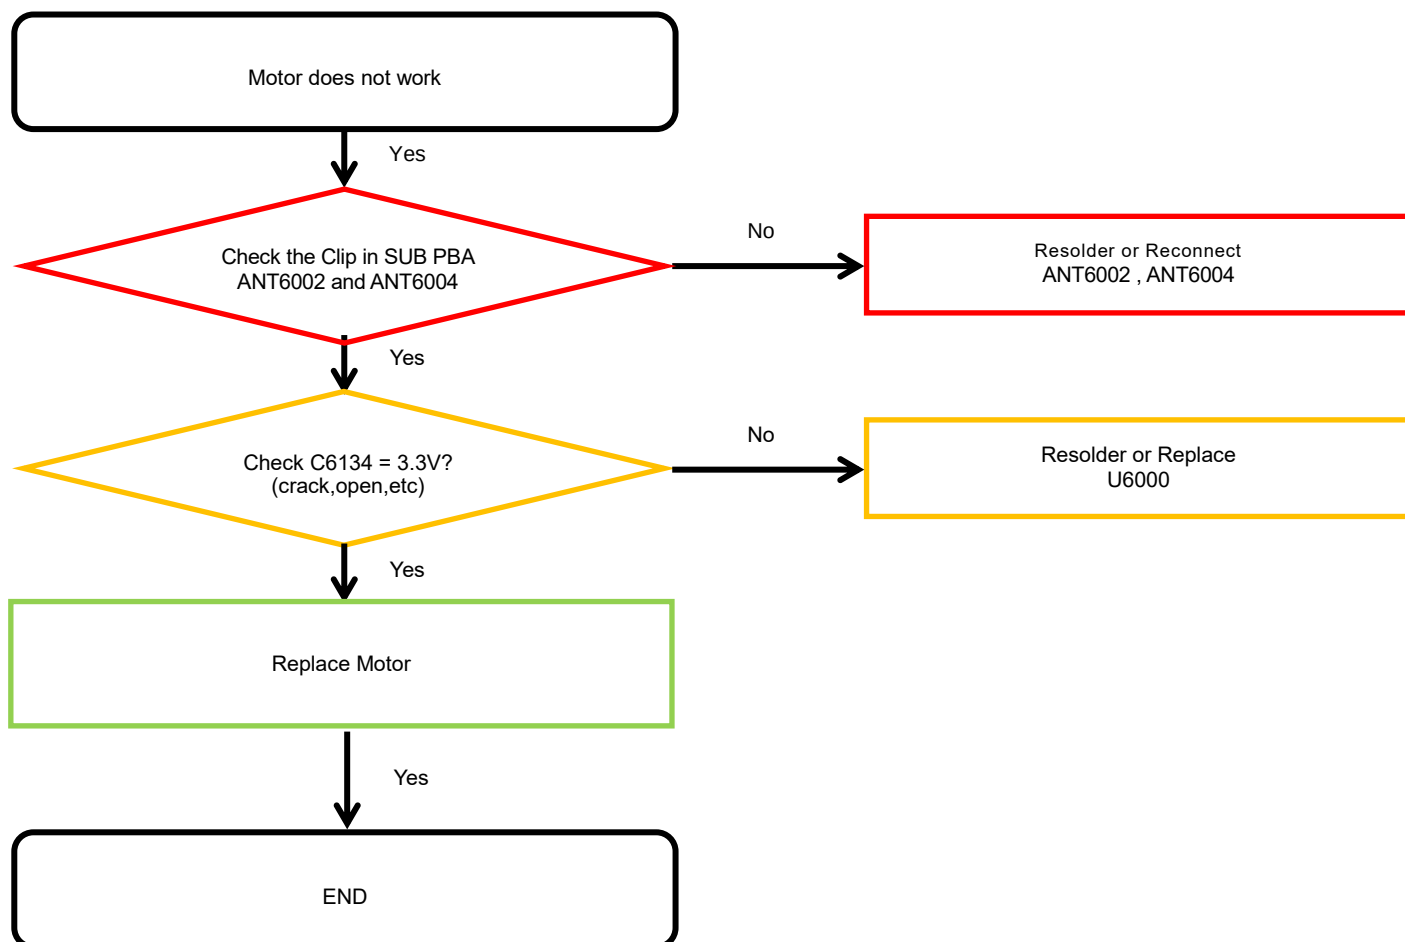


8. Level 3 Repair

8-4-20. GSM 850/900/1800/1900 WCDMA B1/2/4/5/8, LTE B1/2/3/4/5/8/12/17/20/26/28/66 PRx

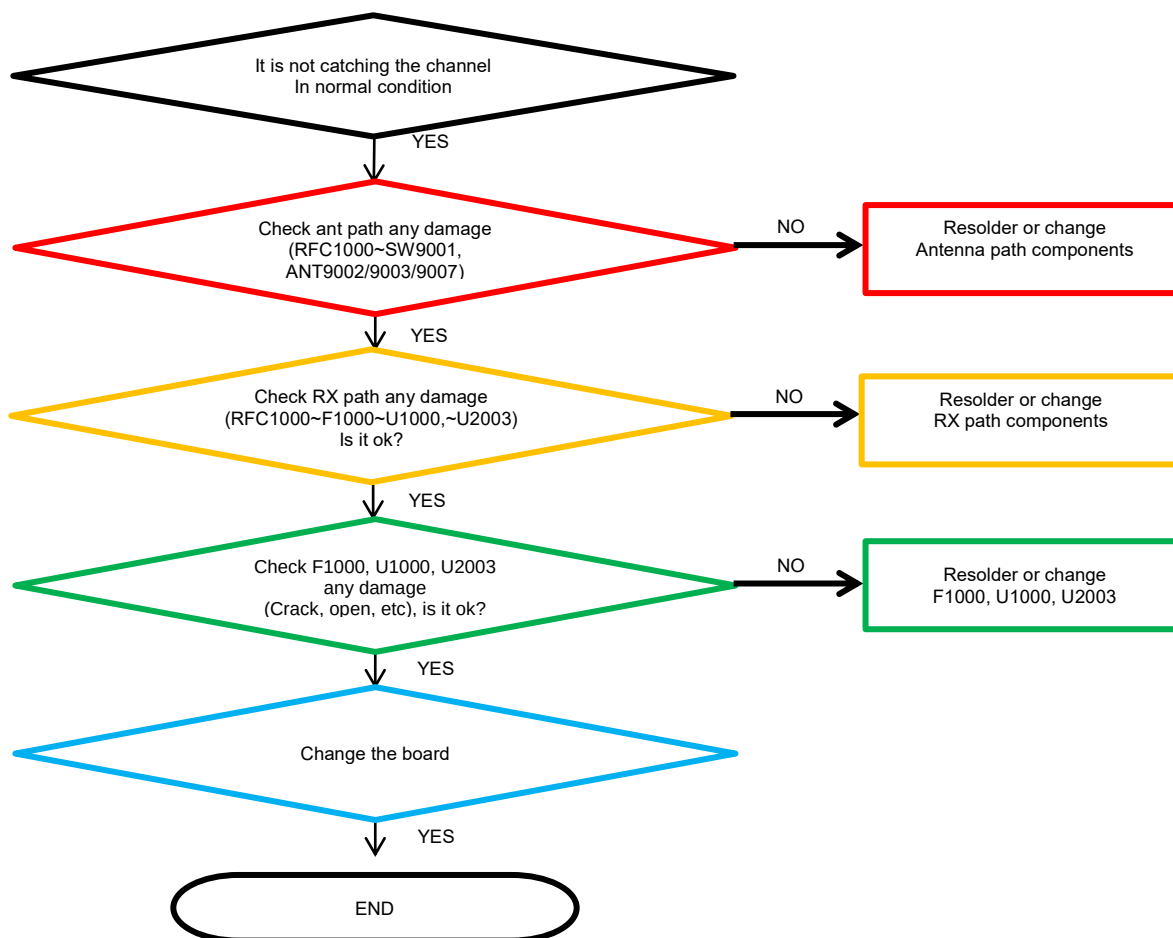


8. Level 3 Repair

8-4-21. LTE B7/ B38/B40/B41/ PRx

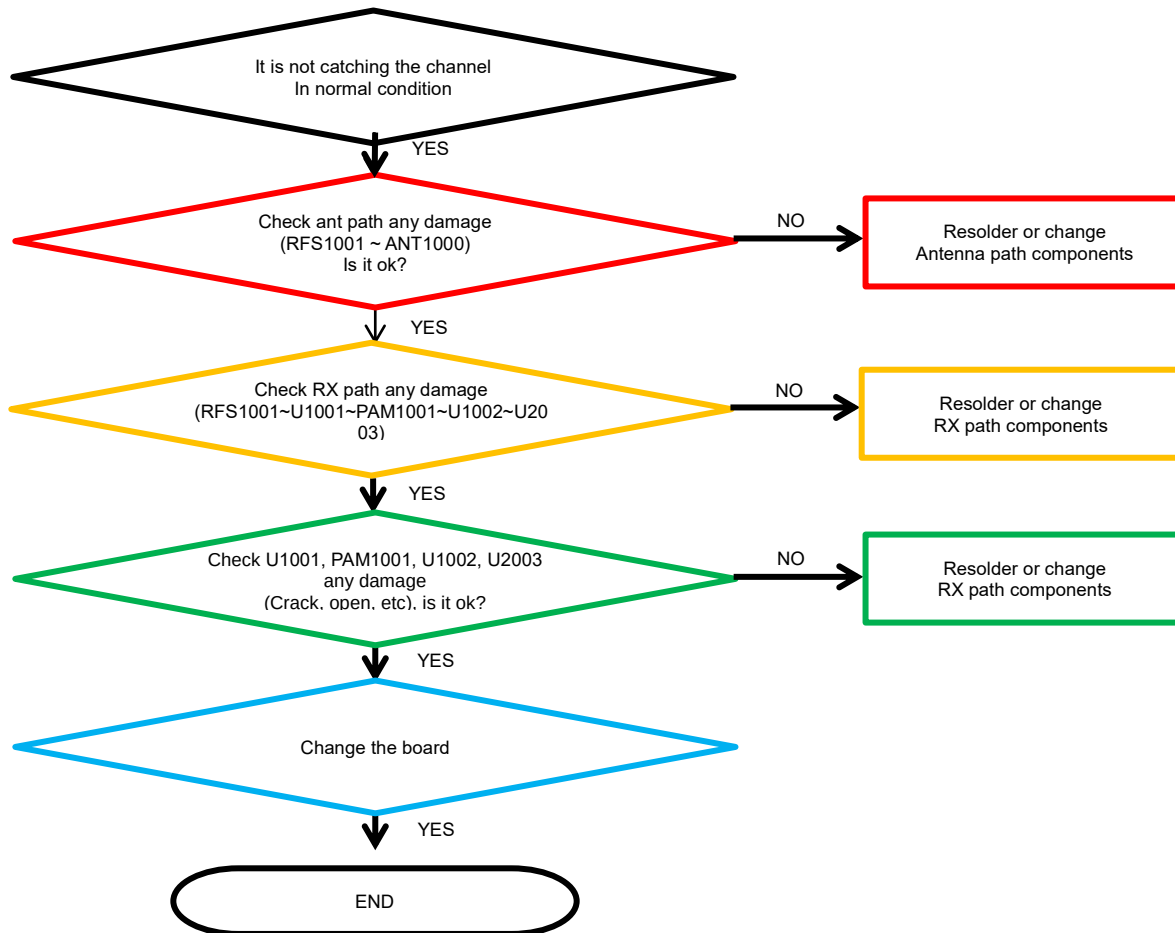


8. Level 3 Repair

8-4-22. GSM 850/900/1800/1900 WCDMA B1/2/4/5/8, LTE B1/B2/B3/B4/B5/B7/B8 /B12/B17/B20/B26/B28/B38/B40/B41/B66 DRX

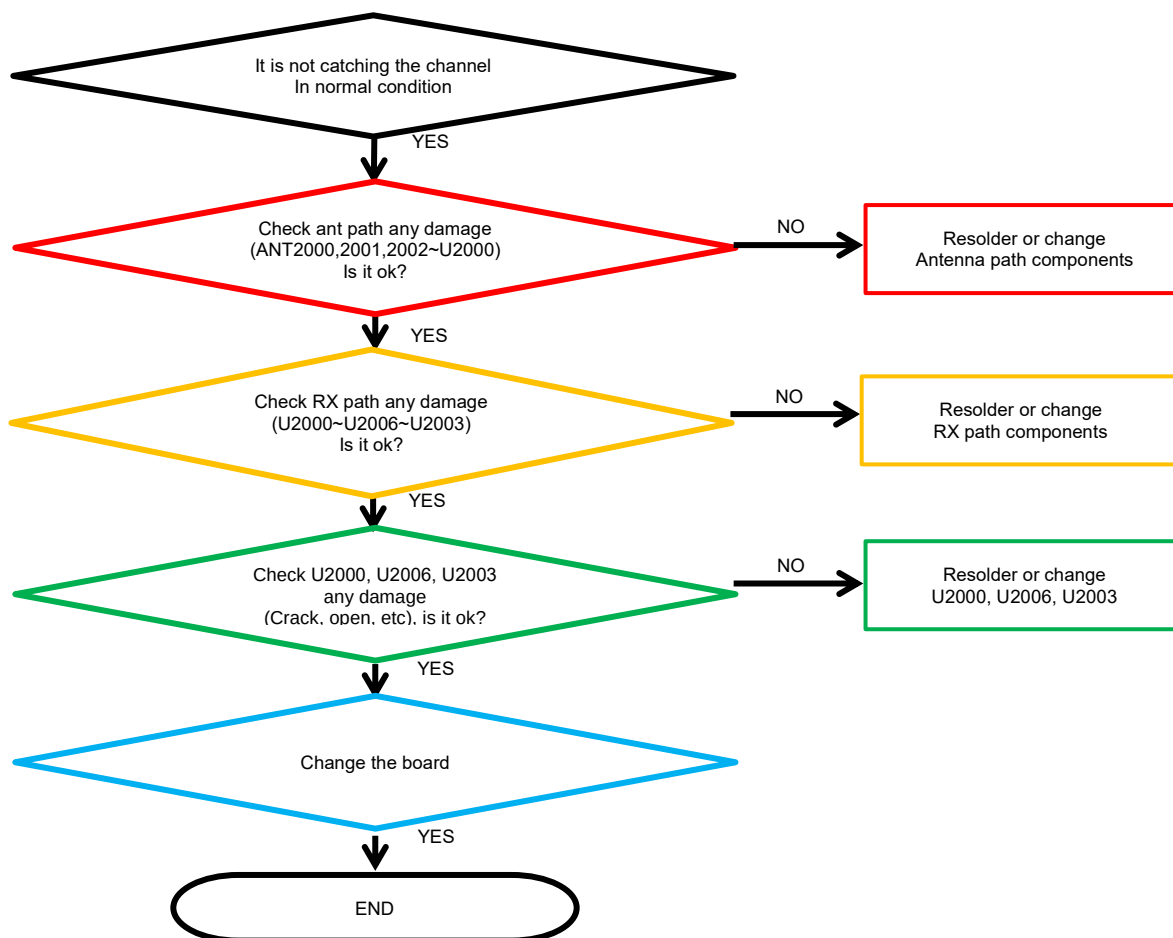

8. Level 3 Repair

8-4-23. GSM 850/900/1800/1900, WCDMA B1/2/4/5/8, LTE B1/B2/B3/B4/B5/B8/B12 /B17/B20/B26/B28/B66 Tx

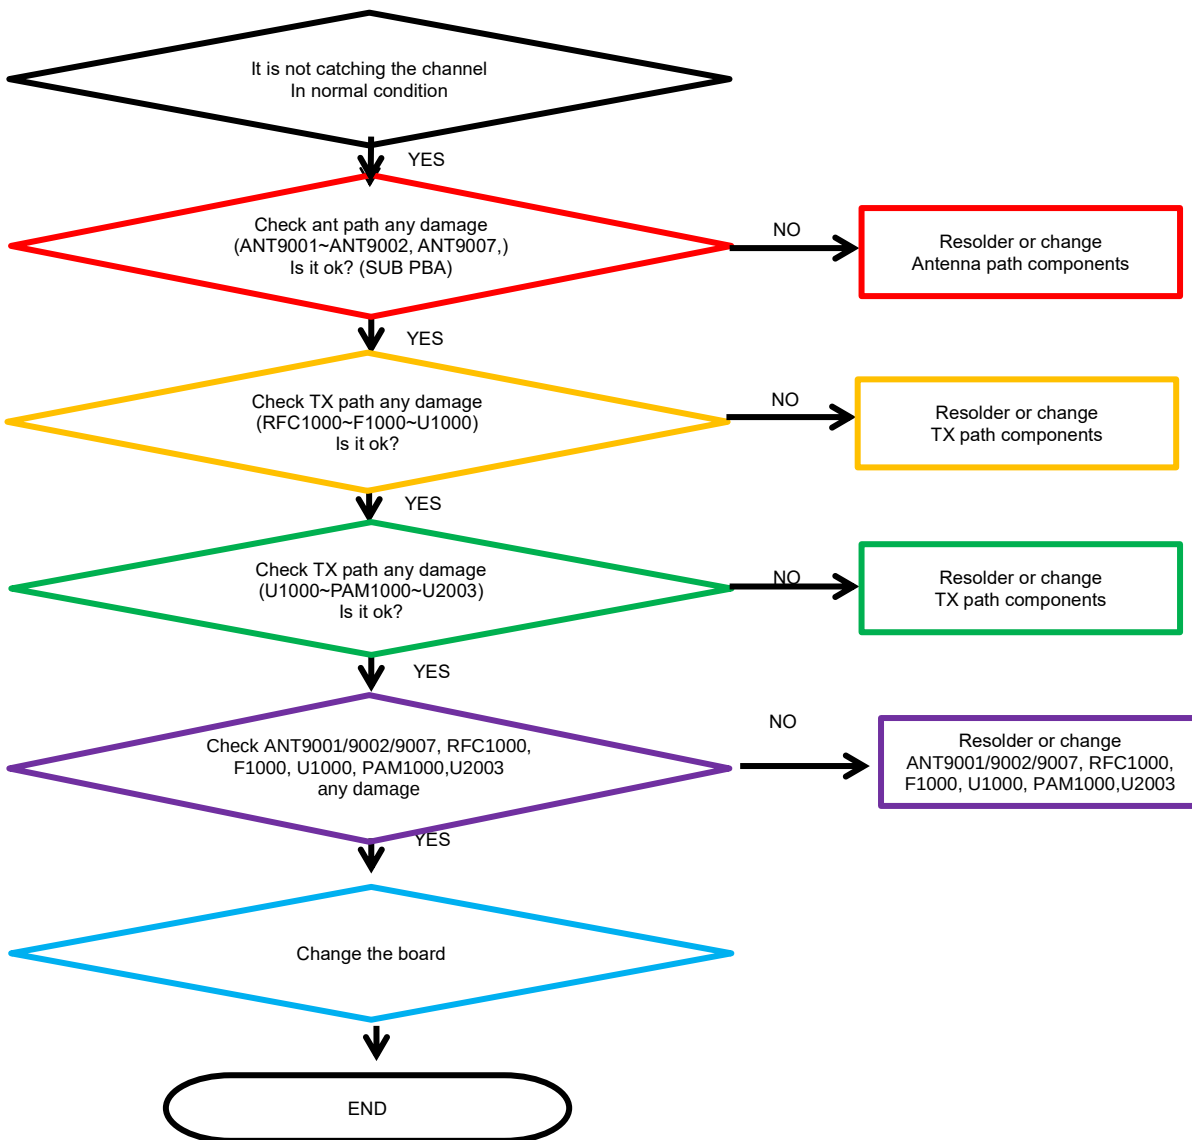

8. Level 3 Repair

8-4-24. LTE B7/38/40/41Tx

