

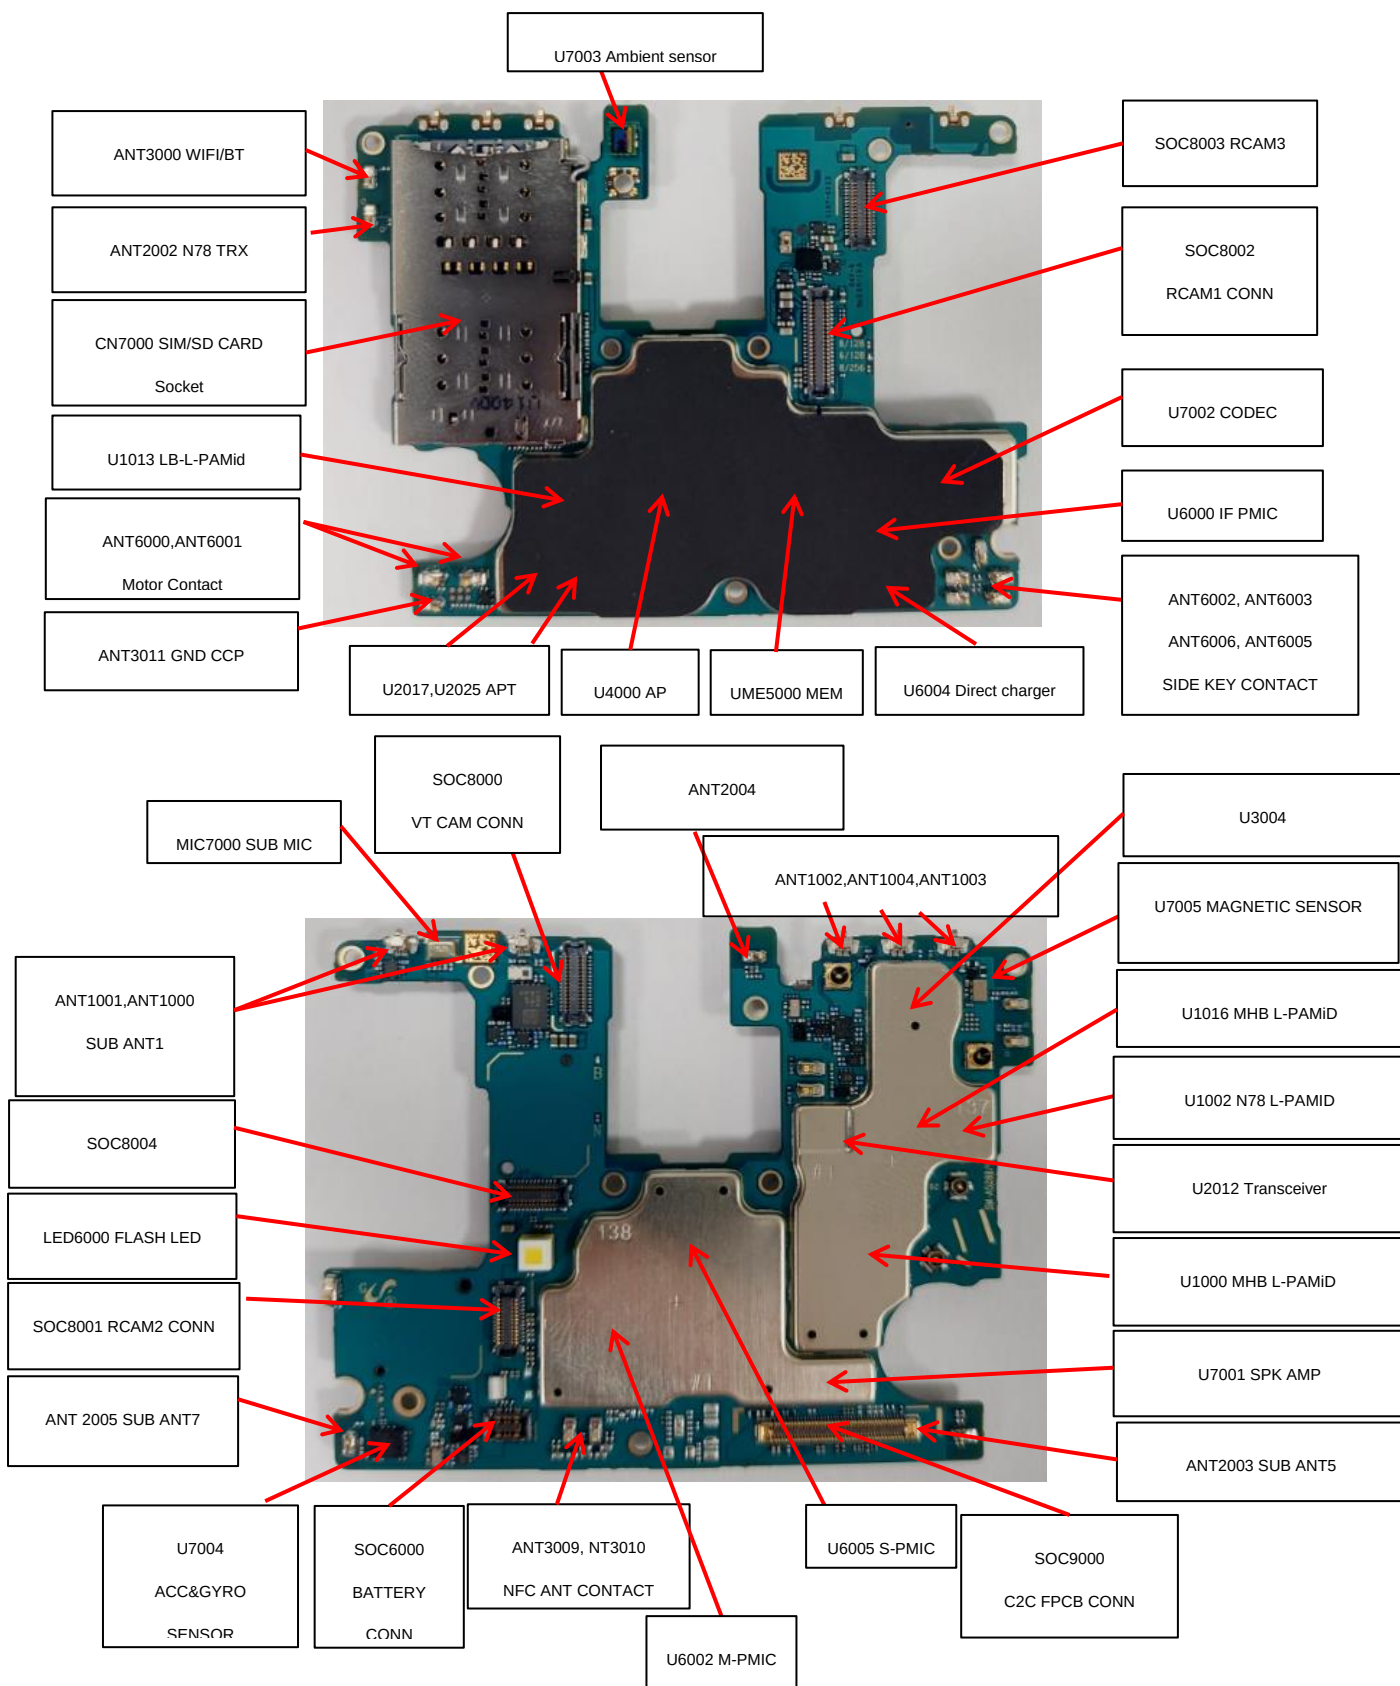


8. Level 3 Repair


8-1. Components Layout

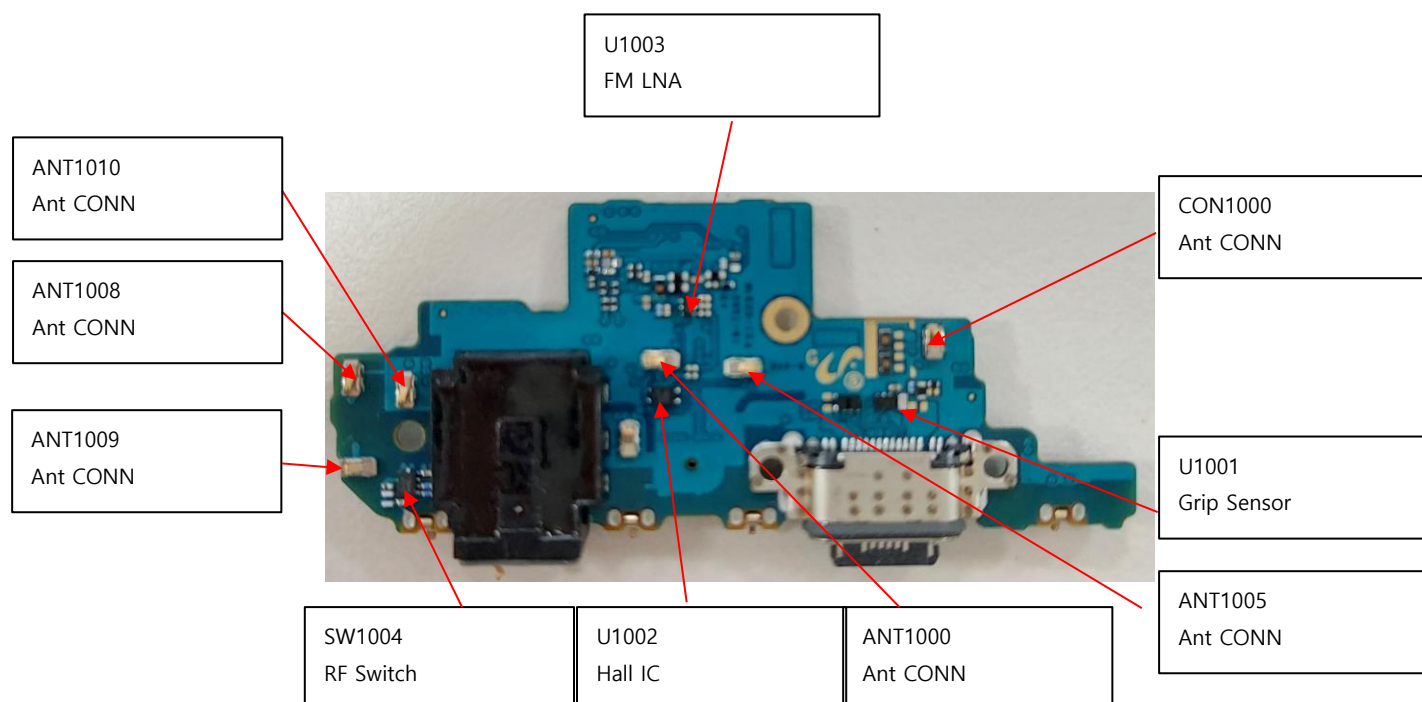


8. Level 3 Repair

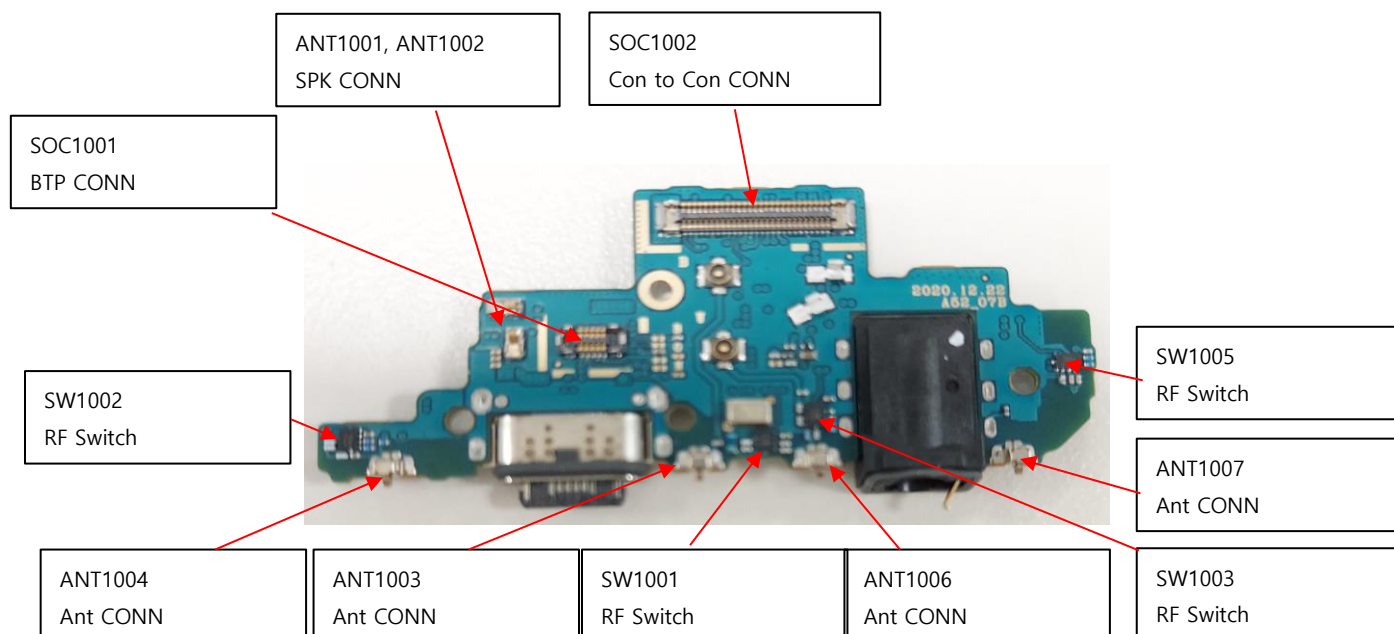




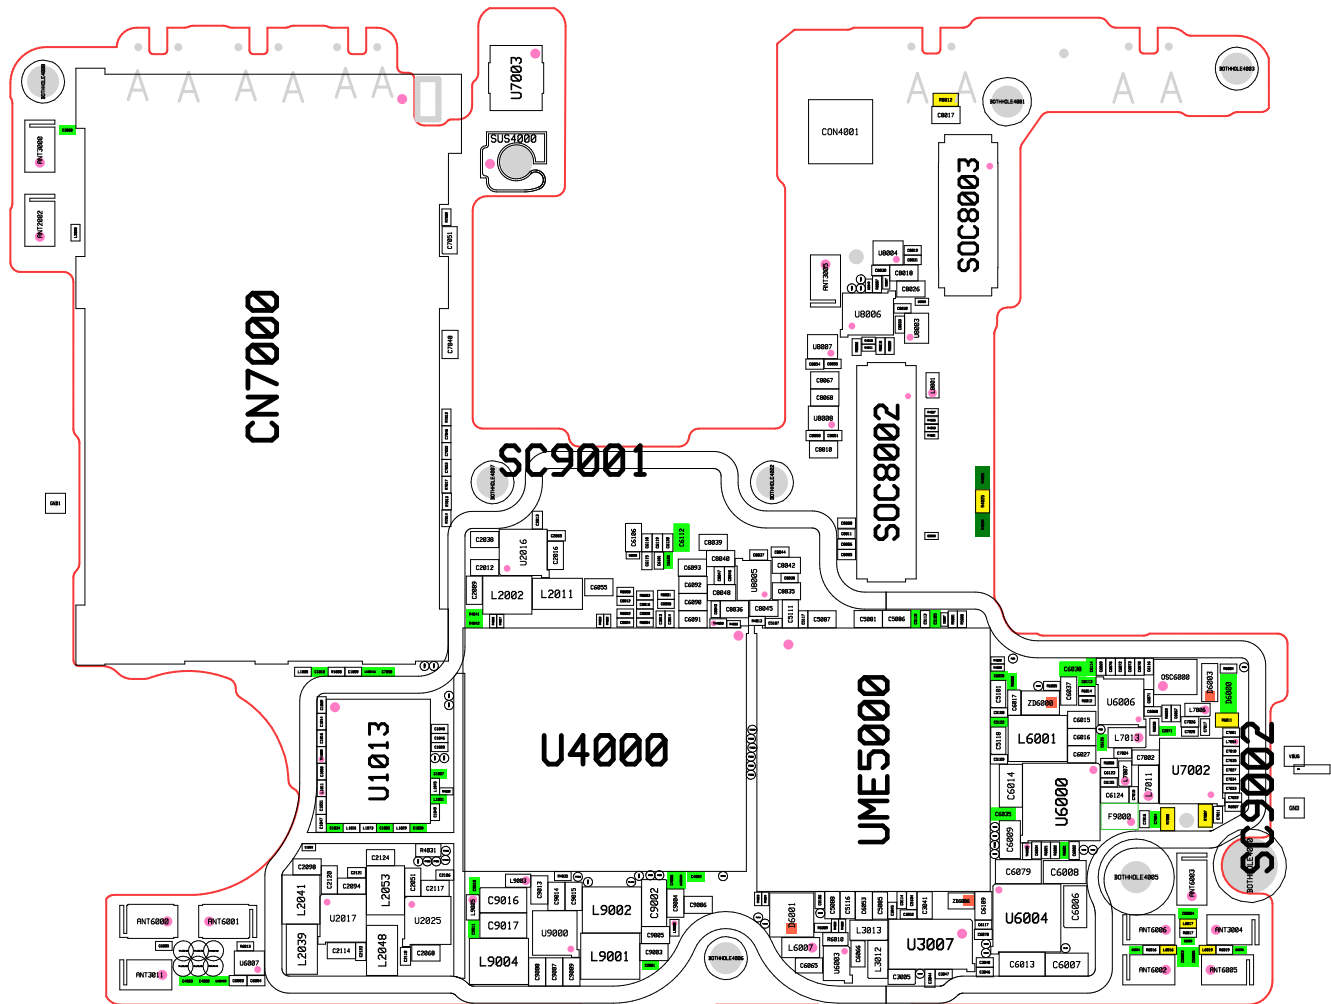

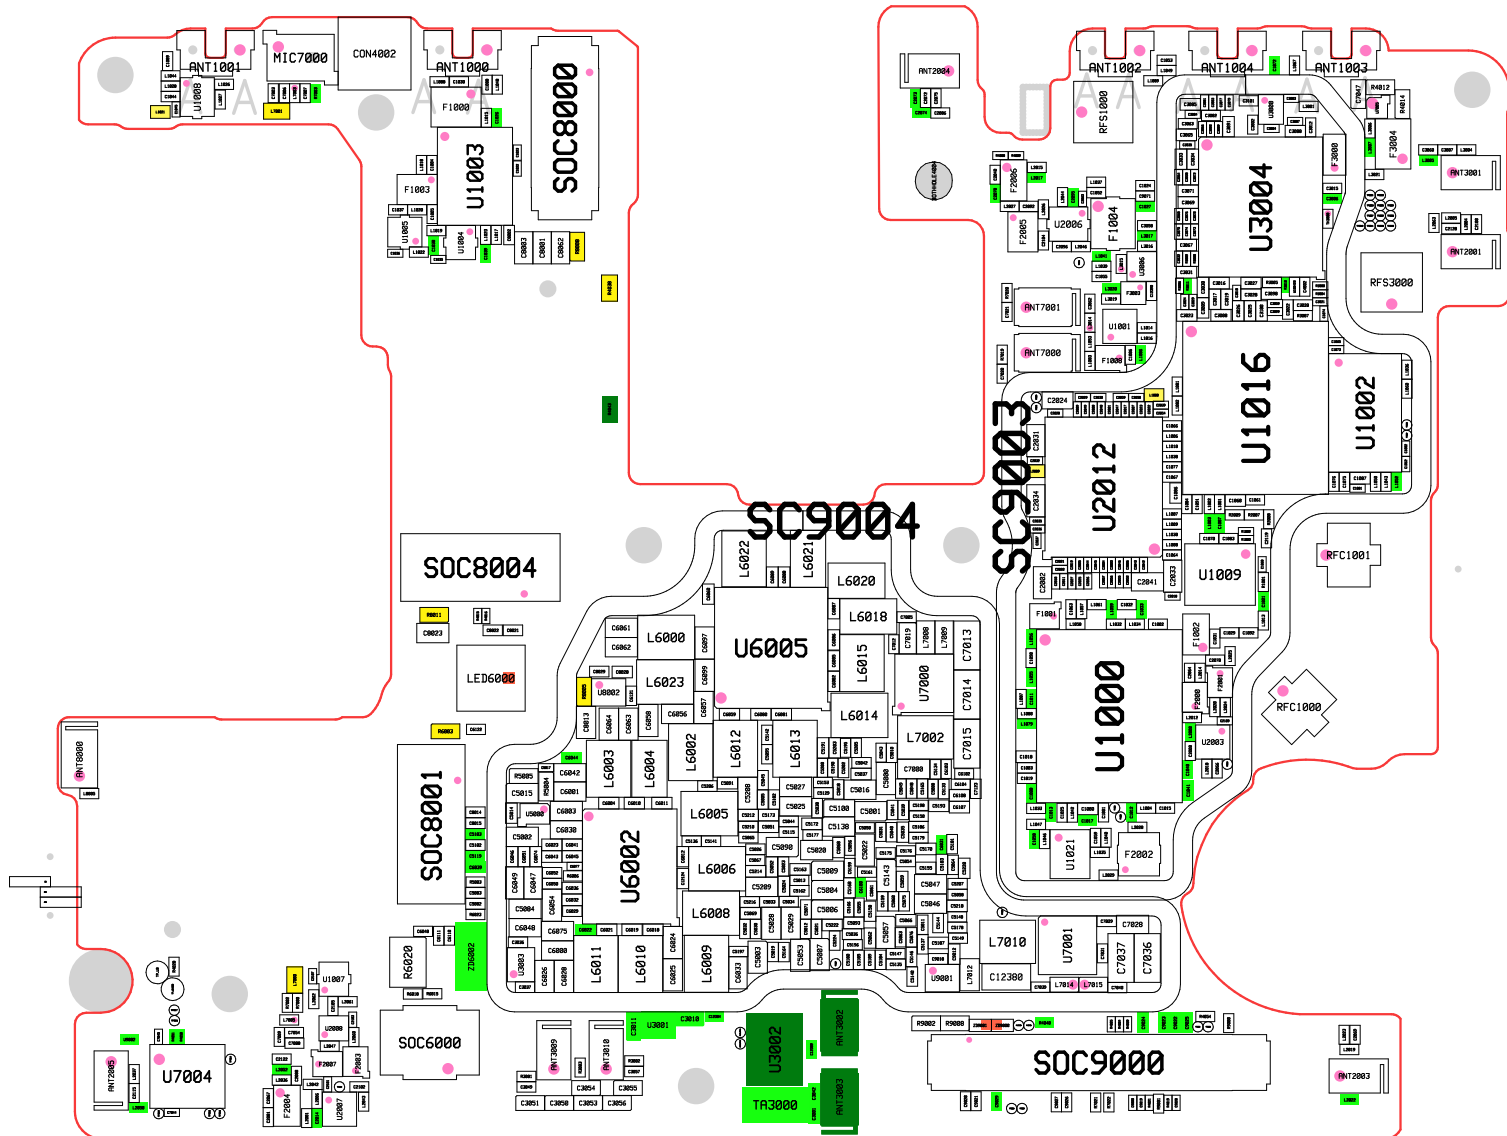

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

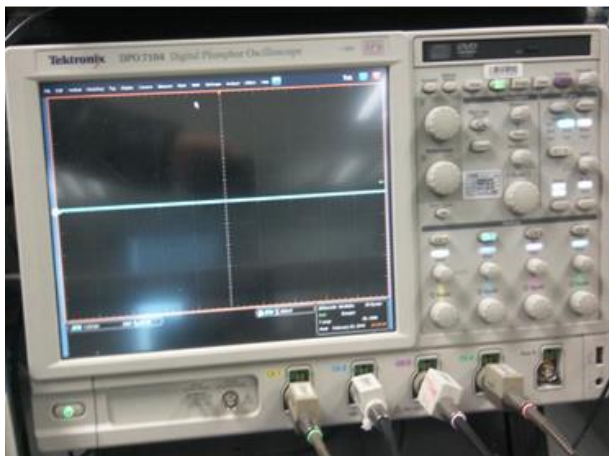

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

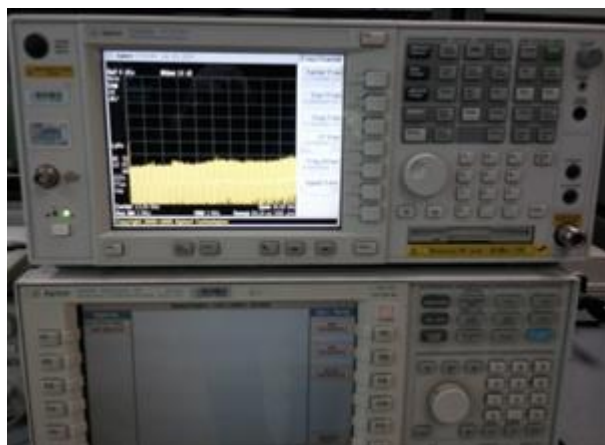


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

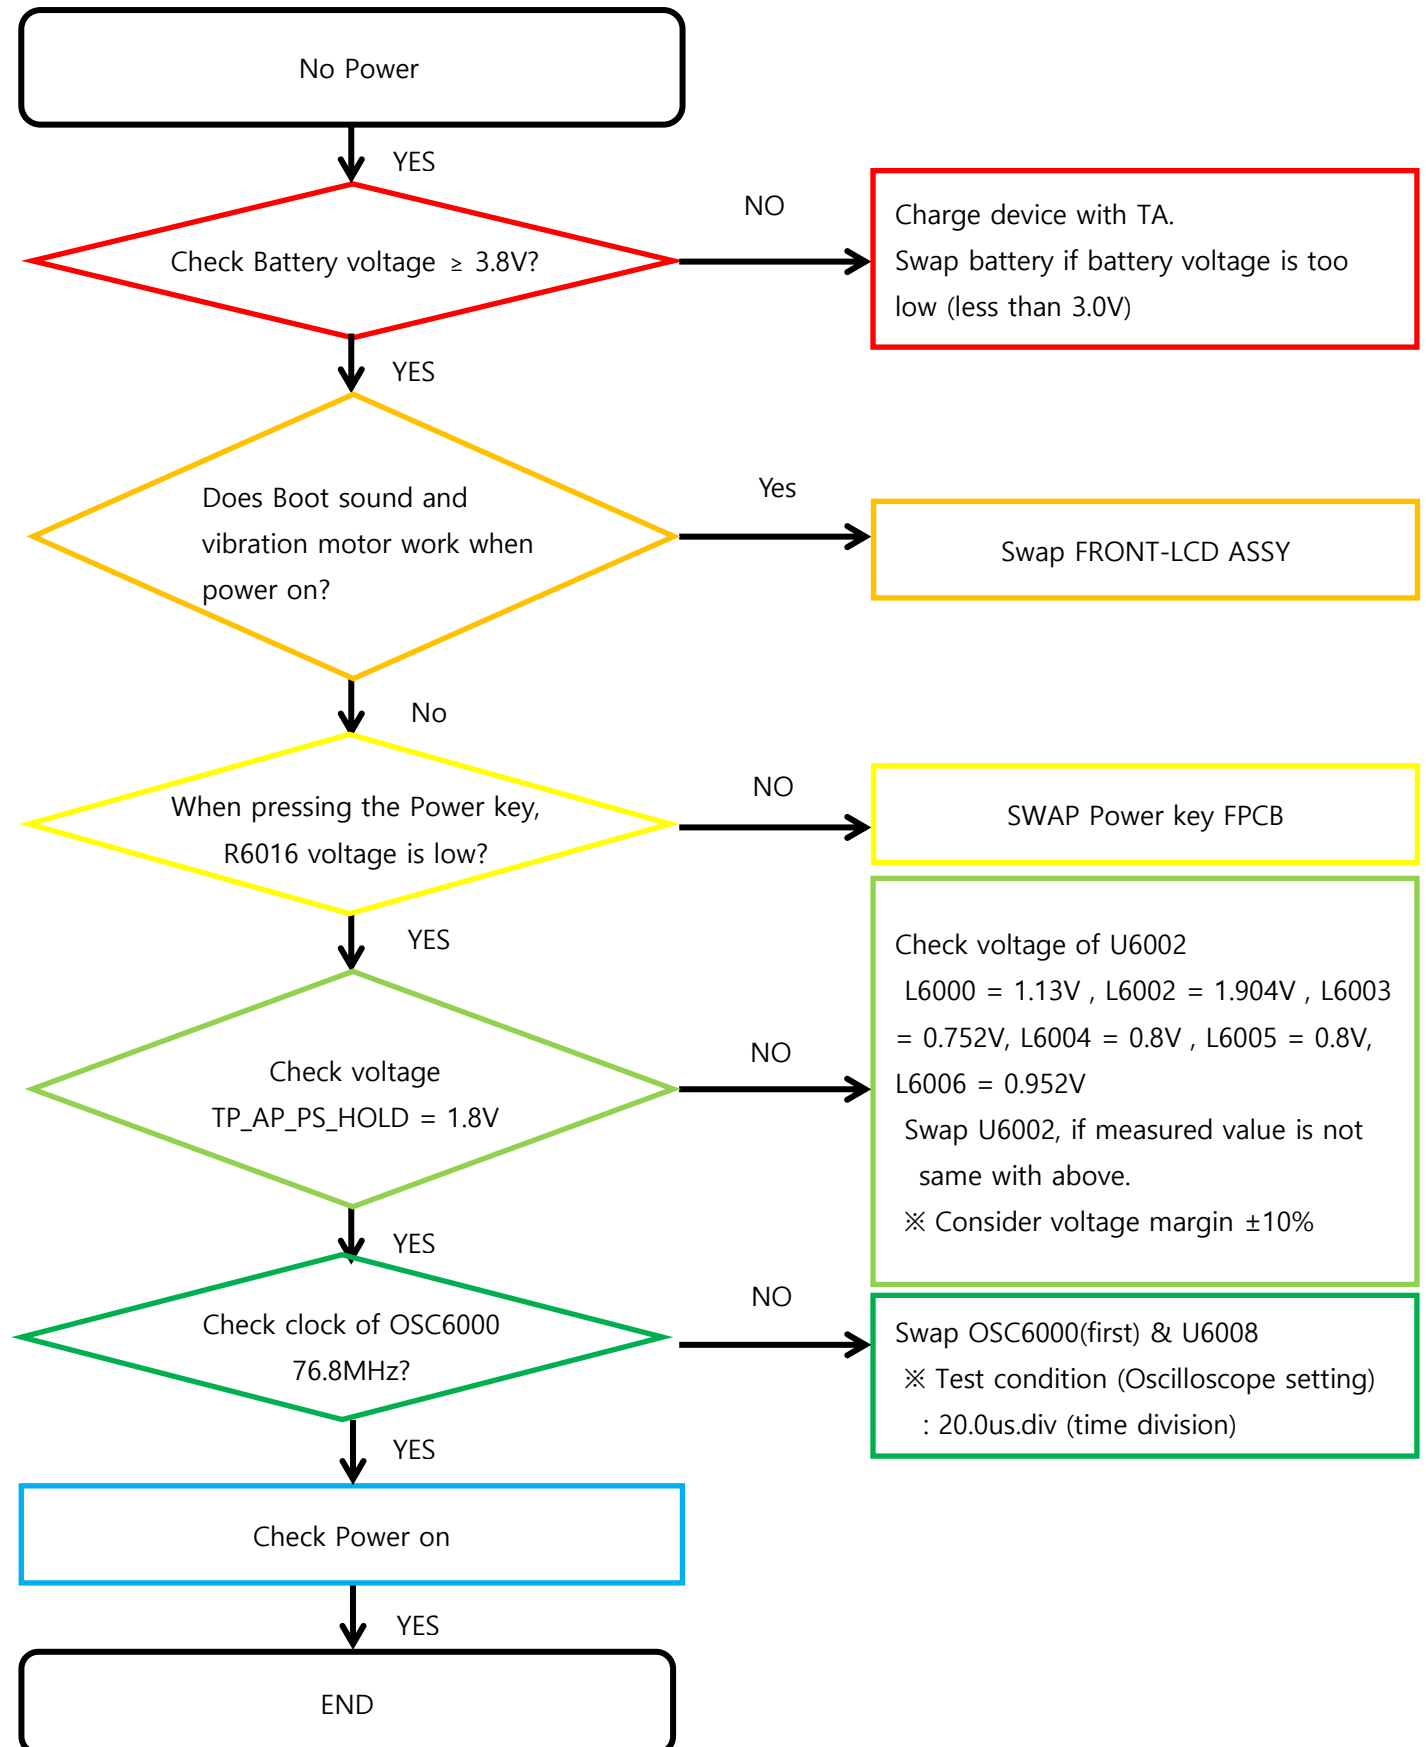


8. Level 3 Repair

8-4-2. Initial

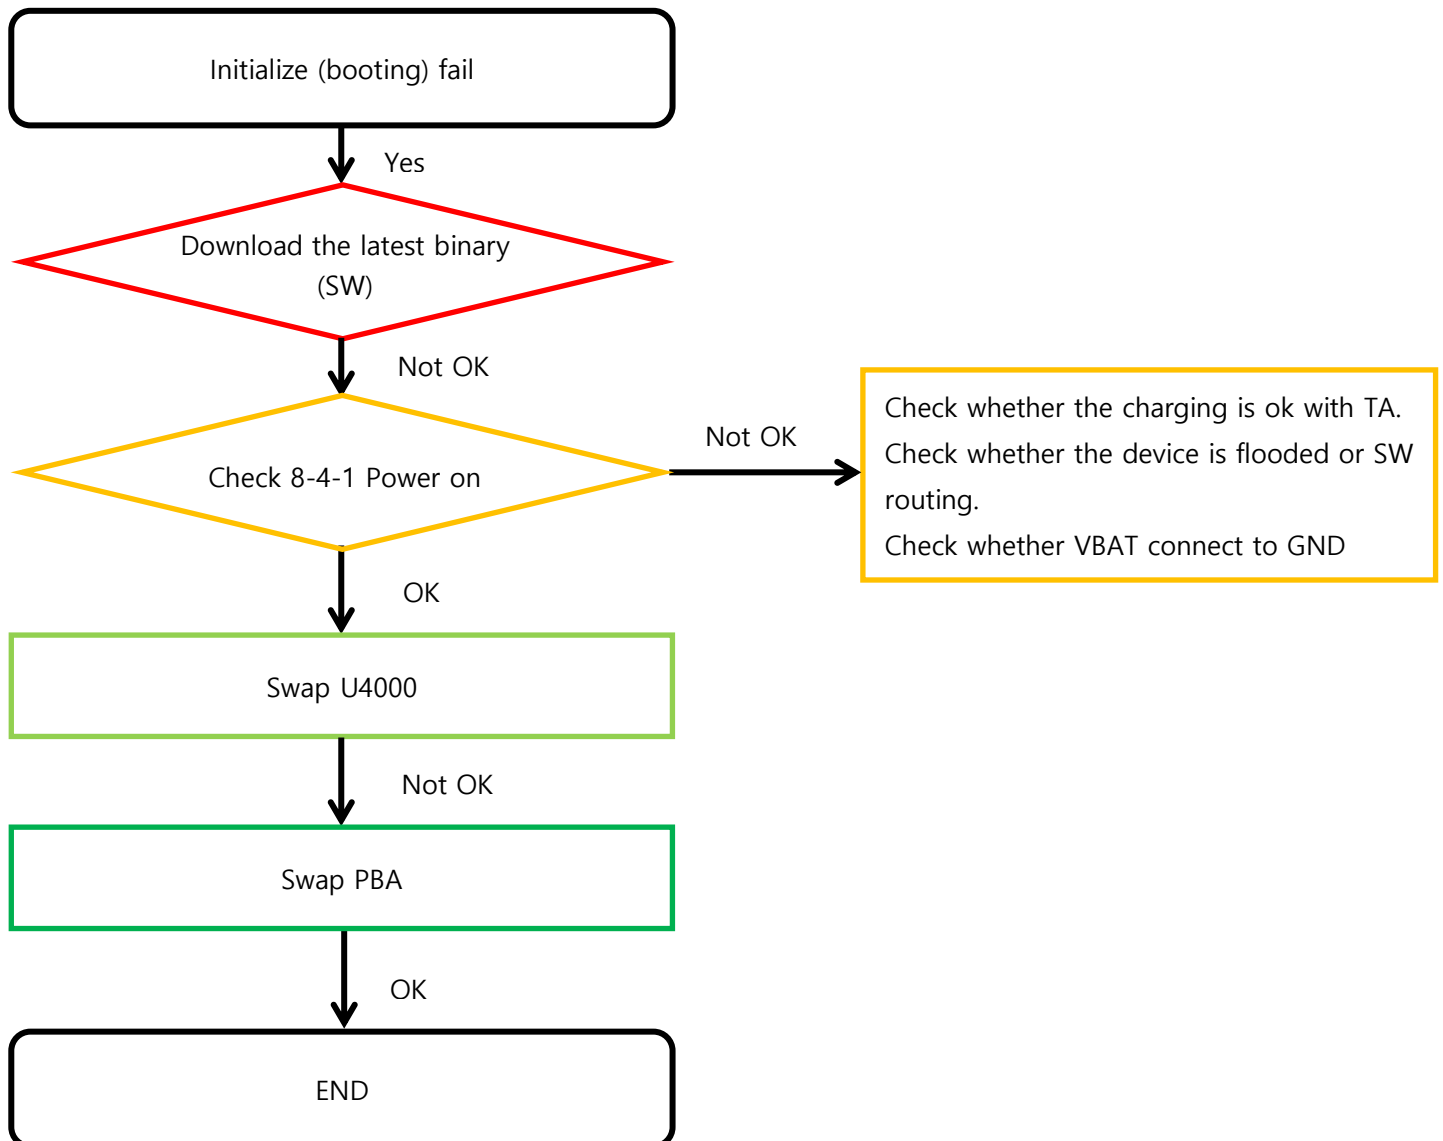


8. Level 3 Repair

8-4-3. No Service

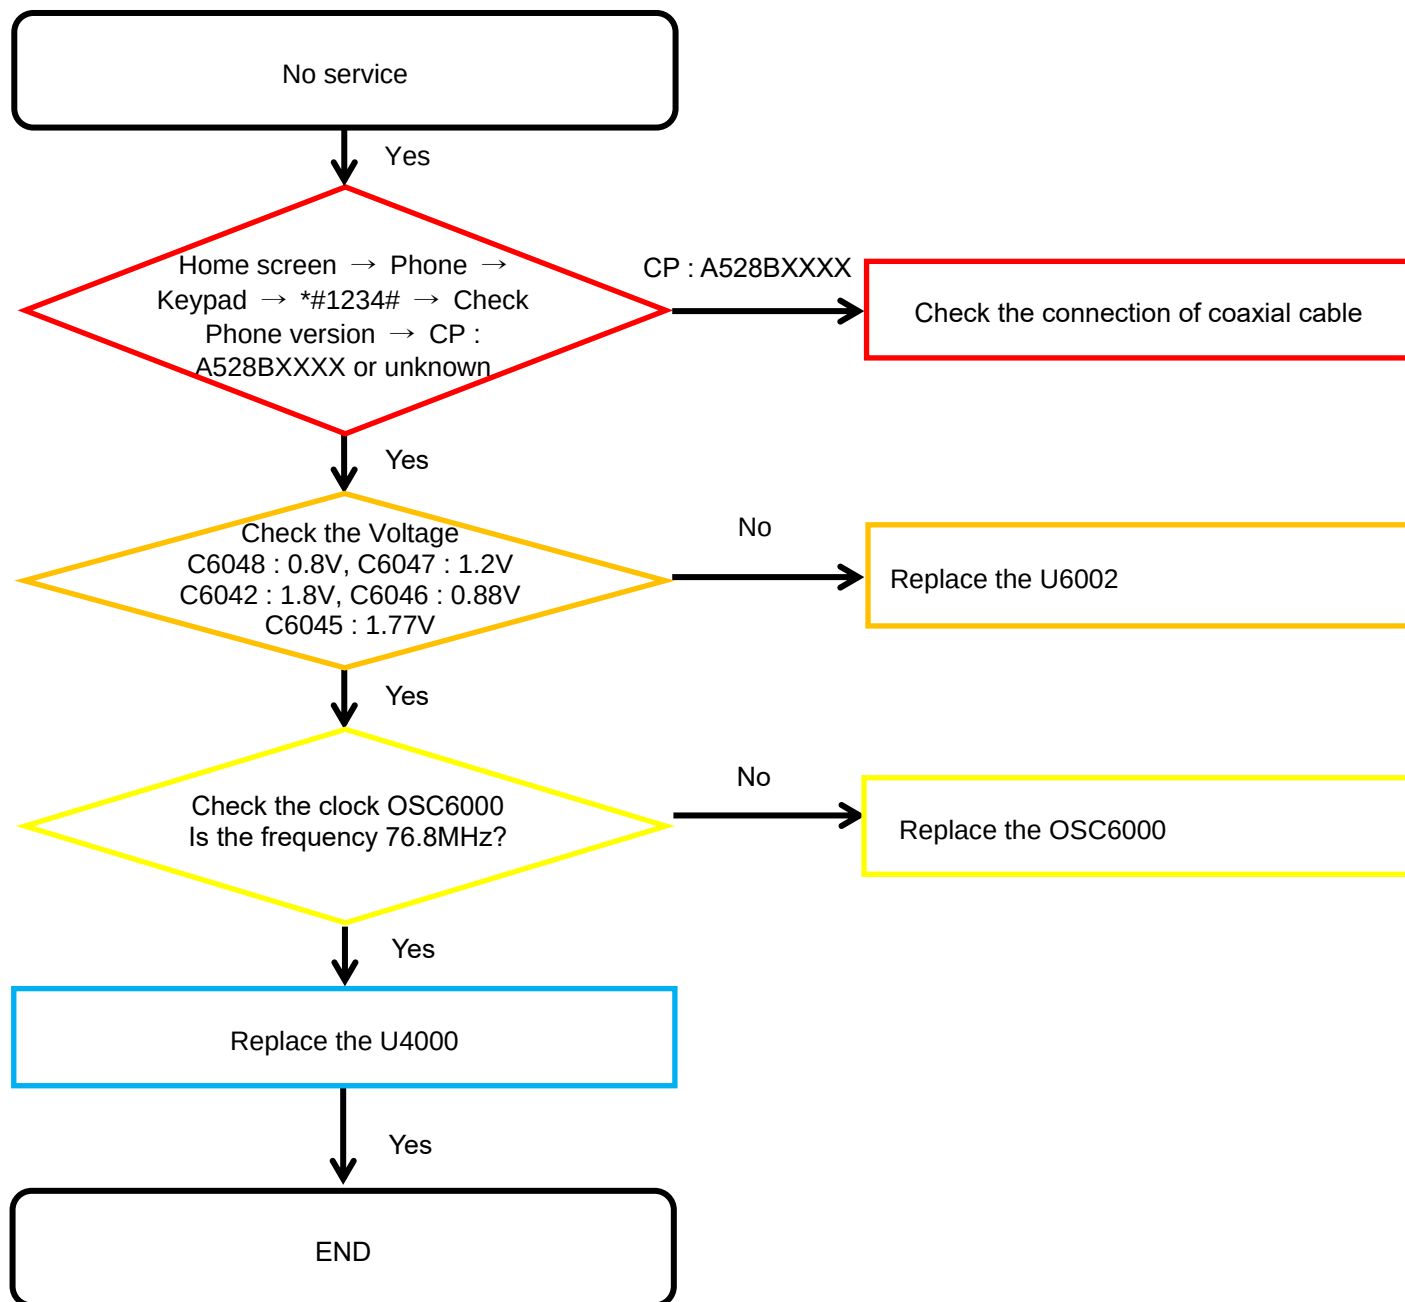


8. Level 3 Repair

8-4-4. SIM Part

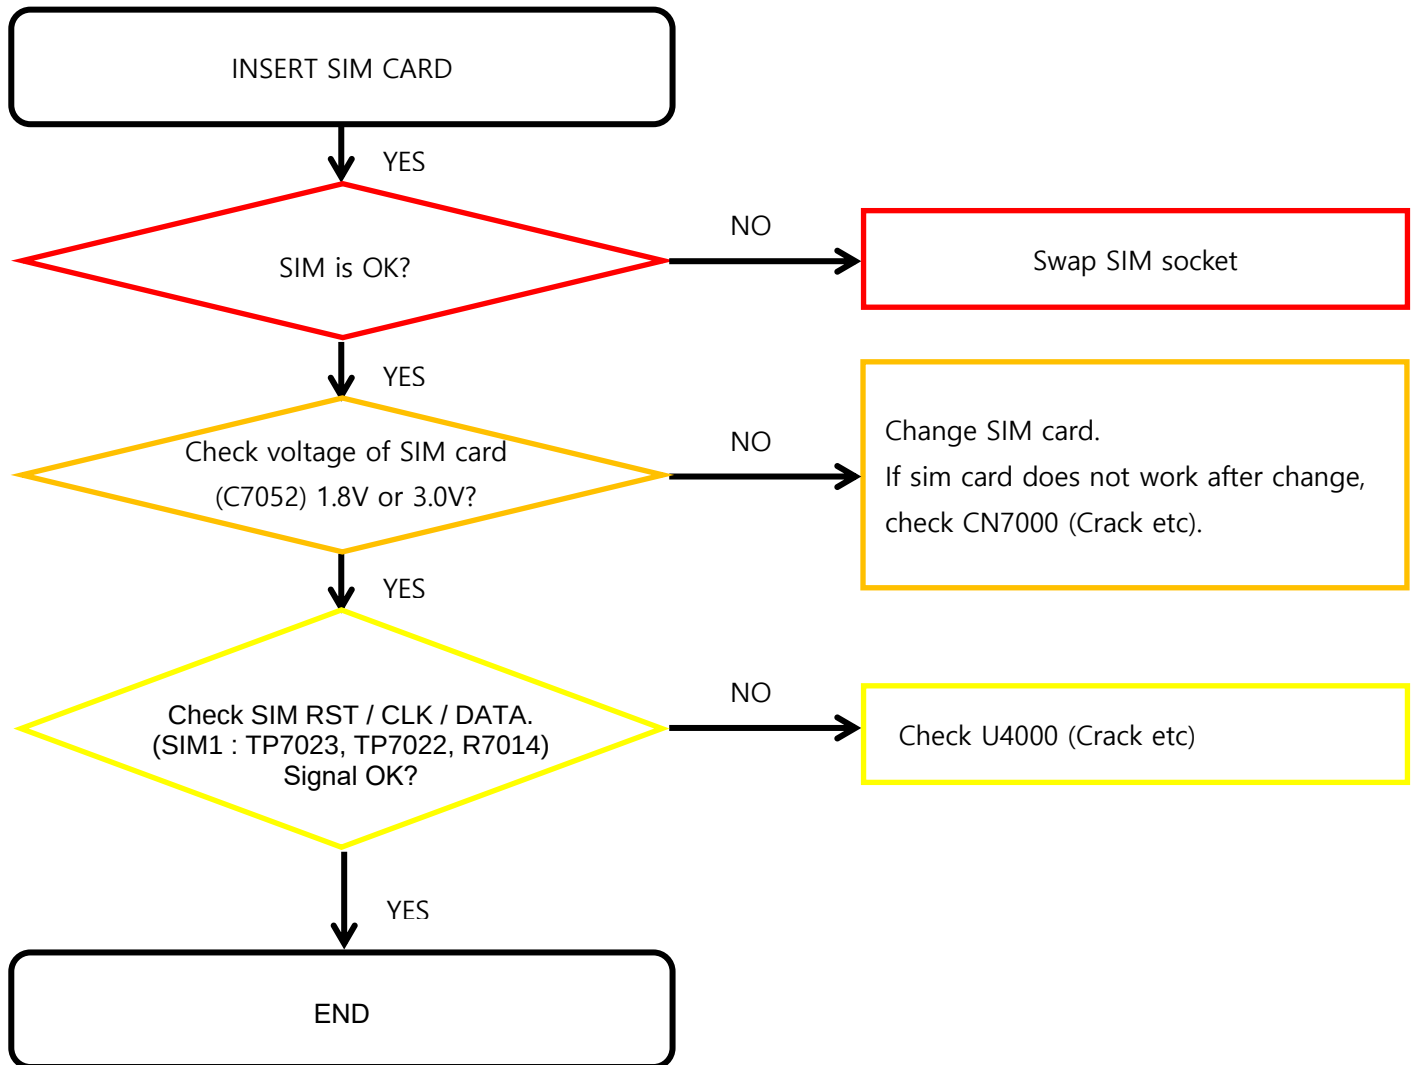


8. Level 3 Repair

8-4-5. T-Flash Part

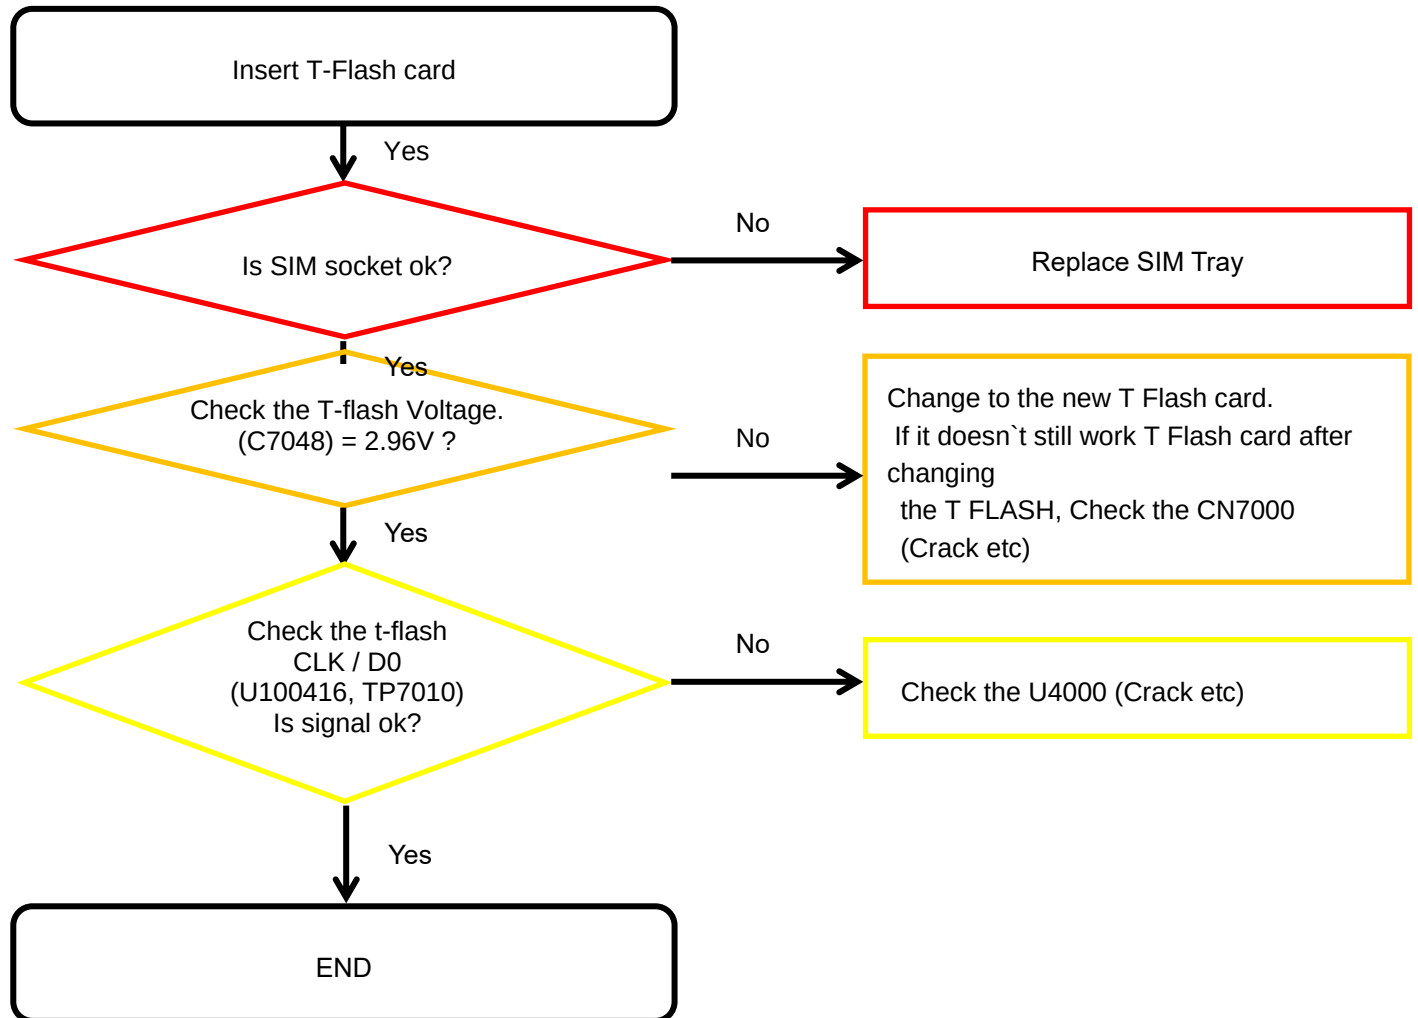


8. Level 3 Repair

8-4-6. Cable Charging Part (Normal/Fast)

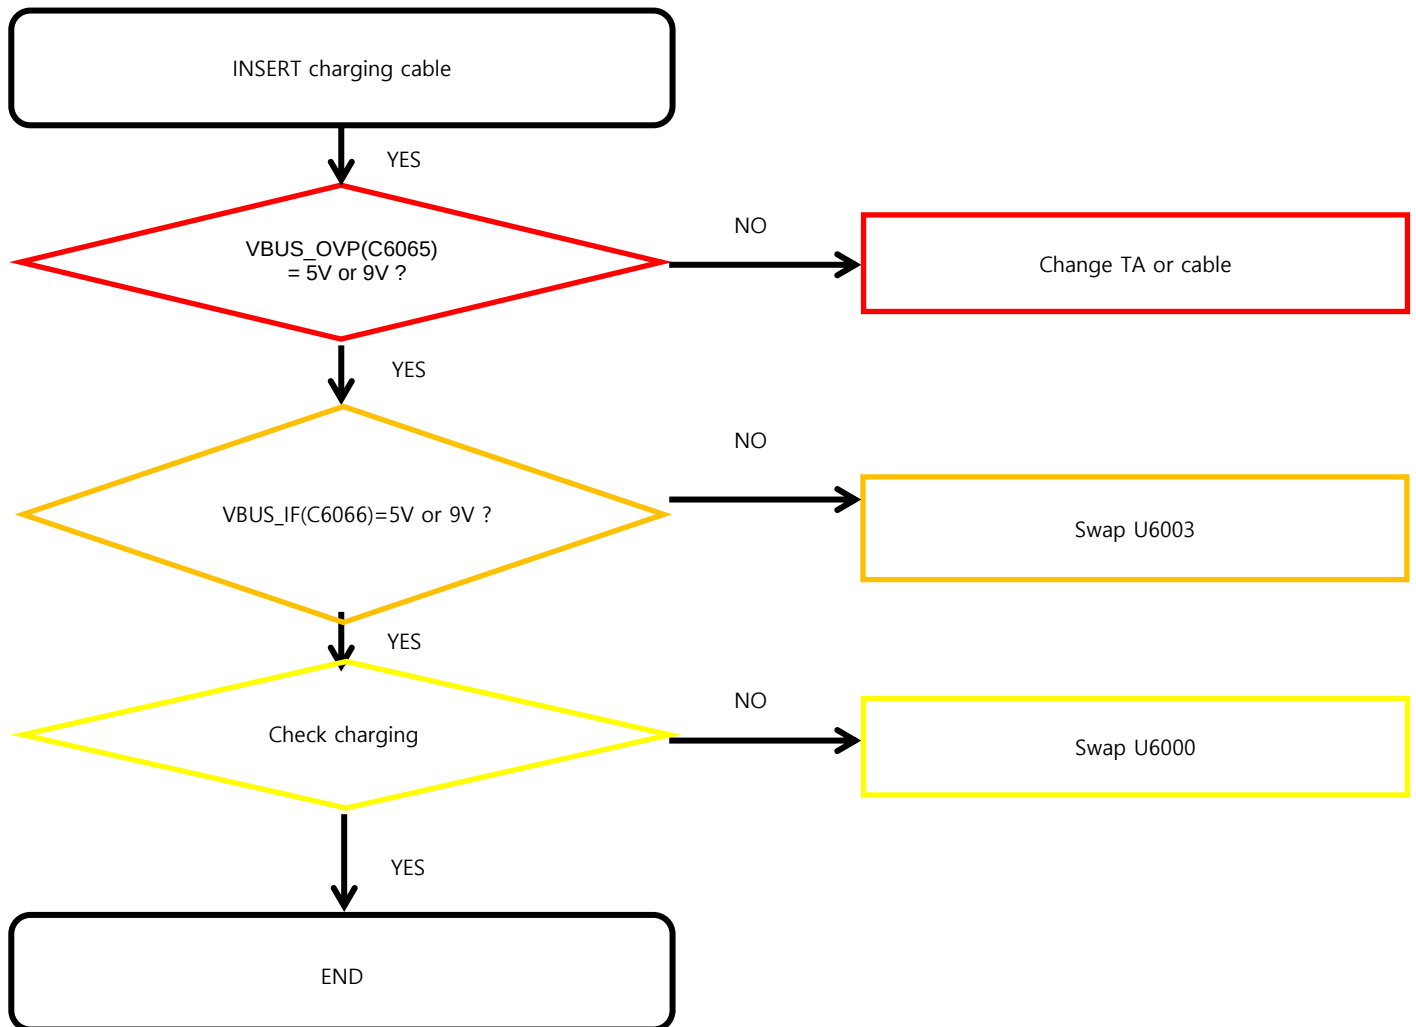


8. Level 3 Repair

8-4-7. OTG

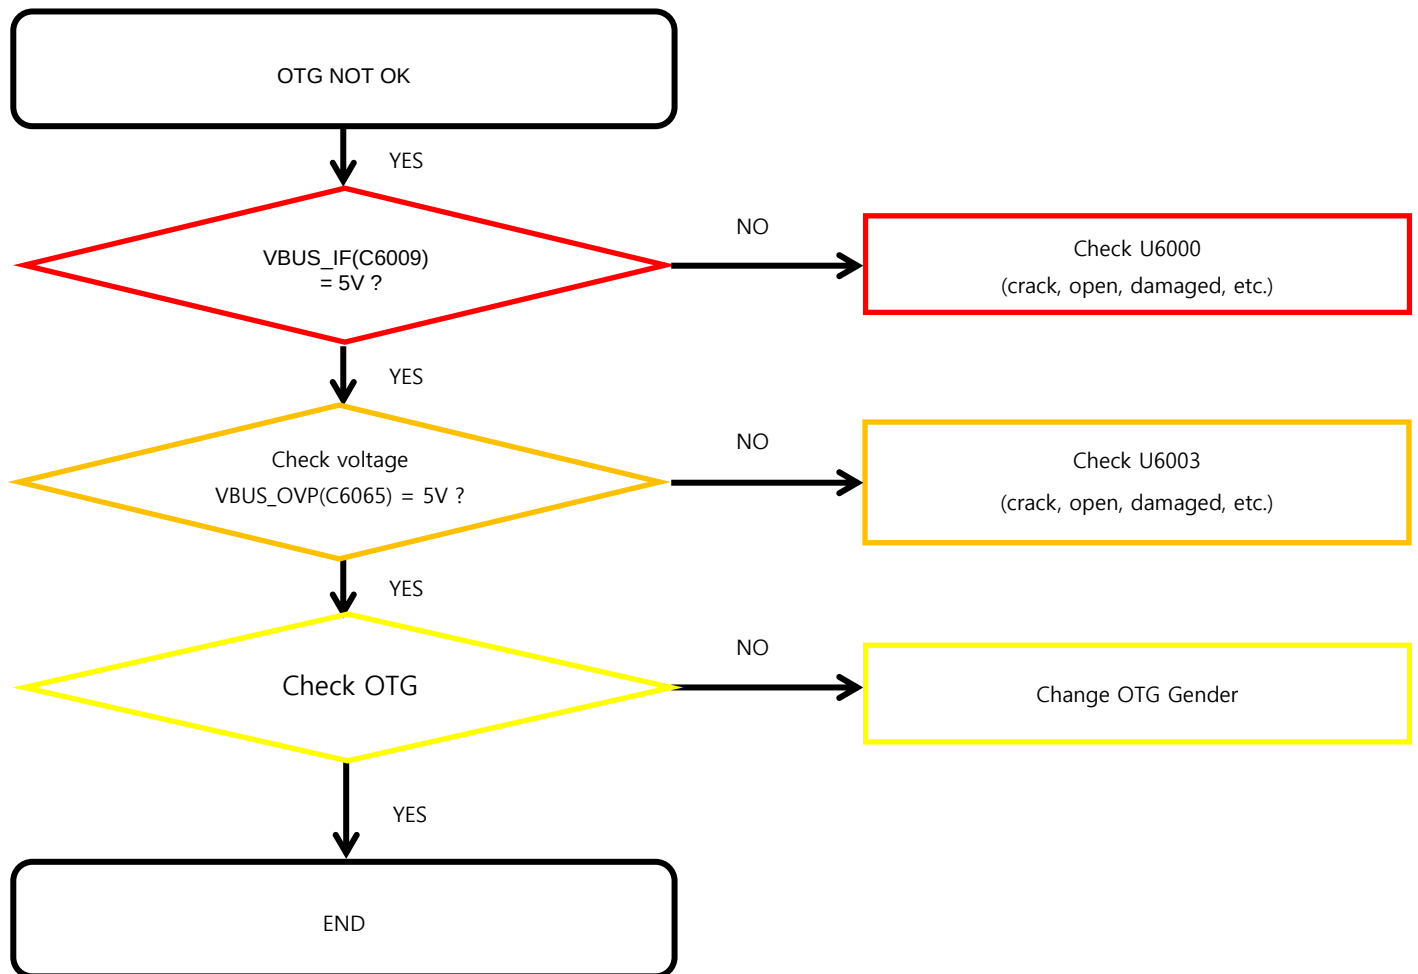


8. Level 3 Repair

8-4-8-1. Magnetic Sensor

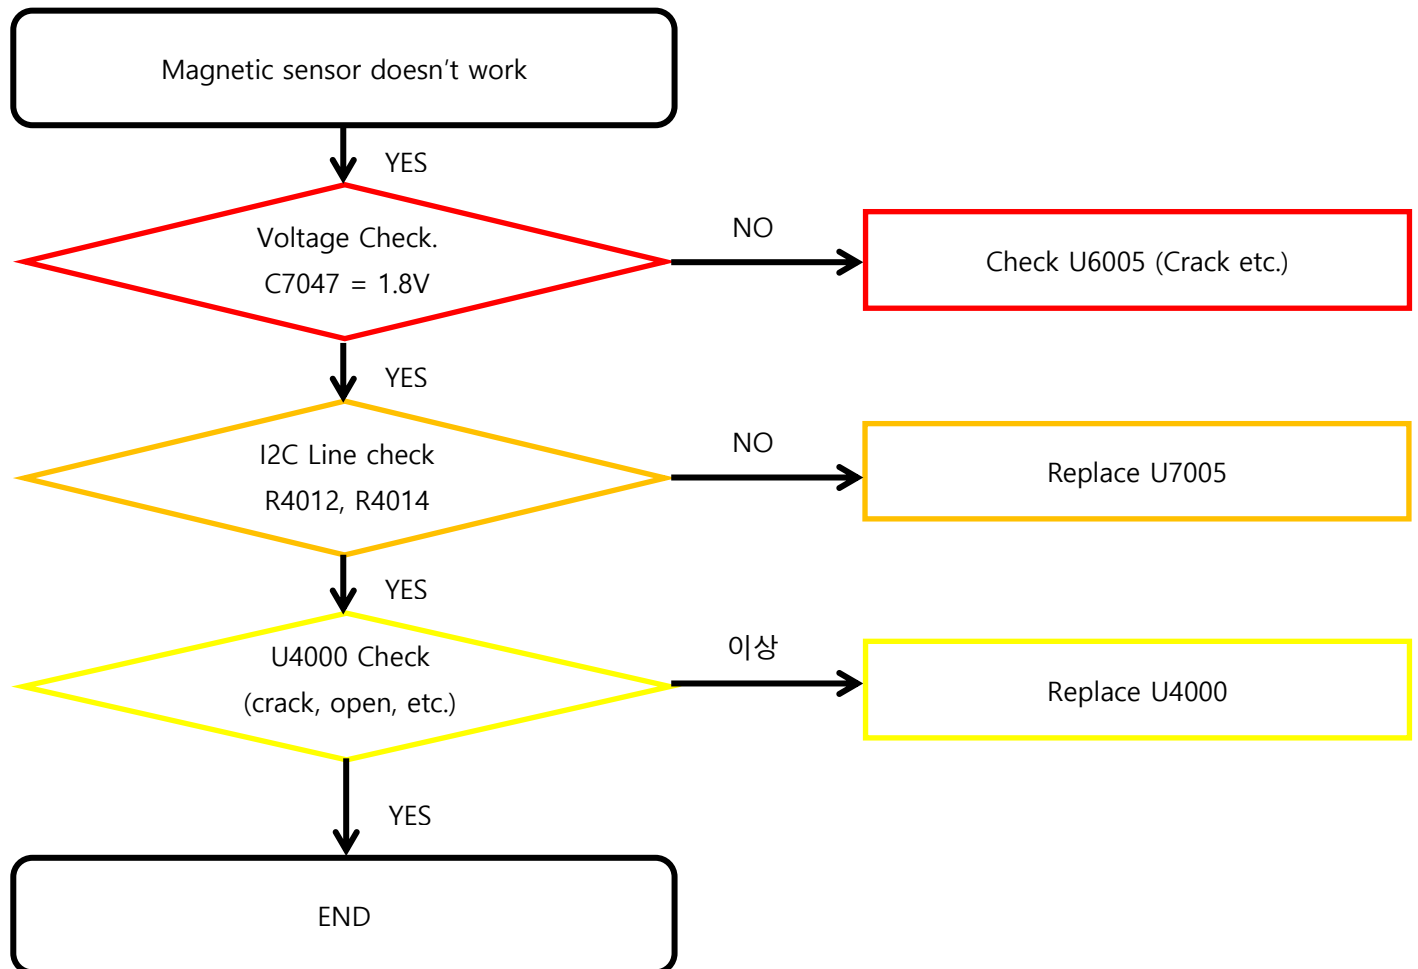


8. Level 3 Repair

8-4-8-2. 6Axis Sensor

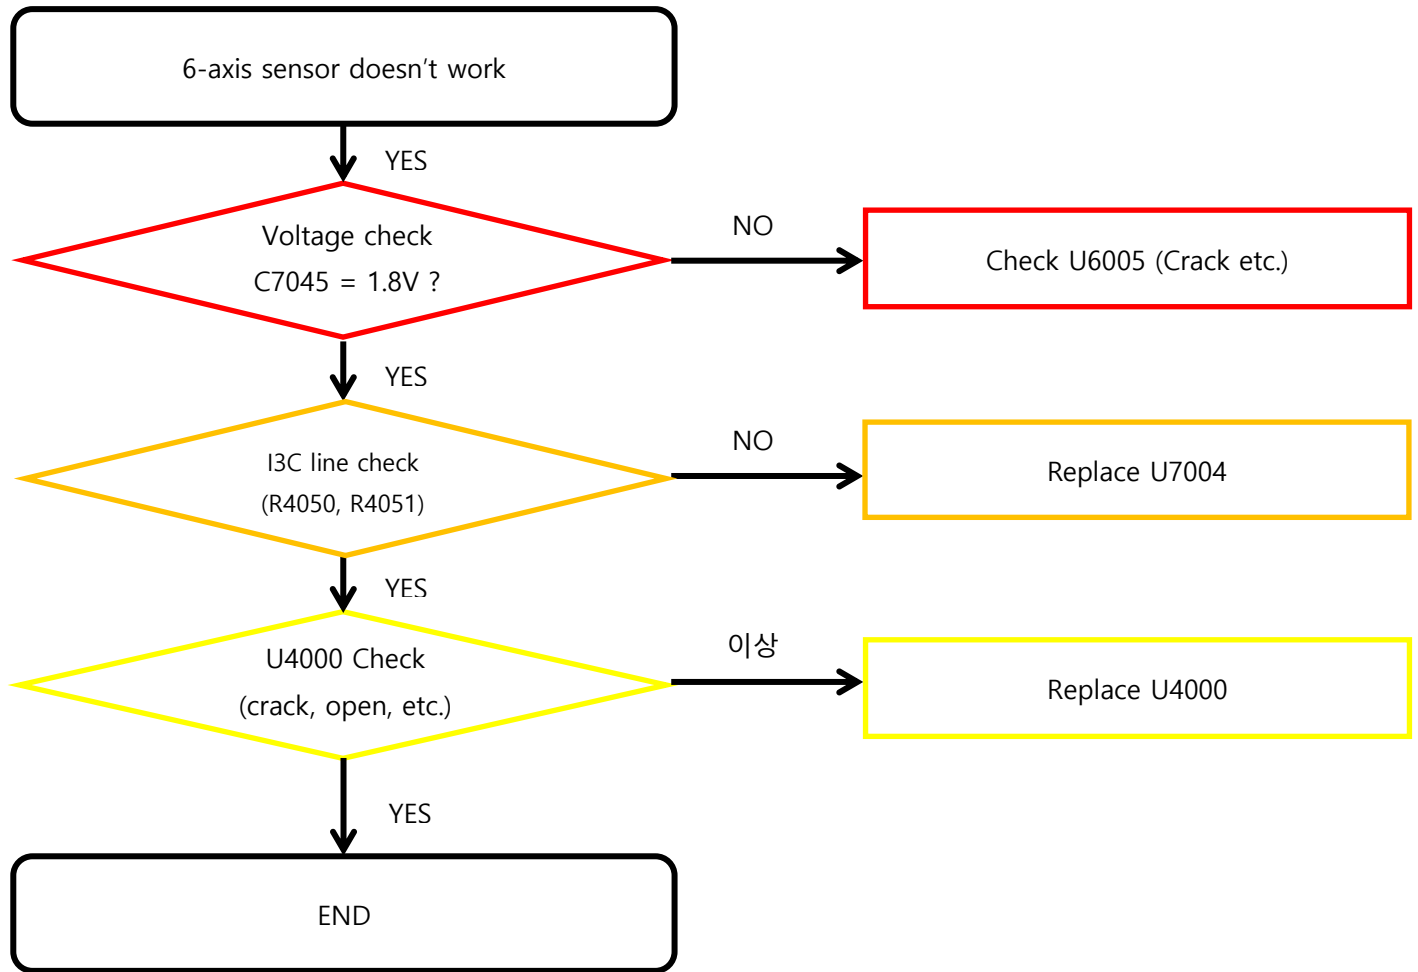


8. Level 3 Repair

8-4-8-3. Light sensor

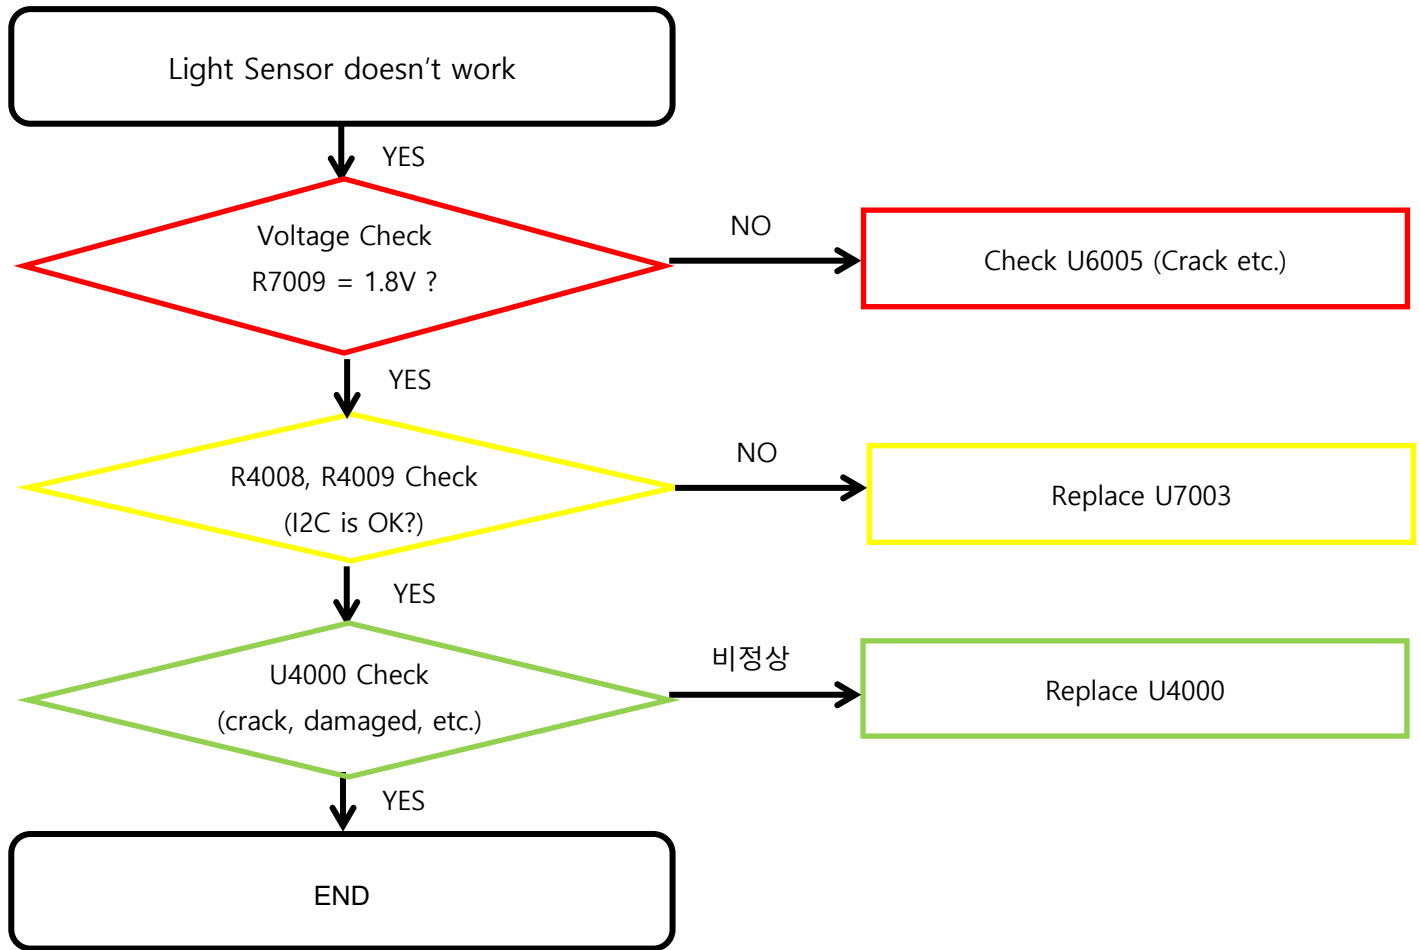


8. Level 3 Repair

8-4-8-4. Hall Sensor

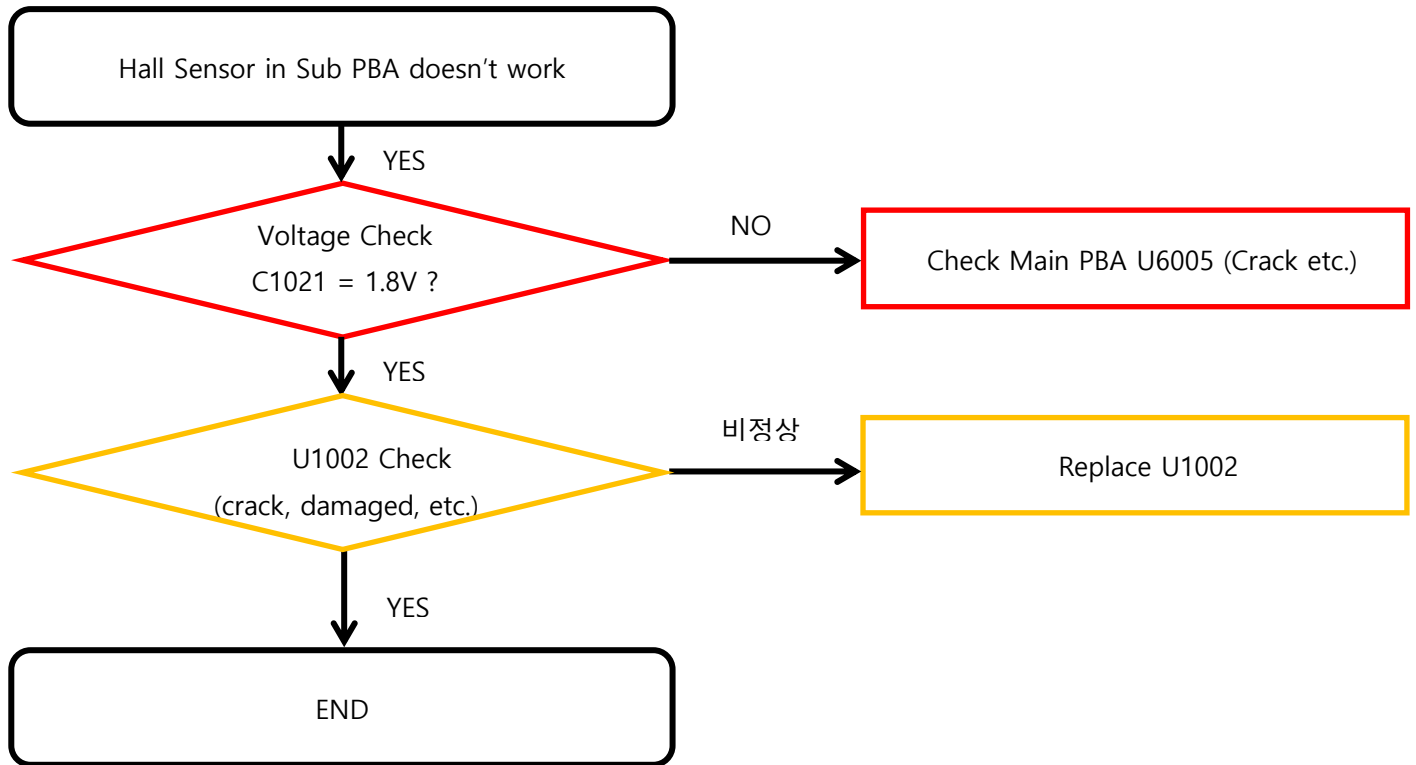


8. Level 3 Repair

8-4-8-5. Fingerprint Sensor

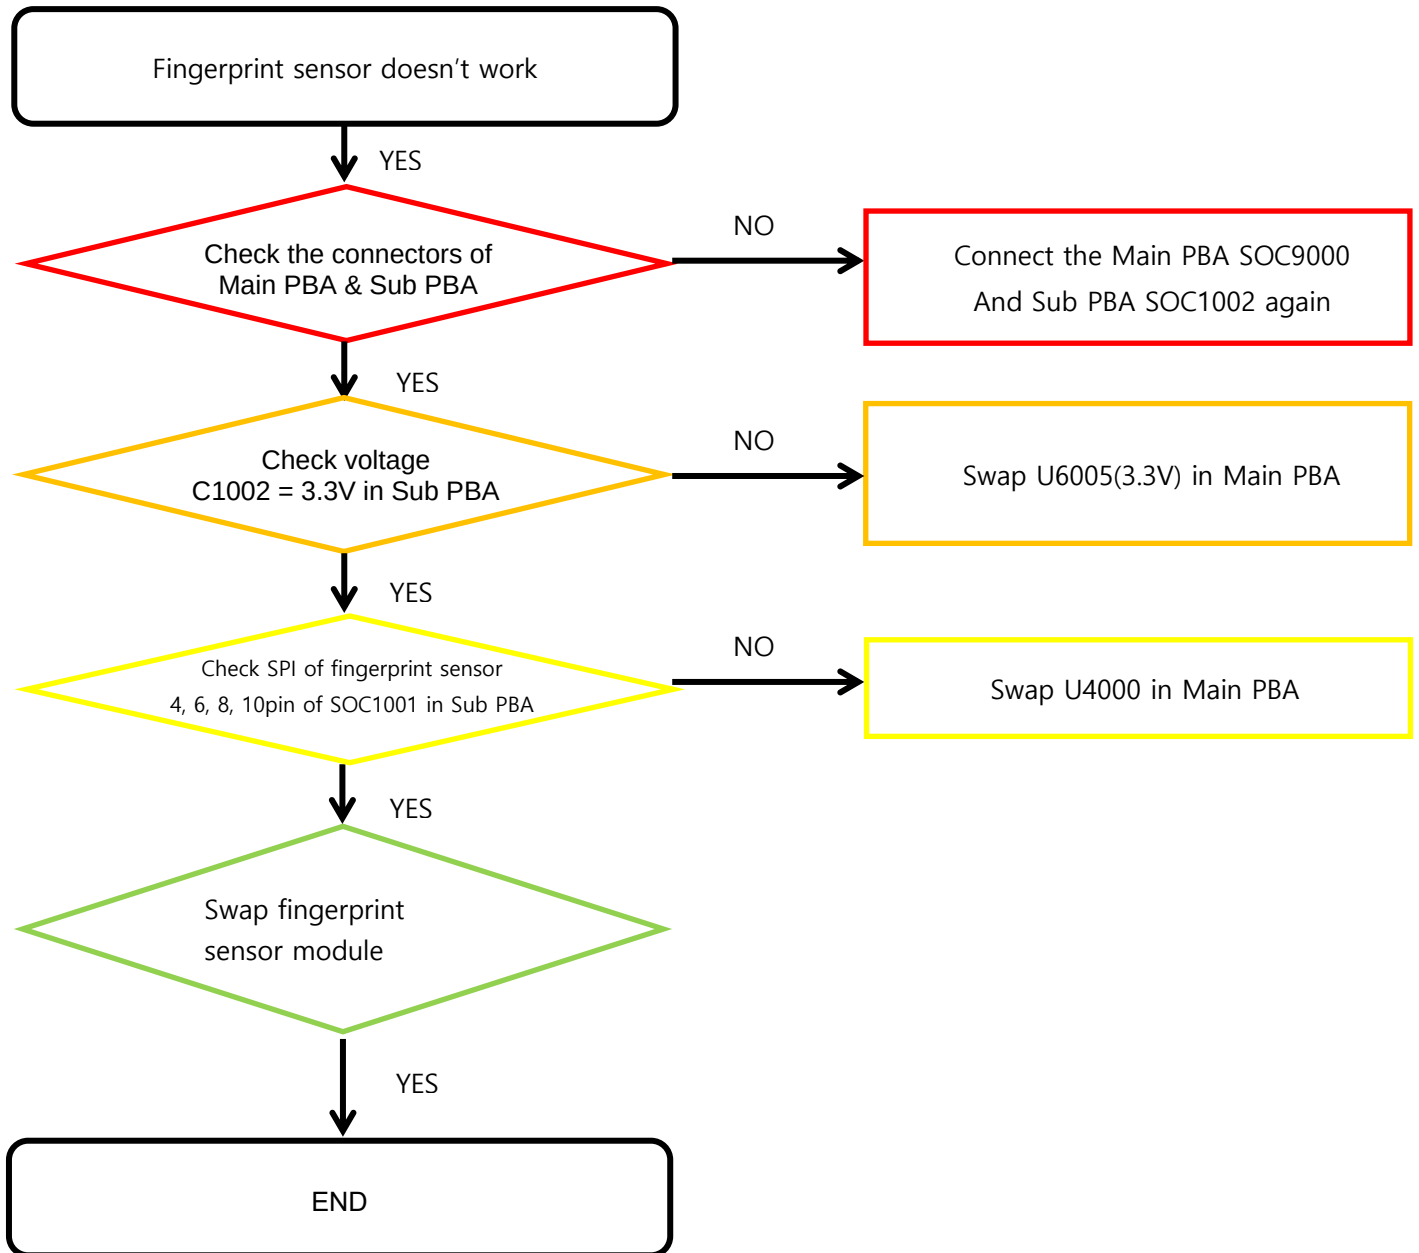


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC

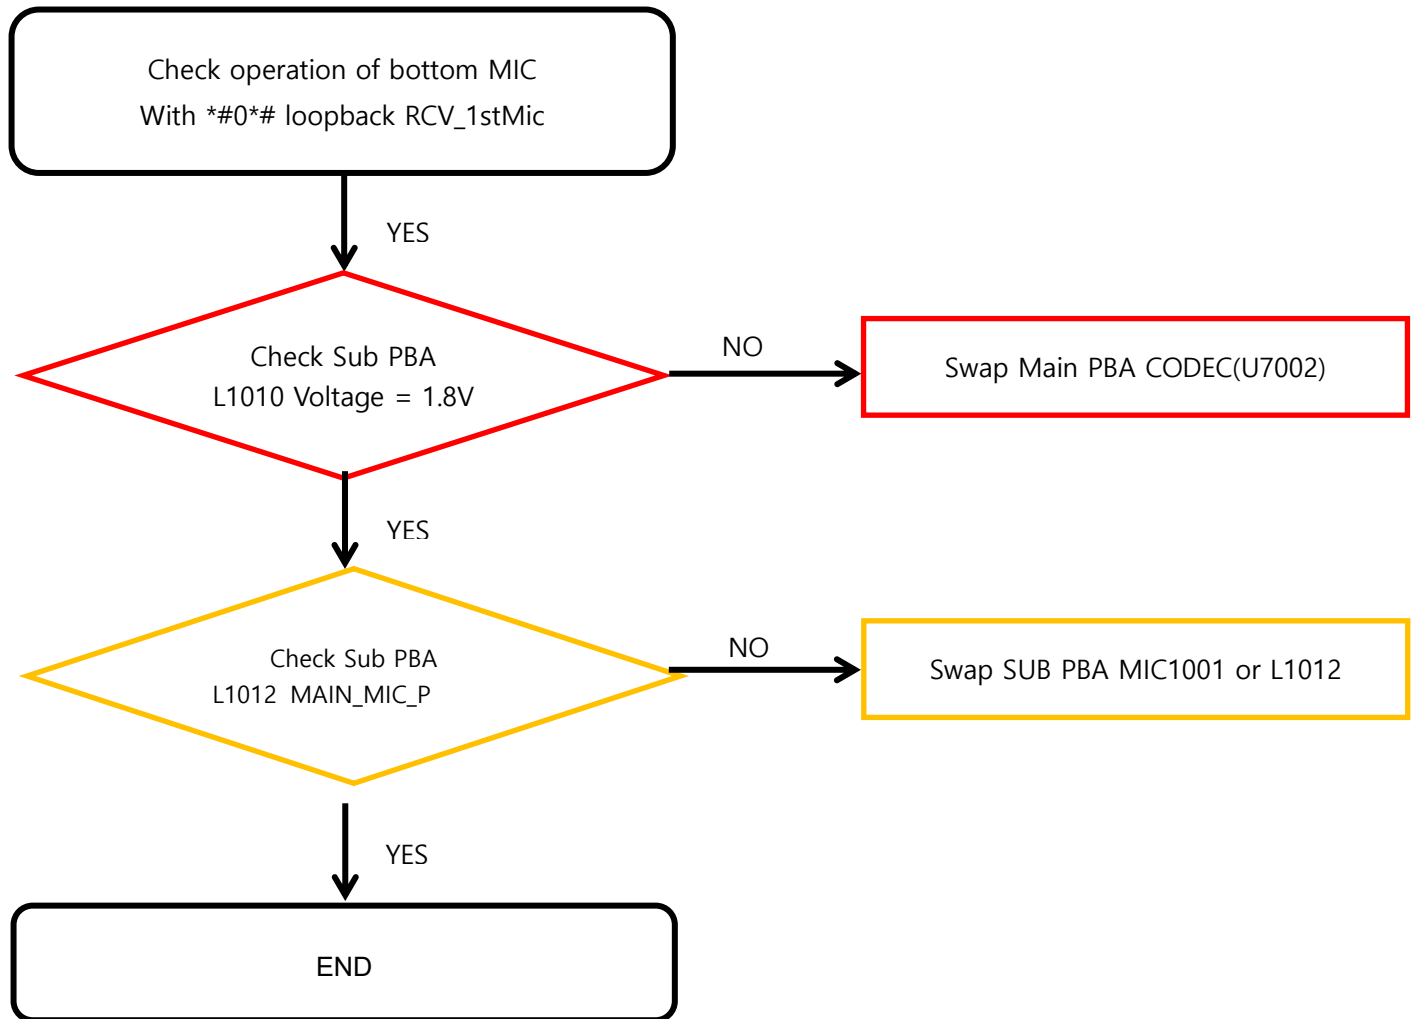


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

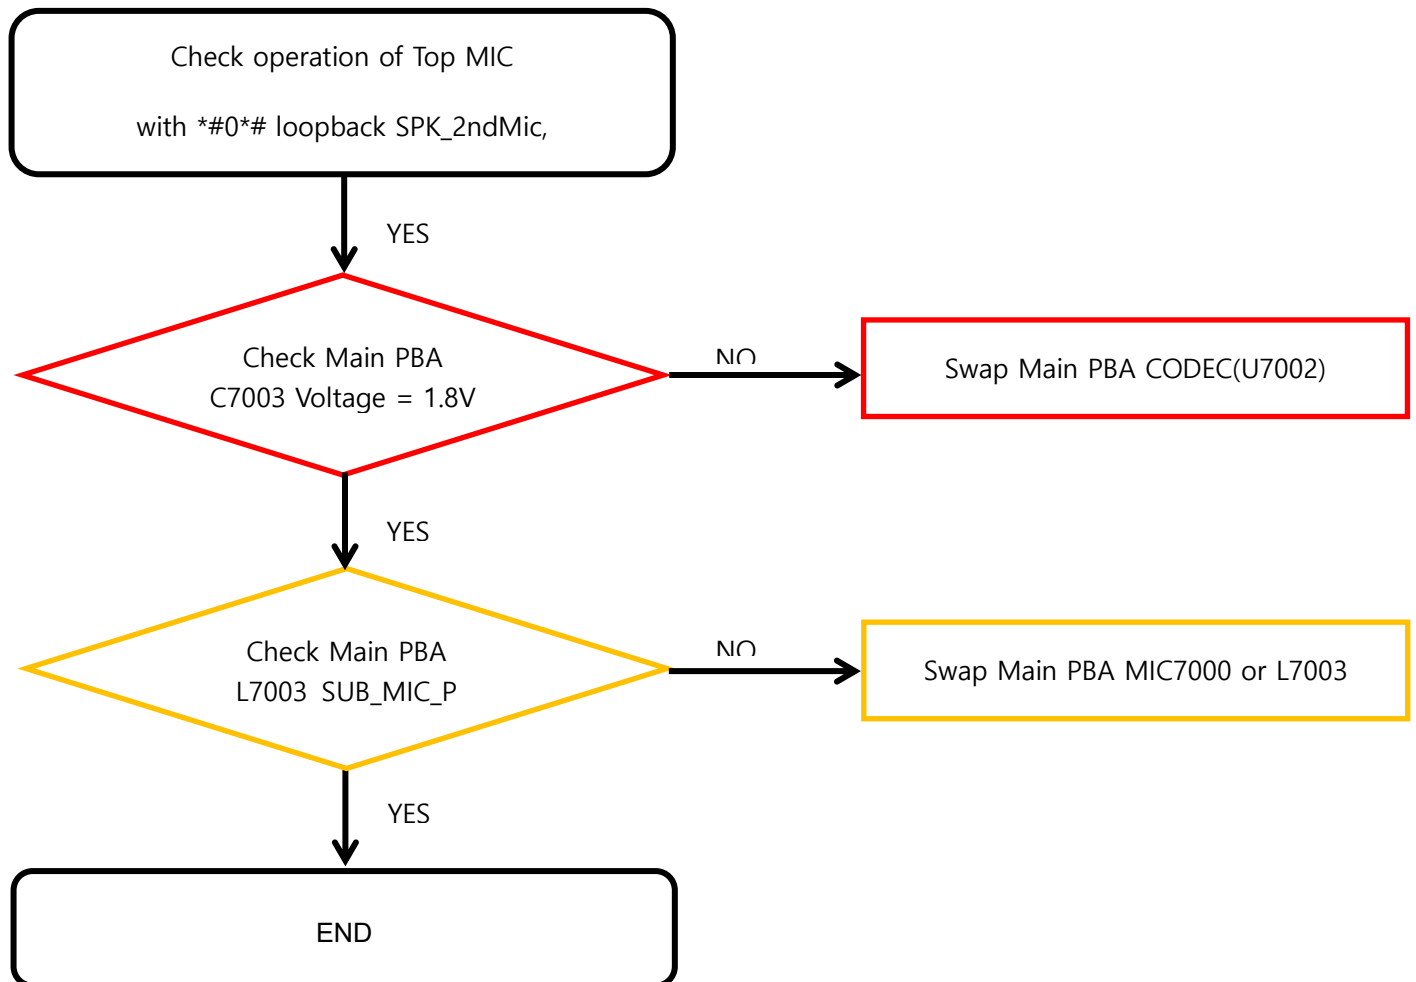


8. Level 3 Repair

8-4-10. Speaker Part - Bottom speaker

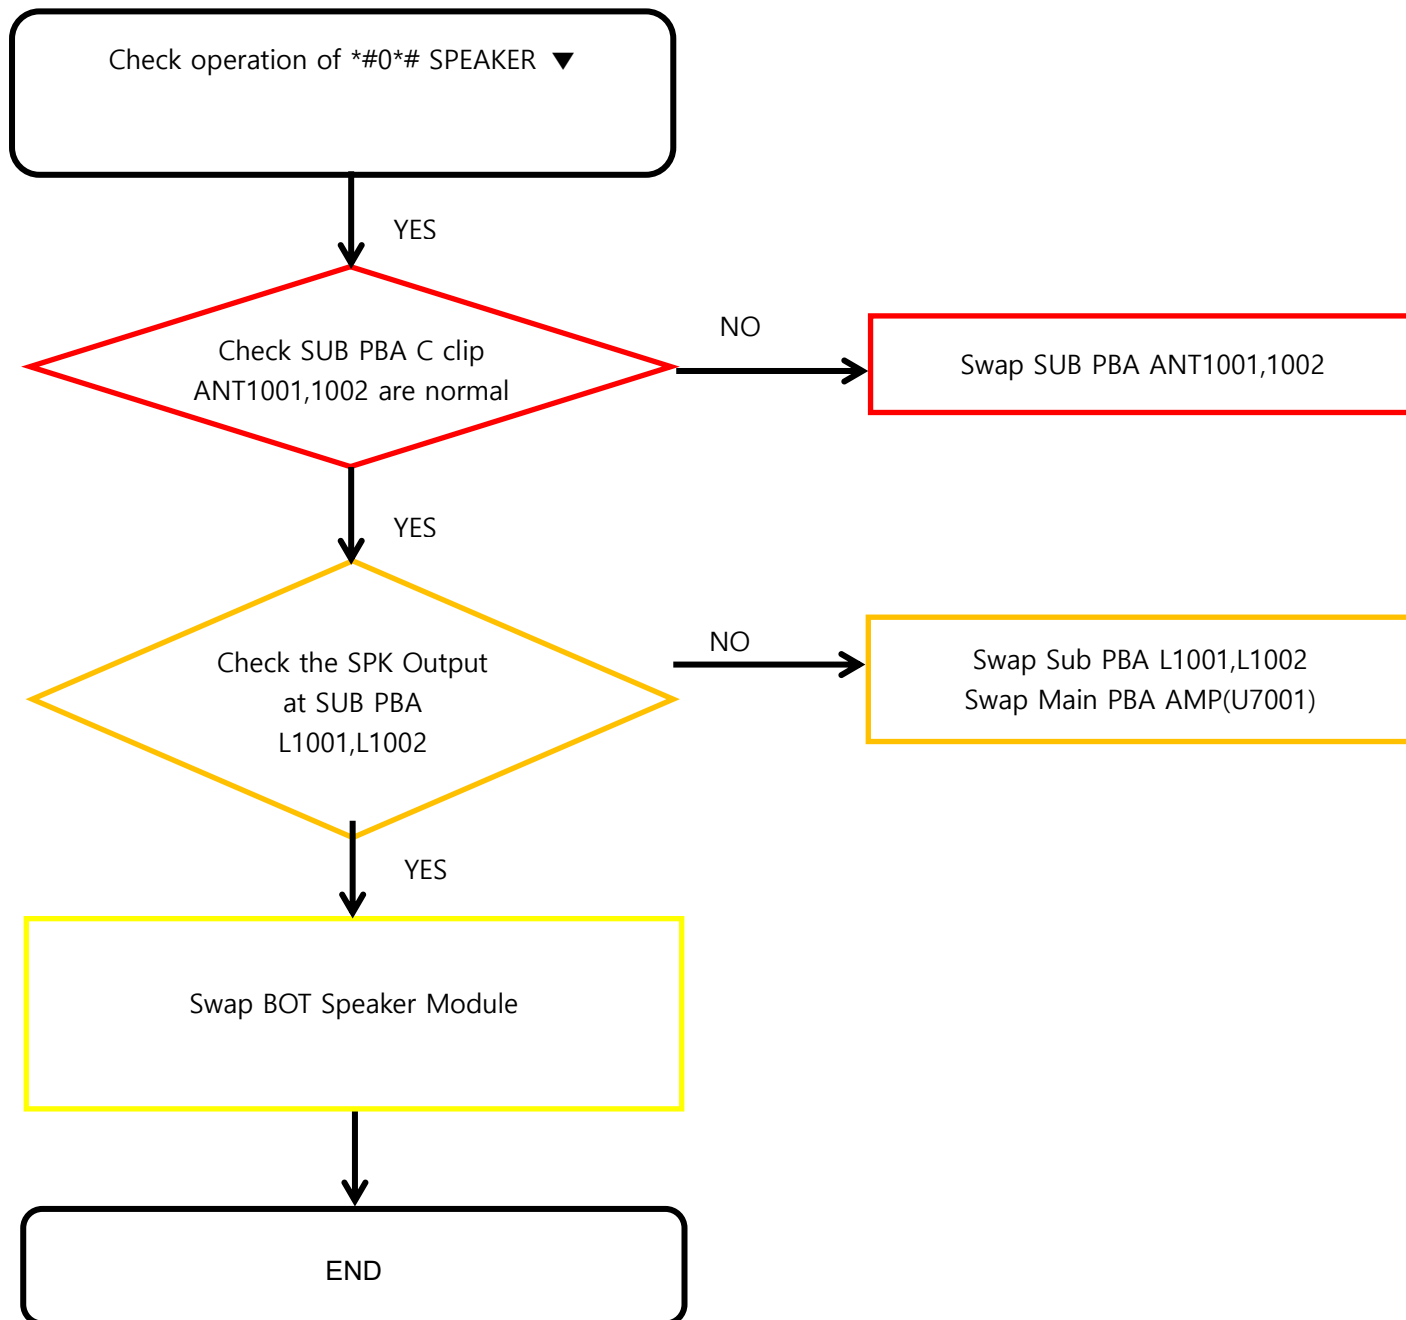


8. Level 3 Repair

8-4-11. Speaker Part - Top speaker

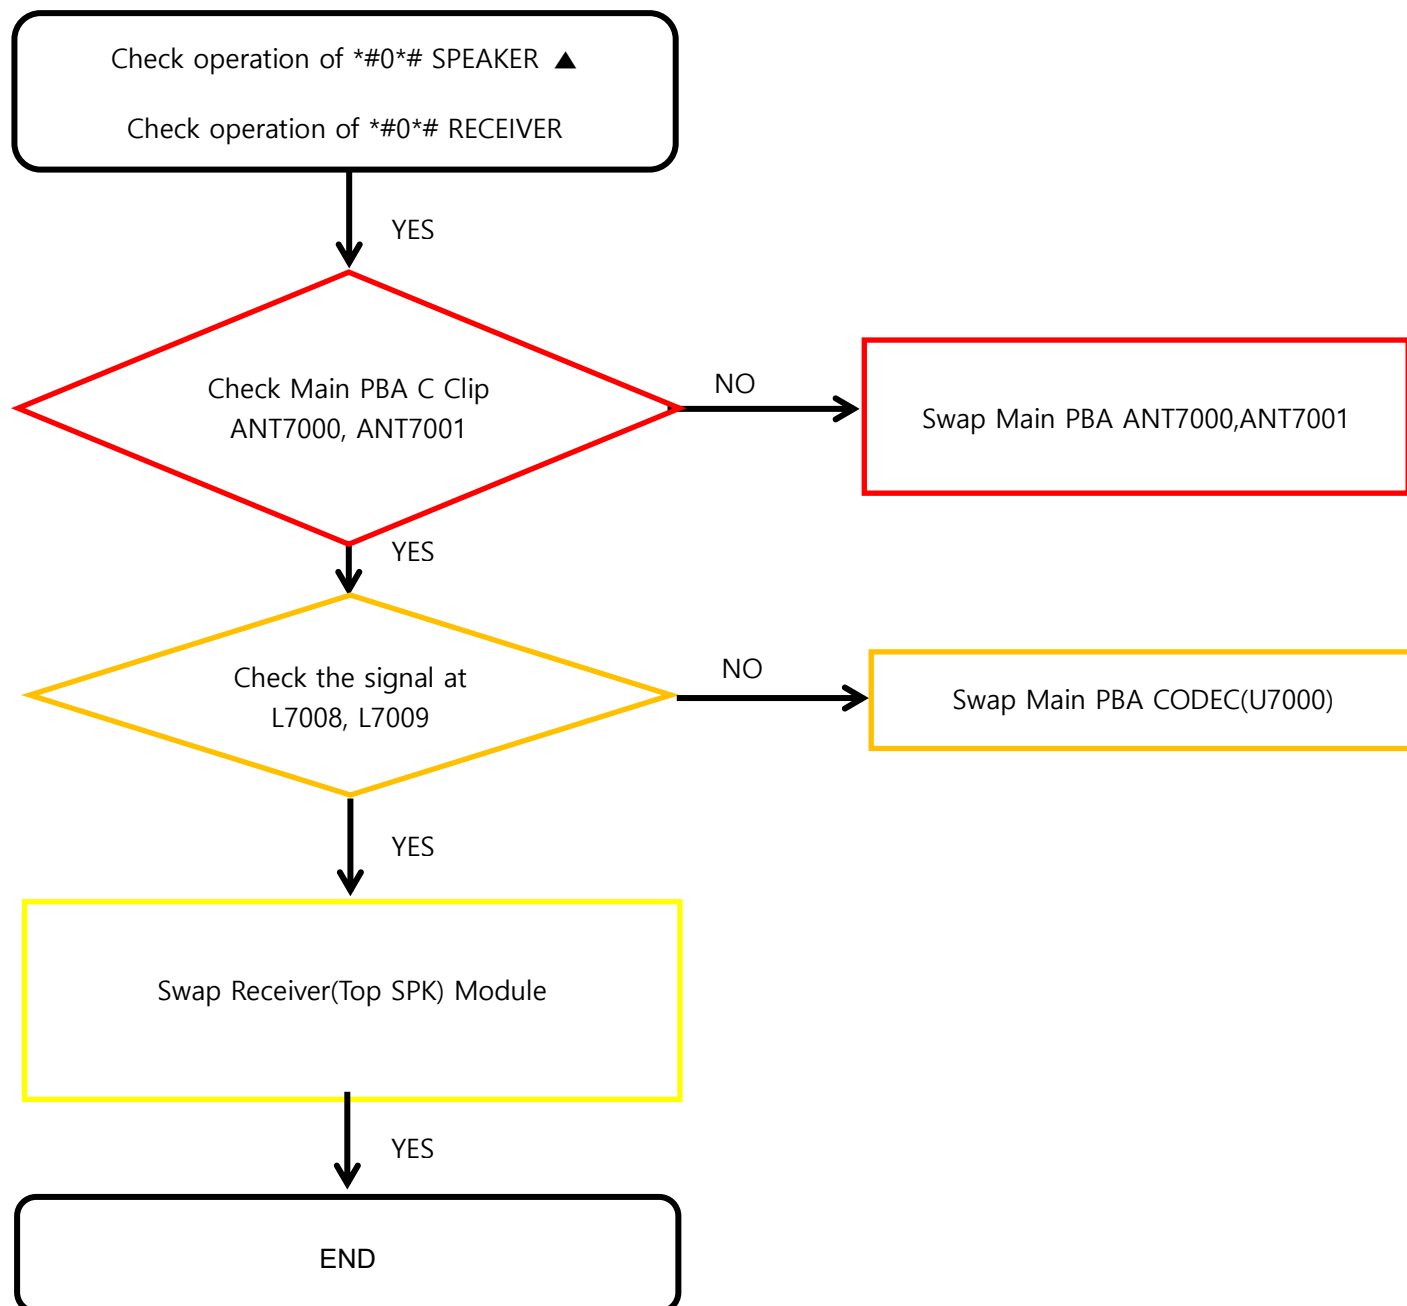


8. Level 3 Repair

8-4-12. BT/WIFI

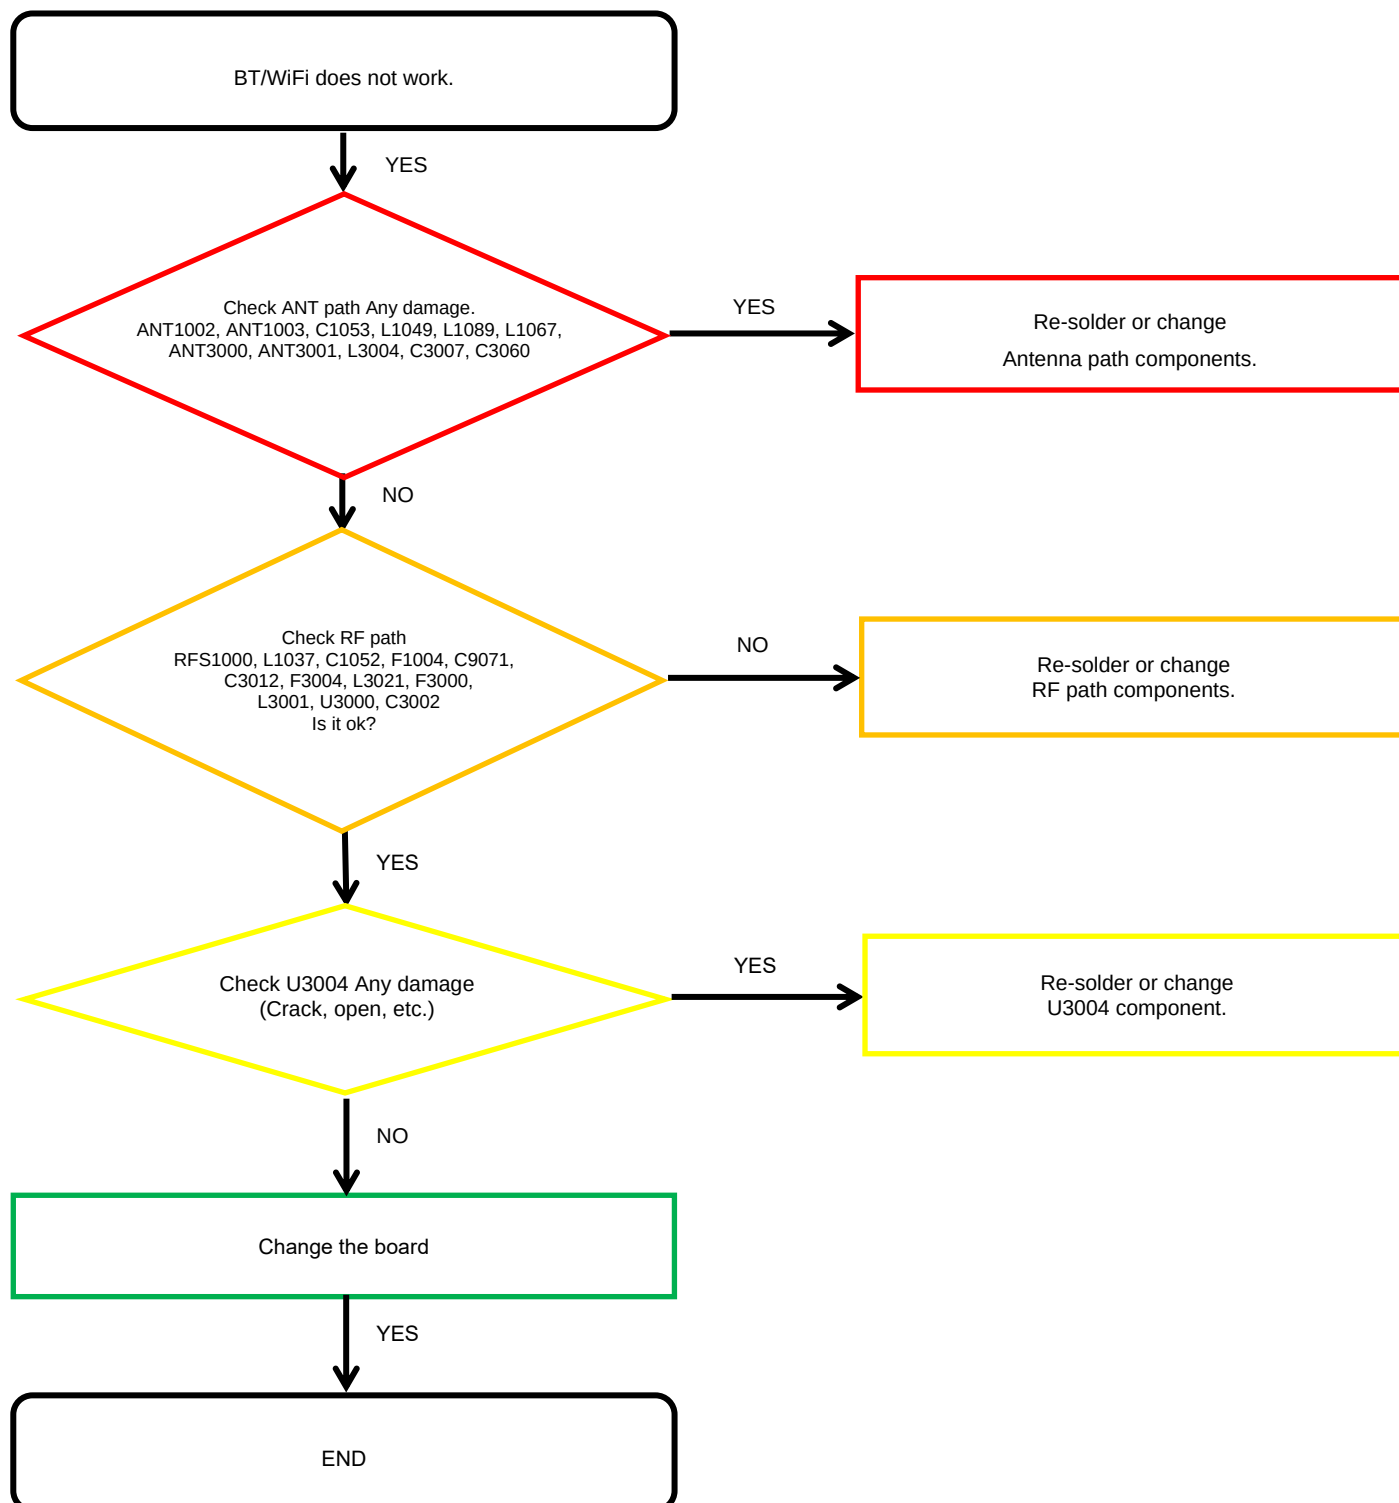


8. Level 3 Repair

8-4-13. GPS

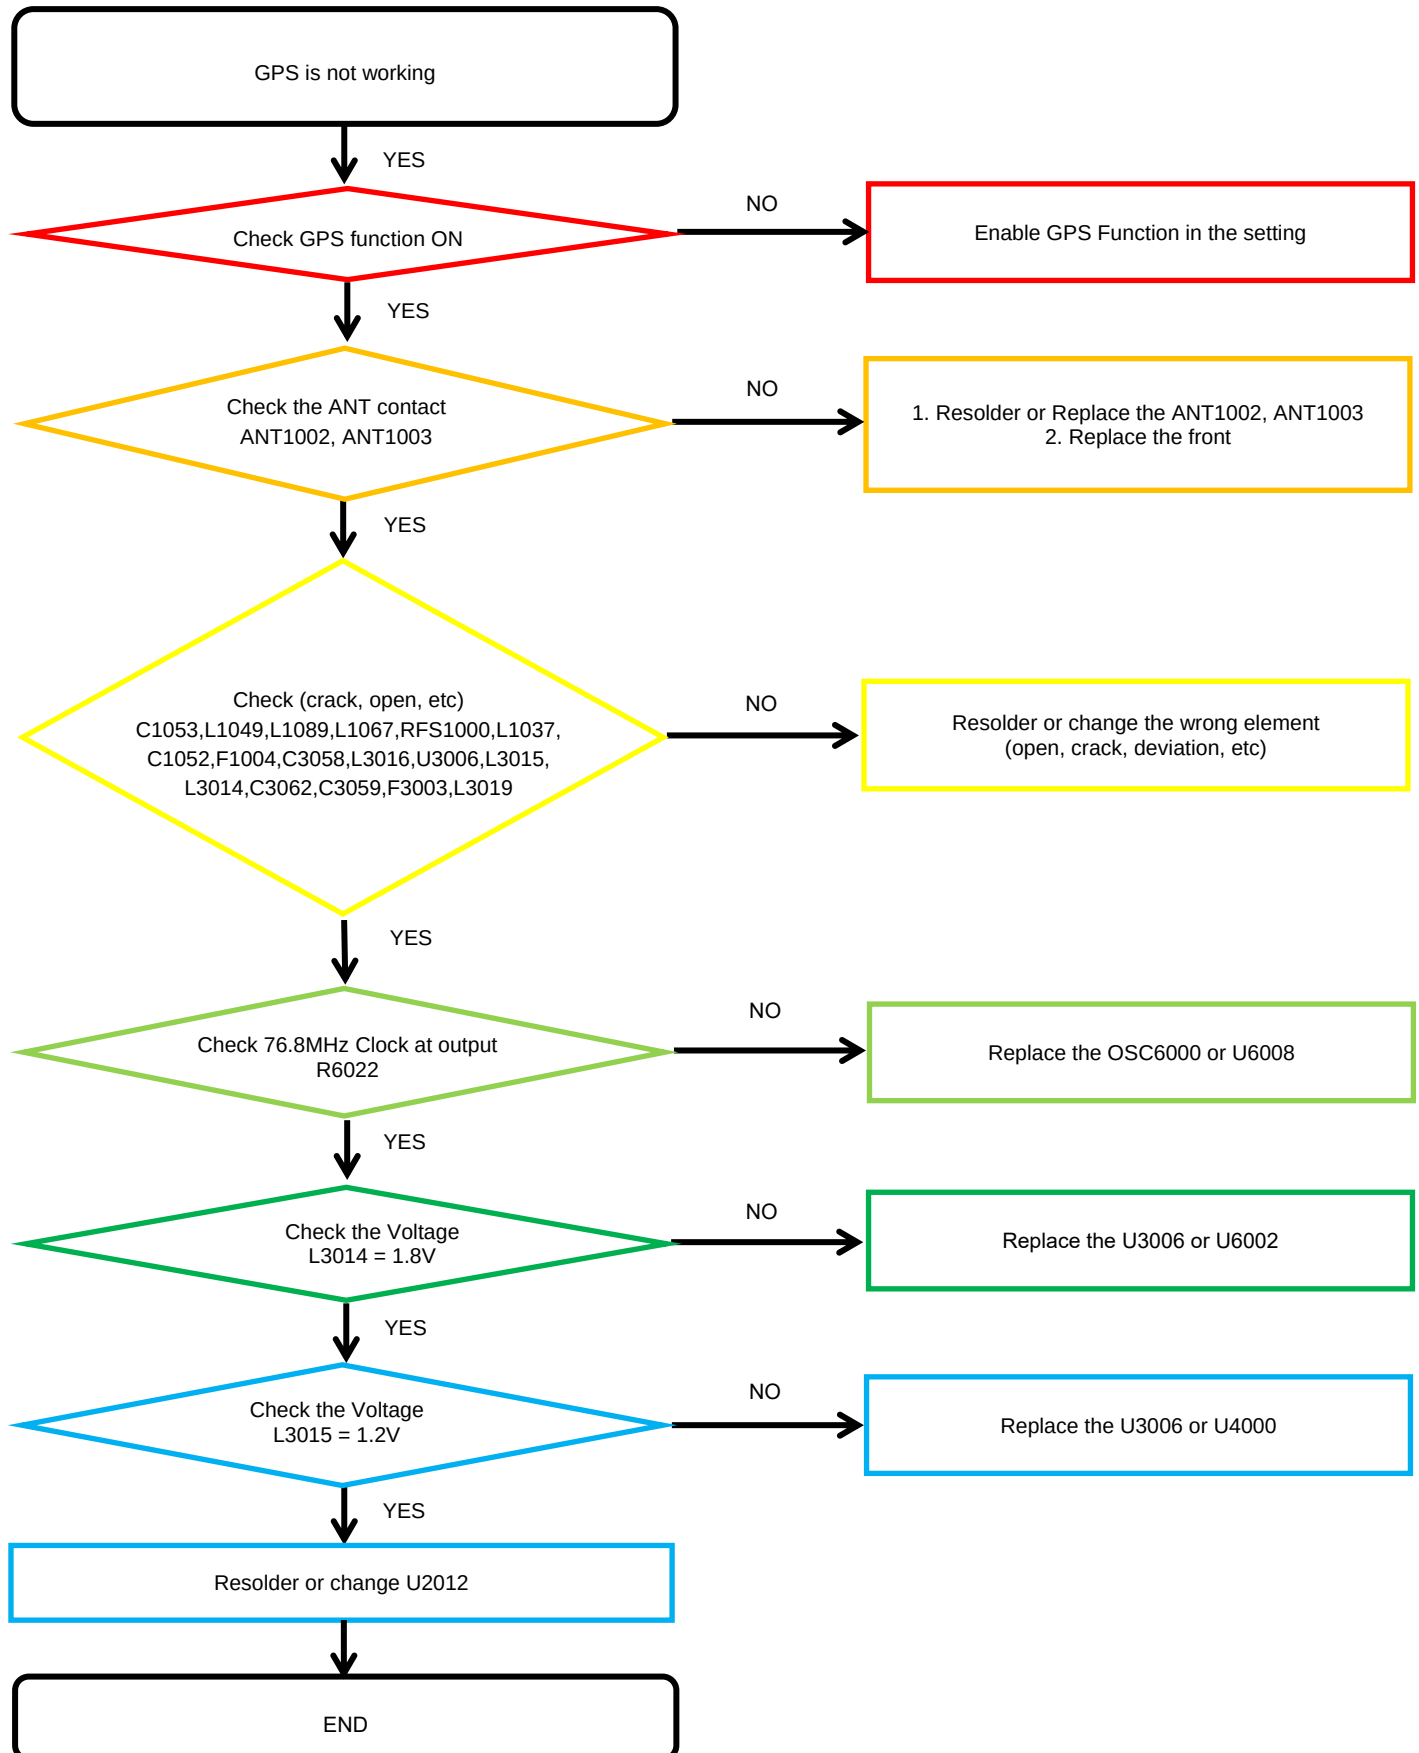


8. Level 3 Repair

8-4-14. NFC

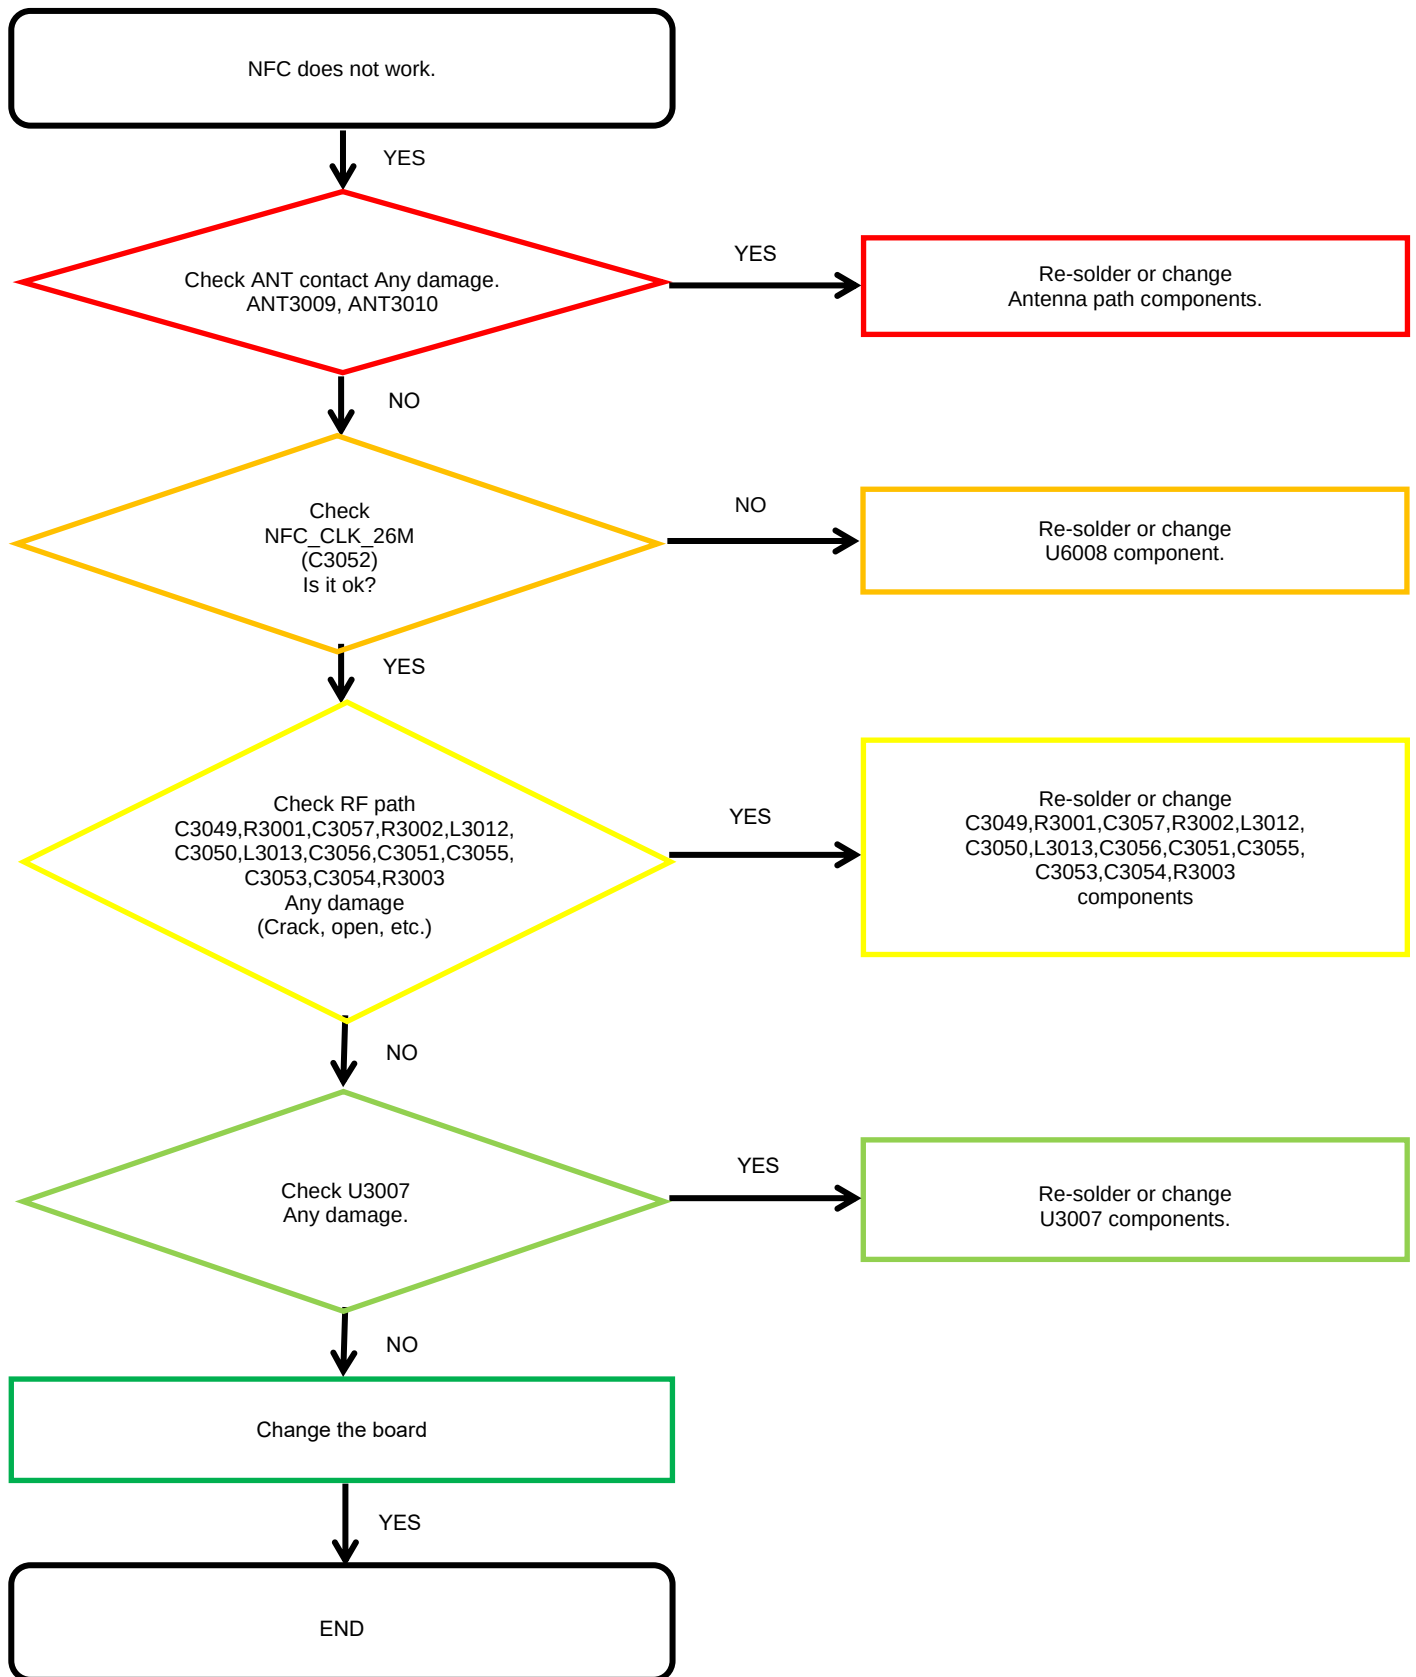


8. Level 3 Repair

8-4-15. Display

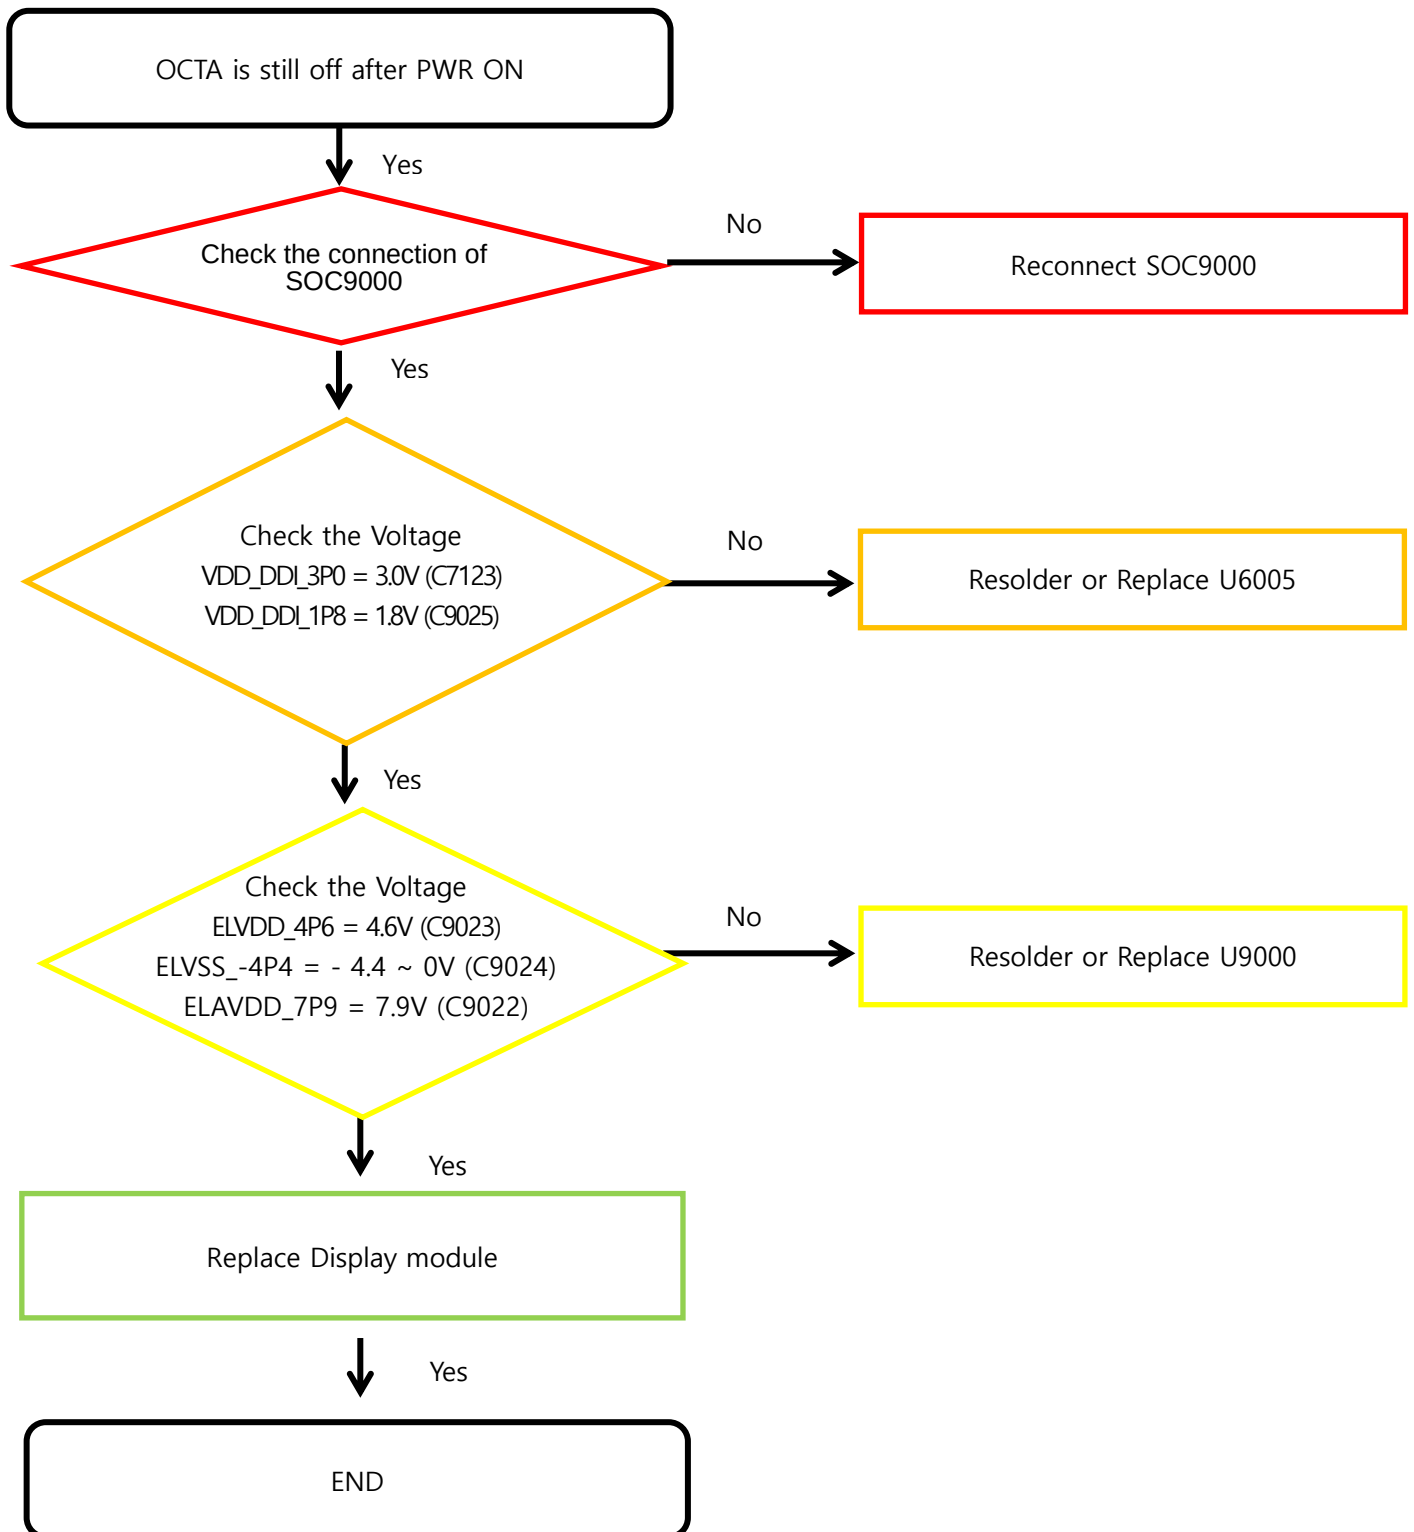


8. Level 3 Repair

8-4-16. Rear CAMERA (64M)

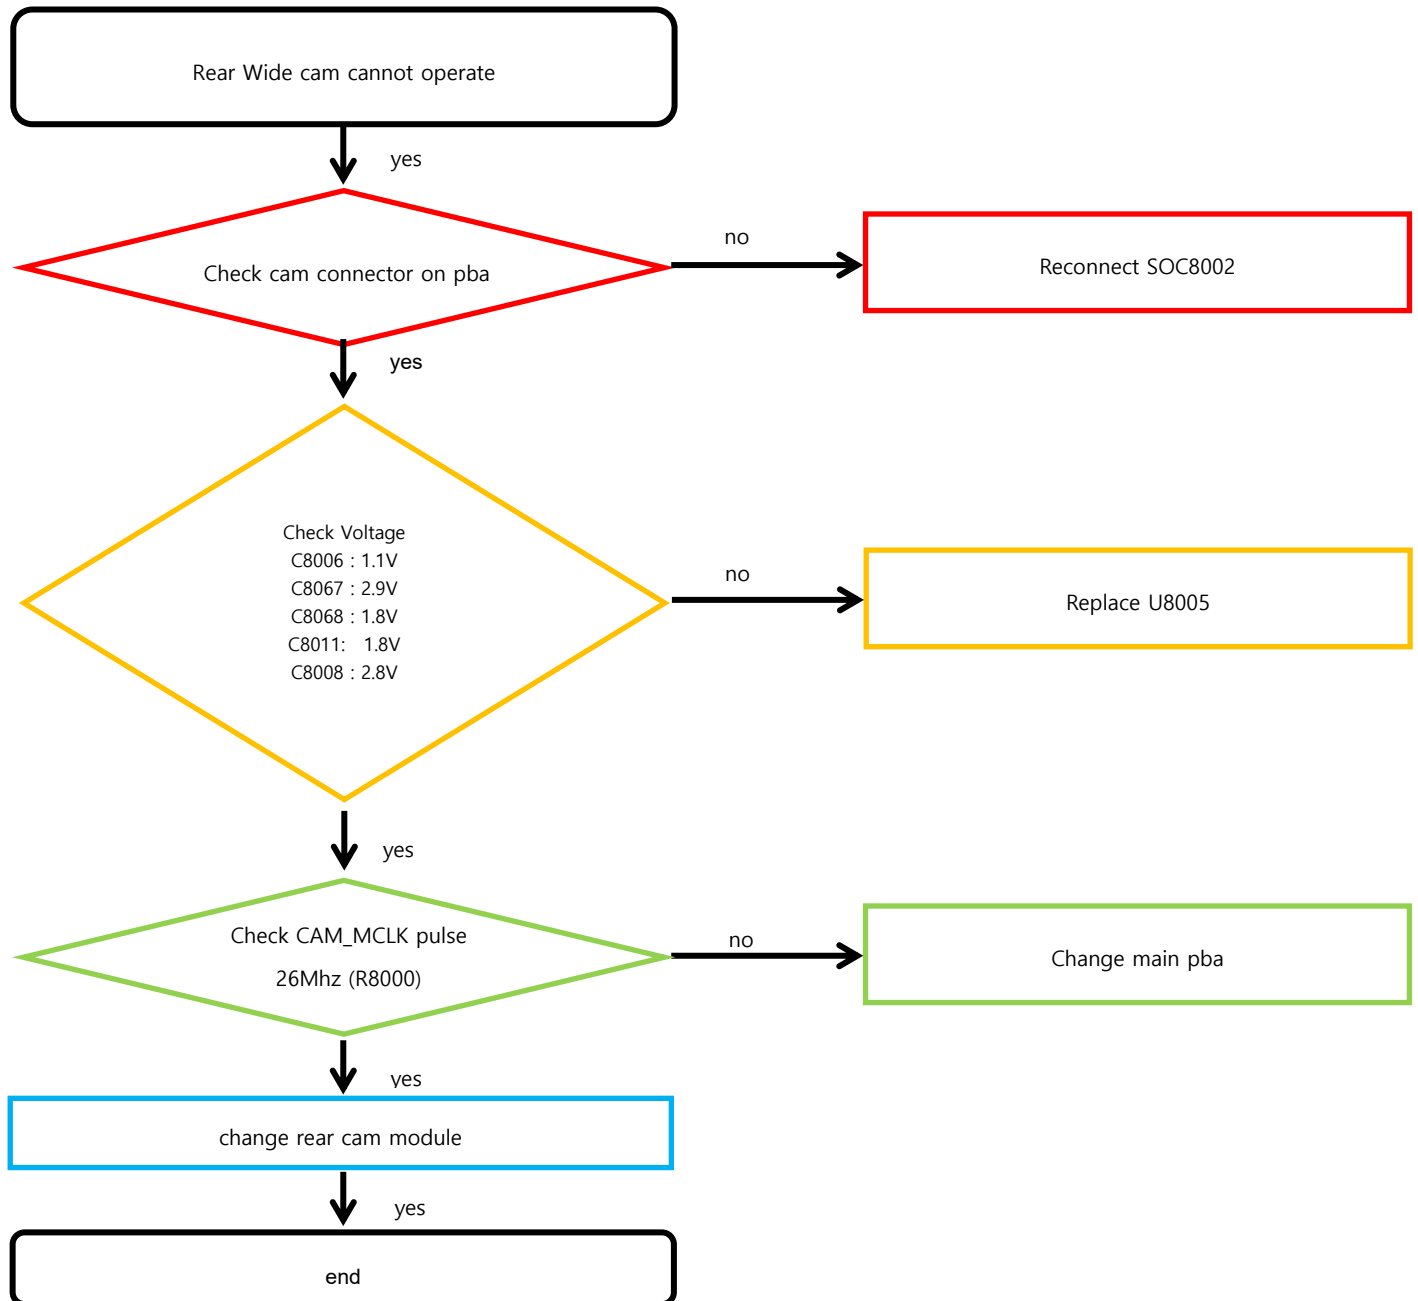


8. Level 3 Repair

8-4-17. Front Cam (32M)

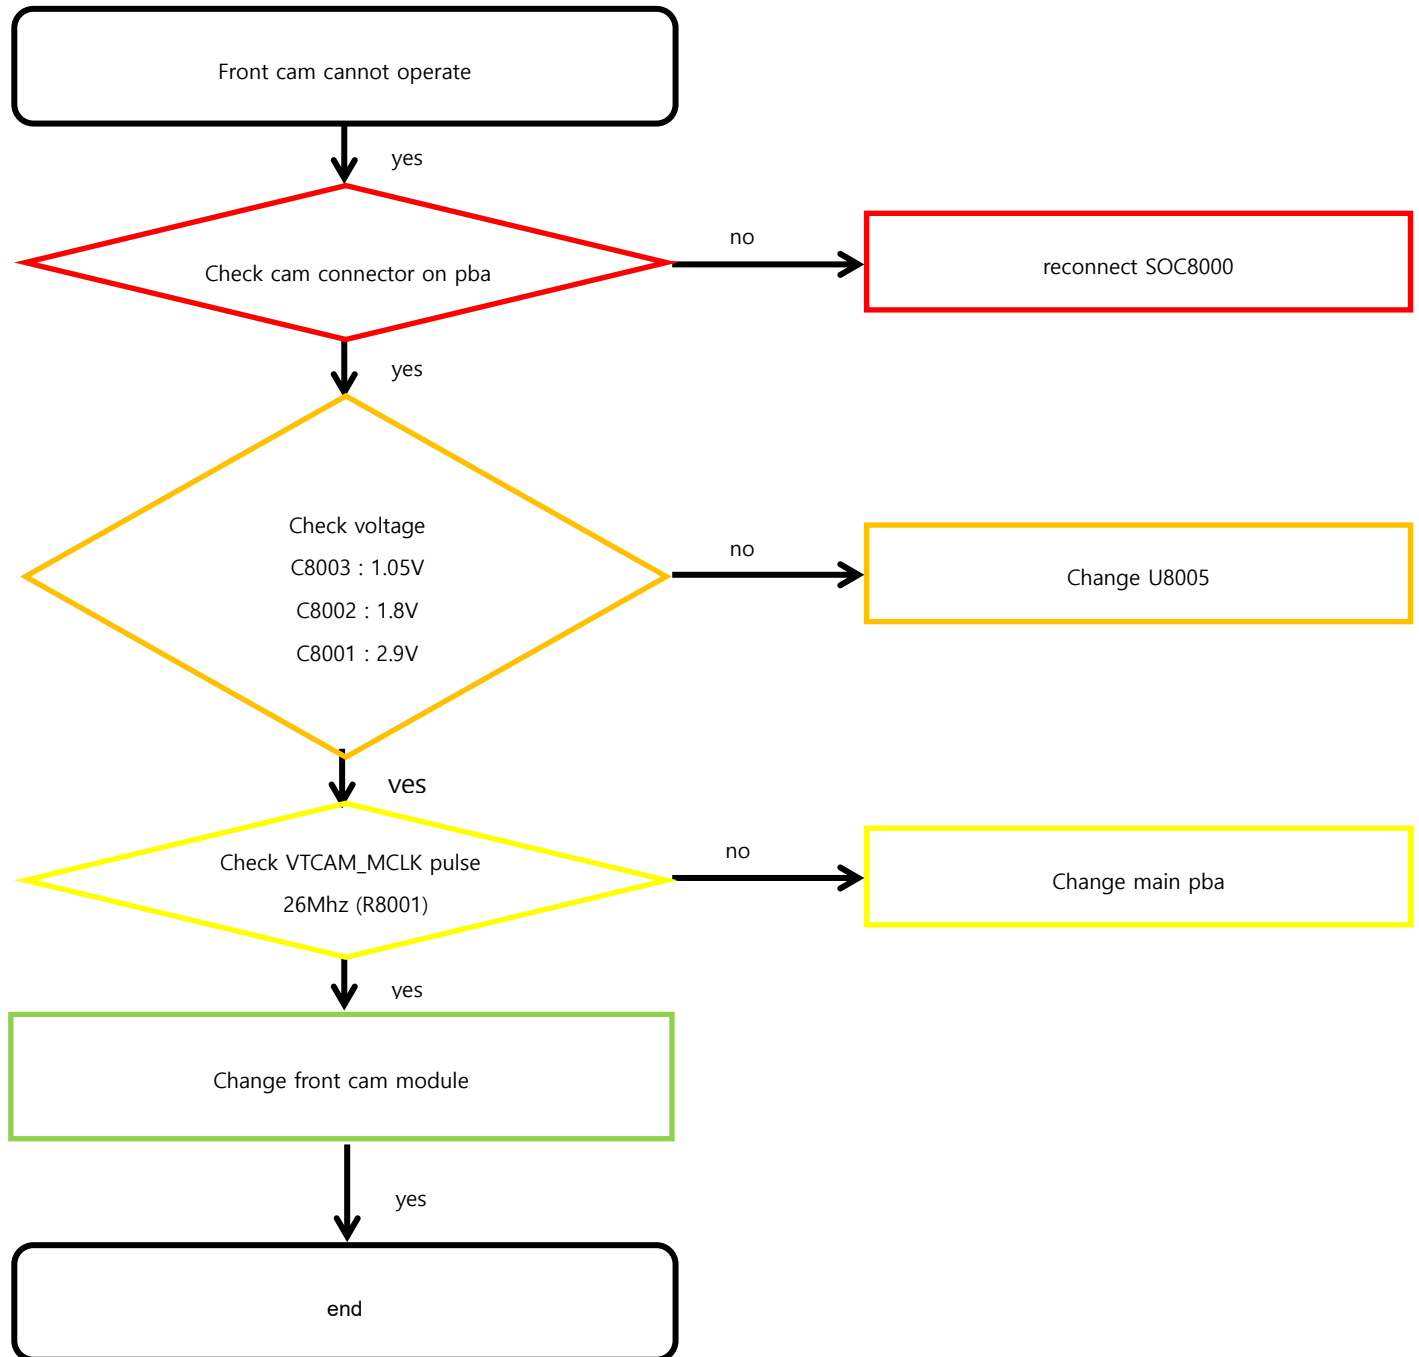


8. Level 3 Repair

8-4-18. TSP

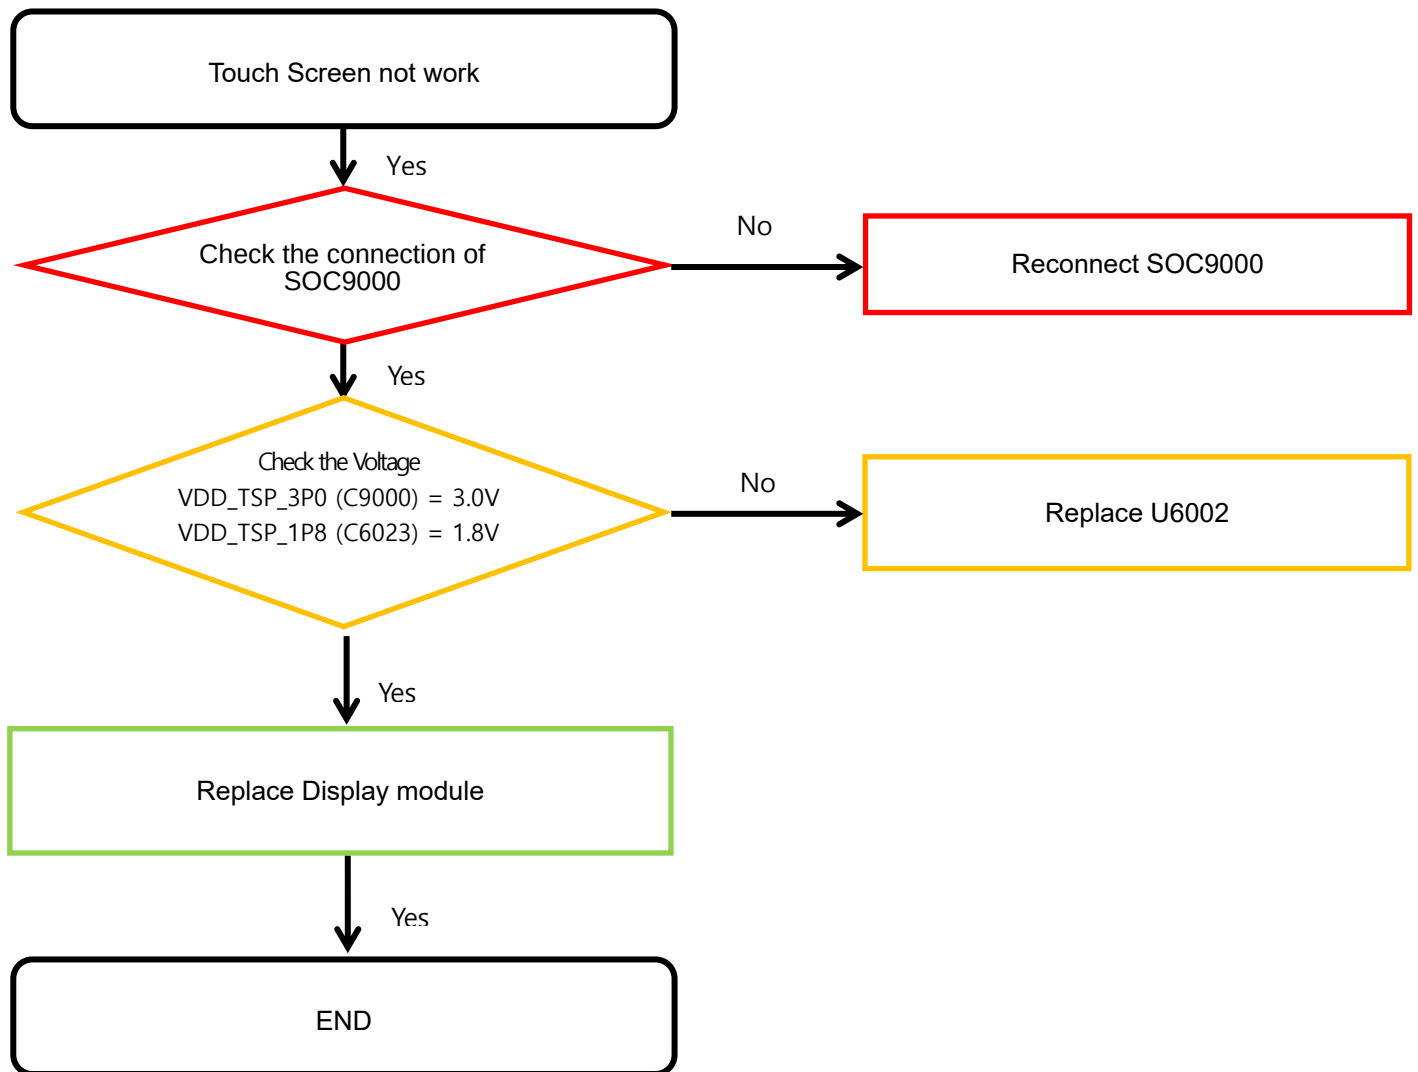


8. Level 3 Repair

8-4-19. Motor

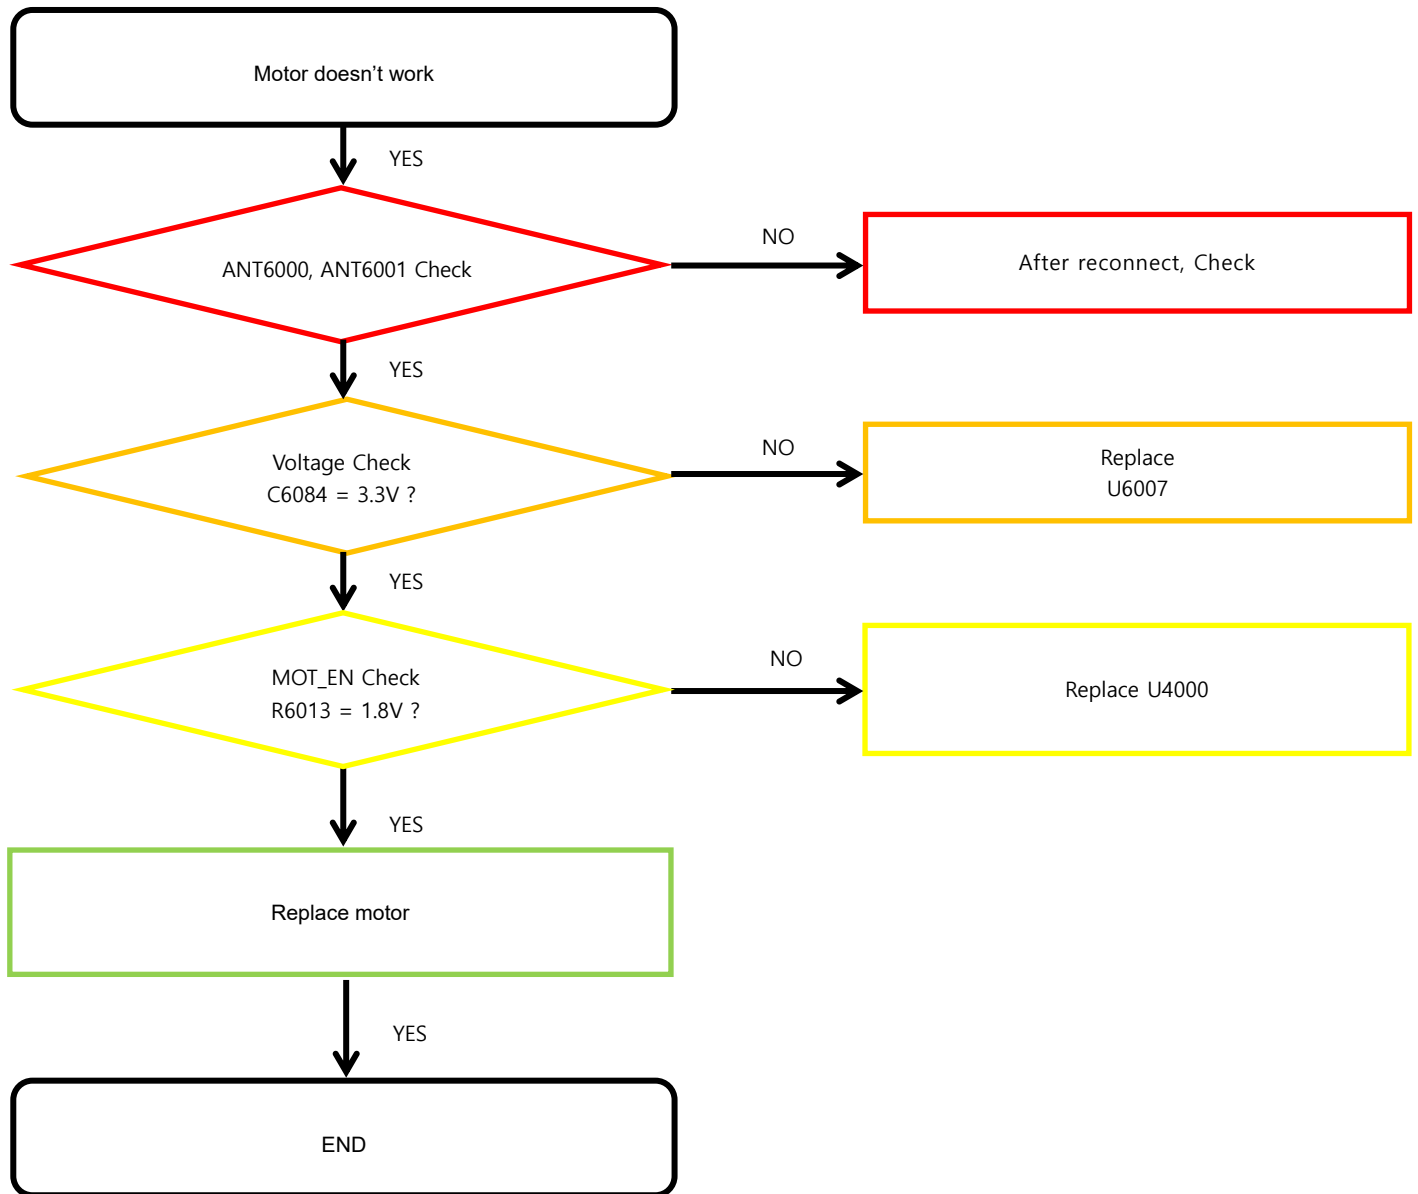


8. Level 3 Repair

8-4-20. GSM850/900, WCDMA B5/8, LTE B5/8/12/17/20/26/28, NR N5/8/20/28 TRX

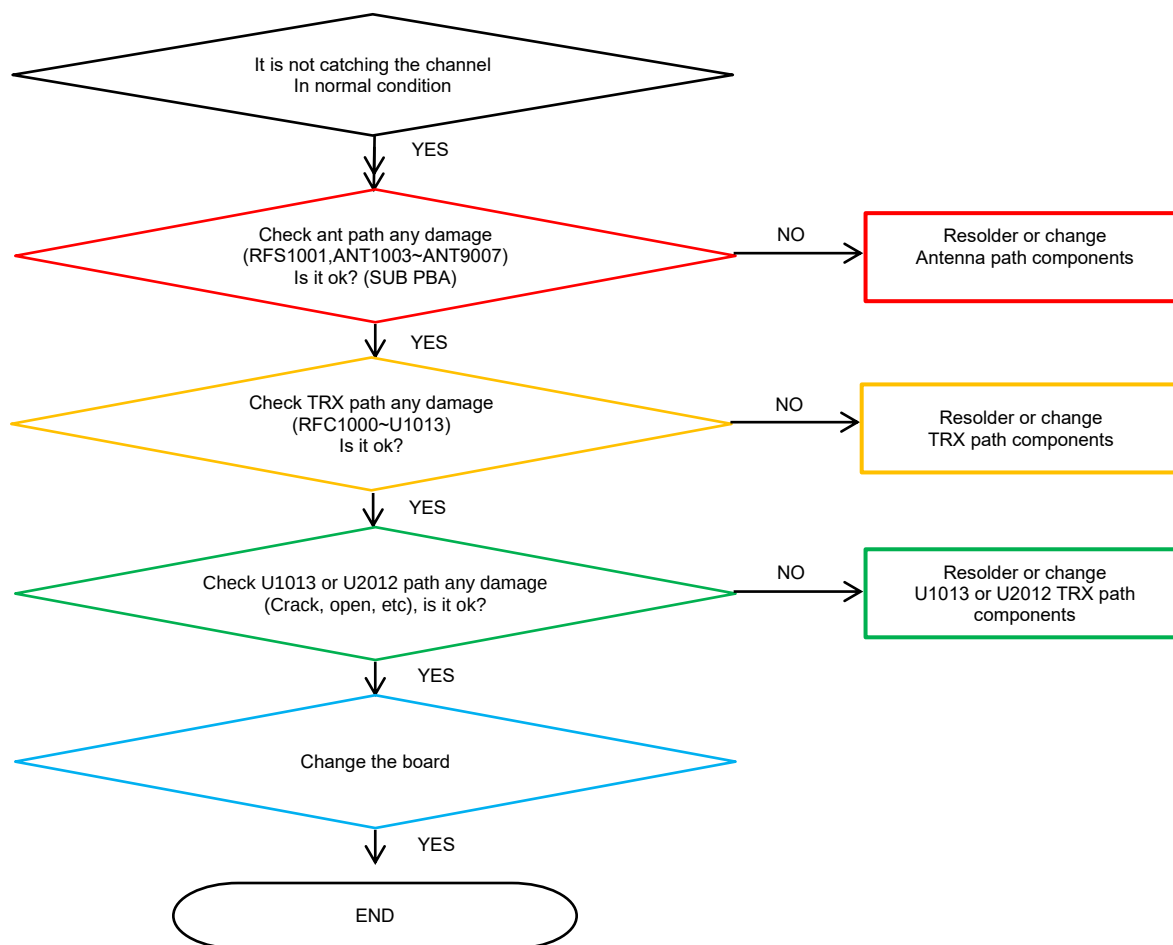


8. Level 3 Repair

8-4-21. GSM DCS/PCS, WCDMA B1/2/4, LTE B1/2/3/4/7/32/38/40/41/66, N1/3/7/40/66 TRX

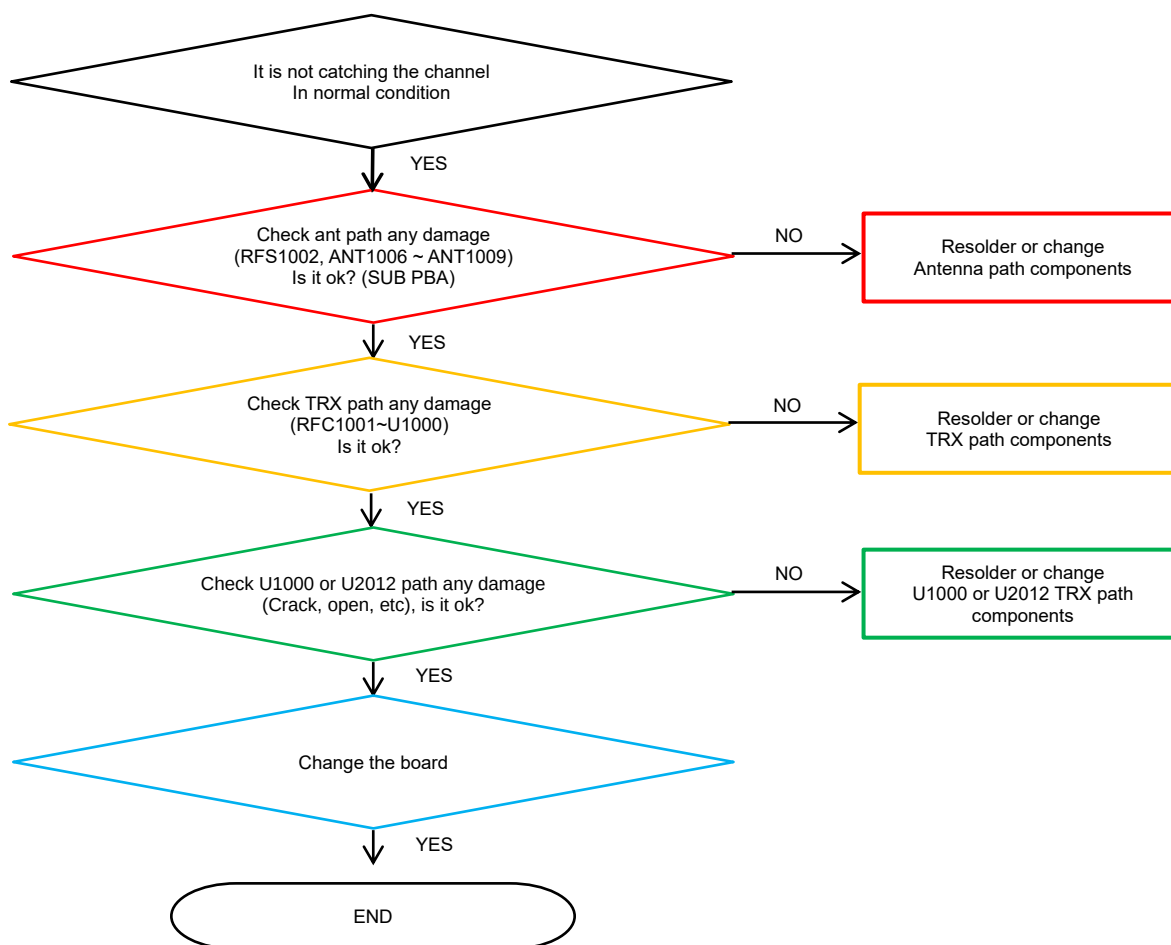


8. Level 3 Repair

8-4-22. N38/41 TRX

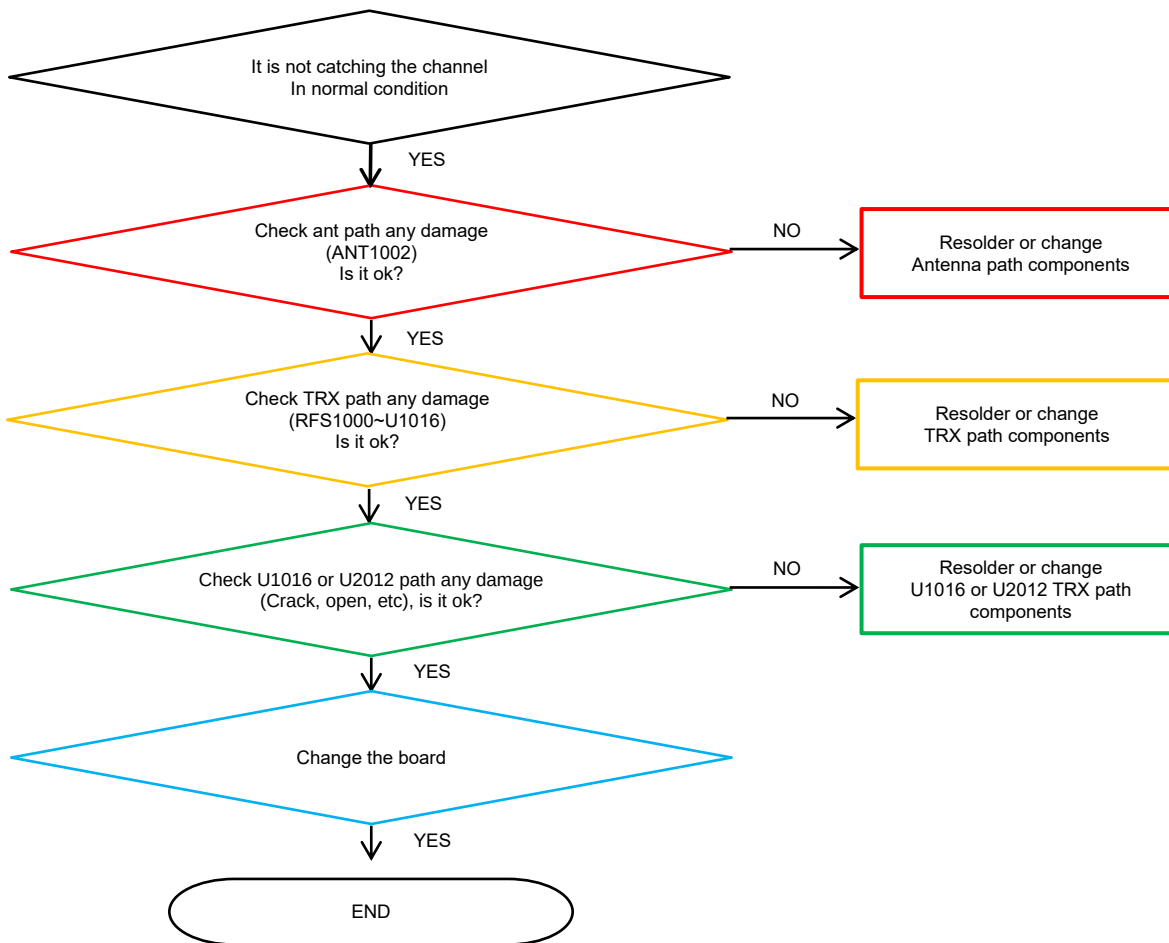


8. Level 3 Repair

8-4-23. N78 TRX

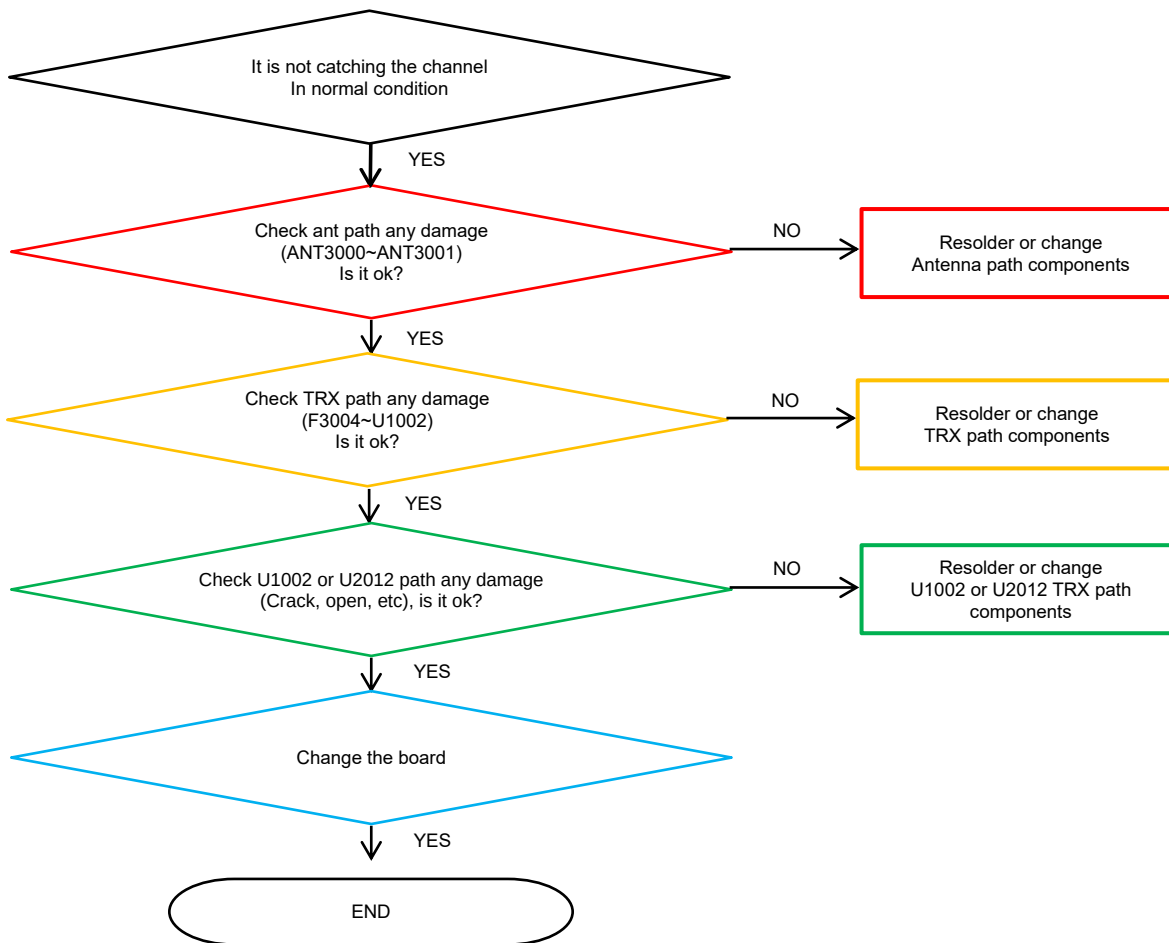


8. Level 3 Repair

8-4-24. GSM850/900, WCDMA B5/8, LTE B5/8/12/17/20/26/28, NR N5/8/20/28 DRX

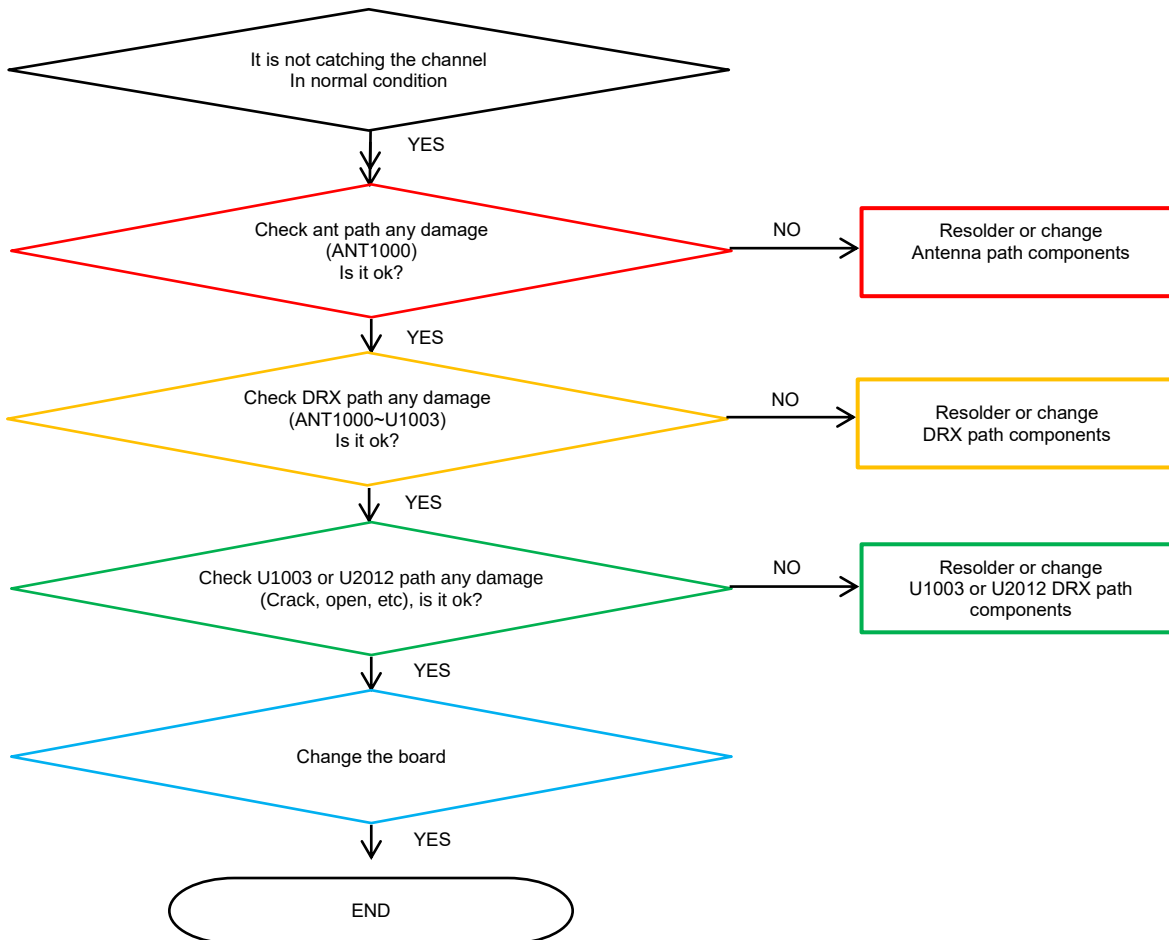


8. Level 3 Repair

8-4-25. GSM DCS/PCS, WCDMA B1/2/4, LTE B1/2/3/4/7/32/38/40/41/66, N1/3/7/40/66 DRX

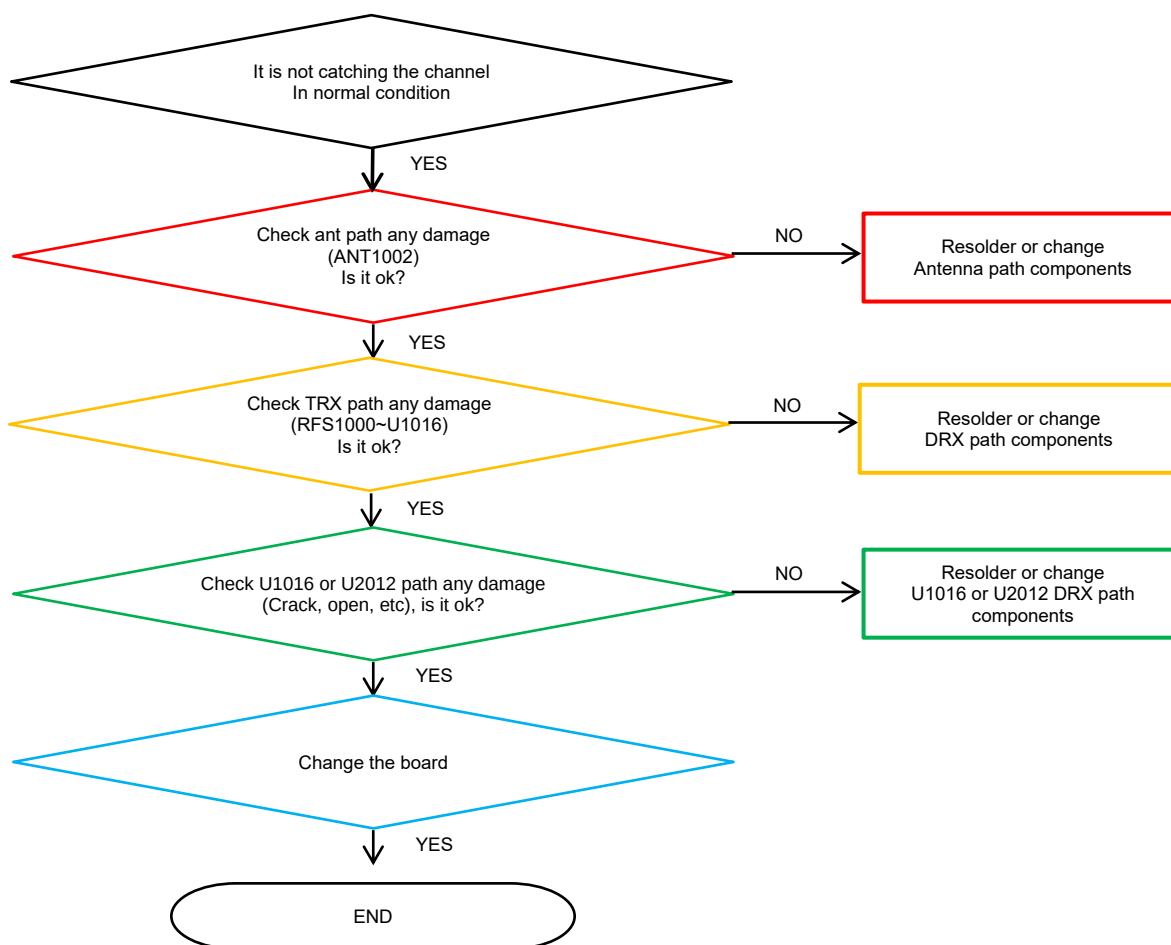


8. Level 3 Repair

8-4-26. N38/41 DRX

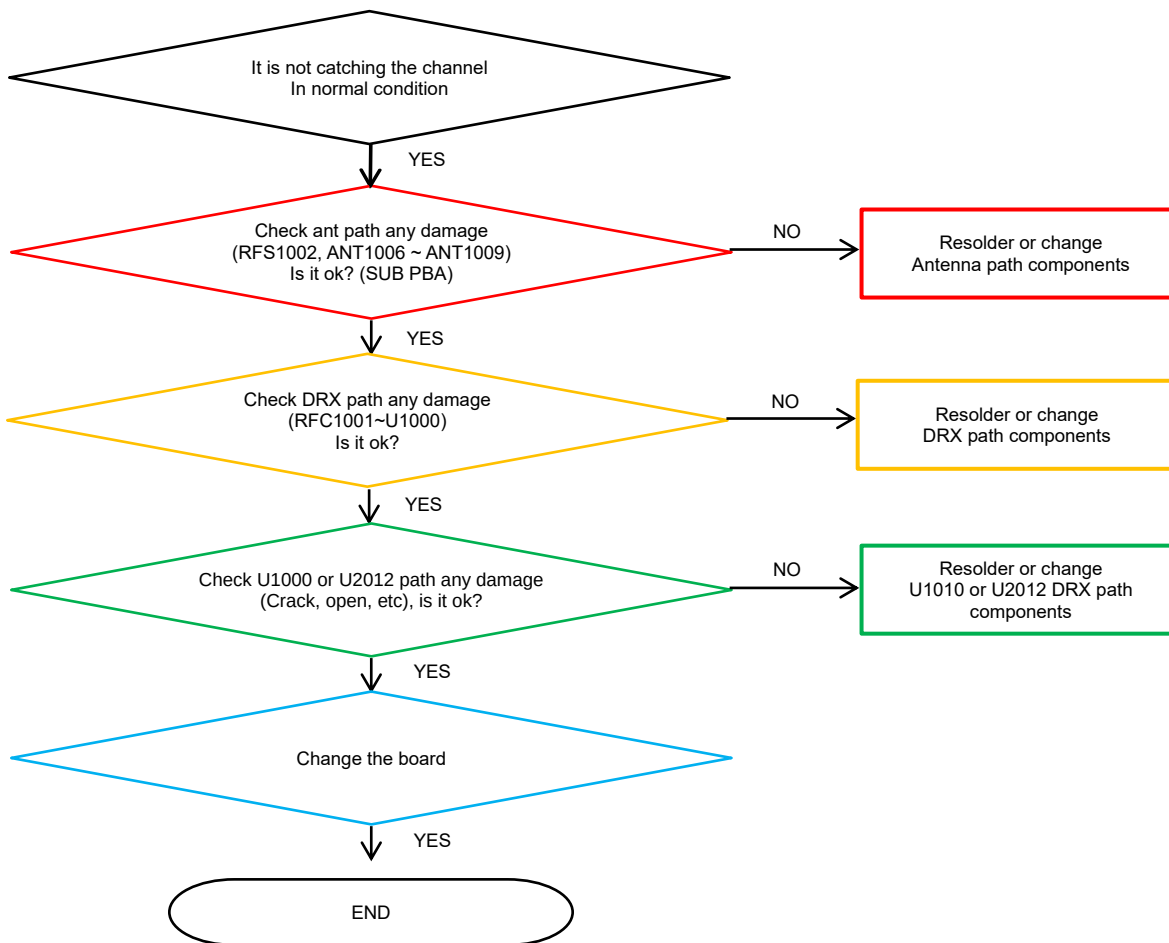


8. Level 3 Repair

8-4-27. N78 DRX

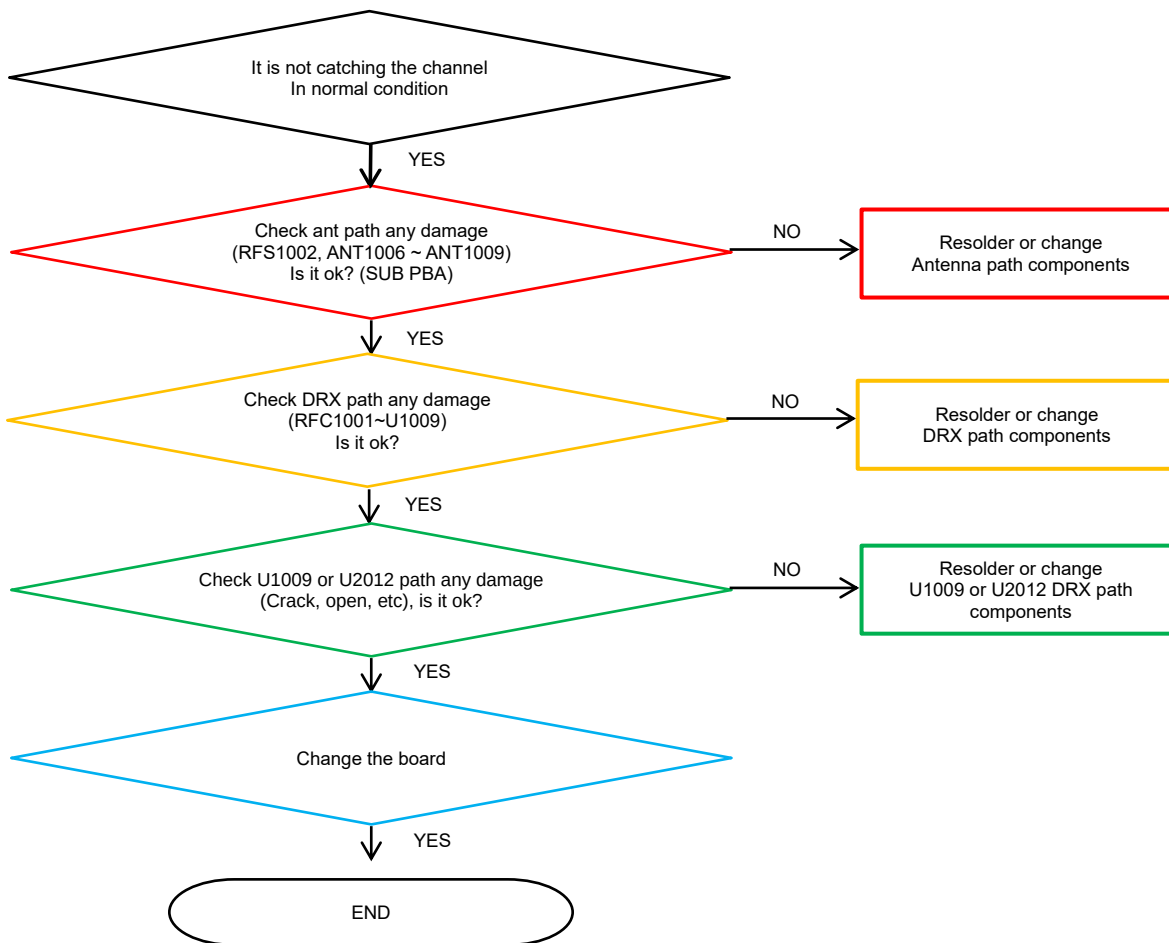


8. Level 3 Repair

8-4-28. LTE B1/3 & N1/3 PRX MIMO

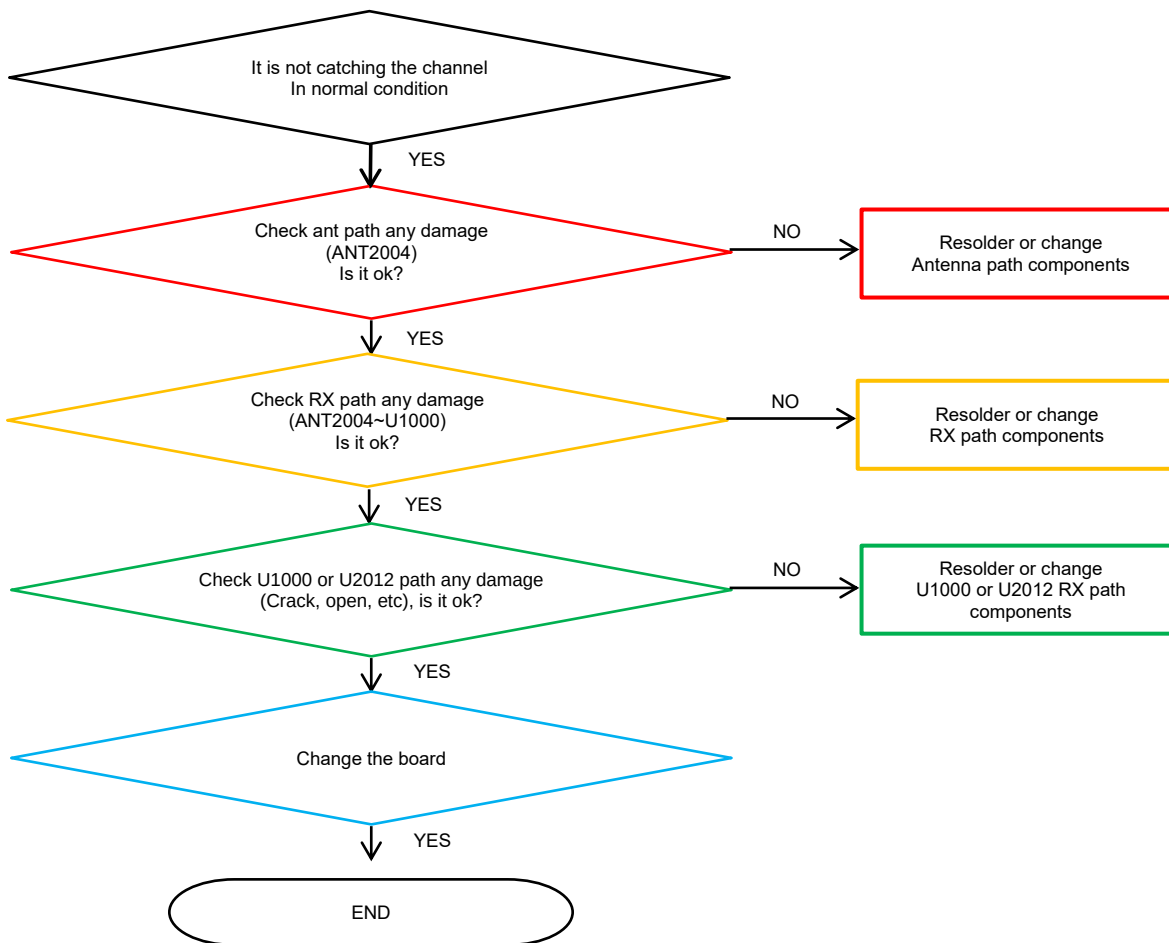


8. Level 3 Repair

8-4-29. LTE B7 & N7 PRX MIMO, LTE B38/41 & N38/41 DRX MIMO

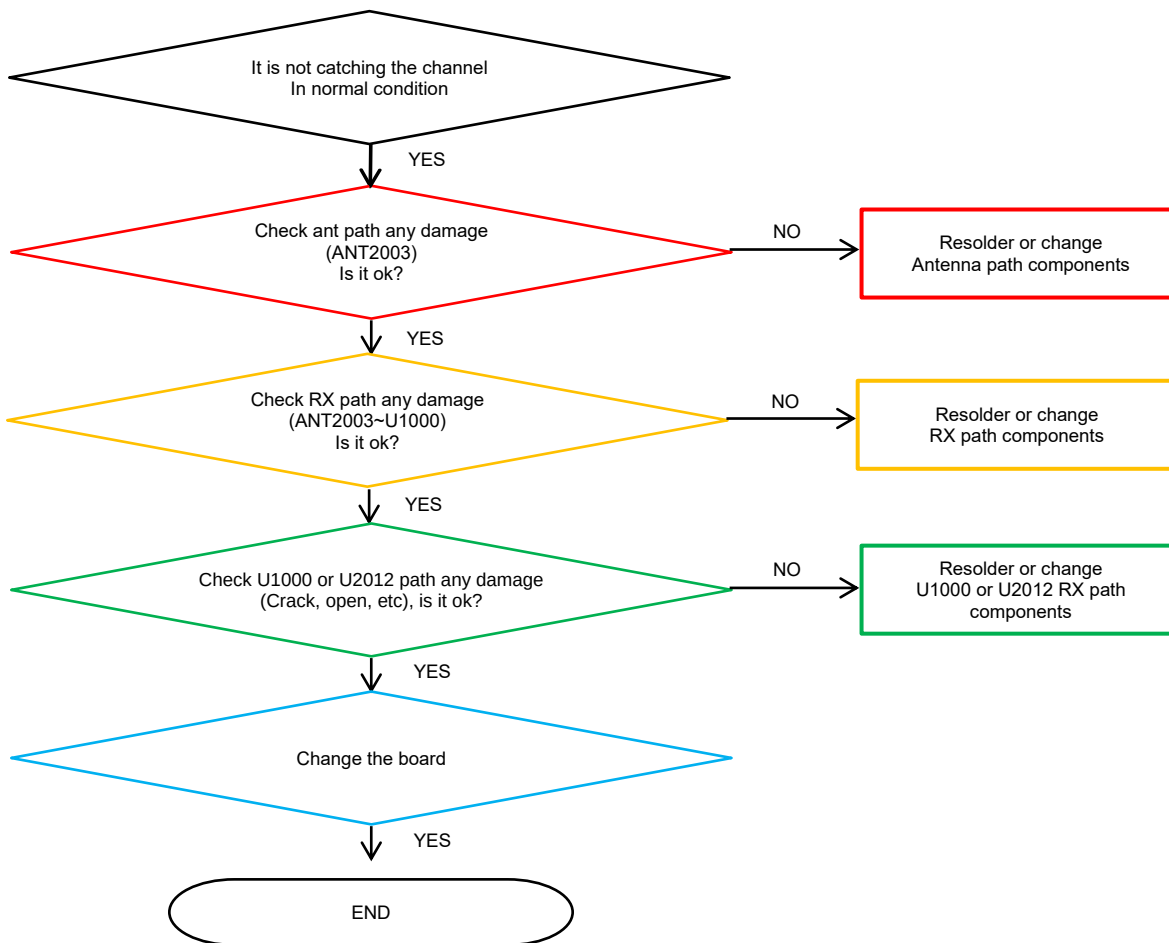


8. Level 3 Repair

8-4-30. LTE B38/41 & N38/41 PRX MIMO, LTE B7 & N7 DRX MIMO

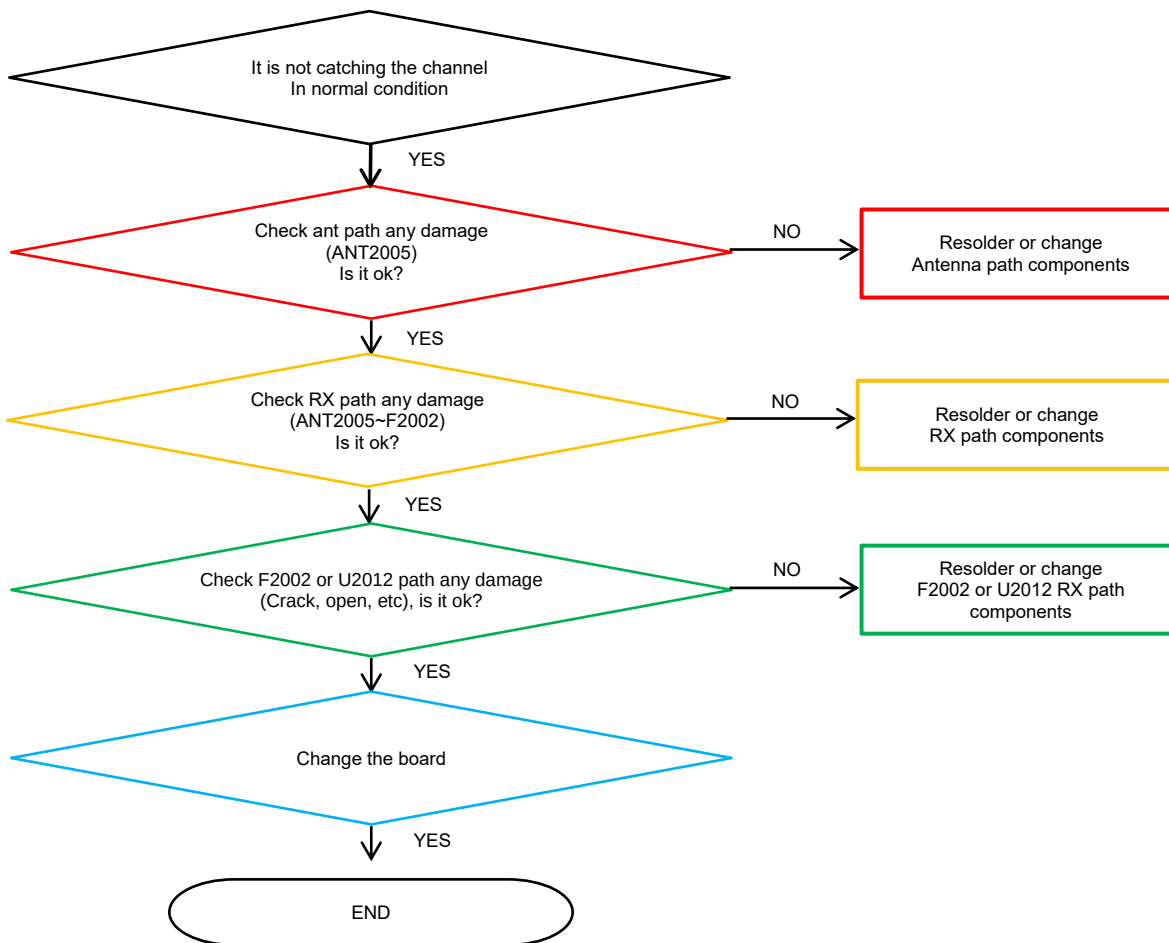


8. Level 3 Repair

8-4-31. LTE B1/3 & N1/3 DRX MIMO

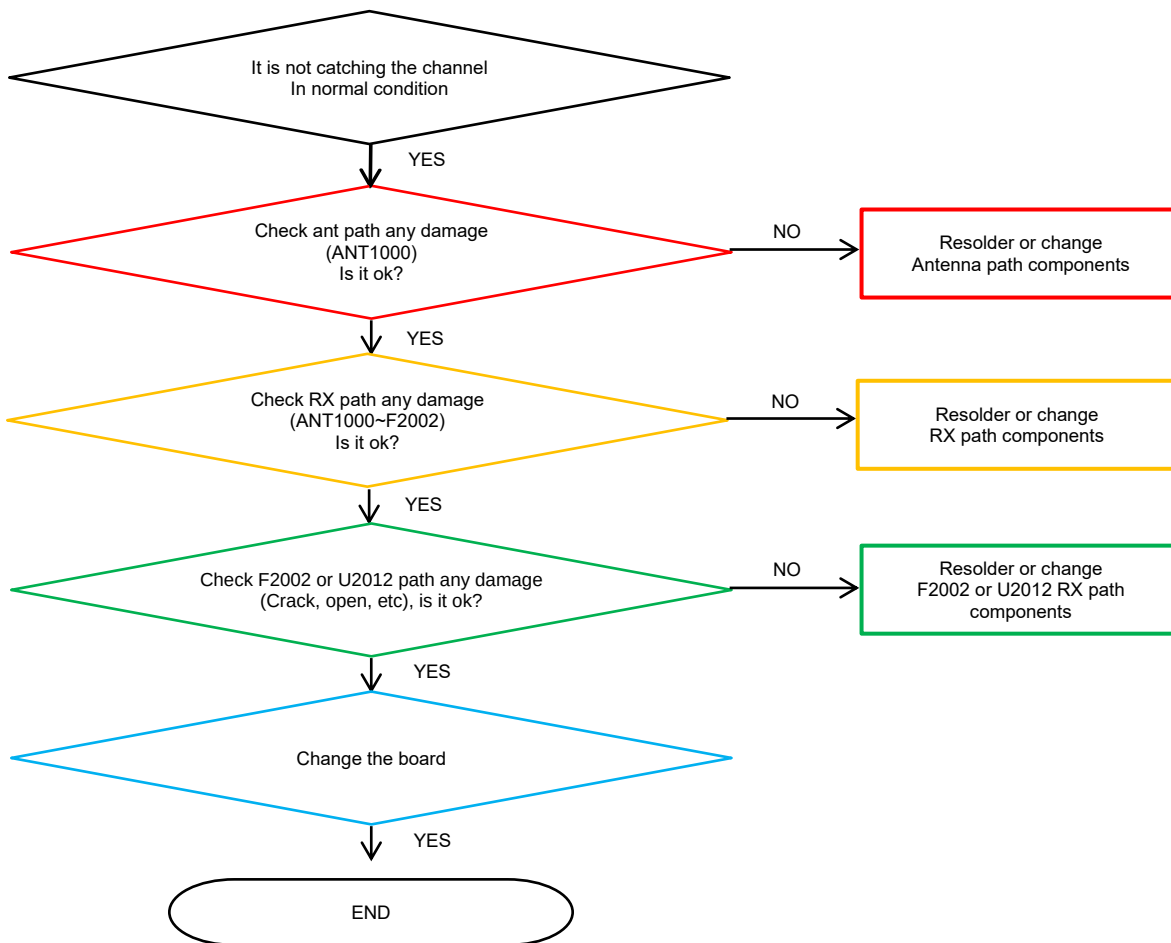

8. Level 3 Repair

8-4-32. N78 PRX MIMO

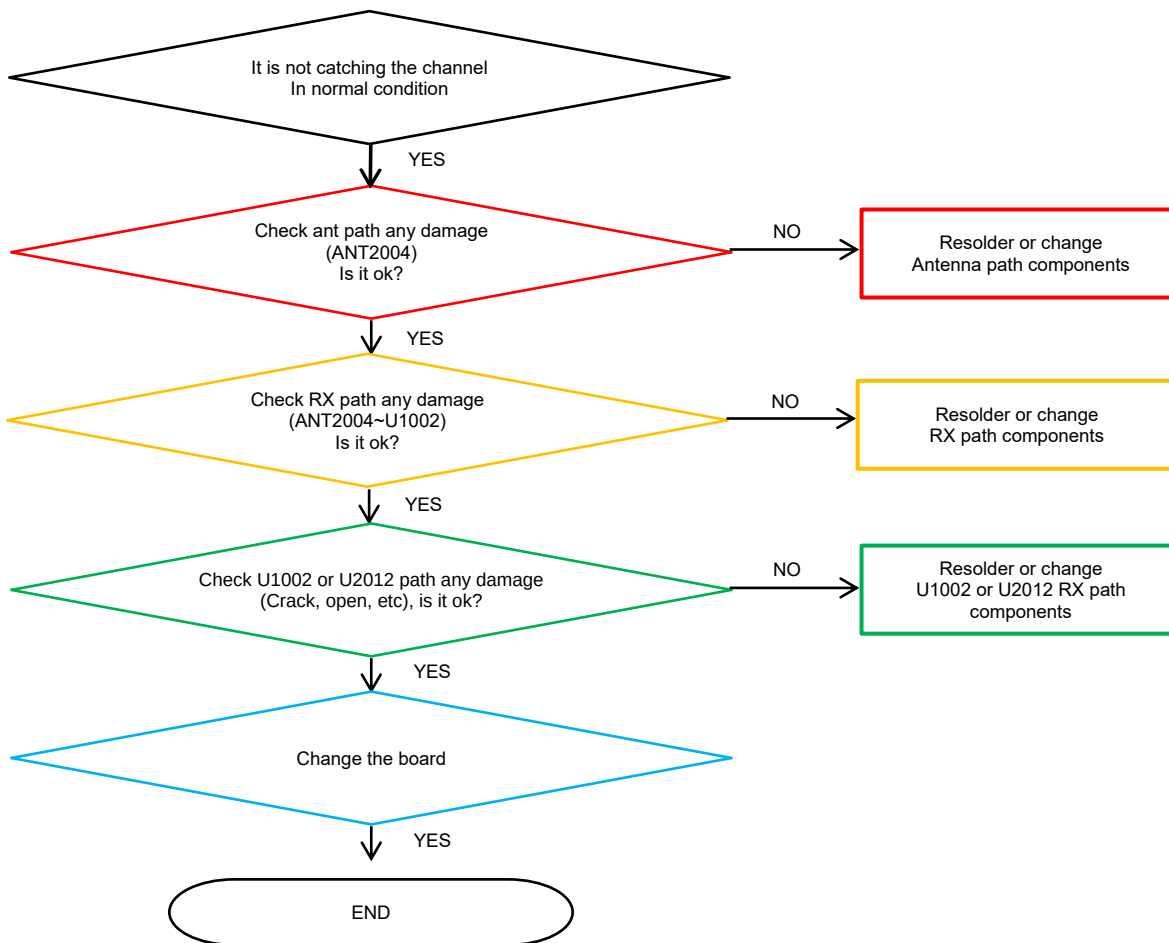

8. Level 3 Repair

8-4-33. N78 DRX MIMO

