


E2 Rev0.0 Block Diagram

[이동통신]


2G GSM900/DCS/PCS/GSM850
3G B1/B2/B4/B5/B8
4G_FDD B1/B2/B3/B4/B5/B7/B8/B12
/B13/(B17/B20/B28/B66)
4G_TDD B38/B40/B41
(1) SAR 3.0W 70%

SM-A217F/M
Common

Confidential

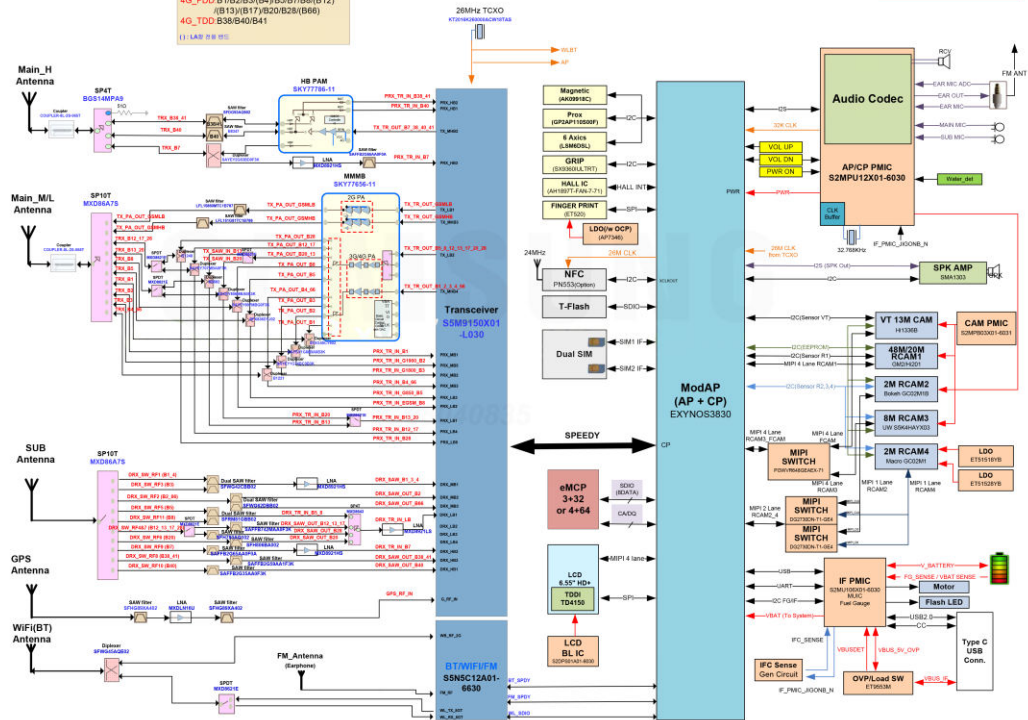


SM-A217F/M
Common

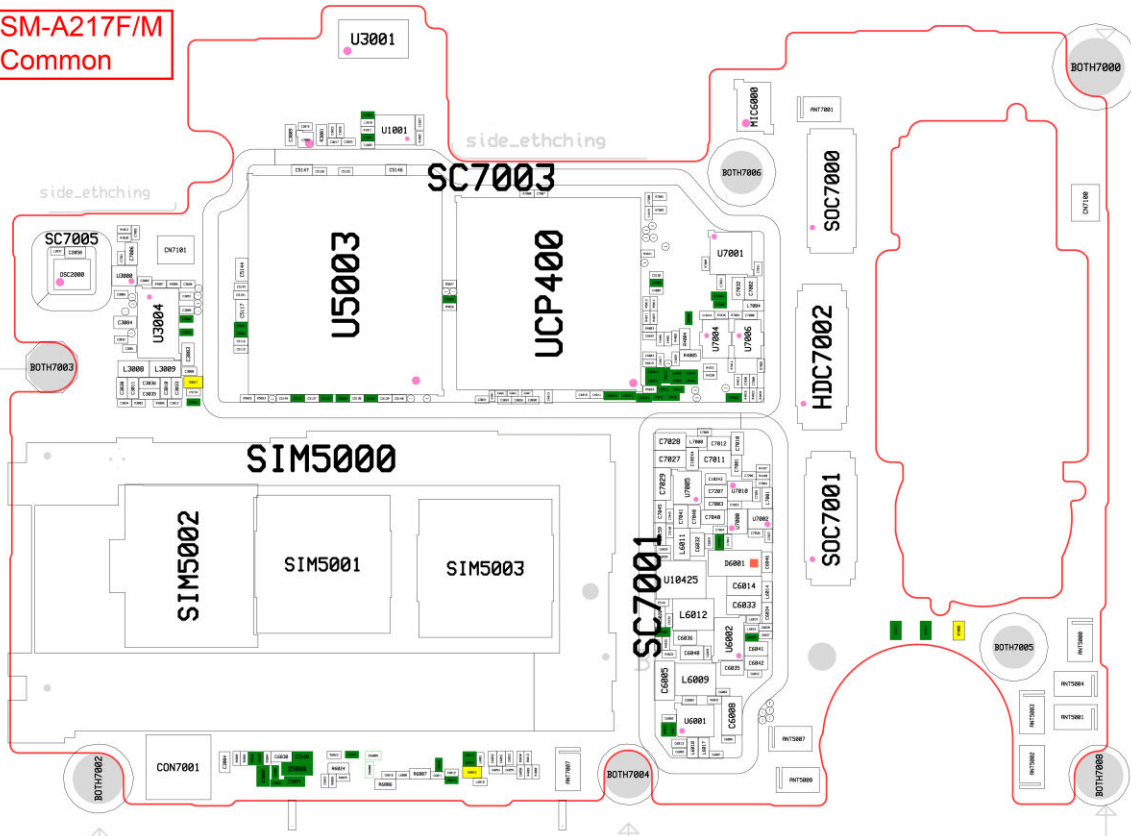


8. Level 3 Repair

8-4-1. Power On

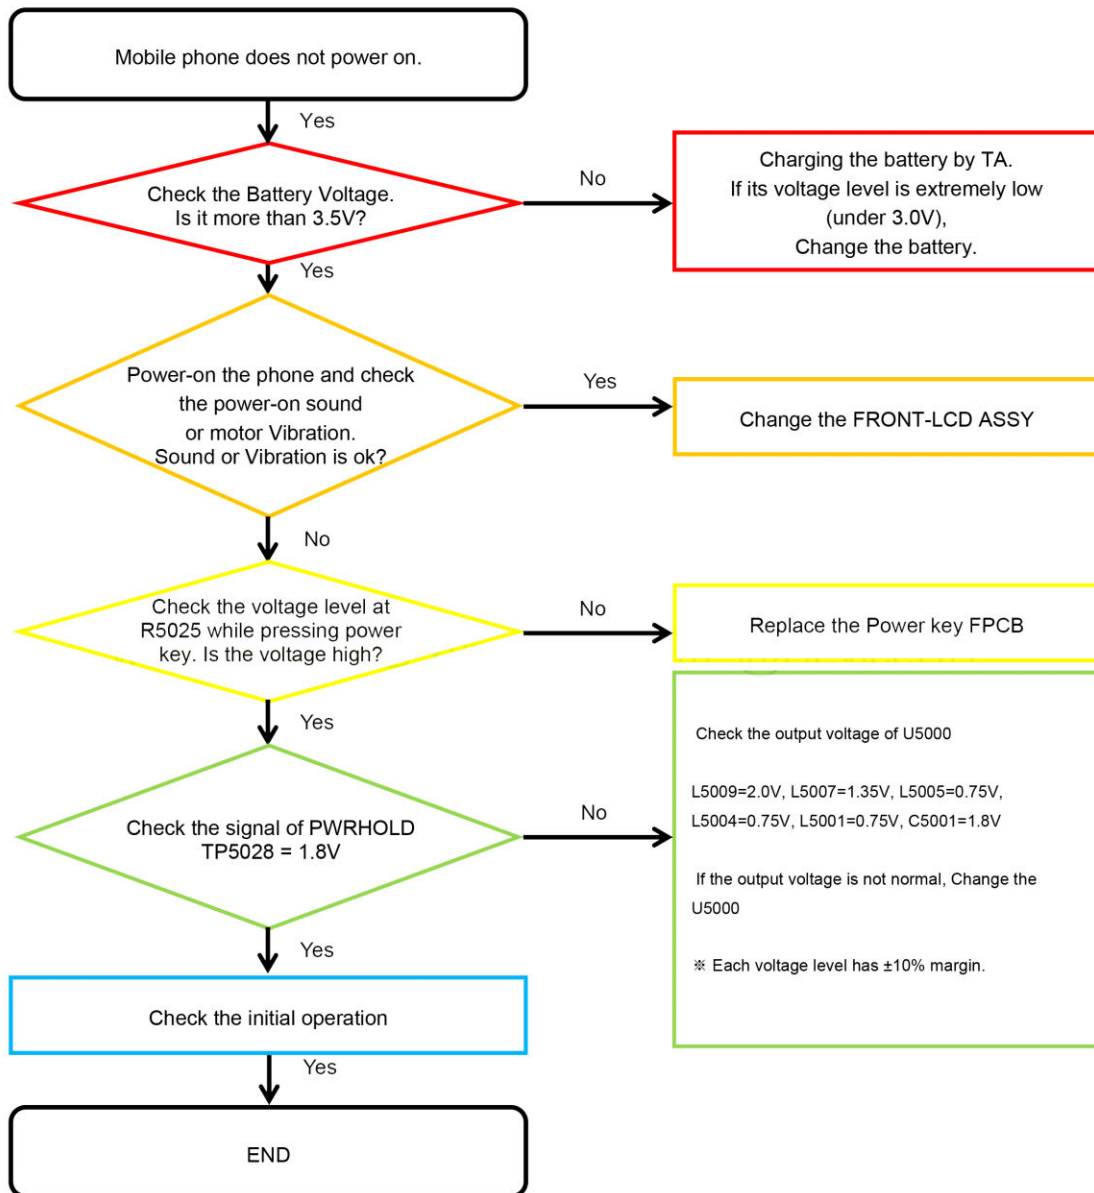


8. Level 3 Repair

8-4-2. Initial

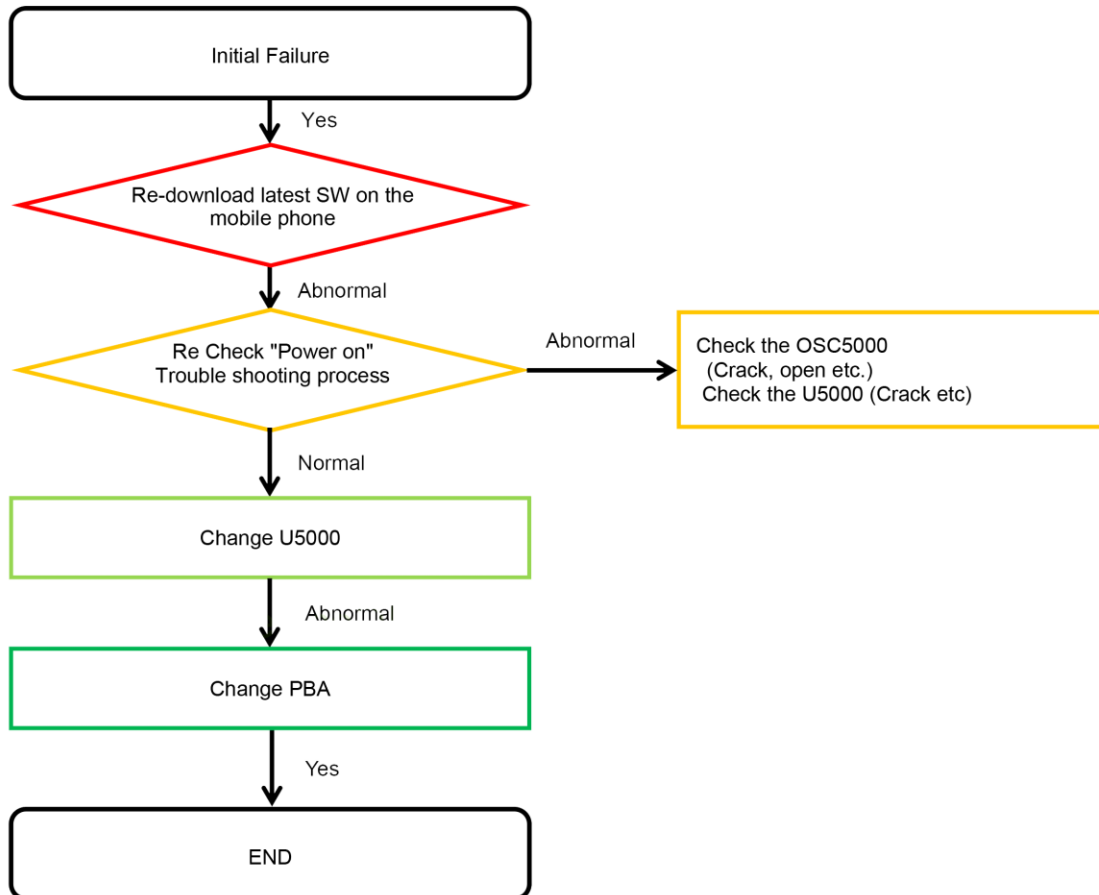


8. Level 3 Repair

8-4-3. SIM Part

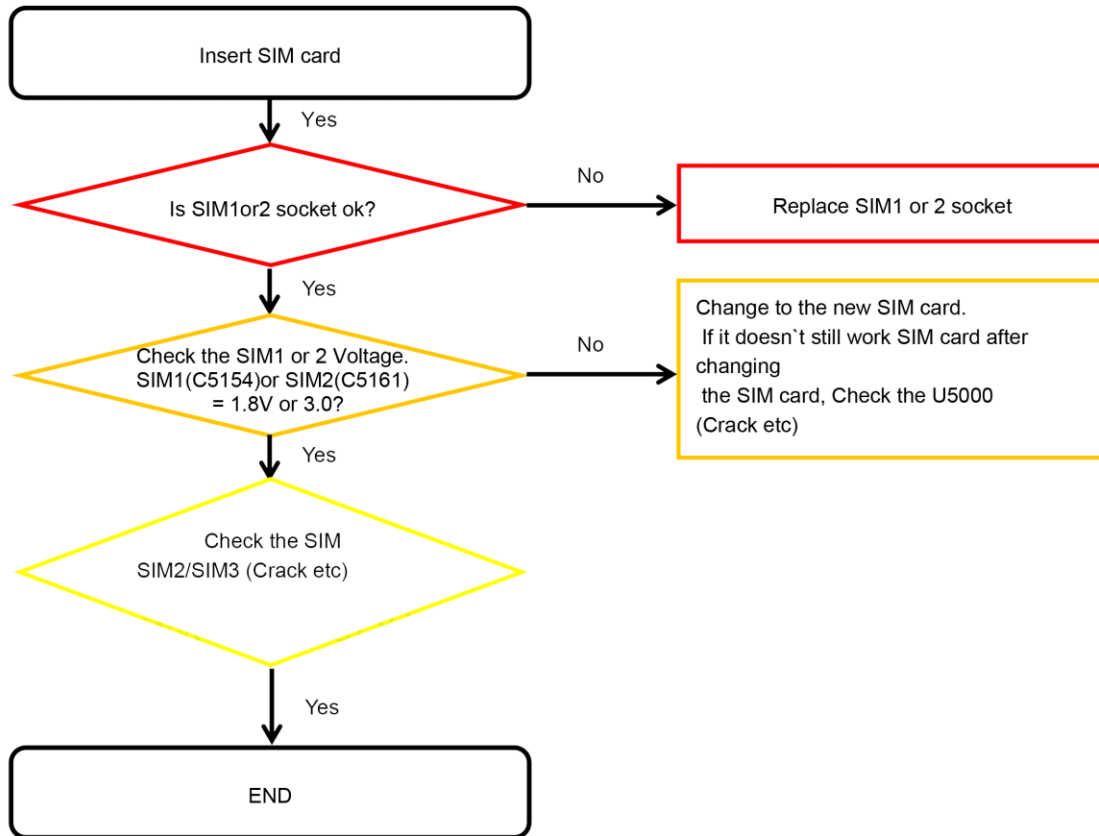


8. Level 3 Repair

8-4-4. T-Flash Part

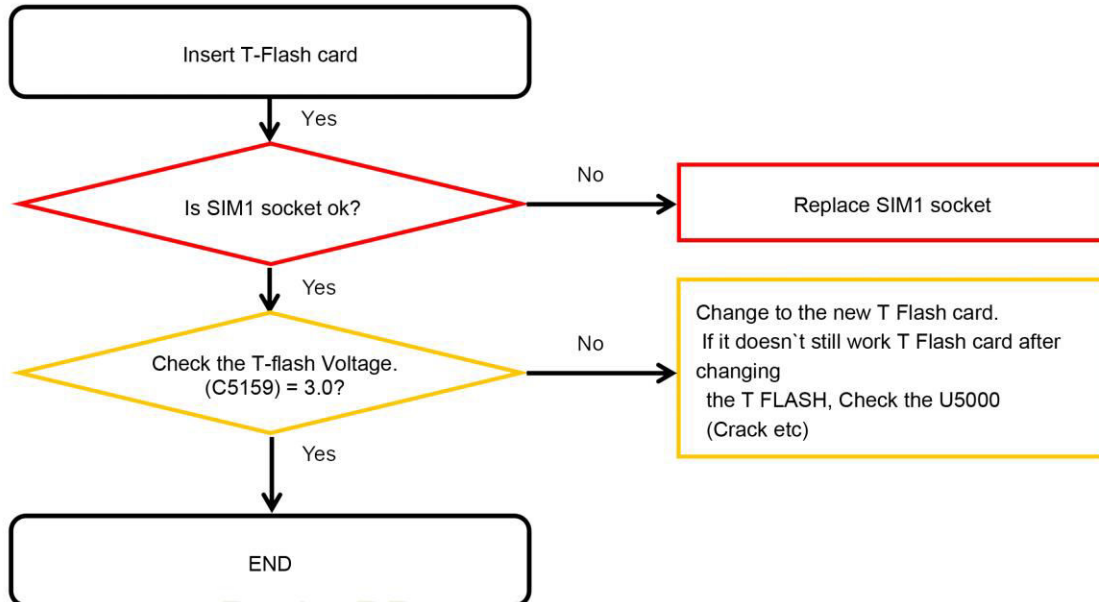


8. Level 3 Repair

8-4-5. Charging Part

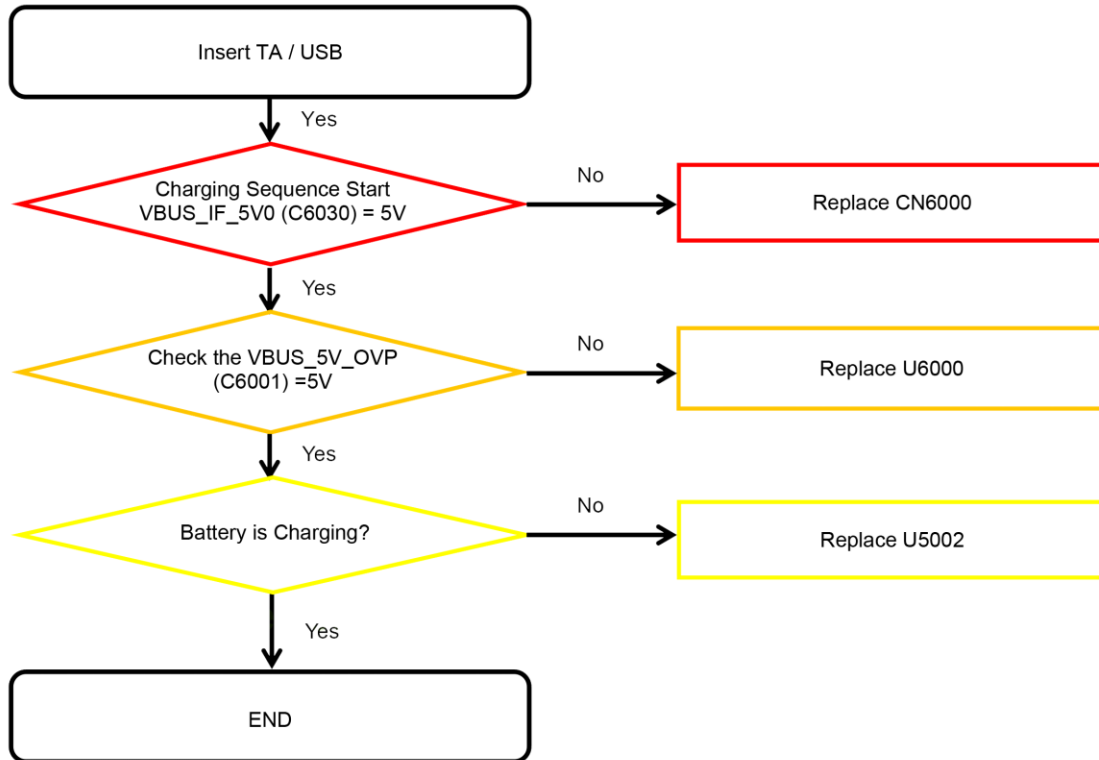


8. Level 3 Repair

8-4-6. Cable Charging Part

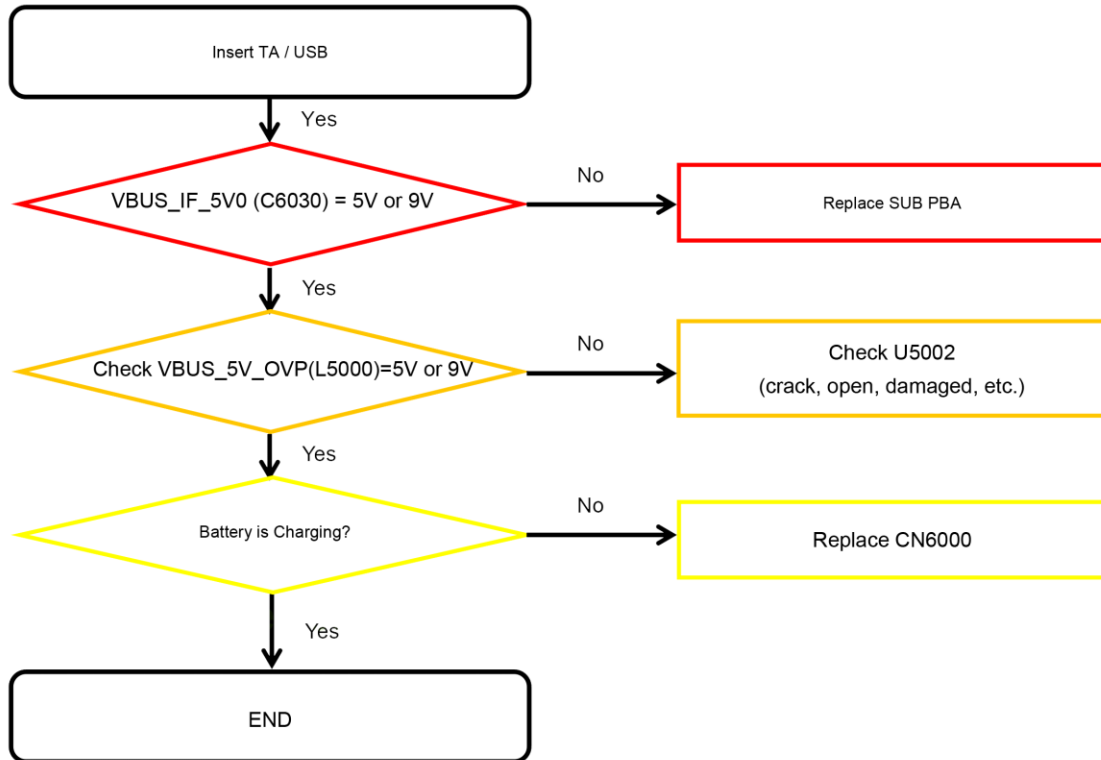


8. Level 3 Repair

8-4-7. Accel Sensor

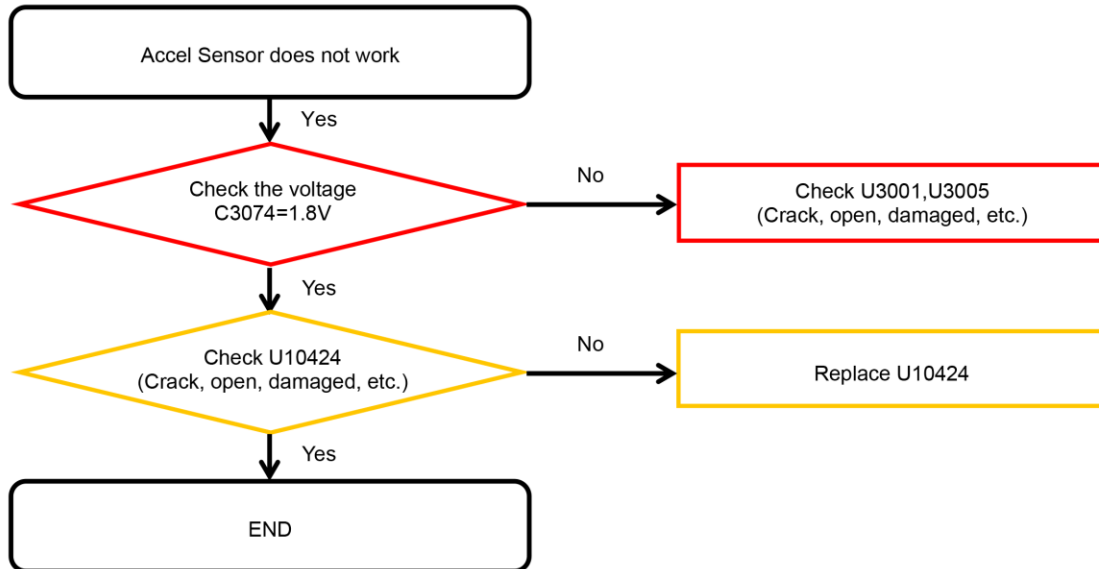


8. Level 3 Repair

8-4-8. Microphone Part - Main MIC

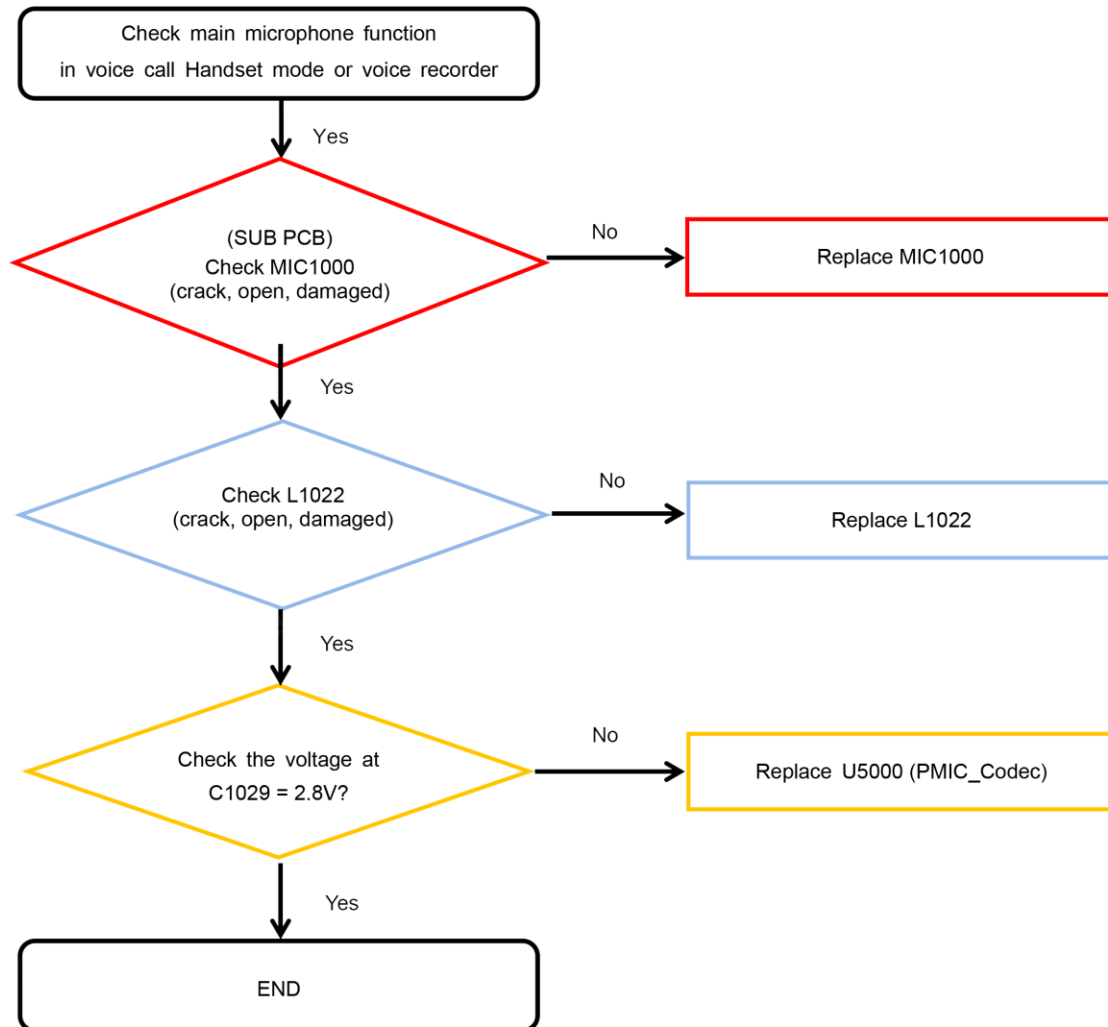


8. Level 3 Repair

8-4-9. Speaker Part

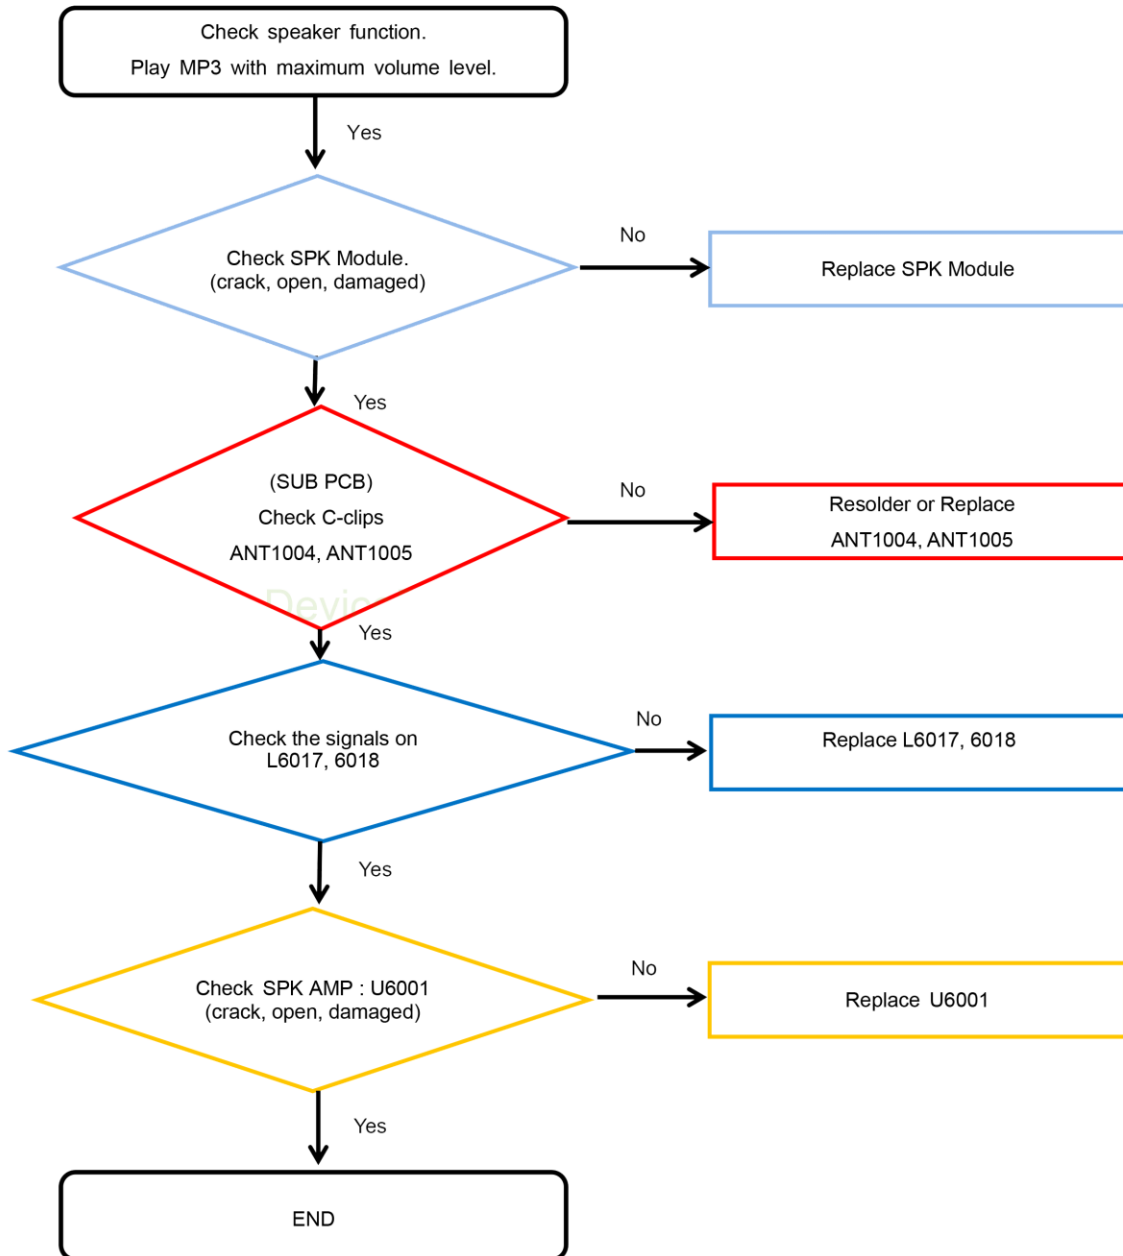


8. Level 3 Repair

8-4-10. Receiver Part

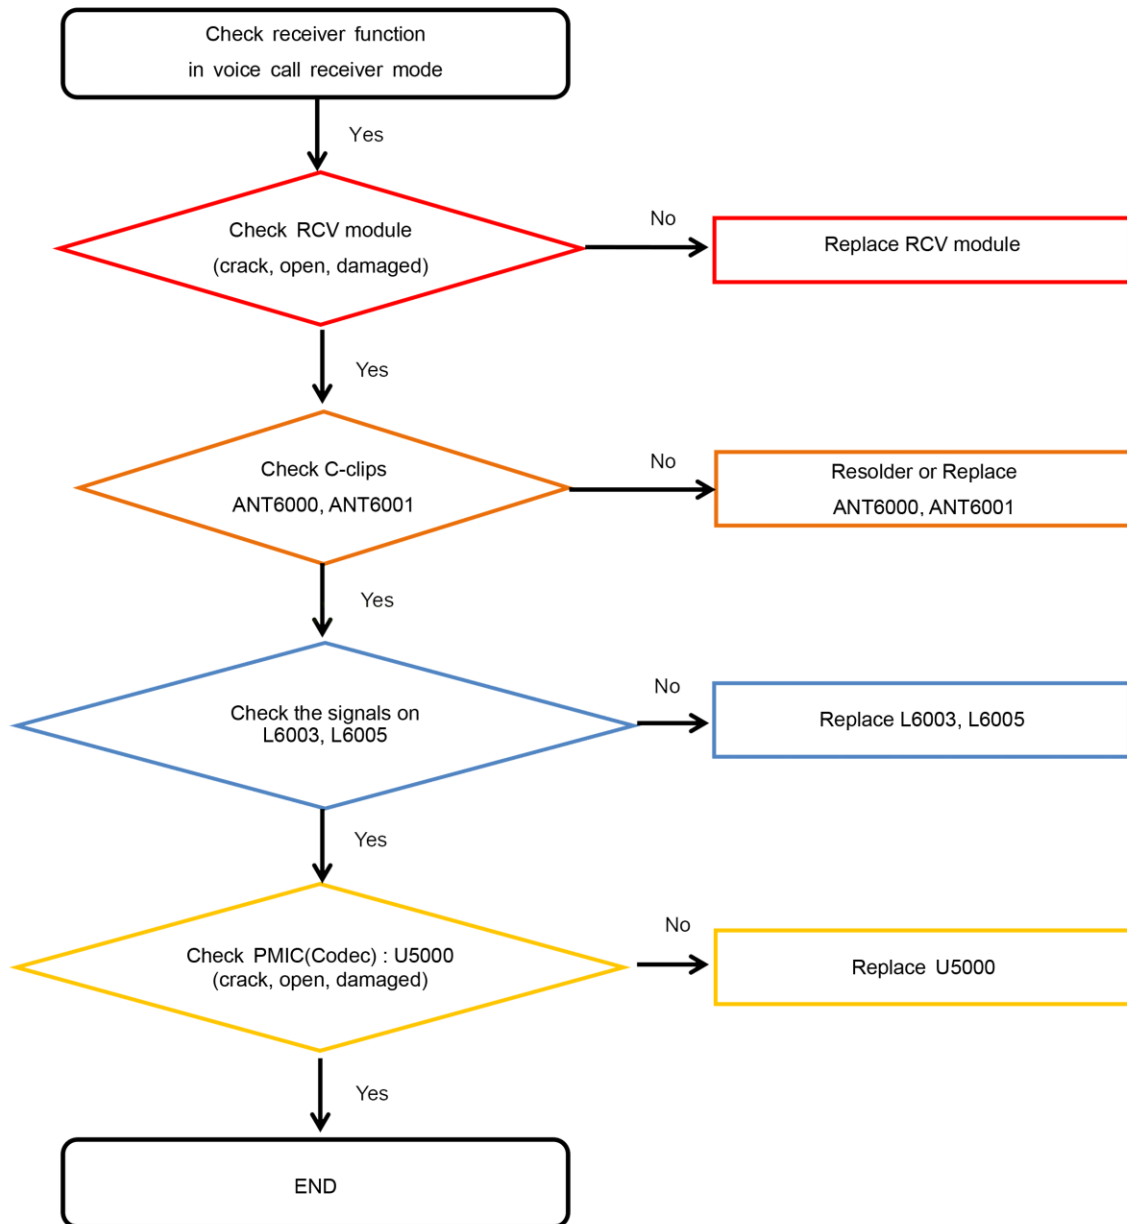


8. Level 3 Repair

8-4-11. BT/WIFI

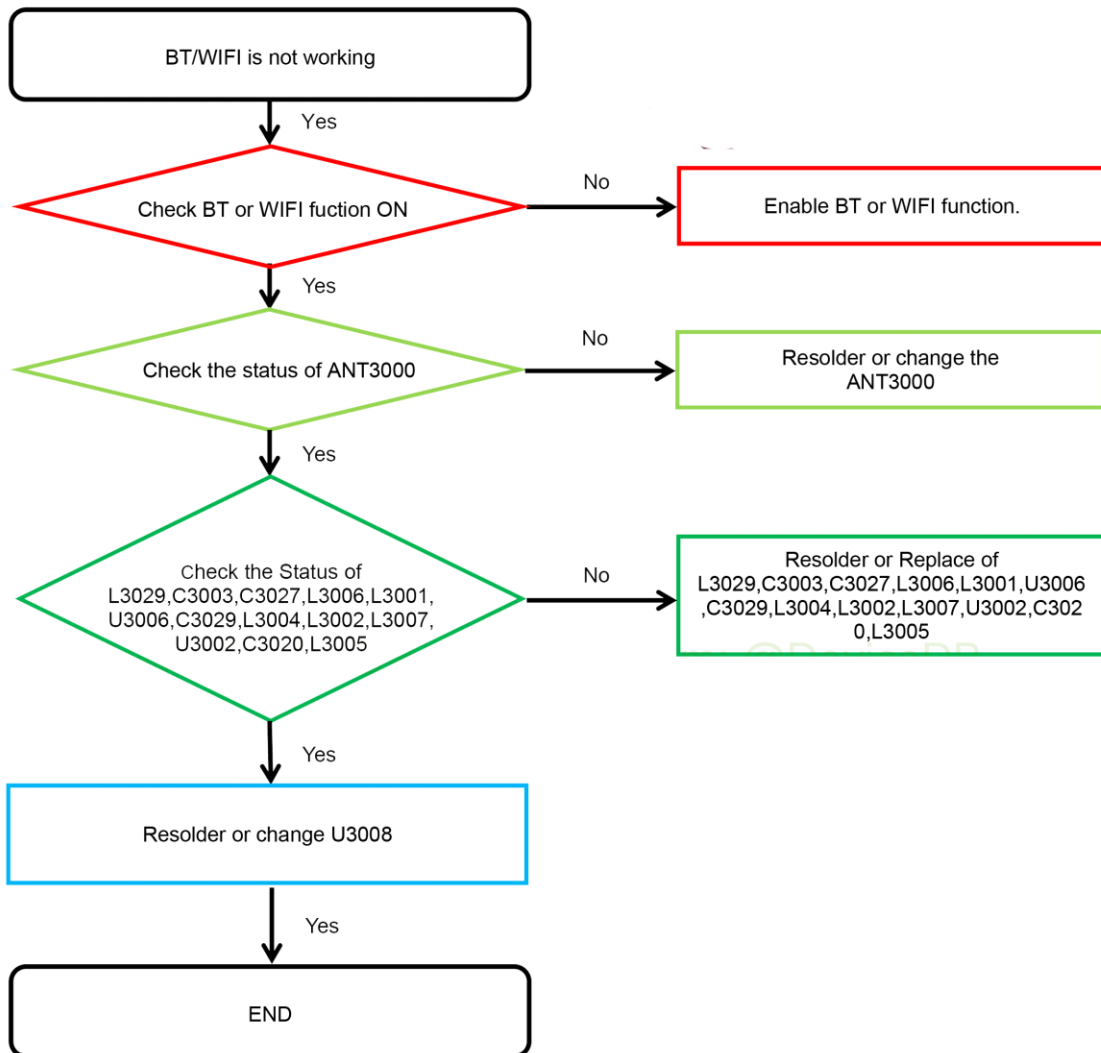


8. Level 3 Repair

8-4-12. GPS

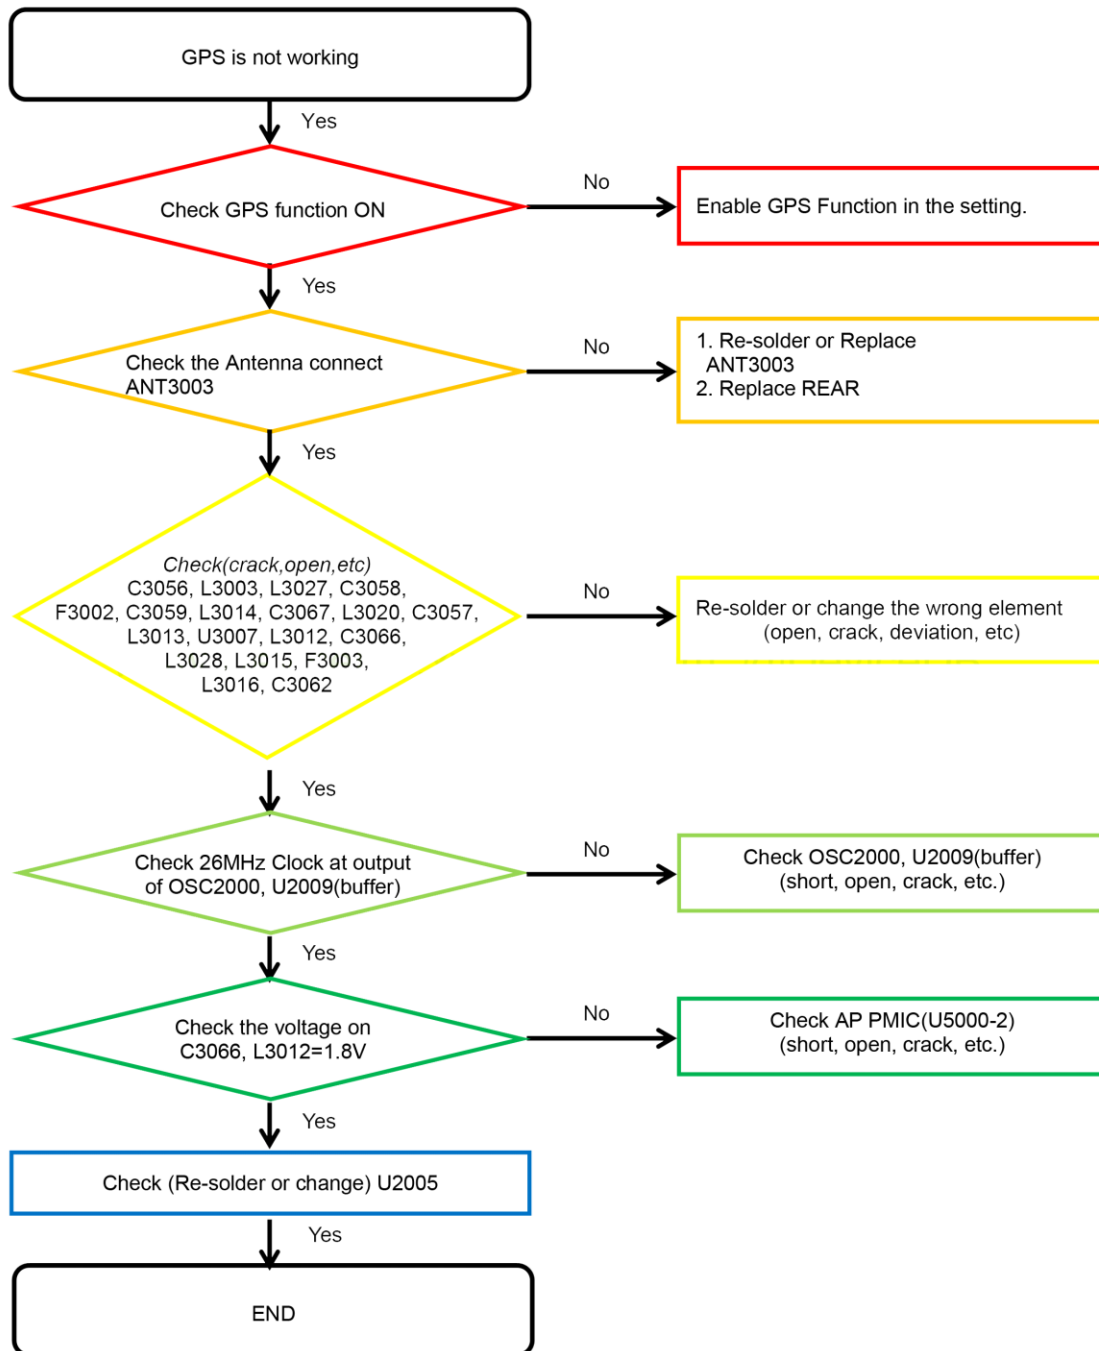


8. Level 3 Repair

8-4-13. FM radio part

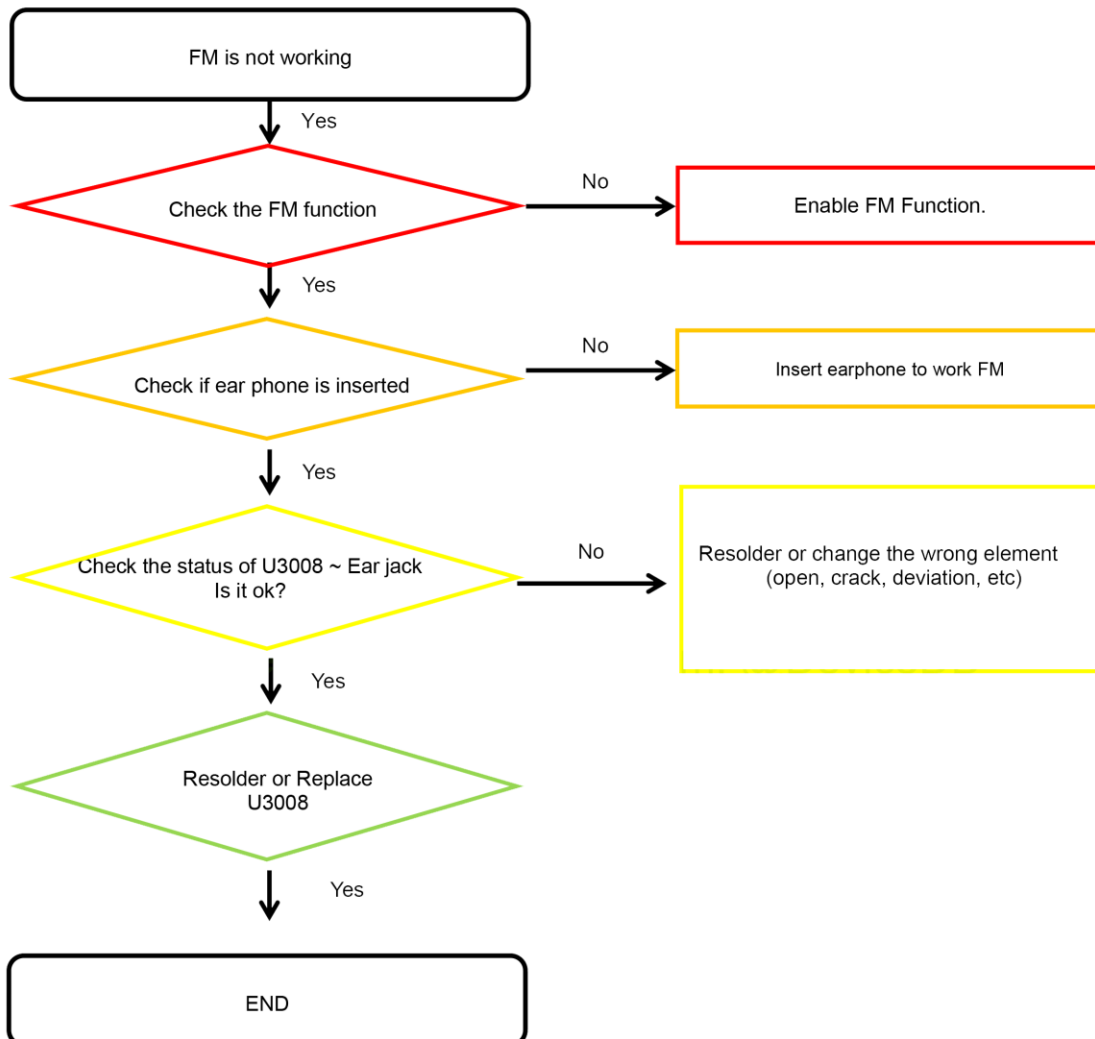


8. Level 3 Repair

8-4-14. NFC

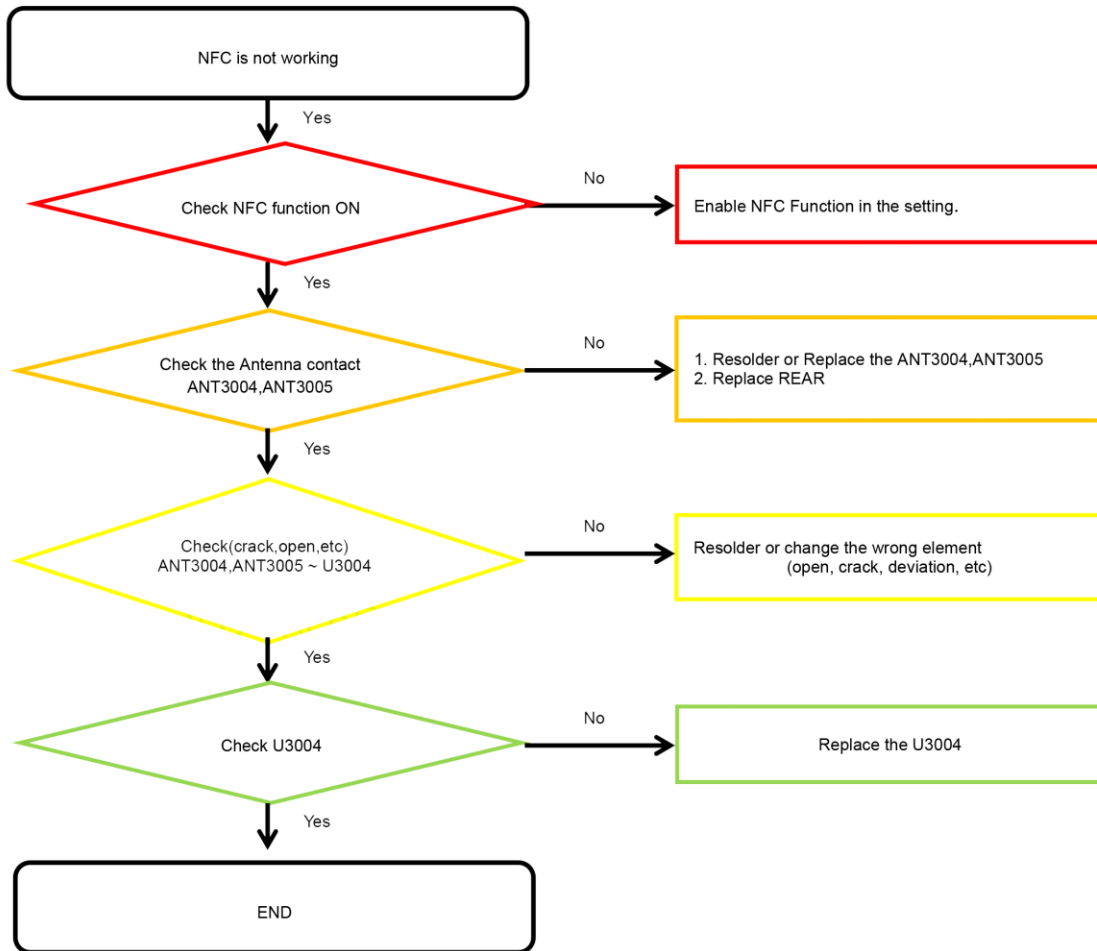


8. Level 3 Repair

8-4-15. Display

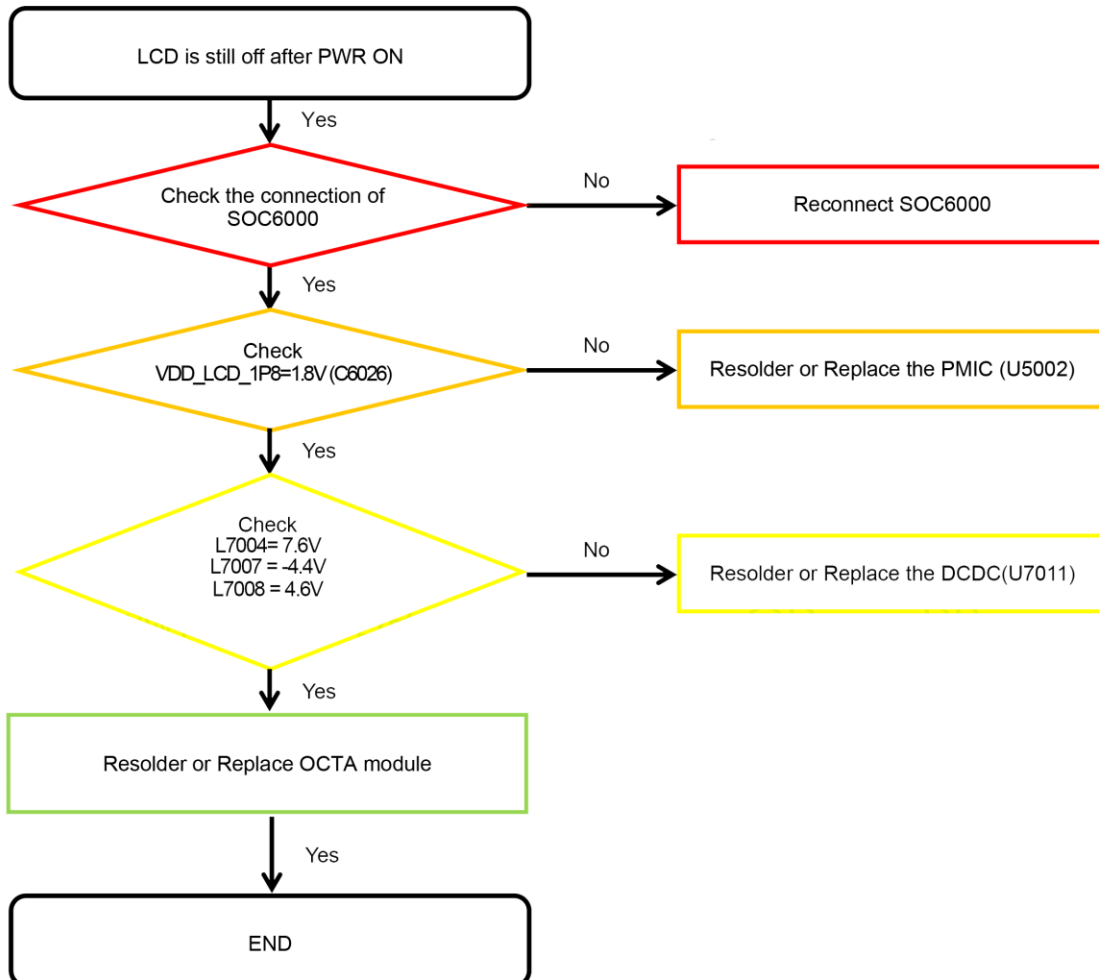


8. Level 3 Repair

8-4-16. Rear CAMERA

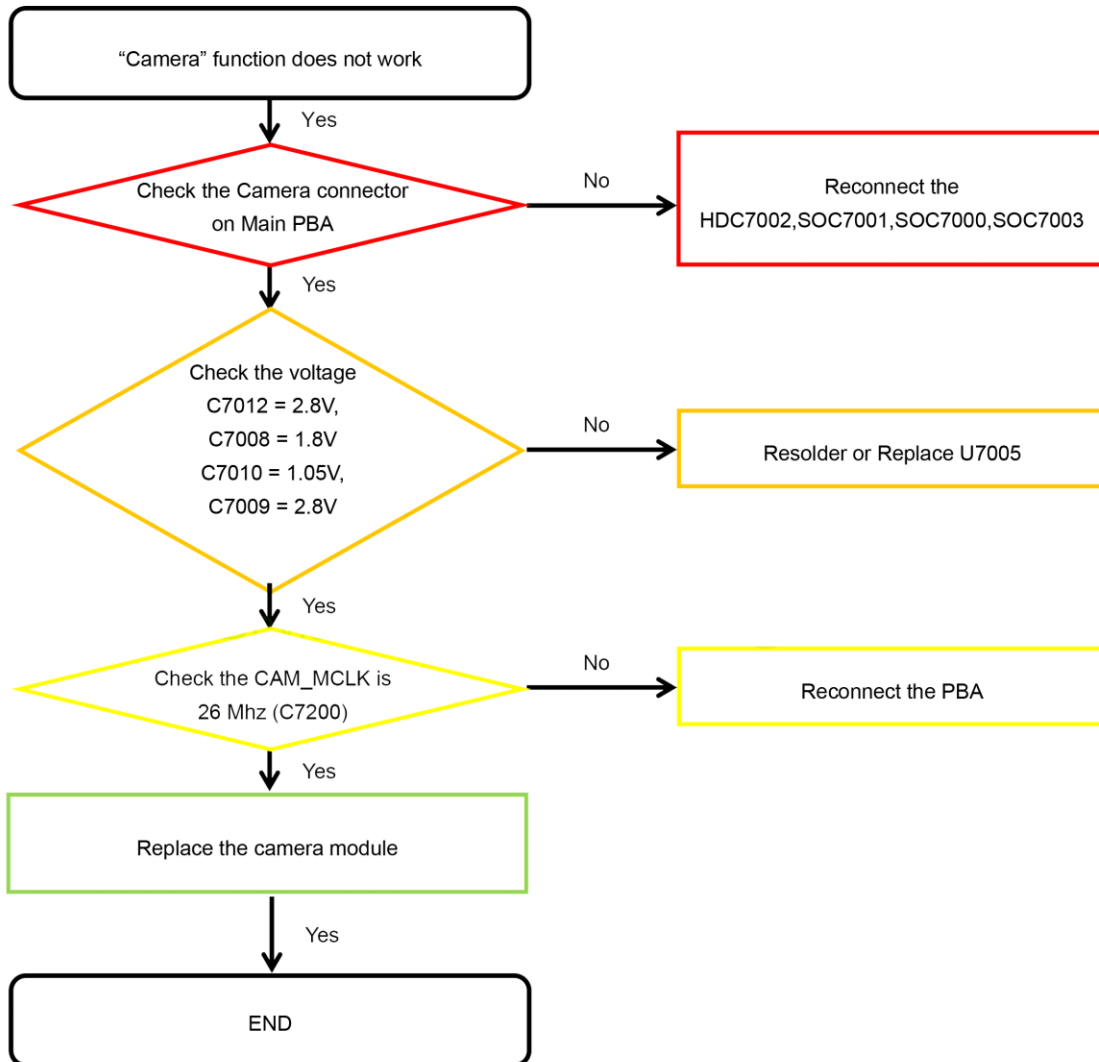


8. Level 3 Repair

8-4-17. Front CAMERA

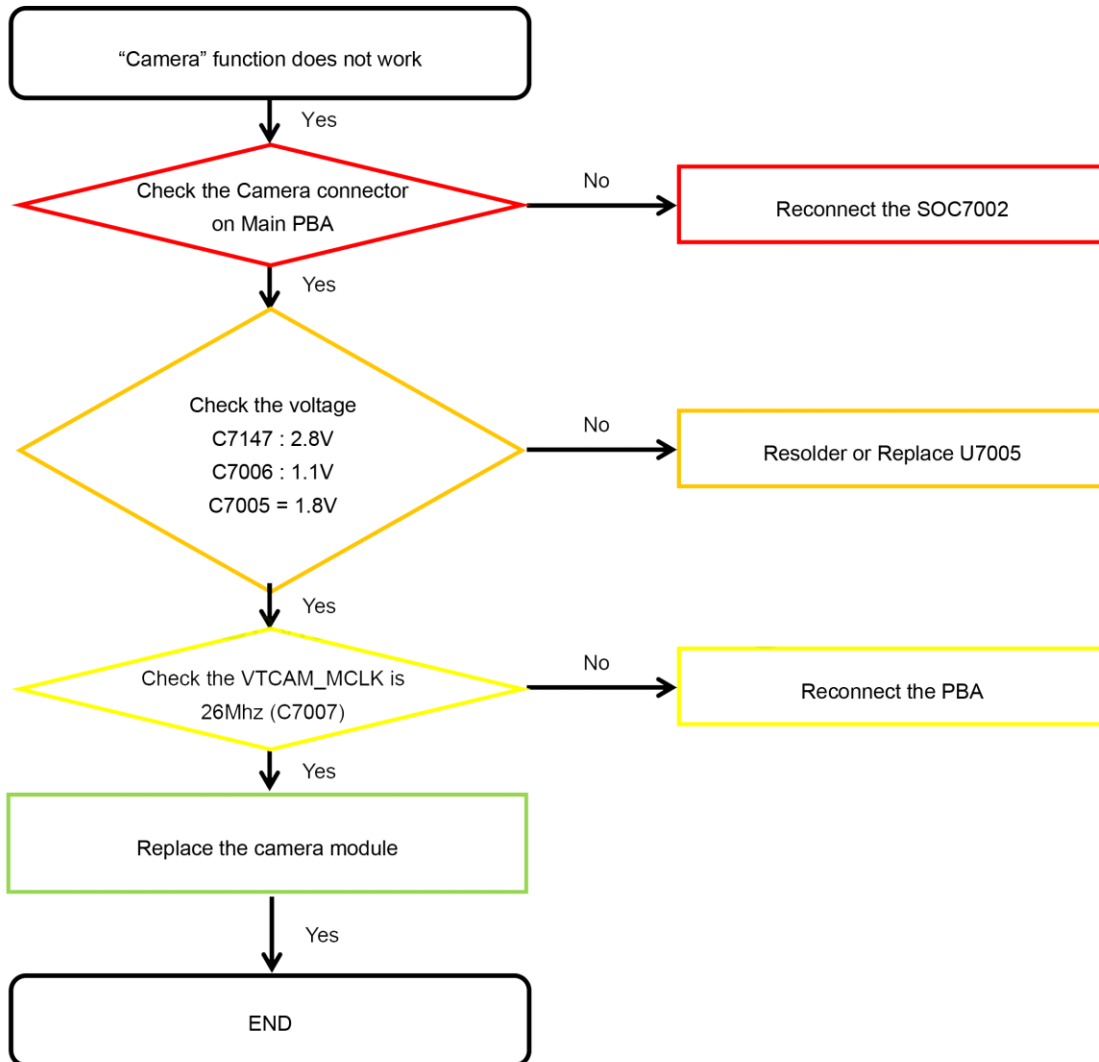


8. Level 3 Repair

8-4-18. Motor

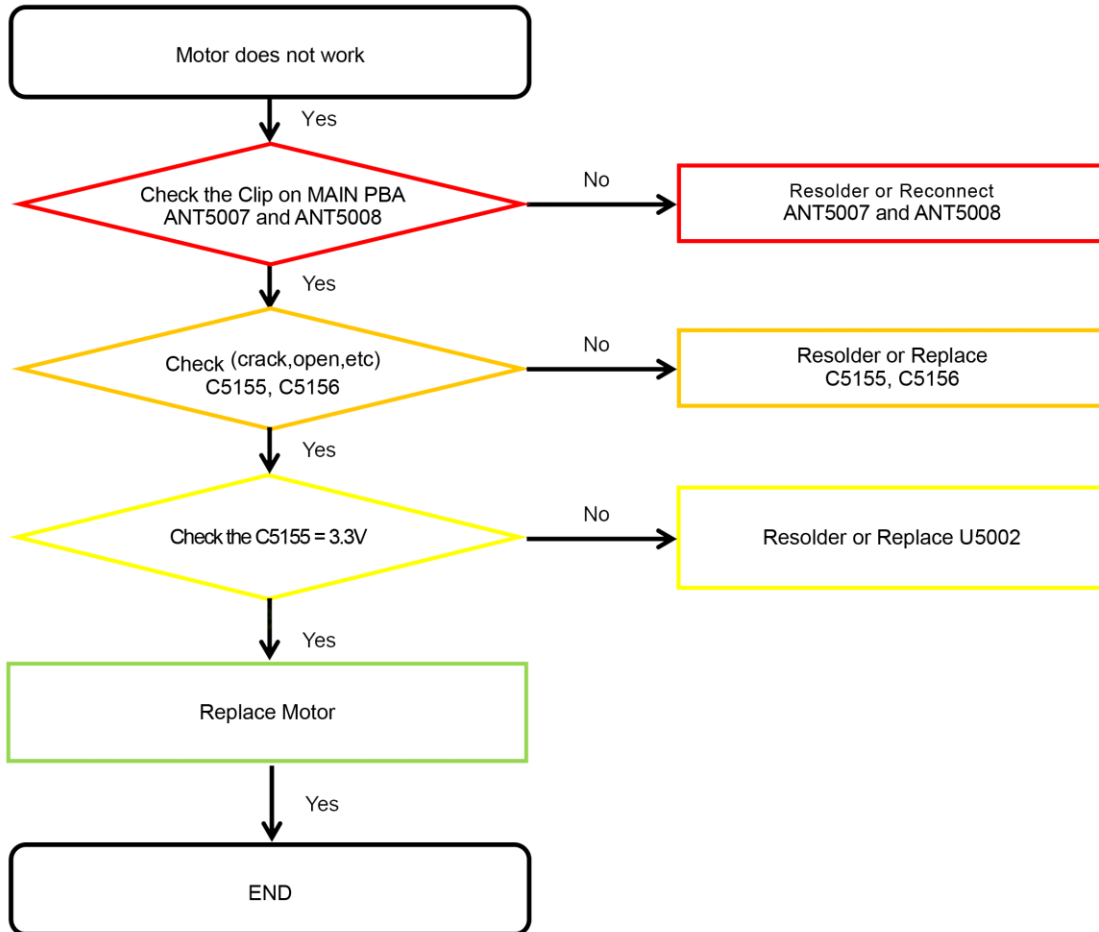

8. Level 3 Repair

8-4-19. GSM/WCDMA/LTE1,2,3,5,8,20,28

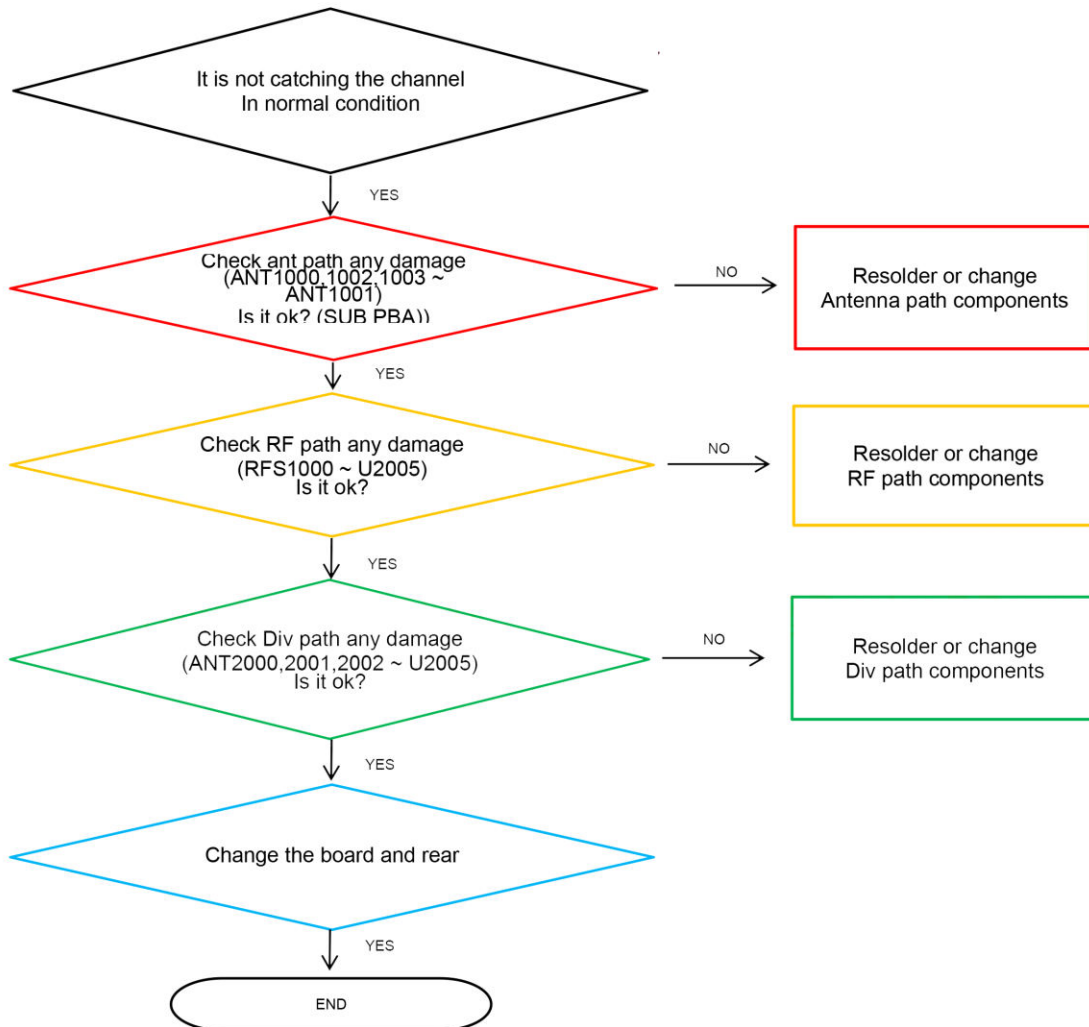

8. Level 3 Repair

8-4-20. LTE 7, 38, 40, 41

