



9. 故障排除流程图


9-1. 基带

9-1. 开机

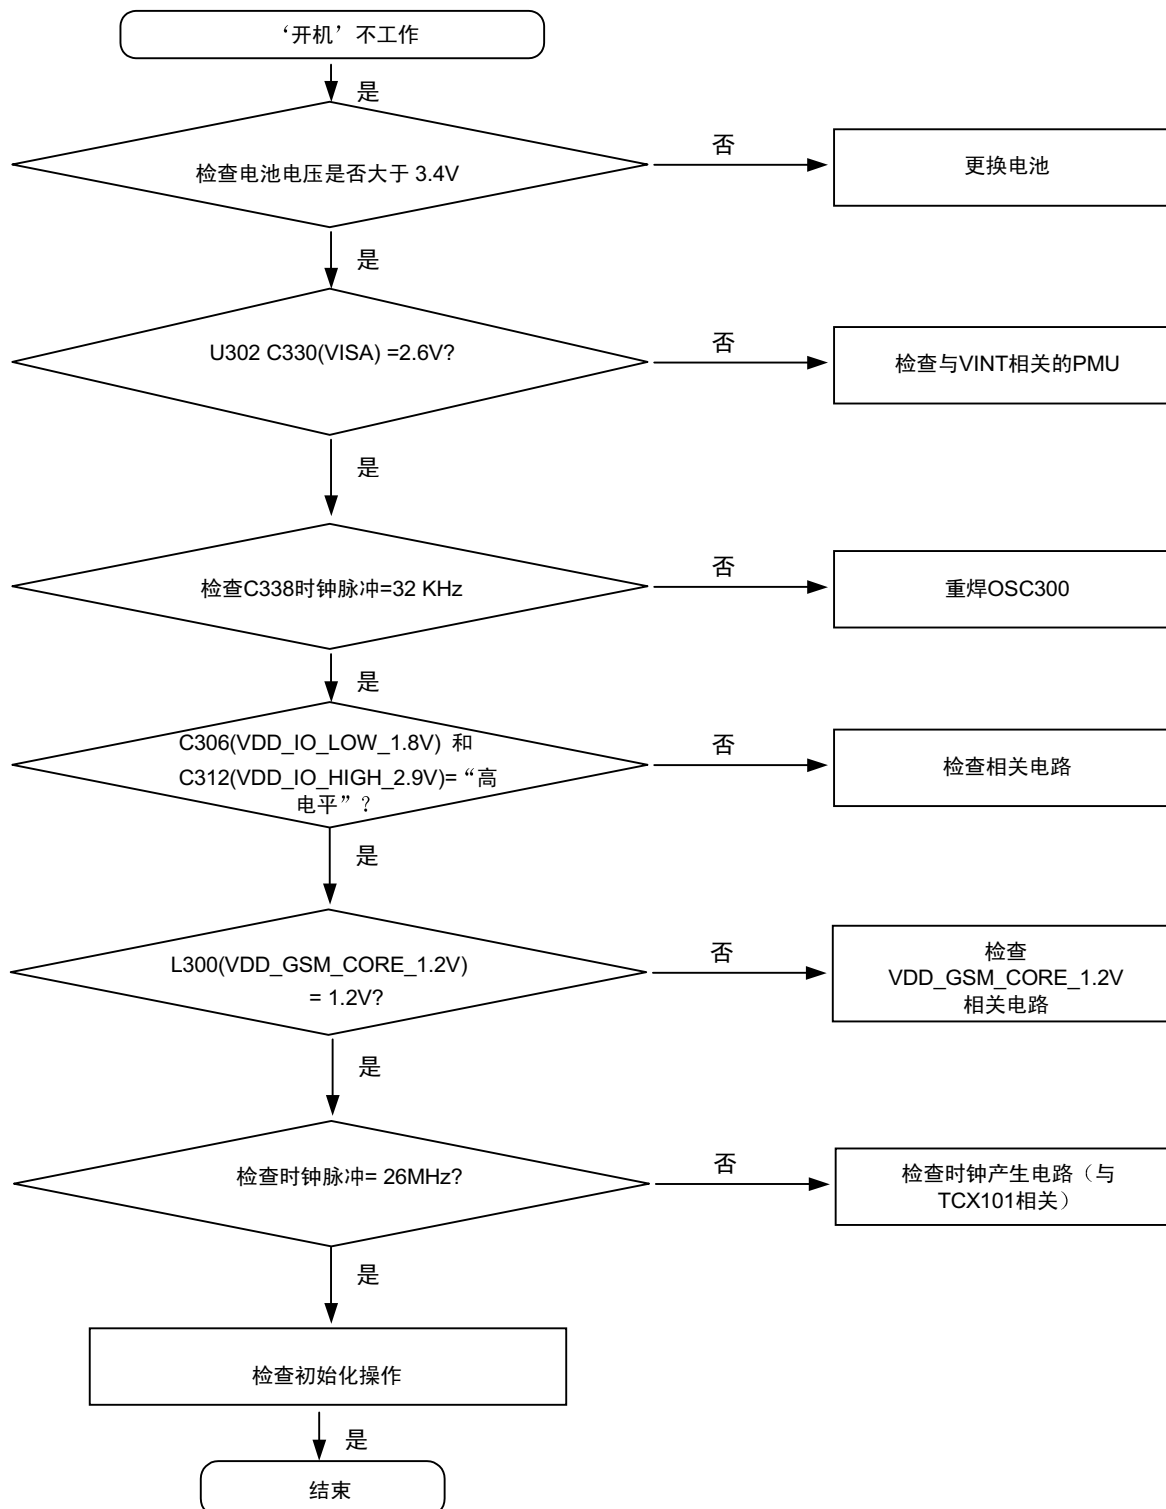


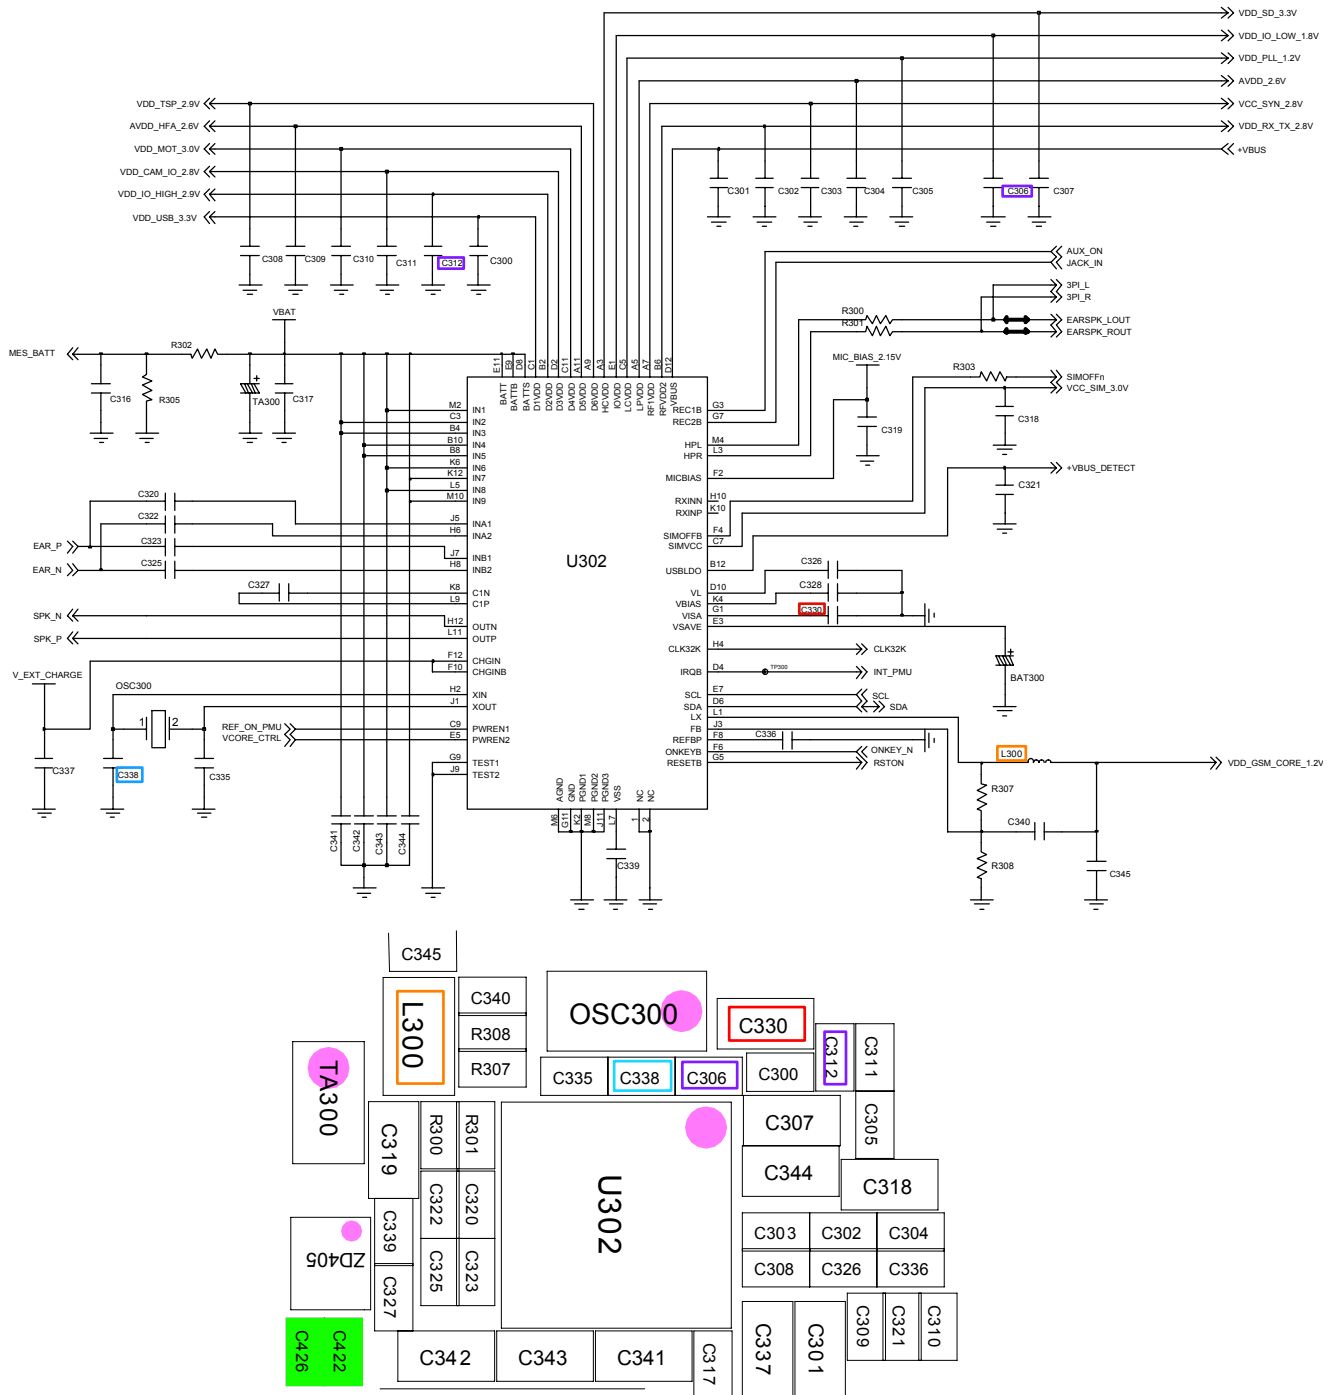


9-1-2.初始化

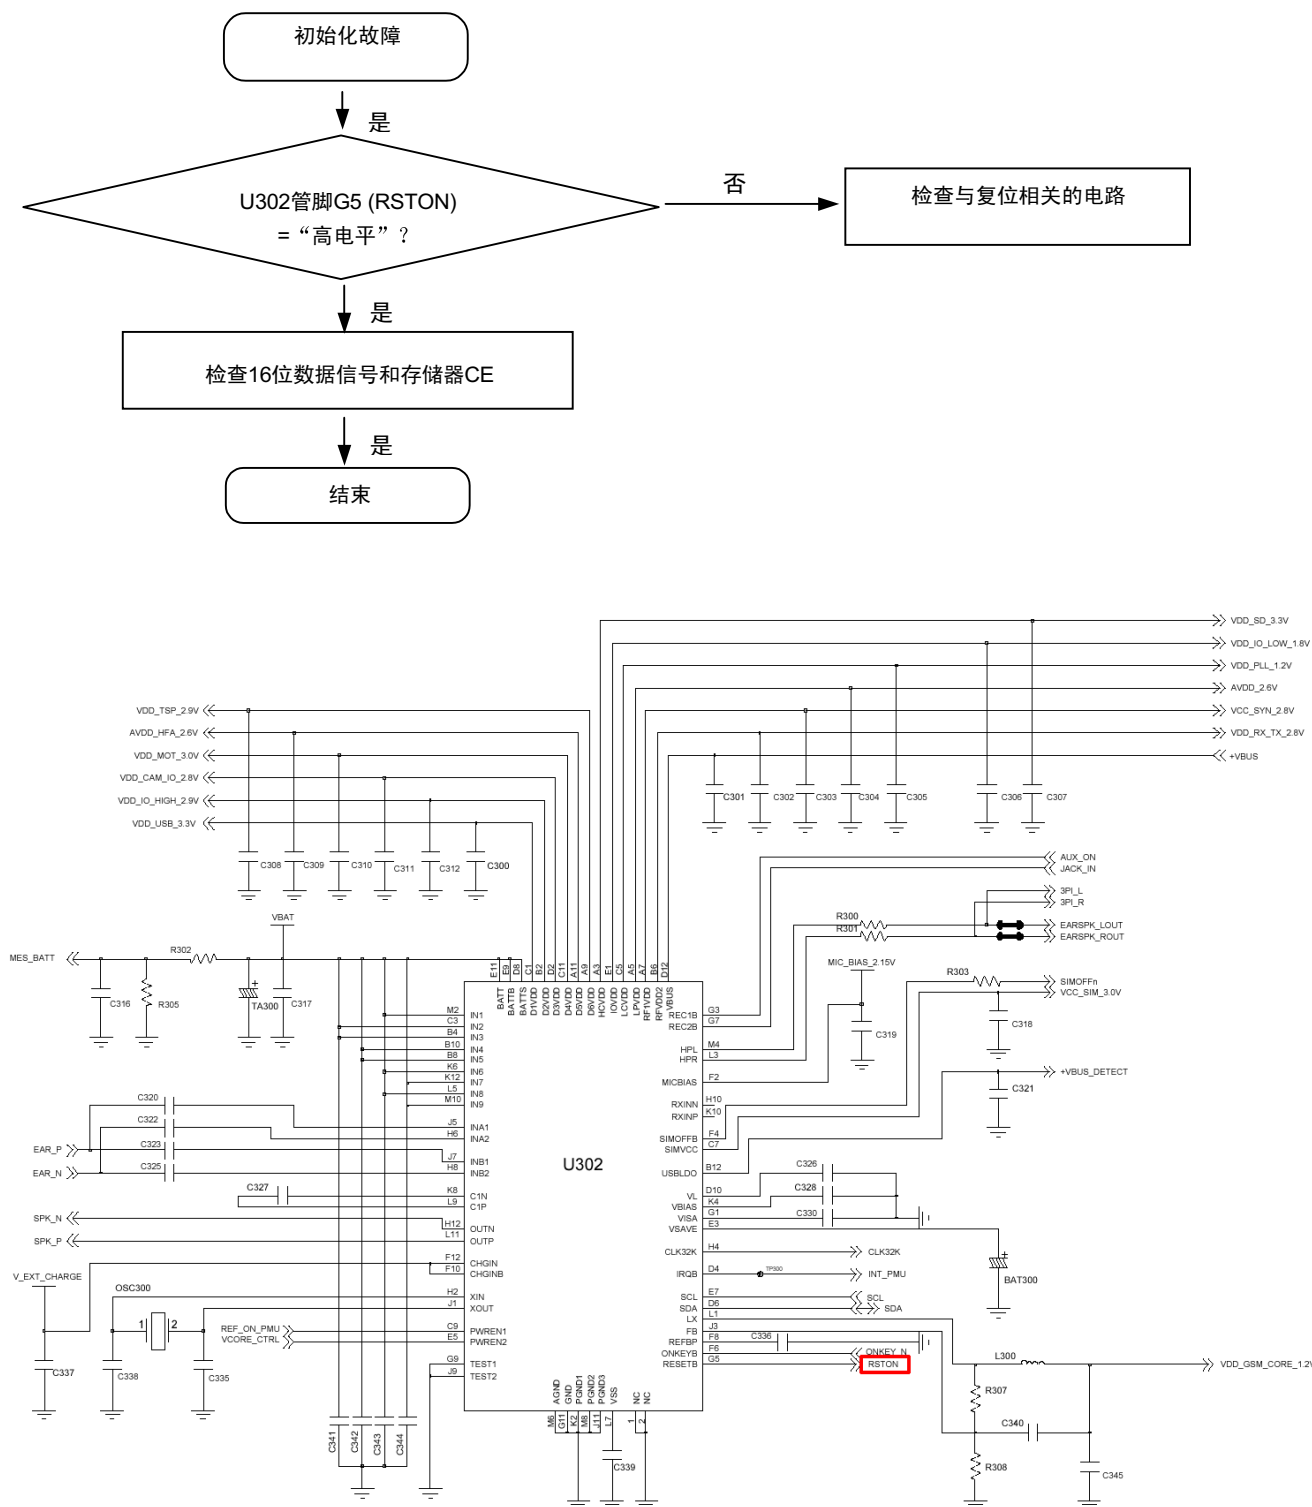


9-1-3.SIM 部分

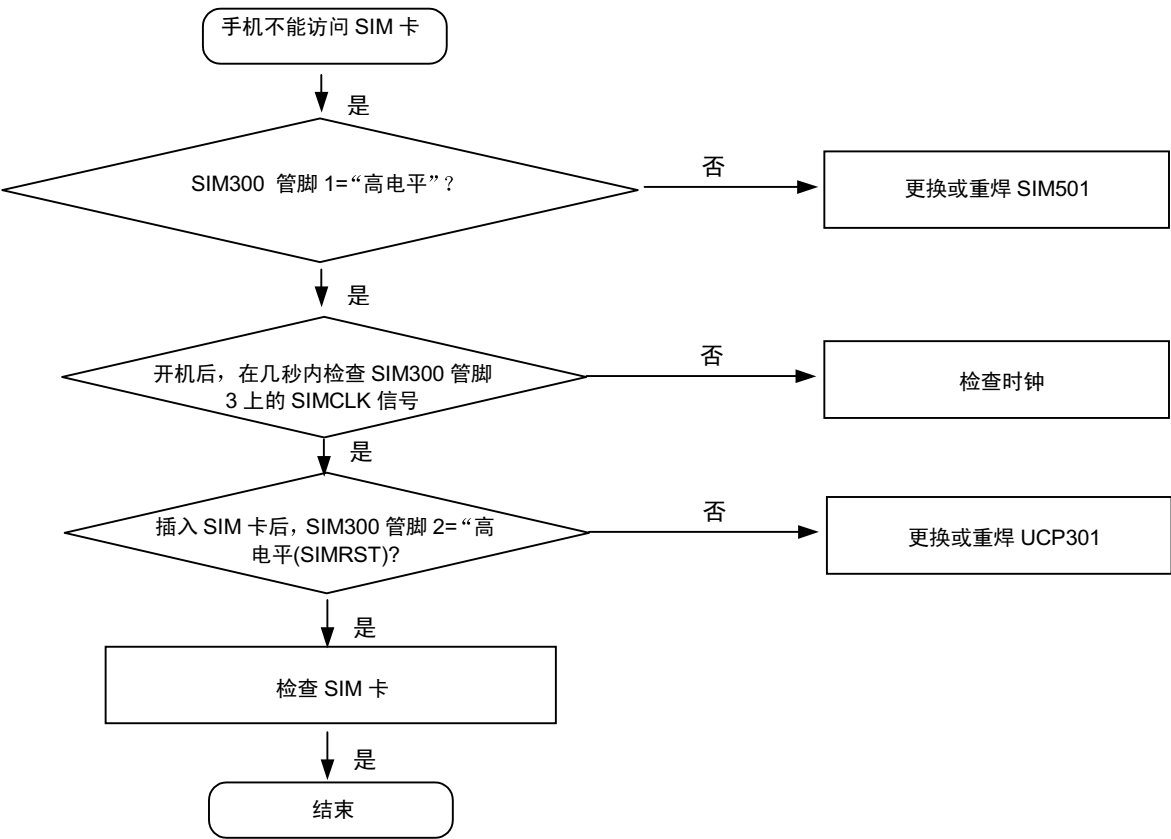




9-1-4. 充电部分

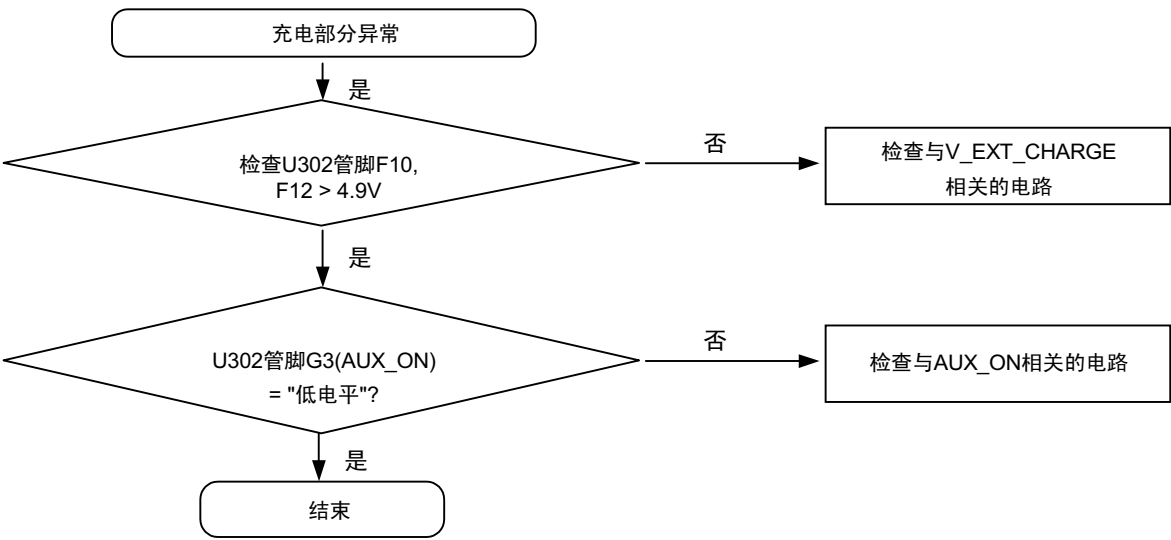





9-1-5. 话筒部分

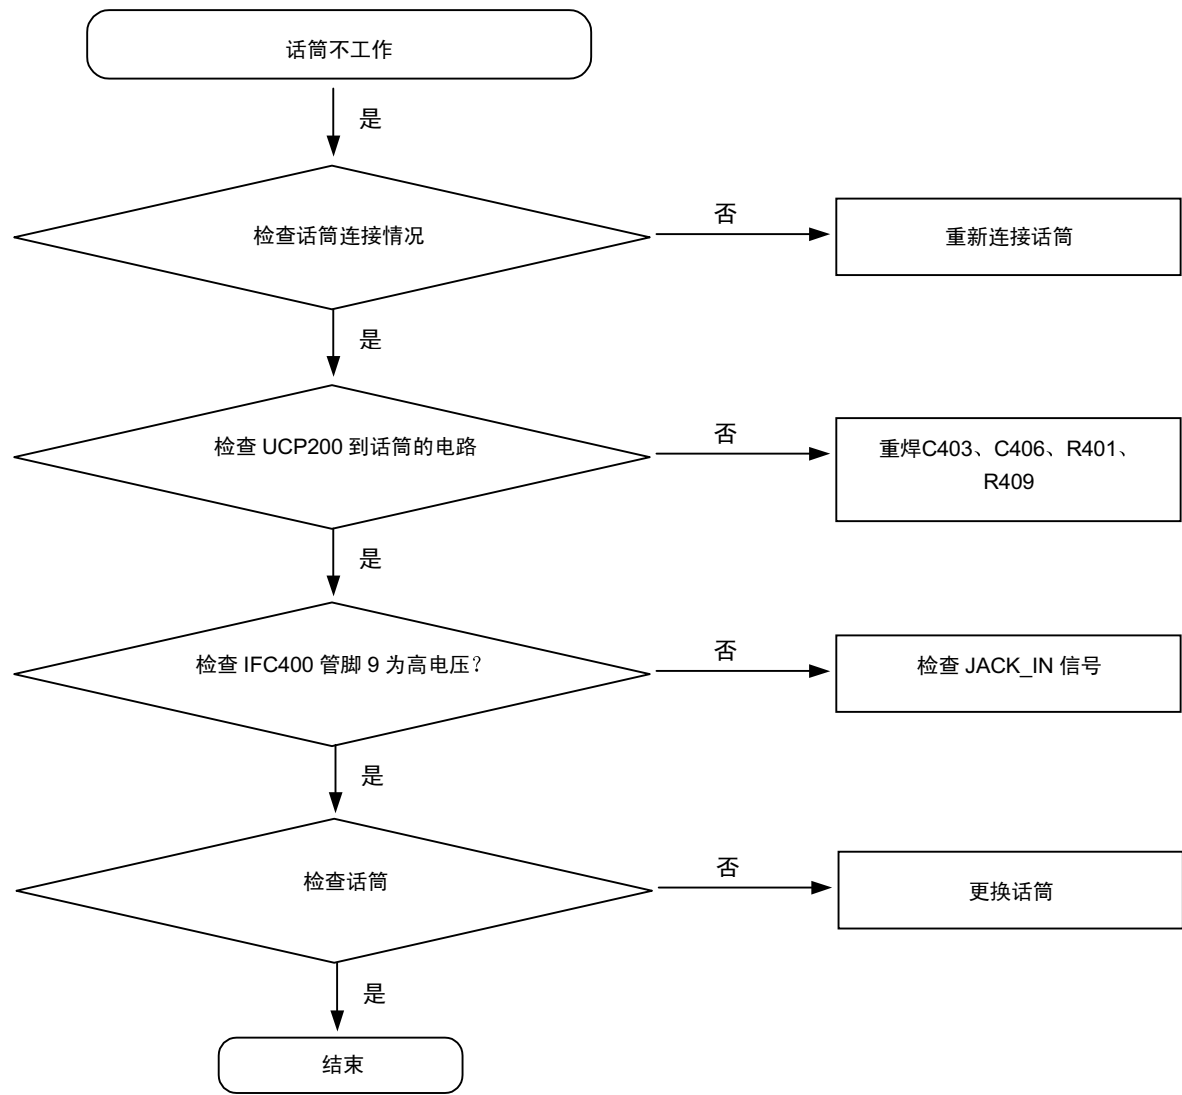

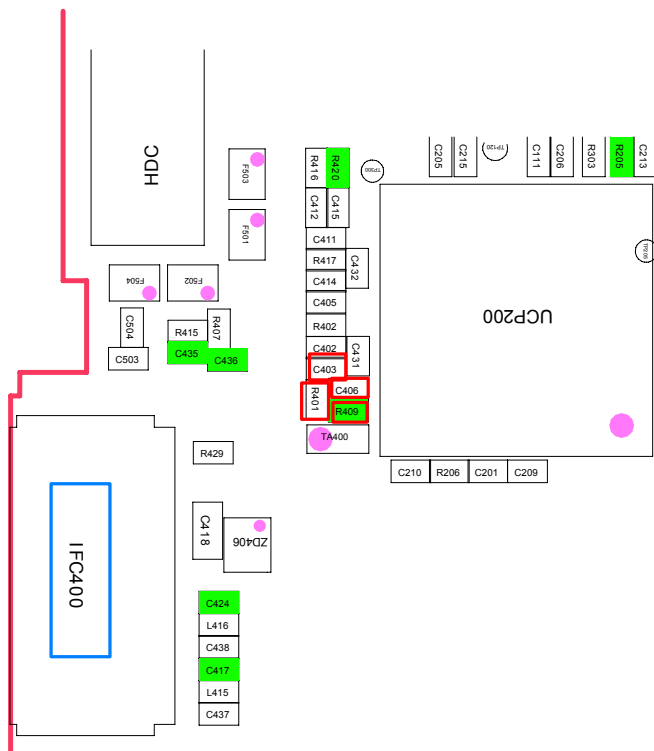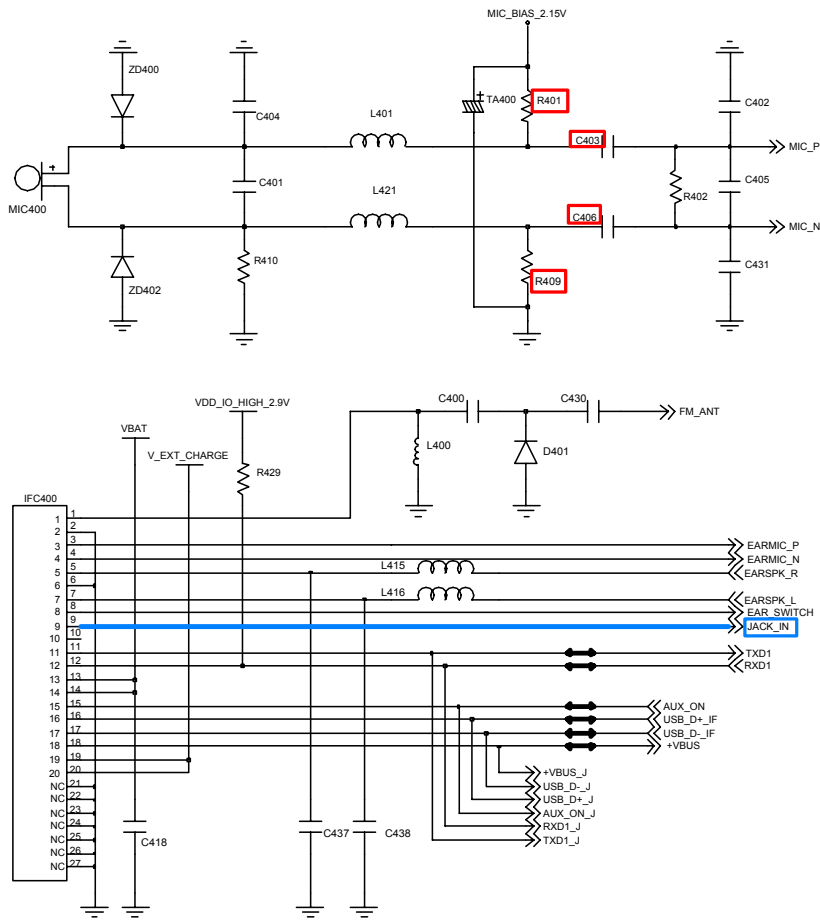


9-1-6.扬声器部分

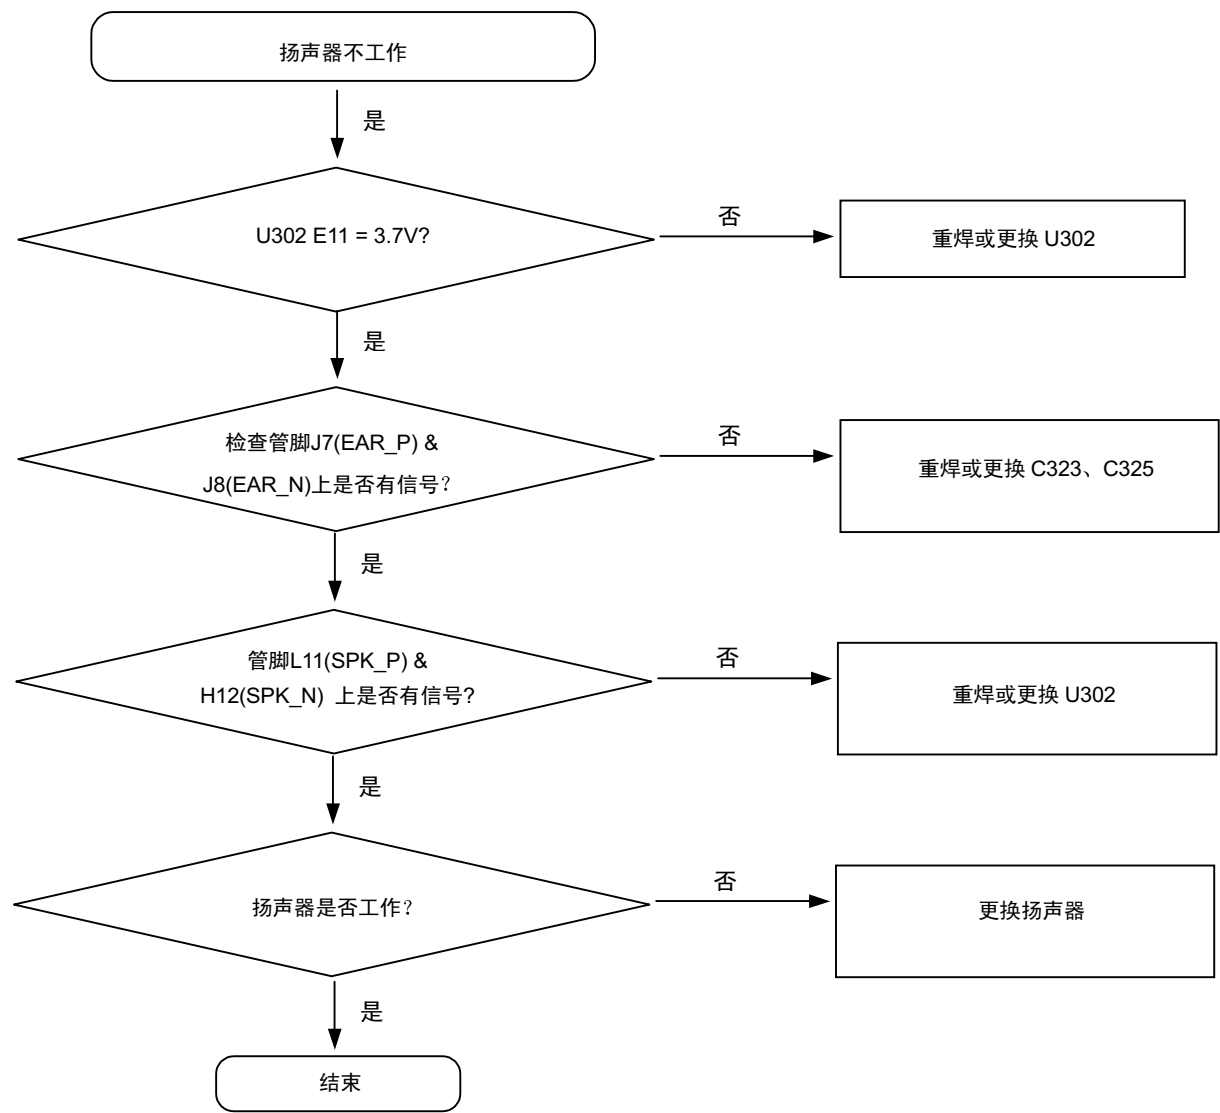


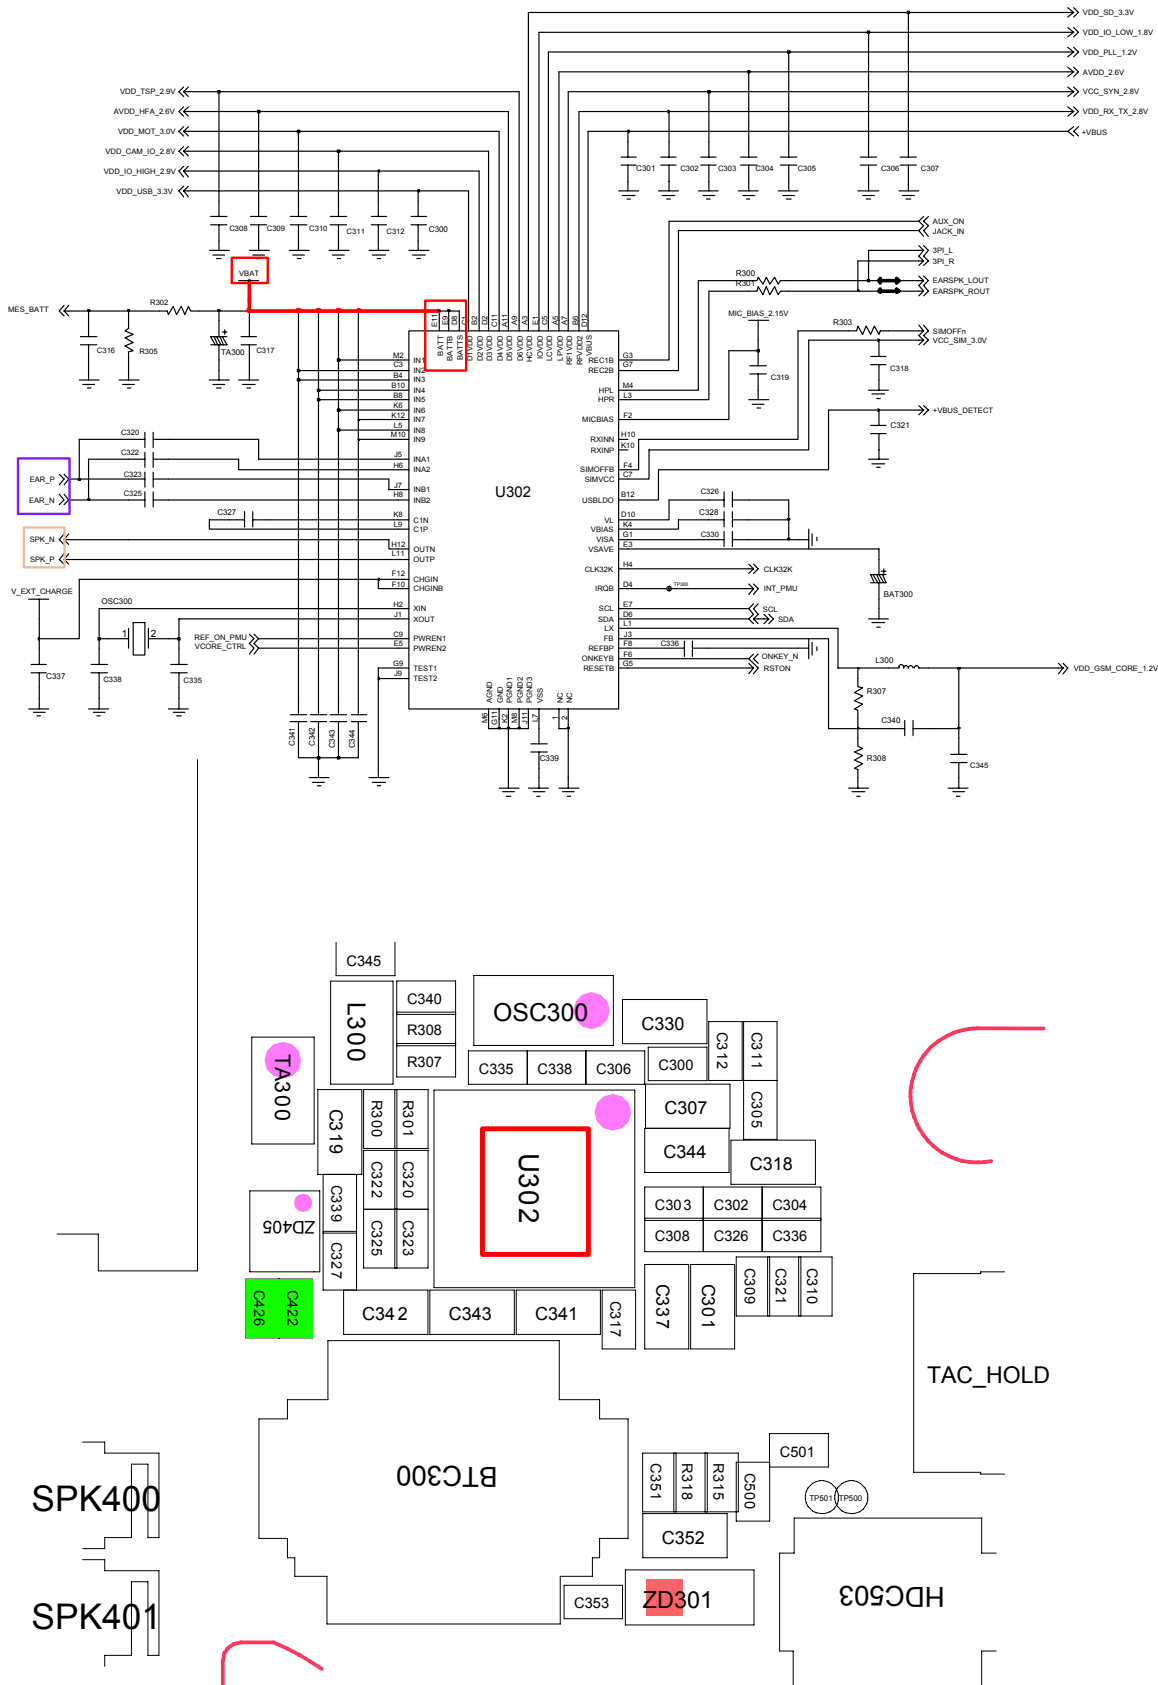



9-1-7.接收器部分

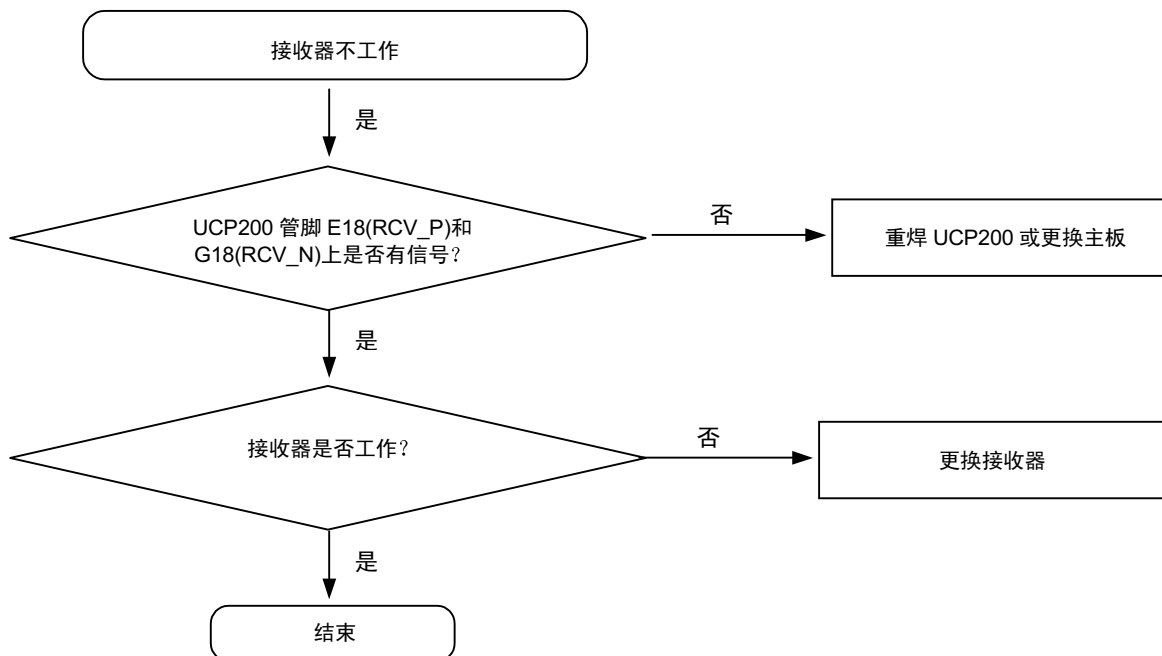


9-1-8.耳机部分

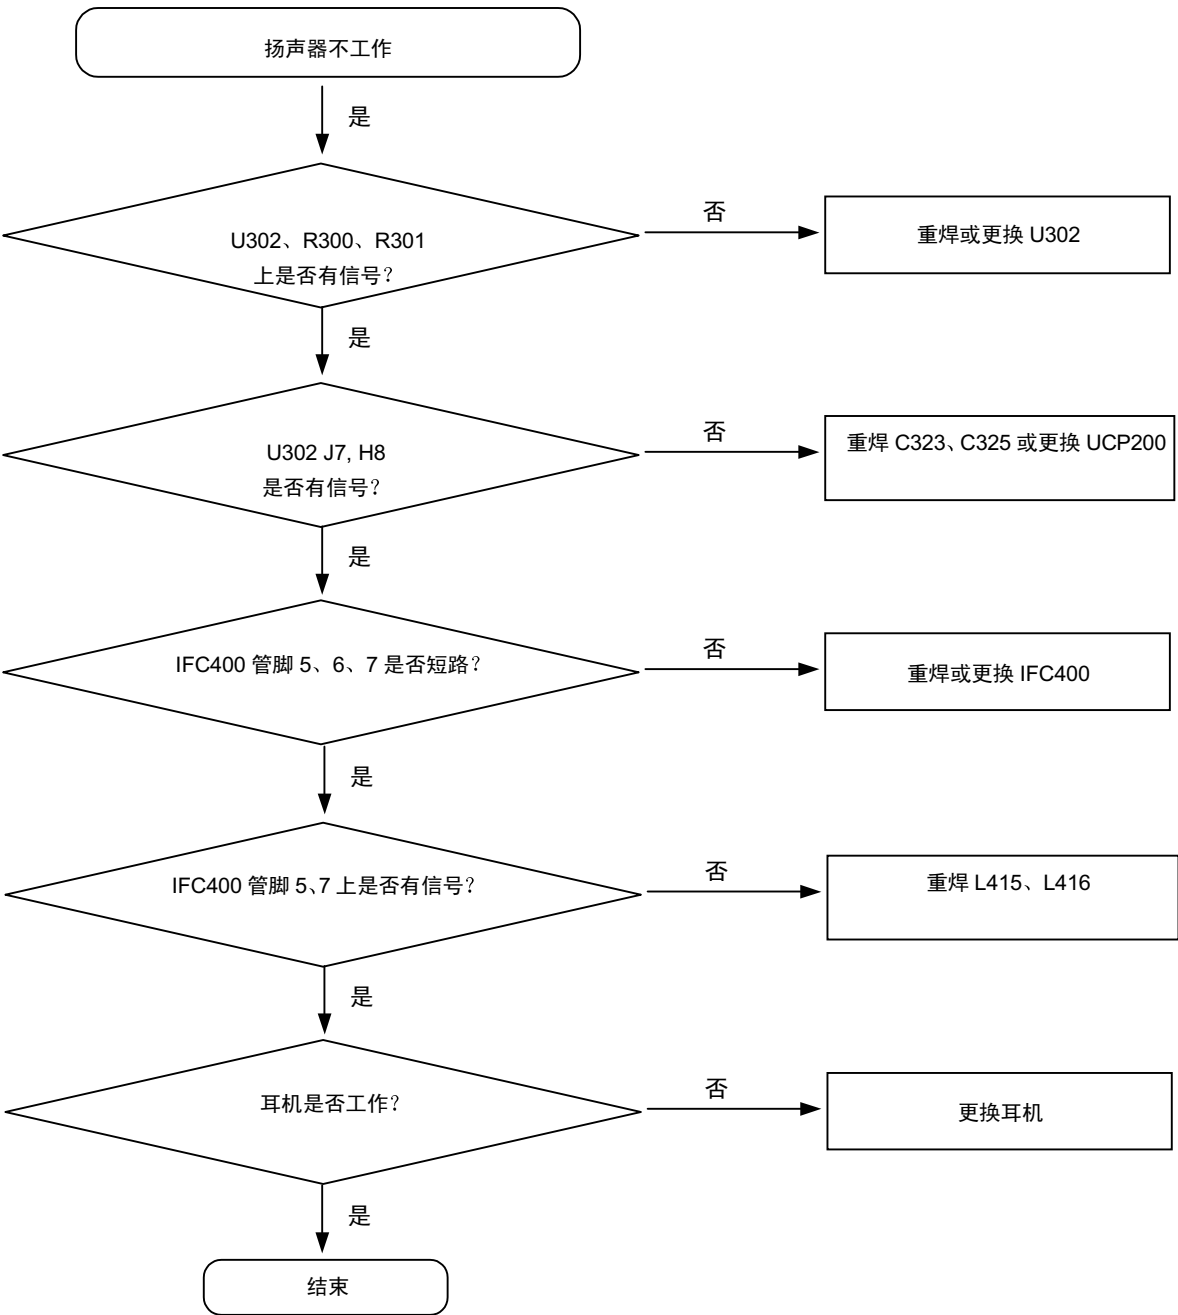


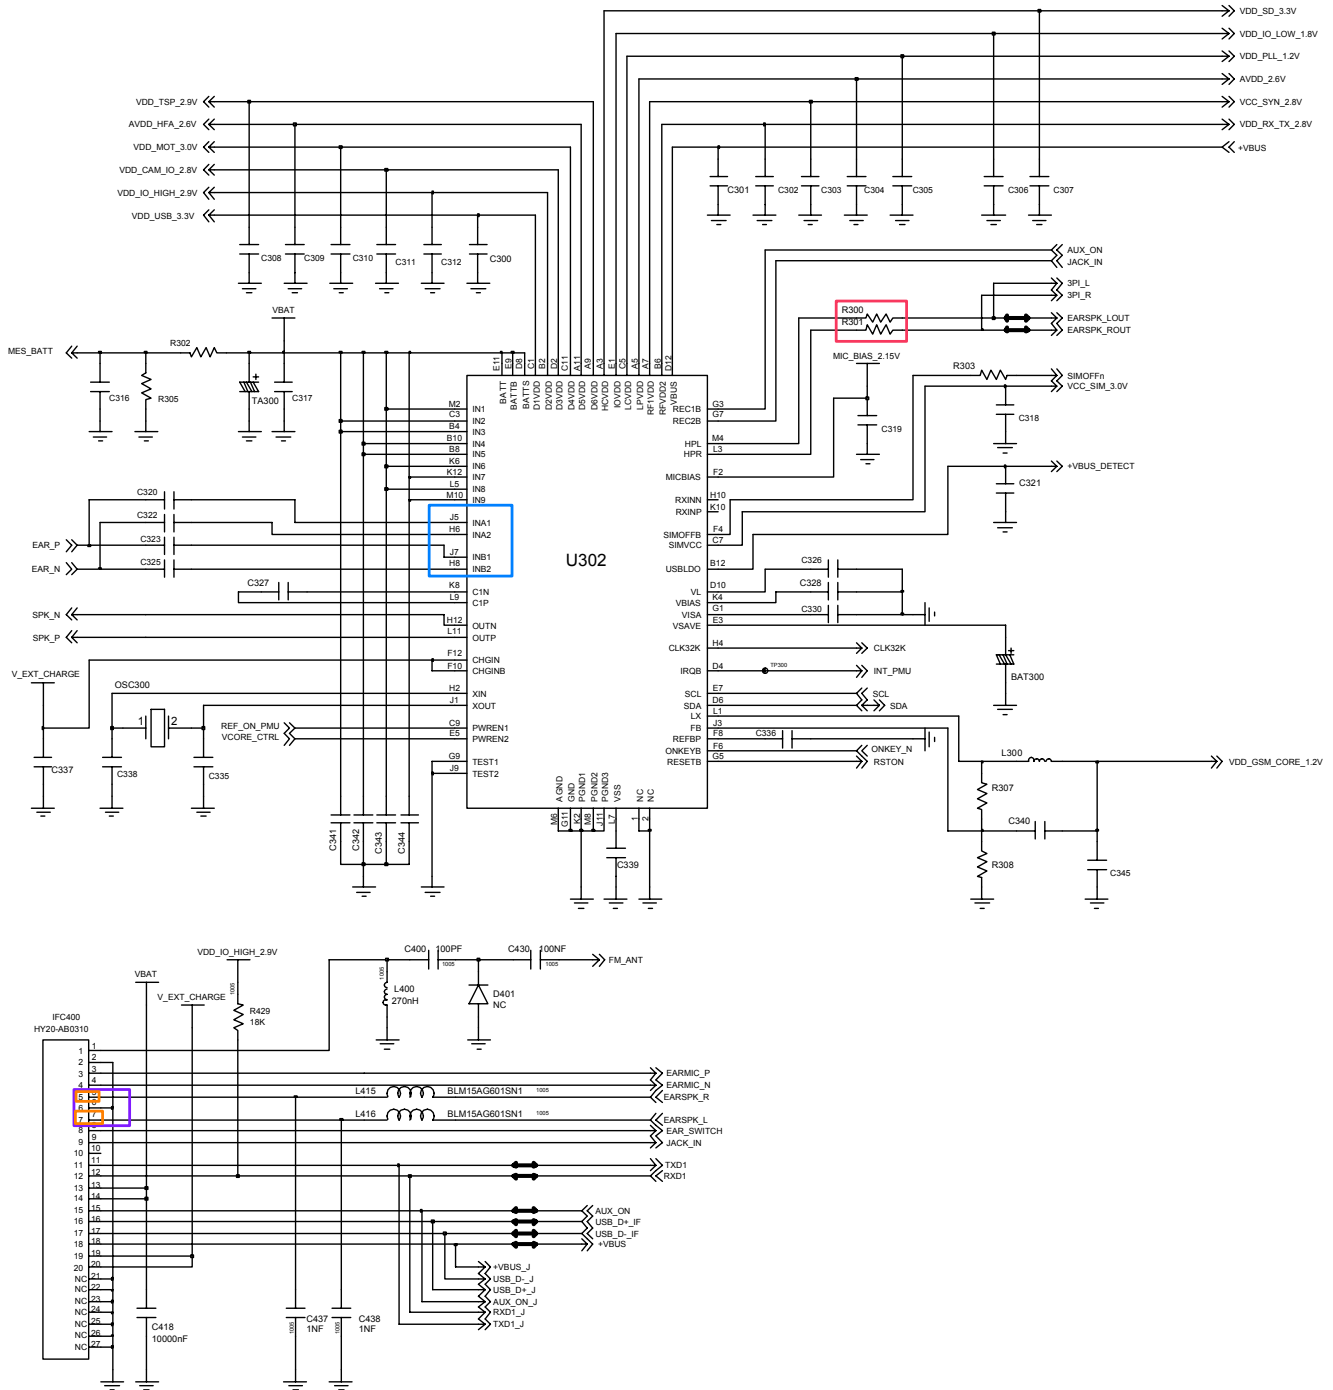

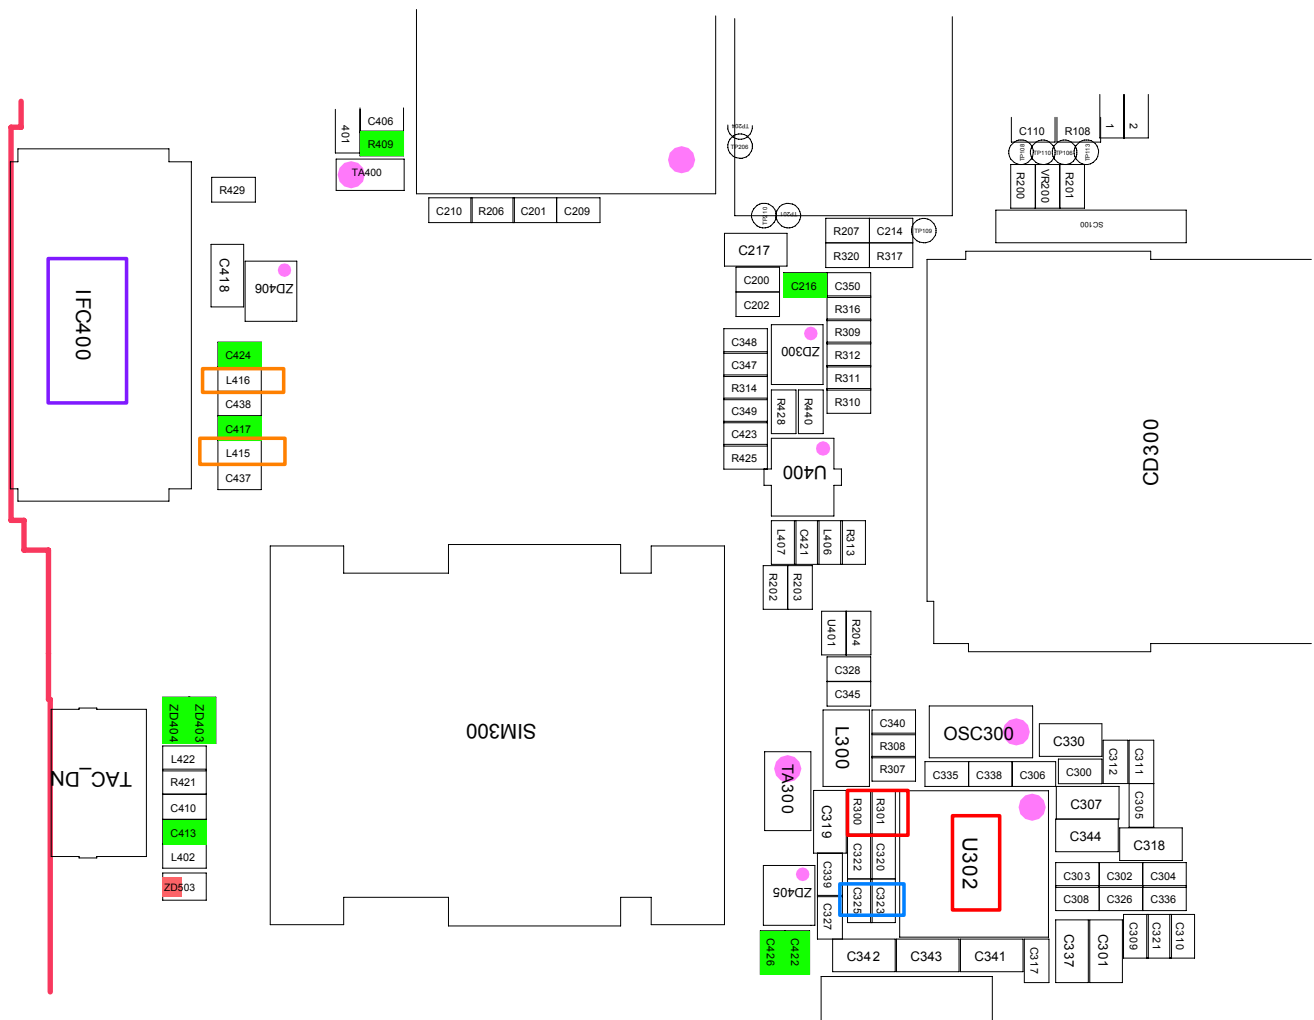

9-1-9.照相机部分（Mega 和 VGA）

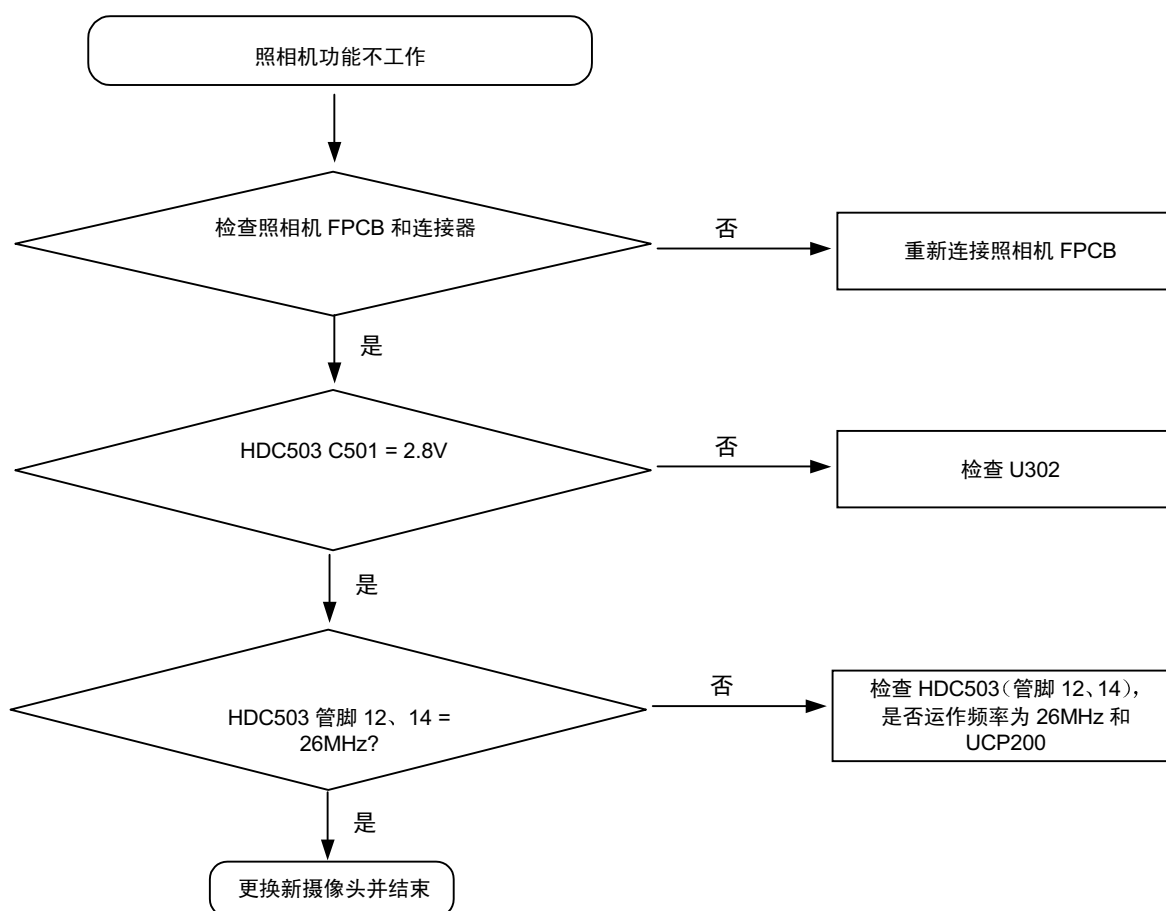


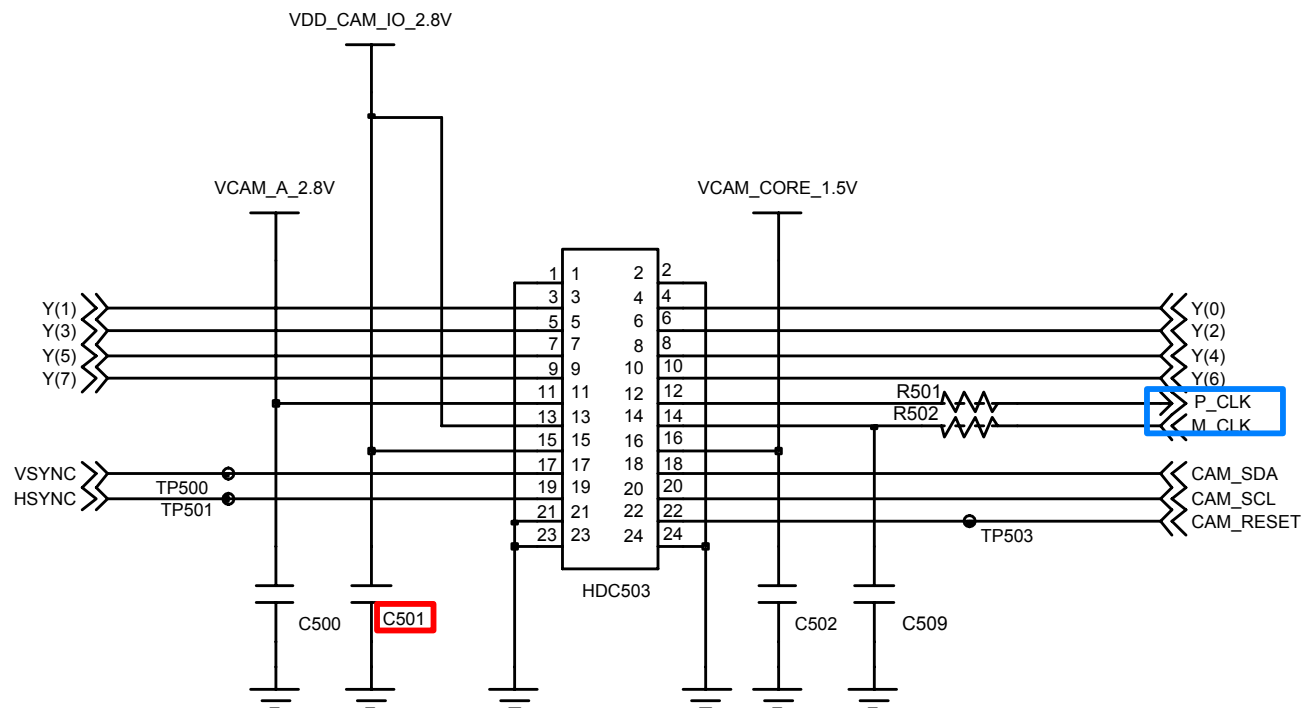



9-2.射频

**在测试射频链时，检查所有射频设备，电阻器，导体及电容。


9-2-1.GSM850/GSM900 发射器

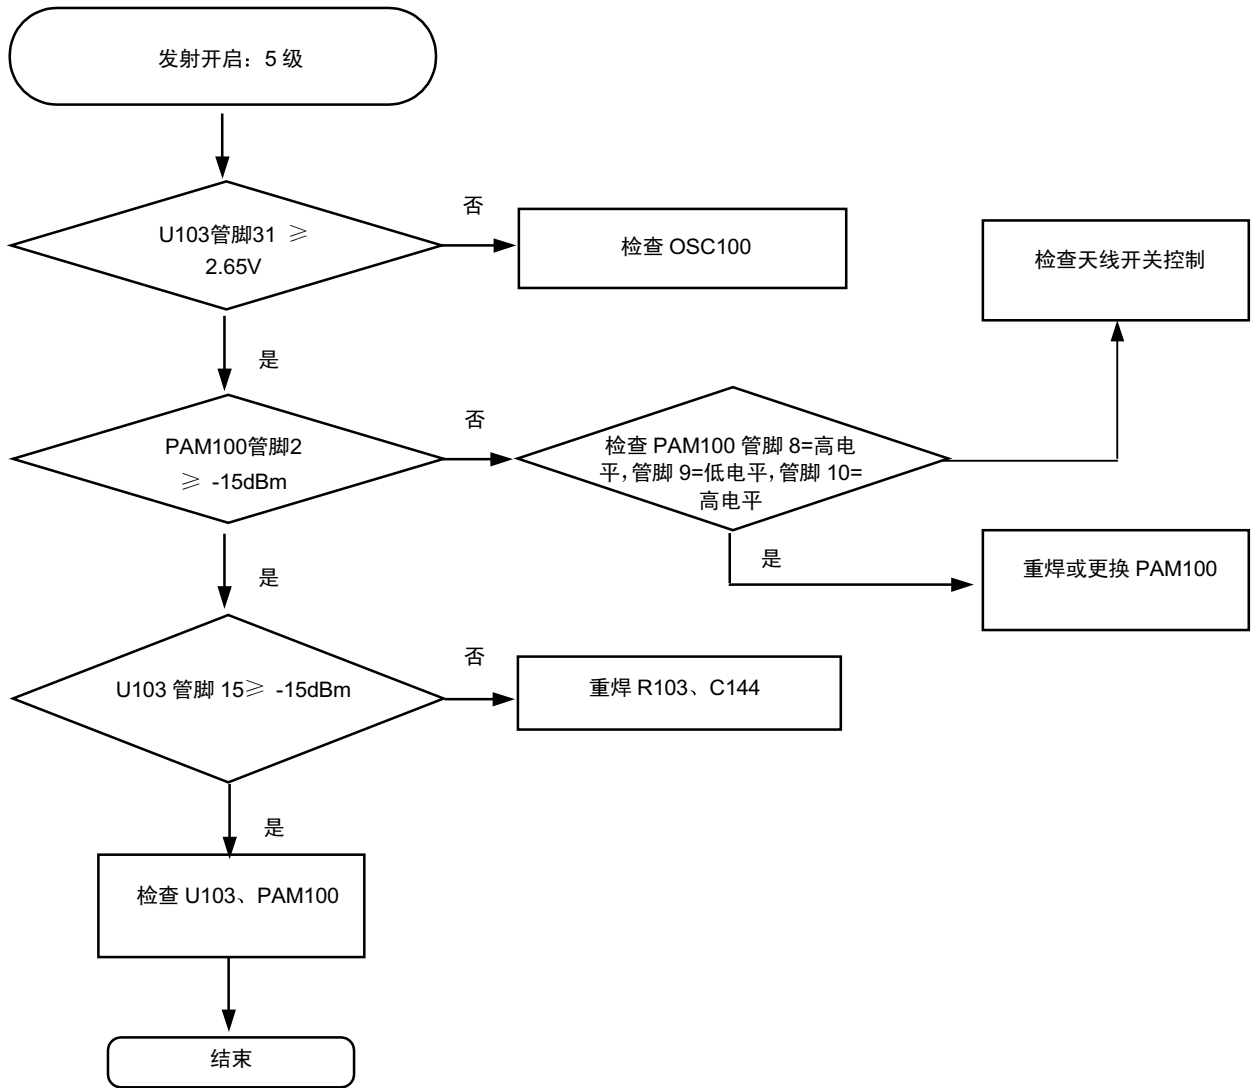


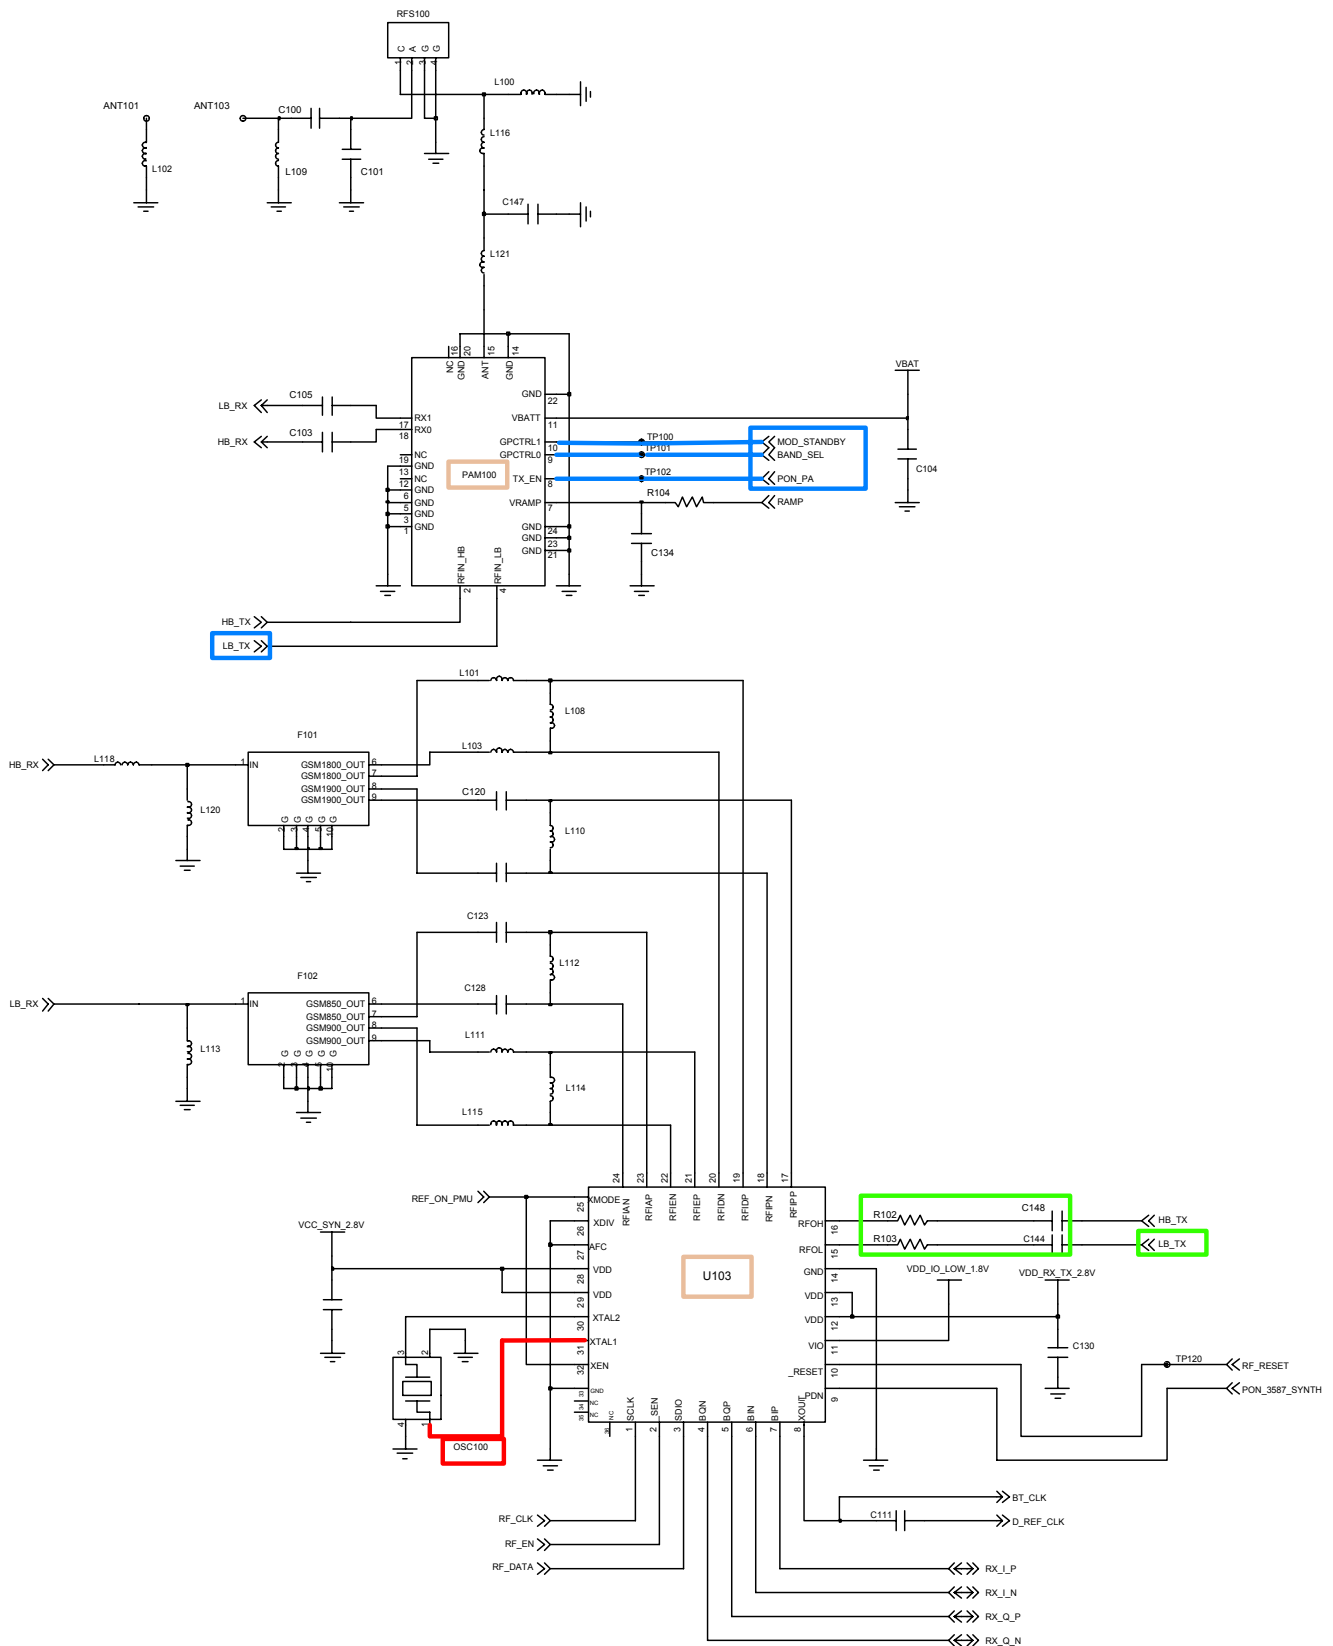


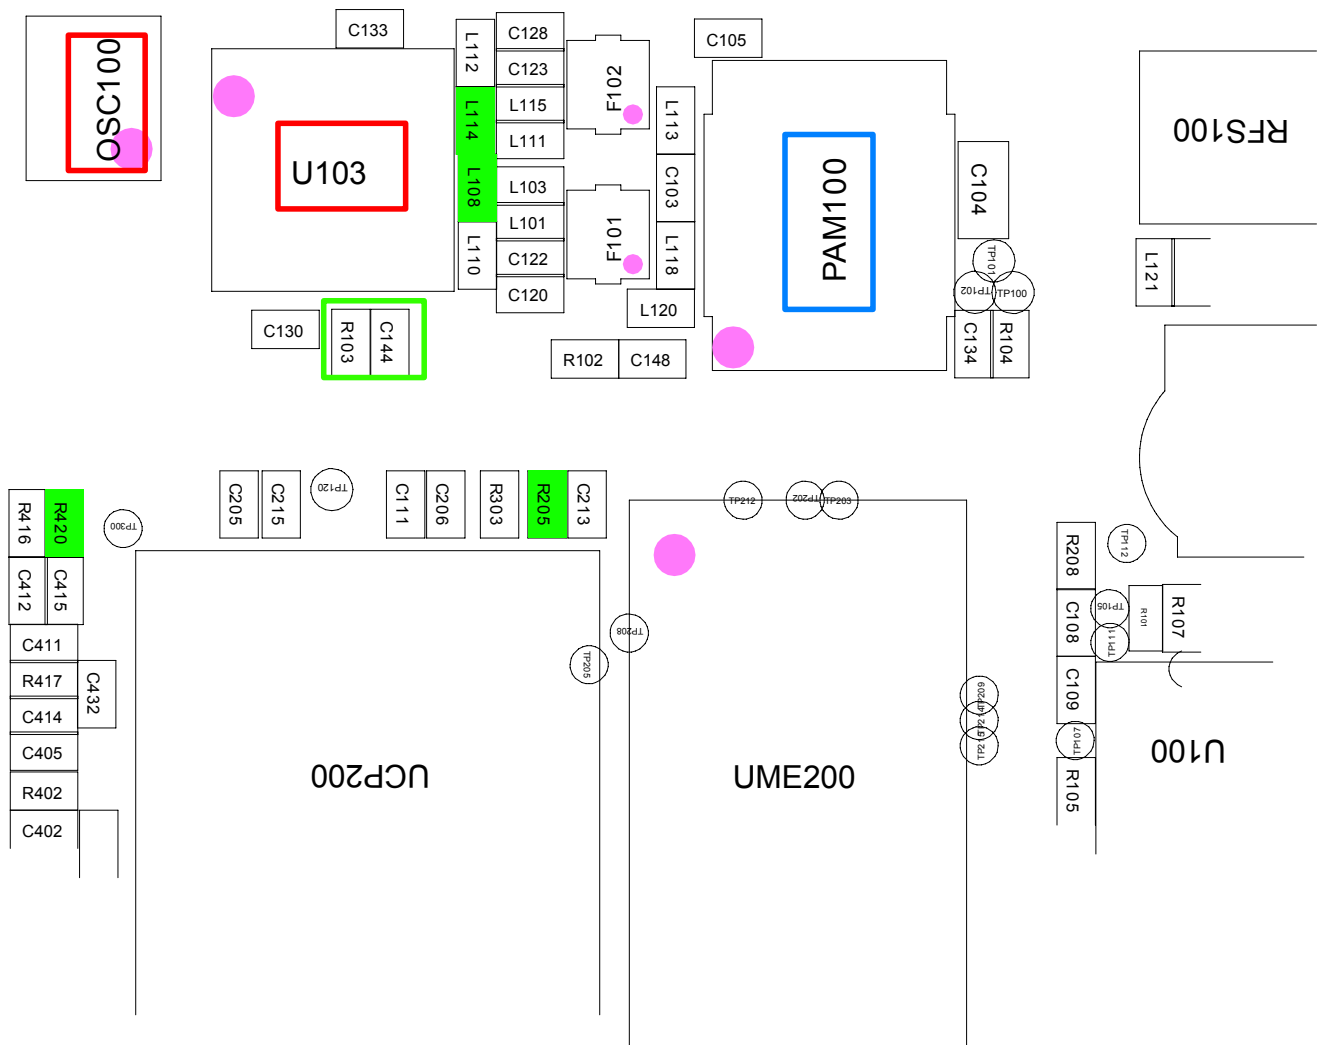


9-2-2.DCS1800/PCS1900 发射器

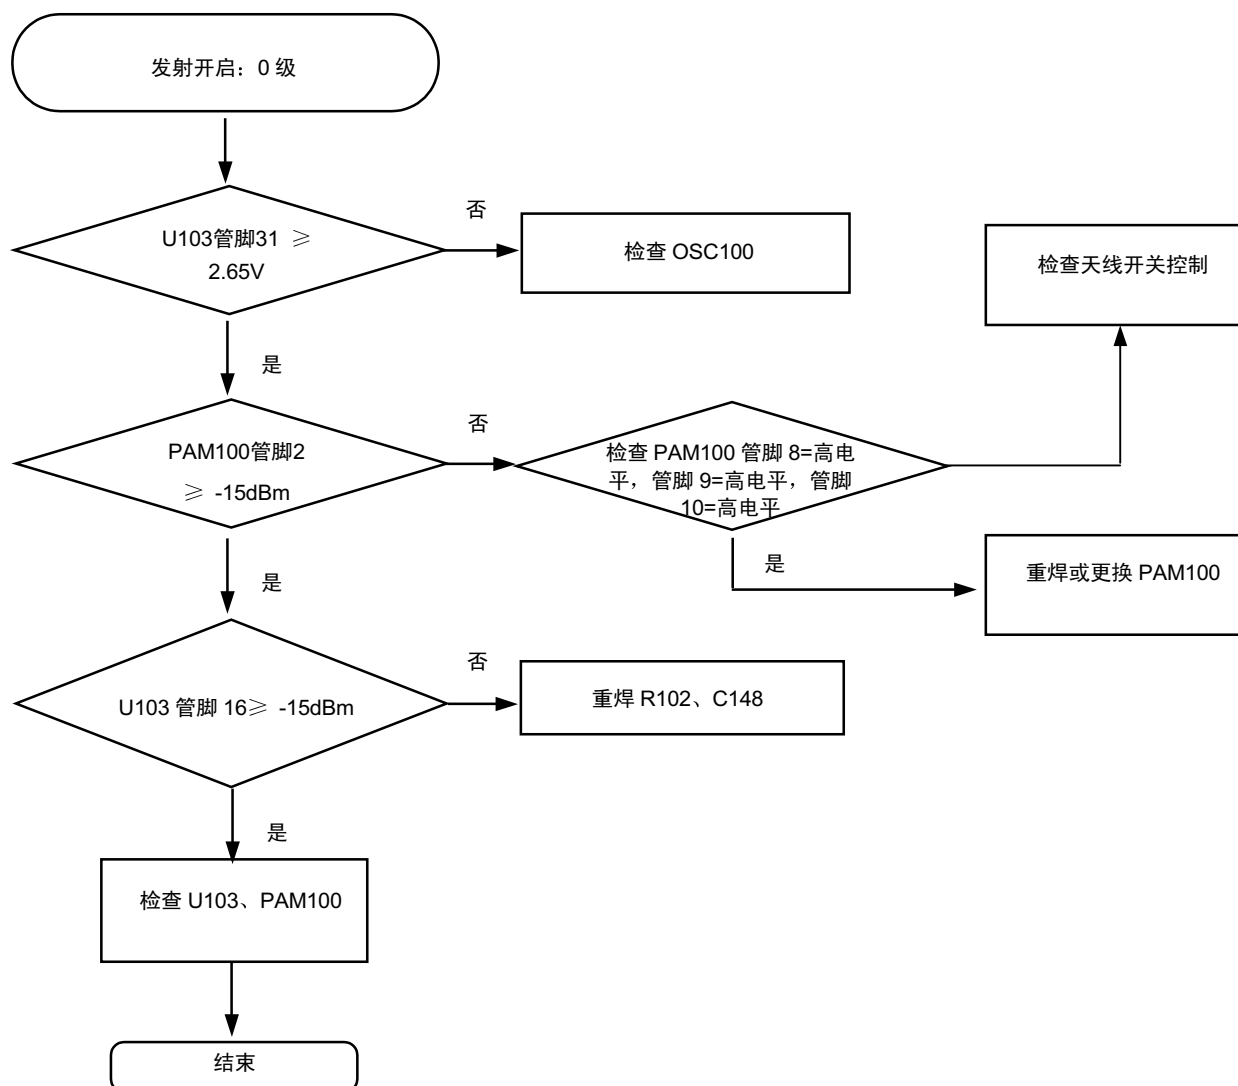


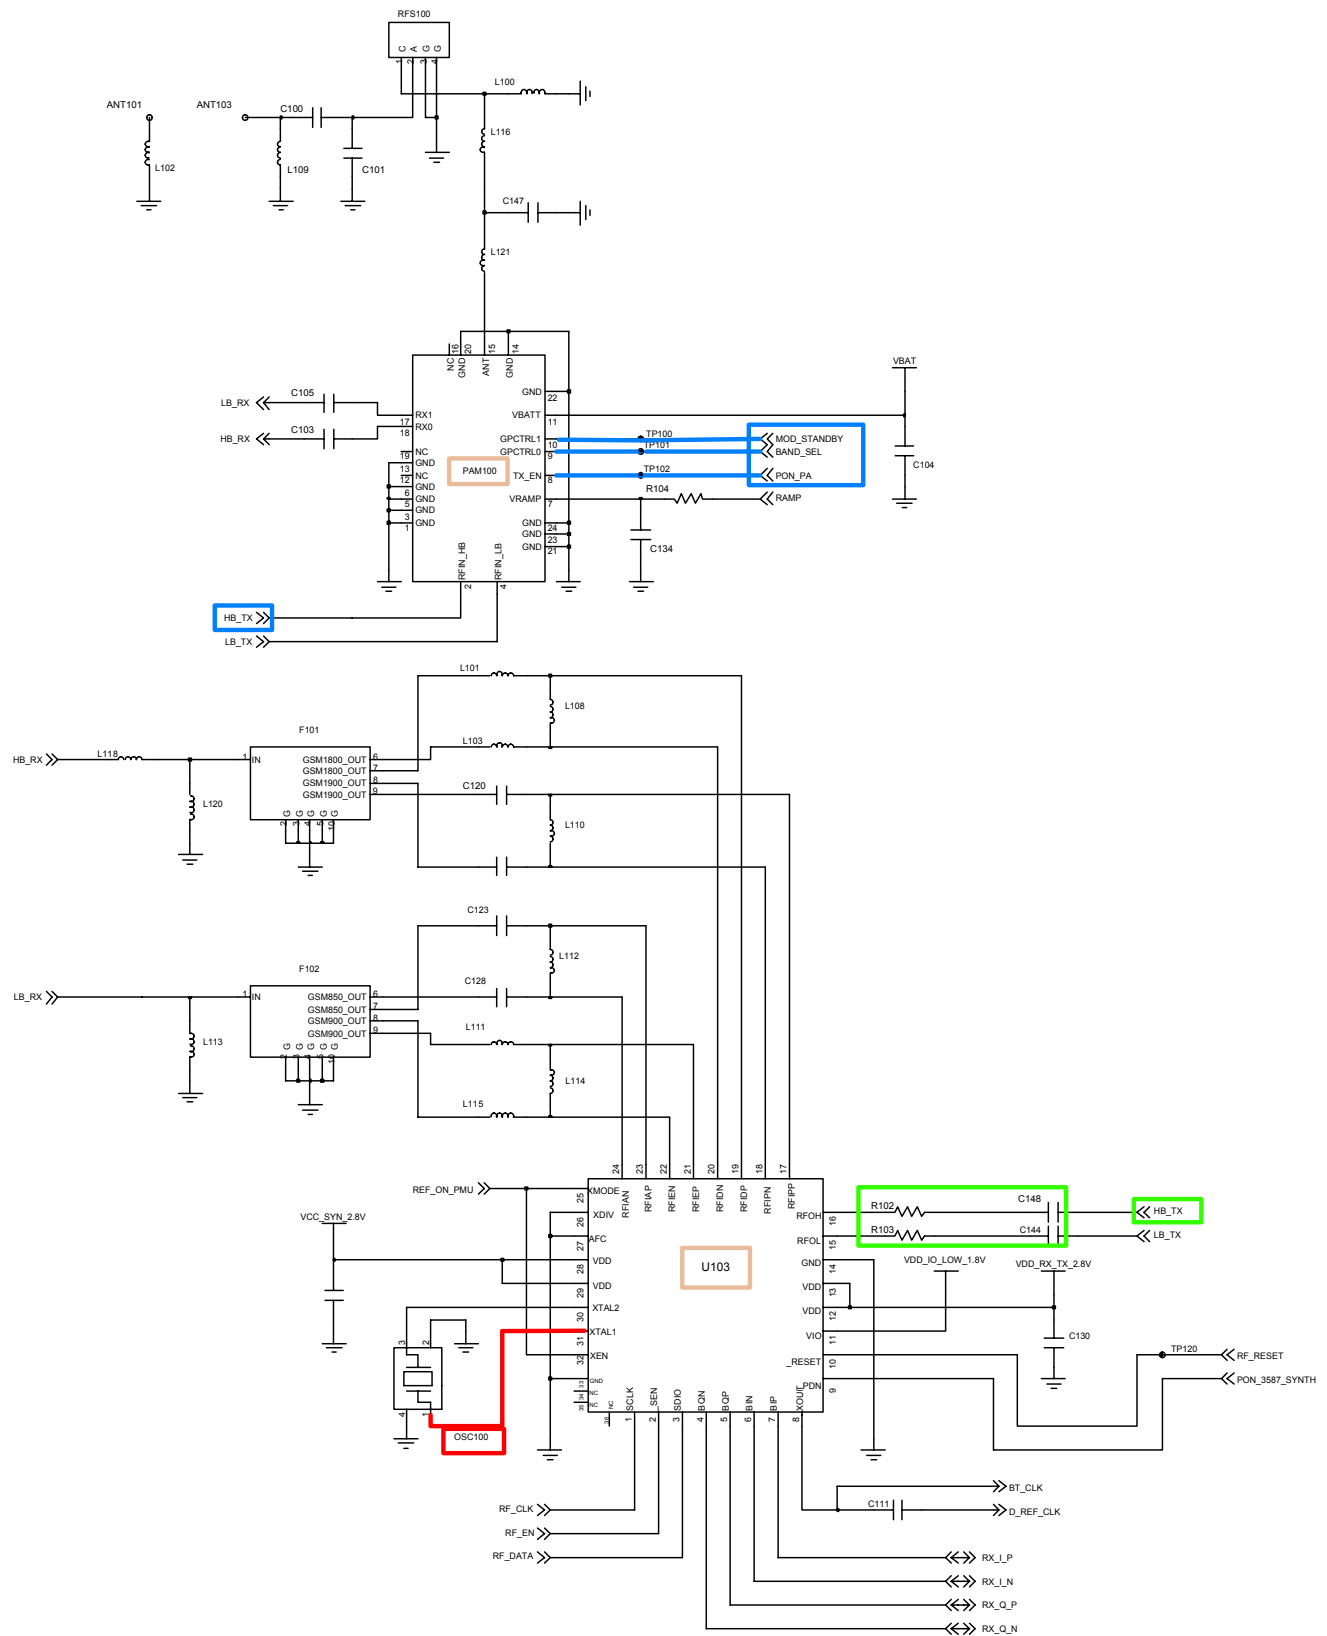


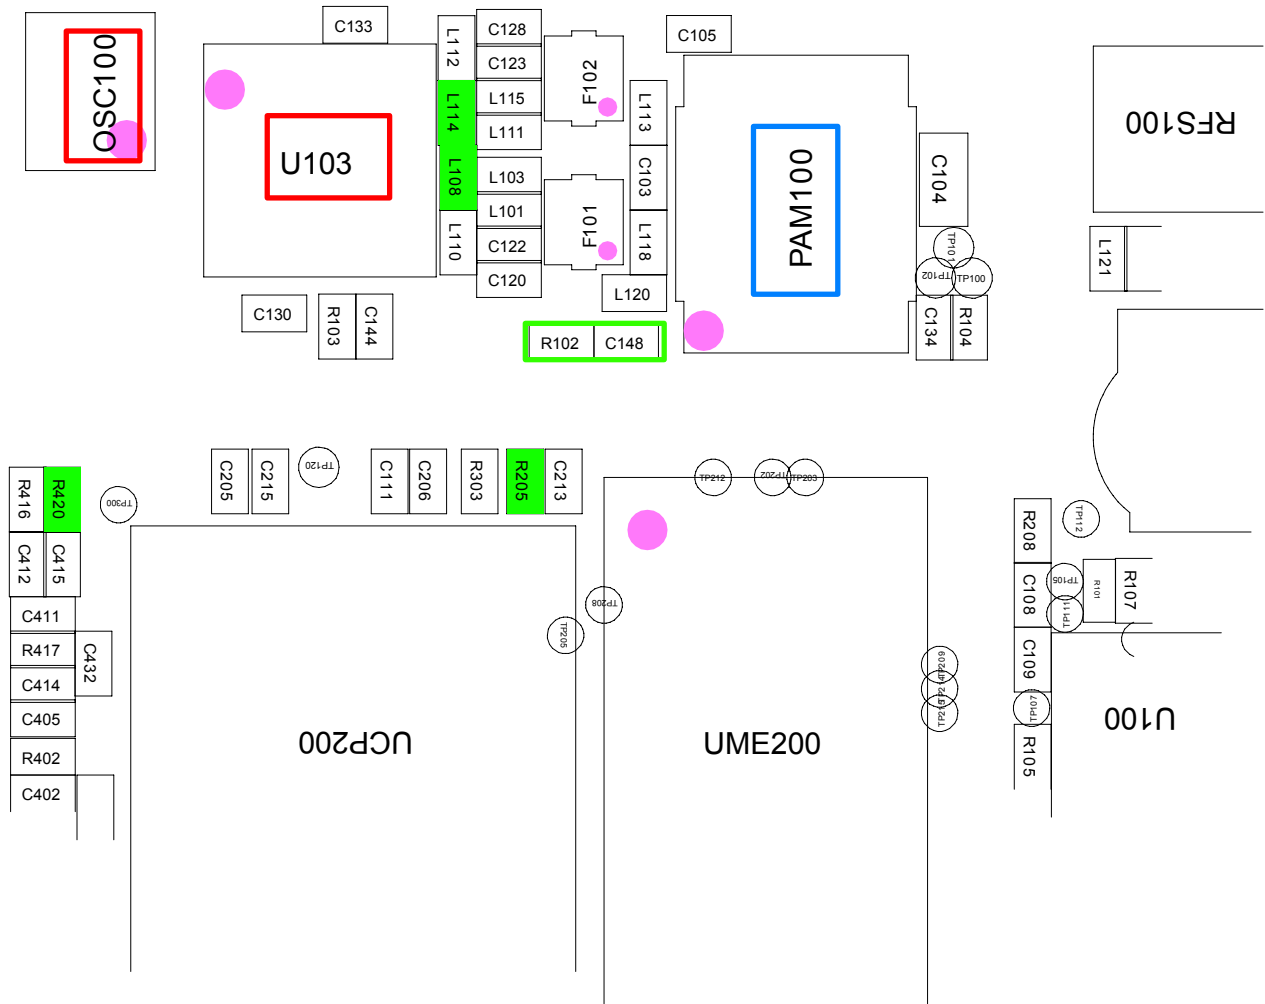


9-2-3.GSM850 接收器

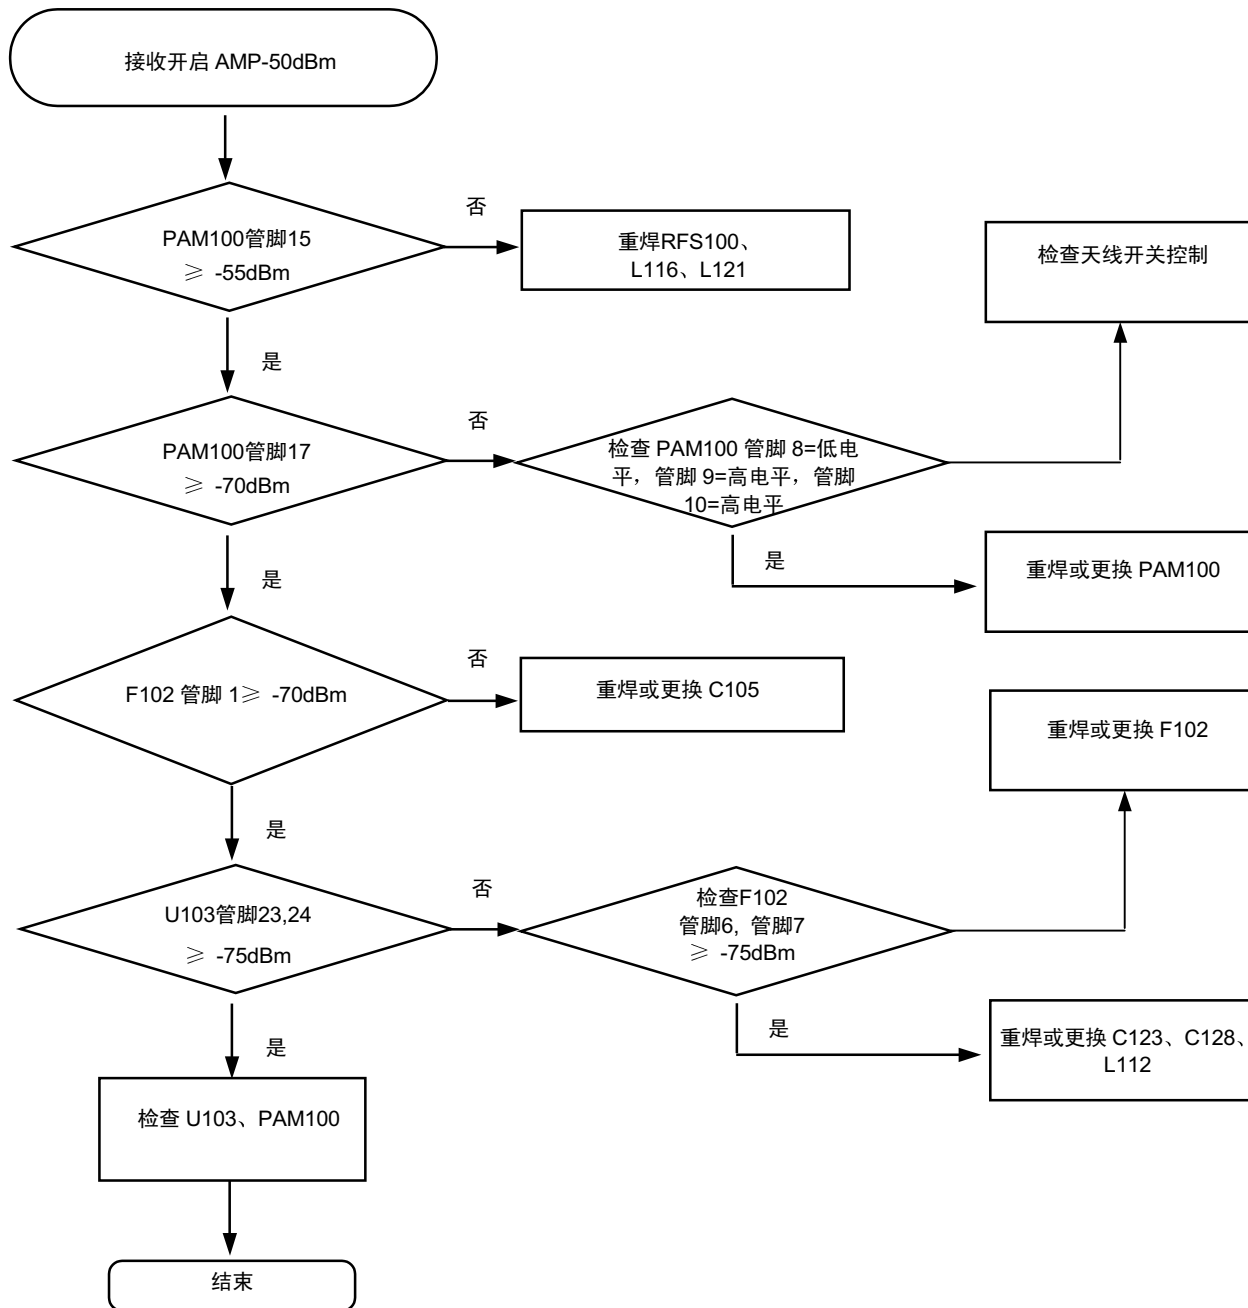


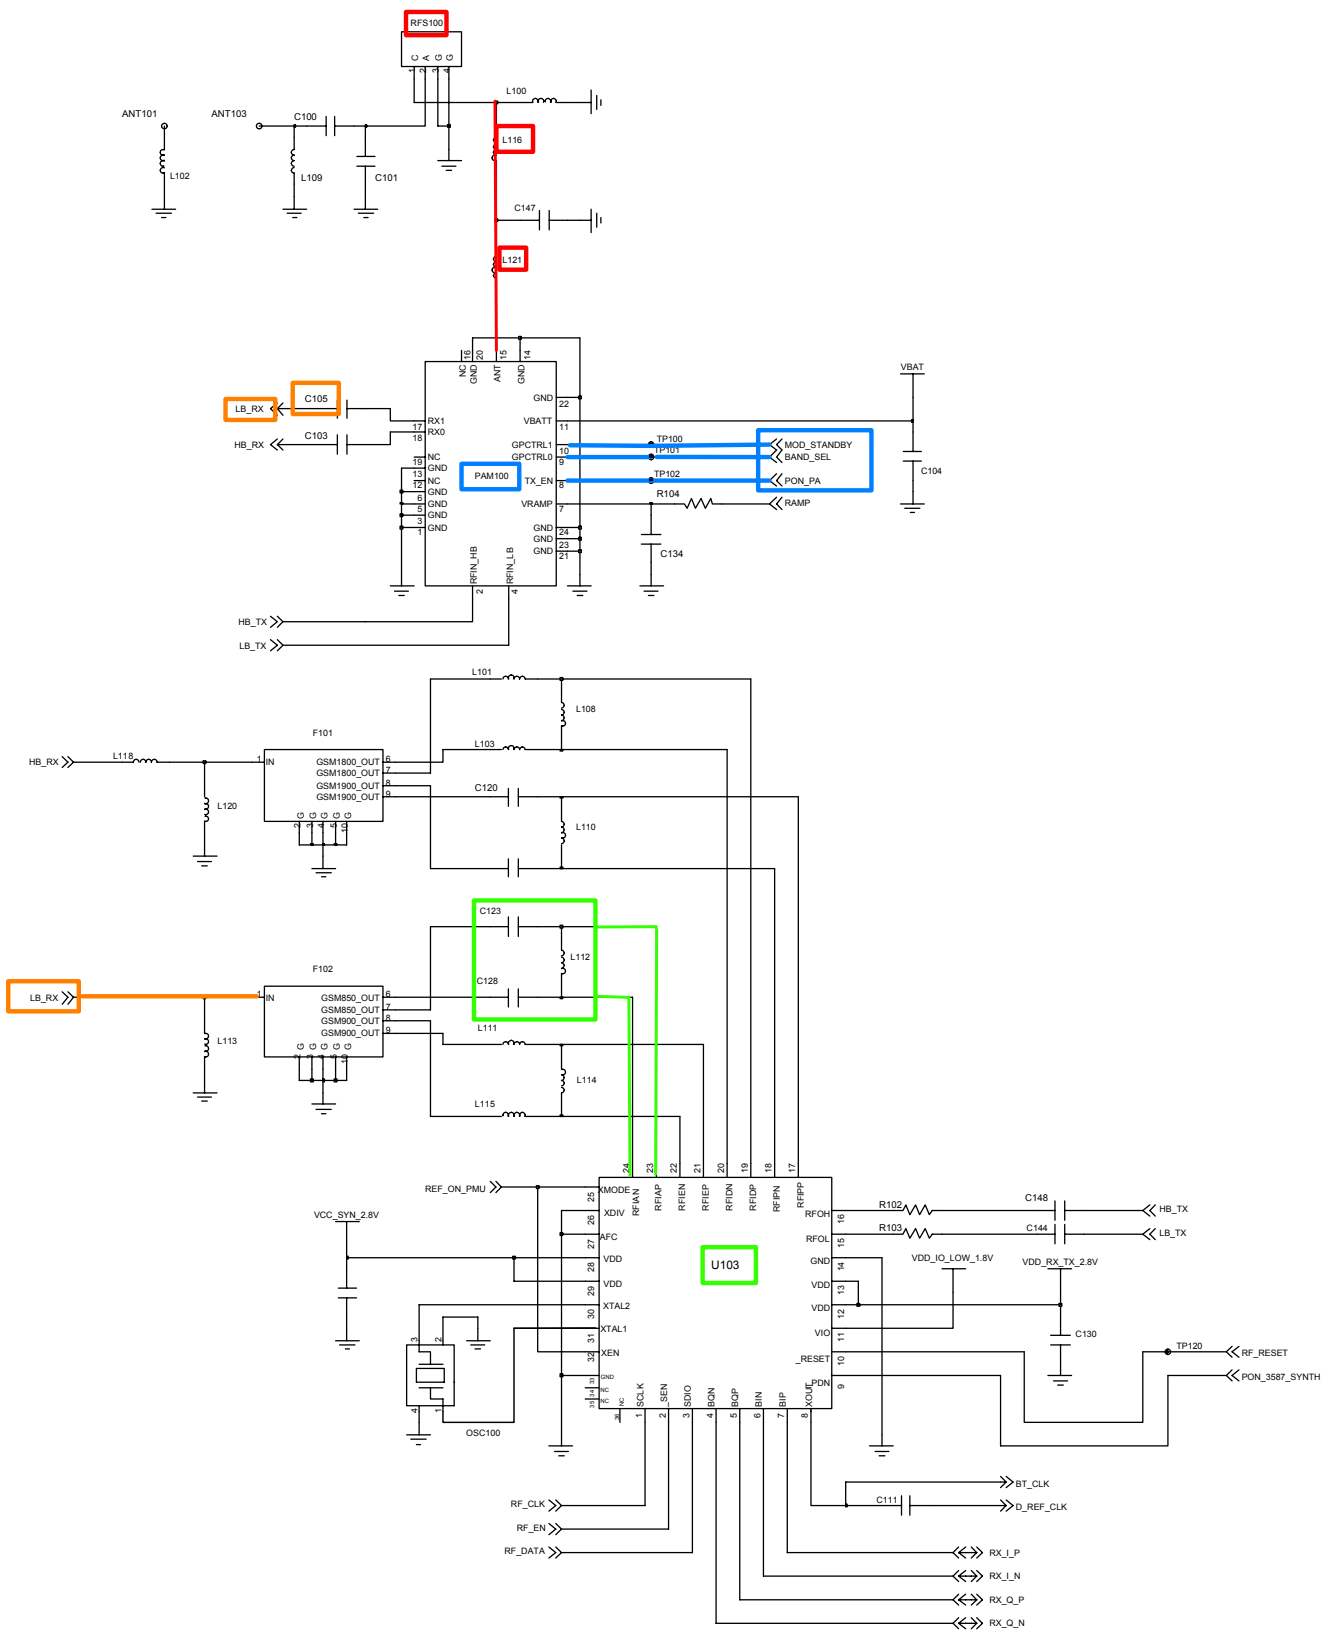


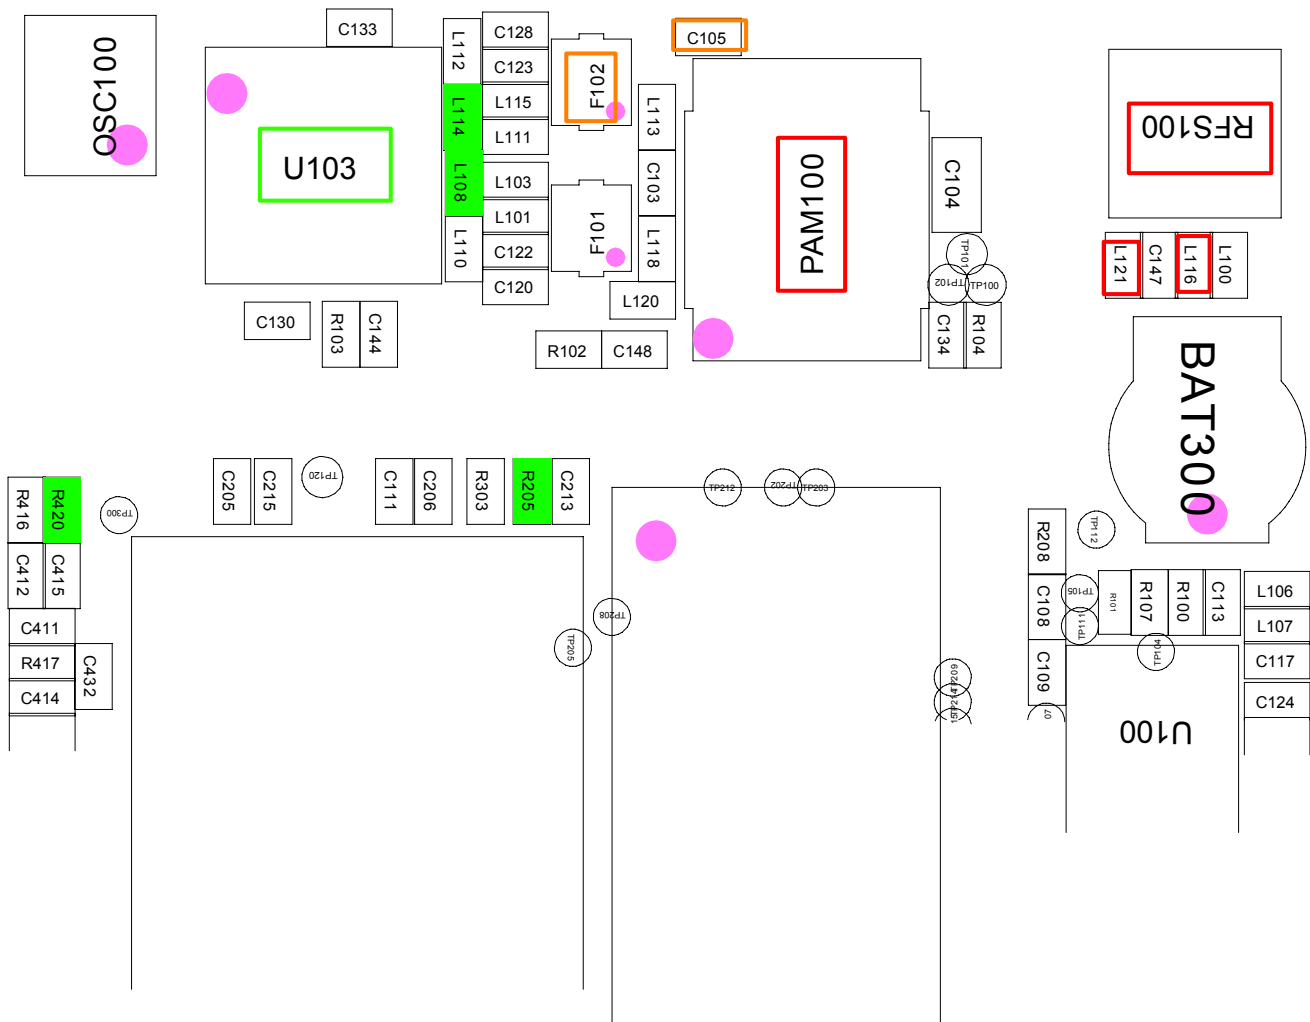


9-2-4.GSM900 接收器

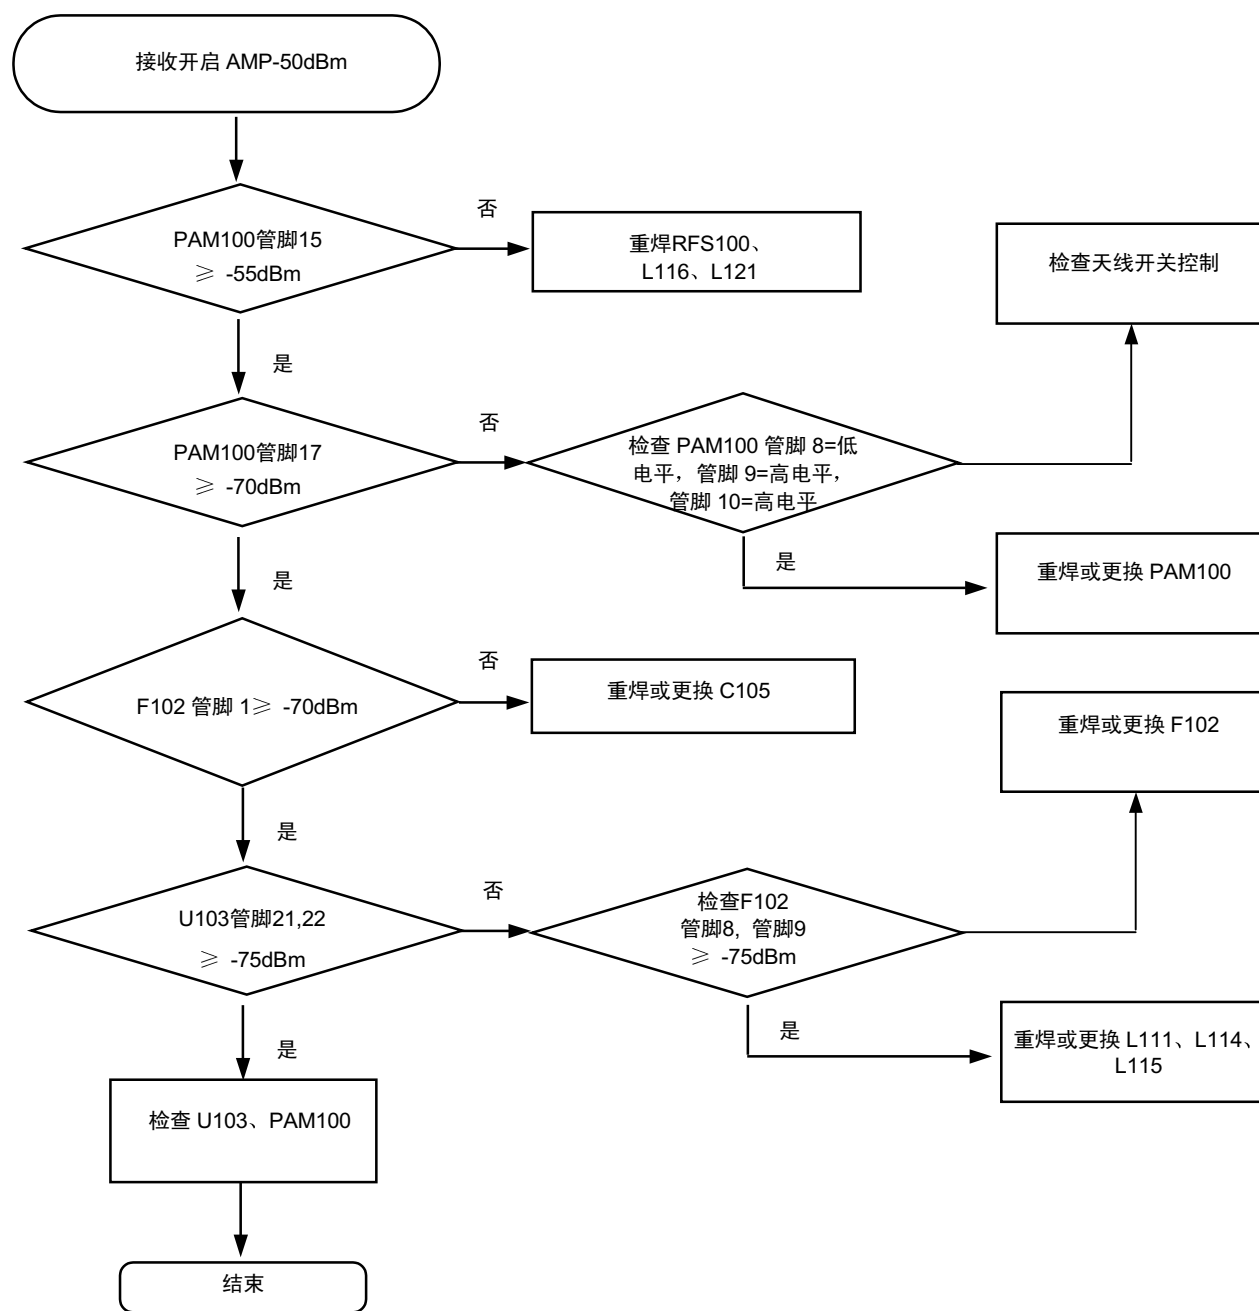


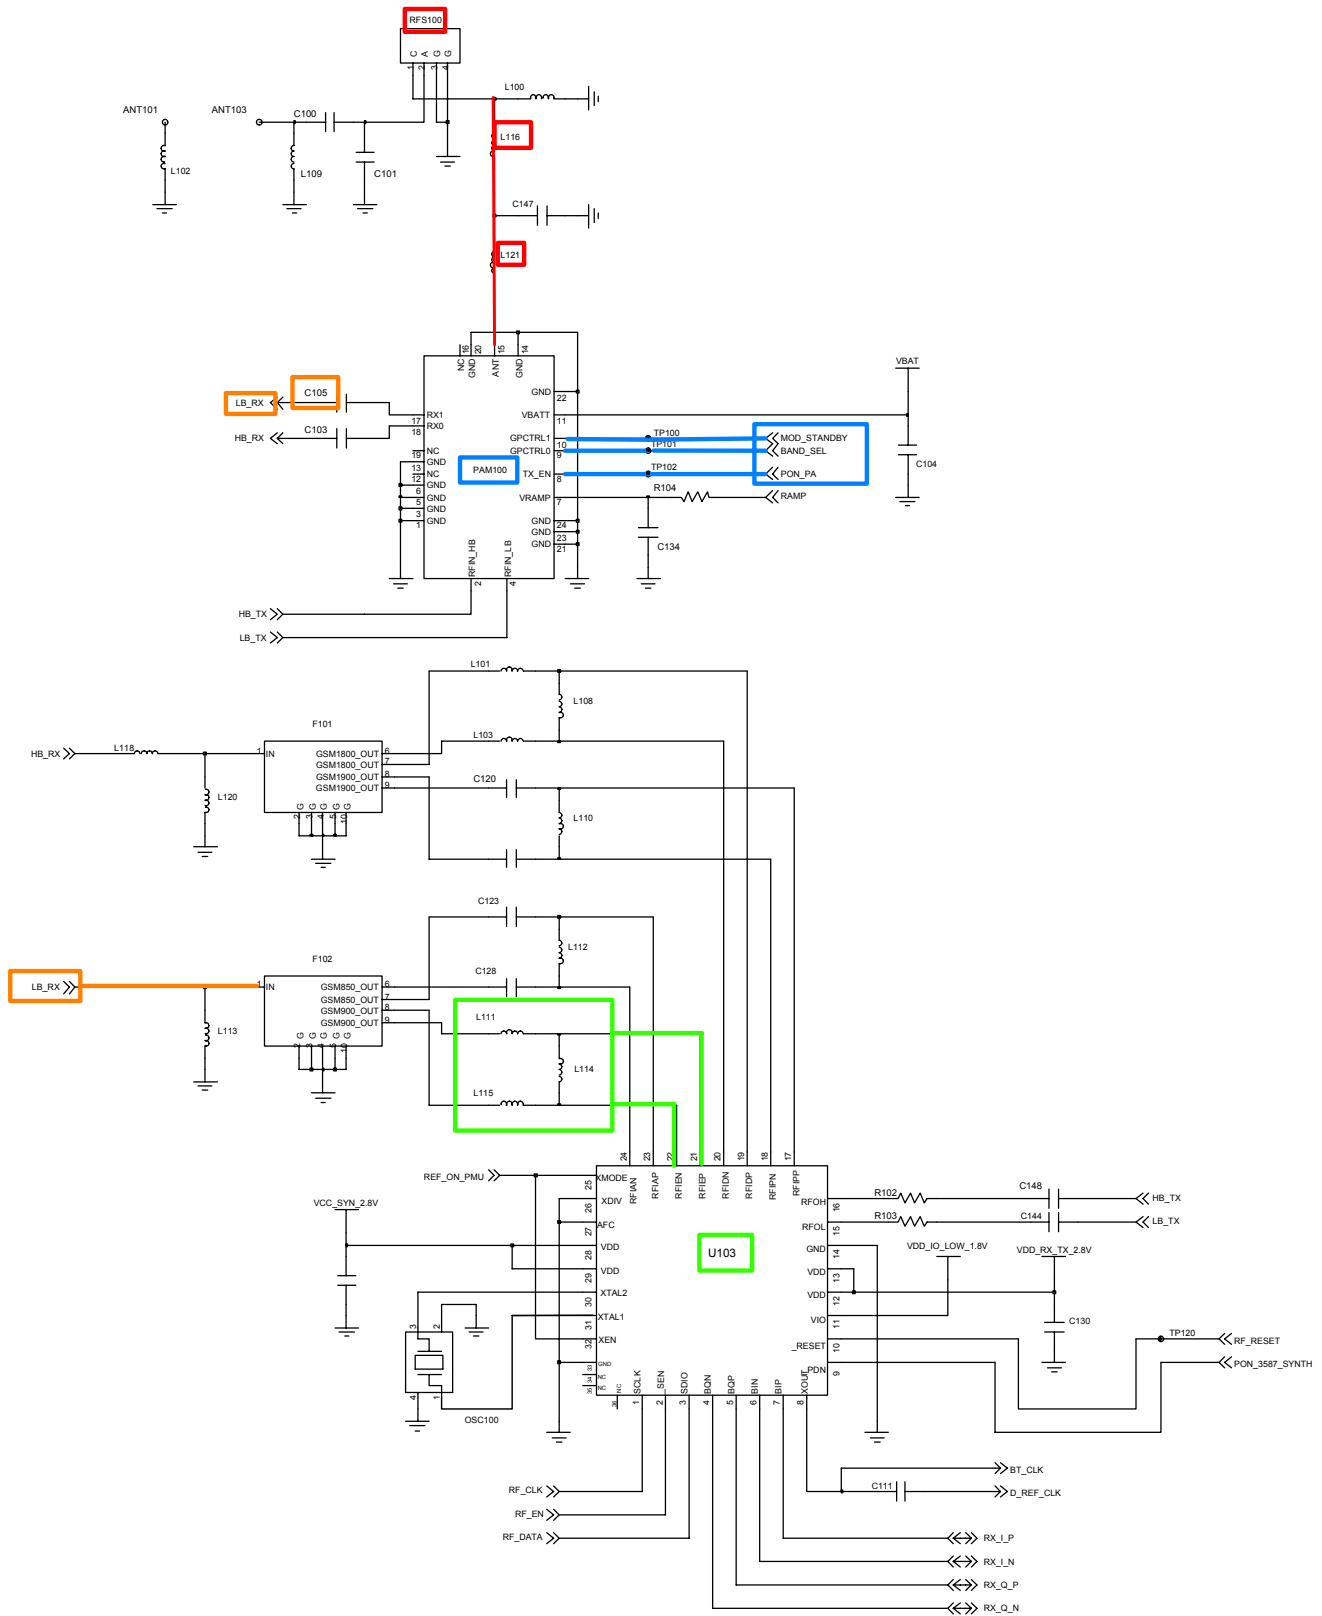


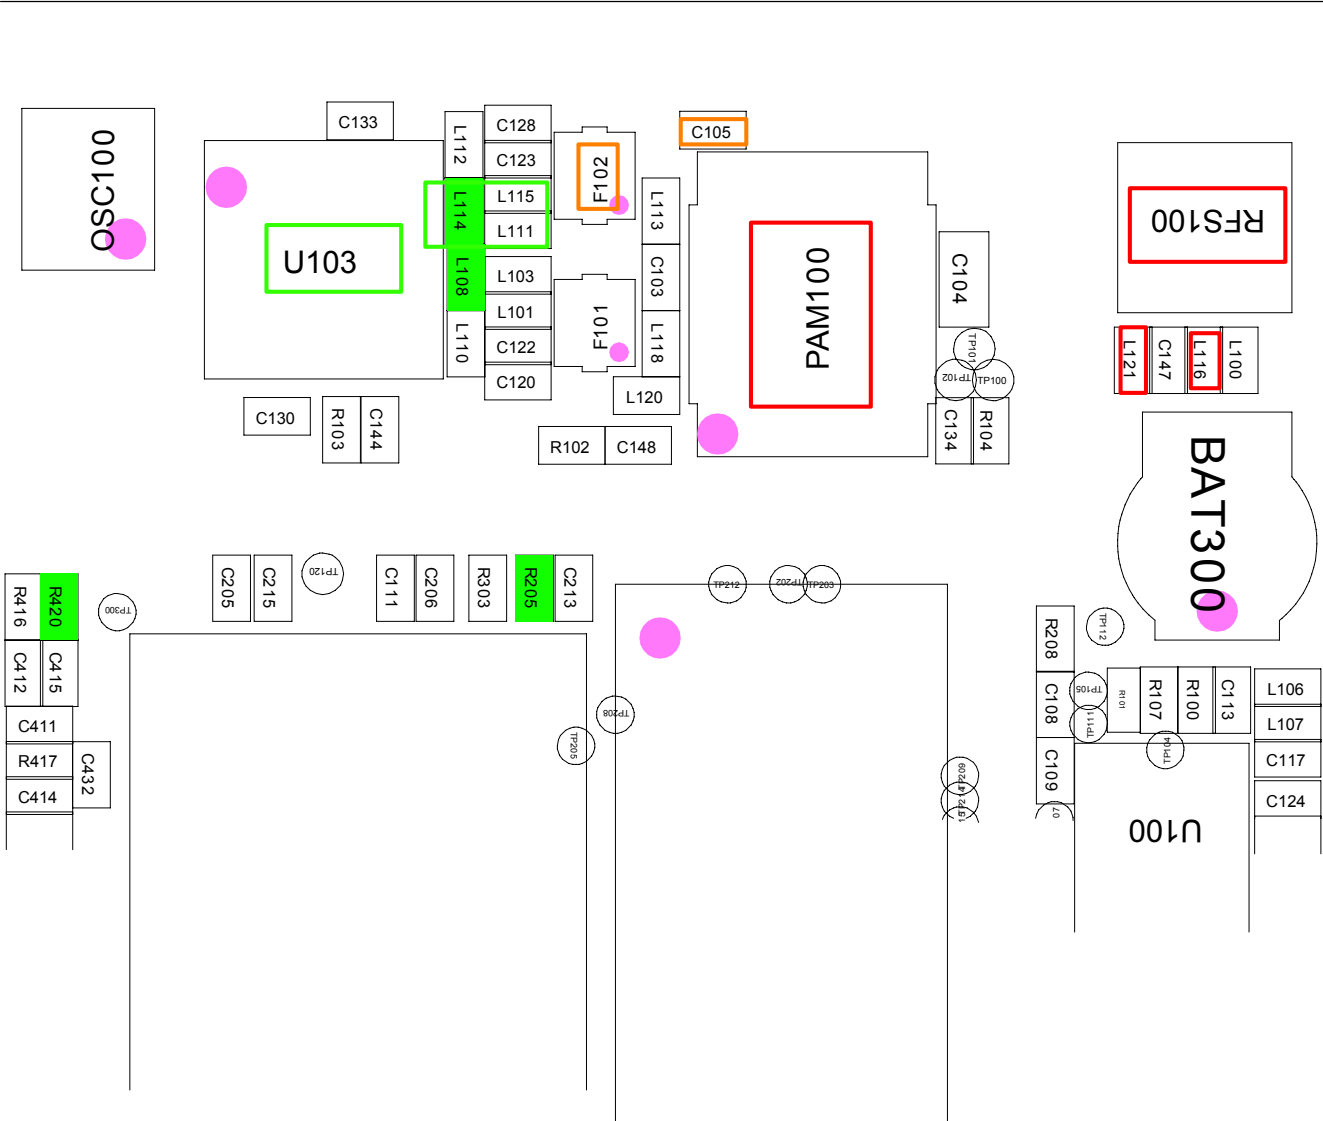


9-2-5.DCS1800 接收器

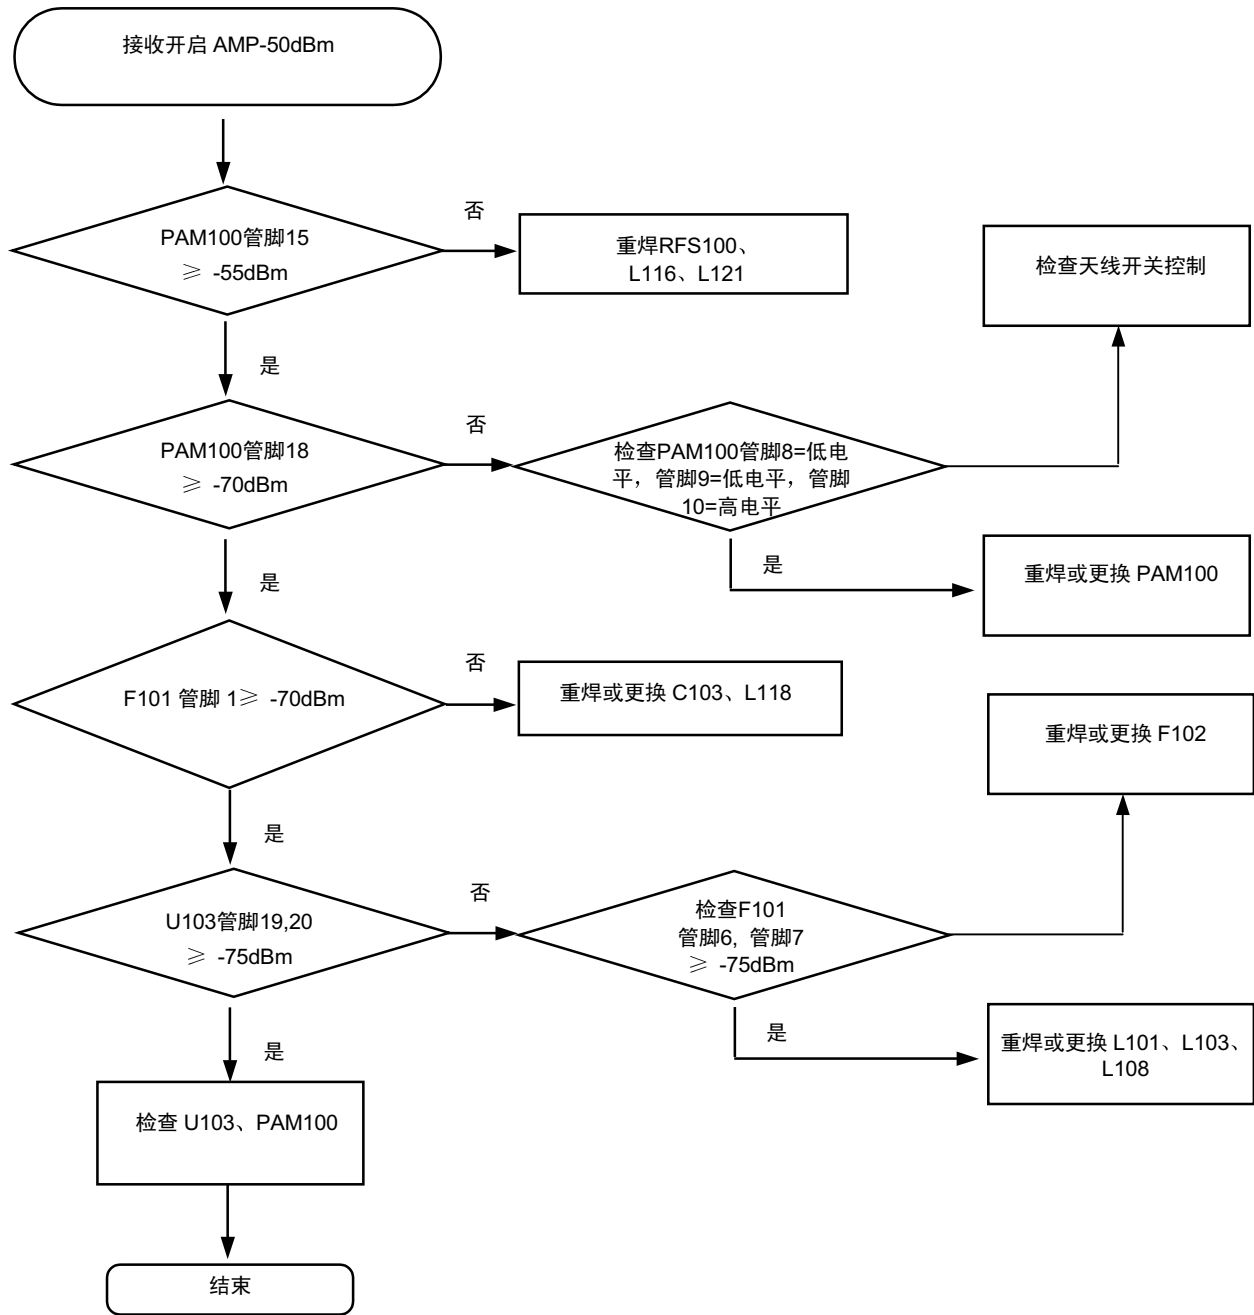


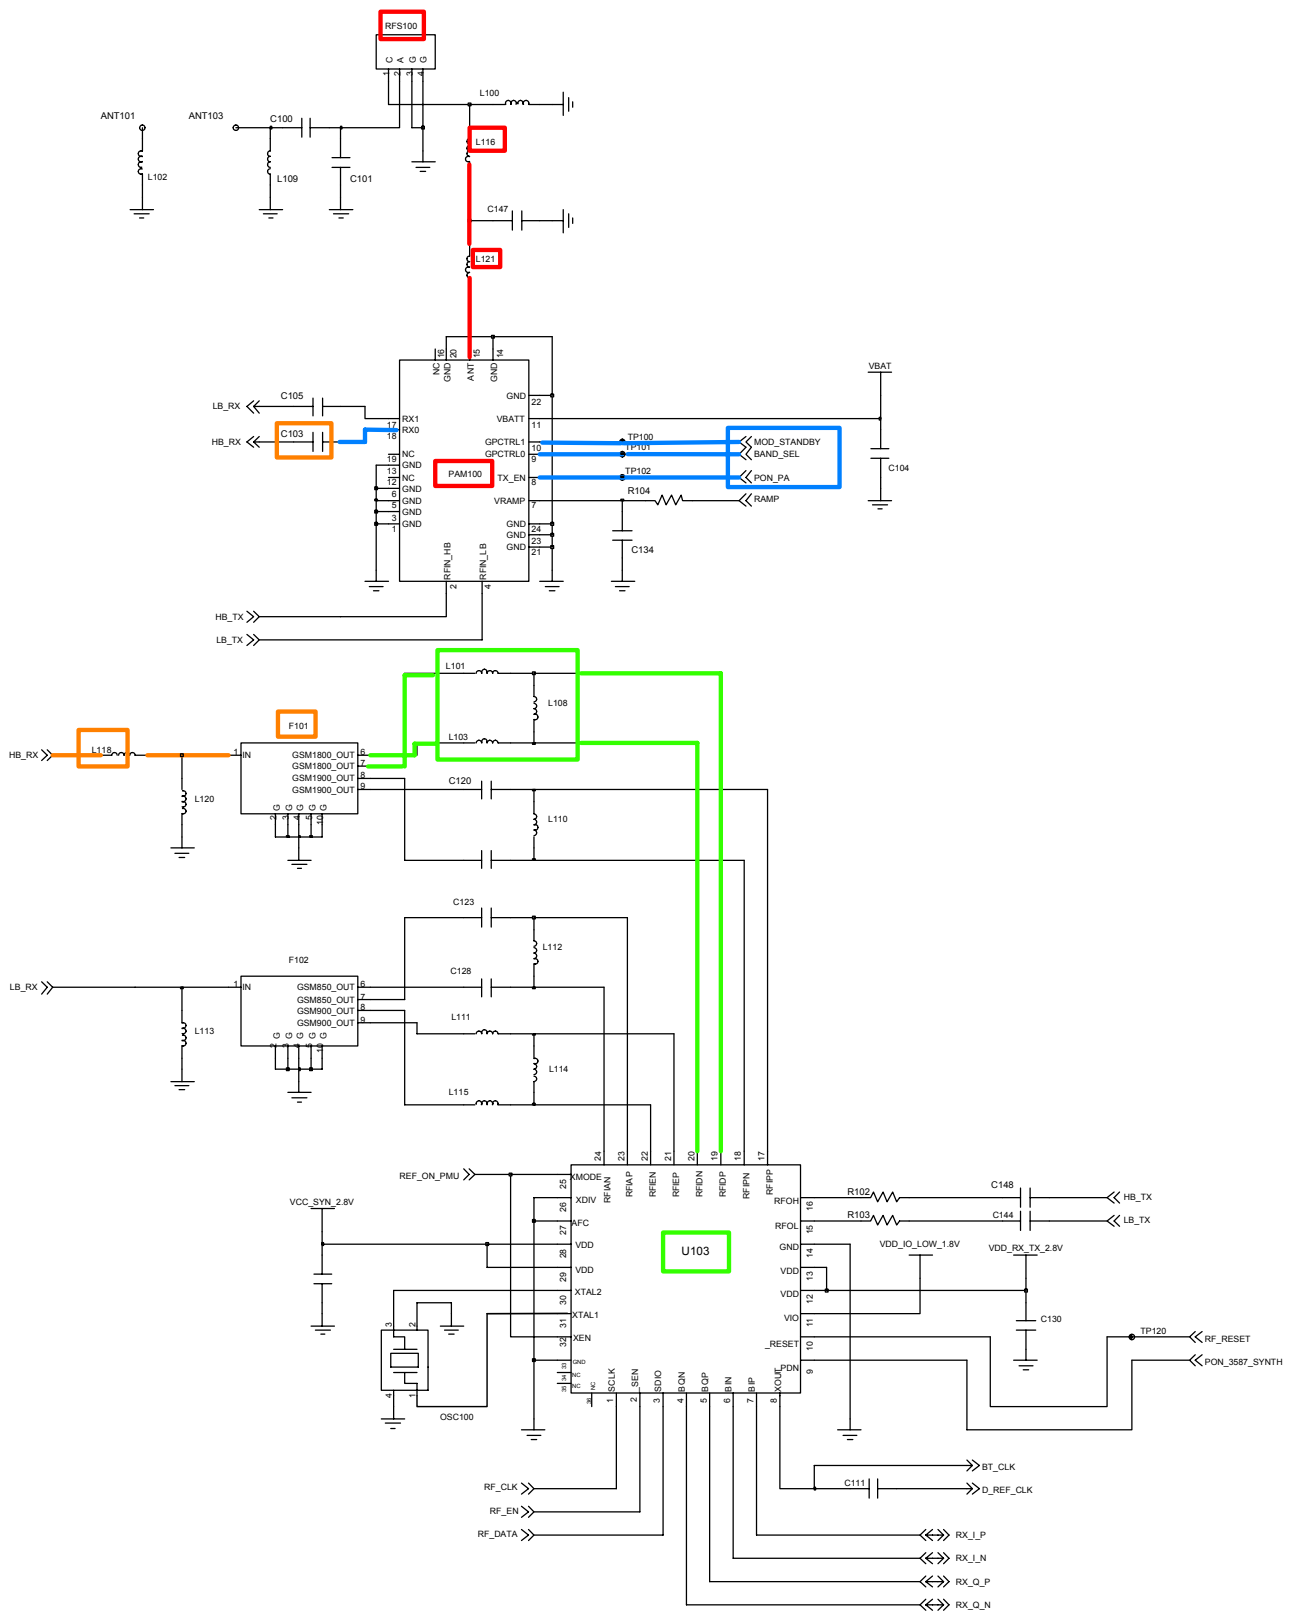

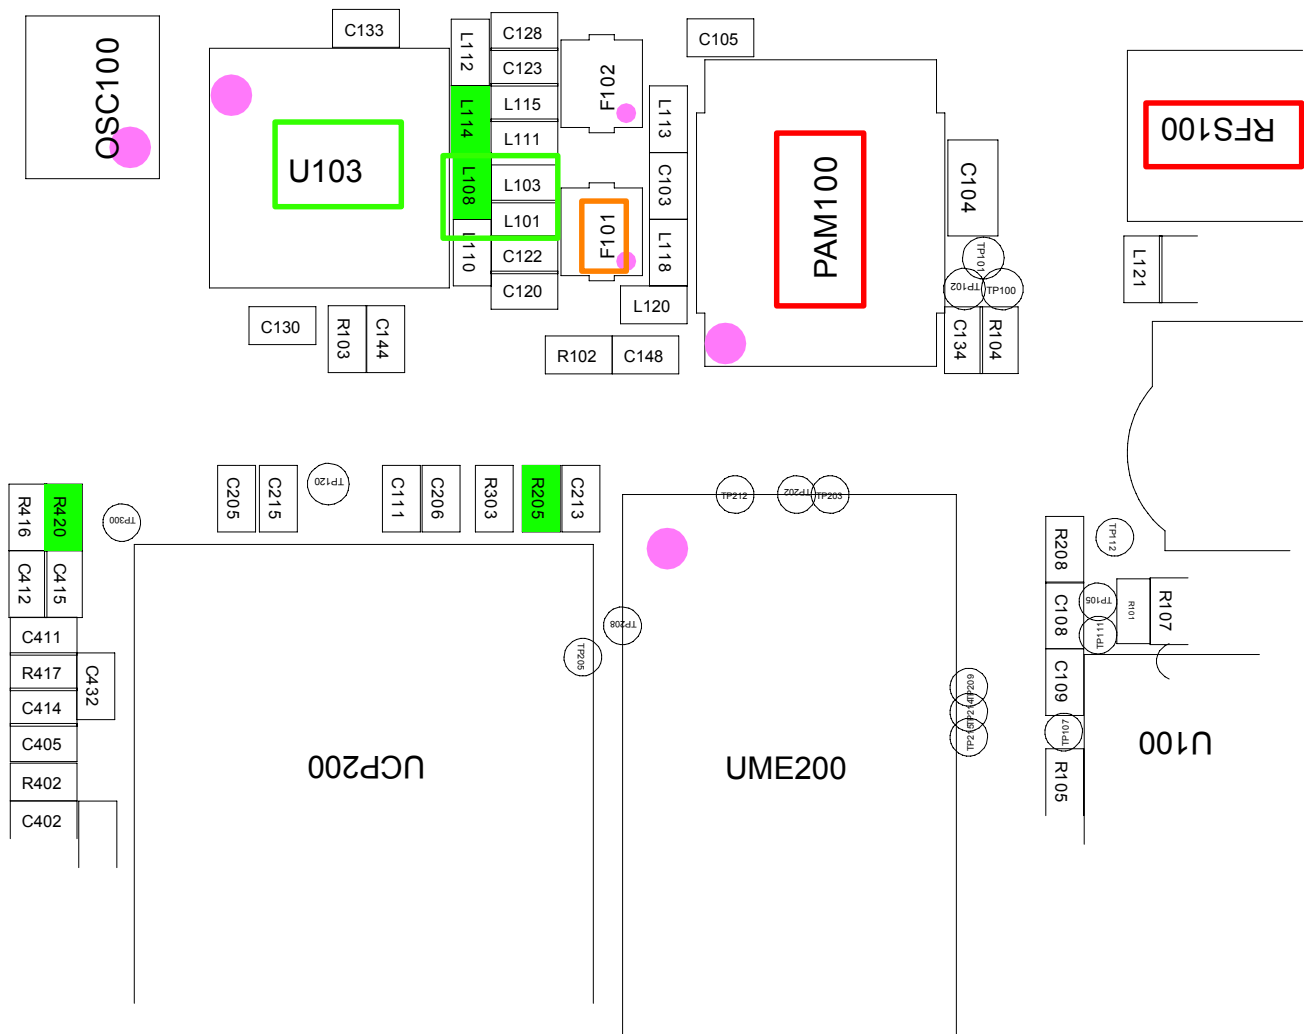



9-2-6.PCS1900 接收器

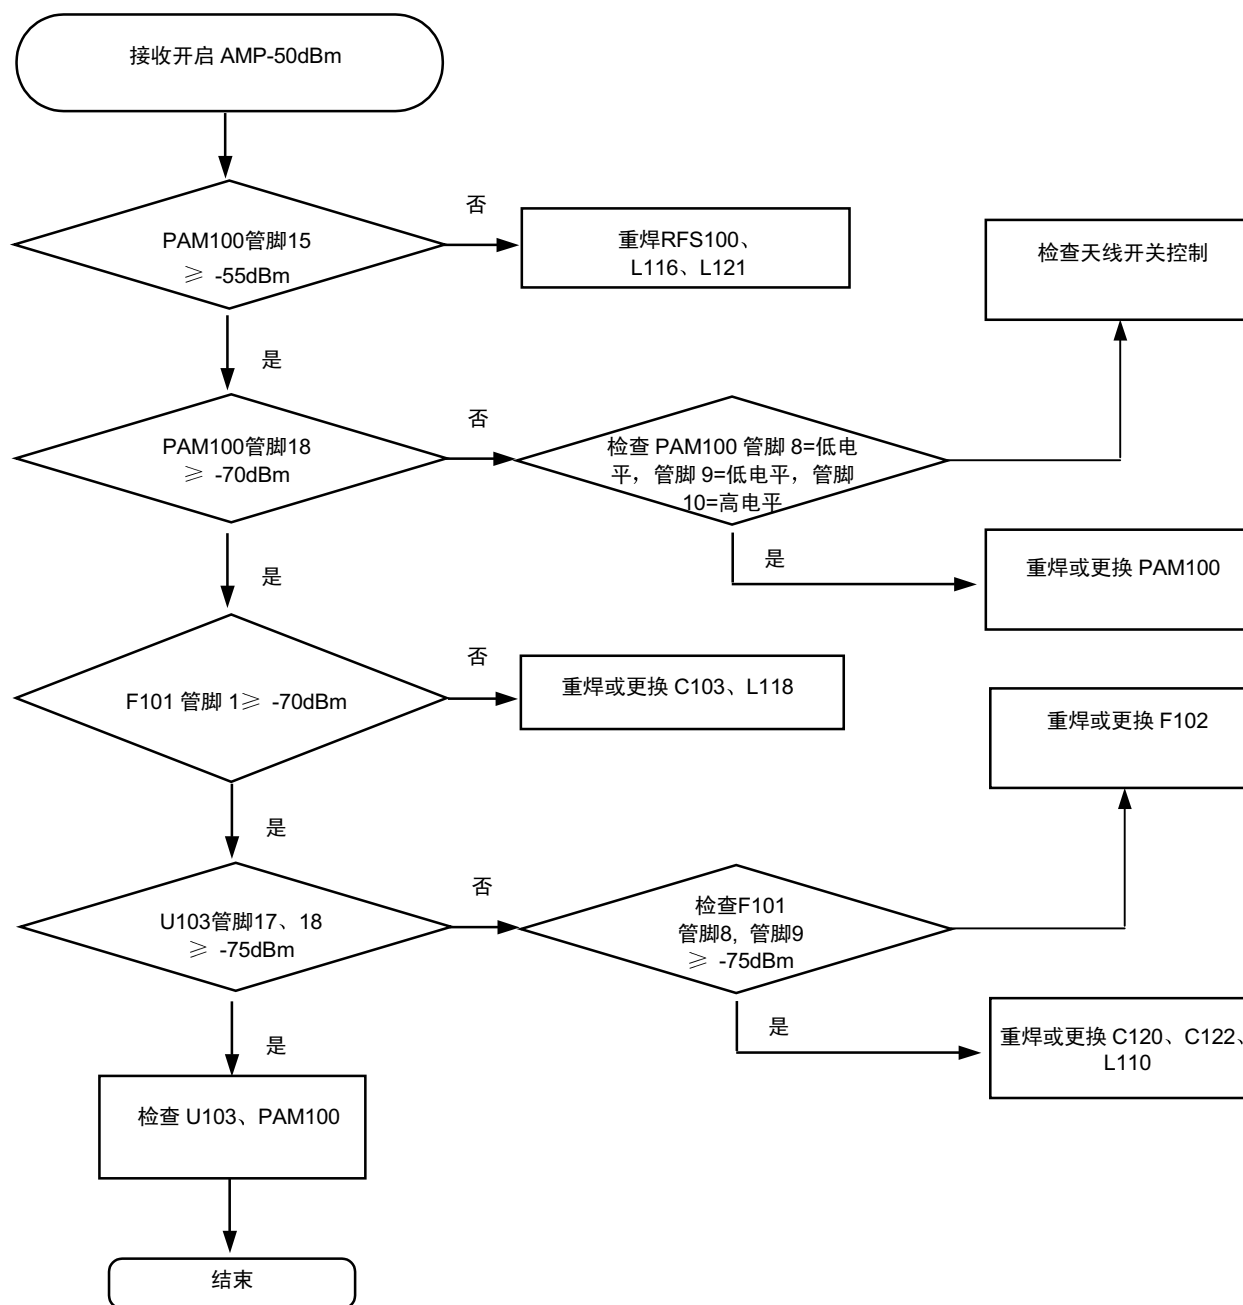


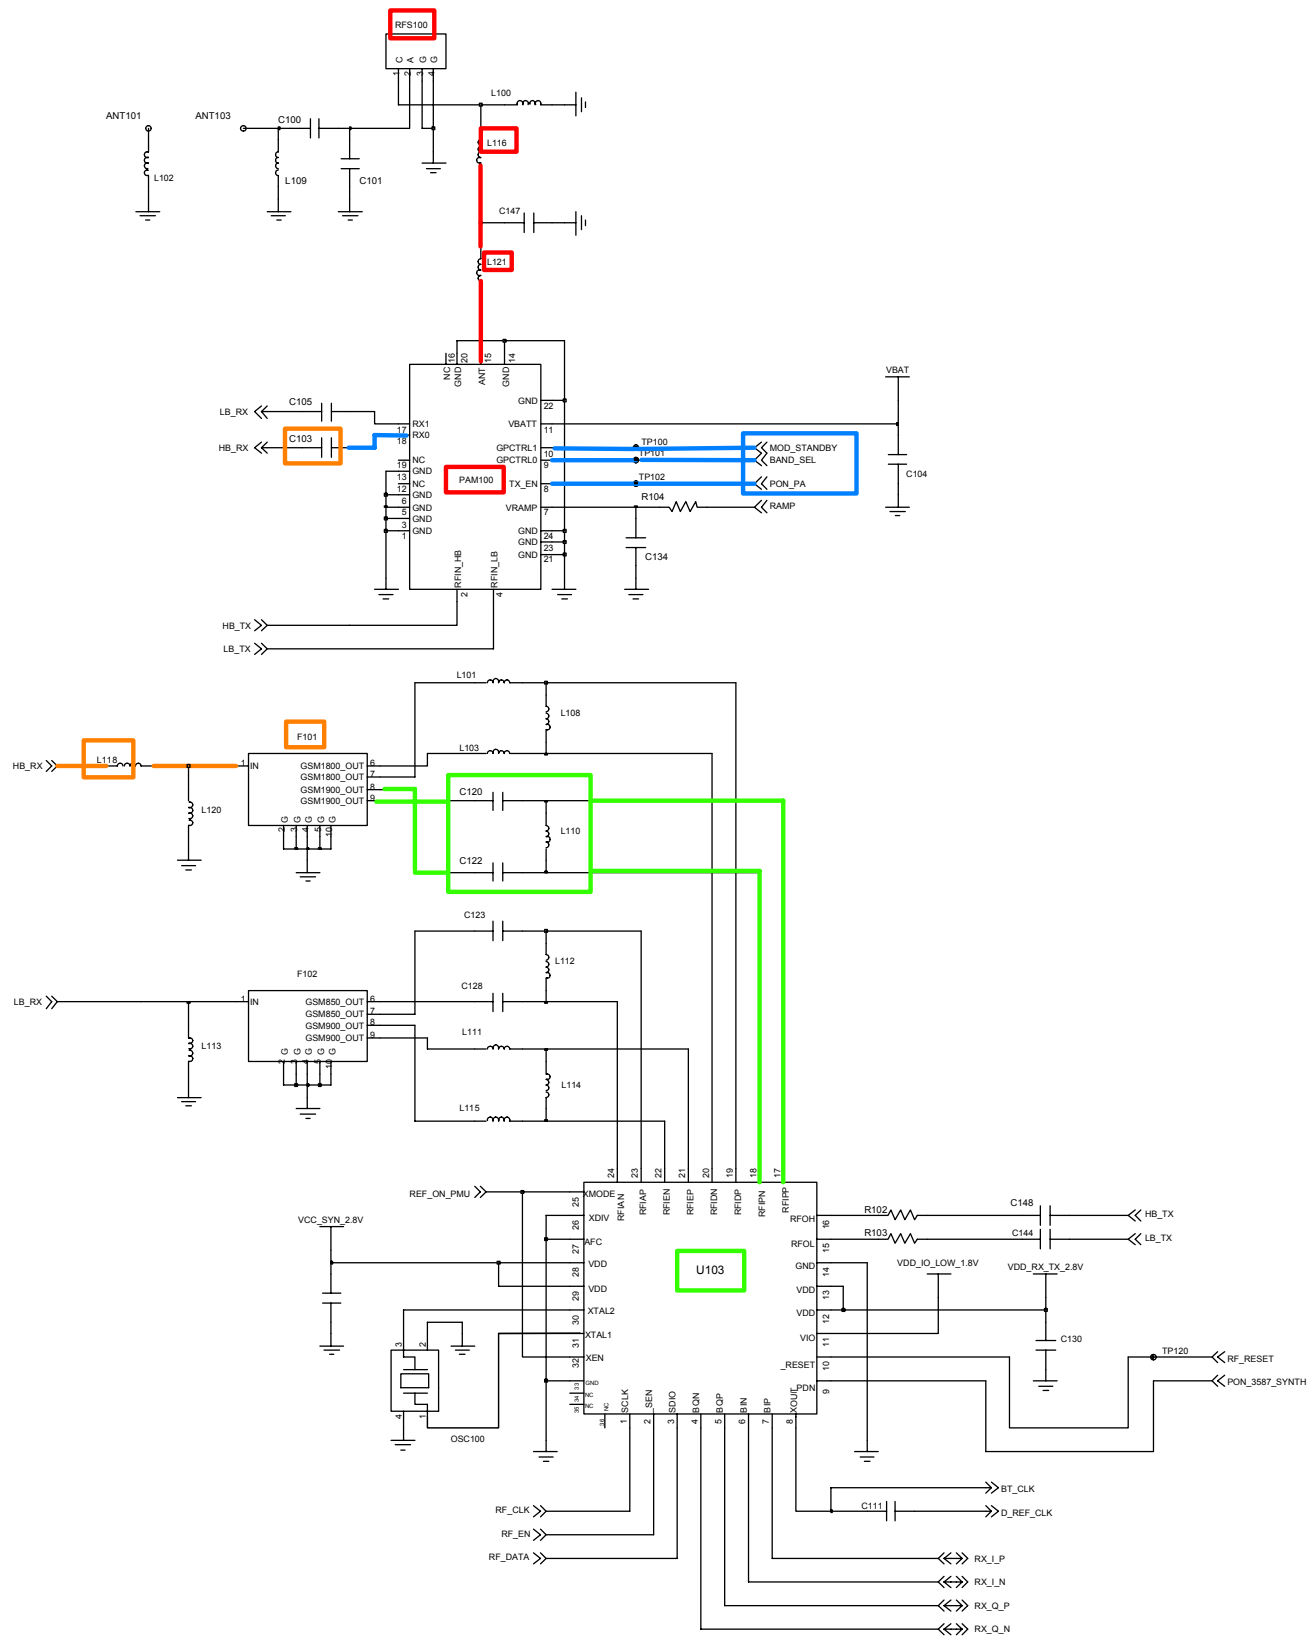

7.框图

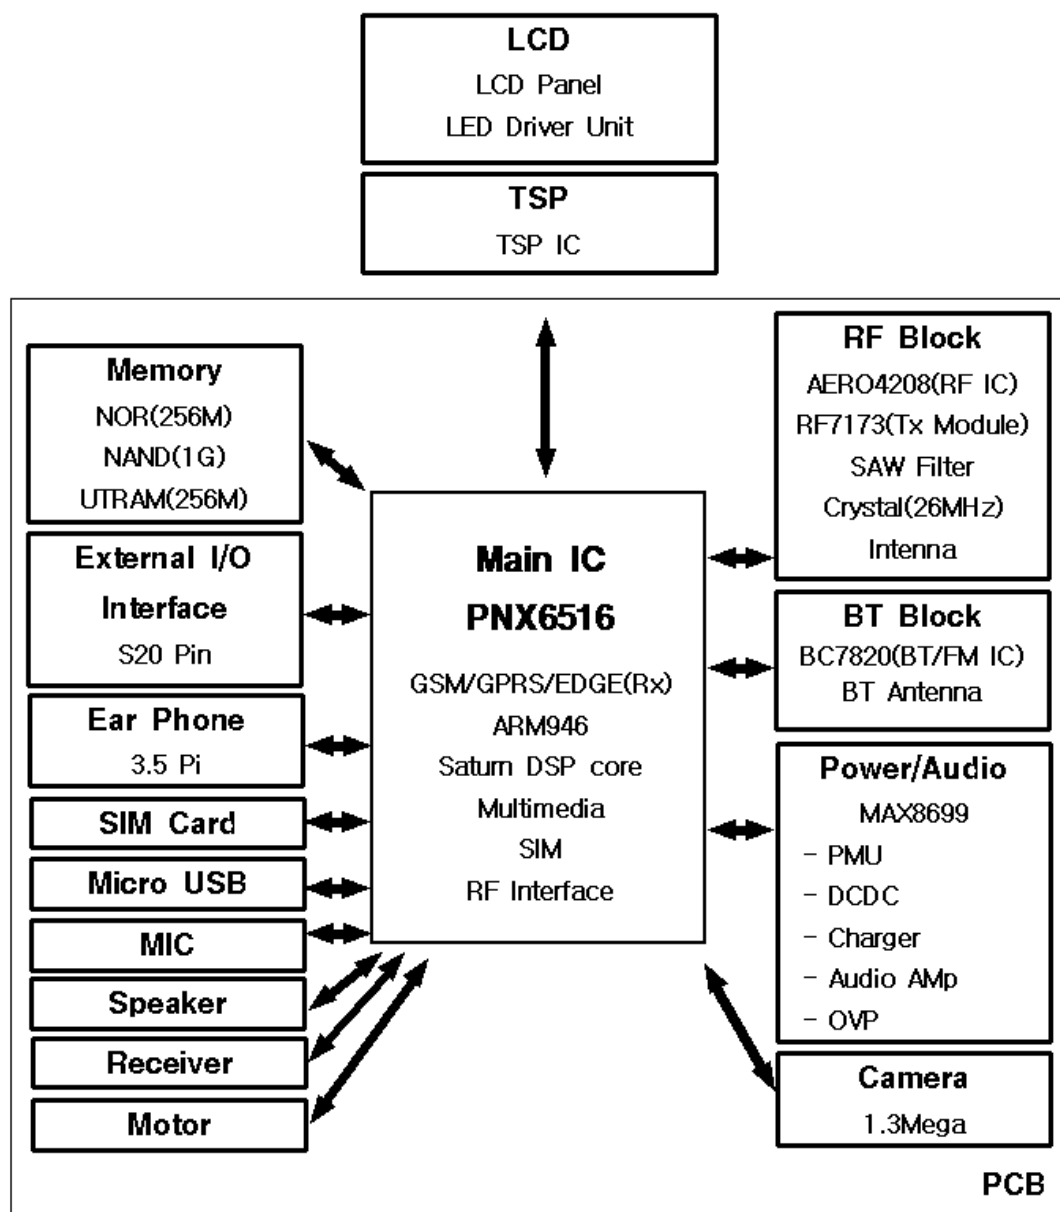


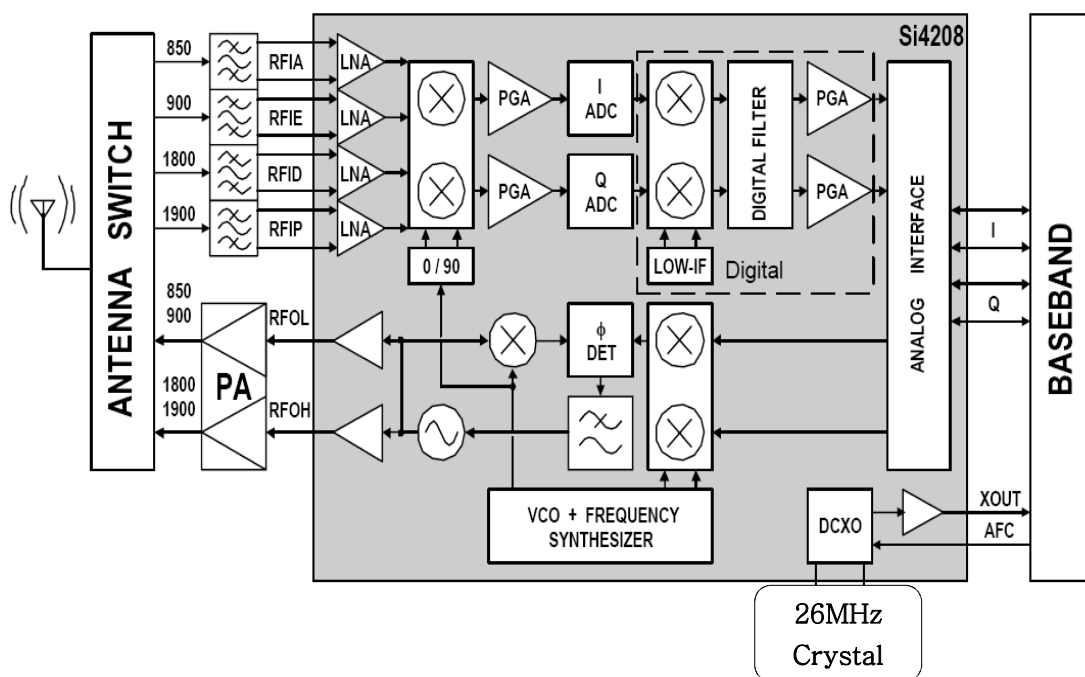

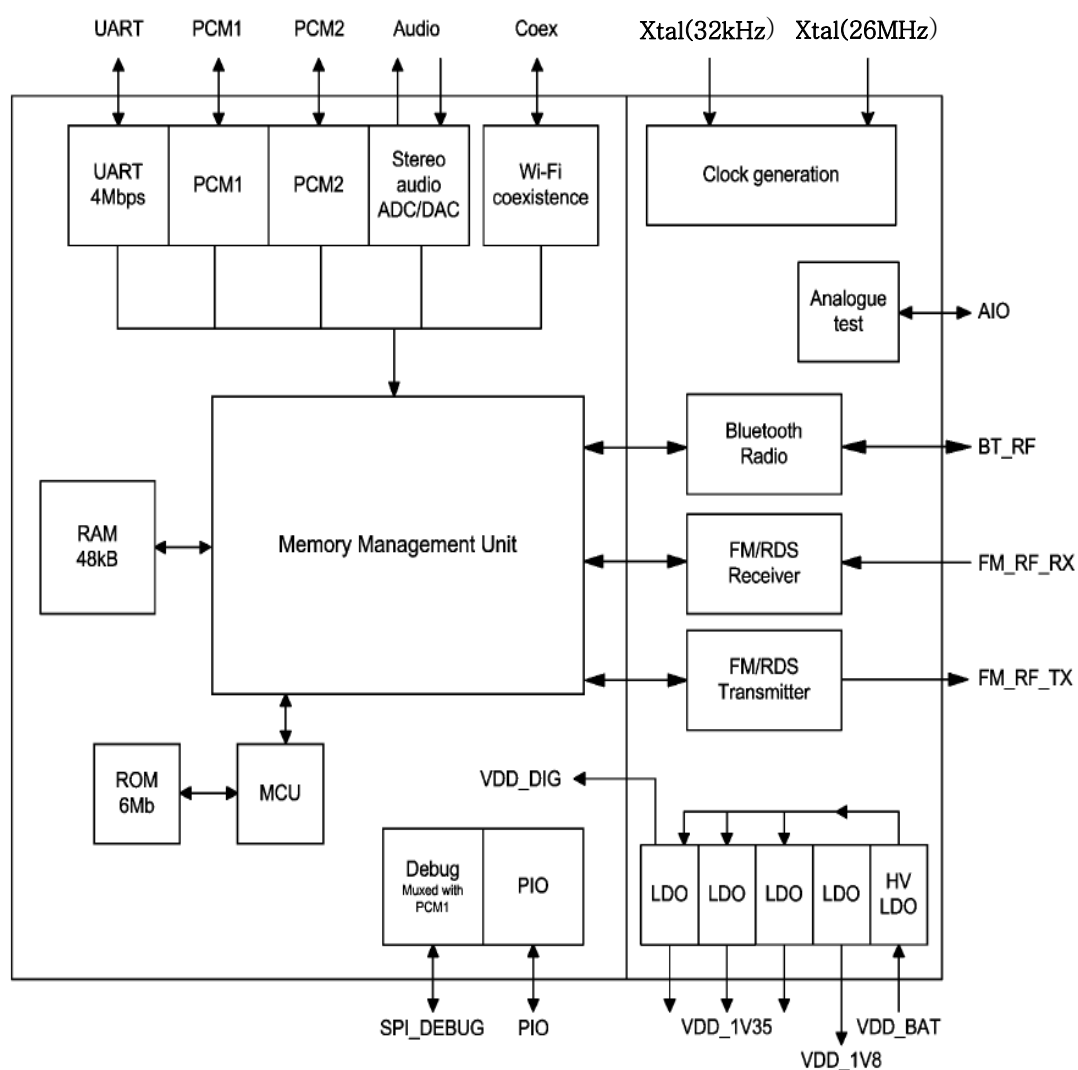

8.主板图

8-1.顶部

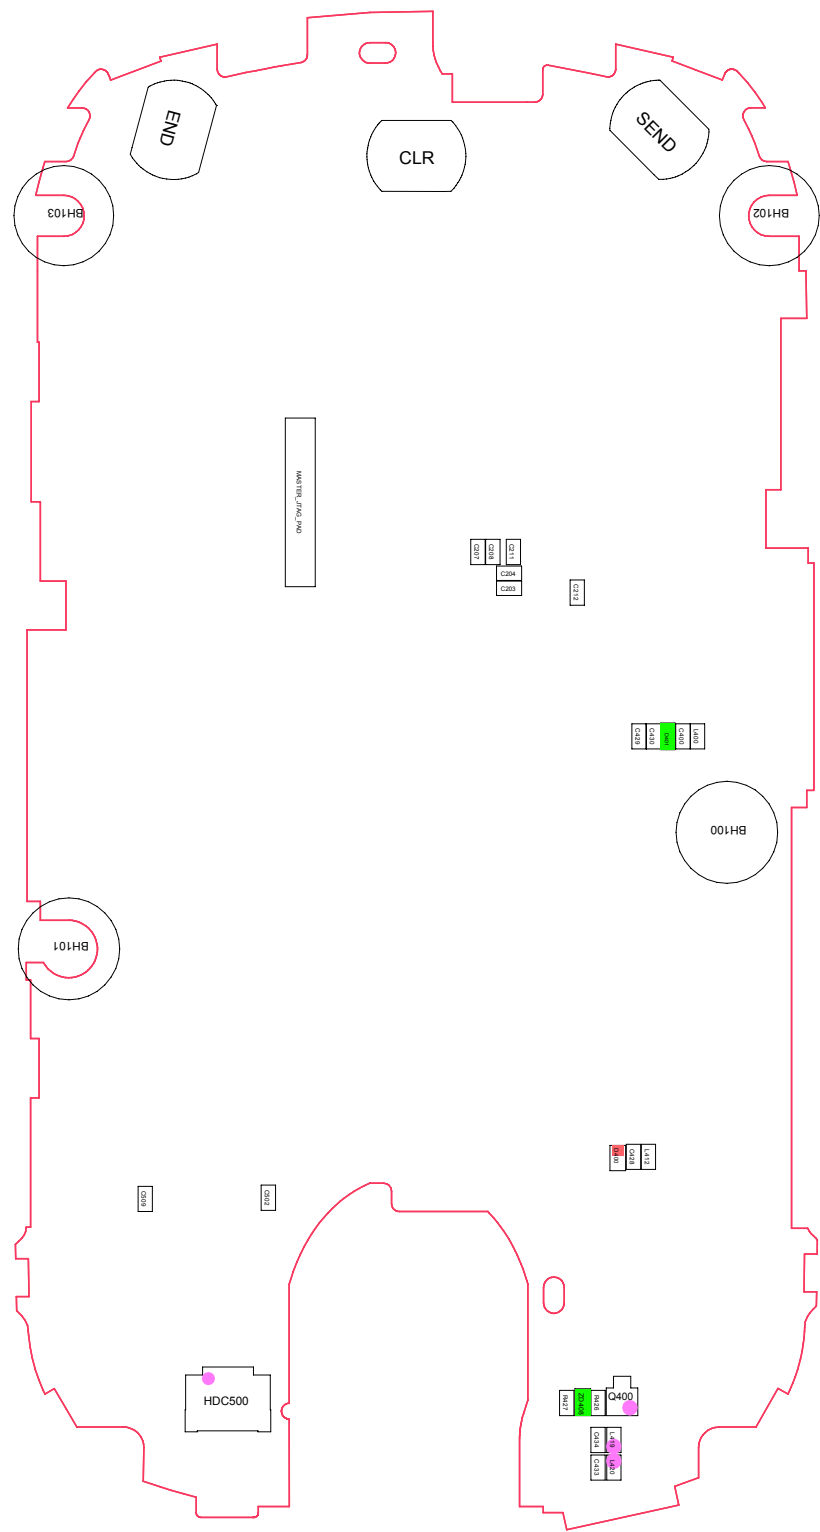

8-2.底部

