




8. 3 级维修

底部

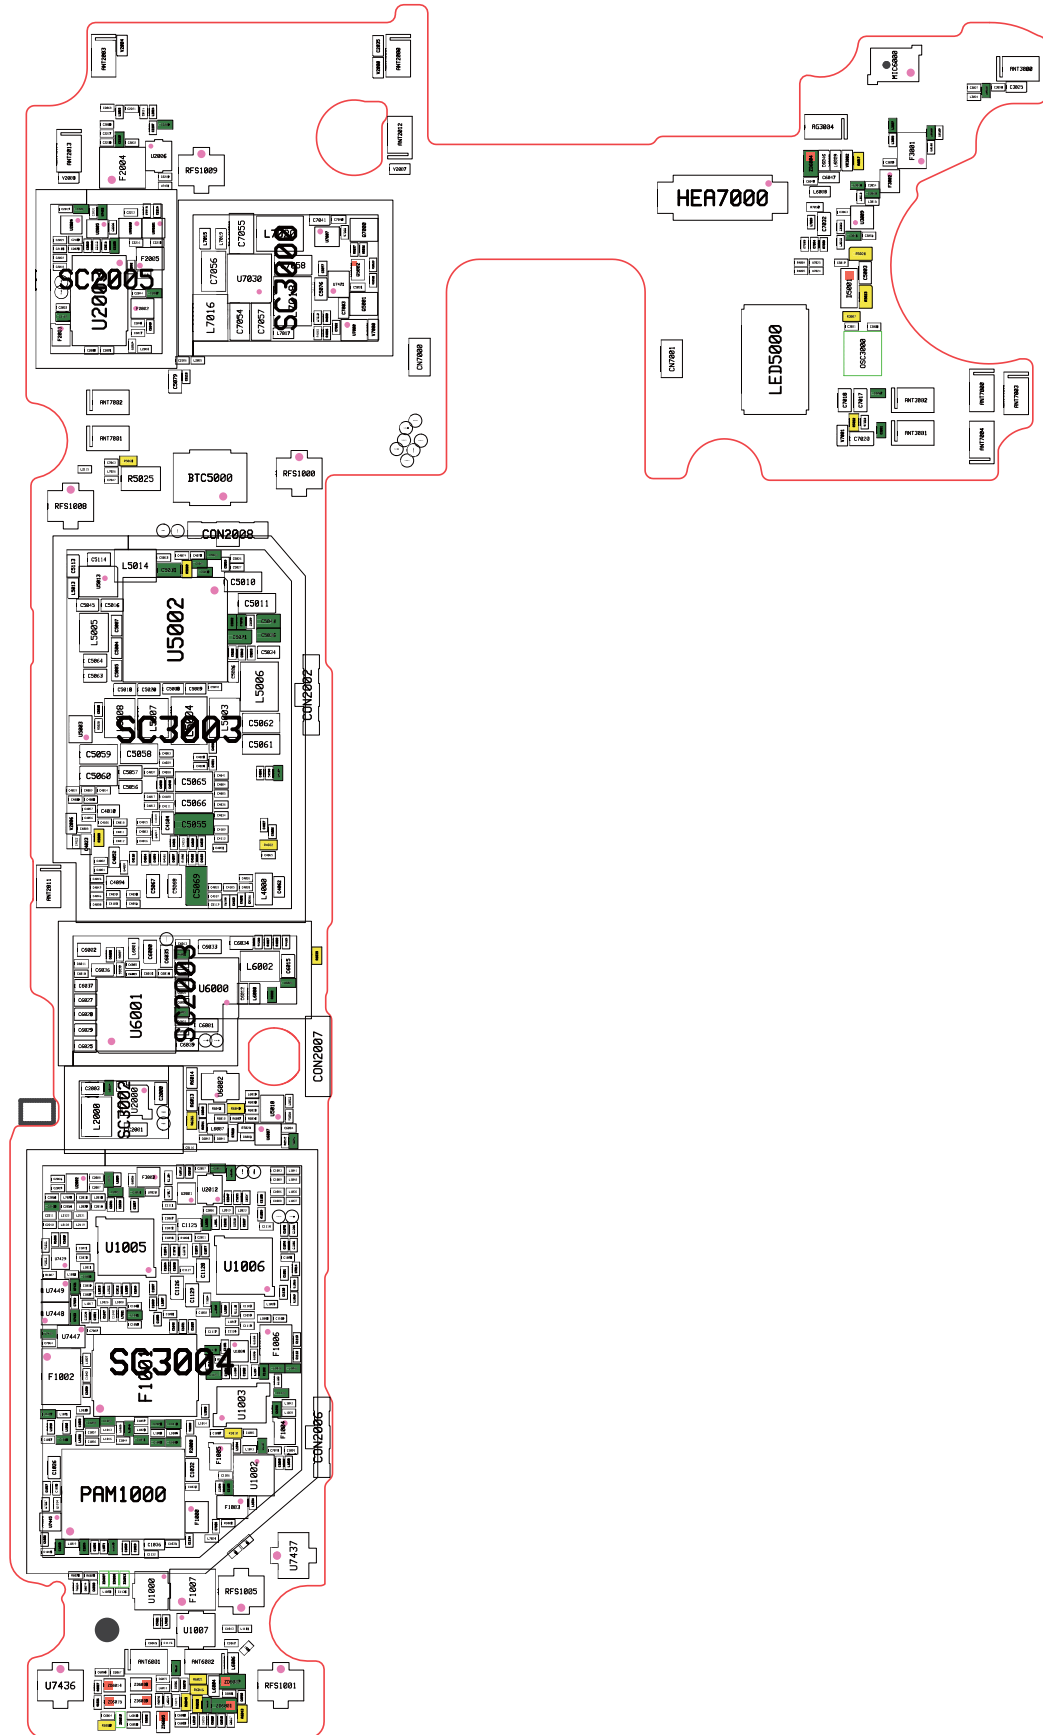

8. 3 级维修


8-3. 故障排除流程图

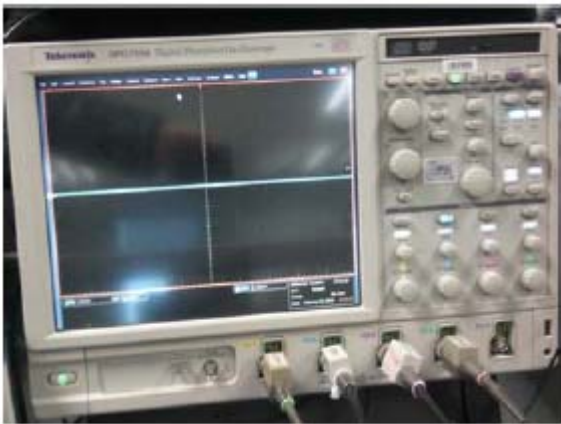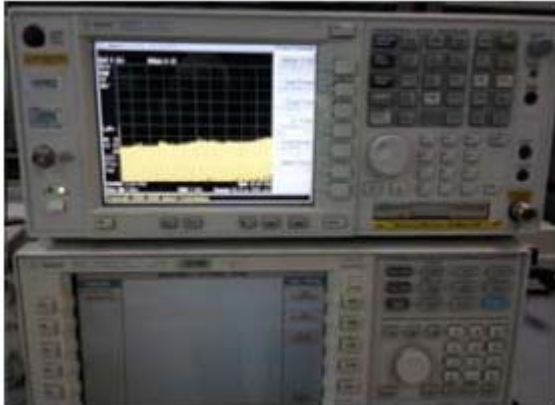	
示波器	数字万用表
	
电源供应器	↑+字螺丝刀, ESD 安全镊子
	
8960 和频谱仪	焊接烙铁

8. 3 级维修


8-3. 故障排除

8-3-1. 开机

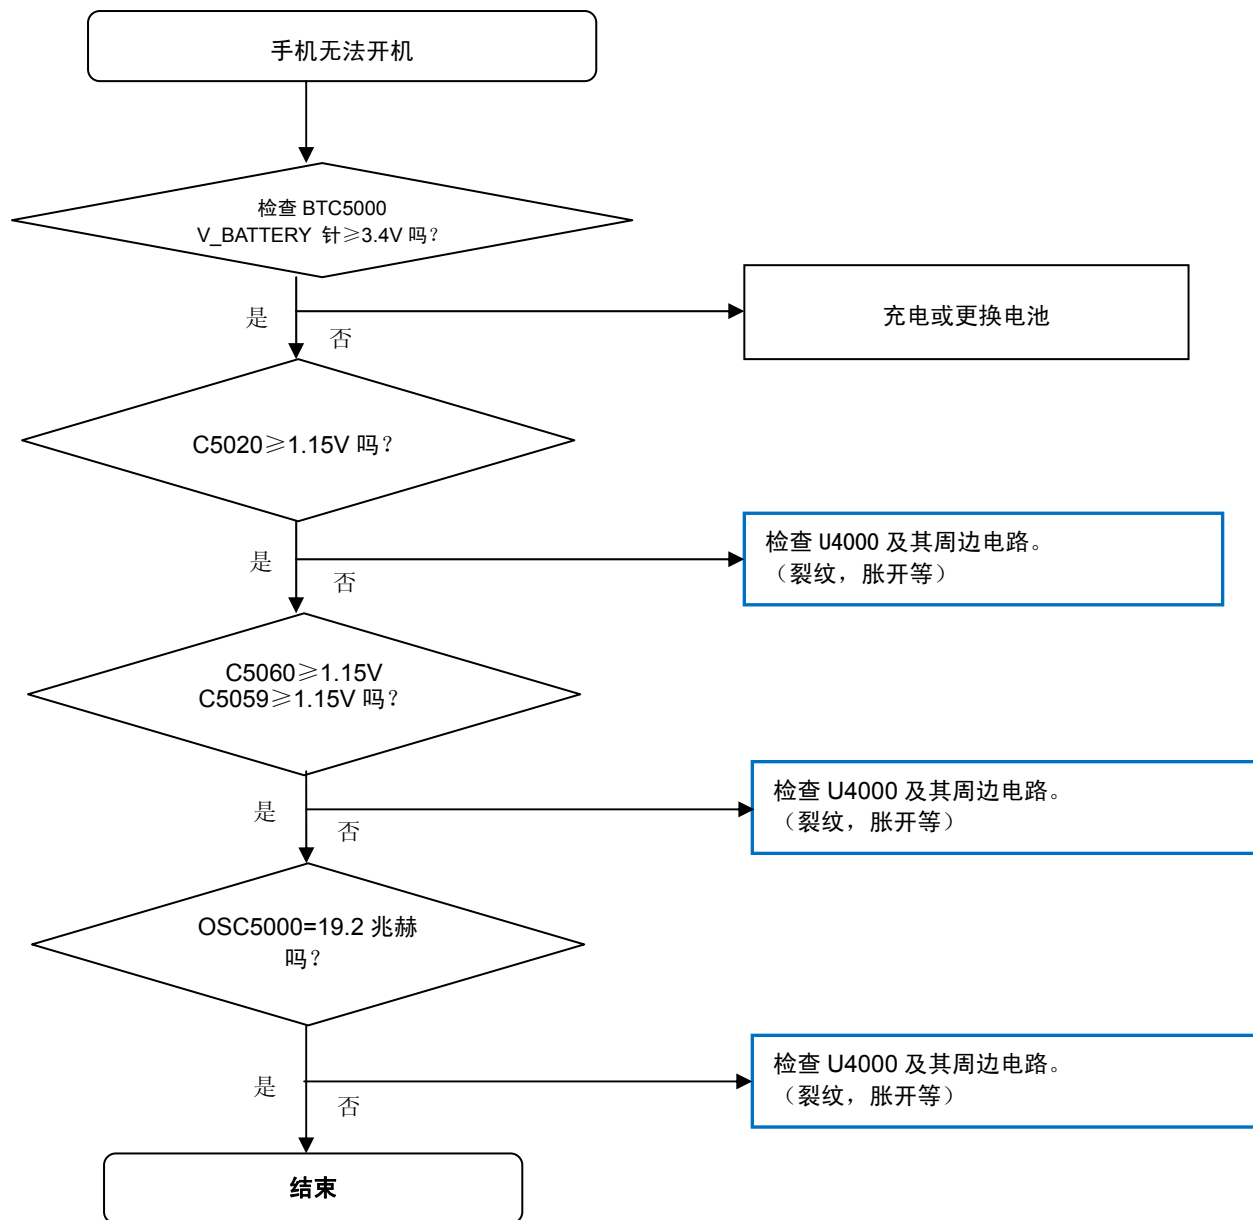


8. 3 级维修

8-3-2. 逻辑部分（OCTA）

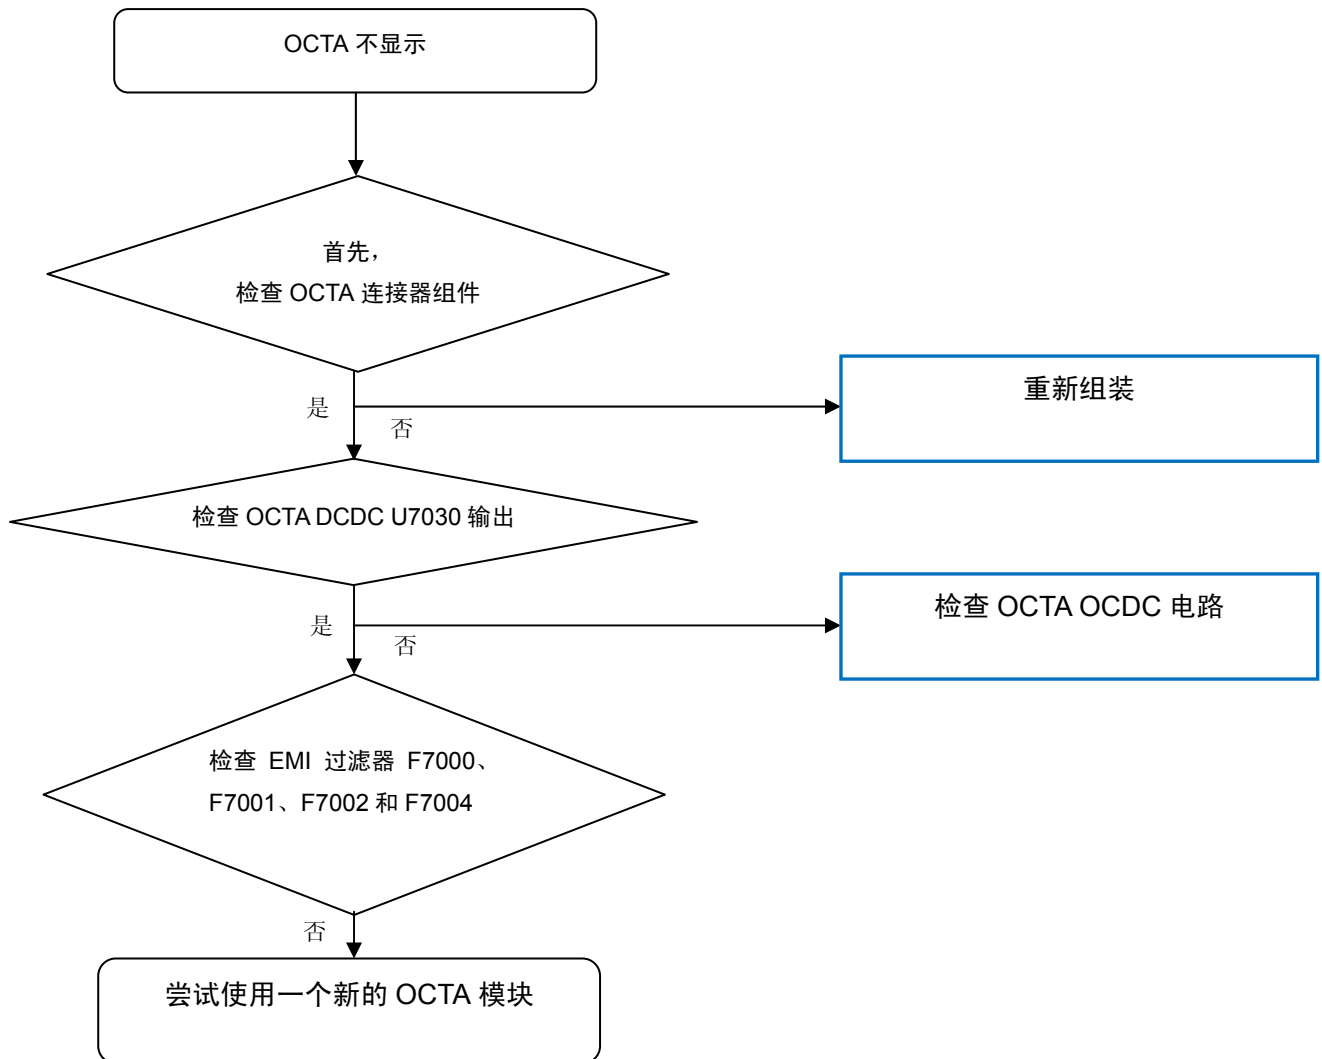


8. 3 级维修

8-3-3. 逻辑部分（扬声器）

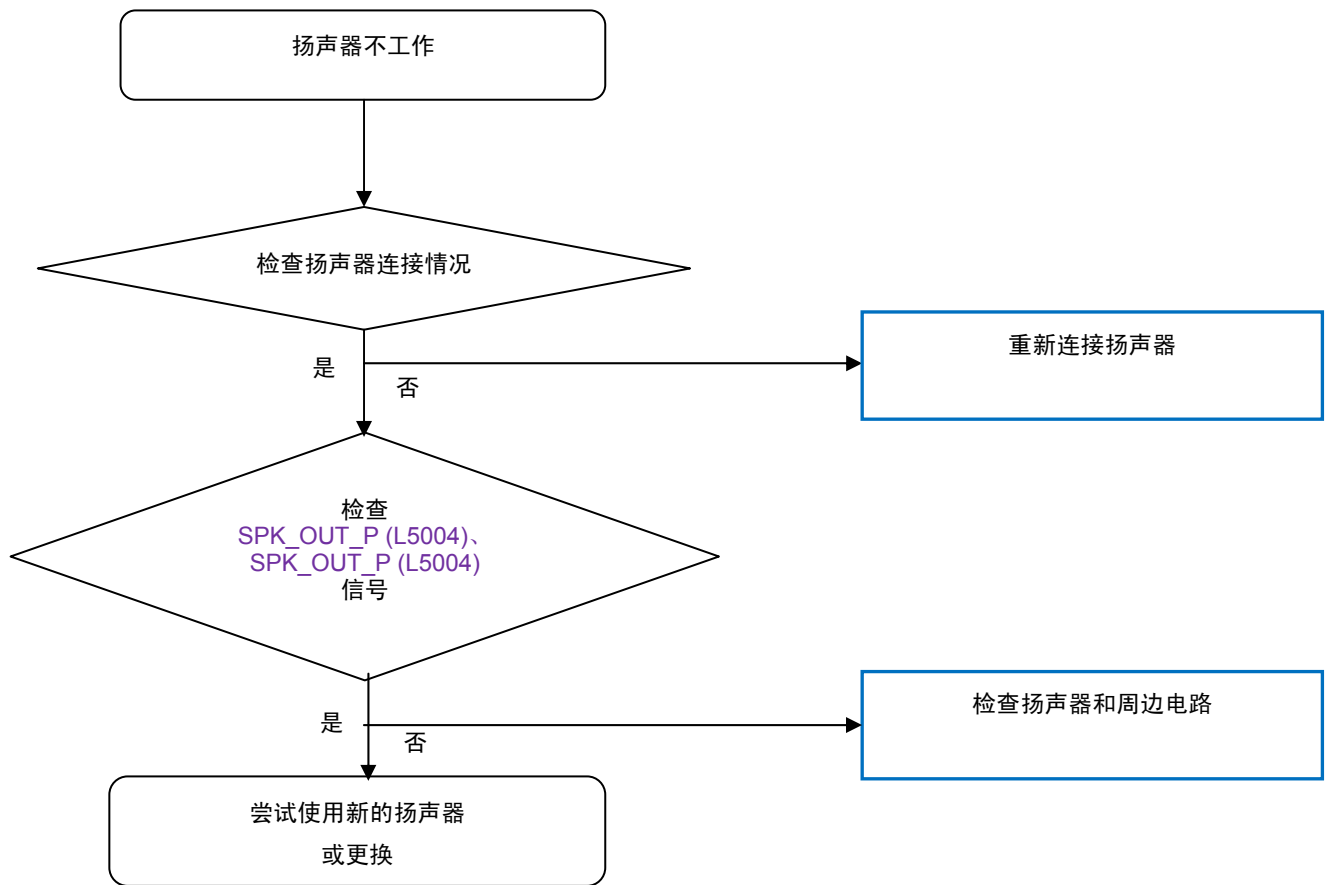


8. 3 级维修

8-3-4. 逻辑部分（主麦克风）

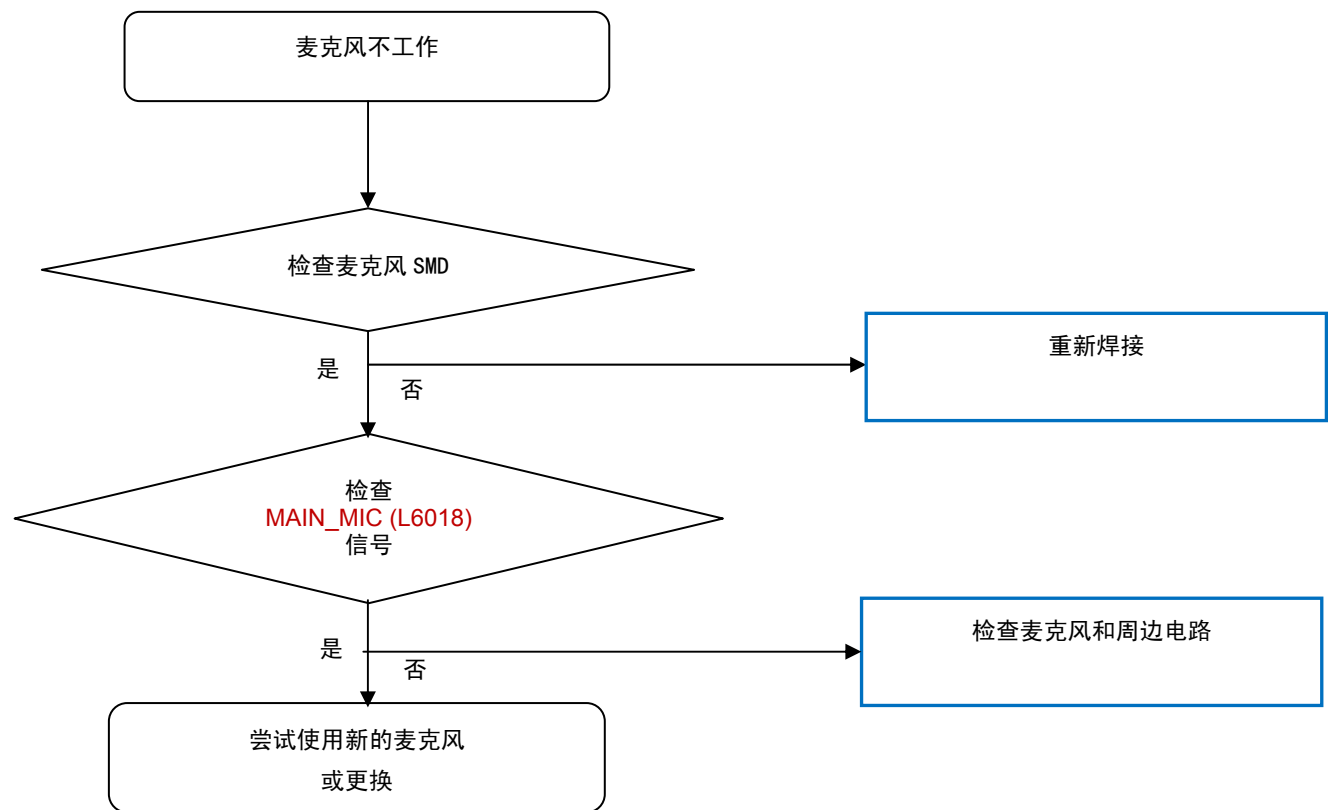


8. 3 级维修

8-3-5. 逻辑部分（RCV）

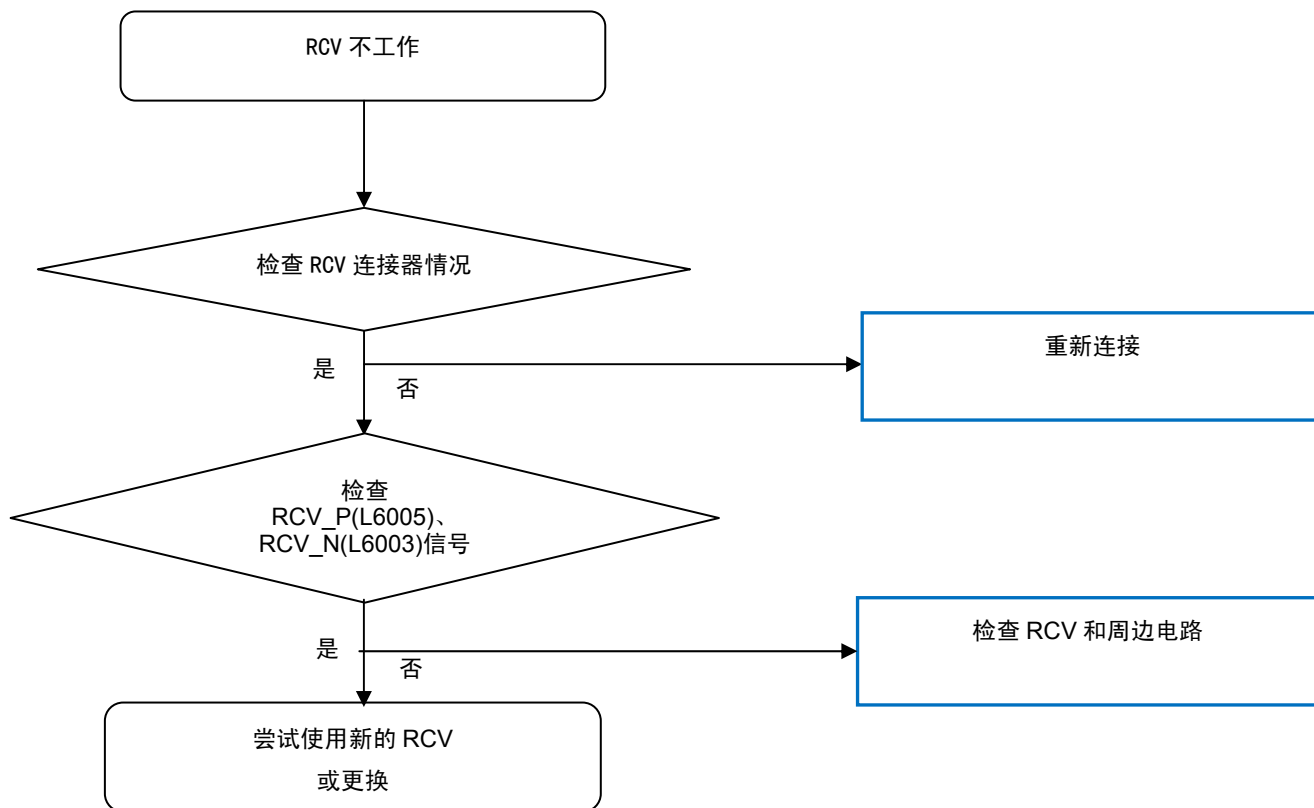


8. 3 级维修

8-3-6. 逻辑部分（按键输入）

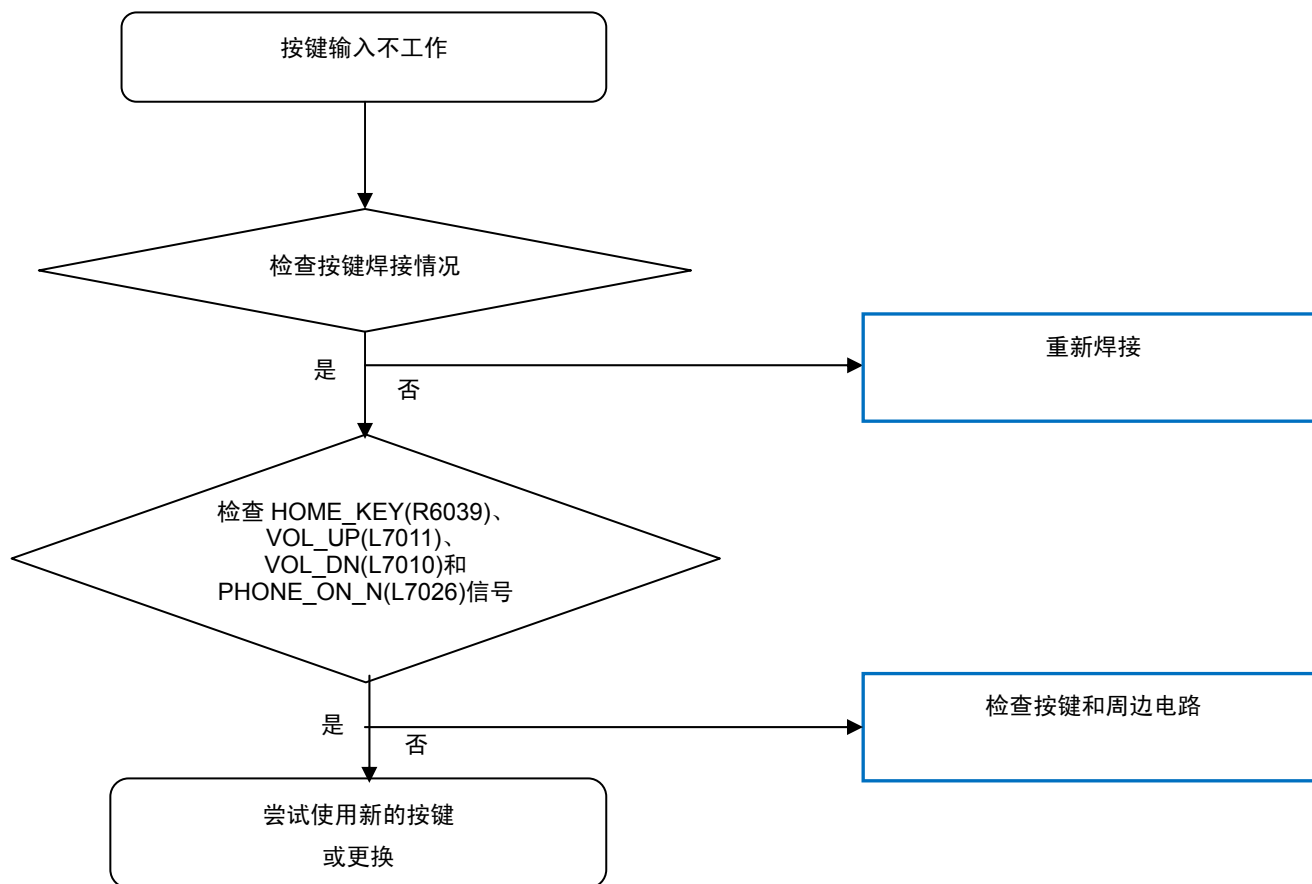


8. 3 级维修

8-3-7. 逻辑部分（SIM 卡识别）

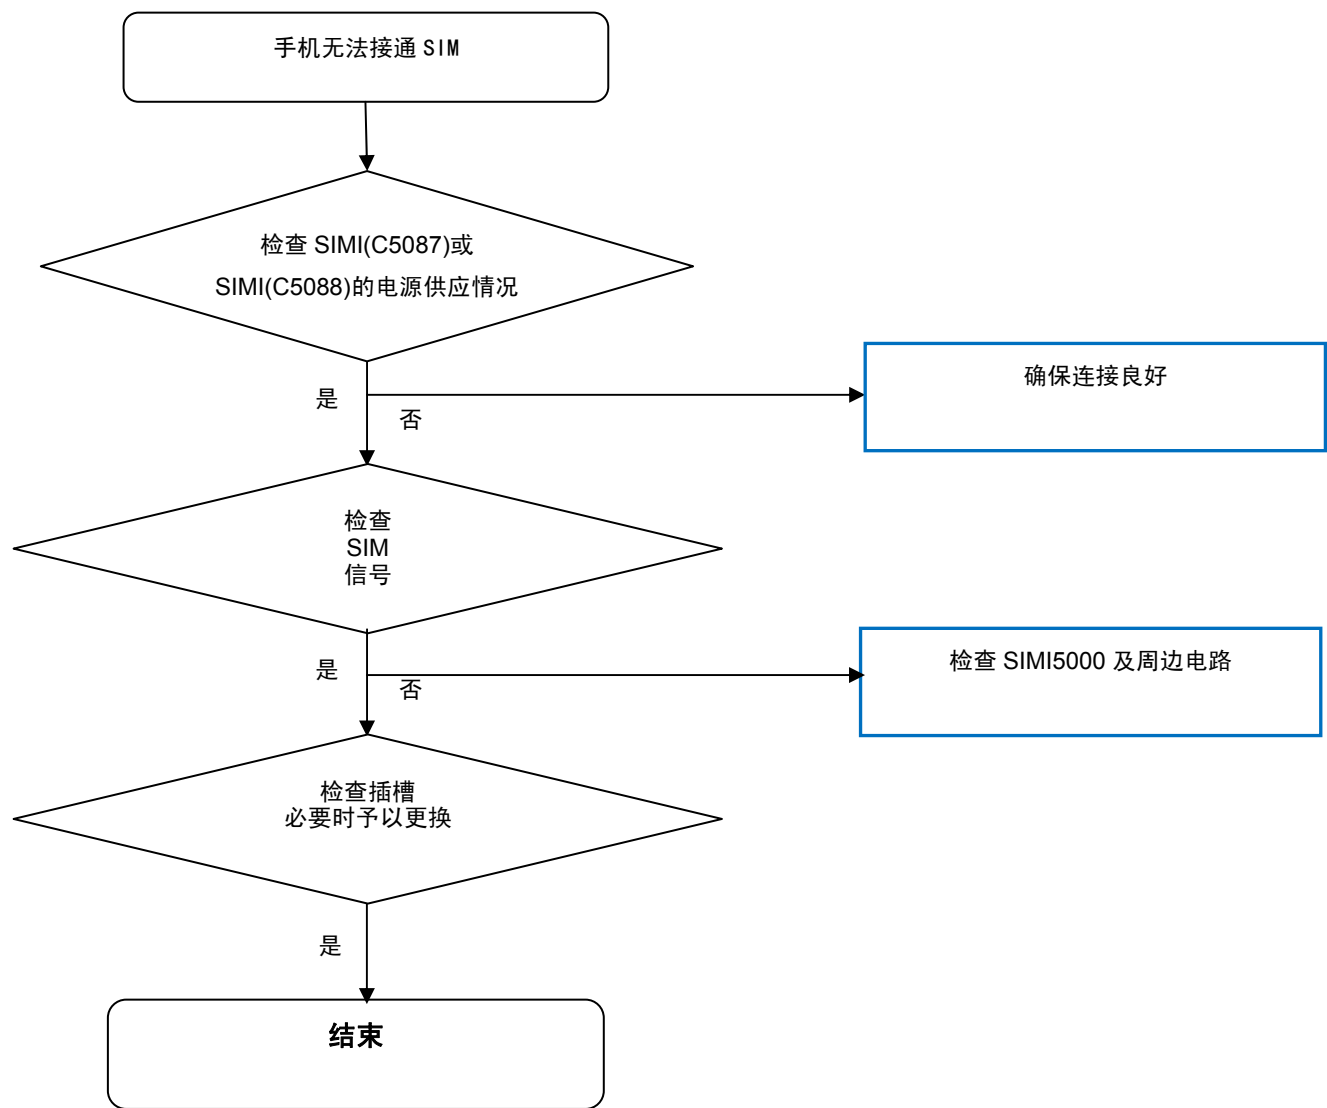


8. 3 级维修

8-3-8. 逻辑部分（触摸键）

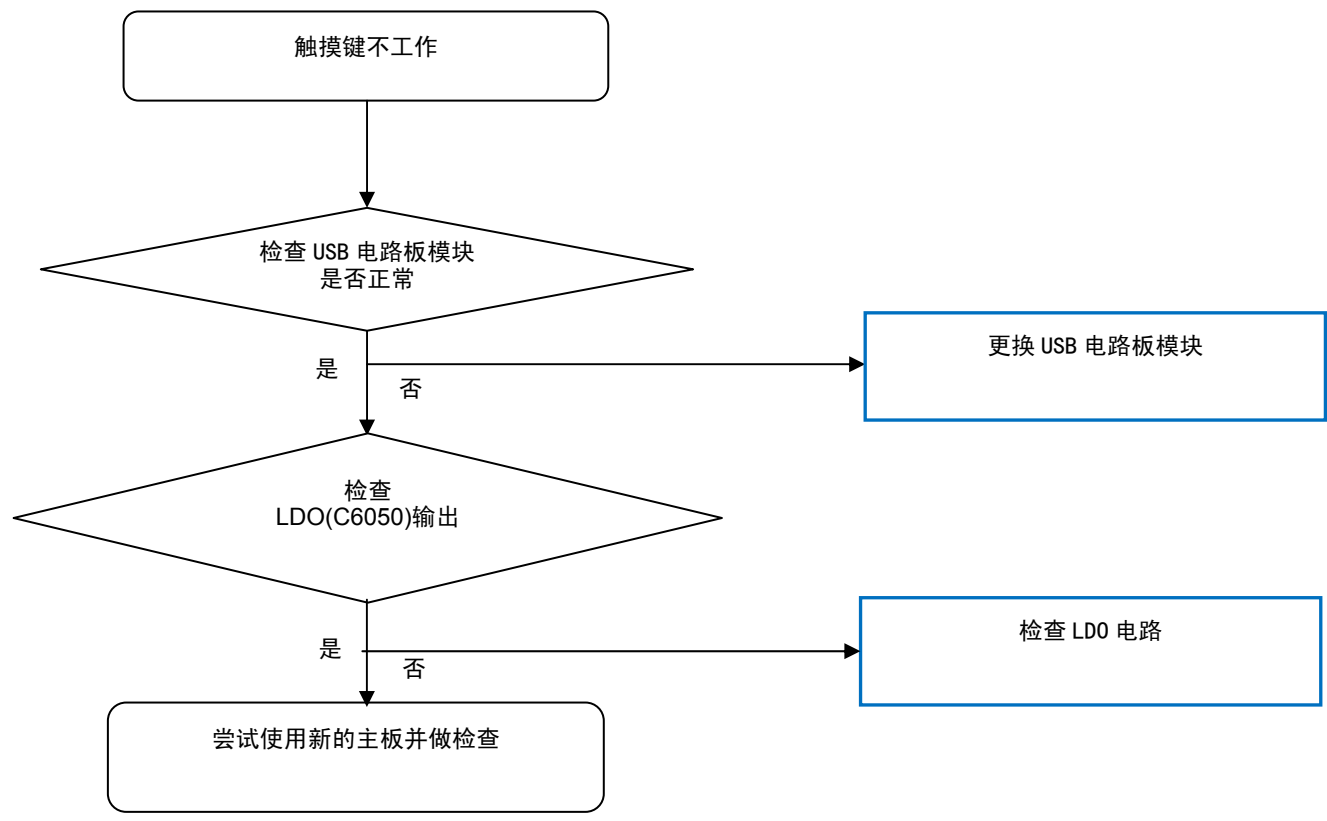


8. 3 级维修

8-3-9. 逻辑部分（主 CAM 和 VT 摄像头）

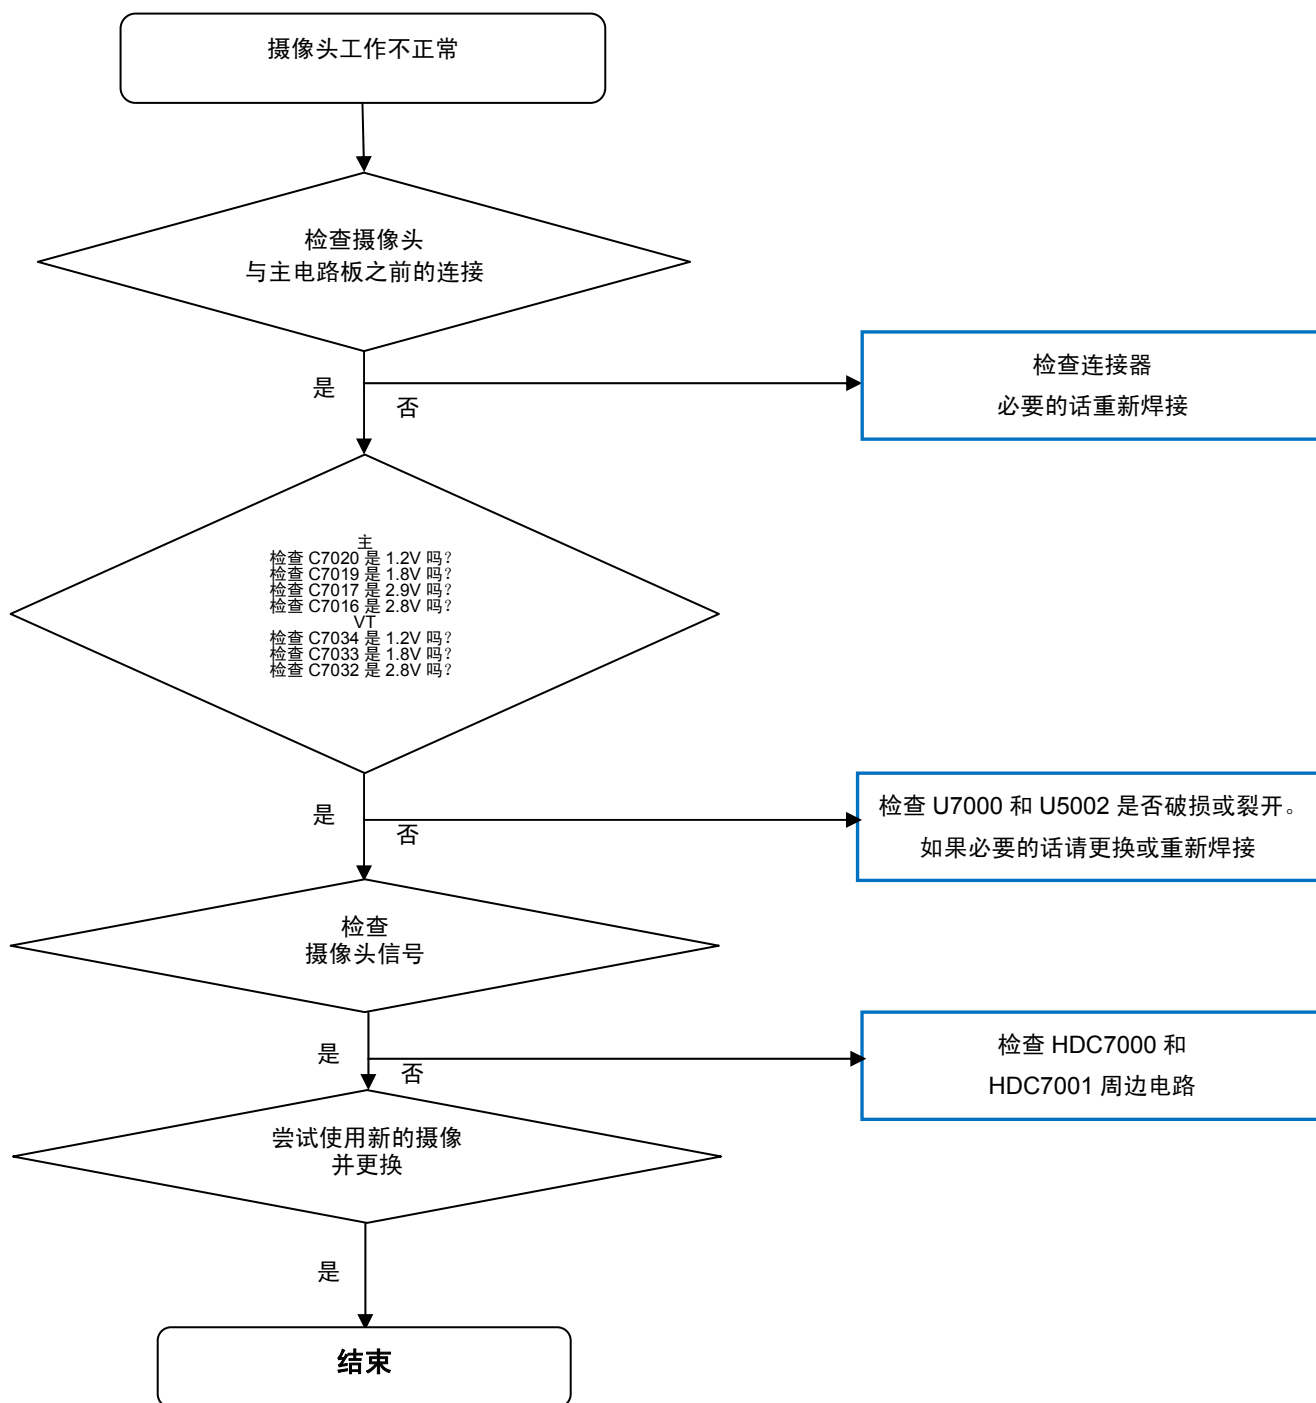


8. 3 级维修

8-3-10. 逻辑部分（SVC LED）

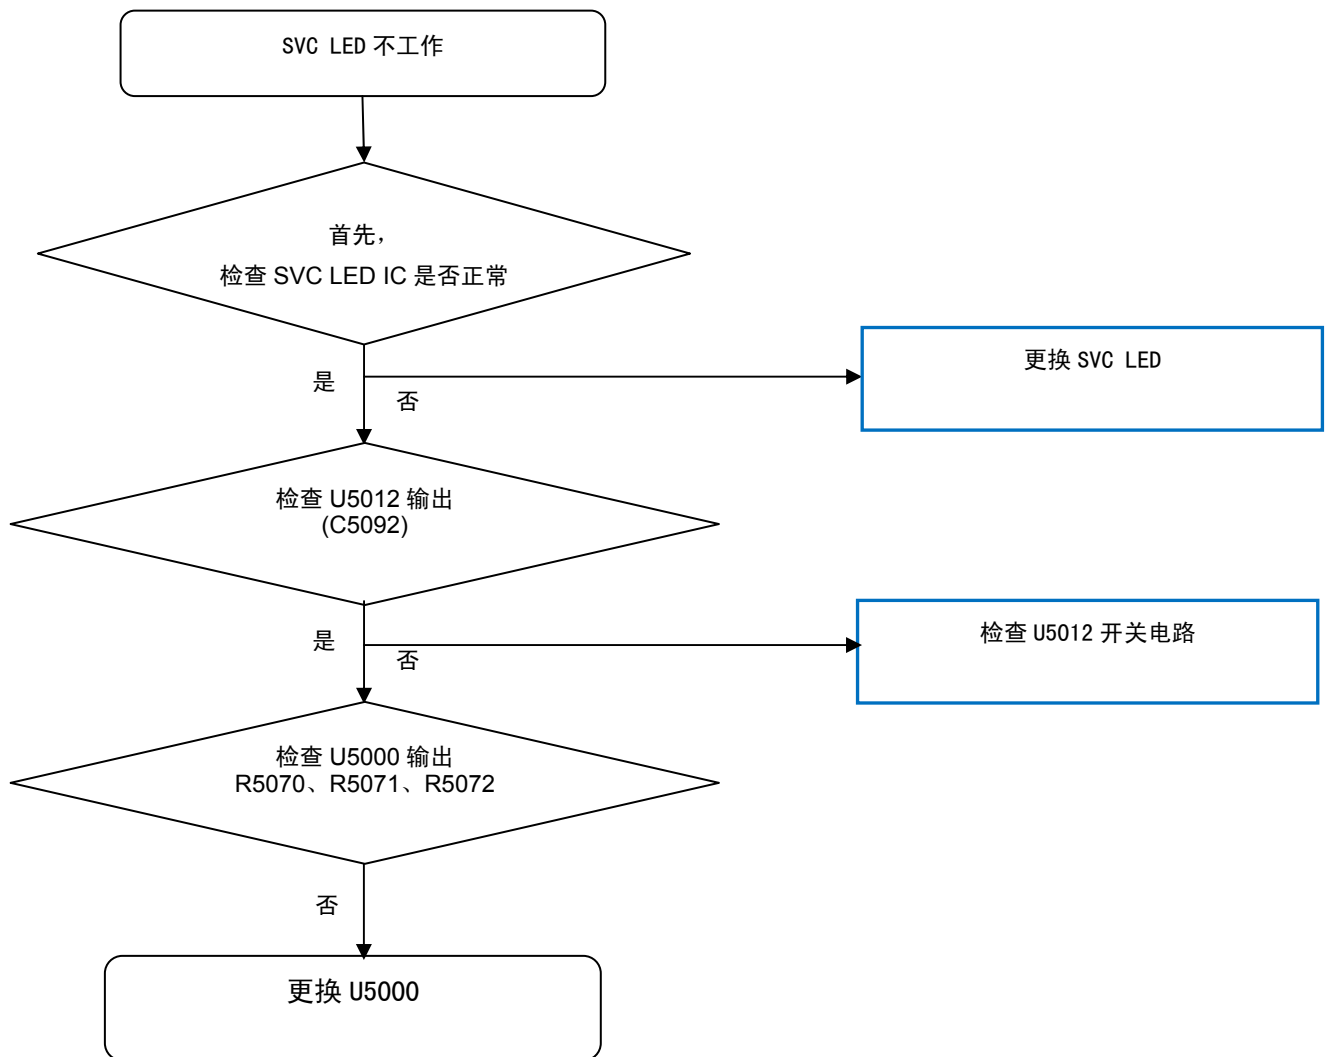


8. 3 级维修

8-3-11. 逻辑部分（电机）

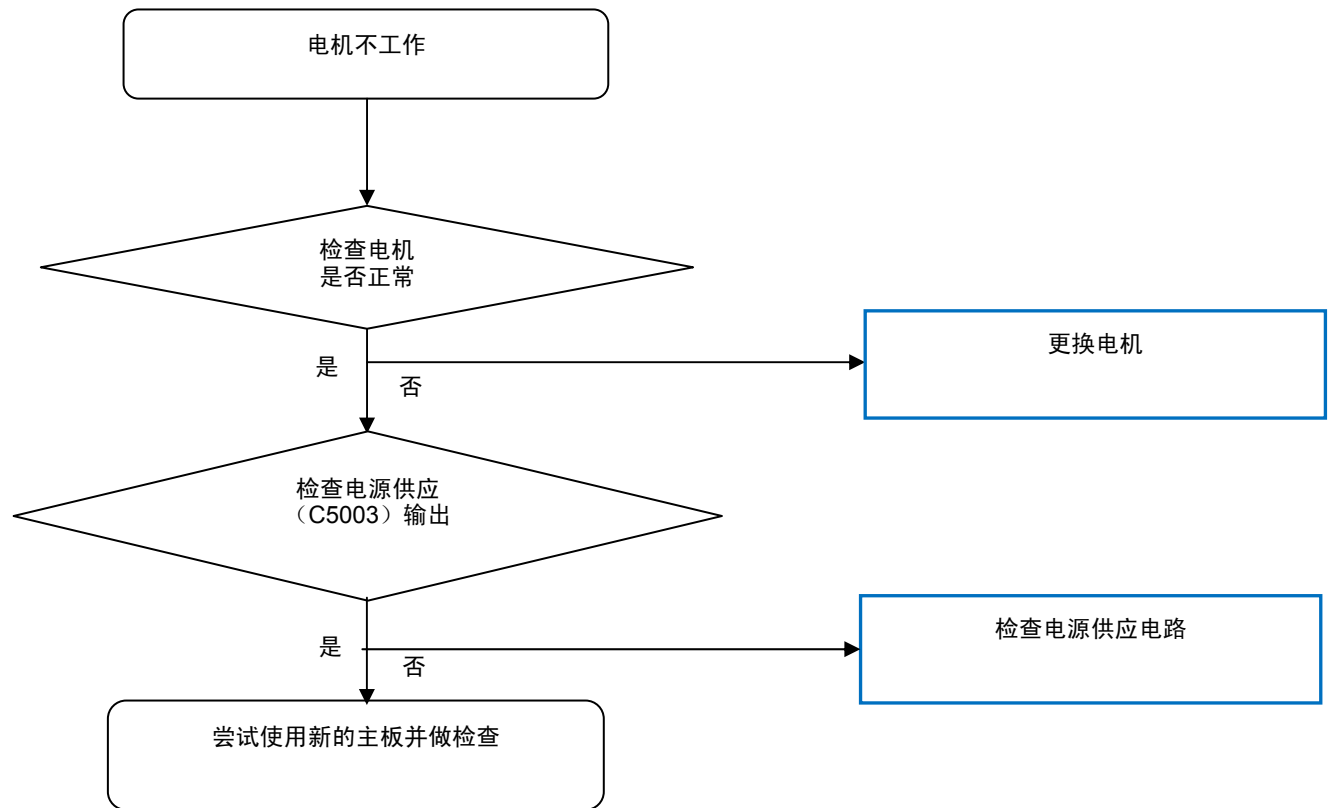

8.3 级维修


8-3-12. 射频部分 (LIE、WCDMA、TDSCDMA、CDMA、GSM)

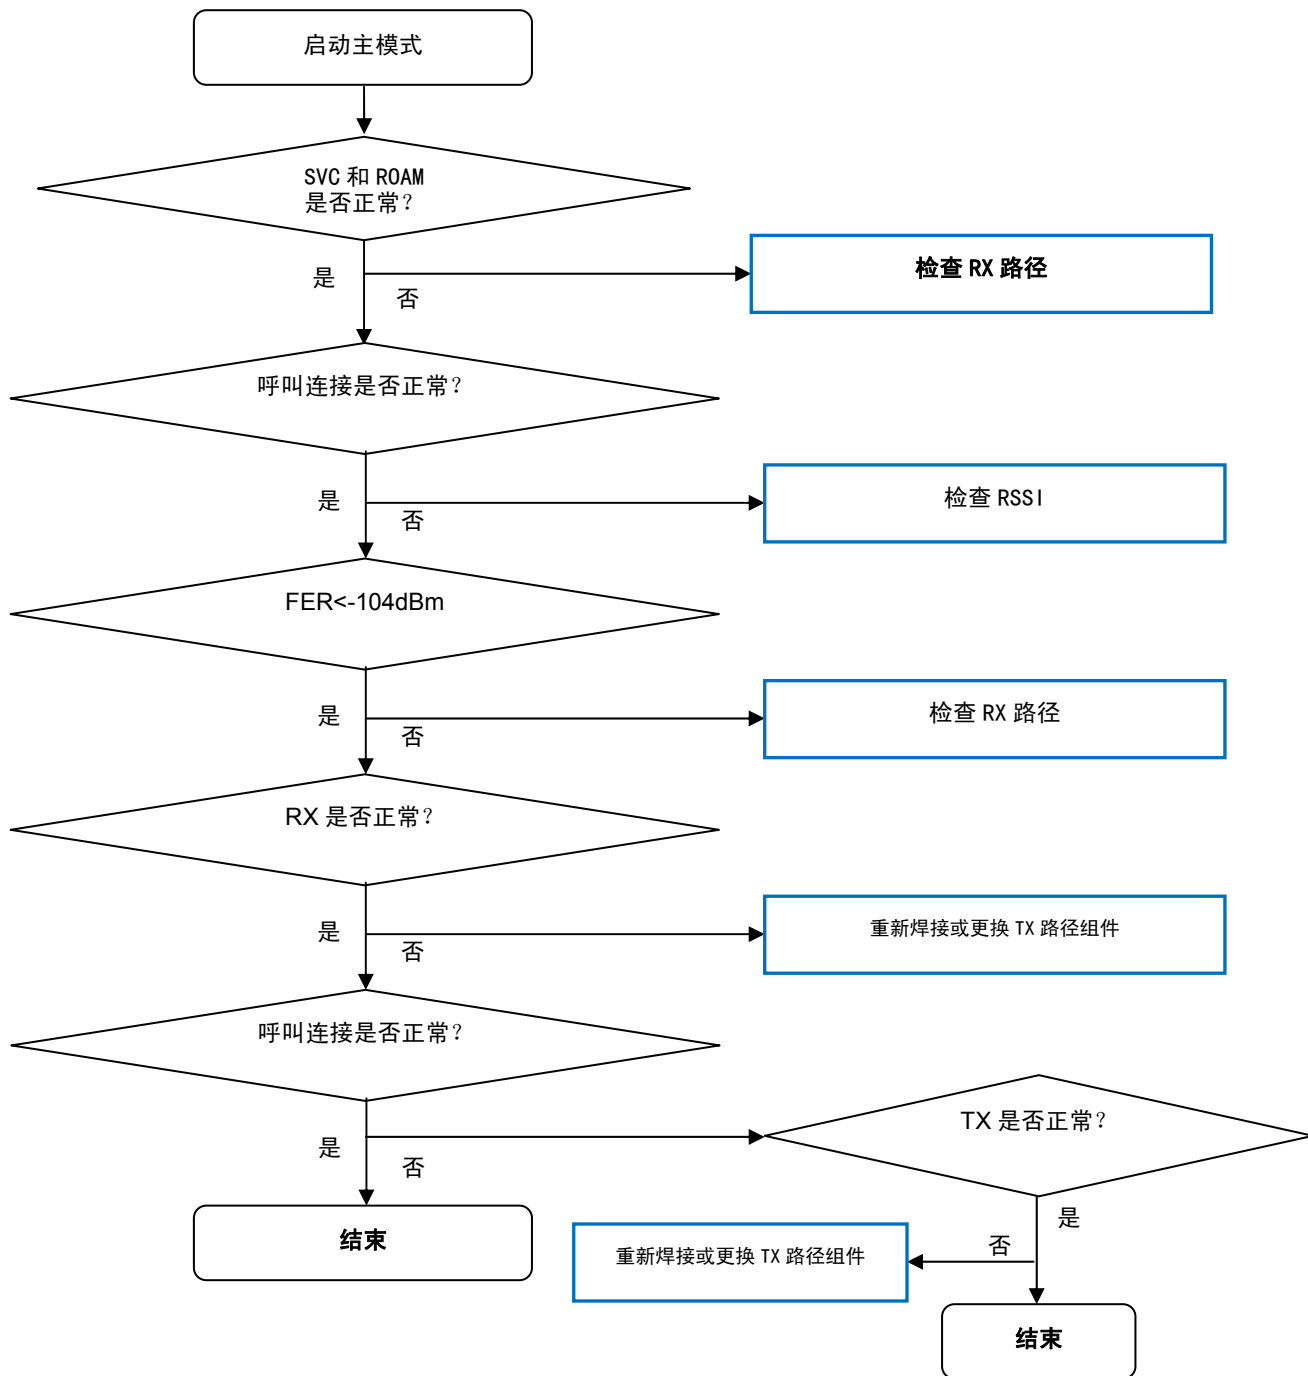


8. 3 级维修

8-3-13. RF 部分 (WLAN / BT)

WLAN RX

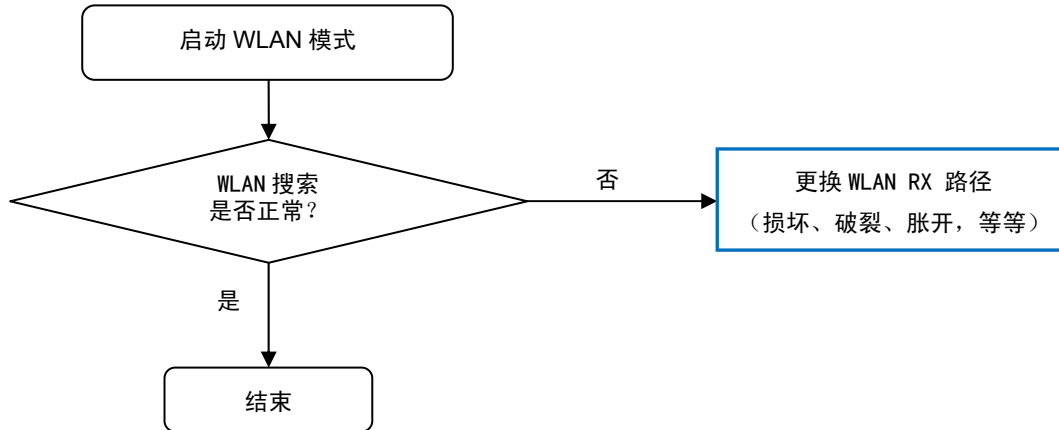


WLAN TX

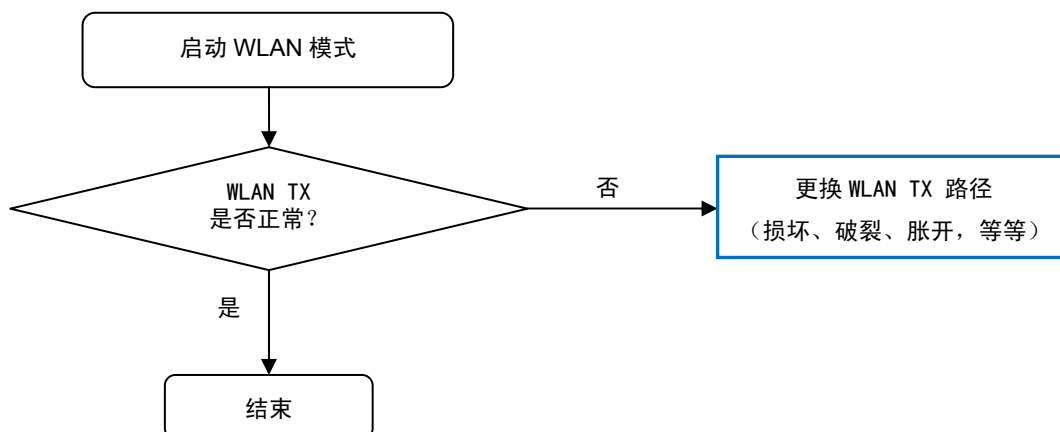


8.3 级维修

- BT

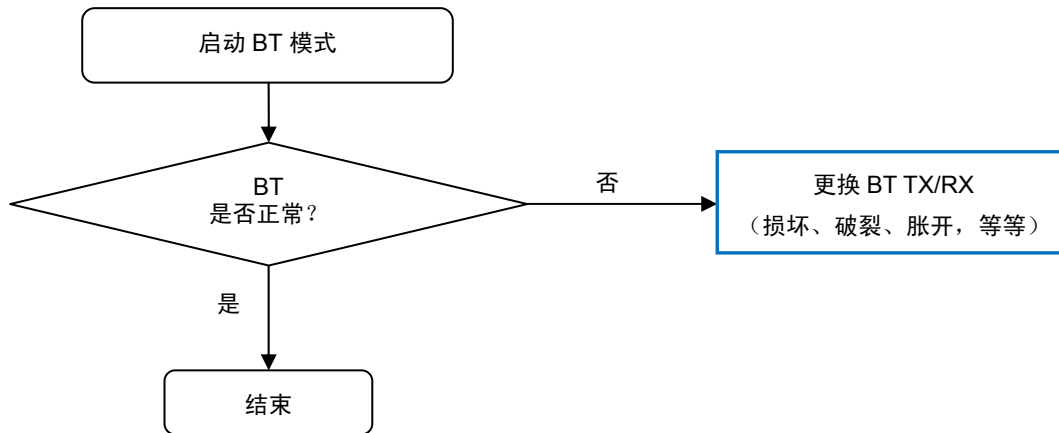

- GPS

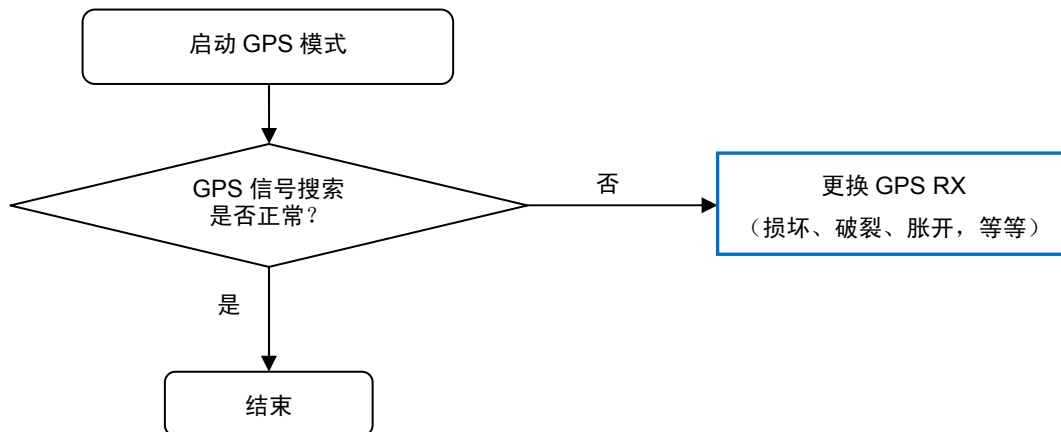


8.3 级维修

8-4. 维修示意图

- NC 点（顶部示意图）

●: NC

UCP3000

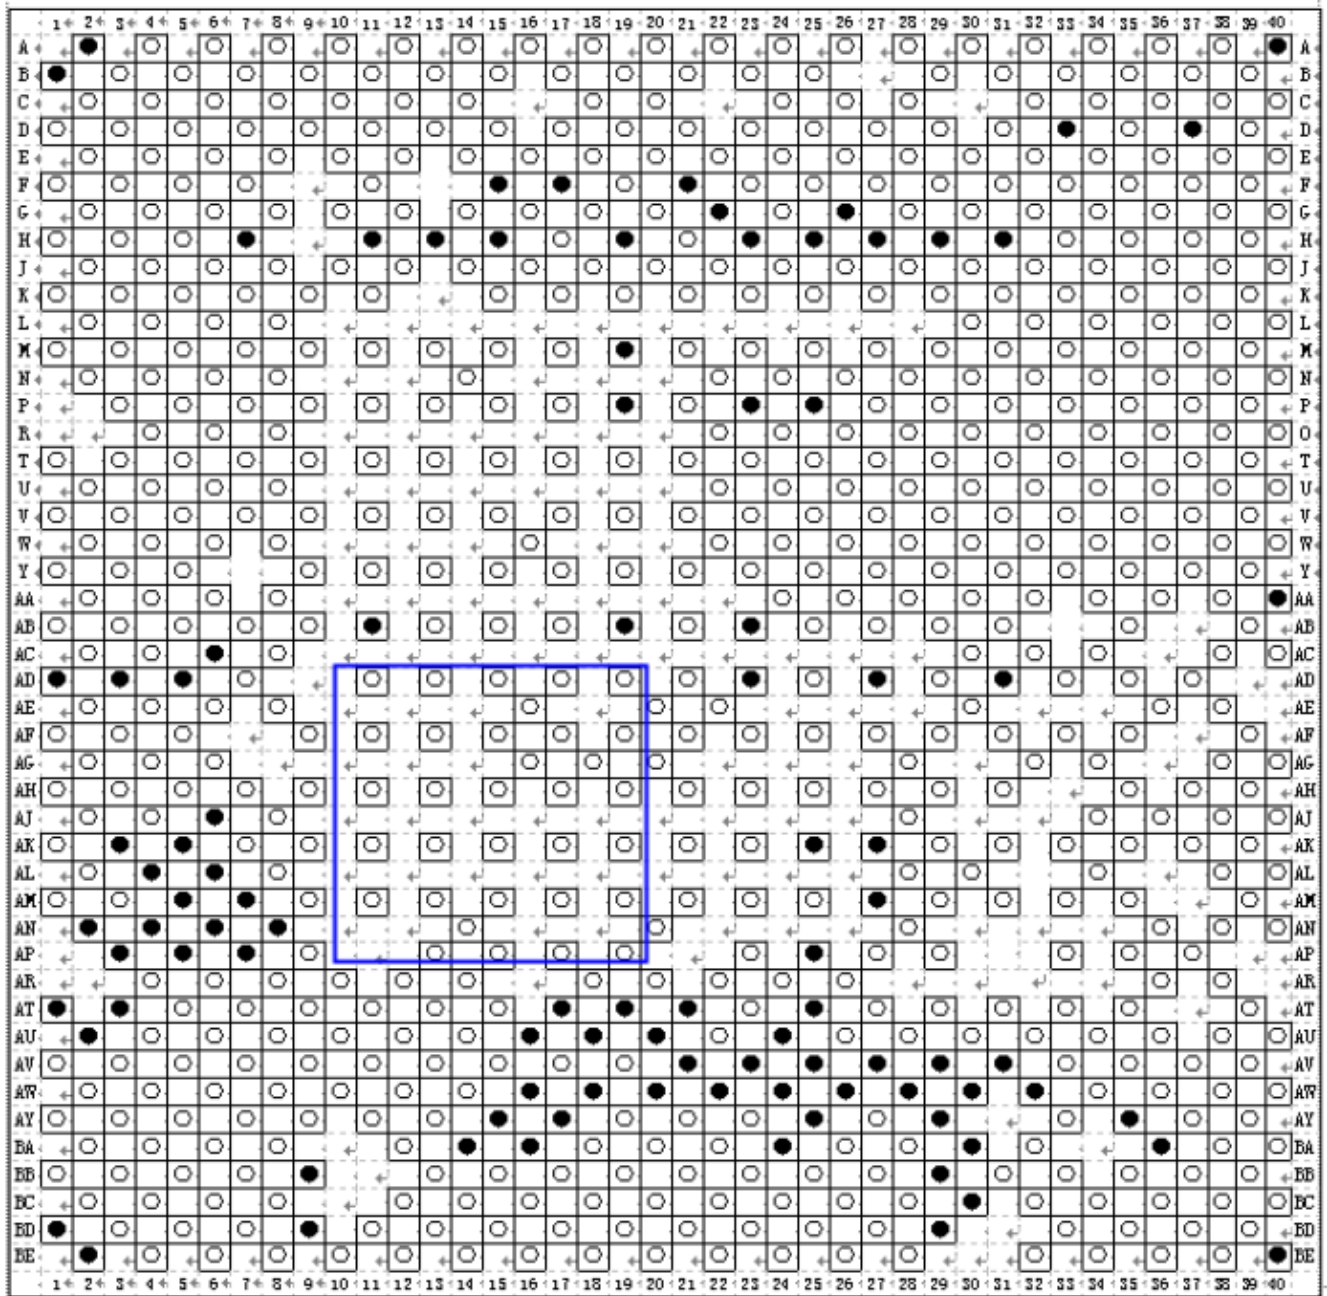

8.3 级维修

U3000

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	
A	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☒	☐	A
B	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	B
C	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	C
D	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	D
E	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	E
F	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	F
G	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	G
H	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	H
J	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	J
K	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	K
L	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	L
M	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	M
N	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	N
P	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	P
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	