



8. 3 级维修

8-1.框图

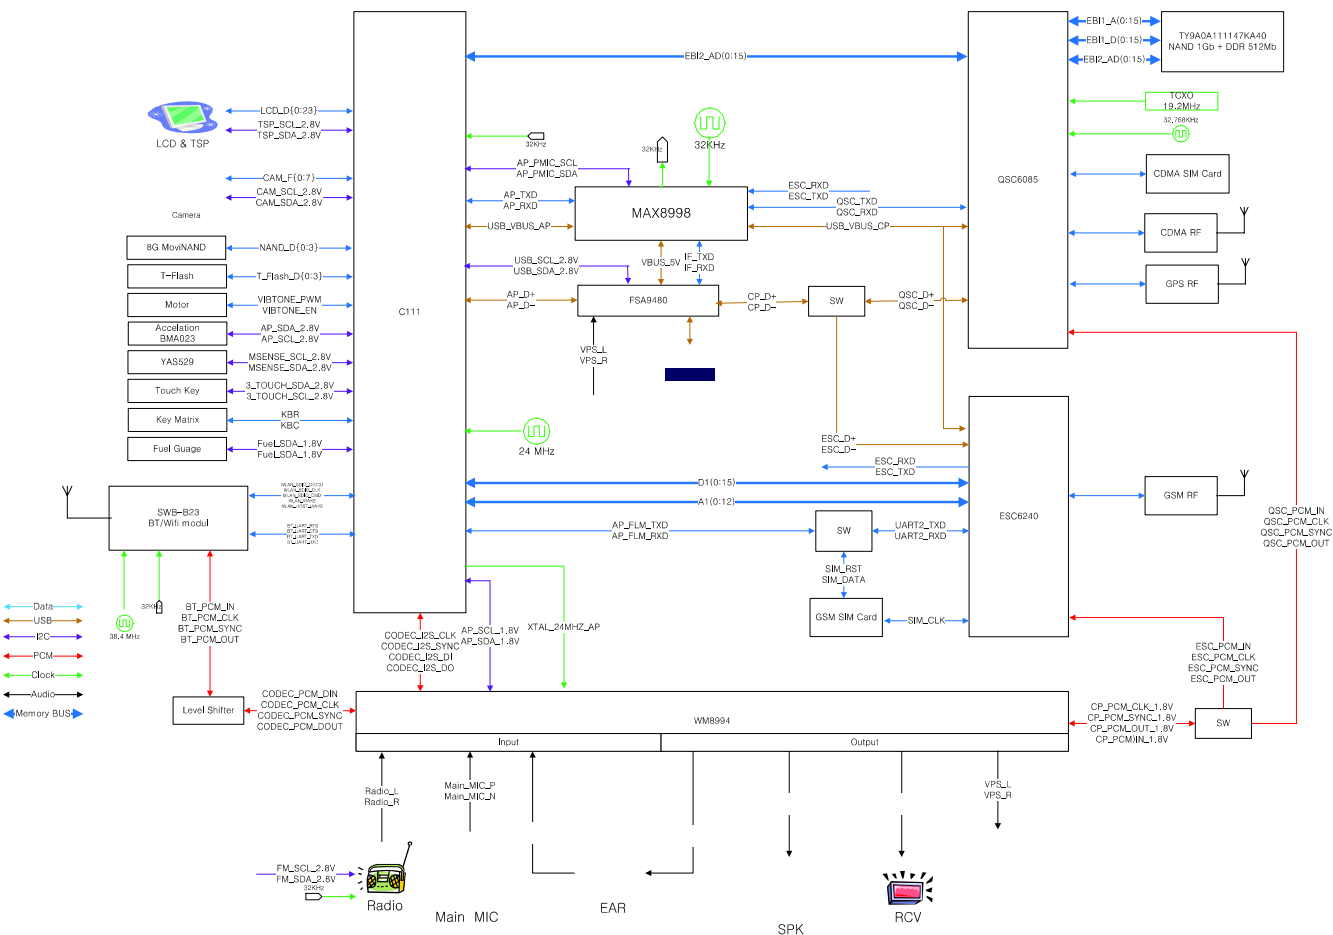

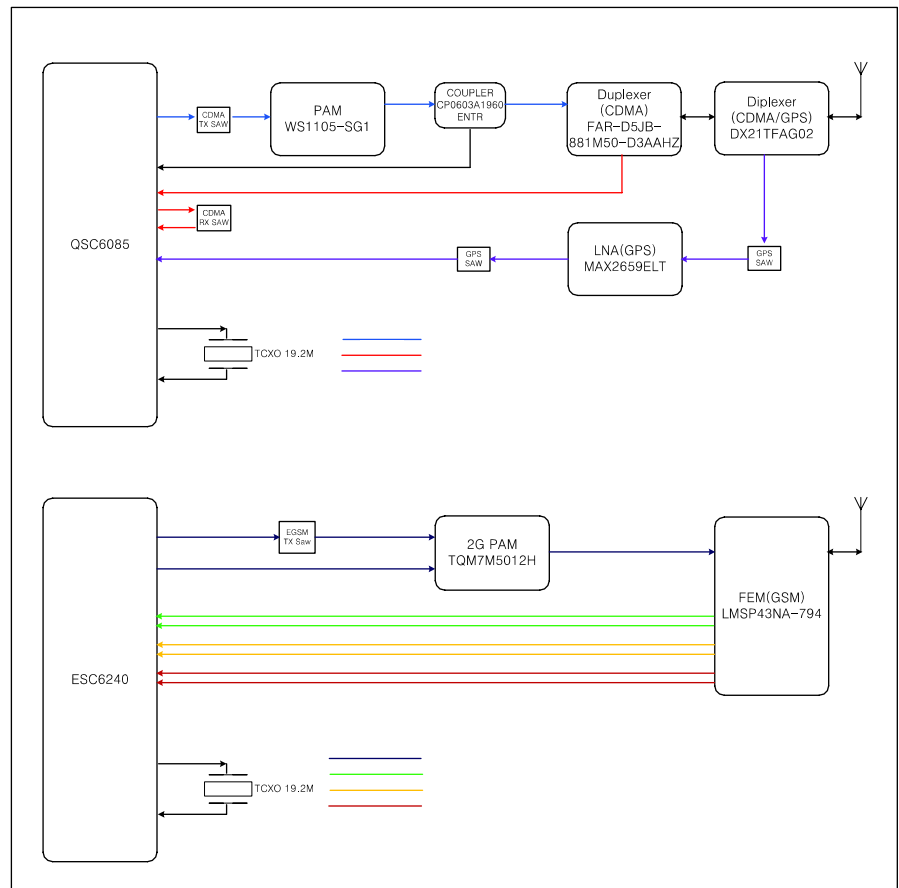


8-2.主板图

8-2-1.顶部







8-2-2.底部

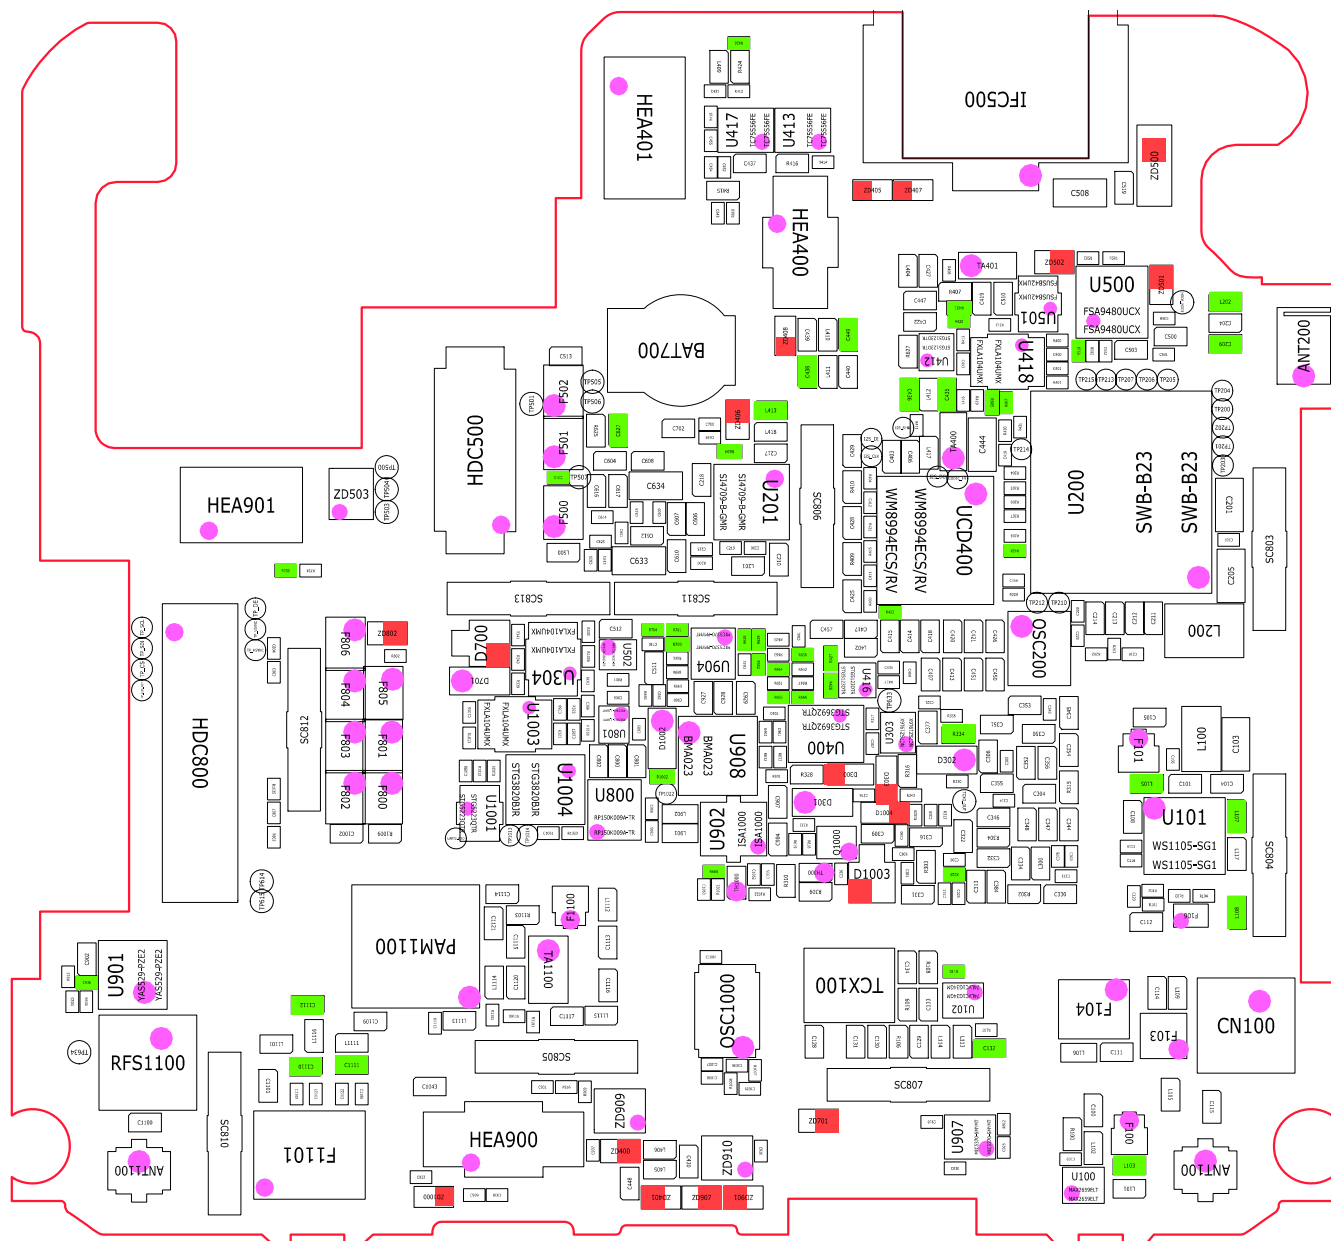

8-3.故障排除


8-3-1开机

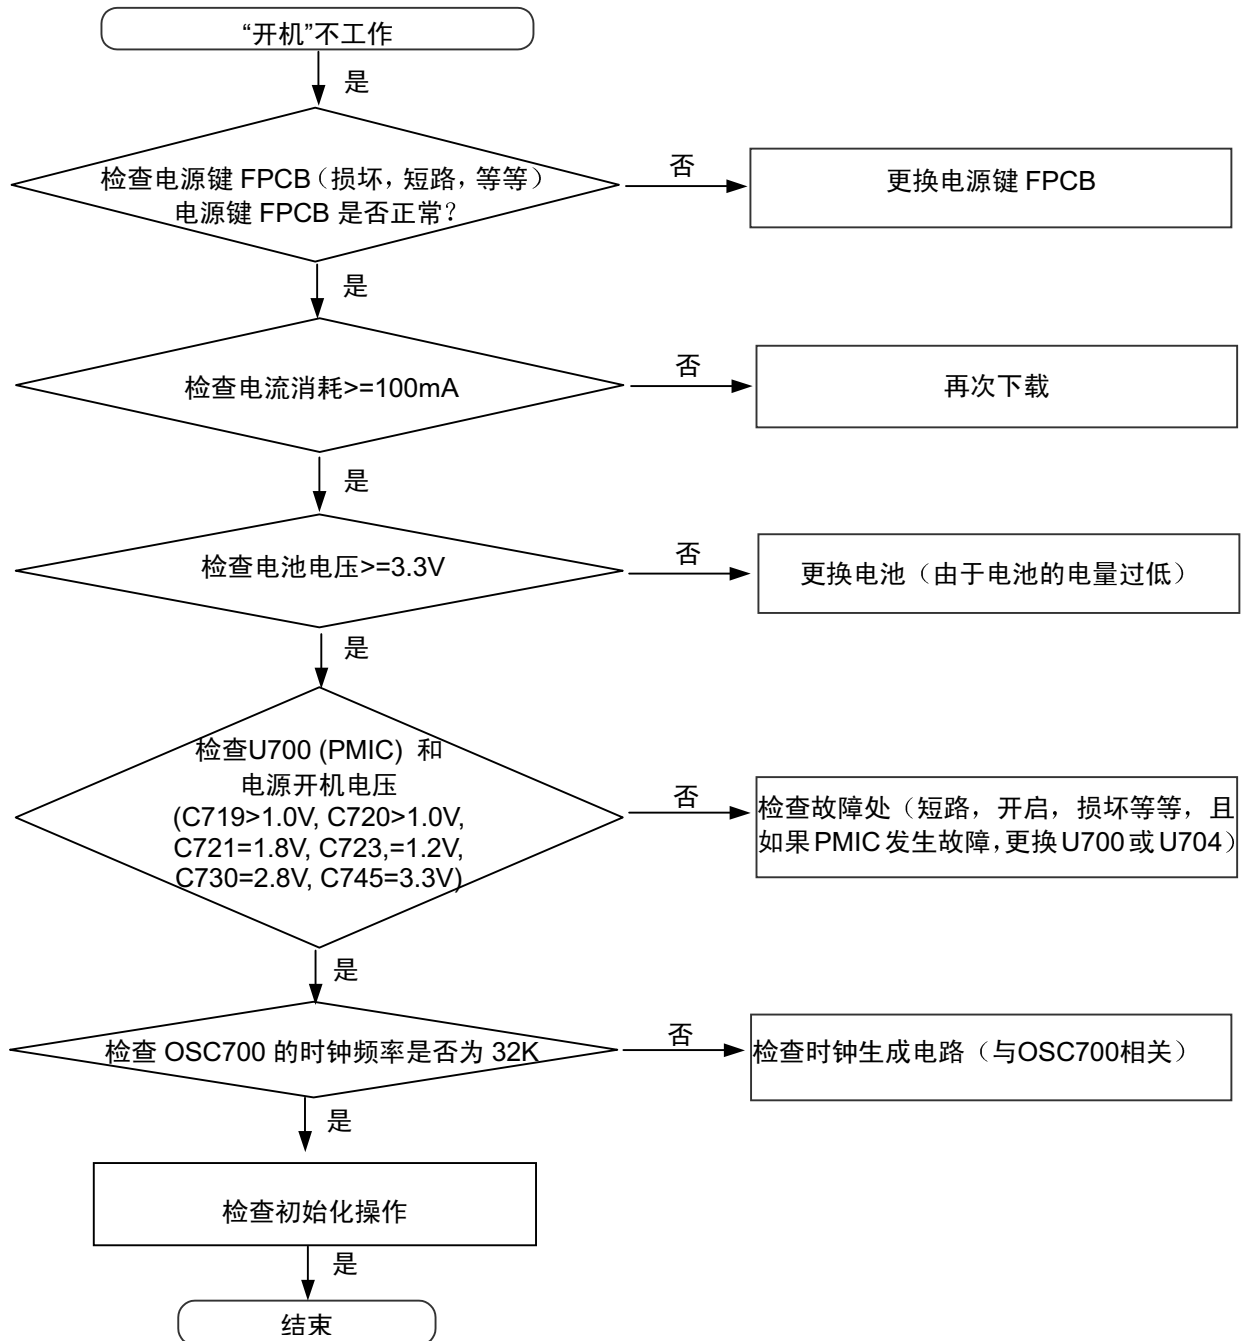


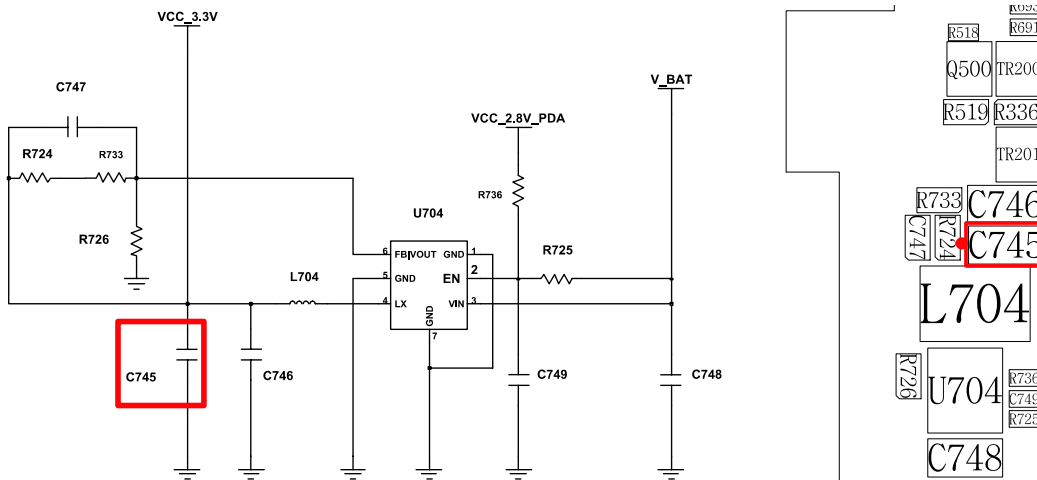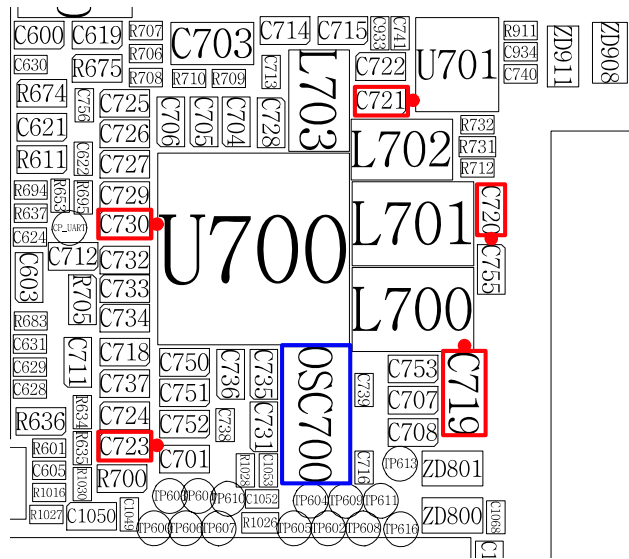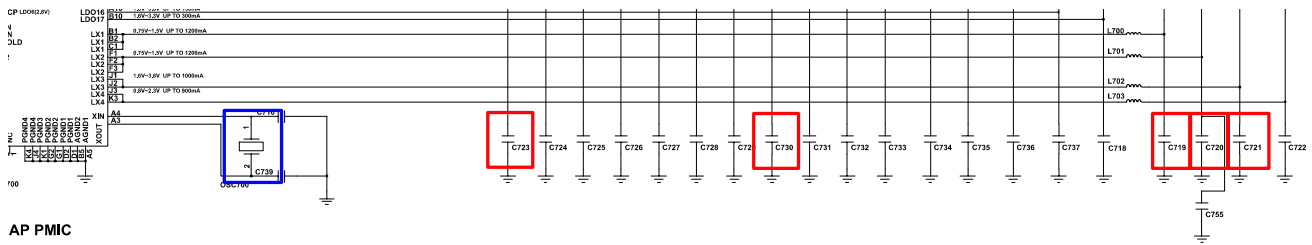



UME


8-3-2. 初始化

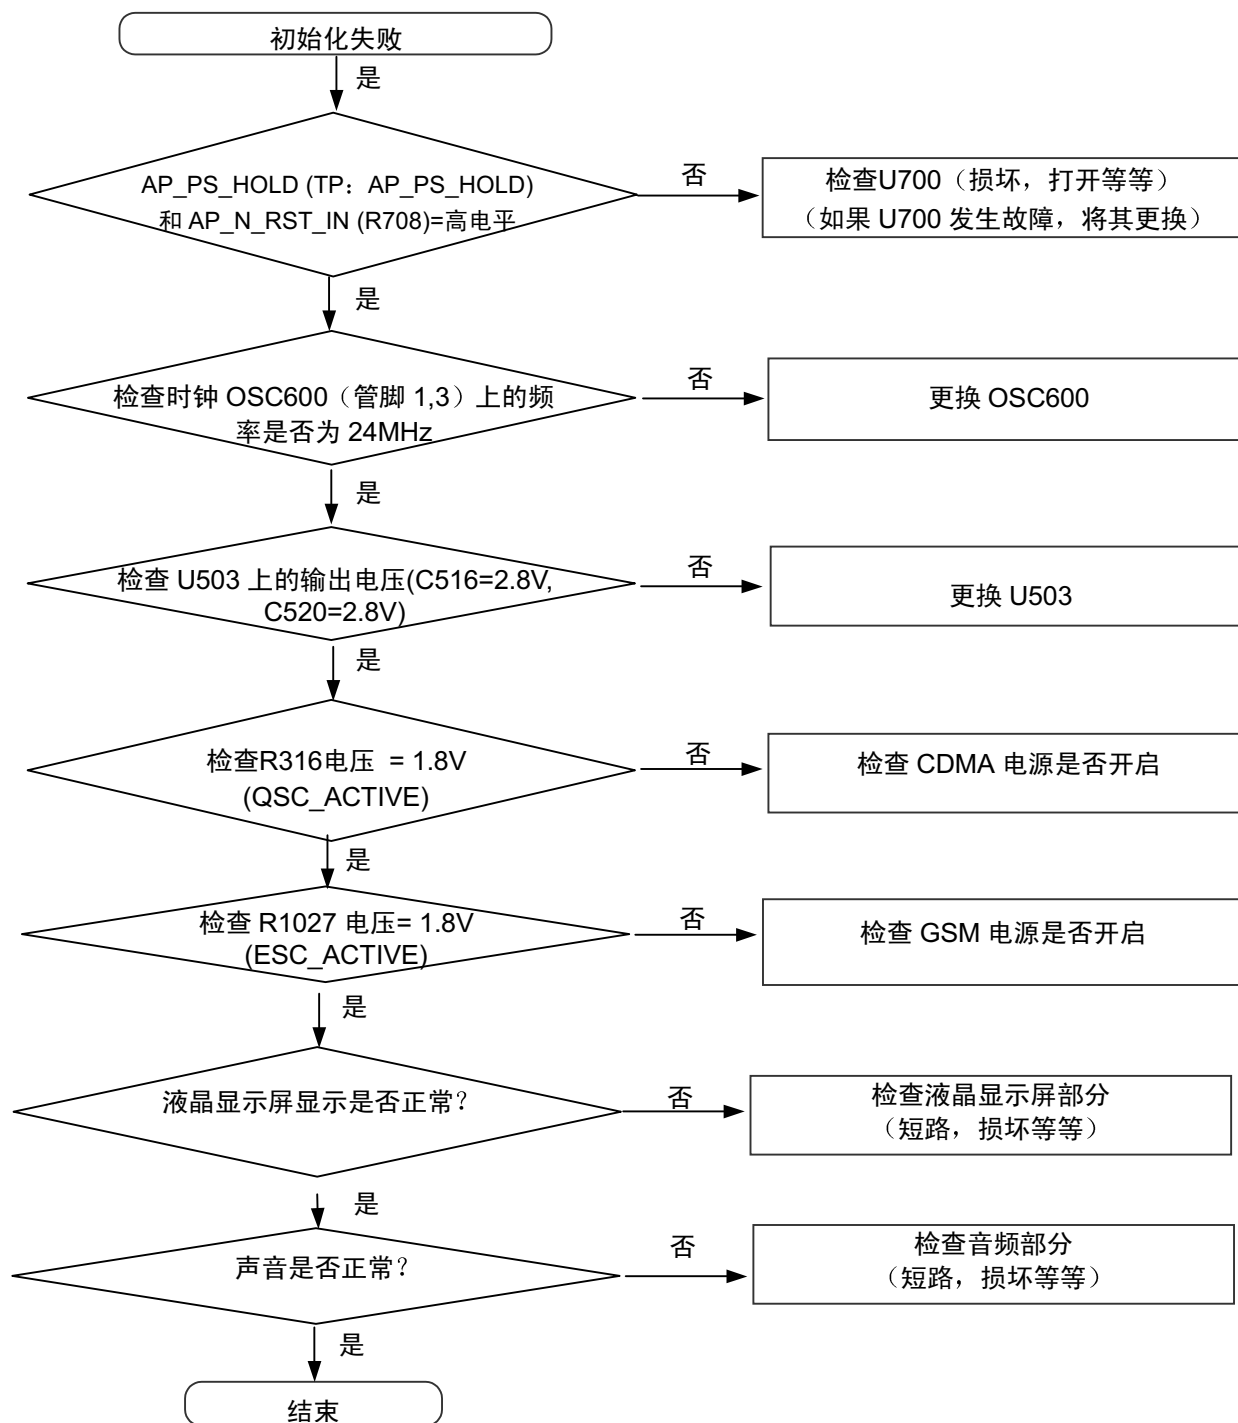

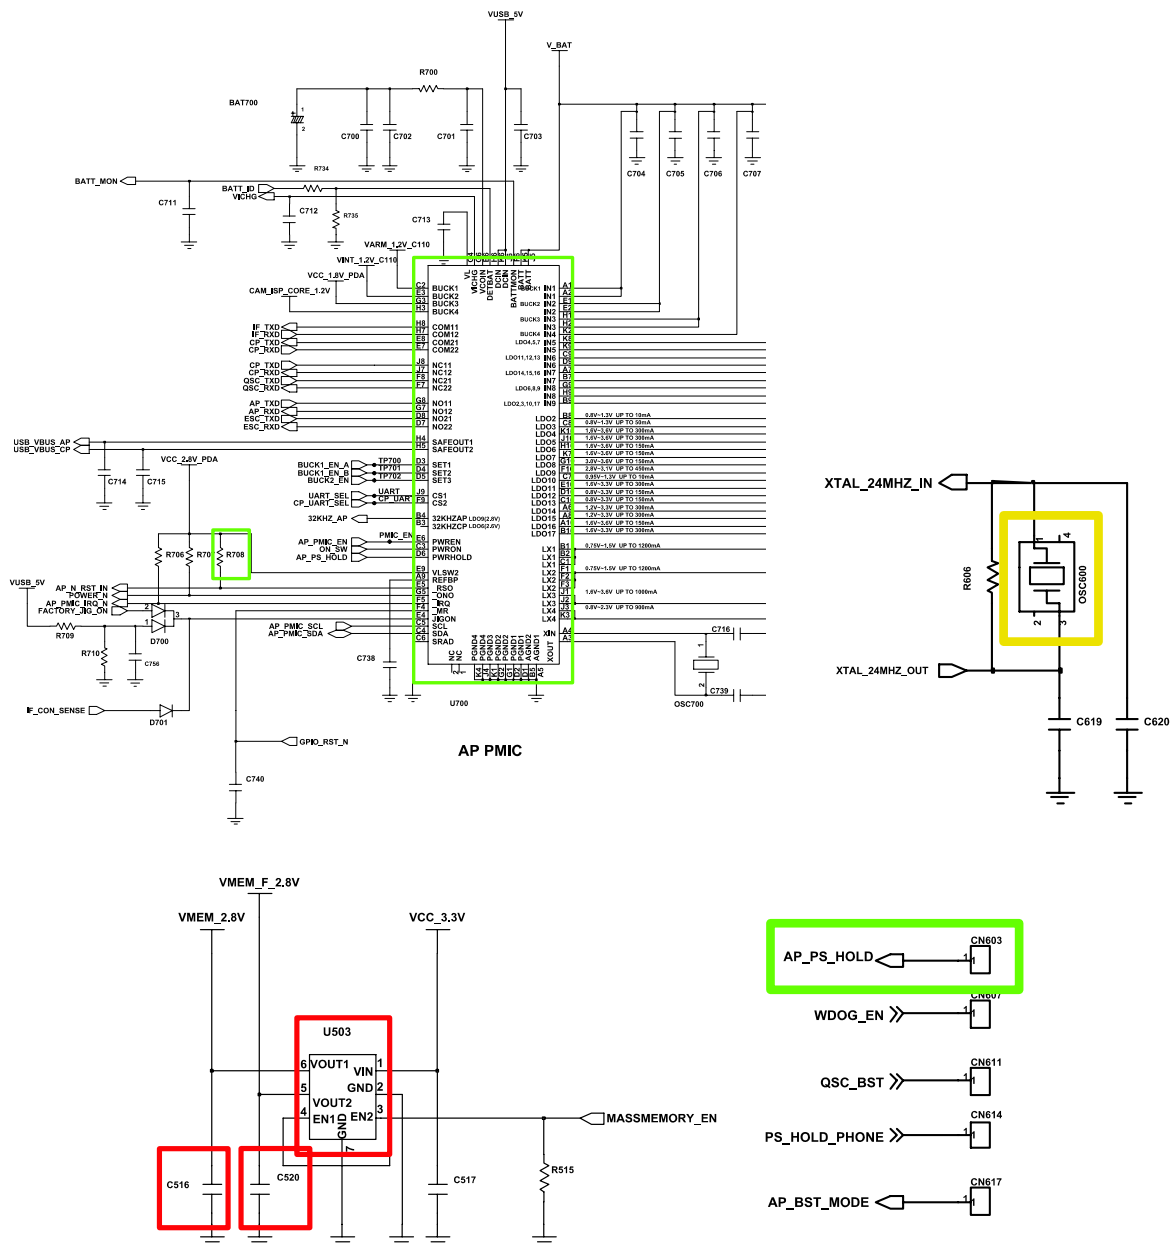


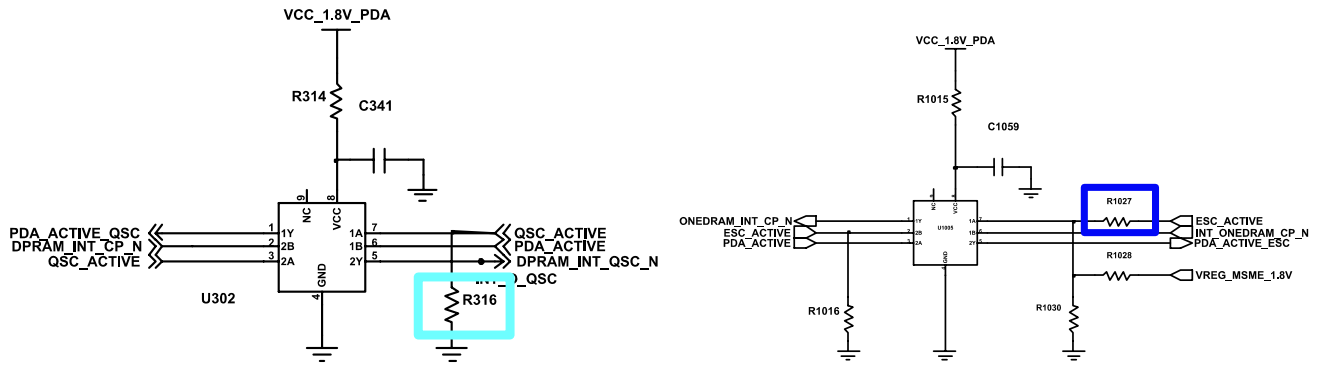

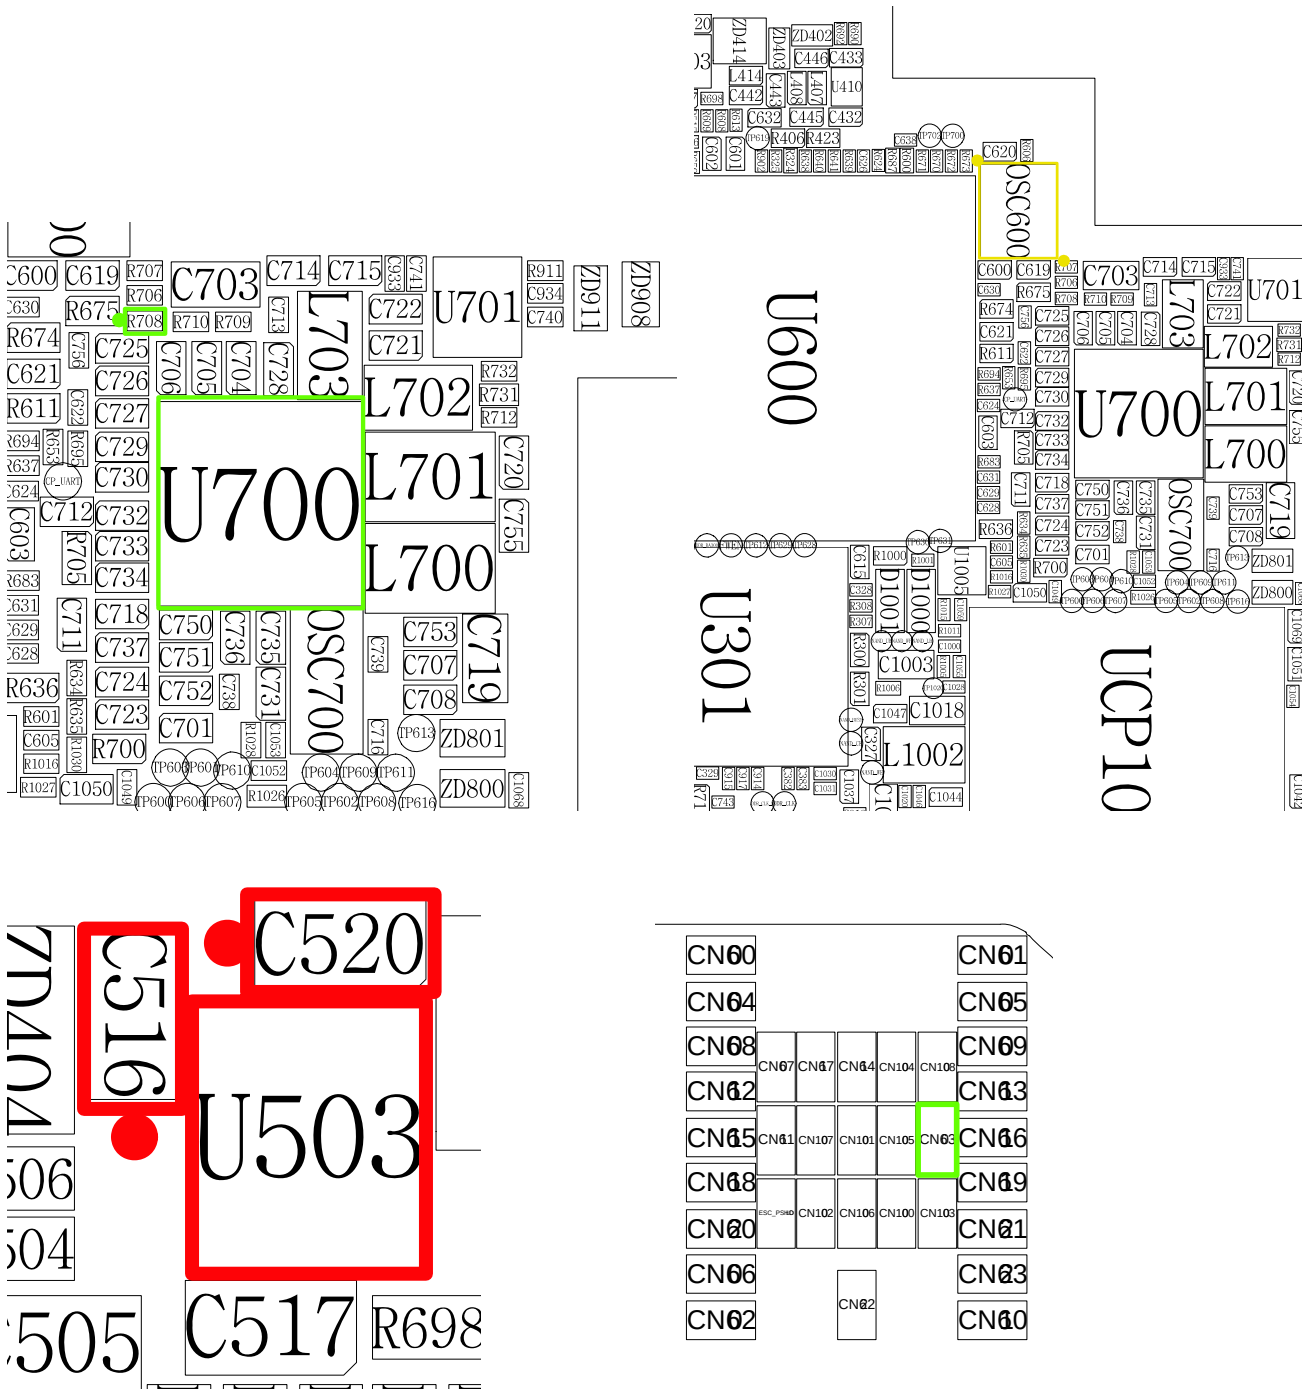


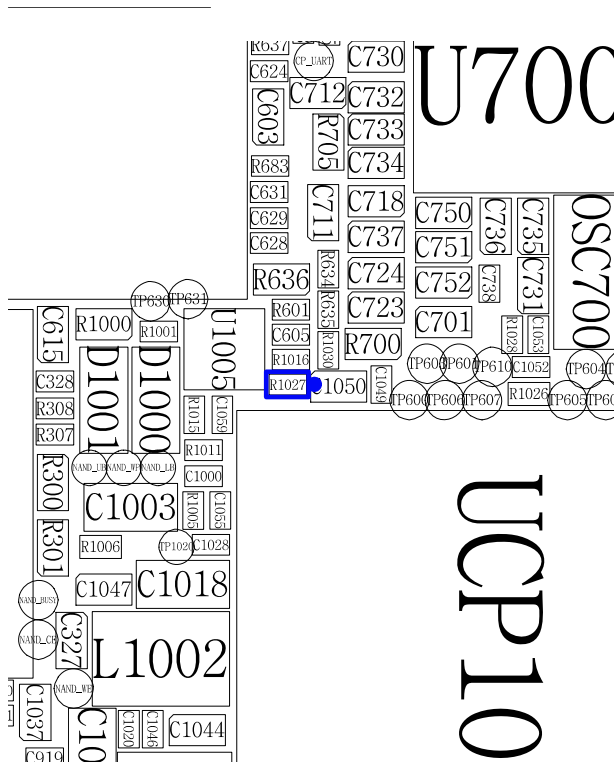


8-3-3. 充电部分

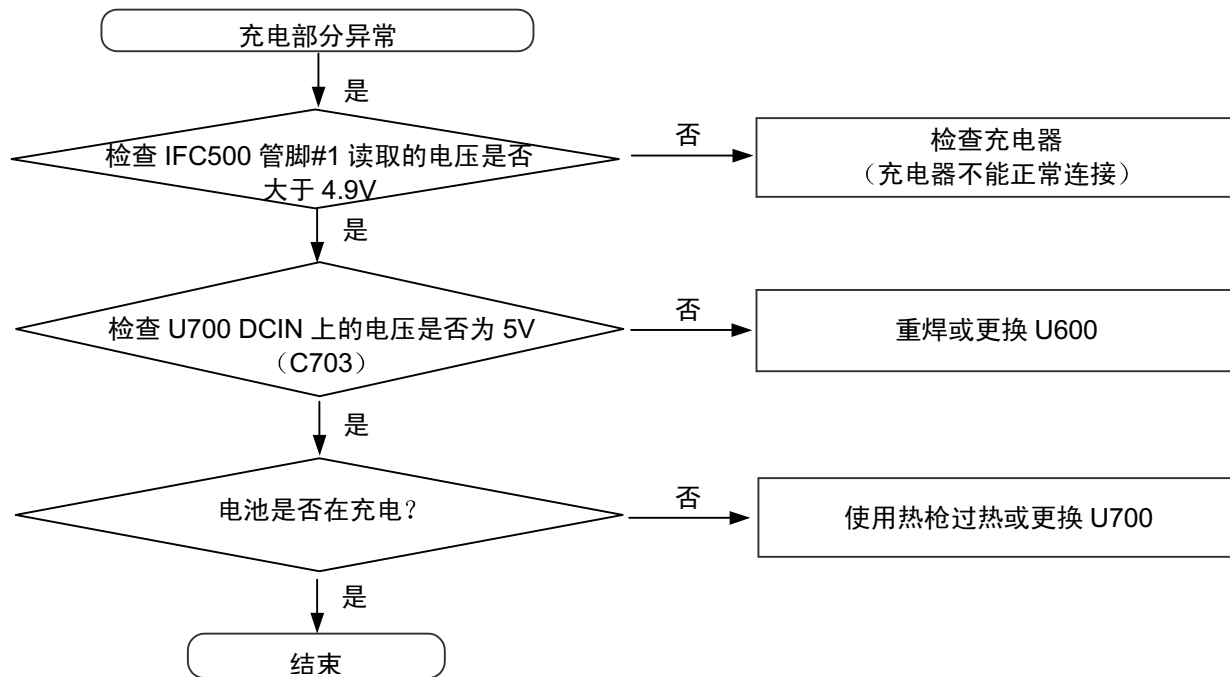


8-3-4.5M 相机


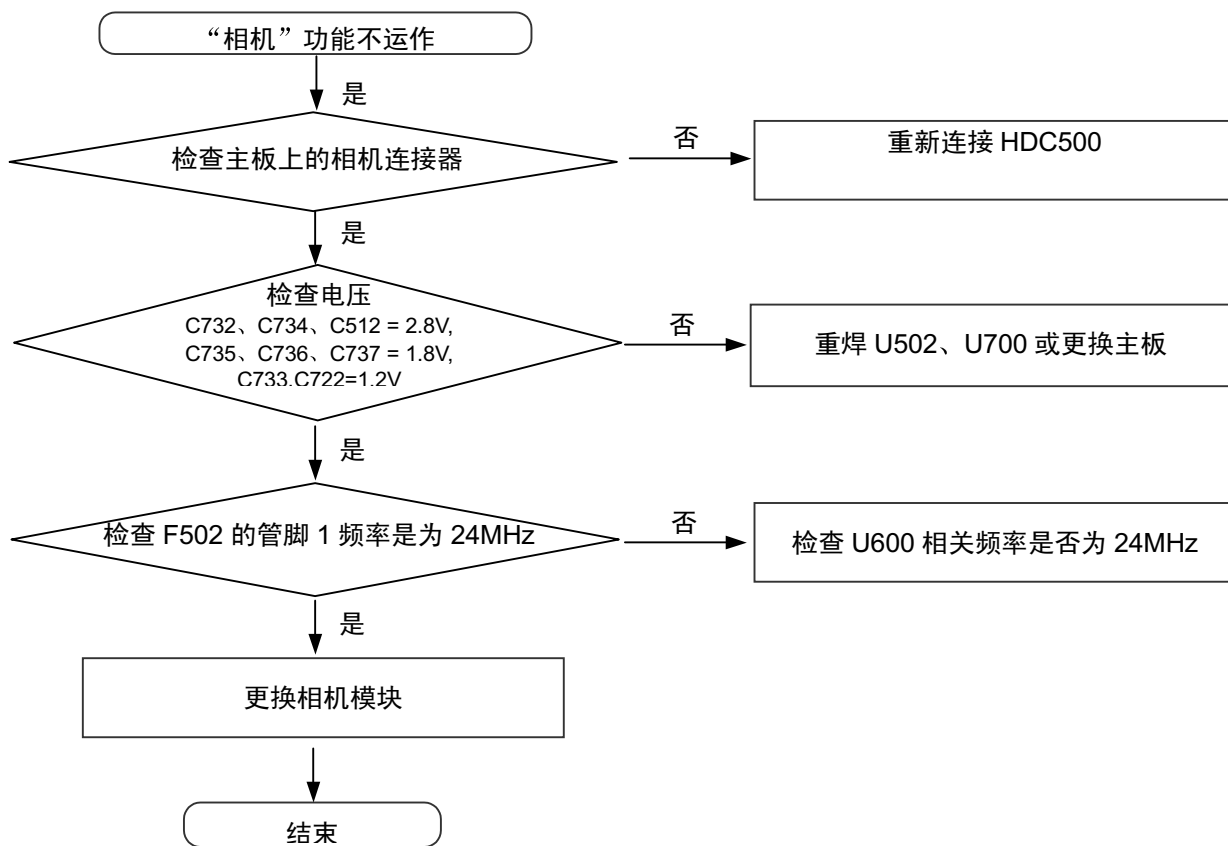


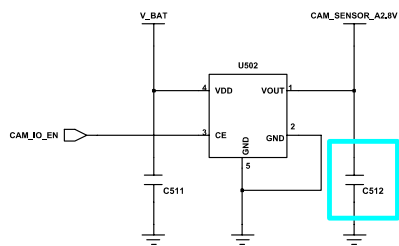


CAMERA LDO

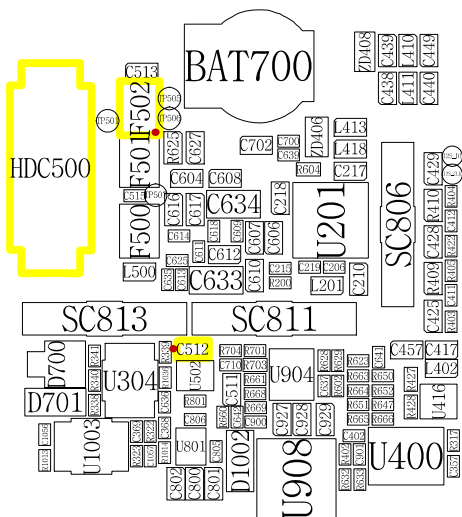




8-3-5.检查振动电机部分

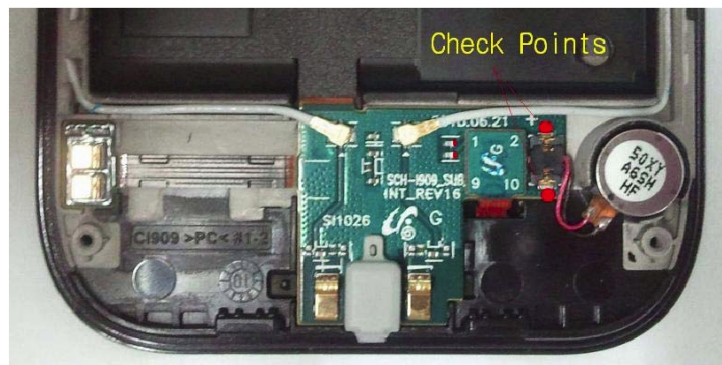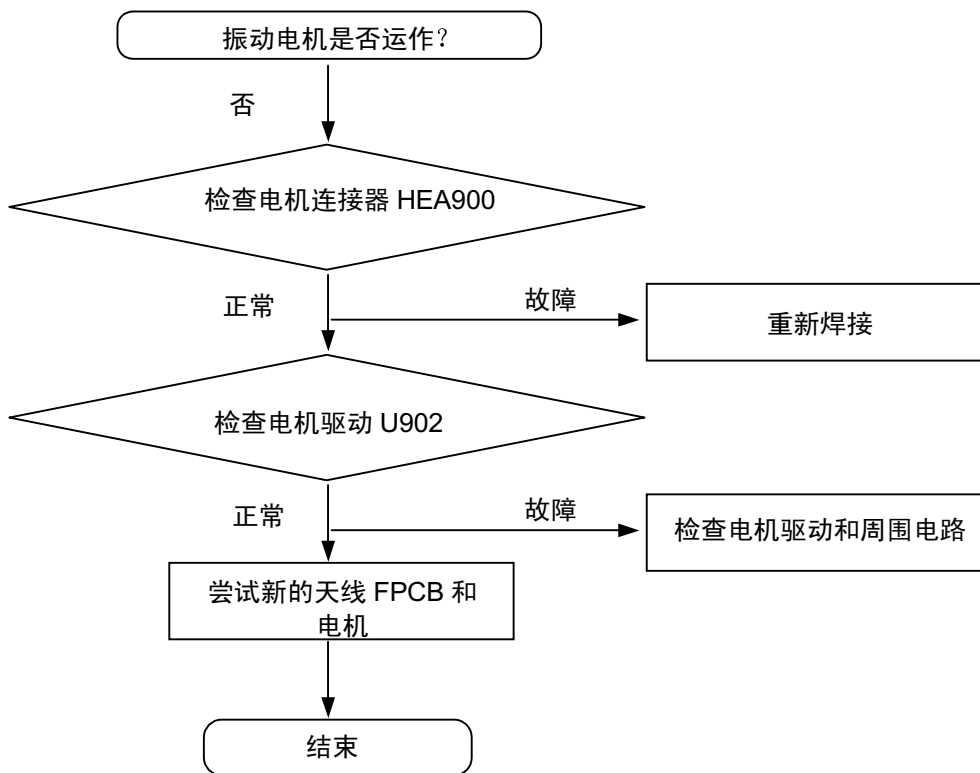


8-3-6.CDMA开启

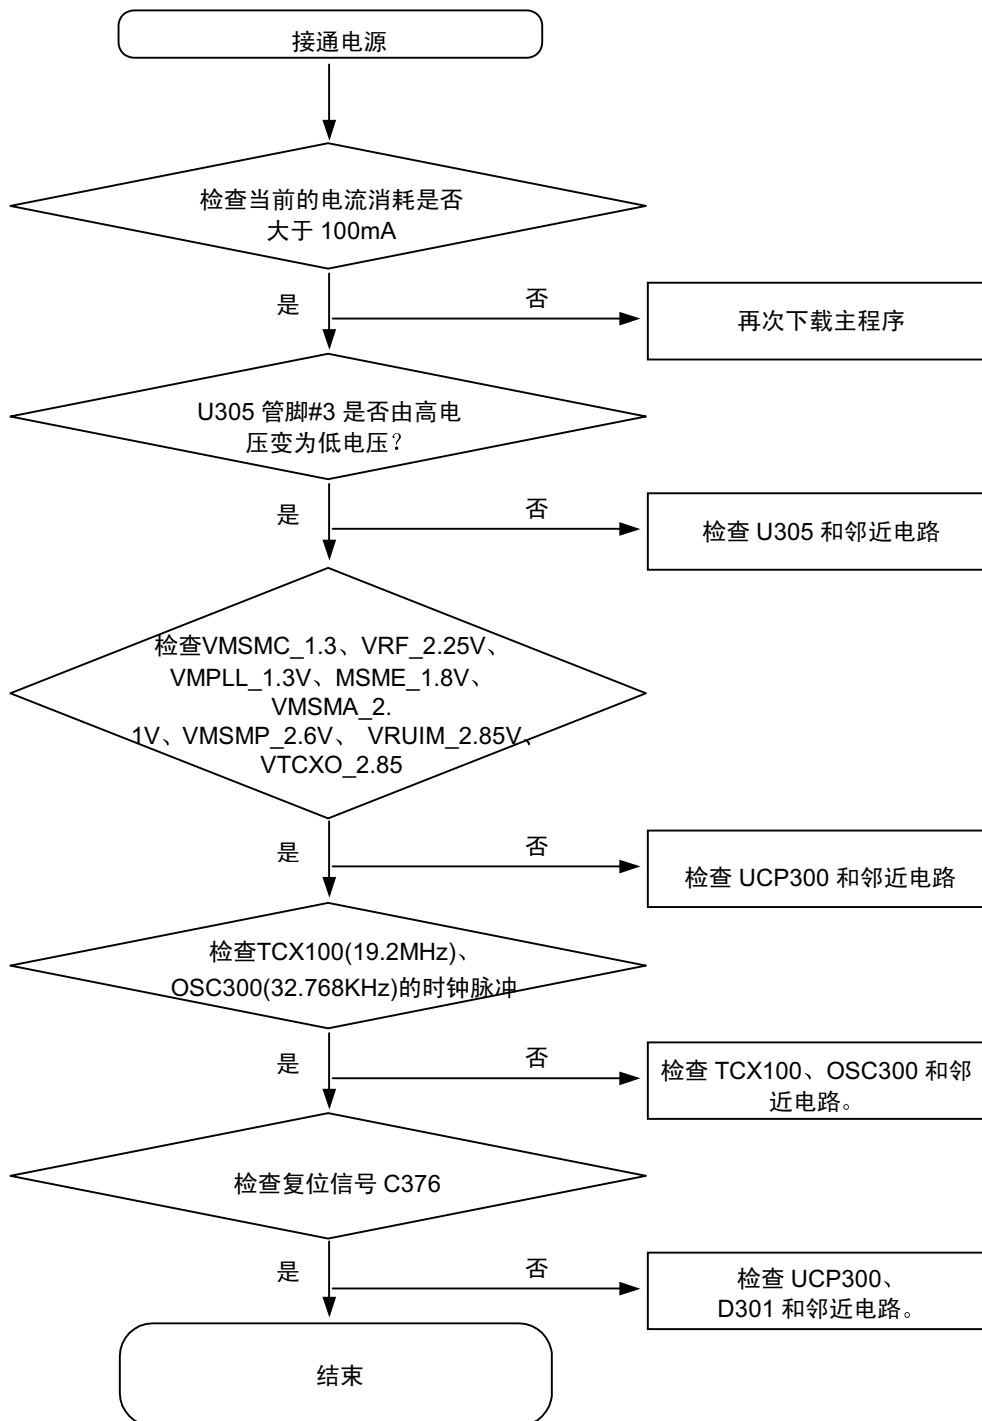


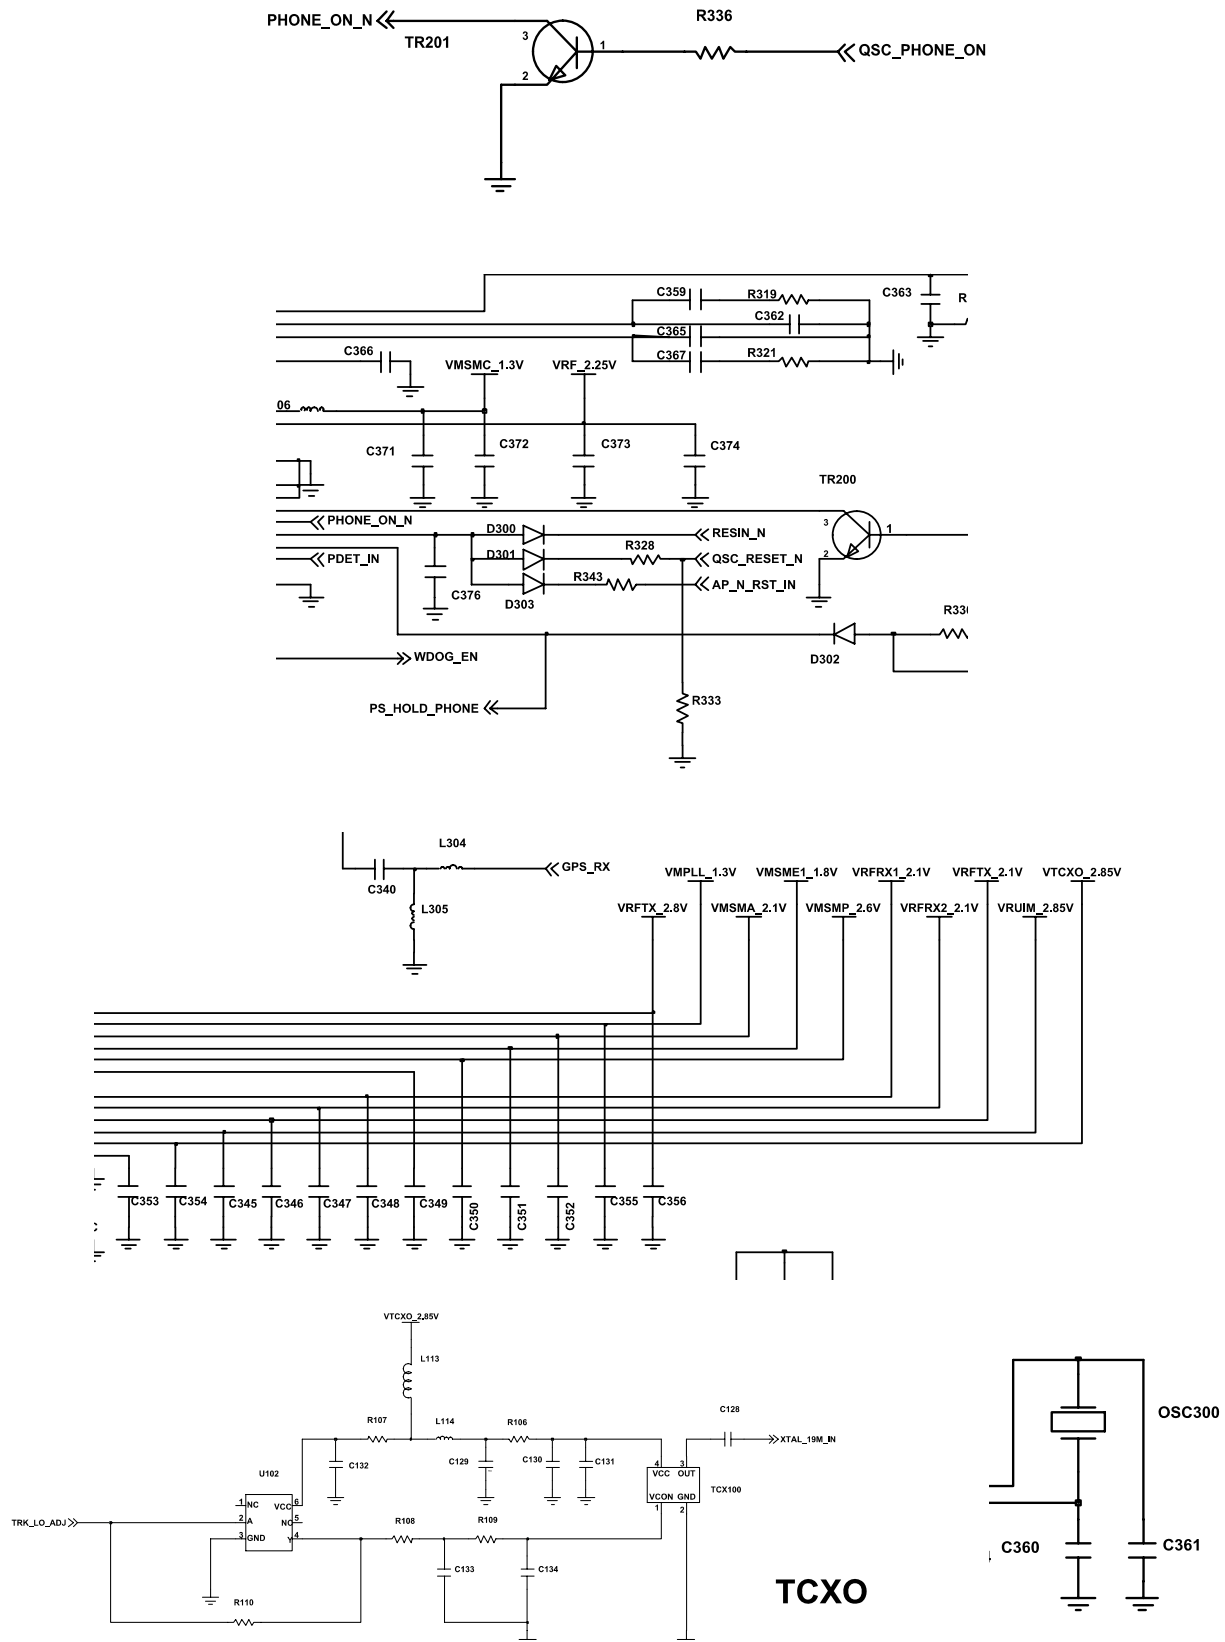

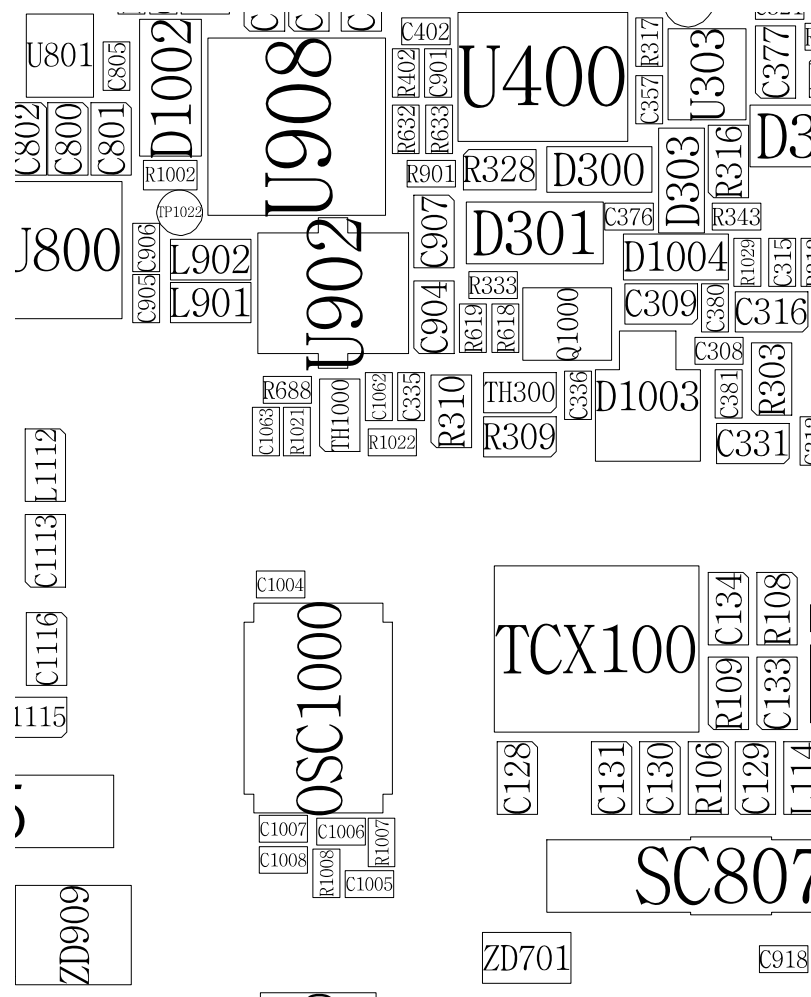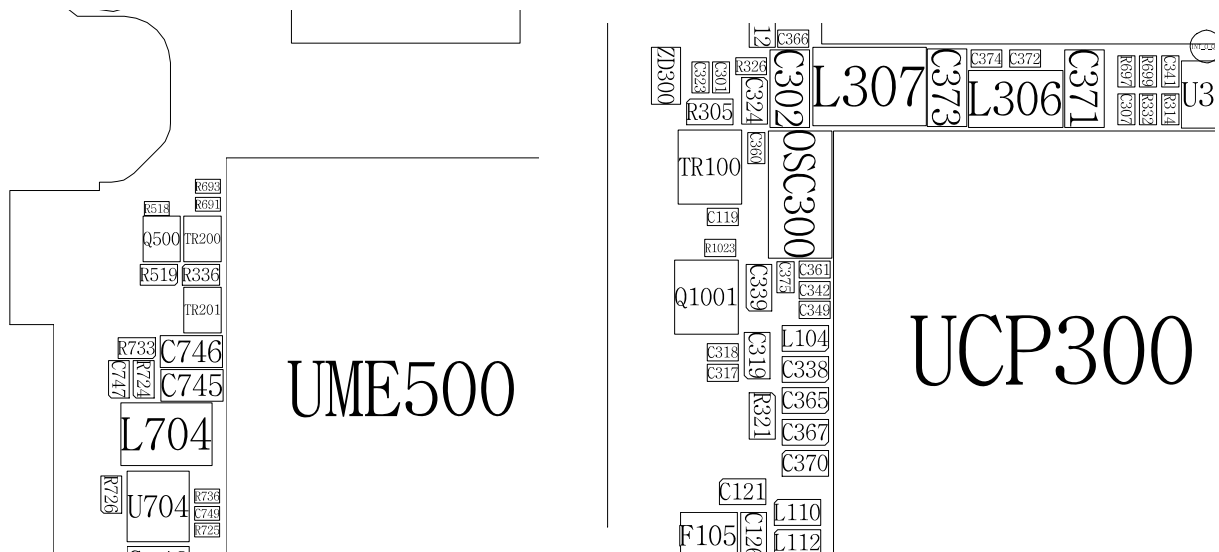


8-3-7.GSM开启

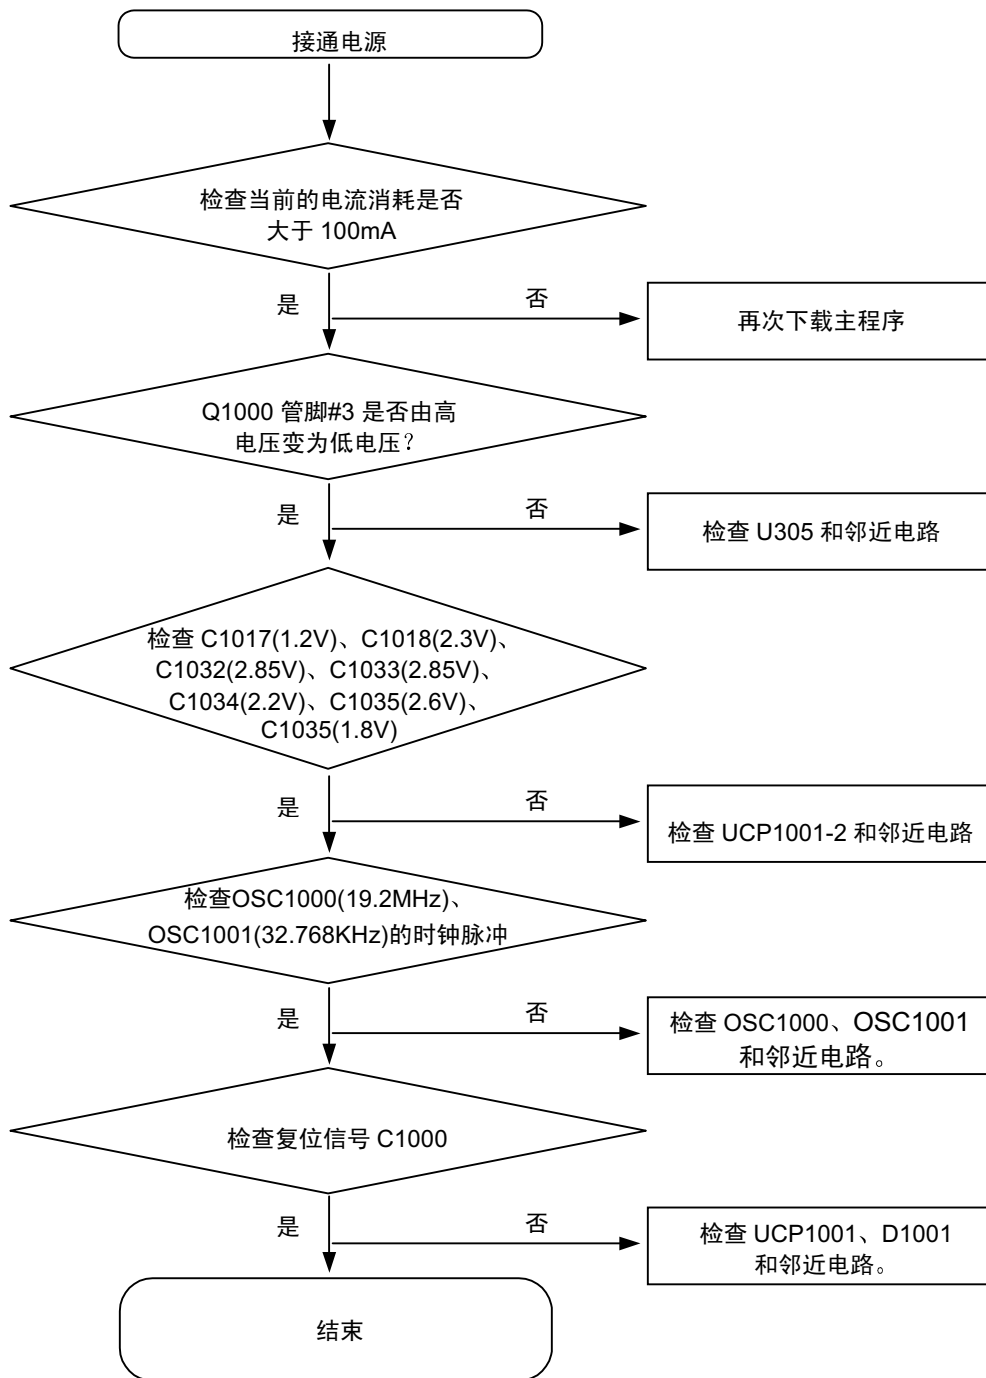


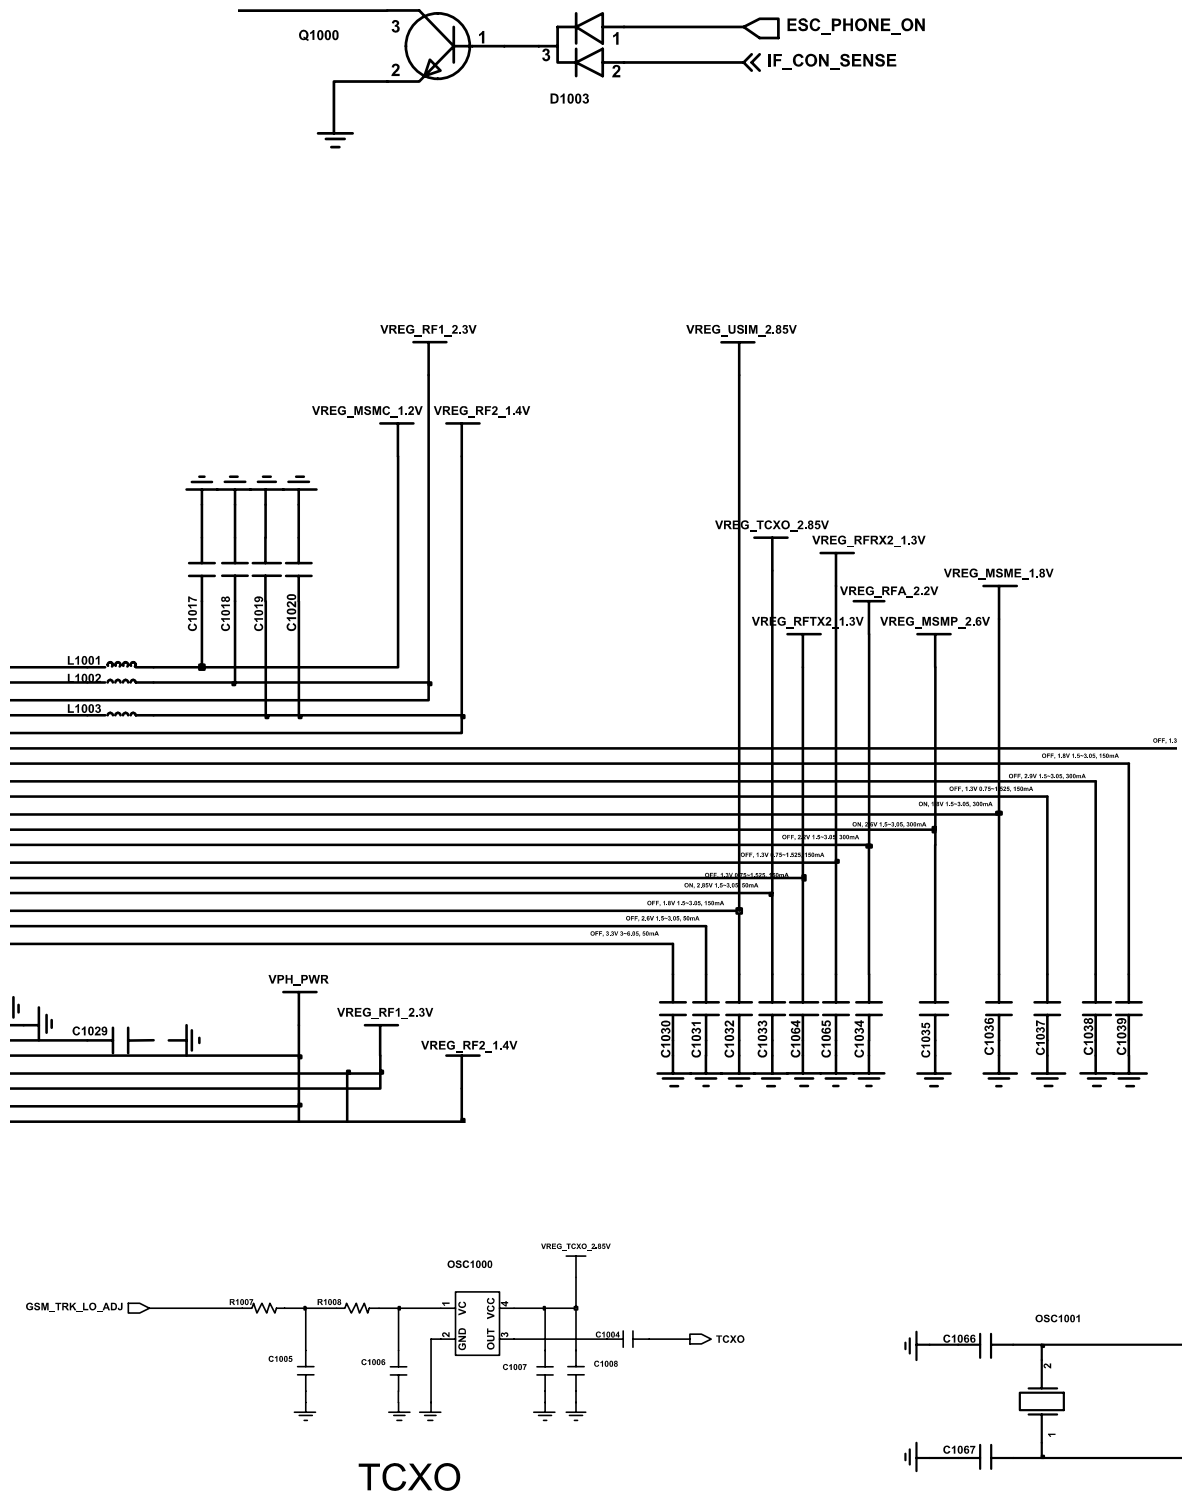


8- 3-8.LCD的运作


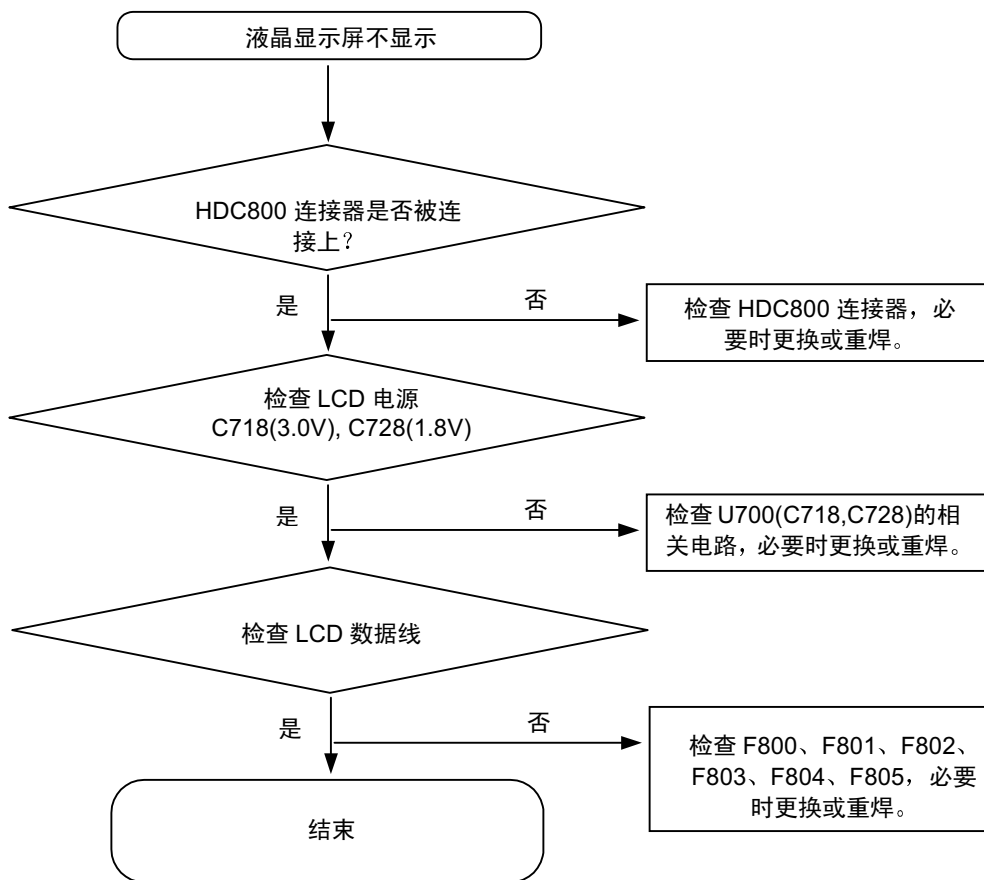








8-3-9.TSP的运作


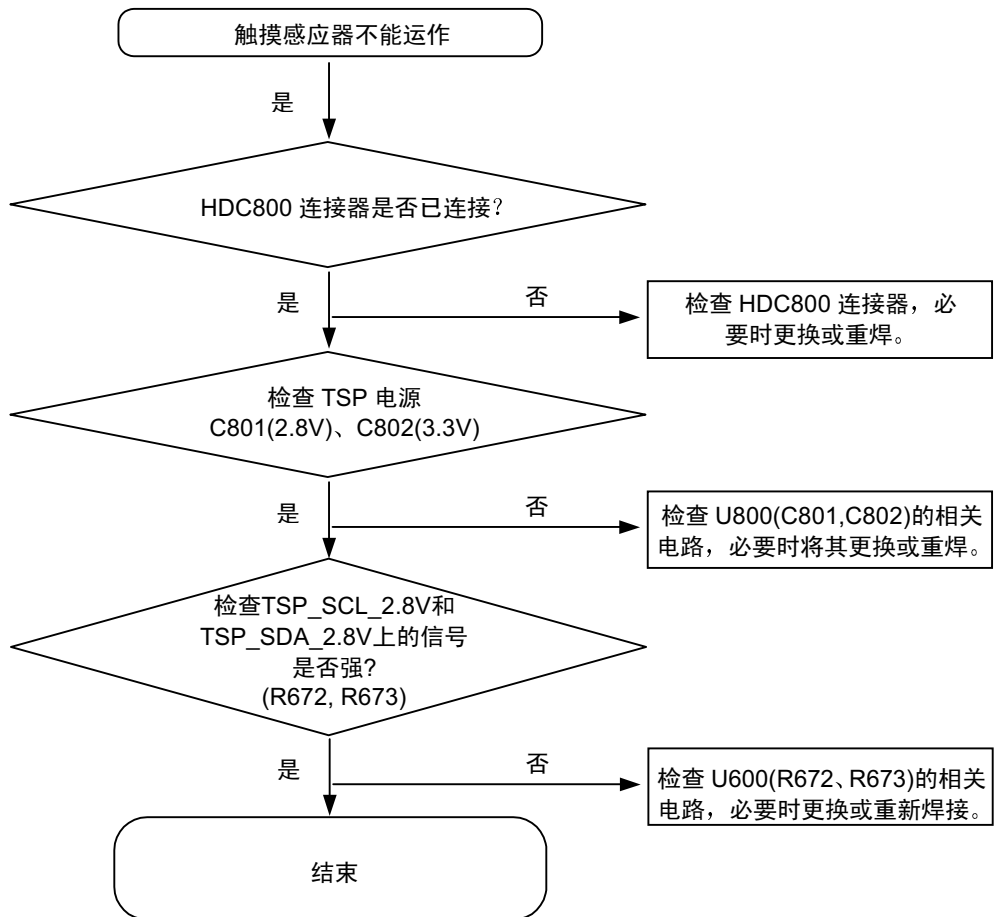


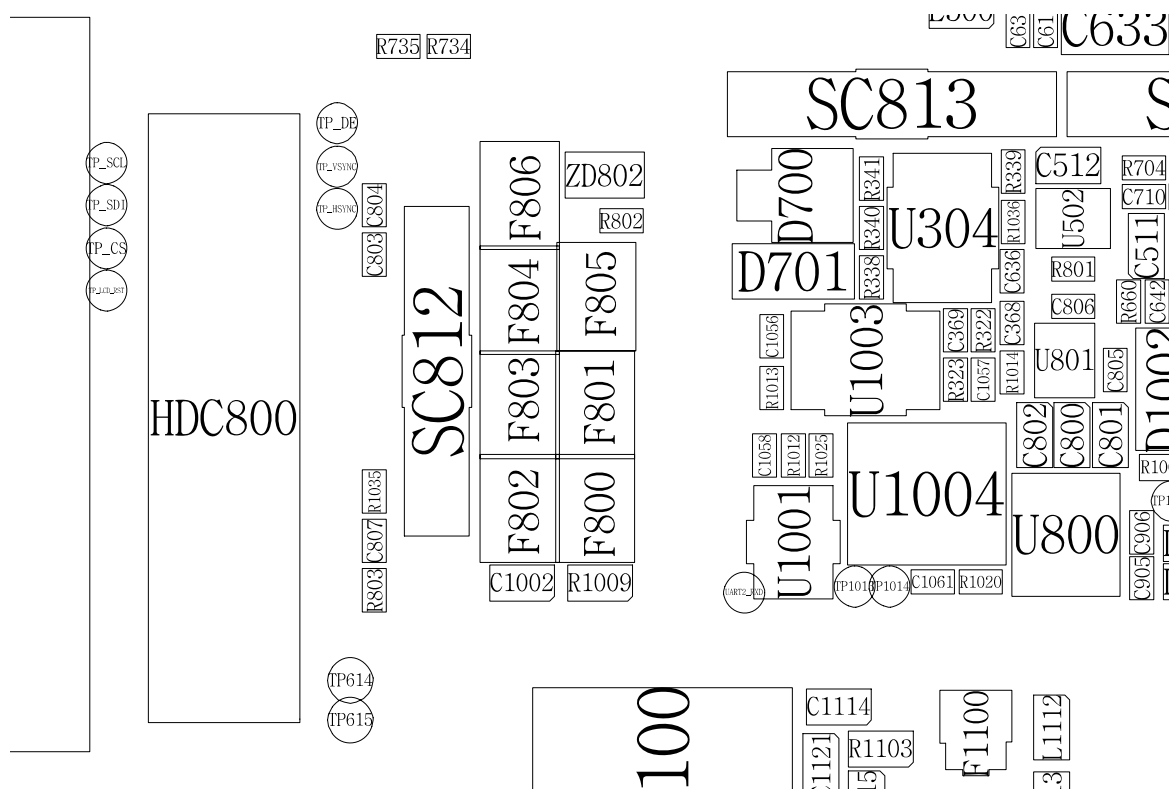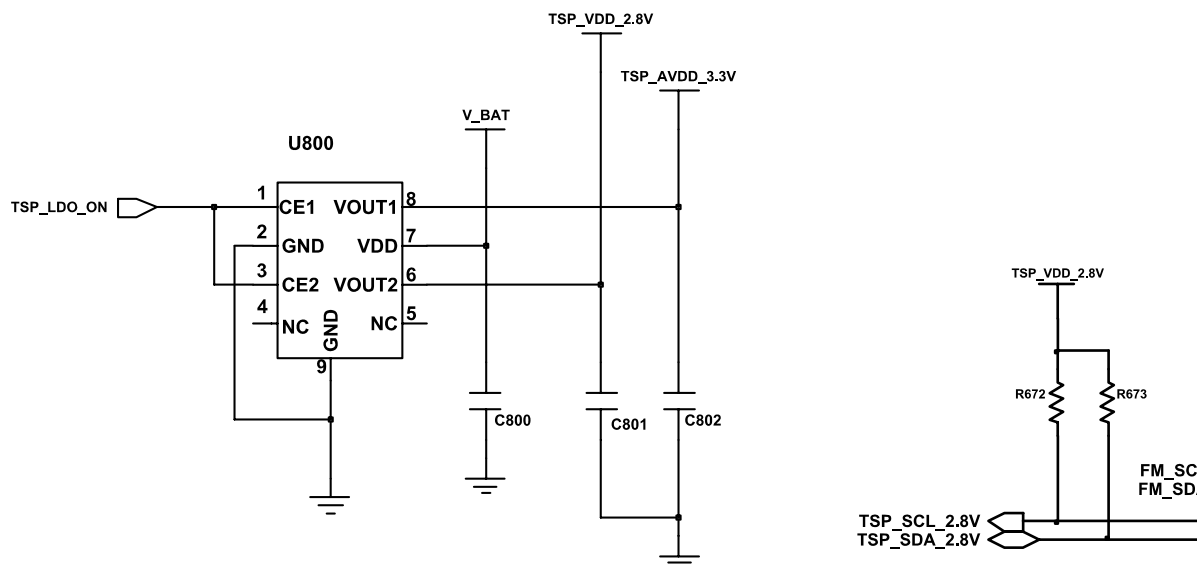

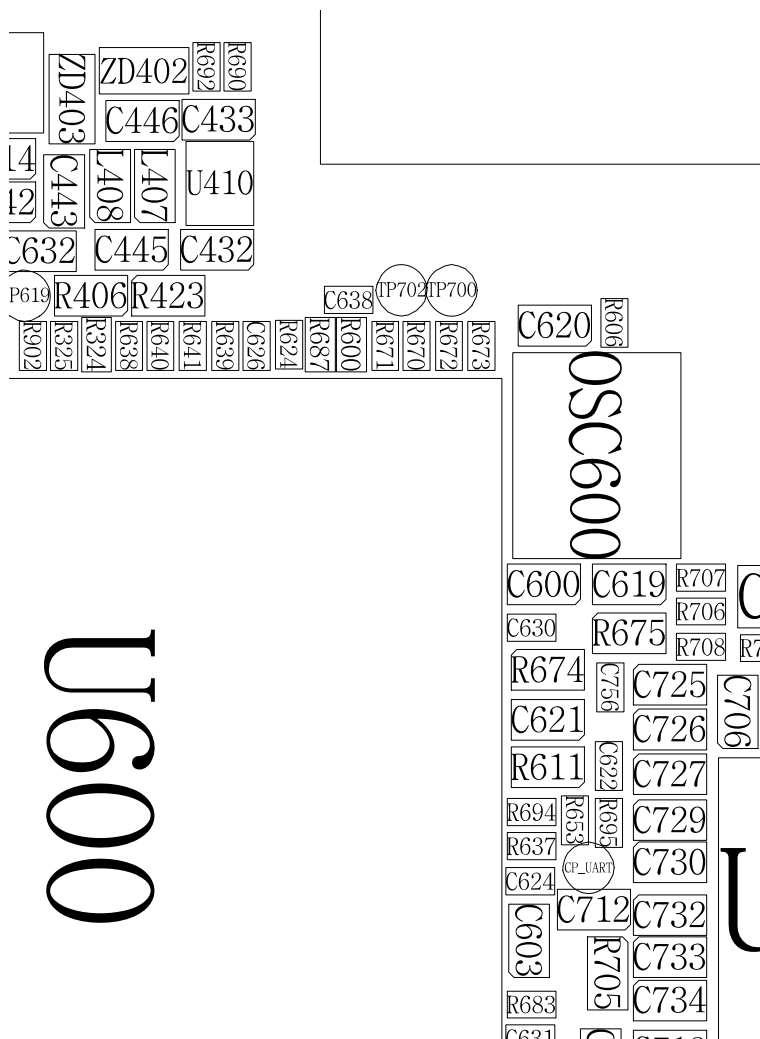




8-3-10.扬声器


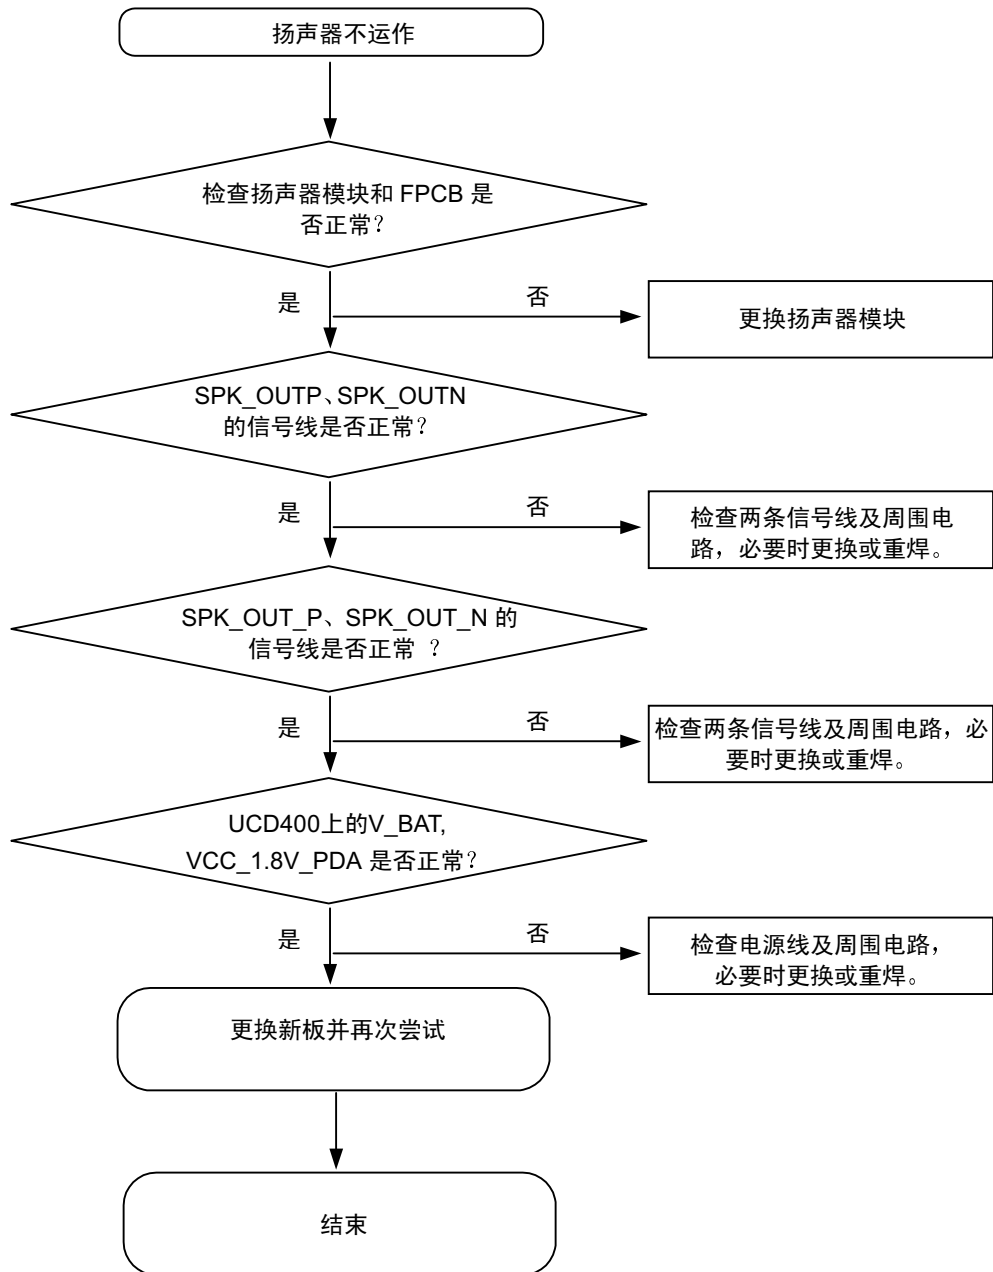


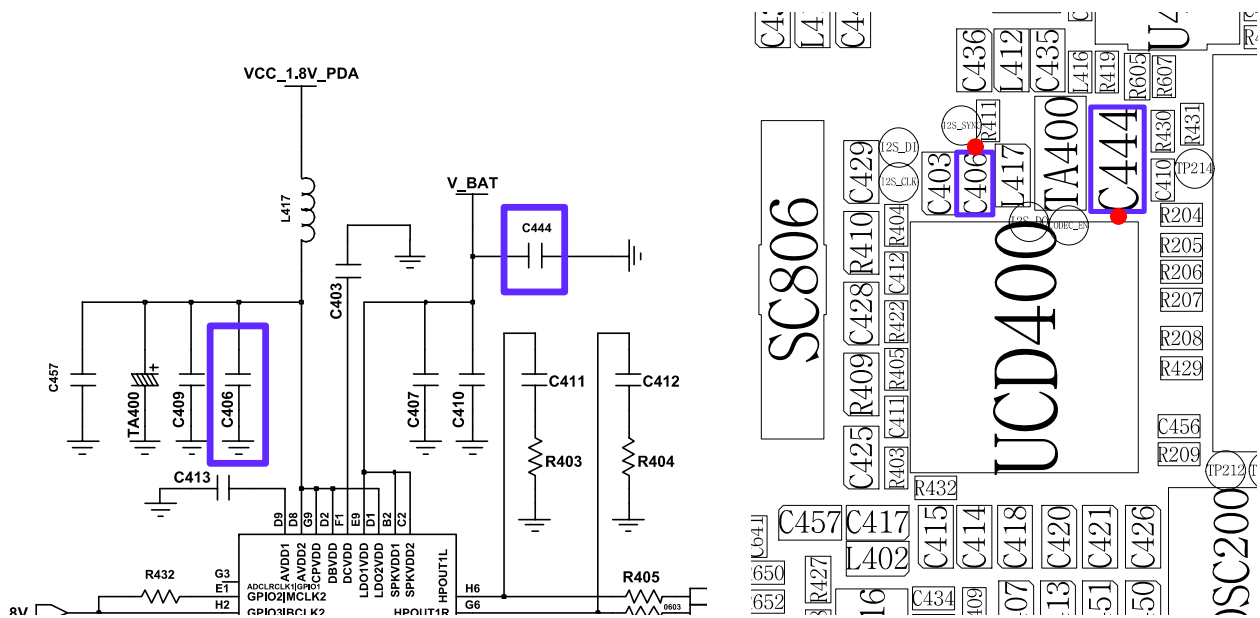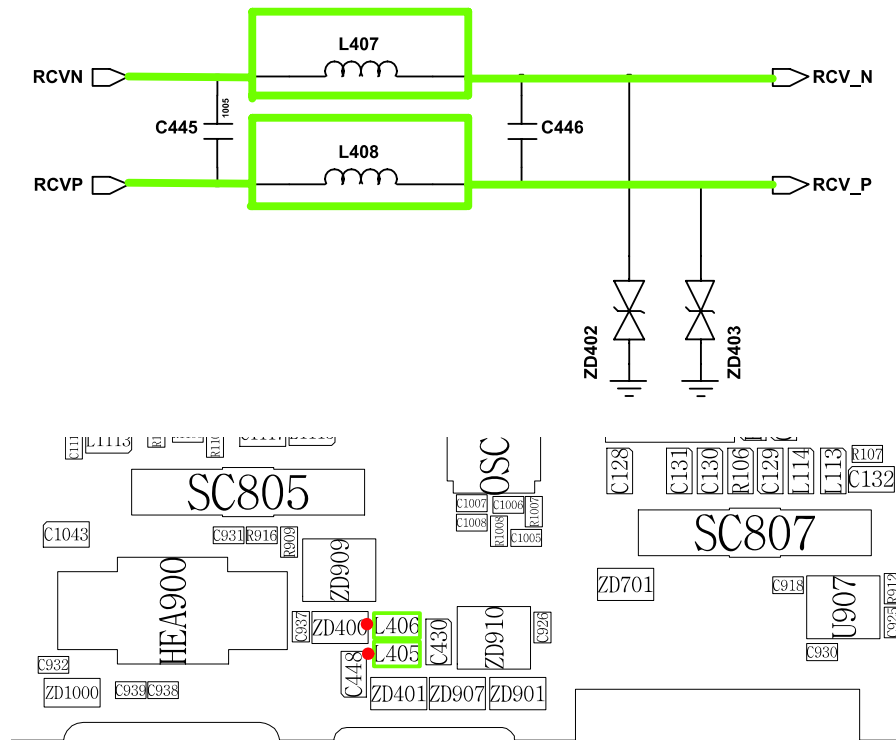


8-3-11. 话筒检查


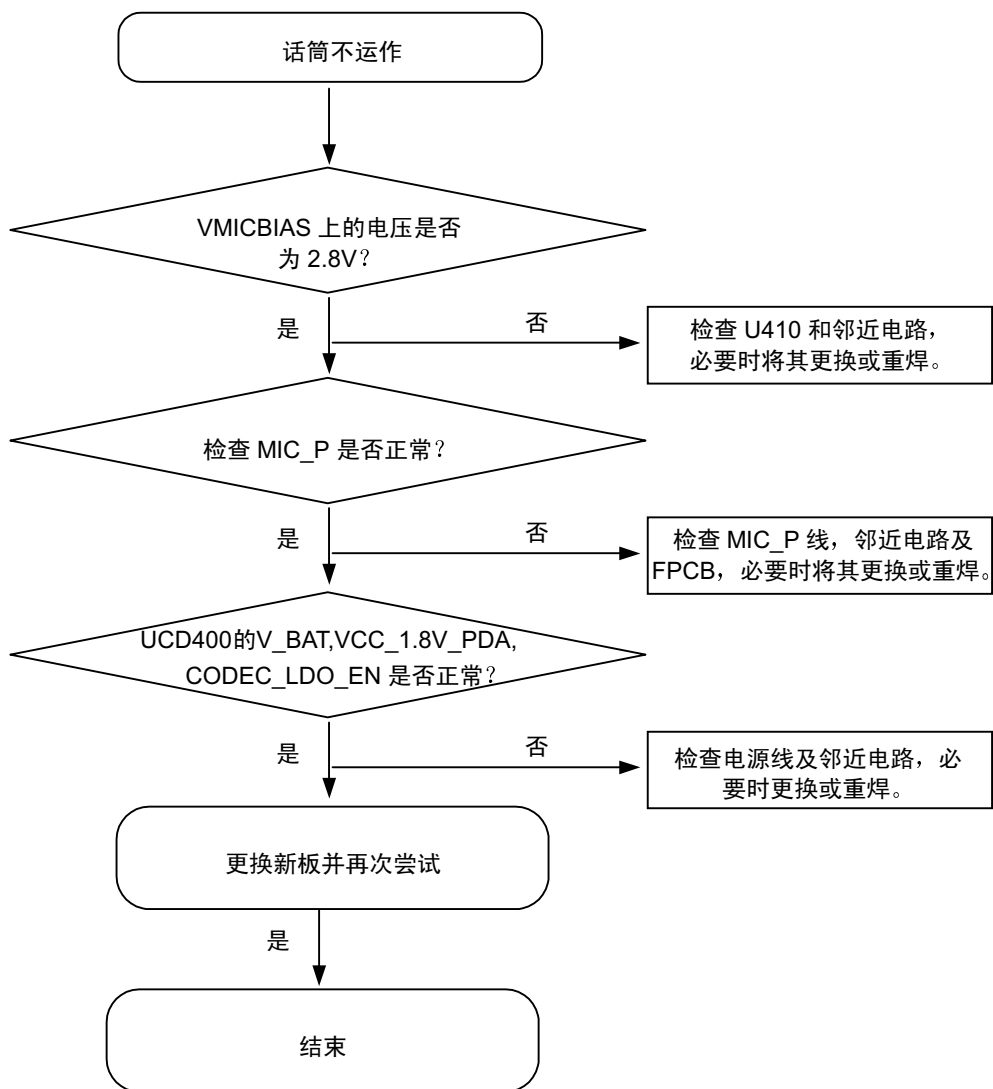


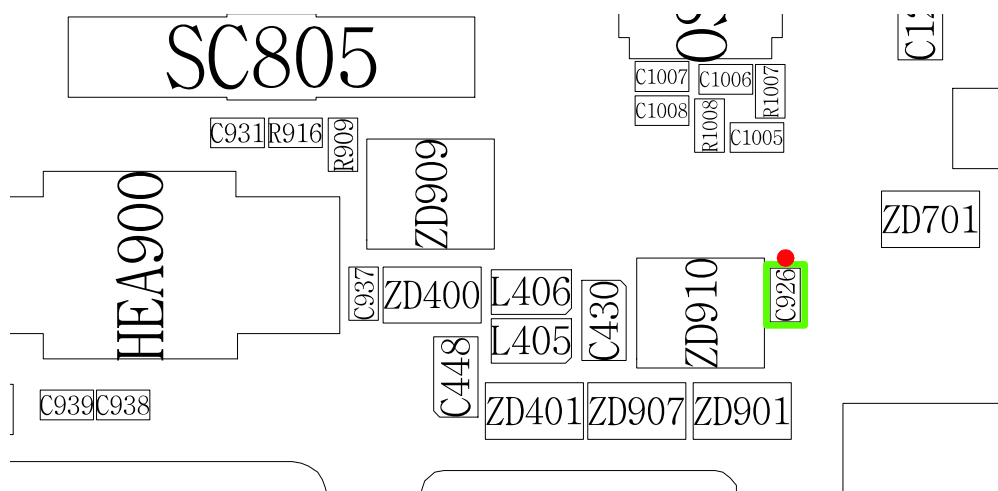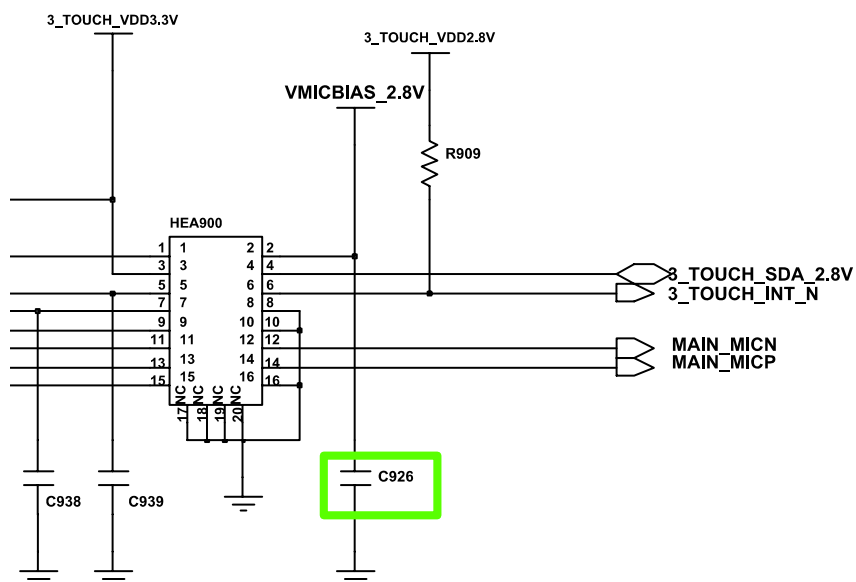

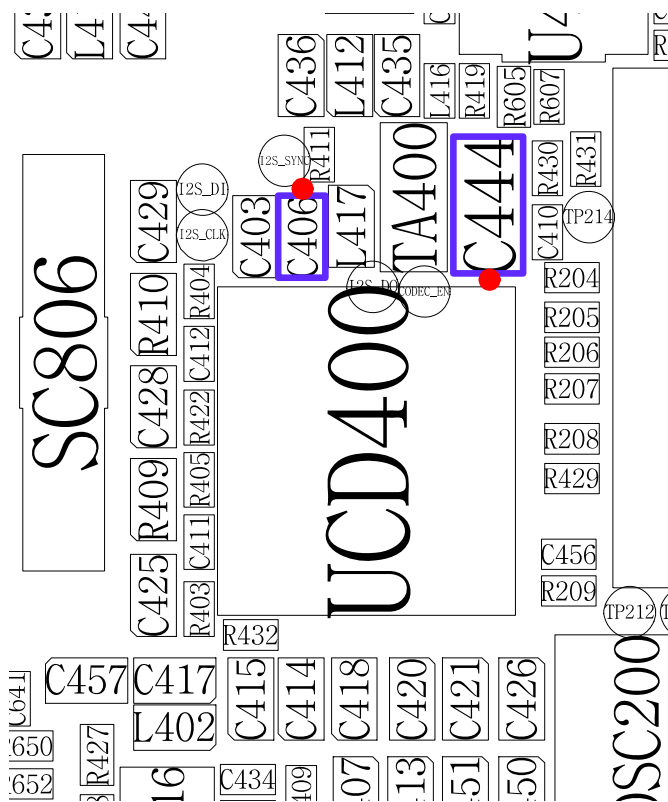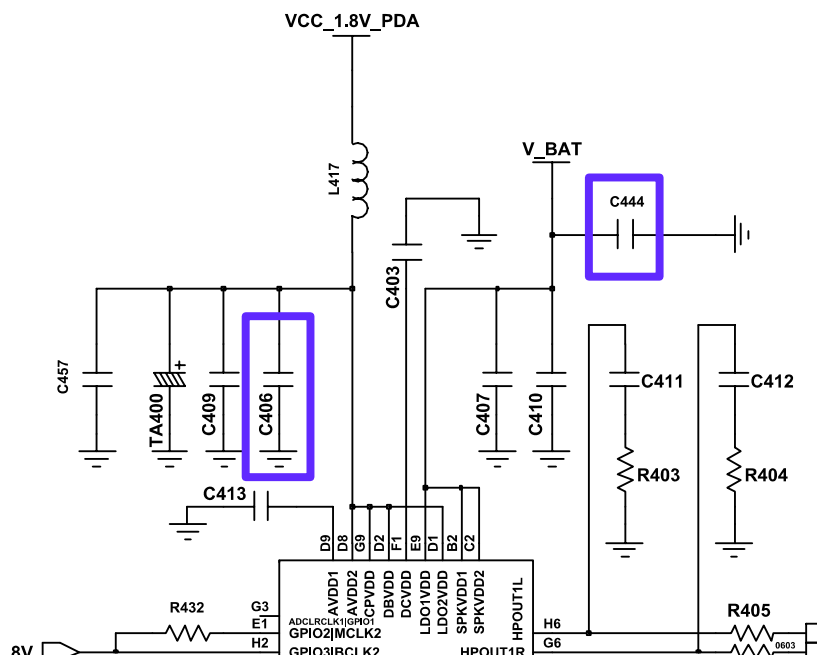



8-3-12.触摸键输入检查

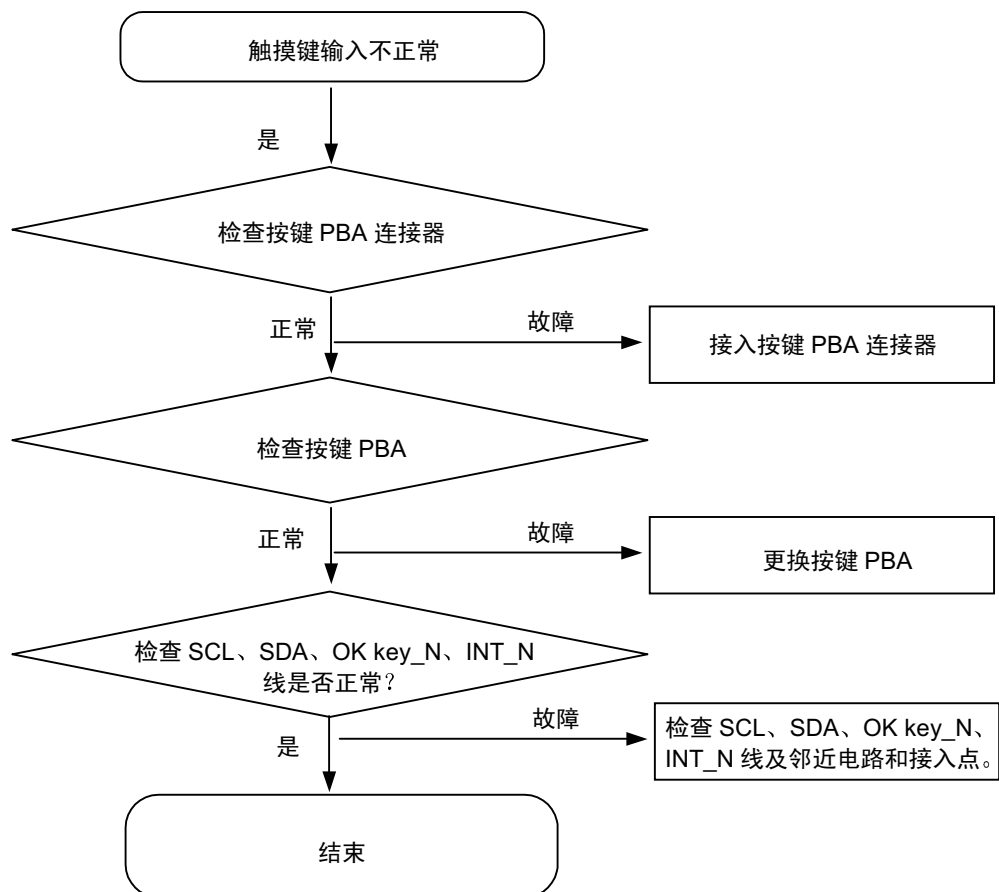


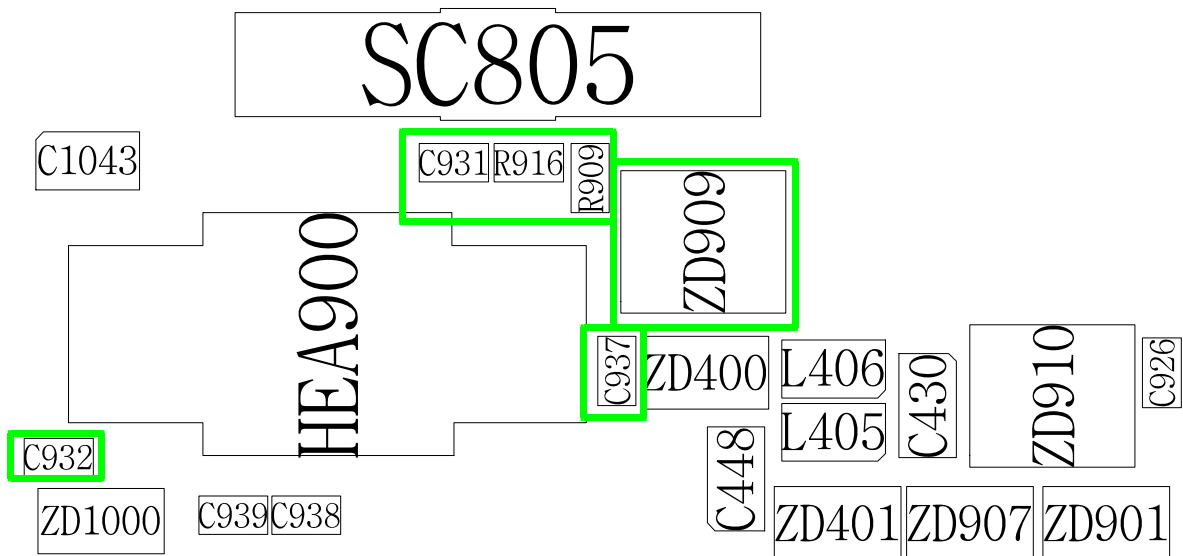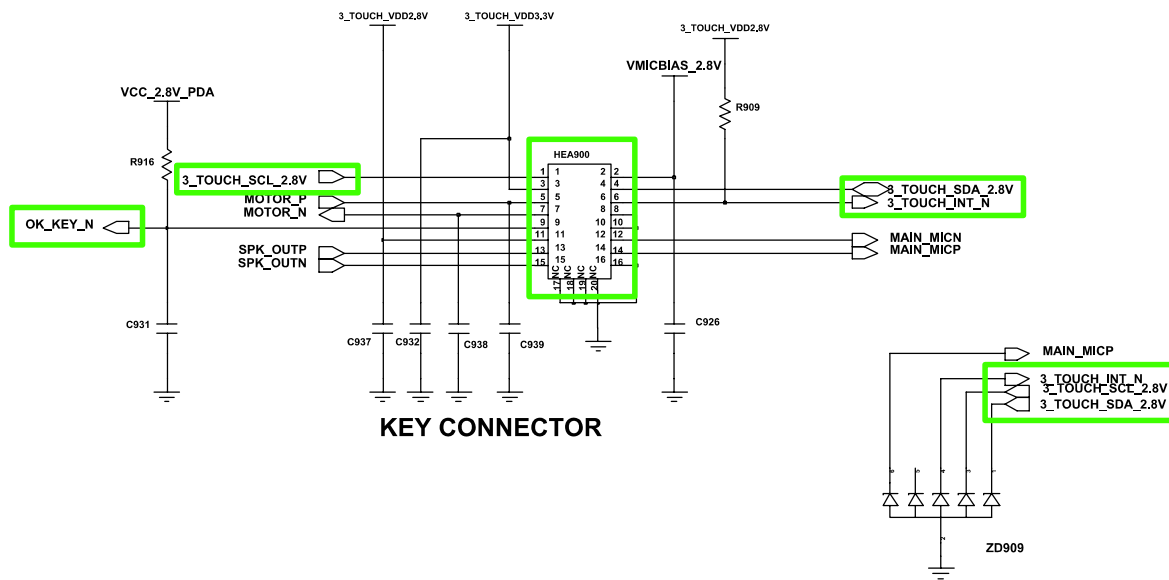


8-3-13.CDMA接收器

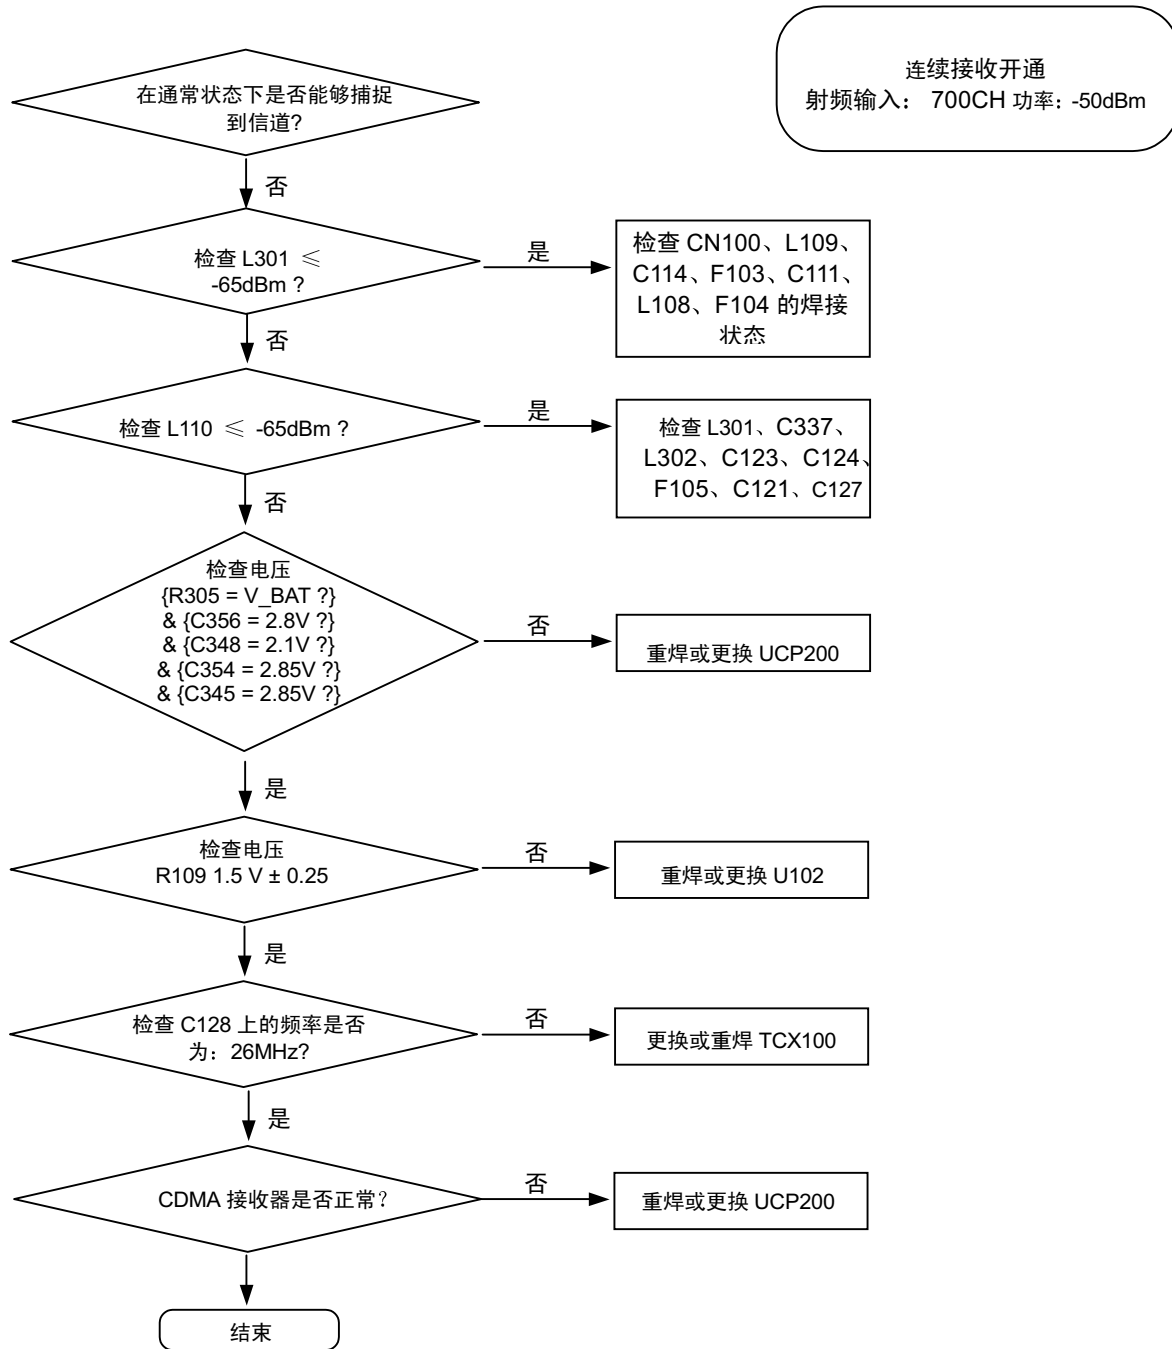



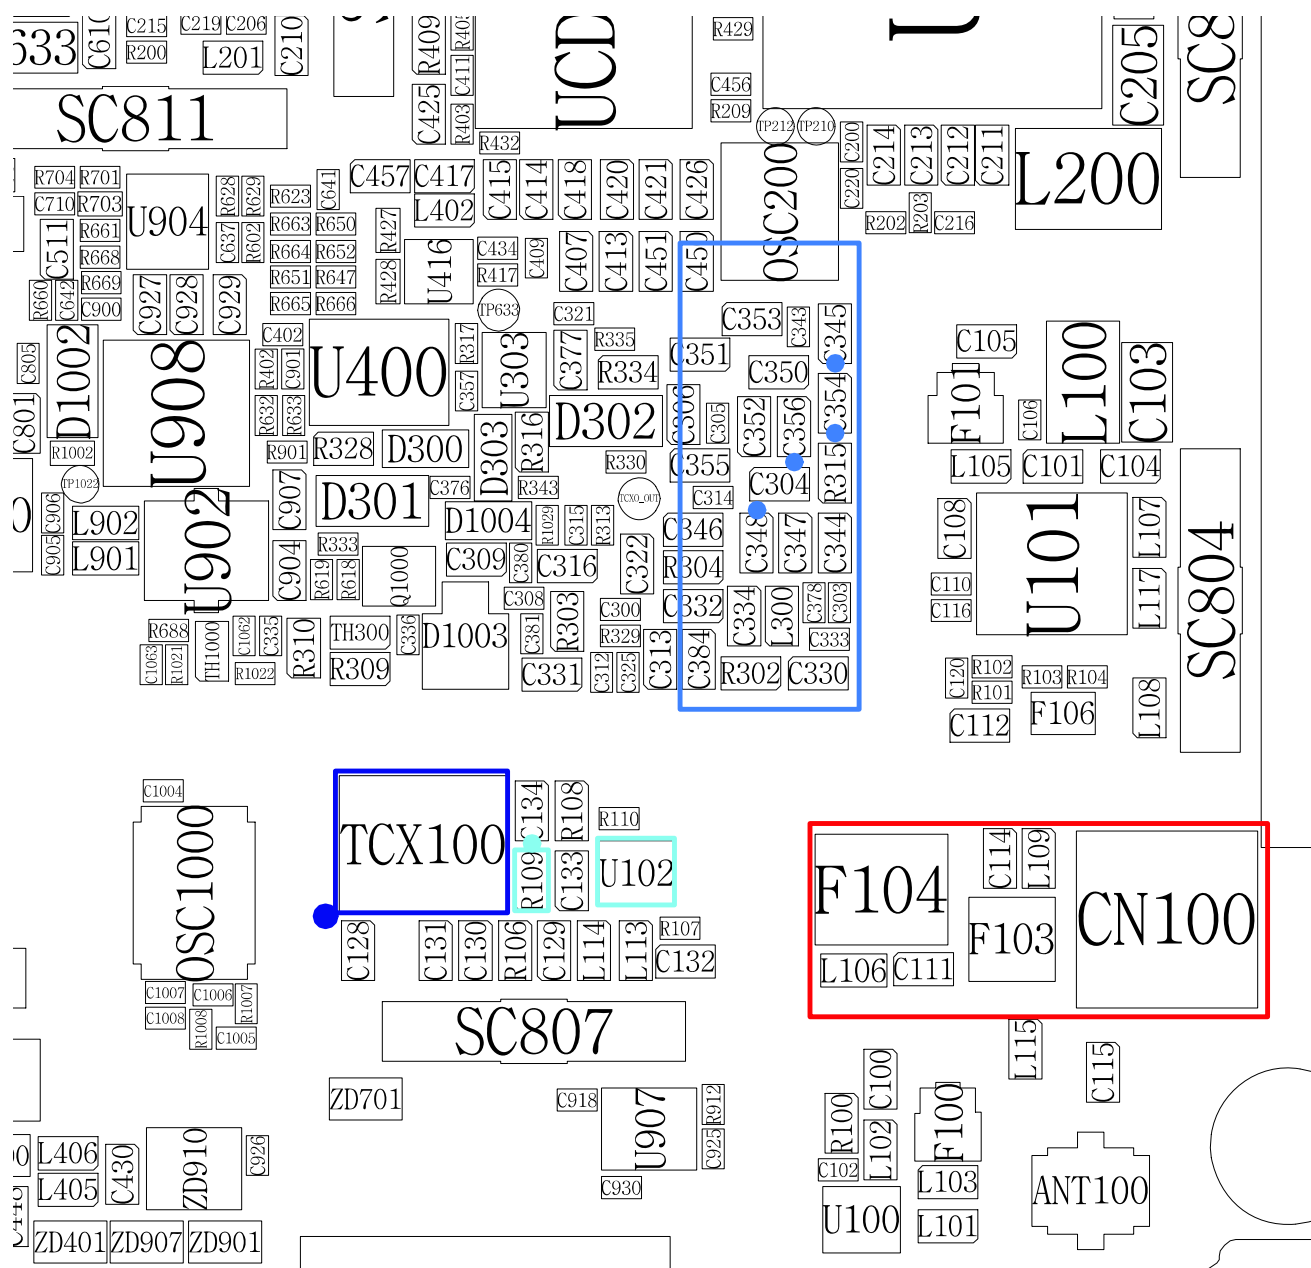


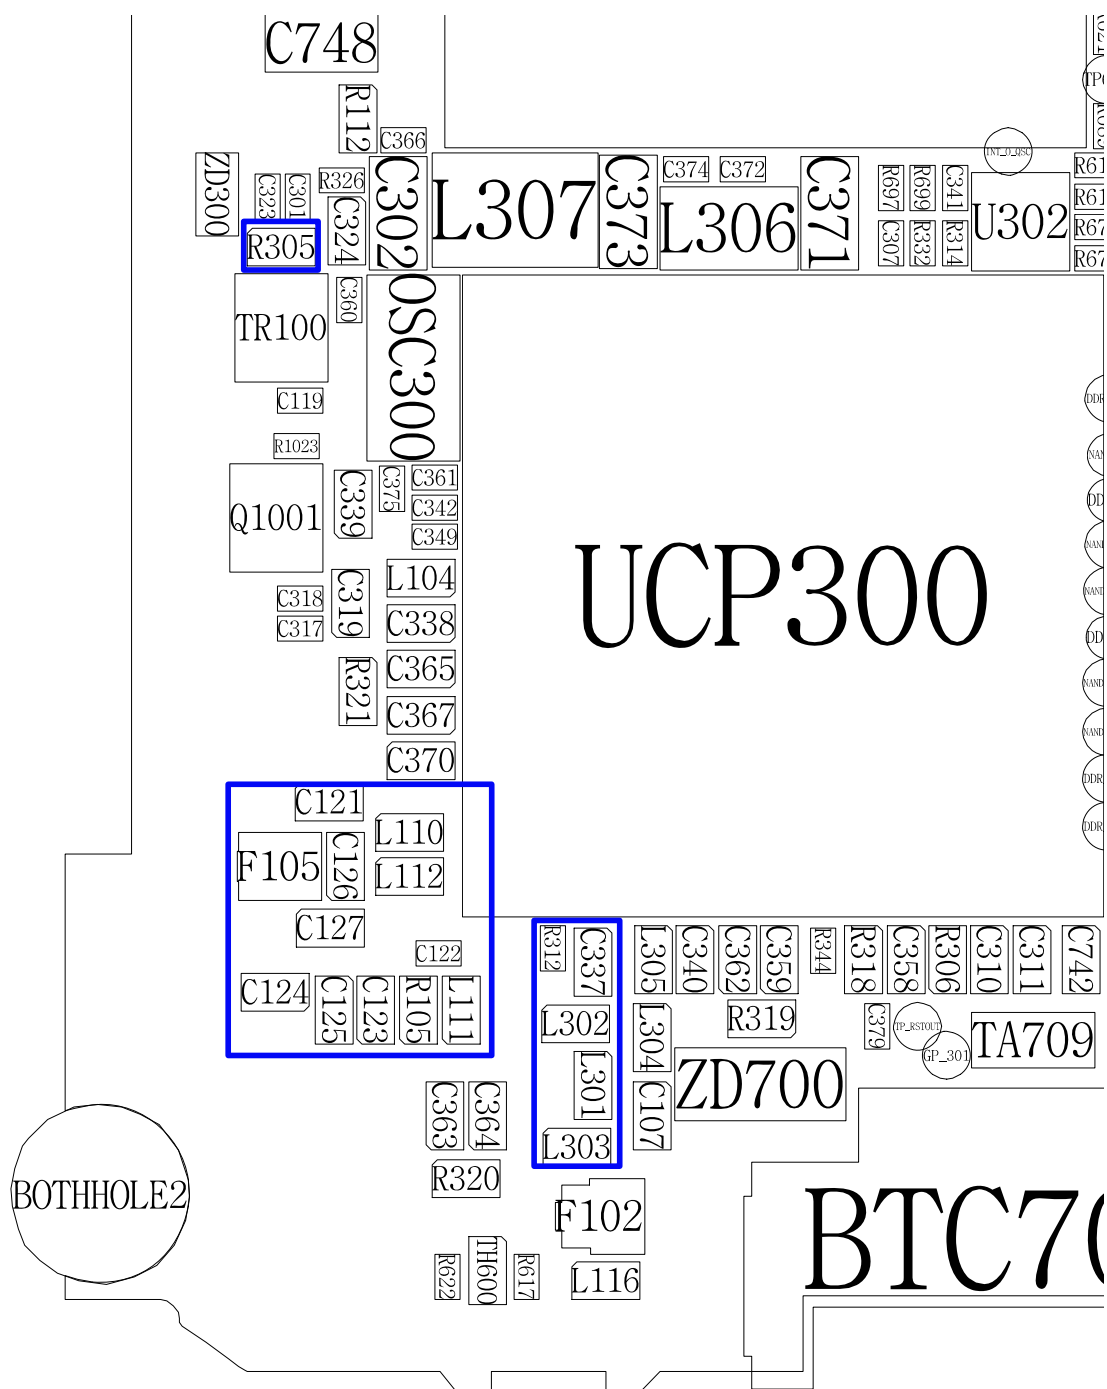


8-3-14.CDMA 发射器

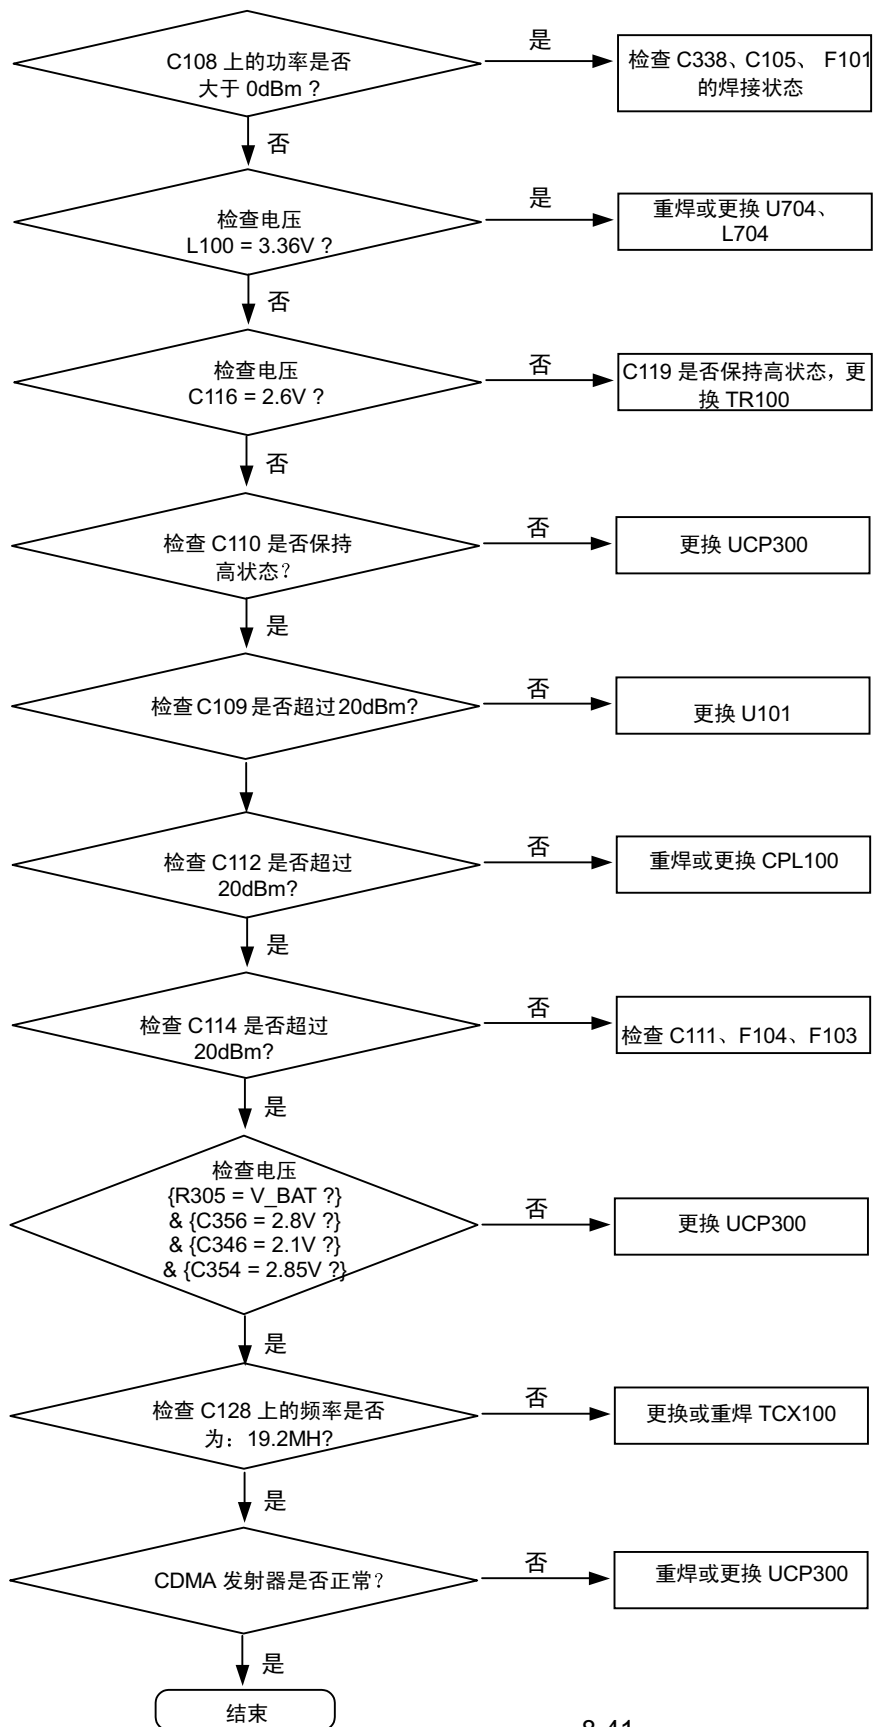


持续发射开通条件
发射功率PDM: 60
应用代码
CDMA CH: 700ch
RBW: 100KHz
VBW: 100KHz
SPAN: 10MHz
REF LEV.: 10dBm
ATT.: 20dB

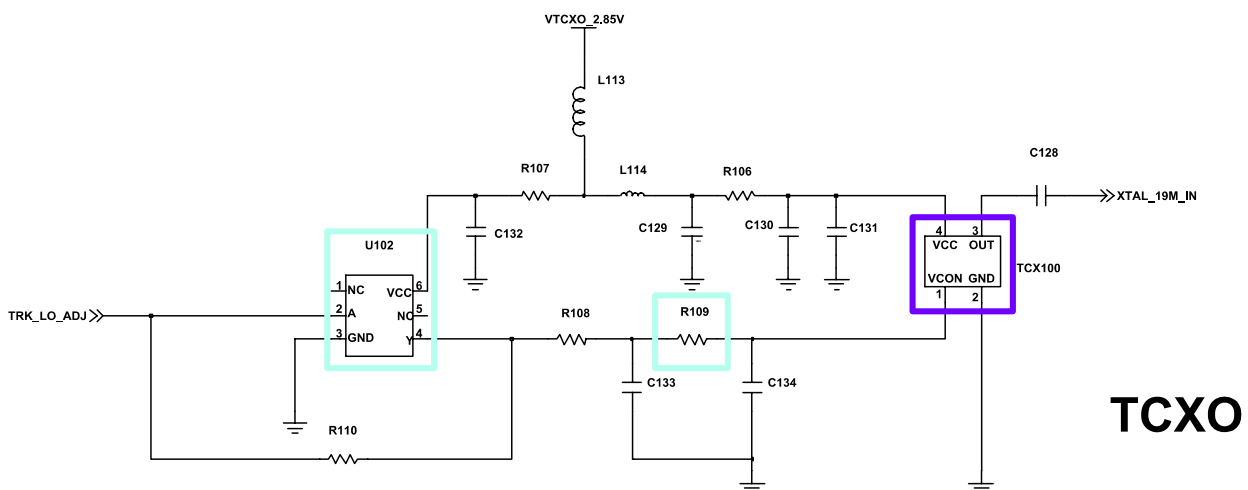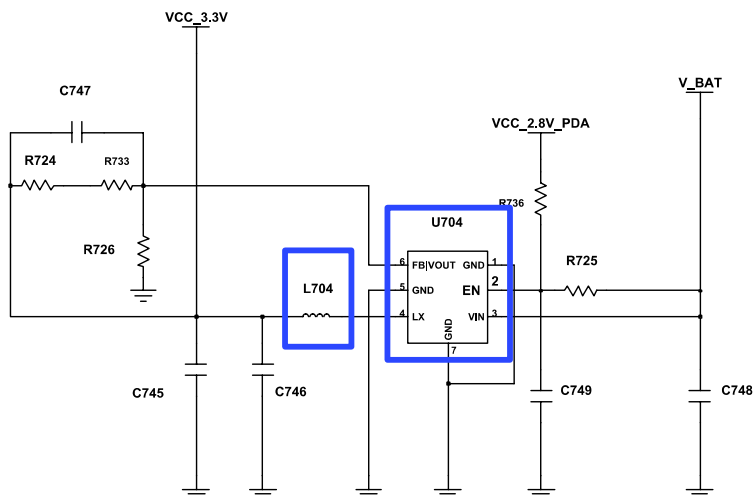
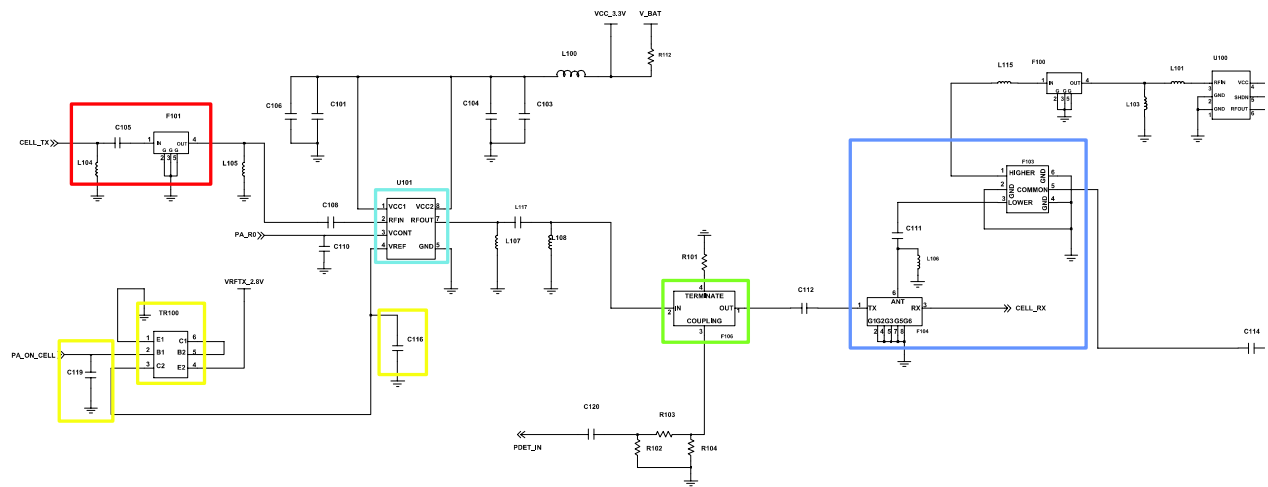


TCXO

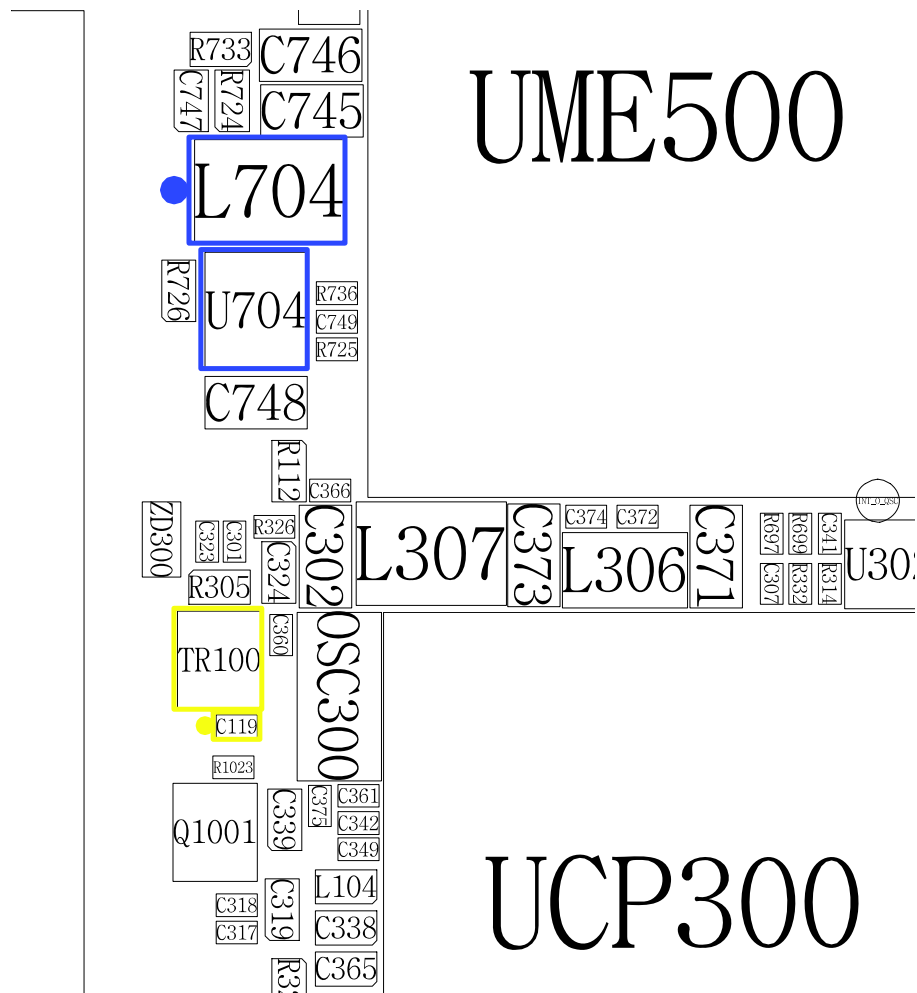

8-3-15.BT/WIFI

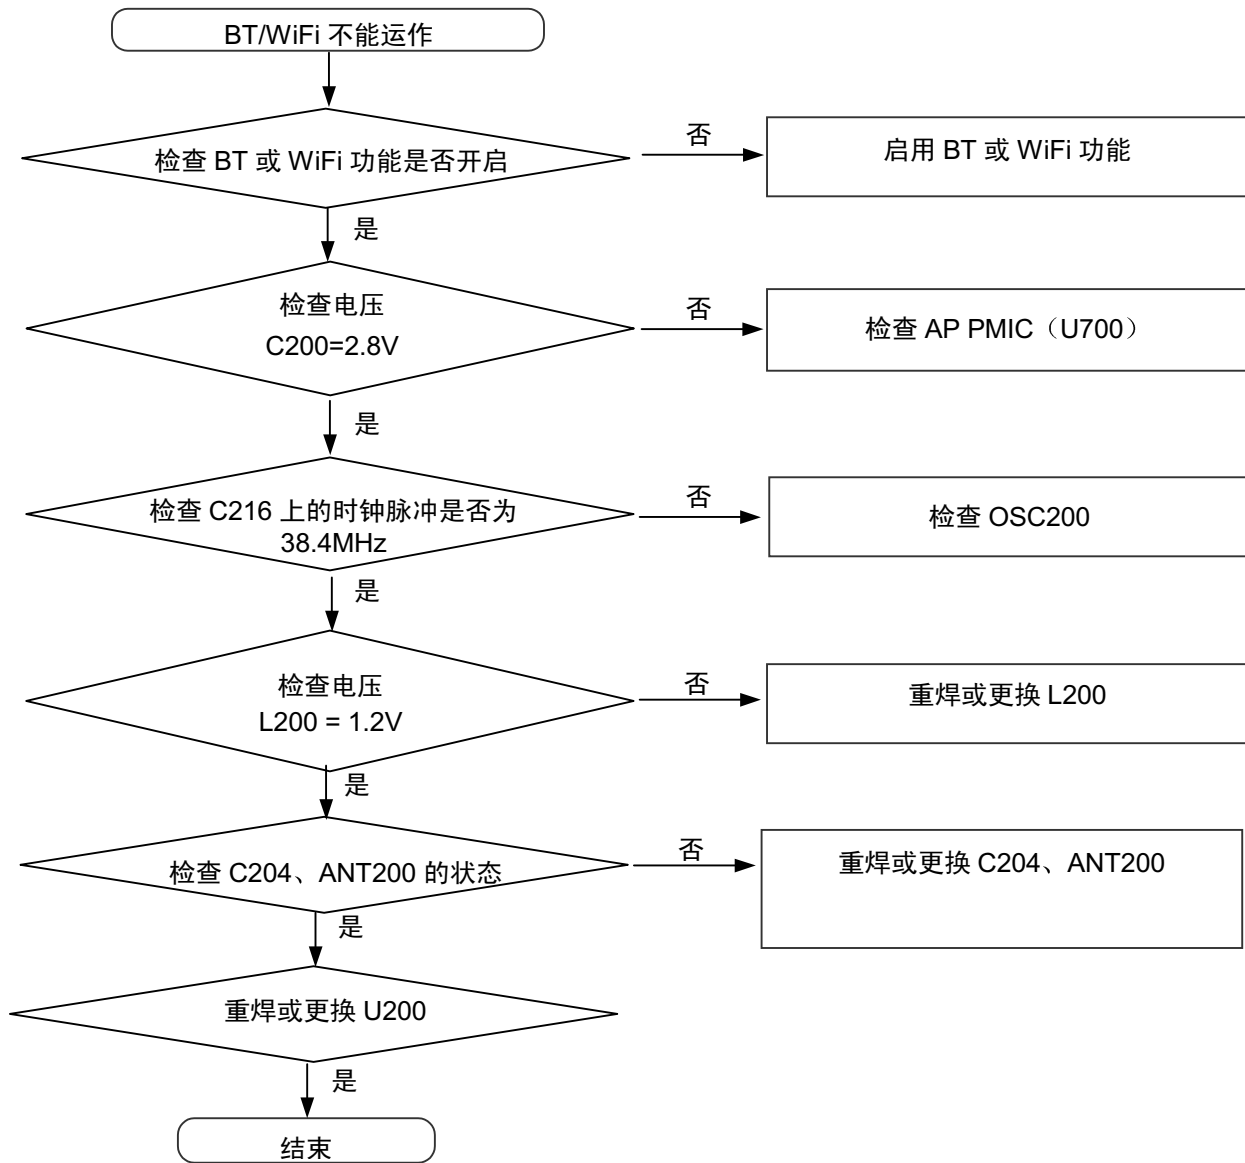


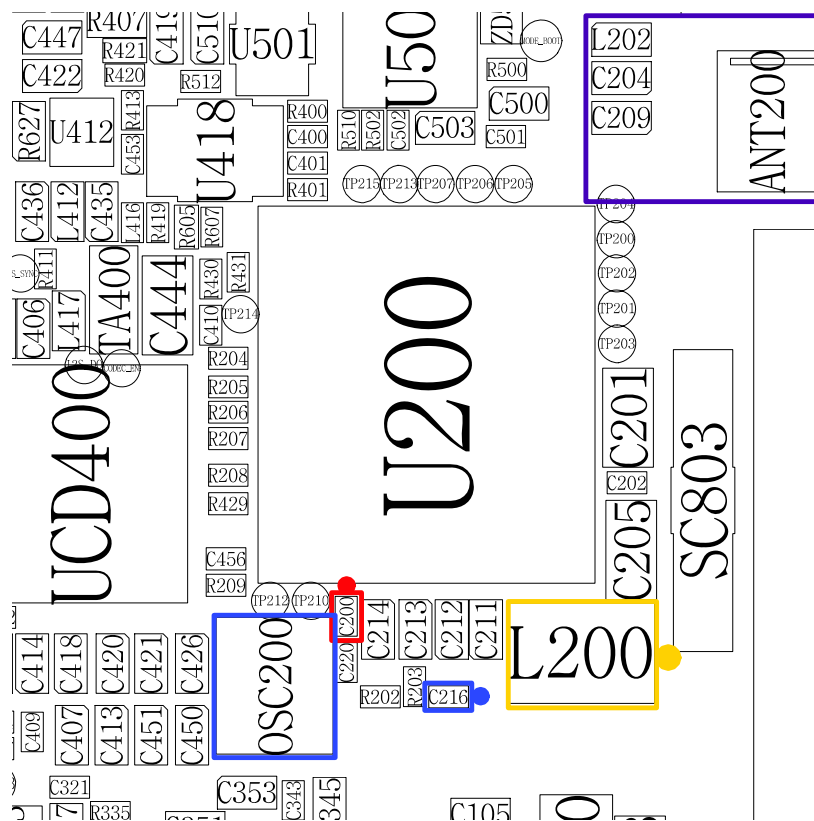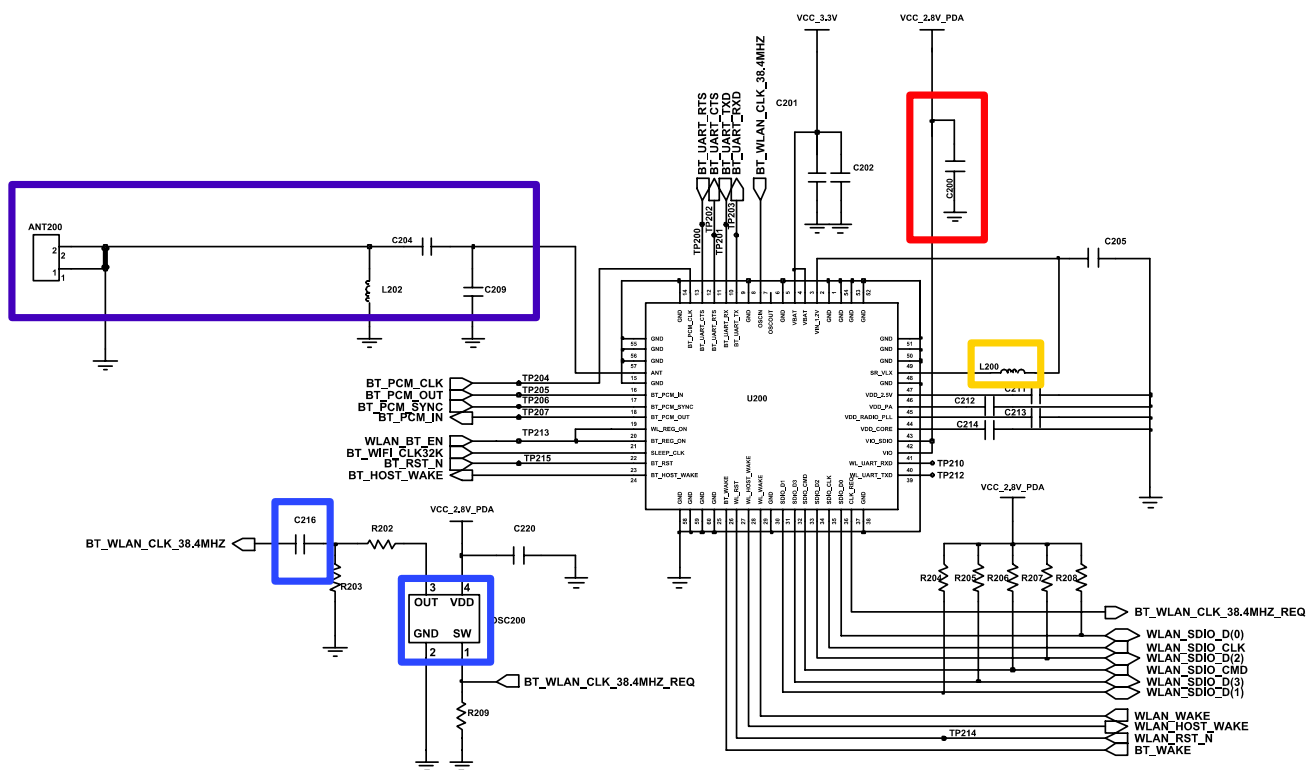

8-3-16.GSM900发射器

**如果检查发射链接，


不仅要检查射频设备，同样需检查电阻器，感应器和电容器。

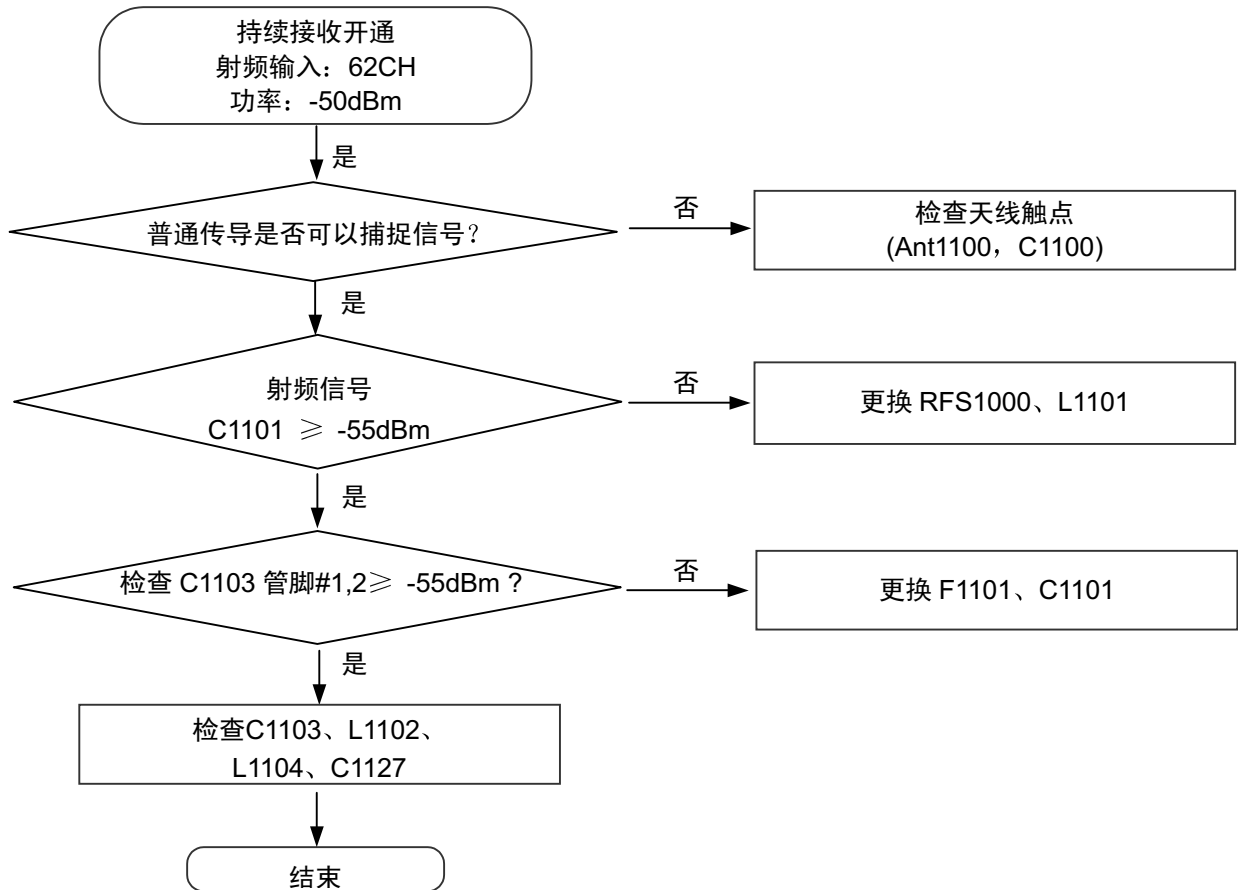

8-3-17.DCS1800 接收器

**如果检查接收链接，


不仅要检查射频设备，同样需检查电阻器，感应器和电容器。

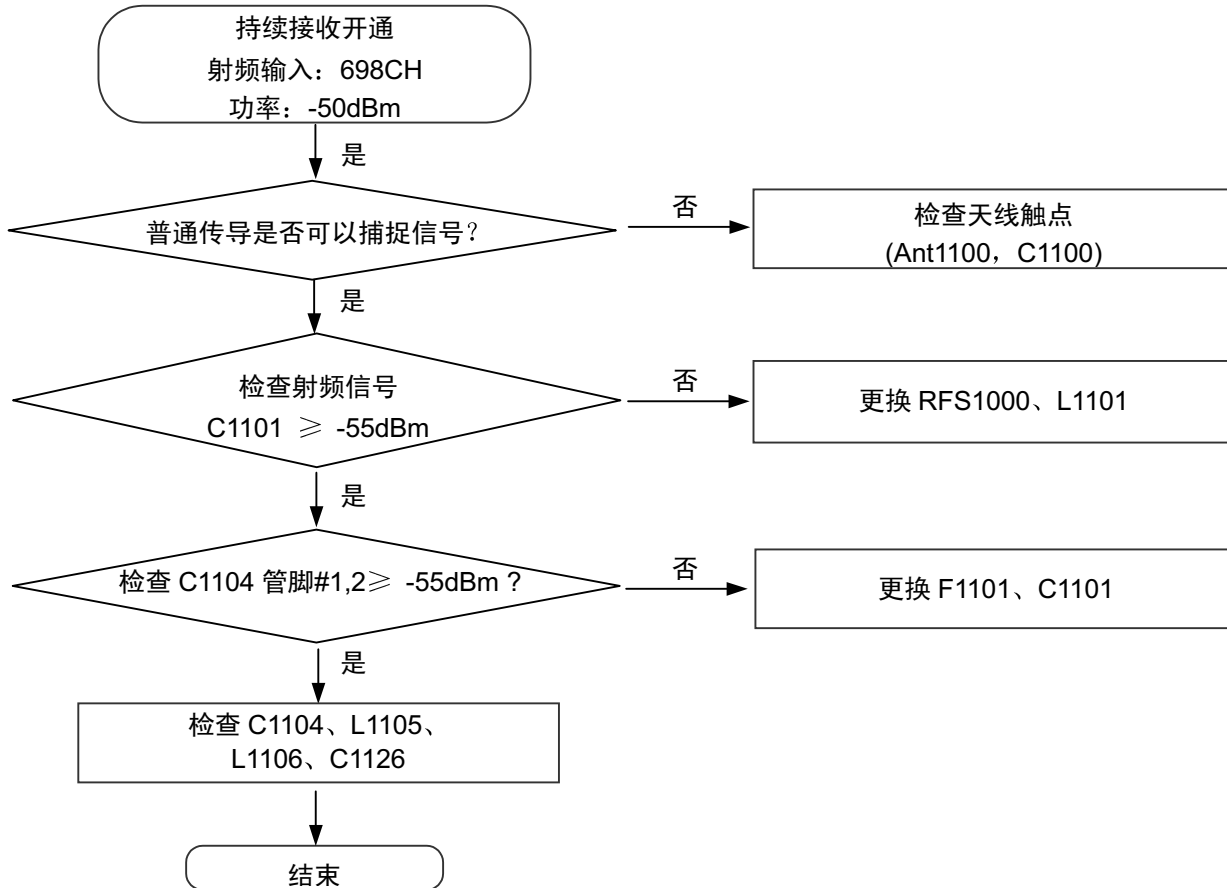


8-3-18.PCS1900 接收器

****如果检查接收链接，**


不仅要检查射频设备，同样需检查电阻器，感应器和电容器。

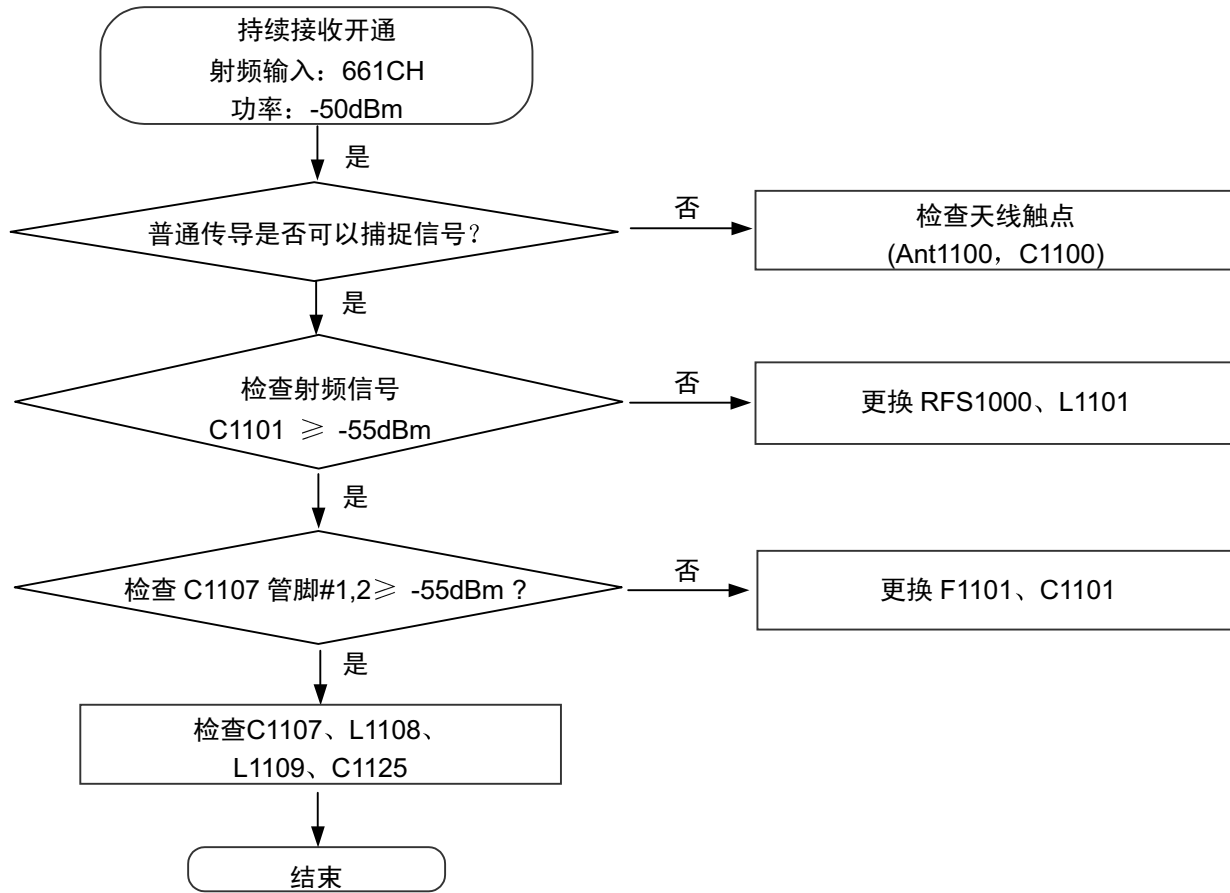

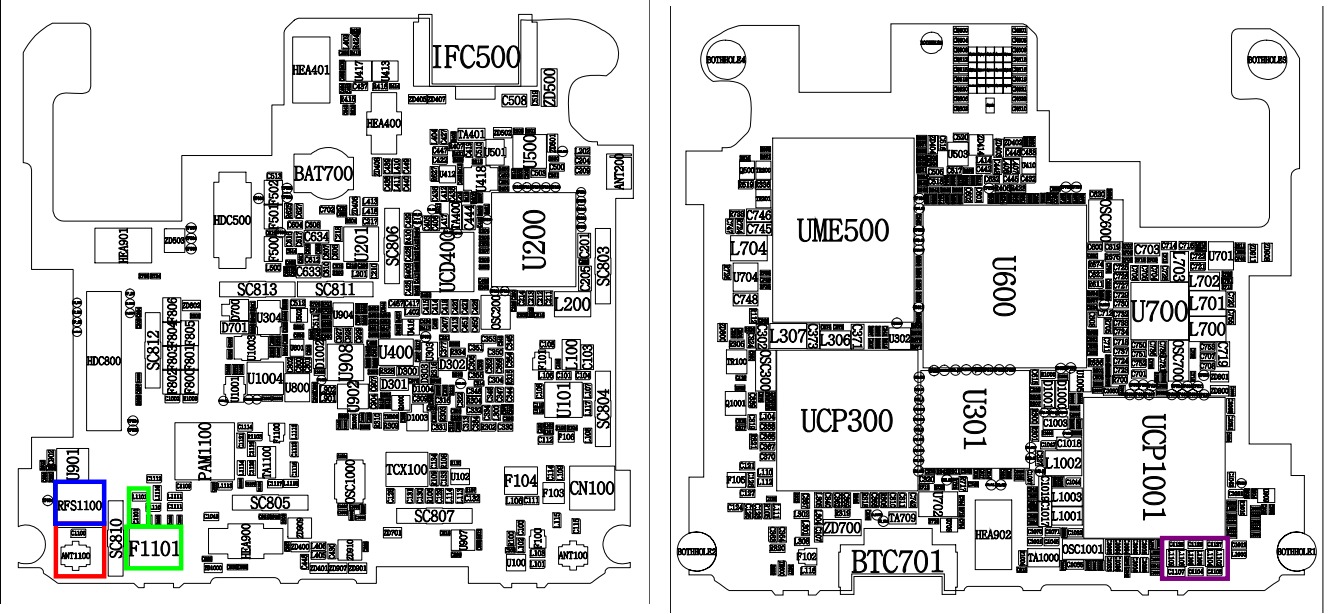


8-3-19.GSM900发射器

**如果检查发射链接，
不仅要检查射频设备，同样需检查电阻器，感应器和电容器。

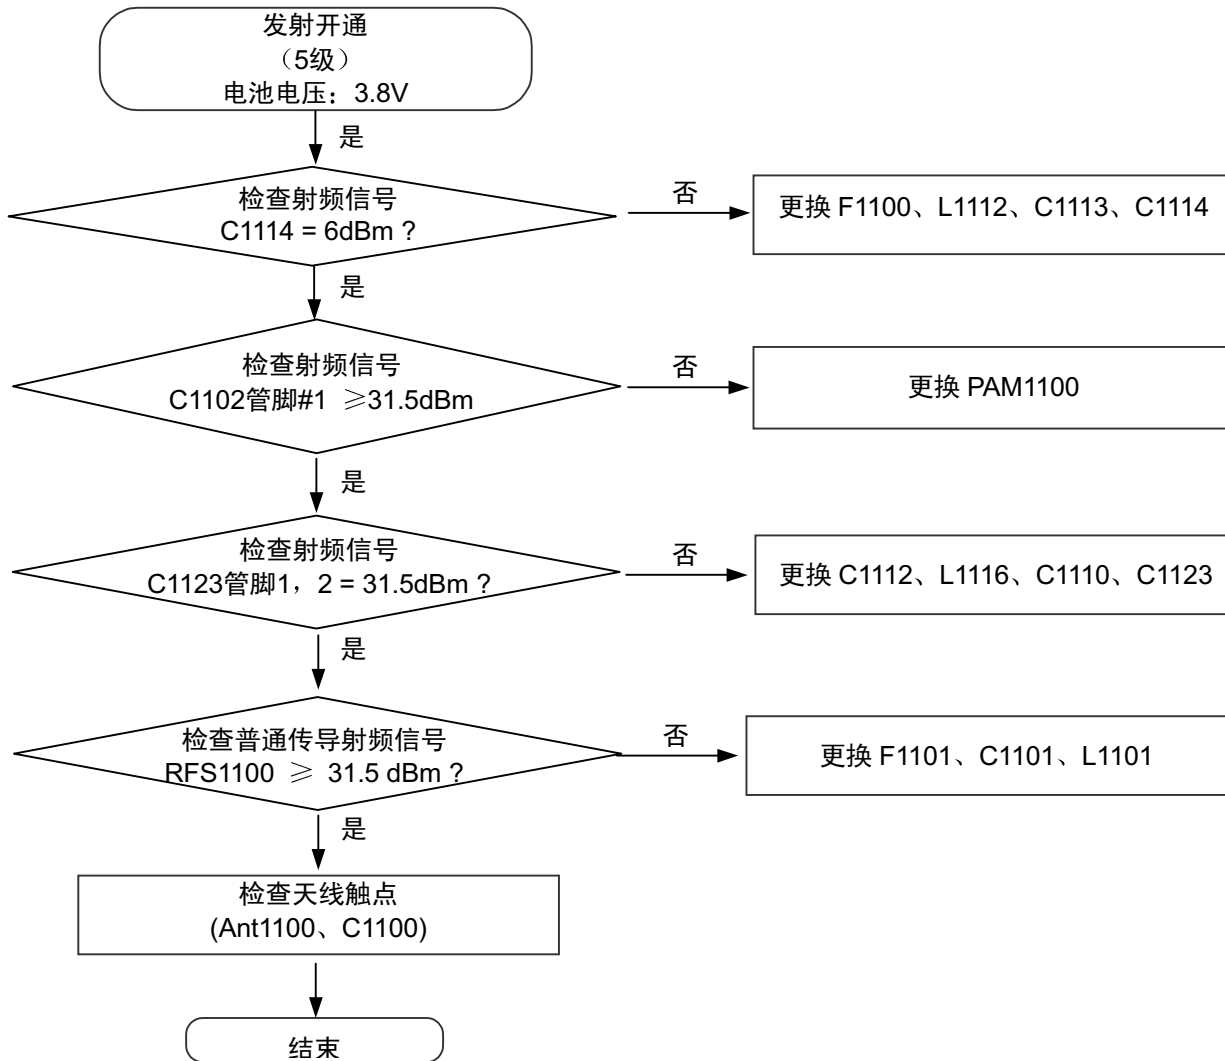


8-3-20.DCS1800发射器


**如果检查发射链接，
不仅要检查射频设备，同样需检查电阻器，感应器和电容器。

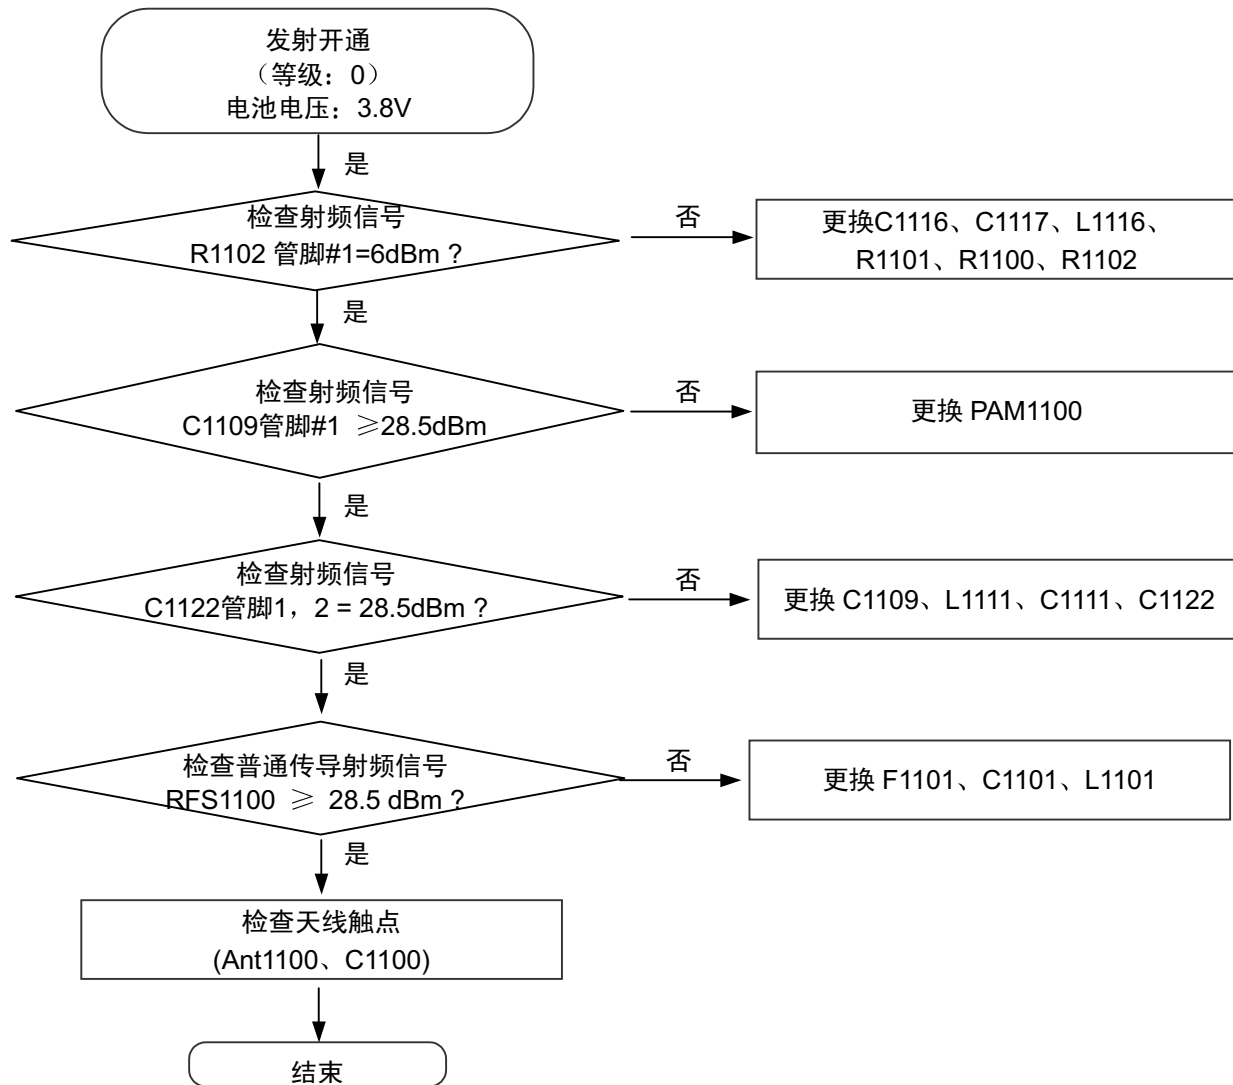

8-3-21.PCS1900发射器

**如果检查发射链接，
不仅要检查射频设备，同样需检查电阻器，感应器和电容器。

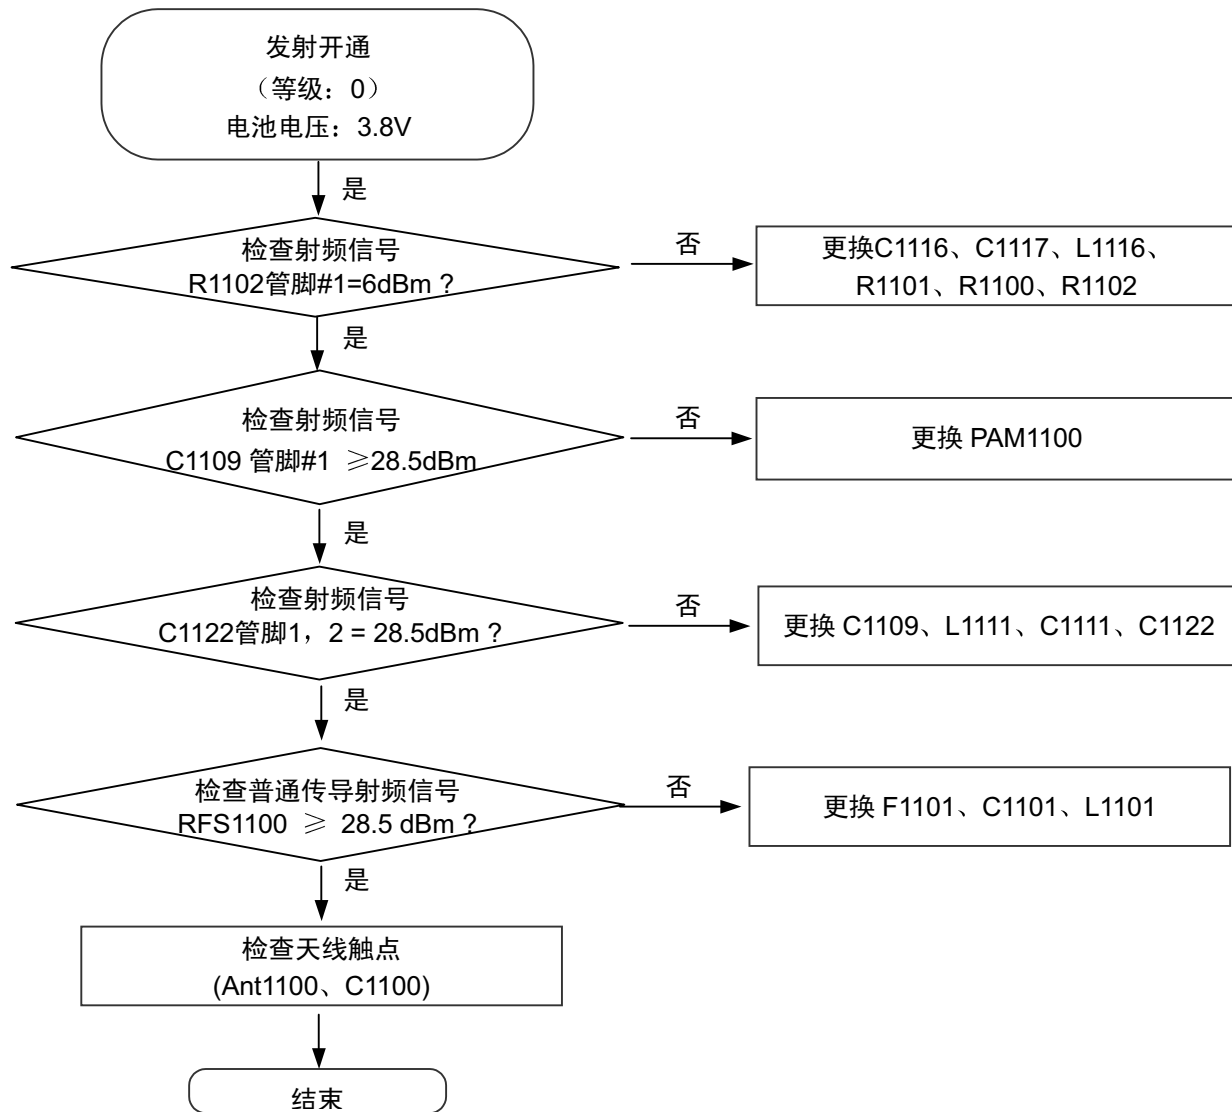


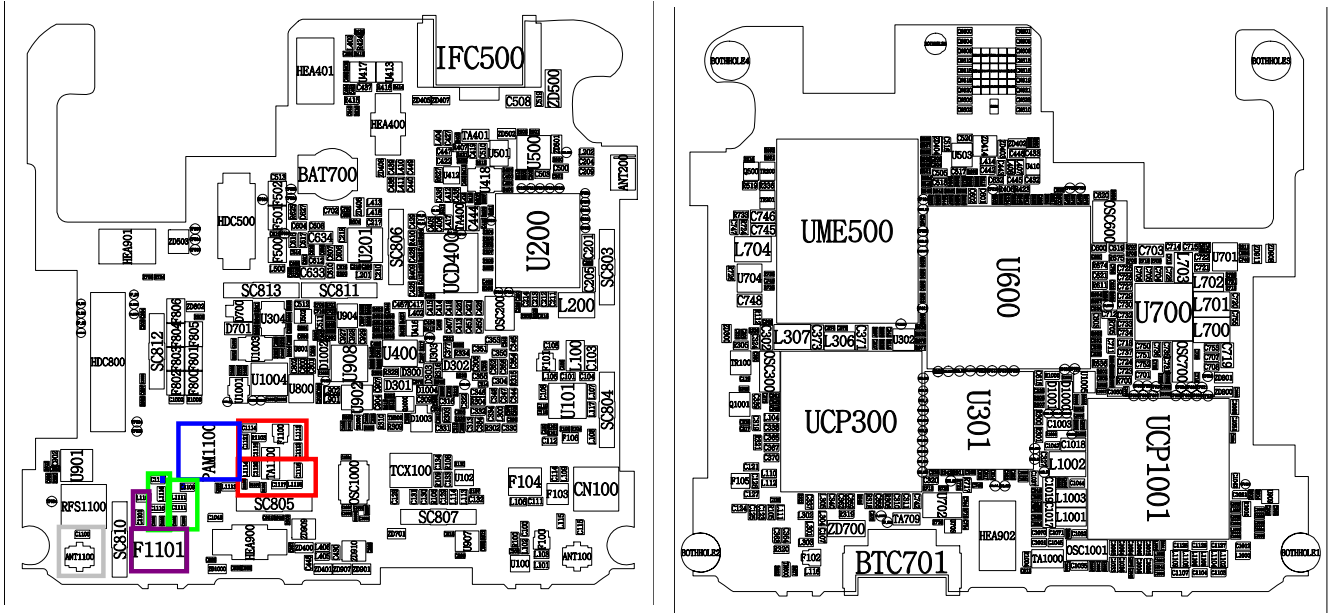


8-4. 维修原理图

-NC 点（顶部视图）


■ : NC

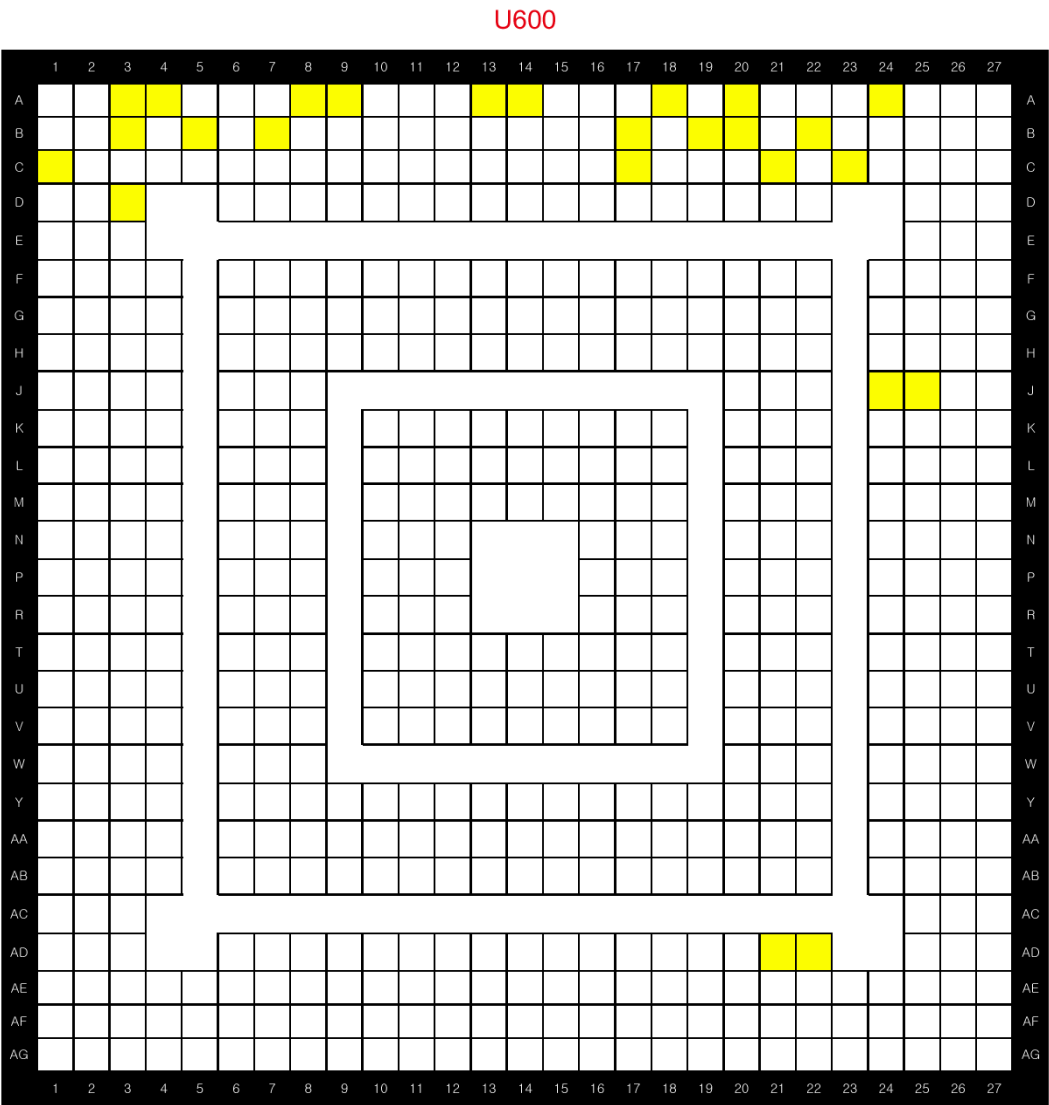

UCP300

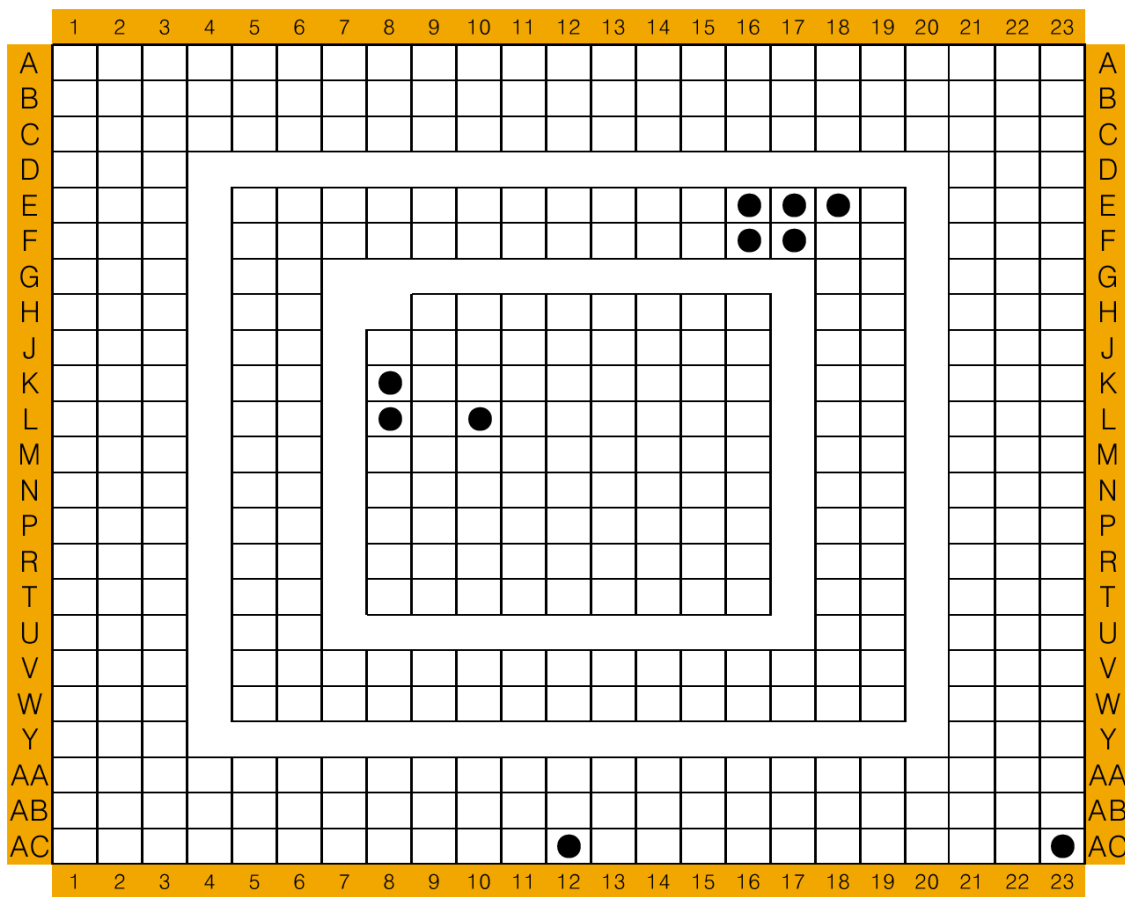 : NC

UCP1001

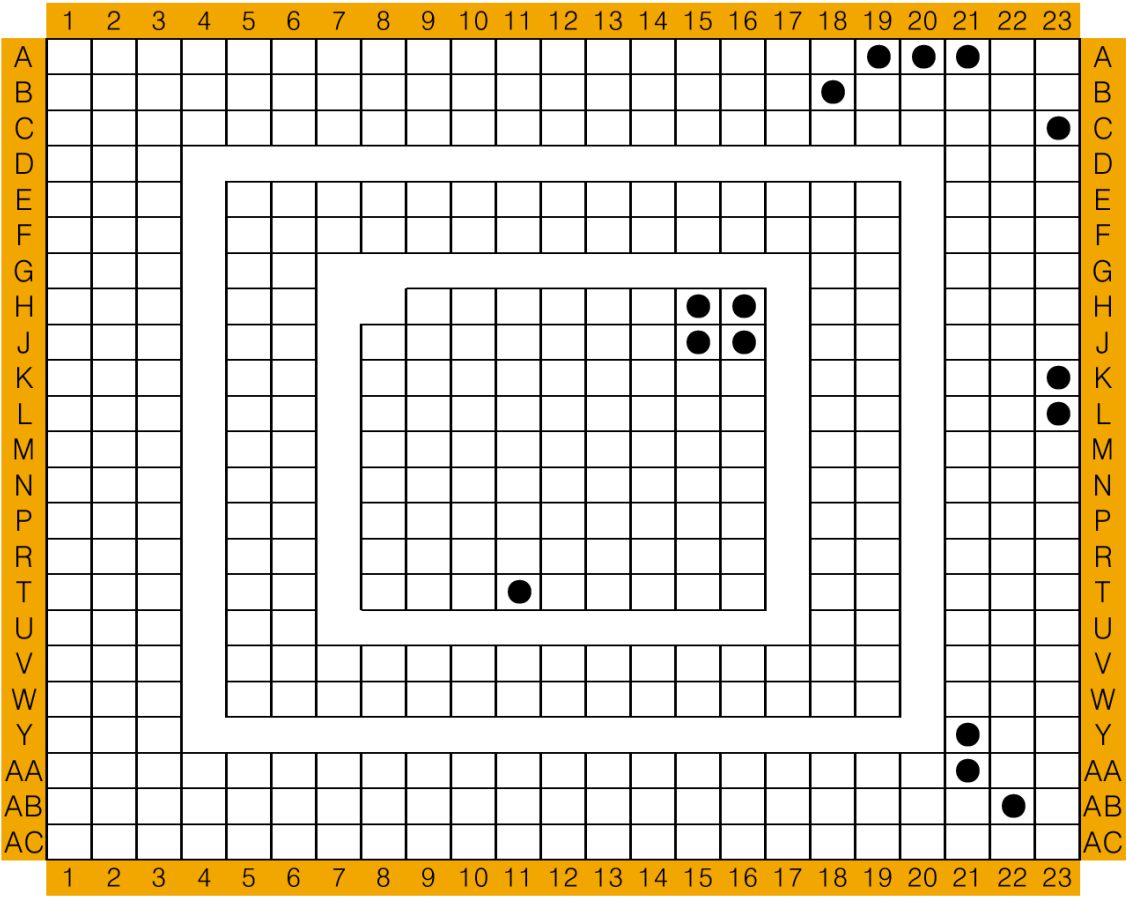

UME500

