


5. PCB Diagram

5-1. Wiring Diagram

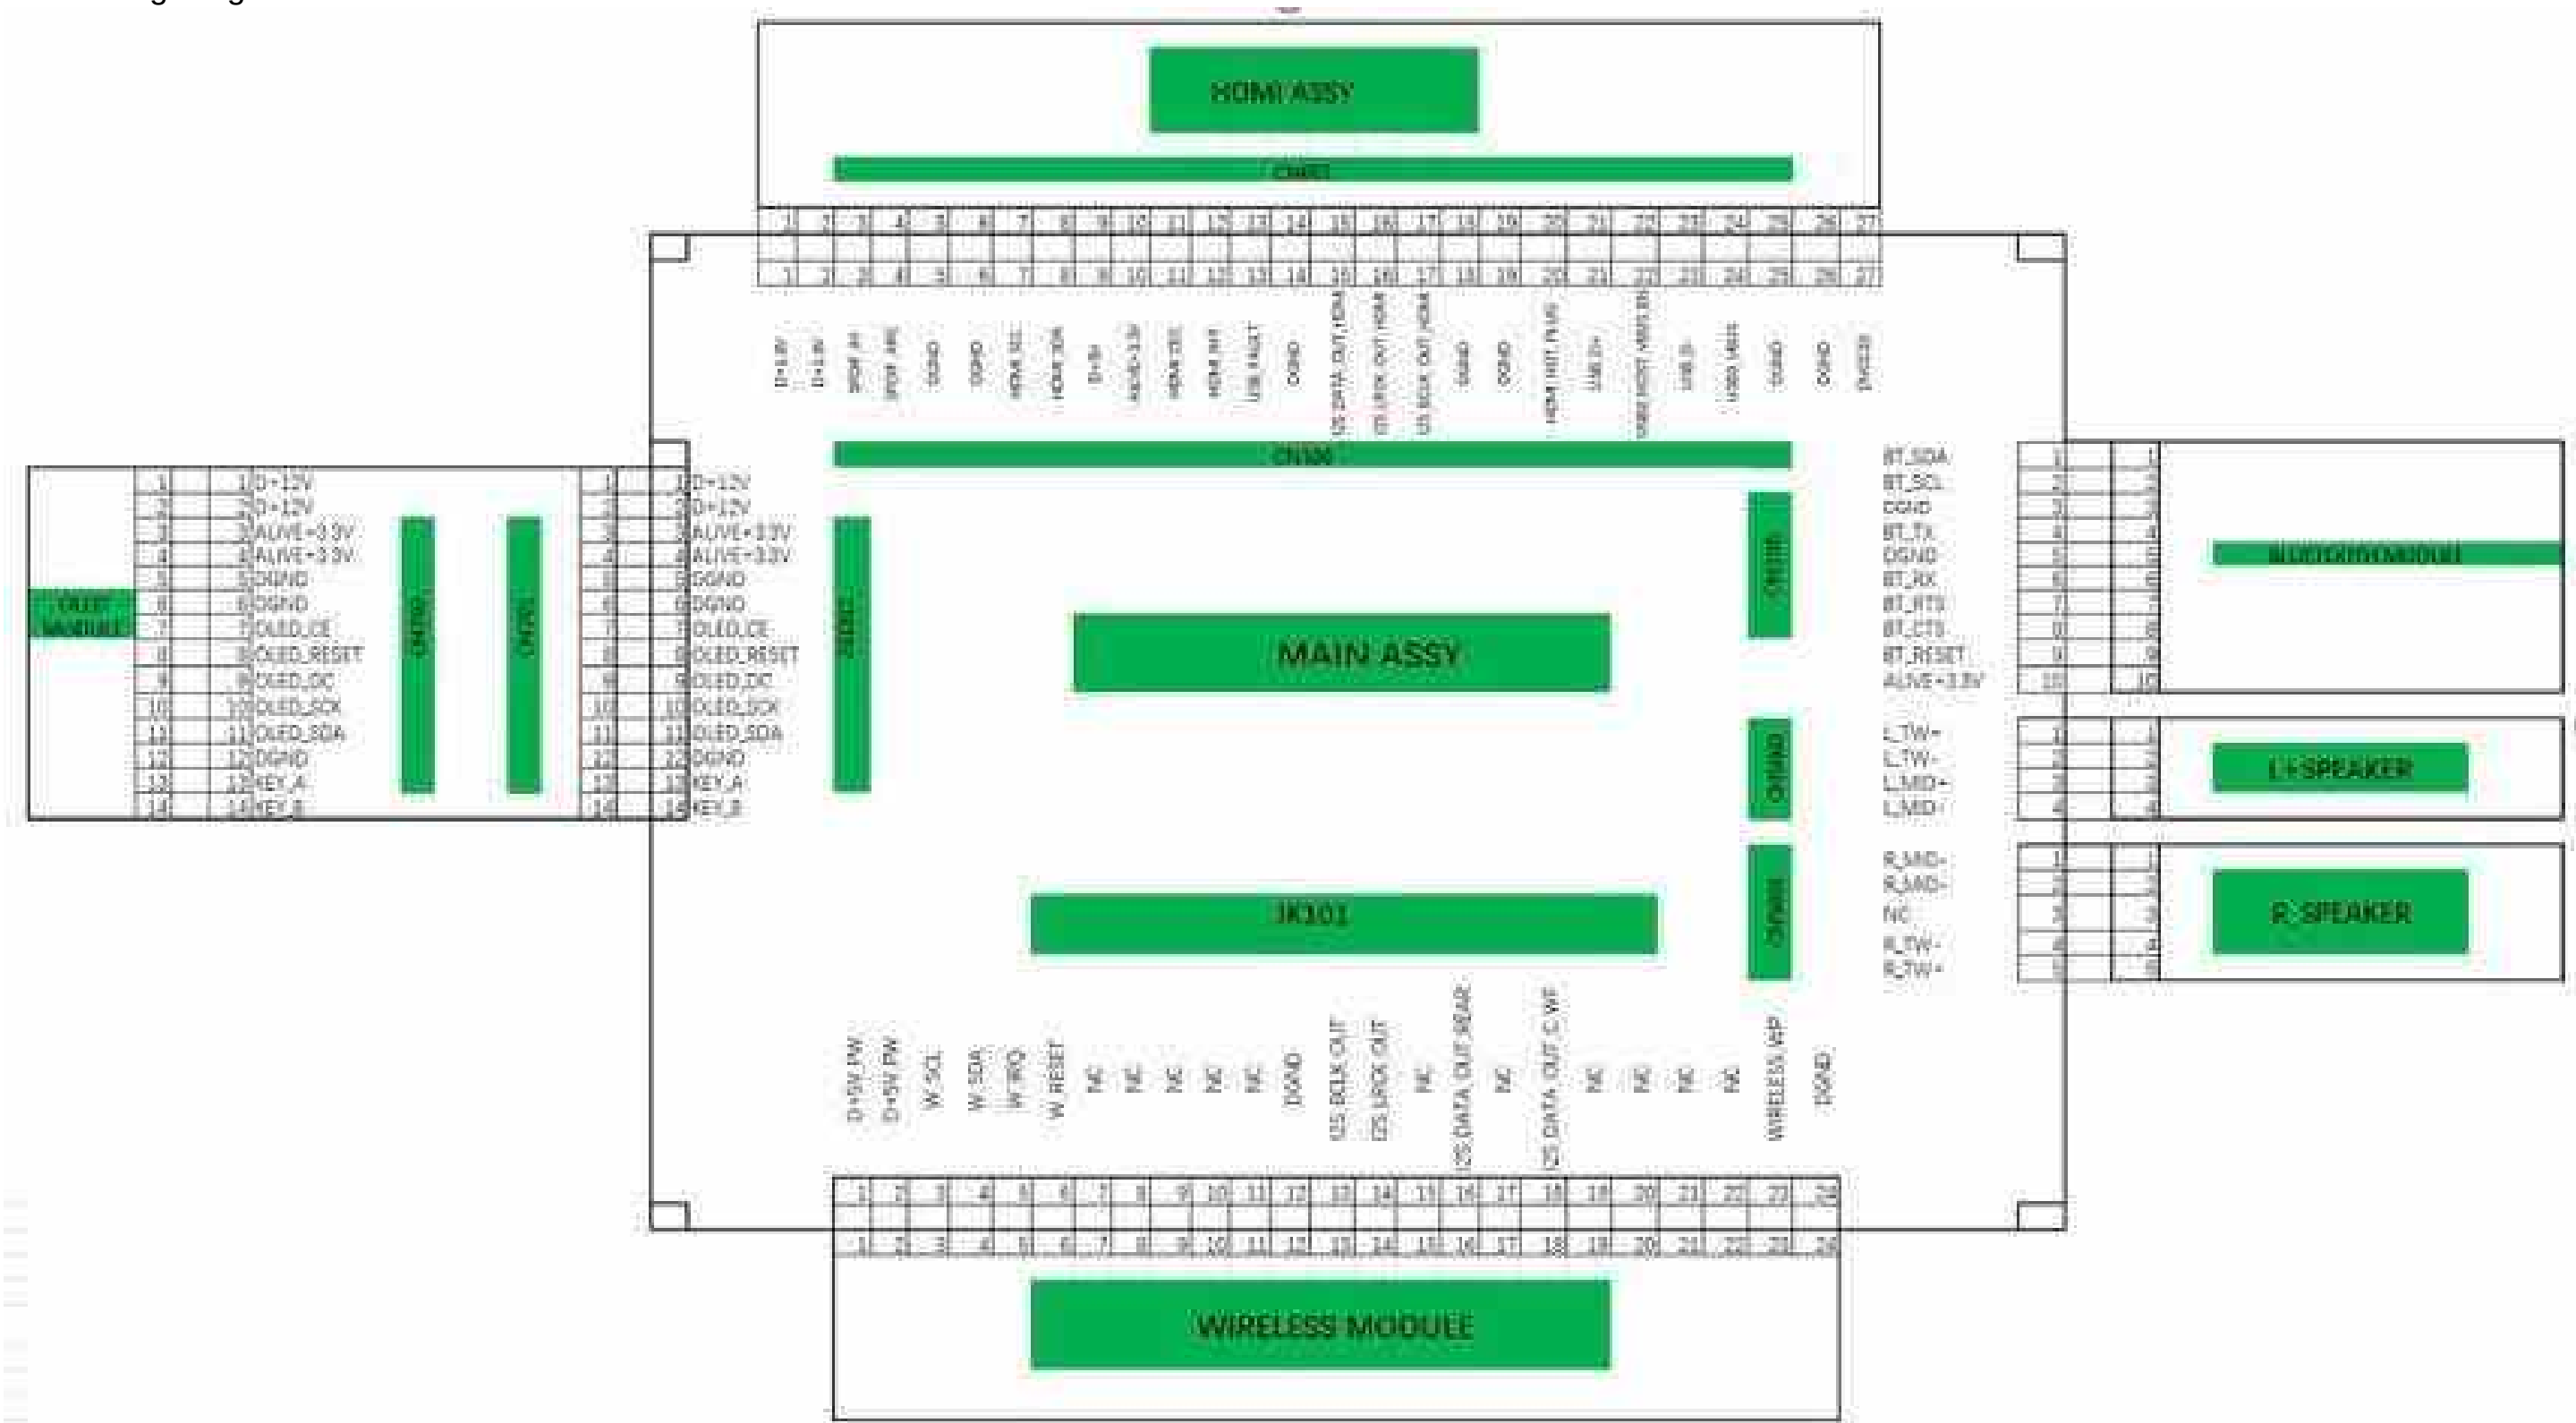

5-2 Pin Connection

* MAIN ASS'Y

1) CN102
OLED+KEY

Pin.no	signal
1	D+12V
2	D+12V
3	ALIVE+3.3V
4	ALIVE+3.3V
5	DGND
6	DGND
7	OLED_CE
8	OLED_RESET
9	OLED_DC
10	OLED_SCK
11	OLED_SDA
12	DGND
13	KEY_A
14	KEY_B

5) CN5002
L_SPEAKER

Pin.no	signal
1	L_TW+
2	L_TW-
3	R_MID+
4	R_MID-

2) CN105
BT MODULE

Pin.no	signal
1	BT_SDA
2	BT_SCL
3	DGND
4	BT_TX
5	DGND
6	BT_RX
7	BT_RTS
8	BT_CTS
9	BT_RESET
10	ALIVE+3.3V

6) CN5001
R_SPEAKER

Pin.no	signal
1	R_MID-
2	R_MID+
3	NC
4	R_TW-
5	R_TW+

3) JK101
WIRELESS MODULE

Pin.no	signal
1	D+5V_PW
2	D+5V_PW
3	W_SCL
4	W_SDA
5	W_IRQ
6	W_RESET
7	NC
8	NC
9	NC
10	NC
11	NC
12	DGND
13	I2S_BCLK_OUT
14	I2S_LRCK_OUT
15	NC
16	I2S_DATA_OUT_REAR
17	NC
18	I2S_DATA_OUT_C_WF
19	NC
20	NC
21	NC
22	NC
23	WIRELESS_WP
24	DGND

4) CN106
HDMI ASSY

Pin.no	signal
1	D+1.8V
2	D+1.8V
3	SPDIF_IN
4	SPDIF_ARC
5	DGND
6	DGND
7	HDMI_SCL
8	HDMI_SDA
9	D+5V
10	ALIVE+3.3V
11	HDMI_CEC
12	HDMI_INT
13	USB_FAULT
14	DGND
15	I2S_DATA_OUT_HDMI
16	I2S_LRCK_OUT_HDMI
17	I2S_BCLK_OUT_HDMI
18	DGND
19	DGND
20	HDMI_HOT_PLUG
21	USB_D+
22	USB0_HOST_VBUS_EN
23	USB_D-
24	USB0_VBUS
25	DGND
26	DGND
27	DVCC33

* OLED + KEY ASS'Y


5) CN702
OLED

Pin.no	signal
1	DGND
2	OLED_SDA
3	OLED_SCL
4	OLED_DC
5	OLED_RESET
6	OLED_CE
7	D+3.3V_PW
8	DGND
9	NC
10	D+12V
11	DGND
12	DGND
13	NC
14	DGND


5) CN701
OLED

Pin.no	signal
1	KEY-B
2	KEY-A
3	DGND
4	OLED_SDA
5	OLED_SCK
6	OLED_DC
7	OLED_RESET
8	OLED_CE
9	DGND
10	DGND
11	D+3.3V_PW
12	D+3.3V_PW
13	D+12V
14	D+12V

5-3. Block Diagram

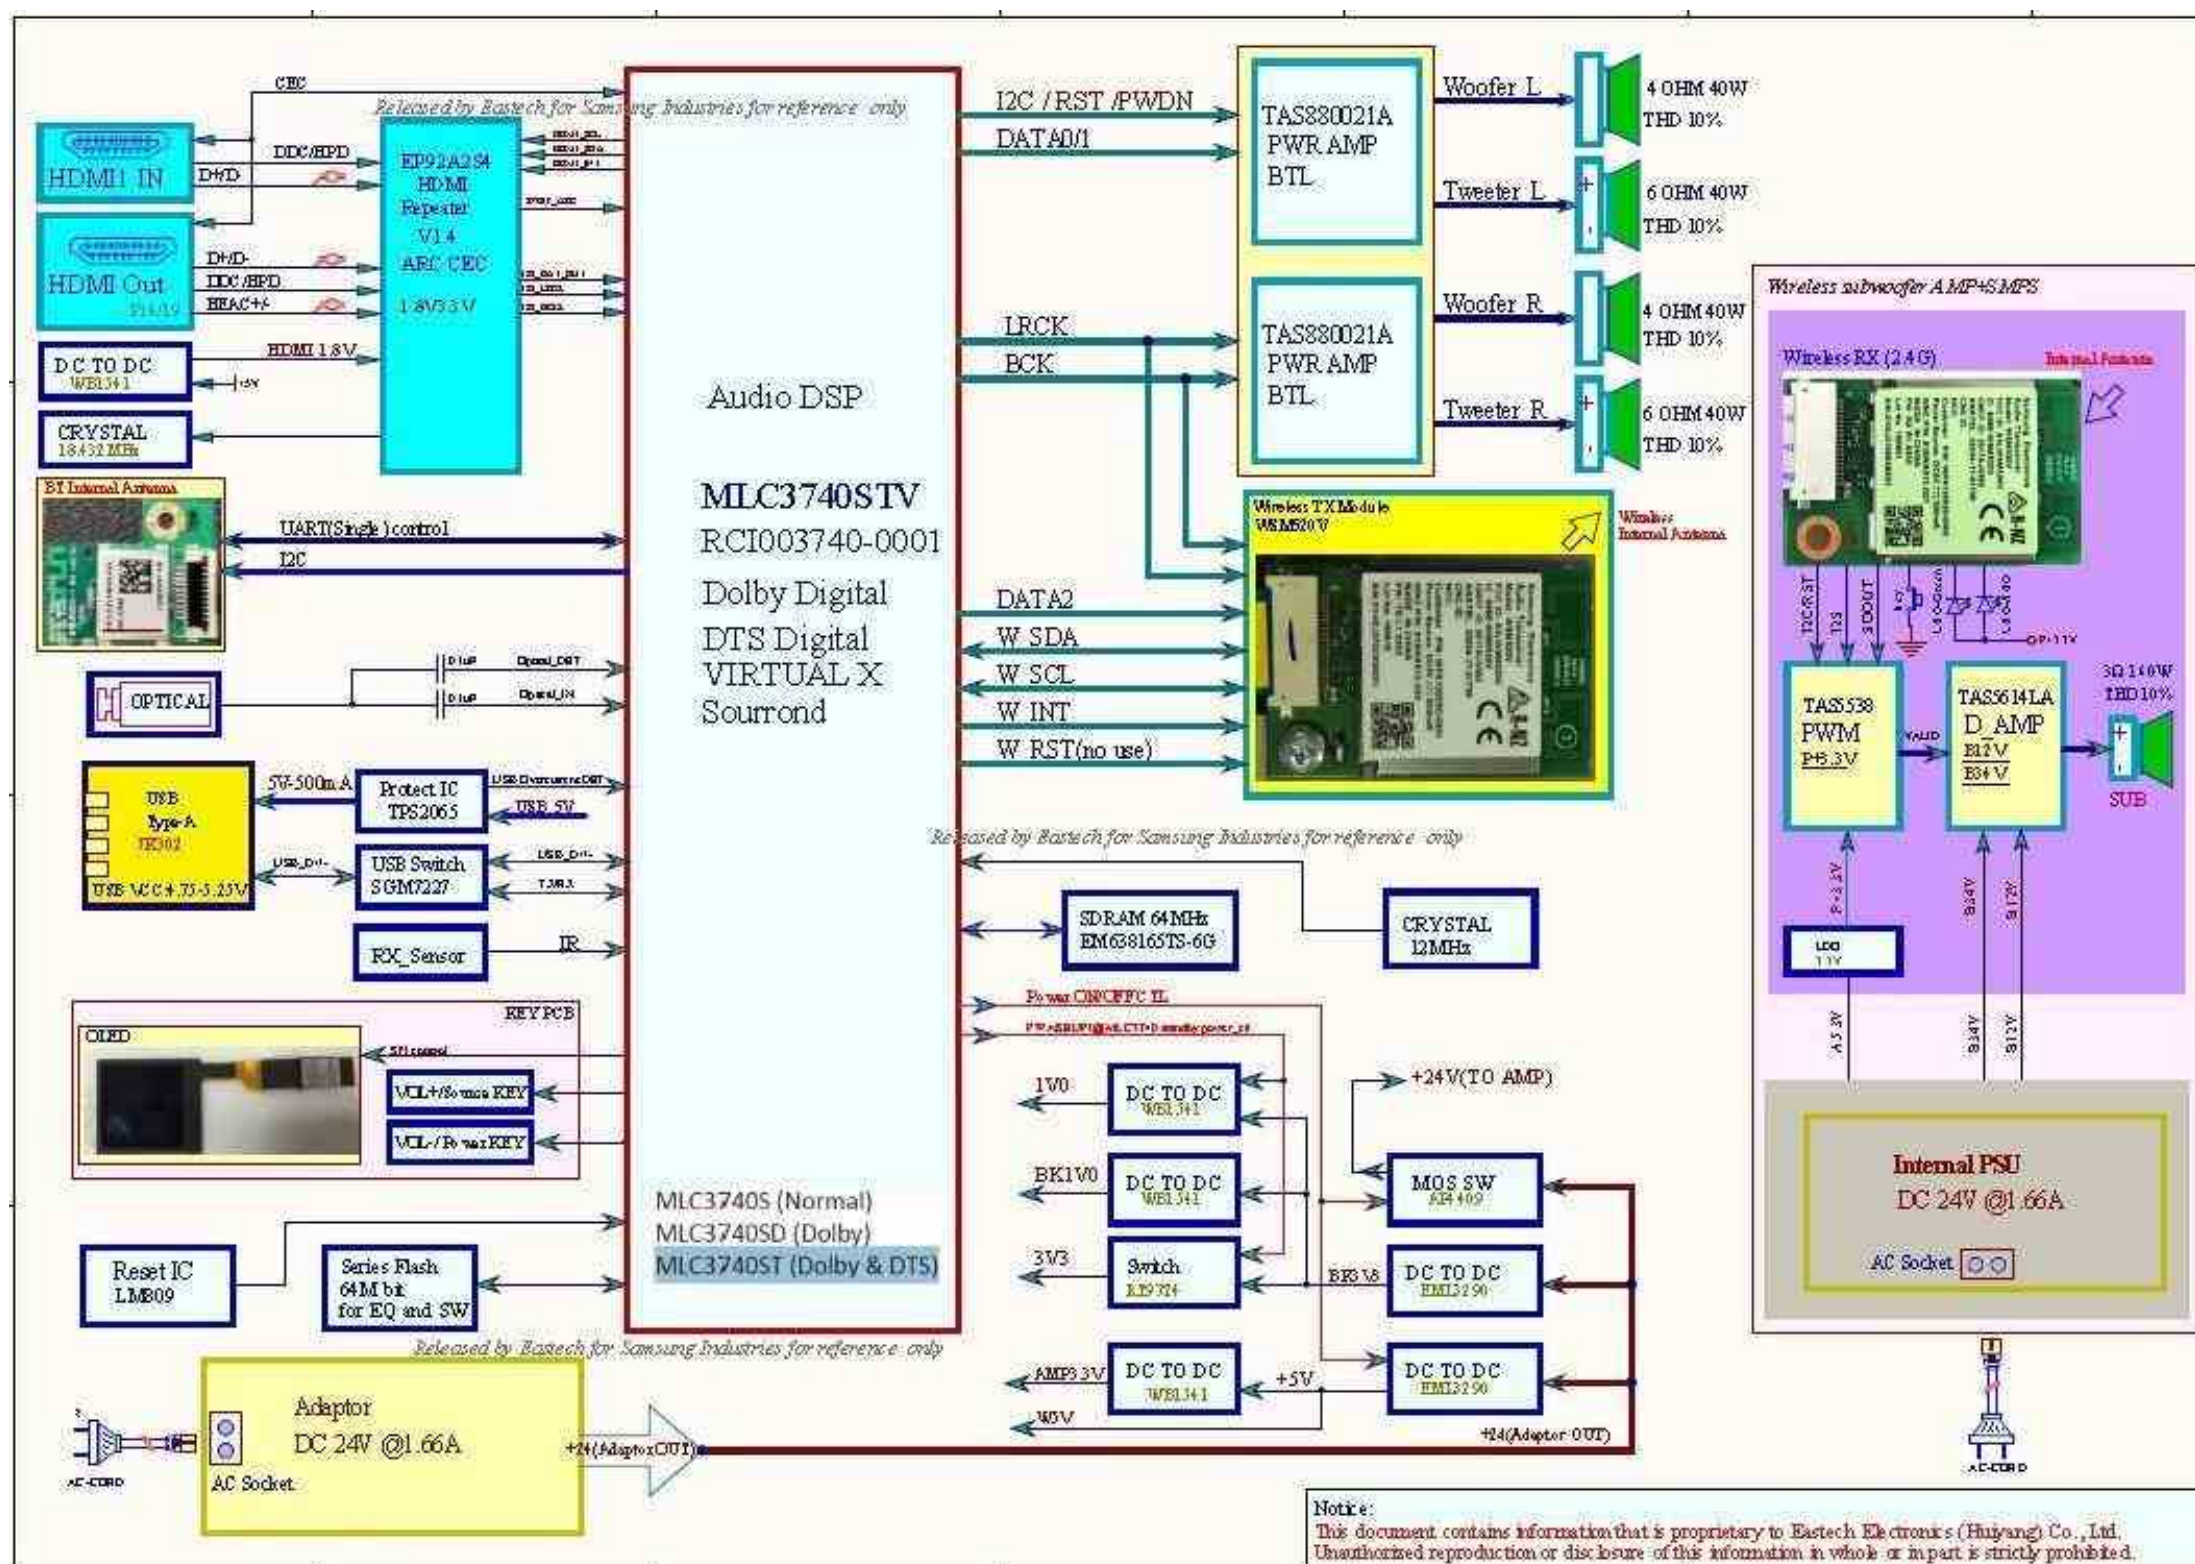


5-4. PCB Assy. Layout

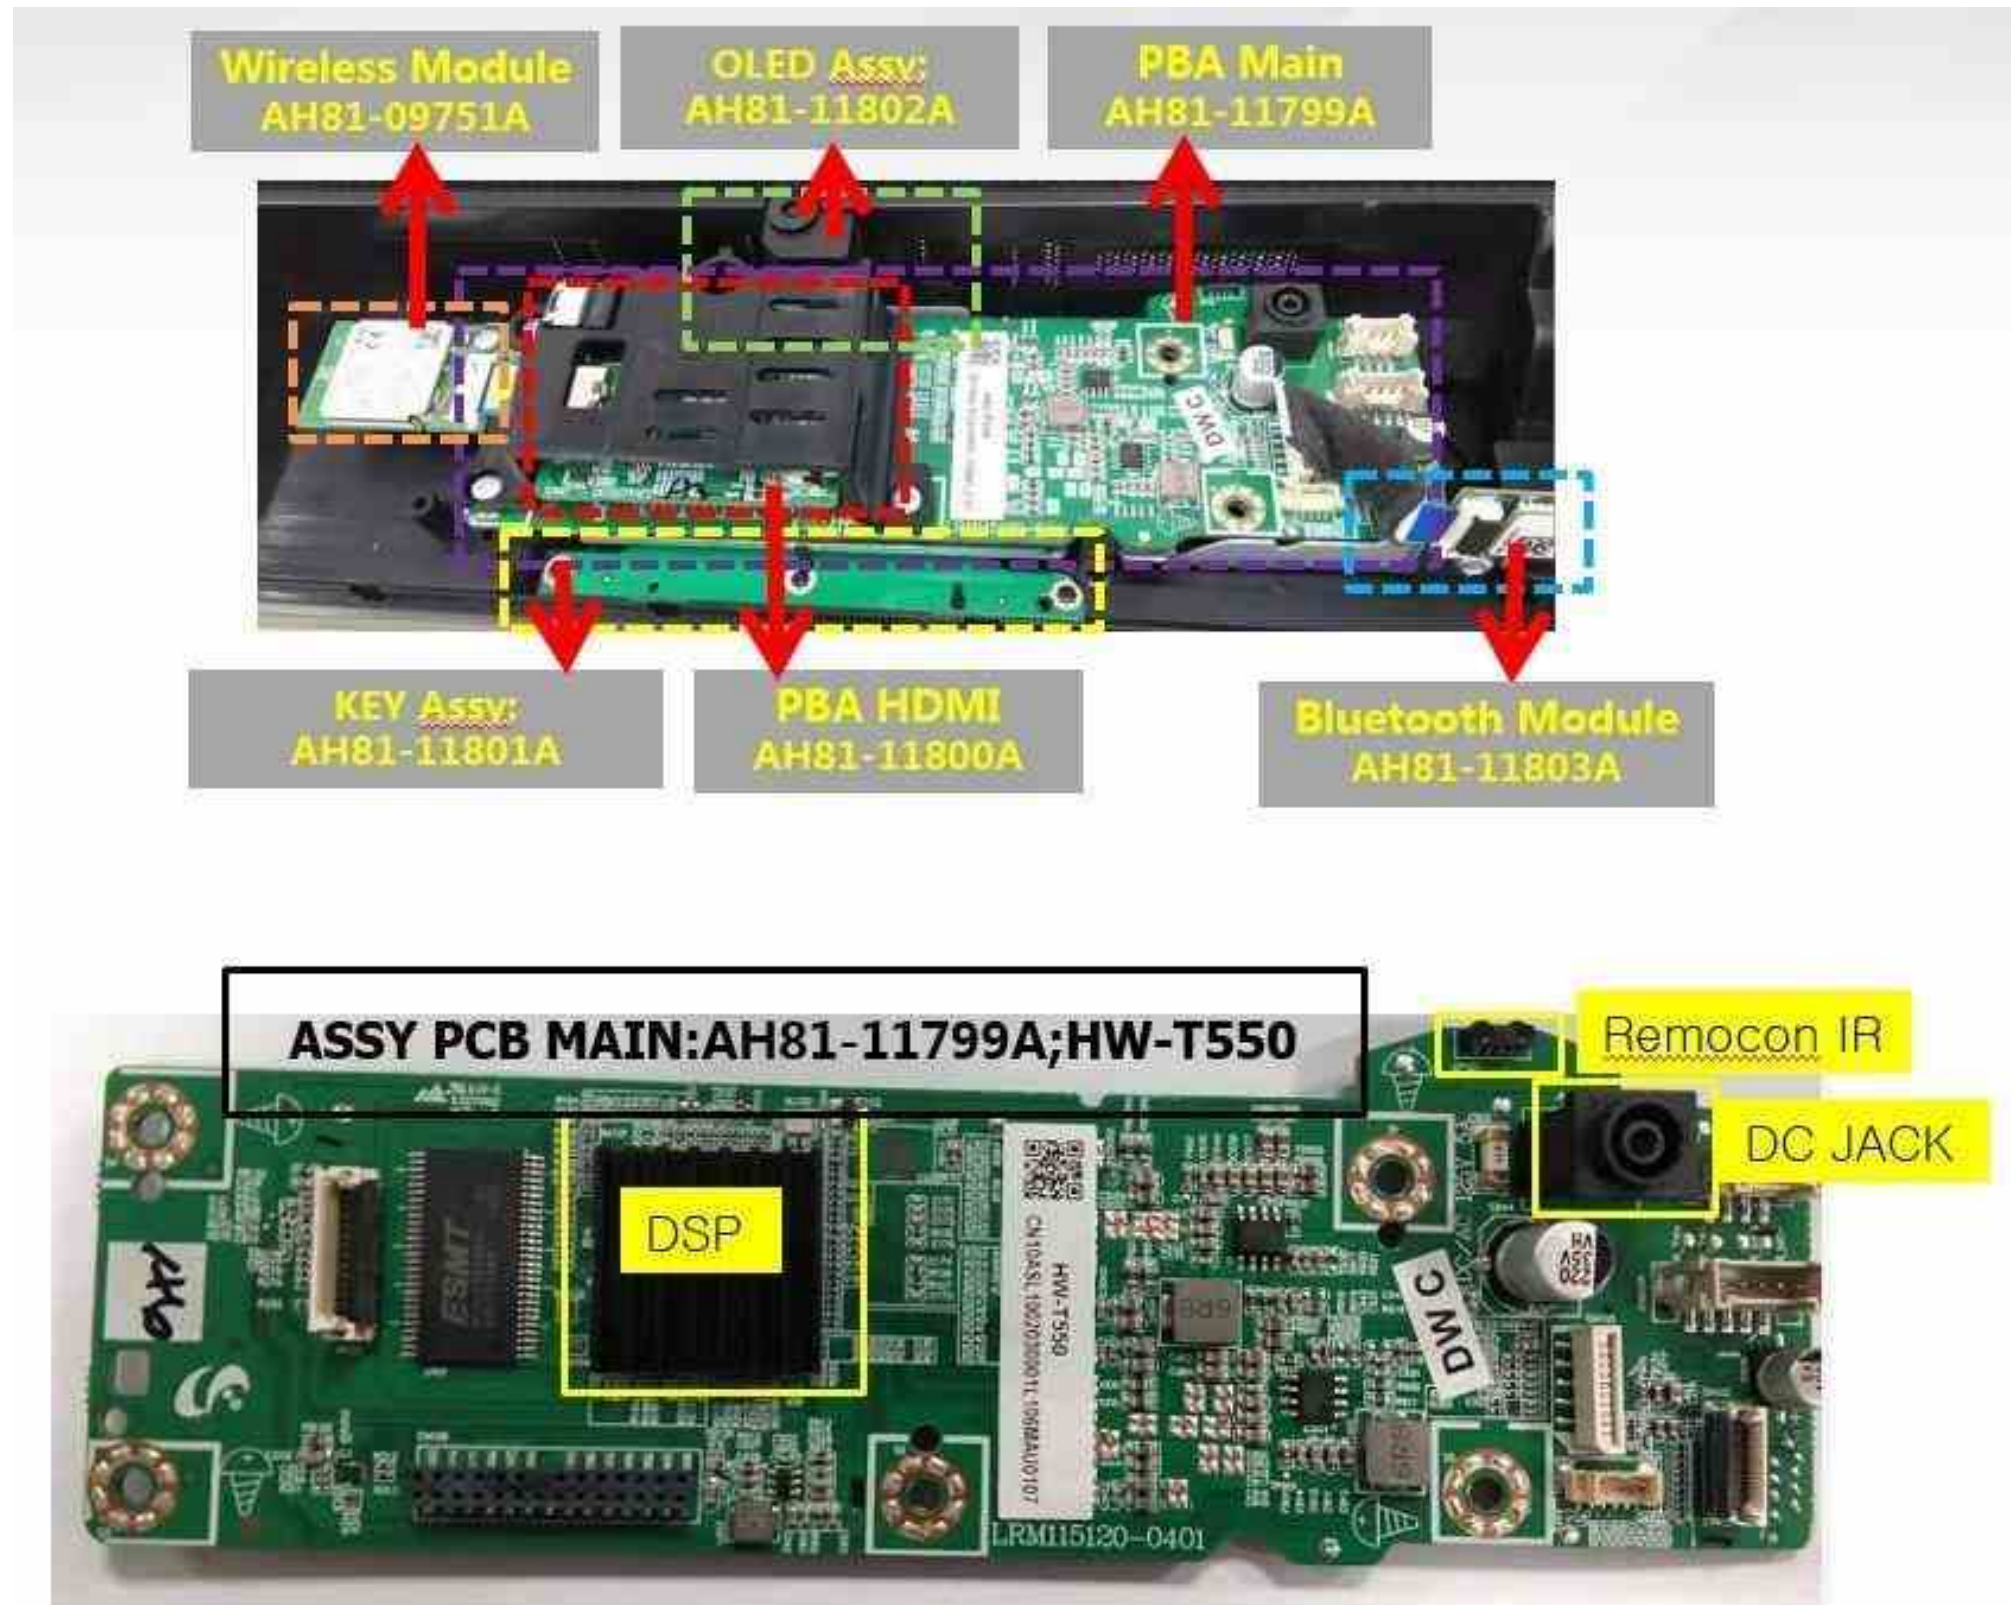

5-5. PCB Assy. Layout



ASSY PCB MAIN:AH81-11799A;HW-T550

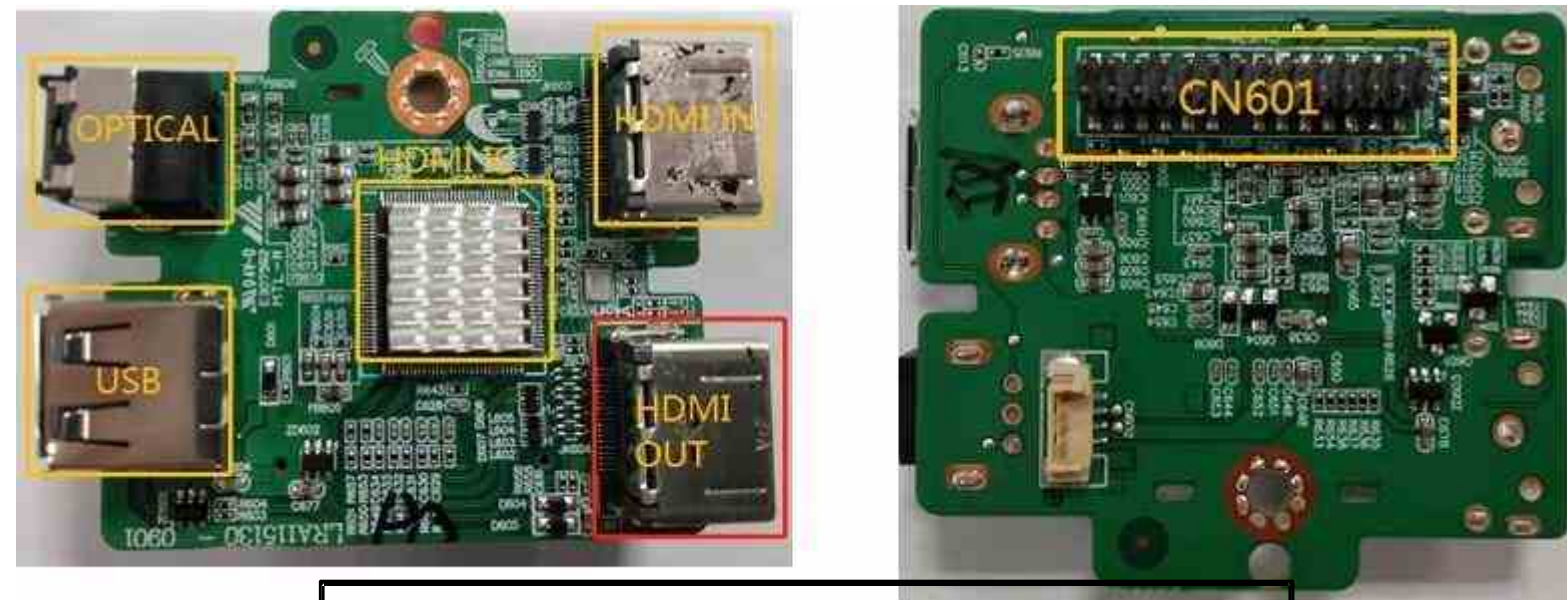


ASSY PCB HDMI AH81-11800A;HW-T550

5-6. PCB Assy. Layout

Caution

Handle the OLED with care. Shock can cause fine cracks on OLED and it may cause OLED out as time passes owing to the air sucked into OLED via the cracks.

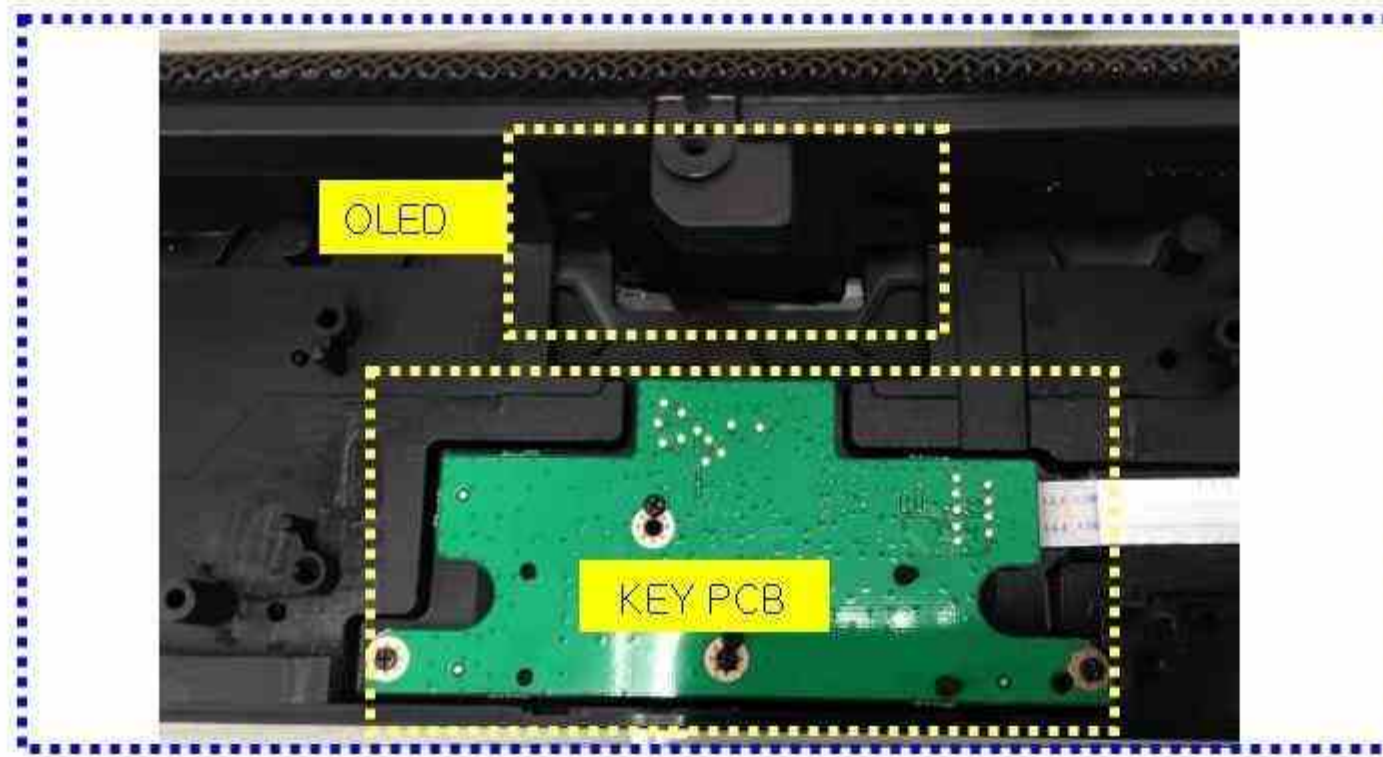

OLED Assy:AH81-11802A;HW-T550

KEY Assy:AH81-11801A;HW-T550


5-7. MAIN PCB(CONNECTOR)

ASSY PCB MAIN:AH81-11799A;HW-T550




REF. NAME	PIN	CON. ASS'Y	FUNCTION
JK101	24	WIRELESS MODULE	Wireless CONTROL
CN106	27	HDMI ASSY	HDMI CONTROL
CN5002	4	L SPEAKER	Left Speaker control
CN5001	5	R SPEAKER	Right Speaker control
CN102	14	OLED+KEY	OLED + KEY CONTROL
CN105	10	BT MODULE	BLUETOOTH CONTROL

5-8. HDMI PCB(CONNECTOR)

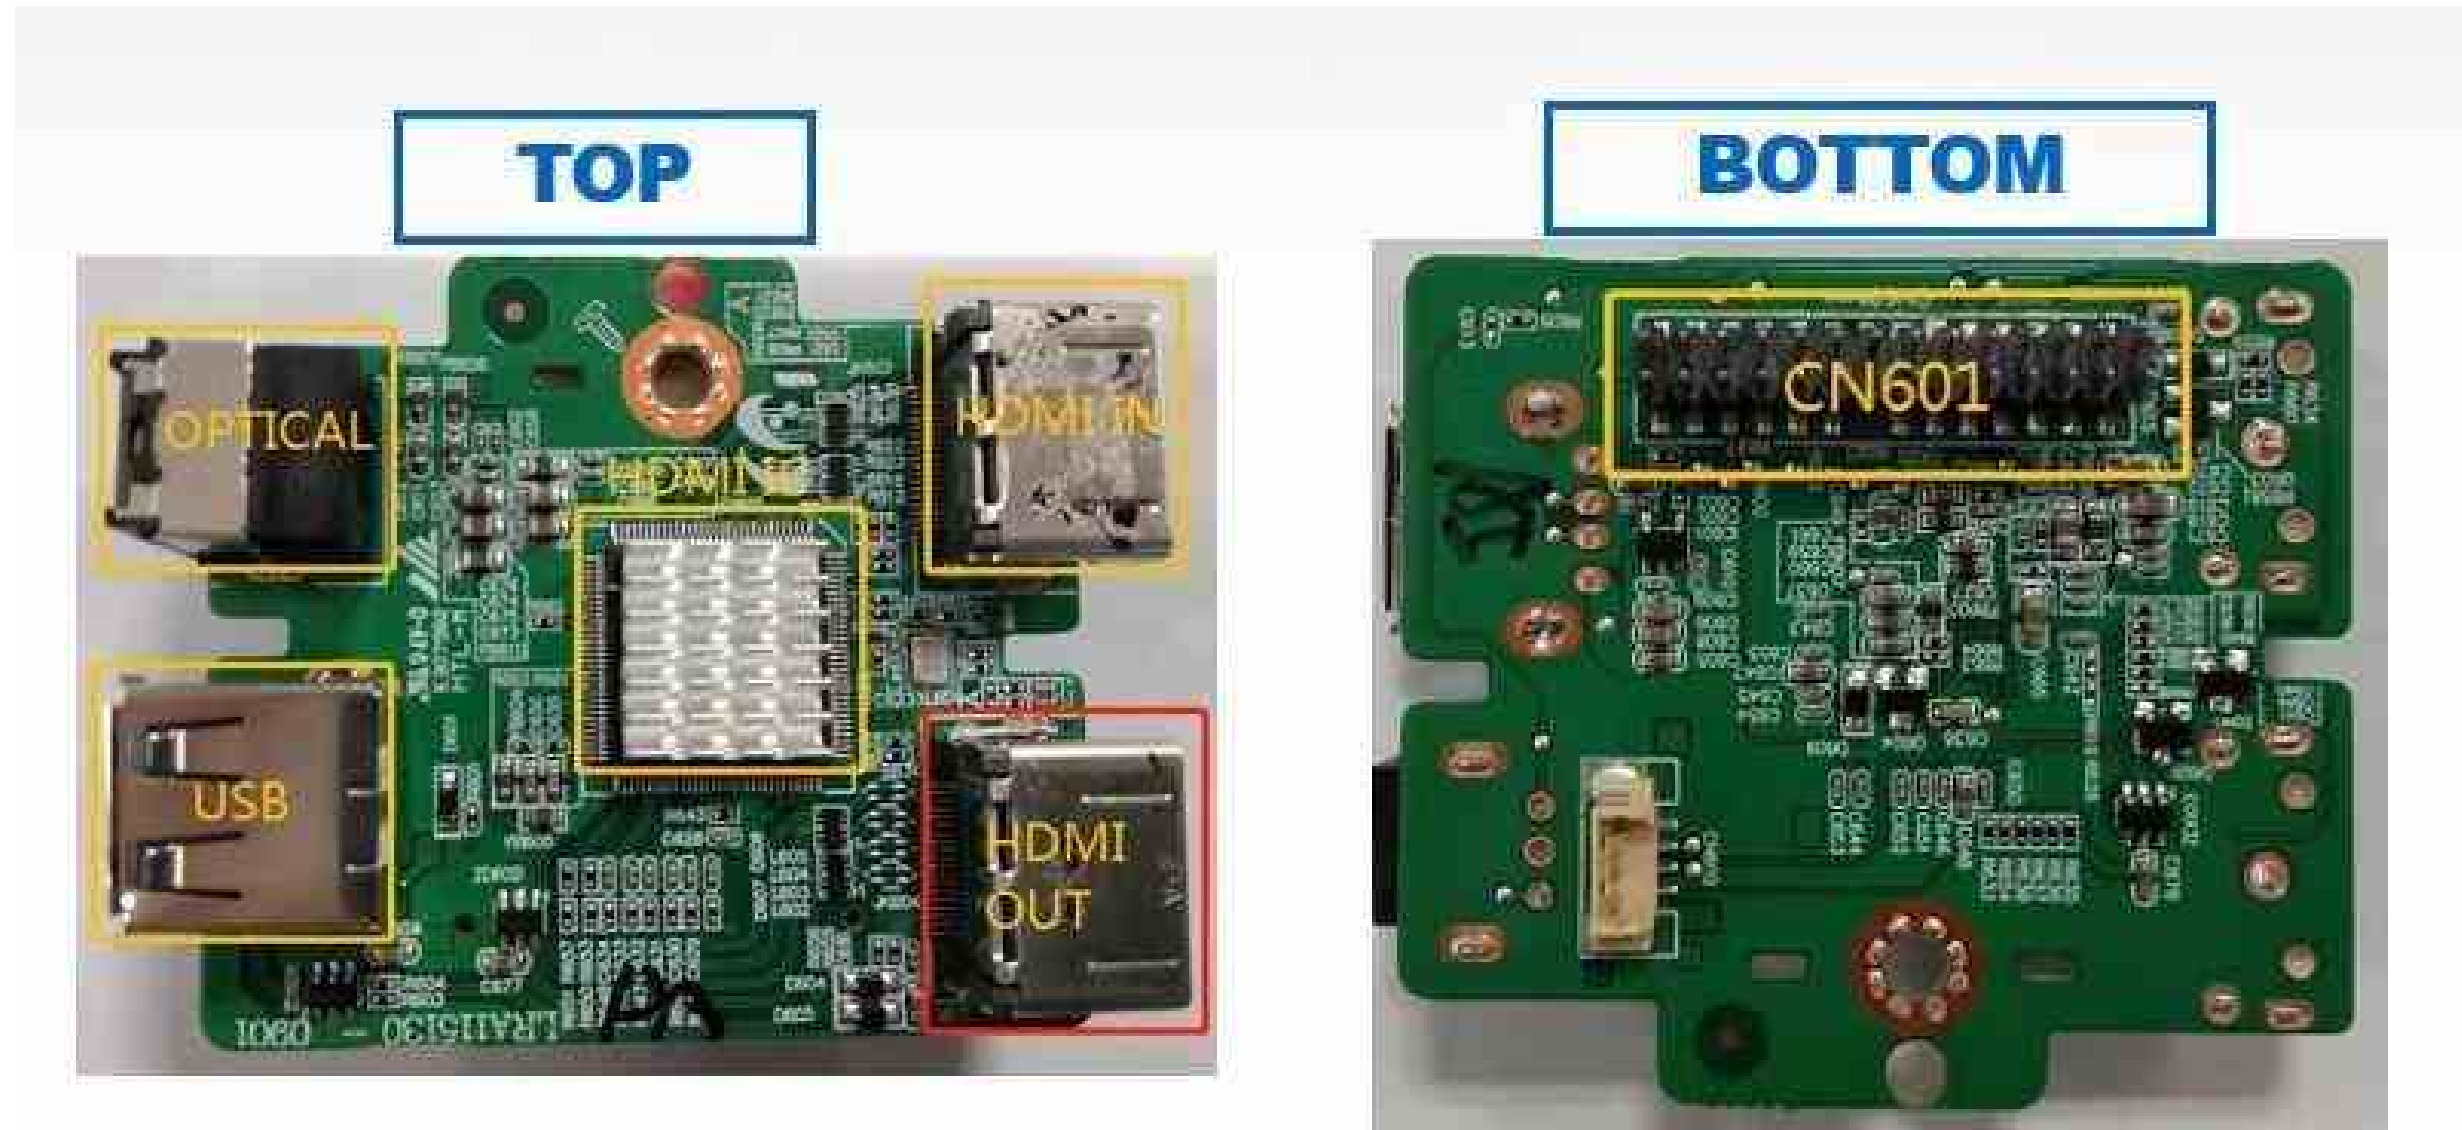

ASSY PCB HDMI AH81-11800A;HW-T550

5-9. OLED + KEY PCB (CONNECTOR)

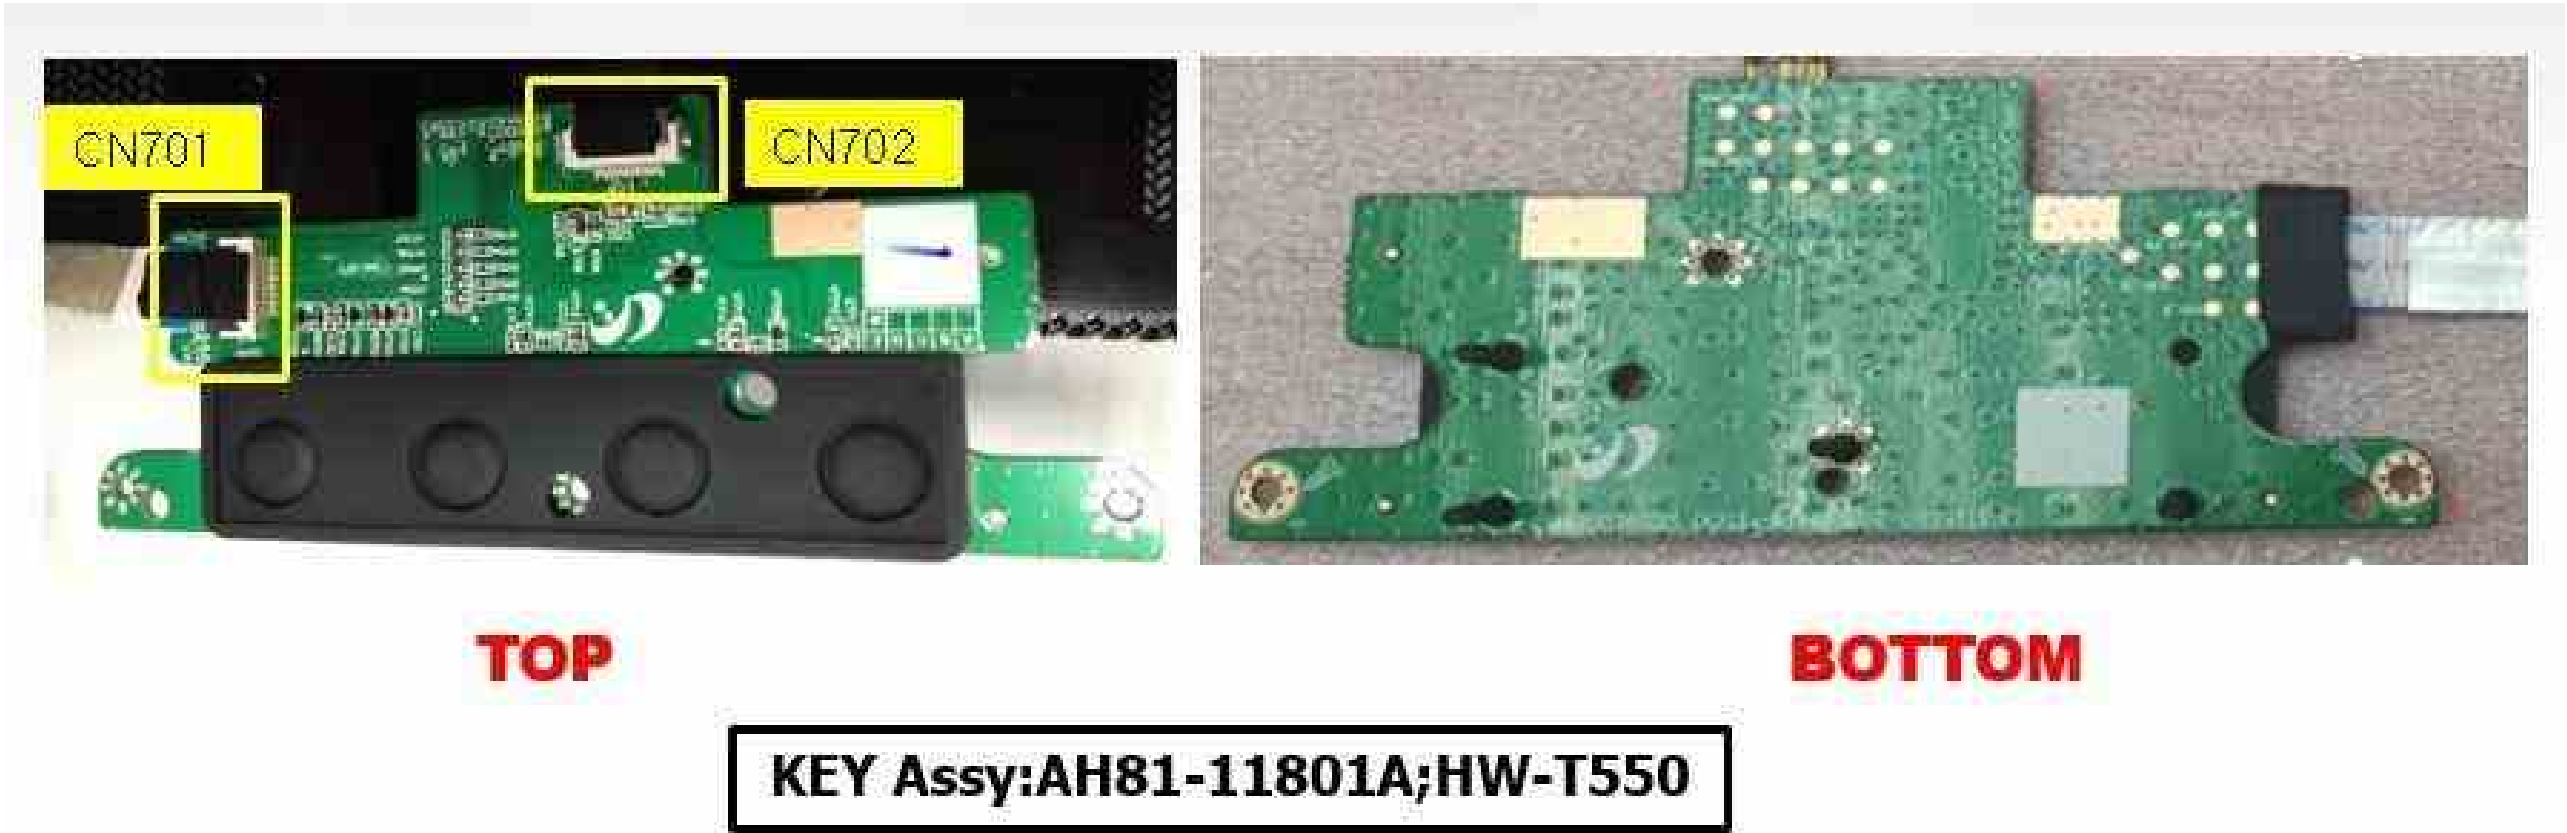

REF. NAME	PIN	CON. ASS'Y	FUNCTION
CN701	14P	MAIN B'D	MAIN TO OLED + KEY B'D CONNECTION
CN702	14P	OLED MODULE	OLED MODULE CONNECTION

5-10. MAIN PCB(LAYOUT)




ASSY PCB MAIN:AH81-11799A;HW-T550



5-11. HDMI PCB(LAYOUT)




5-12. OLED + KEY PCB(LAYOUT)

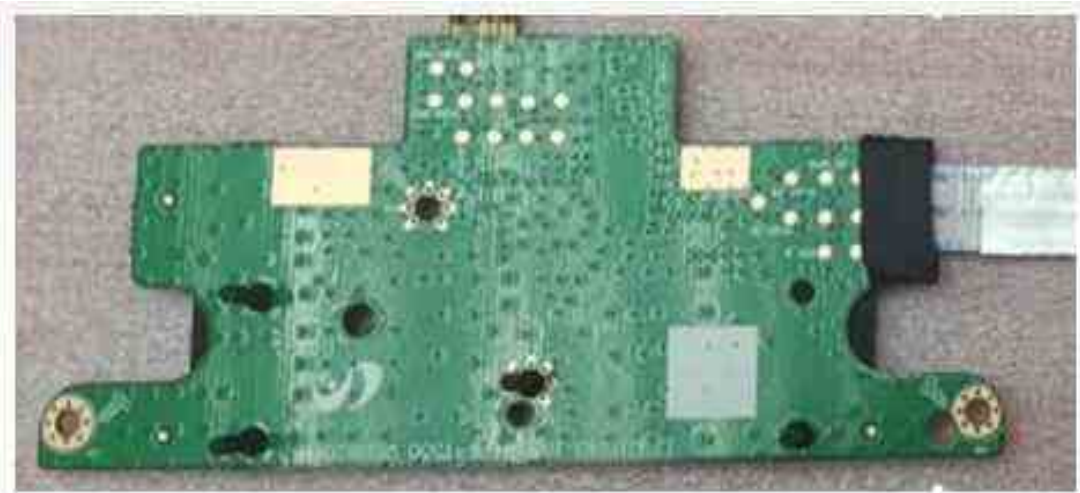**TOP****BOTTOM**

KEY Assy: Assy:AH81-11801A;HW-T550,OLED



5-13. Input part

- Dolby Digital
- DTS 2.0 DTS VIRTUAL:X
- DIGITAL IN 1,USB 1

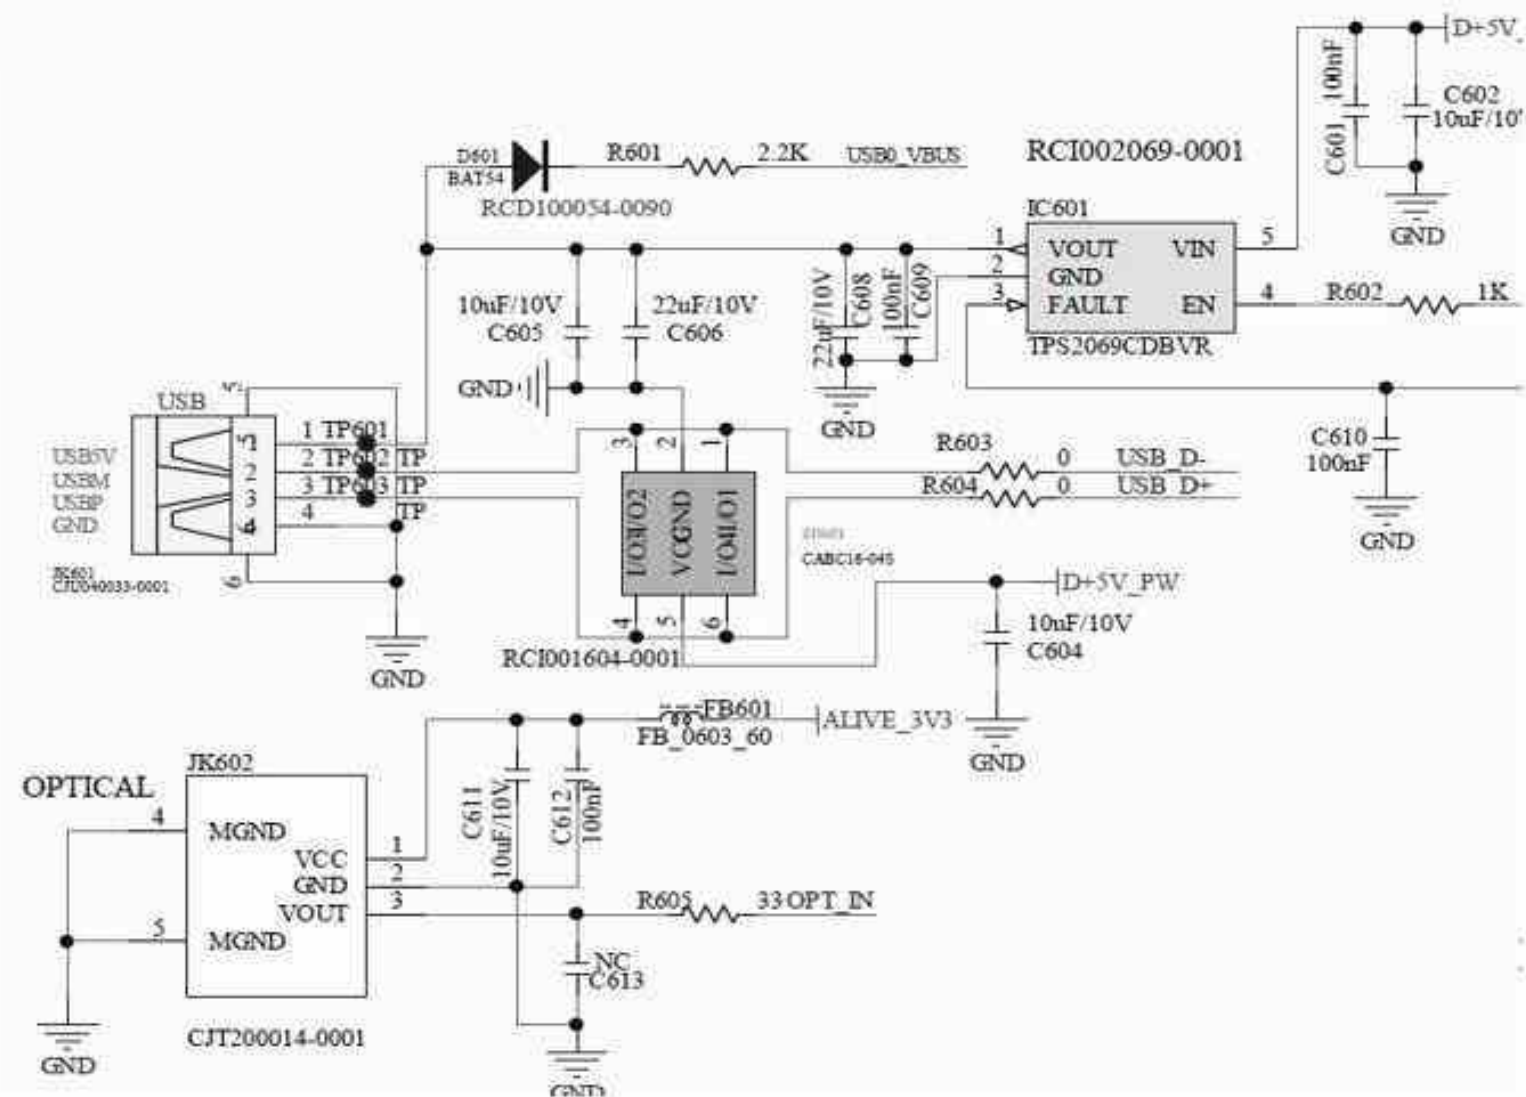

5-14. MICOM +DSP(MLC3740 STV) Part)

- Control IC
- System Control such as OLE D, Button etc

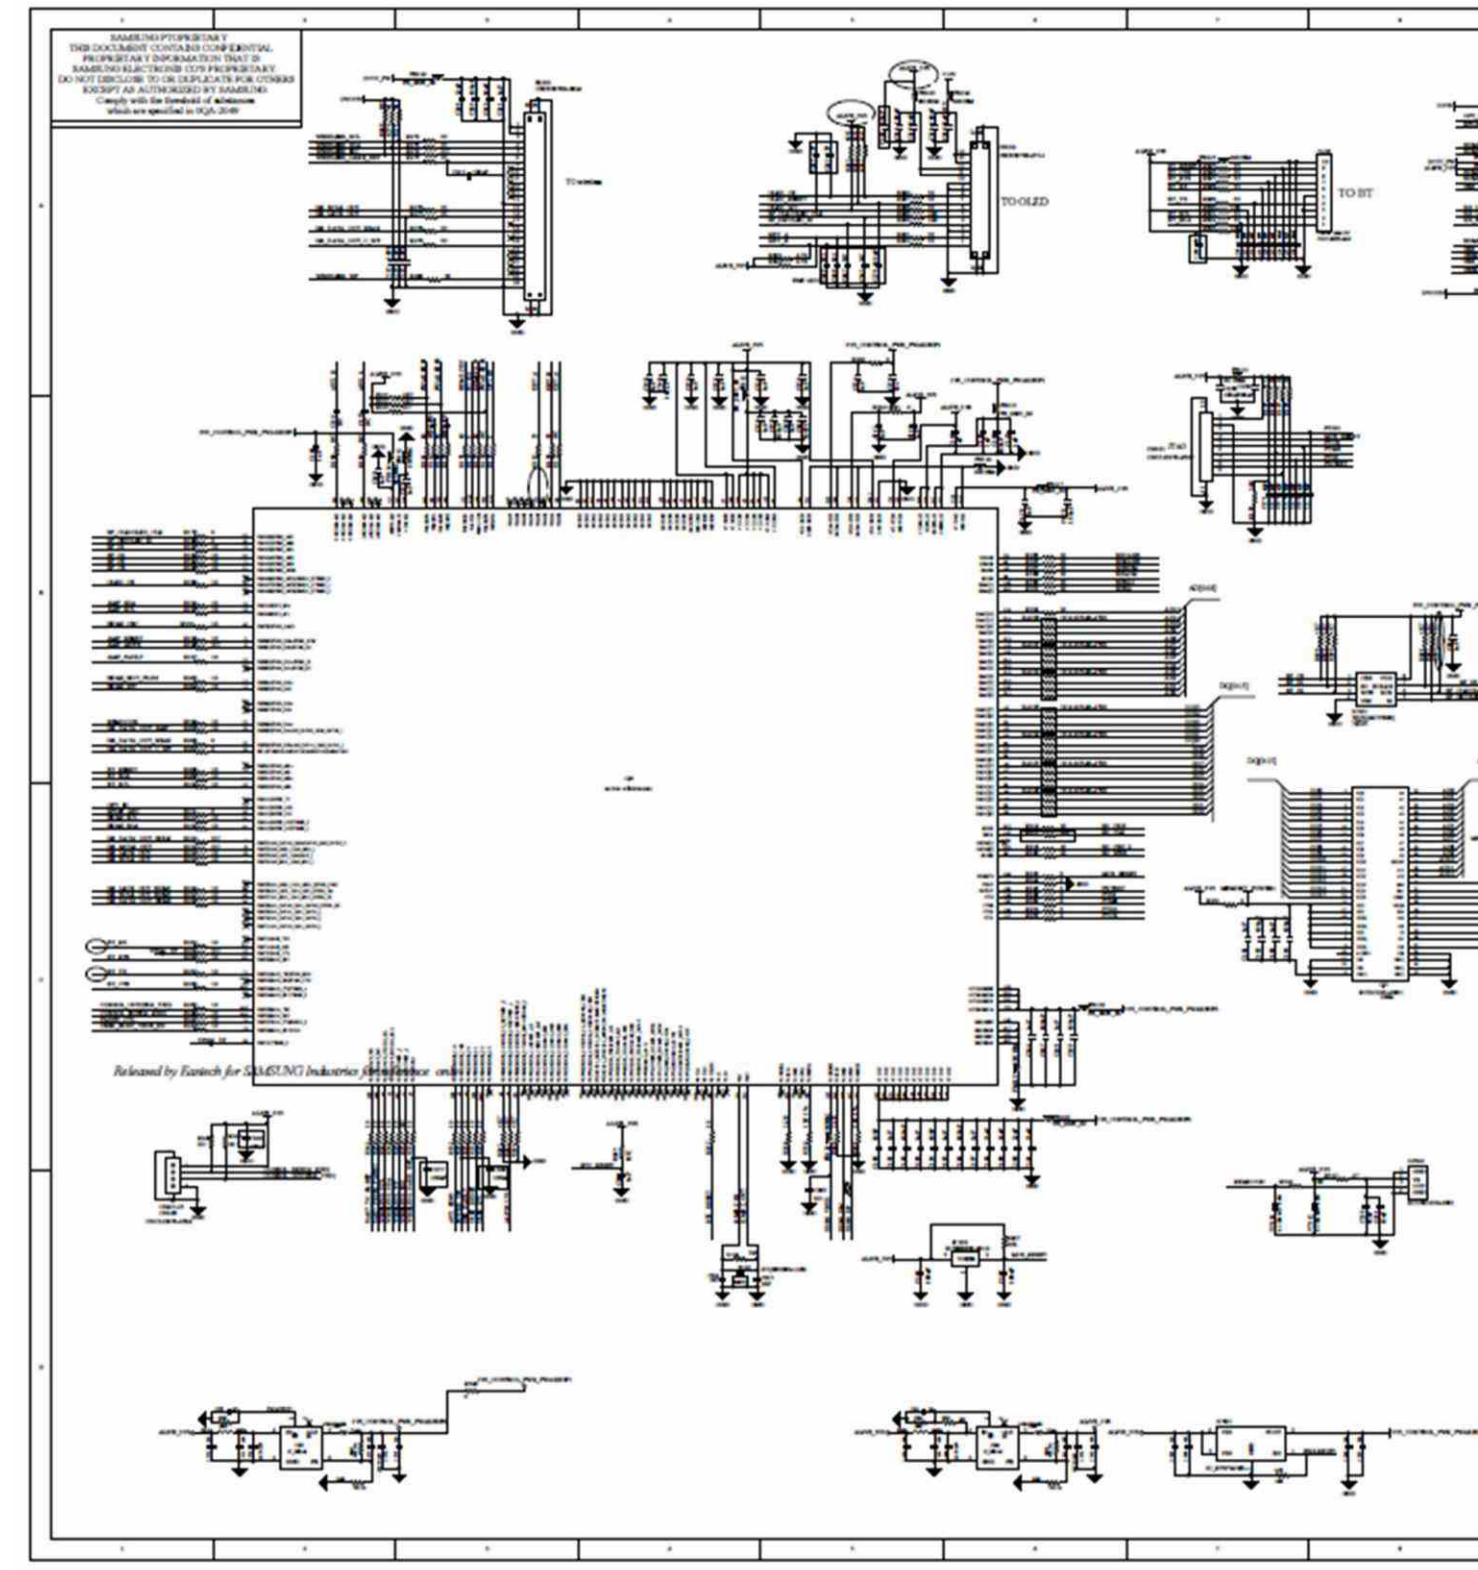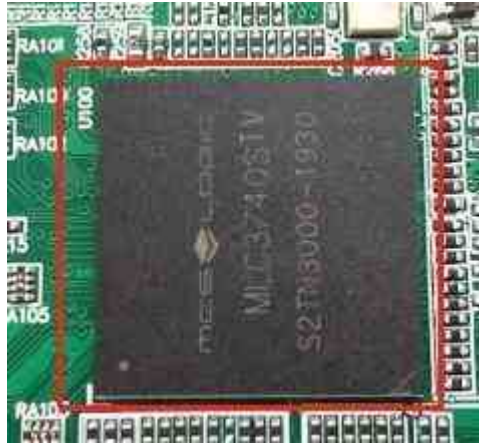

5-15. AMP (TAS88021A) Part

- 2-CH TIAMP SOLUTION
- 160W STEREO HD DIGITAL-INPUT.
- Stereo Bridge Tied Load(BTL)
- Total output Power
10% THD+N160W

