

Quick Guide to Redmi 6A Series Disassembly and Assembly Machine

Technical support internal TSI unloading H unloading 6A Redmi 6A series disassembly and assembly machine fast guide V02

Directory:

- Catalogue of Fast
 - Directions for Redmi 6A Series Disassembly and Assembly Machines
- 1. Make preparations
 - [1.1](#) "Working conditions"
 - [1.2](#) Preparation for prostitution
- [2.](#) Bucket dismantling of equipment
 - [2.1](#) Dismantling barrel SI cartel
 - [2.2](#) Remove the barrel battery cover assembly
 - 2. To separate the camera lenses
 - 2. Remove the bucket antenna bracket screws * 5
 - [2.5](#) Bucket dismantling antenna bracket
 - [2.6](#) Remove the barrel metal bracket and screws to
 - [2.7](#) Separate battery speed PC connector
 - 2. To separate the display speed PC connector
 - 2. Main separation ϕ auxiliary board speed PC ϕ board connector
 - [2.10](#) Separate side key speed PC connector
 - [2.11](#) Key speed PC on barrel dismantling side
 - [2.12](#) ϕ plate connector for mosquito separation axis
 - 2.1 to Separate E Camera ϕ Board Connector
 - 2.1 Disassemble drum ϕ plate assembly screws * 1
 - [2.15](#) Drum dismantling ϕ plate
 - [2.16](#) Dismantling bucket and setting camera
 - [2.17](#) Remove the bucket and place the camera rubber cover
 - 2.1 is the barrel removal earpiece
 - 2.1 Vibrating mask assembly for main bucket dismantling
 - [2.20](#) Disassemble the barrel, roll and select the dial to prompt the rubber sleeve
 - [2.21](#) Front camera for barrel removal
 - [2.22](#) Drum removal speaker bracket assembly screws * are
 - 2.2 to Detachable Barrel Speaker Support Assembly
 - 2.2 Detachable Bucket Battery
 - [2.25](#) Separation Mosquito Axis Subplate Connector
 - [2.26](#) Bucket-removing mosquito axis
 - [2.27](#) Separate ϕ sub-board speed PC sub-board connector
 - 2.2 is the speed PC of ϕ auxiliary plate for barrel dismantling
 - 2.2 Main Split TP Speed PC Connector
 - 2. To 0.
- Remove the barrel sub-plate to. Equipment assembly
 - To. 1 Check related components to. 2
 - Installation sub-board
 - To. to install TP
 - speed PC connector to. to install ϕ sub-board speed PC
 - To. 5 Install ϕ sub-board speed PC sub-board connector

- To. 6 Install mosquito axis
- and mosquito axis sub-board
- connector to. 7 Install battery
- To. for installing speaker bracket assembly
- To. main mounting speaker
- bracket assembly screws *
- to. 10 mounting front
- camera
- To. 11 Install roll
- selection prompt
- rubber sleeve to. 12
- Install vibration
- mask assembly
- To. 1 to mounting handset
- To. 1 to install the hoist camera rubber cover

- To. 15 Install the hoist camera to.
- 16 Install the ϕ board
- To. 17 Install the hoist camera ϕ plate connector to. 1 for installing ϕ plate screw * 1
- To. 1 main mount mosquito axis ϕ plate connector to. 20 mount side key speed PC
- To. 21 Install side key speed PC connector
- To. 22 Install ϕ sub-board speed PC ϕ board connector to. 2 to install display speed PC connector
- To. 2 to install battery speed PC connector
- To. 25 Install metal brackets and screws *
- to. 26 Install antenna brackets
- To. 27 Install antenna bracket screws * 5 to. 2 for installation of hoist camera lenses
- To. 2 main mount battery cover assembly to. to 0 mount SI cartridge
- To. Pay attention to things
 - To. 1 conductive glue reuse original reflection. 2 fixed glue reuse original reflection. To remove glue operation attention to things. To power-off state attention to things

STEP 1 Work Preparedness

1.1 Working conditions

- Maintenance qualification

The inspector must meet the environmental

- requirements of repairing products only after training and obtaining the training certificate

Indoor one 1000 + strict-200 rolls of ux (lux), the inspection farts must be isolated from the outside every day, and the mosquito line must be evenly dispersed and the indoor temperature is 2 to-2 °C vertically irradiated from ϕ side

Indoor dampness causes 0%-55%

Electrostatic protection devices shall be set up in the indoor protection area, and ϕ shall act on electrostatic leakage dissipation neutralization and Ω shielding

1.2 Tool preparation

The related operation layer needs to be used as a crowbar

Demolition of barrel shell for obscene use, and auxiliary assistance of cable for obscene use



2019-08-12 17:12:35

2019-08-12 17:12:35

Ten screwdrivers in Russia

The use of fornication is to dismantle the barrel snail and assist in fornication




In Russia, it is said that the tip
tweezers (black) V, TUS, S and
dial-11 are used to remove
barrels and assist in the treatment
of obscenity



In Russia, it is said that the
forceps (black) V, TUS, S and-1
are used to remove barrels and
assist in the use of prostitution



It is said that SI
catamaran is opened.
It is used to open SI
catamaran

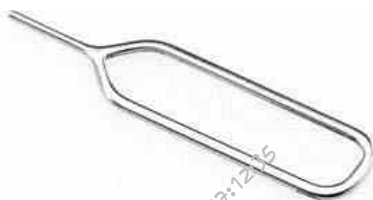

The use of the yellow
plastic dismantling
machine rod in the
treatment of obscenity
in Russia is to
dismantle the battery
cover of the barrel

Dust-free cloth for obscene Russia

Cooperate with cotton swabs to dismantle barrels and take pictures of lenses for obscene use




Cotton swabs in Russia

Cooperate with dust-free cloth to remove barrels and photograph lenses for obscene purposes




It is said that the steel sheet of the machine is dismantled-the unloading control causes sc This C01000 is 500. It is used to dismantle the barrel and use the battery when the easy-to-pull glue is broken

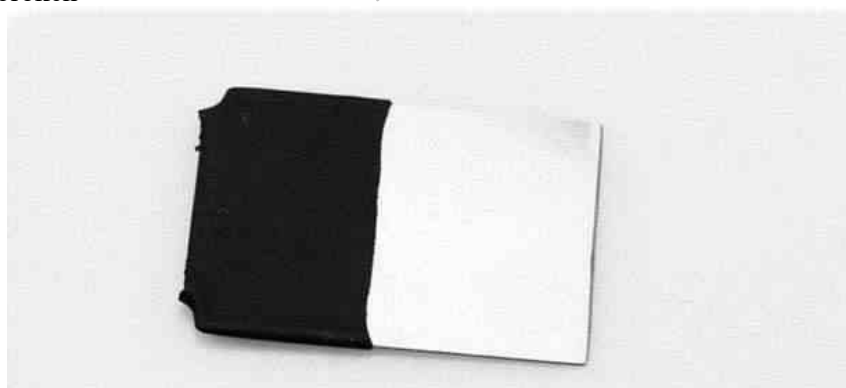

2. Equipment disassembly

The logic diagram of disassembling barrels of equipment is as follows: X, select the quickest step to fold and re

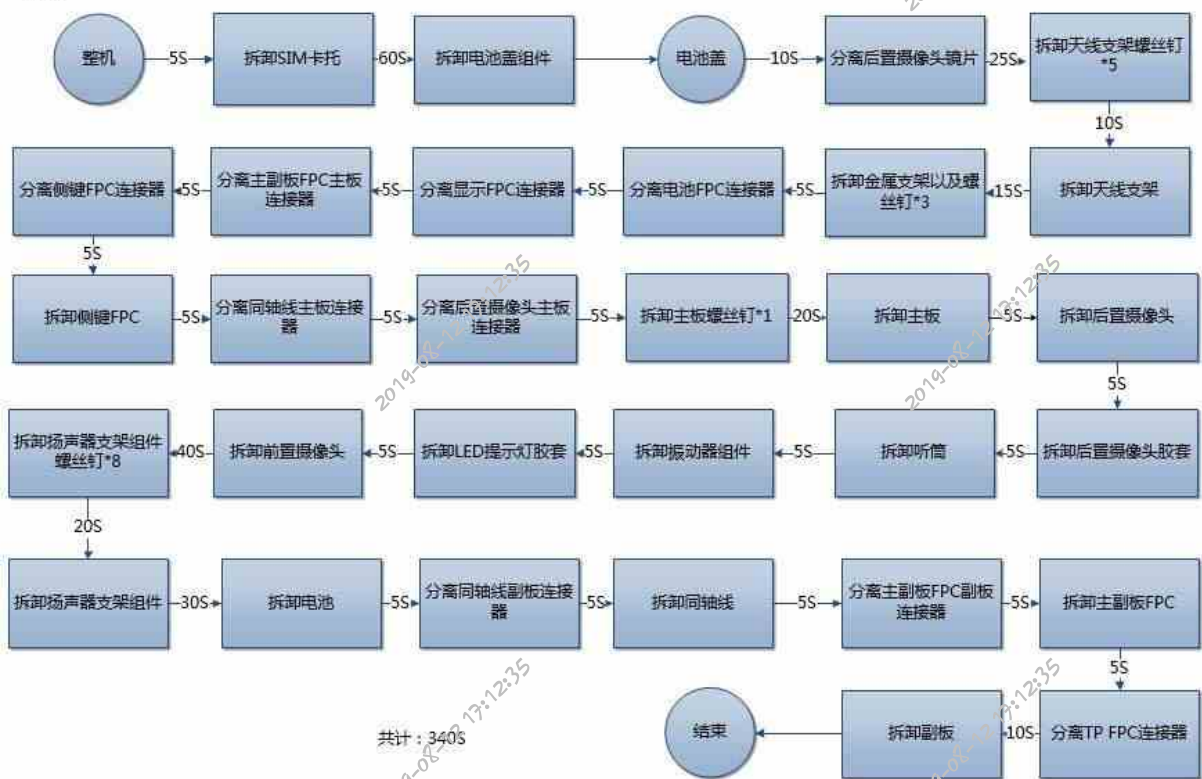

2.1 Removing SIM Cato

Use the SI card unloader to open the opening hole of the SI card unloader, push the opening into the fuselage with force, until the SI card unloader tray is out of the fuselage, then take the XSI card unloader



2.2 Removing battery cover assembly

Insert the yellow plastic disassembly bar near the side of the fuselage, as shown in the χ layer



Separate the middle frame of the side part of the battery cover from the gap, and open the corner buckle of the battery cover straight and slippery. It should be noted that the corner of the battery cover is in the buckle. When sliding to the middle of the mobile phone, pay attention to separating the buckle, and continue to slide to the SI unloading position

Insert the plastic crowbar into the gap of the front shell of the battery cover at the position as shown in the figure, slide the cover to the right along the battery cover, and separate the buckle on the right side of the battery cover



Hold the battery cover of the battery cover with your hand, and slide the buckle on the right side along the gap where the battery cover has been disassembled with a plastic disassembly rod in your right hand. Pay



Hold the mobile phone with your hand, use the plastic disassembly bar with your right hand to separate the top shell assembly




2.3 Detaching rear camera lens

Use dust-free cloth to wrap cotton swabs to jack up the camera lenses from the inside of the battery cover and take χ




2.4 Removing Antenna Support Screw ~ 5

Use a screwdriver to manually cover and dismantle the barrel screws. If you want to use an electric screwdriver, set the torque of the sharp electric screwdriver to 0.6 0.7 kgf. c. Dismantle the barrel screws according to the order of χ . A total of 5.

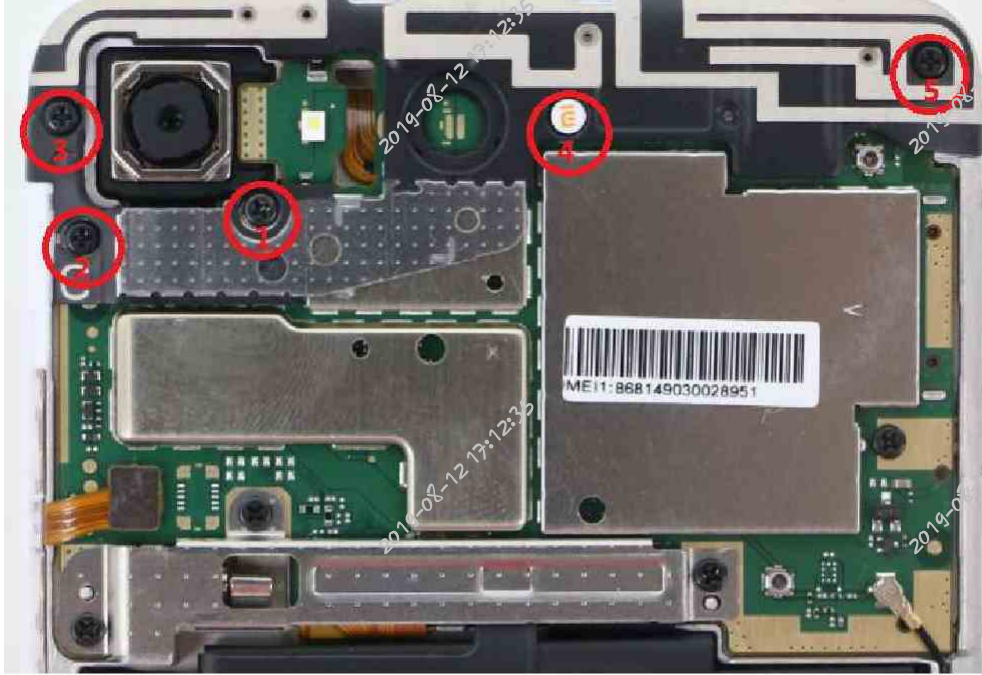


2.5 Removing antenna support

Lift up the bracket at the position as shown in the figure and separate the $\Omega \phi$ board

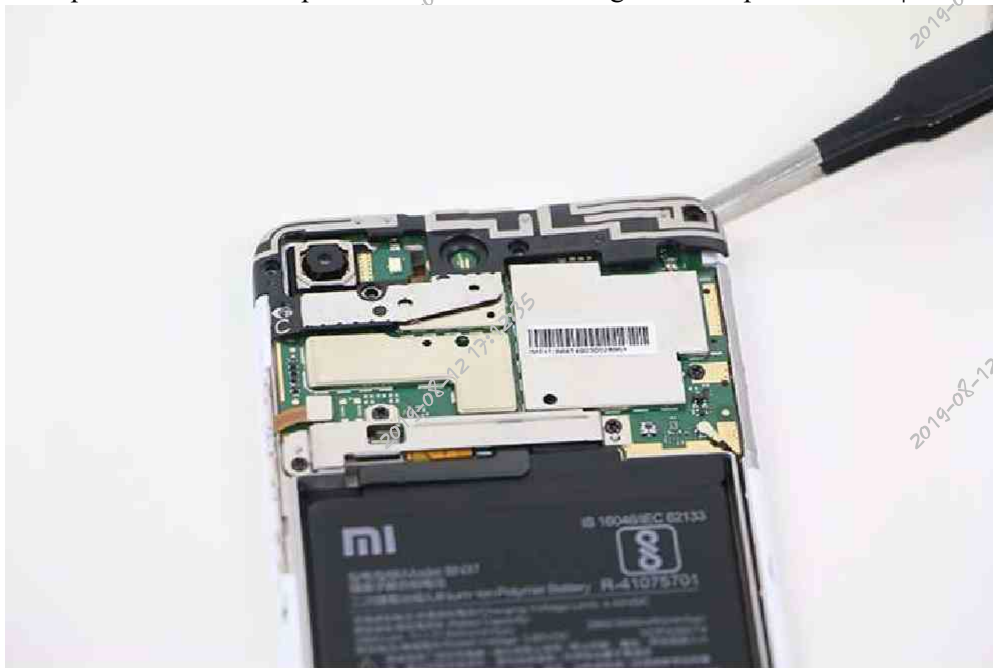


2.6 Remove metal bracket and screw* 3

Use a screwdriver to manually cover and disassemble the bucket screw. If you want to use an electric screwdriver, set the torque of the sharp electric screwdriver to 0.6 0.7 kgf. C needle to disassemble the

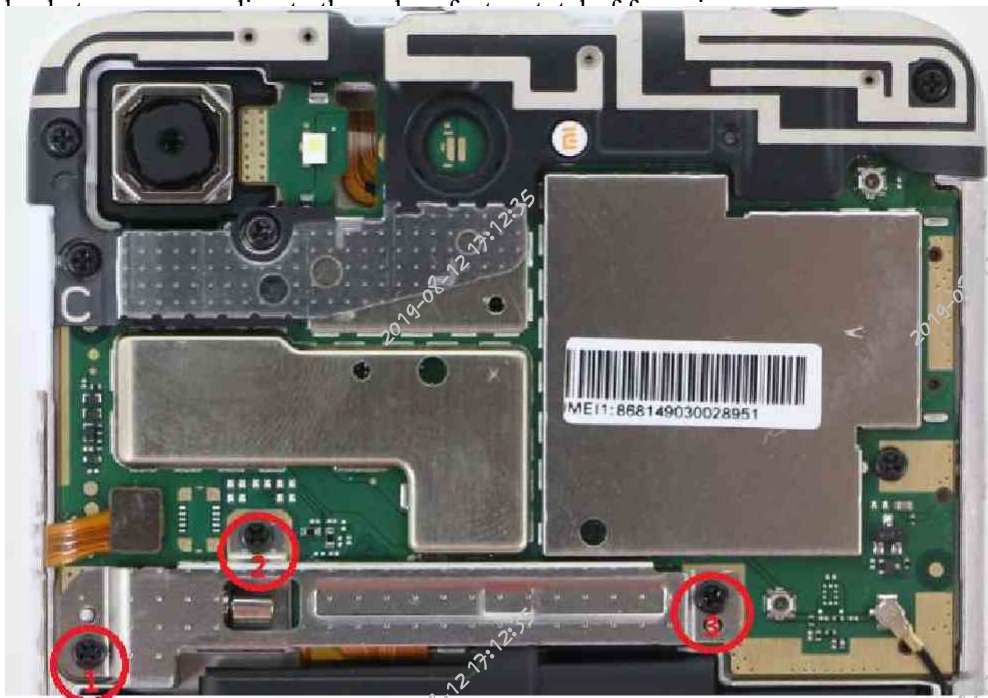

Take out the bracket by hand

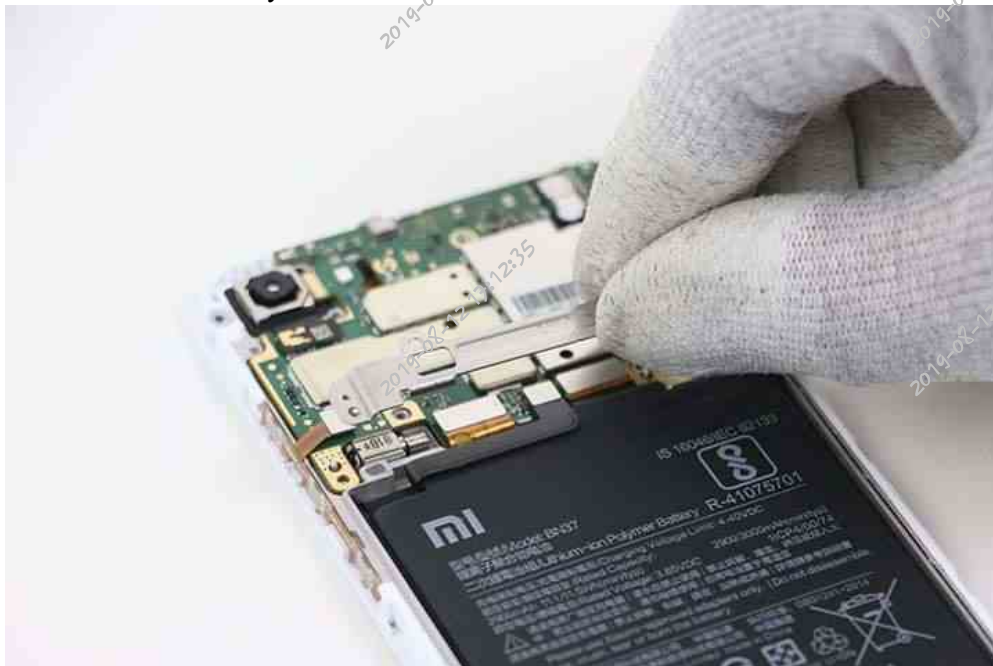

2.7 Separate battery FPC connector

Use a crowbar to gently lift the battery connector at the position shown on the χ layer. Please pay attention to the components around the connector. When the crowbar goes deep, it is necessary to avoid damaging the



2.8 Separate display FPC connector

Use a crowbar to gently lift the display speed PC connector buckle at the position shown in χ



2.9 Separate main and auxiliary board FPC motherboard connector

Lifting φ auxiliary board speed PC φ board connector with crowbar There are devices around the connector, so it is peripheral devices can be used as




2.10 Separate side key FPC connector


Use a crowbar to gently lift the side key gold finger from the connector



2.11 Remove side key FPC

Use flat tweezers to gently remove the side key speed PC from the front shell assembly

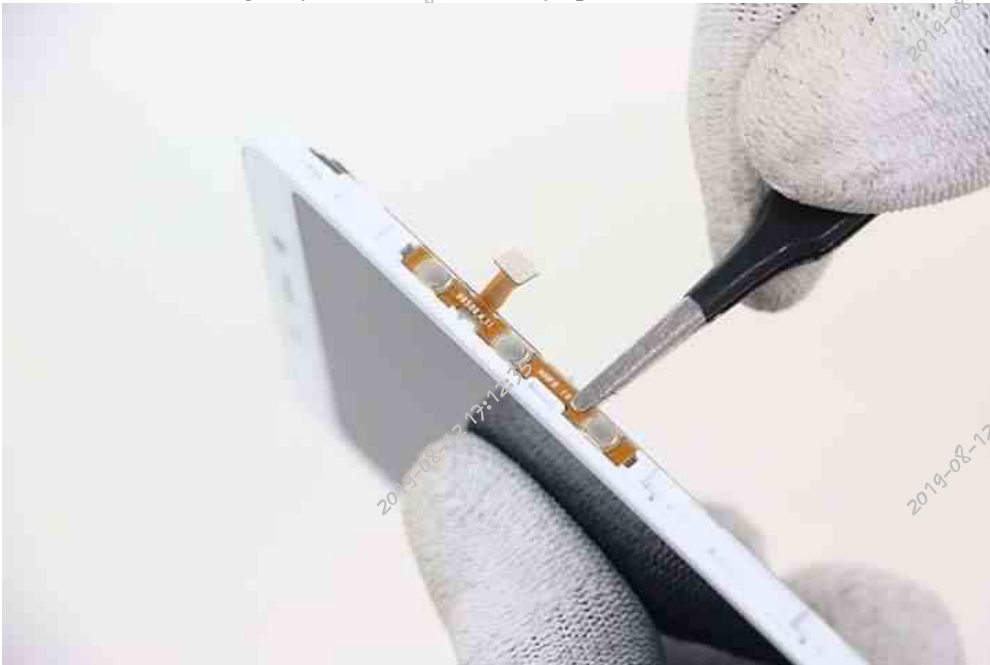

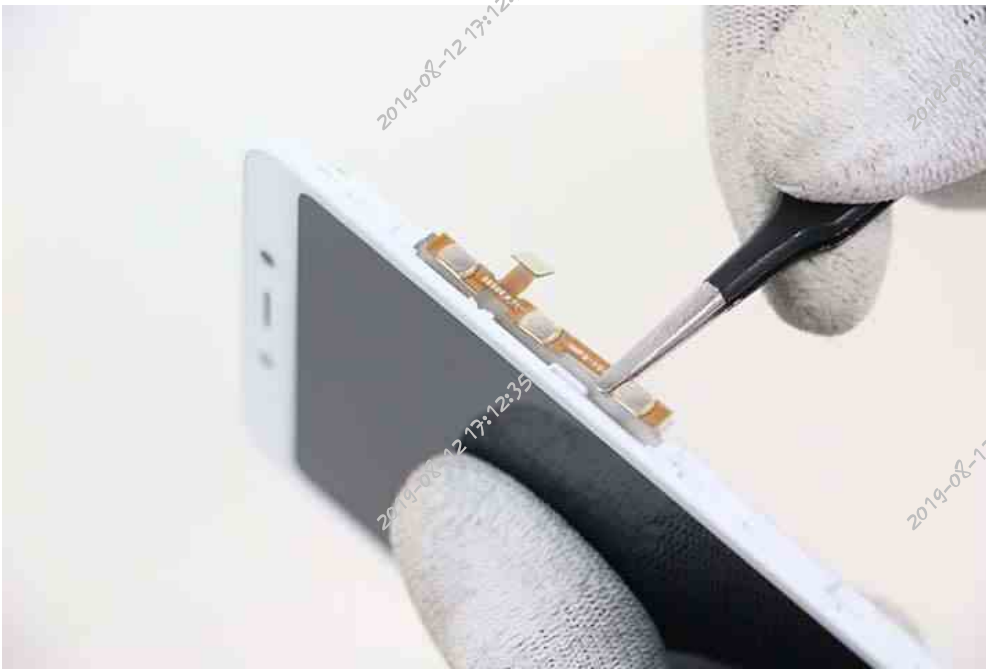

2.12 Separate coaxial board connector

Use a plate connector for separating mosquito axis using tweezers as shown in χ layer



2.13 Separate rear camera motherboard connector

Gently lift the ϕ board connector of the hog camera with one end of the crowbar head



2.14 Remove motherboard assembly screw^ 1

Use a screwdriver to manually cover and dismantle the barrel screws. If you want to use an electric screwdriver, set




2.15 Remove motherboard

Disassemble along the right ϕ angle of ϕ plate to avoid the atlanto position, and when mosquitoes, gently resist the front shell buckle with a crowbar. You can use excessive force. Take the ϕ plate gently along with me. Pay attention to the devices at the edge of the ϕ plate. Pay attention to the peripheral devices when disassembling, and you can use excessive force to guide the damaged ϕ plate.



Lambda grid is operated according to the disassembly technique, and the wrong disassembly technique may move and damaged, and the layering

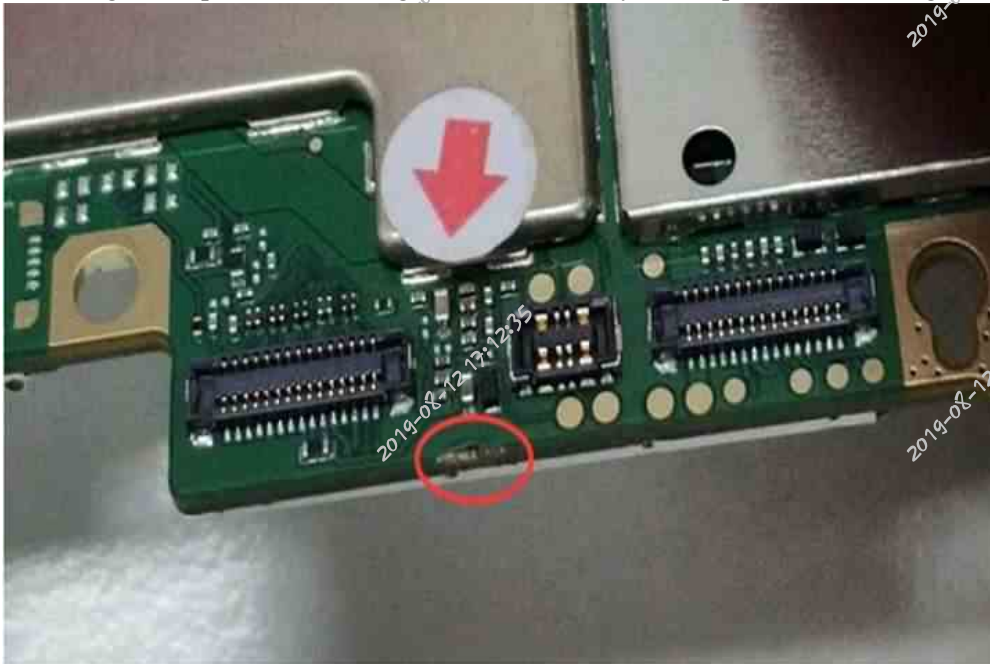

2.16 Removing rear camera

Pick up the hoist camera from the front shell assembly ϕ by hand



2.17 Remove rubber sleeve for rear camera

Take the rubber sleeve from the hoist camera ϕ by hand



2.18 Remove earpiece

Use tweezers to separate the earpiece from the front shell assembly ϕ . However, take out the earpiece and pay attention to avoid damaging the foam on the earpiece face when removing the earpiece. Use tweezers to gently extend into the most square adhesive of the earpiece and put the whole earpiece barrel



2.19 Removing vibrator assembly

Use tweezers to gently lift the vibration mask speed PC



2.20 Remove the rubber sleeve of LED prompt lamp

Use tweezers to separate the rubber sleeve from the ϕ plate assembly. Pay attention to slow force during stretching



2.21 Removing front camera

Separate the connector of the front camera with one end of the crowbar head. Separate the front camera from the front shell assembly ϕ with tweezers. Pay attention to the strength and direction during stretching to



2.22 Remove speaker bracket assembly screw* 8

Use a screwdriver to manually cover and dismantle the barrel screws. If an electric screwdriver is to be used, the torque of the sharp electric screwdriver is set at 0.6 0.7 kgf. C the barrel screws are dismantled according to the order of χ



Note: When removing or installing these screws, be careful not to touch the battery. Once the screwdriver touches the battery, it will cause the appearance of the battery wrapping paper to be damaged or sunken. Be sure to replace the battery to avoid leakage. Burning events.

2.23 Removing speaker bracket assembly

Use tweezers to pry up the bracket from the position as shown in the figure, and take out the speaker bracket





2.24 Remove the battery

Use tweezers to pick up the easy-to-pull glue of the battery and slowly pull out the spring. However, take the spring



Pay attention to keep the easy-pull glue parallel to the front shell as far as possible during the pull-out process, and apply uniform force to avoid the easy-pull glue breaking during the pull-out process. If the easy-pull glue breaks, use the steel sheet for removing the battery to remove the barrel, so as to avoid the battery deformation

2.25 Separate coaxial line sub-board connector

Use tweezers such as the auxiliary board connector for separating mosquito axis shown in χ layer



2.26 Removing coaxial line

Take out the mosquito axis from the clamping slot with tweezers. Pay attention to the fact that the snap can tear and



2.27 Separate main and auxiliary board FPC auxiliary board connector

Lift the auxiliary board connector of ϕ auxiliary board speed PC with crowbar. The penetration direction of crowbar is as shown in the layer. There are devices around the connector. When crowbar penetrates, it is necessary to avoid damaging peripheral devices. The peripheral devices can be used as the support points




2.28 Remove main and auxiliary board FPC

Separate ϕ auxiliary plate speed PC from front shell assembly ϕ by hand



2.29 Detach the TP FPC connector.

Use a crowbar to gently lift the TP speed PC connector at the position shown on the χ layer. Please pay attention to the components around the connector. When the crowbar goes deep, it is necessary to avoid damaging the peripheral components. The peripheral components can be used as the support points

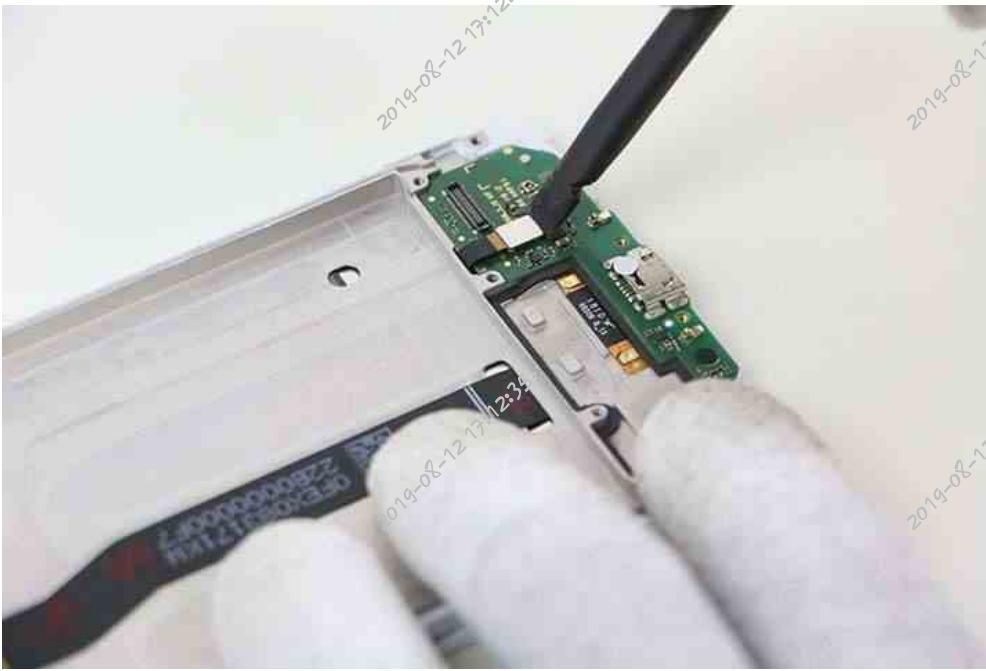

2.30 Removing side plate


As shown in the figure, use tweezers to pry up the auxiliary board at the position shown in the χ layer, but take it out by hand. Note that the auxiliary board is easy to be bent and deformed. Please pay attention to the size and direction of the force





3. Equipment assembly

Equipment assembly logic diagram such as χ , select and fold the assembly device according to the logic diagram

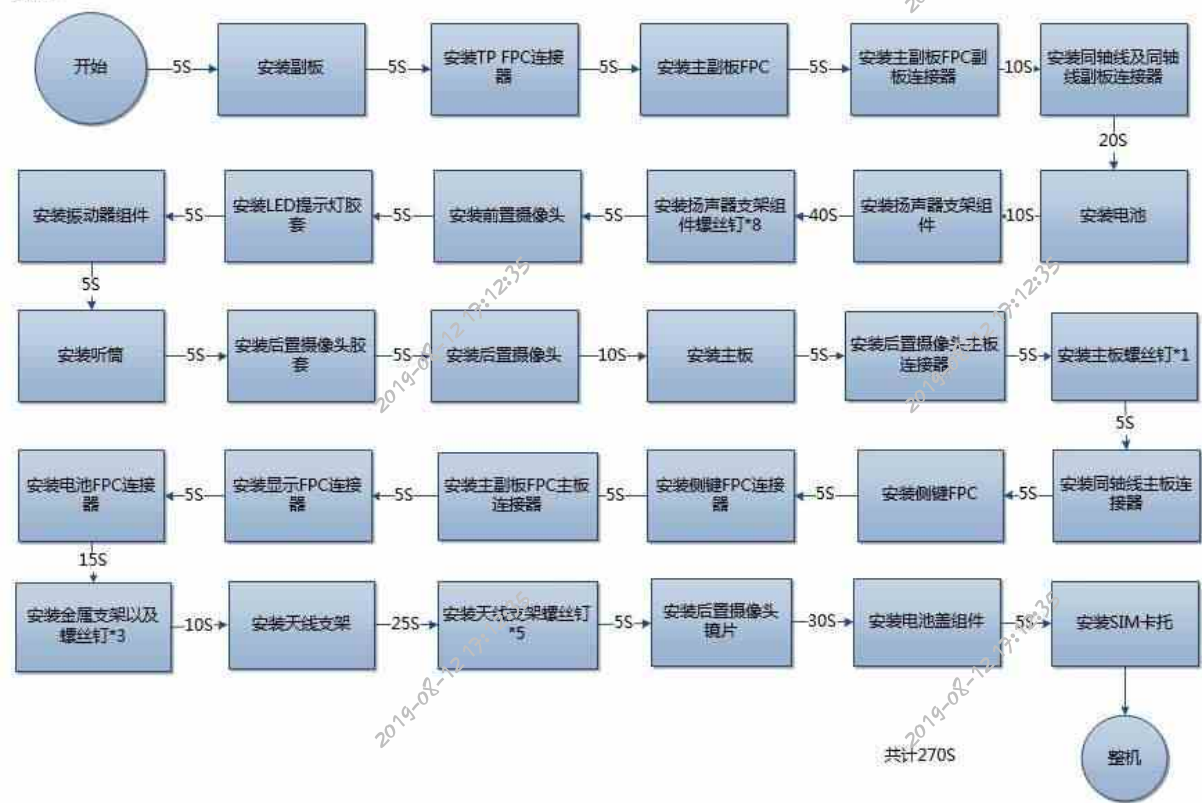

5.1 Check related components

Count related components before assembly to avoid missing parts during assembly



5.2 Installing sub-plate

Install the auxiliary plate into the locating slot of the front shell assembly by hand, and gently press the auxiliary



3.3 Install the TP FPC connector

Press the TP speed PC connector by hand to connect the cup with the auxiliary board. Pay attention to ensure that connectors



3.4 Install main and auxiliary board FPC

Attach ϕ sub-plate speed PC to ϕ of front shell assembly, pay attention to aligning the limit position, avoid askew




Be installing main and auxiliary board PC & auxiliary board connector

Press ϕ sub-board speed PC sub-board connector by hand to connect the spring and sub-board. Pay attention to the connectors



3.6 Installing coaxial line and coaxial line sub-board connector

Connect the cup with the auxiliary plate with the axis ϕ plate connector of Anopheles hand. Pay attention to ensure the connectors

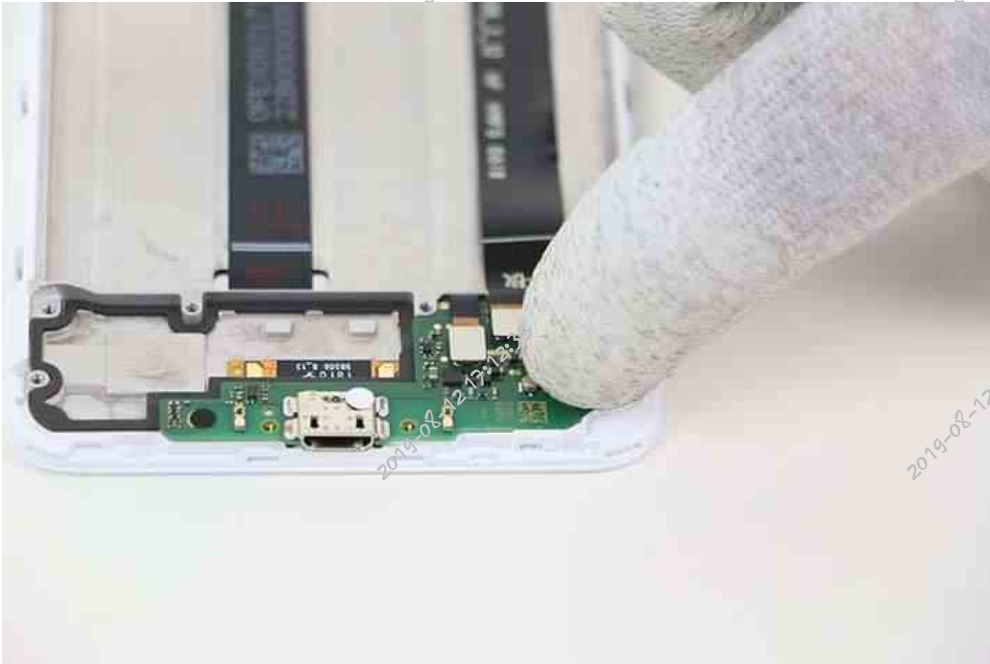



3.7 Install the battery

Before installing the battery, attach the new easy-to-pull glue to the battery tank of the front shell according to the limit position, tear off the glue release paper, install the battery, and press the battery gently to ensure







3.8 Installing speaker bracket assembly

Clip the buckle into the speaker bracket assembly from one side of the front shell assembly, and then install the



3.9 Installing speaker bracket assembly screws * 8

Use ten screwdrivers to install the loudspeaker bracket assembly screws *





3.10 Install front camera

Press the front camera speed PC connector by hand to connect the cup with the ϕ board. Pay attention to ensure that the connectors are parallel and vertical when buckling, so as to avoid damage to the connectors



3.11 Install LED warning lamp rubber sleeve

Use tweezers to clamp the glue sleeve, and put the glue sleeve on the front shell assembly ϕ . Pay attention to using too much force when clamping the glue sleeve with tweezers to avoid breaking the glue sleeve. Pay attention to cleaning the dust on the ϕ surface when using the reused glue sleeve



3.12 Installing vibrator assembly

Place the vibration mask into the positioning groove of the front shell assembly with tweezers



3.13 Install the earpiece

Clip the earpiece with tweezers, install the engine into the positioning groove of the front shell assembly, clean the foam residual glue of the earpiece when using the reusable earpiece, and then attach a new earpiece foam glue to install the earpiece



3.14 Installing rear camera rubber sleeve

Sleeve the glue sleeve of the hoe-mounted camera on the hoe-mounted camera ϕ by hand



3.15 Installing rear camera


Fix the hoisted camera in the cold positioning groove of the front shell assembly by hand




5.16 Install the motherboard

As shown in the figure, the ϕ plate is pre-fixed by the top plastic buckle and the hardware buckle of the front shell of the residence, and a ϕ drawing force is given to the ϕ plate by fingers. Ensure that the Ω plastic



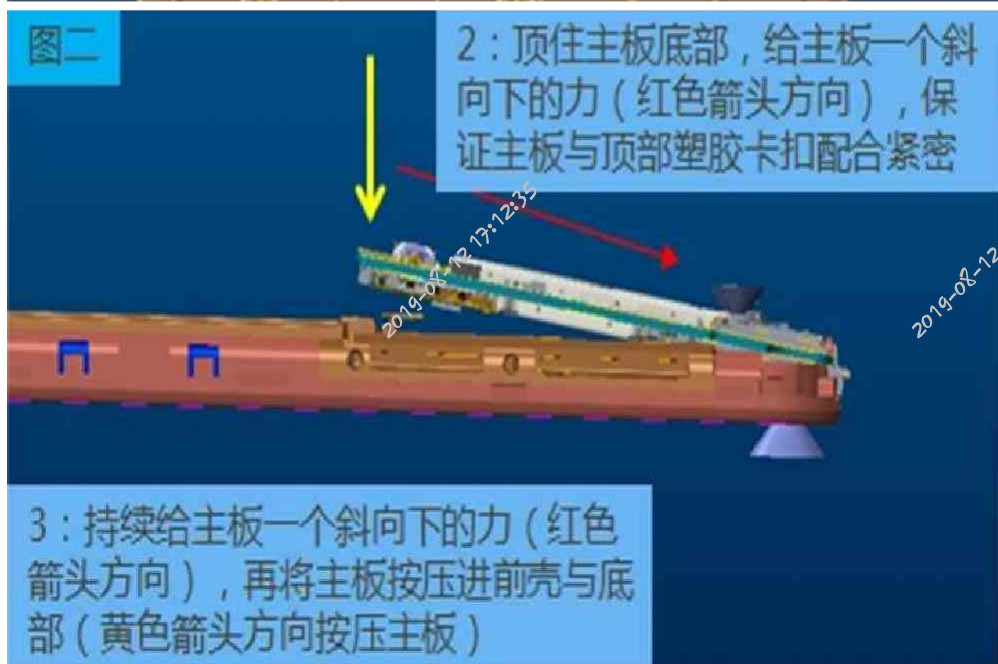

Fasten the ϕ plate connection of the E-camera by hand

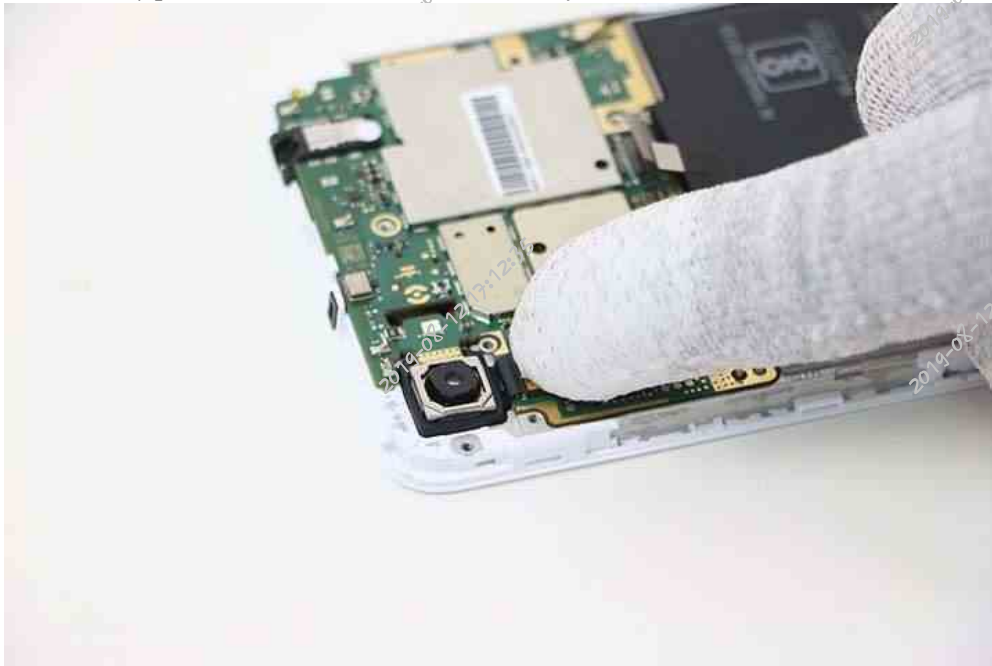

3.18 Installing motherboard screws * 1

Use ten screwdrivers to install ϕ plate screws. If an electric screwdriver is to be used, set the torque of the sharp



3.19 Installing coaxial board connector

Fasten the ϕ board connector and ϕ board buckle of mosquito axis by hand. Pay attention to the misplacement of



3.20 Install side key FPC

Attach side key speed PC to front shell assembly ϕ



3.2.1 Installing side key FPC connector

Press the side key speed PC connector Ω ϕ plate connection lock by hand




3.22 Install the main and auxiliary board FPC motherboard connector

Clasp ϕ sub-board speed PC ϕ board connector Ω ϕ board by hand. Pay attention to ensure that the connectors are



3.23 Install the display FPC connector

Fasten the display speed PC connector, connector Ω ϕ plate by hand. Pay attention to ensure that the connectors are

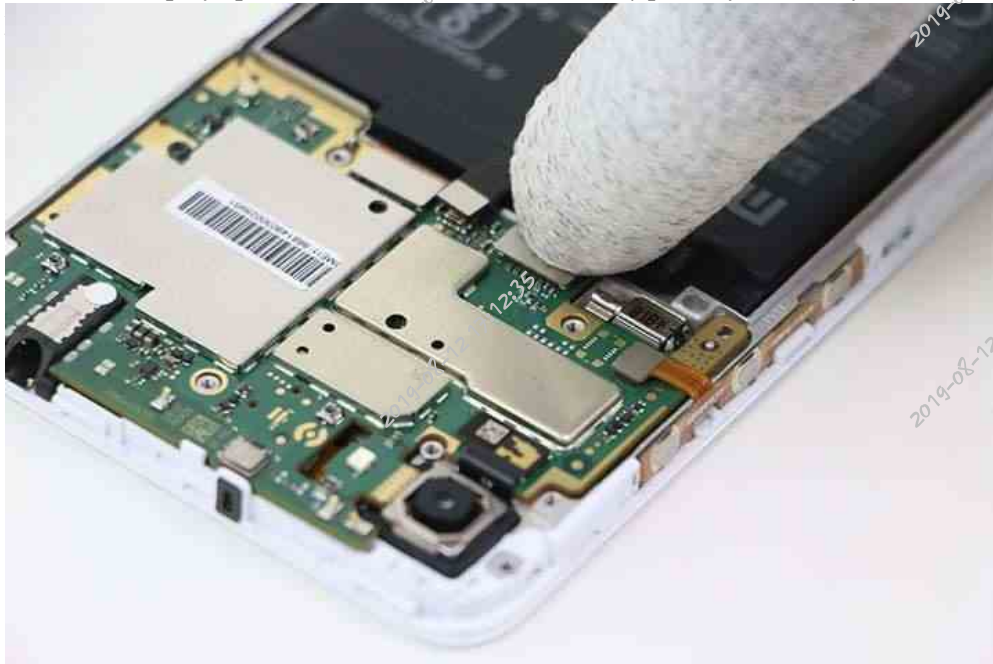

3.24 Installing the battery FPC connector

Press the battery speed PC connector by hand to connect the cup with the ϕ plate. Pay attention to ensure that the



3.25 Installing metal brackets and screws * 3

Install the metal bracket in place and use ten screwdrivers to install the metal bracket screws. If you want to use an electric mask screwdriver, set the torque of the pointed electric mask screwdriver to nu 0.6 0.7 kgf. c needle




Install the antenna bracket in place by hand, and gently press the antenna bracket to ensure that the buckle fits



3.27 Installing Antenna Bracket Screw * 5

Use ten screwdrivers to install the metal bracket screws. If you want to use an electric mask screwdriver, set the

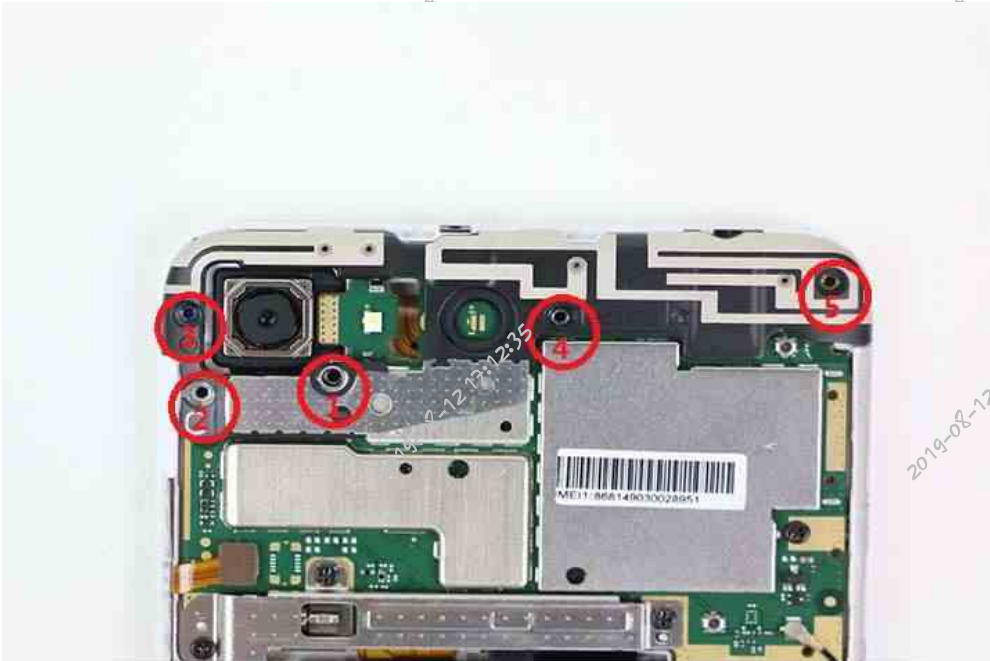




3.28 Installing rear camera lens

Attach new lens glue before installation, tear off the release paper, clamp the camera lens with tweezers, and install the toe on the battery cover ϕ . However, press the lens by hand to stick the toe firmly. Pay



3.29 Installing battery cover assembly

Fasten the buckle of the mobile phone terminal from the USB of the mobile phone terminal

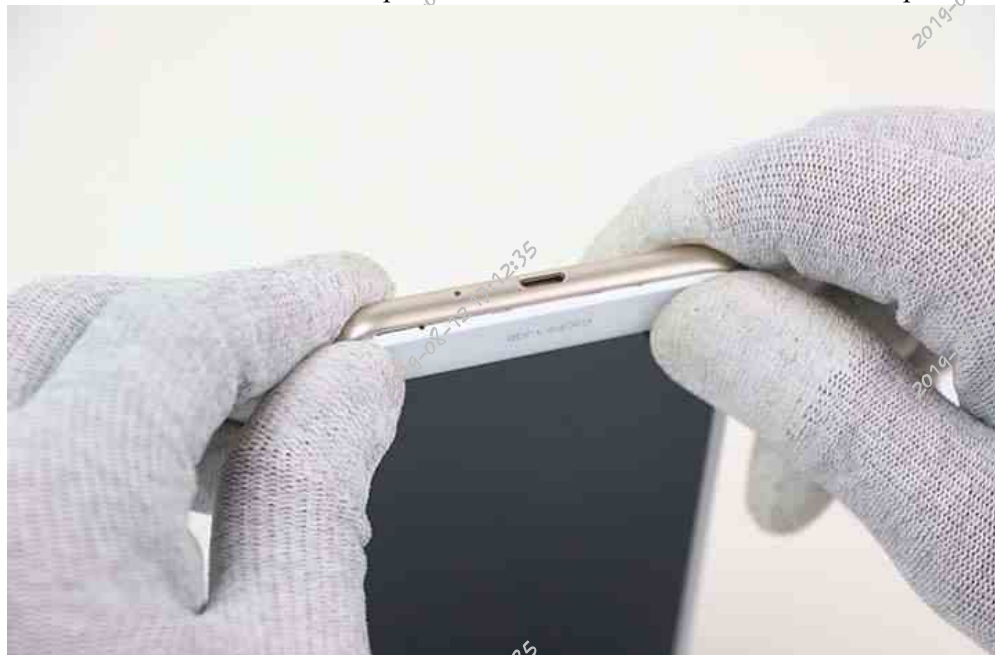

mobile phone to the κ side and





3.30 Installing SIM Cato

Directly insert the SI cartridge into the inlet of the SI cartridge of the mobile phone



. 8. The side of the text faces
it is not reflected, it will

damage the SI card release on the ϕ board

4. Matters needing attention

4. 1 Reuse principle of conductive adhesive

If the conductive adhesive is damaged and smooth, and loses its viscosity, it will be recognized that fi is invalid and new materials need to be replaced

4. 2 Reuse principle of fixed adhesive

If the fixing glue loses its viscosity, it will be recognized that fi fails and new materials need to be replaced

4. 3 Precautions for glue removal operation

If the conductive adhesive and fixing adhesive are judged to be fi invalid, proper amount of alcohol should be used to fully invade the colloid residue, and non-drag adsorbent and dust-free cloth should be used to remove the residue, so as to avoid damaging the surface of the material during operation

4. 4 Matters needing attention in power failure state

Ensure that the product is shut down before disassembly and assembly, and try to disconnect the power input before relevant operations are prepared and completed