
4. Troubleshooting


4-1. Checkpoints by Error Mode

Oscilloscope Setting Values	Normal Voltage	
Voltage/DIV	1V/div	5V/div
TIME/DIV	500ms/div	500ms/div

4-1-1. No Power

Symptom	- If you connect the power cables, the LED on the front will turn on - If the units do not work
Major checkpoints	- If the cable is improperly connected or the motherboard does not work, the LED on the front is not working. In this case, check the following. - Check the cable connection. - Check the fuse of the components.
Diagnostics	<pre> graph TD Start[The power does not turn on.] -- Yes --> Check19VMain[Check if 19V is measured on the main pcb CN301 PIN #1] Check19VMain -- No --> Check19VAdapter[Check if 19V is measured at the Adapter pin #1] Check19VMain -- Yes --> CheckH33v[Check if "H(3.3v) is measured at the symbol F302 when Main PCB power is turned on."] CheckH33v -- No --> ReplaceMicom[Replace The Micom(IC502).] CheckH33v -- Yes --> CheckOLED[Check The OLED Display] CheckOLED -- No --> ReplaceOLED[Replace the OLED Display] CheckOLED -- Yes --> ChangeMainPCB[Change the MAIN PCB.] Check19VAdapter -- Yes --> ChangeMainPCB2[Main PCB CN301 change] Check19VAdapter -- No --> ReplaceMicom ChangeMainPCB --> CheckAC[Check the AC Cord output.] ChangeMainPCB2 --> CheckAC ReplaceMicom --> CheckAC ReplaceOLED --> CheckAC ReplaceMicom --> CheckAC ReplaceOLED --> CheckAC CheckAC -- No --> ReplaceAC[Replace the AC Cord.] CheckAC -- Yes --> CheckAdapter[Check Adapter and Replace Adapter] </pre>
Caution	Before working, disconnect the power cord.


■ Location of Parts

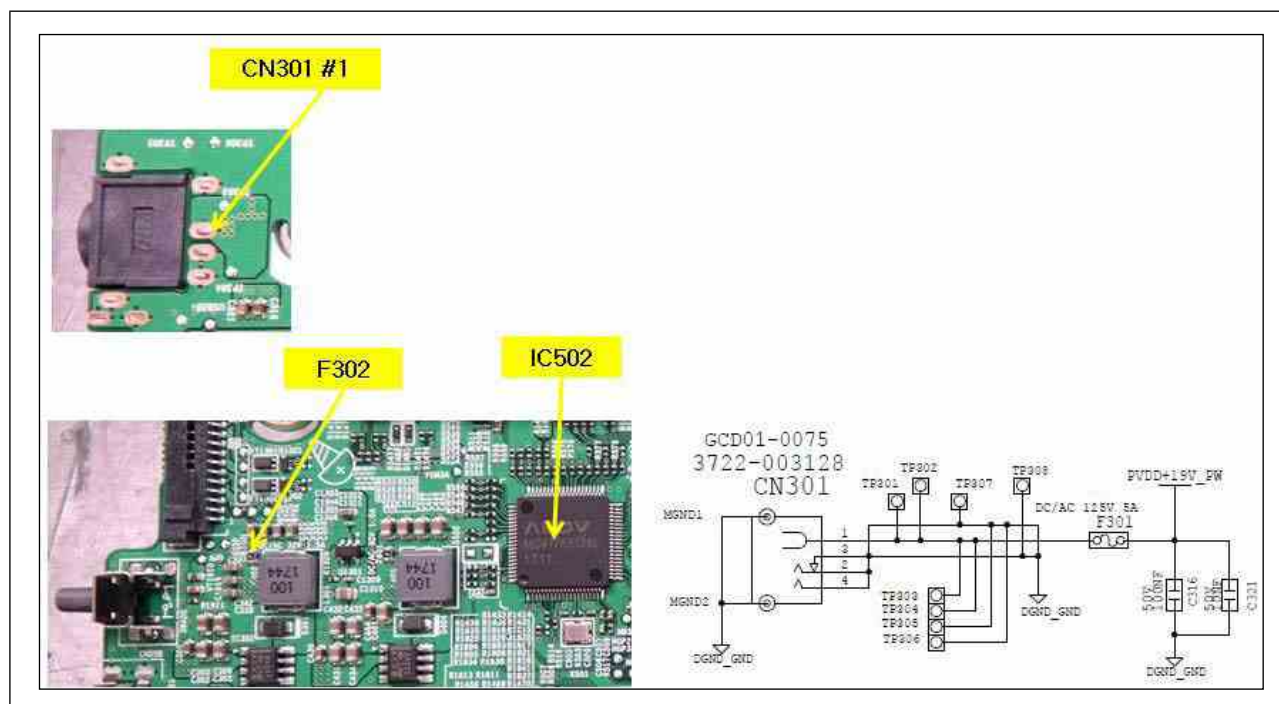


4-1-2. No Sound Output

Symptom	If the sound is not output.
Major checkpoints	- Speaker connector is not connected properly or check for damage. - Make sure your sound processing functions operate properly on the motherboard. - Make sure the speaker isn't bad.
Diagnostics	<pre> graph TD Start([No Sound Output]) --> CheckI2S[Check I2S output] CheckI2S --> MainPCB1[Check if Signal is measured at R904, R906, R908, R909, R927, R929 on the MAIN PCB.] MainPCB1 -- No --> ChangeMainPCB1[Change the MAIN PCB.] MainPCB1 -- Yes --> MainPCB2[Check if Signal is measured at CN2101 TP I2S on the MAIN PCB.] MainPCB2 -- No --> ChangeMainPCB2[Change the MAIN PCB.] MainPCB2 -- Yes --> AMPOutputCheck[AMP output check] AMPOutputCheck --> AMPIC[Check if signal is measured at Coils of IC402/IC501/IC601/IC701 on the AMP PCB.] AMPIC -- No --> ReplaceIC[Replace IC.] ReplaceIC -- No --> ChangeAMPPCB1[Change the AMP PCB.] AMPIC -- Yes --> SPEAKEROutputCheck[SPEAKER output check] SPEAKEROutputCheck --> AMPSpeaker[Check the AMP PCB CN301/CN302 speaker output signal.] AMPSpeaker -- No --> ChangeSpeakerConnector[Change speaker connector.] ChangeSpeakerConnector -- No --> ChangeAMPPCB2[Change the AMP PCB.] AMPSpeaker -- Yes --> ChangeSpeaker[Change Speaker.] </pre>
Caution	Before working, disconnect the power cord.


■ Location of Parts

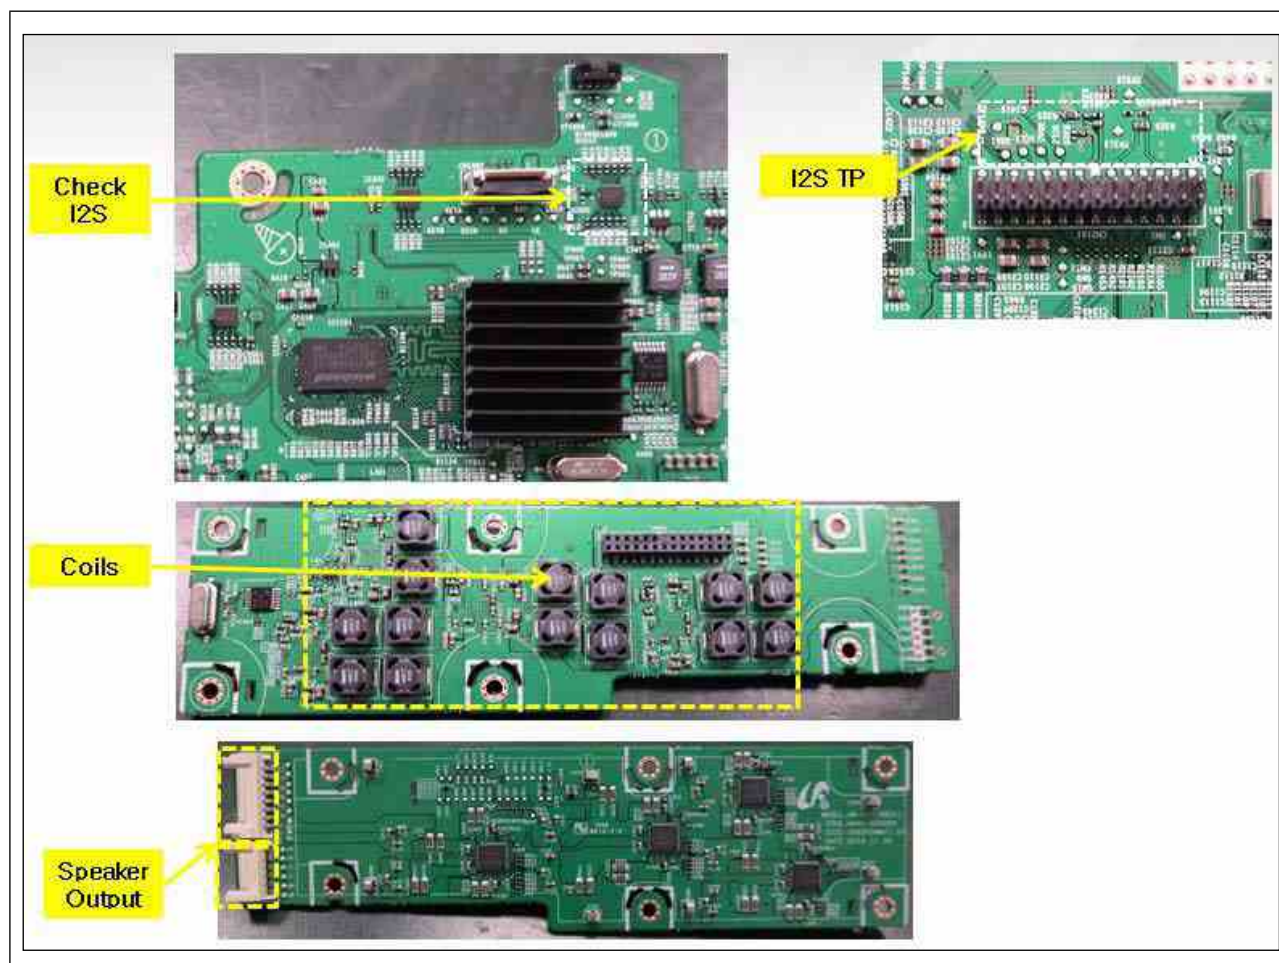


4-1-3. BT WiFi Module Failure Analysis

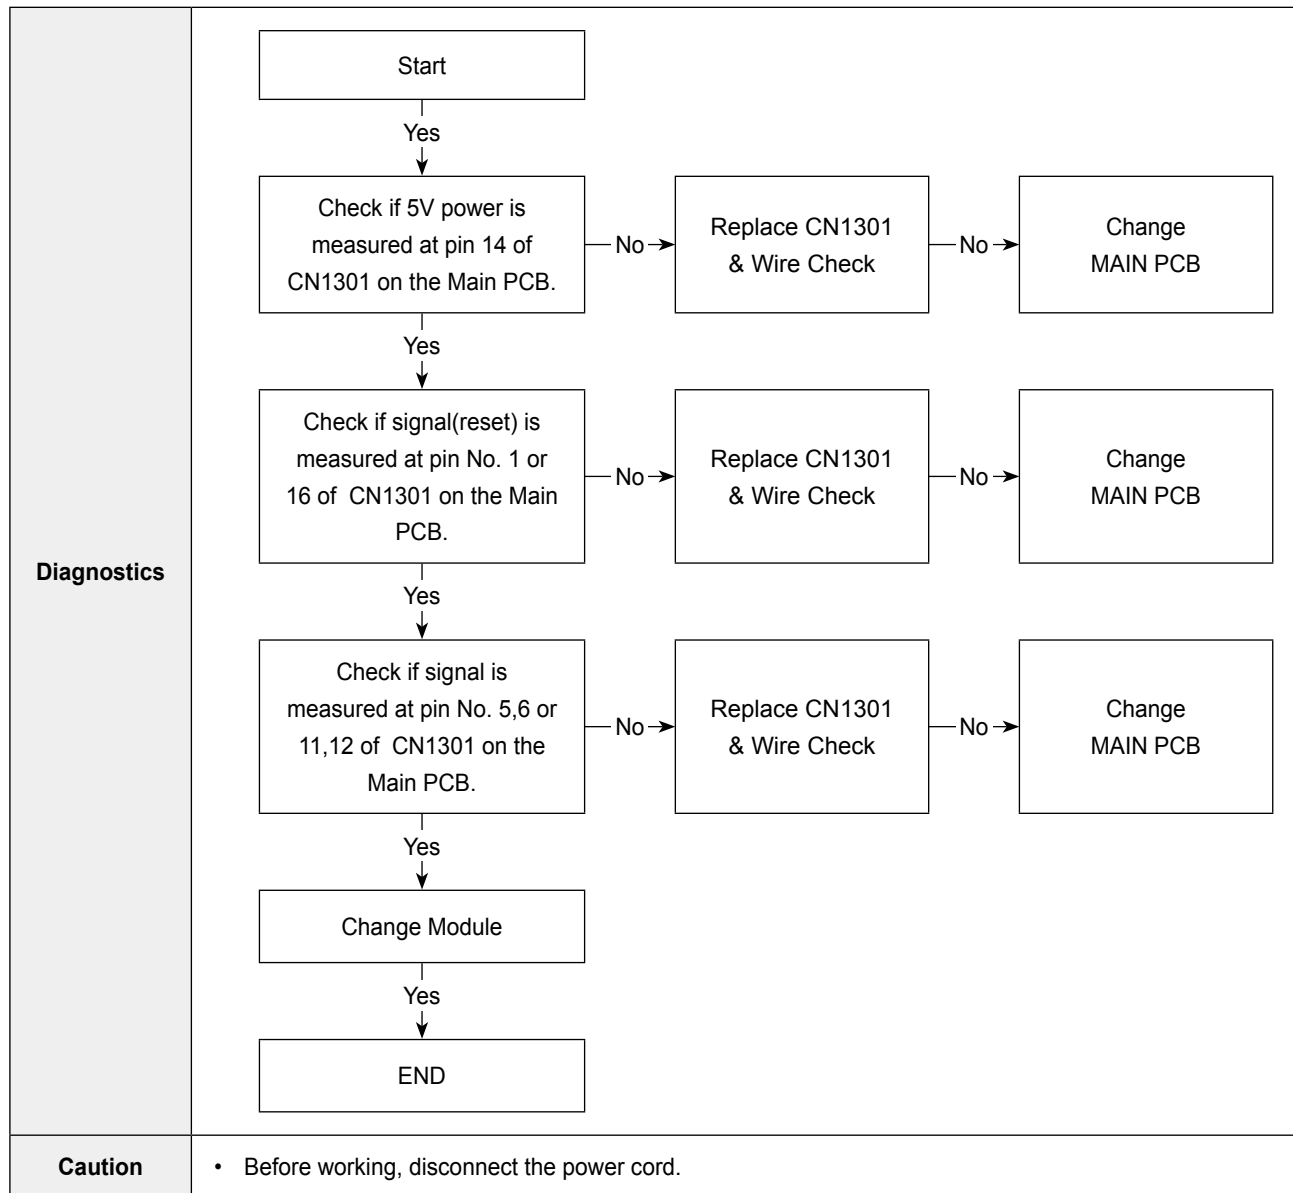

■ Location of Parts

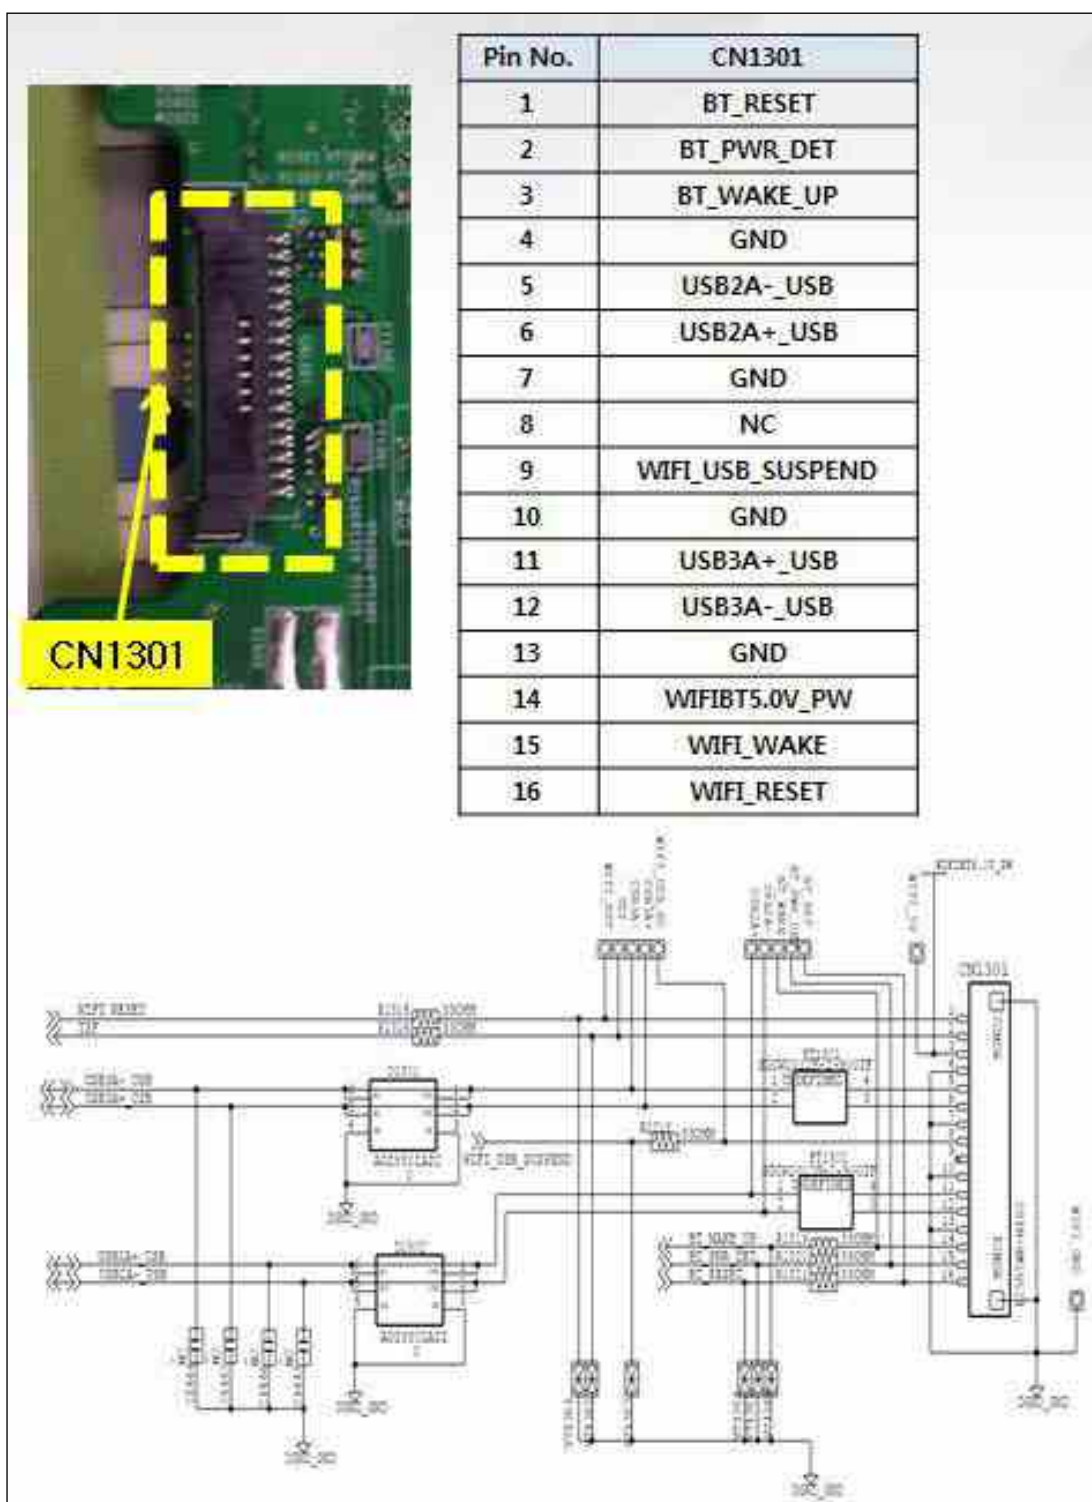


4-1-4. Wireless Module Failure Analysis

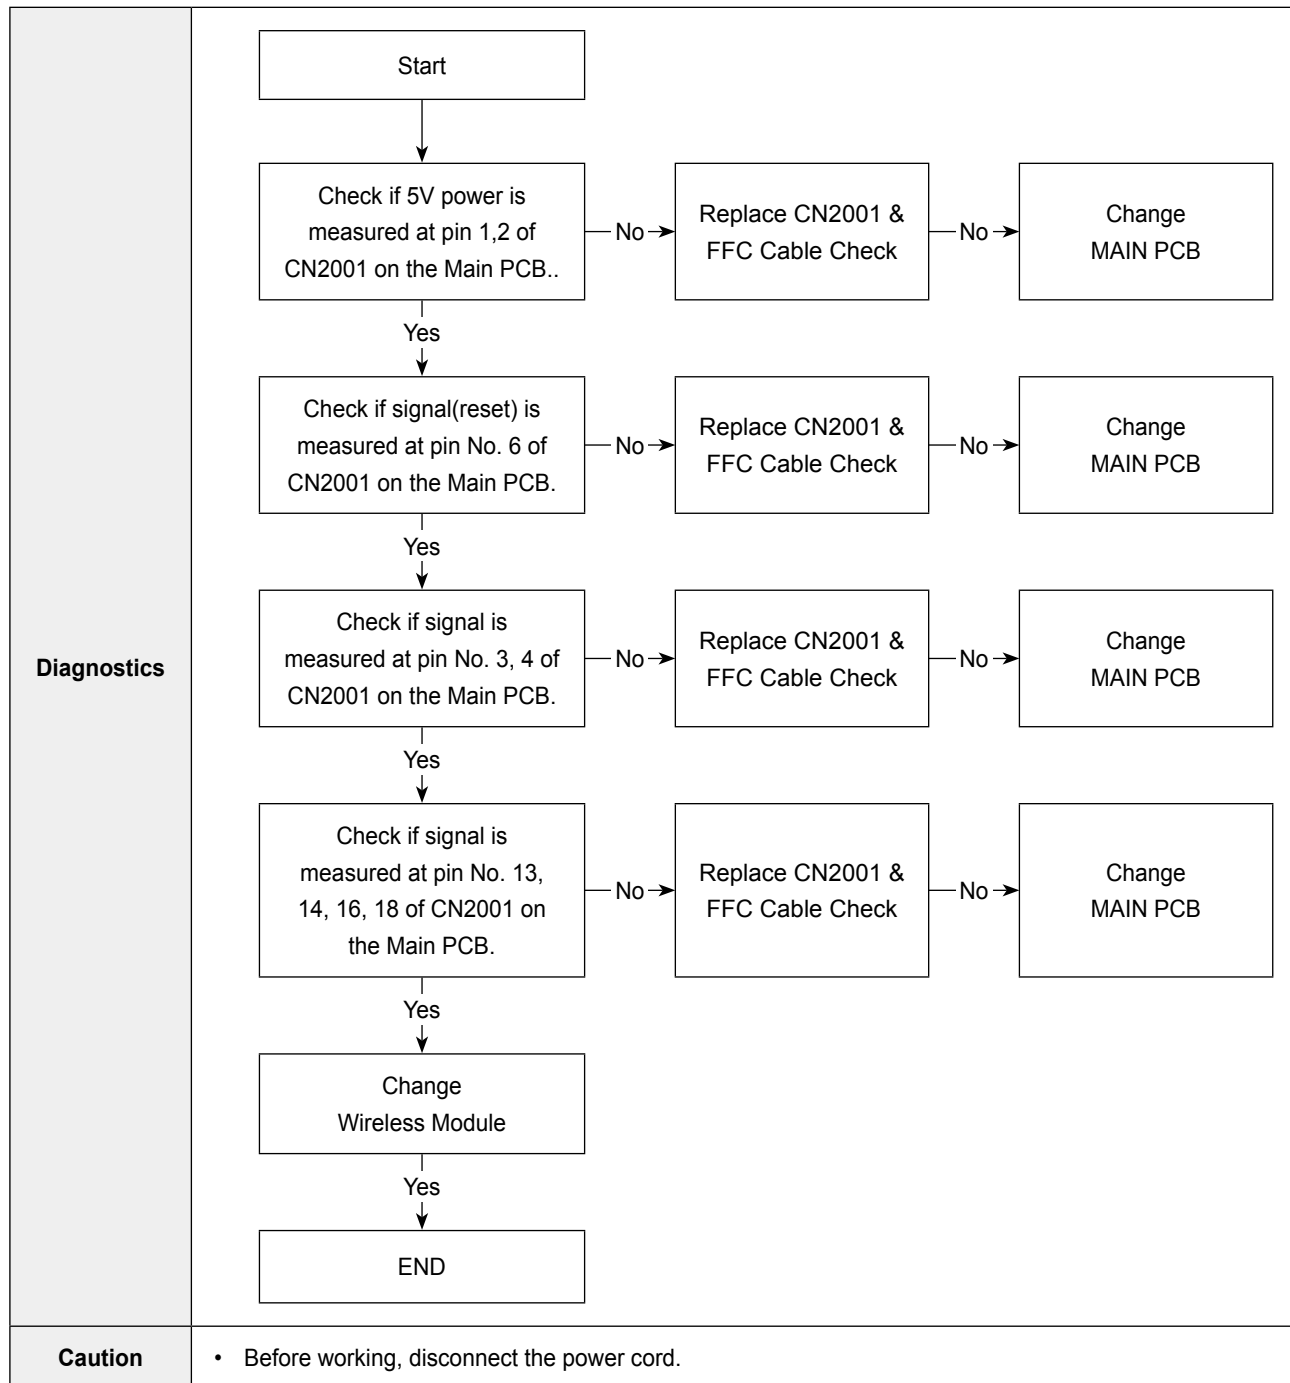


■ Location of Parts



Pin No.	CN2001
1	W5V_T
2	W5V_T
3	W_SCL_I2C
4	W_SDA_I2C
5	W_MODULE
6	W_RST
7	NC
8	NC
9	NC
10	NC
11	NC
12	GND
13	WIRELESS_BCLK_I2S
14	WIRELESS_LRCLK_I2S
15	NC
16	WIRELESS_REAR_SD01_I2S
17	NC
18	WIRELESS_S_WOOFER_SD02_I2S
19	NC
20	NC
21	NC
22	NC
23	NC
24	GND

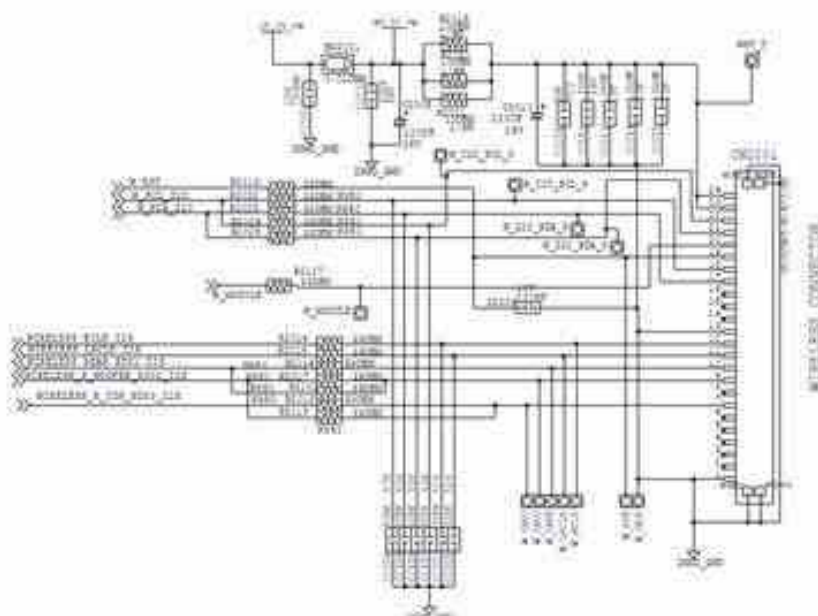


4-1-5. OLED Module Failure Analysis

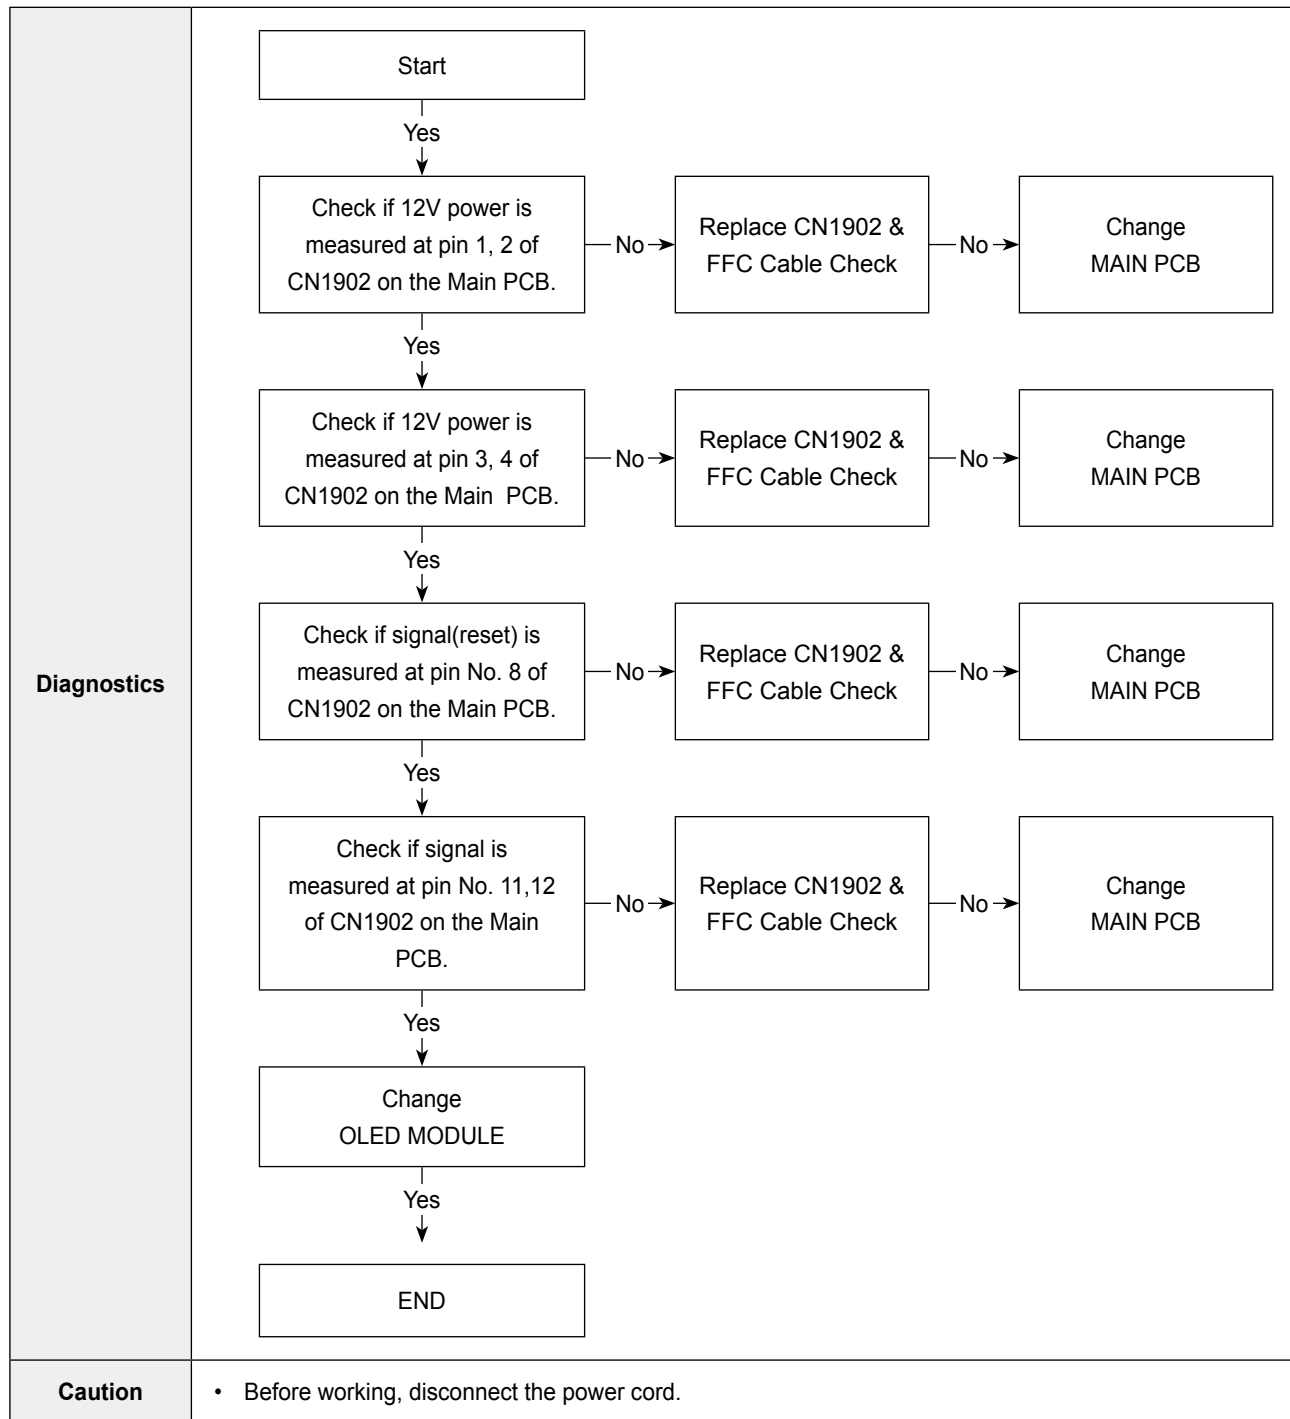

■ Location of Parts



Pin No.	Signal
1	OLED12V_PW
2	OLED12V_PW
3	D3.3V_PW
4	D3.3V_PW
5	GND
6	GND
7	OLED_CE
8	OLED_RST
9	OLED_DC
10	OLED_SCLK
11	OLED_SDIN
12	GND
13	KEY_A
14	KEY_B

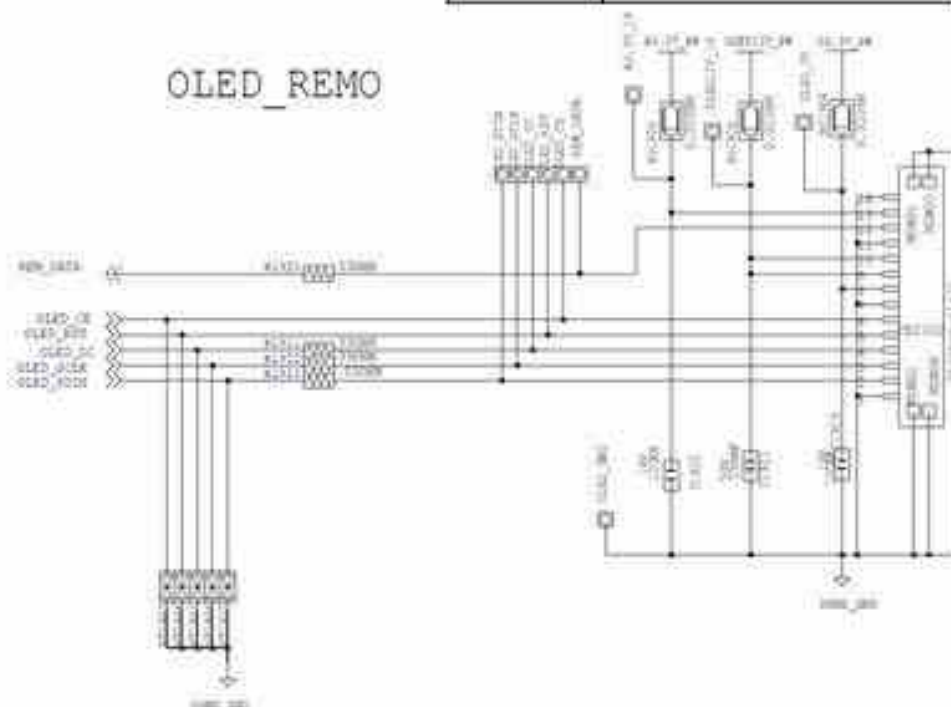

4-2. Initialization & Update


4-2-1. Set Initialization method

■ Sound Bar(Using the remote control)

1. Prepare the remote control.
2. Turn the unit on.
3. Press and hold the "Sound Control" button on the remote for more than 10 seconds. 
4. If it was successful, "INIT" will be displayed for 2 seconds and be turned off.

■ Sound Bar(Without Using the Remote control)

1. Turn the unit on.
2. Press and hold the "+" button and "-" button on Sound Bar simultaneously for 5 seconds.
3. If it was successful, "INIT" will be displayed for 2 seconds and be turned off.
4. The Sound bar will be turned off.

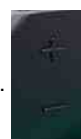

- Things being cleared after initialization : WiFi, BT, EQ, and other user settings.

- Subwoofer and Rear connection will not be cleared by above initialization.

So the "IDSet " must be conducted after repair on both of Soundbar and wireless Rear/ subwoofer so as to make them auto connection on customers hand.

(If woofer/rear did not come to SVC, you need to guide the customer how to pair them)

4-2-2. IDset method (Link Soundbar and wireless sub and rears)

■ On the wireless subwoofer and rear speakers

1. Press ID Set button on the sub (and rears if exist) at least 5 seconds.
2. Blue indicator blinks.

■ On the Sound Bar(Using the remote control)



1. Prepare the remote control.
2. Press and hold the "UP" button on the remote control for at least 5 seconds.(Up key works from N Series soundbars. Pressing and holding the "Mute" for 5 seconds still works for compatibility.)
3. If it was successful, "ID SET" will be displayed for some seconds and be turned off.
4. The Soundbar will automatically power on when "ID SET" is complete.


☞ Guide the customers to make sure each of components are in IDSet mode.

4-2-3. How to check the Firmware version

■ Software check method ... Sound Bar (using the remote)

1. Prepare the remote control.
2. Turn the unit off.
3. Press the "SOUND CONTROL" button on the remote for 5 seconds.
4. OLED will display each versions like below sequence.
(Micom → Hawk → HDMI → DSP → Tx → Woofer → Rear)

M : Micom Version
B : Backend version (Representative Ver.)
H : HDMI Version
FD : DSP Version
W : Wireless Tx Module Version in the soundbar
S : Wireless Rx Module Version in the woofer

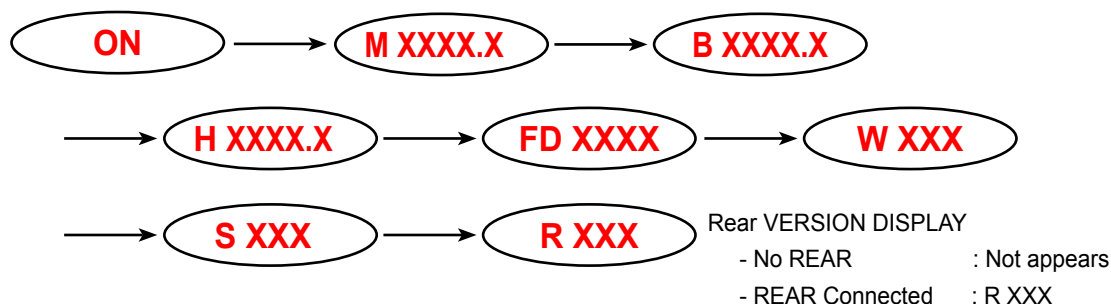

4-2-4. Other Display Messages

1. "PRT"

When it displays "PRT" on the OLED and turns off, it means the soundbar gets into the "Protection mode".
Most of case the AMP related circuit may have any issues.

2. "SHOP ON", "SHOP OFF"

When it gets into/out of a SHOP MODE, it shows the messages.
 Shop Mode On: (Standby) Volume - 5 sec → Volume + 5 sec
 Shop Mode Off: (Standby) Volume - 5 sec

4-2-5. USB Update procedure(Service Only)

- Step 1 : Insert a USB drive containing the firmware upgrade into the USB port on the rear side of the SET.
- Step 2 : Connect the Power plug and wait 1~2min(any source is ok)



- Step 3 : After update, Set will power off automatically.

ashakaas