
4. Troubleshooting


4-1. Checkpoints by Error Mode

Oscilloscope Setting Values	Normal Voltage	
Voltage/DIV	1V/div	5V/div
TIME/DIV	500ms/div	500ms/div

4-1-1. No Power

Symptom	• If you connect the power cables, the OLED on the front will turn on • POWER Connect the power cable even if the relay is not working • If the units do not work
Major checkpoints	• If the cable is improperly connected or the motherboard does not work, the LED on the front is not working. In this case, check the following. - Check the cable connection. - Check output of the adapter.
Diagnostics	<pre> graph TD A[Plug In Power] -- Yes --> B[Check if 19V is measured on the main pcb CN201 PIN #1] B -- No --> C[Check if 19V is measured at the Adapter pin #1] B -- Yes --> D[Check if "H(3.3v) is measured at the symbol F202 when Main PCB power is turned on.] C -- Yes --> E[Main PCB CN201 change] C -- No --> F[Replace The Micom(IC302)] D -- No --> G[Replace The OLED Display] D -- Yes --> H[Change Main PCB] H --> I[Check the AC Cord output] I -- No --> J[Replace the AC Cord] I -- Yes --> K[Check Adapter and Replace Adapter] </pre>
Caution	• Before working, disconnect the power cord.


■ Location of Parts

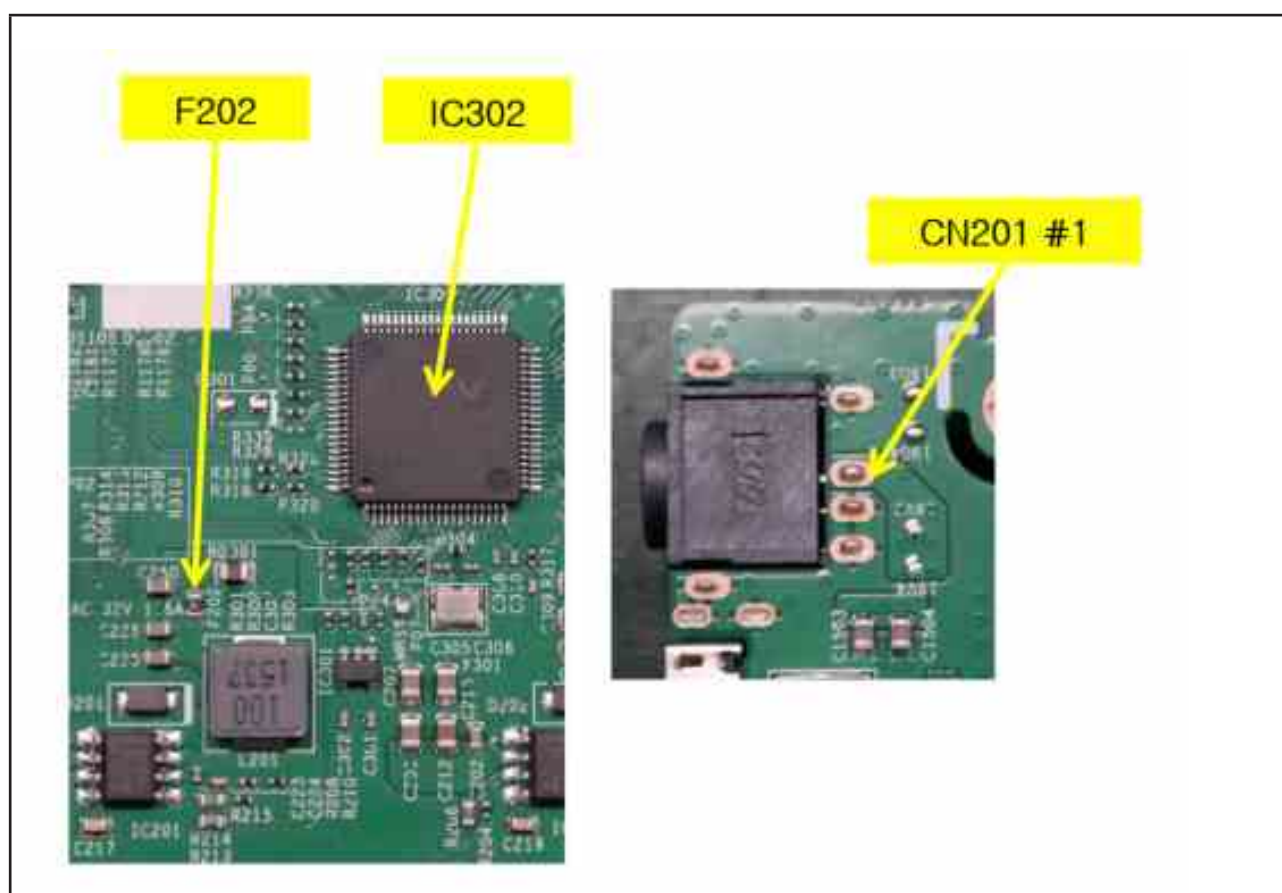


4-1-2. No Sound Output

Symptom	If the sound is not output.
Major checkpoints	- Make sure the Speaker has the latest firmware to operate properly. - Make sure your sound processing functions operate properly on the motherboard. - Make sure the speaker is bad.
Diagnostics	<pre> graph TD A[Plug In Power] --> B[No Output.] B -- Yes --> C[Check if Signal is measured at CN1701 TP I2S on the MAIN PCB.] C -- No --> D[Change MAIN pcb] C -- Yes --> E[Check if signal is measured at Coils of IC402/IC501/IC601/IC701 on the AMP PCB.] E -- No --> F[Replace IC] F -- No --> G[Change AMP pcb] E -- Yes --> H[Check the AMP PCB CN301/CN302 speaker output signal.] H -- No --> I[Change speaker connector] I -- No --> J[Change AMP pcb] H -- Yes --> K[Change Speaker] </pre> The flowchart outlines the diagnostic steps for 'No Sound Output'. It begins with 'Plug In Power' and 'No Output.' If the signal is measured at CN1701 TP I2S on the MAIN PCB, the next step is to check the signal at the coils of IC402/IC501/IC601/IC701 on the AMP PCB. If the signal is not measured, the IC should be replaced, and if that fails, the AMP PCB should be changed. If the signal is measured, the next step is to check the AMP PCB CN301/CN302 speaker output signal. If the signal is not measured, the speaker connector should be changed, and if that fails, the AMP PCB should be changed. If the signal is measured, the speaker should be changed.
Caution	Before working, disconnect the power cord.


■ Location of Parts

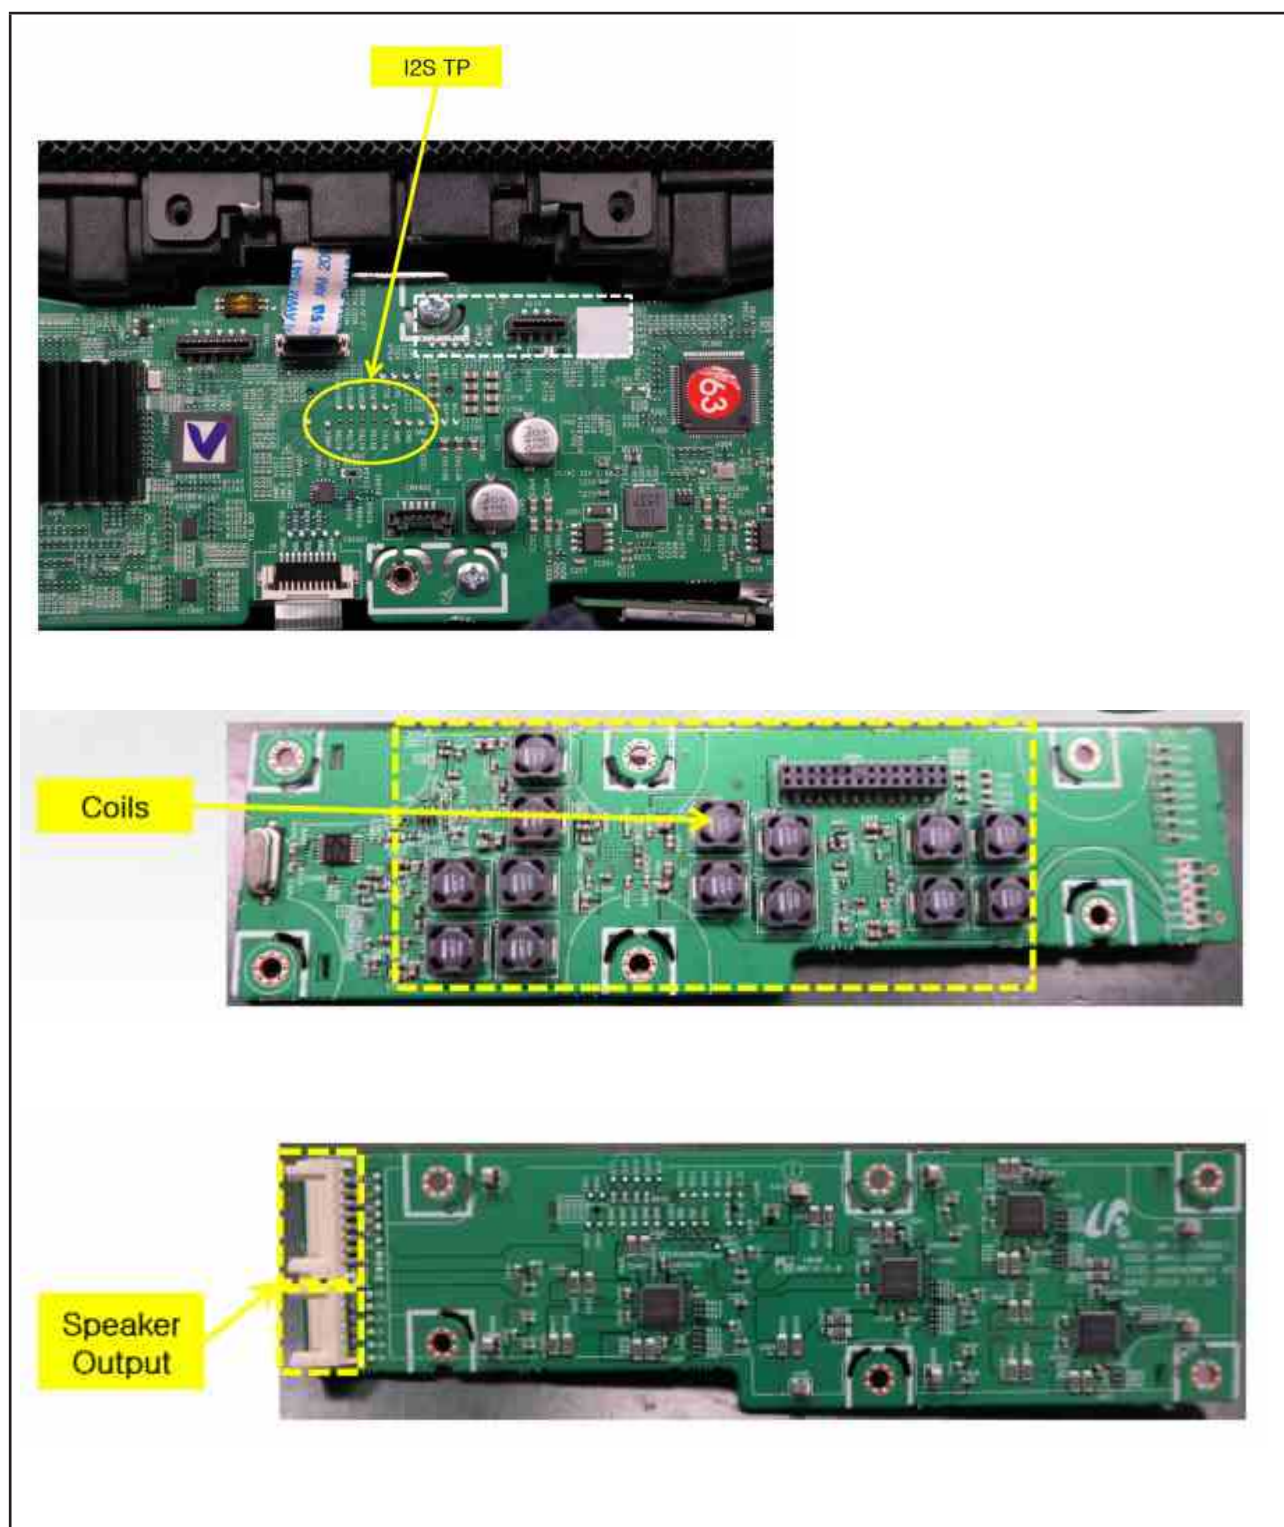


4-1-3. BT-WiFi Module Failure Analysis

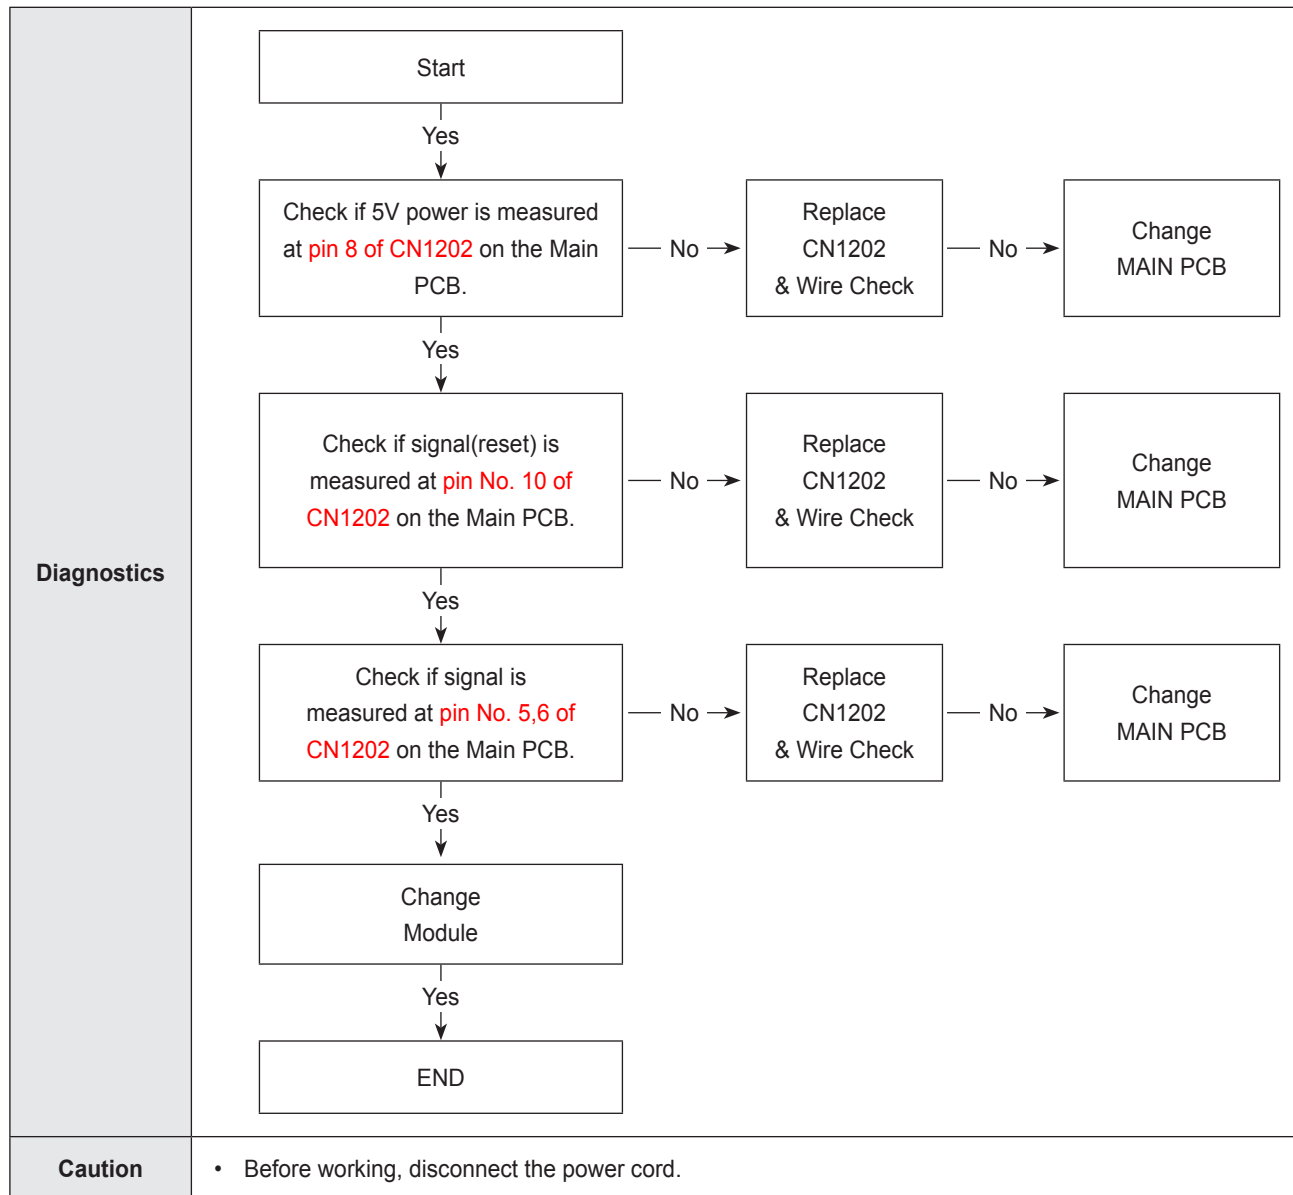

■ Location of Parts


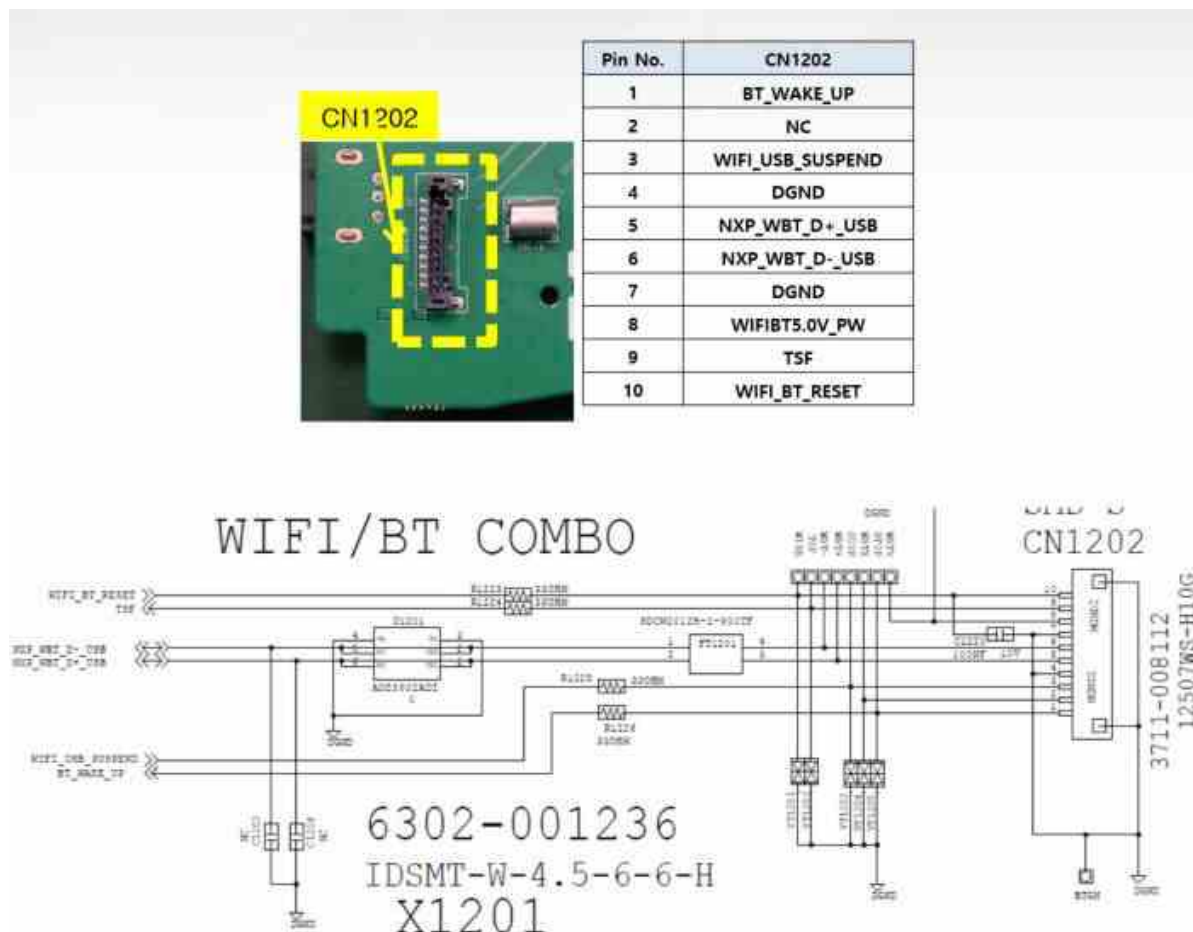


4-1-4. Wireless Module Failure Analysis

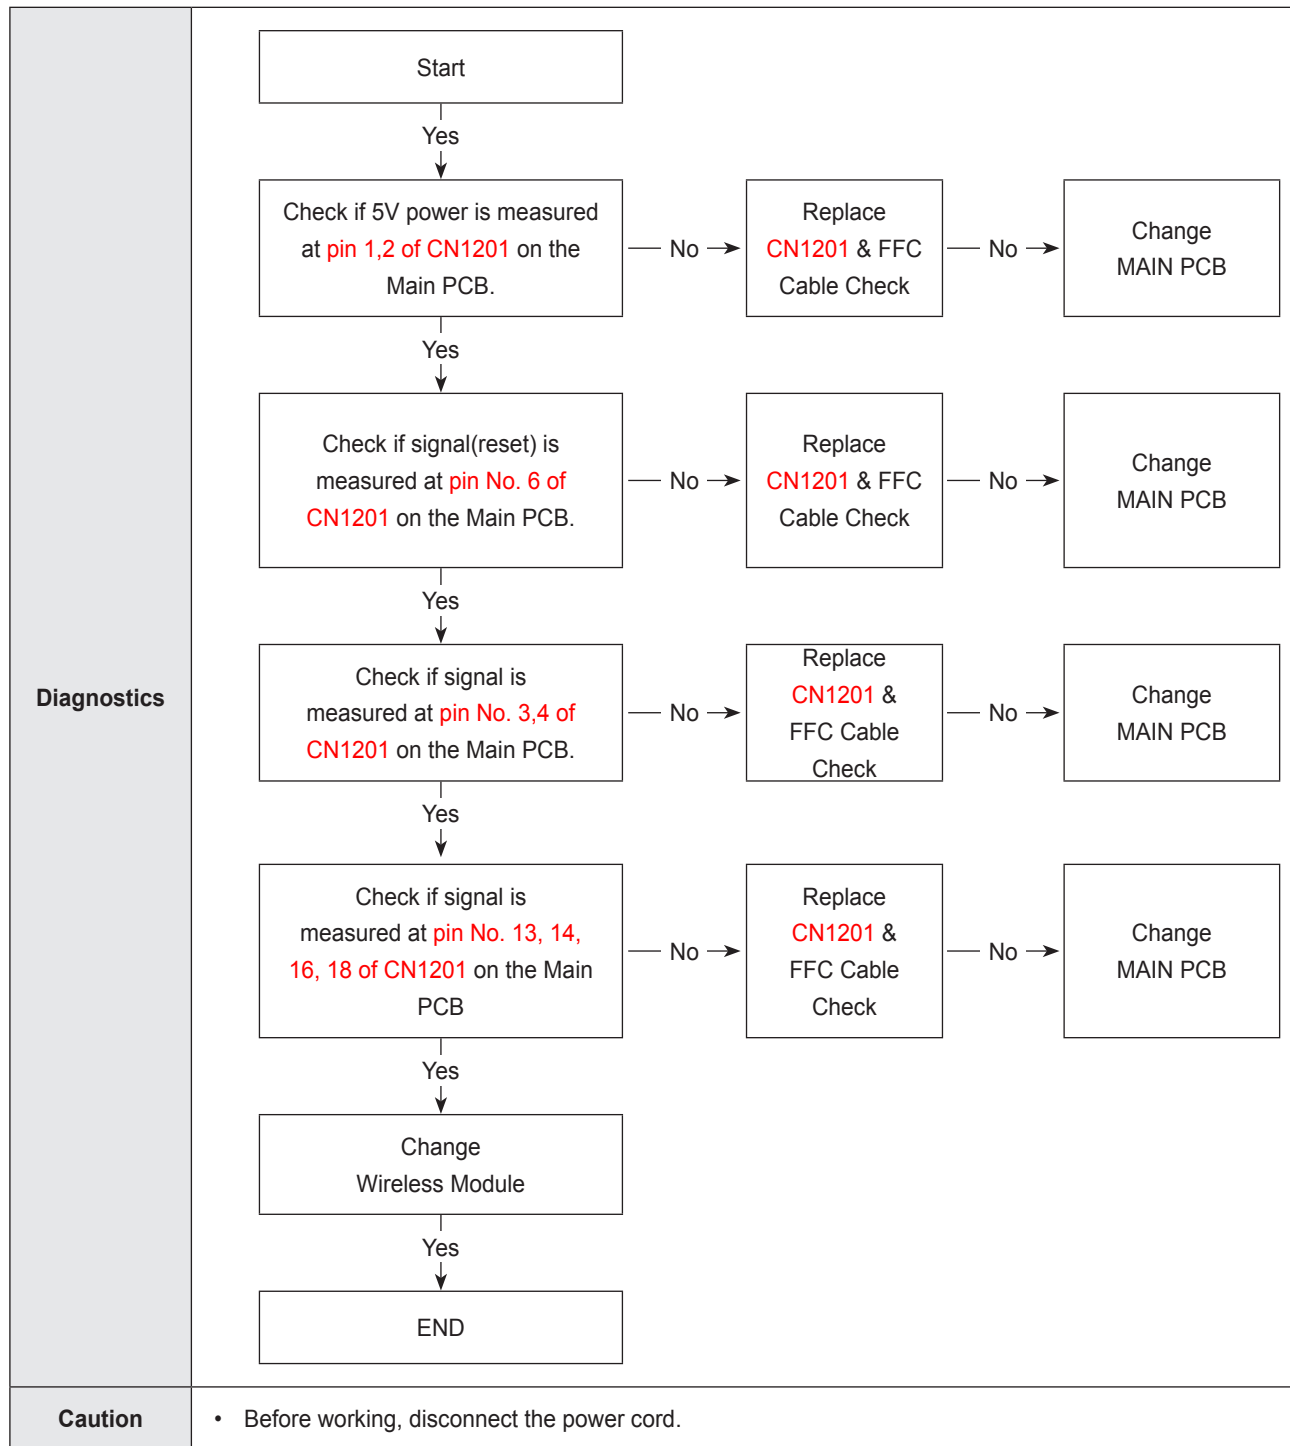


■ Location of Parts

Pin No.	CN1201
1	W5V
2	W5V
3	I2C3_WLESS_SCL_I2C
4	I2C3_WLESS_SDA_I2C
5	WM_INT_MODULE
6	WM_INT_RST
7	NC
8	NC
9	NC
10	NC
11	NC
12	DGND
13	WIRELESS_BCLK_I2S
14	WIRELESS_LRCK_I2S
15	NC
16	WIRELESS_REAR_SDO_I2S
17	NC
18	WIRELESS_SUBW_SDO_I2S
19	NC
20	NC
21	NC
22	NC
23	NC
24	DGND

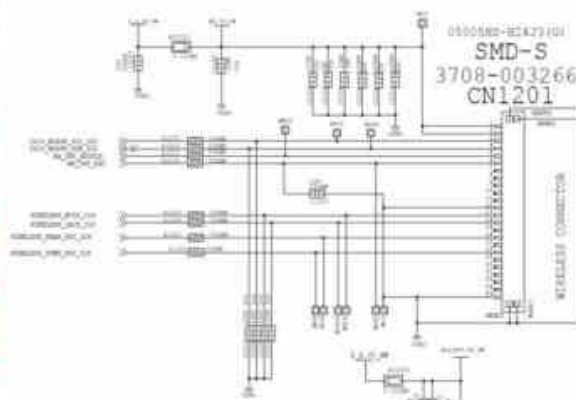
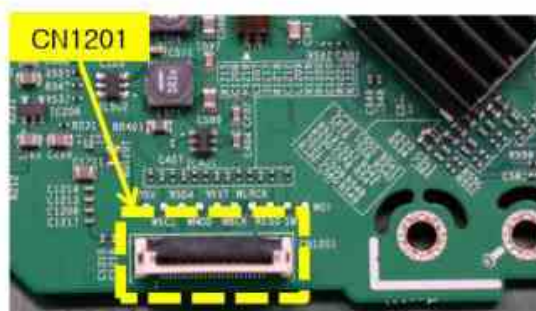


4-1-5. OLED Module Failure Analysis


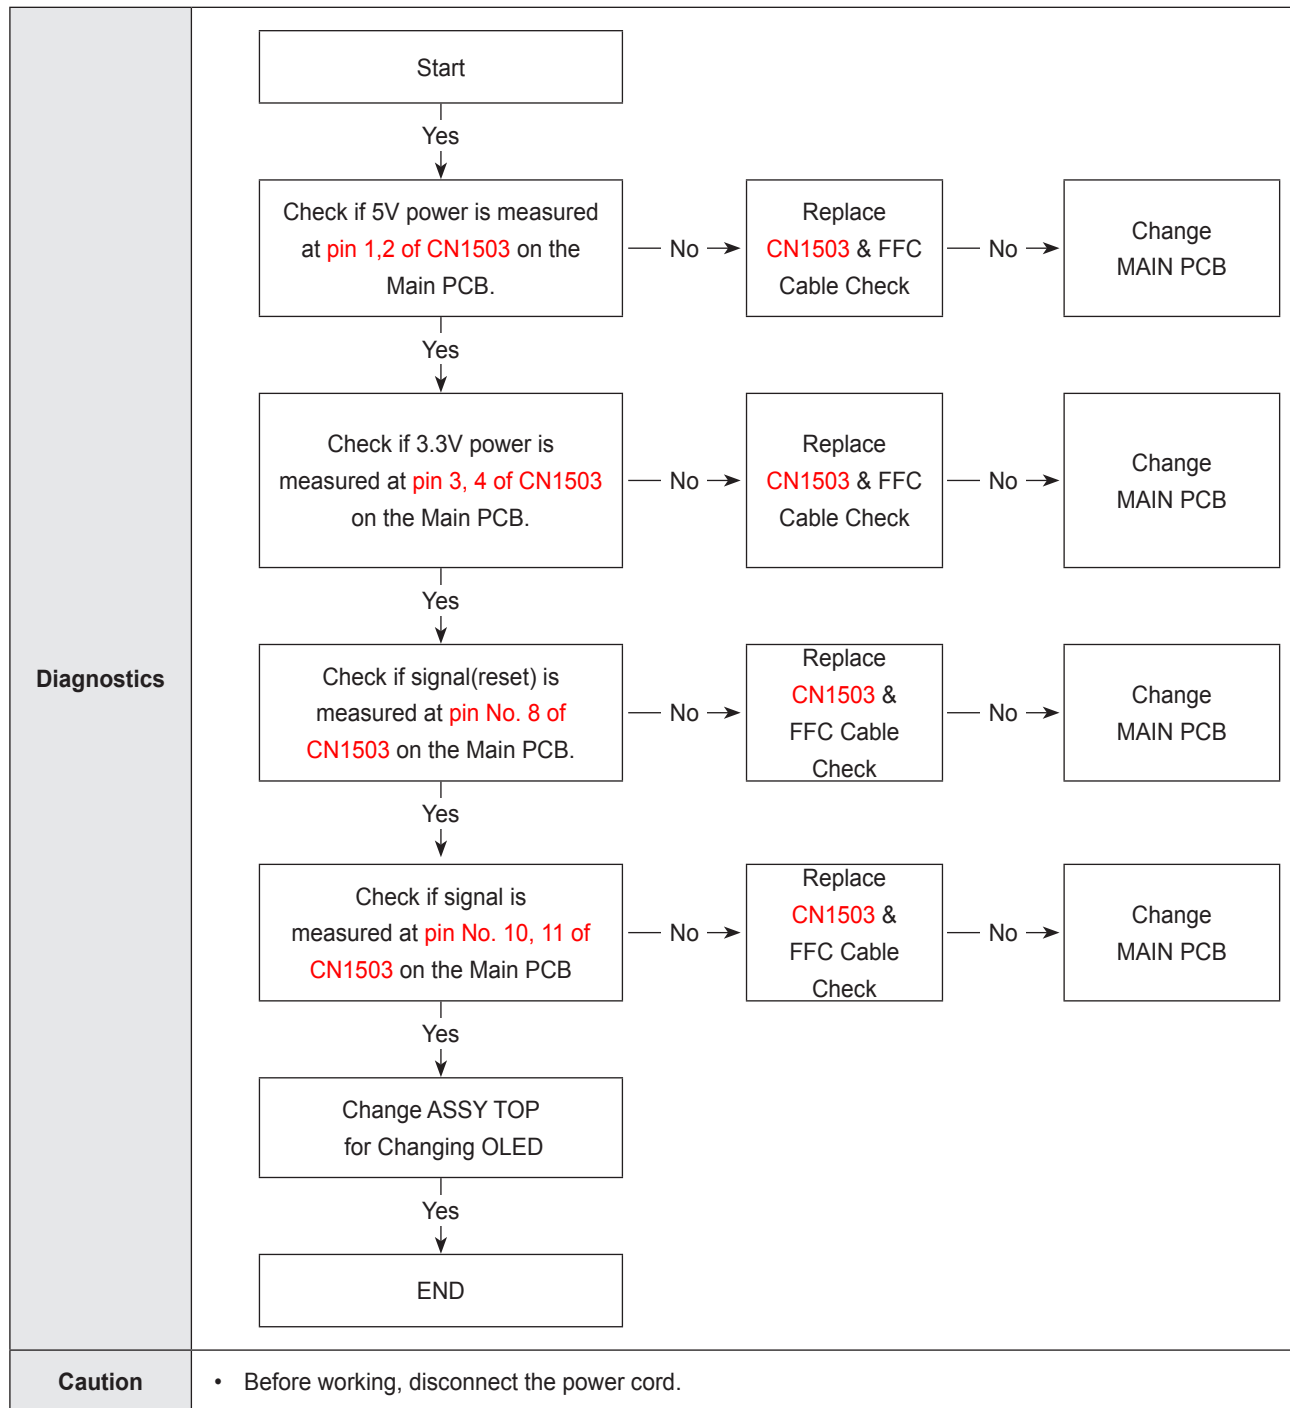


■ Location of Parts

Pin No.	CN1503
1	OLED_12V_PW
2	OLED_12V_PW
3	D_3.3V_PW
4	D_3.3V_PW
5	DGND
6	DGND
7	OLED_CE
8	OLED_RST
9	OLED_DC
10	OLED_SCLK
11	OLED_SDIN
12	DGND
13	REM_DATA
14	DGND
15	DGND
16	F_LED1_G
17	F_LED1_R
18	F_LED1_B
19	F_LED2_W
20	F_LED3_W
21	AL_3.3V_PW
22	AL_3.3V_PW
23	AL_3.3V_PW
24	AL_3.3V_PW

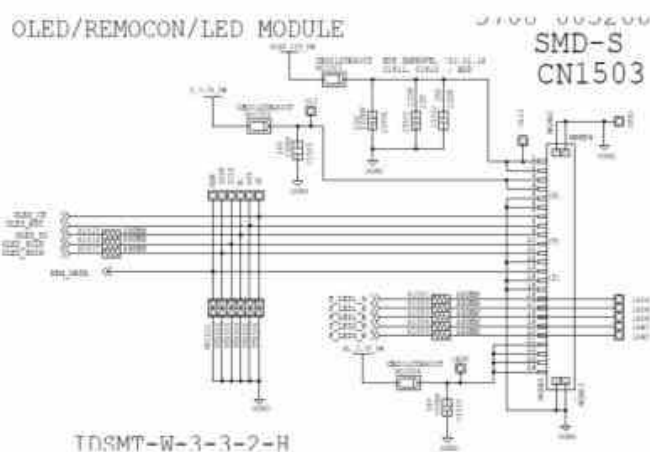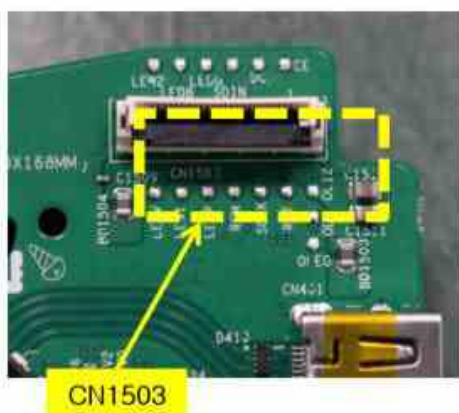

4-1-6. HDMI Trouble-shooting

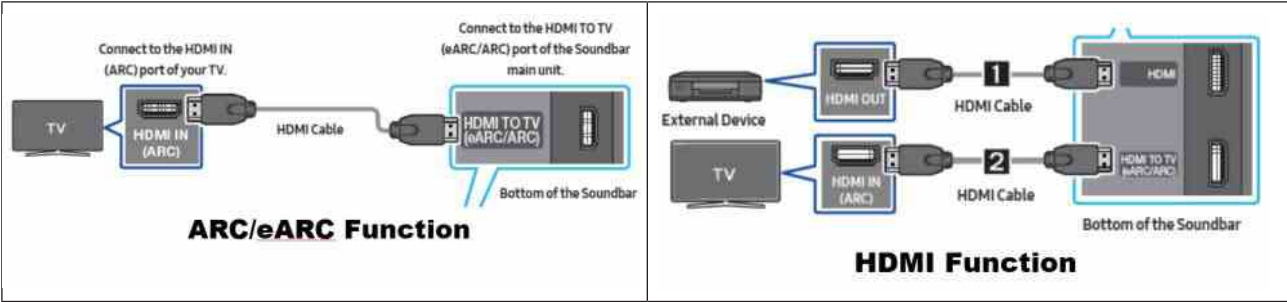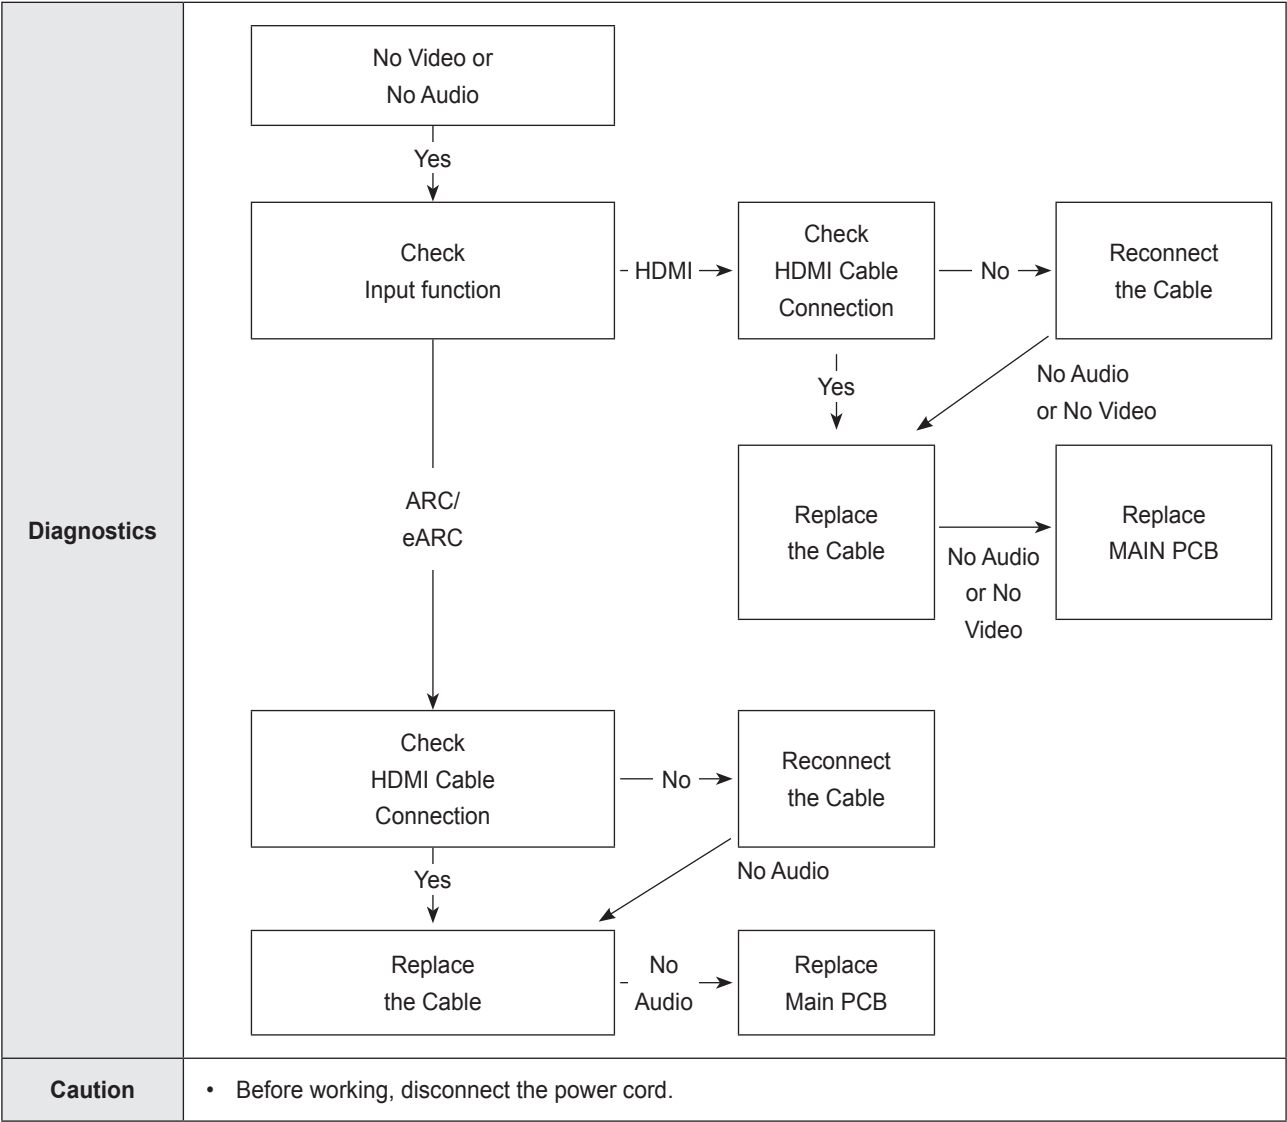

4-2. Initialization Method

4-2-1. Set Initialization method

■ Sound Bar(Using the remote control)

1. Prepare the remote control.
2. Turn the unit on.
3. Press and hold the "Sound Control" button on the remote for more than 10 seconds.
4. If it was successful, "INIT" will be displayed for 2 seconds and be turned off.



■ Sound Bar (Without Using the Remote control)

1. Turn the unit on.
2. Press and hold the "+" button and "-" button on Sound Bar simultaneously for 5 seconds.
3. If it was successful, "INIT" will be displayed for 2 seconds and be turned off.
4. The Sound bar will be turned off



- Things being cleared after initialization : WiFi, BT, EQ, and other user settings.

- Subwoofer and Rear connection will not be cleared by above initialization.

So the "IDSet " must be conducted after repair on both of Soundbar and wireless Rear/ subwoofer so as to make them auto connection on customers hand.

(If woofer/rear did not come to SVC, you need to guide the customer how to pair them)

4-2-2. IDset method (Link Soundbar and wireless sub and rears)

■ On the wireless subwoofer and rear speakers

1. Press ID Set button on the sub (and rears if exist) at least 5 seconds
2. Blue indicator blinks.

■ On the Soundbar(Using the remote control)

1. Prepare the remote control.
2. Press and hold the “UP” button on the remote control for at least 5 seconds.(Up key works from N Series soundbars. Pressing and holding the “Mute” for 5 seconds still works for compatibility.)
3. If it was successful, “ID SET” will be displayed for some seconds and be turned off.
4. The Soundbar will automatically power on when “ID SET” is complete




※ Guide the customers to make sure each of components are in IDSet mode.

4-2-3. Software check method

■ Sound Bar(using the remote)

1. Connect the Power plug.
2. Make it to standby mode (power off)
3. Press and hold “Sound Control” button 5 sec.
4. OLED will display. (Micom → B/E → DSP → HDMI → Set TX → Subwoofer RX → Surround L → Surround R)

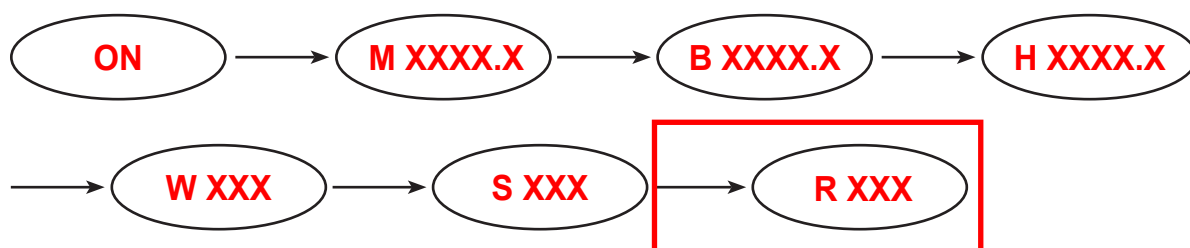

M : Micom Version
 B : Backend version (Representative Ver.)
 H : HDMI Version
 W : Wireless Tx Module Version in the soundbar
 S : Wireless Rx Module Version in the woofer

Rear VERSION DISPLAY
 - No REAR : Not appears
 - REAR Connected : R XXX

4-3. USB Update procedure (Service Only)

- Step 1 : Insert a USB drive containing the firmware upgrade into the SERVICE port on the rear side of the SET.
- Step 2 : Connect the Power plug and wait 1~2min (any source is ok)



- Step 3 : After update, Set will power off automatically.

ashakaas