

Lenovo

Motorola Edge Plus



**Lenovo Moto Motorola Edge Plus
Level 2 – Service and Repair Manual**



REVISION HISTORY

Revision	Date	Notes
1	05/08/2020	Initial release.



TABLE OF CONTENTS

Revision History	3
List of Tables.....	7
Table of Figures	7
Safety Information	8
Cautions and Warnings.....	8
Battery Safety Guidelines.....	8
Introduction.....	9
External Views.....	9
Exploded Views.....	11
Disassembly and Recovery	14
Disassembly and Recovery Map.....	14
Tools Required for Disassembly	15
SIM/SD Tray Removal	17
IMEI Label Removal.....	18
Rear Inlay Removal.....	20
Rear Inlay Microphone Gasket Removal	29
Rear Inlay Shim Removal	30
Rear-Facing Imager Lens Removal.....	31
Flash Lens Removal	34
Top Carrier Removal.....	36
Lower Carrier Removal	37
Main PCB Removal.....	39
Thermal Pad Removal	46
Imager Bracket Removal.....	47
Copper Foil Heat Spreader Removal.....	50
TOF Flex Removal	51
Side-Key ZIF Connector Shim Removal.....	53
Main PCB Pad Removal	54
Top mmWave Antenna Adhesive Removal	55
Copper Block Removal	56
O-Ring Removal.....	58
Lower PCB Removal.....	59
Lower PCB Grommet Removal.....	63
Lower PCB Microphone Grommet Removal.....	64
USB Grommet Removal.....	65
NFC Antenna Removal	66
Proximity Sensor Removal.....	67

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

Top mmWave Antenna Removal	69
Side-Key Flex Removal.....	71
Side Key Removal.....	72
Battery Removal.....	73
Foam Pad Removal	74
Battery Copper Foil Heat Spreader Removal	75
Copper Plate Removal	76
Coax Cable Removal	77
Vibrator Removal	78
Microphone Grommet Removal	79
Parts Refresh	80
Tools Required for Parts Refresh	80
Front Housing Cleaning	81
Rear Inlay Cleaning.....	82
Top Carrier Cleaning.....	83
Lower Carrier Cleaning	84
Rear-Facing Imager Cleaning	85
Rear-Facing Imager Bezel Cleaning.....	86
Top mmWave Antenna Cleaning	87
Assembly.....	88
Assembly Map.....	88
Tools Required for Assembly	89
WDL Assembly.....	92
Main PCB Pad Assembly	94
Top mmWave Antenna Adhesive Assembly.....	96
Side-Key ZIF Connector Shim Assembly.....	97
Copper Block Assembly	98
TOF Flex Assembly.....	101
Rear Copper Foil Heat Spreader Assembly.....	103
O-Ring Assembly	105
Rear-Facing Imager Assembly.....	106
Thermal Pad Assembly	108
Imager Bracket Assembly	109
Copper Plate Assembly.....	110
Battery Copper Foil Heat Spreader Assembly.....	111
Foam Pad Assembly	113
Thermal Grease Application.....	114
Side Key Assembly	118
Microphone Grommet Assembly.....	119

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

Vibrator Assembly	120
Proximity Sensor Assembly	122
Top mmWave Antenna Assembly	126
Main PCB Assembly	129
USB Grommet Assembly	133
Lower PCB Microphone Grommet Assembly	134
Lower PCB Grommet Assembly	136
Lower PCB Assembly	137
Coax Cable Assembly	139
Battery Assembly	142
Front Copper Foil Heat Spreader Assembly	145
NFC Antenna Assembly	147
USB Flex Assembly	149
Audio Flex Assembly	152
Mid mmWave Antenna Assembly	155
Front-Facing Imager Assembly	156
Top Carrier Assembly	158
Lower Carrier Assembly	159
Rear Inlay Shim Assembly	160
Rear Inlay Microphone Gasket Assembly	162
Rear-Facing Imager Lens Assembly	164
Flash Lens Assembly	167
Rear Inlay Assembly	169
IMEI Label Assembly	176
SIM/SD Tray Assembly	177
Lenovo Motorola Edge Plus Assembly Quality Check Illustration	178
Lenovo Motorola Edge Plus Assembly Quality Checklist	179

LIST OF TABLES

Table 1. External Views Parts List.....	10
Table 2. Assembly Exploded View Parts List.....	11

TABLE OF FIGURES

Figure 1. External Views.....	9
Figure 2. Assembly Exploded View.....	11



SAFETY INFORMATION

Cautions and Warnings

Electrostatic Discharge

The phone components may be damaged by electrostatic discharge (ESD). Always use an ESD mat and ground strap when working with internal components.

Battery Safety Guidelines

Handle Battery with care. Ensure Battery edges and surfaces are not dented or deformed. If the Battery Pack is dropped to the floor, it may be internally damaged and must be scrapped.

Ensure all surfaces, fixtures, and phone components contacting the Battery are smooth and clean.

Ensure Battery and its insulation are not damaged (e.g. scratched, dented, punctured) prior to and throughout assembly.

Prior to assembly, ensure Battery edges and surfaces are not dented or deformed, and that fixtures and parts that will contact the Battery are free of foreign material.

Ensure screws and screwdrivers do not contact the Battery.

Failure to adhere to Safety Critical Note(s) may increase risk of rupture, burning, or failure to function safely when used by the customer.

INTRODUCTION

External Views



Figure 1. External Views

Table 1. External Views Parts List

<i>Reference #</i>	<i>Description</i>
1	Front Housing
2	Front-Facing Imager
3	Display
4	Volume Key
5	Power Key
6	Rear-Facing Imager
7	Rear-Facing Imager Lower Frame
8	Rear-Facing Imager Bezel
9	Rear-Facing Imager Lens
10	Flash Lens
11	Rear Inlay
12	Speaker Mesh
13	SIM/SD Card

Exploded Views

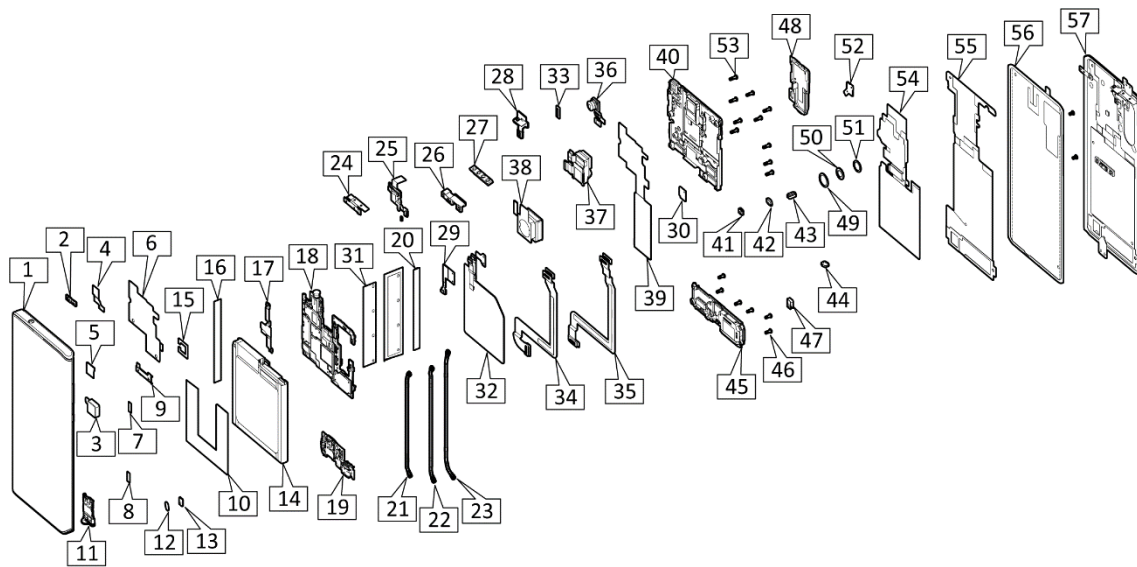


Figure 2. Assembly Exploded View

Table 2. Assembly Exploded View Parts List

Reference #	Description	Recovery Part
1	XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	YES
2	DIE CUT, PROXY GASKET, BURTON	NO
3	VIBRATOR, LINEAR 9X16, BURTON	NO
4	DIE CUT,Front Camera Copper-Tape, BURTON	NO
5	DIE CUT, PAD, THERMAL REAR CAMERA,BURTON	NO
6	COPPER PLATE, MAIN PCB, BURTON	NO
7	DIE CUT,SHIM, ZIF, SIDEKEY, BURTON	NO
8	DIE CUT, KAPTON 1, DISP, BURTON	NO
9	Copper,Bracket,mm-Wave, Back, BURTON	NO
10	DIE CUT, ADHESIVE, BATTERY, BURTON	NO
11	ASSEMBLY,HSG, SINGLE SIM TRAY, BURTON HSG,SIM,TURBO,ASSY,SINGLE SIM TRAY,SANGR	YES
12	DIE-CUT, MESH, MIC 3, BURTON	NO
13	DIE-CUT, SEAL, PCB, MIC1, BURTON	NO

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

Reference #	Description	Recovery Part
14	ASSY, BATTERY, LI POLY,LW50, 5000mAh	NO
15	DIE CUT, PAD, AP, BURTON	NO
16	DIE CUT, TAPE, COAX CLIP, BURTON	NO
17	Backer B2B Rear Imager, BURTON	YES
18	XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	YES
19	ASSY,USB-BOARD-KIT, BURTON ASSY,PWA,REAR FLASH, BURTON	YES
20	CLIP, COAX, BURTON	YES
21	CBL,COAX 3 , BURTON	YES
22	CBL,COAX 2 , BURTON	YES
23	CBL,COAX 1 , BURTON	YES
24	COPPER PLATE, mmWAVE TOP, BURTON	NO
25	ASSY PROXIMITY,SENSOR, BURTON	NO
26	BRACKET, MM WAVE TOP, BURTON	YES
27	5G mmw-ANTENNA PCB ASSY, QTM525	NO
28	ASSY,FLEX, mm-WAVE TOP,BURTON	NO
29	ASSY, Flex, TOF, Burton	NO
31	Diecut,Adhesive,Conductive,Coax, BURTON	NO
32	ASSY, FLEX, Wireless Charging, Burton	NO
33	DIECUT,ADHESIVE,BACKER,RF IMAGER, BURTON	NO
34	ASSY, FLEX, USB (Bridge 1), Burton	NO
35	ASSY, Audio/RF flex (Bridge 2), Burton	NO
36	MDL,CAMR,L2X5F50	YES
37	MDL,CAMR,1.008um/1.0um	YES
38	108MPOIS	YES
39	HEATSPREADER, BATTERY, BURTON	NO
40	ASSEMBLY,HSG,TOP CARRIER, BURTON	YES
41	ASSY,PWA,REAR FLASH, BURTON	YES
42	SEAL,DUST,Rio H,RUB,Rubber,O-ring,USB Co	YES
43	GROMMET, TOF, BURTON	YES
44	SEAL,DUST,Rio H,RUB,Rubber,O-ring,HSJ Co	YES

Motorola Edge Plus

Level 2 – Service and Repair Manual


ANIBAL GARCIA VENEZUELA

<i>Reference #</i>	<i>Description</i>	<i>Recovery Part</i>
45	ASSY, HSG,BTM CARRIER,LOUD-SPKR, BURTON	YES
46	SCREW, BOTTOM, BURTON	NO
47	GROMMET, MIC 1, BURTON	YES
48	Assy Camera Bezel, BURTON BZL,CAMR,TURBO,ASSY CAM BEZEL,SANGRIA RE	NO
49	Primary CAMERA LENS, BURTON	NO
50	Tertiary CAMERA LENS, BURTON	YES
51	Secondary, CAMERA LENS, BURTON	NO
52	LENS,FLASH,REAR, BURTON	NO
53	SCREW, TOP, BURTON	NO
54	HEAT SPREADER, BACK, BURTON	NO
55	DIE CUT, ADHESIVE, INNER, INLAY, BURTON	NO
56	DIE CUT, ADHESIVE INLAY, BURTON	NO
57	INLAY, REAR GLASS (2nd), BURTON HSG,REAR,SGA,INLAY, REAR GLASS,BYD, SGA	YES
--	DIE CUT,SLUG,COPPER, TRANSCEIVER, BURTON	NO
--	DIE CUT, SLUG,COPPER, AP1, BURTON	NO
--	DIE CUT, SLUG, COPPER, CHARGING, BURTON	NO
--	DIE CUT, SLUG, COPPER, DRIVER, BURTON	NO
--	DIE CUT,SLUG, COPPER,MODEM, BURTON	NO
--	SCREW, FLIP, Olson	NO
--	DIE CUT, PROXY, SHIM, BURTON	NO
--	DIE-CUT, GASKET, MIC 2, BURTON	NO
--	LBL,WATER, DETECT, 3M 5559, 0.127T, VZ	NO
--	LBL,IMEI	NO
--	SCREW, FLIP, Olson	NO
--	HDW,SCR,CAMR BEZEL, 1.85MM, SHERIDAN	NO
--	SCR,M1.4,ENDO, 3.6	NO

*Refer to this table as a reference to parts listed in the Assembly section.

DISASSEMBLY AND RECOVERY



Disassembly and Recovery Map

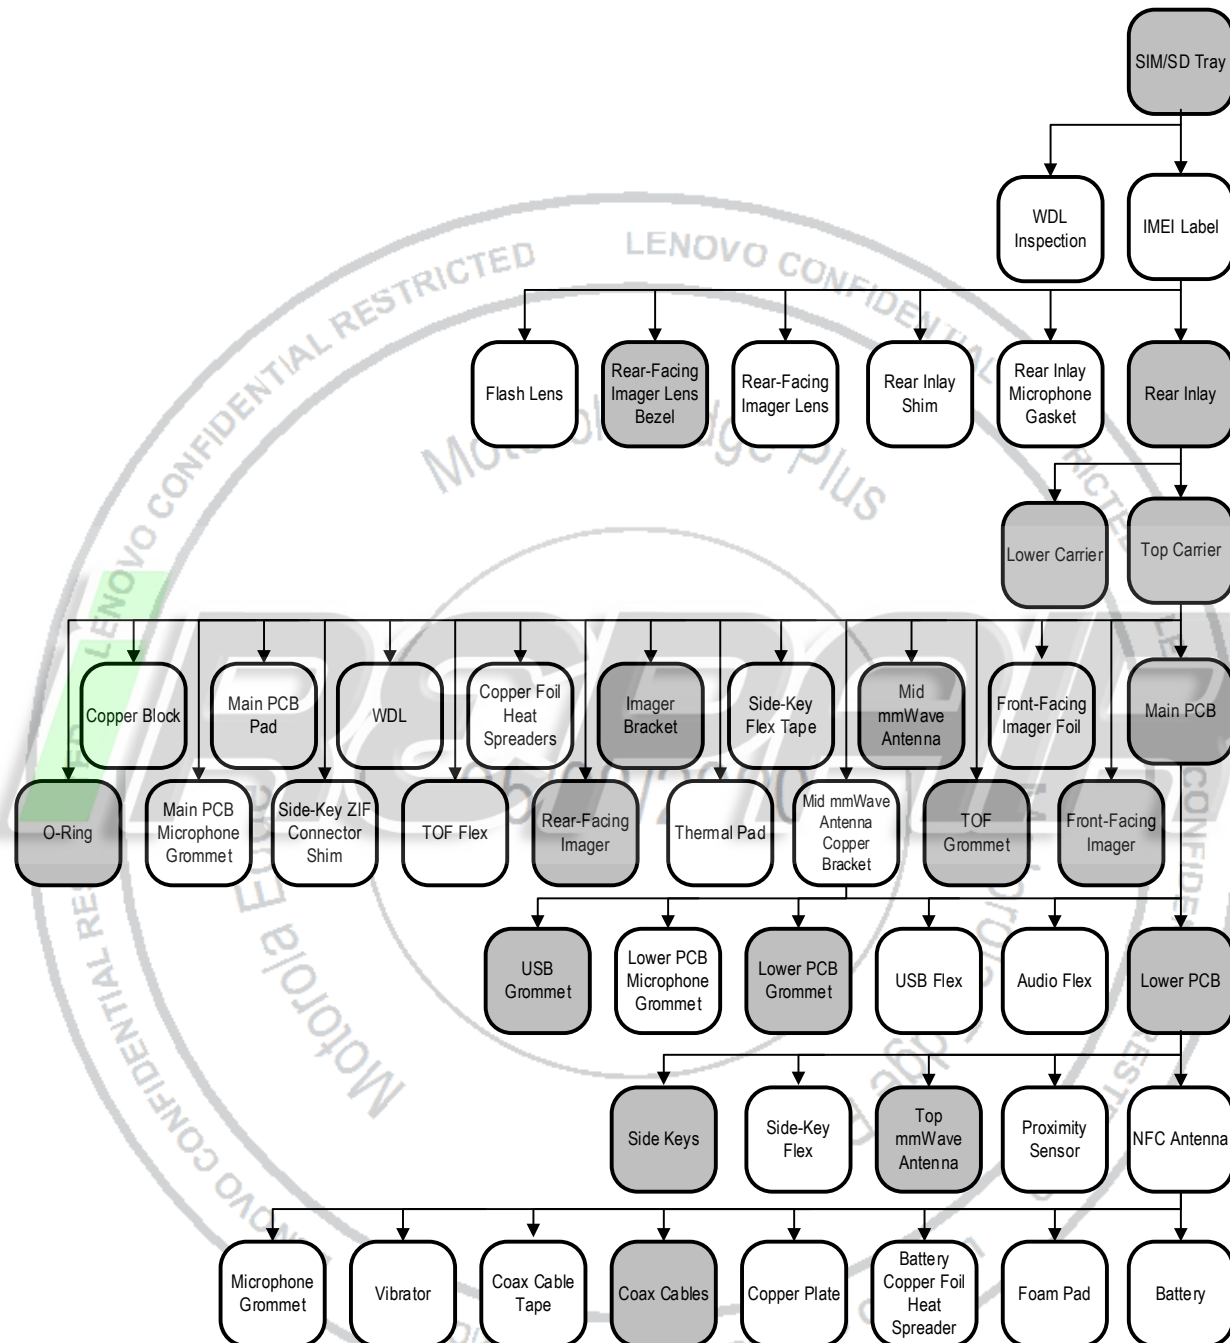

*Shaded parts may be eligible for parts recovery.

Tools Required for Disassembly

The following tools are required to disassemble the Motorola Edge Plus phone.

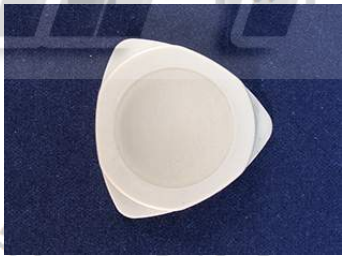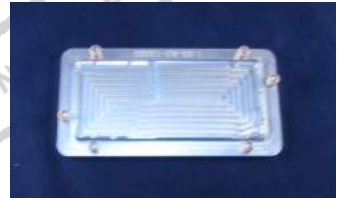
<i>Description</i>	<i>Part #</i>	<i>Picture / Drawing</i>
7" x 7" Hot Plate	--	
SIM/SD Tray Removal Tool	4-00-U2-10000	
Blackstick	--	
T3 Torx Bit	--	
Torque Driver (Adjustable)	--	
Shim	4-00-5L-10000	
Thin Plastic Spudger	0-00-00-40826	
Rear Inlay Heating Plate	1-00-A2-10000	

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

Description	Part #	Picture / Drawing
Rear Inlay Removal Insert	MR-M2-001-051	
Tweezers (Plastic or Plastic-Tipped)	--	--
Tweezers (Metal)	--	--
ESD Mat and Wrist Strap	--	--
Gloves or Finger Collets	--	--

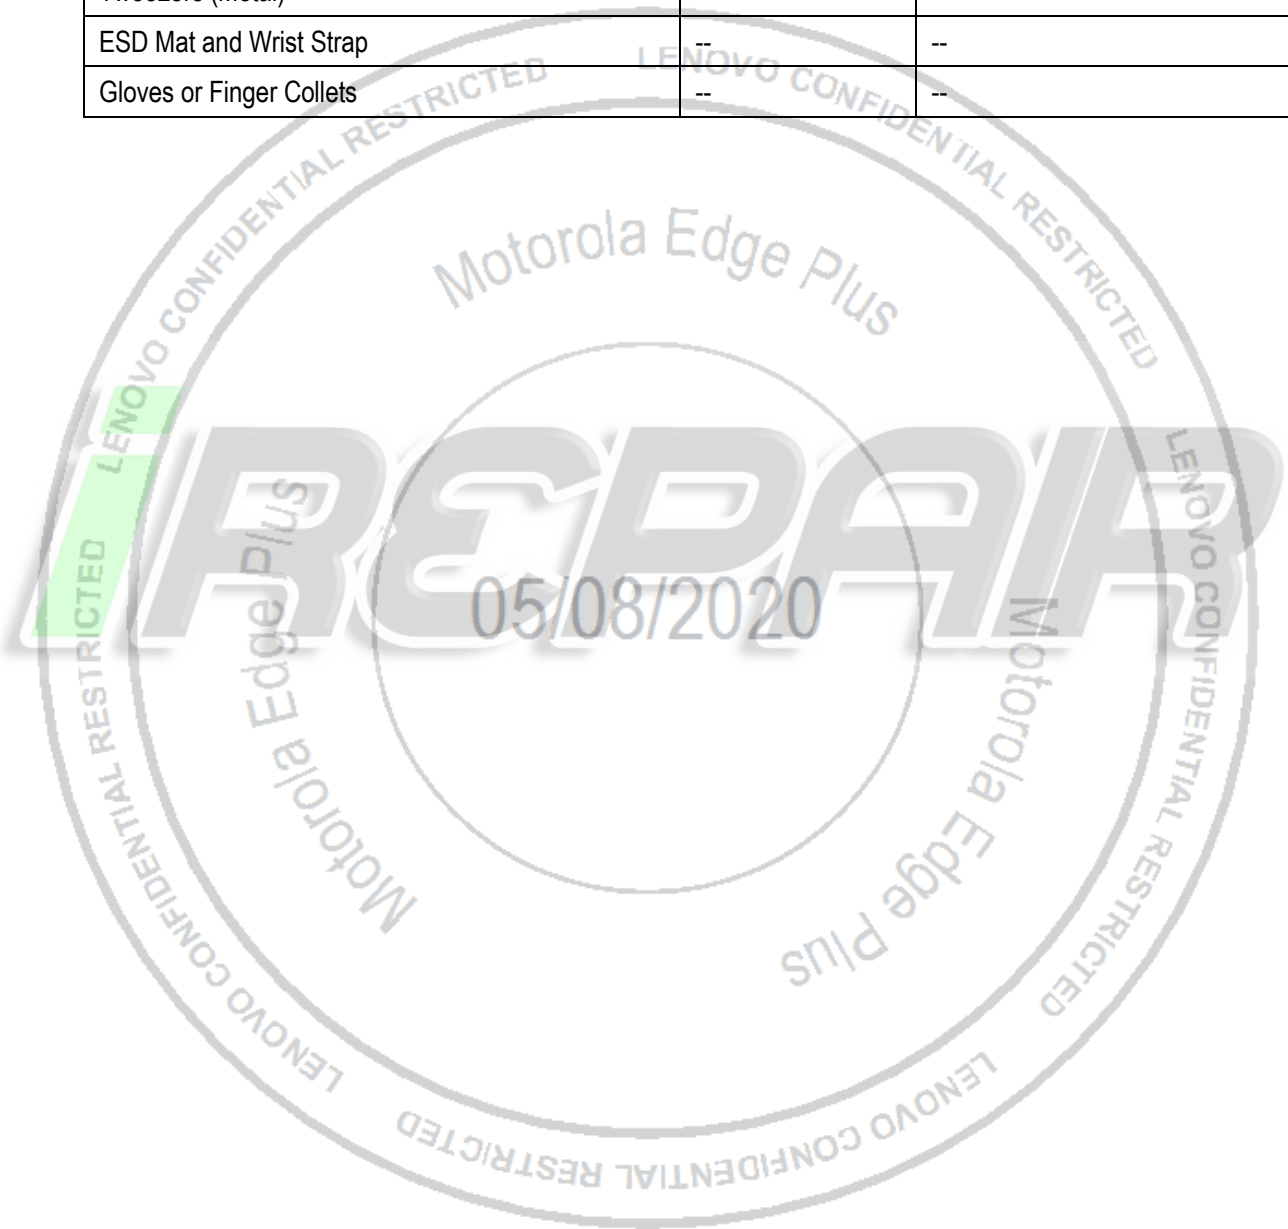

SIM/SD Tray Removal

NOTE

The SIM/SD Tray can be recovered and reused after removal.



1. Insert the SIM/SD Tray Removal Tool (4-00-U2-10000) into the SIM/SD Tray hole.



2. Push the SIM/SD Tray Removal Tool into the SIM/SD Tray hole until the SIM/SD Tray ejects from the phone.



3. Remove the SIM/SD Tray from the phone.




IMEI Label Removal

NOTE

Remove the IMEI Label only if necessary. After you remove it, you cannot reuse it.



Use the Tweezers to peel the IMEI Label from the SIM/SD Tray.

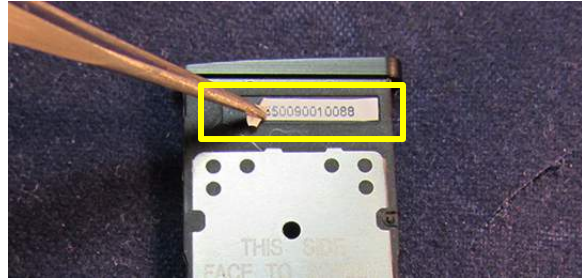

Water Detection Label (WDL) Inspection

NOTE

If the WDL is activated, the phone's warranty no longer applies.

Inspect the WDL inside the SIM/SD Card Tray slot.
Examine it for signs of activation.



Rear Inlay Removal

NOTE

The Rear Inlay can be recovered and reused after removal if it is undamaged.



Preheating for Rear Inlay Removal

NOTE

Rear Inlay Removal Methods A and B have the same preheating steps, as shown below.

1. Place the phone Heating Plate (1-00-A2-10000) on the Hot Plate.
2. Set the Hot Plate to 80 °C (176 °F).

// CAUTION //

Do not set the Hot Plate temperature higher than 80 °C (176 °F). Damage to the phone may occur.

NOTE

Preheating with an oven is also acceptable if the oven is set to the same temperature.

3. When the Hot Plate has reached the required temperature, place the phone in the Heating Plate, with the Display side up.
4. Wait 10 minutes for the Rear Inlay Adhesive to warm up.
5. Remove the phone from the Heating Plate or the oven.

// CAUTION //

Wear protective gloves when handling heated phones.



NOTE

Perform the Rear Inlay removal procedure before the phone starts to cool off.



Rear Inlay Removal Method A

6. If the Moto Rear Inlay Removal Fixture (MR-M2-001) currently holds the Removal Insert (MR-M2-001-051), skip to step 12.
7. Use the 3 mm Allen Wrench to loosen the screws holding the side rails on the Moto Rear Inlay Removal Fixture. Do not remove the rails.
8. Use the 3 mm Allen Wrench to remove the 2 center screws holding the Moto Rear Inlay Removal Insert in place (if present). Remove the Insert.
9. Orient the Removal Insert in relation to the Moto Rear Inlay Removal Fixture as shown. Place the Insert into the Rear Inlay Removal Fixture.

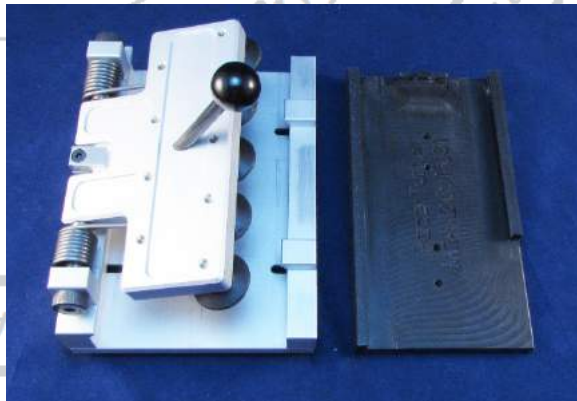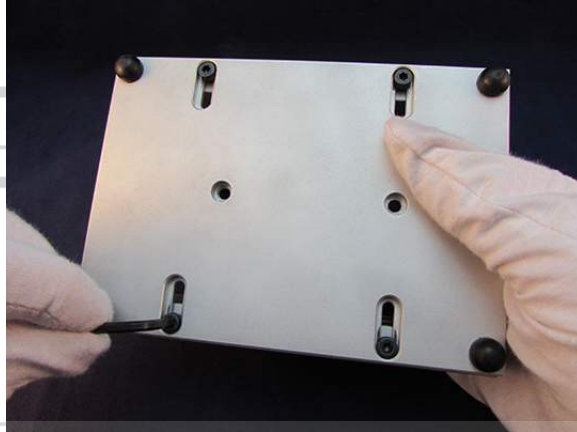


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


10. Use the 3 mm Allen Wrench on the 2 center screws to tighten the Rear Inlay Removal Insert into position.

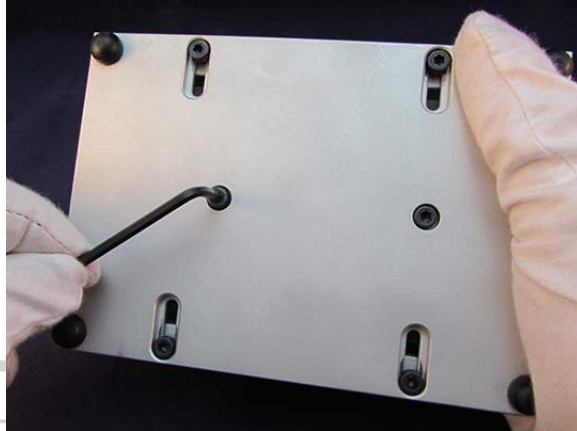

11. Slide both side rails on the Moto Rear Inlay Removal Fixture firmly against the Rear Inlay. Use the 3 mm Allen Wrench to tighten the 4 outside screws on the underside of the Rear Inlay Removal Fixture.



12. Slide the phone into the Moto Rear Inlay Removal Fixture as shown. Center the phone in the Fixture.

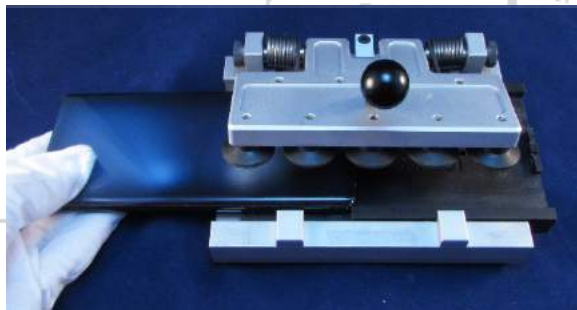

// CAUTION //

Wear protective gloves when handling heated phones.

NOTE

Begin this step before the phone starts to cool off.

Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

13. Press down on the Moto Rear Inlay Removal Fixture handle to bring the suction cups in contact with the Rear Inlay. Verify that all the suction cups are attached to the Rear Inlay.

// CAUTION //

Use care when pressing down on the Moto Rear Inlay Removal Fixture handle. Damage to the phone may occur.

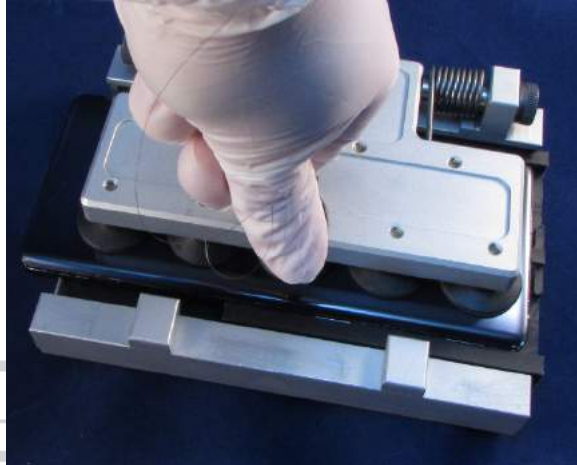

14. Turn on the Heat Gun and set the temperature to 80 °C (176 °F). Allow the Heat Gun to warm up for 2-3 minutes.

// CAUTION //


Do not set the Heat Gun temperature higher than 80 °C (176 °F). Damage to the phone may occur.

// CAUTION //

Wear protective gloves when handling heated phones.



15. Use the Heat Gun to warm the phone edges for about 3 minutes. Keep the Heat Gun in motion to avoid damaging the phone.

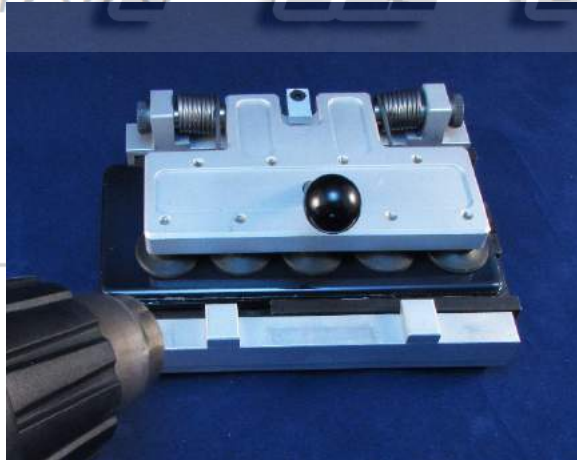

NOTE

Begin this step before the phone starts to cool off.

16. As the Rear Inlay begins to release from the phone, use the Thin Plastic Spudger to cut the adhesive holding the Rear Inlay to the Front Housing.


// CAUTION //

Do not insert the Thin Plastic Spudger more than 2 mm to prevent damaging internal components.

17. Use the Thin Plastic Spudger to loosen or cut the adhesive holding the Rear Inlay to the Front Housing. If necessary, reheat the phone as you work your way around the edges of the phone.

// CAUTION //

Use care not to bend the Rear Inlay. Damage to the phone may occur.

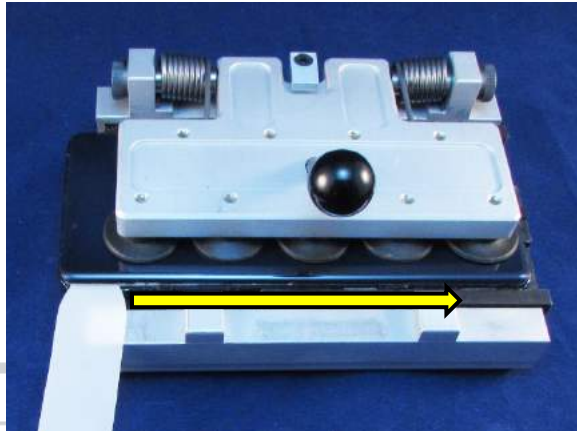

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


// CAUTION //

Do not insert the Thin Plastic Spudger more than 2 mm to prevent damaging internal components.

// CAUTION //

Do not insert the Thin Plastic Spudger in the indicated location. Damage to the Rear-Facing Imager could occur.

18. Use the Thin Plastic Spudger to cut the adhesive that holds the Rear Inlay to the Front Housing, using the arrows as a guide for cutting the adhesive.

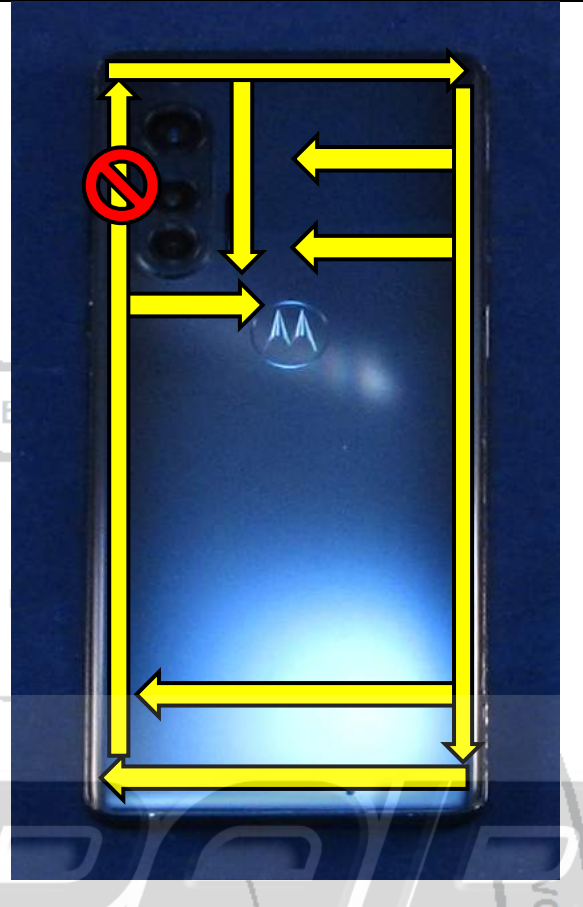

19. When the adhesive has been sufficiently loosened or has been cut, use the handle on the Moto Rear Inlay Removal Fixture to open the phone.




Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

20. Use the pointed end of the Blackstick to break the suction on the suction cups attached to the Rear Inlay. You may need to repeat this process on some suction cups.

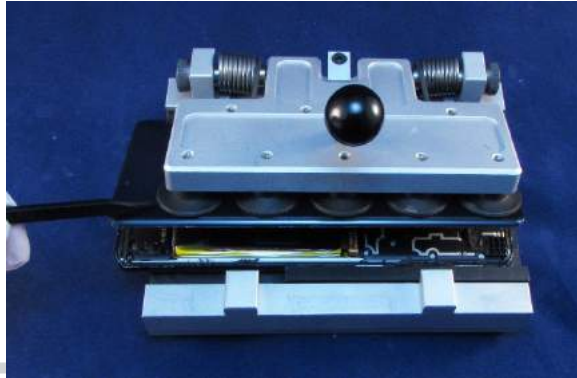

21. After all of the suction cups have been released, carefully slide the phone out of the Rear Inlay Removal Fixture.

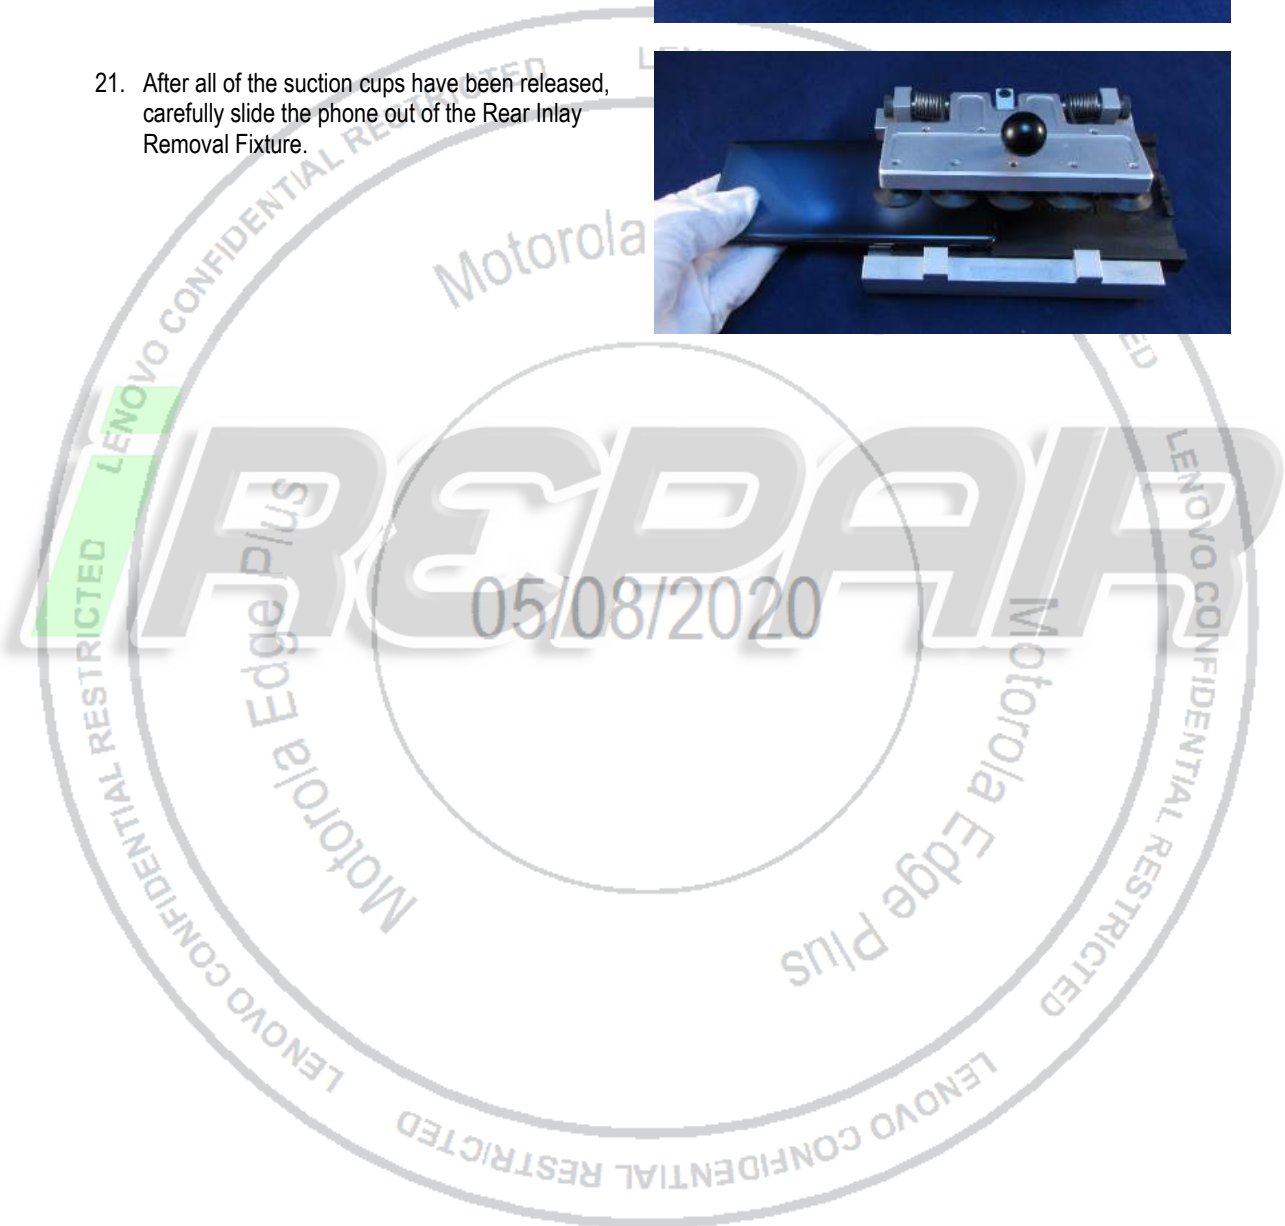

Rear Inlay Removal Method B

22. Follow the preheating steps described on page 20.

NOTE

Begin this step before the phone starts to cool off.

23. Insert the Shim (4-00-5L-10000) at one of the corners of the phone to pry up the Rear Inlay from the Front Housing. Lift up along the edge of the phone.




// CAUTION //

Do not insert the Thin Plastic Spudger more than 2 mm to prevent damaging internal components.

// CAUTION //

Do not insert the Thin Plastic Spudger in the indicated location. Damage to the Rear-Facing Imager could occur.

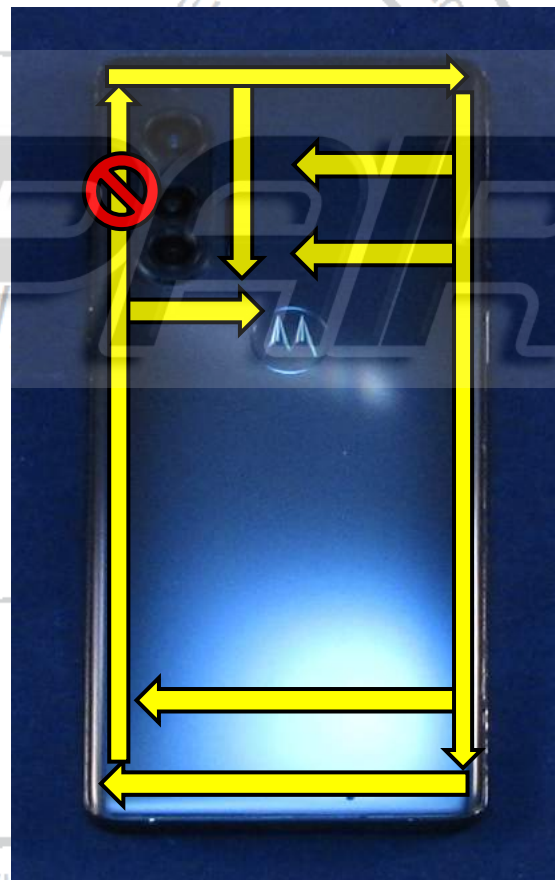

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

24. Remove the Rear Inlay from the Front Housing.



Rear Inlay Microphone Gasket Removal

NOTE

After you remove the Rear Inlay Microphone Gasket, you cannot reuse it.



Use the Tweezers to remove the Rear Inlay Microphone Gasket from the Rear Inlay.




Rear Inlay Shim Removal

NOTE

After you remove the Rear Inlay Shim, you cannot reuse it.



Use the Tweezers to remove the Rear Inlay Shim from the Rear Inlay.

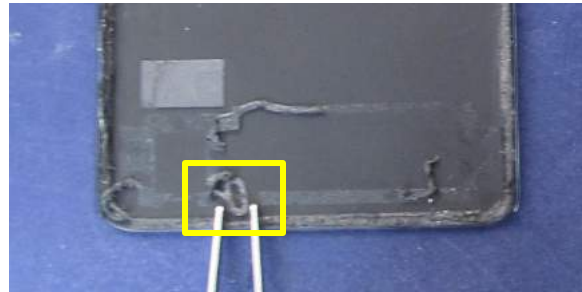

Rear-Facing Imager Lens Removal

NOTE

After you remove the Rear-Facing Imager Lenses, you cannot reuse them.



1. Turn on the Heat Gun and set the temperature to 80 °C (176 °F). Allow the Heat Gun to warm up for 2-3 minutes.

// CAUTION //

Do not set the Heat Gun temperature higher than 80 °C (176 °F). Damage to the phone may occur.

// CAUTION //

Wear protective gloves when handling heated phones.



2. Use the Heat Gun to warm the Rear-Facing Imager Lens as shown. Keep the Heat Gun in motion to avoid damaging the Rear Inlay.




3. Use the flat end of the Blackstick to cut the adhesive of the Rear-Facing Imager Lens Bezel.

// CAUTION //

Use care when separating the Rear-Facing Imager Lens Bezel from the Rear Inlay. The Rear-Facing Imager Lenses may break or shatter.



4. Use the Tweezers to remove the Rear-Facing Imager Lens from the Rear Inlay.

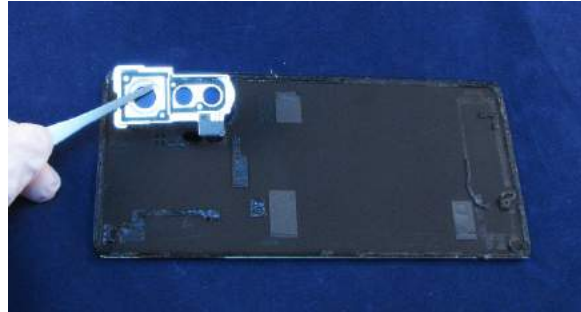

5. Turn on the Heat Gun and set the temperature to 80 °C (176 °F). Allow the Heat Gun to warm up for 2-3 minutes.

// CAUTION //

Do not set the Heat Gun temperature higher than 80 °C (176 °F). Damage to the phone may occur.

// CAUTION //


Wear protective gloves when handling heated phones.



6. Use the Heat Gun to heat the Rear-Facing Imager Lens Bezel as shown.



7. Use the pointed end of the Blackstick to push the Large Rear-Facing Imager Lens from the Rear-Facing Imager Lens Bezel.

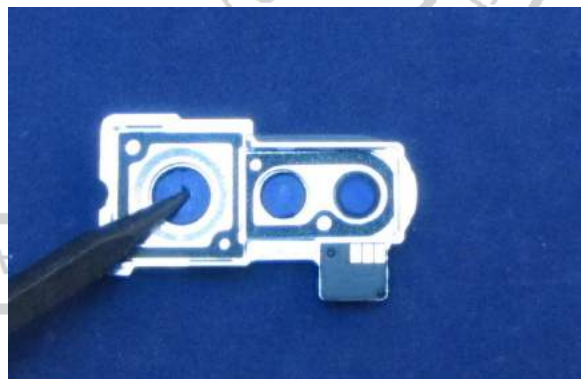


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

8. Use the pointed end of the Blackstick to push the First Small Rear-Facing Imager Lens from the Rear-Facing Imager Lens Bezel.

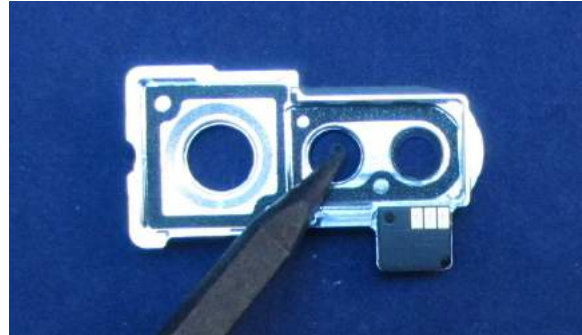

9. Use the pointed end of the Blackstick to push the Second Small Rear-Facing Imager Lens from the Rear-Facing Imager Lens Bezel.

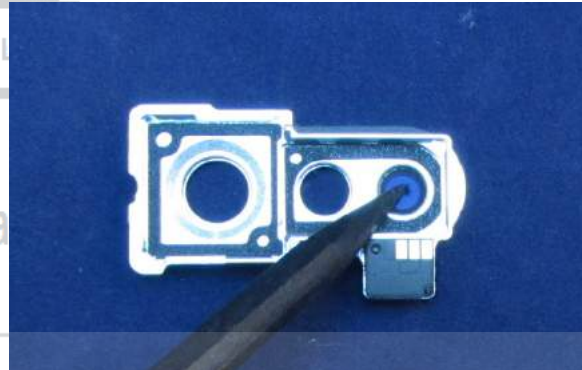

Flash Lens Removal

NOTE

After you remove the Flash Lens, you cannot reuse it.



1. Turn on the Heat Gun and set the temperature to 80 °C (176 °F). Allow the Heat Gun to warm up for 2-3 minutes.

// CAUTION //


Do not set the Heat Gun temperature higher than 80 °C (176 °F). Damage to the phone may occur.

// CAUTION //

Wear protective gloves when handling heated phones.



2. Use the Heat Gun to warm the Flash Lens as shown. Keep the Heat Gun in motion to avoid damaging the Rear-Facing Imager Bezel.

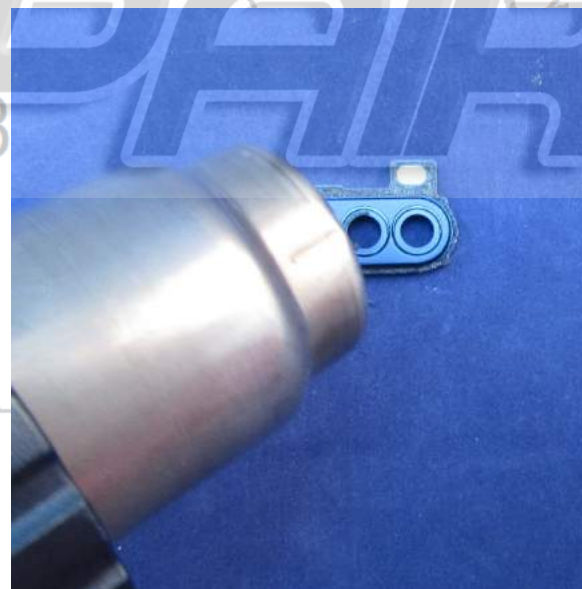


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

3. Use the Thin Plastic Spudger to cut the adhesive on the rear of the Flash Lens as shown.

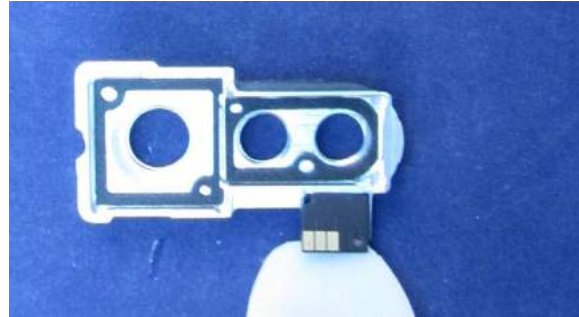

4. Use the pointed end of the Blackstick to push the Flash Lens from the Rear-Facing Imager Bezel.



Top Carrier Removal

NOTE

The Top Carrier can be recovered and reused after removal.



1. Use the Torx Driver and T3 Torx Bit to remove the 10 silver Machine Screws from the Top Carrier.



NOTE

After you remove Machine Screws, you cannot reuse them.



2. Use the flat end of the Blackstick to unsnap the Top Carrier from the pocket in the Front Housing.

3. Use your fingers to lift the Top Carrier from the Main PCB.

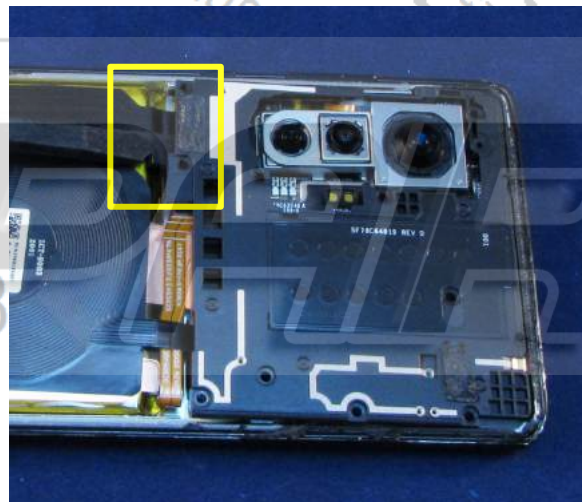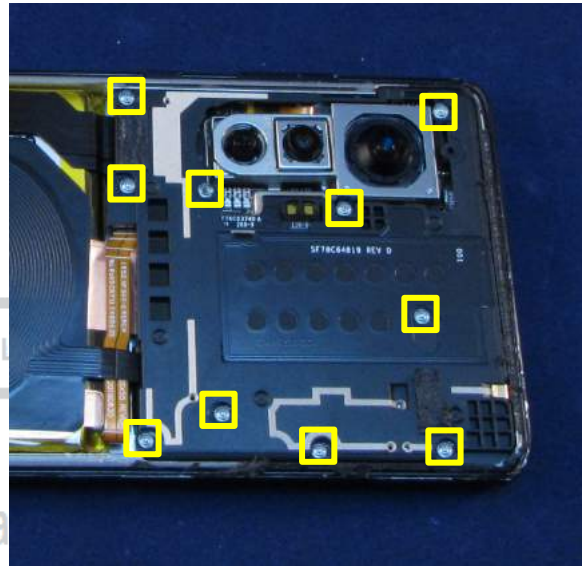

Lower Carrier Removal

NOTE

The Lower Carrier can be recovered and reused after removal.




1. Use the Torx Driver and T3 Torx Bit to remove the 6 black Machine Screws from the Top Carrier.

NOTE

After you remove the Machine Screws, you cannot reuse them.



2. Use the flat end of the Blackstick to unsnap the Lower Carrier from the pocket in the Front Housing.

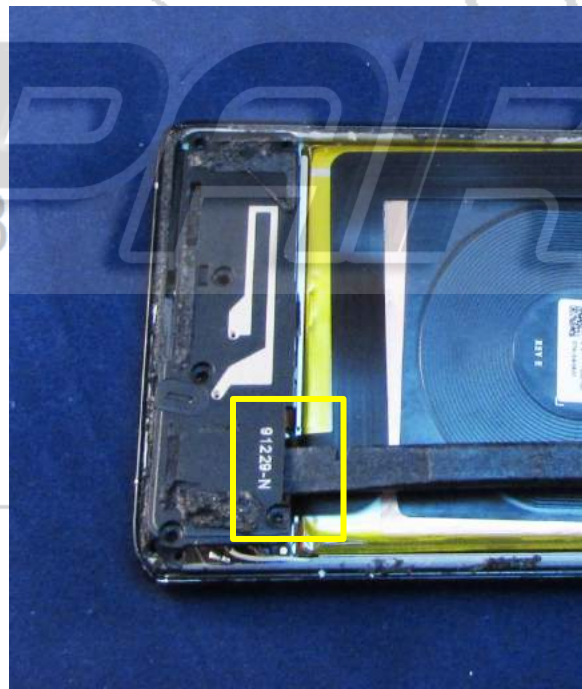


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

3. Use your fingers to remove the Lower Carrier from the Lower PCB.

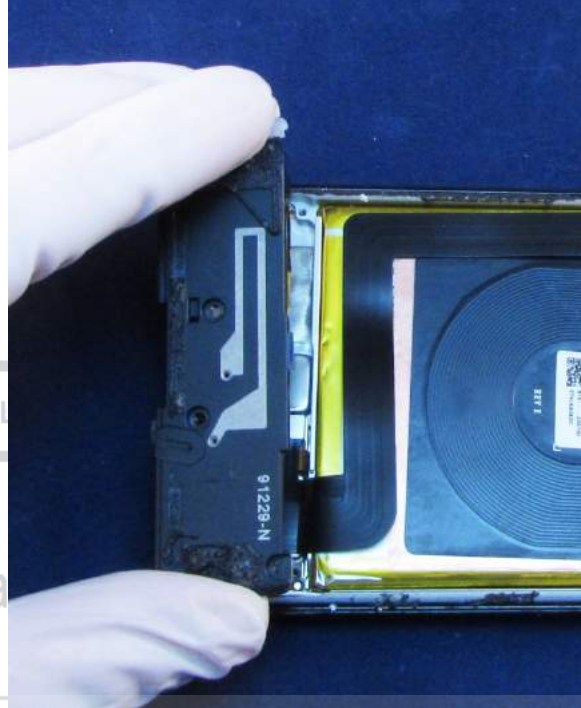




Main PCB Removal

NOTE

The Main PCB can be recovered and reused after removal.



1. Use the flat end of the Blackstick to disengage the Audio Flex BtB Connector from the Main PCB.
2. Use the flat end of the Blackstick to disengage the USB Flex BtB Connector from the Main PCB.
3. Use the flat end of the Blackstick to disengage the Battery BtB Connector from the Main PCB.

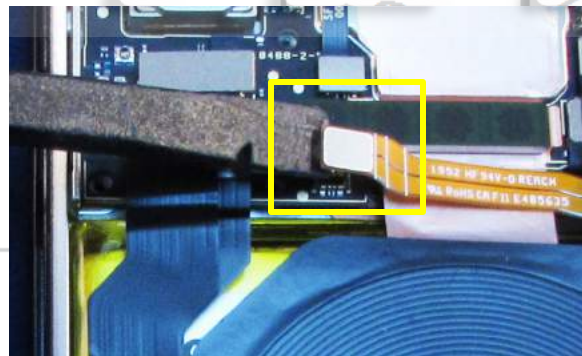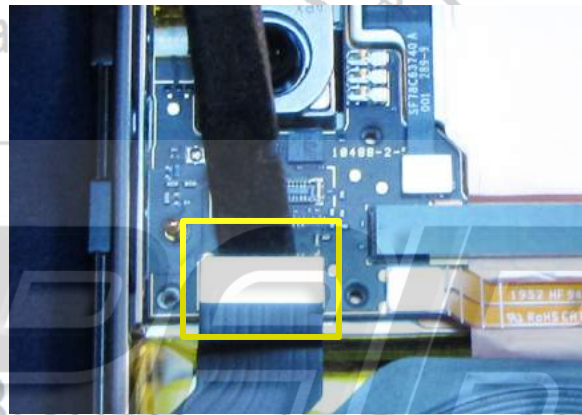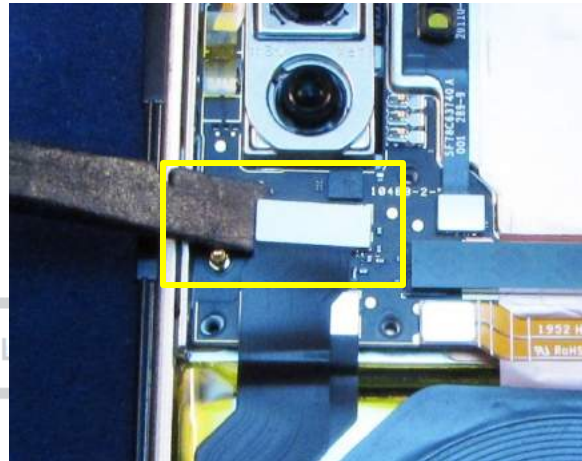


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


4. Use the flat end of the Blackstick to disengage the Top mmWave Antenna BtB Connector from the Main PCB.

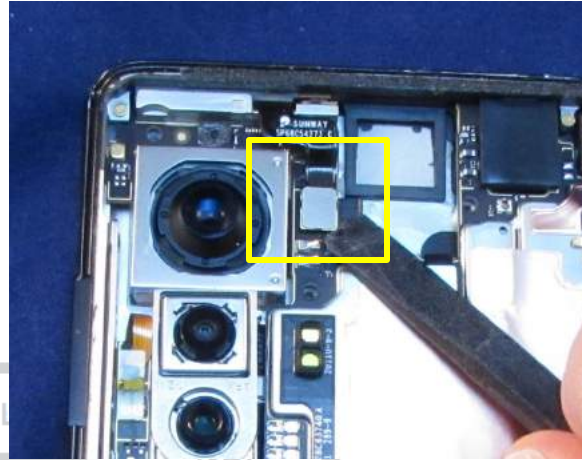

5. Use the flat end of the Blackstick to disengage the NFC Antenna Flex BtB Connector from the Main PCB.

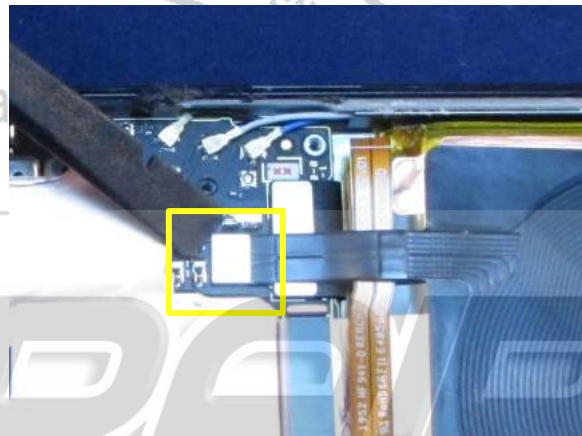

6. Use the flat end of the Blackstick to disengage the Display Flex BtB Connector from the Main PCB.

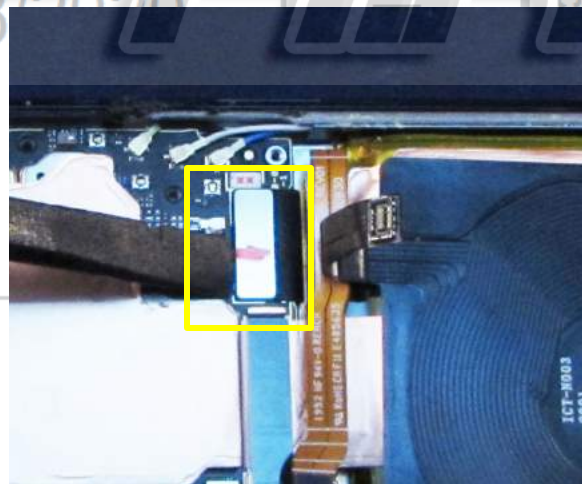

Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

7. Use the flat end of the Blackstick to disengage the Front-Facing Imager BtB Connector from the Main PCB.

NOTE

The Front-Facing Imager can be recovered and reused after removal.

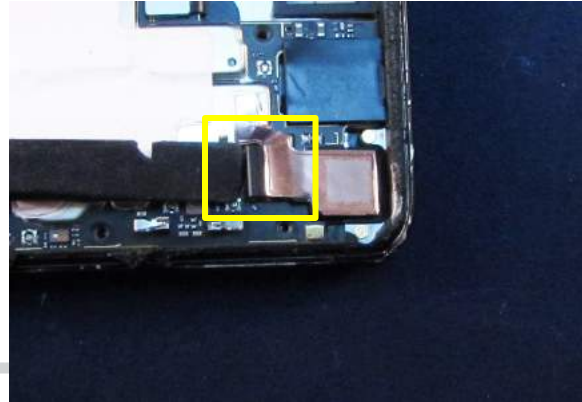

8. Use the Tweezers to remove the Front-Facing Imager Foil from the rear of the Front-Facing Imager.

NOTE


After you remove the Front-Facing Imager Foil, you cannot reuse it.



9. Use the Tweezers to remove the TOF Grommet from the TOF Sensor.

NOTE

The TOF Grommet can be recovered and reused after removal.

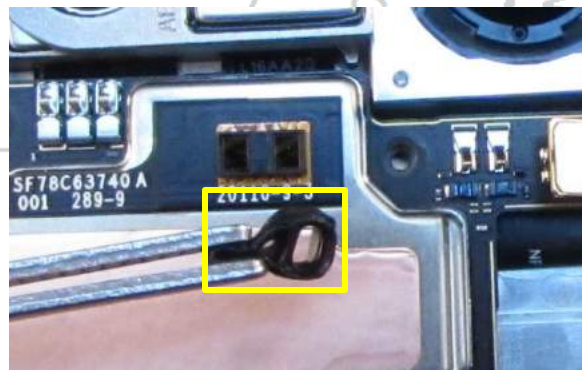


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


10. Use the flat end of the Blackstick to disengage the TOF Flex BtB Connector from the Main PCB.

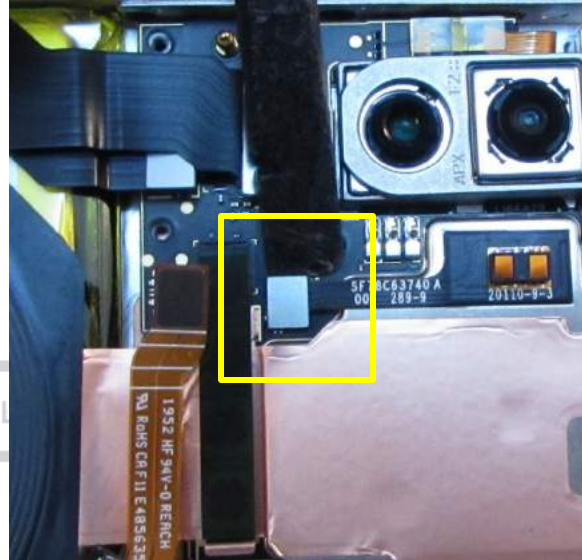

11. Use the flat end of the Blackstick to disengage the Proximity Sensor Flex BtB Connector from the Main PCB.

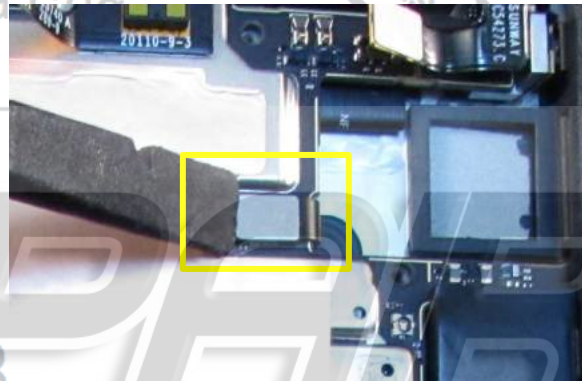

12. Use the flat end of the Blackstick to disengage the Mid mmWave Antenna BtB Connector from the Main PCB.

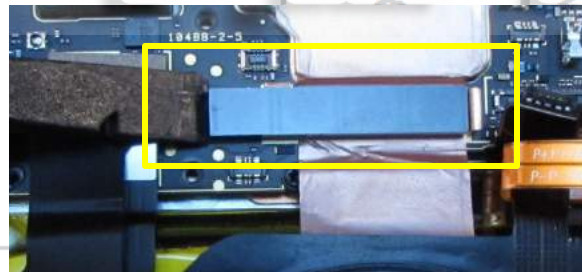

NOTE


The Mid mmWave Antenna can be recovered and reused after removal.



13. Use the Tweezers to remove the Mid mmWave Antenna Copper Bracket from the Mid mmWave Antenna as shown.

NOTE

After you remove the Mid mmWave Antenna Copper Bracket, you cannot reuse it.

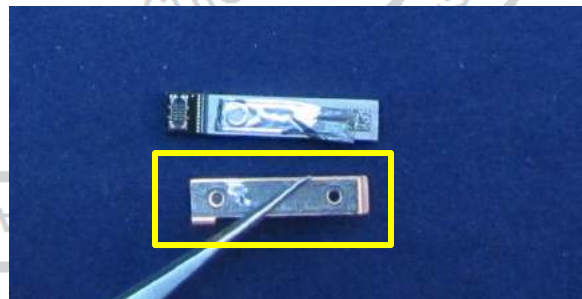


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


14. Use the flat end of the Blackstick to cut the Copper Foil Heat Spreader on the Main PCB in the location shown.

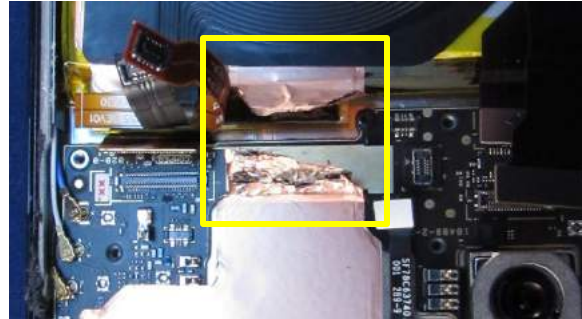

15. Use the Tweezers to remove the Side-Key Flex Tape from the ZIF Connector Door of the Side-Key Flex.

NOTE


After you remove the Side-Key Flex Tape, you cannot reuse it.

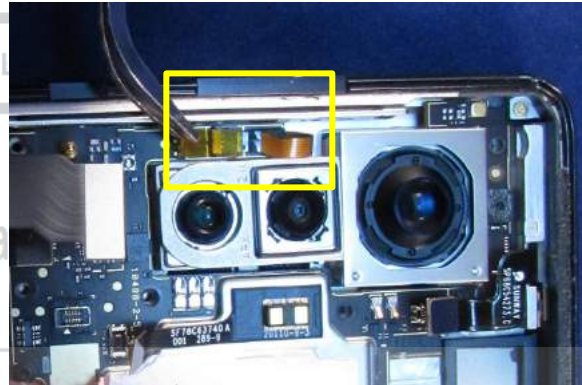

16. Use the pointed end of the Blackstick to open the ZIF Connector Door of the Side-Key Flex.



17. Use the Tweezers to remove the Side-Key Flex from the ZIF Connector Door.

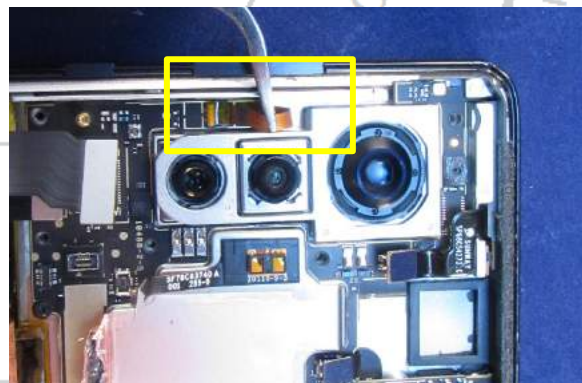


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


18. Use the pointed end of the Blackstick to disengage the 3 Coax Cable BtB Connectors from the Main PCB.

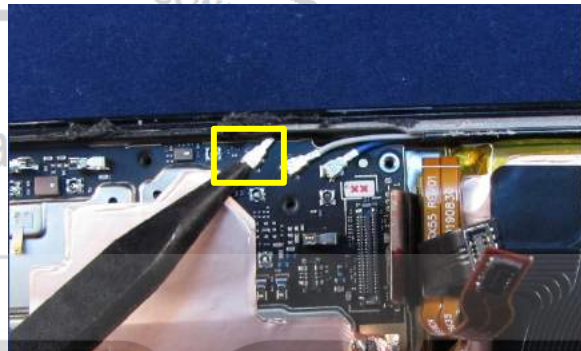

19. Use the Torx Driver and T3 Torx Bit to remove the 2 black Machine Screws from the Main PCB.

NOTE

After you remove the Machine Screws, you cannot reuse them.

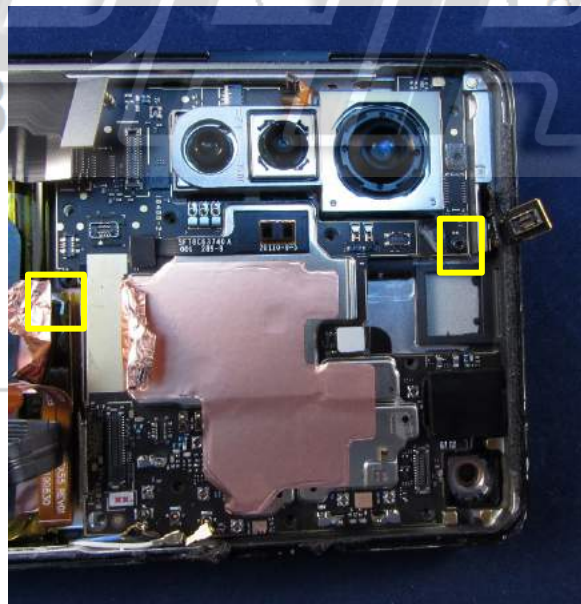


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

20. Use the flat end of the Blackstick to gently lift the Main PCB as shown.

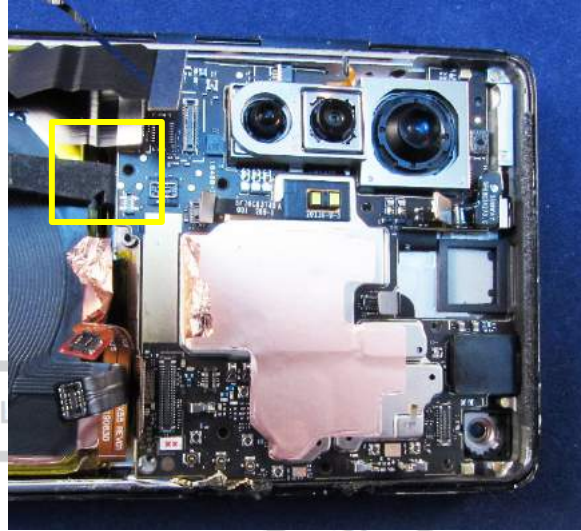

21. Remove the Main PCB from the pocket on the Front Housing.




Thermal Pad Removal

NOTE

After you remove the Thermal Pad, you cannot reuse it.



Use the Tweezers to remove the Thermal Pad from the rear of the Small Rear-Facing Imager.

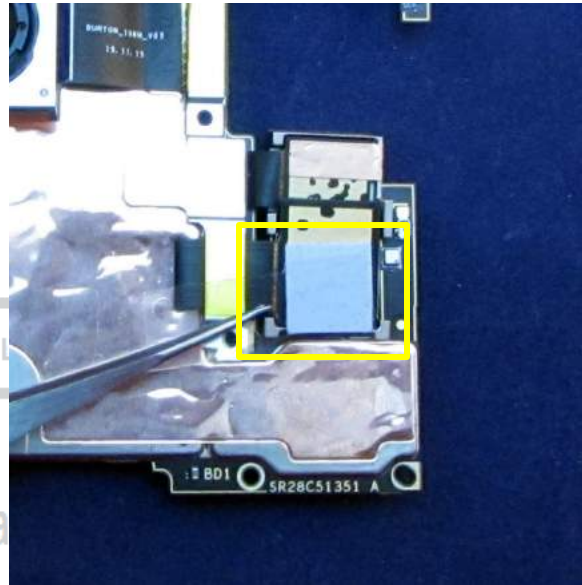

Imager Bracket Removal

NOTE

The Imager Bracket can be recovered and reused after removal.



1. Use the Torx Driver and T3 Torx Bit to remove the silver Machine Screw from the Imager Bracket.




NOTE

After you remove the Machine Screw, you cannot reuse it.



2. Use the flat end of the Blackstick to disengage the Imager Bracket from the Main PCB.

3. Use the Tweezers to remove the Imager Bracket from the Main PCB.

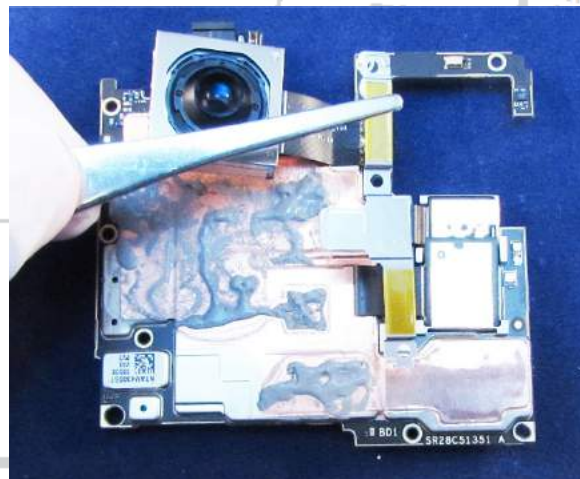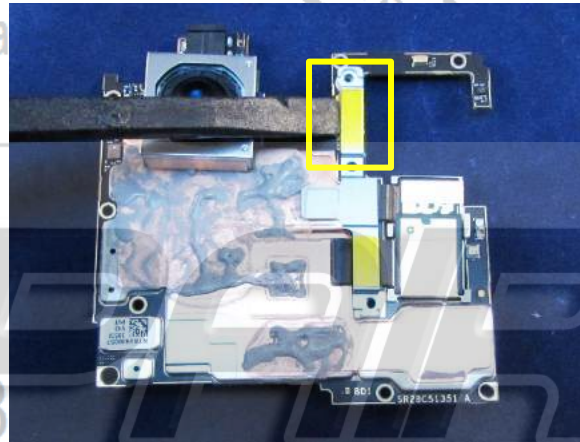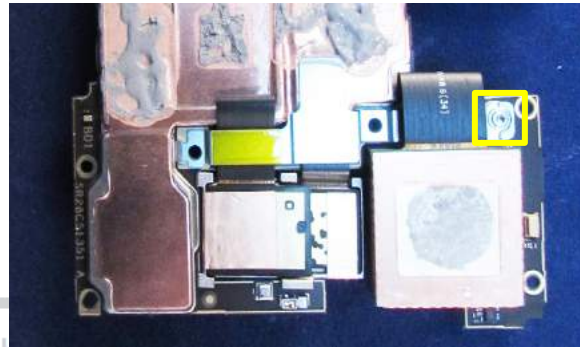



Rear-Facing Imager Removal

NOTE

The Rear-Facing Imagers can be recovered and reused after removal.




1. Use the flat end of the Blackstick to disengage the Large Rear-Facing Imager BtB Connector from the Main PCB.
2. Use the Tweezers to remove the Large Front-Facing Imager from the Main PCB.
3. Use the flat end of the Blackstick to disengage the two BtB Connectors on the Small Rear-Facing Imager from the Main PCB as shown.

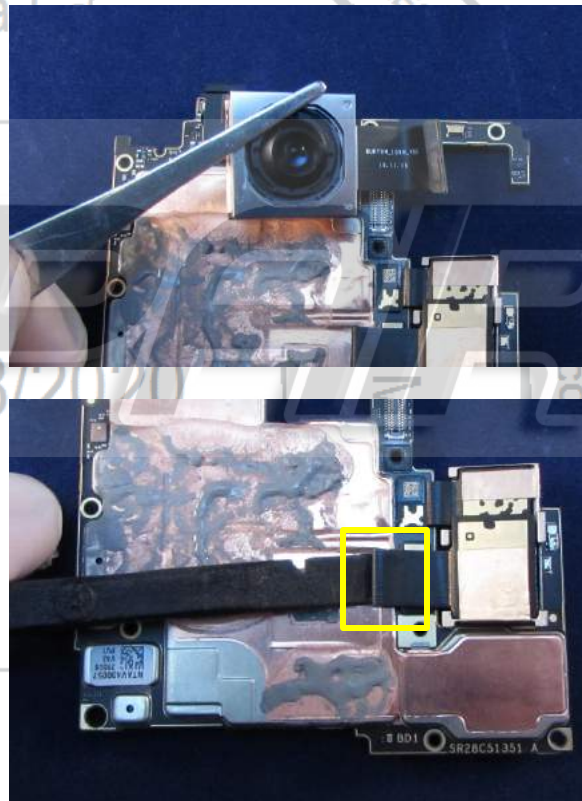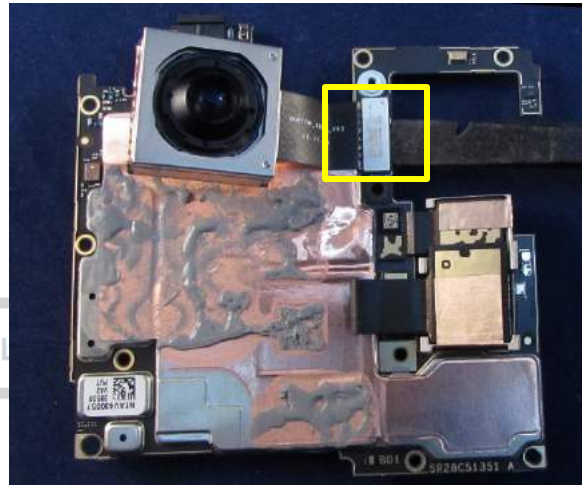

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

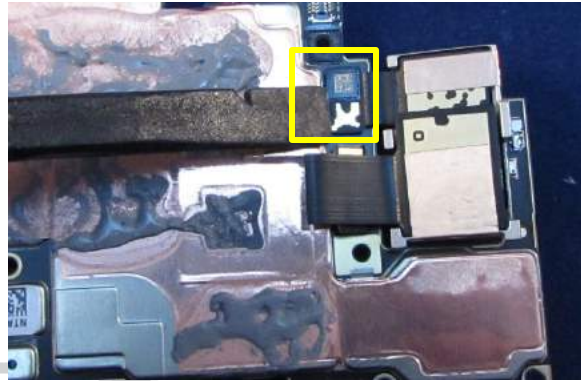

4. Use the Tweezers to remove the Small Rear-Facing Imager from the Main PCB.



Copper Foil Heat Spreader Removal


NOTE

After you remove the Copper Foil Heat Spreaders, you cannot reuse them.




NOTE

Instead of removing the Rear Copper Foil Heat Spreader, you may use the flat end of the Blackstick and ISP alcohol to remove the Thermal Grease from the Copper Foil Heat Spreader. The Thermal Grease is highlighted in the photo.

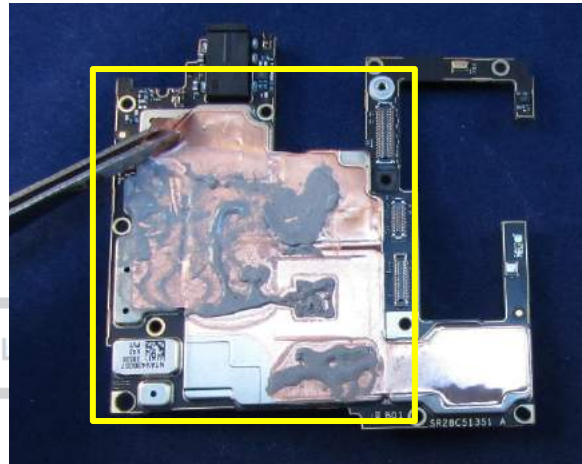

1. Use the Tweezers to peel the Rear Copper Foil Heat Spreader from the rear of the Main PCB.
2. Use the Tweezers to peel the Front Copper Foil Heat Spreader from the front of the Main PCB.

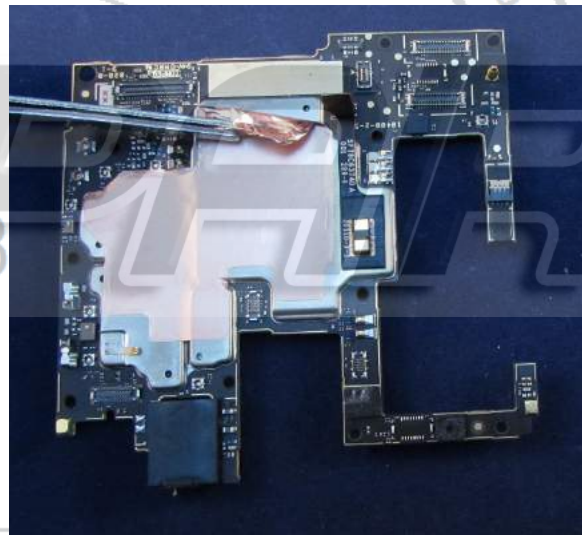


TOF Flex Removal

NOTE

After you remove the TOF Flex, you cannot reuse it.



Use the Tweezers to remove the TOF Flex from the Main PCB.

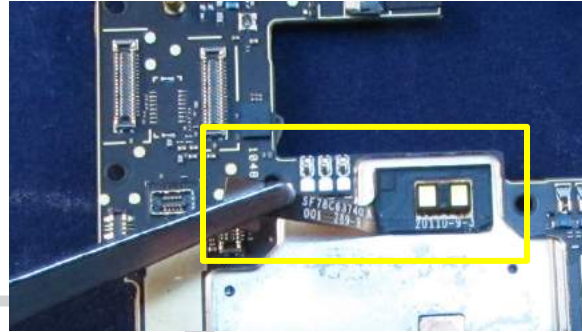


Water Detection Label (WDL) Inspection

NOTE

If the WDL is activated, the phone's warranty no longer applies.

Inspect the WDL on the Main PCB in the location shown. Examine it for signs of activation.

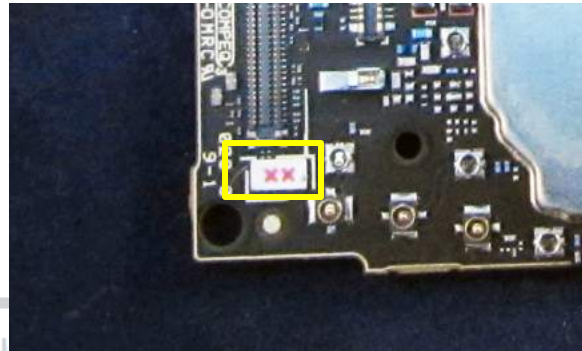


Side-Key ZIF Connector Shim Removal

NOTE

After you remove the Side-Key ZIF Connector Shim, you cannot reuse it.



Use the Tweezers to remove the Side-Key ZIF Connector Shim from the Main PCB.

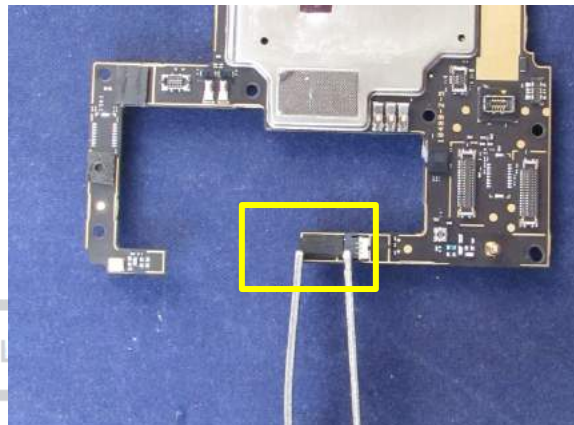



Main PCB Pad Removal

NOTE

After you remove the Main PCB Pad, you cannot reuse it.



Use the Tweezers to remove the Main PCB Pad from the Main PCB in the location shown.

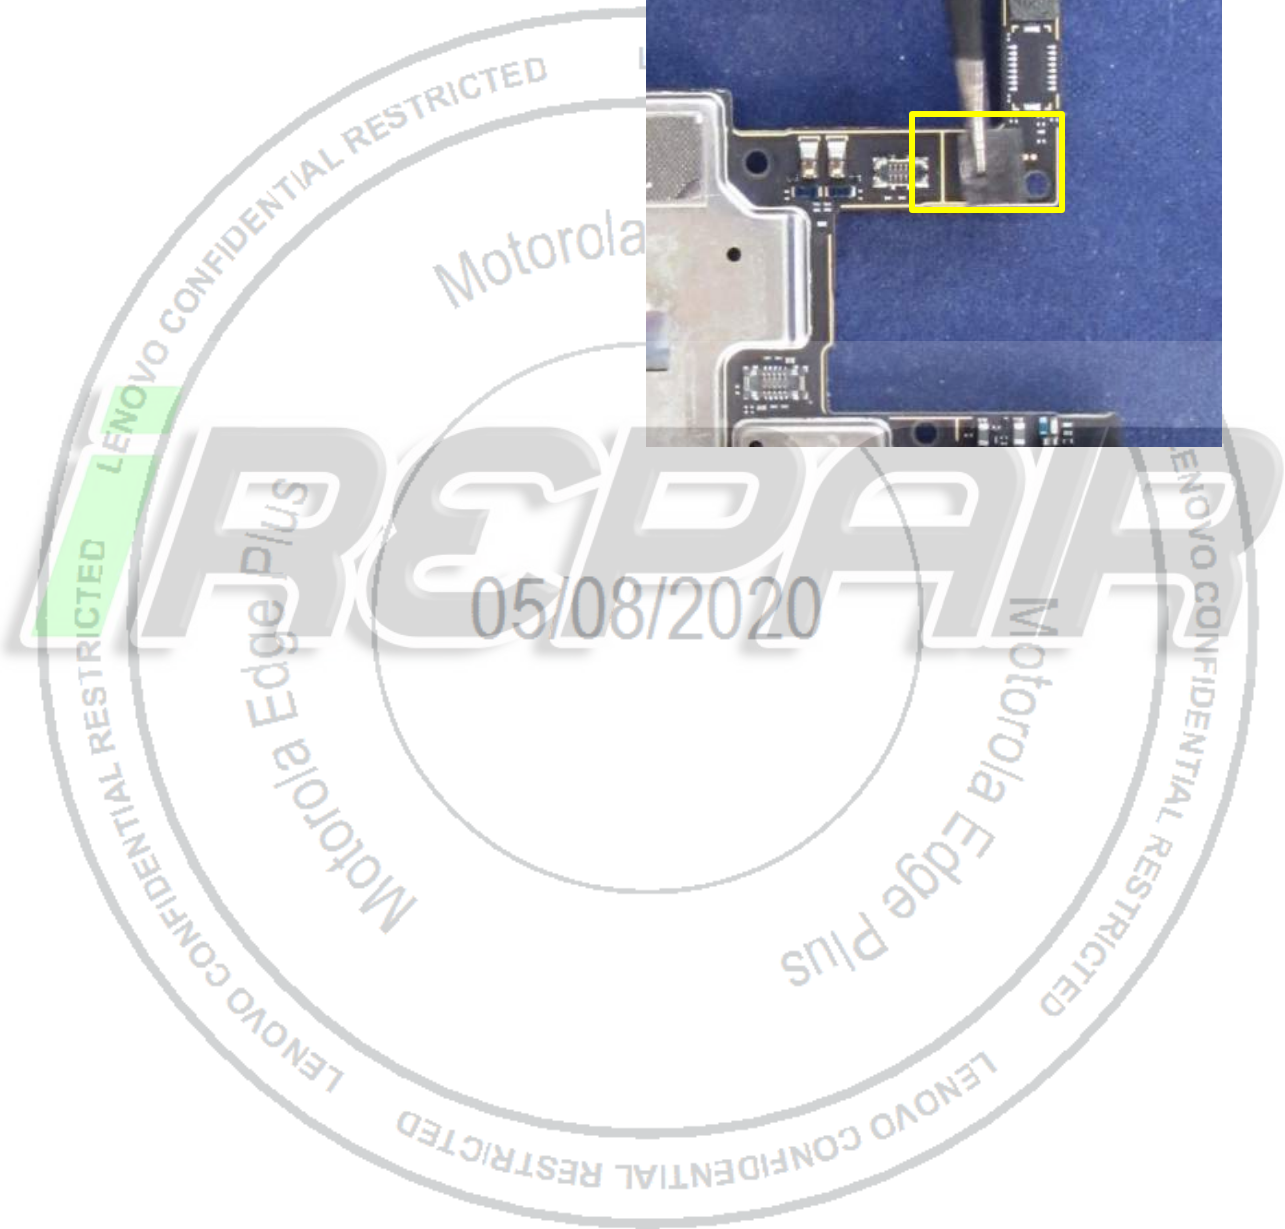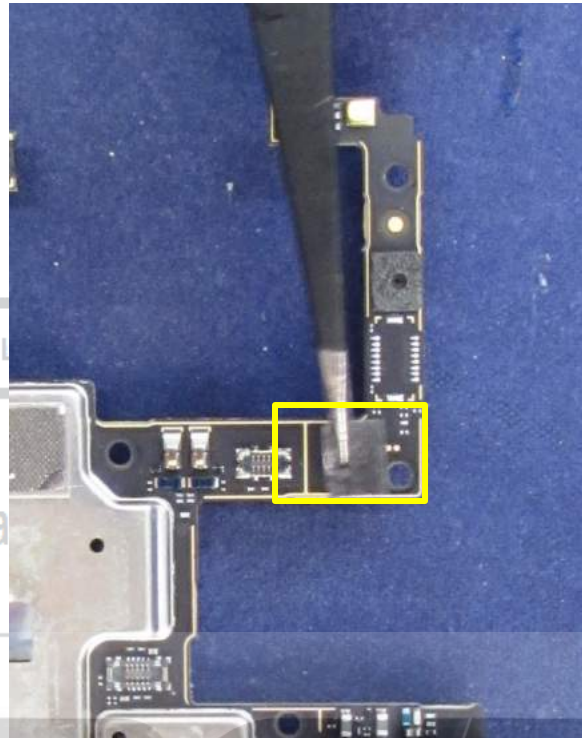



Top mmWave Antenna Adhesive Removal

NOTE

After you remove the Top mmWave Antenna Adhesive, you cannot reuse it.



Use the Tweezers to remove the Top mmWave Antenna Adhesive from the Main PCB.

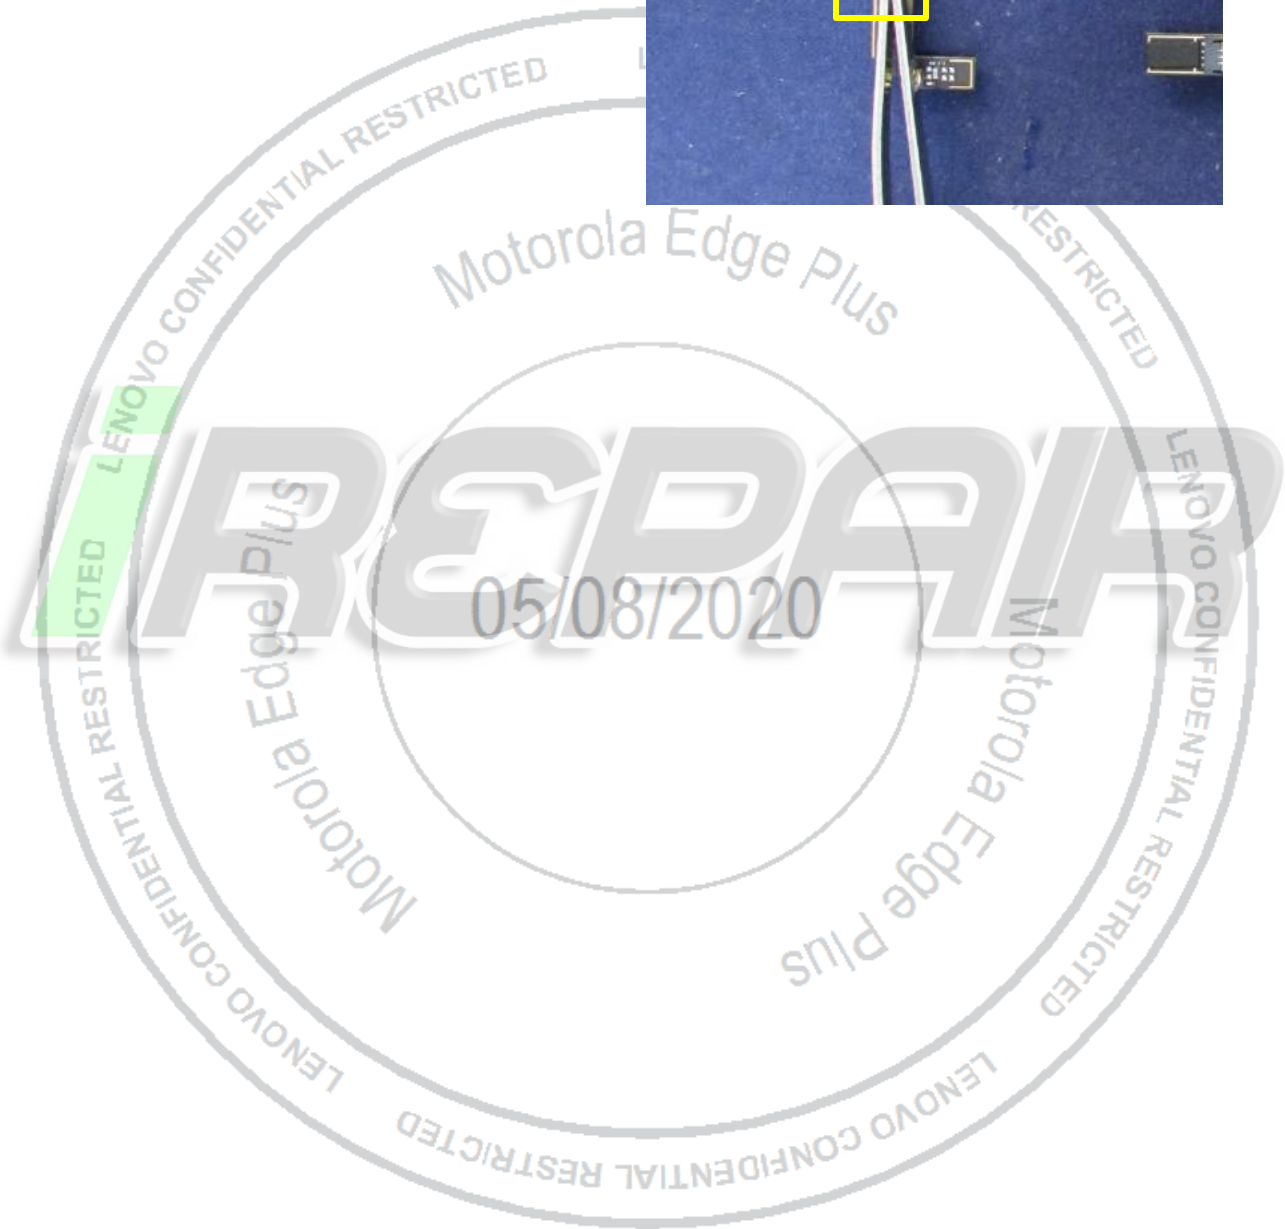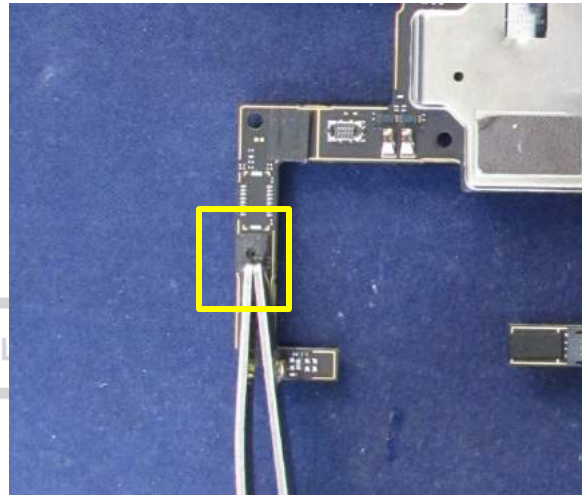


Copper Block Removal

NOTE

After you remove the Copper Blocks, you cannot reuse them.




1. Use the Tweezers to remove the First Copper Block from the rear of the PCB.

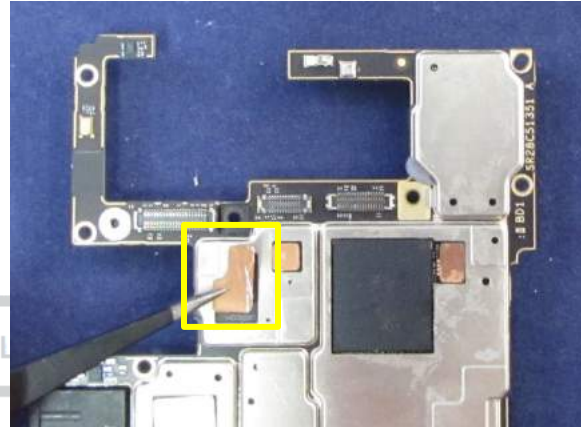

2. Use the Tweezers to remove the Second Copper Block from the rear of the PCB.



3. Use the Tweezers to remove the Third Copper Block from the rear of the PCB.

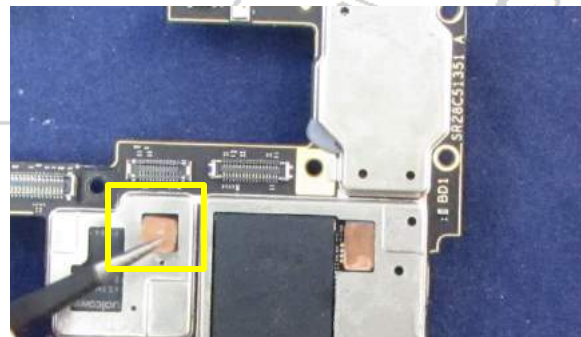

Motorola Edge Plus



Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

4. Use the Tweezers to remove the Fourth Copper Block from the rear of the PCB.



5. Use the Tweezers to remove the Small First Copper Block and Small Second Copper Block from the front of the Main PCB.

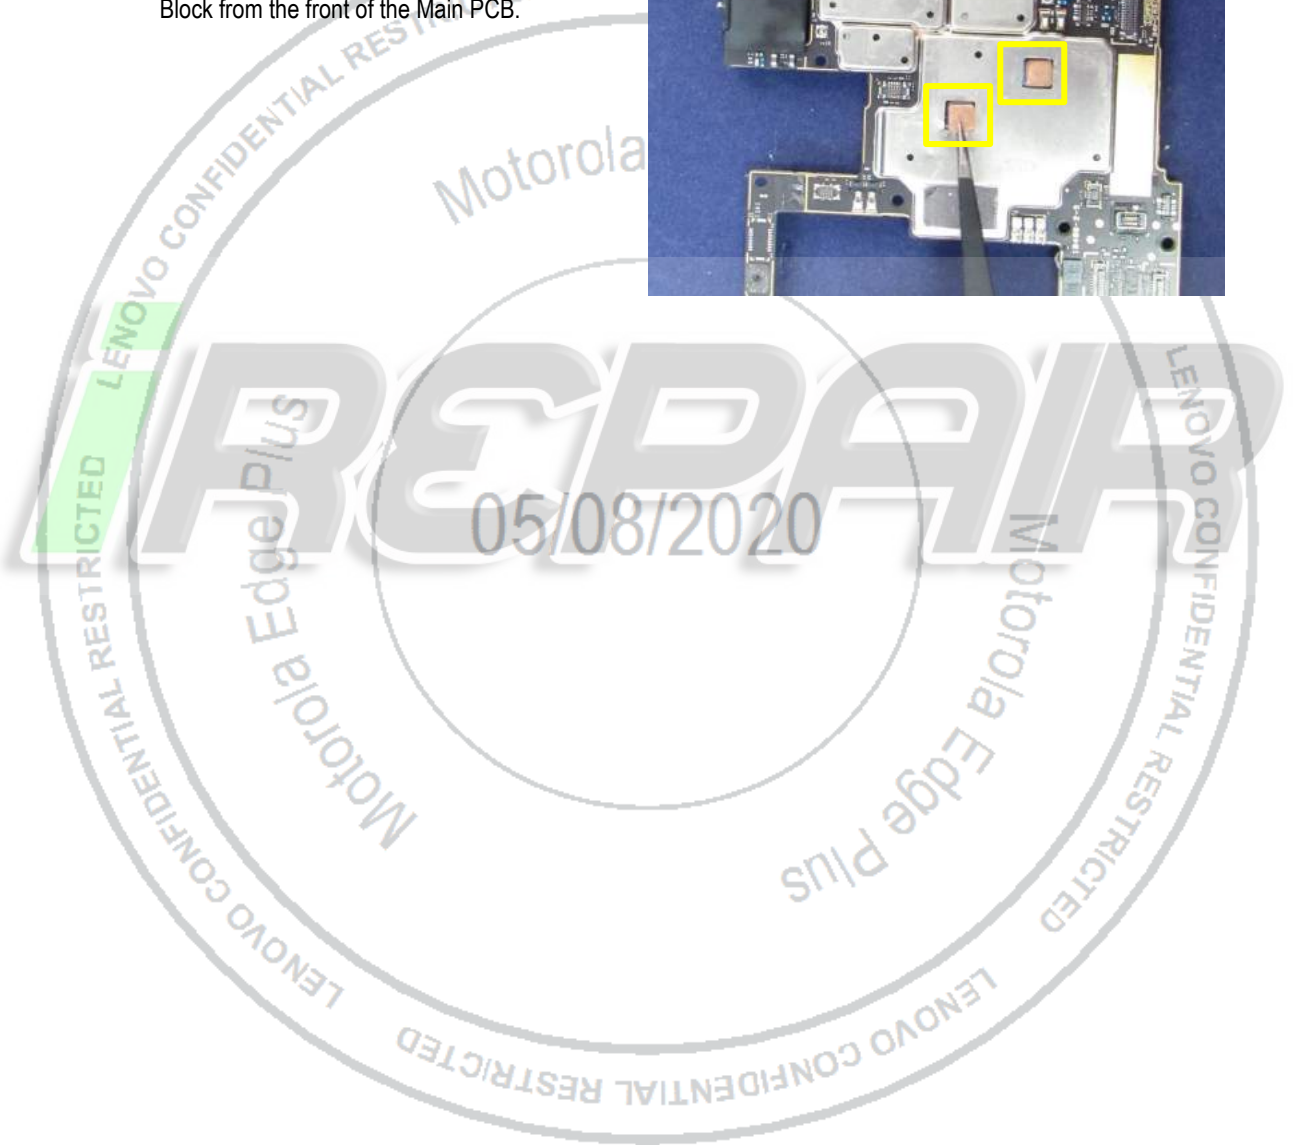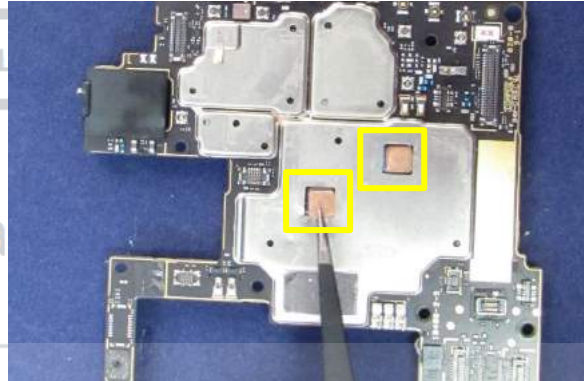


O-Ring Removal

NOTE

The O-Ring can be recovered and reused after removal.




Use the Tweezers to remove the O-Ring from the Main PCB in the location shown.

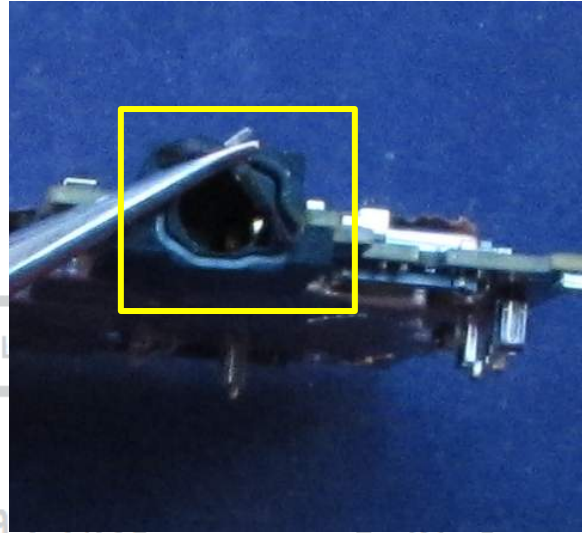


Lower PCB Removal

NOTE


The Lower PCB can be recovered and reused after removal if it is undamaged.

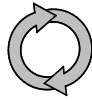

1. Use the flat end of the Blackstick to disengage the Audio Flex BtB Connector from the Lower PCB.

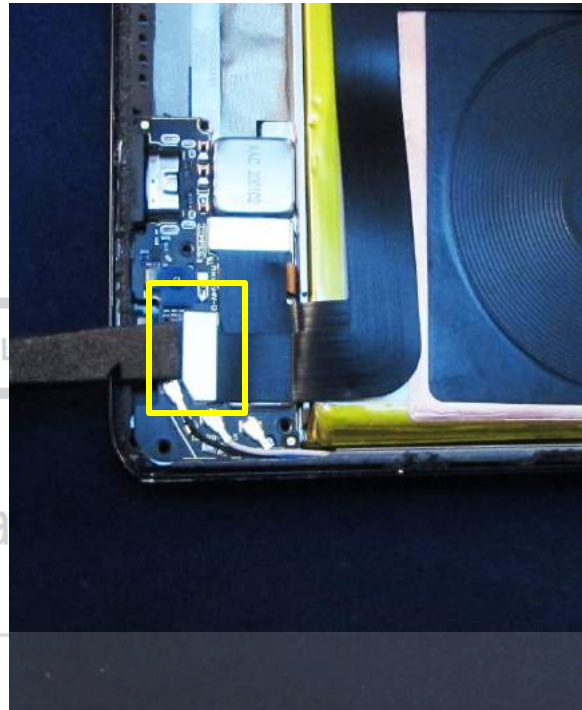

2. Use the flat end of the Blackstick to disengage the USB Flex BtB Connector from the Lower PCB.

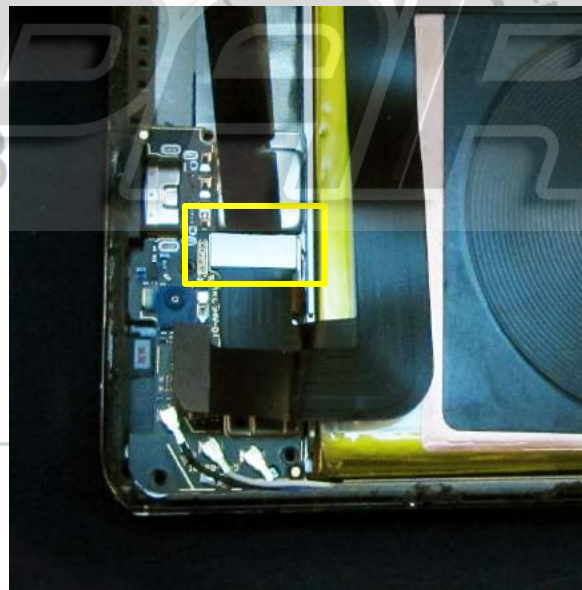

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

3. Use the Tweezers to remove the Audio Flex and the USB Flex from the Battery as shown.

NOTE


After you remove the Audio Flex and the USB Flexes, you cannot reuse them.



4. Use the flat end of the Blackstick to disengage the Fingerprint Sensor (FPS) BtB Connector from the Lower PCB.





5. Use the pointed end of the Blackstick to disengage the 3 Coax Cable BtB Connectors from the Lower PCB.

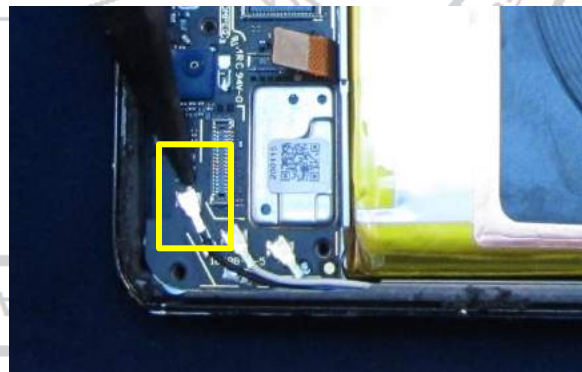

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

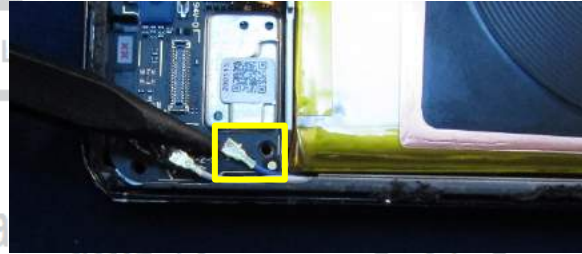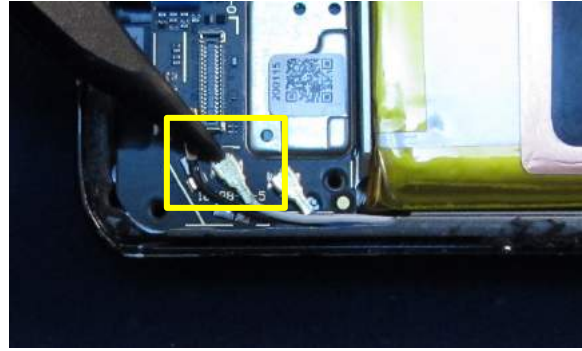

6. Use the Torx Driver and T3 Torx Bit to remove the 1 black Machine Screw from the Lower PCB.

NOTE

After you remove the Machine Screw, you cannot reuse it.




Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

7. Use the flat end of the Blackstick to gently lift the Lower PCB as shown.

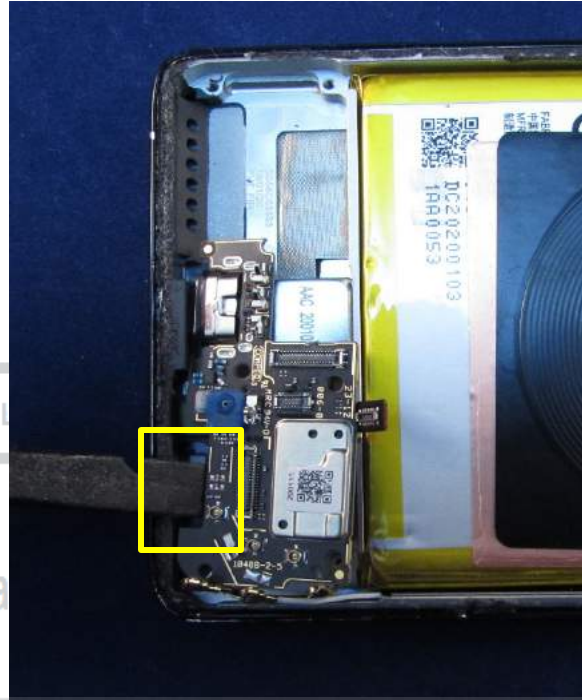

8. Remove the Lower PCB from the pocket in the Front Housing.

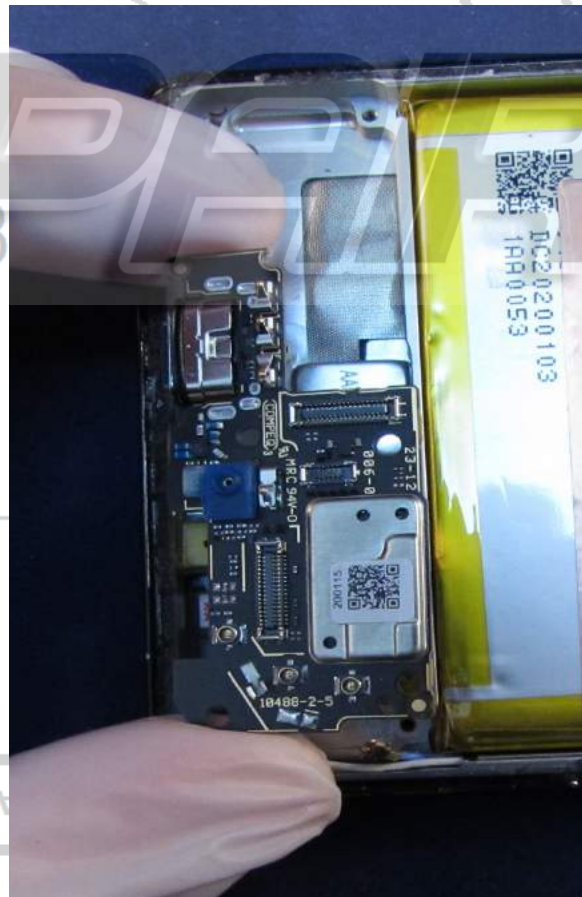


Lower PCB Grommet Removal

NOTE

The Lower PCB Grommet can be recovered and reused after removal.



Use the Tweezers to remove the Lower PCB Grommet from the Lower PCB.

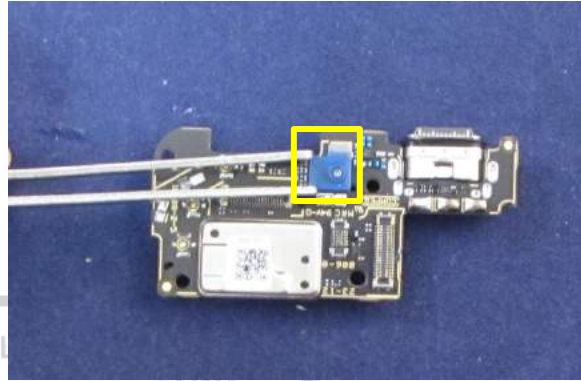


Lower PCB Microphone Grommet Removal

NOTE

After you remove the Lower PCB Microphone Grommet, you cannot reuse it.



Use the Tweezers to remove the Lower PCB Microphone Grommet from the Lower PCB.

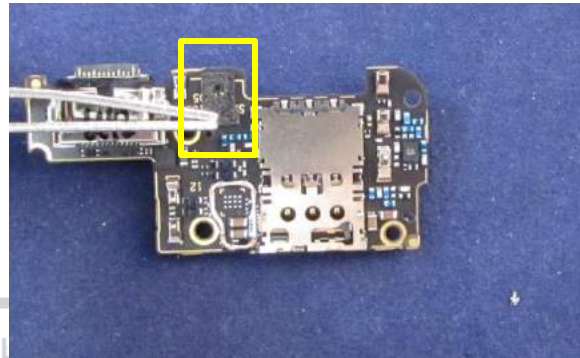


USB Grommet Removal

NOTE

The USB Grommet can be recovered and reused after removal.



Use the Tweezers to remove the USB Grommet from the Lower PCB.

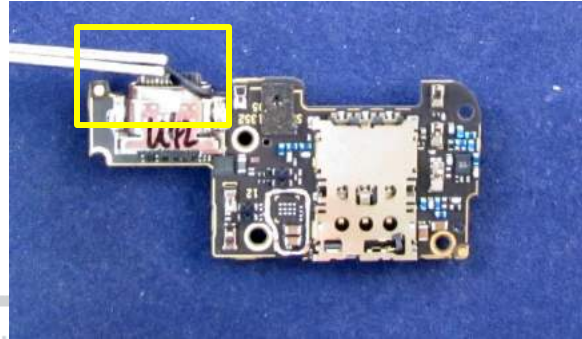

NFC Antenna Removal

NOTE

After you remove the NFC Antenna, you cannot reuse it.



Use the Plastic Tweezers to remove the NFC Antenna from the Battery.




Proximity Sensor Removal

NOTE


After you remove the Proximity Sensor, you cannot reuse it.



1. Use the flat end of the Blackstick to loosen the adhesive that holds the Proximity Sensor to the Front Housing

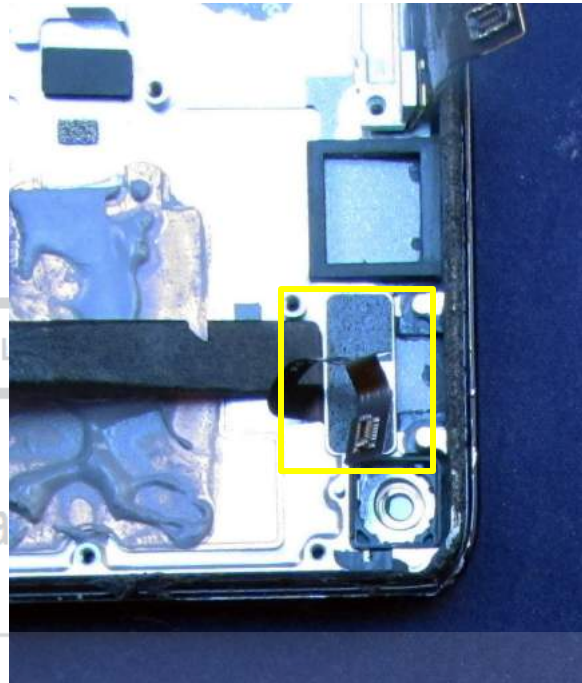


2. Use the Tweezers to remove the Proximity Sensor from the Front Housing.

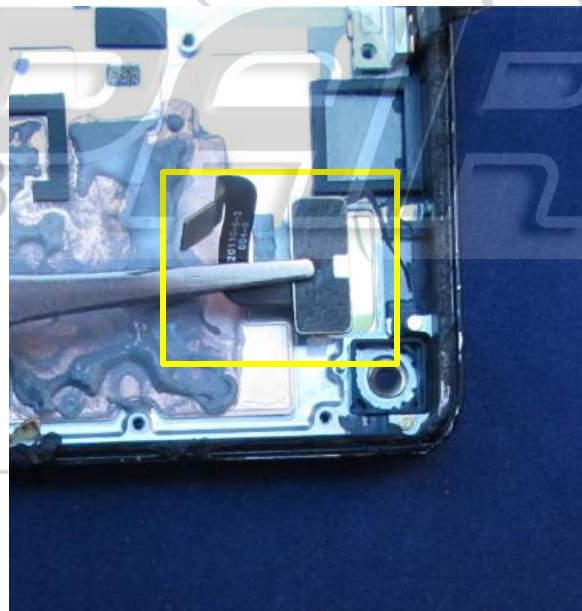

3. Use the Tweezers to remove the First Proximity Sensor Grommet from the rear of the Proximity Sensor.

NOTE


After you remove the First Proximity Sensor Grommet, you cannot reuse it.

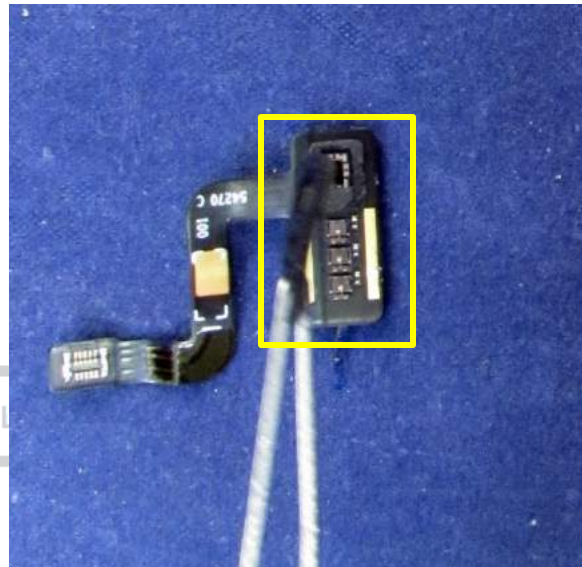

4. Use the Tweezers to remove the Second Proximity Sensor Grommet from the Proximity Sensor.

NOTE

After you remove the Second Proximity Sensor Grommet, you cannot reuse it.

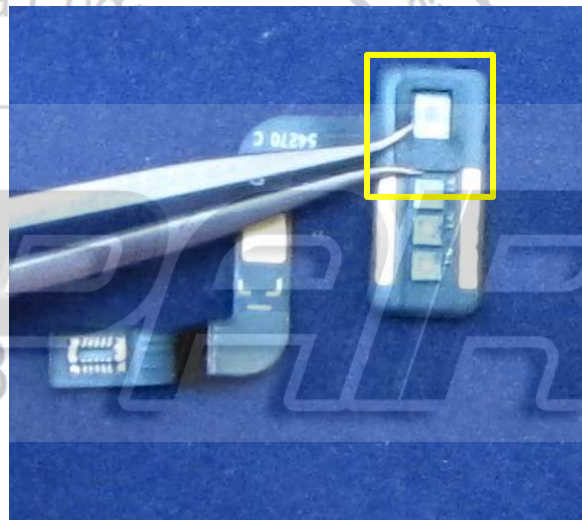


Top mmWave Antenna Removal

NOTE


The Top mmWave Antenna can be recovered and reused after removal.



1. Use the flat end of the Blackstick to loosen the adhesive holding the Top mmWave Antenna Bracket to the Front Housing.

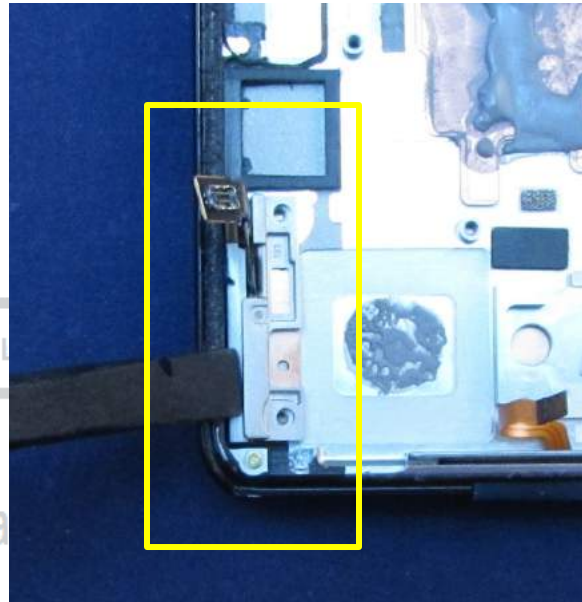

2. Use the Tweezers to remove the Top mmWave Antenna Bracket from the Front Housing.

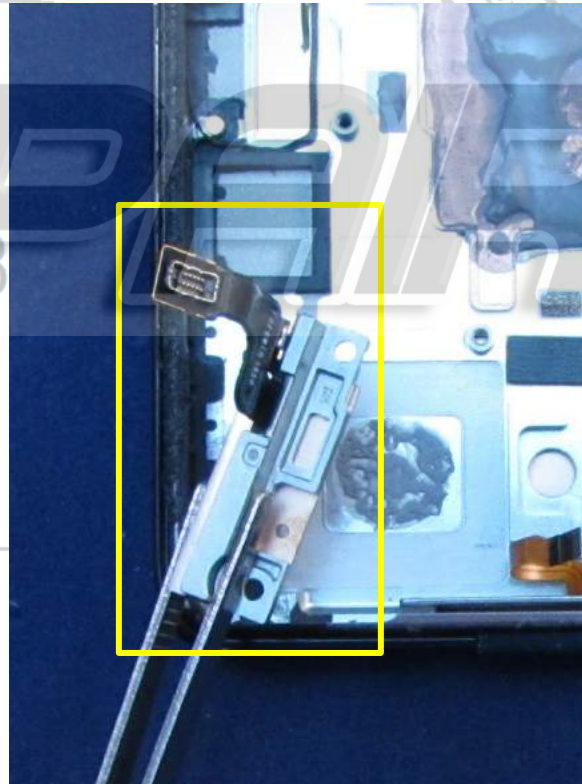

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

3. Use the Tweezers to separate the Top mmWave Antenna Bracket from the Top mmWave Copper Plate as shown.

NOTE

After you remove the Top mmWave Copper Plate, you cannot reuse it.




Side-Key Flex Removal

NOTE

The Side-Key Flex can be recovered and reused after removal.



1. Use the Torx Driver and T3 Torx Bit to remove the 3 black Machine Screws from the Side-Key Flex.

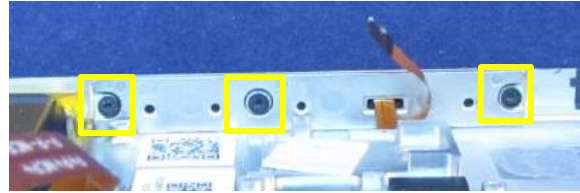

NOTE

After you remove the Machine Screws, you cannot reuse them.



2. Use the flat end of the Blackstick to separate the Side-Key Flex from the pocket in the Front Housing as shown.




Side Key Removal

NOTE

The Side Keys can be recovered and reused after removal.



1. Use the pointed end of the Blackstick to push the Volume Key through the recess in the Front Housing as shown.
2. Use the Tweezers to remove the Volume Key from the pocket in the Front Housing.
3. Use the pointed end of the Blackstick to push the Power Key through the recess in the Front Housing as shown.
4. Use the Tweezers to remove the Power Key from the pocket in the Front Housing.

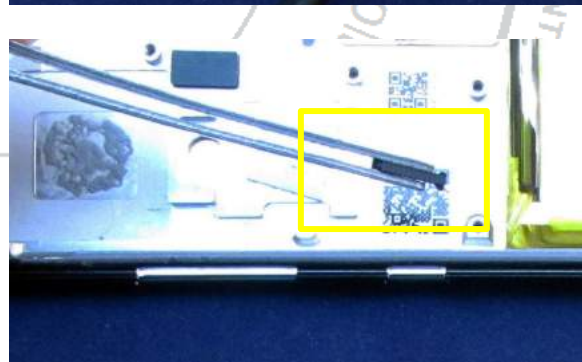

Battery Removal

/// WARNING ///

Failure to adhere to Safety Critical Note(s) may increase risk of rupture, burning, or failure to function safely when used by the customer. Refer to the Battery Safety Guidelines.

// CAUTION //

Handle the Battery Pack with care. If dropped to the floor, it may be internally damaged and must be scrapped.

Ensure Battery and its insulation are not damaged (e.g. scratched, dented, punctured) prior to and throughout assembly.

Prior to assembly, ensure Battery edges and surfaces are not dented or deformed, and that fixtures and parts that will contact the Battery are free of foreign material.

Ensure screws and screwdrivers do not contact the Battery.

NOTE

After you remove the Battery, you cannot reuse it.



1. Use the Thin Plastic Spudger to cut the Battery Adhesive where the Battery adheres to the Front Housing.



2. Use your fingers to remove the Battery from the phone.




Foam Pad Removal

NOTE

After you remove the Foam Pad, you cannot reuse it.



Use the Tweezers to remove the Foam Pad from the Front Housing.

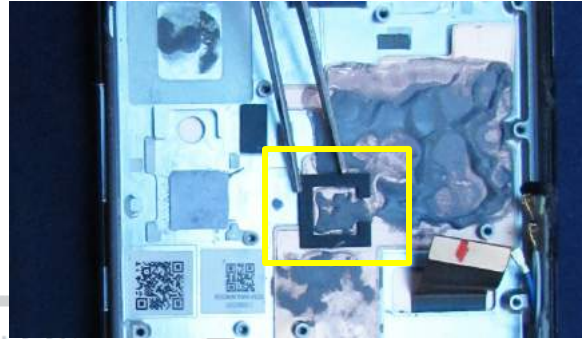

Battery Copper Foil Heat Spreader Removal

NOTE

After you remove the Battery Foil Copper Heat Spreader, you cannot reuse it.



Use the Tweezers to remove the Battery Copper Foil Heat Spreader from the pocket in the Front Housing.



Copper Plate Removal

NOTE


After you remove the Copper Plate, you cannot reuse it.



NOTE

Instead of removing the Copper Plate, you may use the flat end of the Blackstick and ISP alcohol to remove the Thermal Grease from the Copper Plate. The Thermal Grease is highlighted in the photo.

Use the Thin Plastic Spudger to cut the adhesive that holds the Copper Plate to the Front Housing.

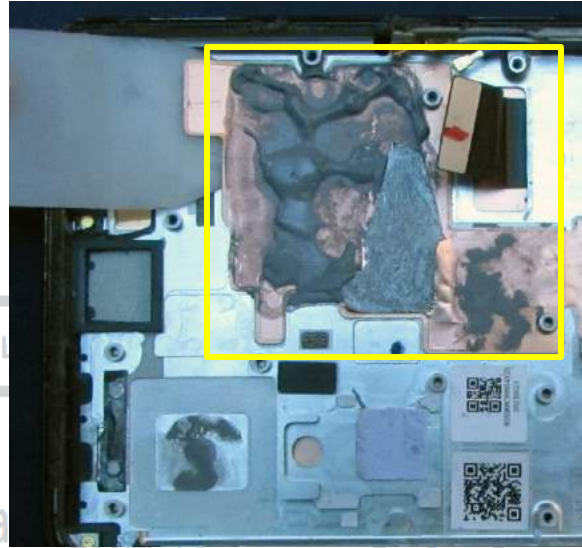

Coax Cable Removal

NOTE


The Coax Cables can be recovered and reused after removal if they are undamaged.



1. Use the Tweezers to remove the Coax Cable Bracket from the pocket of the Front Housing as shown.
2. Use the Tweezers to remove the Coax Cable Tape from the rear of the Coax Cable Bracket.

NOTE

After you remove the Coax Cable Tape, you cannot reuse it.

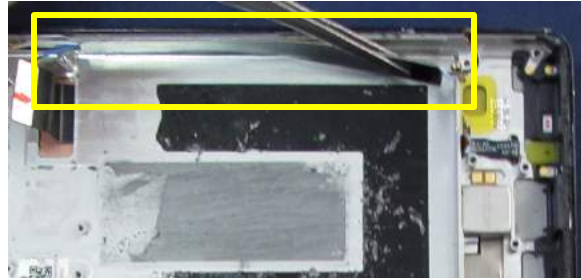


Vibrator Removal

NOTE

After you remove the Vibrator, you cannot reuse it.



Use the pointed end of the Blackstick to remove the Vibrator from the pocket in the Front Housing.

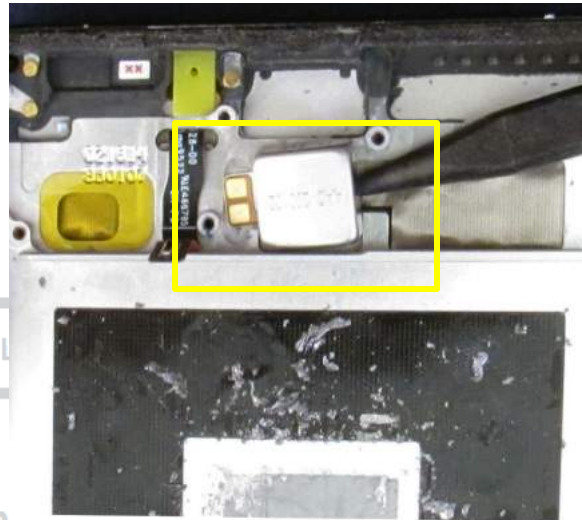


Microphone Grommet Removal

NOTE

After you remove the Microphone Grommet, you cannot reuse it.



Use the Tweezers to remove the Microphone Grommet from the pocket of the Front Housing.

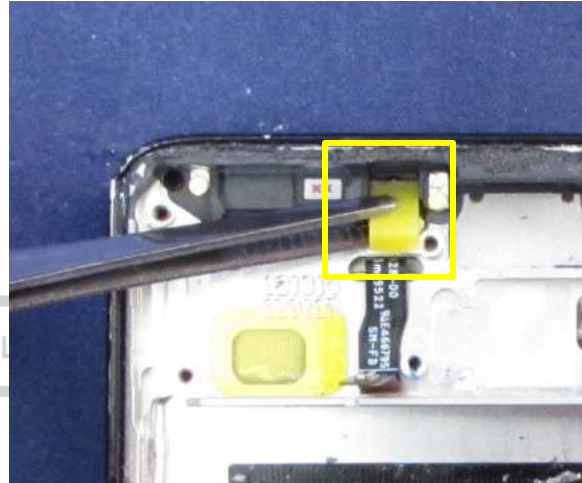

PARTS REFRESH


Tools Required for Parts Refresh

The following tools are required for parts refresh of the Motorola Edge Plus phone.

Description	Part #	Image
Blackstick	--	
Tweezers (Plastic or Plastic-Tipped)	--	--
ESD Mat and Wrist Strap	--	--
Gloves or Finger Collets	--	--
Isopropyl (ISP) Alcohol	--	--
Cleaning Pads	--	--

Front Housing Cleaning

1. Use the Blackstick and ISP alcohol to clean the Battery Adhesive from the Front Housing.

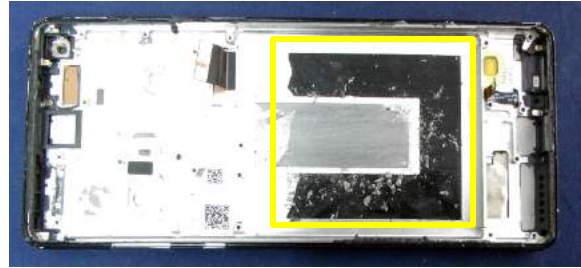


2. Use the Blackstick and ISP alcohol to clean the area where the Copper Plate was attached to the Front Housing.



3. Use the Blackstick and ISP alcohol to clean where the Battery Copper Foil Heat Spreader was attached to the Front Housing.




4. Use the Blackstick and ISP alcohol to clean where the Vibrator was attached to the Front Housing.

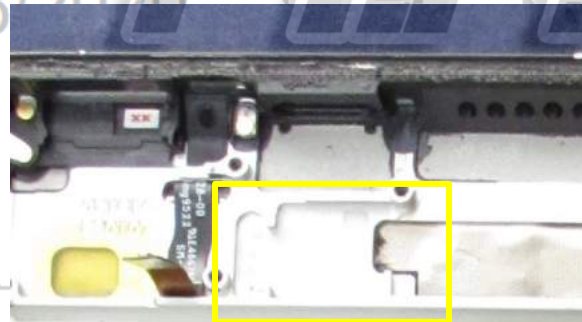


Rear Inlay Cleaning


1. Use the Blackstick and ISP alcohol to clean the edges of the Rear Inlay.

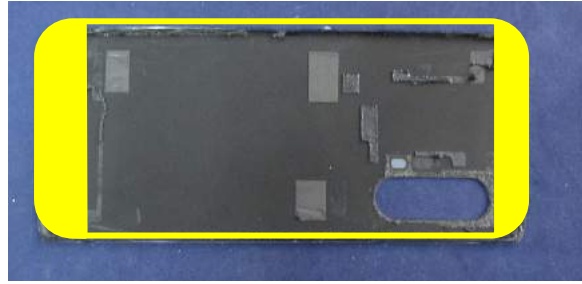

2. Use the Blackstick and ISP alcohol to clean adhesive and pads on the Rear Inlay in the locations shown.

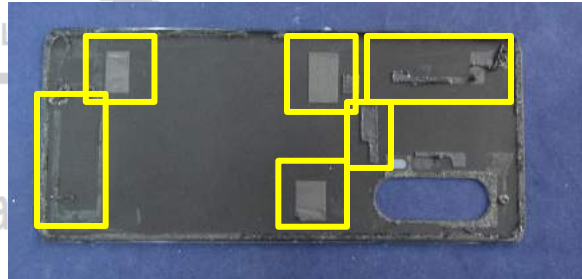


3. Use the Blackstick and ISP alcohol to clean adhesive where the rear-Facing Imager Bezel attaches to the Rear Inlay.

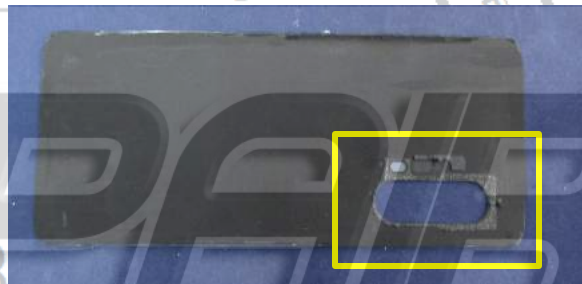

Top Carrier Cleaning

Use the Blackstick and ISP alcohol to clean the edges of the Top Carrier.

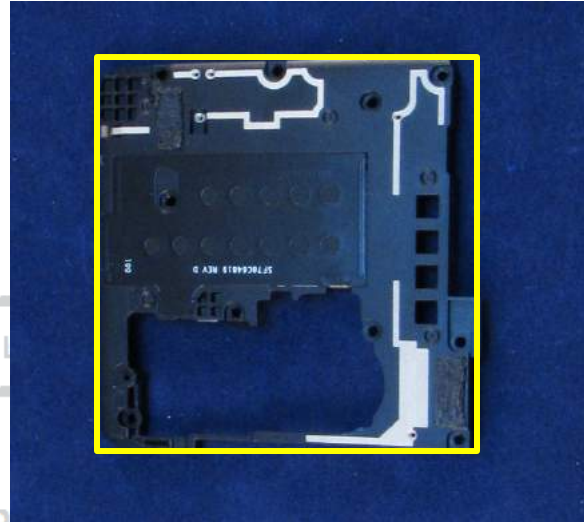


Lower Carrier Cleaning

Use the Blackstick and ISP alcohol to clean the edges of the Lower Carrier.




Rear-Facing Imager Cleaning

Use the Blackstick and ISP alcohol to clean the rear of the Large Rear-Facing Imager.

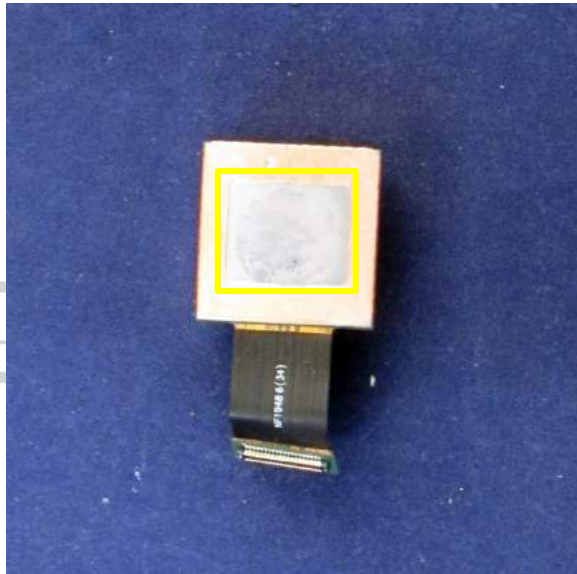

Rear-Facing Imager Bezel Cleaning

Use the Blackstick and ISP alcohol to clean the adhesive from the Rear-Facing Imager Bezel.

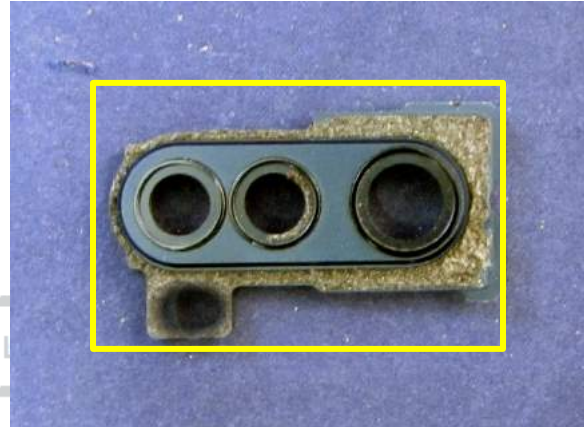


Top mmWave Antenna Cleaning

Use the Blackstick and ISP alcohol to clean the adhesive from the rear of the Top mmWave Antenna.




ASSEMBLY

Assembly Map

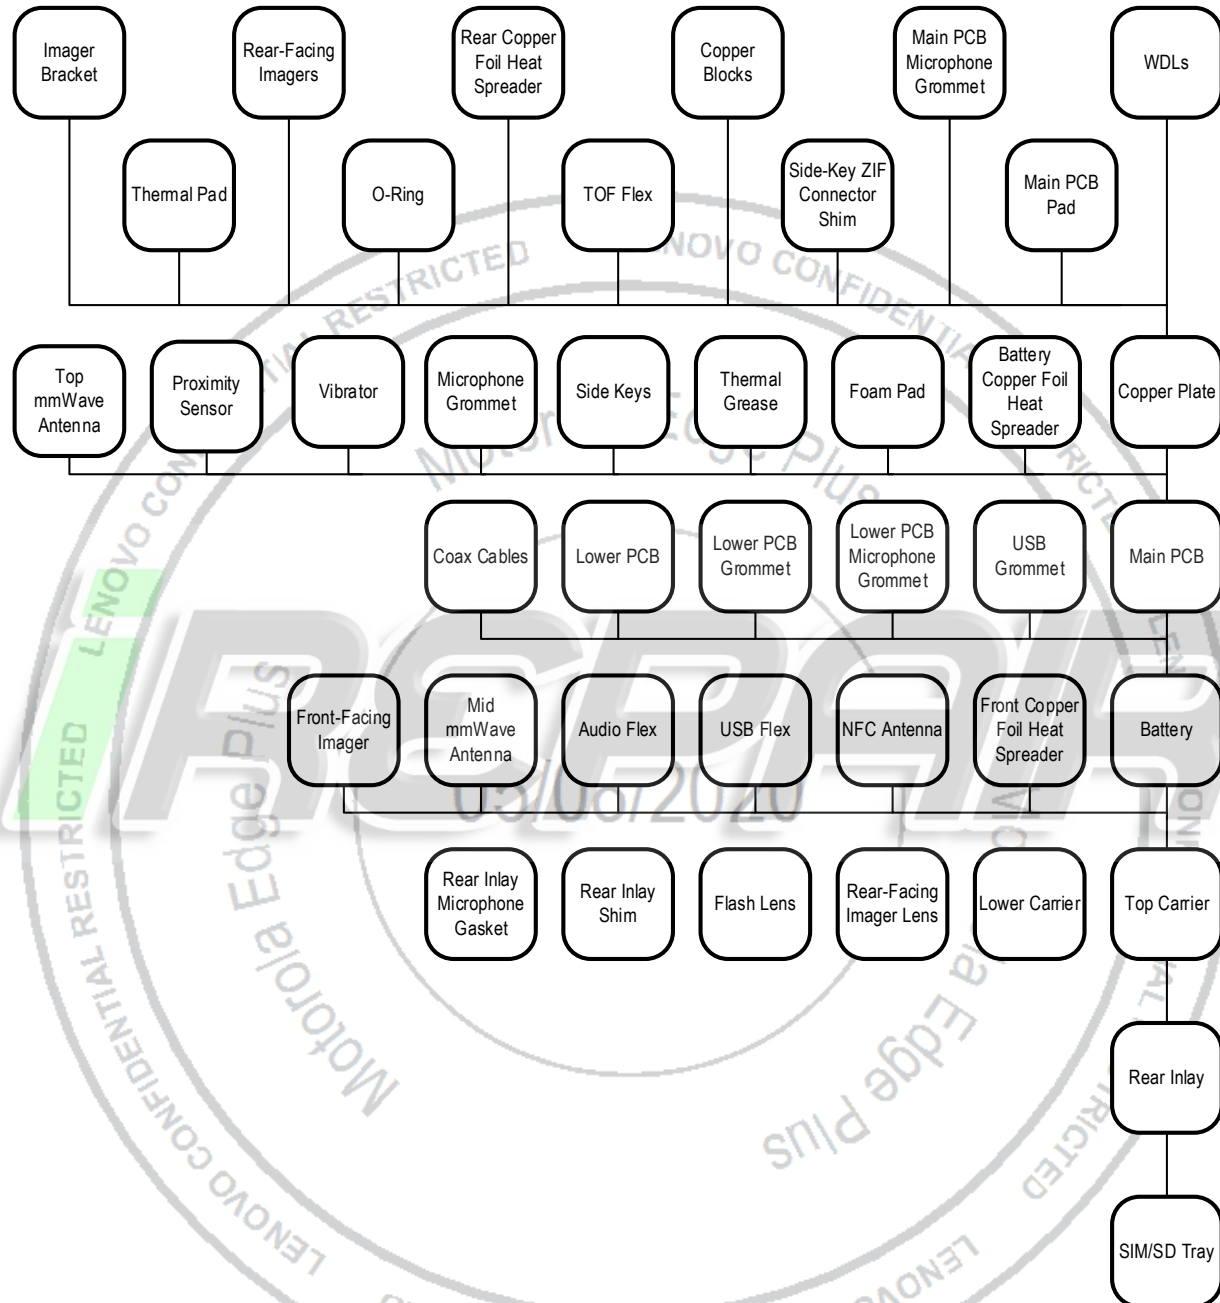

Tools Required for Assembly


The following tools are required to assemble the Motorola Edge Plus phone.

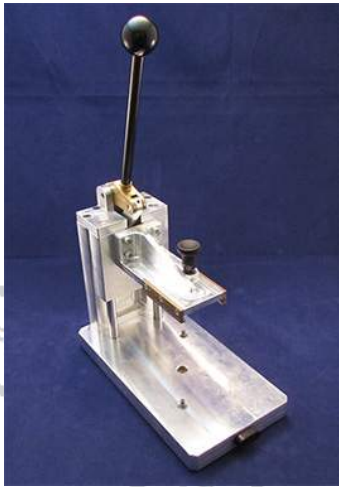Press	914B19501980	
Blackstick	--	
JCIS #0 Bit	--	
Torque Driver (Adjustable)	--	
Rear Inlay Adhesive Alignment Press	1-00-A1-10000	
Rear Inlay Press	1-00-A3-10000	

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

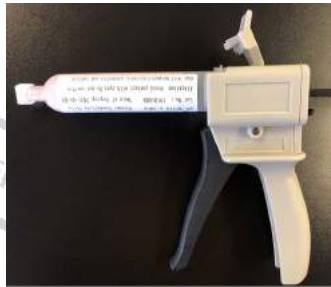Thermal Grease (Arctic, Cooler Master or equivalent)	--	
TDS SY-TP350 5ml Thermal Grease Syringe	--	
TDS SY-TP350 30ml Thermal Grease Syringe with Dispensing Tool	--	
Henkel LF350 30ml Thermal Grease Syringe with Dispensing Tool	--	
16 Gauge Needle	--	Needle Gauges for Injections Size Chart 
18 Gauge Needle	--	Needle Gauges for Injections Size Chart 
Scissors	--	

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


Manual Roller	--	
Tweezers (Plastic or Plastic-Tipped)	--	--
Tweezers (Metal)	--	--
Soldering Iron	--	--
ESD Mat and Wrist Strap	--	--
Gloves or Finger Collets	--	--




WDL Assembly

Description	Reference #
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
LBL,WATER, DETECT, 3M 5559, 0.127T, VZ	--


1. Use the Tweezers to remove a WDL from the carrier.

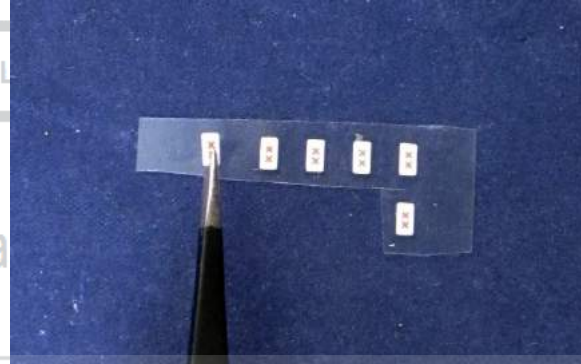

2. Use the Tweezers to place the WDL on the Main PCB in the location shown.

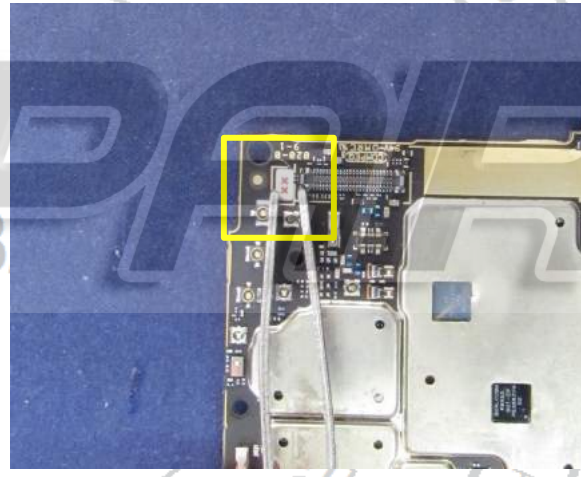

3. Use the Tweezers to remove a WDL from the carrier.

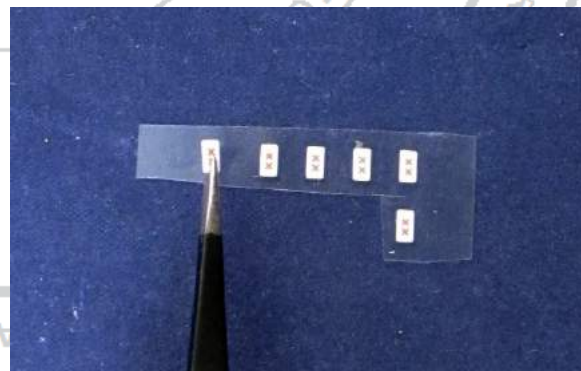

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

4. Use the Tweezers to place the WDL on the Front Housing in the location shown.




Main PCB Pad Assembly

Description	Reference #
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
DIE CUT, ADHESIVE, LCP FLEX, BURTON	--

1. Use the Tweezers to remove the Main PCB Pad from the carrier.



2. Use the Tweezers to place the Main PCB Pad onto the Main PCB in the location shown.


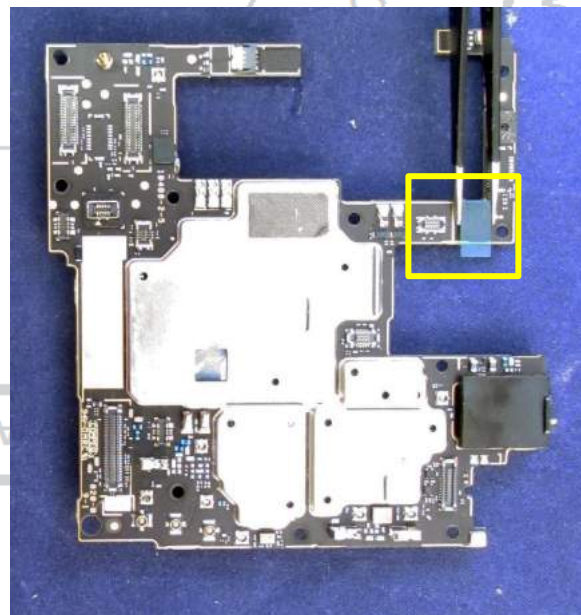


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


3. Use the Tweezers to remove the liner of the Main PCB Pad.

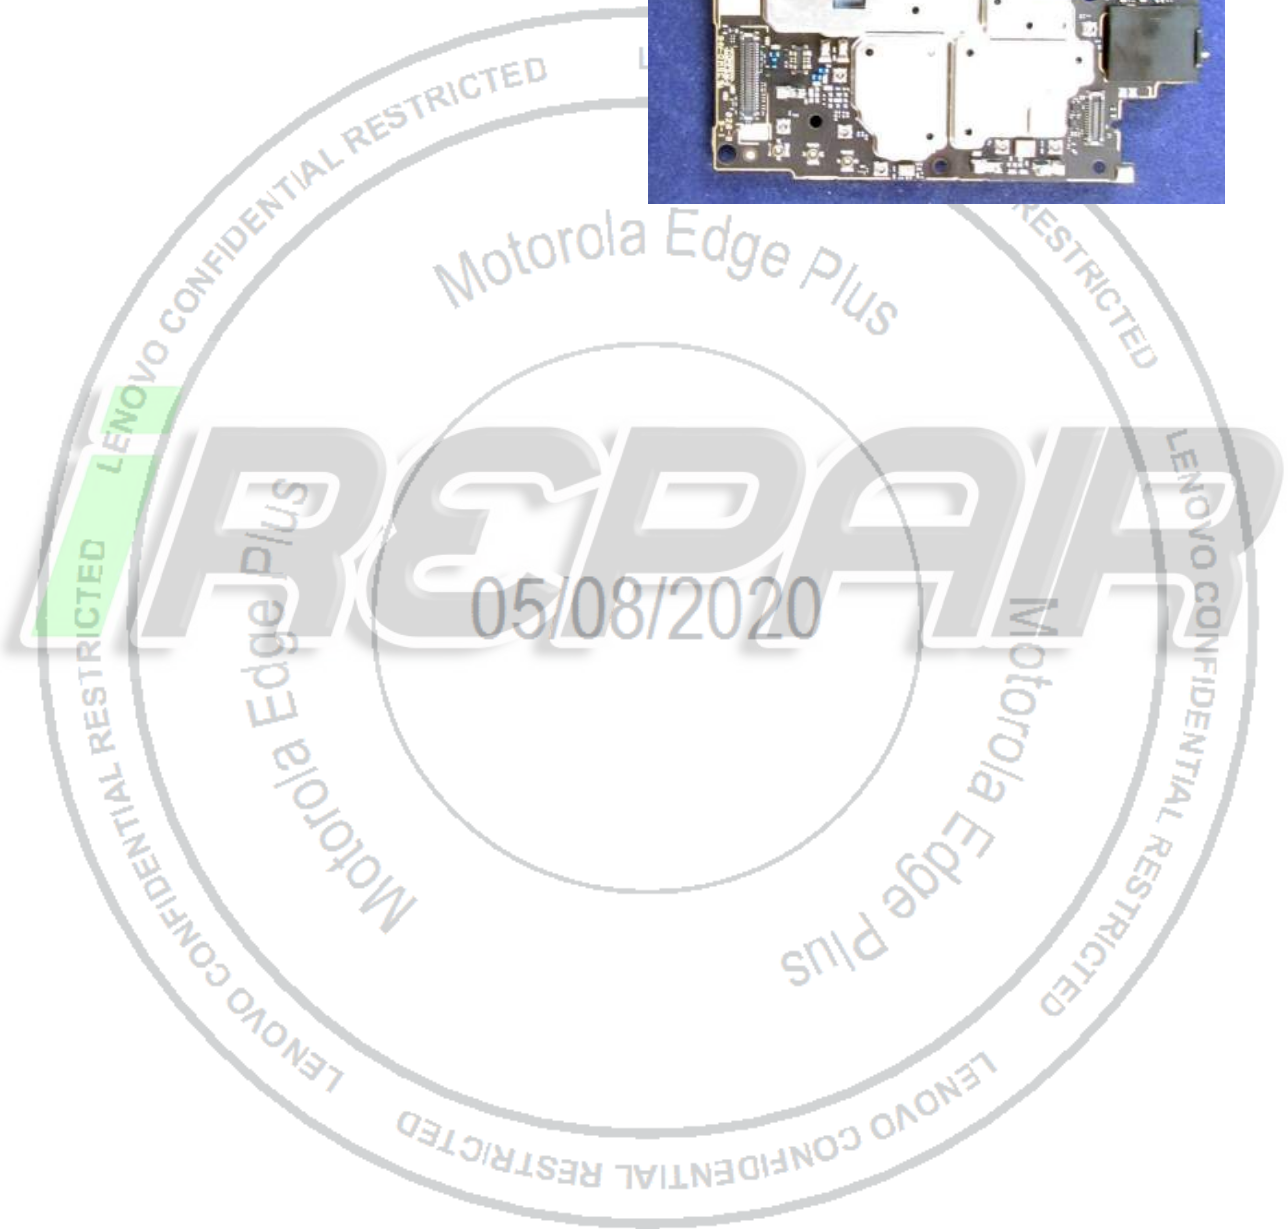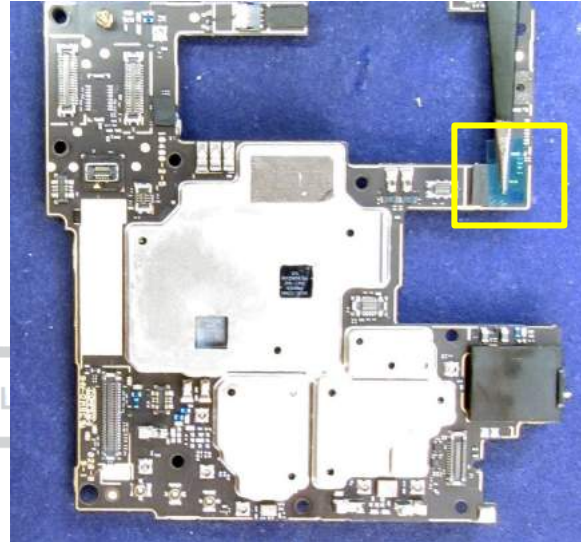


Top mmWave Antenna Adhesive Assembly

Description	Reference #
DIE-CUT, SEAL, PCB, MIC1, BURTON	13
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18


1. Use the Tweezers to remove the Top mmWave Antenna Adhesive from the carrier.

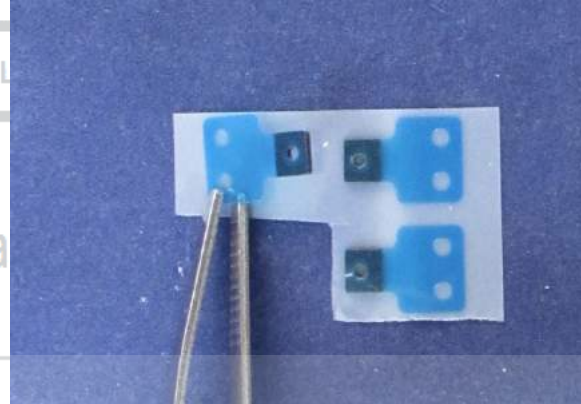

2. Use the Tweezers to place the Top mmWave Antenna Adhesive onto the Main PCB in the location shown.

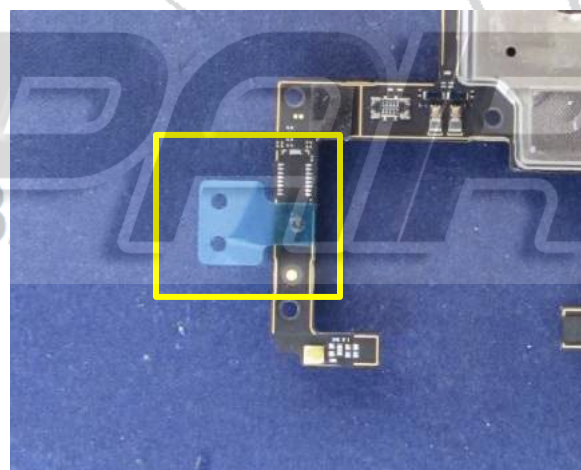

3. Use the Tweezers to remove the liner of the Top mmWave Antenna Adhesive.

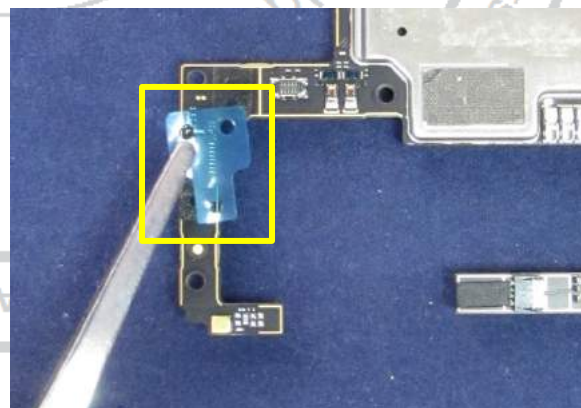


Side-Key ZIF Connector Shim Assembly

Description	Reference #
DIE CUT,SHIM, ZIF, SIDEKEY, BURTON	7
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18

1. Use the Tweezers to remove the Side-Key ZIF Connector Shim from the carrier.




2. Use the Tweezers to place the Side-Key ZIF Connector Shim onto the Main PCB above the Side-Key Flex ZIF Connector Door as shown.

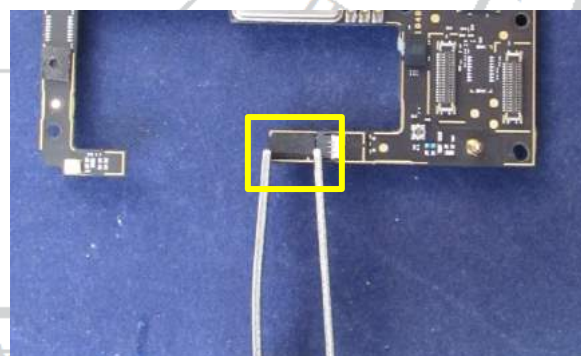

Copper Block Assembly

Description	Reference #
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
DIE CUT,SLUG,COPPER, TRANSCEIVER, BURTON	--
DIE CUT, SLUG,COPPER, AP1, BURTON	--
DIE CUT, SLUG, COPPER, CHARGING, BURTON	--
DIE CUT, SLUG, COPPER, DRIVER, BURTON	--
DIE CUT,SLUG, COPPER,MODEM, BURTON	--

1. Use the Tweezers to place the First Copper Block on the rear of the Main PCB.

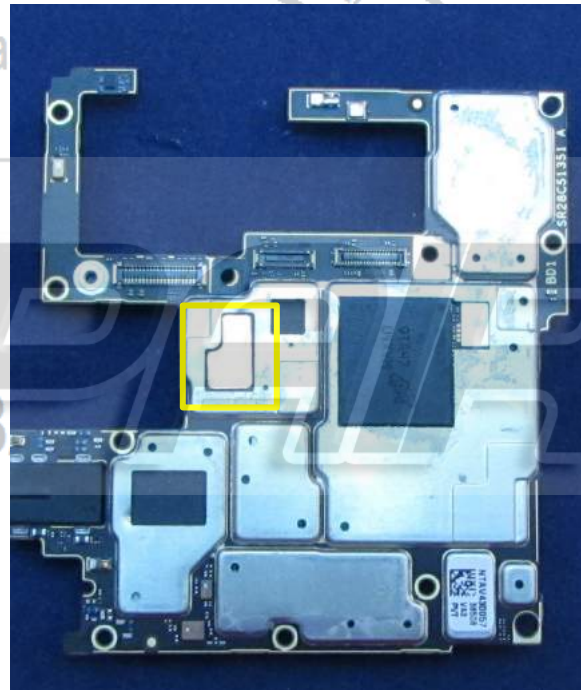


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


2. Use the Tweezers to place the Second Copper Block on the rear of the Main PCB.

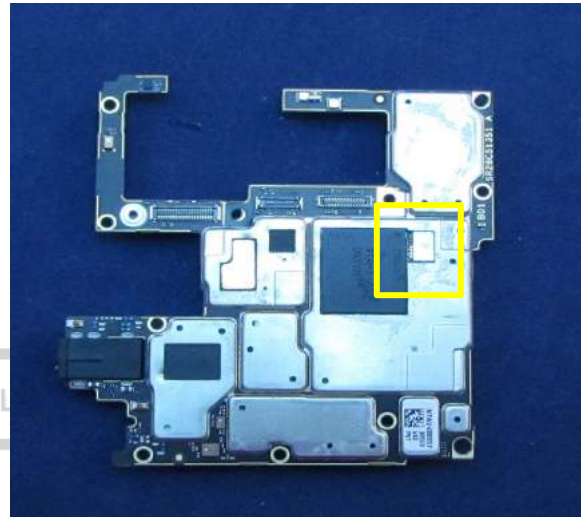

3. Use the Tweezers to place the Third Copper Block on the rear of the Main PCB.

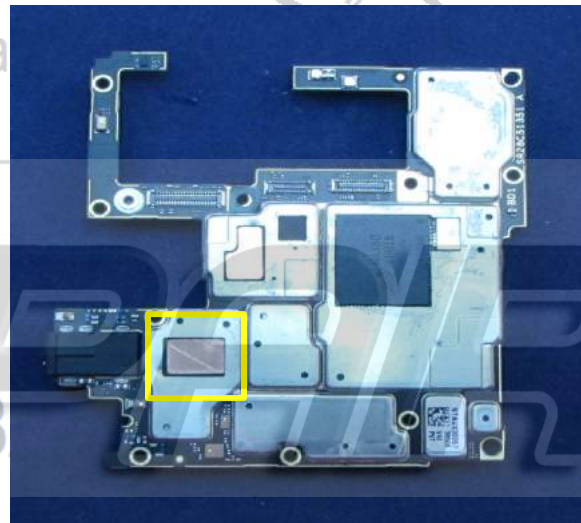

4. Use the Tweezers to place the Fourth Copper Block on the rear of the Main PCB.


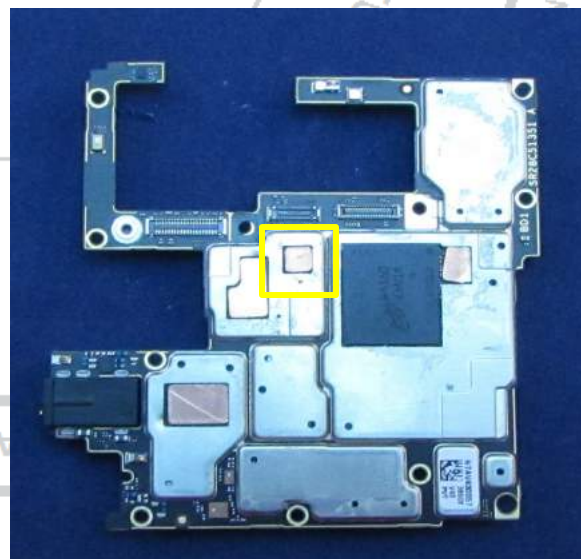


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


5. Use the Tweezers to place the First Small Copper Block and Second Small Copper Block on the front of the Main PCB.

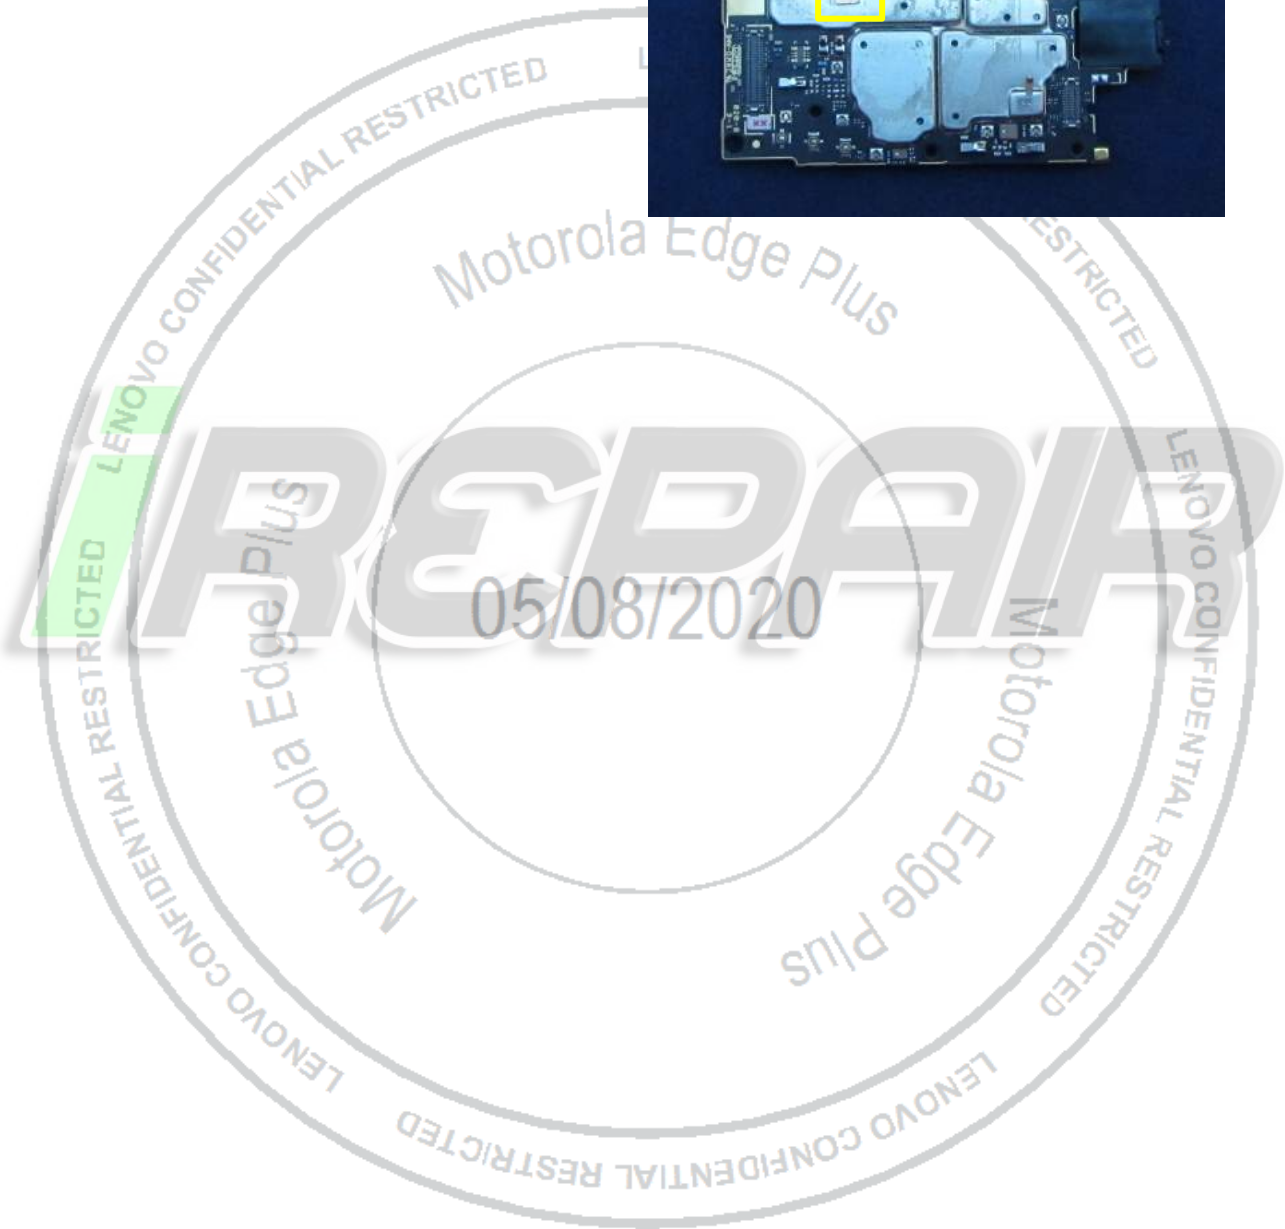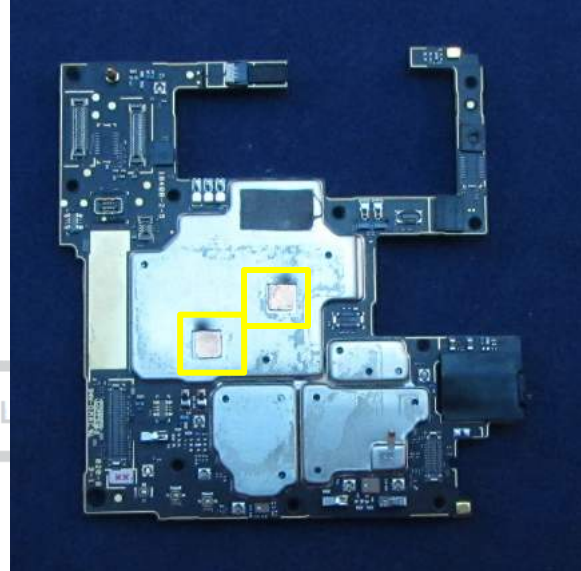

TOF Flex Assembly

Description	Reference #
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
ASSY, Flex, TOF, Burton	29


1. Use the Tweezers to remove the liner of the TOF Flex.

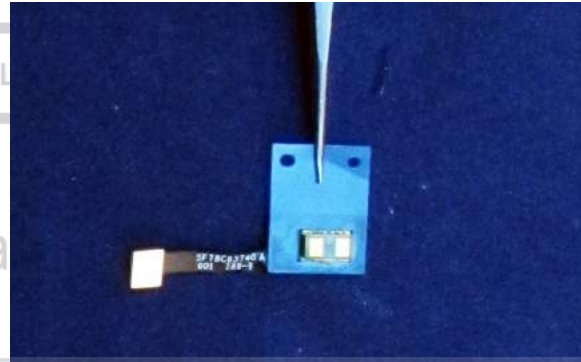

2. Use the Tweezers to remove the adhesive liner of the TOF Flex.



3. Use the Tweezers to place the TOF on the front of the Main PCB in the orientation shown.

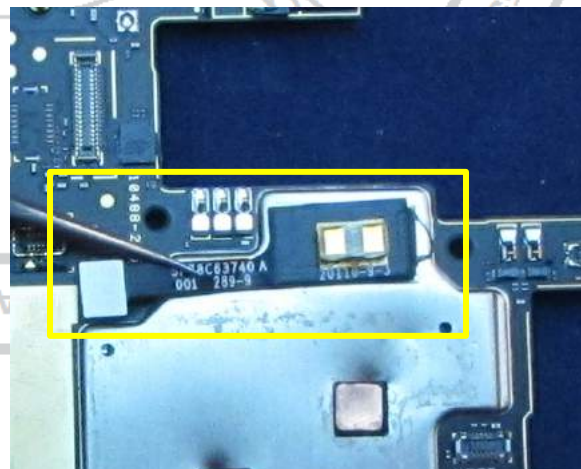


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

4. Use rolling pressure to connect the TOF Flex BtB Connector to the Main PCB.

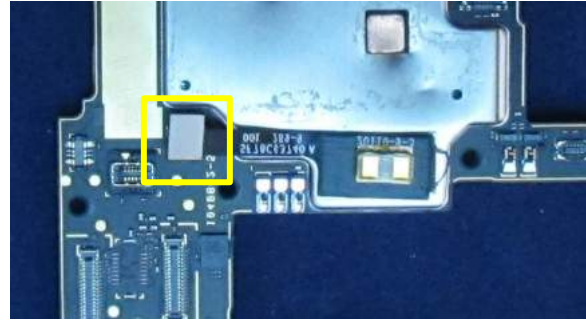

Rear Copper Foil Heat Spreader Assembly

Description	Reference #
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
HEAT SPREADER, BACK, BURTON	54

1. Use the Tweezers to remove the Rear Copper Foil Heat Spreader from the carrier.




Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

2. Use the Tweezers to place the Copper Foil Heat Spreader onto the rear of the Main PCB in the orientation shown..

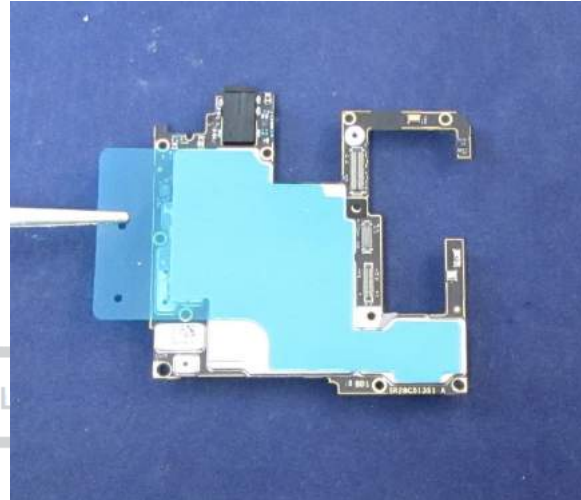


3. Use the Tweezers to remove the liner of the Rear Copper Foil Heat Spreader.

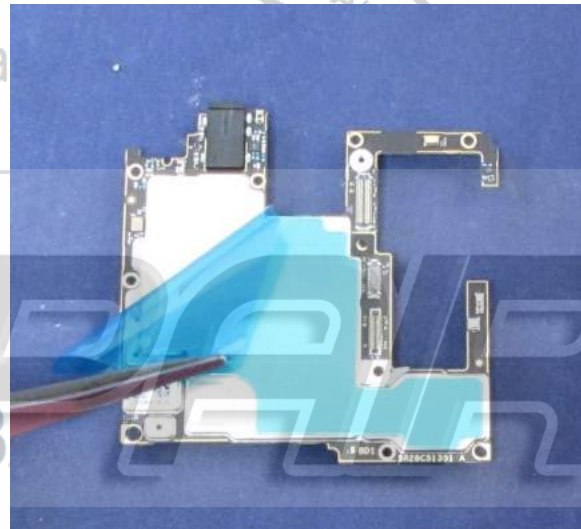

O-Ring Assembly

Description	Reference #
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
SEAL,DUST,Rio H,RUB,Rubber,O-ring,HSJ Co	44

Use the Tweezers to place the O-Ring onto the Main PCB in the location shown.

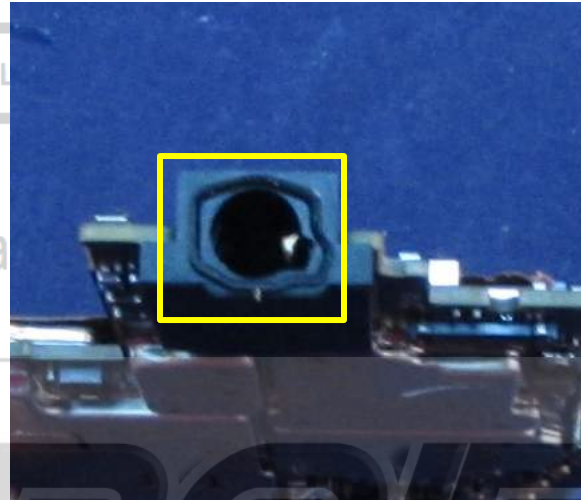


Rear-Facing Imager Assembly

Description	Reference #
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
DIECUT,ADHESIVE,BACKER,RF IMAGER, BURTON	33
MDL,CAMR,1.008um/1.0um	37
108MPOIS	38

1. Use the Tweezers to remove the liner from the front of the Large Rear-Facing Imager.



2. Use the Tweezers to place the Large Rear-Facing Imager Adhesive on the rear of the Large Rear-Facing Imager.

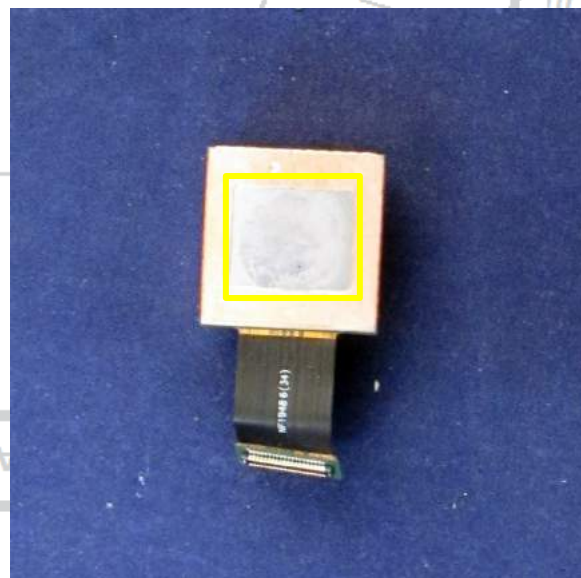


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


3. Use rolling pressure to connect the Large Rear-Facing Imager BtB Connector to the Main PCB.

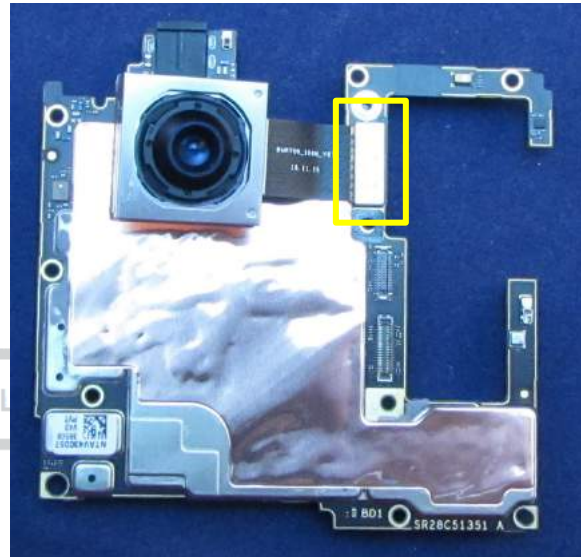

4. Use the Tweezers to remove the liner from the front of the Small Rear-Facing Imager.




5. Use rolling pressure to connect the 2 Small Rear-Facing Imager BtB Connectors to the Main PCB.

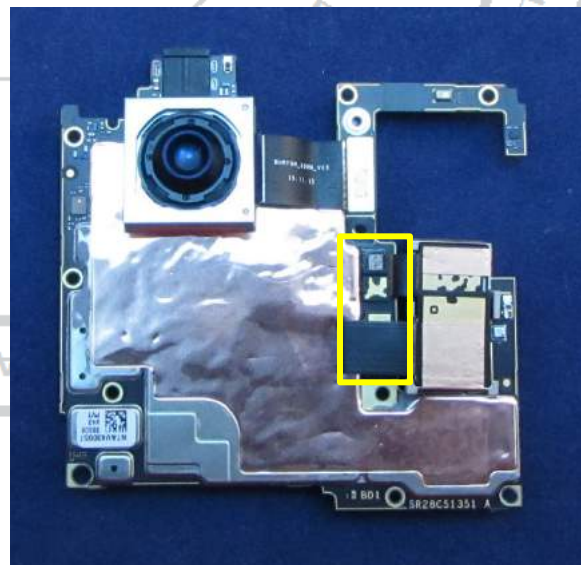


Thermal Pad Assembly

Description	Reference #
DIE CUT, PAD, THERMAL REAR CAMERA,BURTON	5
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
MDL,CAMR,1.008um/1.0um	37

1. Use the Tweezers to remove the Thermal Pad from the carrier.

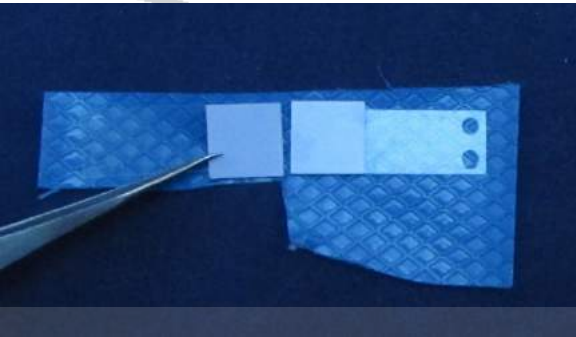

2. Use the Tweezers to place the Thermal Pad onto the Main PCB in the location shown.

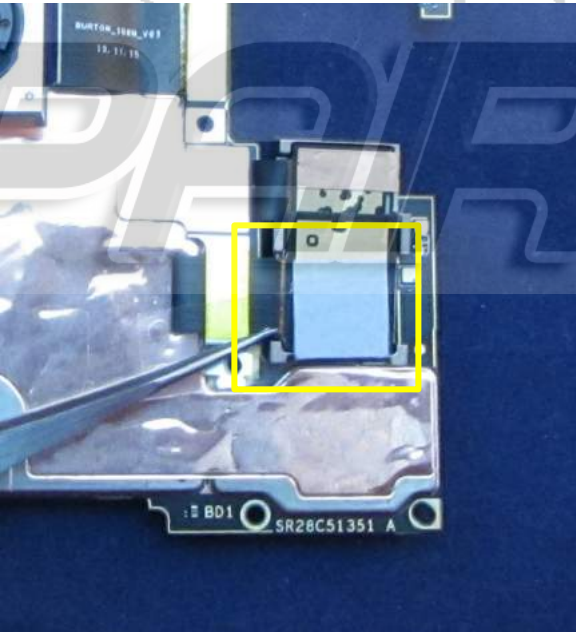


Imager Bracket Assembly

Description	Reference #
Backer B2B Rear Imager, BURTON	17
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
SCREW, FLIP, Olson	--

1. Use the Tweezers to place the Imager Bracket over the Rear-Facing Imager BtB Connectors in the orientation shown.



2. Use the Torx Driver and T3 Torx bit to tighten 1 silver Machine Screw to 0.9 ± 0.1 Kgf/cm in the location shown.

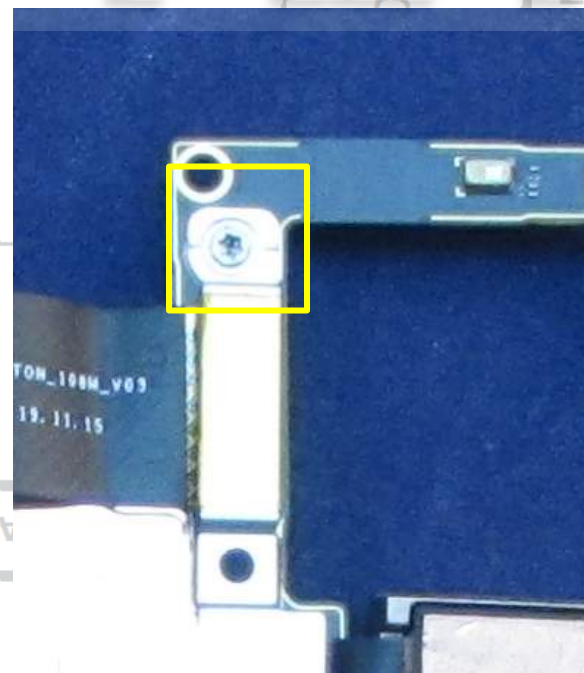


Copper Plate Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
COPPER PLATE, MAIN PCB, BURTON	6

1. Use the Tweezers to remove the Copper Plate from the liner.




2. Use the Tweezers to place the Copper Block into the pocket of the Front Housing as shown. Use care to align the Copper Plate with the highlighted guide pins.
3. Slide a fingertip across the Copper Plate to secure it to the Front Housing.

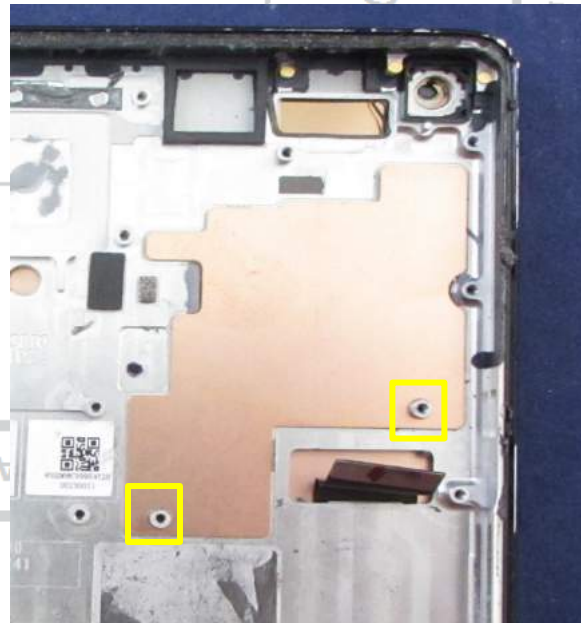


Battery Copper Foil Heat Spreader Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
HEATSPREADER, BATTERY, BURTON	39

1. Use the Tweezers to remove the Battery Copper Foil Heat Spreader from the liner.

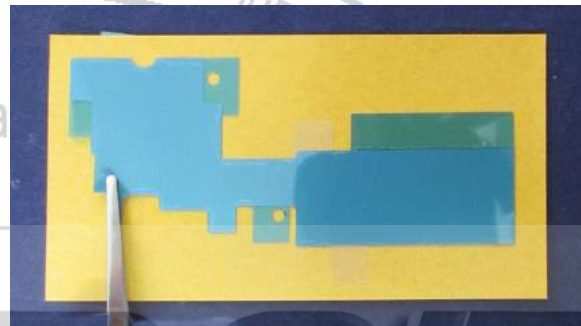

2. Use the Tweezers to remove the adhesive liners of the Battery Copper Foil Heat Spreader.

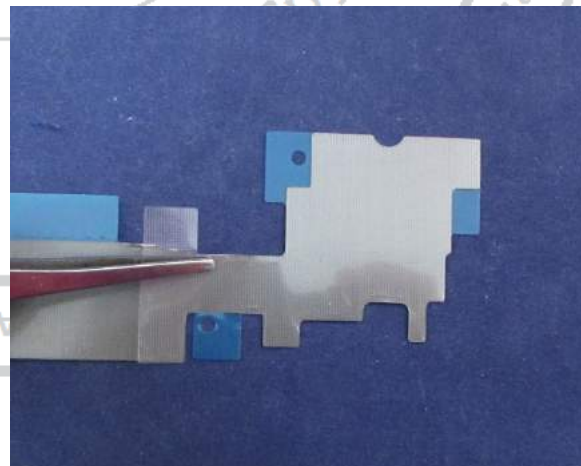


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

3. Use the Tweezers to place the Battery Copper Foil Heat Spreader into the pocket of the Front Housing in the orientation shown. Use care to align the Battery Copper Foil Heat Spreader with the highlighted guide pins.

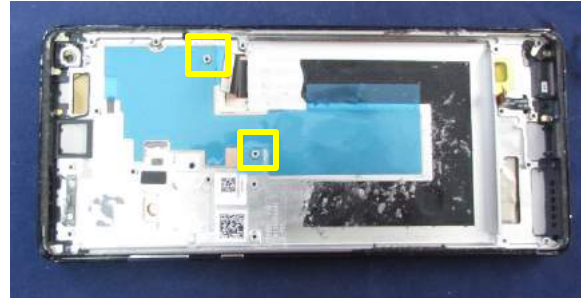

4. Use the Tweezers to remove the liner from the Battery Graphite Foil Heat Spreader.

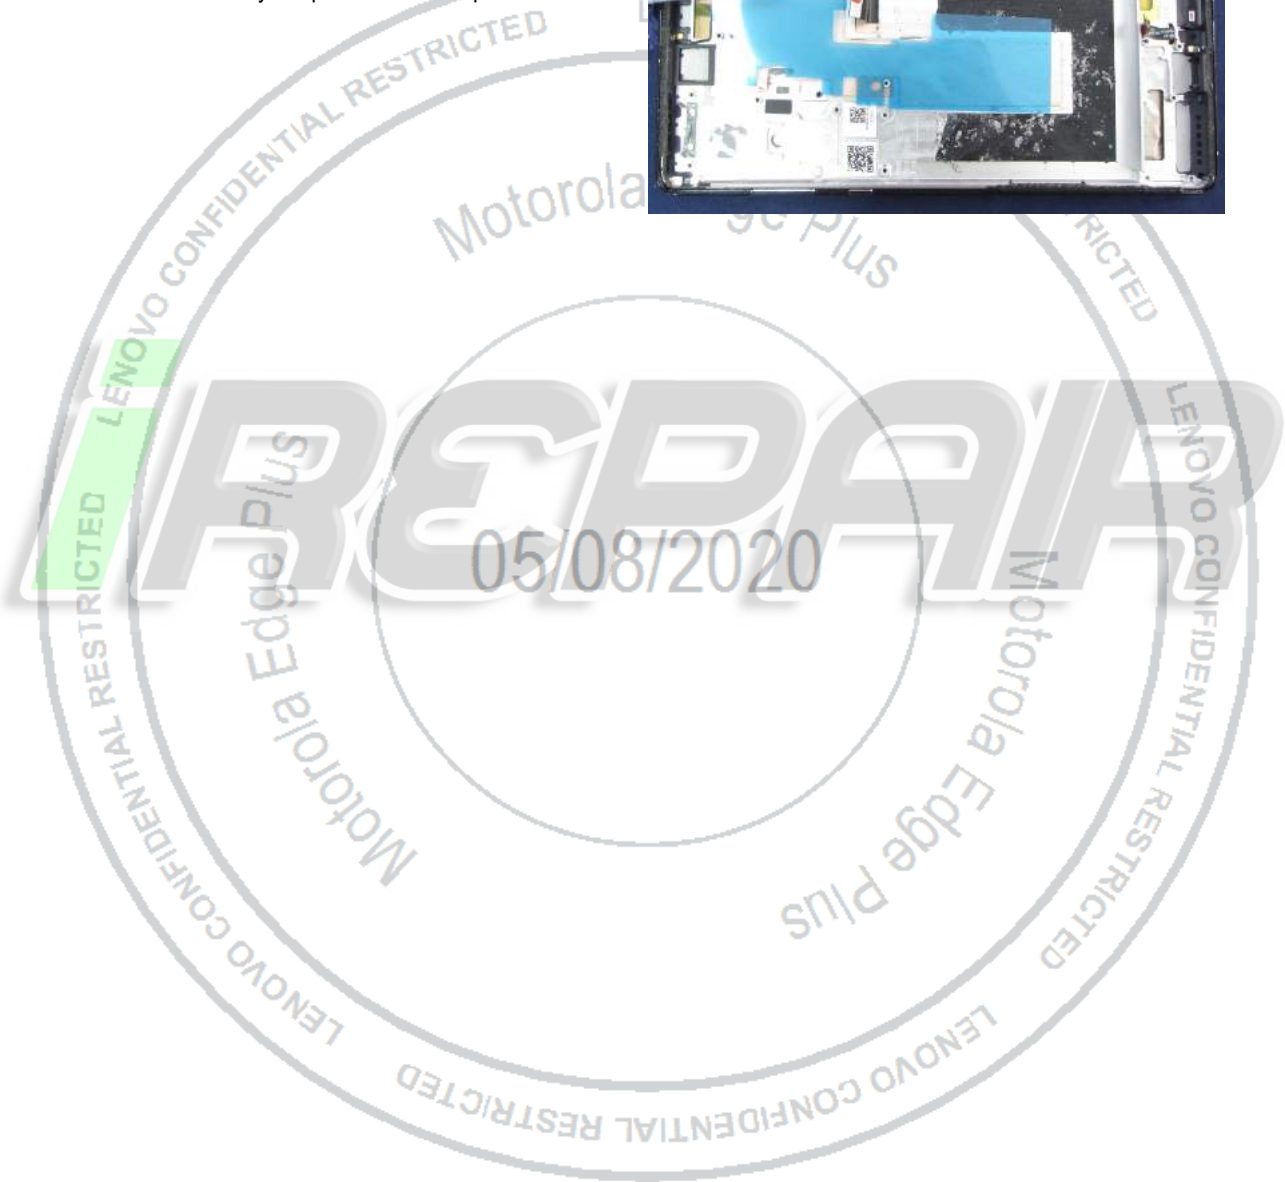


Foam Pad Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
DIE CUT, PAD, AP, BURTON	15

1. Use the Tweezers to remove the Foam Pad from the liner.



2. Use the Tweezers to place the Foam Pad into the pocket of the Front Housing in the orientation shown. Use care to align the Foam Pad using the highlighted guide pins.

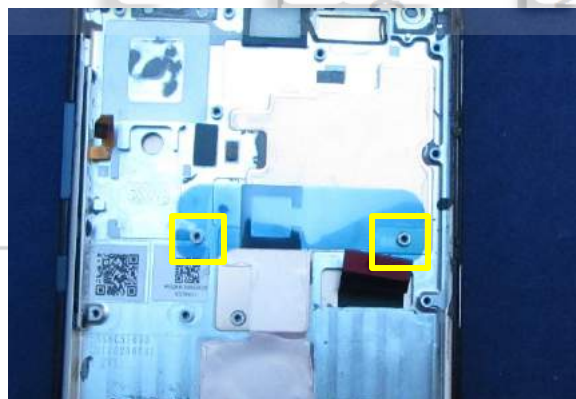

3. Use the Tweezers to remove the liner of the Foam Pad.



Thermal Grease Application

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
COPPER PLATE, MAIN PCB, BURTON	6

Thermal Grease must be applied to the Front Housing where it connects to the rear of the Main PCB. Various tools exist for applying Thermal Grease.

1. Select Thermal Grease.

NOTE

Arctic and Cooler Master are common varieties of Thermal Grease. See the end of this section for [Thermal Grease brands](#).

2. Select a tool to dispense the Thermal Grease onto the Front Housing. Common tools are:
 - a. TDS SY-TP350 5ml Thermal Grease Syringe,
 - b. TDS SY-TP350 30ml Thermal Grease Syringe with Dispensing Tool, and
 - c. Henkel LF350 30ml Thermal Grease Syringe with Dispensing Tool.
3. Select a gauge of needle to dispense the Thermal Grease.

NOTE

Refer to the Needle Gauges for Injections Size Chart diagram for a list of needle gauges and colors.

Recommended needle gauges for each common tool are listed below.

- a. 18 Gauge (Teal) - TDS SY-TP350 5ml Thermal Grease Syringe,

Needle Gauges for Injections Size Chart



Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

- b. 16 Gauge (Brown) - TDS SY-TP350
30ml Thermal Grease Syringe with
Dispensing Tool, and
- c. 16 Gauge (Brown) - Henkel LF350
30ml Thermal Grease Syringe with
Dispensing Tool.

- 4. Using a Thermal Grease Syringe and Thermal Grease, apply Thermal Grease to the Front Housing in the highlighted location.
- 5. Use the Tweezers to cut the Thermal Grease.
- 6. Clean the tip of the needle used to apply the Thermal Grease.
- 7. Clean the Tweezers where they cut the Thermal Grease.

NOTE


The tip of the Thermal Grease Syringe and the Tweezers must be cleaned after every application of Thermal Grease.



- 8. Using a Thermal Grease Syringe and Thermal Grease, apply Thermal Grease to the Front Housing in the highlighted location.
- 9. Use the Tweezers to cut the Thermal Grease.
- 10. Clean the tip of the needle used to apply the Thermal Grease.
- 11. Clean the Tweezers where they cut the Thermal Grease.

NOTE

The tip of the Thermal Grease Syringe and the Tweezers must be cleaned after every application of Thermal Grease.

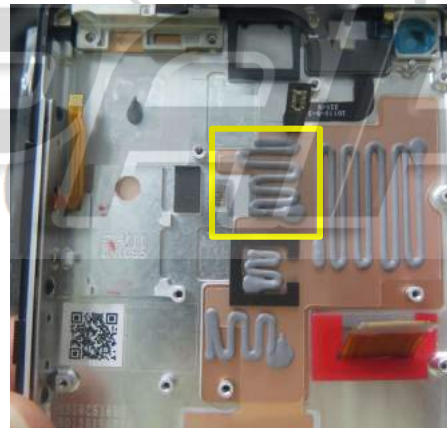

12. Using a Thermal Grease Syringe and Thermal Grease, apply Thermal Grease to the Front Housing in the highlighted location.
13. Use the Tweezers to cut the Thermal Grease.
14. Clean the tip of the needle used to apply the Thermal Grease.
15. Clean the Tweezers where they cut the Thermal Grease.

NOTE


The tip of the Thermal Grease Syringe and the Tweezers must be cleaned after every application of Thermal Grease.



16. Using a Thermal Grease Syringe and Thermal Grease, apply Thermal Grease to the Front Housing in the highlighted location.
17. Use the Tweezers to cut the Thermal Grease.
18. Clean the tip of the needle used to apply the Thermal Grease.
19. Clean the Tweezers where they cut the Thermal Grease.

NOTE

The tip of the Thermal Grease Syringe and the Tweezers must be cleaned after every application of Thermal Grease.

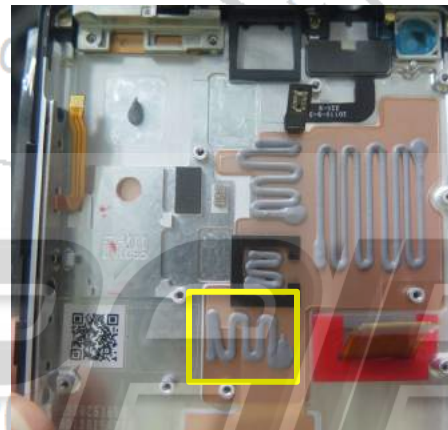

20. Using a Thermal Grease Syringe and Thermal Grease, apply Thermal Grease to the Front Housing in the highlighted location.
21. Use the Tweezers to cut the Thermal Grease.
22. Clean the tip of the needle used to apply the Thermal Grease.
23. Clean the Tweezers where they cut the Thermal Grease.


NOTE

The tip of the Thermal Grease Syringe and the Tweezers must be cleaned after every application of Thermal Grease.



Thermal Grease Brands

Cool Master	MGY-OSSG-N15M-R1	https://www.coolermaster.com/catalog/coolers/thermal-grease/mastergel-pro/
	MGZ-NDSG-N15M-R1	https://www.coolermaster.com/catalog/coolers/thermal-grease/mastergel-maker/
	RG-ICE1-TG15-R1	https://www.coolermaster.com/catalog/coolers/thermal-grease/ic-essential-e1/
	RG-ICE2-TA15-R1	https://www.coolermaster.com/catalog/coolers/thermal-grease/ic-essential-e2/
	RG-EFX1-TG15-R1	https://www.coolermaster.com/catalog/coolers/thermal-grease/extreme-fusion-x1/
Electrolube	TCP400	N/A
Henkel	LF3500	N/A

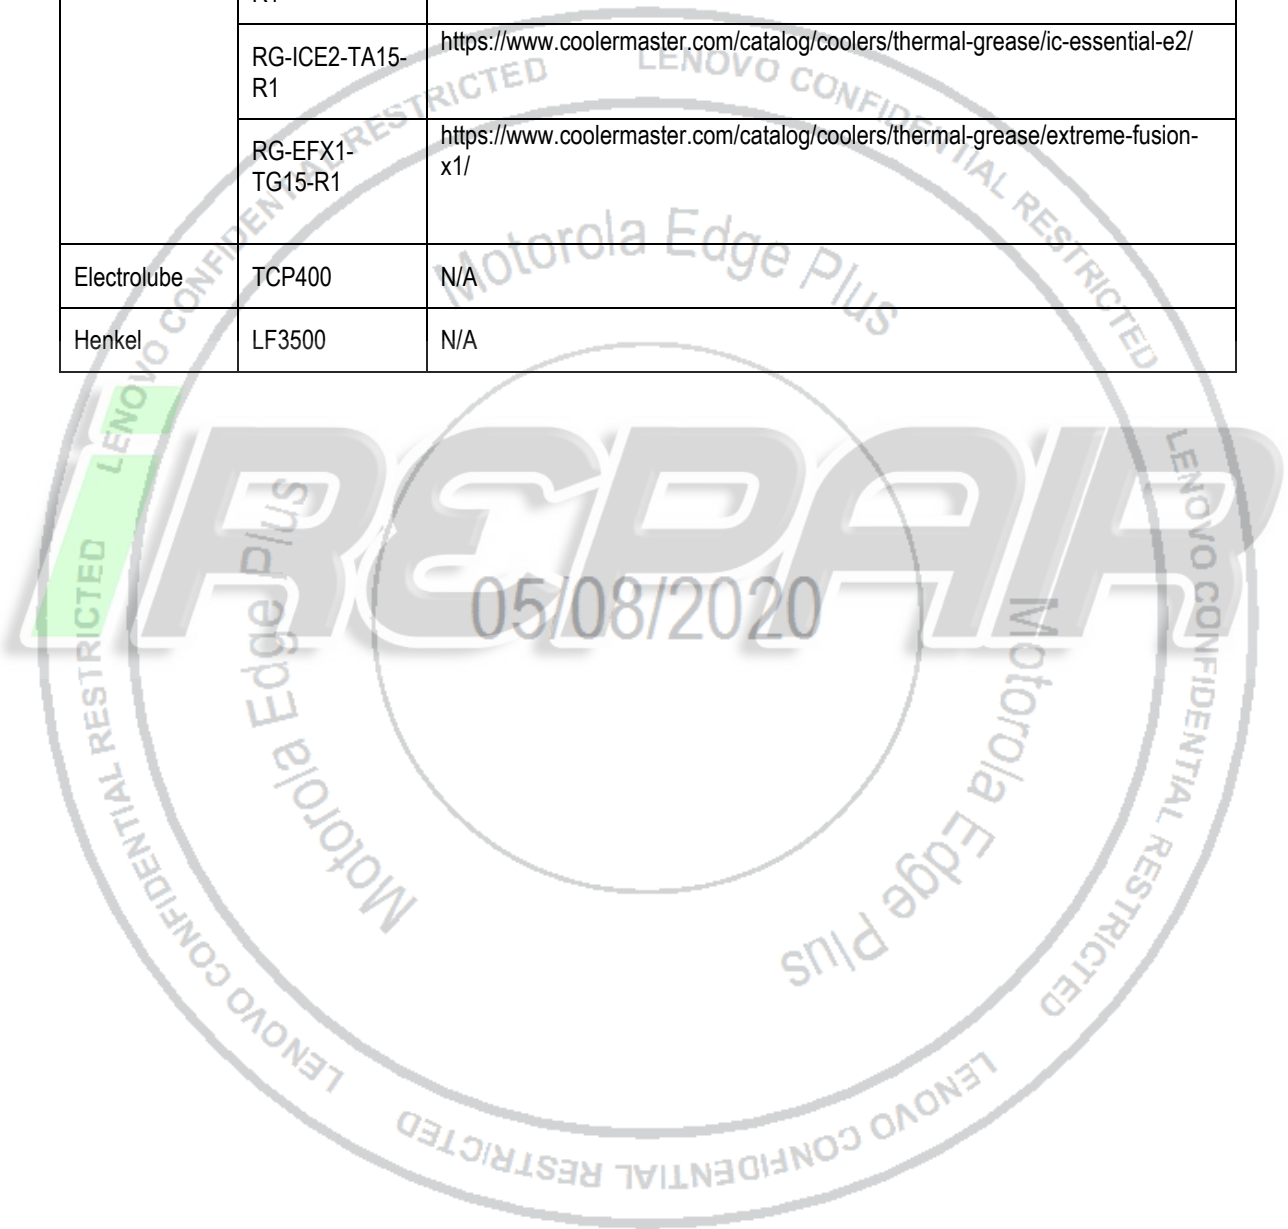

Side Key Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1

1. Use the Tweezers to place the Volume Key through the recess in the Front Housing as shown.




2. Use the Tweezers to place the Power Key through the recess in the Front Housing as shown.



3. Use the Tweezers to place the Side-Key Flex behind the Side-Keys in the orientation shown.



4. Use the Torx Driver and T3 Torx Bit to tighten the 3 black Machine Screws to $0.9 \pm 0.1 \text{ Kg/cm}$.

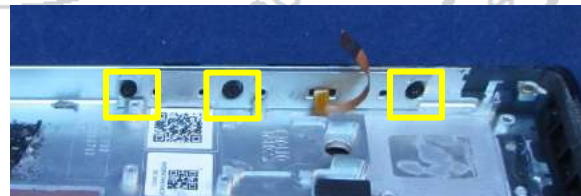

Microphone Grommet Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
GROMMET, MIC 1, BURTON	47

1. Use the Tweezers to remove the adhesive liner of the Microphone Grommet.



2. Use the Tweezers to place the Microphone Grommet into the pocket of the Front Housing.




Vibrator Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
VIBRATOR, LINEAR 9X16, BURTON	3

1. Use the Tweezers to remove the adhesive liner from the Vibrator.



2. Use the Tweezers to place the Vibrator into the pocket of the Front Housing in the orientation shown.

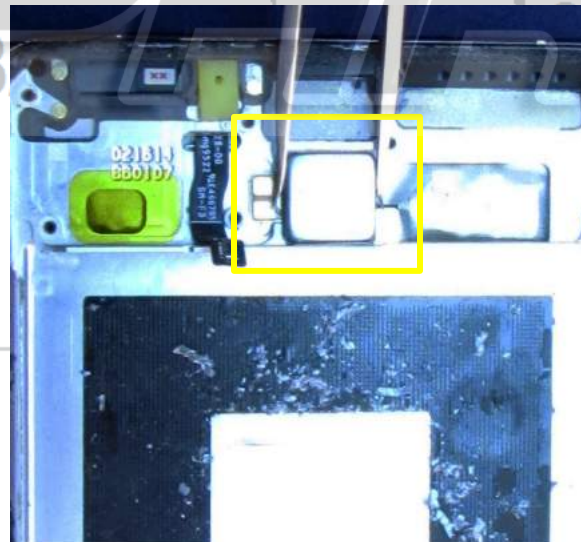


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


3. Use the flat end of the Blackstick to secure the Vibrator Flex to the Front Housing.

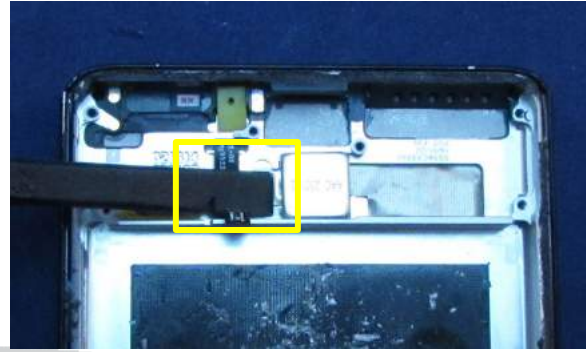

Proximity Sensor Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
DIE CUT, PROXY GASKET, BURTON	2
ASSY PROXIMITY,SENSOR, BURTON	25
DIE CUT, PROXY, SHIM, BURTON	--

1. Use the Tweezers to remove the 2 adhesive liners from the rear of the Proximity Flex.

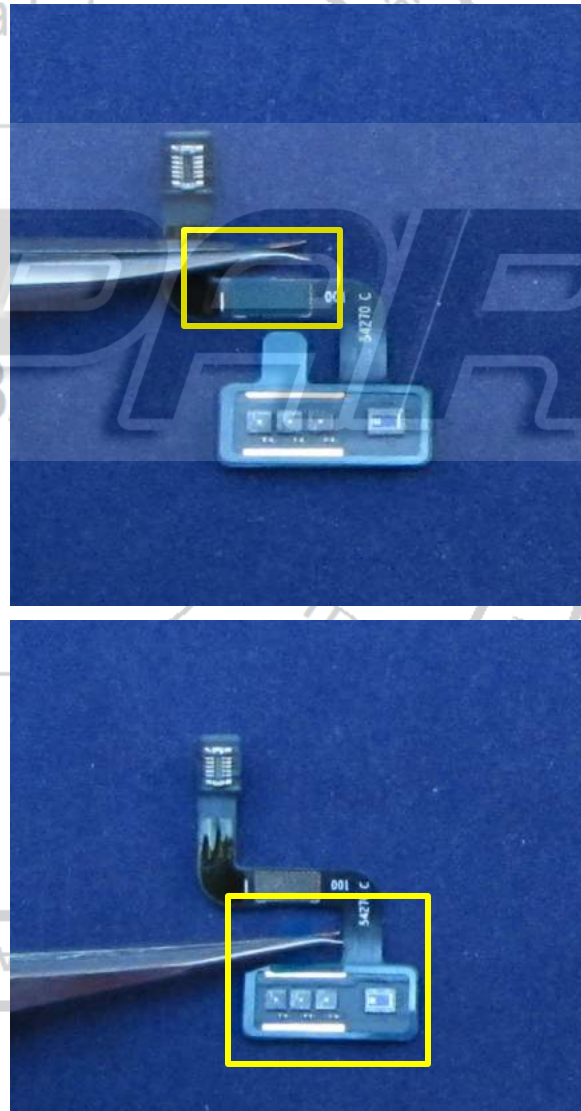


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

2. Use the Tweezers to remove the Second Proximity Sensor Grommet from the carrier.

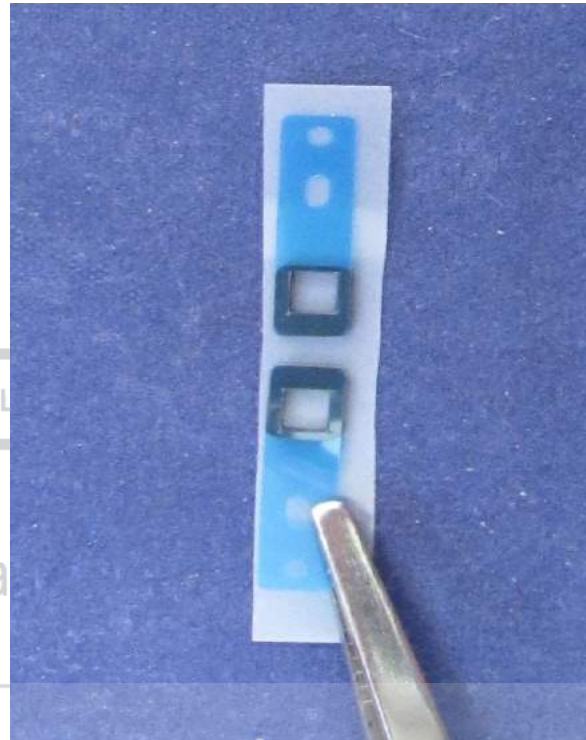

3. Use the Tweezers to place the Second Proximity Sensor Grommet on the Proximity Sensor as shown.




Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


4. Use the Tweezers to remove the liner of the Second Proximity Sensor Grommet.

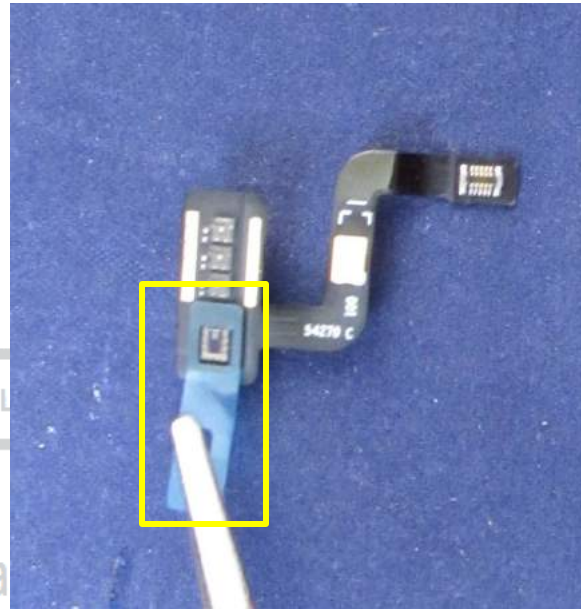

5. Use the Tweezers to remove the First Proximity Sensor Grommet from the carrier.



6. Use the Tweezers to place the First Proximity Sensor Grommet onto the Proximity Sensor in the orientation shown.

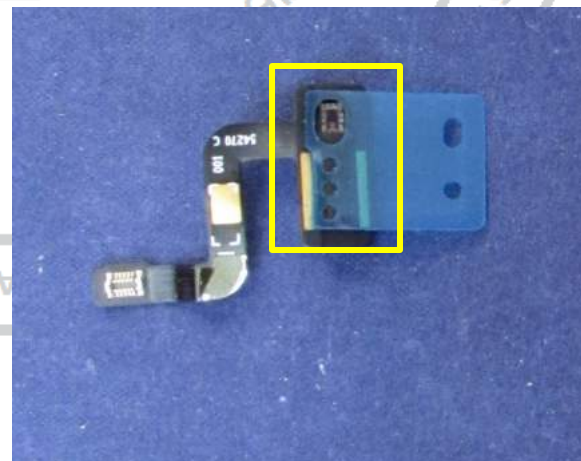

Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


7. Use the Tweezers to remove the liner of the First Proximity Sensor Grommet.



8. Use the Tweezers to place the Proximity Sensor into the pocket of the Front Housing in the orientation shown.

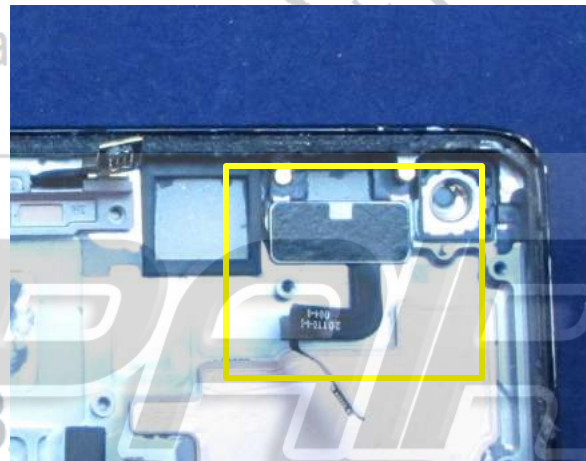


9. Use the flat end of the Blackstick to secure the Proximity Sensor to the Front Housing.

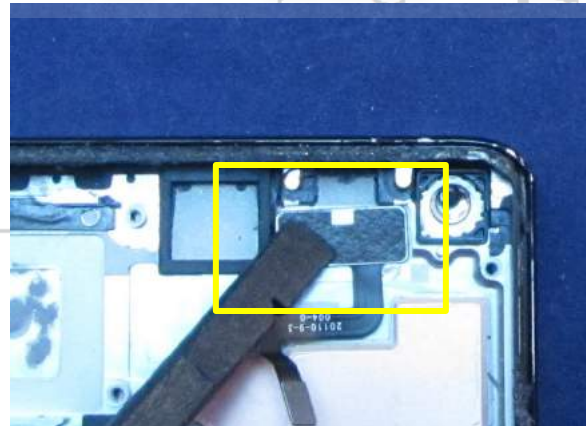

Top mmWave Antenna Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
COPPER PLATE, mmWAVE TOP, BURTON	24
BRACKET, MM WAVE TOP, BURTON	26
ASSY,FLEX, mm-WAVE TOP,BURTON	28

1. Use the Tweezers to remove the three adhesive liners from the Top mmWave Antenna Copper Bracket.

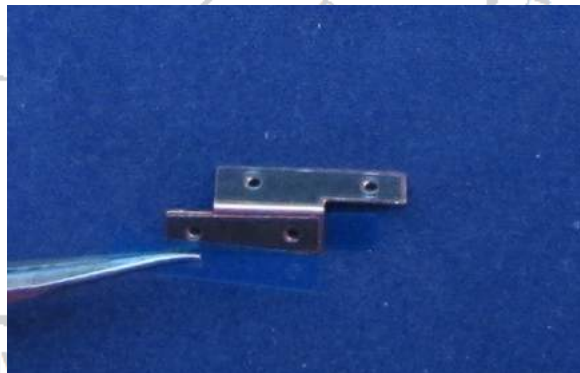

Motorola Edge Plus

Level 2 – Service and Repair Manual


ANIBAL GARCIA VENEZUELA



2. Use your fingers to align the Top mmWave Copper Bracket with the Top mmWave Antenna Front Housing Bracket in the orientation shown.



3. Use your fingers to align the Top mmWave Antenna with the Top mmWave Antenna Copper Bracket and Top mmWave Antenna Front Housing Bracket.

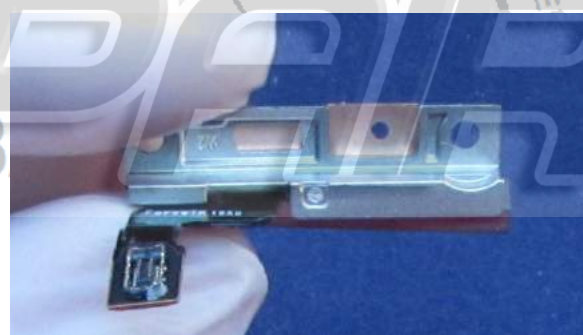


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

4. Use the Tweezers to place the Top mmWave Antenna into the pocket of the Front Housing as shown. Use care to align the Top mmWave Antenna with the guide pins in the Front Housing.

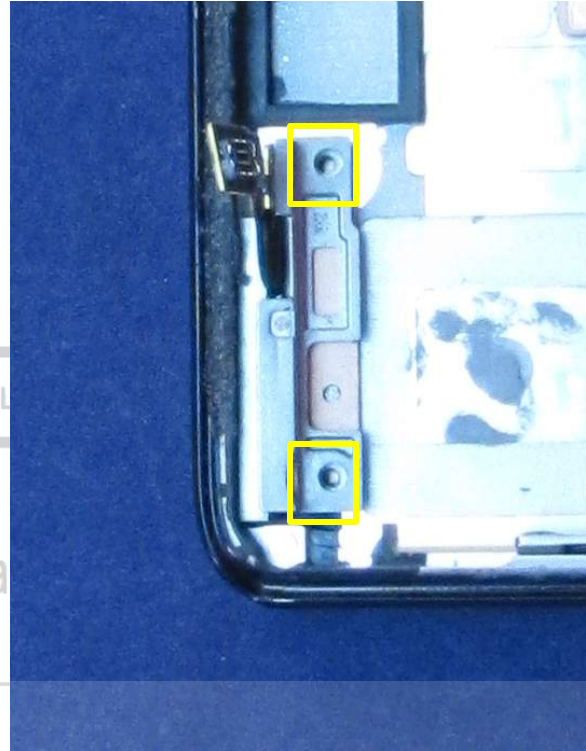

Main PCB Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
DIE CUT, KAPTON 1, DISP, BURTON	8
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
ASSY PROXIMITY,SENSOR, BURTON	25
ASSY,FLEX, mm-WAVE TOP,BURTON	28
GROMMET, TOF, BURTON	43
SCR,M1.4,ENDO, 3.6	--

1. Use your fingers to place the Main PCB in the pocket of the Front Housing. Use care not to trap the Side-Key Flex, Proximity Sensor Flex, Display Flex and Top mmWave Antenna Flex.




Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


2. Use the Torx Driver and T3 Torx Bit to tighten 2 black Machine Screws to $0.9 \pm 0.1 \text{ Kg/cm}$.

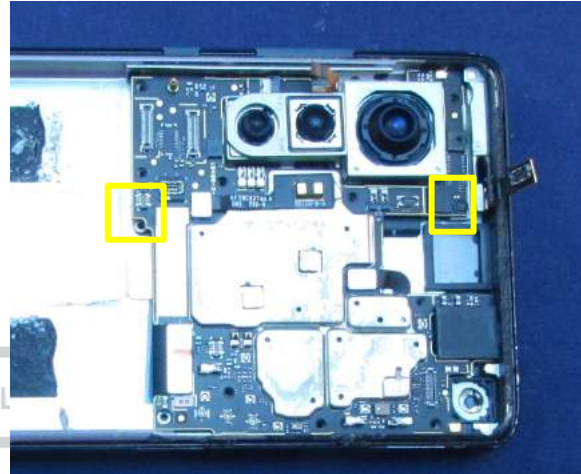

3. Use rolling pressure to connect the Top mmWave Antenna BtB Connector to the Main PCB.

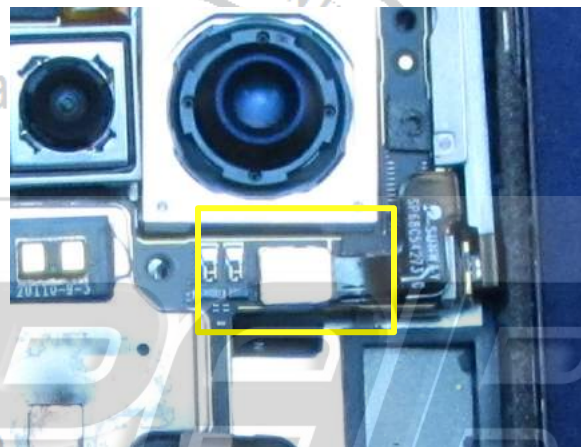

4. Use rolling pressure to connect the Proximity Sensor Flex BtB Connector to the Main PCB.

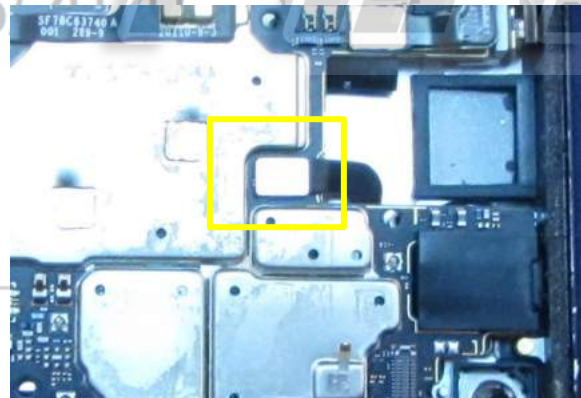


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


5. Use rolling pressure to connect the Display Flex BtB Connector to the Main PCB.

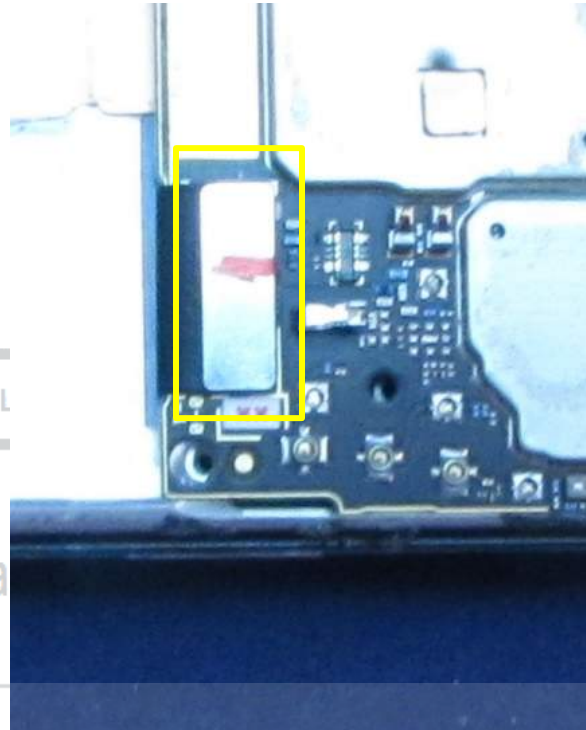

6. Use the Tweezers to place the TOF Grommet over the TOF Sensor on the Main PCB.

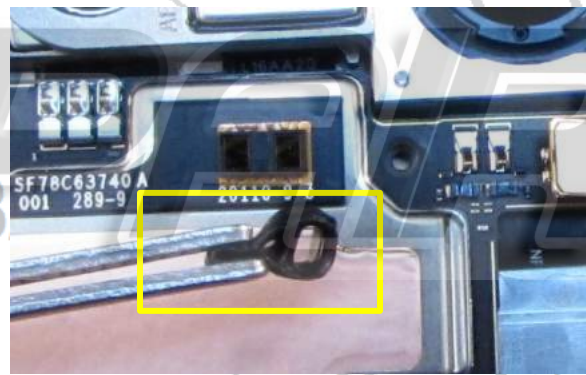

7. Use the pointed end of the Blackstick to open the ZIF Connector of the Side-Key Flex.

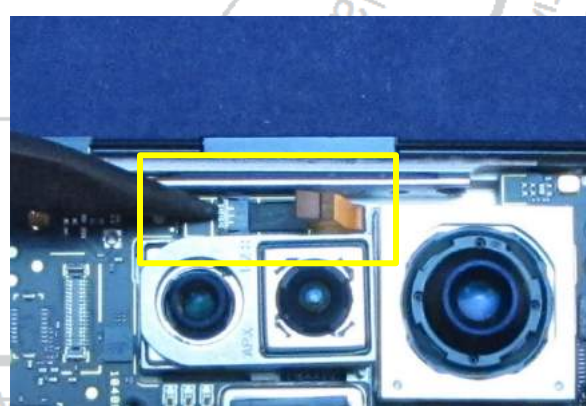


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

8. Use the Tweezers to guide the Side-Key Flex into the ZIF Connector Door, using the white line as a guide for insertion depth.
9. Slide a fingertip across the Side-Key Flex ZIF Connector Door to close it.

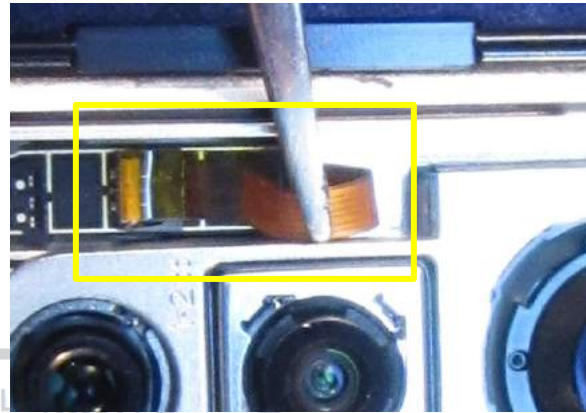

10. Use the Tweezers to remove the Side-Key Flex Tape from the carrier.

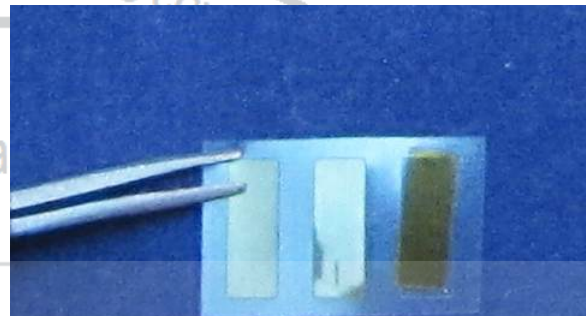


11. Use the Tweezers to place the Side-Key Flex Tape over the Side-Key Flex ZIF Connector Door.



USB Grommet Assembly

Description	Reference #
XT2061-3 sub board CS ASSY,USB-BOARD-KIT, BURTON	19
SEAL,DUST,Rio H,RUB,Rubber,O-ring,USB Co	42


Use the Tweezers to place the USB Grommet onto the USB Port on the Lower PCB.

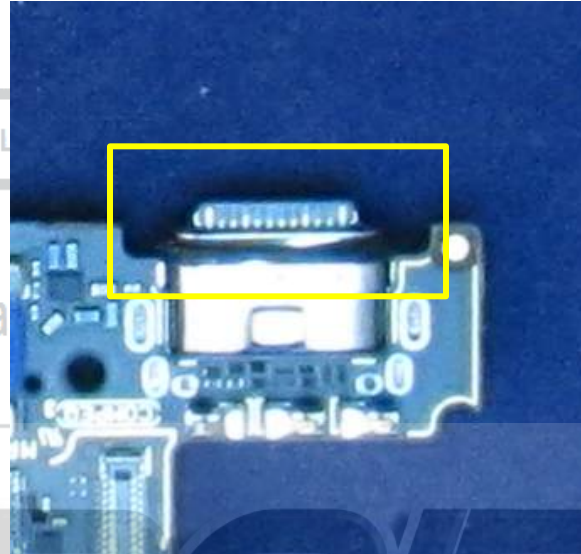


Lower PCB Microphone Grommet Assembly

Description	Reference #
DIE-CUT, SEAL, PCB, MIC1, BURTON	13
XT2061-3 sub board CS ASSY,USB-BOARD-KIT, BURTON	19

1. Use the Tweezers to remove the Lower PCB Microphone Grommet from the carrier.

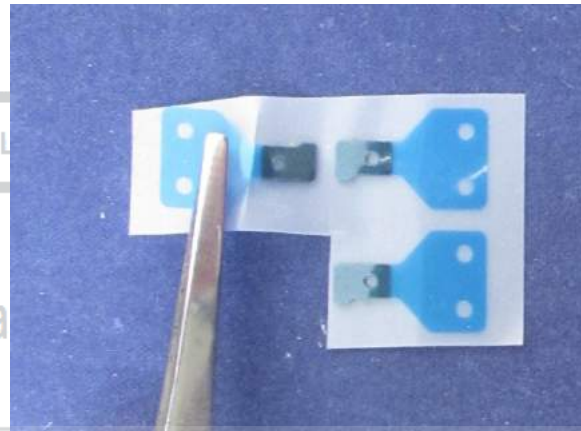

2. Use the Tweezers to place the Lower PCB Microphone Grommet onto the Lower PCB in the location shown.


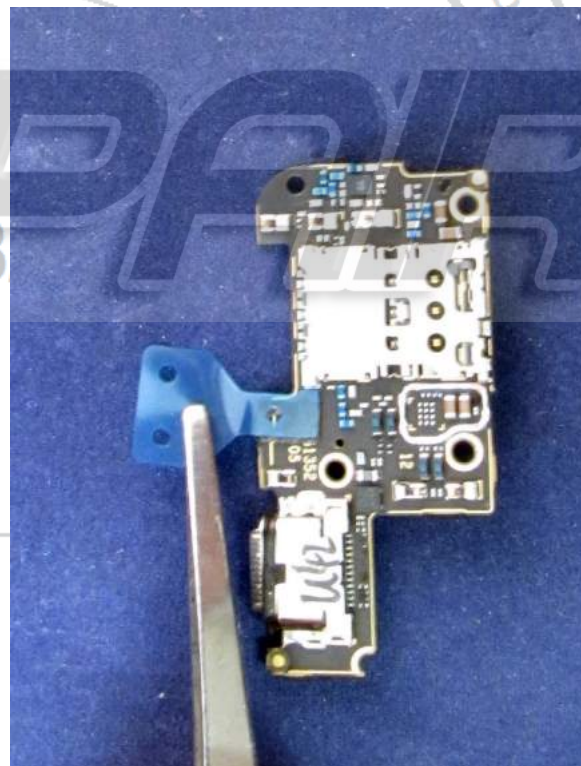


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA



3. Use the Tweezers to remove the liner from the Lower PCB Microphone Grommet.

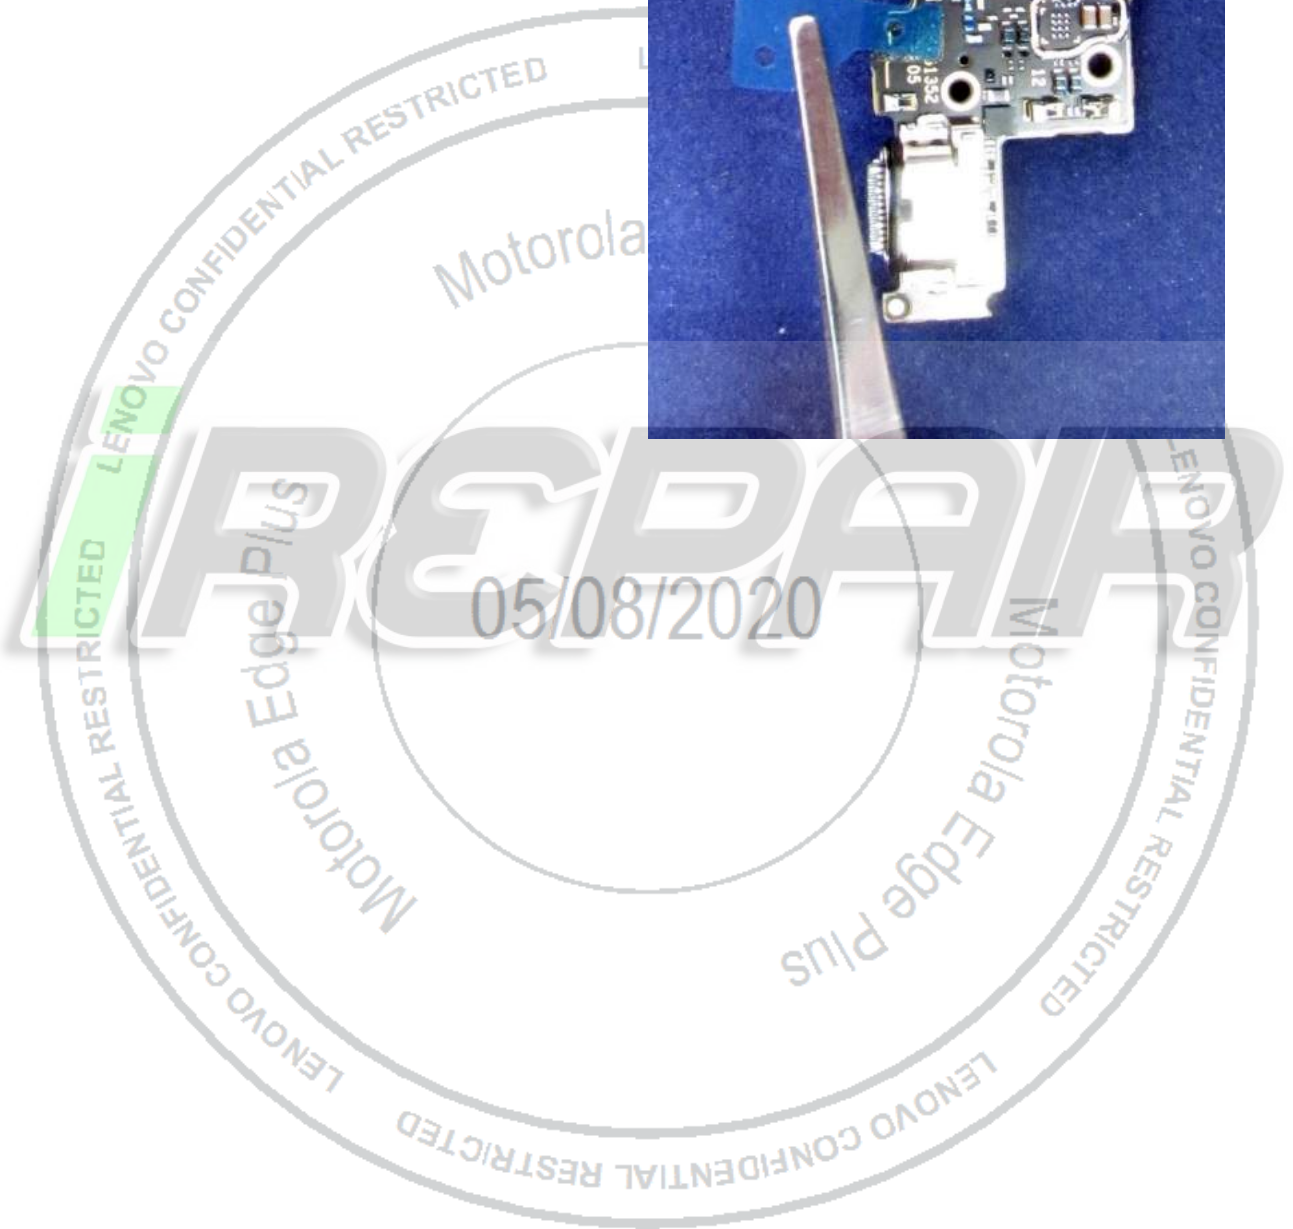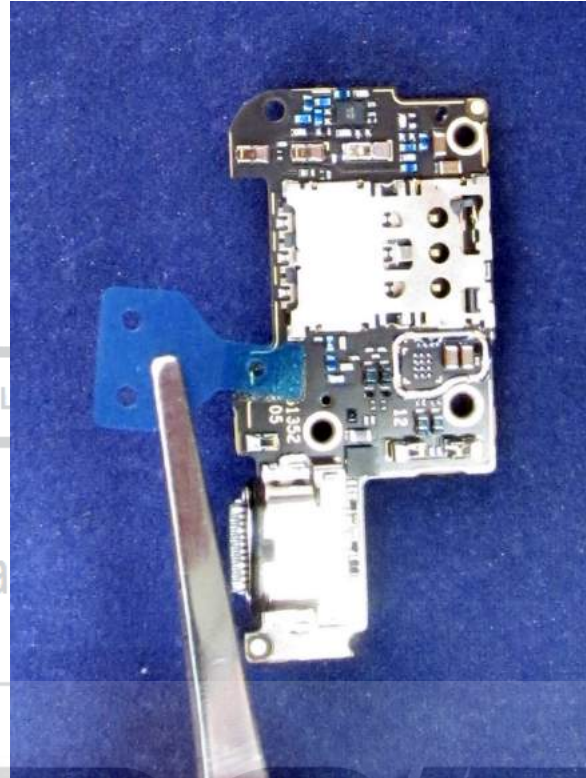

Lower PCB Grommet Assembly

Description	Reference #
XT2061-3 sub board CS ASSY,USB-BOARD-KIT, BURTON	19
ASSY,PWA,REAR FLASH, BURTON	41


Use the Tweezers to place the Lower PCB Grommet onto the Lower PCB in the location shown.

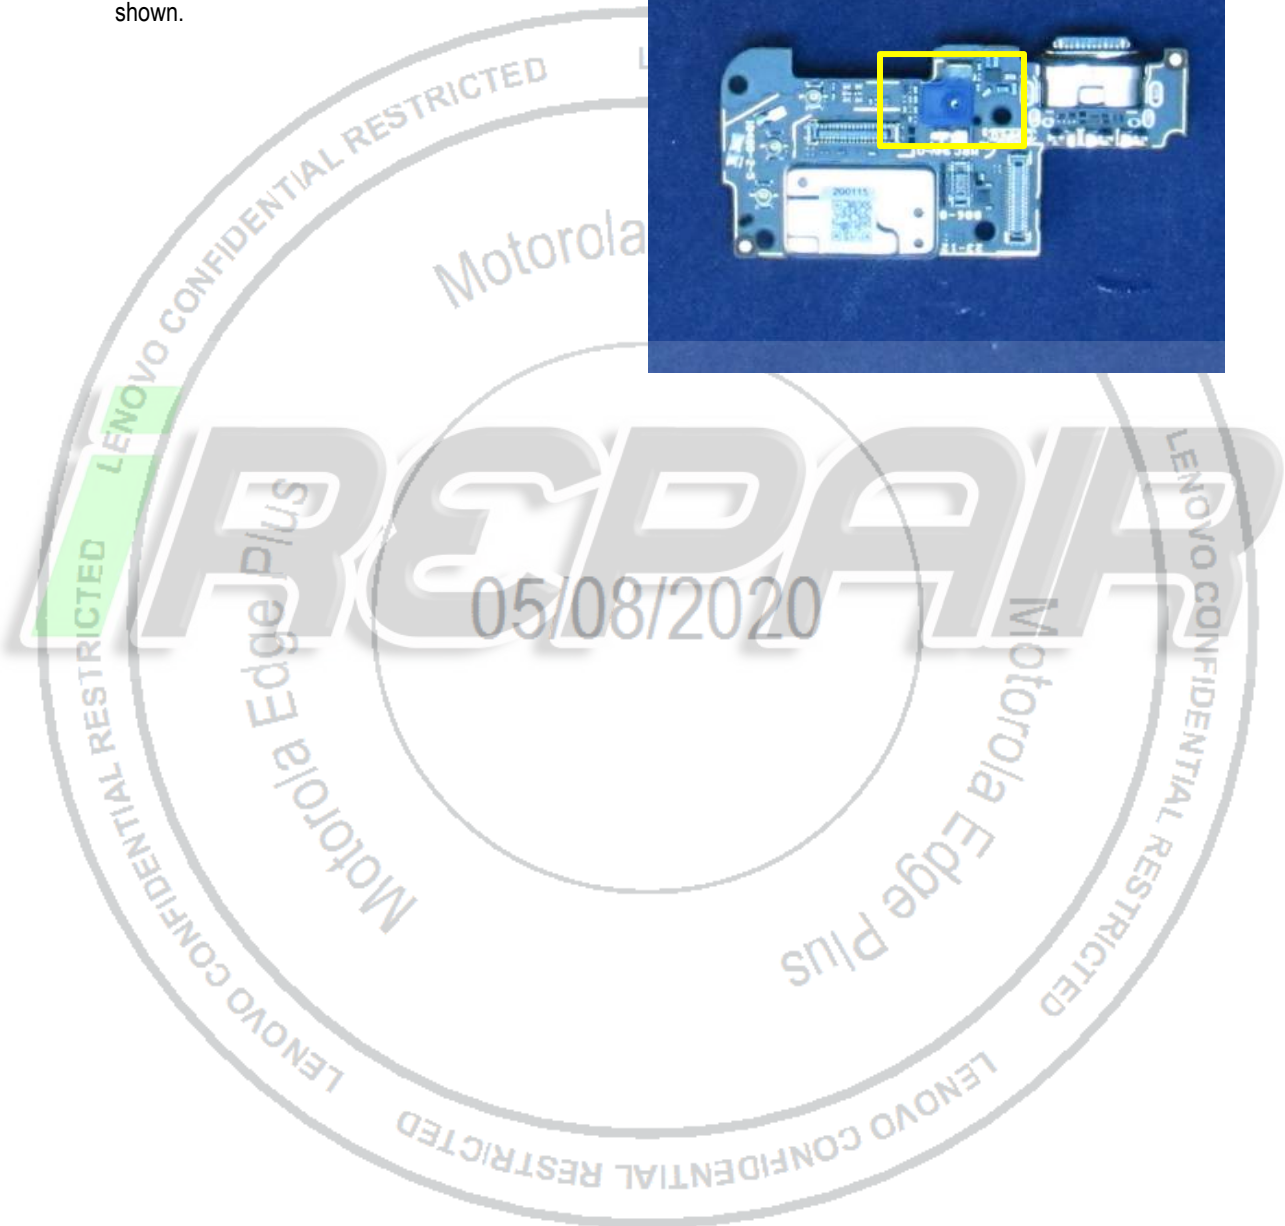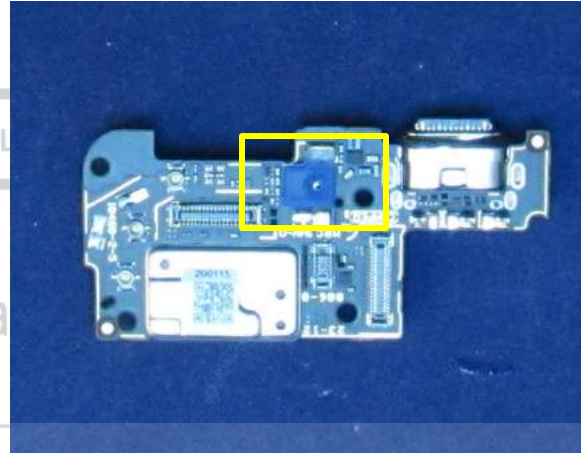

Lower PCB Assembly

Description	Reference #
XT2061-3 sub board CS ASSY,USB-BOARD-KIT, BURTON	19
SCR,M1.4,ENDO, 3.6	--

1. Use your fingers to place the Lower PCB into the pocket of the Front Housing.

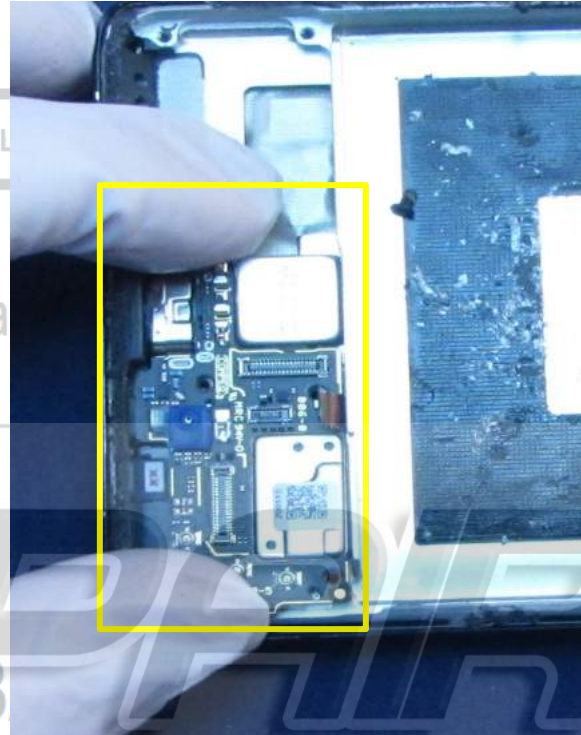

Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

2. Use the Torx Driver and T3 Torx Bit to tighten 1 black Machine Screw to $0.9 \pm 0.1 \text{ Kgf/cm}$.



3. Use rolling pressure to connect the FPS BtB Connector to the Lower PCB.

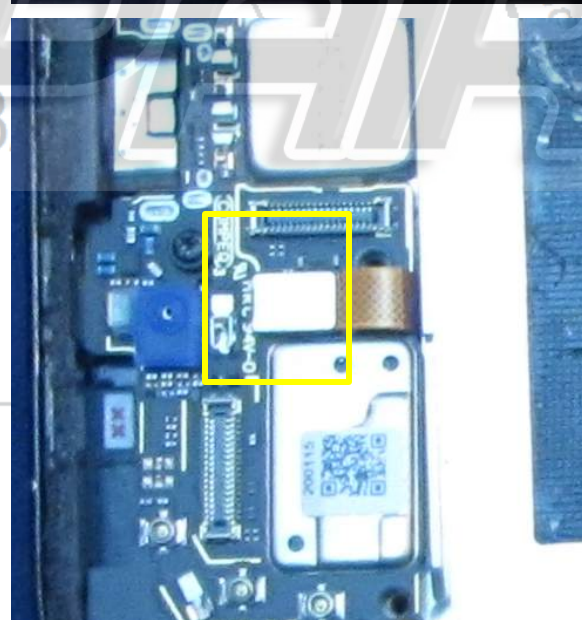


- 4.

Coax Cable Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
DIE CUT, TAPE, COAX CLIP, BURTON	16
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
XT2061-3 sub board CS ASSY,USB-BOARD-KIT, BURTON	19
CLIP, COAX, BURTON	20
CBL,COAX 3 , BURTON	21
CBL,COAX 2 , BURTON	22
CBL,COAX 1 , BURTON	23
Diecut,Adhesive,Conductive,Coax, BURTON	31

1. Use your fingers to place the Blue Coax Cable into the Coax Cable Bracket. Use care to align the metal clips of the Coax Cable Bracket to the edges of the Blue Coax Cable.

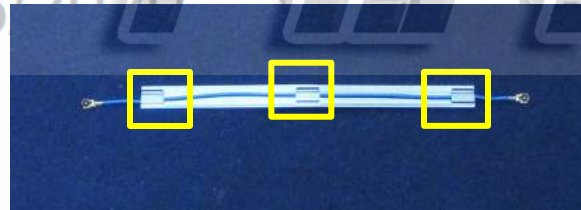

2. Use your fingers to place the White Coax Cable into the Coax Cable Bracket. Use care to align the metal clips of the Coax Cable Bracket to the edges of the White Coax Cable.



3. Use your fingers to place the Black Coax Cable into the Coax Cable Bracket. Use care to align the metal clips of the Coax Cable Bracket to the edges of the Black Coax Cable.




Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

4. Use the Tweezers to remove the Coax Cable Tape from the carrier.

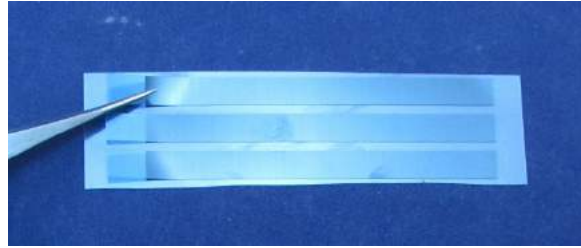

5. Use the Tweezers to place the Coax Cable Tape on the rear of the Coax Cable Bracket.



6. Use the Tweezers to remove the liner from the Coax Cable Bracket.



7. Use your fingers to place the Coax Cable Bracket into the recess of the Front Housing as shown.



8. Use rolling pressure to connect the 3 Coax Cables to the Main PCB.




Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

9. Use rolling pressure to connect the 3 Coax Cables to the Lower PCB.

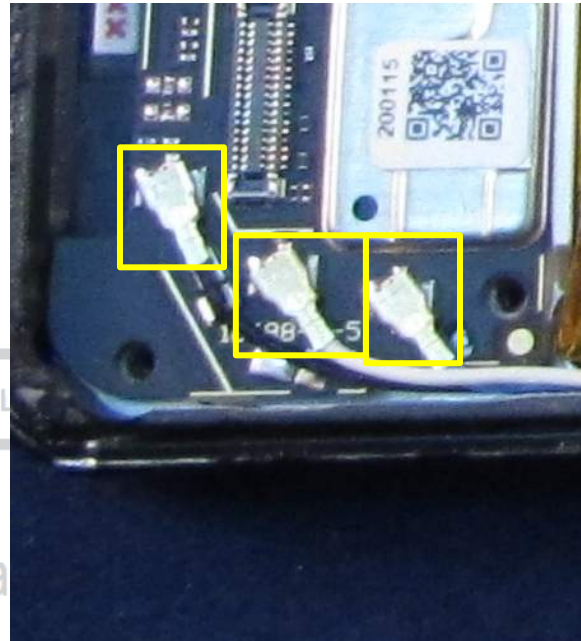

Battery Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS XT2061 TP LCM ASSY BGR CS XT2061 TP LCM ASSY SGA CS	1
DIE CUT, ADHESIVE, BATTERY, BURTON	10
ASSY, BATTERY, LI POLY,LW50, 5000mAh	14

/// WARNING ///

Failure to adhere to Safety Critical Note(s) may increase risk of rupture, burning, or failure to function safely when used by the customer. Refer to the Battery Safety Guidelines.

// CAUTION //


Handle the Battery Pack with care. If dropped to the floor, it may be internally damaged and must be scrapped.

Ensure Battery and its insulation are not damaged (e.g. scratched, dented, punctured) prior to and throughout assembly.

Prior to assembly, ensure Battery edges and surfaces are not dented or deformed, and that fixtures and parts that will contact the Battery are free of foreign material.

Ensure screws and screwdrivers do not contact the Battery.

1. Use the Tweezers to remove the Battery Adhesive from the carrier.
2. Use the Tweezers to place the Battery Adhesive into the pocket of the Front Housing.

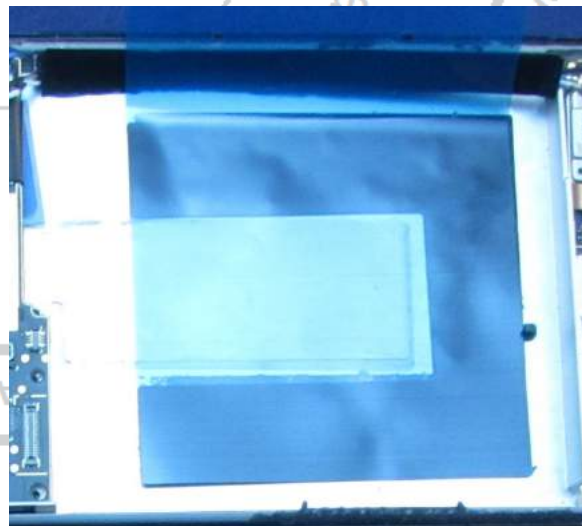


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


3. Use the Tweezers to remove the liner of the Battery Adhesive.

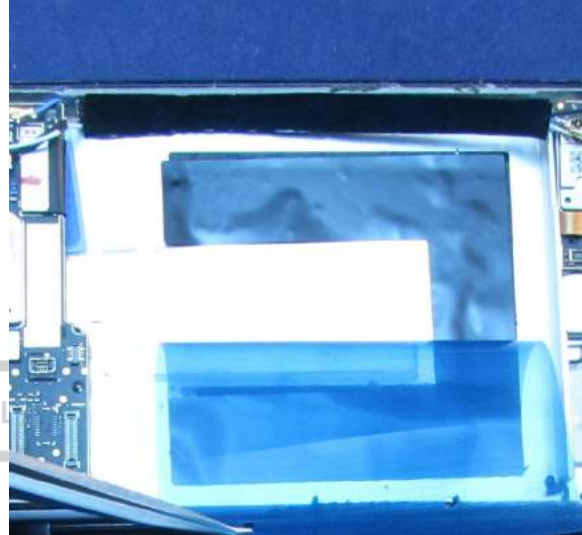

4. Use your fingers to place the Battery into the pocket of the Front Housing as shown.

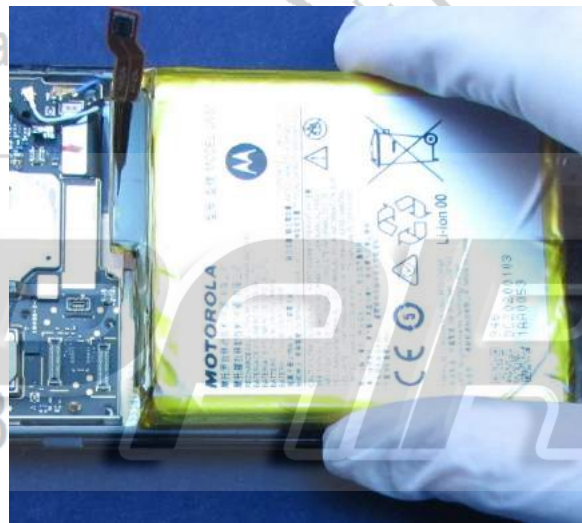

5. Use rolling pressure to connect the Battery BtB Connector to the Main PCB.

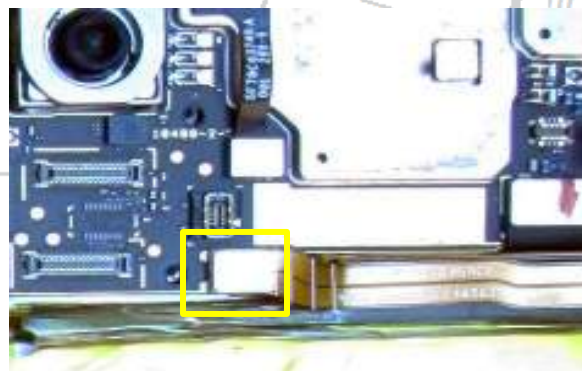


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

6. Use the manual roller to secure the Battery to the Battery Adhesive.

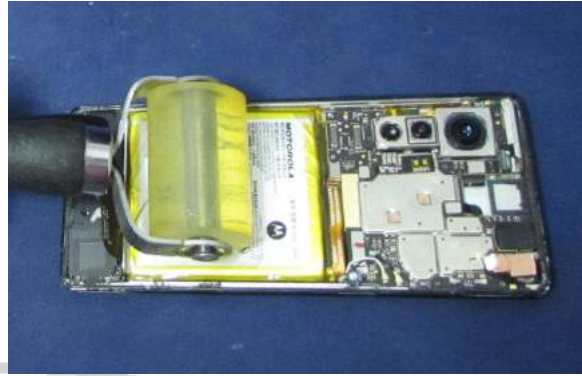

Front Copper Foil Heat Spreader Assembly

Description	Reference #
ASSY, BATTERY, LI POLY,LW50, 5000mAh	14
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
HEATSPREADER,Cu Tape, PCB, FRONT, BURTON	--

1. Use the Tweezers to remove the Front Copper Foil Heat Spreader from the liner.




Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

2. Use the Tweezers to remove the adhesive liners from the Front Copper Foil Heat Spreader.

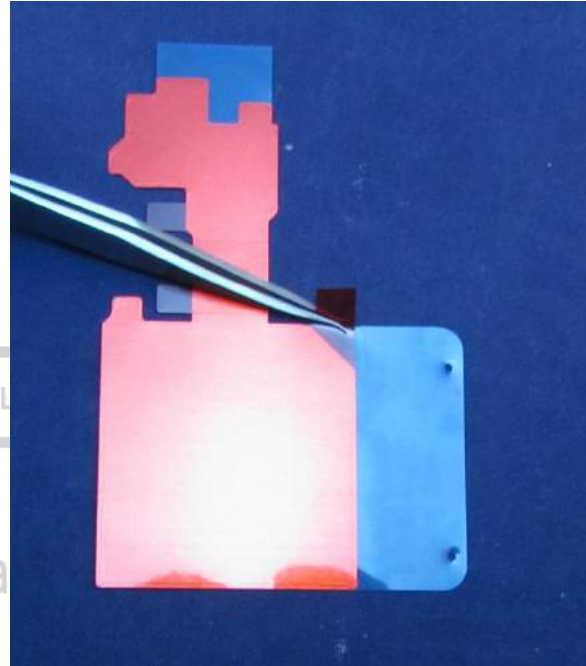

3. Use the Tweezers to place the Front Copper Foil Heat Spreader onto the Battery and Main PCB as shown.



4. Slide fingertip along the Front Copper Foil Heat Spreader to secure it to the Battery and Main PCB.


5. Use the Tweezers to remove the lining of the Front Copper Foil Heat Spreader.




NFC Antenna Assembly

Description	Reference #
ASSY, BATTERY, LI POLY,LW50, 5000mAh	14
ASSY, FLEX, Wireless Charging, Burton	32

1. Use the Tweezers to remove the NFC Antenna from the liner.

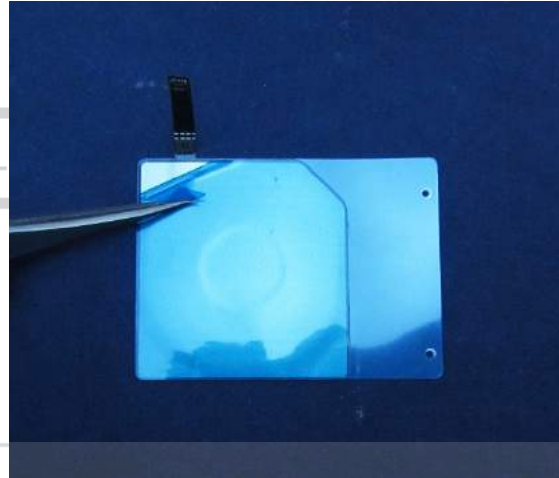

2. Use the Tweezers to place the NFC Antenna over the Battery in the orientation shown.

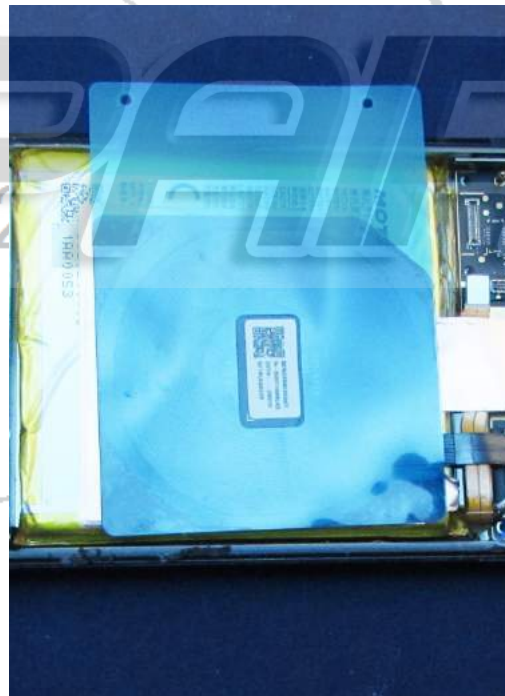


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

3. Use the Tweezers to remove the liner from the NFC Antenna.

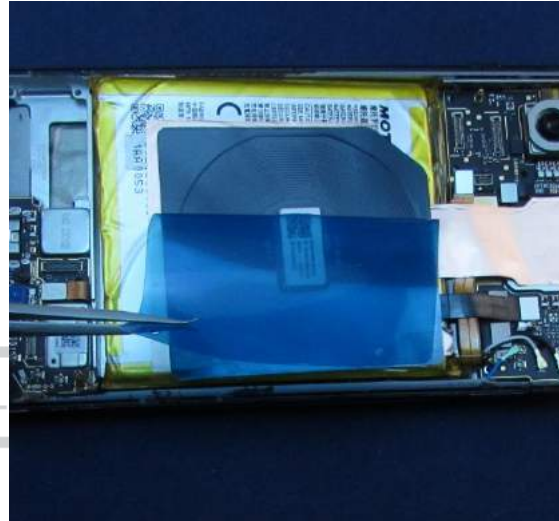


4. Use rolling pressure to connect the NFC Antenna BtB Connector to the Main PCB.

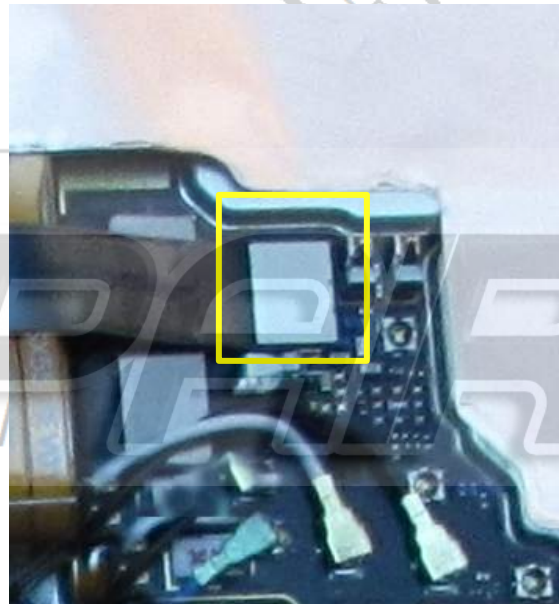

USB Flex Assembly

Description	Reference #
ASSY, BATTERY, LI POLY,LW50, 5000mAh	14
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
XT2061-3 sub board CS ASSY,USB-BOARD-KIT, BURTON	19
ASSY, FLEX, USB (Bridge 1), Burton	34

1. Use the Tweezers to remove the adhesive liners from the USB Flex.

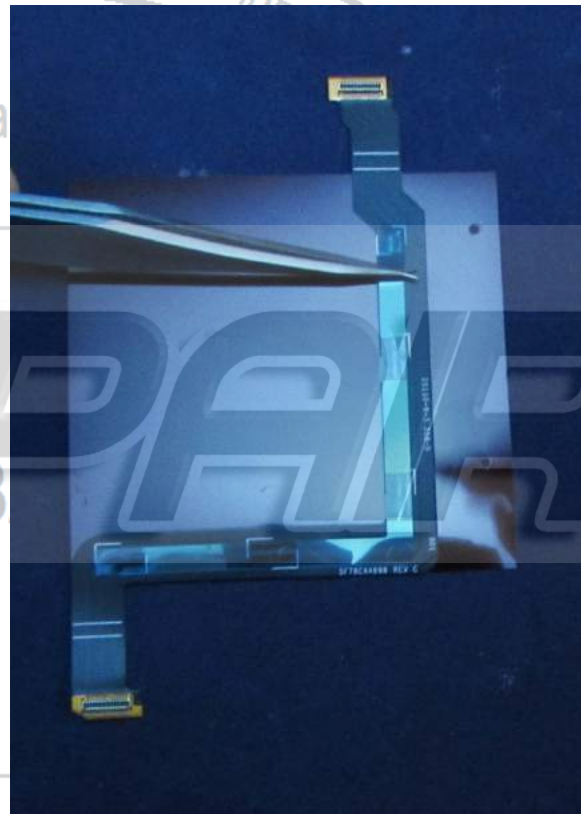


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

2. Use the Tweezers to place the USB Flex onto the Battery, Main PCB and Lower PCB in the orientation shown.

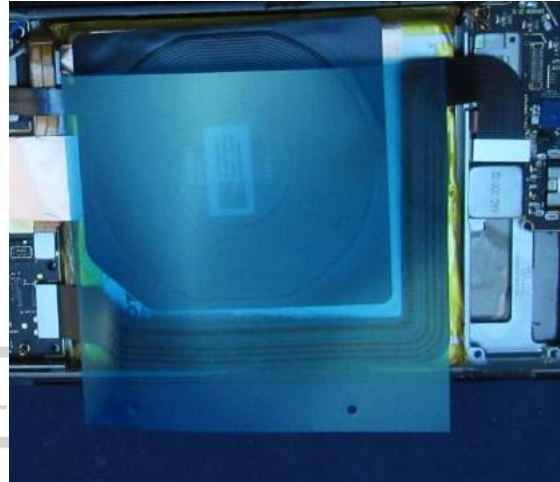

3. Use the Tweezers to remove the liner from the USB Flex.

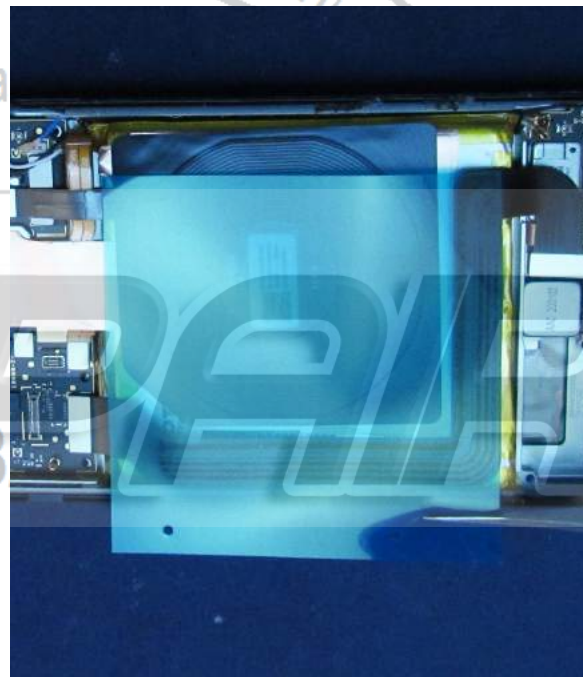


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

4. Use rolling pressure to connect the USB Flex BtB Connector to the Main PCB.

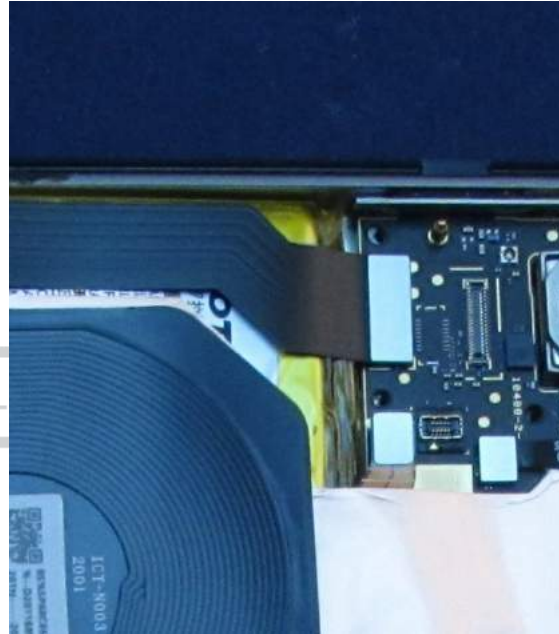


5. Use rolling pressure to connect the USB Flex BtB Connector to the Lower PCB.



Audio Flex Assembly

Description	Reference #
ASSY, BATTERY, LI POLY,LW50, 5000mAh	14
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
XT2061-3 sub board CS ASSY,USB-BOARD-KIT, BURTON	19
ASSY, Audio/RF flex (Bridge 2), Burton	35

1. Use the Tweezers to remove the adhesive liners from the Audio Flex.

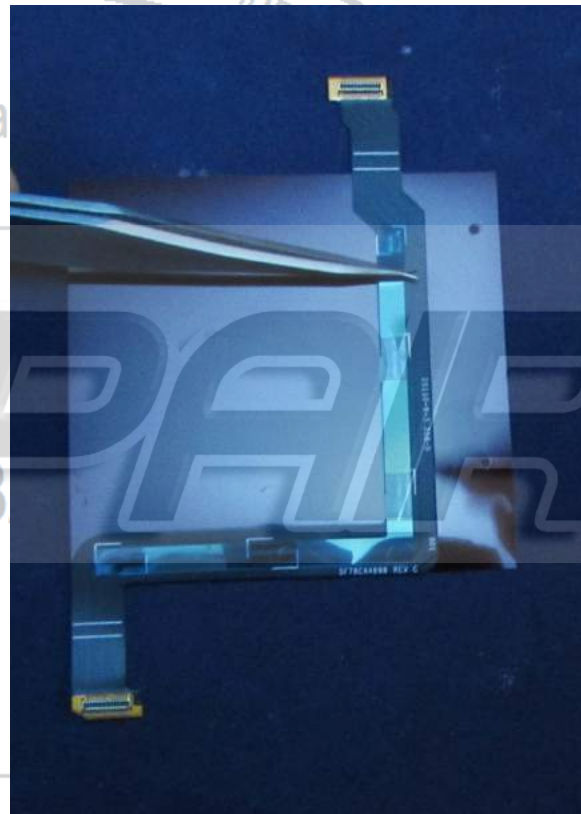


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

2. Use the Tweezers to place the Audio Flex onto the Battery, Main PCB and Lower PCB in the orientation shown.

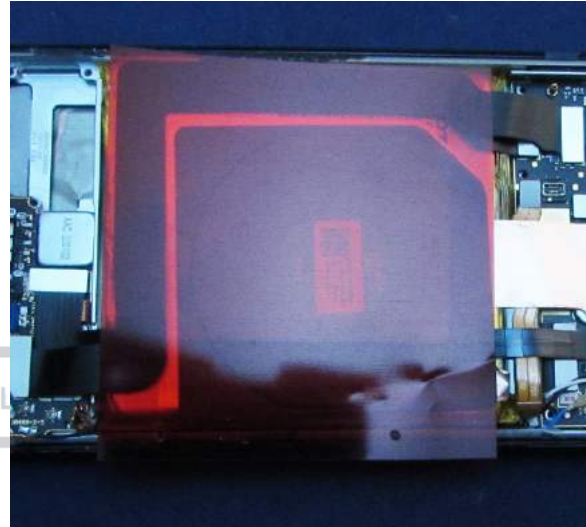

3. Use the Tweezers to remove the liner of the Audio Flex.

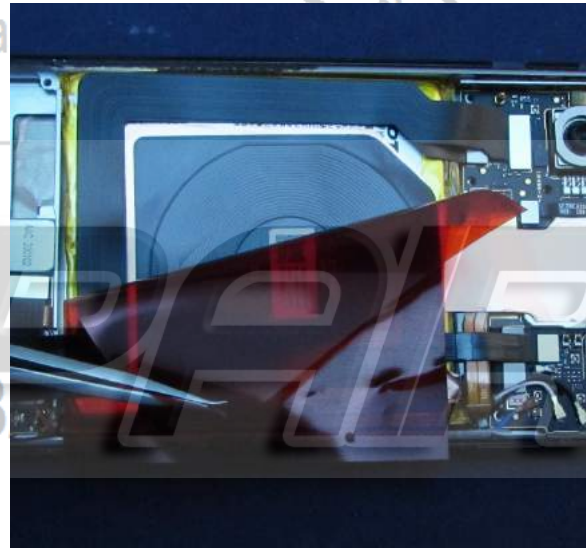


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

4. Use rolling pressure to connect the Audio Flex BtB Connector to the Main PCB.

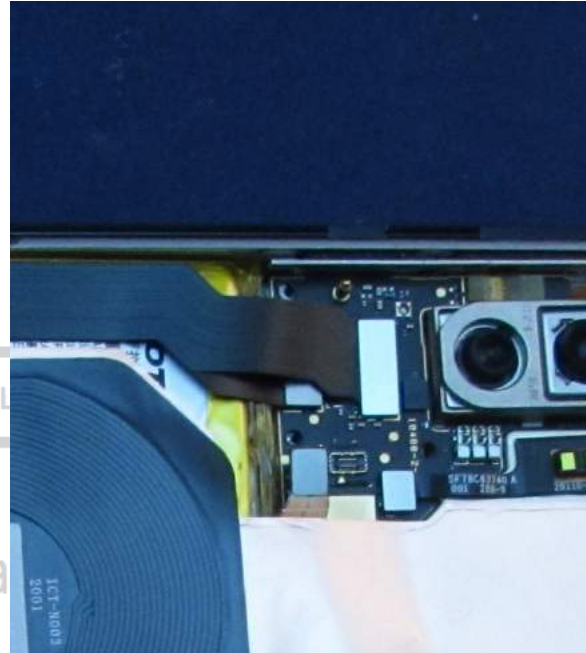

5. Use rolling pressure to connect the Audio Flex BtB Connector to the Lower PCB.




Mid mmWave Antenna Assembly

Description	Reference #
Copper,Bracket,mm-Wave, Back, BURTON	9
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
5G mmw-ANTENNA PCB ASSY, QTM525	27

1. Use the Tweezers to remove the liner of the Mid mmWave Antenna Copper Bracket.



2. Use your fingers to place the Mid mmWave Antenna Copper Bracket onto the rear of the Mid mmWave Antenna as shown.

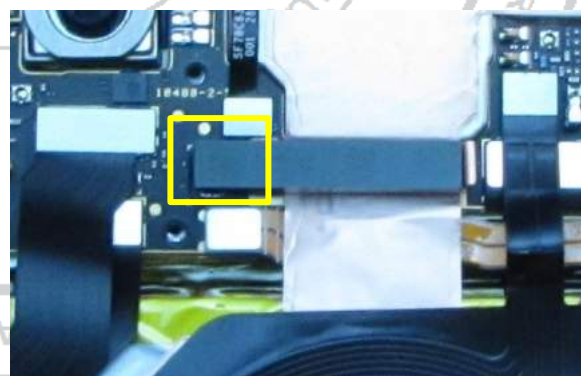

3. Use rolling pressure to connect the Mid mmWave Antenna BtB Connector to the Main PCB.


Front-Facing Imager Assembly

DIE CUT,Front Camera Copper-Tape, BURTON	Reference #
DIE CUT,Front Camera Copper-Tape, BURTON	4
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
MDL,CAMR,L2X5F50	36

1. Use the Tweezers to remove the Front-Facing Imager Foil from the carrier.



2. Use the Tweezers to place the Front-Facing Imager Foil on the rear of the Front-Facing Imager in the orientation shown.

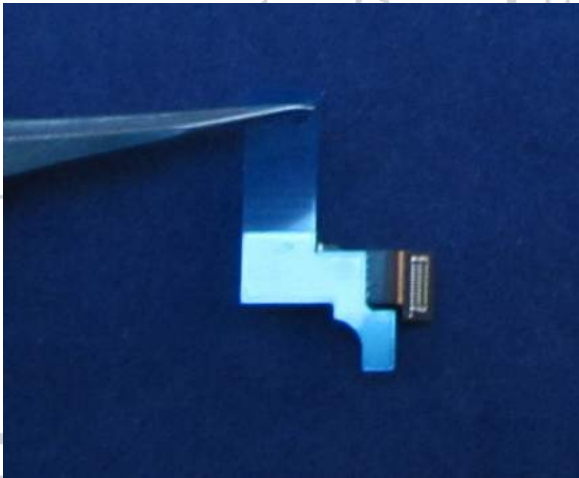


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

3. Use the Tweezers to remove the liner from the Front-Facing Imager Foil.

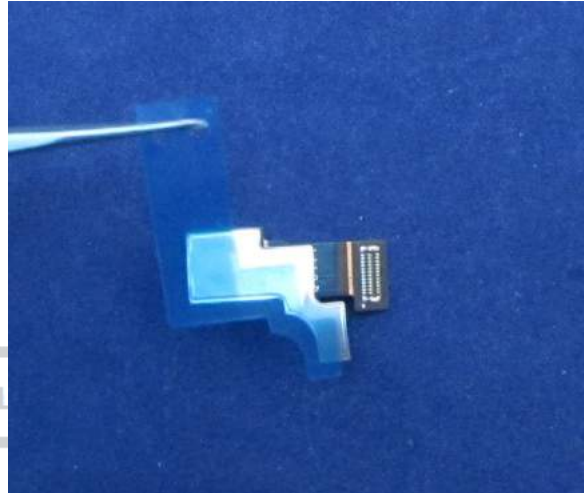

4. Use rolling pressure to connect the Front-Facing Imager BiB Connector to the Main PCB. Use care so that the Front-Facing Imager Foil touches the Front Copper Foil Heat Spreader.

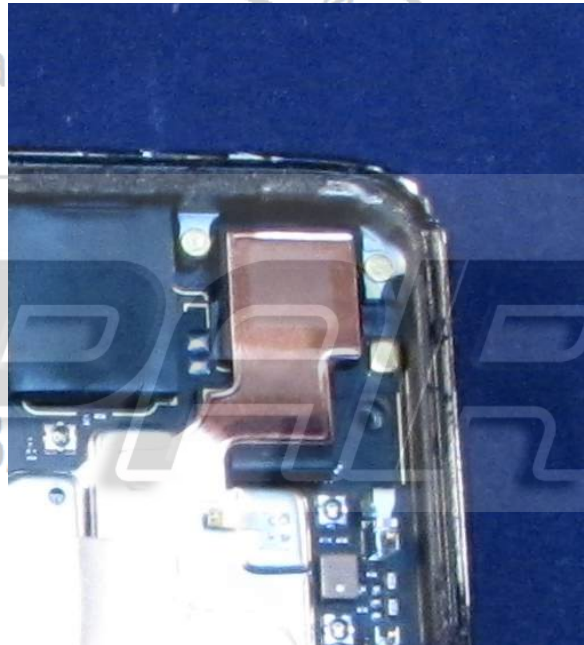


Top Carrier Assembly

Description	Reference #
XT2061-1 Main board 8+256G SS CS XT2061-3 Main board 8+256G SS CS ASSY,MAIN, BD-KIT,BURTON,CANADA ASSY, MAIN BD-KIT, BURTON, CANADA (SKD)	18
ASSEMBLY,HSG, TOP CARRIER, BURTON	40
SCREW, TOP, BURTON	53

1. Use your fingers to place the Top Carrier into the pocket of the Front Housing.



2. Use the Torx Driver and T3 Torx Bit to tighten the 10 silver Machine Screws to $0.9 \pm 0.1 \text{ Kgf/cm}$.

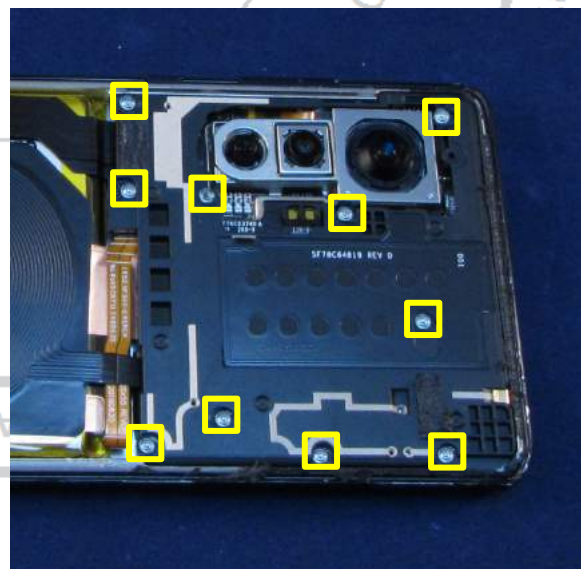


Lower Carrier Assembly

Description	Reference #
XT2061-3 sub board CS ASSY,USB-BOARD-KIT, BURTON	19
ASSY, HSG,BTM CARRIER,LOUD-SPKR, BURTON	45
SCREW, BOTTOM, BURTON	46

1. Use your fingers to place the Lower Carrier into the pocket of the Front Housing.



2. Use the Torx Driver and T3 Torx Bit to tighten the 6 black Machine Screws to $0.9 \pm 0.1 \text{ Kgf/cm}$.

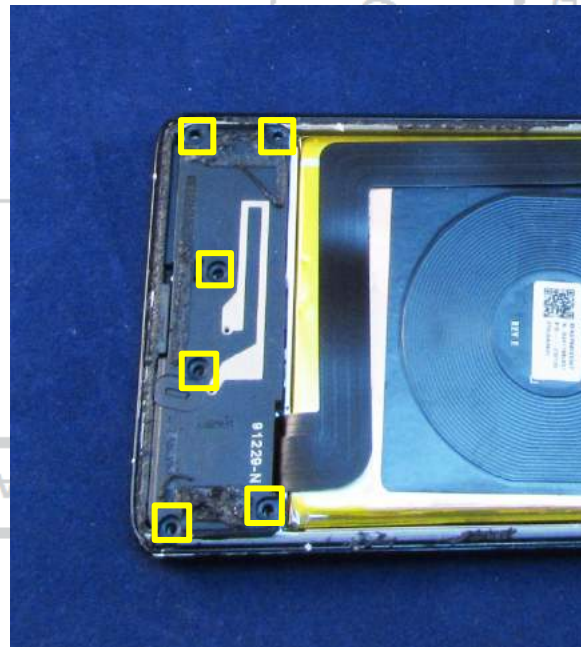

Rear Inlay Shim Assembly

Description	Reference #
DIE-CUT, MESH, MIC 3, BURTON	12
INLAY, REAR GLASS (2nd), BURTON HSG,REAR,SGA,INLAY, REAR GLASS,BYD, SGA	57

1. Use the Tweezers to remove the Rear Inlay Shim from the carrier.



2. Use the Tweezers to place the Rear Inlay Shim onto the Rear Inlay in the location shown.




Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


3. Use the Tweezers to remove the liner from the Rear Inlay Shim.

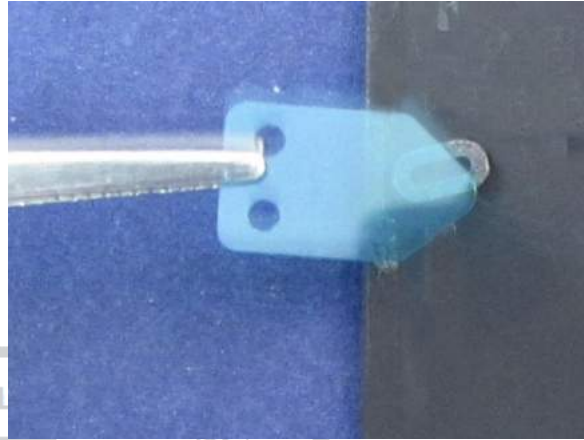

Rear Inlay Microphone Gasket Assembly

Description	Reference #
INLAY, REAR GLASS (2nd), BURTON HSG,REAR,SGA,INLAY, REAR GLASS,BYD, SGA	57
DIE-CUT, GASKET, MIC 2, BURTON	--

1. Use the Tweezers to remove the Rear Inlay Microphone Gasket from the carrier.

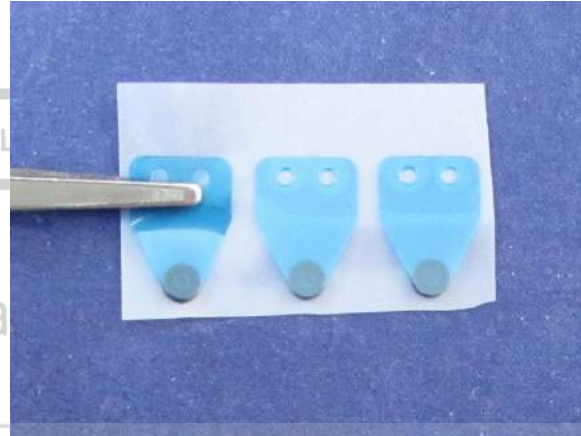

2. Use the Tweezers to place the Rear Inlay Microphone Gasket on the Rear Inlay in the location shown.



Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

3. Use the Tweezers to remove the liner of the Rear Inlay Microphone Gasket.




Rear-Facing Imager Lens Assembly

Description	Reference #
Assy Camera Bezel, BURTON BZL,CAMR,TURBO,ASSY CAM BEZEL,SANGRIA RE	48
Tertiary CAMERA LENS, BURTON	49
Primary CAMERA LENS, BURTON	50
Secondary, CAMERA LENS, BURTON	51

1. Use the Tweezers to remove the liner of the Rear-Facing Imager Lens Bezel.



2. Use the Tweezers to remove the Large Rear-Facing Imager Lens from the carrier.

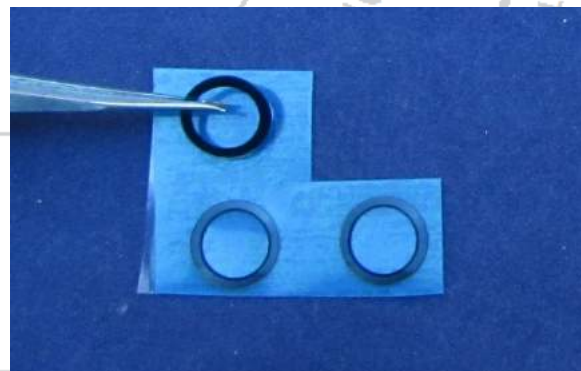

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

3. Use the Tweezers to place the Large Rear-Facing Imager Lens into the pocket of the Rear-Facing Imager Lens Bezel.




4. Use the Tweezers to remove the Second Small Rear-Facing Imager Lens from the carrier.



5. Use the Tweezers to place the Second Small Rear-Facing Imager Lens into the pocket of the Rear-Facing Imager Lens Bezel.



6. Use the Tweezers to remove the First Small Rear-Facing Imager Lens from the carrier.

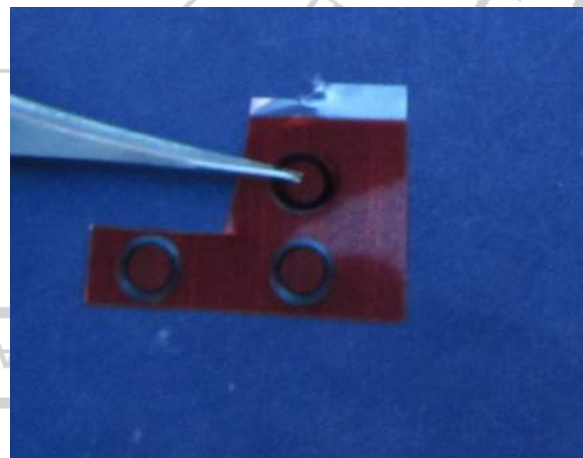

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

7. Use the Tweezers to place the First Small Rear-Facing Imager Lens into the pocket of the Rear-Facing Imager Bezel.




Flash Lens Assembly

Description	Reference #
Assy Camera Bezel, BURTON BZL,CAMR,TURBO,ASSY CAM BEZEL,SANGRIA RE	48
LENS,FLASH,REAR, BURTON	52

1. Use the Tweezers to remove the Flash Lens from the carrier.



2. Use the Tweezers to apply the Flash Lens adhesive to the Rear-Facing Imager Lens Bezel as shown.

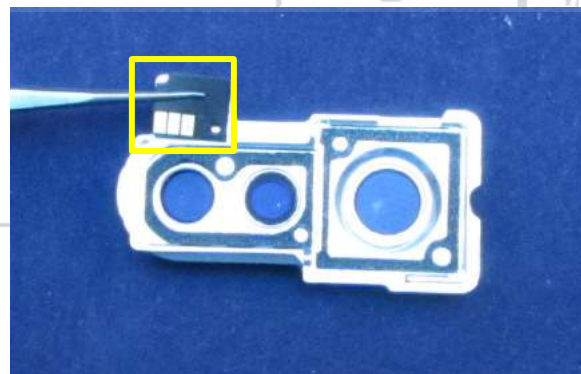


Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


3. Use the Tweezers to place the Flash Lens on the front of the Rear-Facing Imager Lens Bezel.
4. Press down for 5 seconds to secure the Flash Lens to the Rear-Facing Imager Lens Bezel.

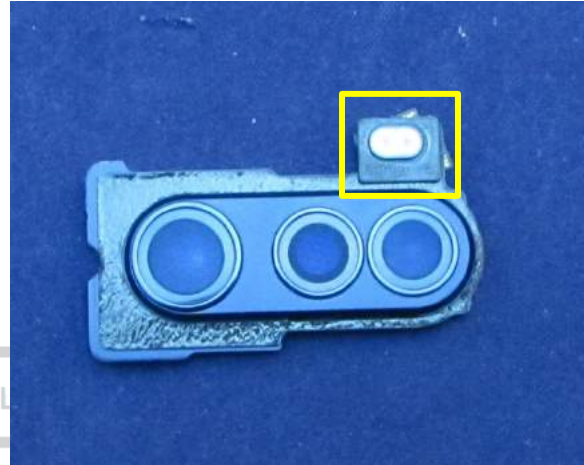

Rear Inlay Assembly

Description	Reference #
Assy Camera Bezel, BURTON BZL,CAMR,TURBO,ASSY CAM BEZEL,SANGRIA RE	48
DIE CUT, ADHESIVE, INNER, INLAY, BURTON	55
DIE CUT, ADHESIVE INLAY, BURTON	56
HSG,REAR,SGA,INLAY, REAR GLASS,BYD, SGA ASSEMBLY,HSG,TOP CARRIER, BURTON	57

1. Use the Tweezers to place the Rear-Facing Imager Lens Bezel into the pocket of the Rear Inlay as shown.

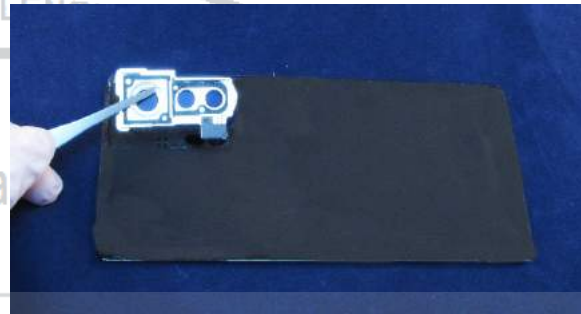

2. Press down for 5 seconds to secure the Rear-Facing Imager Lens Bezel to the Rear Inlay.

3. Use the Tweezers to remove the First Rear Inlay Adhesive from the carrier.



4. Use the Tweezers to place the First Rear Inlay Adhesive into the Rear Inlay Adhesive Alignment Press (1-00-A1-10000).



Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

5. Place the phone Display side up into the Rear Inlay Adhesive Alignment press.



6. Remove the phone from the Rear Inlay Adhesive Press.
7. Use the Blackstick to press the First Rear Inlay Adhesive along all edges of the phone.

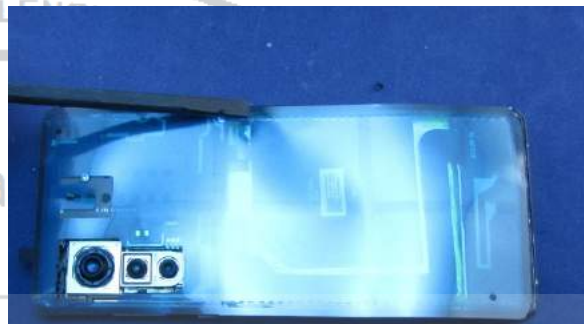


Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

8. Use the Tweezers to remove the liners from the First Rear Inlay Adhesive.

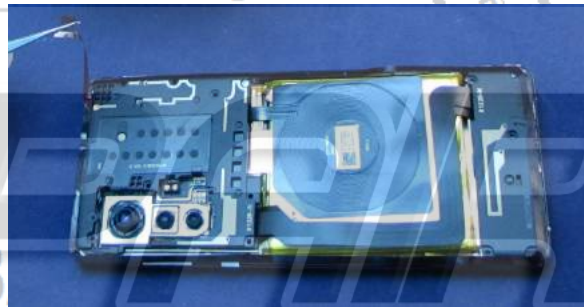

9. Use the Tweezers to remove the Second Rear Inlay Adhesive from the carrier.

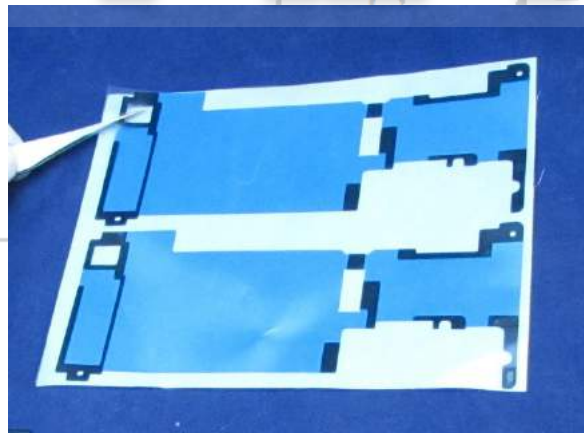

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA


10. Use the Tweezers to place the Second Rear Inlay Adhesive into the Rear Inlay Adhesive Alignment Press.



11. Place the phone Display side up into the Rear Inlay Adhesive Alignment press.



12. Remove the phone from the Rear Inlay Adhesive Press.

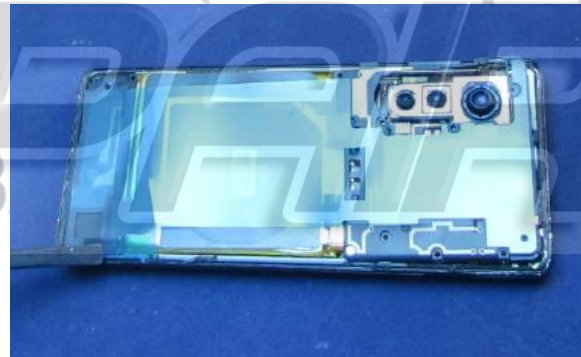


13. Use the Blackstick to press the Second Rear Inlay Adhesive along all edges of the phone.




Motorola Edge Plus

Level 2 – Service and Repair Manual


ANIBAL GARCIA VENEZUELA

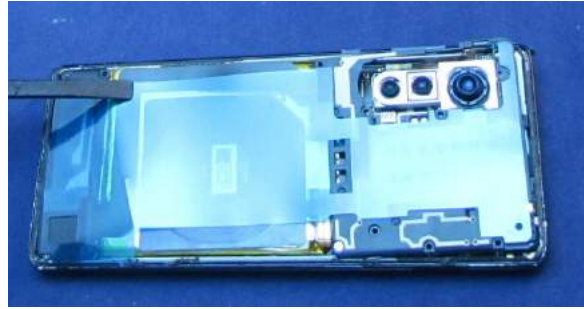

14. Use the Tweezers to remove the liner from the Second Rear Inlay Adhesive.

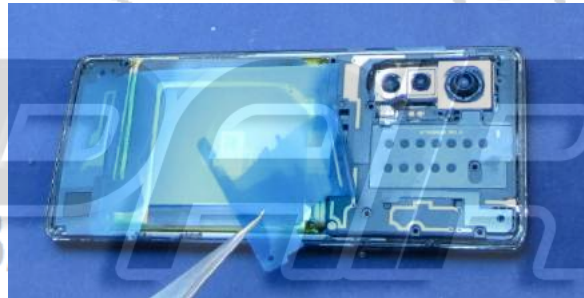

15. Place the Bottom Rear Inlay Press (1-00-A3-10000) into the Fixture Press.

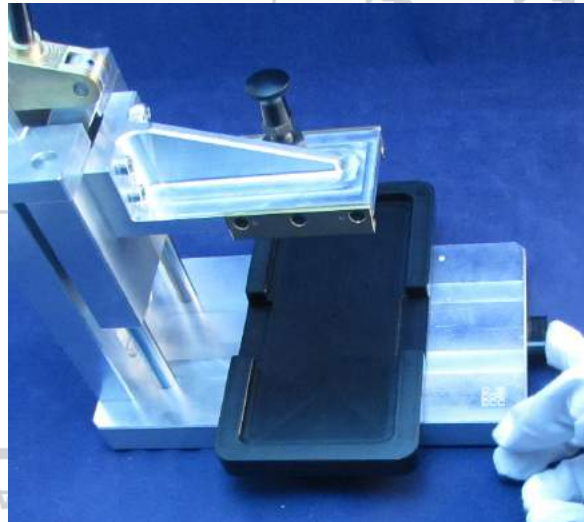

Motorola Edge Plus

Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

16. Use your fingers to place the Rear Inlay into the Top Rear Inlay Press as shown.



17. Place the Top Rear Inlay Press (1-00-A3-10000) into the Fixture Press.



18. Place the phone into the Rear Inlay Fixture Press with the Display side down.



Motorola Edge Plus


Level 2 – Service and Repair Manual

ANIBAL GARCIA VENEZUELA

19. Press down for 10 seconds to secure the Rear Inlay to the Front Housing.
20. Remove the phone from the Fixture Press.




21. Apply manual pressure to the Rear Inlay as follows:
22. Place both thumbs on point 1 (in the middle of the Inlay) and slide them out to point 2.
23. Place both thumbs on point 3 and slide them out to point 4.
24. Place both thumbs on point 5 and slide them out to points 6 and 7.
25. Place both thumbs on point 8 and slide them out to point 9.
26. Place both thumbs on point 10 and slide them out to point 11.
27. Place both thumbs on point 12 and slide them out to points 11 and 9.
28. Apply manual pressure along the top and side edges of the phone.

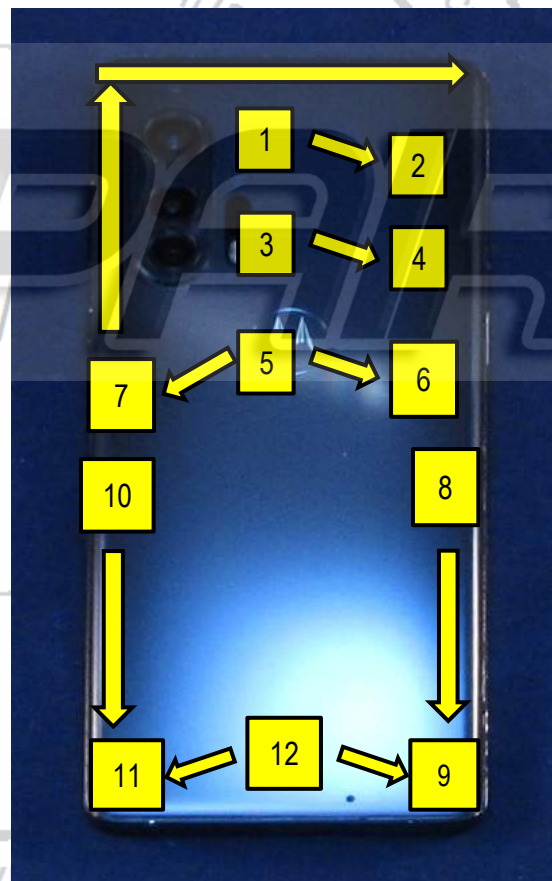

IMEI Label Assembly

Description	Reference #
ASSEMBLY,HSG, SINGLE SIM TRAY, BURTON HSG,SIM,TURBO,ASSY,SINGLE SIM TRAY,SANGR	11
LBL,IMEI	--

Use the Tweezers to place the IMEI Label onto the SIM/SD Tray.

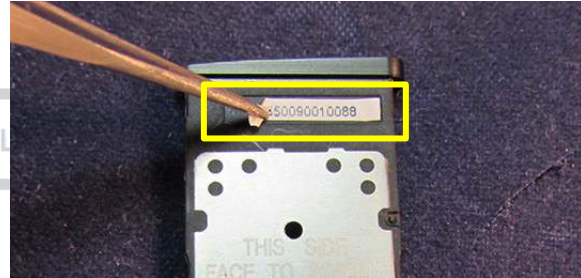


SIM/SD Tray Assembly

Description	Reference #
XT2061-1 TP LCM ASSY BGR VZW LASER CS XT2061-1 TP LCM ASSY SGA VZW LASER CS XT2061-3 TP LCM ASSY BGR NA LASER CS XT2061-3 TP LCM ASSY BGR LA LASER CS XT2061-3 TP LCM ASSY BGR BR LASER CS XT2061-3 TP LCM ASSY BGR EU LASER CS	1
ASSEMBLY,HSG, SINGLE SIM TRAY, BURTON HSG,SIM,TURBO,ASSY,SINGLE SIM TRAY,SANGR	11

Use your fingers to push the SIM/SD Tray into the SIM/SD Tray Slot.



Lenovo Motorola Edge Plus Assembly Quality Check Illustration

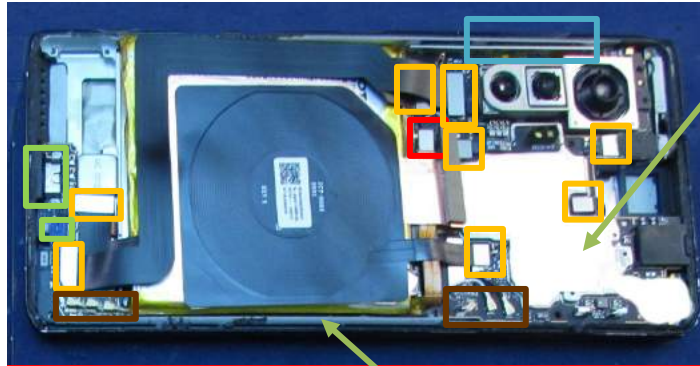

6. Check for the Lower PCB Grommet and USB Grommet (highlighted green).

7. Check that Rear Inlay Adhesive aligns with the Front Housing.

1. Check for missing or misaligned Heat Spreader.

2. Check Battery BtB Connector (highlighted red).


3. Check Side-Key Flex and Side-Key Flex Tape (highlighted blue).

See [Assembly Quality Checklist](#) for a detailed view.

4. Check Main PCB and Lower PCB BtB Connectors (highlighted orange).

5. Check Coax Cables (highlighted brown).

8. Check for any missing or misaligned screws.

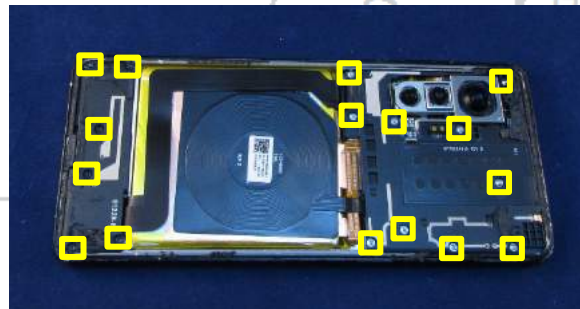

Lenovo Motorola Edge Plus Assembly Quality Checklist

Item	Description
Battery Graphite Heat Spreader	Check for any missing or misaligned Battery Graphite Heat Spreaders.
Battery Connector	Verify that the Battery BtB Connector is well-seated and that there is no sign of damage.
Volume/Power Key	Check if the Volume/Power Key Flex is properly inserted into the ZIF Connector Door.
Side-Key Flex Tape	Check that the Side-Key Tape is present over the ZIF Connector Door of the Side-Key Flex.
	
Main PCB BtB Connectors	Check that the following BtB Connectors are attached to the Main PCB with rolling pressure: • NFC Antenna Flex • USB Flex • Audio Flex • TOF Flex • Proximity Sensor Flex • Mid mmWave Antenna • Top mmWave Antenna • Coax Cables (3)
Screws	Check for any missing or unseated screws.
Grommets	Check for the presence of the: • USB Grommet • Lower PCB Grommet
Adhesive	No adhesive can be reused. Check if any is missing (especially Battery Adhesive) or misaligned (especially Display Adhesive).