


Redmi note4 backlight is not on.


Fault performance: display without light.

Maintenance process: Previously repaired machine, observed that the previous home moved the display part, and the direction was wrong. According to the lamp control principle, find the position of the lamp control part, and find that the booster coil is burnt. After replacement, the fault is solved!

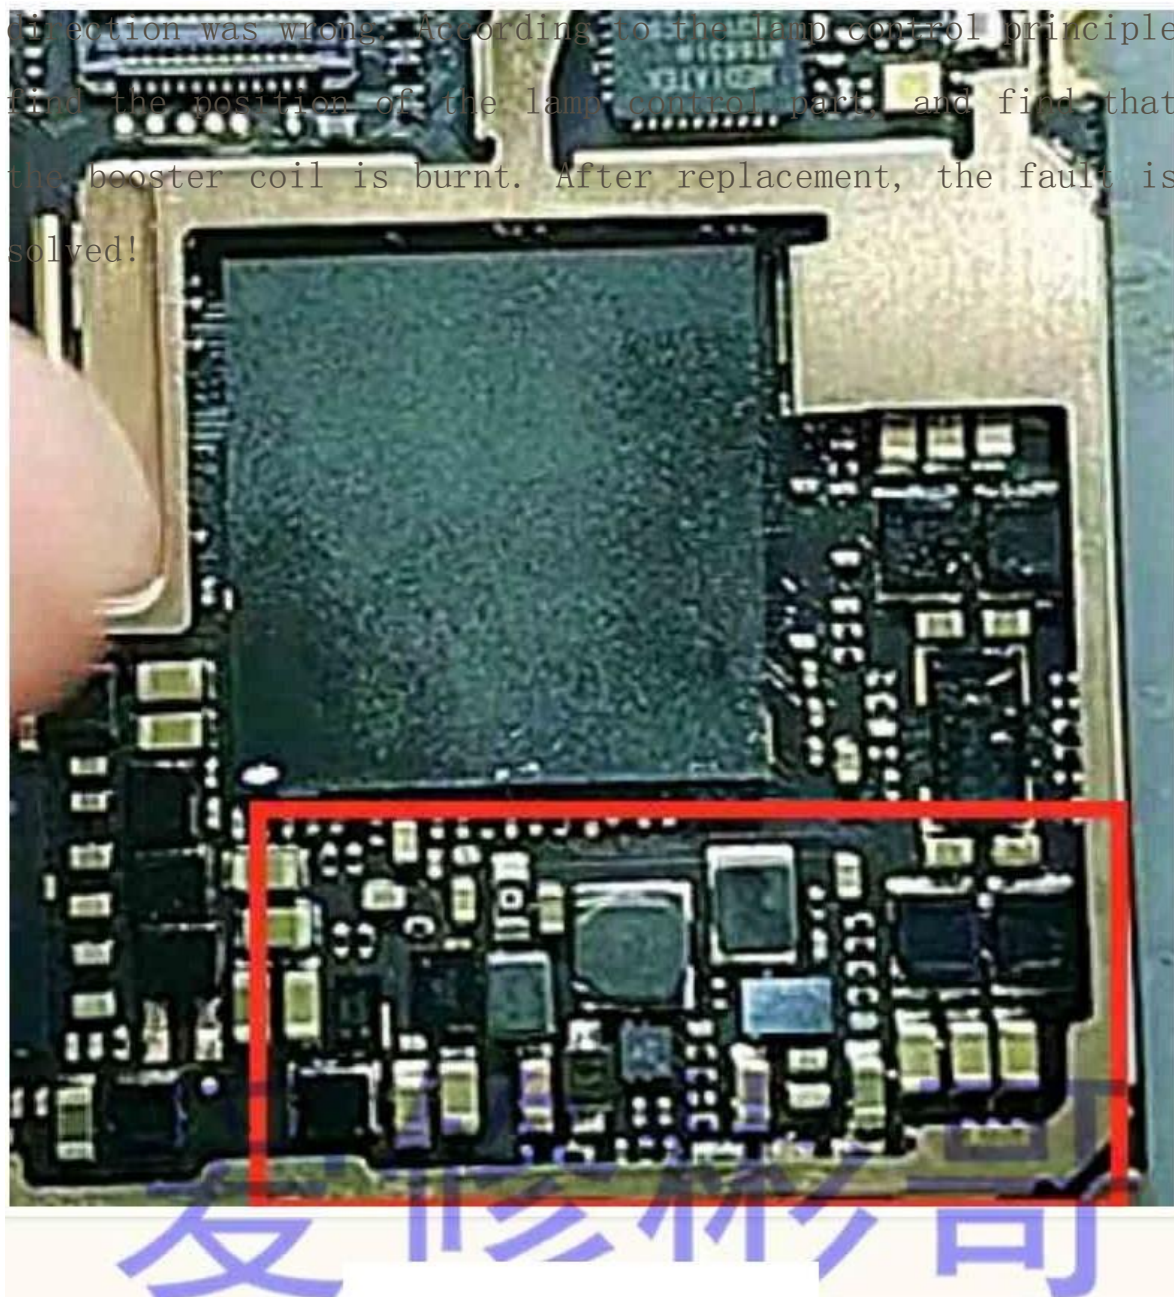


Lamp control partial bitmap

Shi Shan:: Spitting on sin. 吐痰 means we::; Yeah.

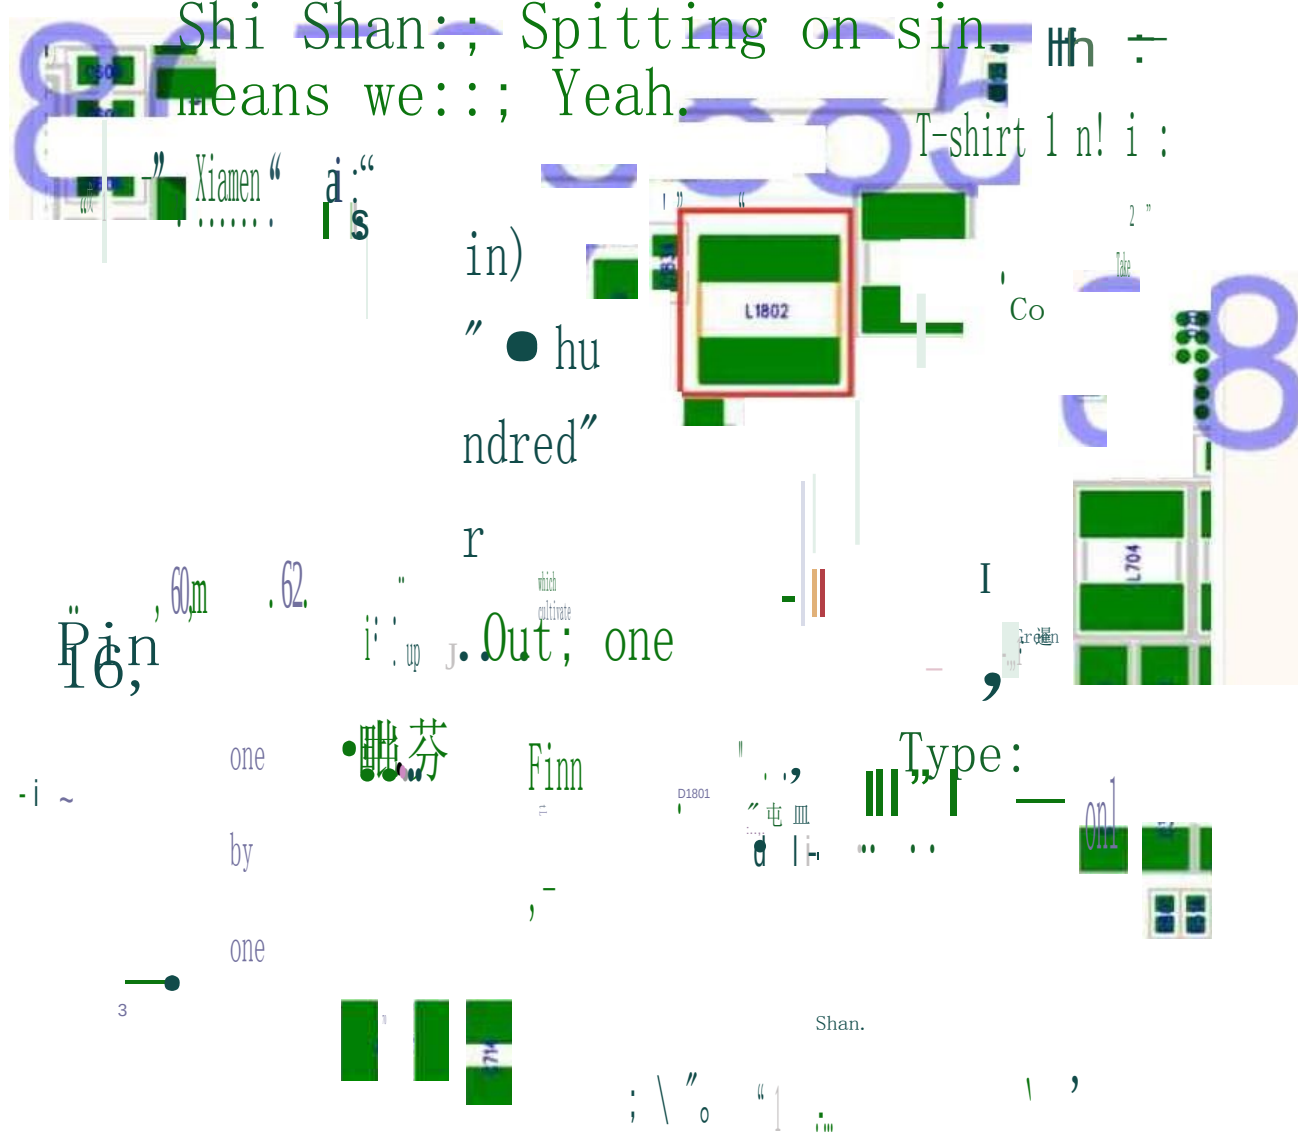

Lamp control part schematic

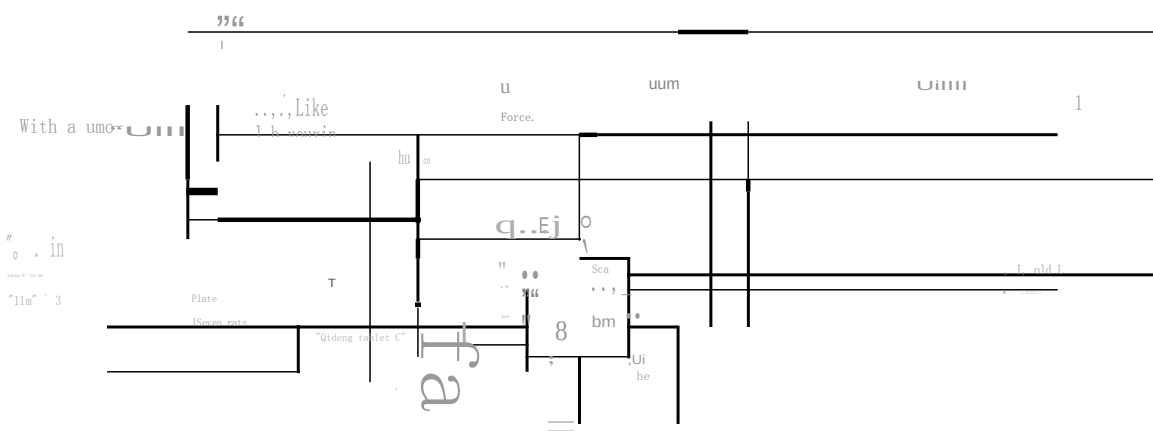

Principle analysis: To find the lamp control position, press the booster coil: diode, booster Capacitor as standard. Once you find a standard, the maintenance is also around these components.