

Redmi Note 4 Series Disassembler

Quick Guide

1. Work preparation

1.1 Working conditions

1.1.1 Maintenance qualification

Inspectors must be trained and obtain training certificates before repairing products.

1.1.2 Environmental requirements

The indoor light intensity is 1000 +/-200Lux (lux), and the inspection room must be isolated from the outside sunlight, and the light must be evenly distributed and illuminated vertically from above.

Indoor temperature

23-28 °C indoor

humidity 40%-55%

Electrostatic protection devices are set in indoor protection working areas, which are mainly used for static leakage, dissipation, neutralization and shielding.

1.2 Tool preparation

The tools required for related operations are as follows: crowbar

Tool use: Disassemble shell, cable auxiliary tool



Tool name: Phillips screwdriver

Tool use: Auxiliary tool for removing screws



2. 24 Removing RF Coaxial Line

2. 25 separation main and auxiliary board FPCSubboard connector

2. 26 Remove main and auxiliary board FPC

2. 27SeparateTP-IC foam

2. 28 Separate Touch Screen Connector

2. 29 Removing side panel

2. 30 Remove noise reduction MIC rubber sleeve

2. 31 Remove the front rubber sleeve

2. 32 Removing earpiece

2. 33 Remove light-sensitive rubber sleeve

2. 34Removing vibrator setPiece

3. Equipment assembly

3. 1 Check related components

3. 2 Installing vibrator assembly

3. 3 Install light-sensitive rubber sleeve

3. 4 Install the earpiece

3. 5 Install the front rubber sleeve

3. 6 Installation of noise reduction MIC rubber sleeve

3. 7 Installing the Touch Screen FPC Connector

3. 8 Installation of auxiliary plate

3. 9MountTP-IC foam

3. 10 Install main and auxiliary board FPC

3. 11 Install main and auxiliary board FPC Subboard connector

3. 12 Installation of RF Coaxial Line

3. 13 Installing coaxial side board connector

3. 14 Installing speaker bracket assembly

3. 15 Installing speaker bracket assembly screws * 7

3. 16 Installing Battery

3. 17 Install front camera

3. 18 Installation of Aftermarket Motherboard Components

3. 19 Installing vibrator pressing steel sheet

3. 20 Installing motherboard screws * 8

3. 21 Install side key FPC

Tool Name: Screwdriver-Star Pentagon-0.8 X50 (SCNC010019400)

Tool Purpose: Auxiliary Tool for Removing Bottom Screw of

Battery Cover



Tool Name: Tip Tweezers (Black) VETUS

ESD-11 Tool Purpose: Disassembly Auxiliary

Tool



Tool Name: Flat Tweezers (Black) VETUS ESD-13

Tool use: Disassembly auxiliary tool (the following two tweezers can be used universally)



Tool name: SIM Cato opening needle

3. 22 Installation
Display FPC
Motherboard
Connector

3. 23 Install main and
auxiliary board FPC
Motherboard connector

3. 24 Installing
Coaxial Board
Connector

3. 25 Installing
fingerprint module
bracket

3. 26 Installation of
rear camera rubber
sleeve

3. 27 Install rear
camera

3. 28 Installing
Battery Connector

3. 29 Installing
battery cover side
key

3. 30 Install fingerprint
module

3. 31 Installing heat
dissipation film for
battery cover

3. 32 Installing rear lens

3. 33 Installing
Fingerprint Module
Connector and
Battery Cover

3. 34 Installing
Battery Cover
Bottom Screw * 2

3. 35 Installation SIM Cato

4. Matters needing
attention

4. 1 reuse principle of
conductive adhesive

4. 2 Fixed adhesive reuse
principle

4. 3 Precautions for
glue removal
operation

Applicable model:


Red Rice Note 4
Series Products

Update instructions:

V01 August 25, 2016

Changes: First edition

Tool Purpose: Turn on SIM Cato

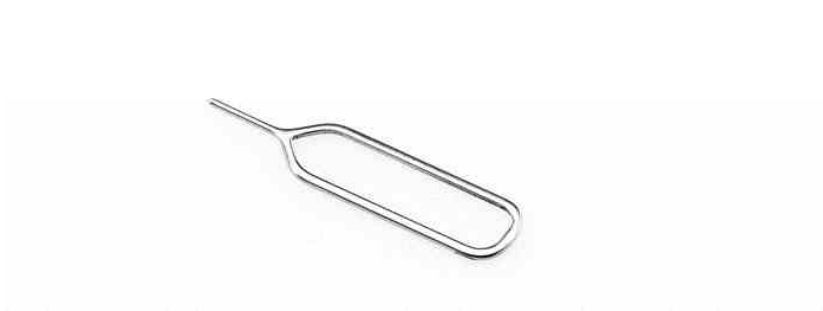

Tool Name: Yellow Plastic


Dismantling Bar Tool

Purpose: Dismantling Battery
Cover




Tool name: dust-free cloth

Tool use: Remove the rear lens with cotton swab

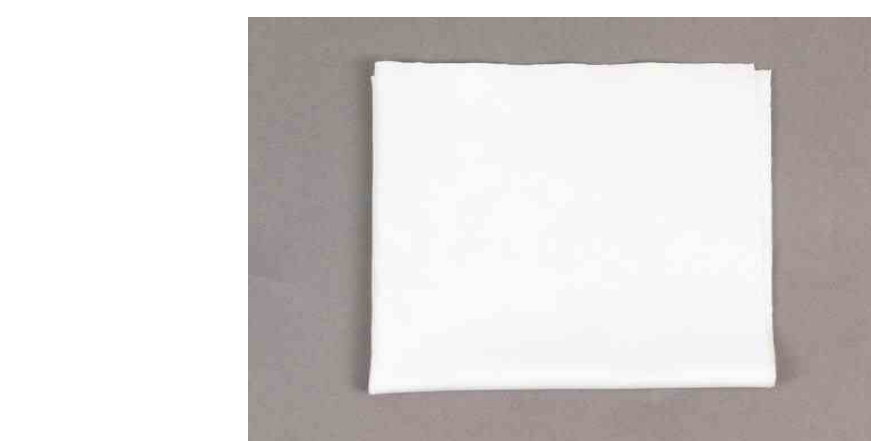

Tool name: Cotton swab

Tool use: Remove the rear camera lens with dust-free cloth

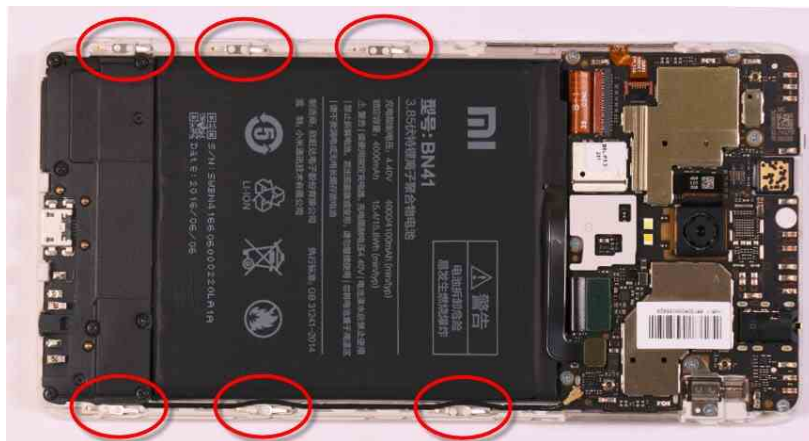


2. 1 Remove SIM card tray

Use SIM card to open the needle: Insert the opening needle into the opening hole of SIM card, push the opening needle into the fuselage until the SIM card tray pops out of the fuselage, and then remove the double SIM card tray.




2. 2 Remove Battery Cover Bottom Screw * 2

Remove the two screws at the bottom of the battery cover using a screwdriver-star pentagonal-0.8 x50.

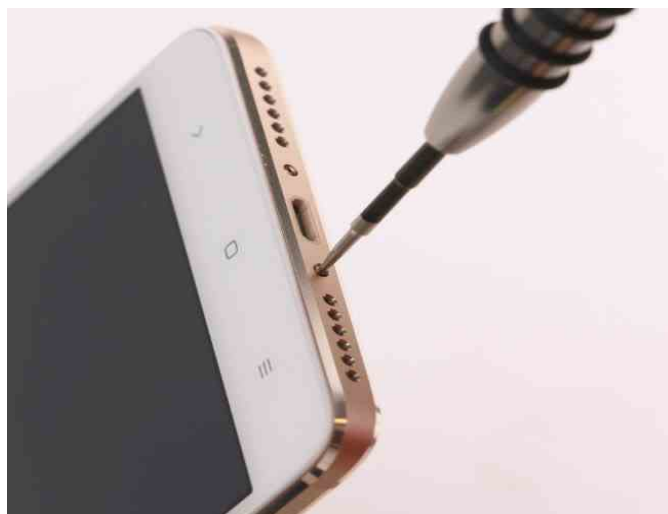


2. 3 Remove battery cover and fingerprint module connector

Insert the yellow plastic disassembly bar near the USB socket, as shown in the following figure.

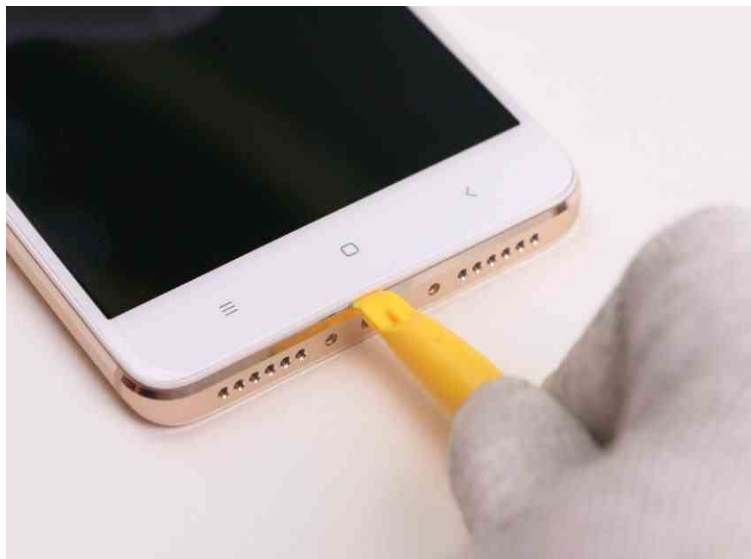


Hold the mobile phone body tightly with your left hand, and force the disassembly rod to the left side of the battery cover to separate the bottom of the left side of the battery cover from the middle frame. Until the buckle in the lower left corner of the battery cover is slid open, it should be noted that there is a buckle in the lower left corner of the battery cover. When sliding to the middle of the mobile phone, you should pay attention to separating the buckle, and continue to slide upward along the left side of the mobile phone to the SIM support position. When disassembling, avoid deformation of the SIM support of the battery cover and the whole battery cover.

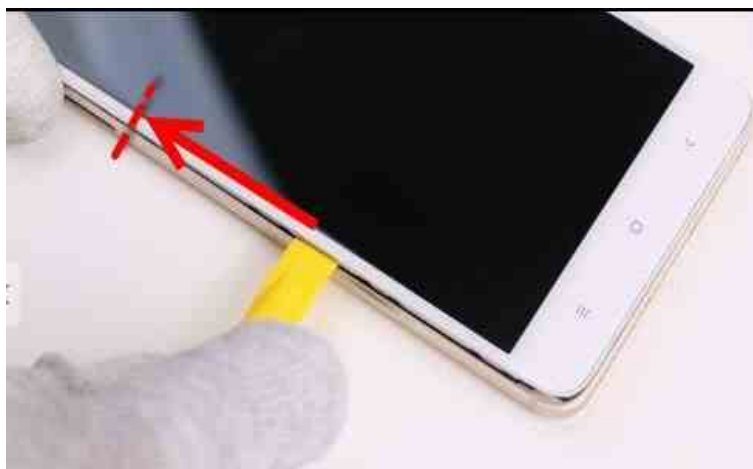

Insert the yellow plastic disassembly rod into the gap between the battery cover and the front shell at the position as shown in the figure, and slide to the right along the bottom of the battery cover until the buckle on the right side of the battery cover is separated. Note: As the speaker bracket assembly has a speaker dust screen, when the disassembly rod slides to the bottom of the right side of the battery cover, it should slide parallel to the front shell as far as possible to avoid damaging the speaker dust screen.




Hold the bottom battery cover with your left hand, and slide upward along the gap where the bottom of the battery cover has been disassembled with a plastic disassembly rod with your right hand. Pay attention not to exert excessive downward force when sliding, so as to avoid deformation of the side key of the battery cover and avoid touching the soft plate of the side key.

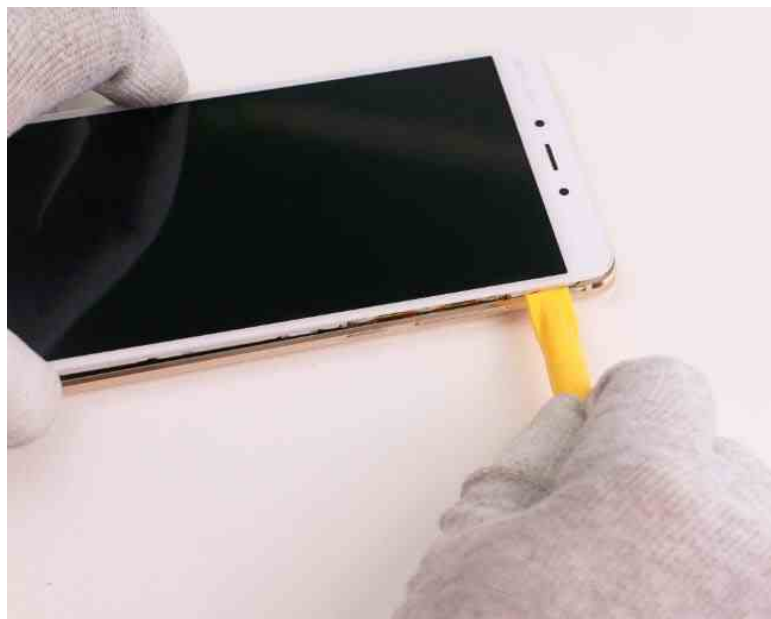

Separate the battery cover with both hands from one side of SIM card, and pay attention not to open at too large an angle to avoid damaging the fingerprint module FPC inside.



Use a crowbar to gently remove the fingerprint module connector in the direction of the battery at the position shown in the following figure. Please note: There are components around the connector. When the crowbar goes deep, it is necessary to avoid damaging the peripheral components, and the peripheral components cannot be used as support points.

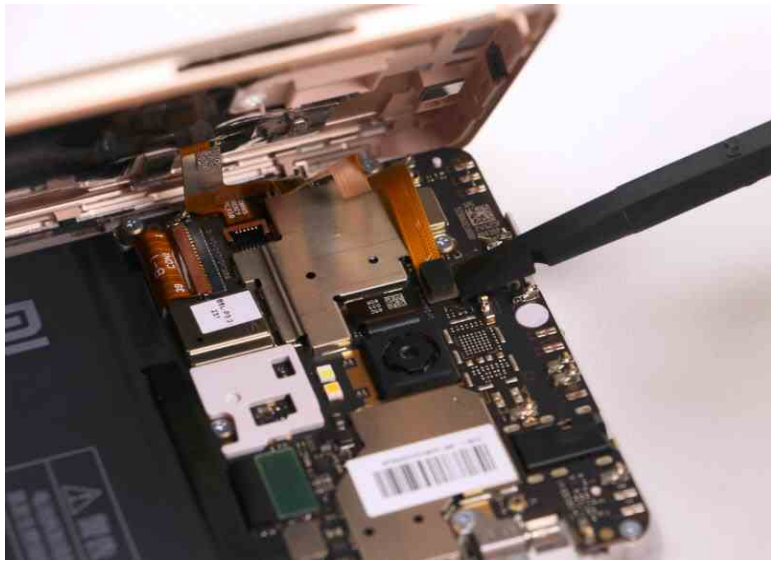

2. 4 Separate rear camera lens

Use a clean cloth to wrap cotton swabs to jack up and remove the camera lenses from the inside of the battery cover.



2. 5 Separate the heat dissipation film of the battery cover

Take off the heat dissipation film of the battery cover evenly by hand, and pay attention to avoid damaging the FPC when taking off the heat dissipation film under the fingerprint module FPC.






2. 6 Remove fingerprint module

Gently push the fingerprint film group inward from the fingerprint collection area on the back of the battery cover with your fingers and separate it from the battery cover.



2. 7 Remove battery cover side key

Use tweezers to remove the side keys from the battery cover.

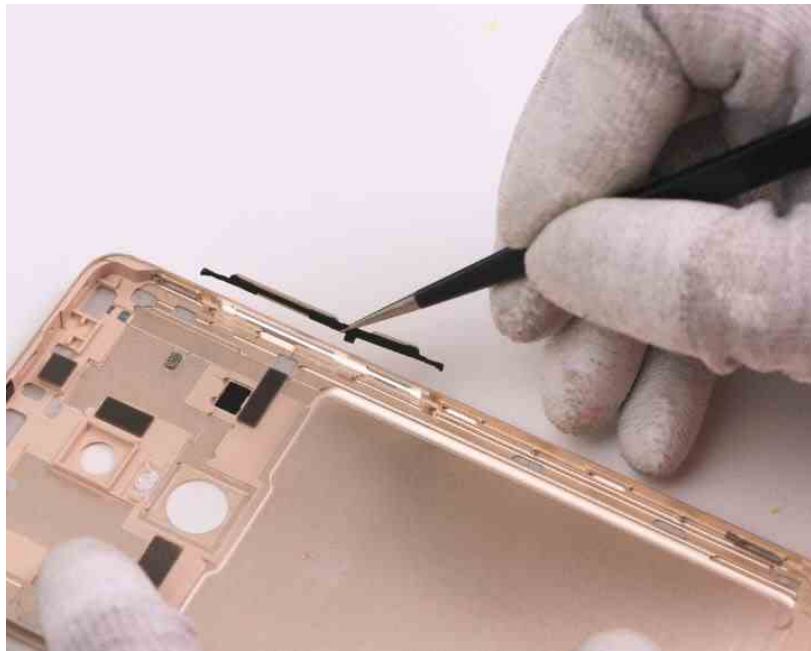


2. 8 Separate the battery connector

Use the crowbar to gently lift the battery connector at the position shown in the following figure. Please note: There are components around the connector. When the crowbar goes deep, it is necessary to avoid damaging the peripheral components, and the peripheral components cannot be used as support points.




2. 9 Remove rear camera

Use the crowbar to gently lift the rear camera connector at the position shown in the following figure. Please note: There are components around the connector. When the crowbar goes deep, it is necessary to avoid damaging the peripheral components, and the peripheral components cannot be used as support points. Then remove it by hand in the direction of the arrow as shown in the figure.

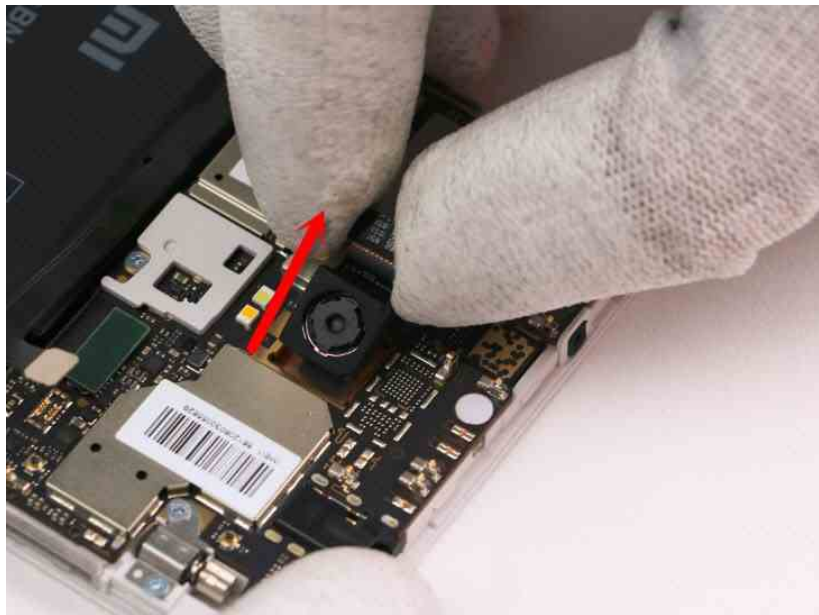

2. 10 Remove rubber sleeve for rear camera

Use flat tweezers to remove the rubber sleeve from the rear camera.

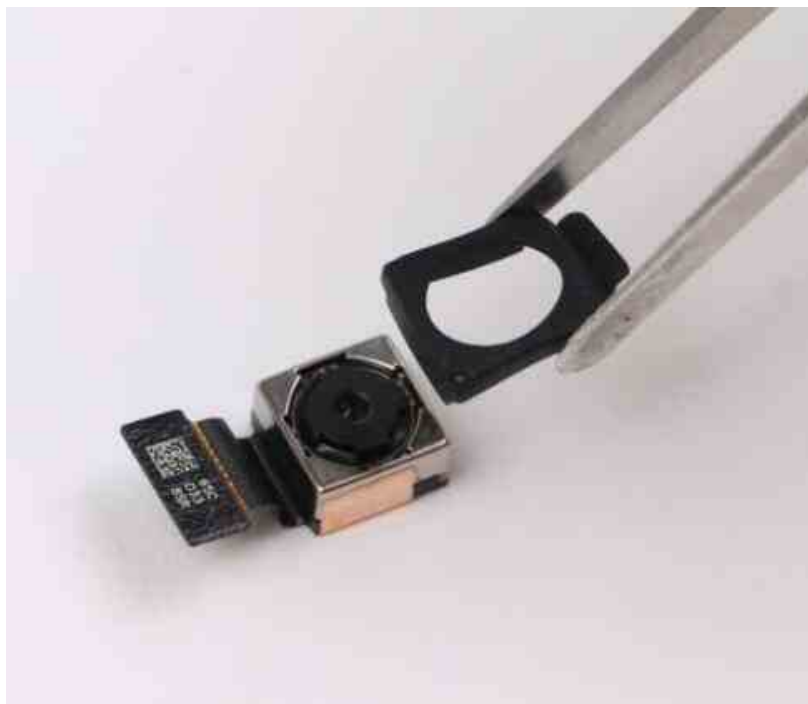


2. 11 Remove side key FPC connector

Use the crowbar to gently lift the side key connector buckle at the position shown below. Please note: There are components around the connector. When the crowbar goes deep, it is necessary to avoid damaging the peripheral components, and the peripheral components cannot be used as support points.



Use flat tweezers to separate the connector gold finger. Then separate the side key FPC flexible plate from the front shell assembly.



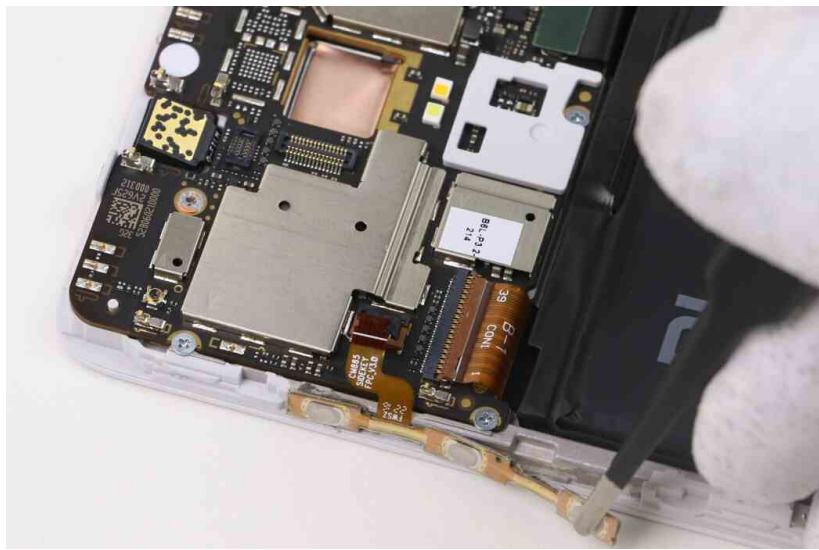

2. 12 Separate Display FPC Connector

Use a crowbar to gently lift the FPC connector snap at the position shown below, and then use flat tweezers to separate the connector gold finger.



2. 13 Remove fingerprint module bracket

Lift the fingerprint module bracket with a crowbar as shown in the figure. Please note: When the crowbar goes deep, it is necessary to avoid damaging the peripheral components, and the peripheral components cannot be used as supporting points.




2. 14 Separate main and auxiliary board FPC motherboard connector

Separate the main and auxiliary board FPC motherboard connectors with a plastic crowbar flat head at one end. Note: There are devices around the connector, so it is necessary to avoid damaging the peripheral devices when the crowbar probes in, and the peripheral devices cannot be used as support points.




2. 15 Separate Coaxial Board Connector

Use flat tweezers to separate and display coaxial motherboard connectors as shown in the following figure.

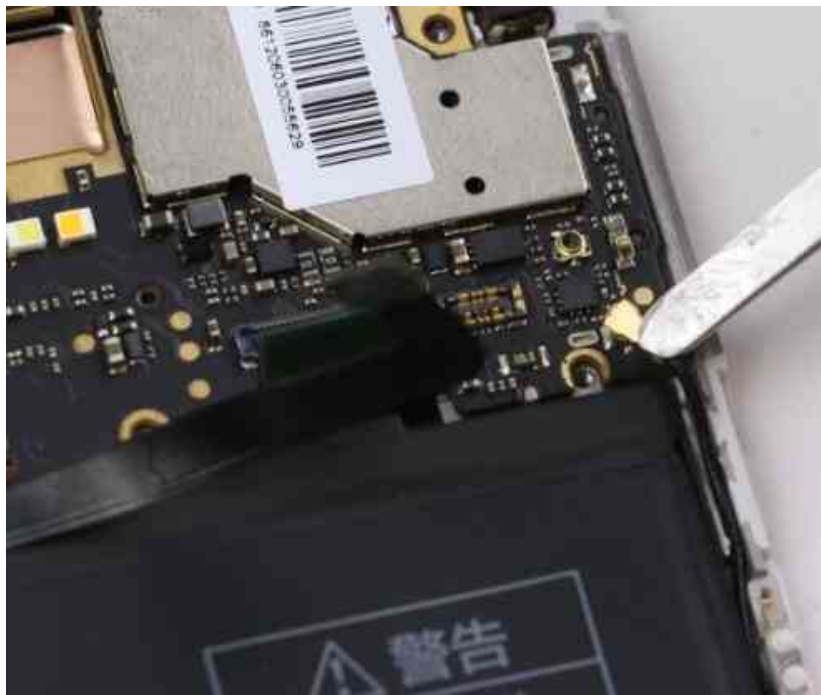

2. 16 Remove Aftermarket Motherboard Assembly Screw * 8

Use a screwdriver to remove the screws manually. If you want to use an electric screwdriver, it is recommended to set the torque of the electric screwdriver to 0.6 ~ 0.7 kgf-cm. Remove the screws (8 in total) in the following order:

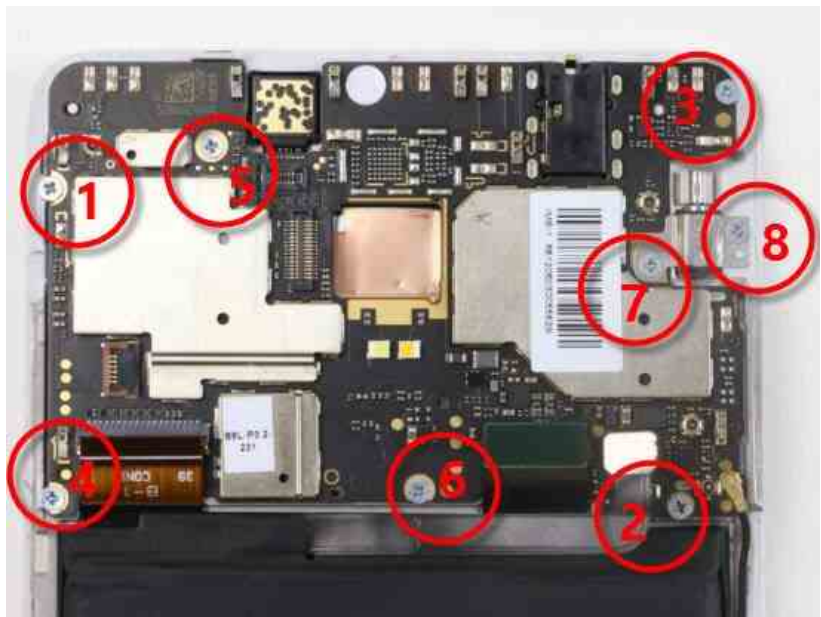


2. 17 Remove vibrator compression steel sheet

Use flat tweezers to remove the vibrator pressing steel sheet.




2. 18 Remove motherboard

Take the motherboard directly from the front shell assembly by hand as shown in the figure.

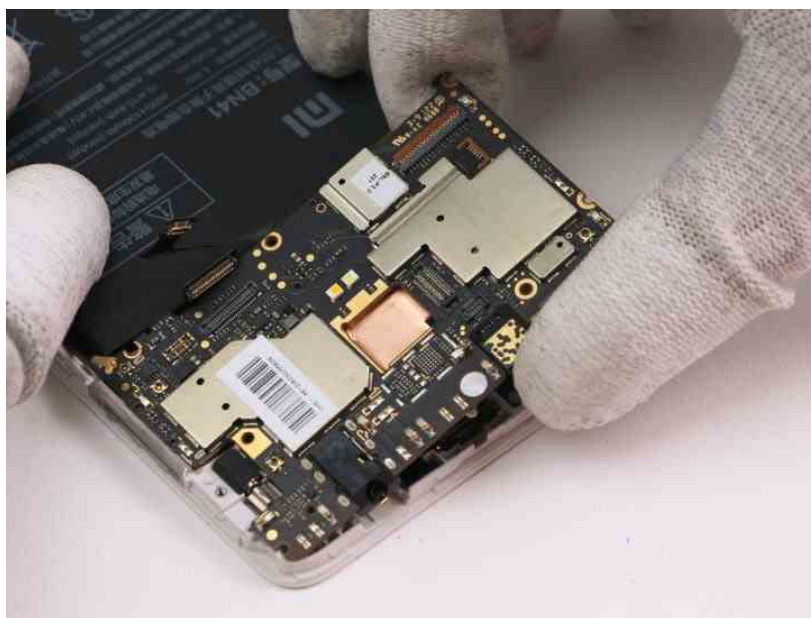

2. 19 Remove front camera

Use plastic crowbar flat head end to separate the front camera connector. Note: There are devices around the connector, so it is necessary to avoid damaging the peripheral devices when the crowbar probes in, and the peripheral devices cannot be used as support points.

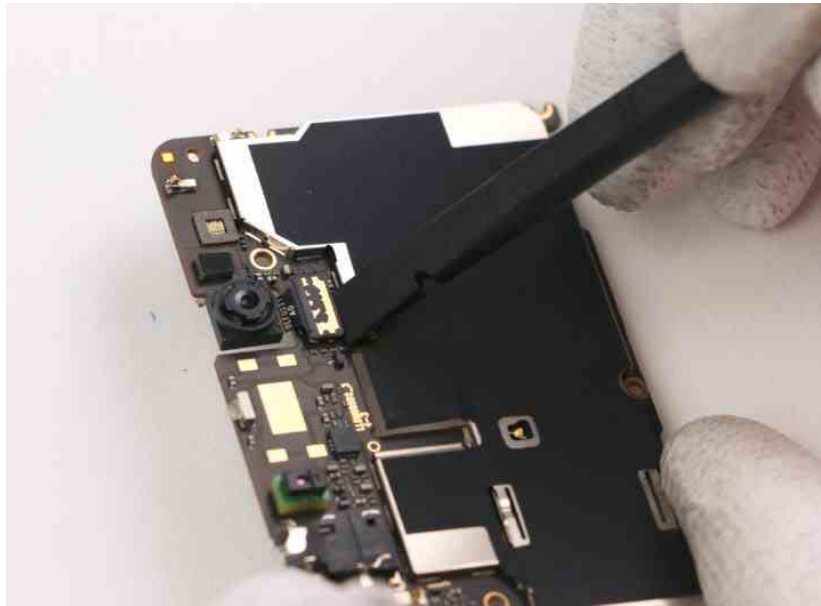

2. 20 Remove speaker bracket assembly screws * 7

Use a screwdriver to remove the screws manually. If you want to use an electric screwdriver, it is recommended to set the torque of the electric screwdriver to 0.6 ~ 0.7 kgf-cm. Remove screws (total of 7 screws) in the order shown below

When removing or installing these screws, be careful to avoid touching the battery with the screwdriver. Once touching the battery, the appearance of the battery wrapping paper will be damaged or sunken, and the battery must be replaced to avoid leakage and combustion.



2. 21 Removing speaker holder assembly

Remove the speaker holder assembly from the right side by hand.



2. 22 Remove battery

Hold the easy-to-pull glue handle of the battery with your fingers, pull out the easy-to-pull glue, and lift the battery up and take it out. Attention: The easy-to-pull glue should be kept parallel to the front shell as far as possible during the pull-out process, and the force should be uniform to avoid the break of the easy-to-pull glue during the pull-out process; If the easy-to-pull glue is broken, it needs to be disassembled with the steel sheet for disassembling the battery to avoid the deformation of the battery. Note that the grounding shrapnel on both sides of the front shell assembly is extremely easy to be scratched and deformed.




2. 23 Separate coaxial line sub-board connector

Use flat tweezers to separate the coaxial side board connector as shown in the following figure.



2. 24 Removing RF Coaxial Line

Take out the RF coaxial line from the clamping slot, pay attention not to tear it vigorously and at too fast speed, and avoid cutting the skin of the RF coaxial line with the clamping buckle. Note that the grounding shrapnel on both sides of the front shell assembly is extremely easy to be scratched and deformed.

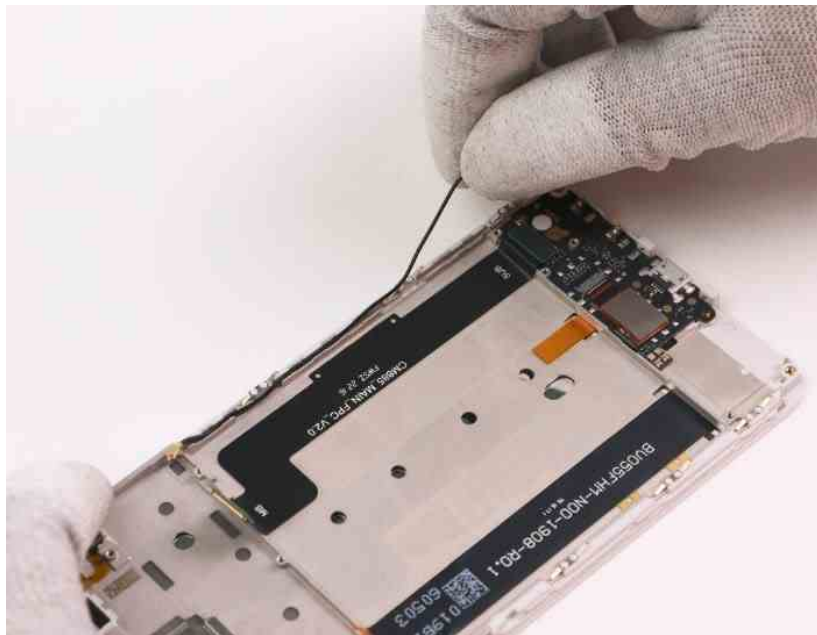


2. 25 Separate main and auxiliary board FPC auxiliary board connector

Lift the sub-board connector of the main and sub-board FPC with a plastic crowbar, and the penetration direction of the crowbar is as shown in the figure. There are devices around the connector, so it is necessary to avoid damaging the peripheral devices when the crowbar probes in, and the peripheral devices cannot be used as support points.



2. 26 Remove main and auxiliary board FPC

Separate the main and auxiliary plates FPC from the front shell assembly by hand.

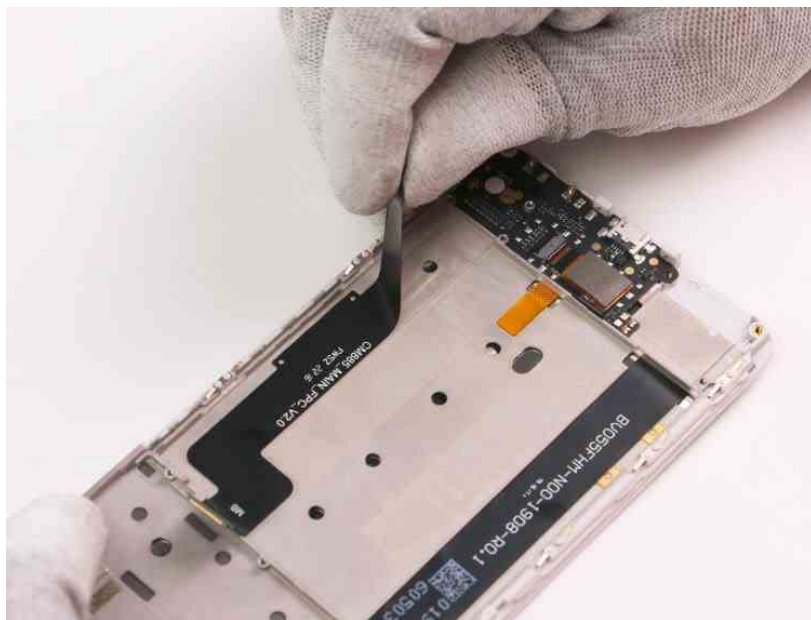

2.27 Separated TP-IC Foam

Gently remove TP-IC foam from touch screen FPC with flat tweezers.



2. 28 Separate Touch Screen Connector

Lift the buckle of the touch screen connector with a plastic crowbar, and the crowbar probes in the direction shown in the figure. There are devices around the connector, so it is necessary to avoid damaging the peripheral devices when the crowbar probes in, and the peripheral devices cannot be used as support points.



As shown in the figure, use flat tweezers to lift the touch screen FPC reinforcement board gently.



Use flat tweezers to remove the connector gold finger.



2. 29 Remove side panel

As shown in the figure, use flat tweezers to lift the sub-plate at the left and right sides of the sub-plate as shown below, and then take it out by hand. Pay attention to the ground shrapnel on both sides of the front shell assembly, which is easy to be scratched and deformed. When lifting, force slowly to avoid the deformation of the auxiliary plate.





2. 30 Remove noise reduction MIC rubber sleeve

Use pointed tweezers to separate the noise-reducing MIC rubber sleeve from the front housing assembly. Pay attention to stretching slowly to avoid damaging the rubber sleeve with pointed tweezers.




2. 31 Remove the front rubber sleeve

Use pointed tweezers to separate the front rubber sleeve from the front housing assembly. Pay attention to stretching slowly to avoid damaging the rubber sleeve with pointed tweezers.



2. 32 Removing earpiece

As shown in the figure, use tweezers to separate the earpiece from the front housing assembly and then take it out. Pay attention to avoid damaging the foam under the earpiece when removing it. Use tweezers to gently extend into the adhesive at the bottom of the earpiece and remove the whole earpiece.

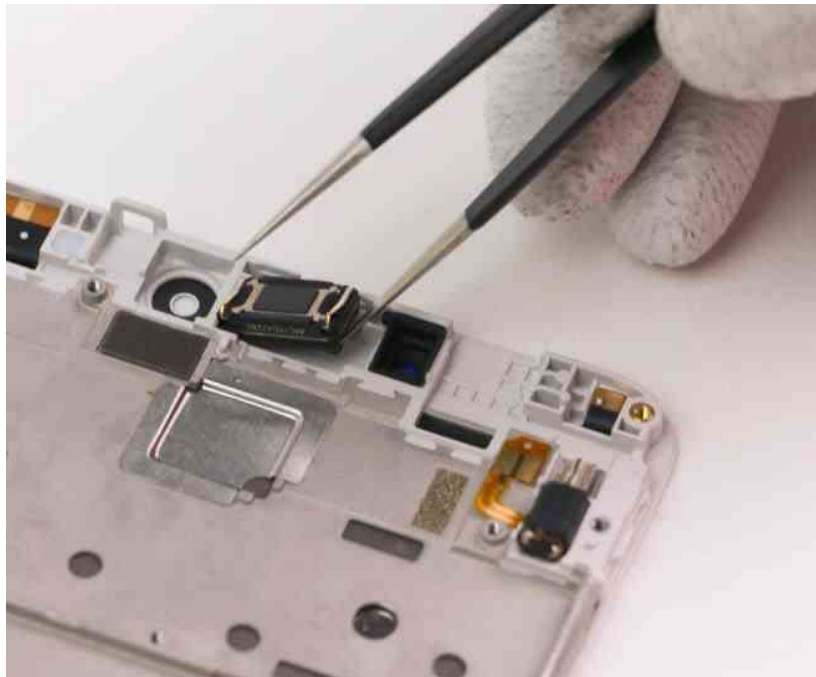

2. 33 Remove light-sensitive rubber sleeve

Use pointed tweezers to separate the light-sensitive rubber sleeve from the front housing assembly. Pay attention to stretching slowly to avoid damaging the rubber sleeve with pointed tweezers.



2. 34 Removing vibrator assembly

As shown, detach the vibrator FPC from the front housing assembly using pointed tweezers, and then remove the vibrator.







3. Equipment assembly

The logic diagram of equipment assembly is as follows, and the steps of assembling devices are selected according to the logic diagram.

3.1 Check related components

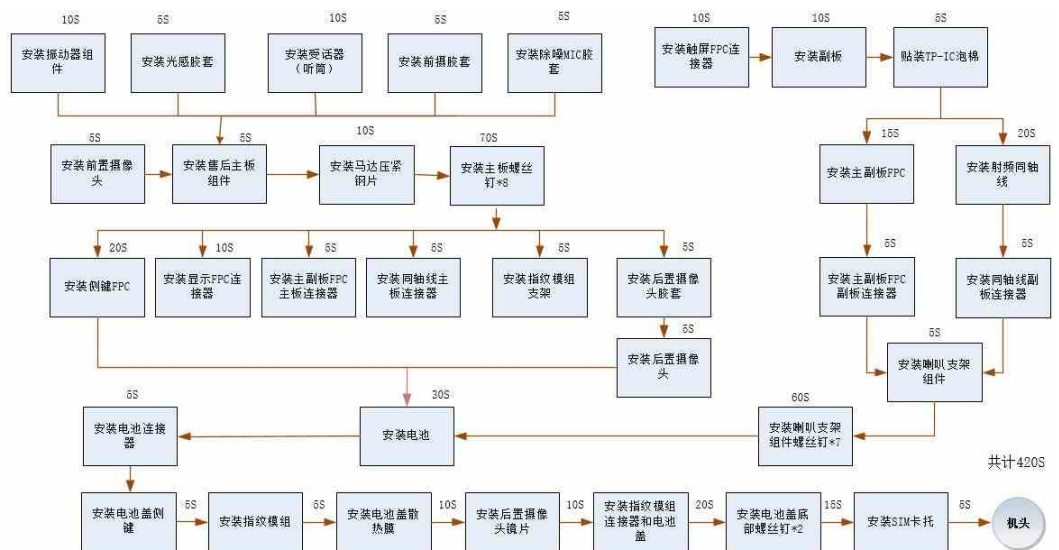


Inventory related components before assembly to avoid omission during assembly.

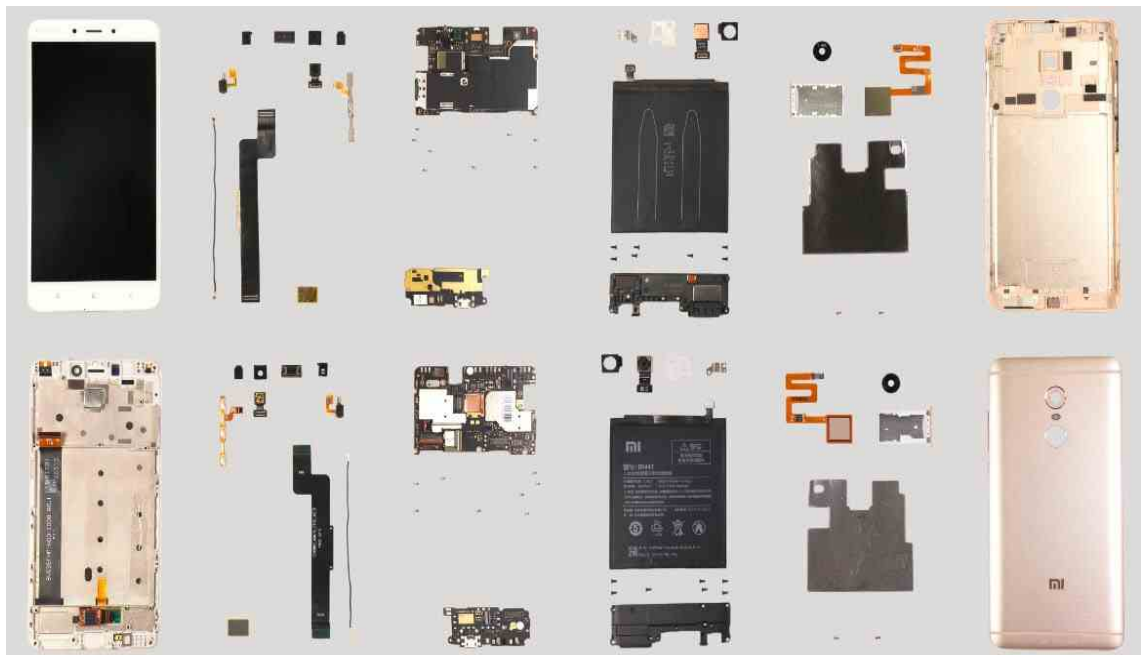


3. 2 Installing vibrator assembly

Clamp the vibrator using flat tweezers and install it on the front housing assembly.

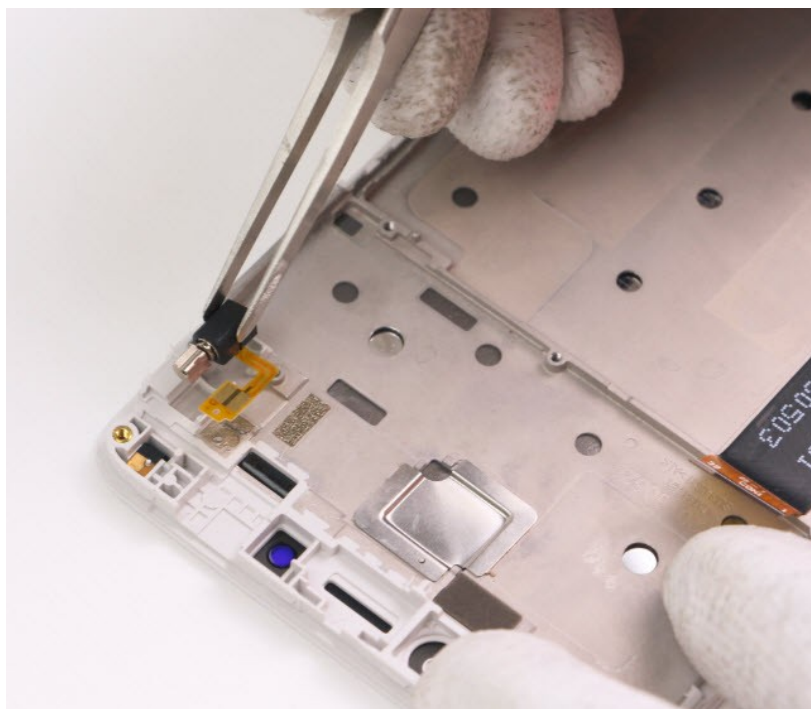


3. 3 Installation of light-sensitive rubber sleeve

As shown in the figure, put the light-sensitive glue into the limiting slot with pointed tweezers. Note direction: The protruding part of the sealing rubber sleeve abuts against the edge of the front housing assembly. Pay attention to clean dust when using reusable rubber sleeves.

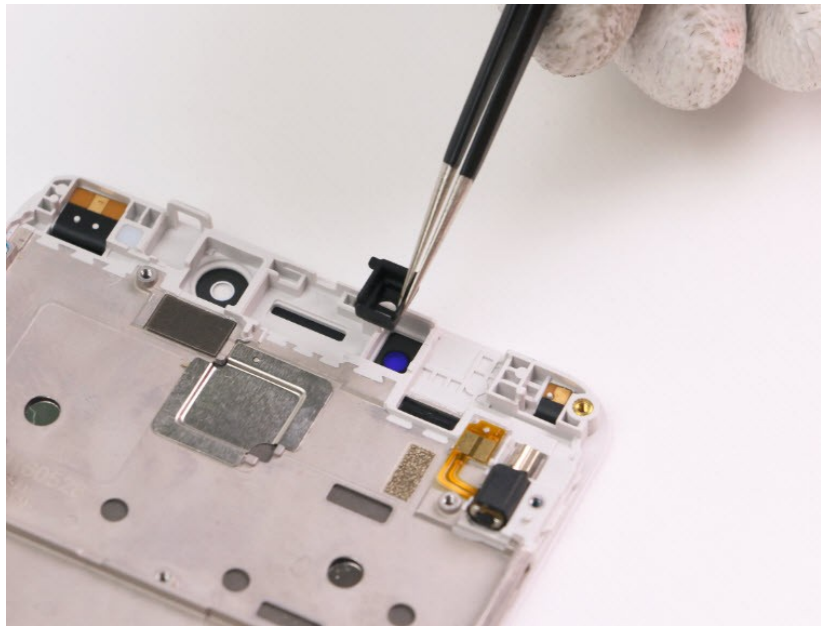

3. 4 Installing handset

Clamp the handset with flat tweezers and install it in the positioning slot on the front housing assembly. When installing, pay attention to the upturned end of the earpiece shrapnel facing the inner side, as shown in the figure. When using the reusable earpiece, clean the foam residual glue on the earpiece first, and then install the new earpiece foam glue after installing the earpiece.

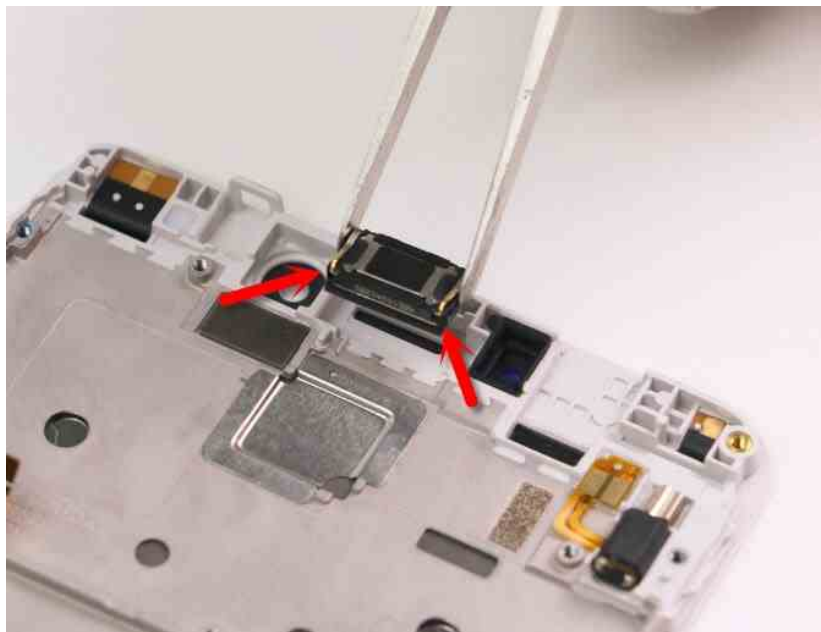


3. 5 Installation of the front rubber sleeve

Clip the front camera rubber sleeve with tweezers and install it on the front housing assembly. During installation, if dust or foreign matter is found on the camera rubber sleeve and the lenses on the front shell, clean it in time.




3. 6 Installation of noise reduction MIC rubber sleeve

Use pointed tweezers to clamp the noise-reducing MIC rubber sleeve and insert it into the positioning slot of the front housing assembly from the upper edge position. Pay attention to using tweezers to clamp noise-reducing MIC rubber sleeve, do not use too much force to avoid puncturing the rubber sleeve, and pay attention to cleaning the dust on it when using reusable MIC rubber sleeve. Make it level in place after installation.

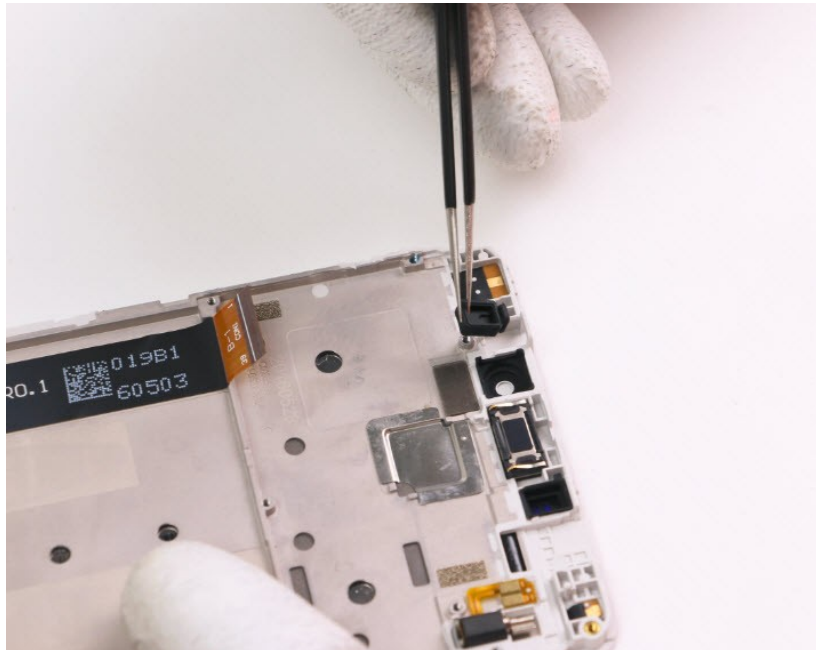

3. 7 Installing the Touch Screen FPC Connector

As shown in the figure, first place the sub-board sideways on the front housing assembly, and then put the touch screen FPC gold finger into its sub-board connector. Pay attention to the installation of the white limit line in place, and do not install it askew. Then press the connector buckle.

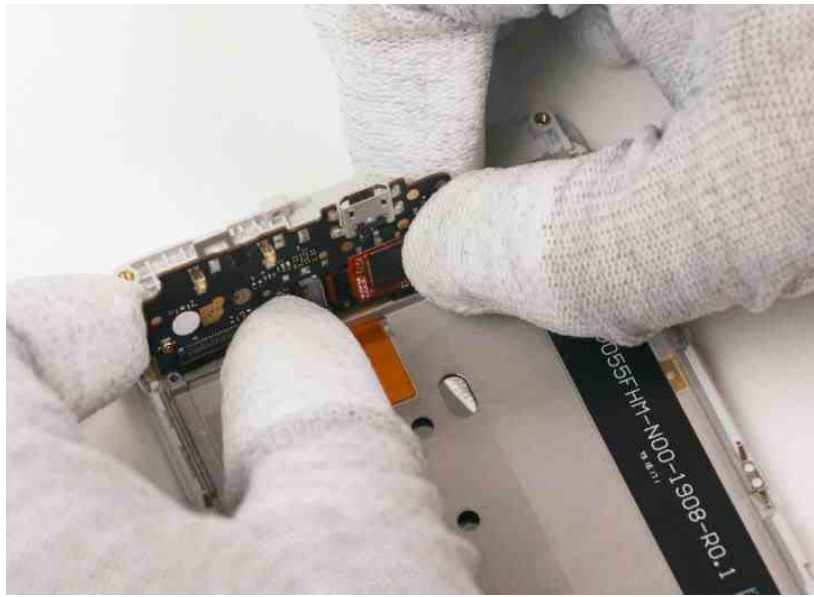

3. 8 Installation of Side Plate

Install the sub-plate into the positioning slot of the front housing assembly by hand. Then press the touch screen FPC to fix it on the sub-board.



3.9 Mount TP-IC Foam

Apply TP-IC foam to the IC of touch screen FPC with flat tweezers.



3. 10 Installation of main and auxiliary board FPC

Attach the FPC of the main and auxiliary plates to the front housing assembly, and pay attention to aligning the limit holes to avoid the installation of the rear connectors that cannot be aligned due to the skewed mounting.



3. 11 Installing main and auxiliary board FPC auxiliary board connector

Fasten the main and auxiliary board FPC auxiliary board connector with the auxiliary board by hand. Pay attention to the mounting of FPC at the bend in the front housing assembly, and ensure that the connectors are parallel and vertical when fastening, so as to avoid damage to the connectors.



3. 12 Installation of RF Coaxial Line

Insert the coaxial line into the positioning slot of the front housing assembly using a plastic crowbar. Note that the grounding shrapnel at the edge of the front shell assembly is extremely easy to be bumped and deformed, and the coaxial line has no directional requirement.




3. 13 Installing coaxial side board connector

Install the coaxial line on its sub-board connector with flat tweezers. Be careful not to damage it by misaligning the installation.




3. 14 Installing speaker bracket assembly

As shown in the figure, first clip the buckle into the speaker bracket assembly from the front housing assembly side, and then install the whole assembly.

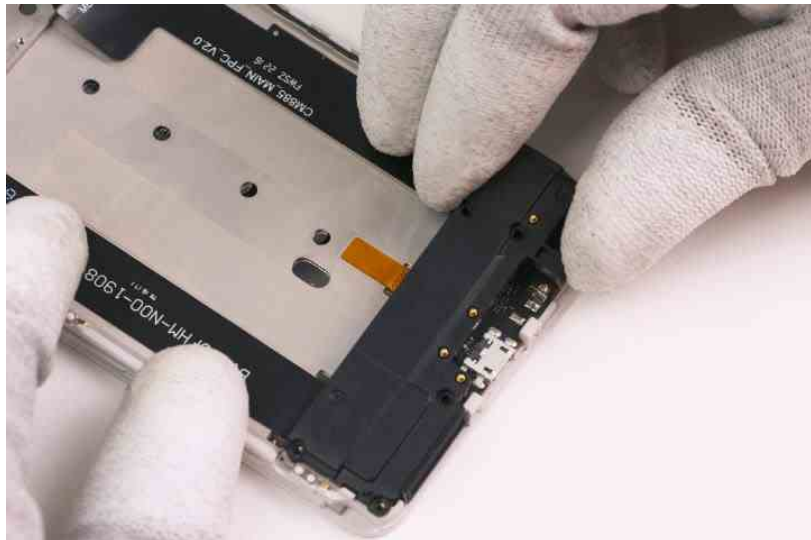


3. 15 Installing speaker bracket assembly screws * 7

Install speaker bracket assembly screws using a Phillips screwdriver in the order shown below. Note that the screw specifications are all the same.

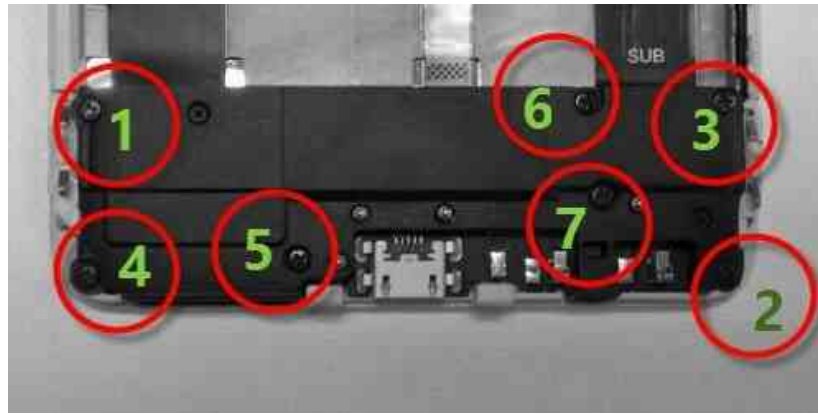

3. 16 Installing Battery


Attach a new battery glue before installing the battery. After tearing off the glue release paper, install the battery according to the limit line and press the battery gently to ensure that the battery and the front shell assembly are firmly adhered.

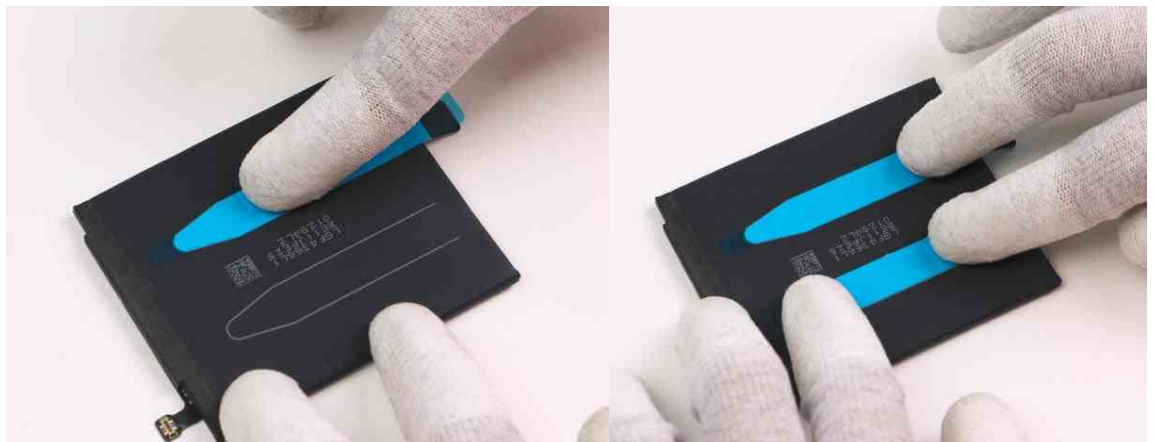



3. 17 Install front camera

Fasten the front camera connector with the motherboard by hand, and pay attention to ensure that the connector is parallel and vertical when fastening to avoid damage to the connector.

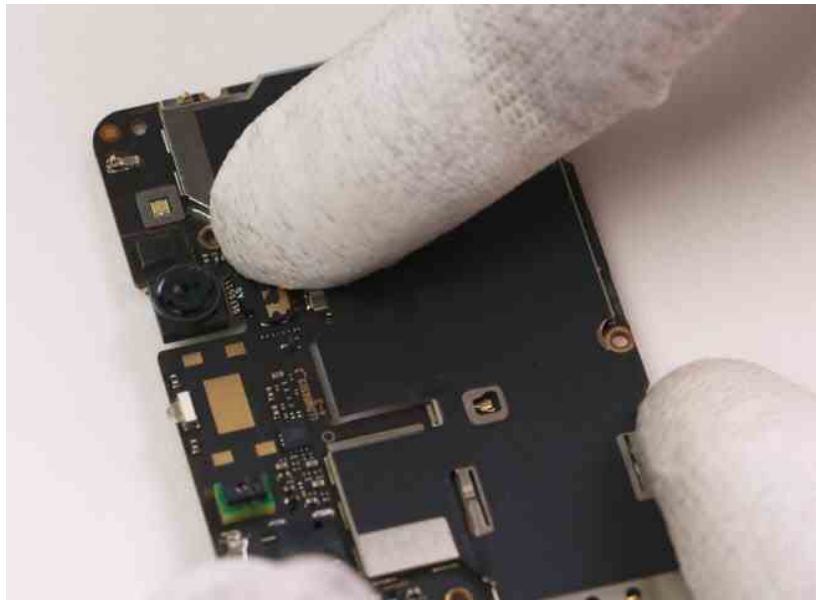


3. 18 Installation of Aftermarket Motherboard Components

As shown in the figure, place the aftermarket motherboard assembly into the front housing assembly from the oblique side, and pay attention to leaving the peripheral connection FPC and various connectors on the motherboard. When installing the motherboard, insert it into the front housing assembly in its position as shown in the figure, and then place the whole motherboard.




3. 19 Installing vibrator pressing steel sheet

Clamp the vibrator with flat tweezers and press the steel sheet, and place it on the vibrator. Pay attention to the positioning columns on both sides during installation.

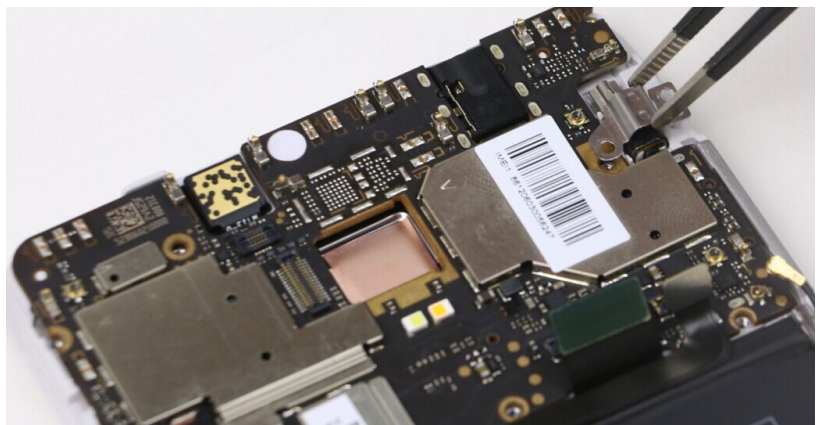

3. 20 Installing motherboard screws * 8

Install motherboard screws * 8 manually using a Phillips screwdriver in the order shown below. Note that the screw specifications are all the same.

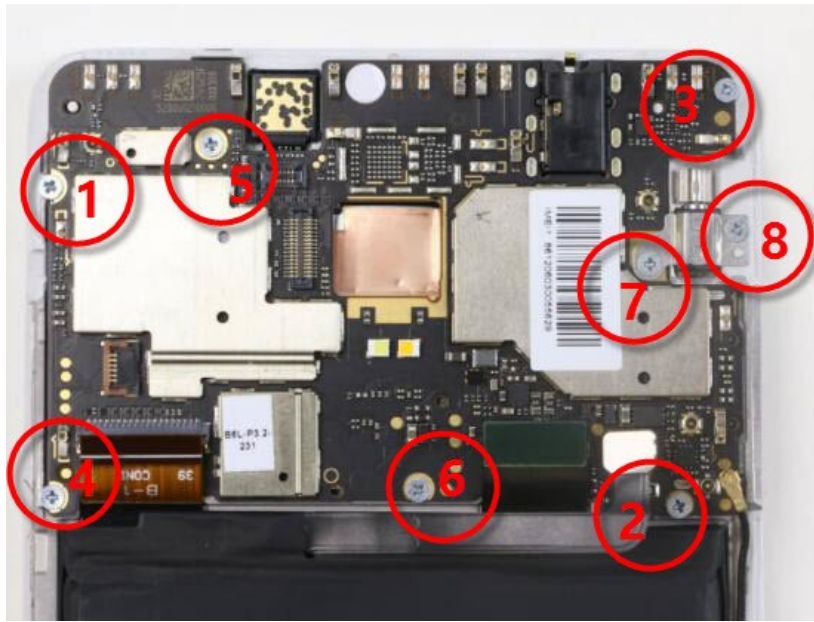

3. 21 Install side key FPC

Attach the side key FPC to the front housing assembly.




Insert the side key FPC gold finger into the connector with flat tweezers, and then press the connector buckle by hand. Note: The gold finger insertion connector must be in place, and the white limit line is just at the edge of the connector and parallel to it.



3. 22 Installation Display FPC Motherboard Connector


Put the FPC gold finger of the motherboard into its connector with flat tweezers, pay attention to the installation of the limit white wire in place, and avoid the installation skew. Then press the connector buckle by hand.



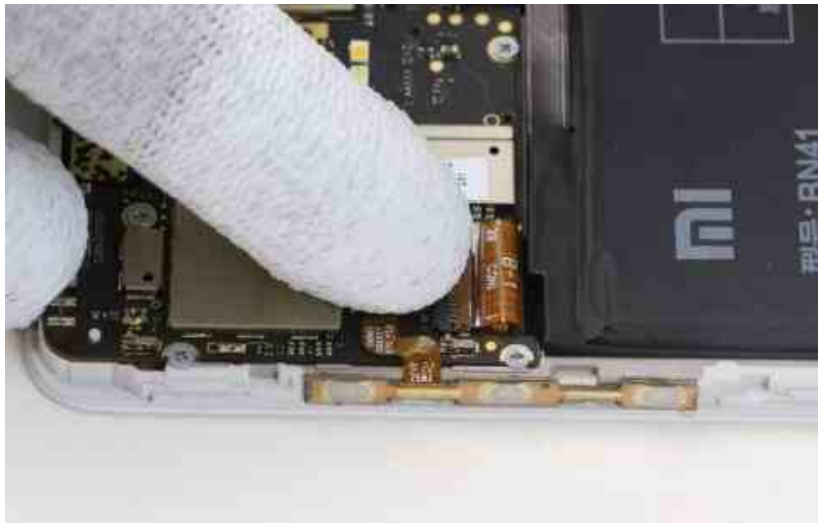


3. 23 Install the main and auxiliary board FPC motherboard connector

Press the FPC motherboard connector of the main and auxiliary boards by hand to fasten it with the motherboard connection seat. Pay attention to ensure that the connectors are parallel and vertical when buckling, so as to avoid damage to the connectors.

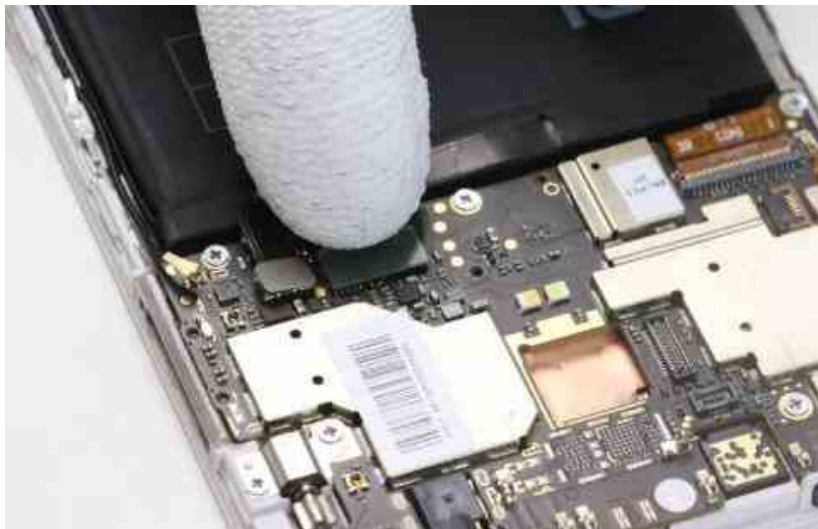

3. 24 Installing Coaxial Board Connector

Press the coaxial motherboard connector by hand to fasten it to the motherboard connection seat. Pay attention to ensure that the connectors are parallel and vertical when buckling, so as to avoid damage to the connectors.

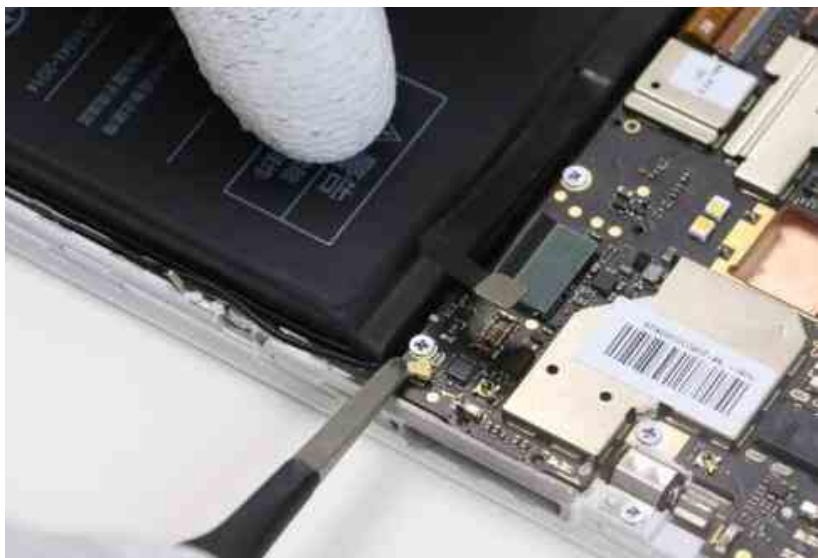

3. 25 Installing fingerprint module bracket

Install the fingerprint module bracket on the motherboard by hand, and pay attention to the installation direction.




3. 26 Installation of rear camera rubber sleeve

Clip the rear rubber sleeve with flat tweezers and install it on the rear camera. Pay attention to the direction of the rear rubber sleeve,




3. 27 Install rear camera

As shown in the figure, tilt the rear camera into the limit slot of the motherboard by hand. Then fasten its connector, pay attention to ensure that the connector is parallel and vertical when fastening, so as to avoid damage to the connector.

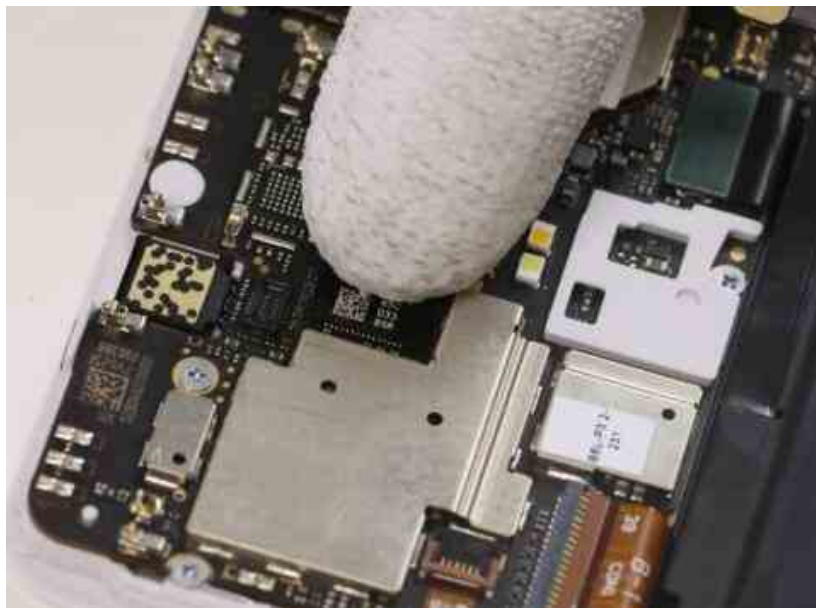

3. 28 Installing Battery Connector

Press the battery connector by hand to fasten it to the motherboard connection seat. Pay attention to ensure that the connectors are parallel and vertical when buckling, so as to avoid damage to the connectors.

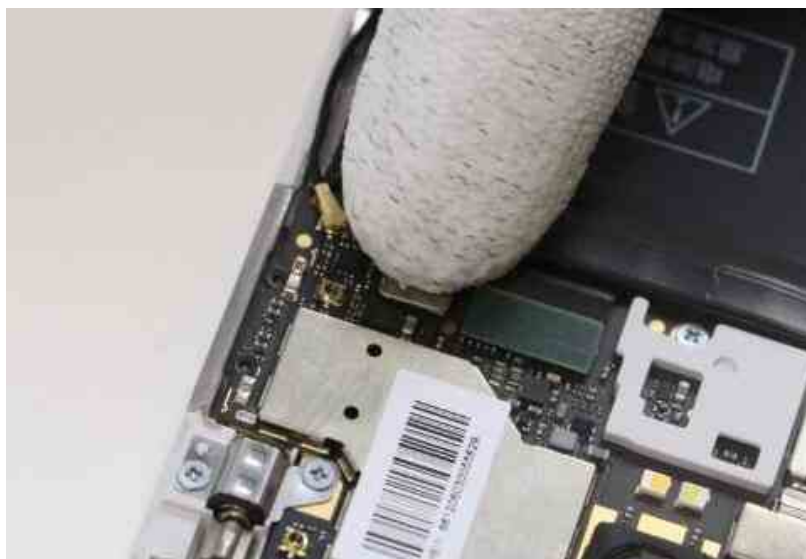

3. 29 Installing battery cover side key

Use tweezers to install the side keys in the corresponding positions of the battery cover.





3. 30 Fingerprint Module Installation

Attach a new fingerprint module back glue before installation. After tearing off the release paper, install the fingerprint module on the battery cover. Press gently after installation to ensure firm adhesion.




3. 31 Installing heat dissipation film for battery cover

As shown in the figure, attach the heat dissipation film of the battery cover to the corresponding position of the battery cover, and pay attention to attach it along the limit slot of the battery cover. Pay attention to the fingerprint module FPC. When installing, lift the FPC gently by hand to make the heat dissipation film correctly mounted in place. Please install it according to the dotted line in the following figure, and do not cover the flash lamp.

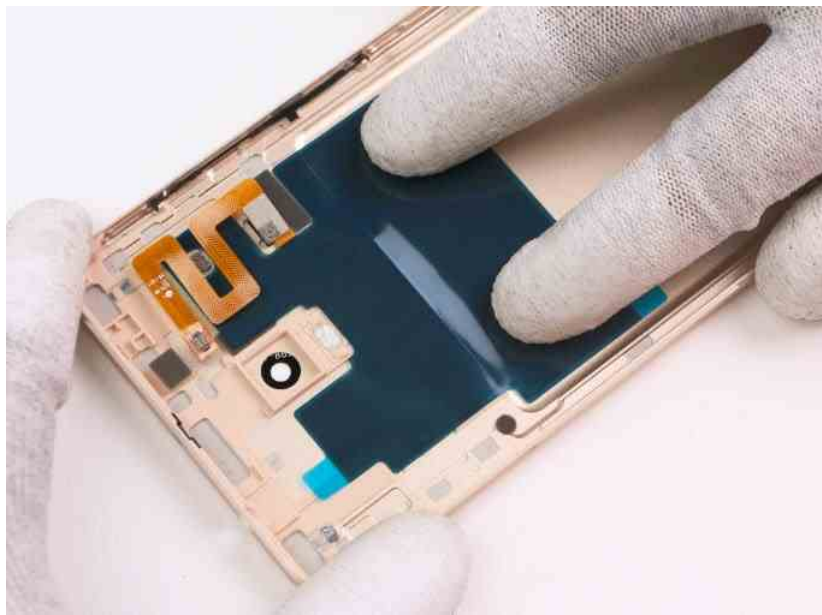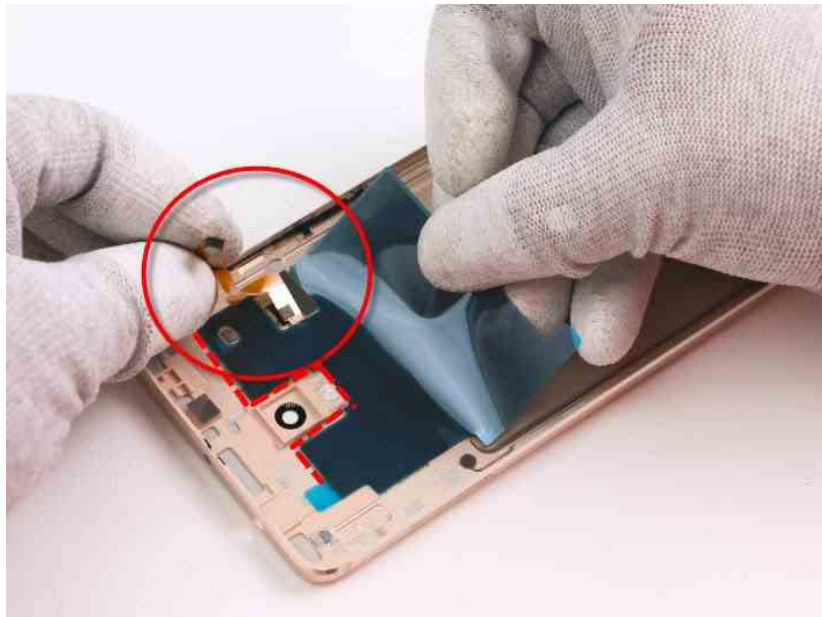


3. 32 Installing rear camera lens

Attach a new lens backing glue before installation. After tearing off the release paper, clamp the camera lens with tweezers, install it on the after-sales battery cover, and then press the lens by hand to stick it firmly. Note: When pressing the lens, use careful force to avoid damaging the lens.

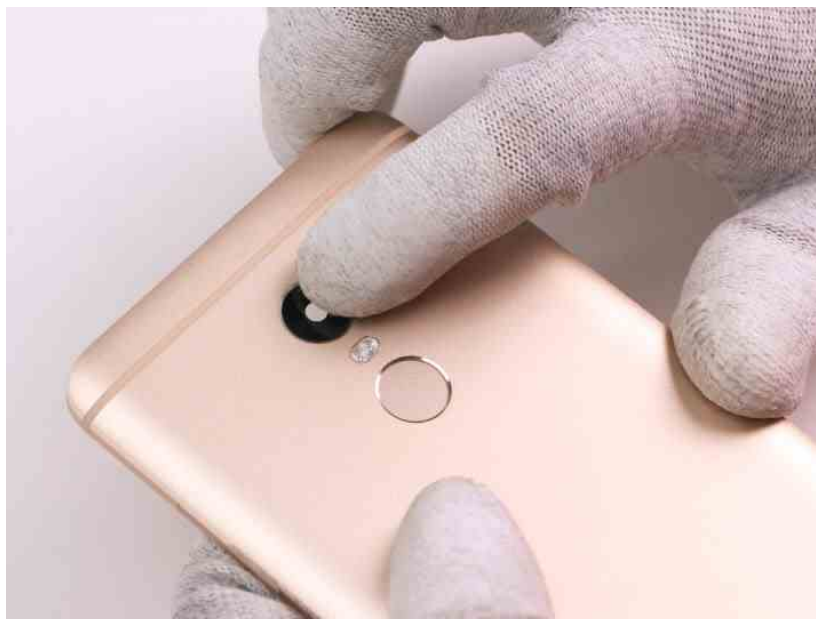

3. 33 Installing Fingerprint Module Connector and Battery Cover

As shown in the figure, first press and fasten the fingerprint module connector with your fingers. Pay attention to ensure that the connectors are parallel and vertical when buckling, so as to avoid damage to the connectors.

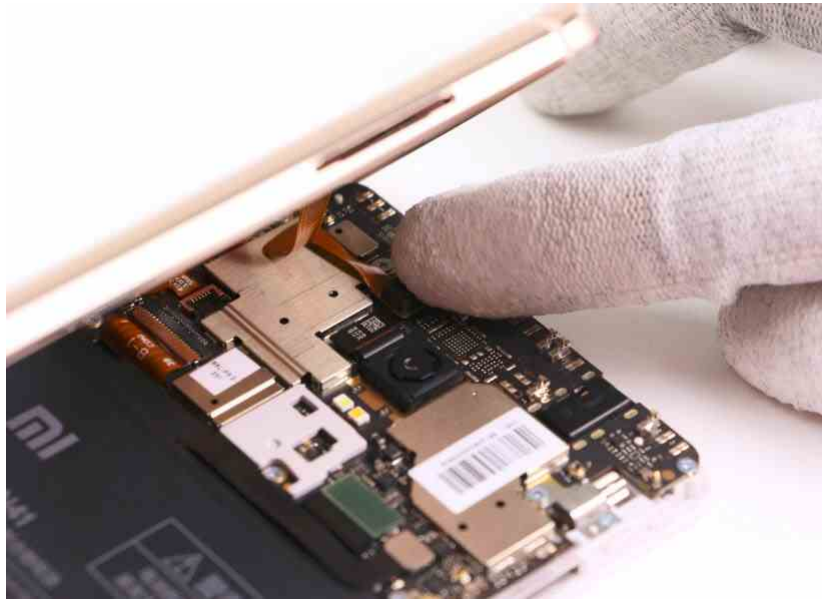


As shown in the figure, first buckle one side of the battery cover side key, and then buckle the speaker position at the bottom of the mobile phone.



Then fasten the whole battery cover conveniently.



Finally, from the bottom of the mobile phone to both sides and upper part, fasten the battery cover by hand.

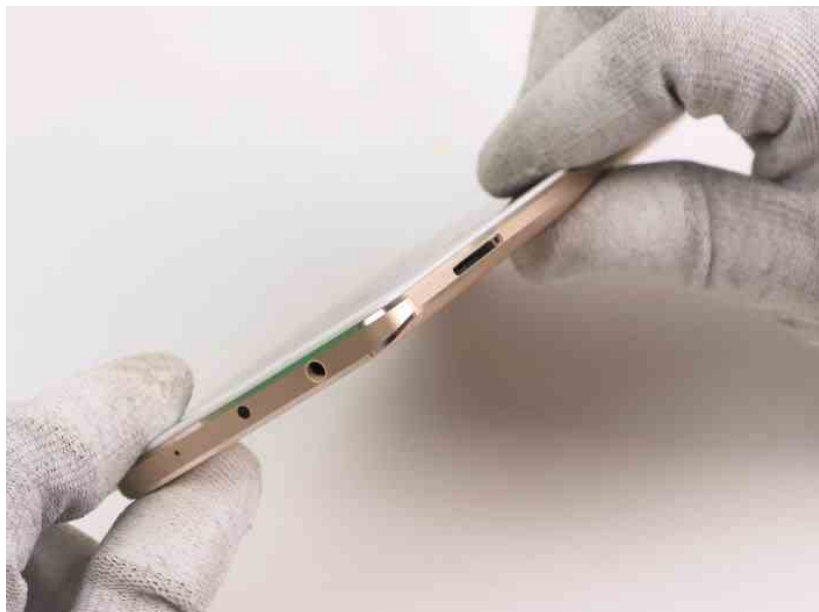

3. 34 Installing Battery Cover Bottom Screw * 2

Install battery cover bottom screws using screwdriver-star pentagonal-0.8 x50 * 2



3. 35 Install SIM Cato

Directly insert the SIM Cato into the SIM Cato entrance of the mobile phone. Note: The SIM Cato installation direction is shown below. The SIM Cato installation direction cannot be reversed, otherwise the SIM card holder of the motherboard will be damaged.





4. Matters needing attention

4. 1 Reuse principle of conductive adhesive

If the conductive adhesive is damaged, uneven and loses its viscosity, it will be considered invalid and need to be replaced with new materials.

4. 2 Reuse principle of fixed adhesive

If the fixing glue loses its viscosity, it will be considered invalid and new materials will be replaced.

4. 3 Precautions for glue removal operation

If the conductive adhesive and fixing adhesive are judged to be invalid, it is necessary to use appropriate amount of alcohol to fully invade the colloid residue, and use non-rigid tools and dust-free cloth to remove the residue, so as to avoid damaging the material surface during operation.

4. 4 Matters needing attention in power failure state

Ensure that the product is shut down before disassembly and assembly, and disconnect the power input as far as possible before relevant operations are prepared and completed.