



LG-X230ds-MAIN_TOP-1

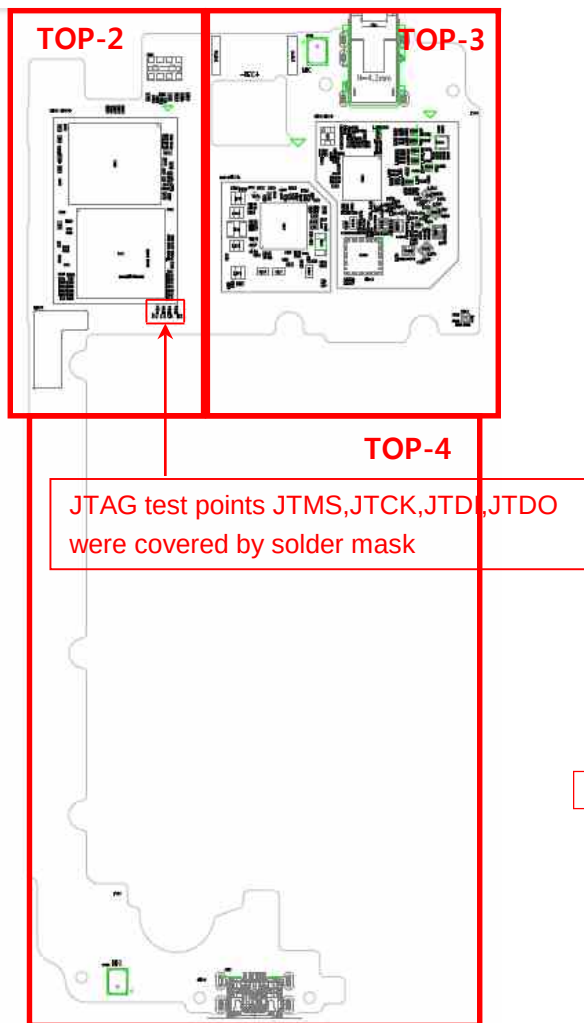


LG-X230ds-MAIN_TOP-2

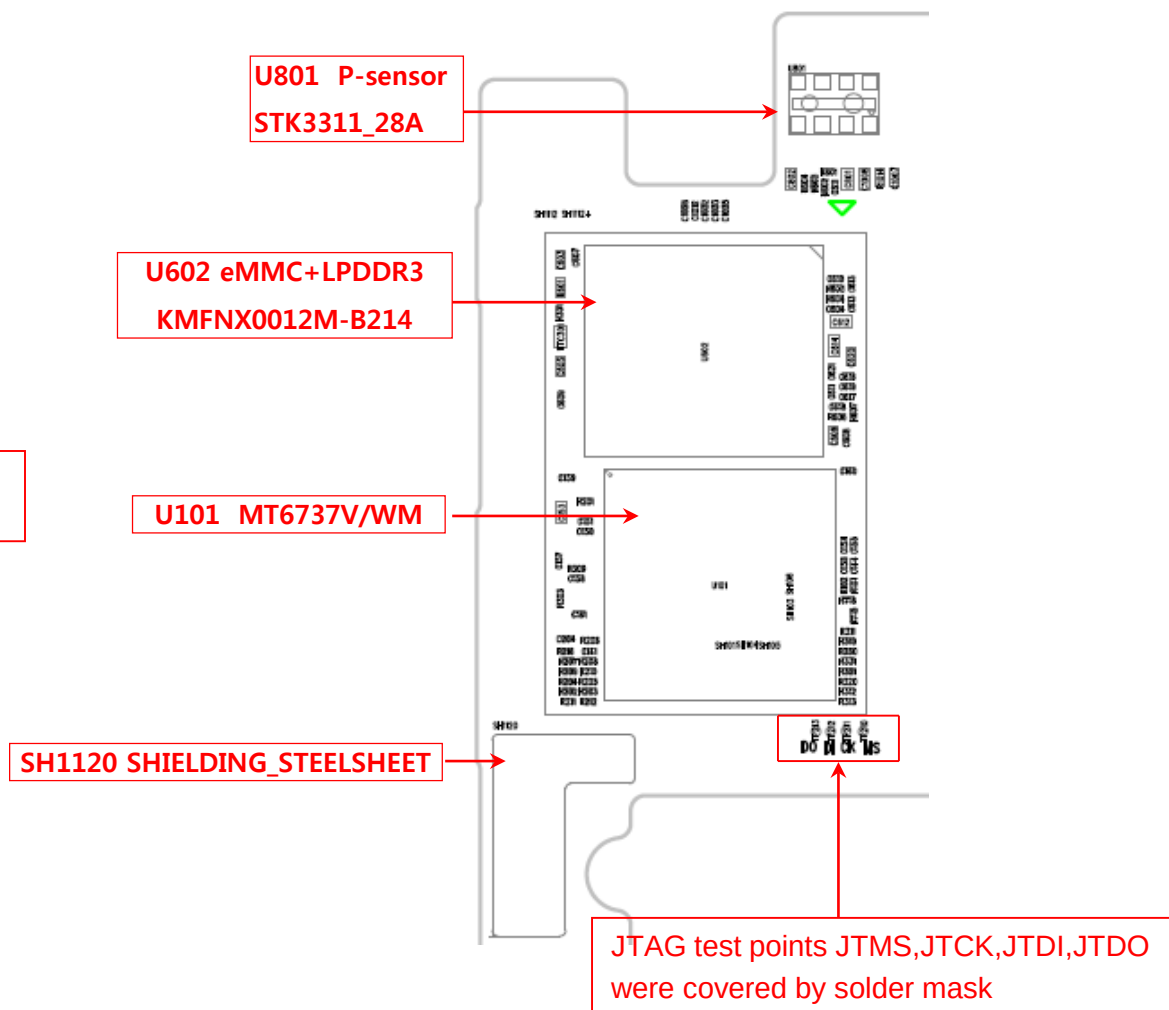



7. PCB LAYOUT

LG-X230ds-MAIN_TOP-3

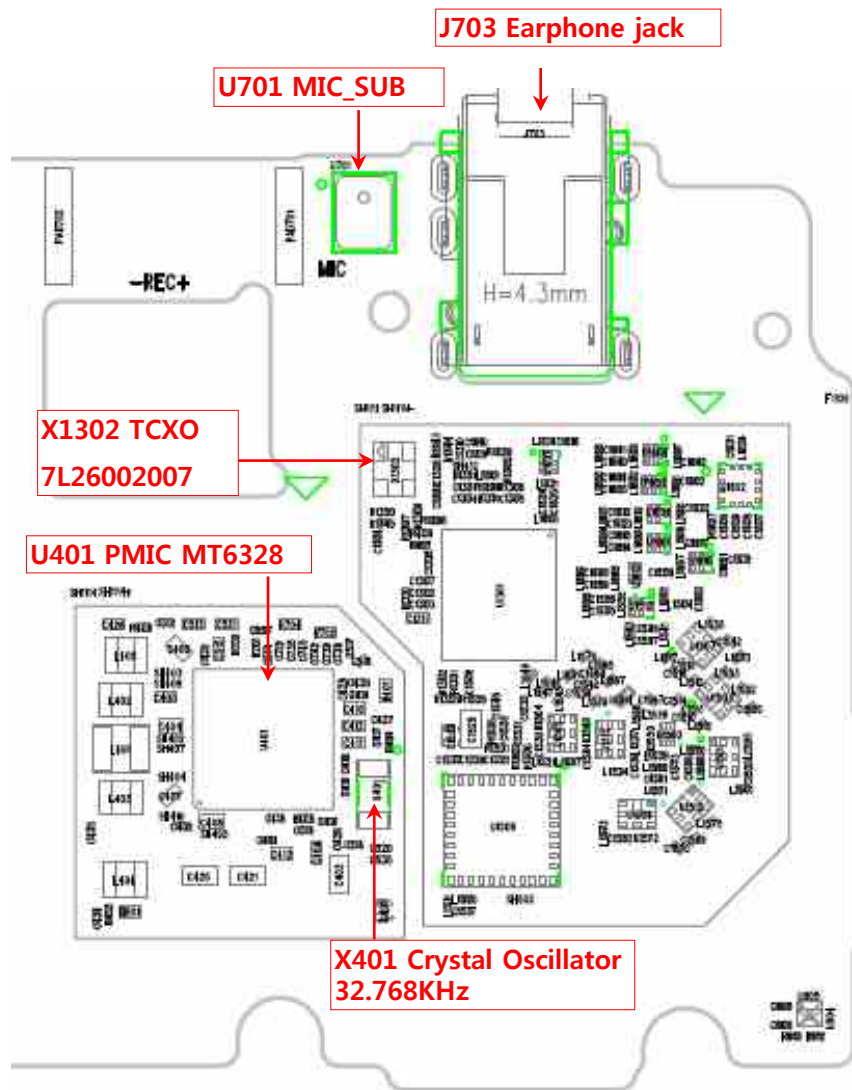


LG-X230ds-MAIN_TOP-4

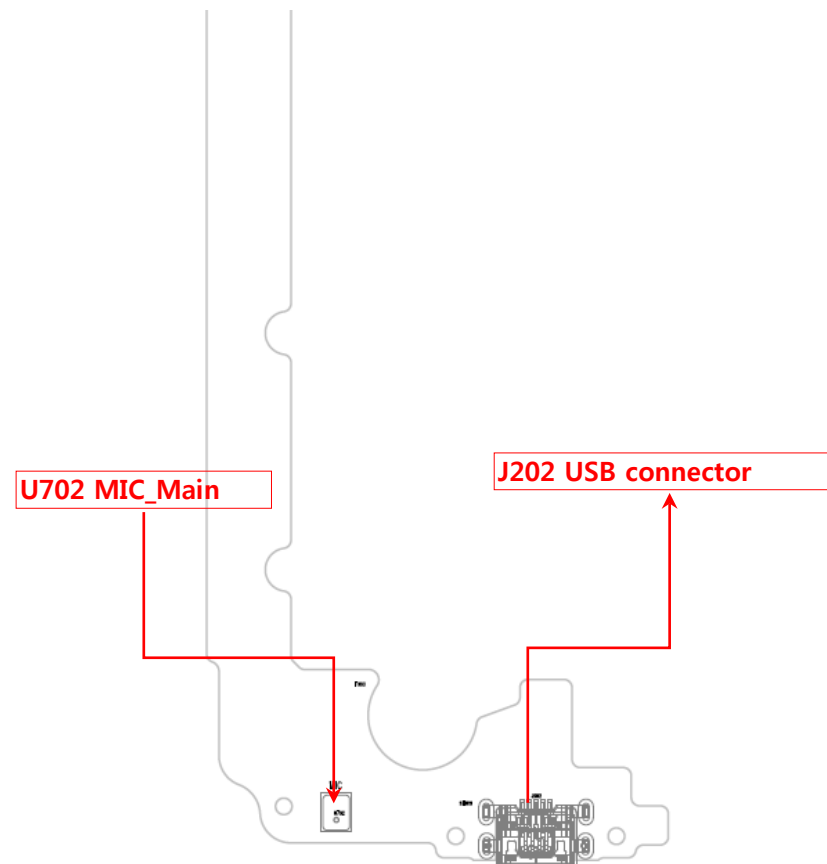

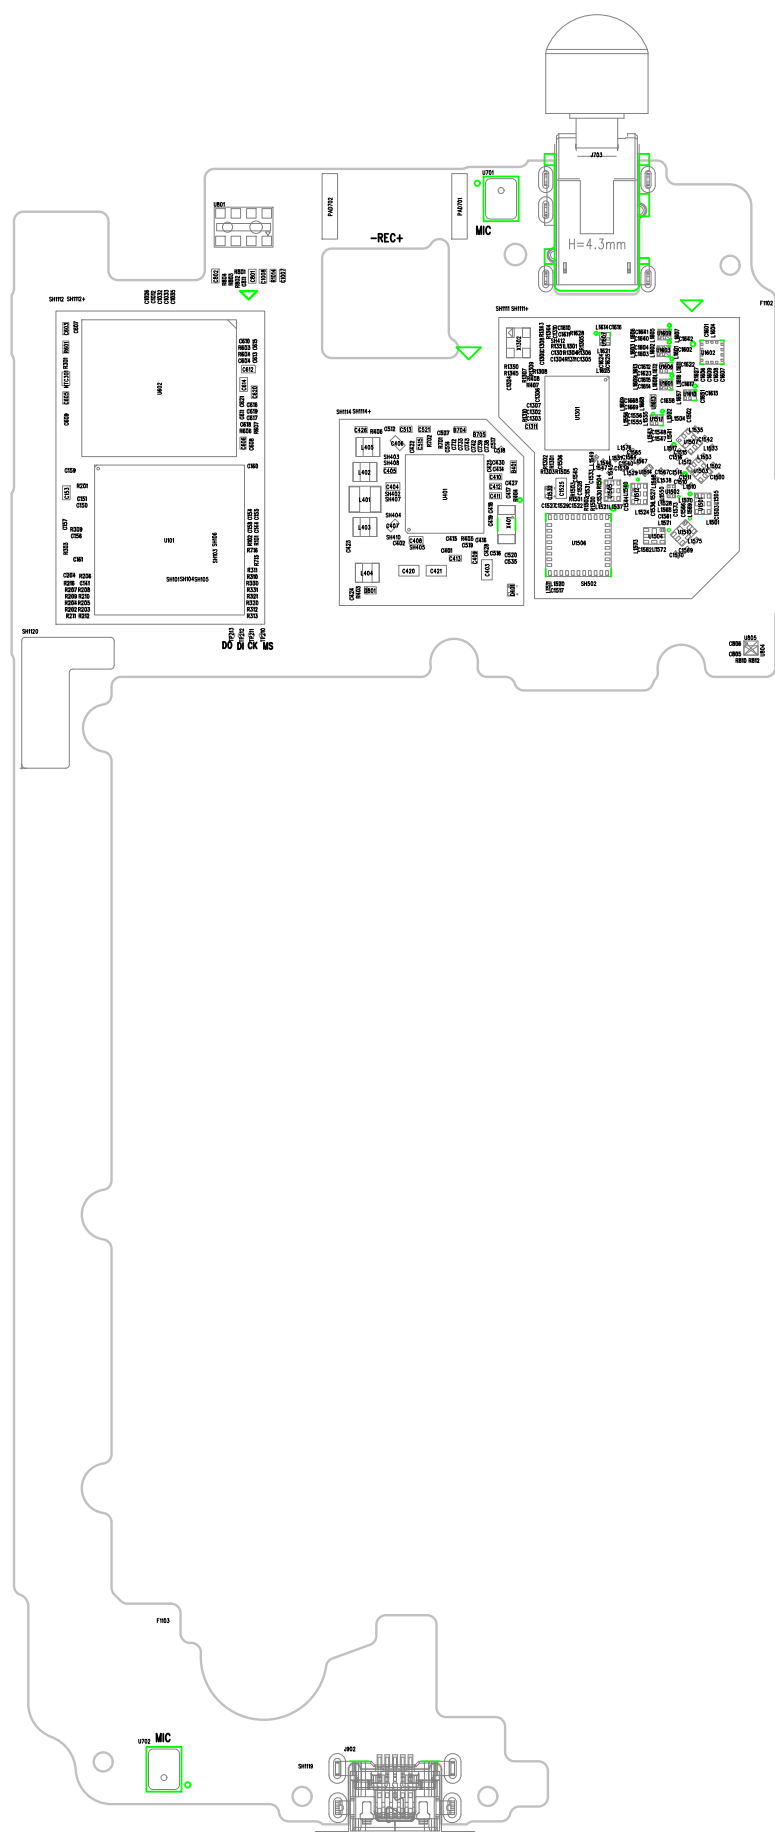


LG-X230ds-MAIN_BOT-1

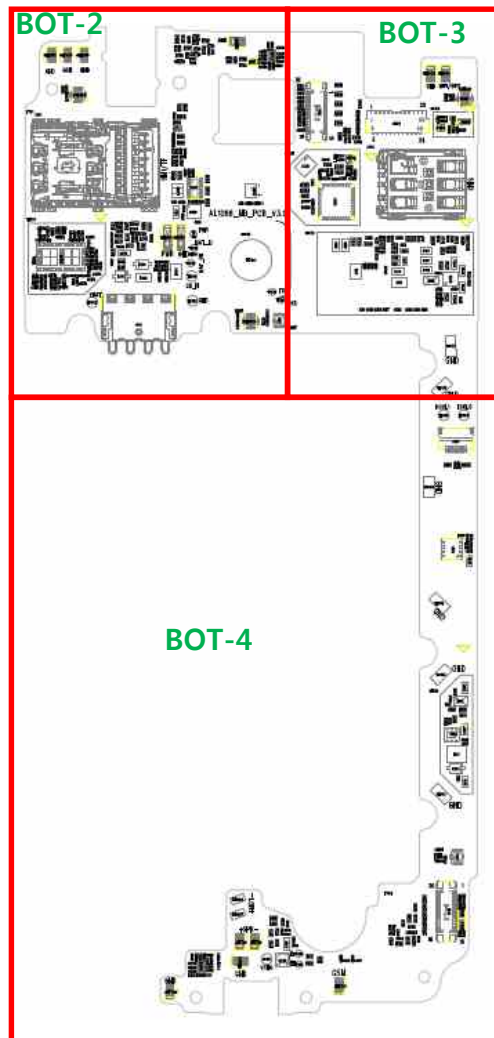

7. PCB LAYOUT

LG-X230ds-MAIN_BOT-2

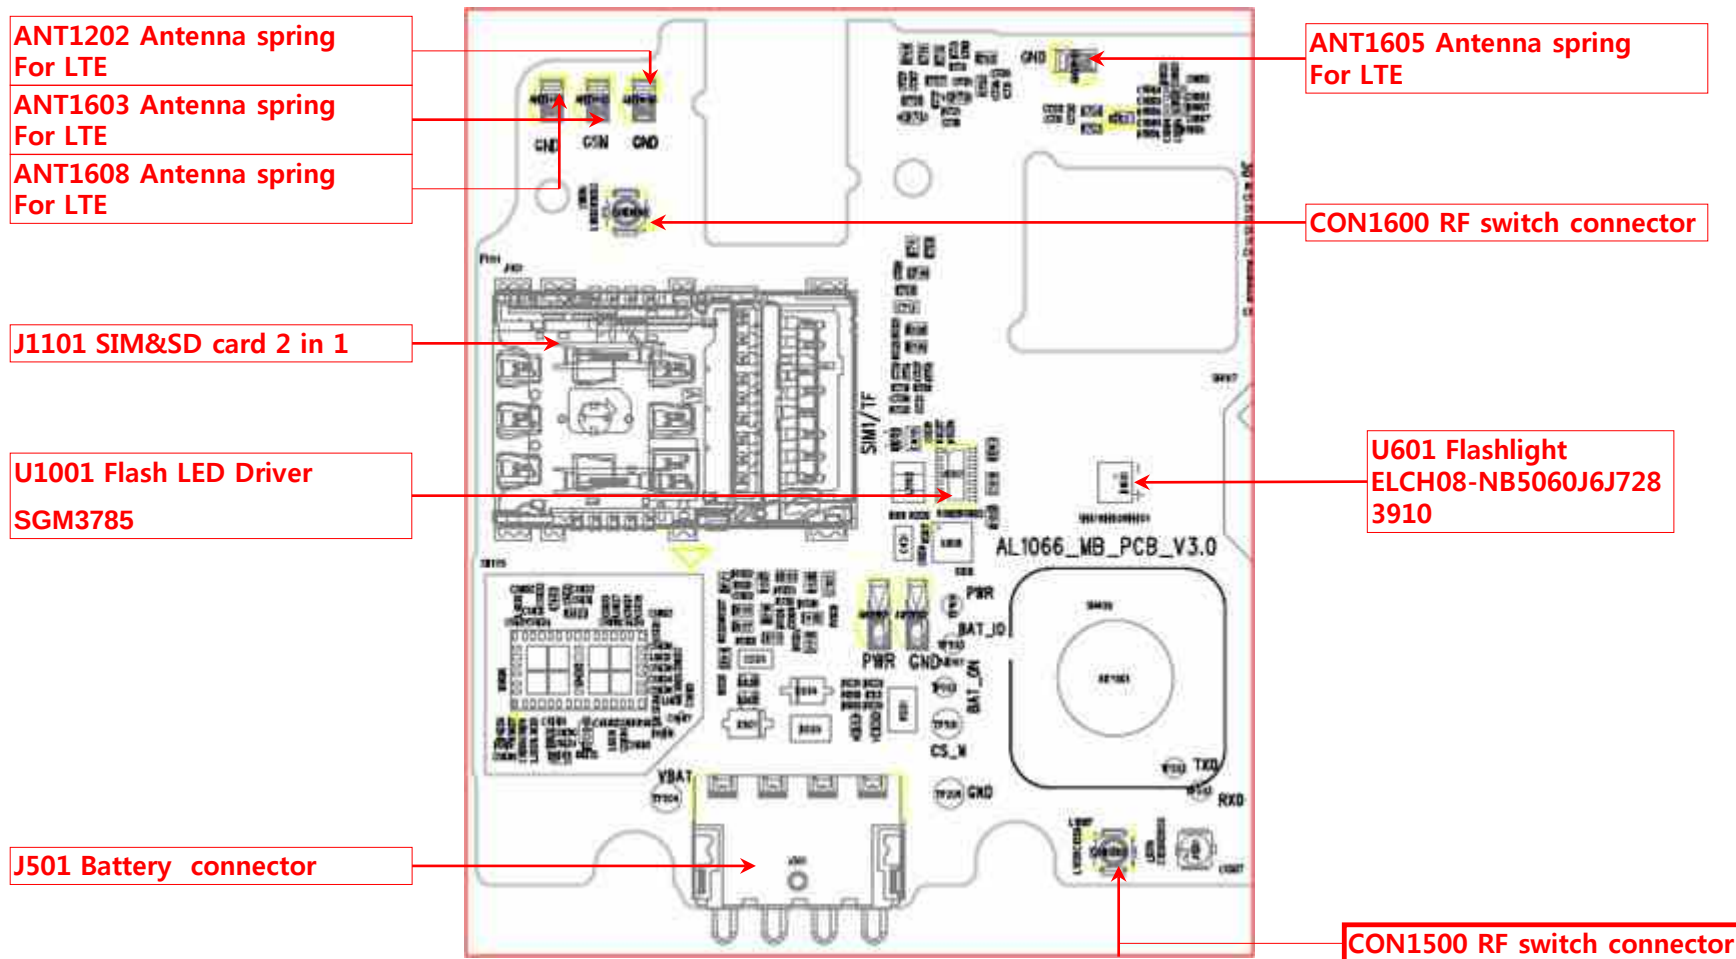

7. PCB LAYOUT

LG-X230ds-MAIN_BOT-3

J1002 Main camera connector

ANT1604 Antenna spring
For BT/WIFI/GPS

ANT1604 Antenna spring
For BT/WIFI/GPS

CON1201 RF switch connector

J1001 Main camera connector

SH1101 RF CONNECTOR

LG-X230ds-MAIN_BOT-4

U501 Charge IC
APL3225QAITRG

U903 Blacklight IC S
GM3756YTDI6G/TR

J901 LCM connector

ANT1606 Antenna spring
For GSM/WCDMA/LTE

ANT1602 Antenna spring
For GSM/WCDMA/LTE

ANT1601 Antenna spring
For GSM/WCDMA/LTE

