



LG-H522y-MAIN_TOP-1

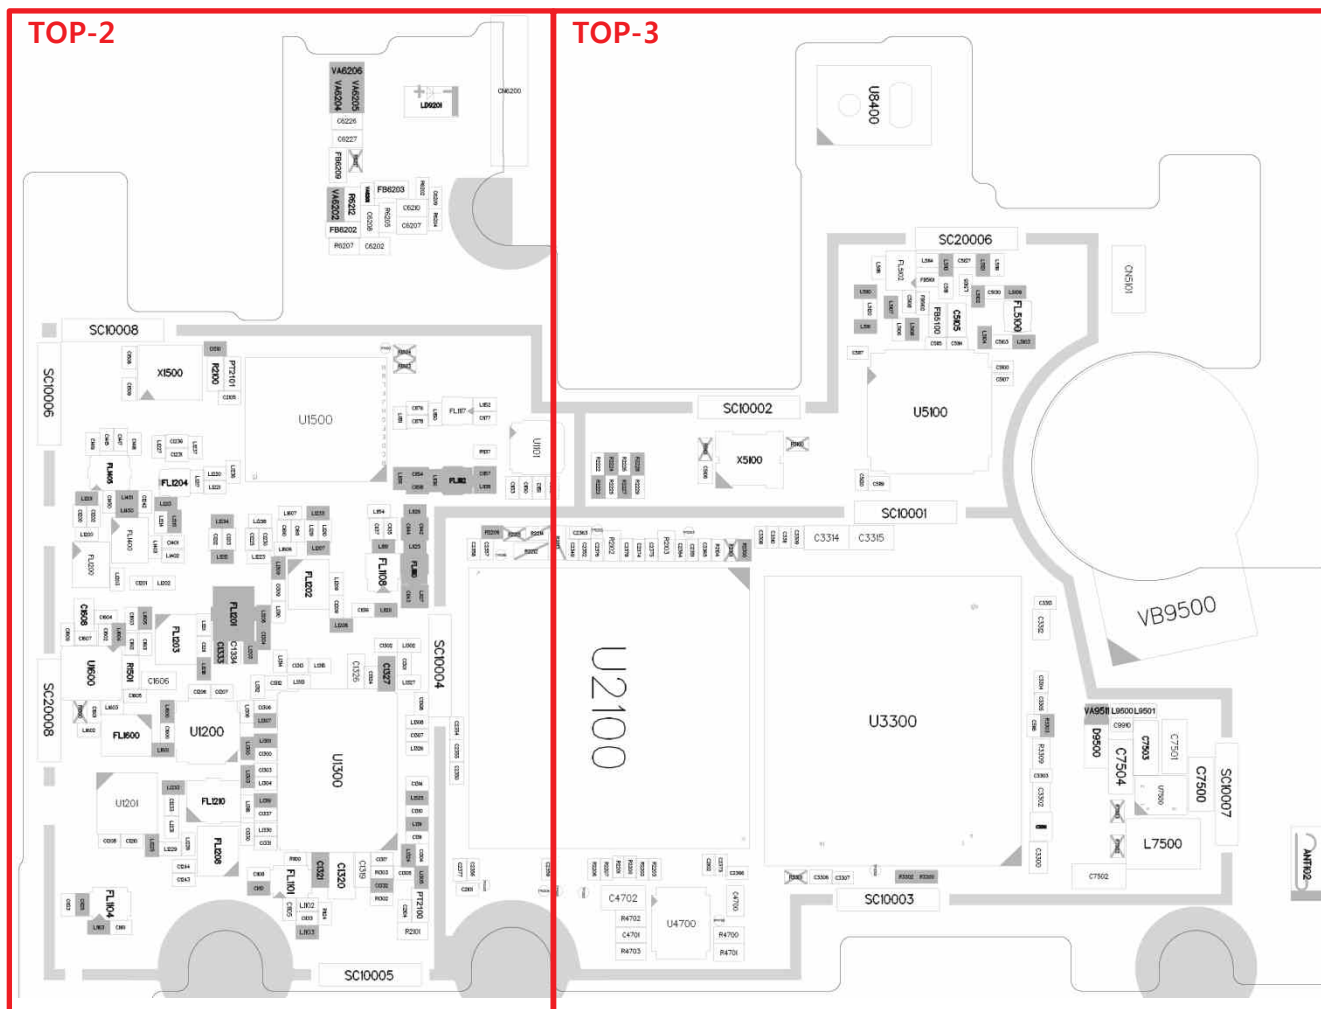

7. PCB LAYOUT


LG-H522y-MAIN_TOP-2

FL1204 Filter
G1900 No service
FL1302 Switch
B28 No power on
FL1400 Duplexer
B28 No power on/No service
FL1200 Duplexer
B28 No power on/No service
FL1203 Duplexer
B8 No power on/No service
U1600 PAM
B7 No power on
U1200 ASM
B5/7/8/28/G850/G900 No on
FL1600 Duplexer
B7 No power on/No service
FL1210 Duplexer
B1 No power on/No service
U1201 ASM
B1/3/DCS/PCS No on
FL1208 Duplexer
B3 No power on/No service
FL1101 Coupler
B5/7/8/28/G850/G900 No service
FL1104 Coupler
B1/3/DCS/PCS No service

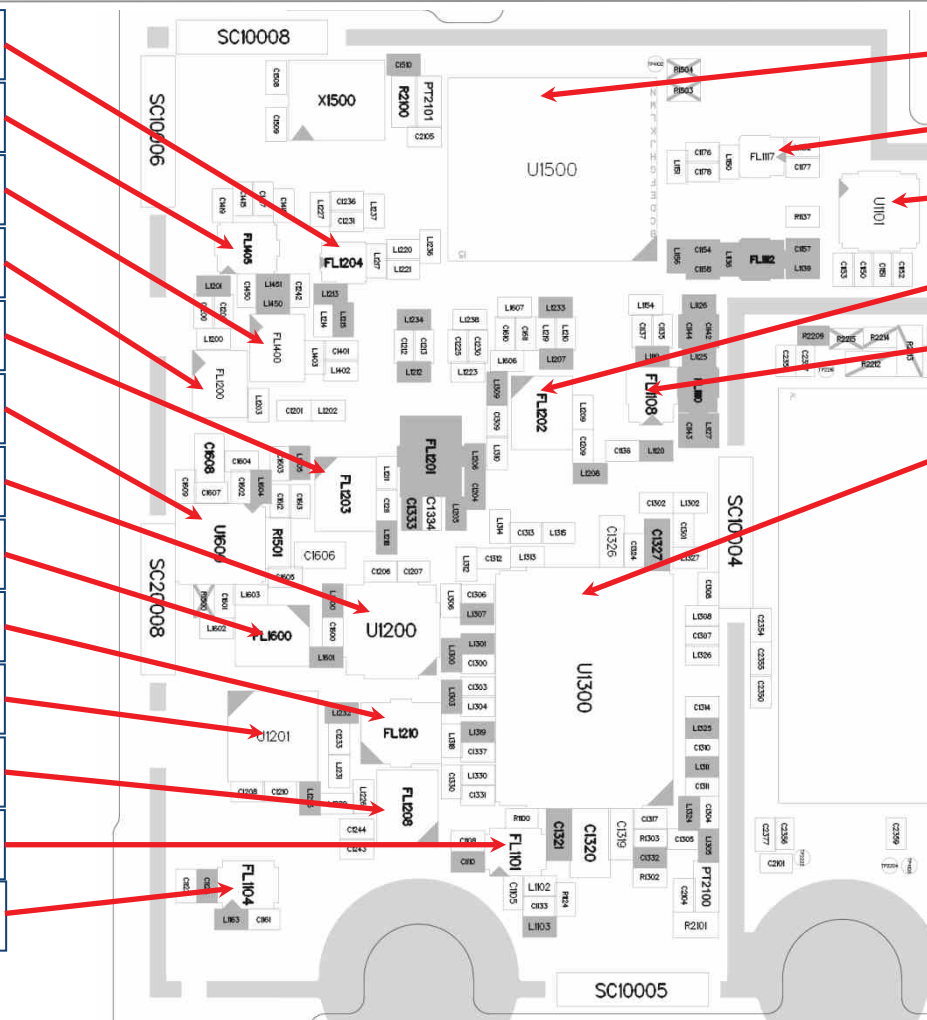


U1500 MT6169
No service
FL1117 Filter
No B7 diversity
U1101 SP8T
No diversity
FL1202 Duplexer
B5 No power on/No service
FL1108 Filter
No B28 diversity
U1300 PAM
B1/3/5/8/28/G850/G900/DCS/PCS No power on

LG-H522y-MAIN_TOP-3

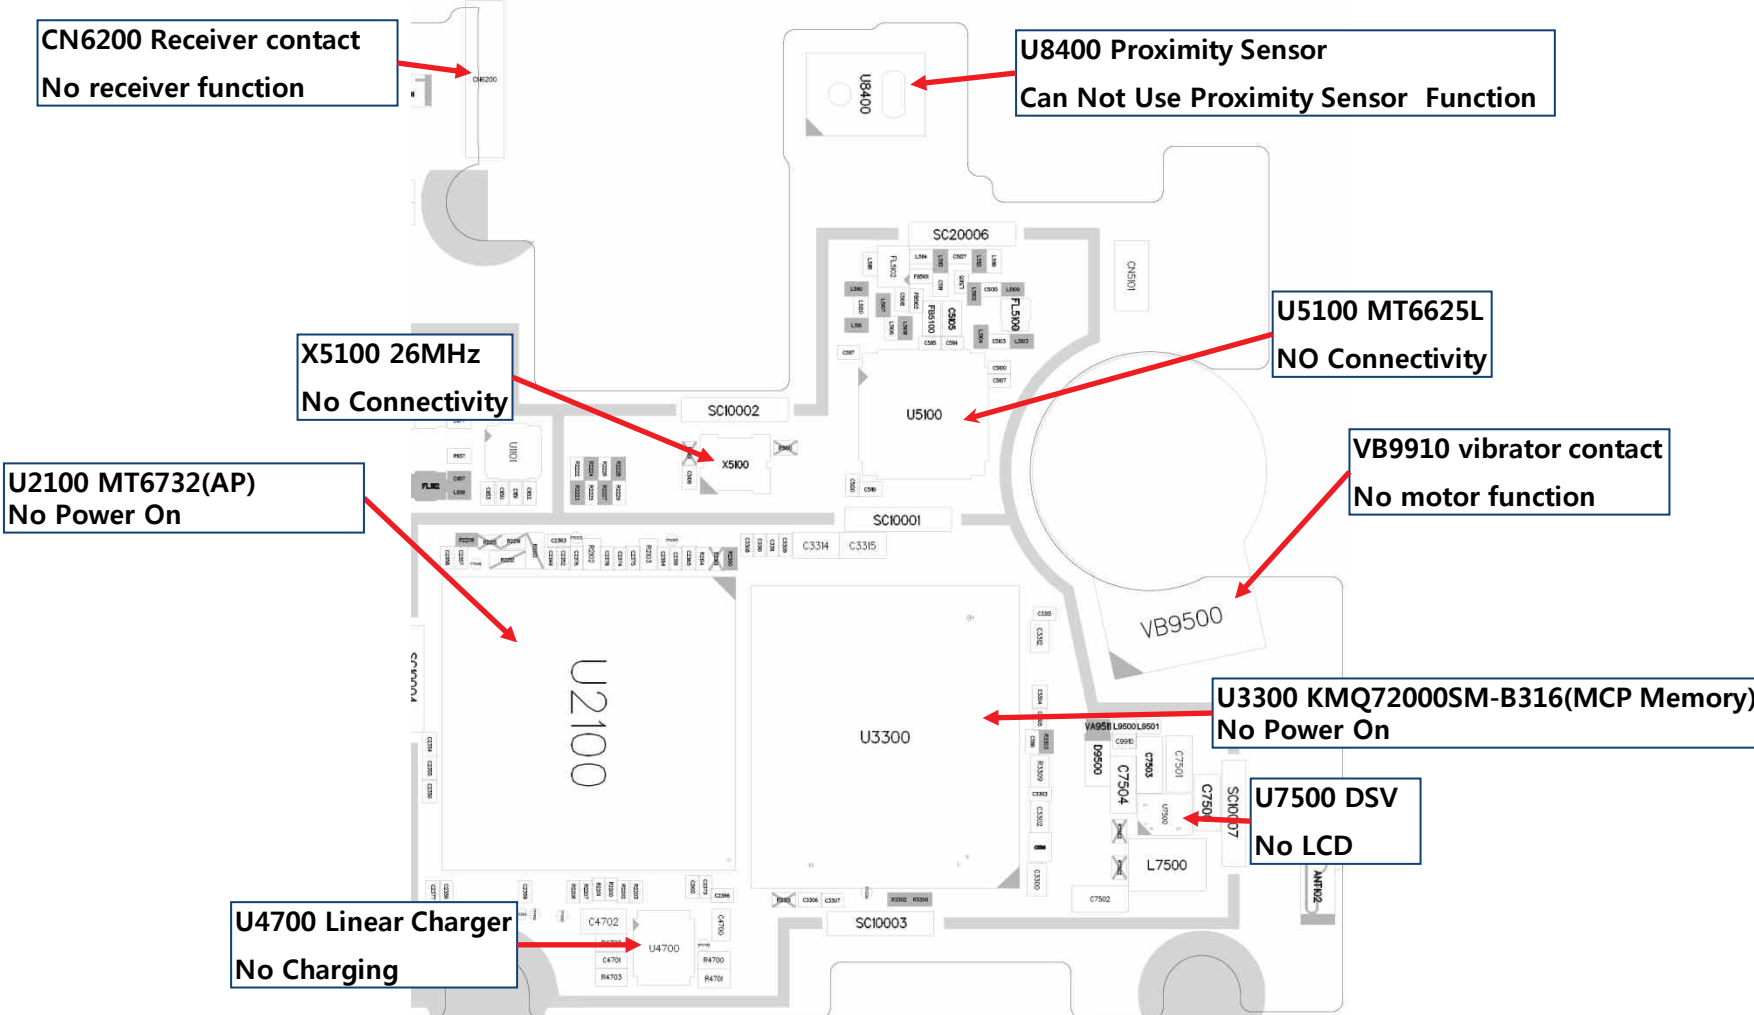

7. PCB LAYOUT

LG-H522y-MAIN_BOT-1

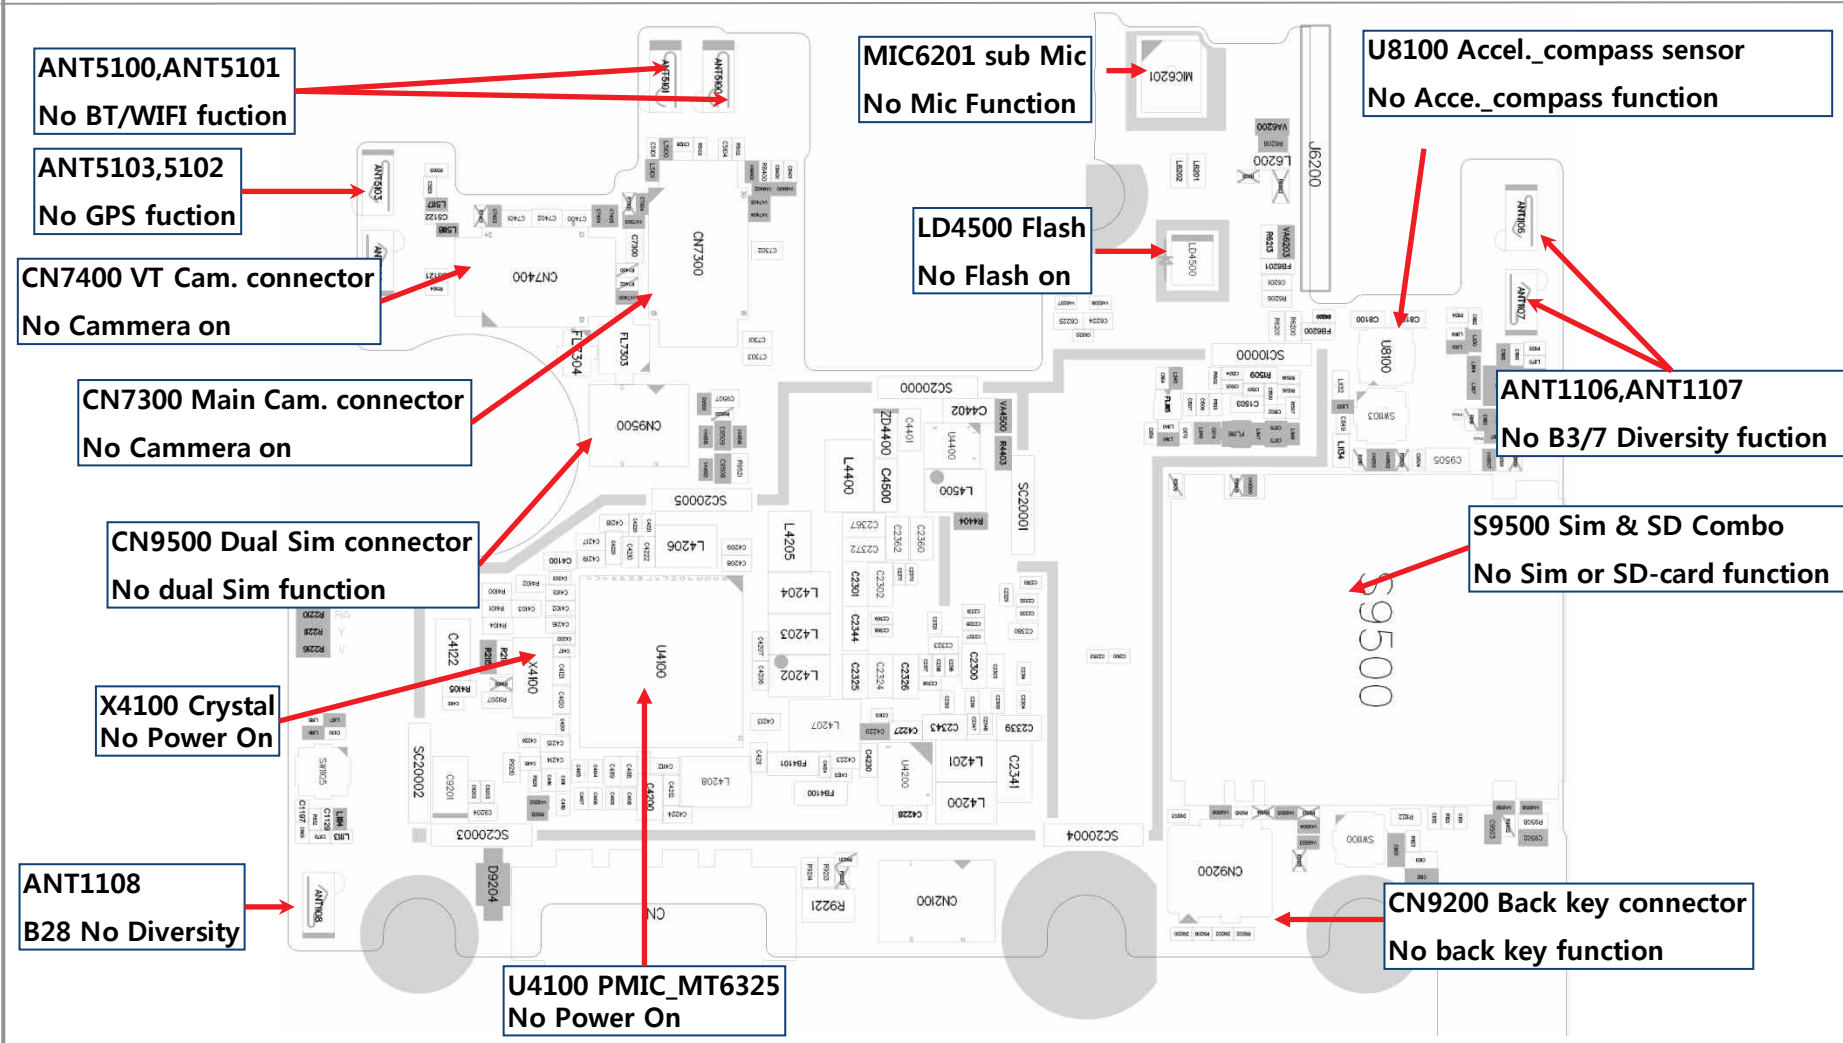

LG-H522y-MAIN_BOT-2



FL7101,FL7103,FL7105
No LCD

ANT6200, ANT6201
Speaker Module contact
No sound

CN9201 USB Connector
No USB Connection
No Charging

ANT1102,ANT1103
GMS1800/1900,W_B1,LTE_B3
No service

ANT1100,ANT1101,ANT1104
GSM850/900,W_B5/B8,LTE_B7/B28
No service

MIC6200 Main Mic

No Mic Function

