



10.故障排除流程图


10-1.基带

10-1-1.开机

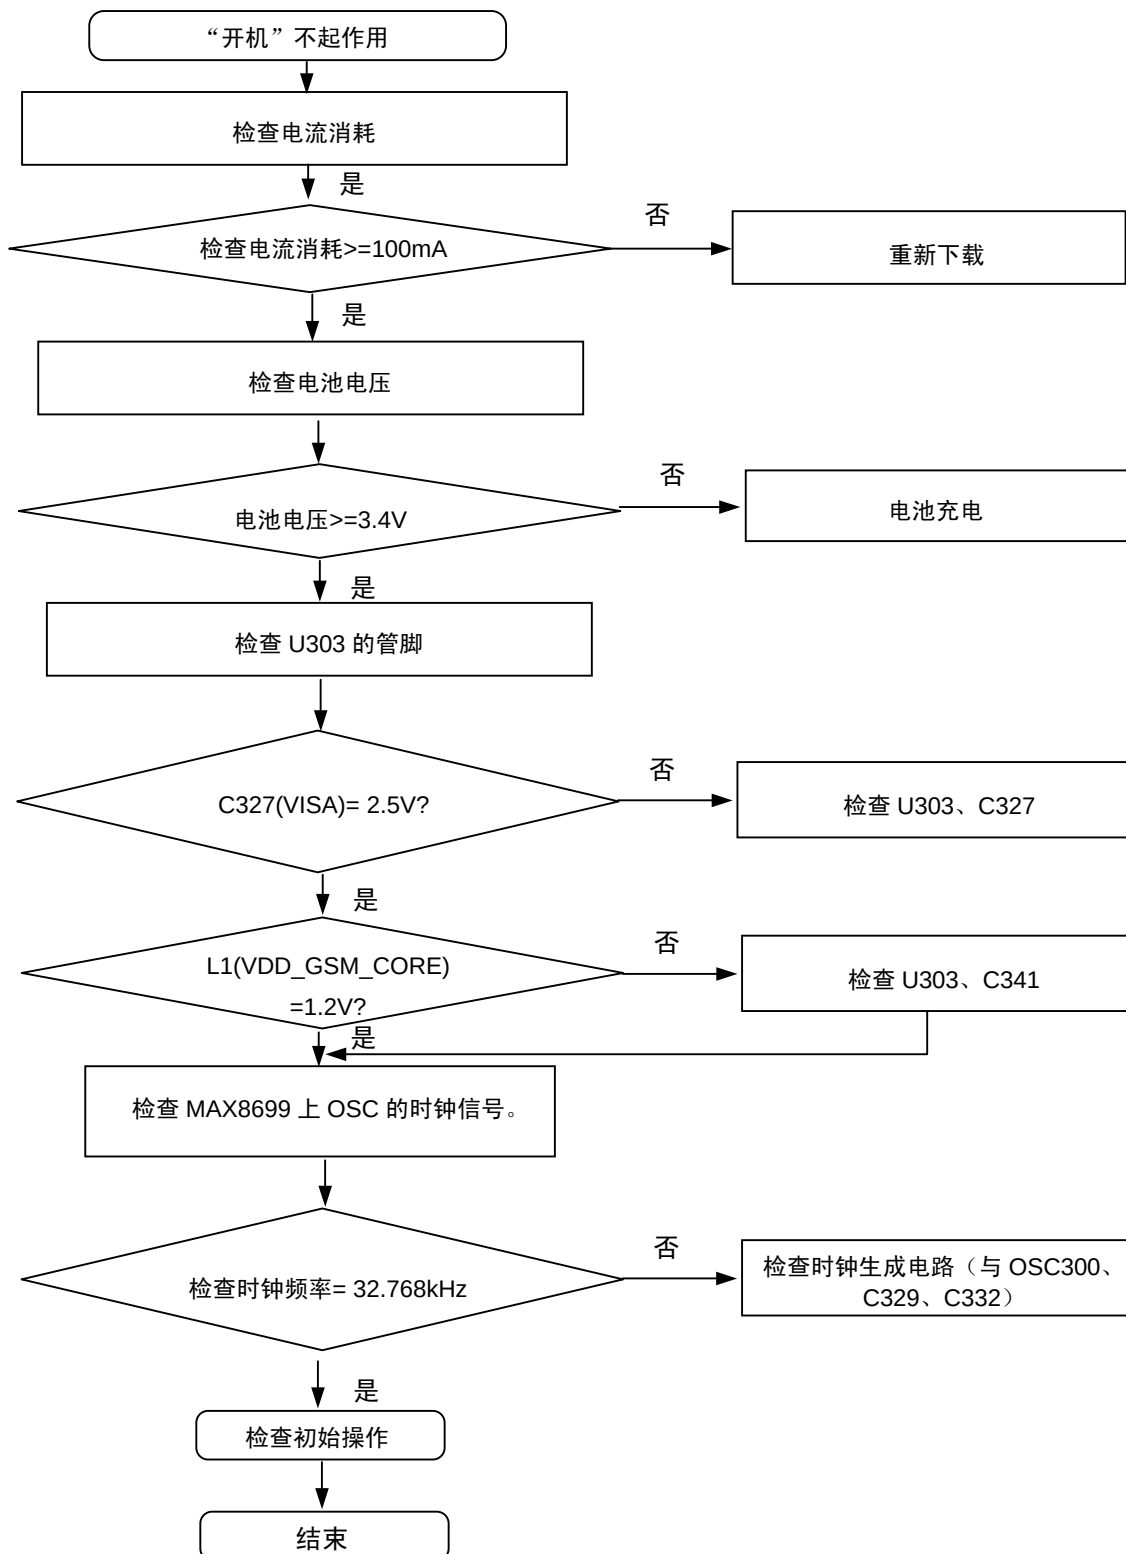


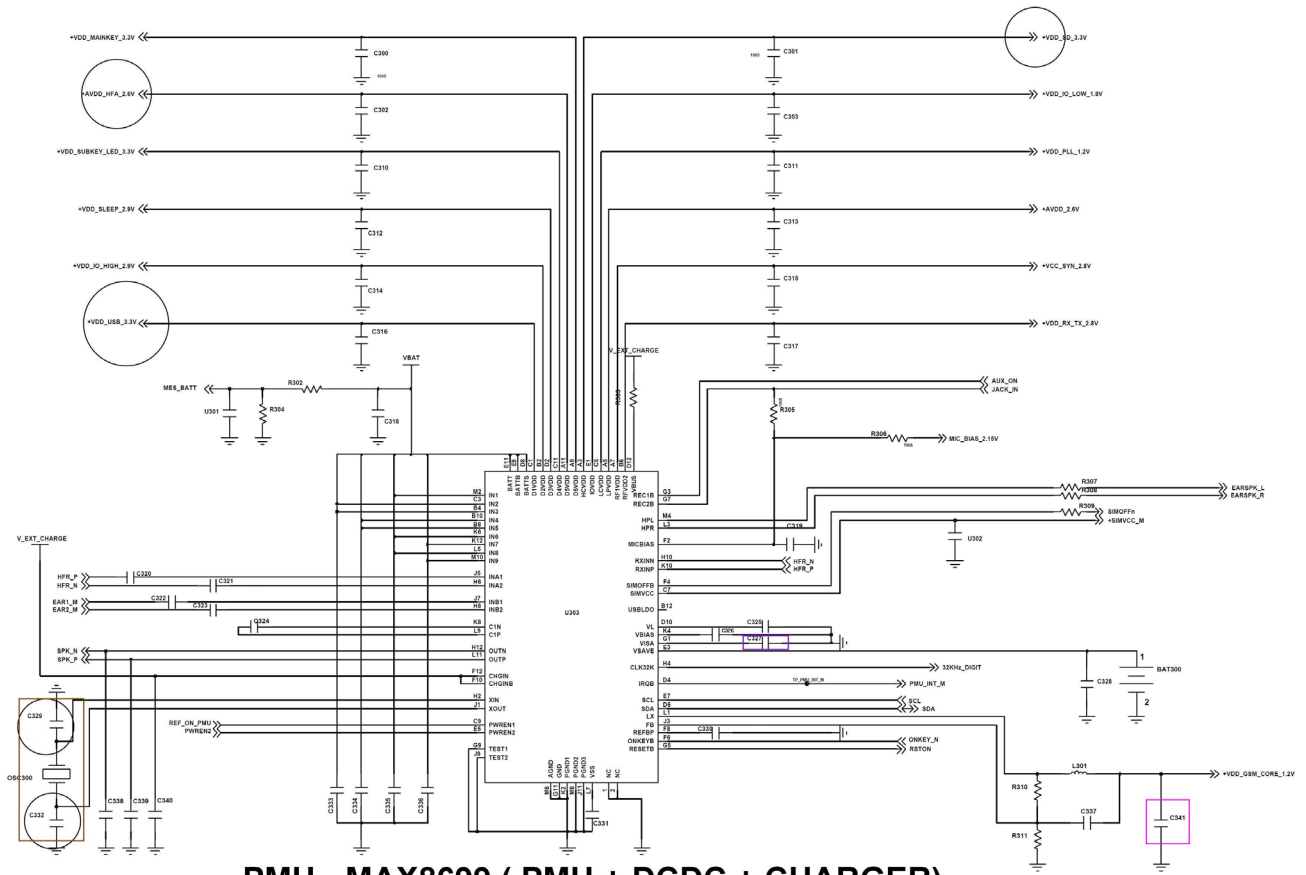

PMU - MAX8699 (PMU + DCDC + CHARGER)

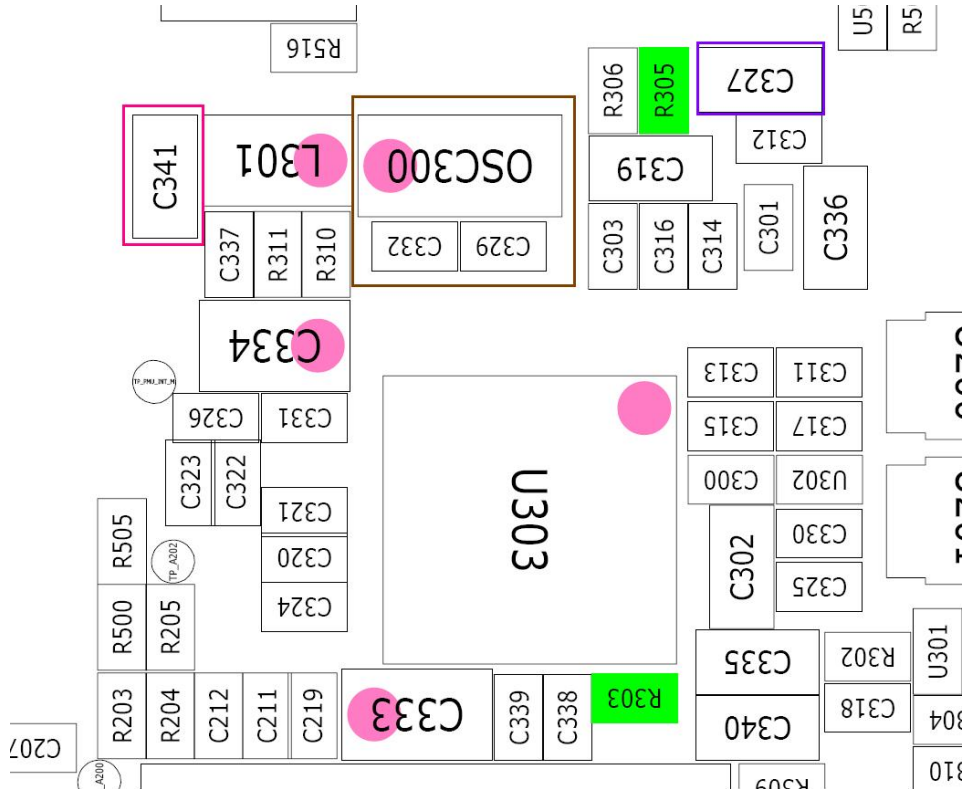



10-1-2.初始化

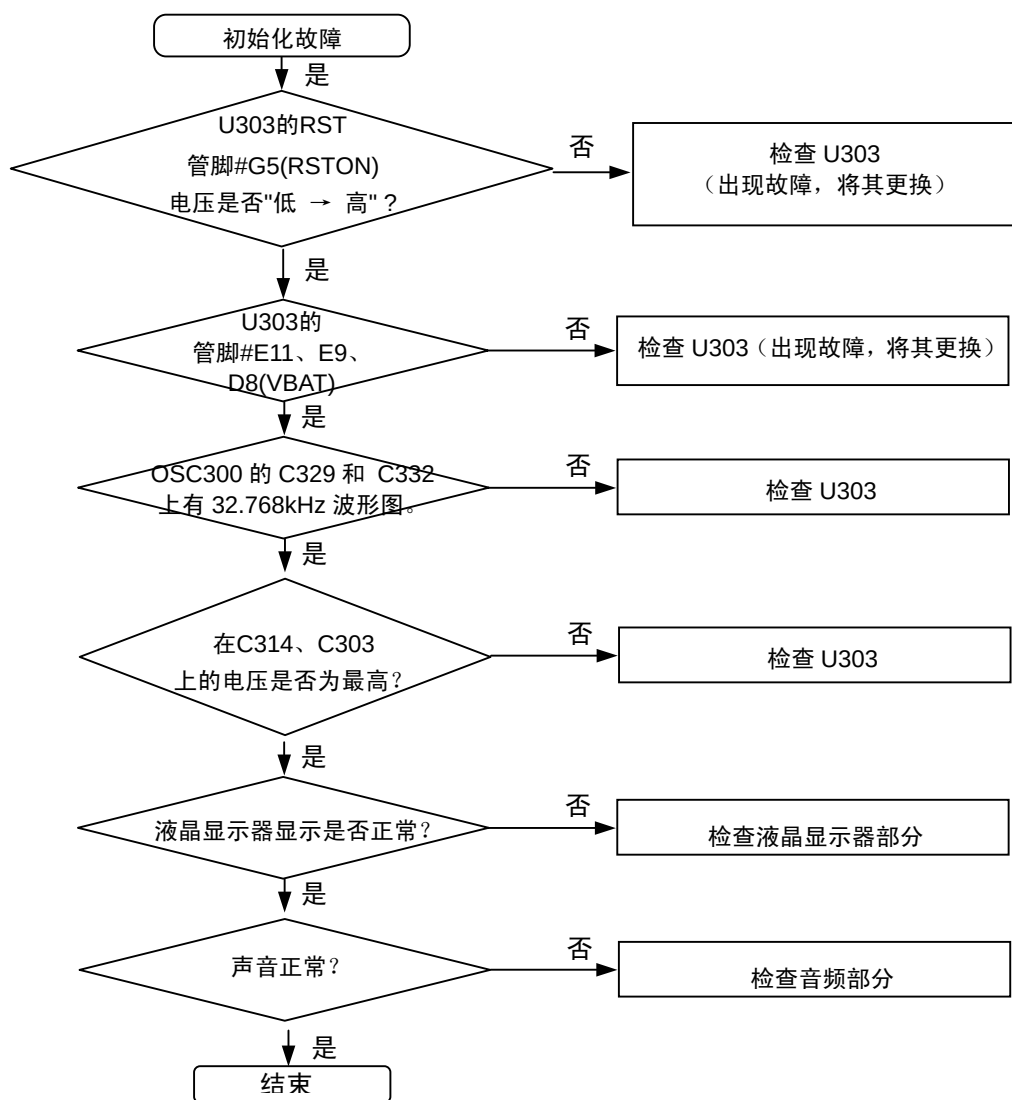




10-1-3. Sim 卡部分



(1)主

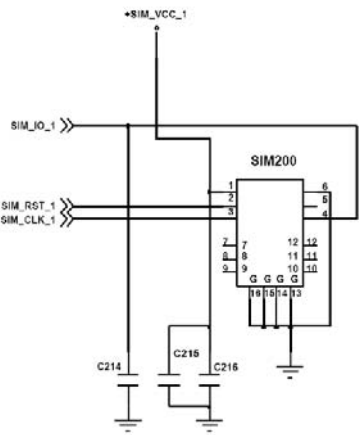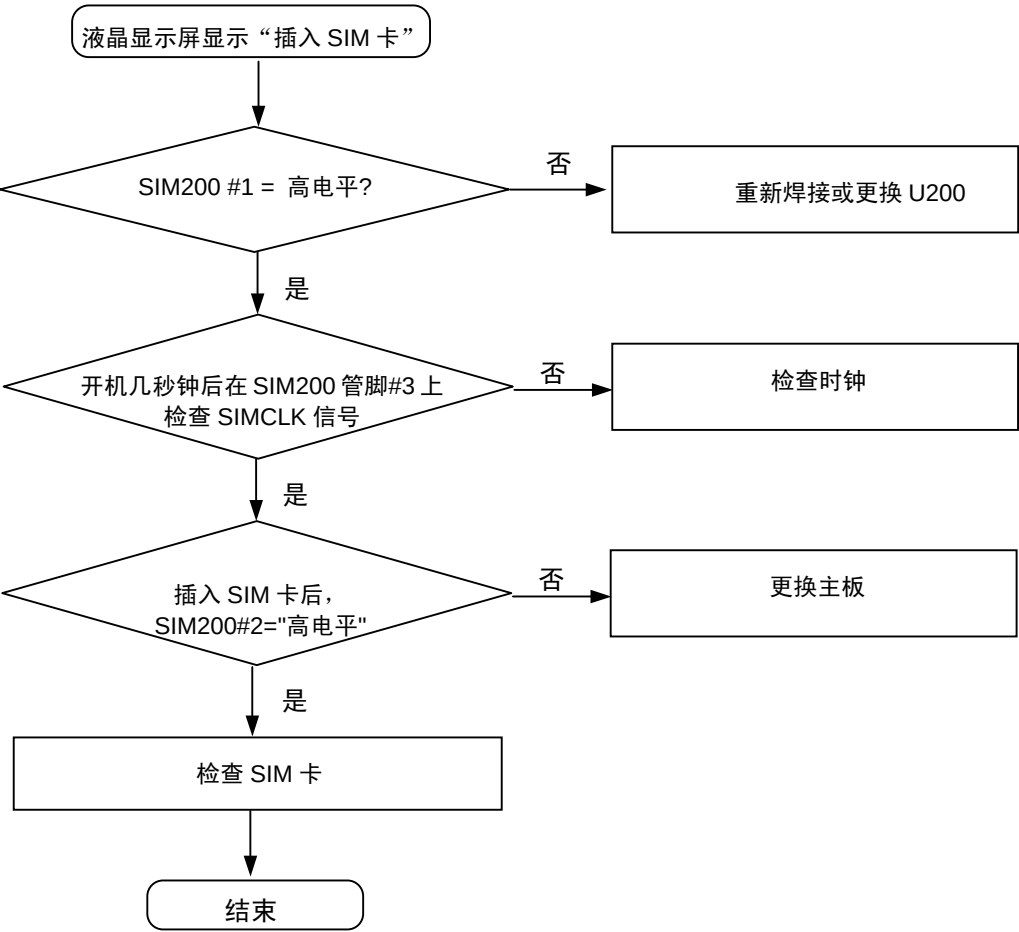


SIM1 [MASTER]


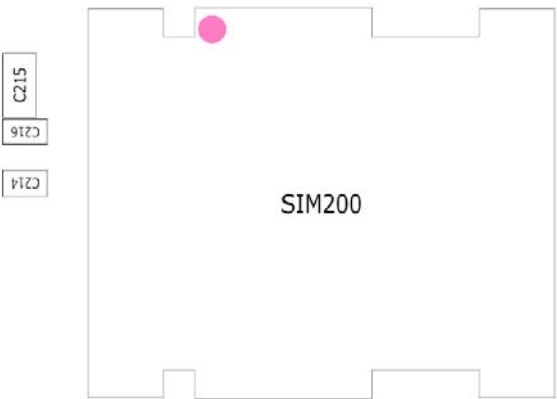


(2)副


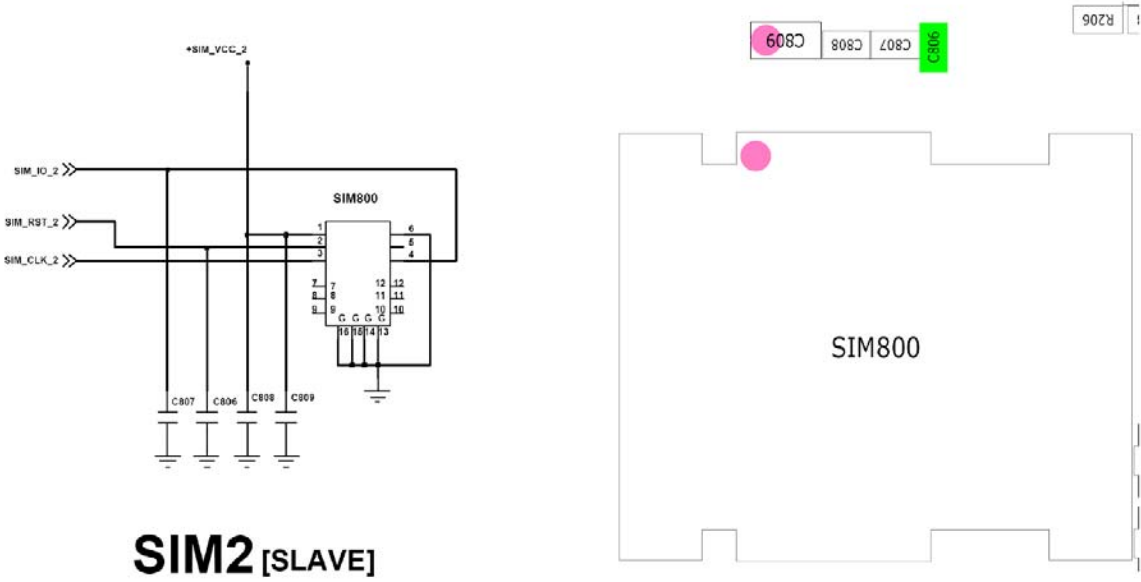
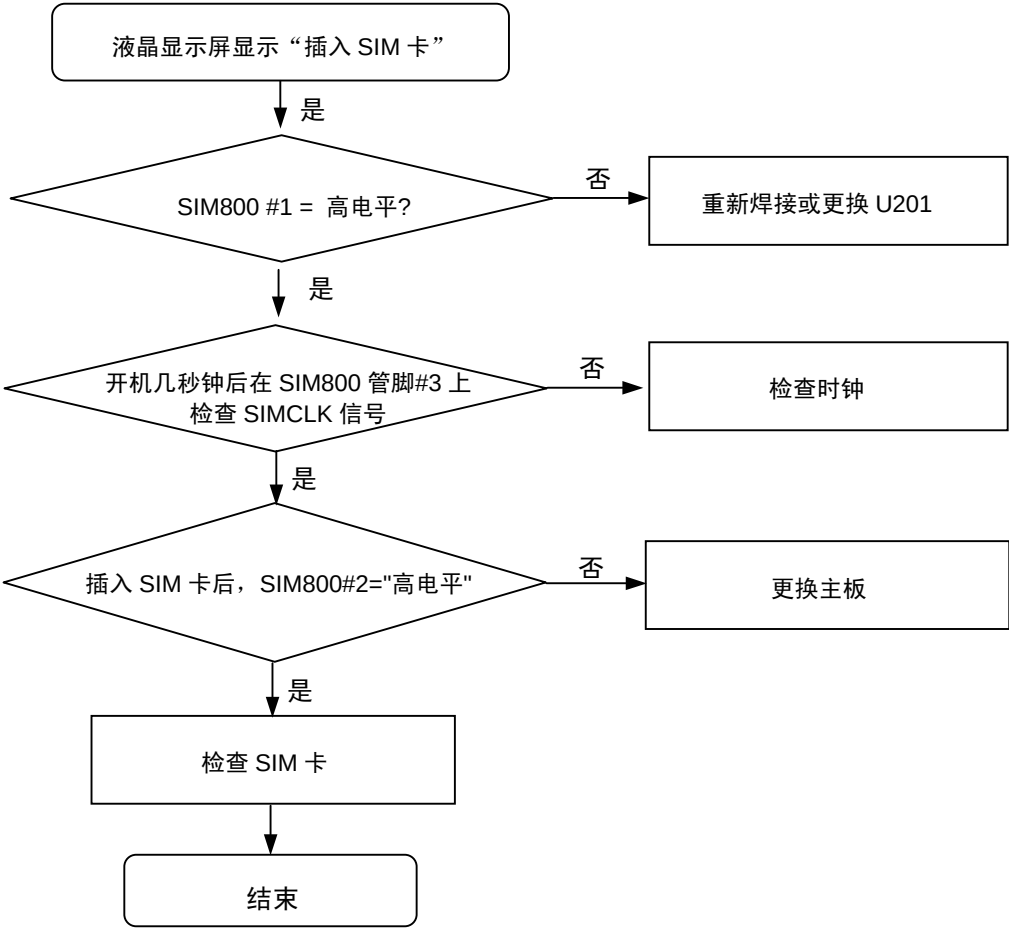


10-1-4. 话筒部分

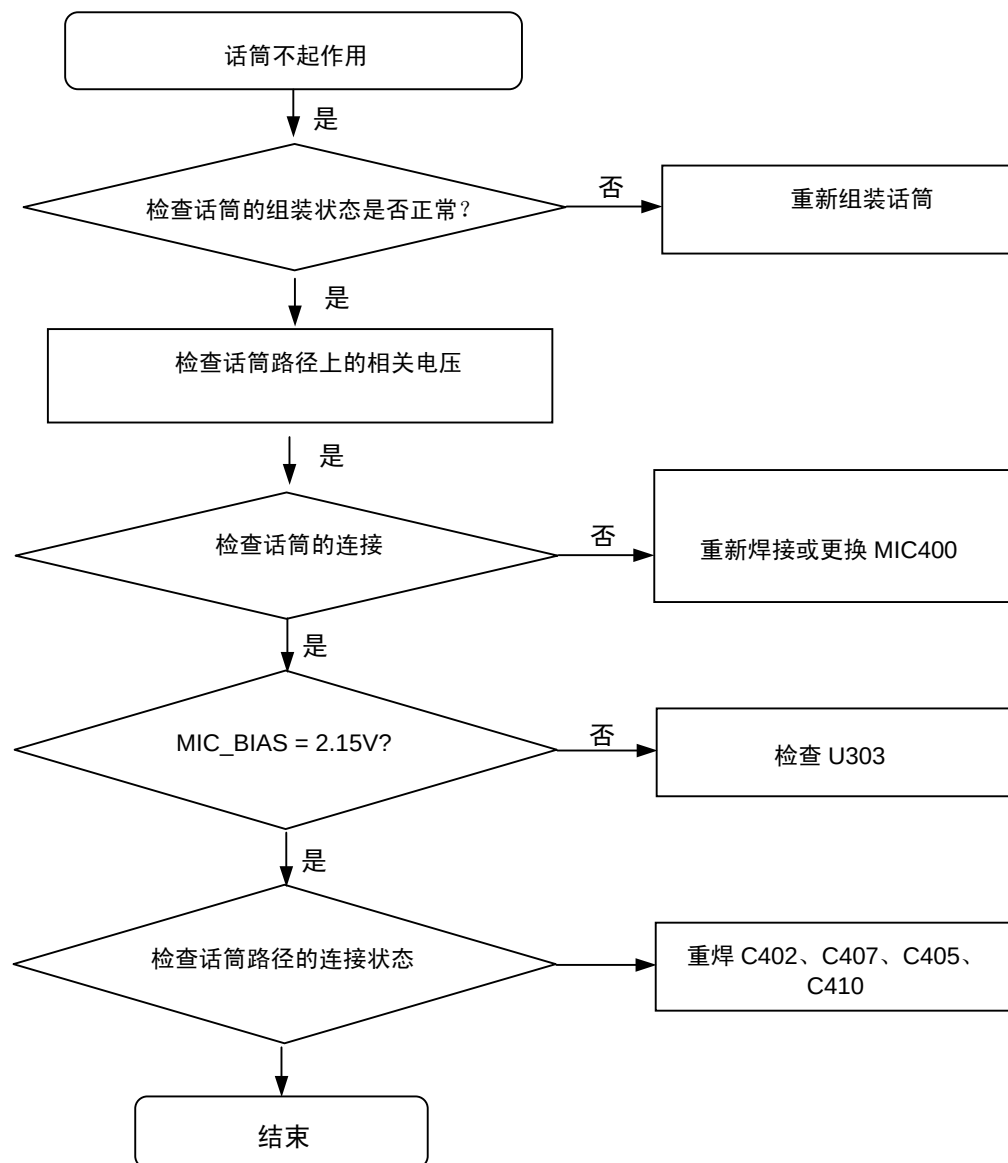


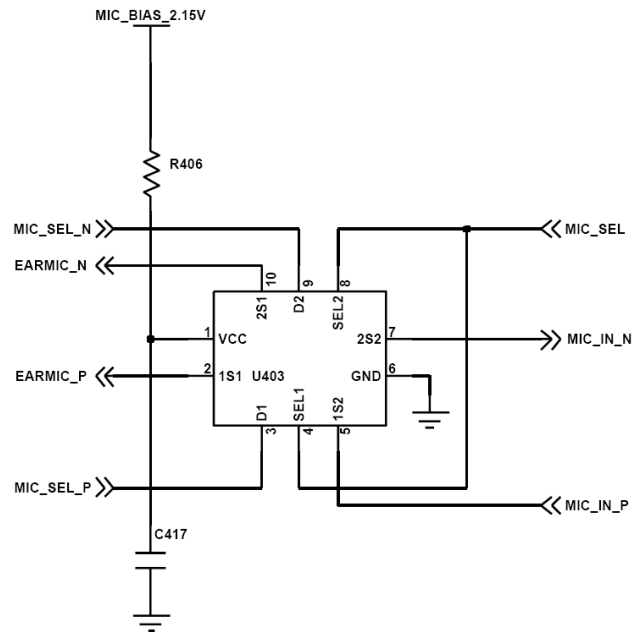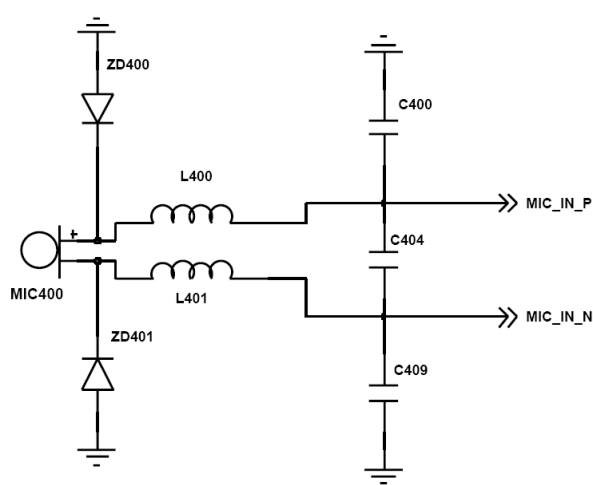




MICROPHONE

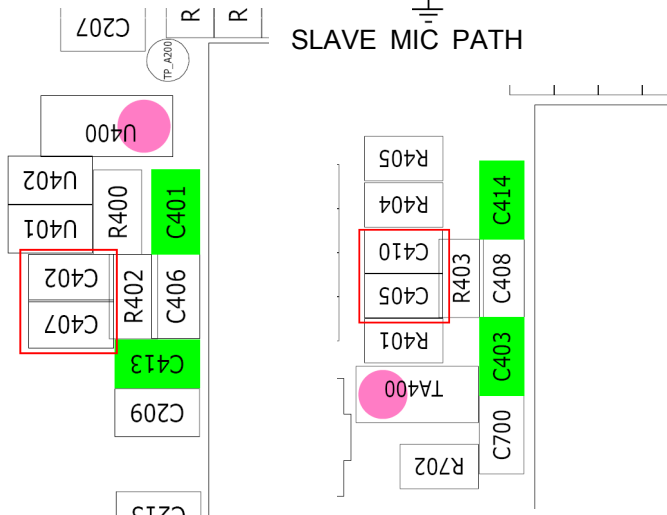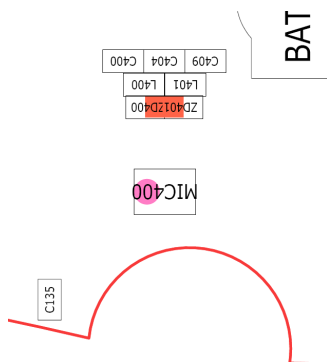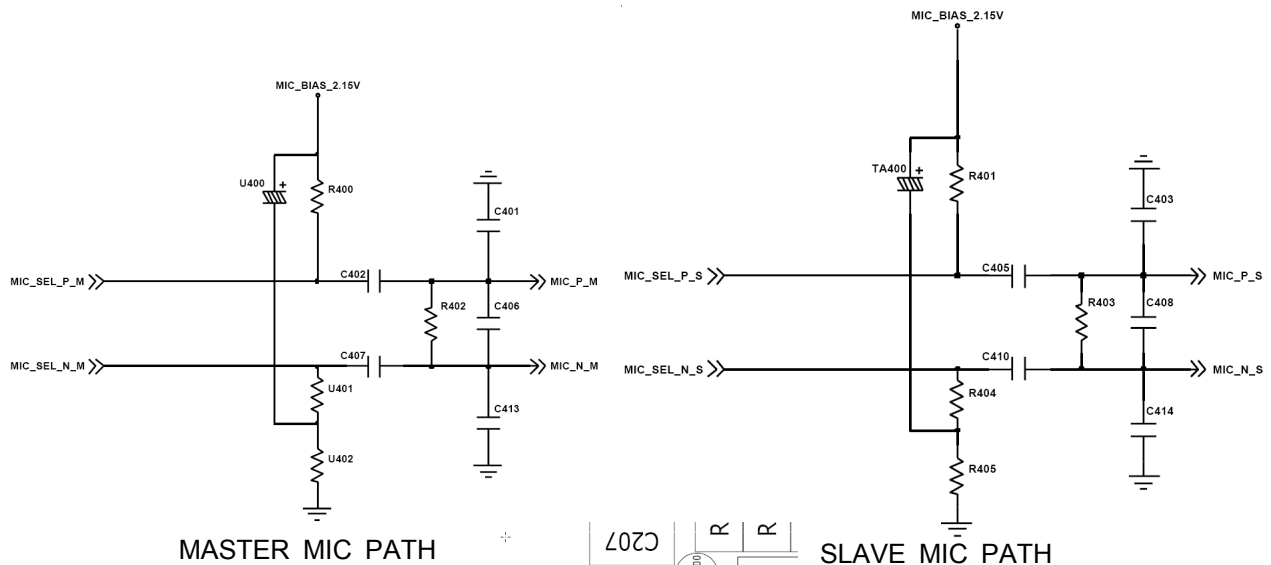


10-1-5. 接收器/扬声器部分

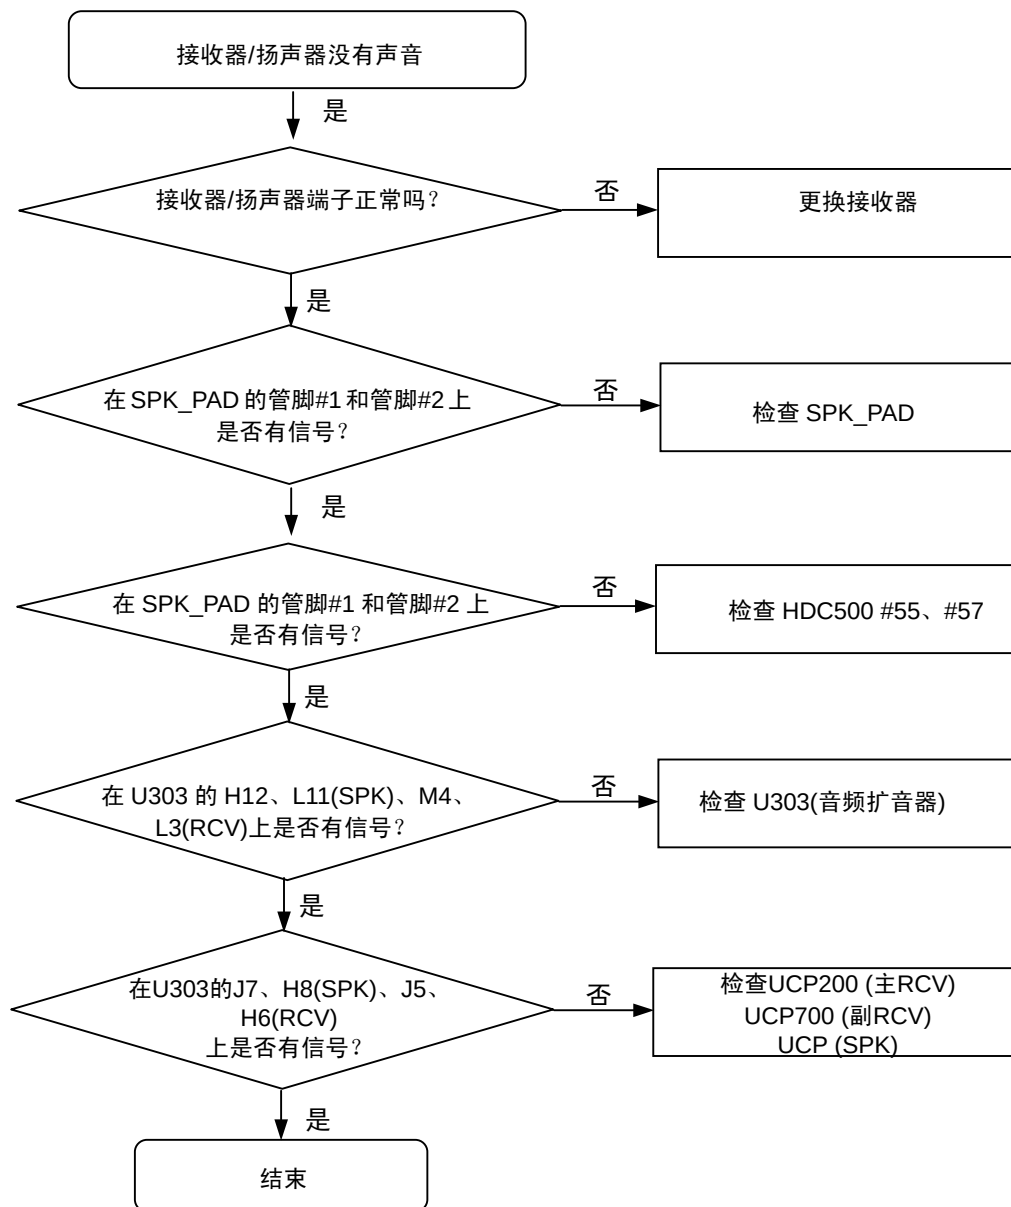


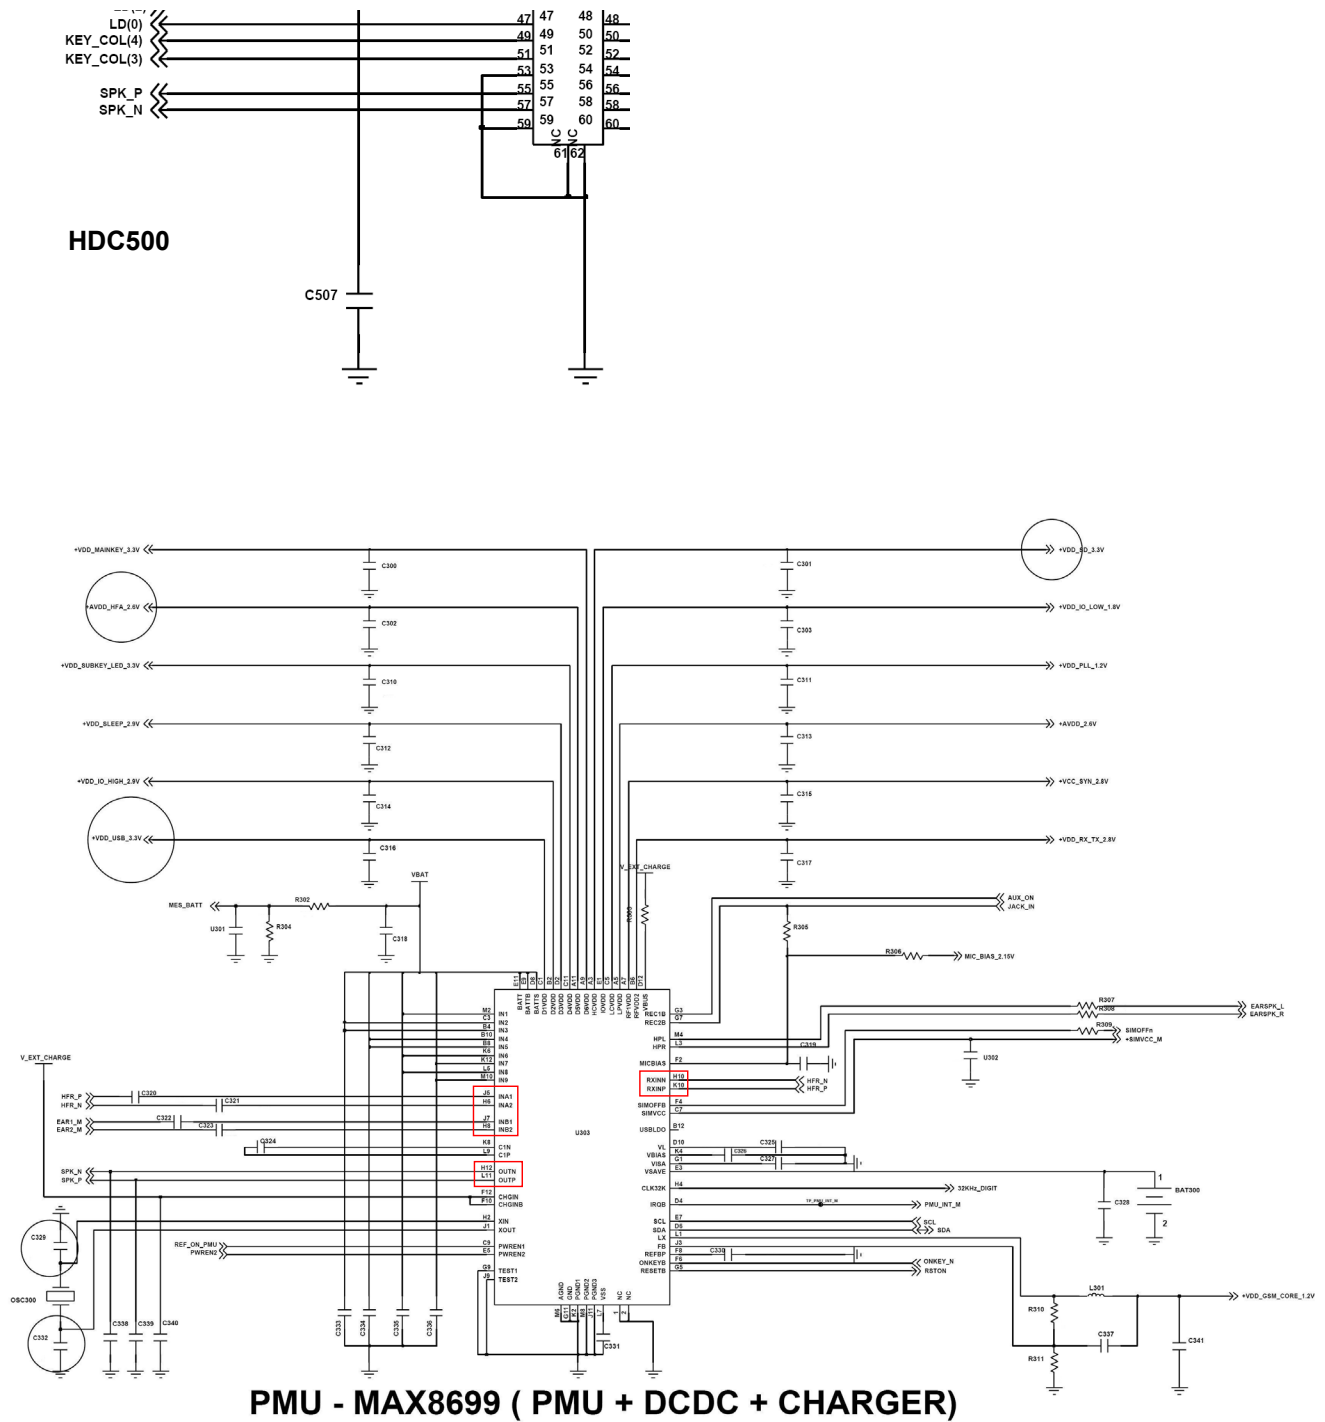

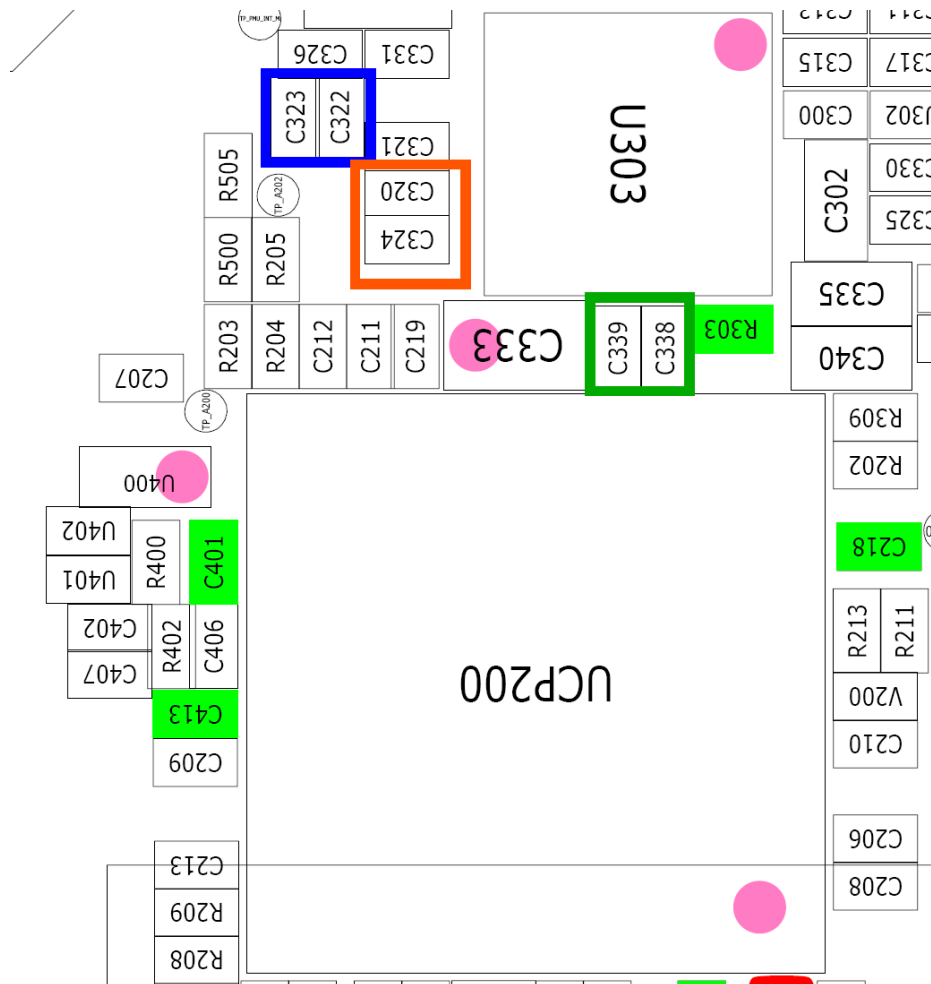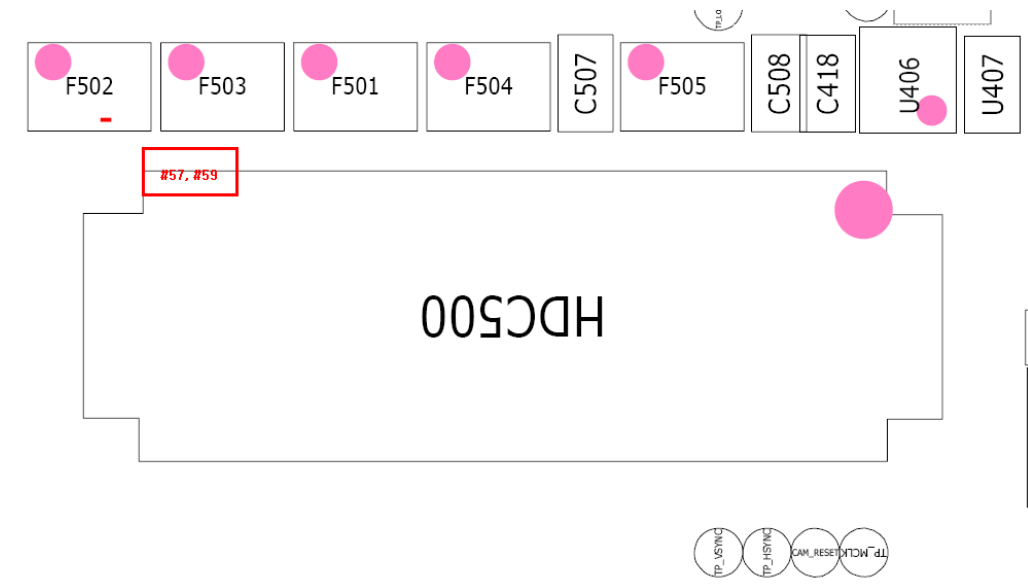



10-1-6. 充电部分

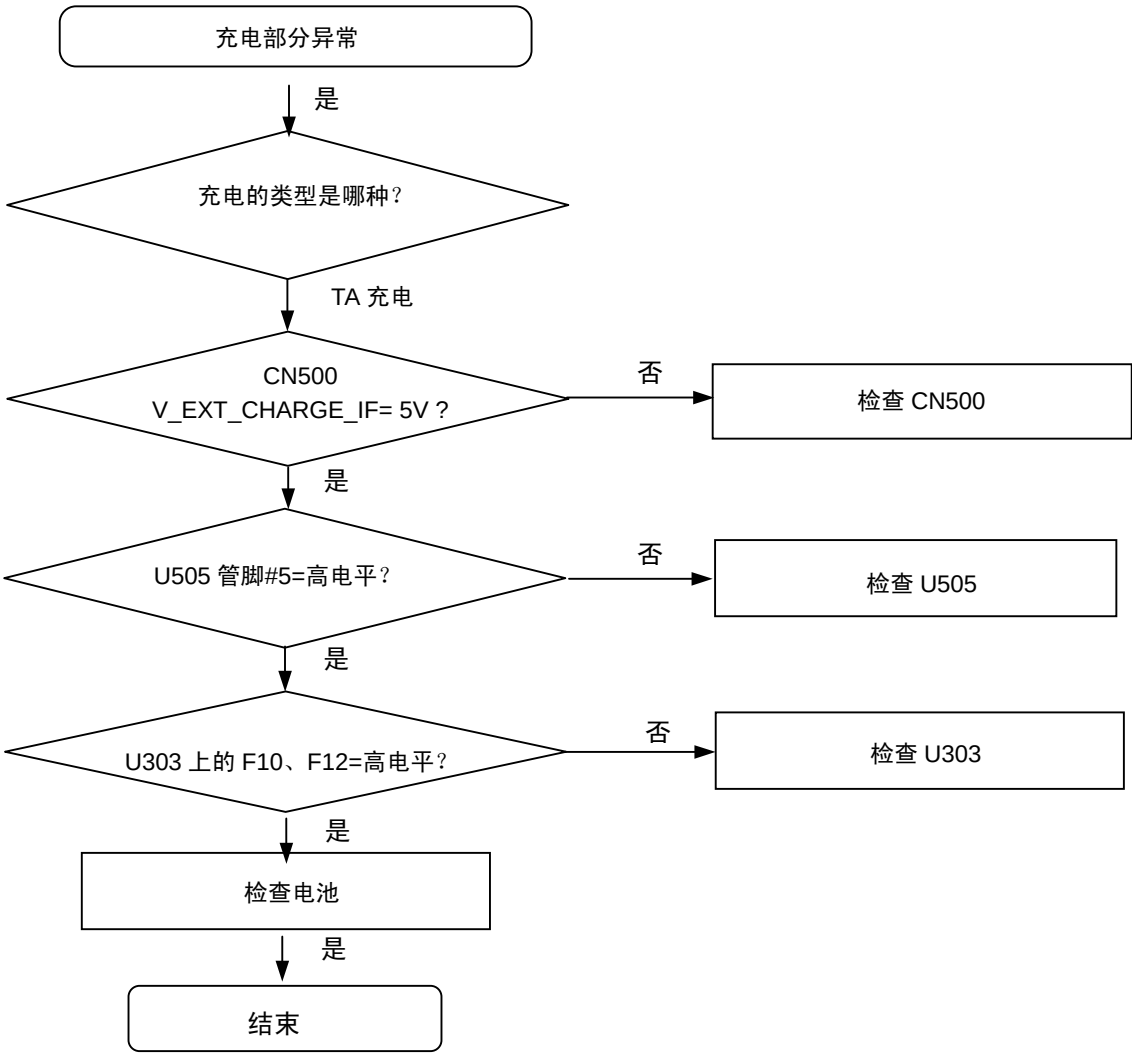

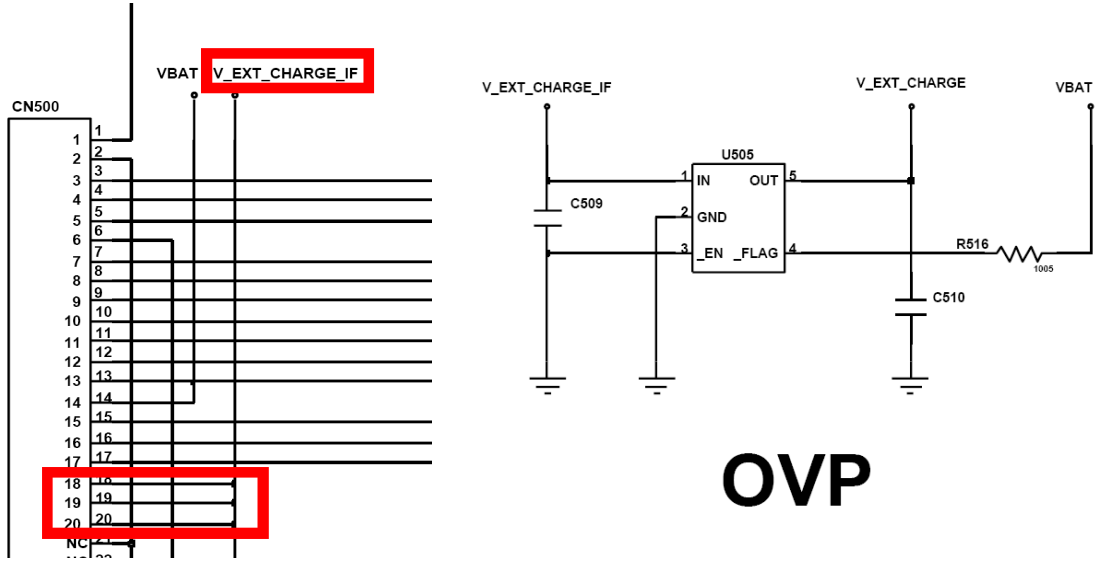




OVP

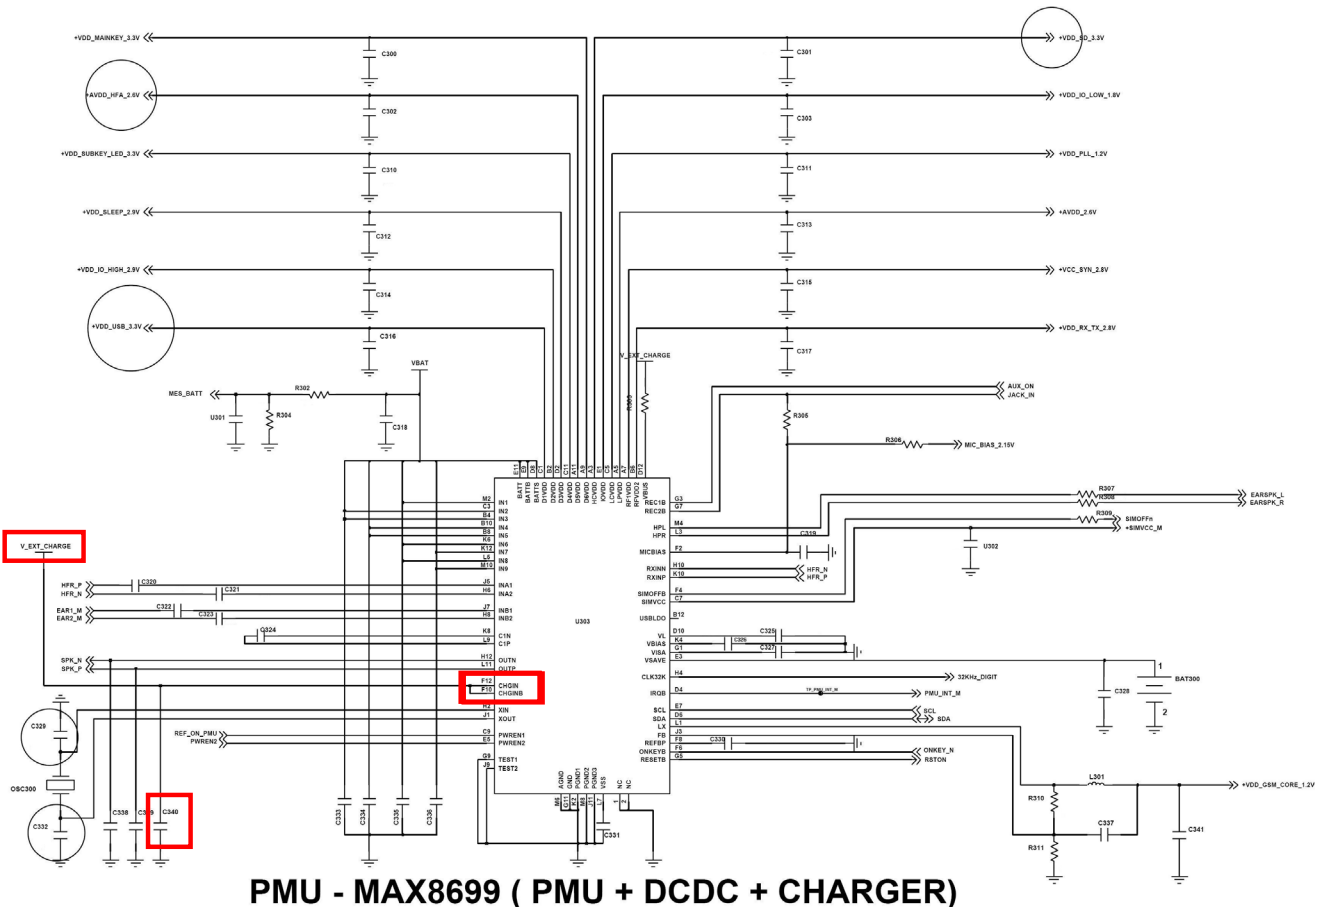

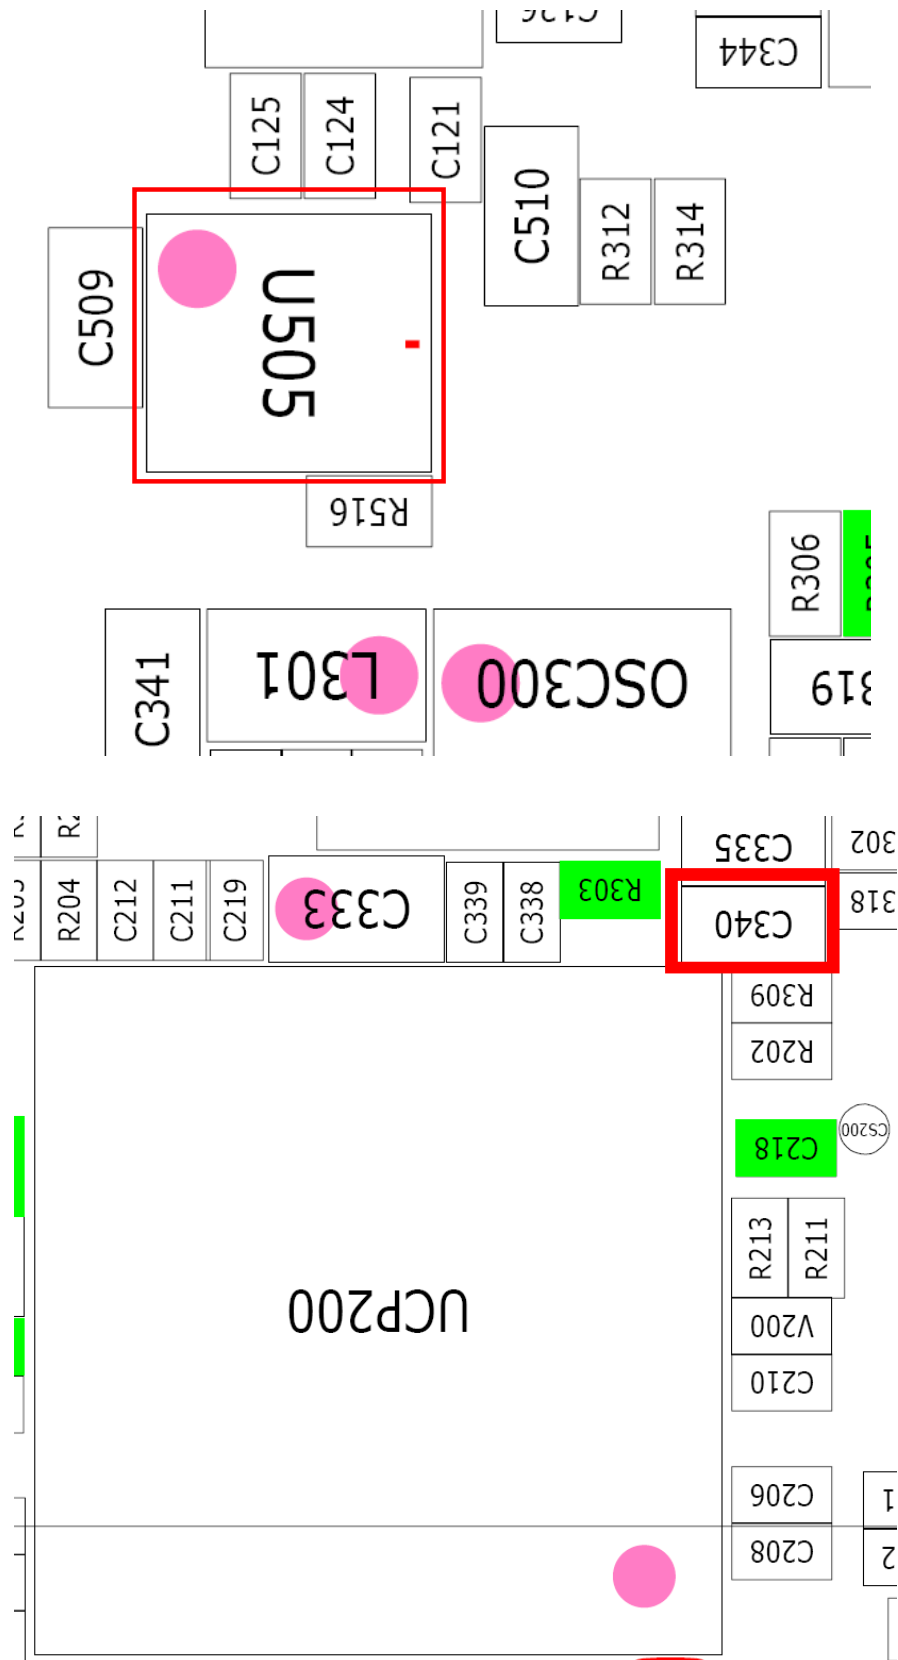


10-1-7.FM 接收器部分

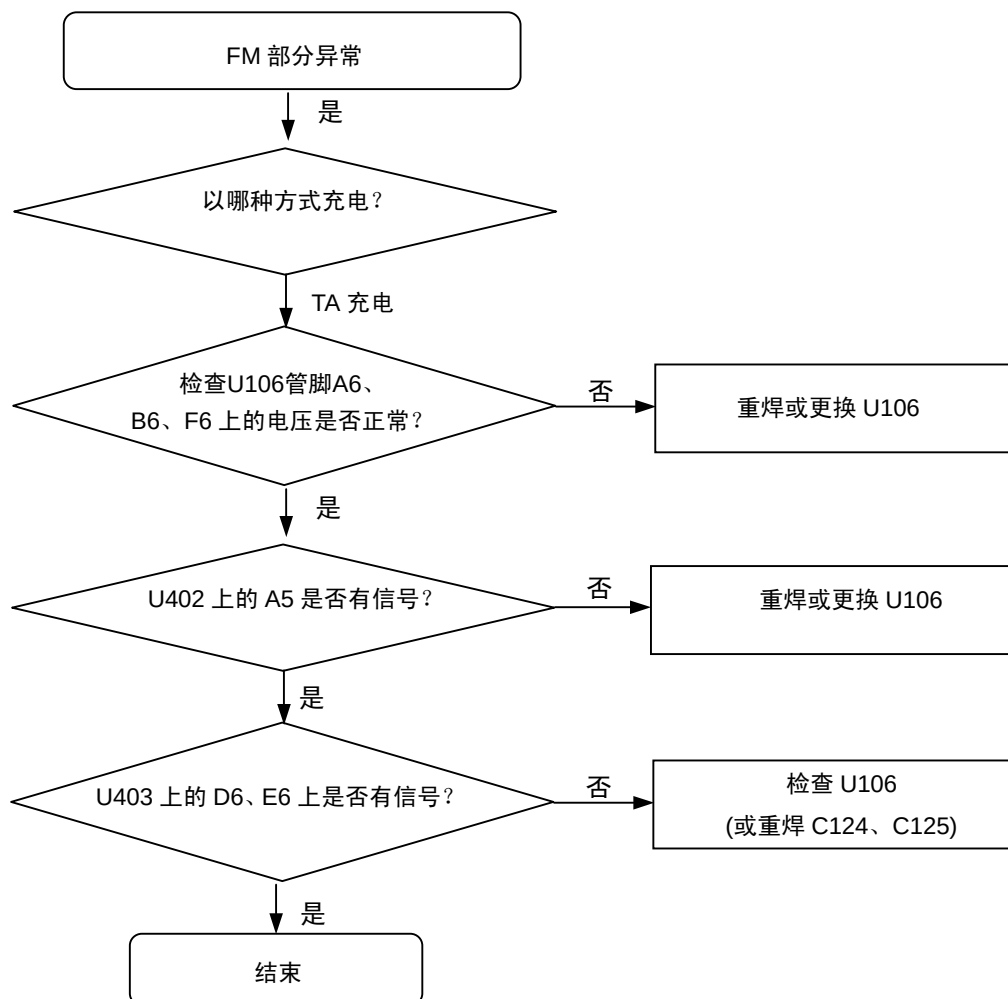

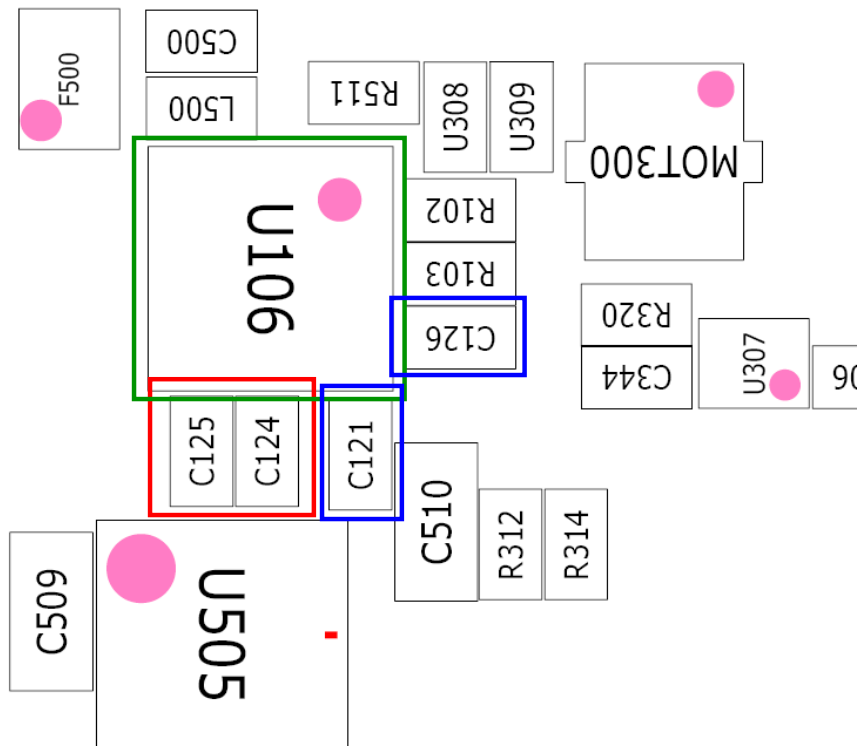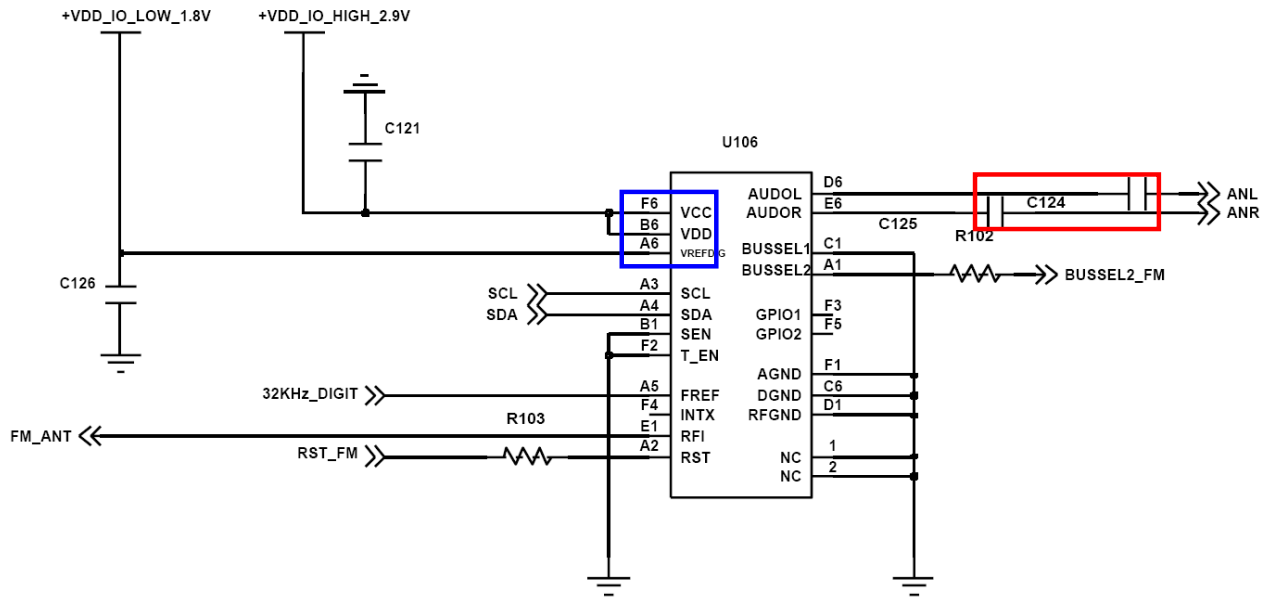


10-2. 射频


10-2-1. GSM 接收器-主

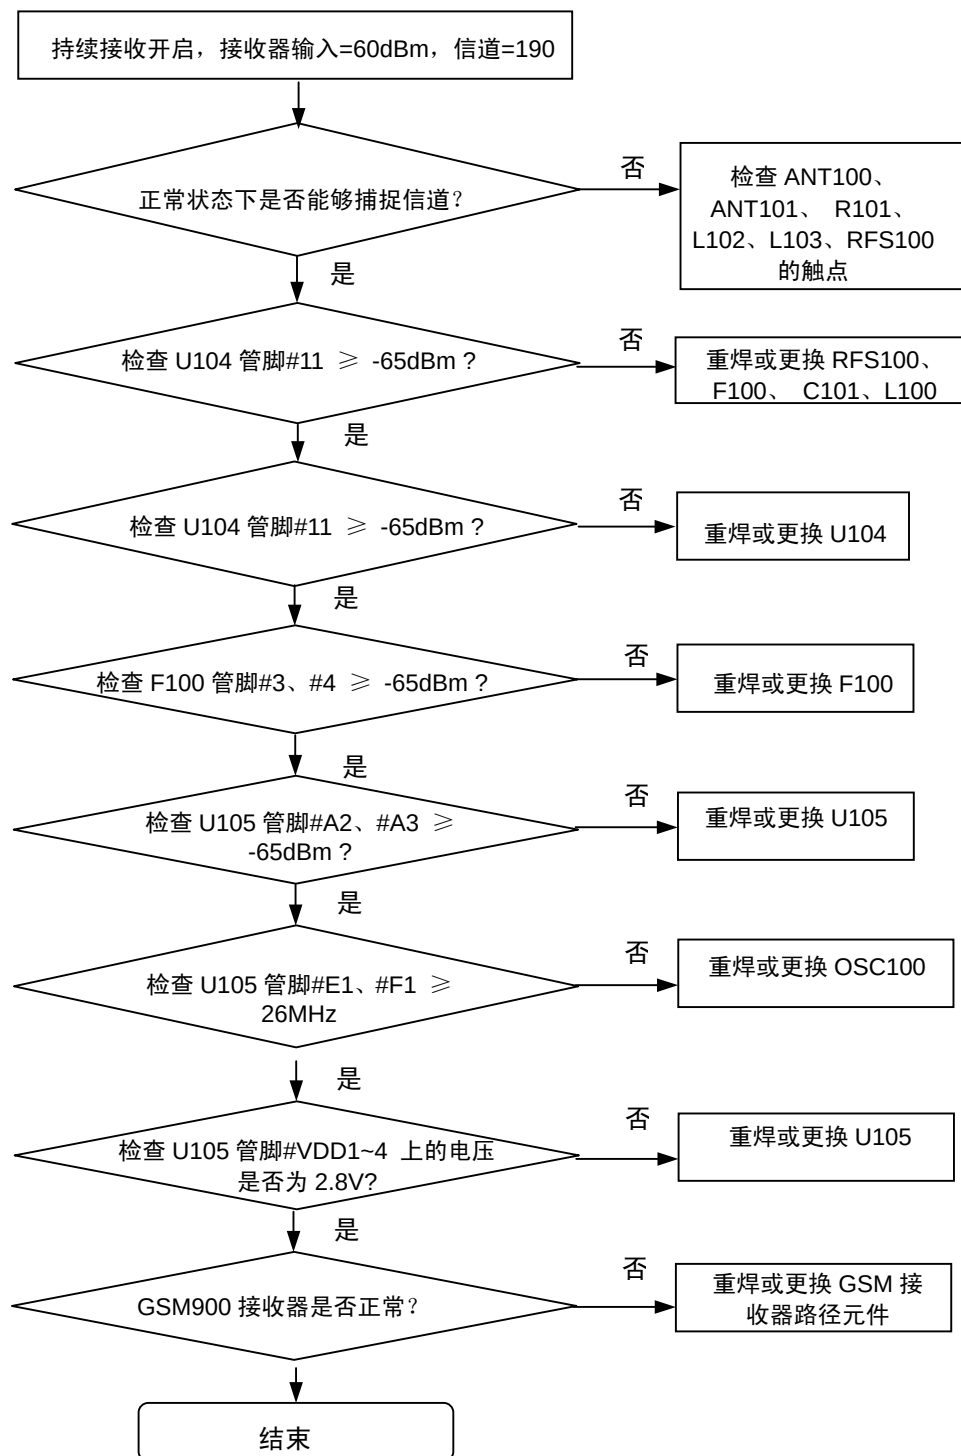


10-2-2. GSM 接收器-副

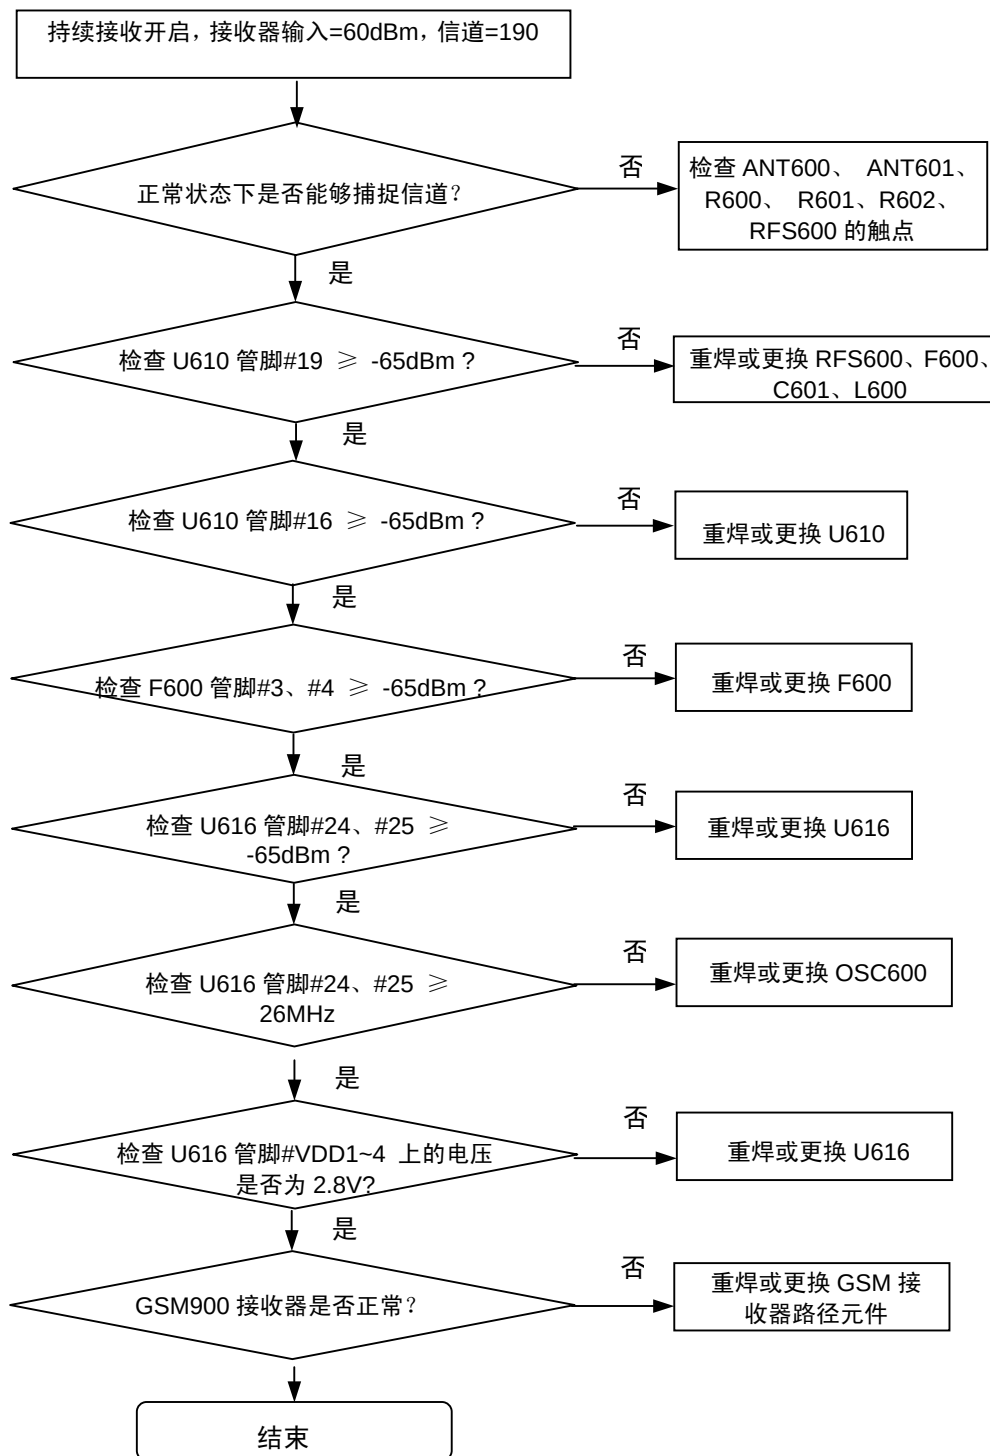


10-2-3. DCS 接收器-主

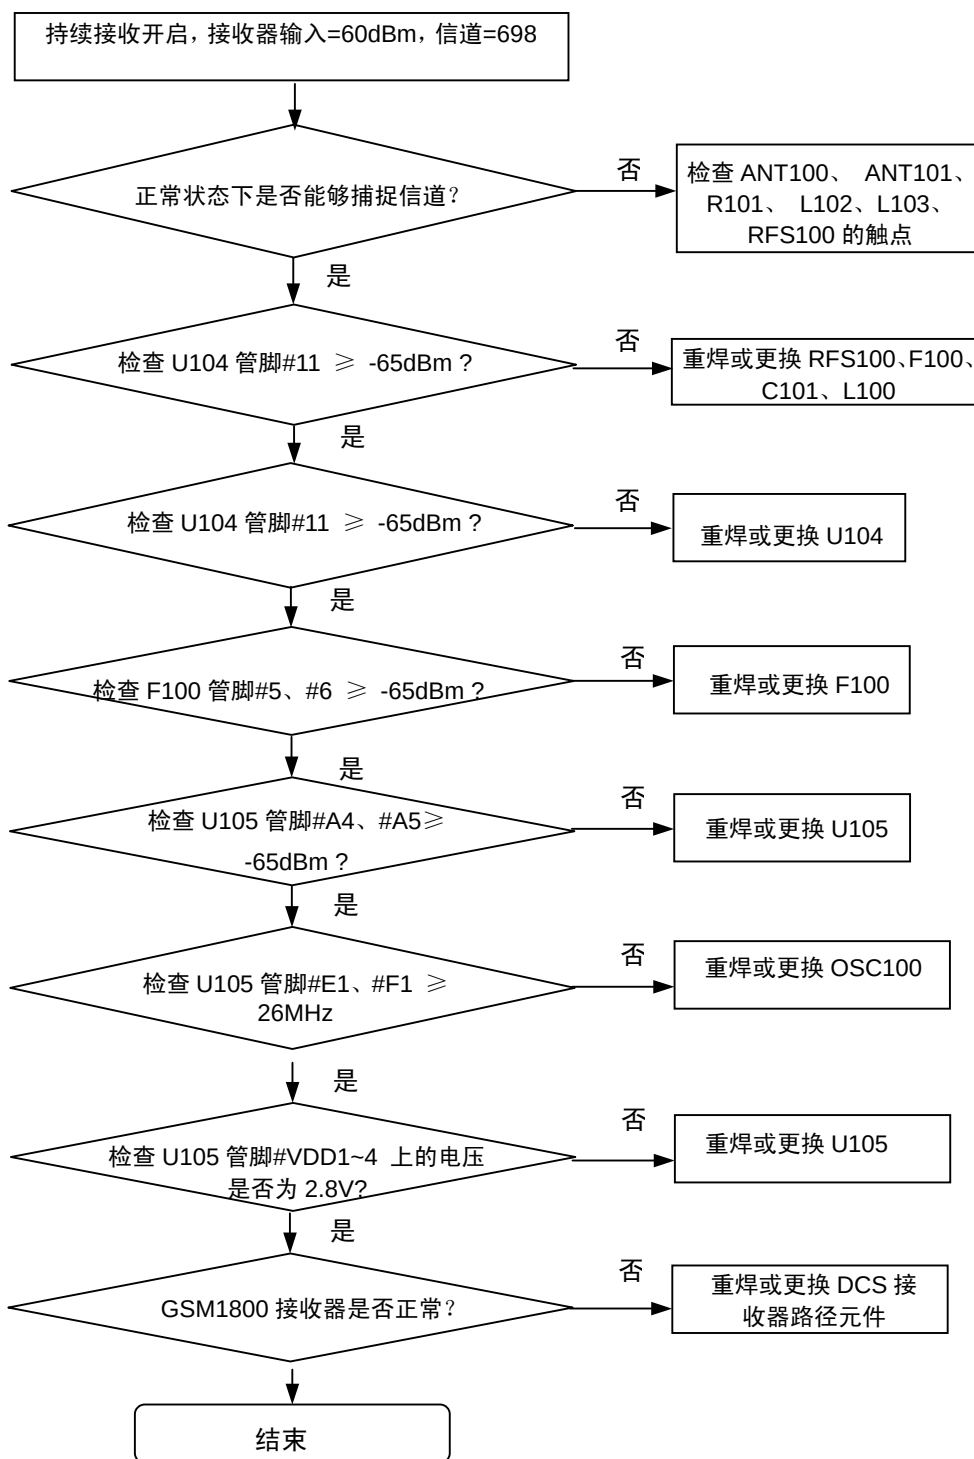


10-2-4. DCS 接收器-副

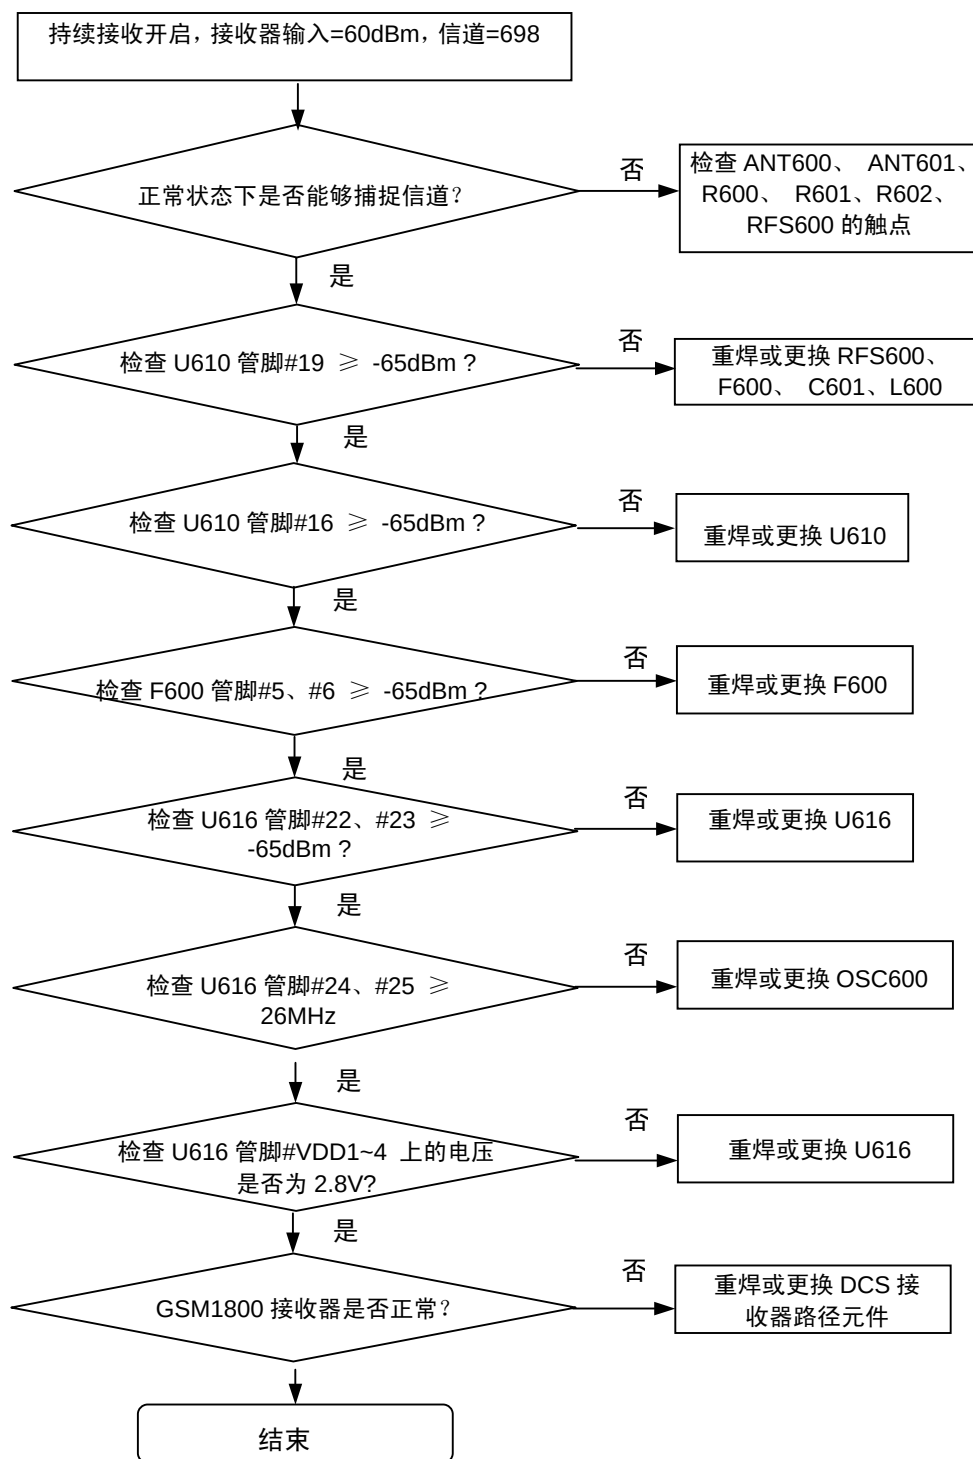


10-2-5. PCS 接收器-主

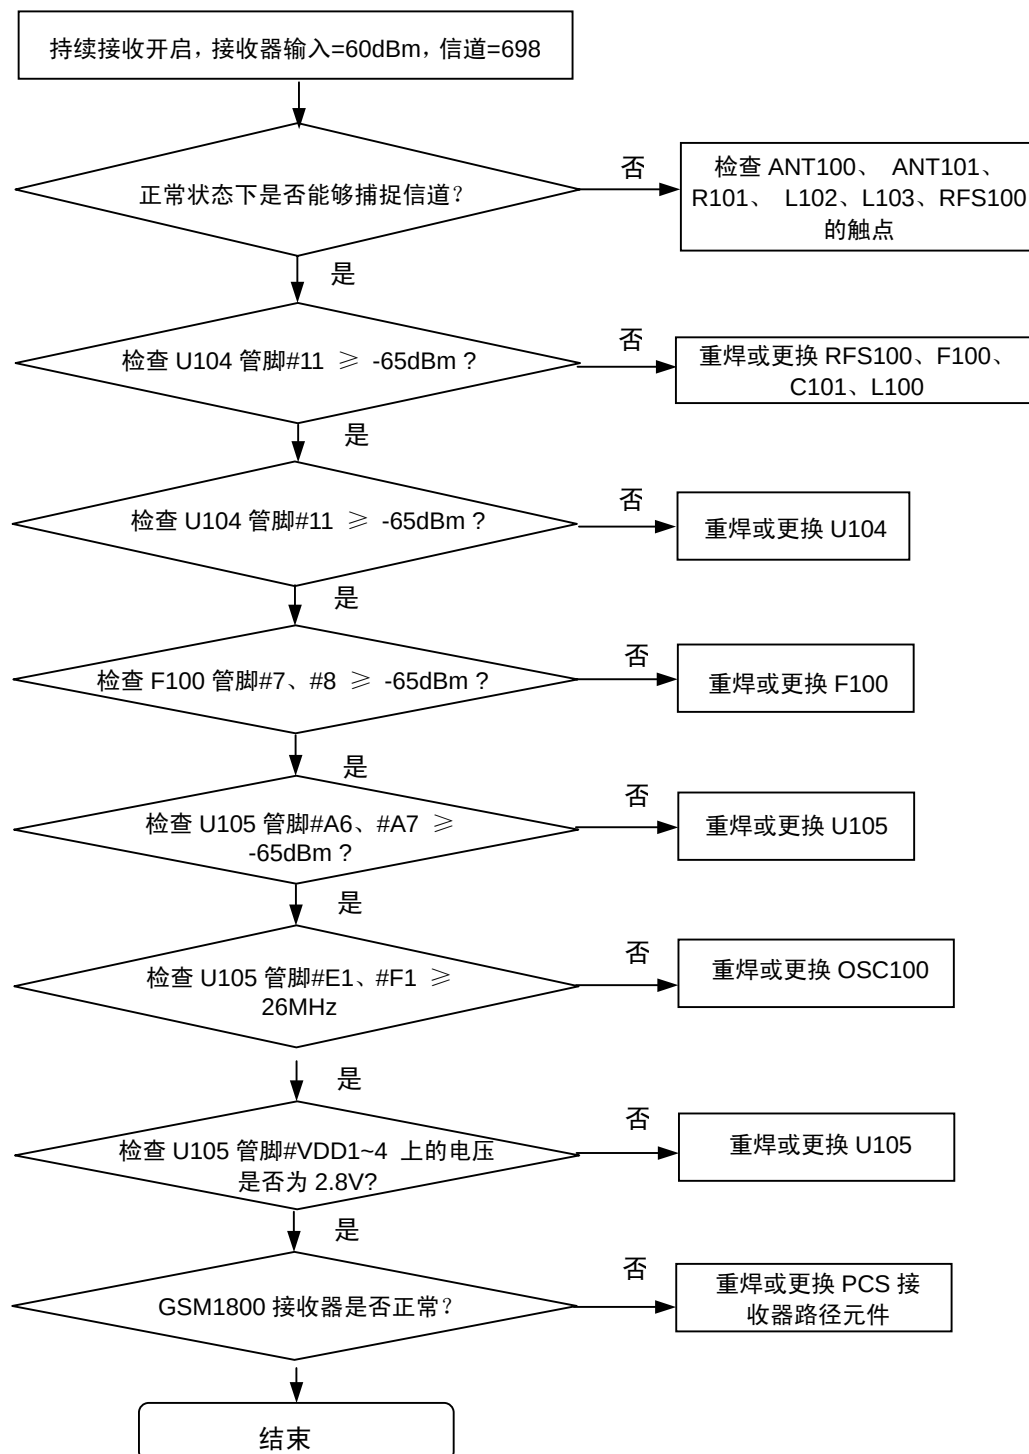


10-2-6. GSM 接收器-副

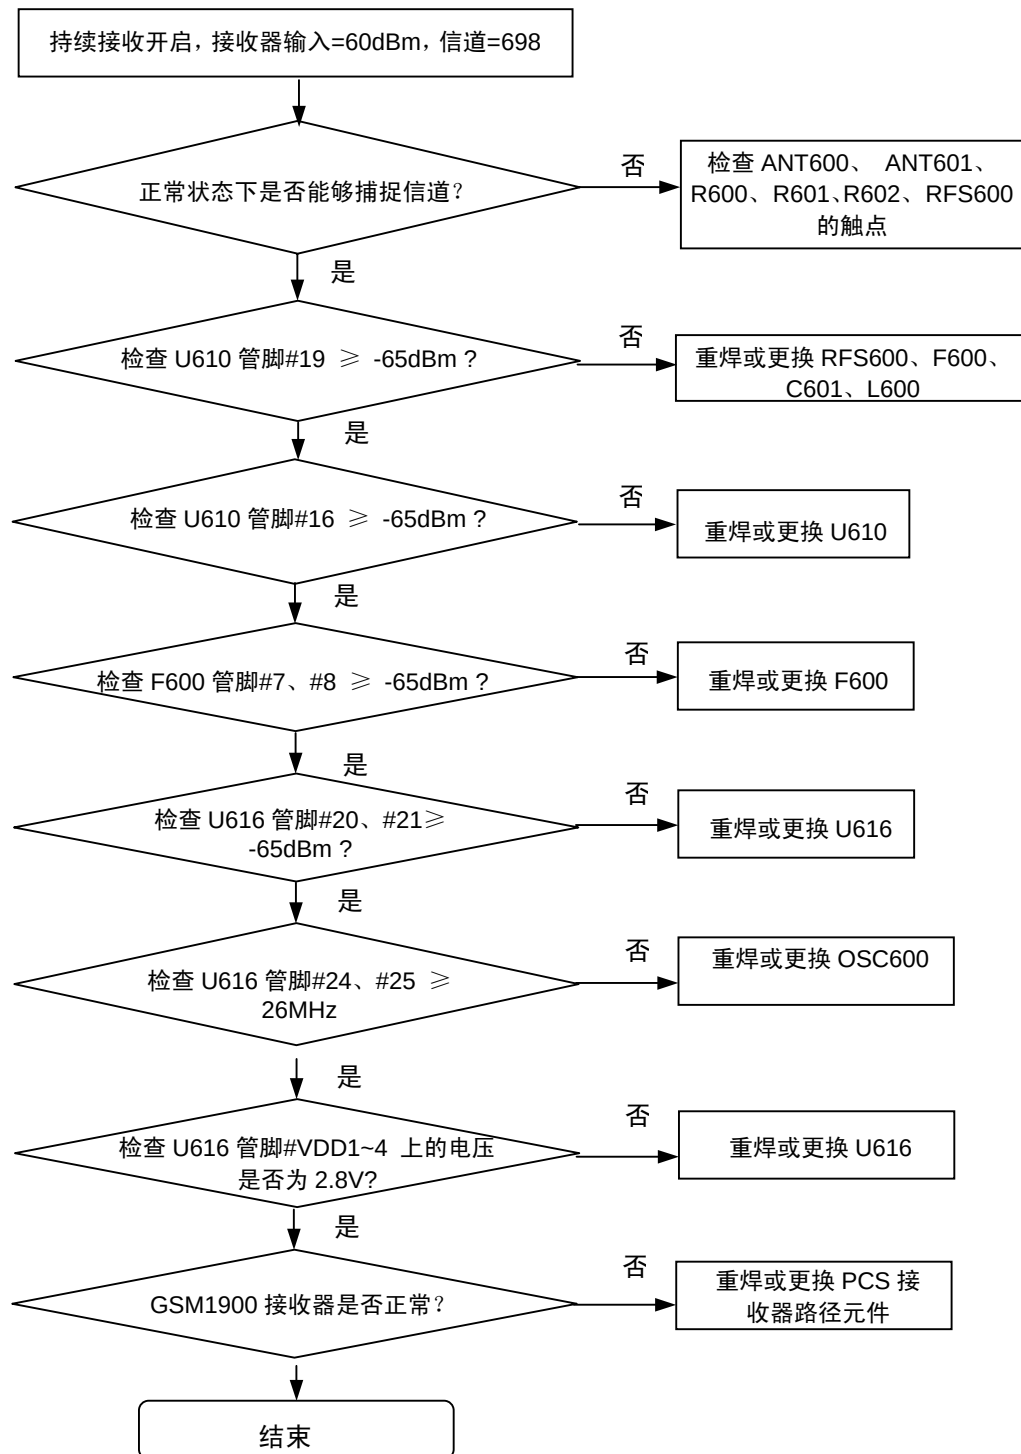


10-2-5.GSM900 发射器-主

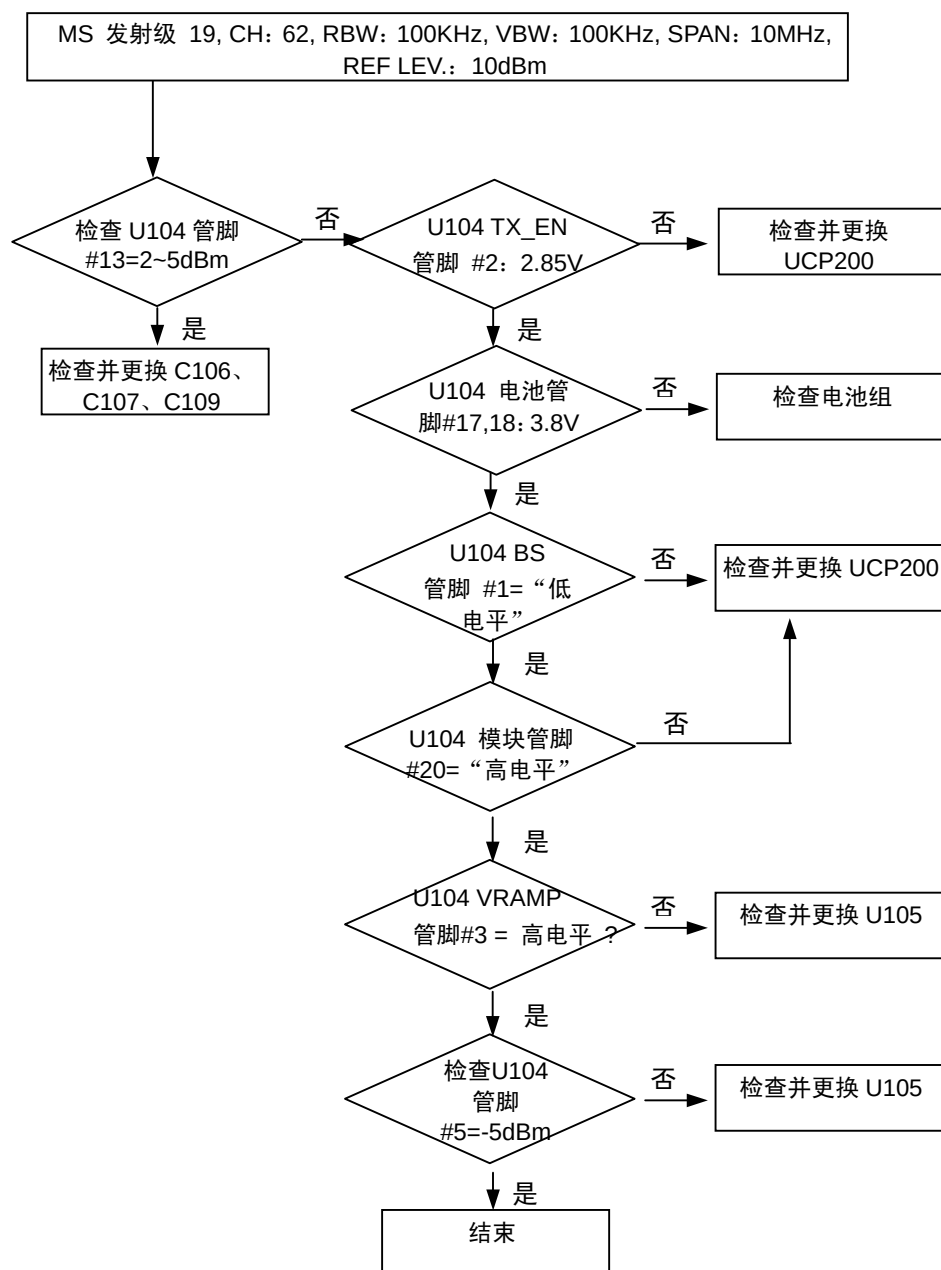


10-2-6.GSM900 发射器-副

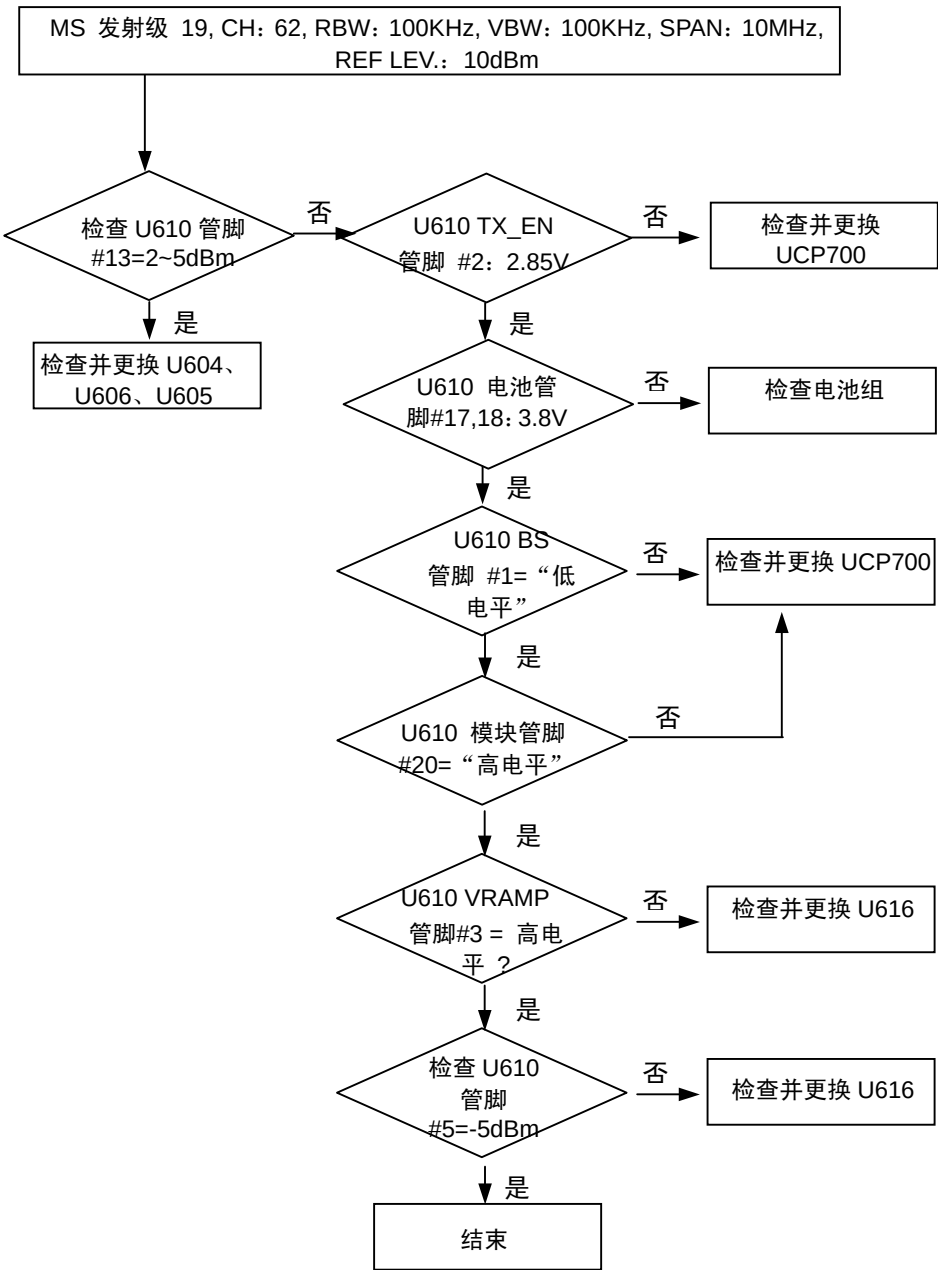


10-2-7.DCS/PCS 发射器-主

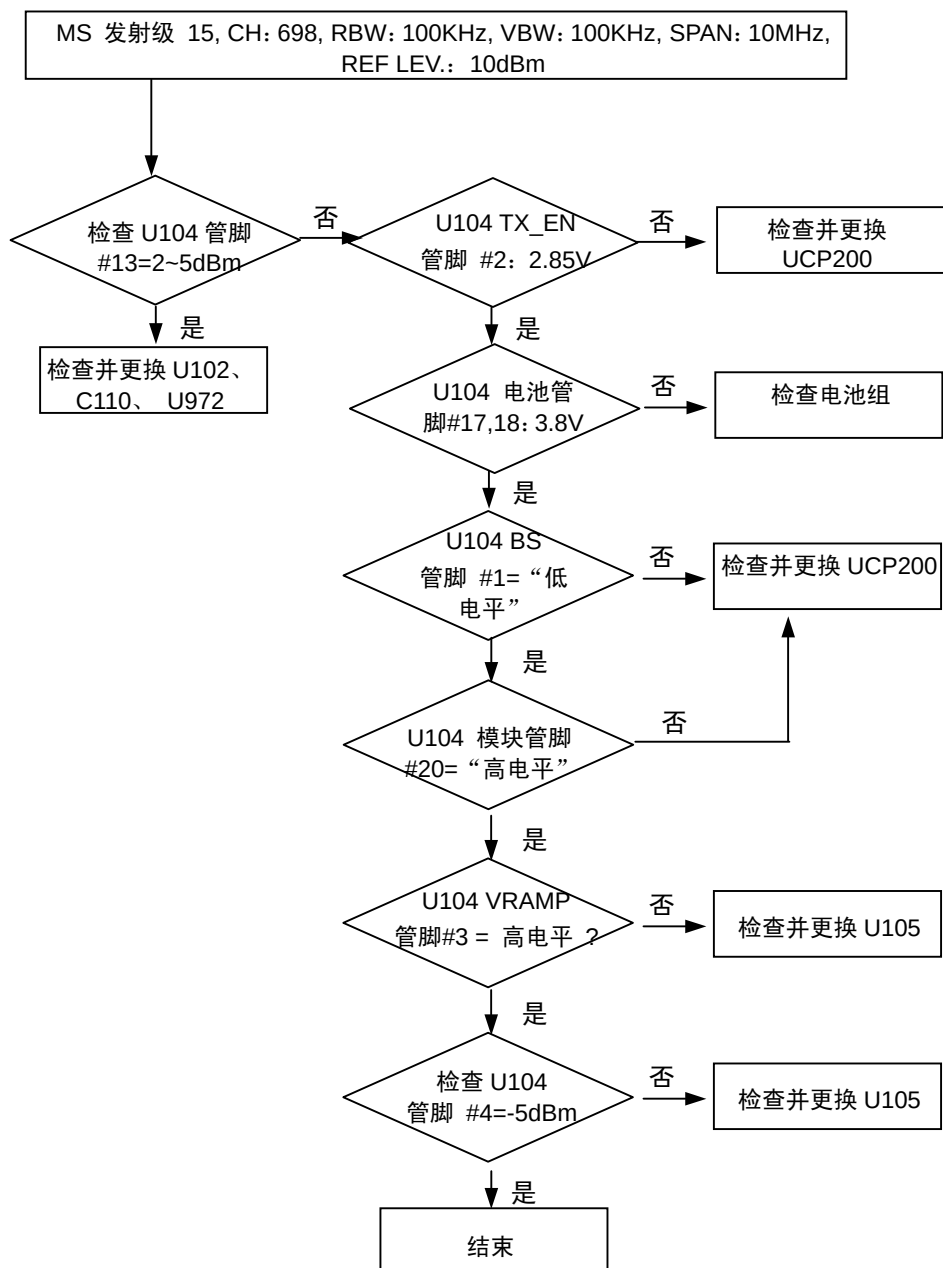

10-2-8.GSM900 发射器-副

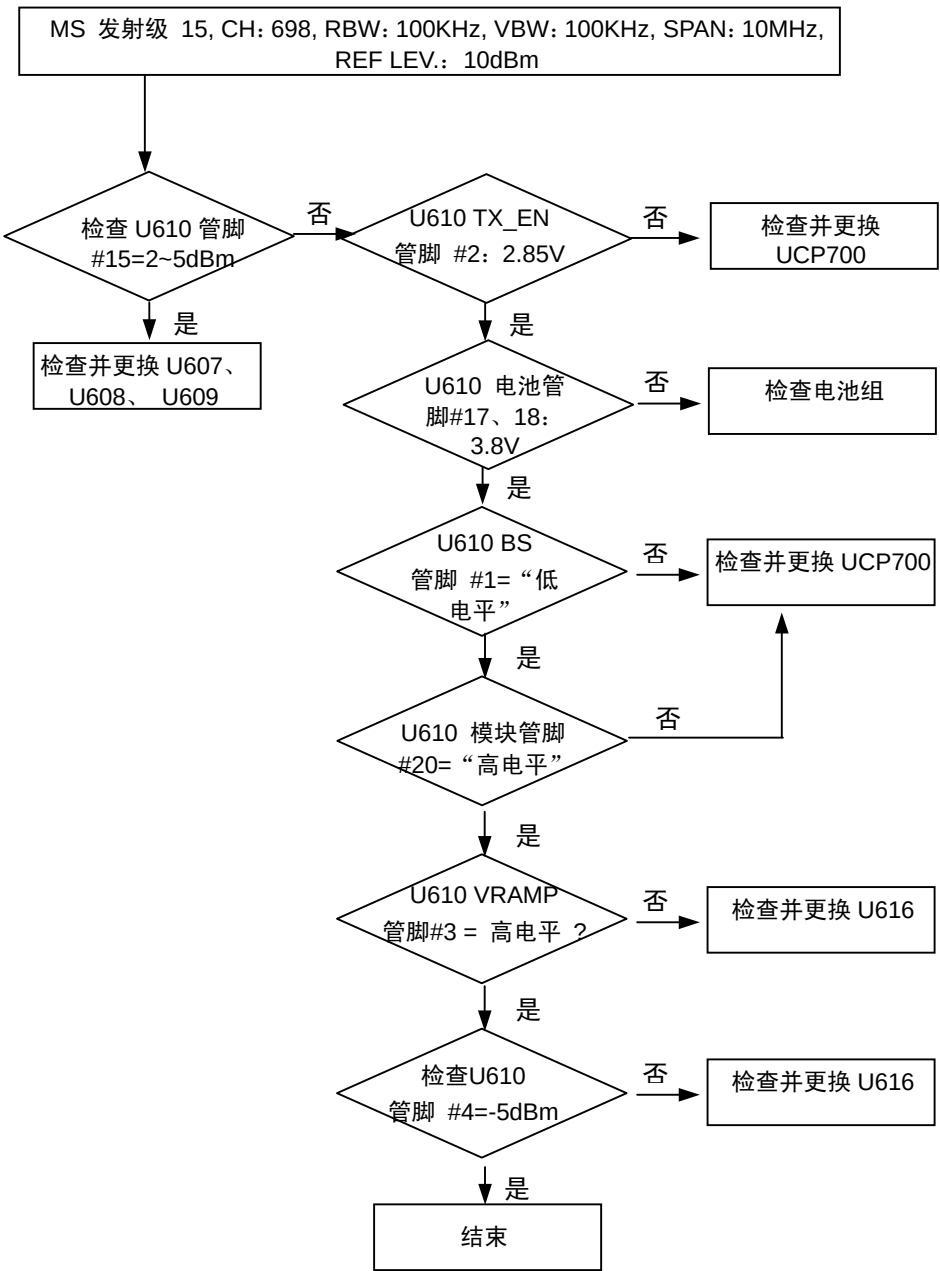

MASTER RF

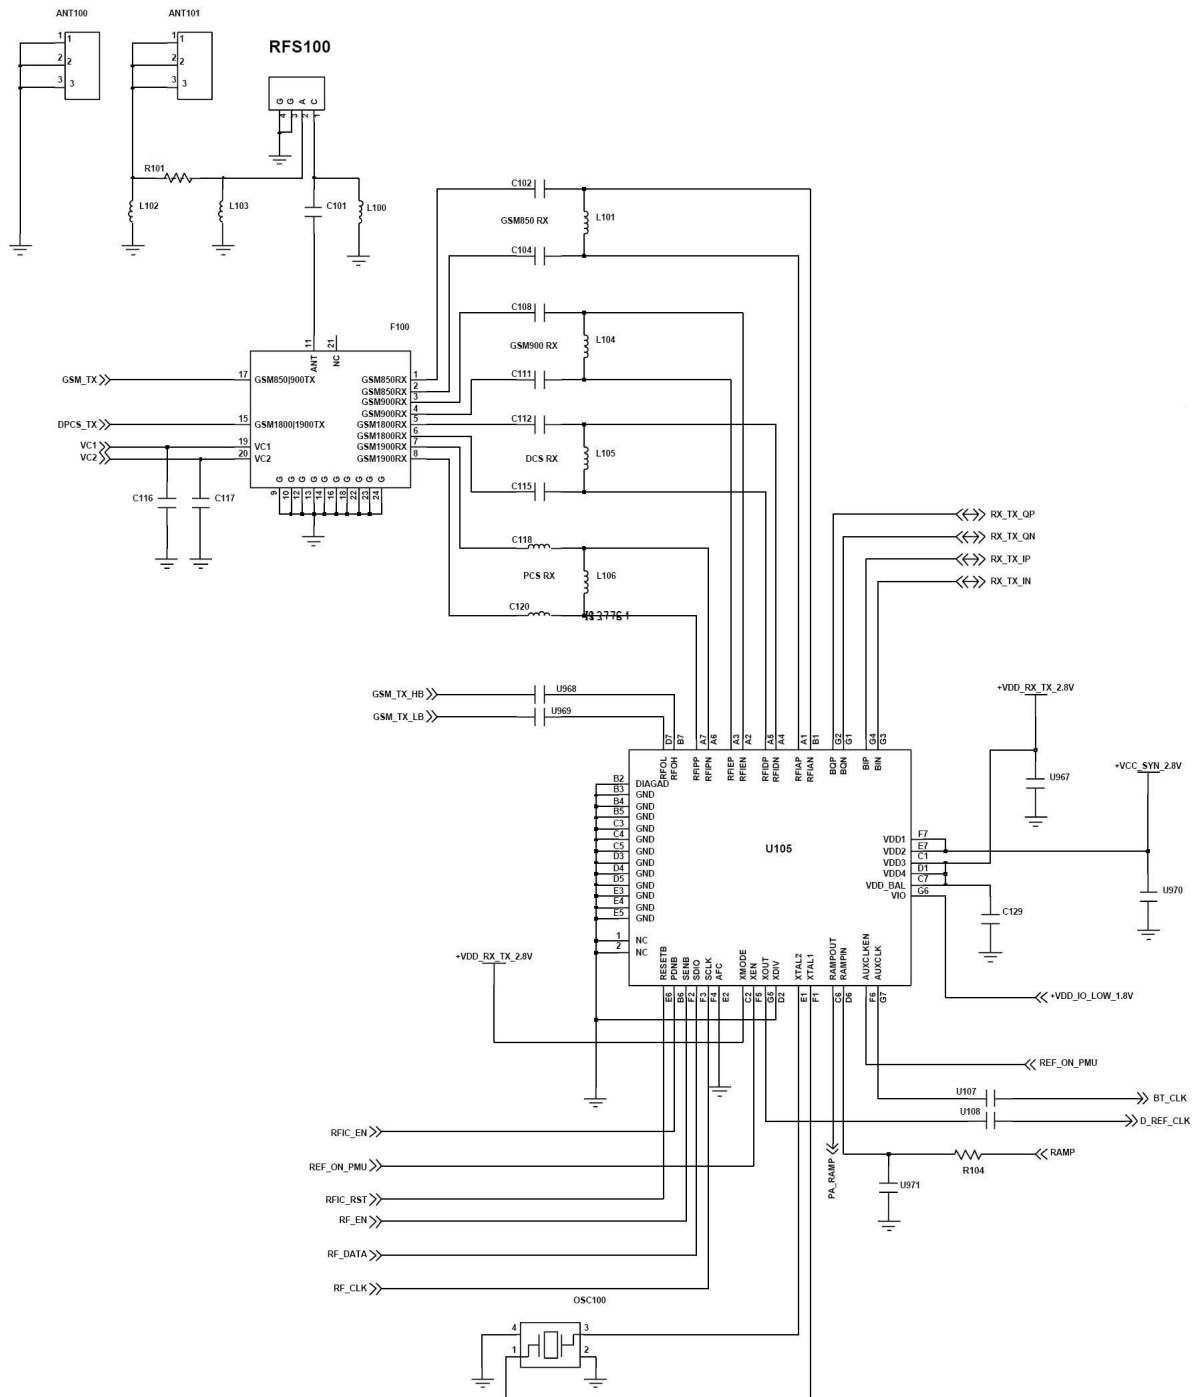

SLAVE RF

