


8. Level 3 Repair

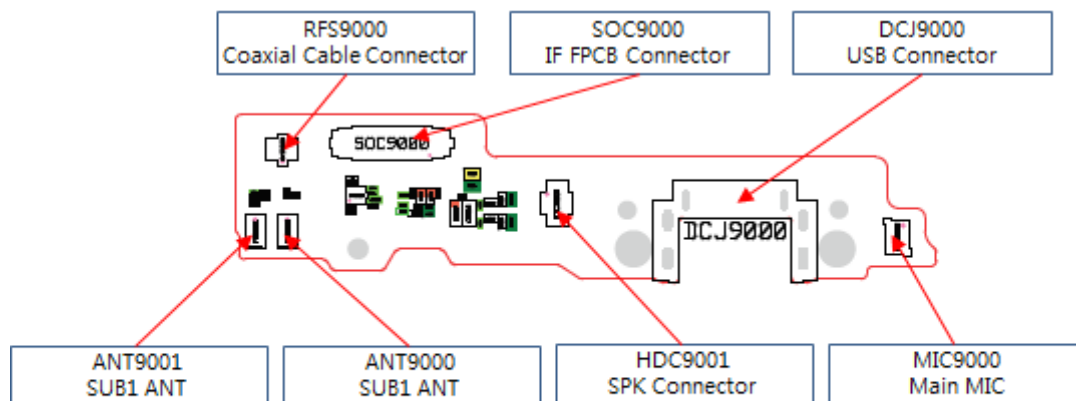

SUB PBA (Top side)

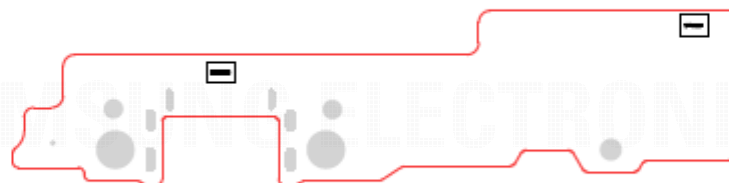


SUB PBA (Bottom side)


13008098


8. Level 3 Repair


[SM-P200]

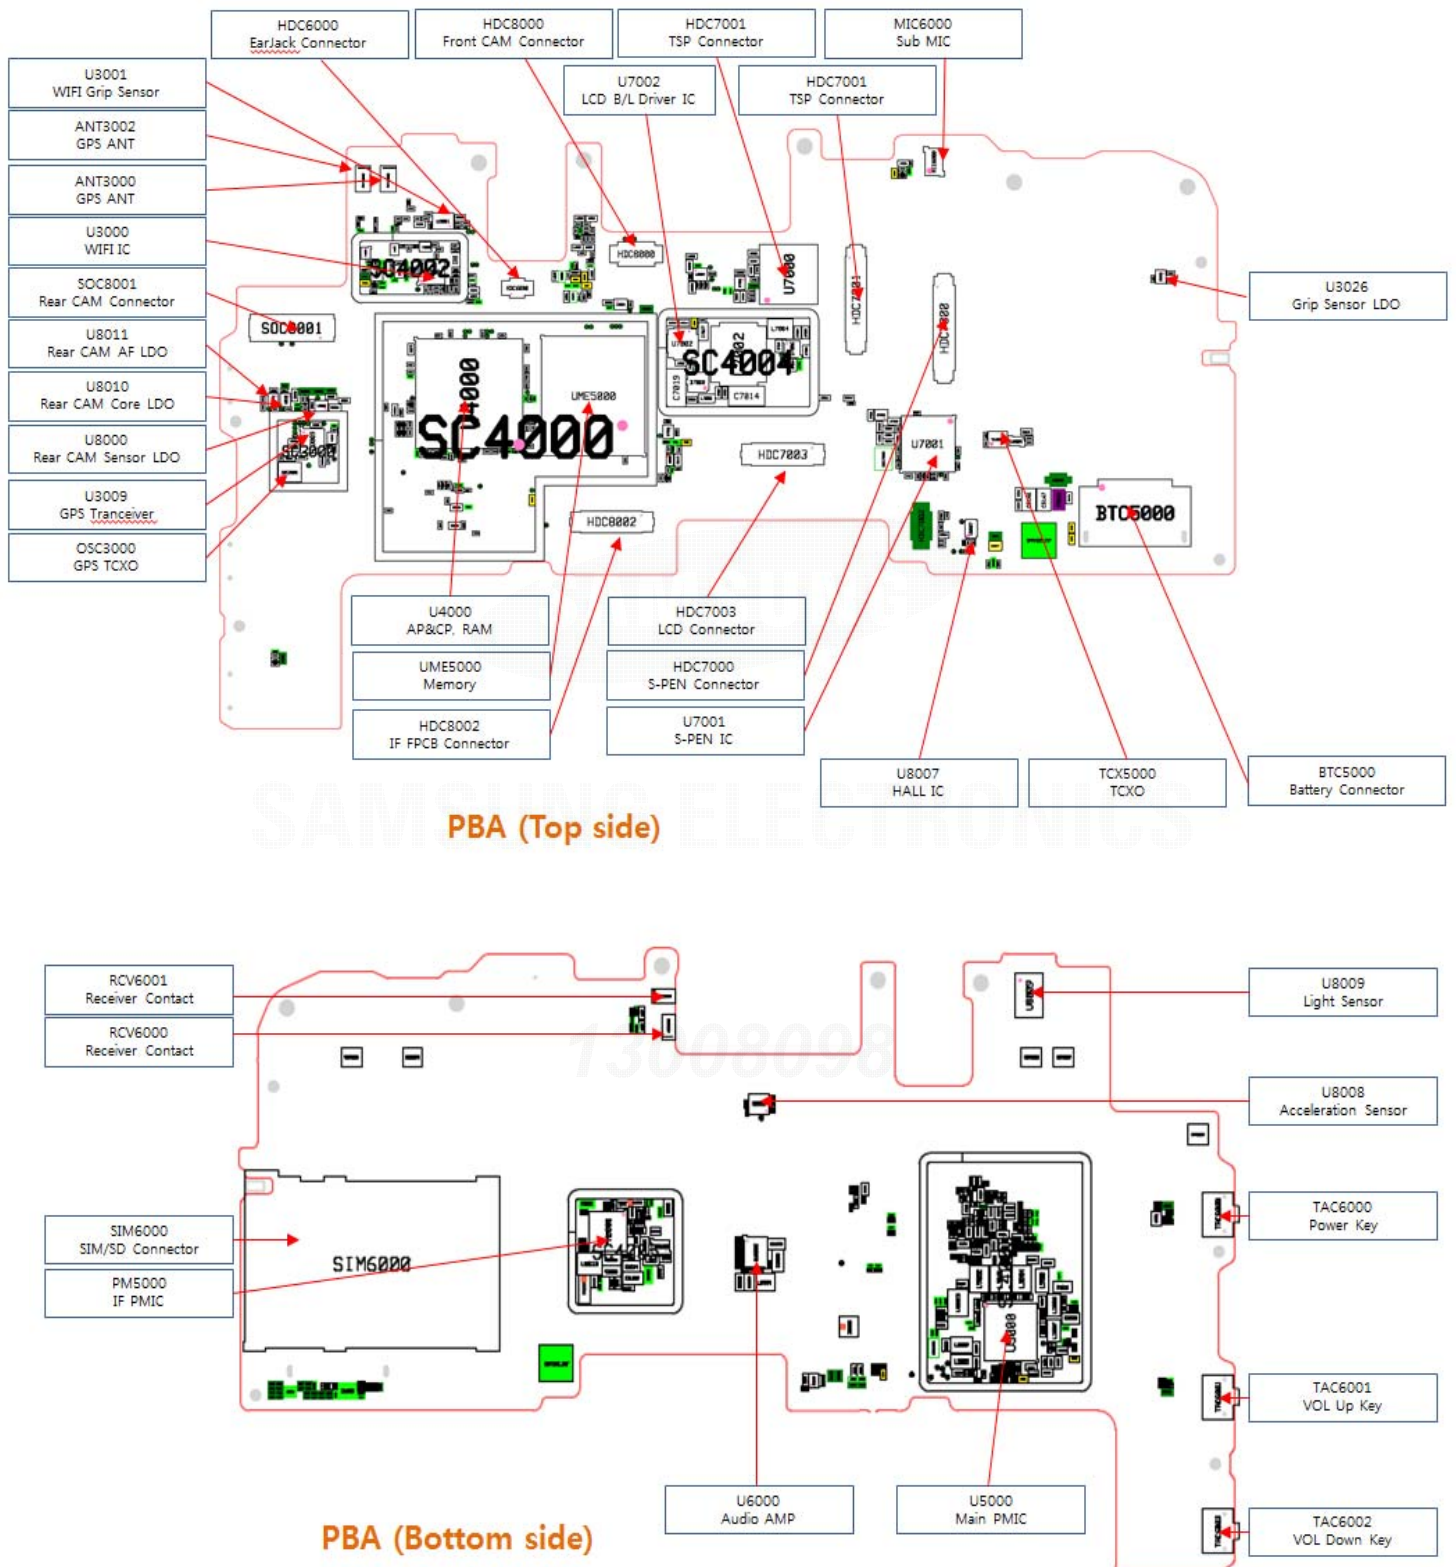

8. Level 3 Repair



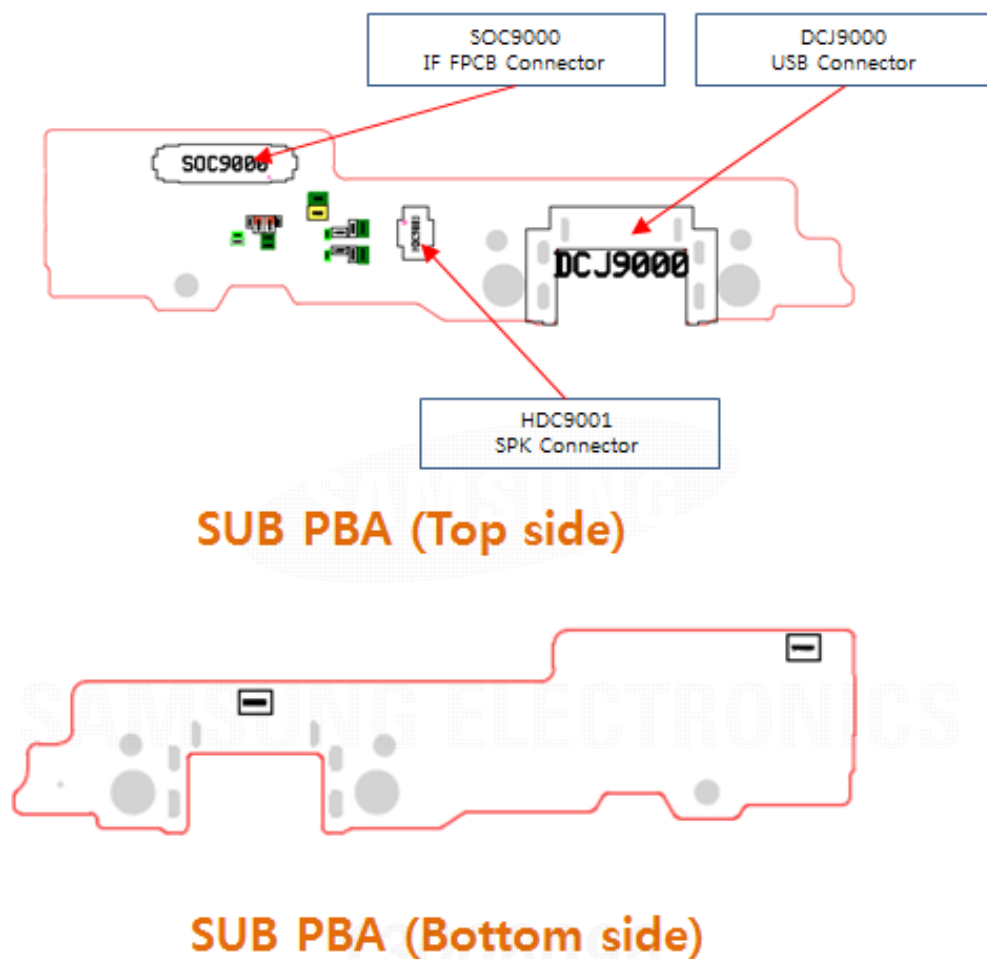


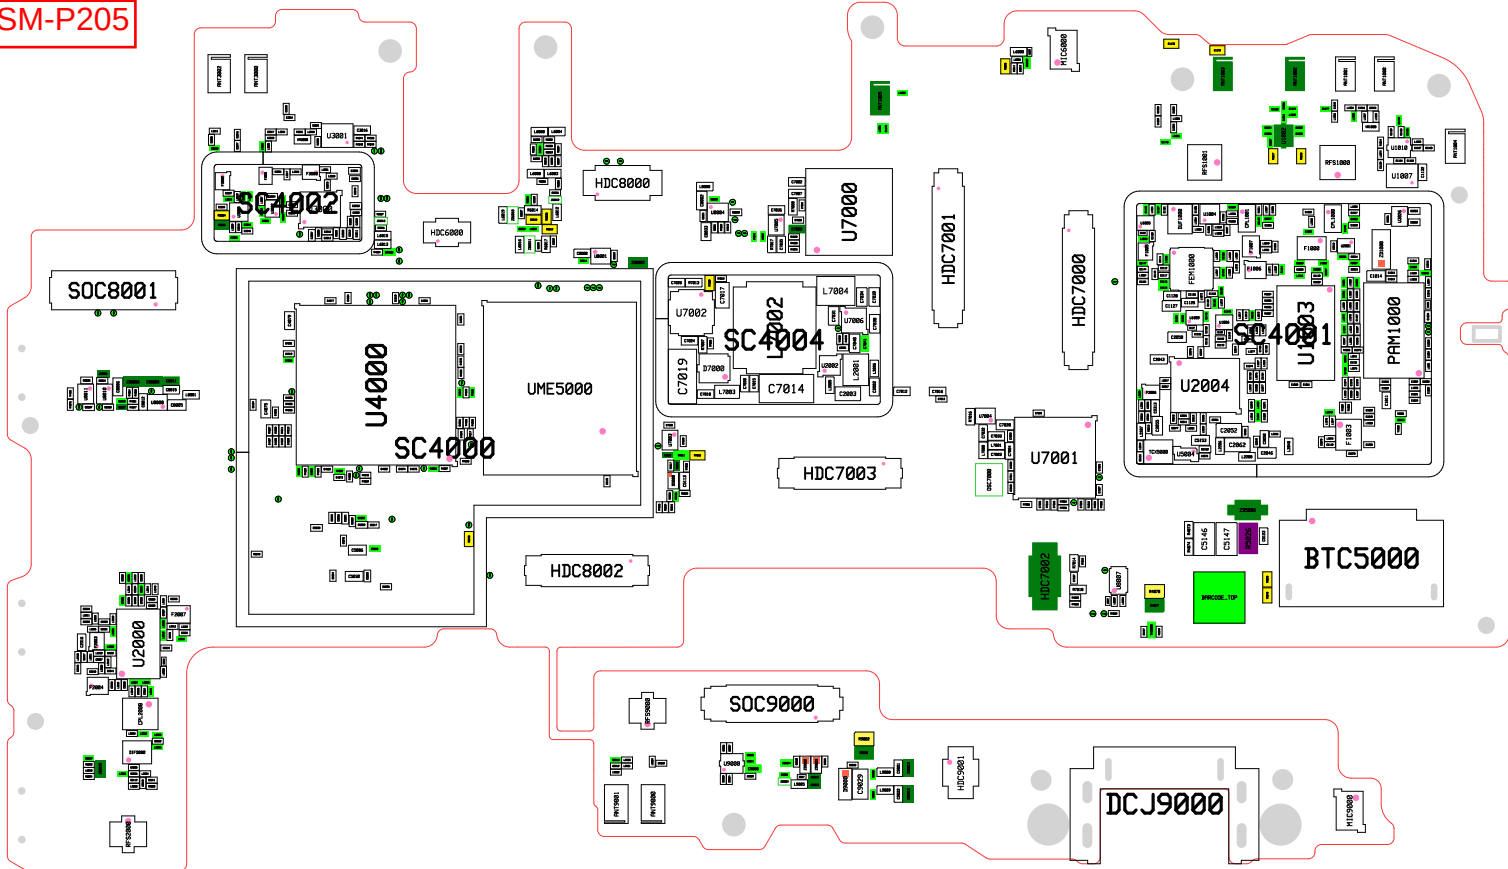


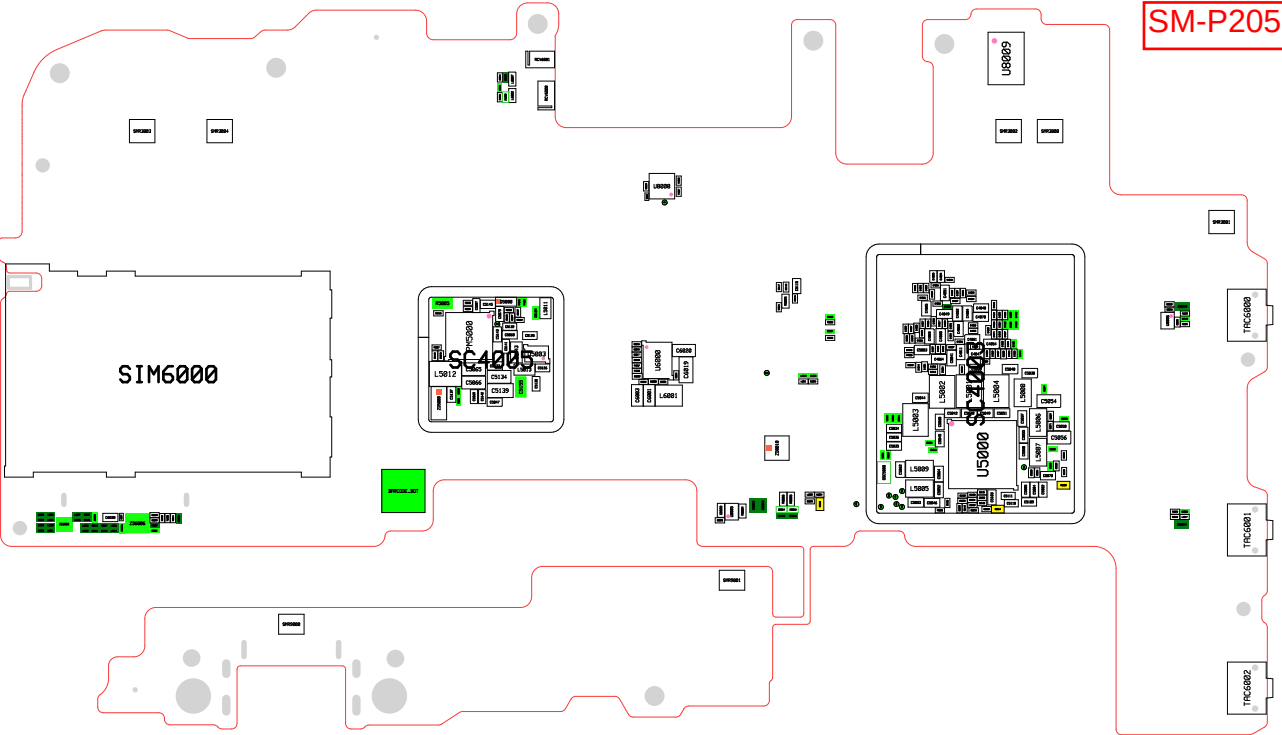


SM-P200 Block Diagram

REV0.3
19.01.28

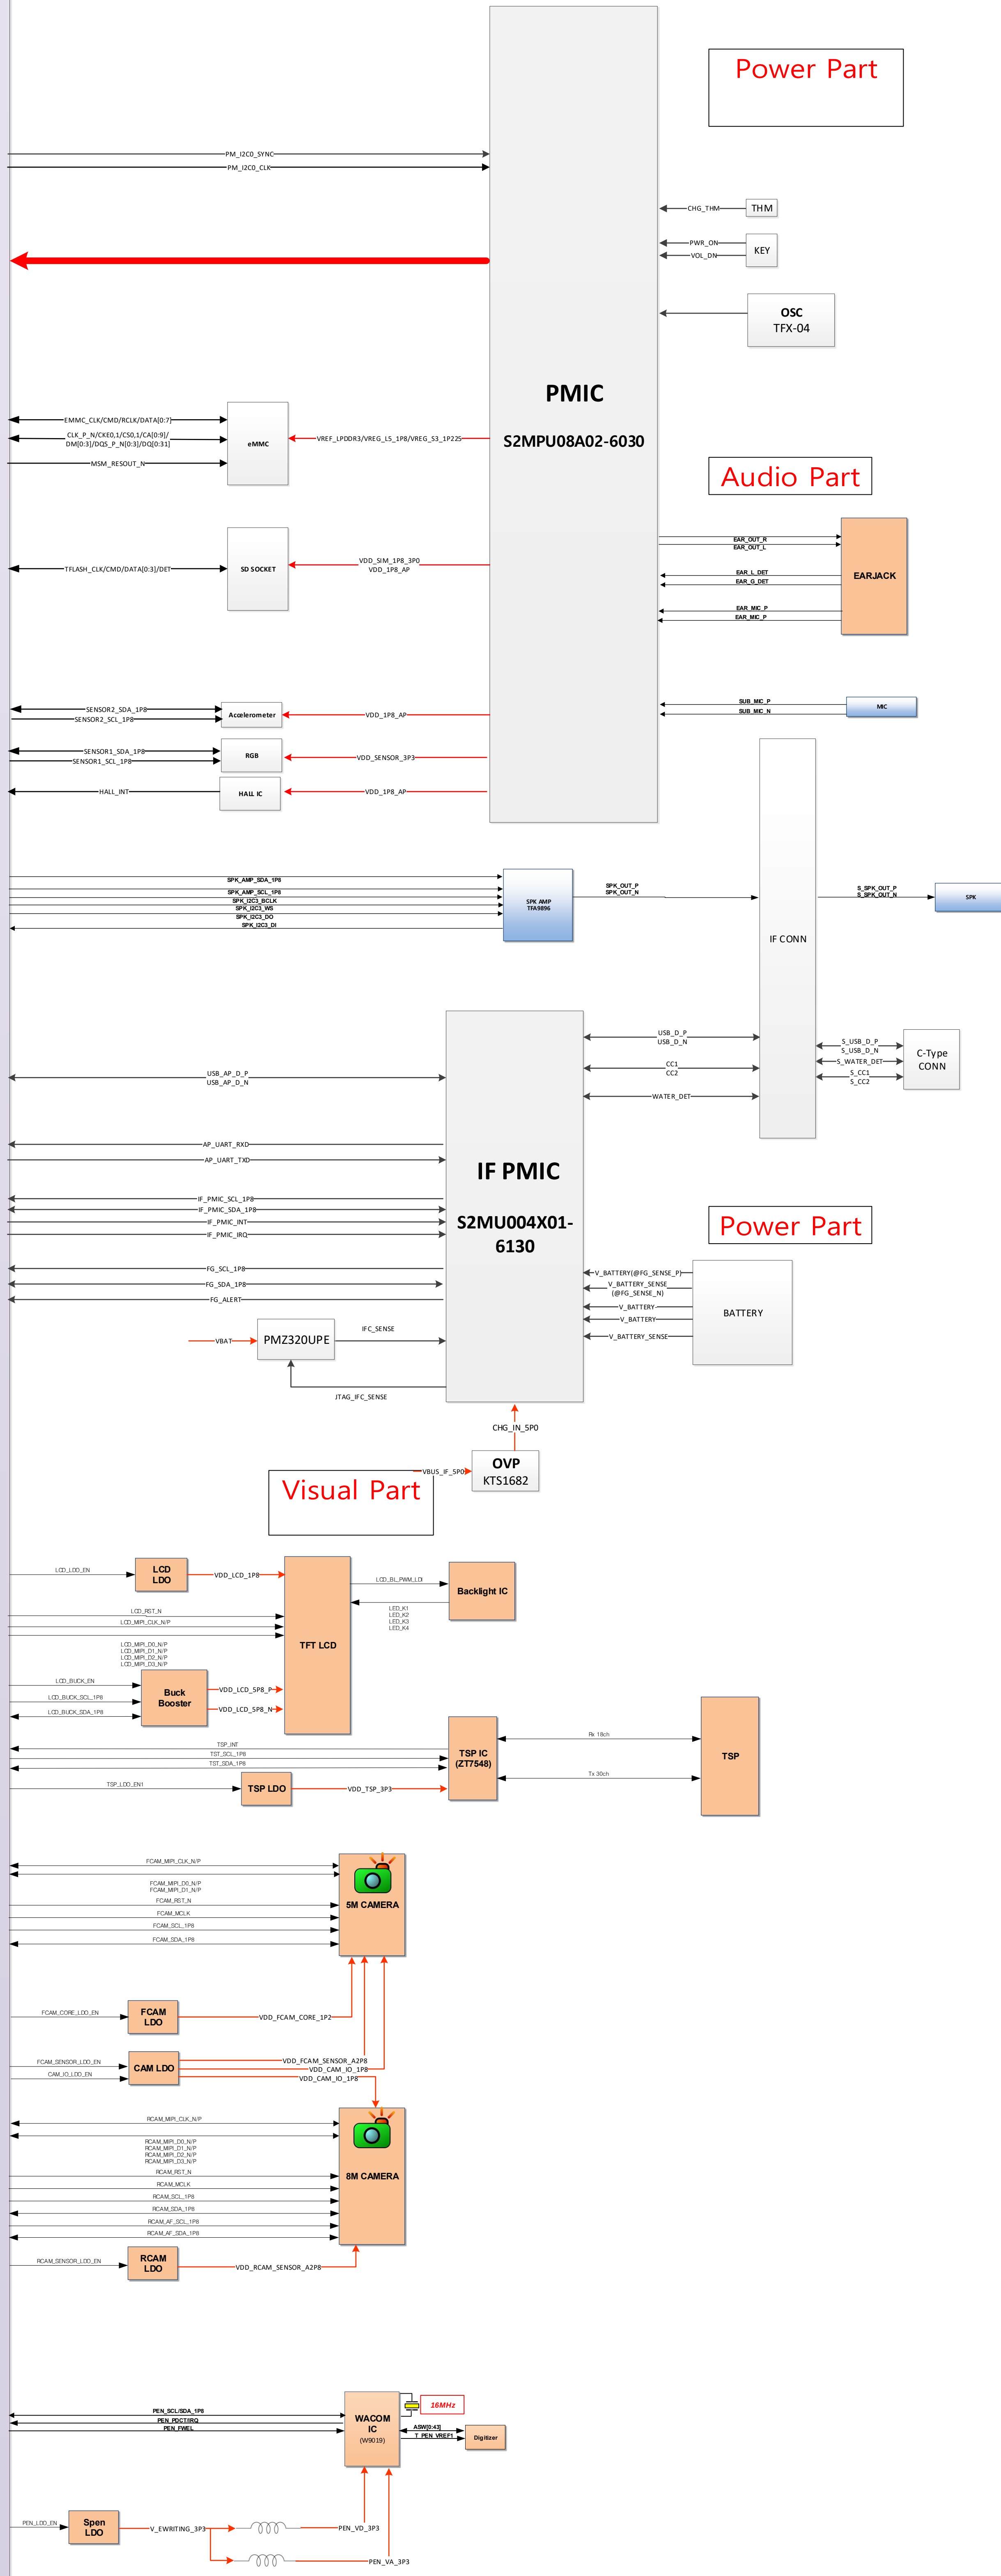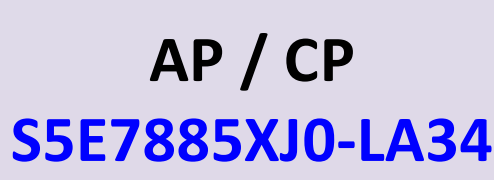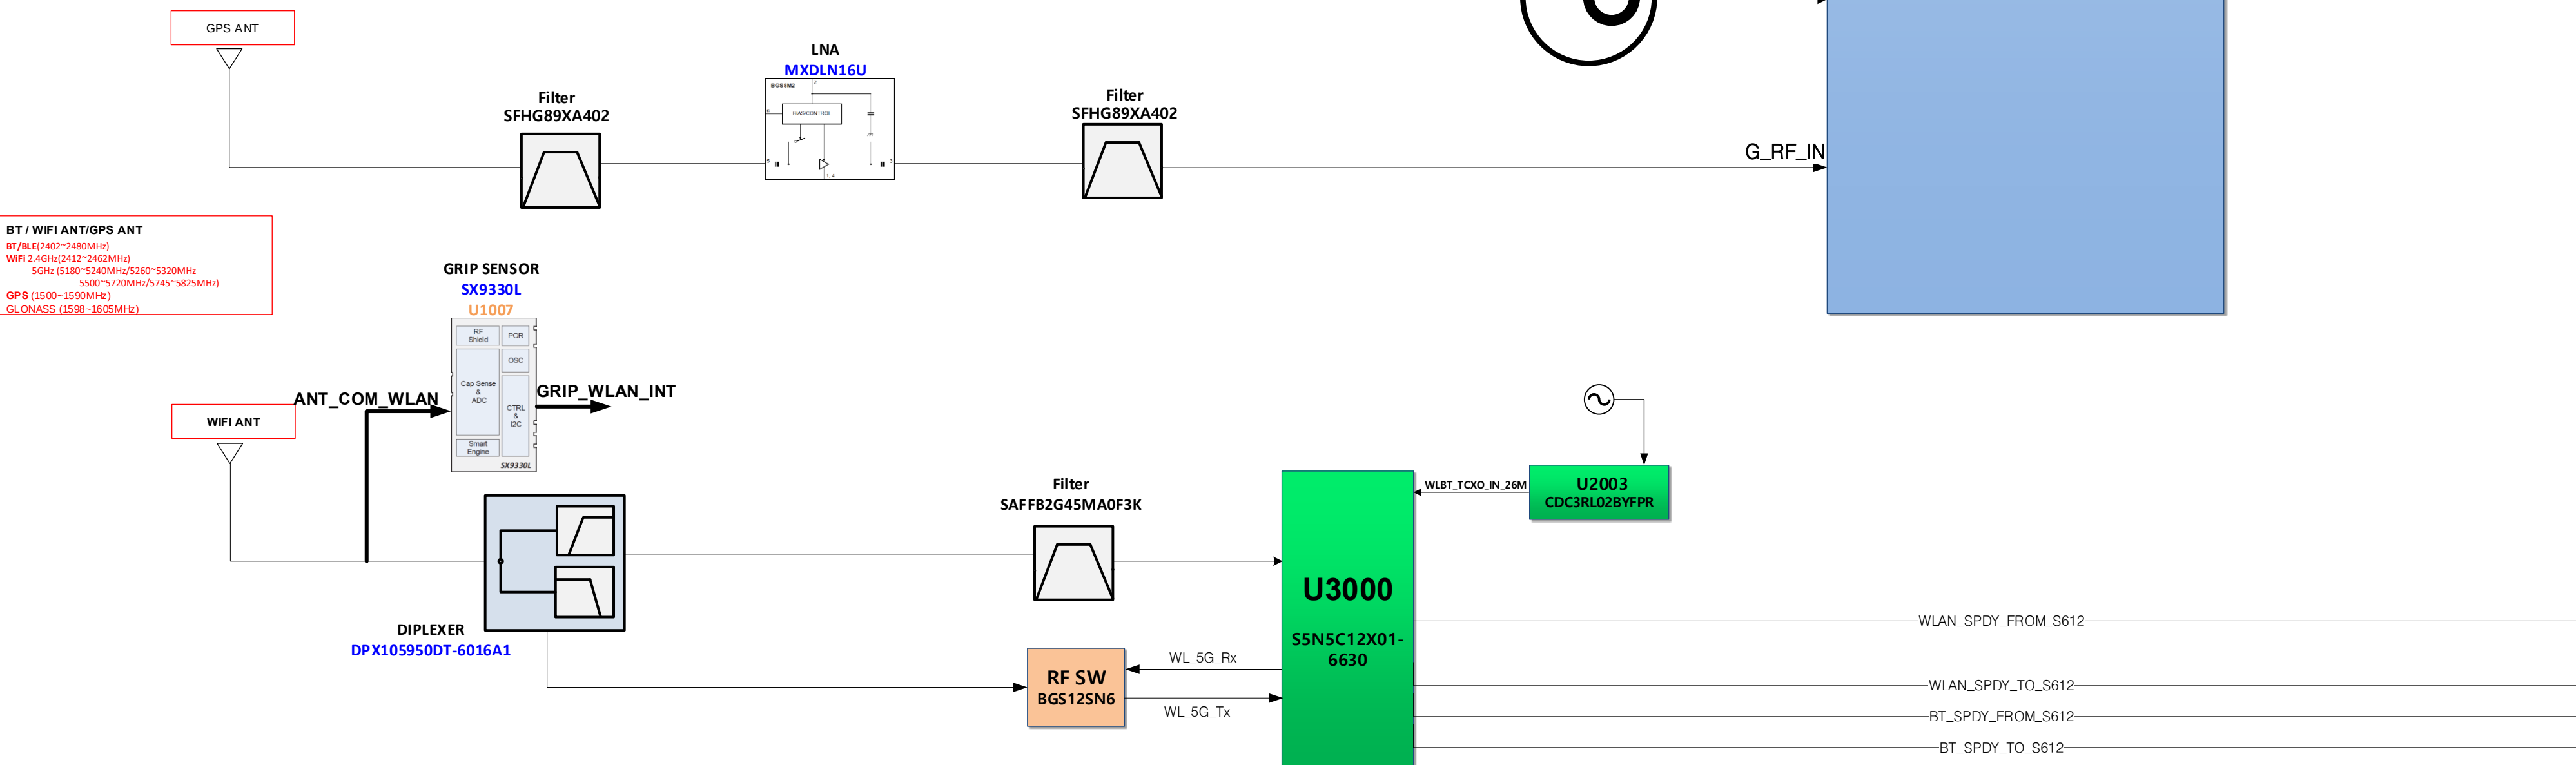

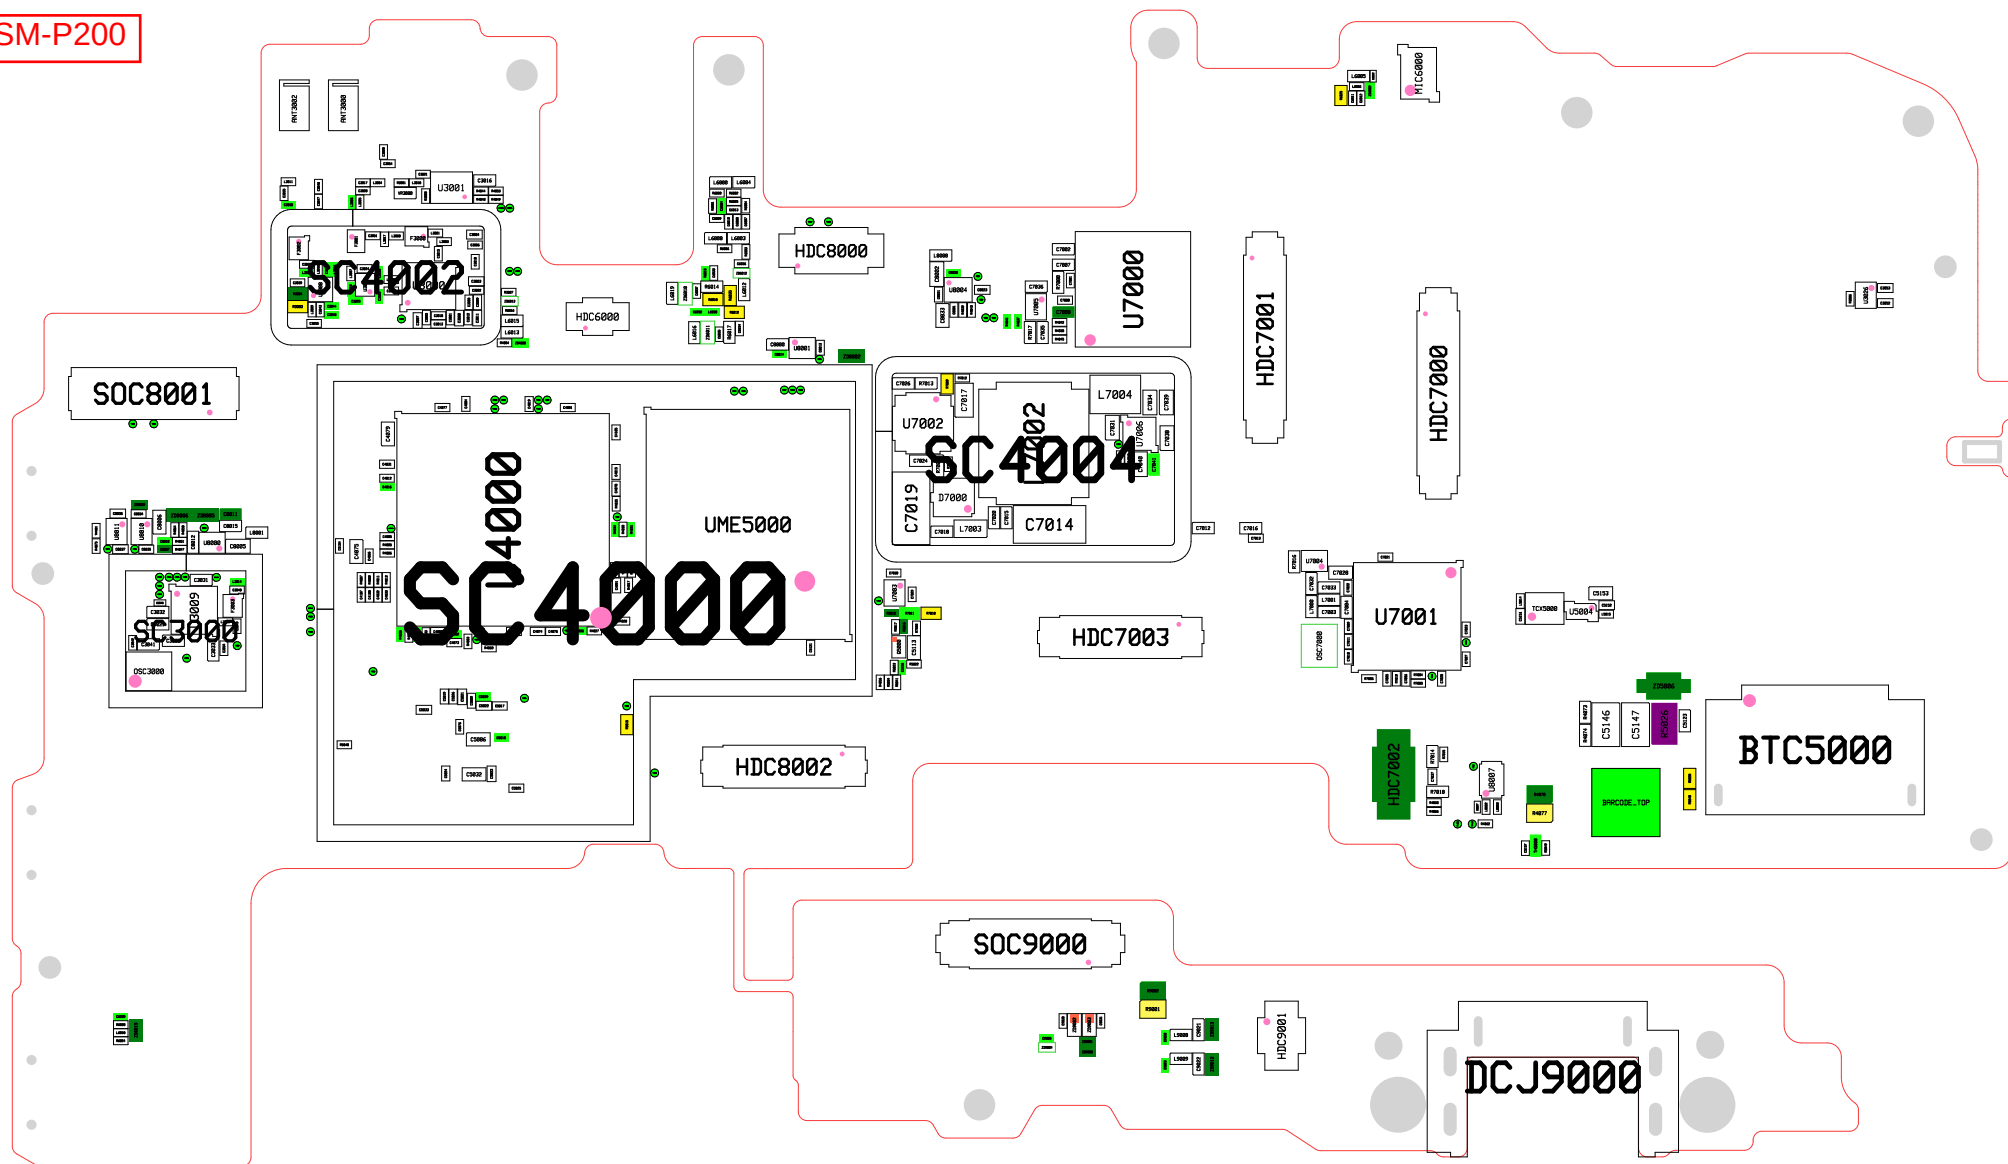


SM-P200

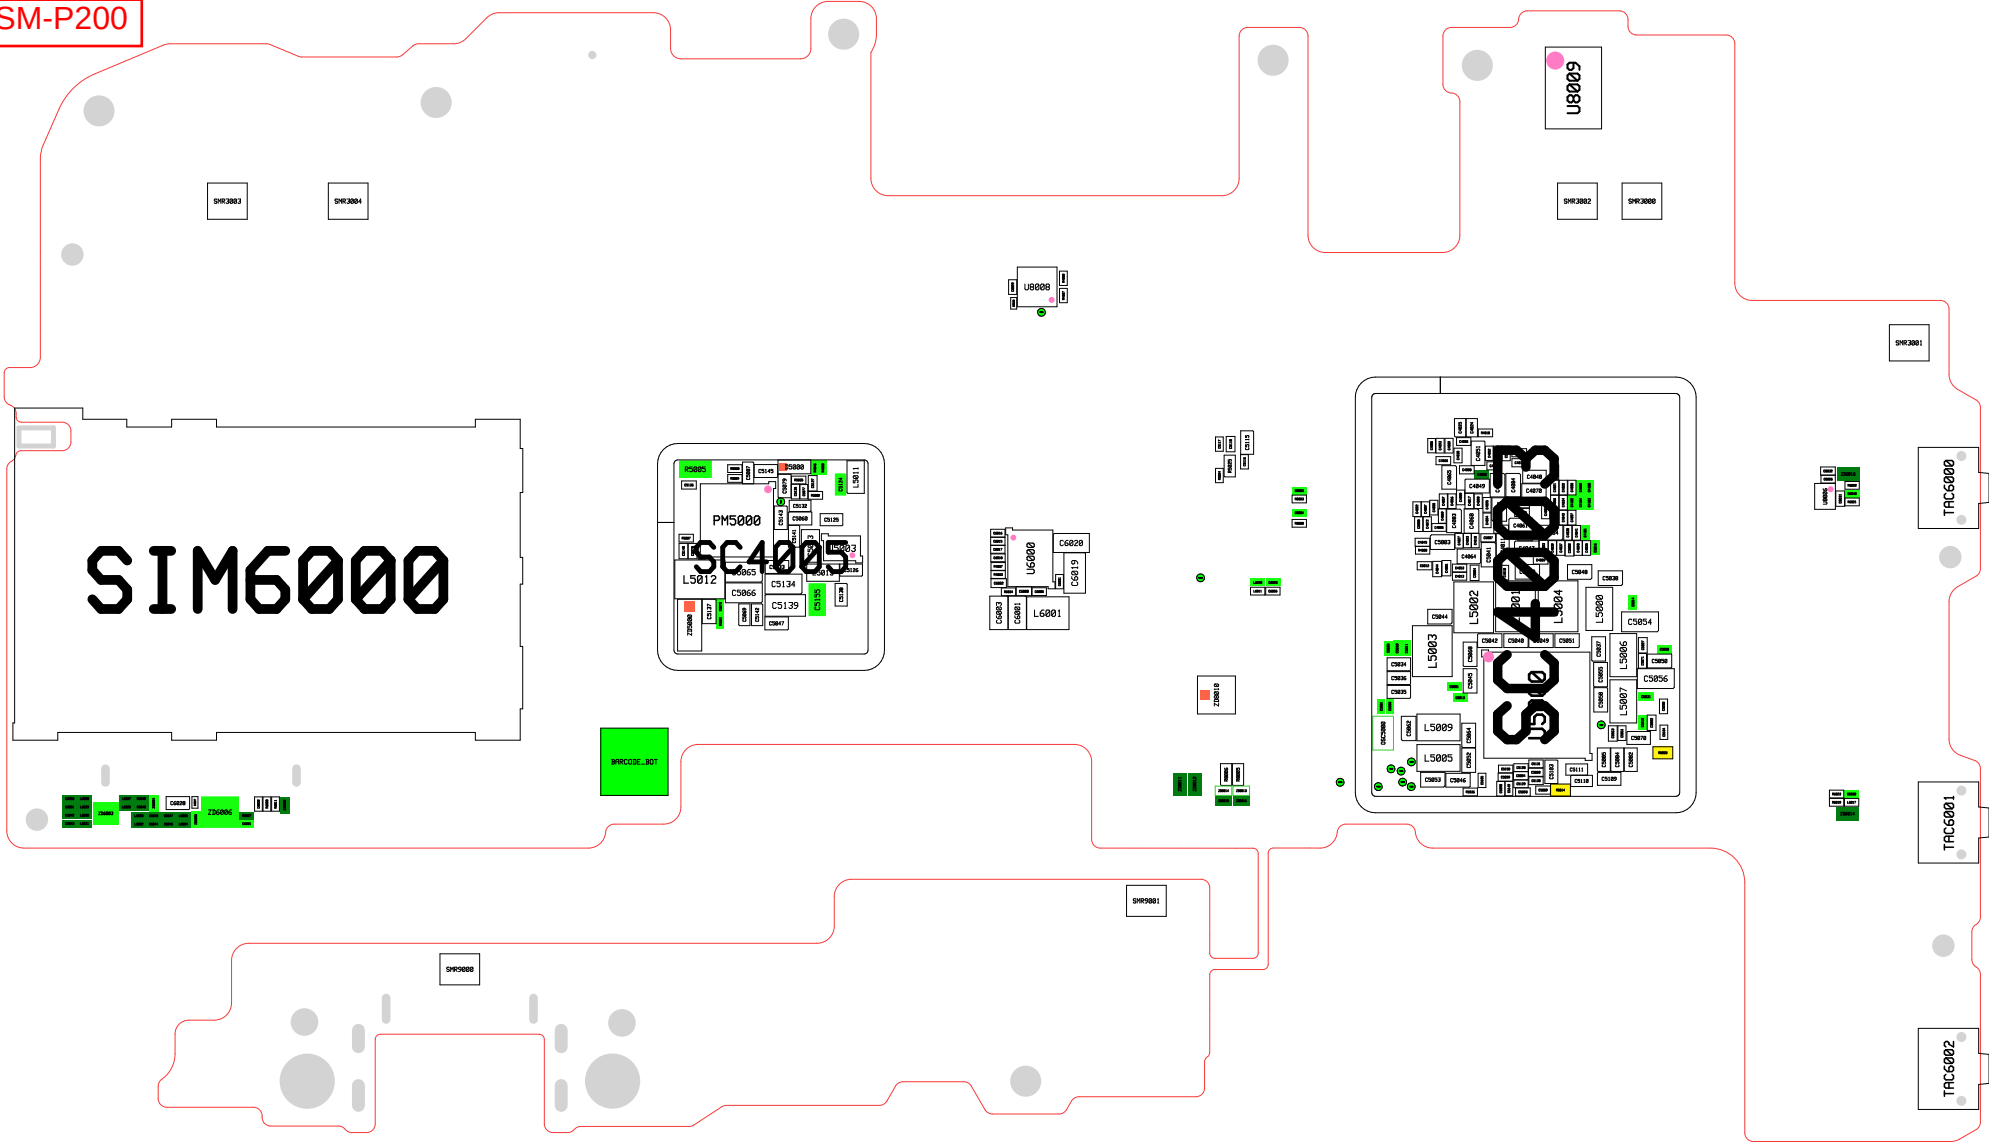

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

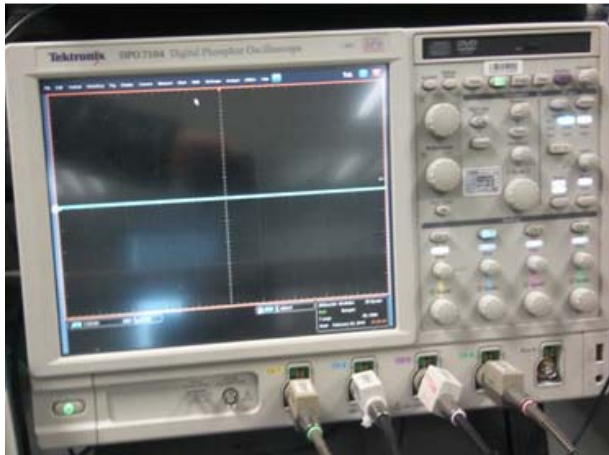


Oscilloscope




Digital Multimeter



Power Supply

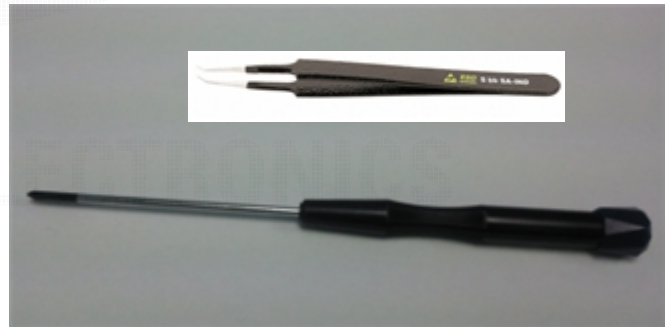

+ driver, ESD Safe Tweezer

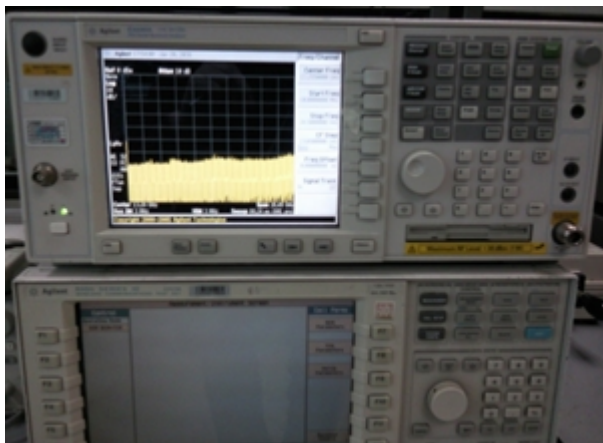


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

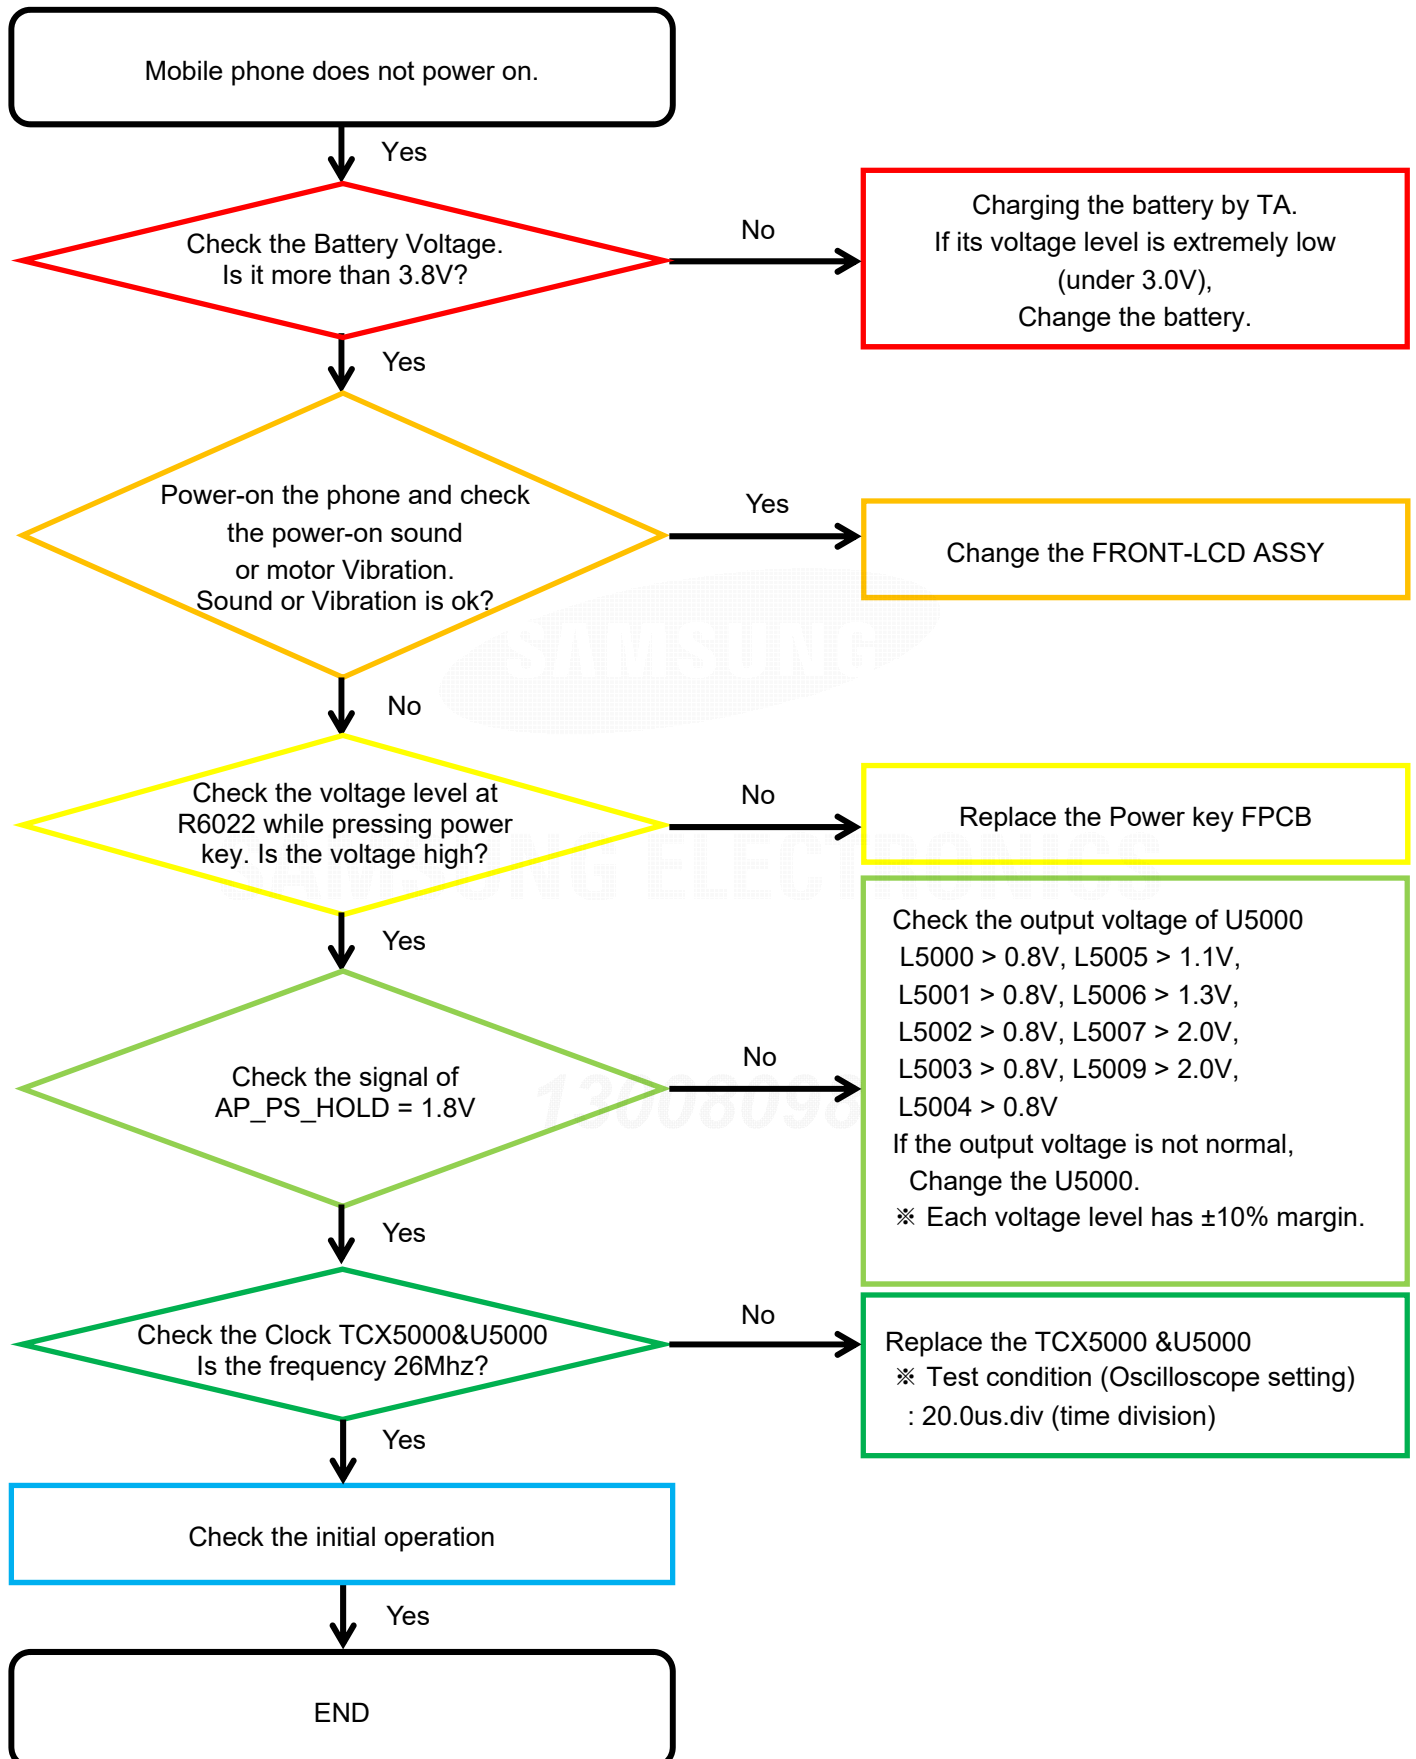


8. Level 3 Repair

8-4-2. Initial

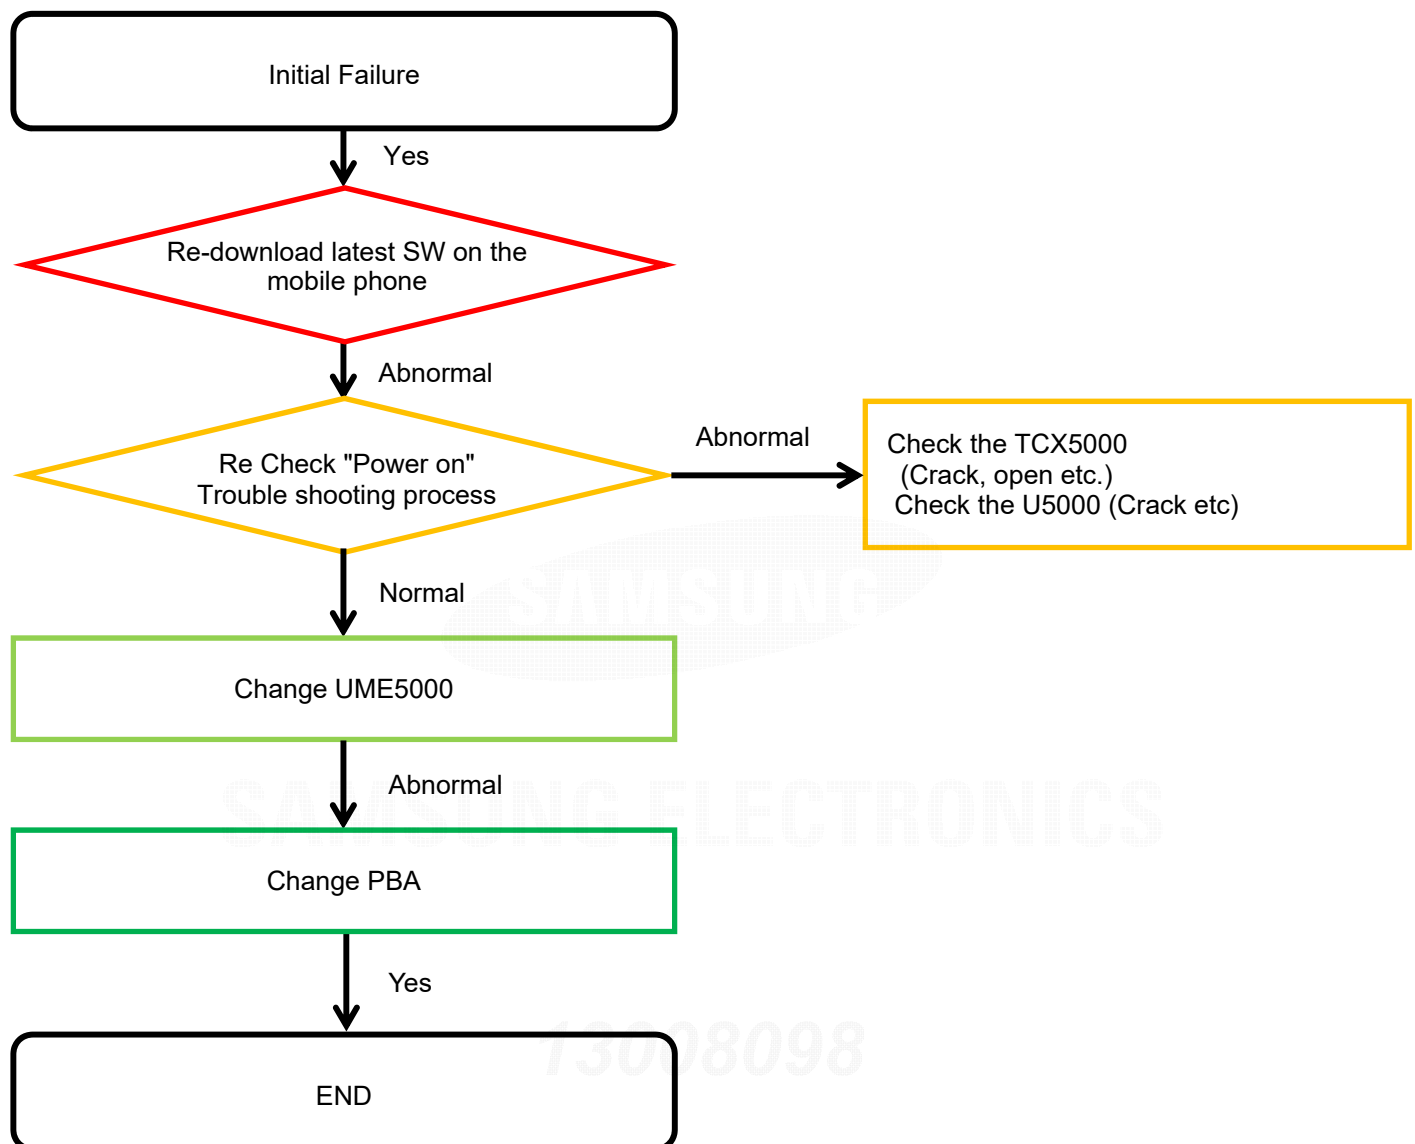


8. Level 3 Repair

8-4-3. No Service <P205 Only>

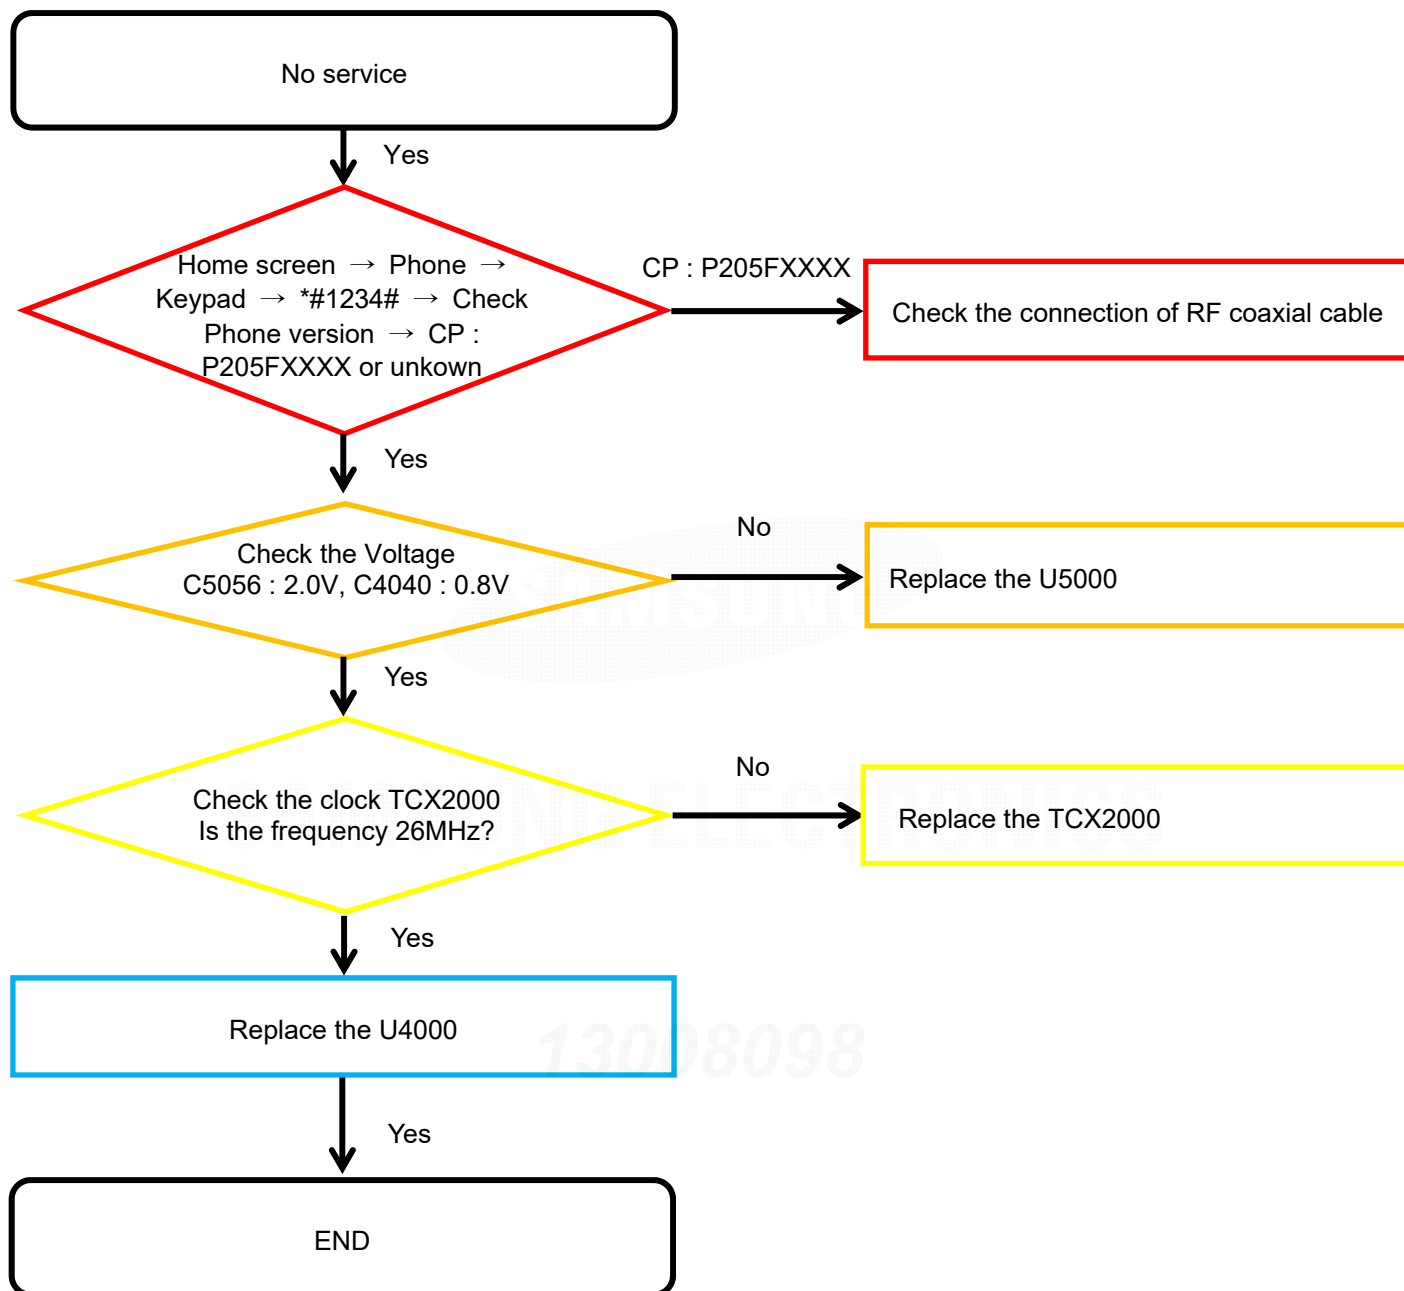


8. Level 3 Repair

8-4-4. SIM Part <P205 Only>

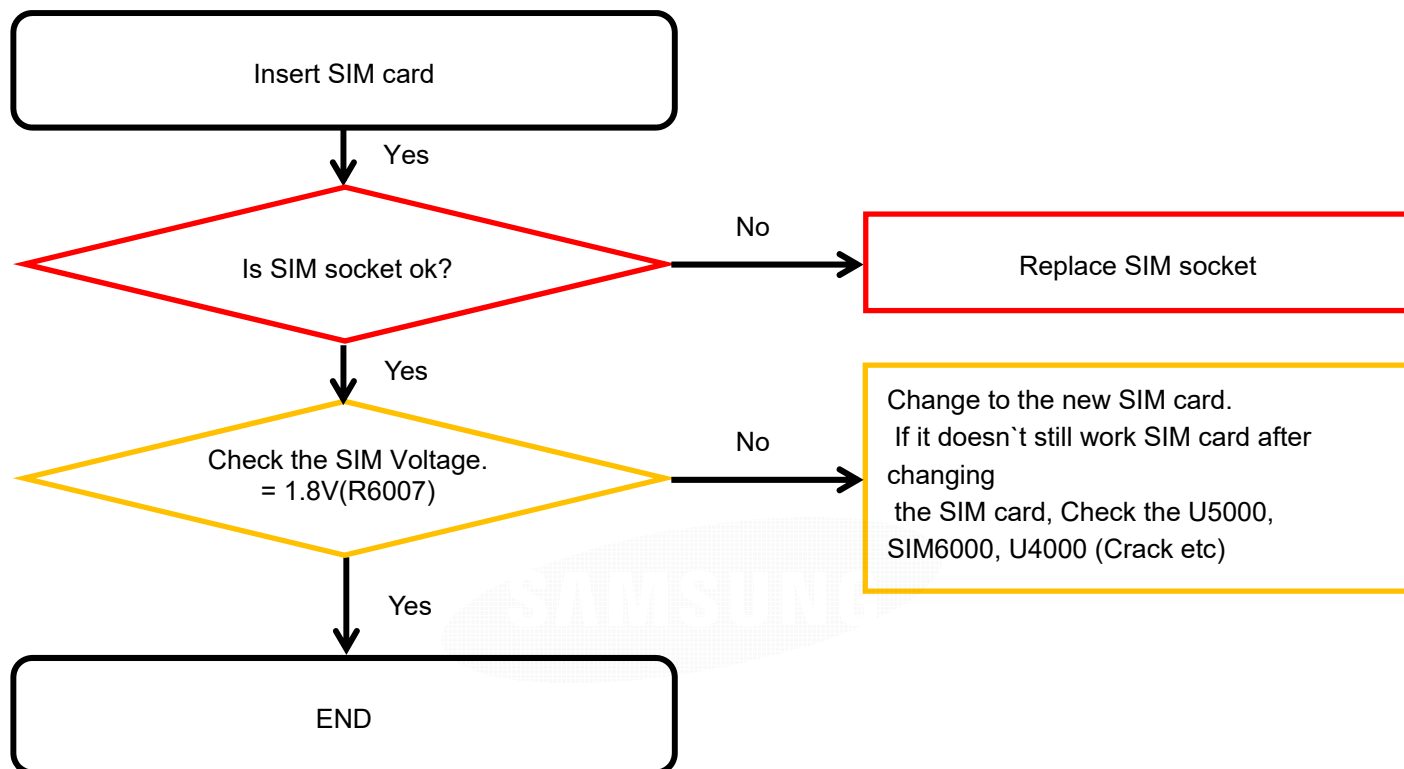


8. Level 3 Repair

8-4-5. T-Flash Part

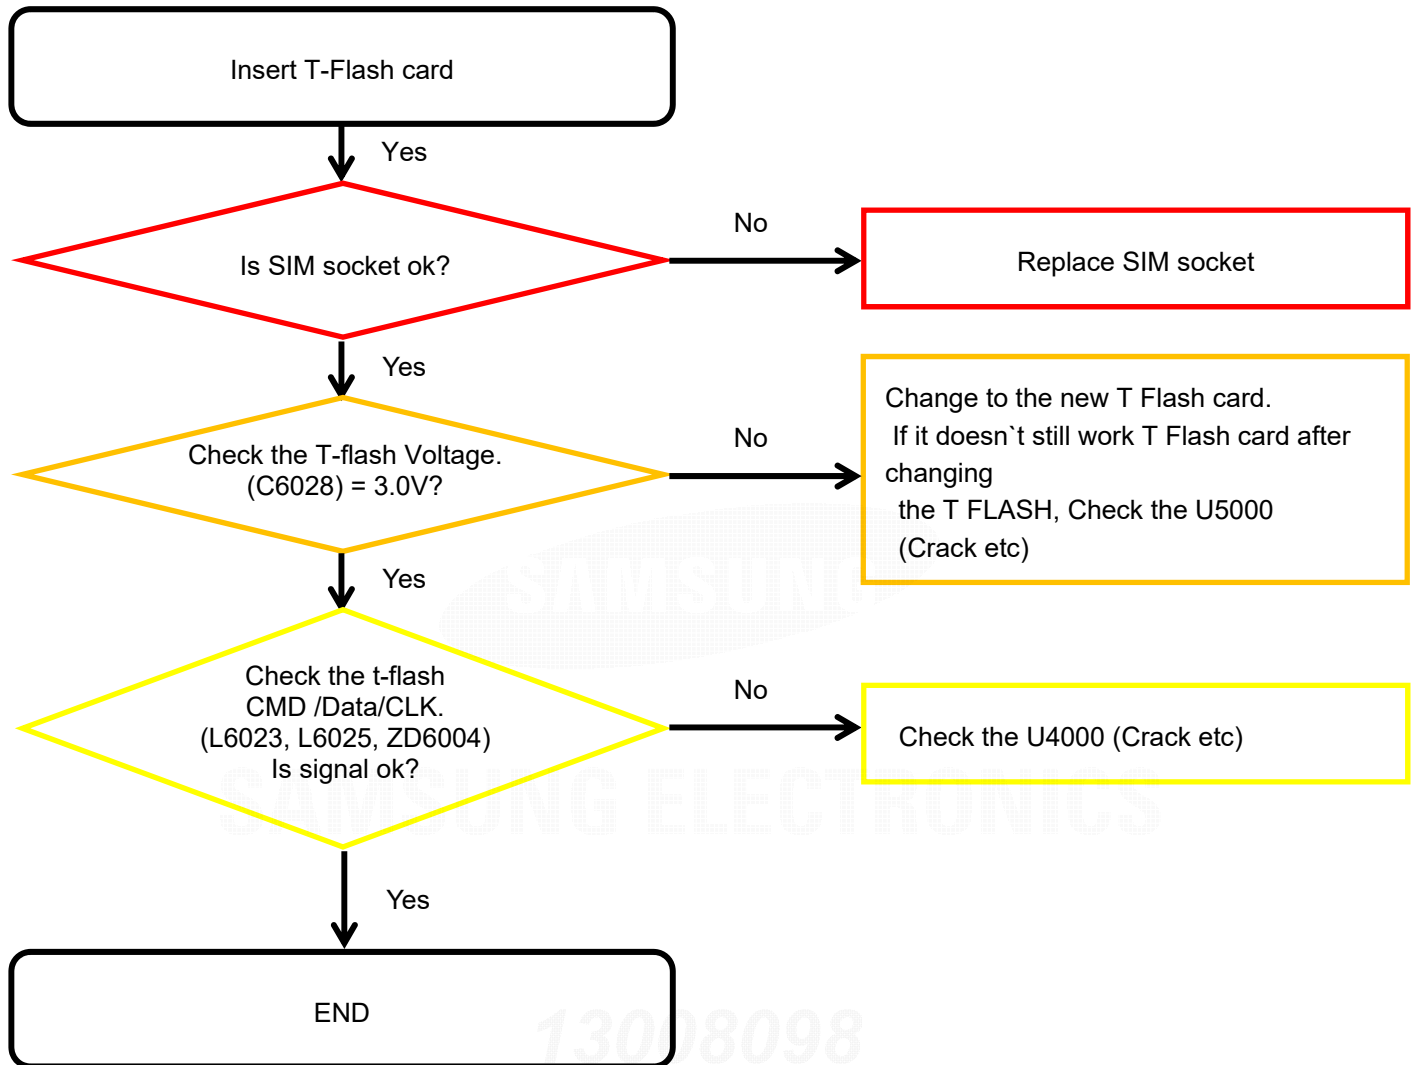


8. Level 3 Repair

8-4-6. Cable Charging Part

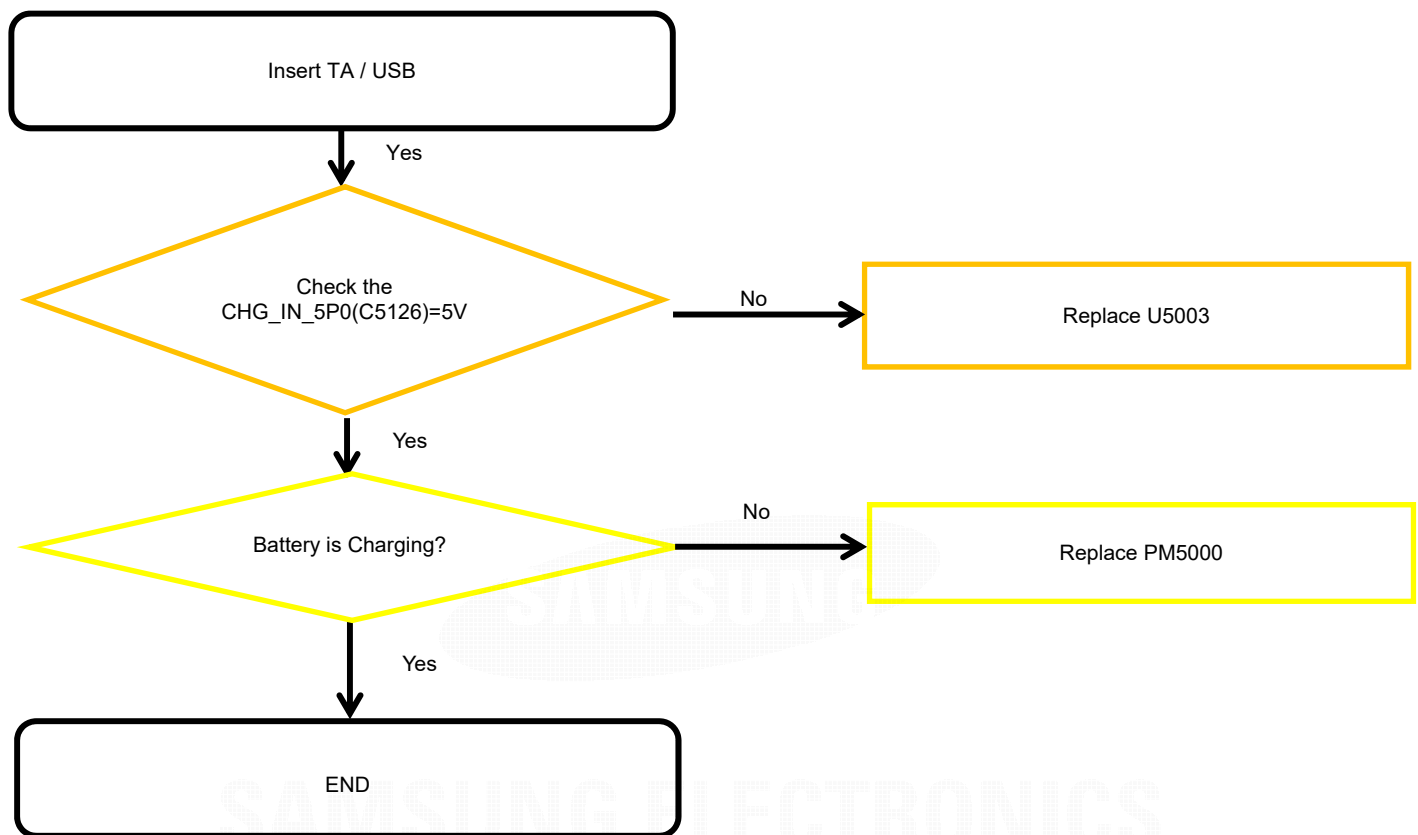


8. Level 3 Repair

8-4-7. OTG

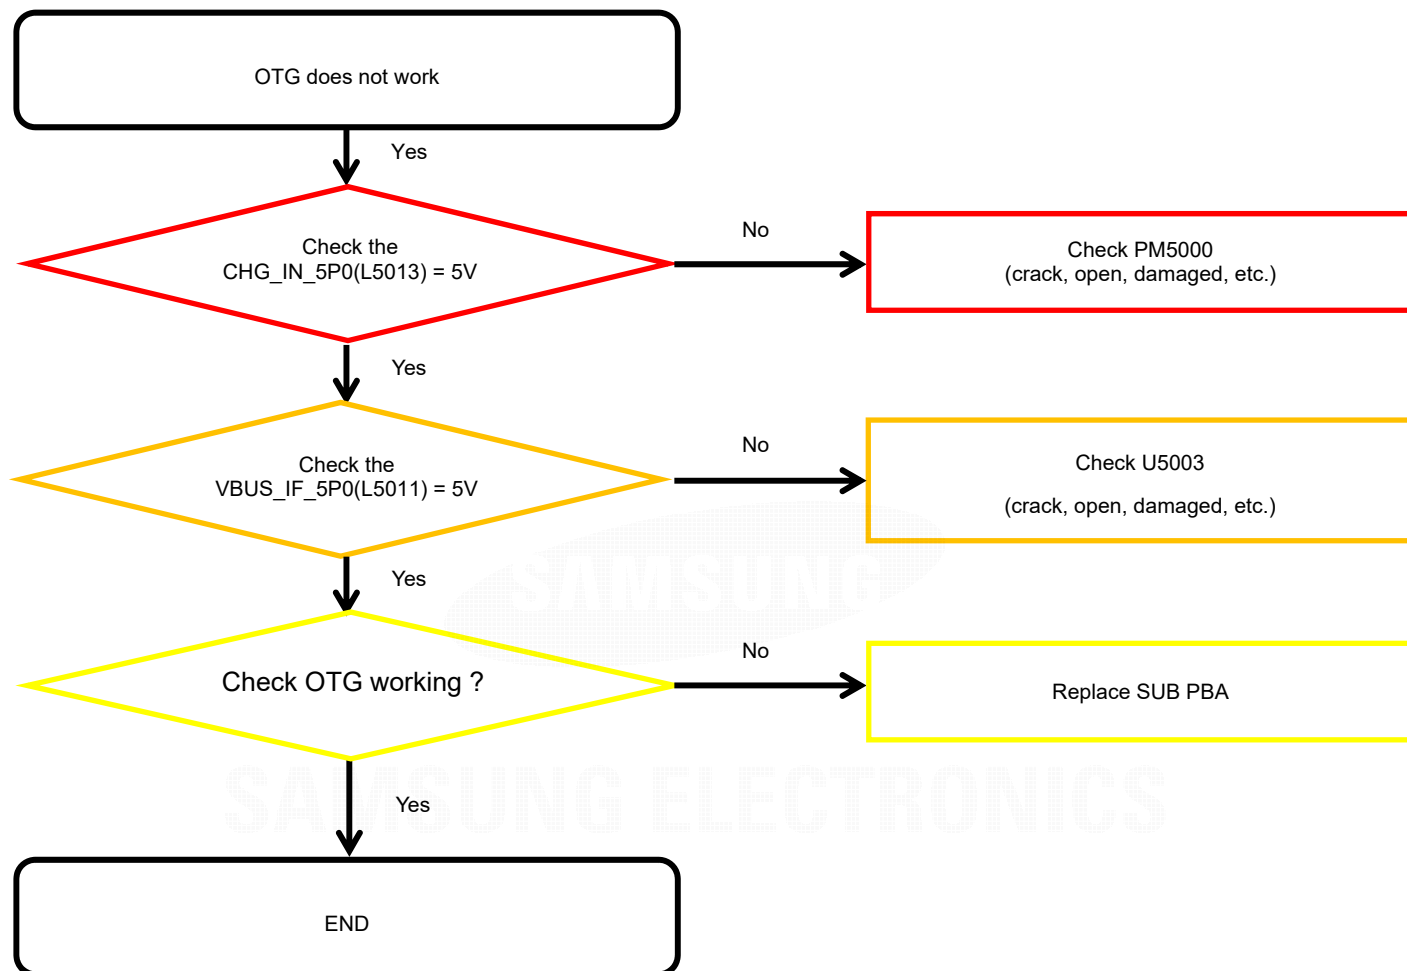


8. Level 3 Repair

8-4-8-1. 3-Axis Sensor

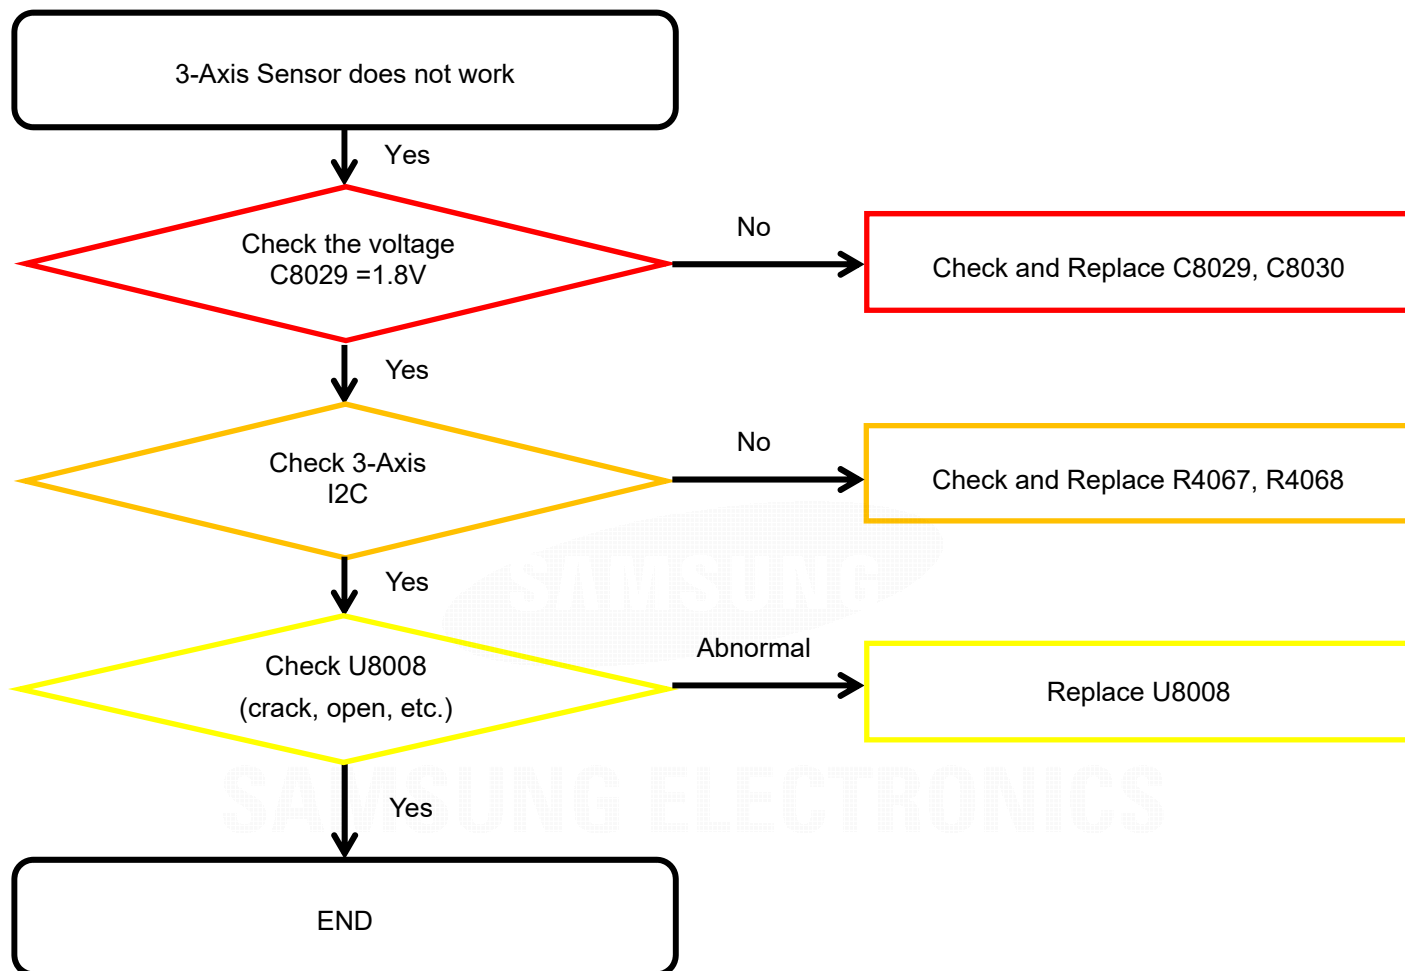



8. Level 3 Repair

8-4-8-2. RGB Light sensor

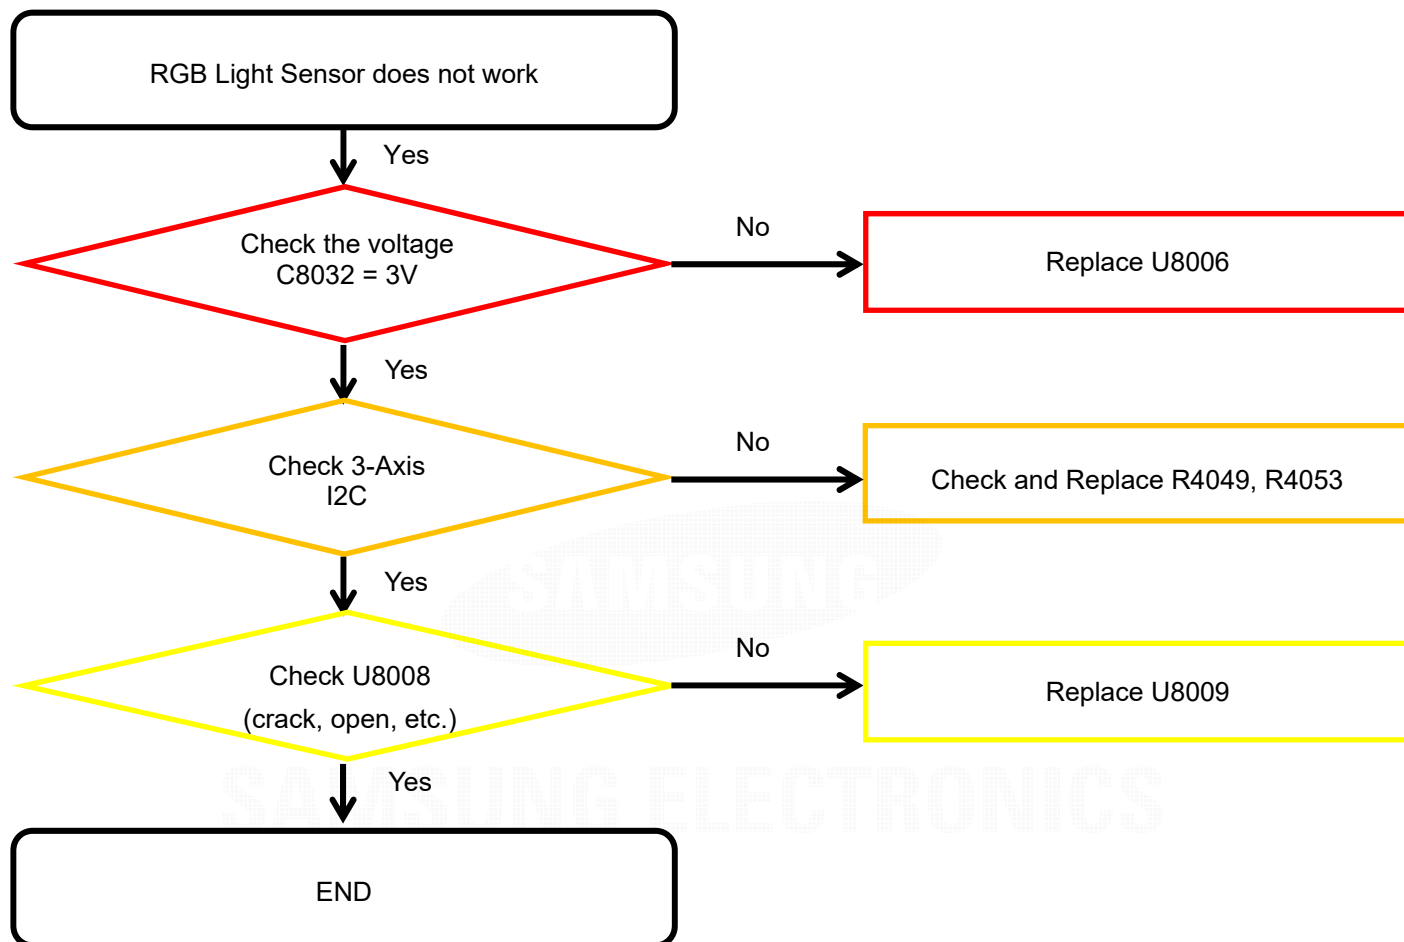


8. Level 3 Repair

8-4-8-3. Hall Sensor

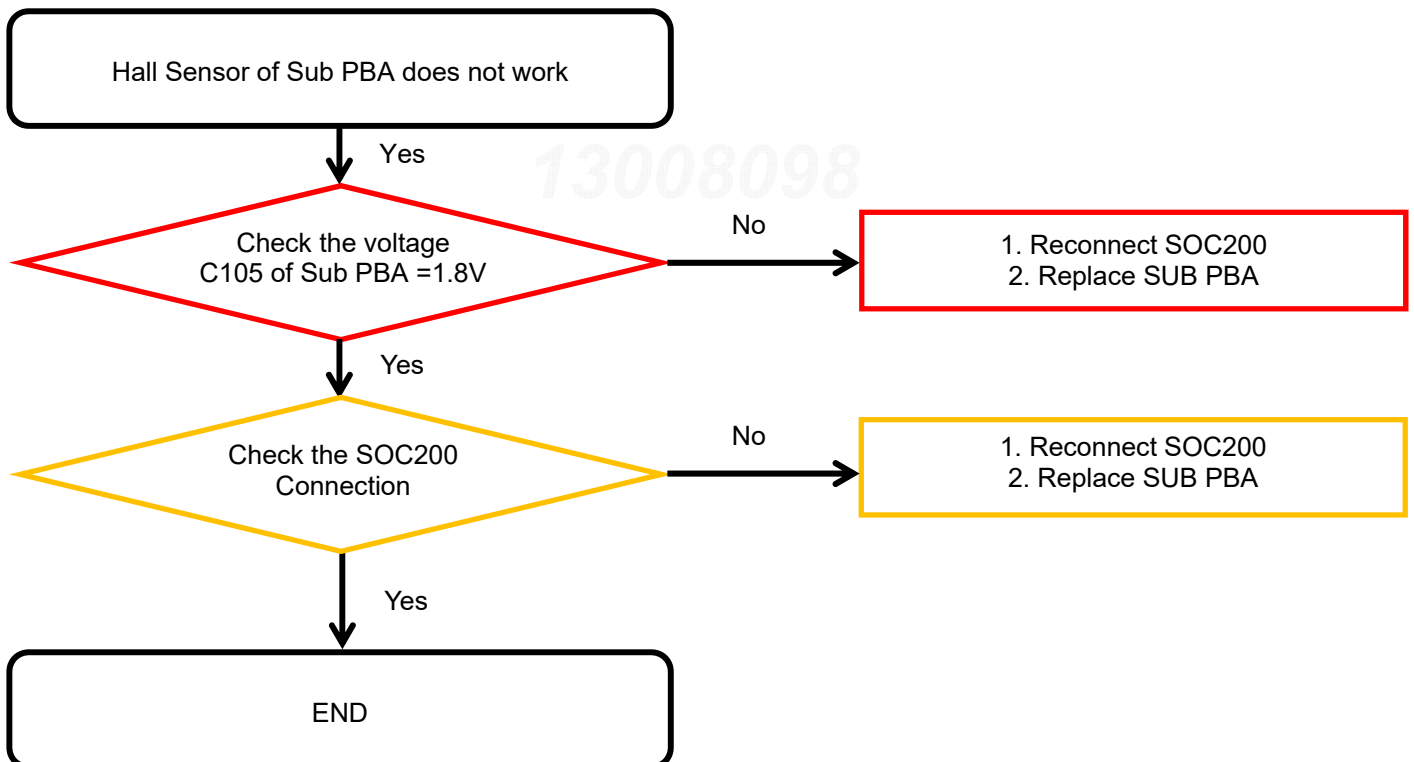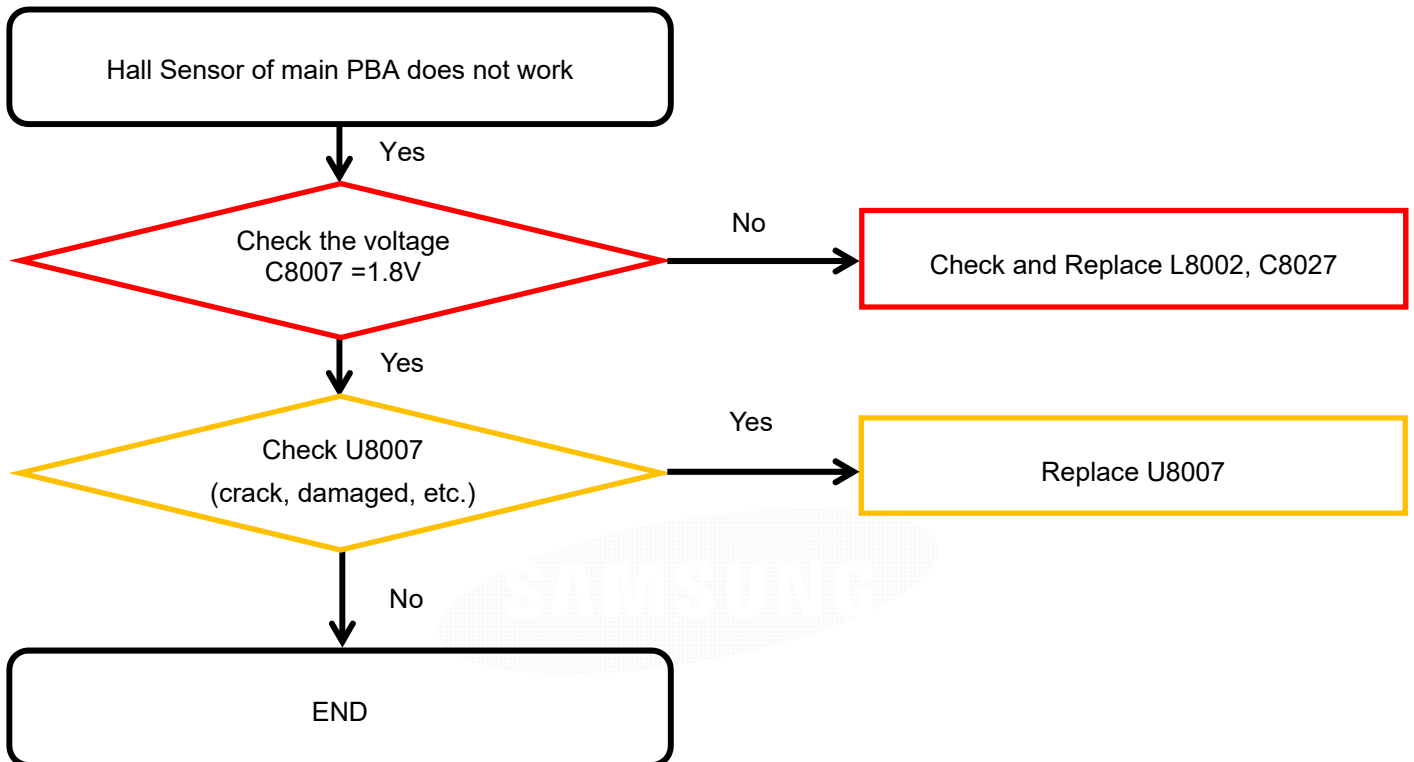


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC <P205 Only>

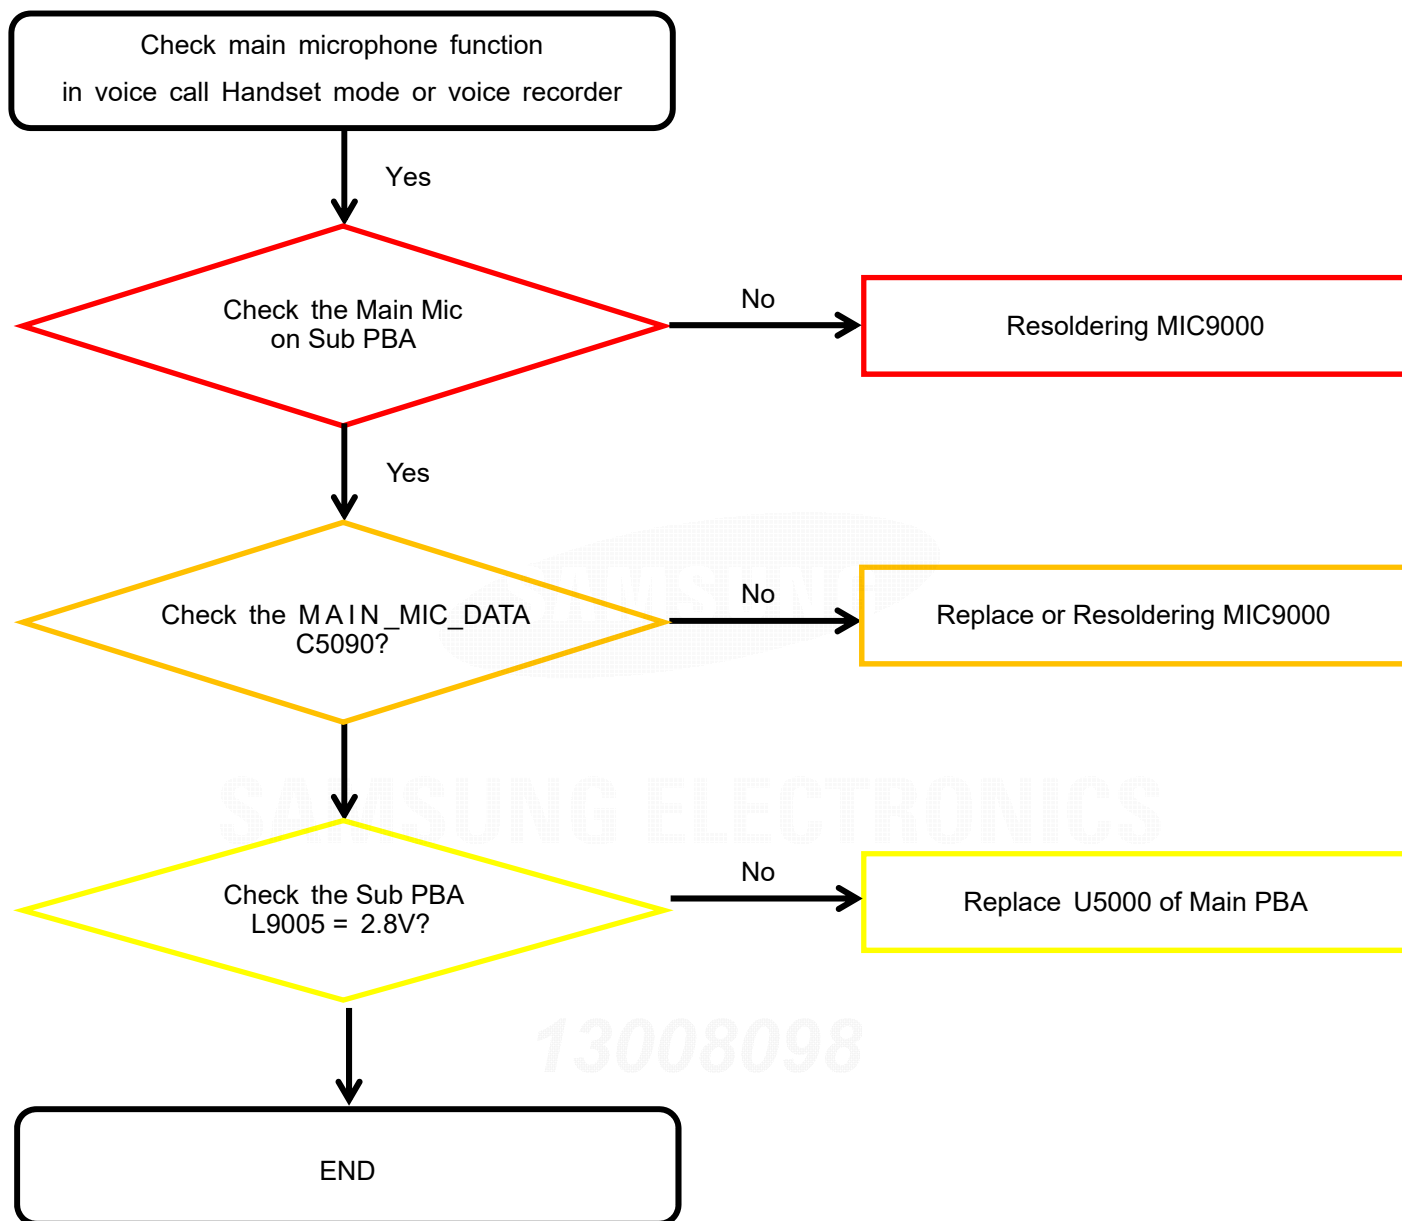


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

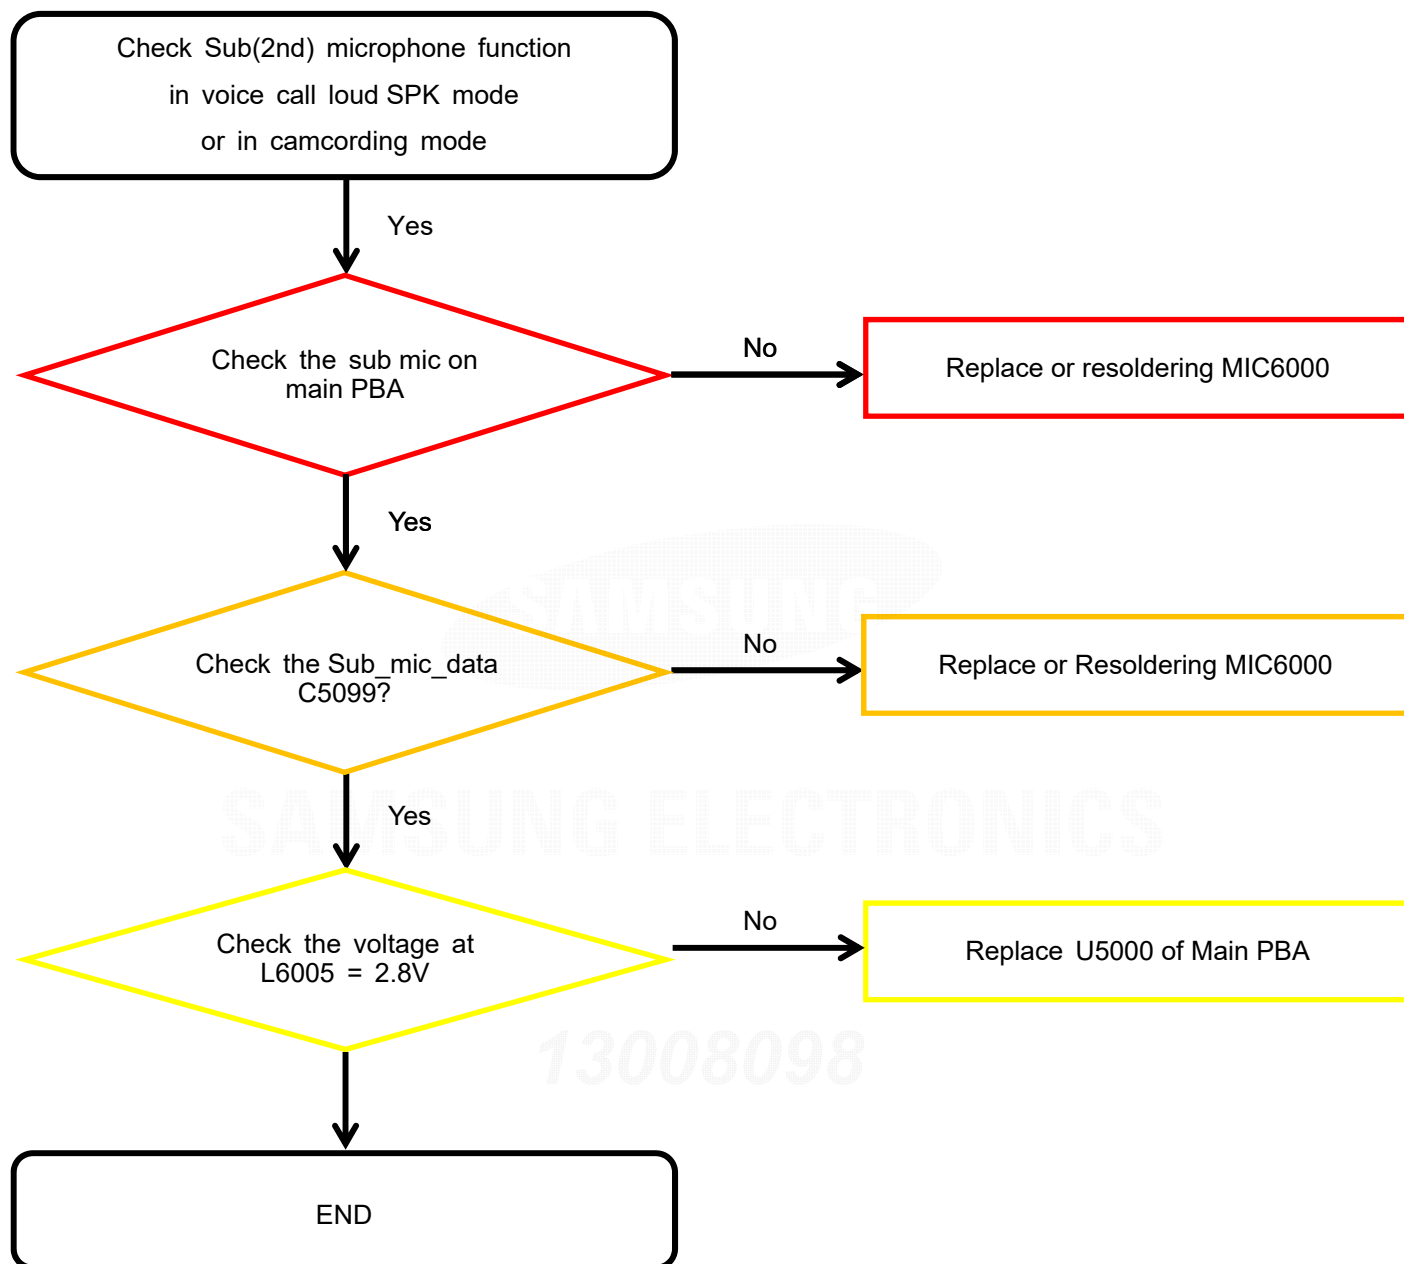


8. Level 3 Repair

8-4-10. Speaker Part

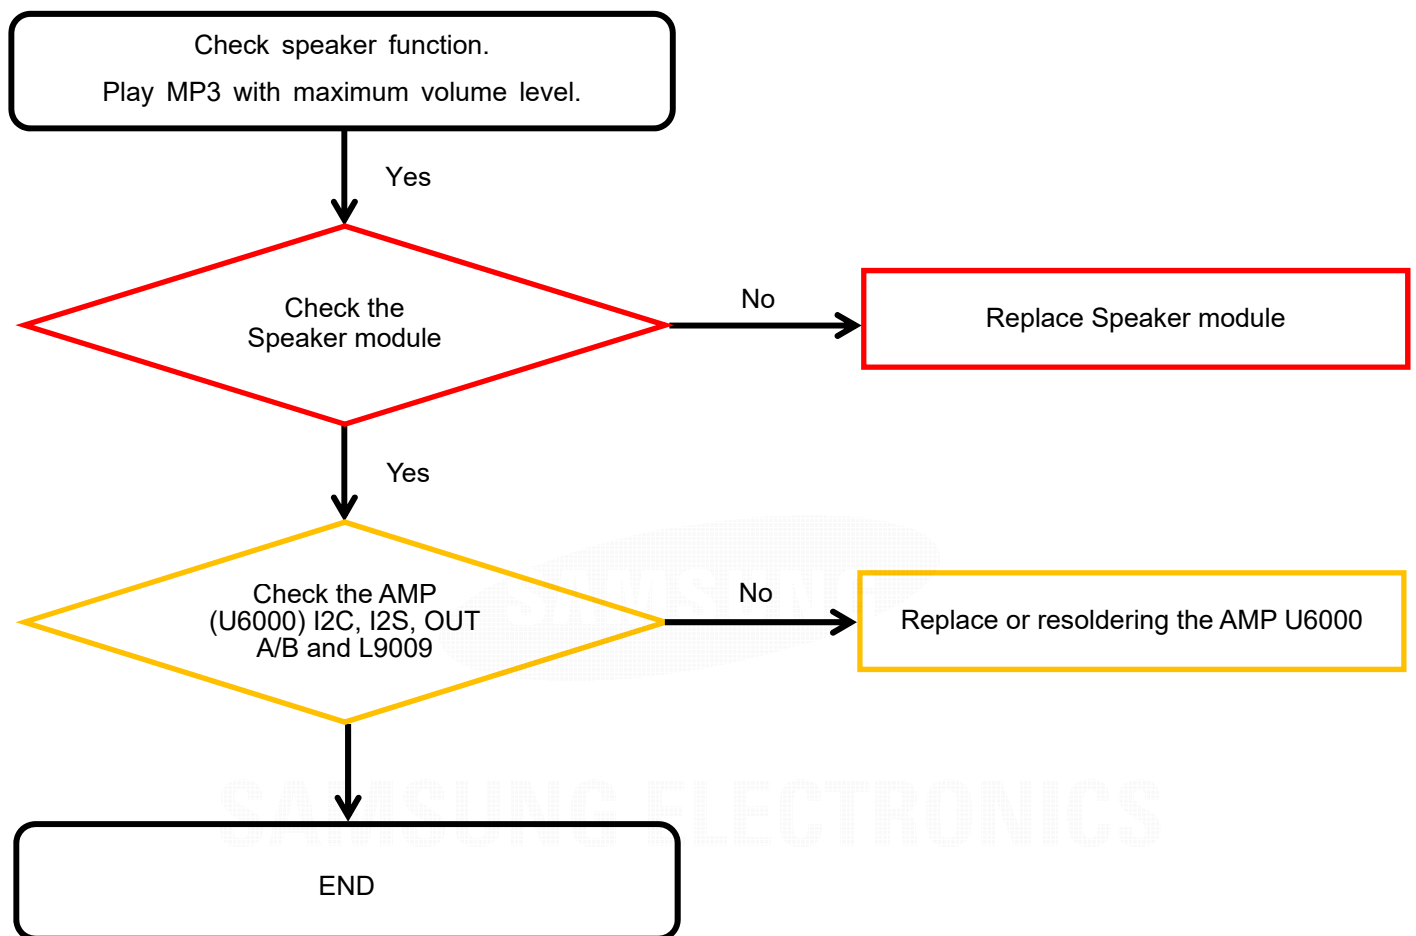


8. Level 3 Repair

8-4-11. Receiver Part <P205 Only>

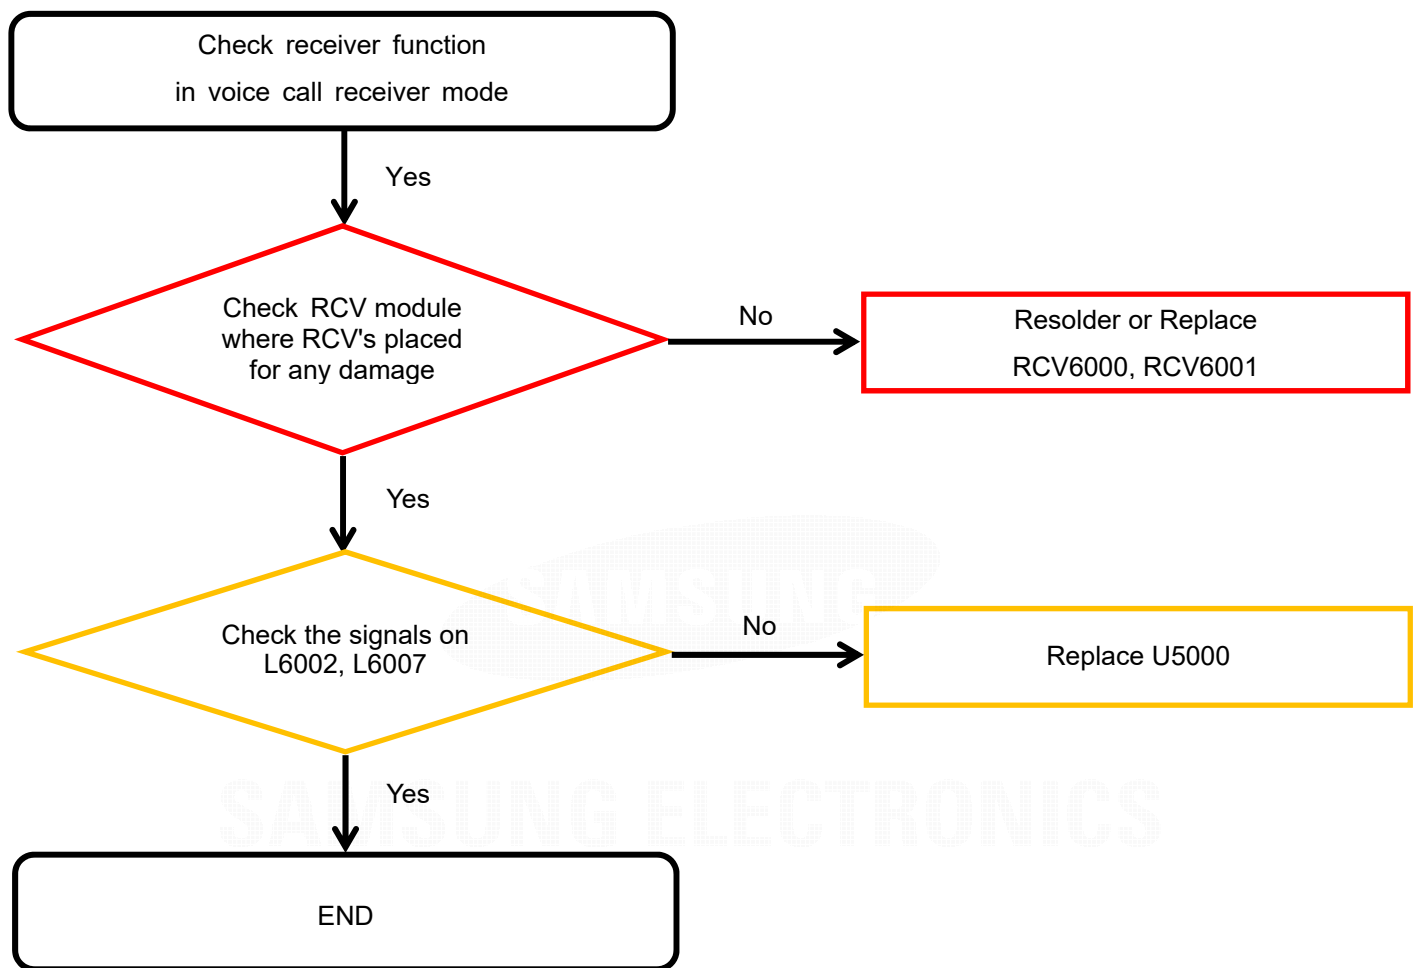


8. Level 3 Repair

8-4-12. BT/WIFI

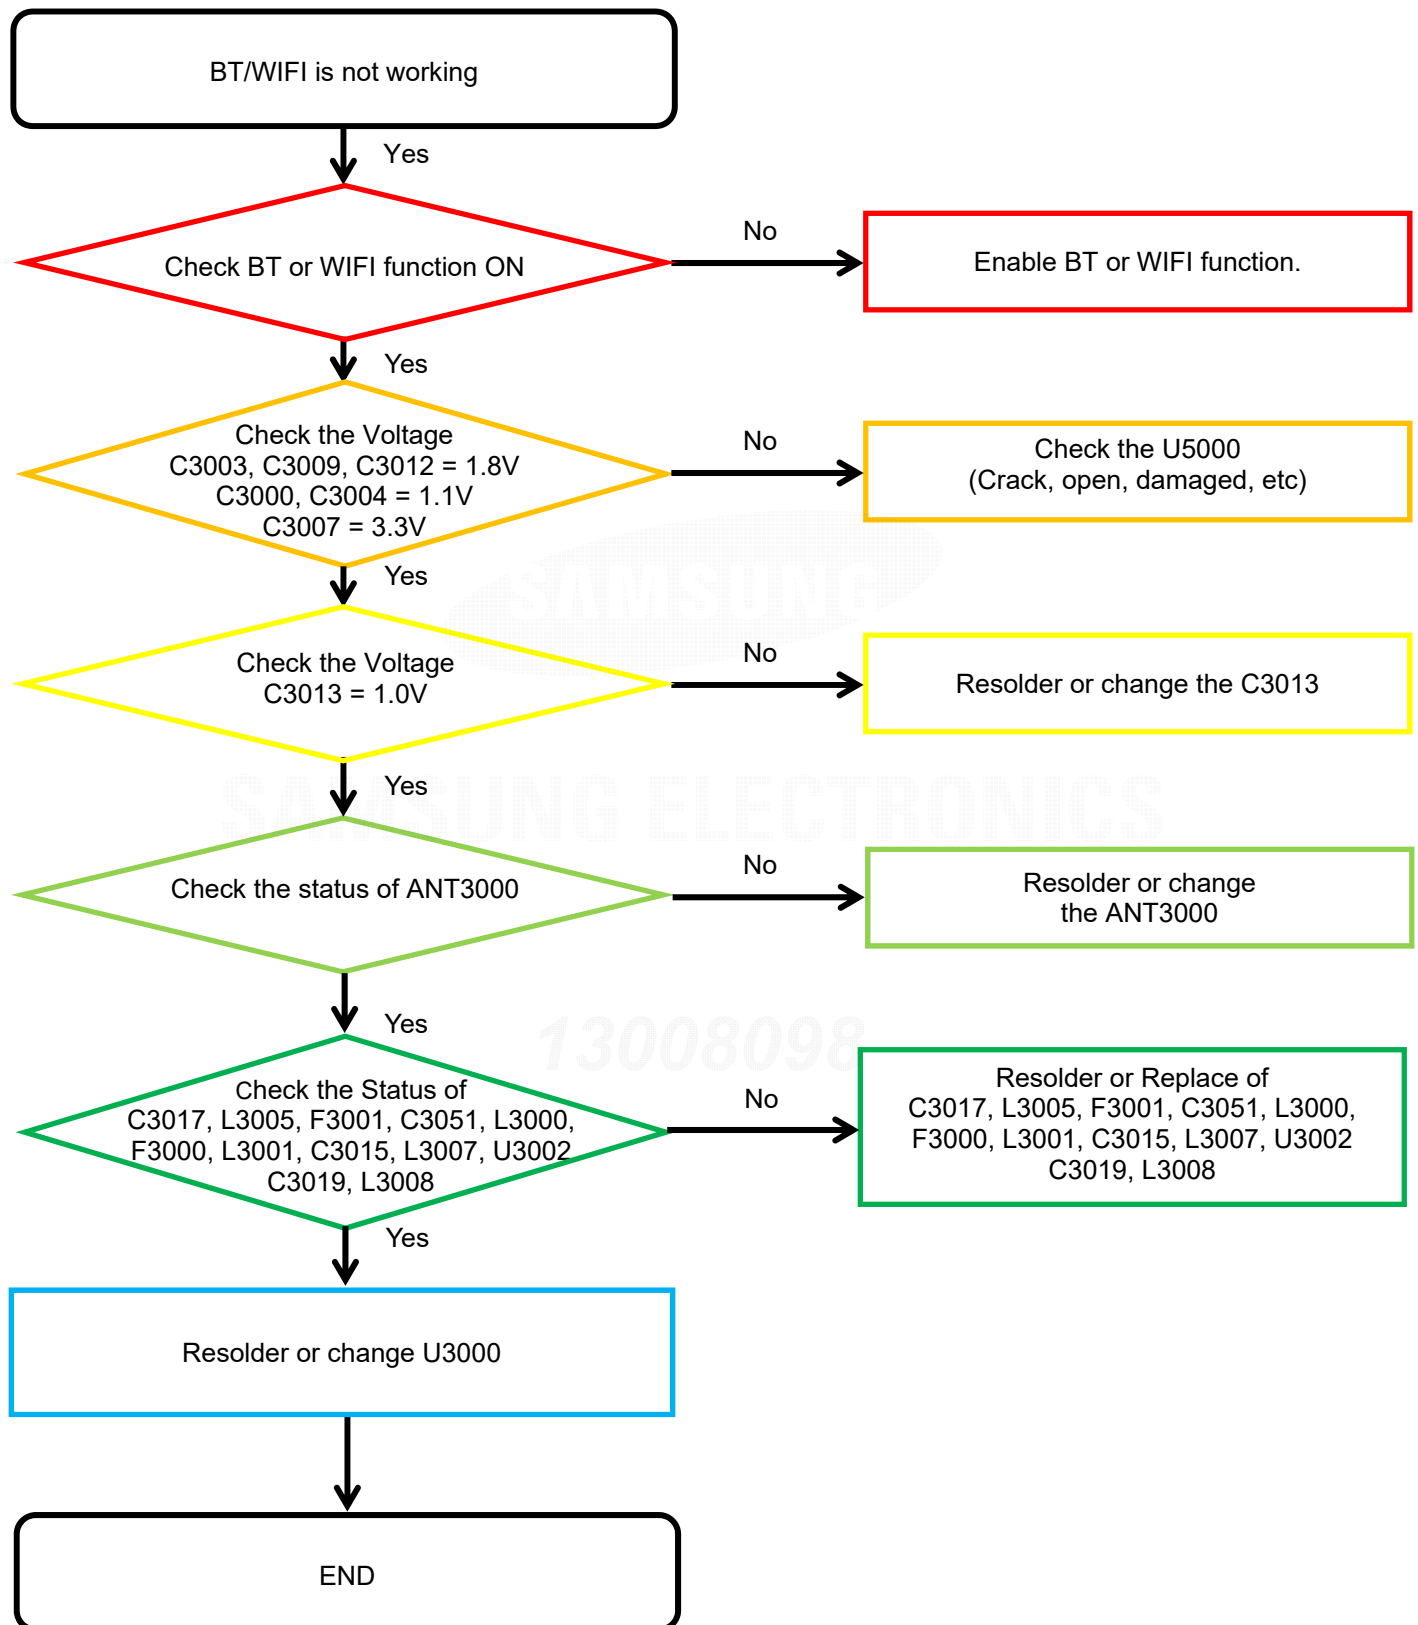


8. Level 3 Repair

8-4-13-1. GPS <P205 Only>

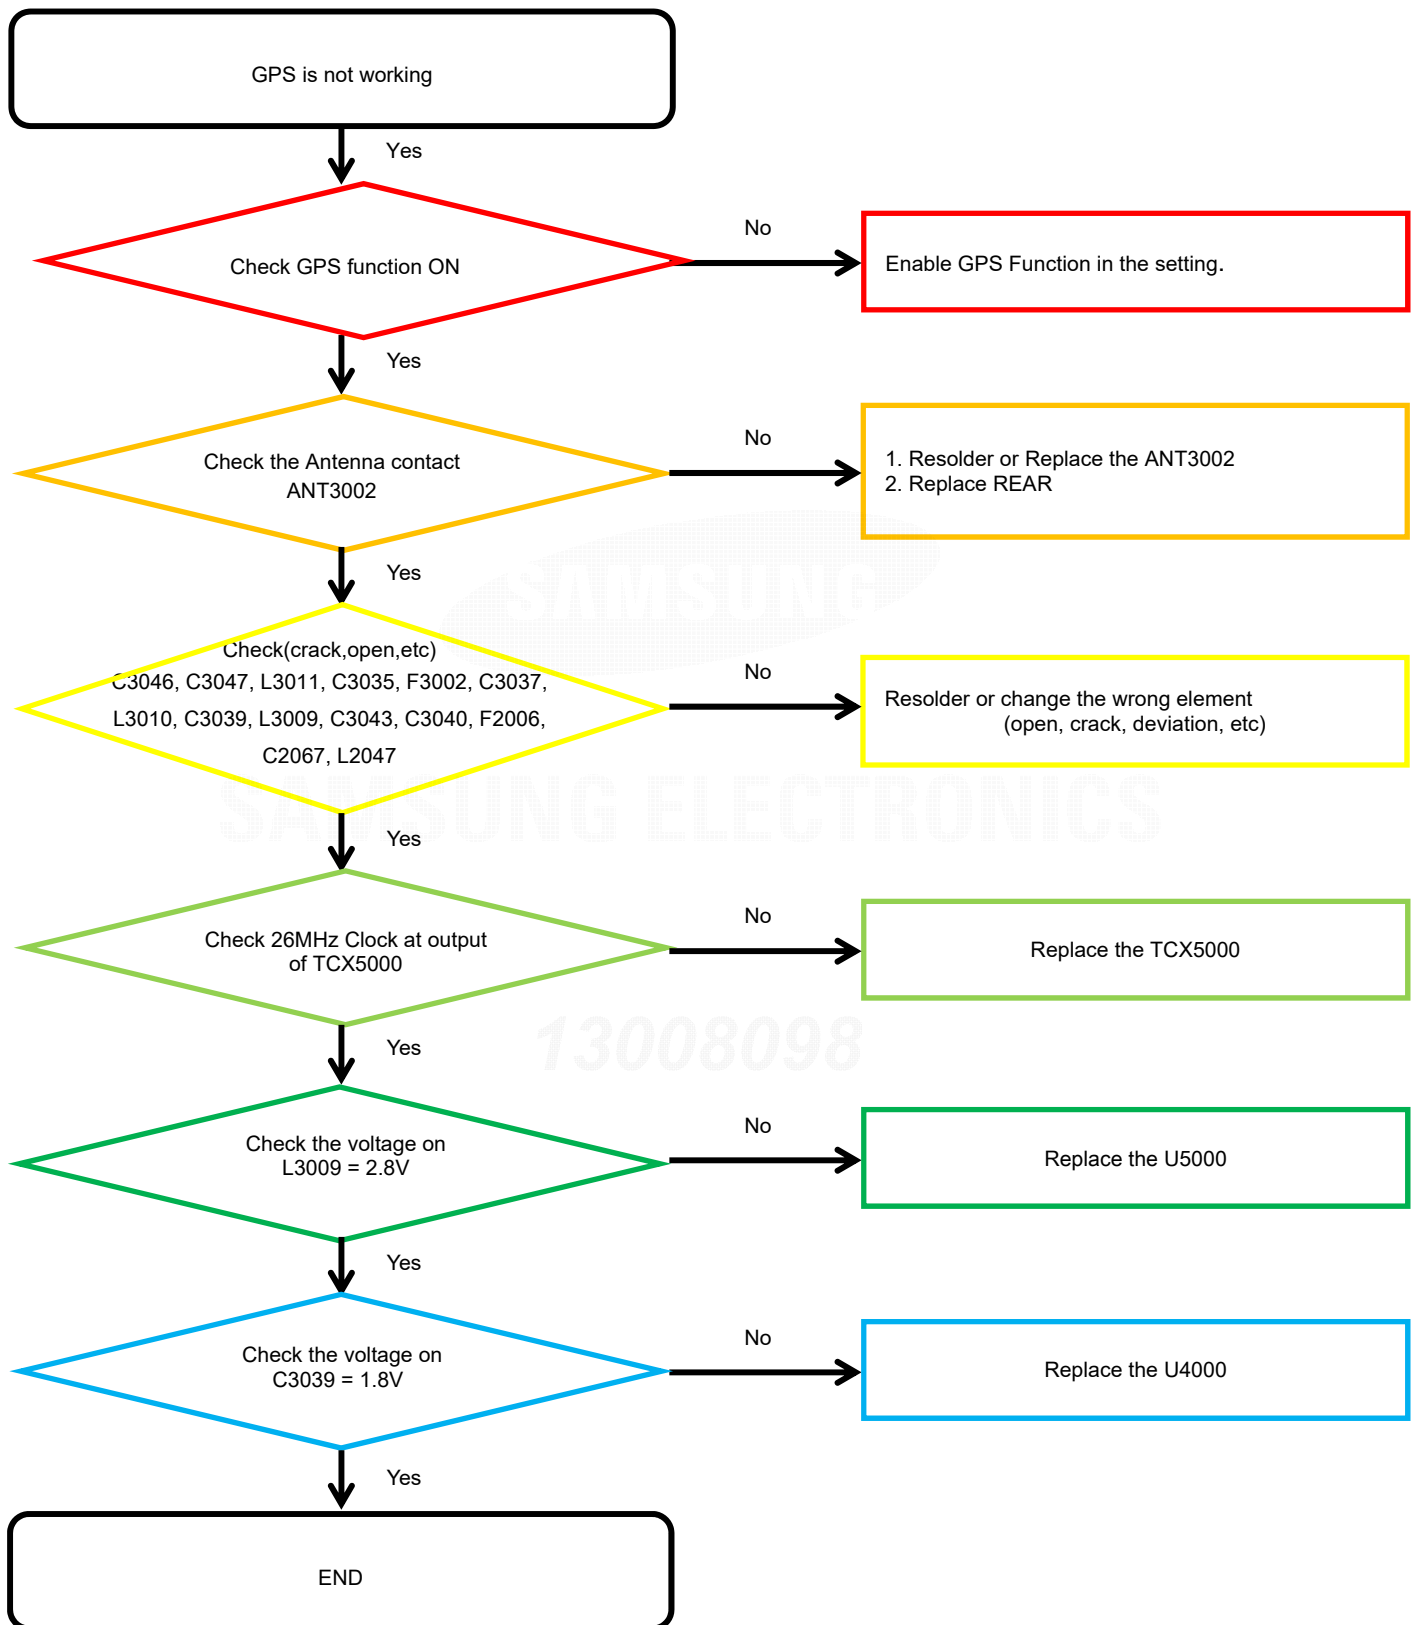


8. Level 3 Repair

8-4-13-2. GPS <P200 Only>

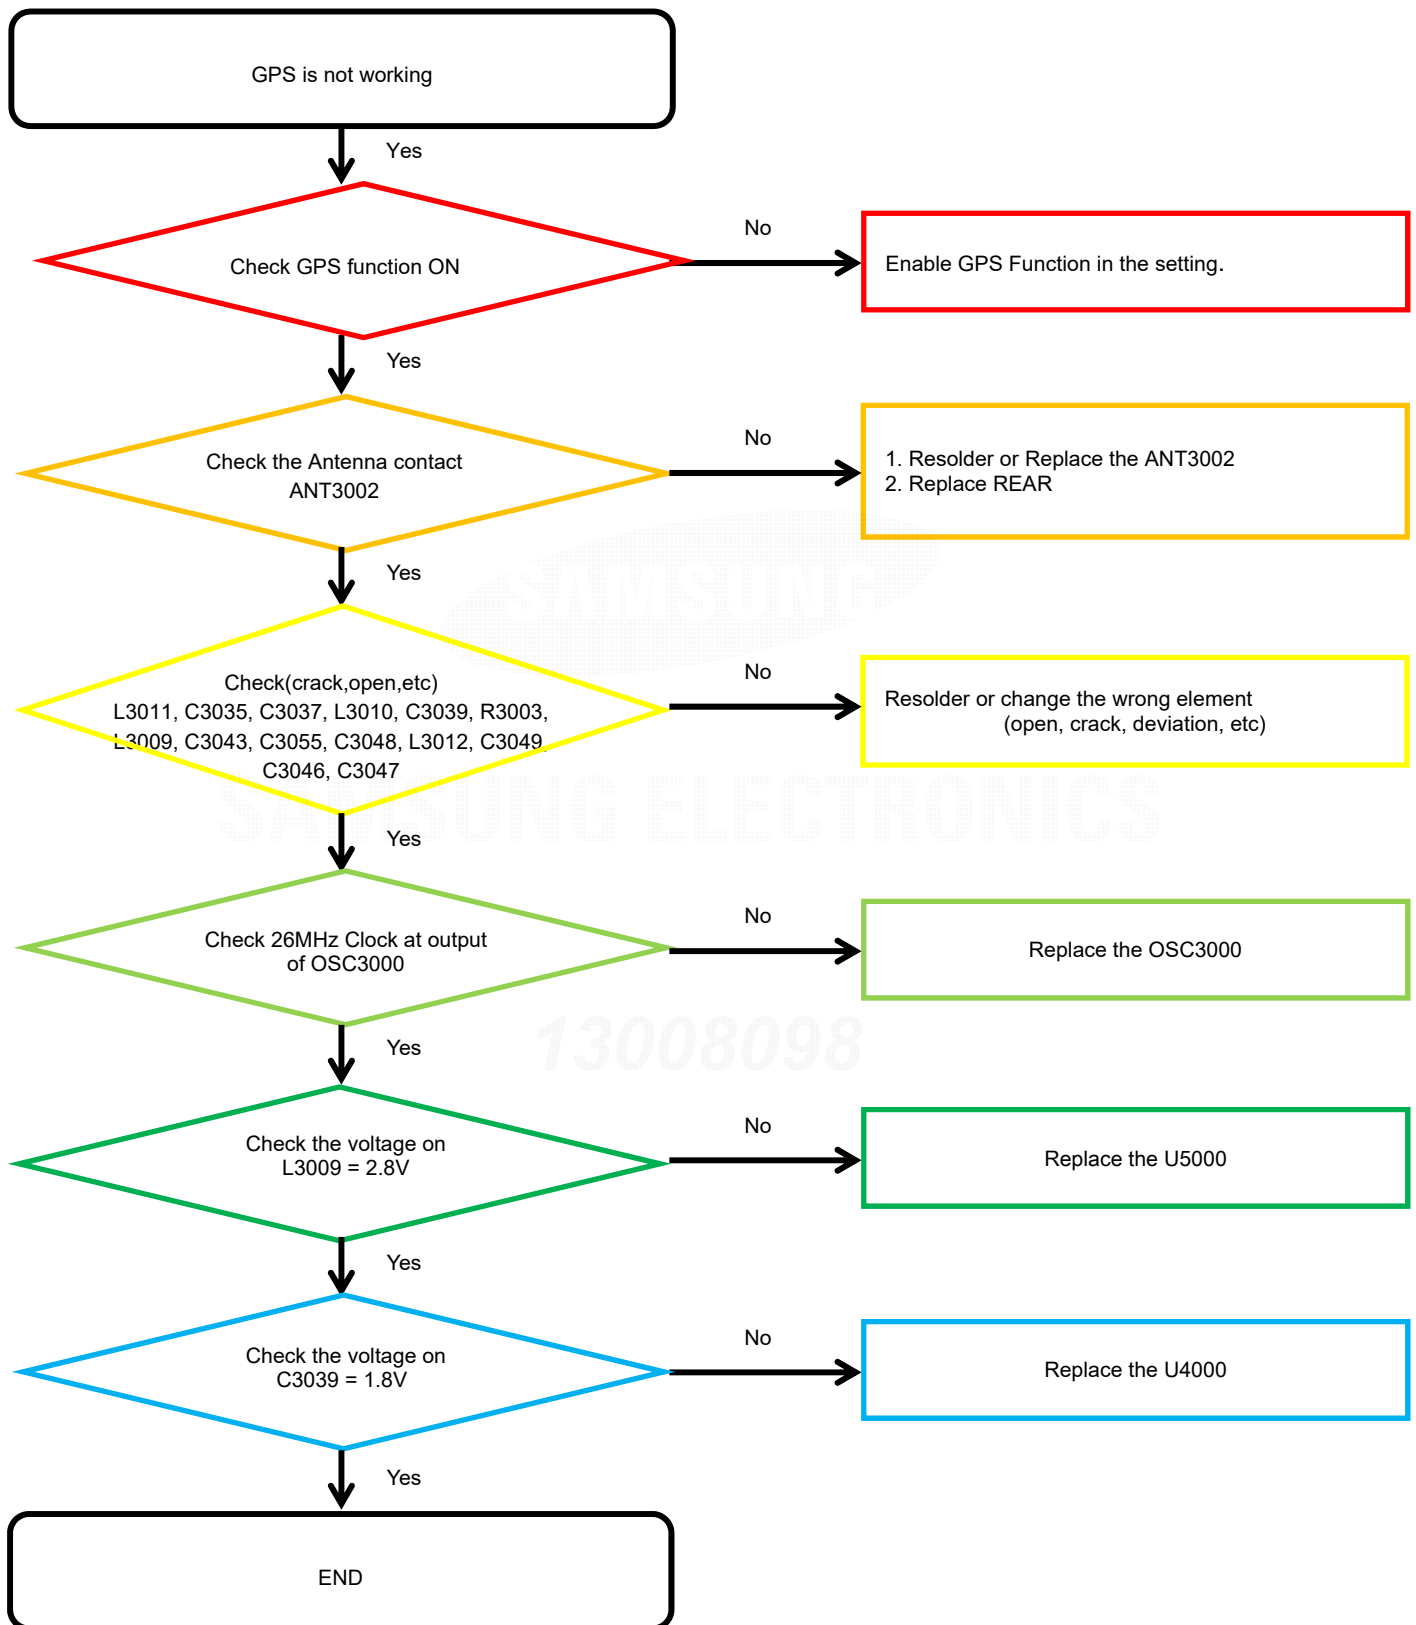


8. Level 3 Repair

8-4-14. Display

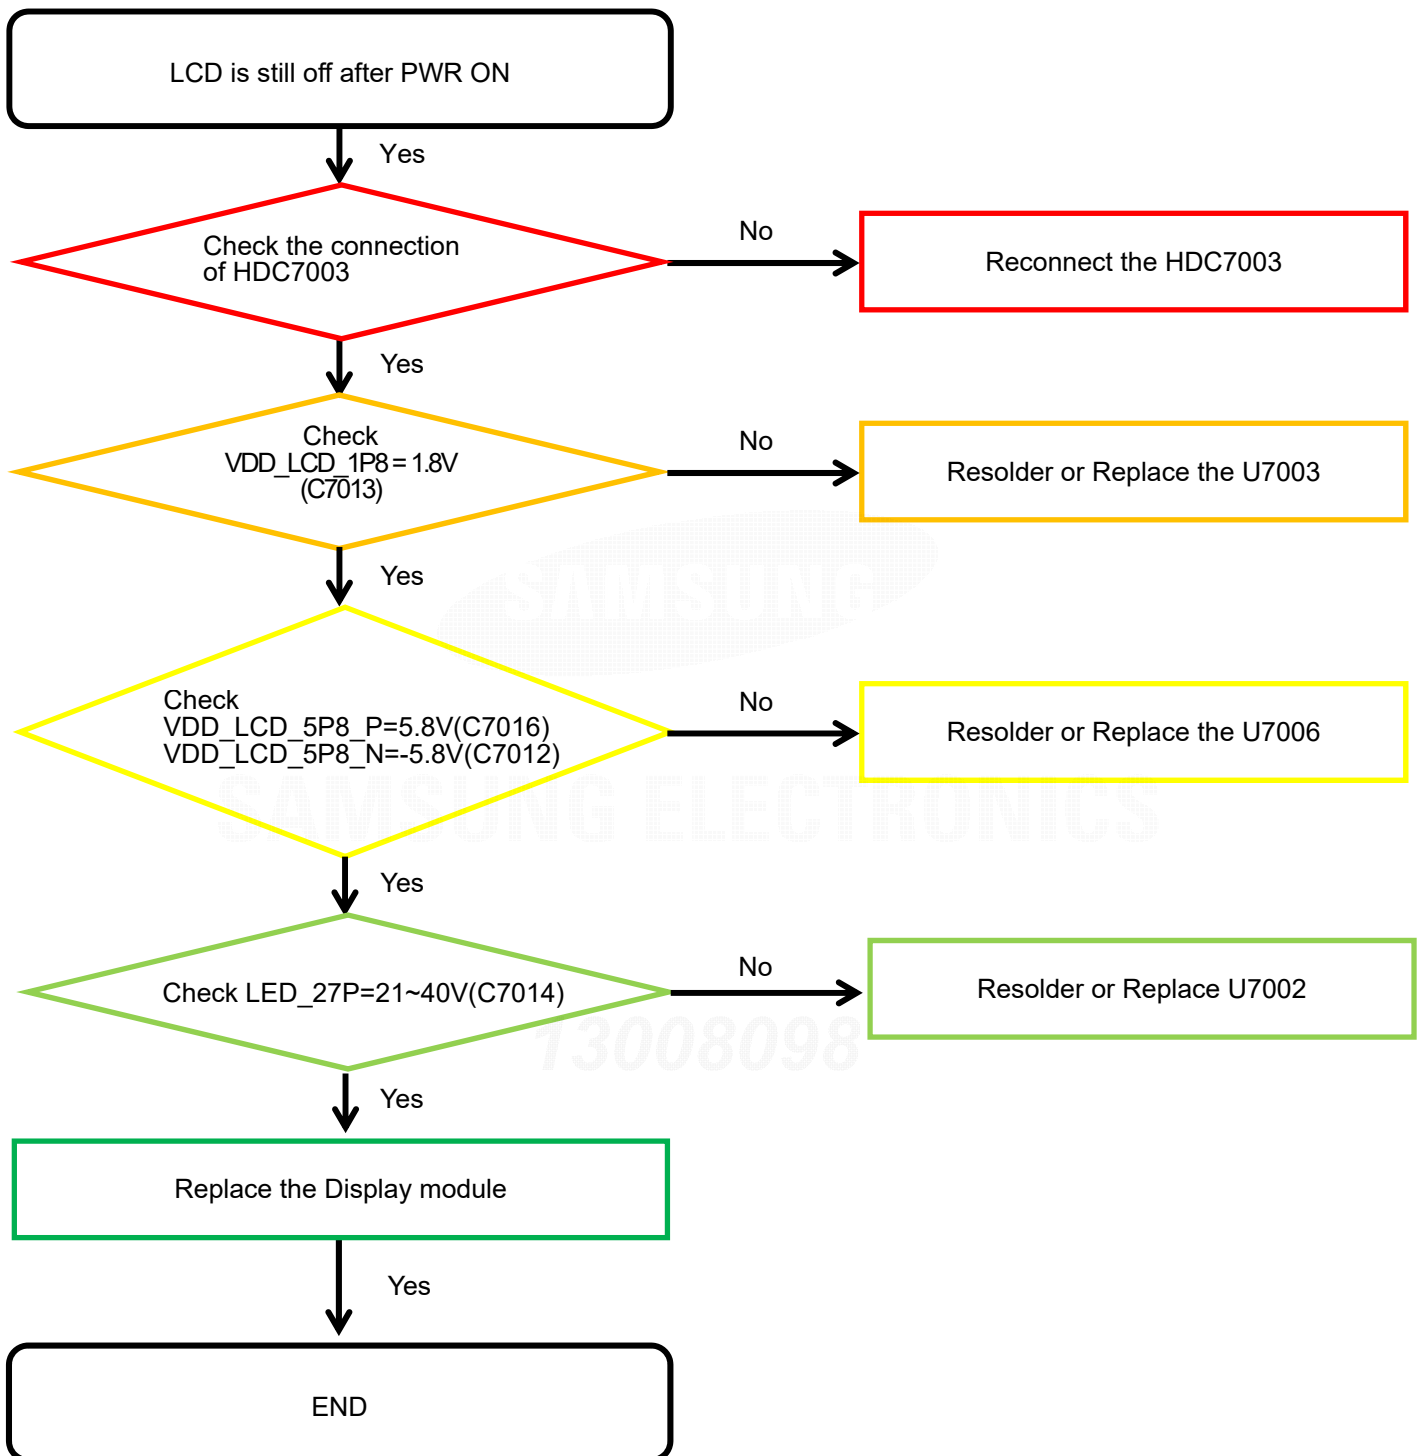


8. Level 3 Repair

8-4-15. 8M CAMERA

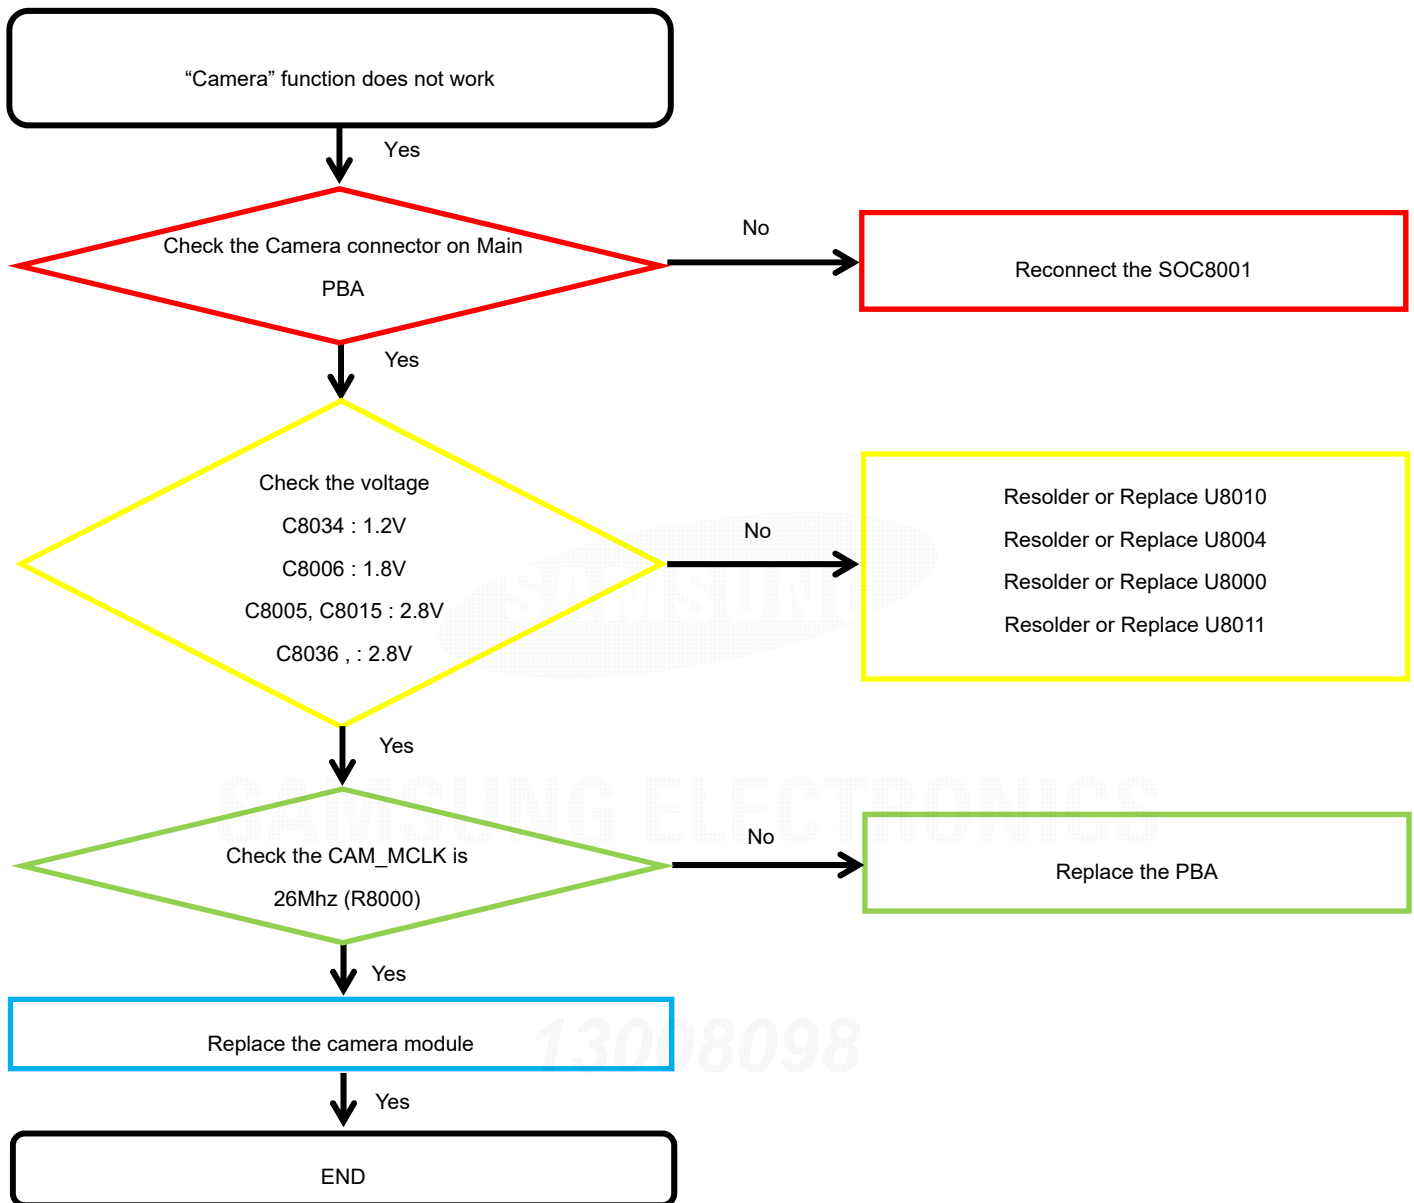


8. Level 3 Repair

8-4-16. 5M CAMERA

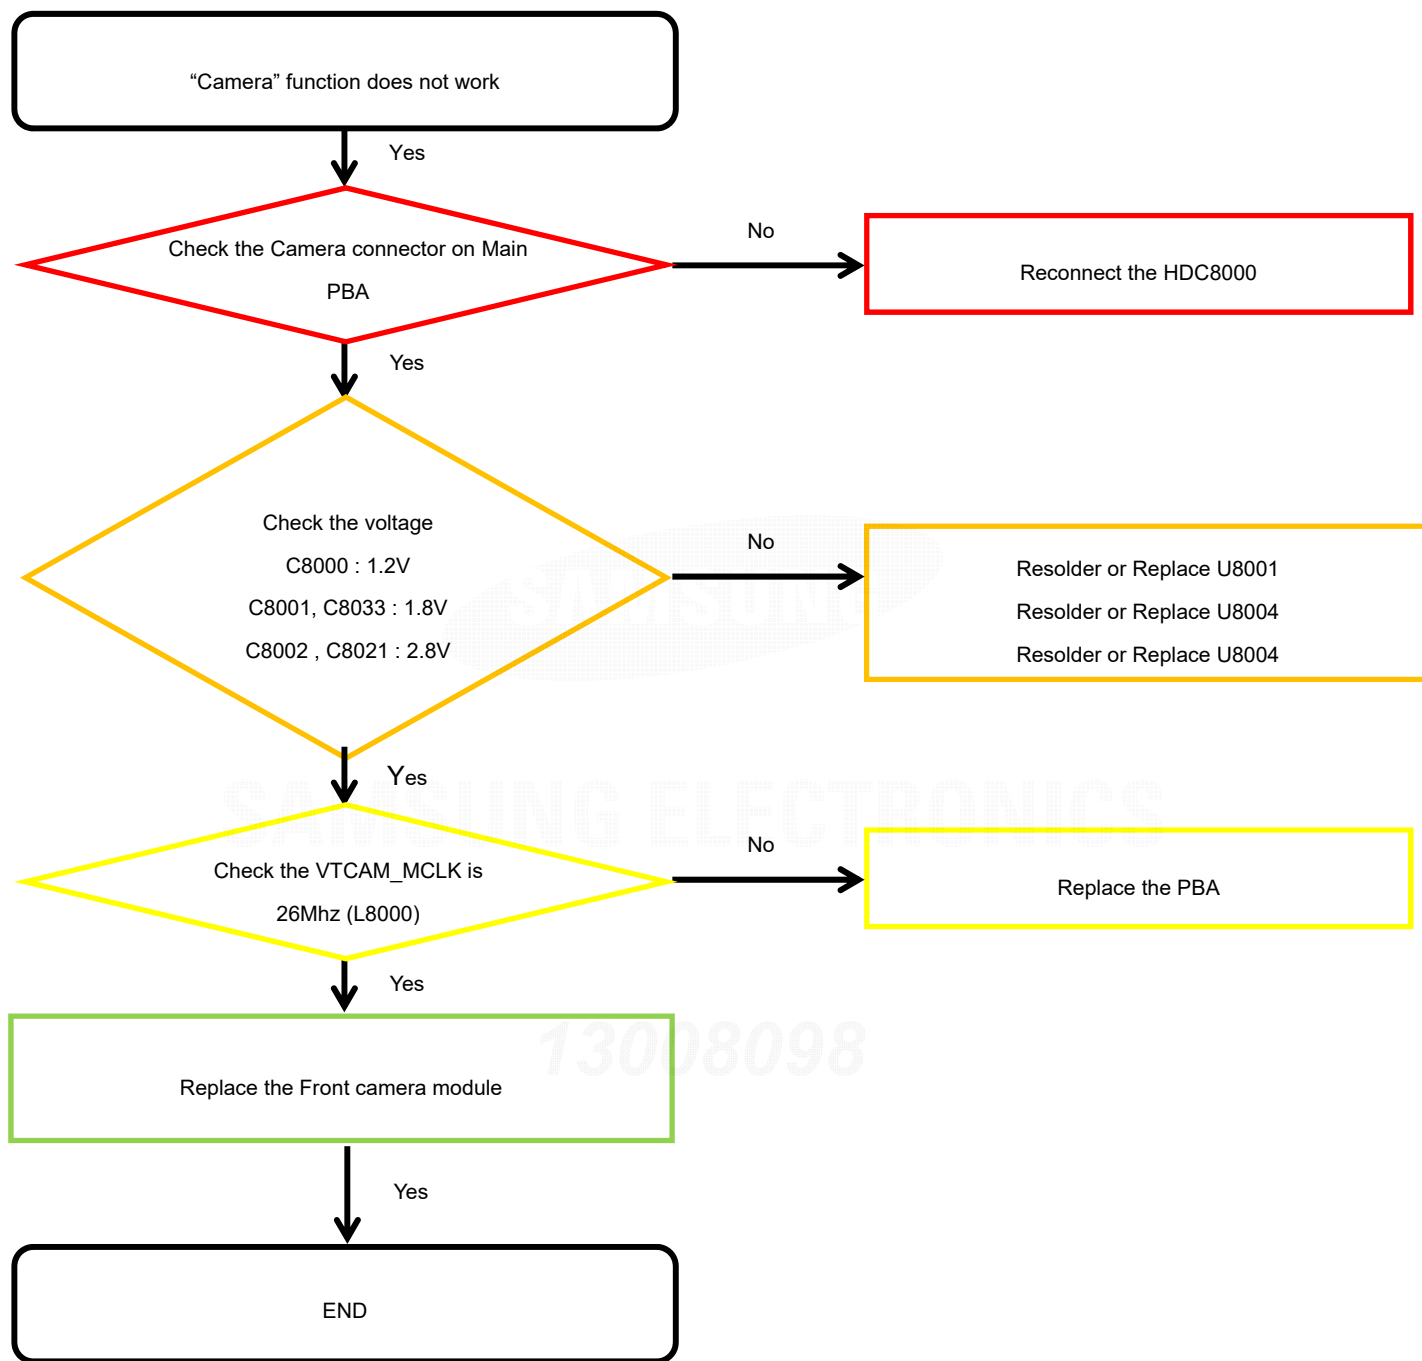


8. Level 3 Repair

8-4-17. TSP

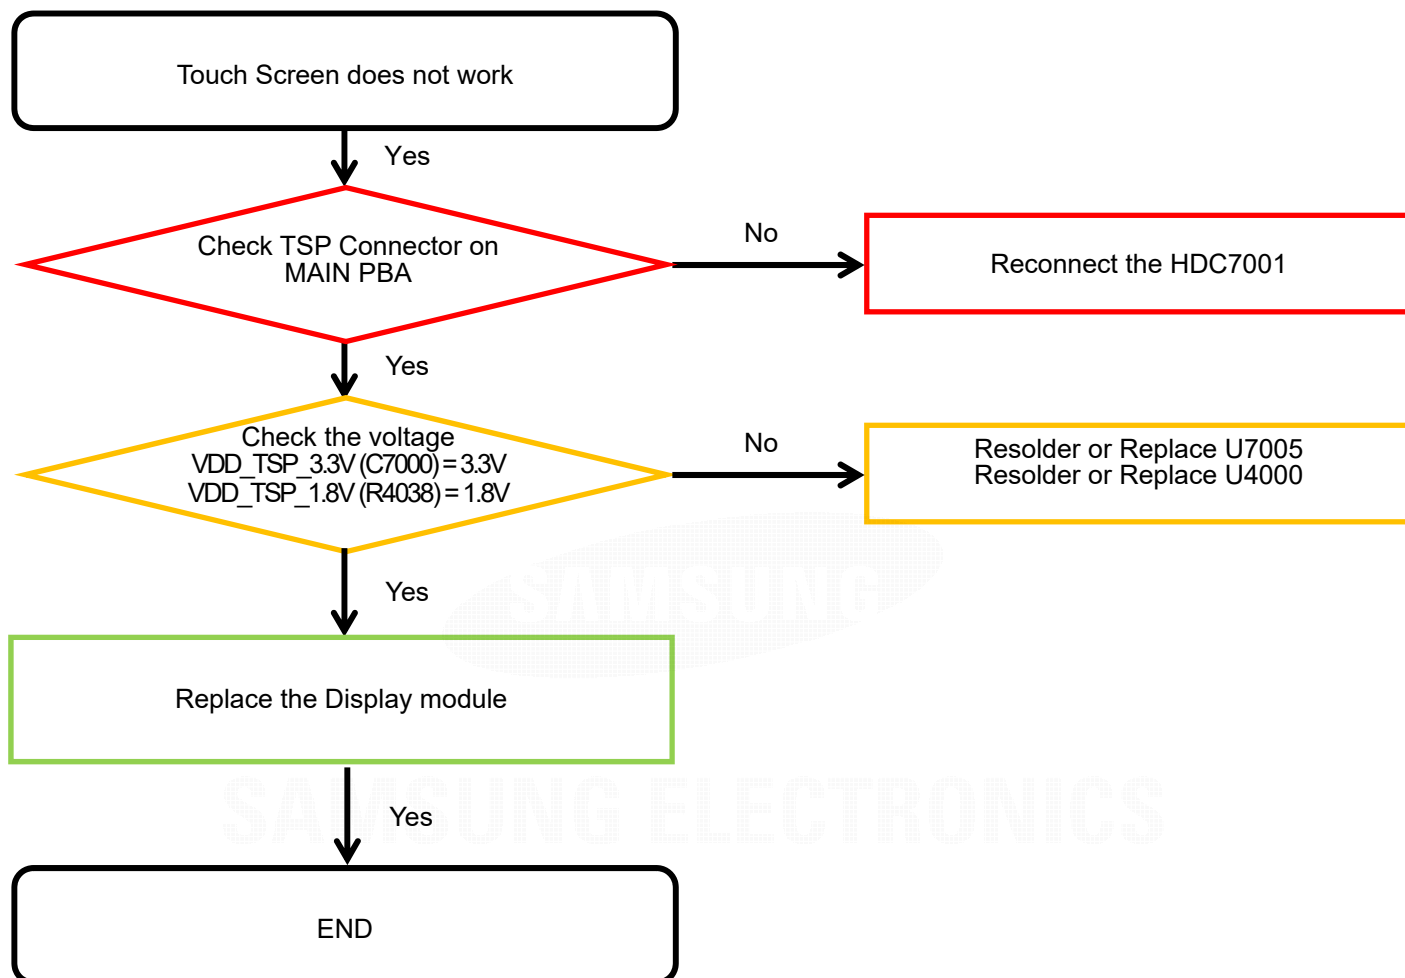


8. Level 3 Repair

8-4-18. S-PEN

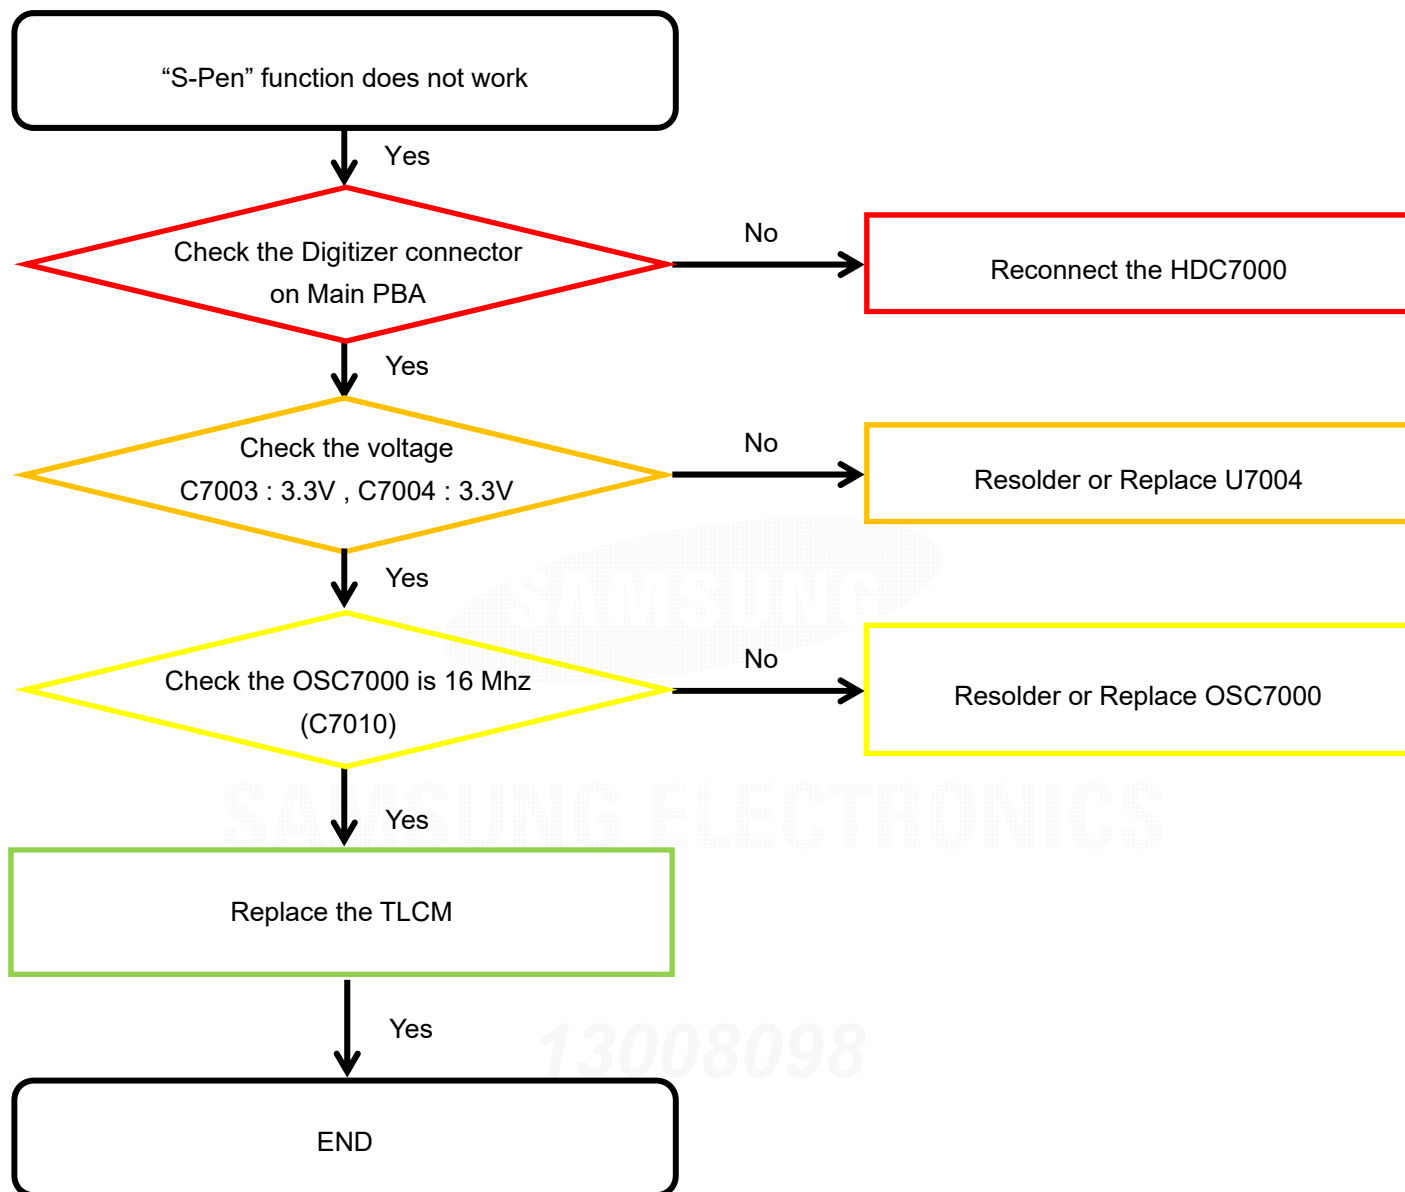


8. Level 3 Repair

8-4-19. Motor [SM-P205]

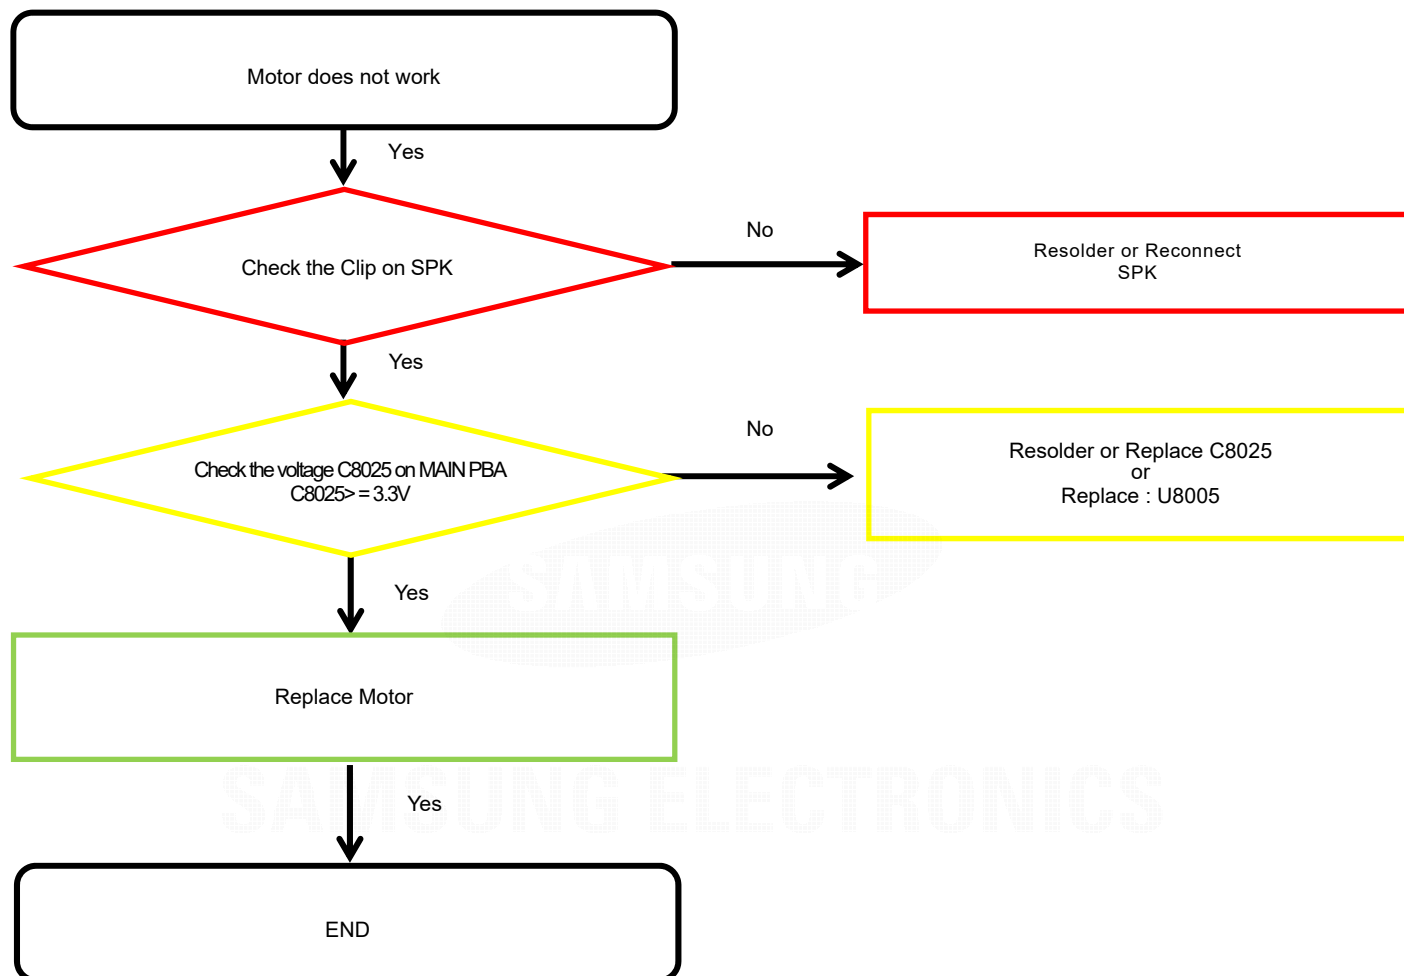


8. Level 3 Repair

8-4-20. GSM 850/900, WCDMA B5/8, LTE B5/8/12/17/20/28 Rx [SM-P205]

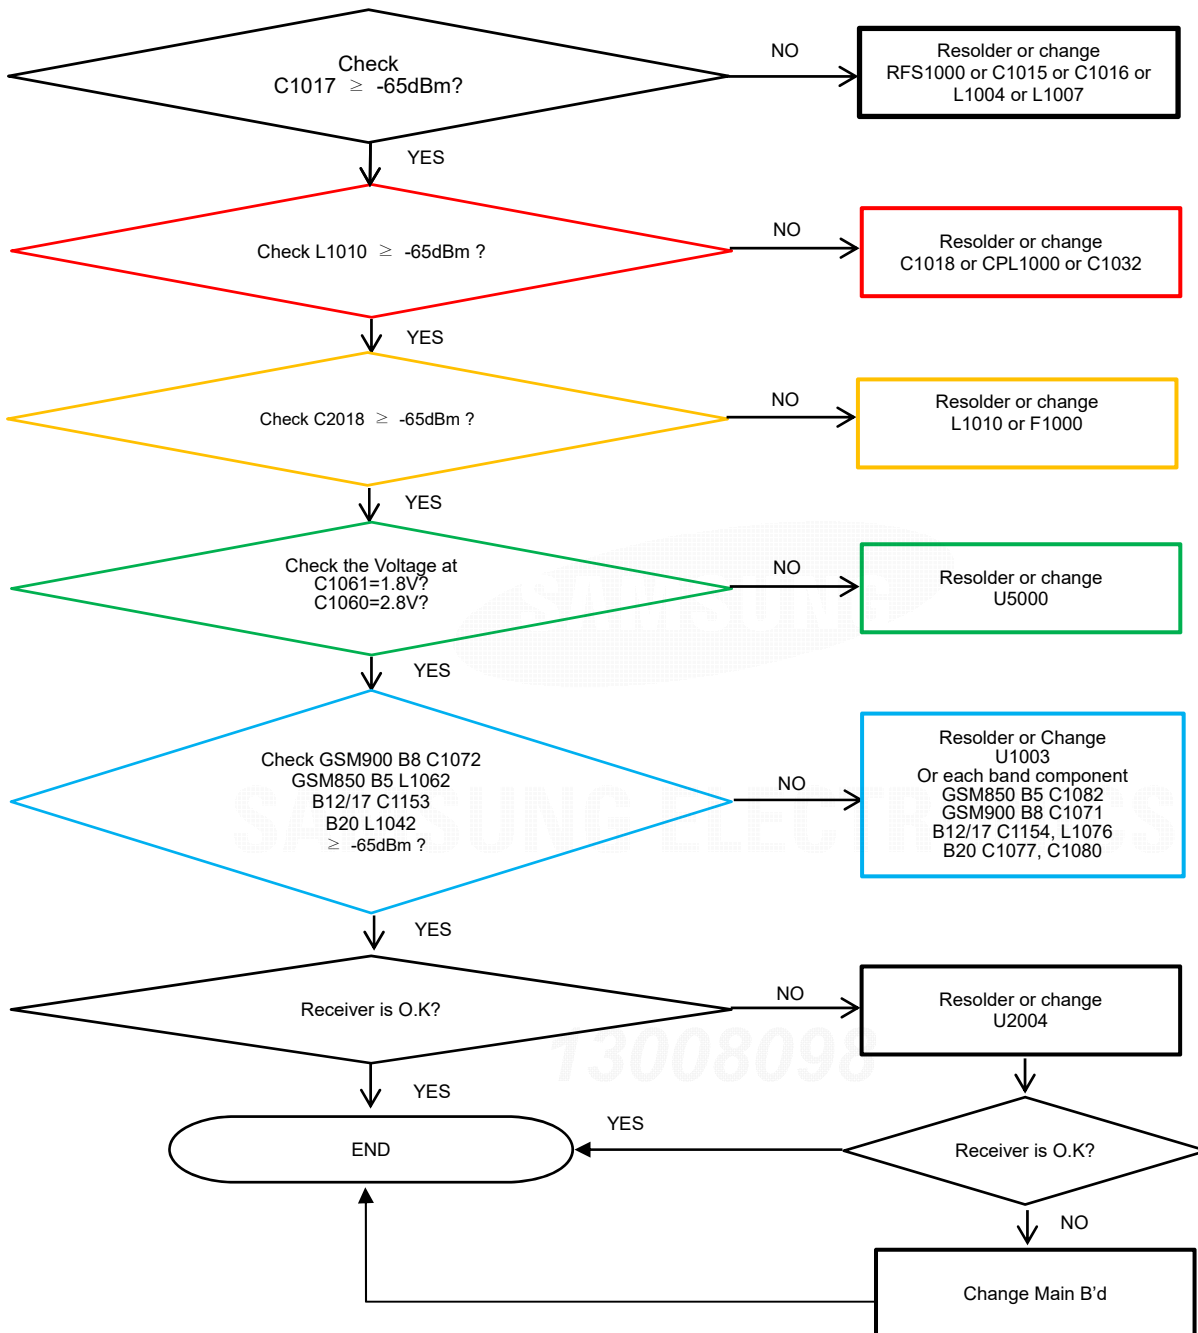


8. Level 3 Repair

8-4-21. LTE B28 Rx [SM-P205]

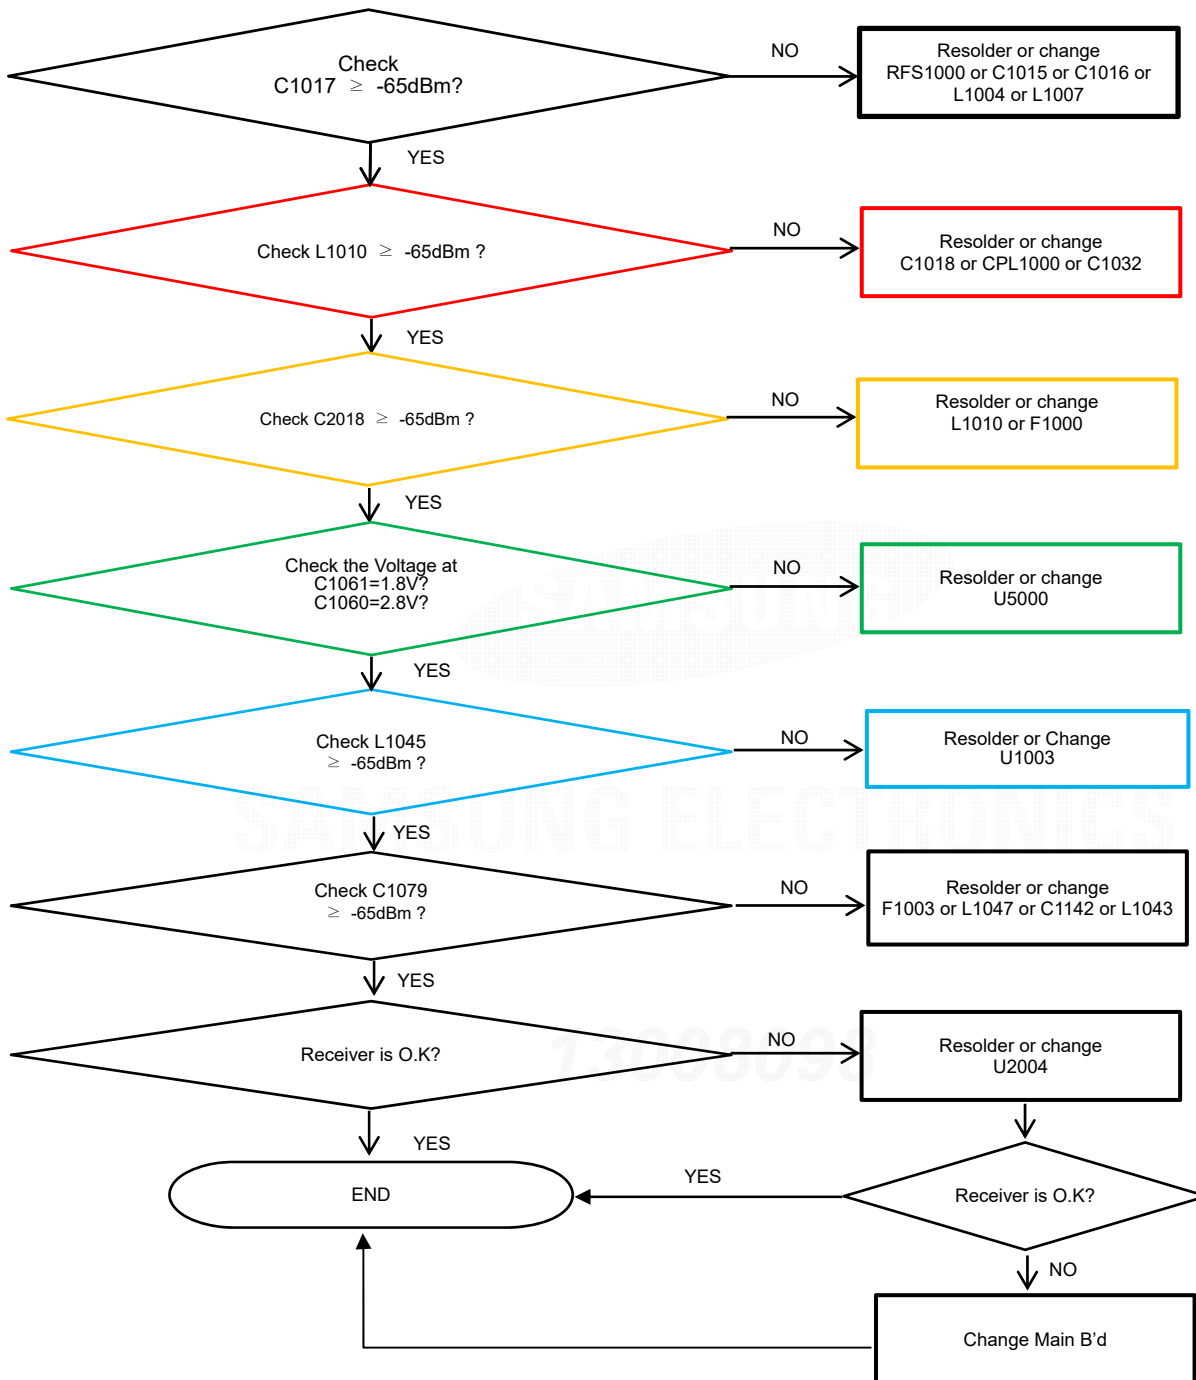


8. Level 3 Repair

8-4-22. GSM 1800/1900, WCDMA B1/2/4, LTE B1/2/3/4/66 Rx [SM-P205]

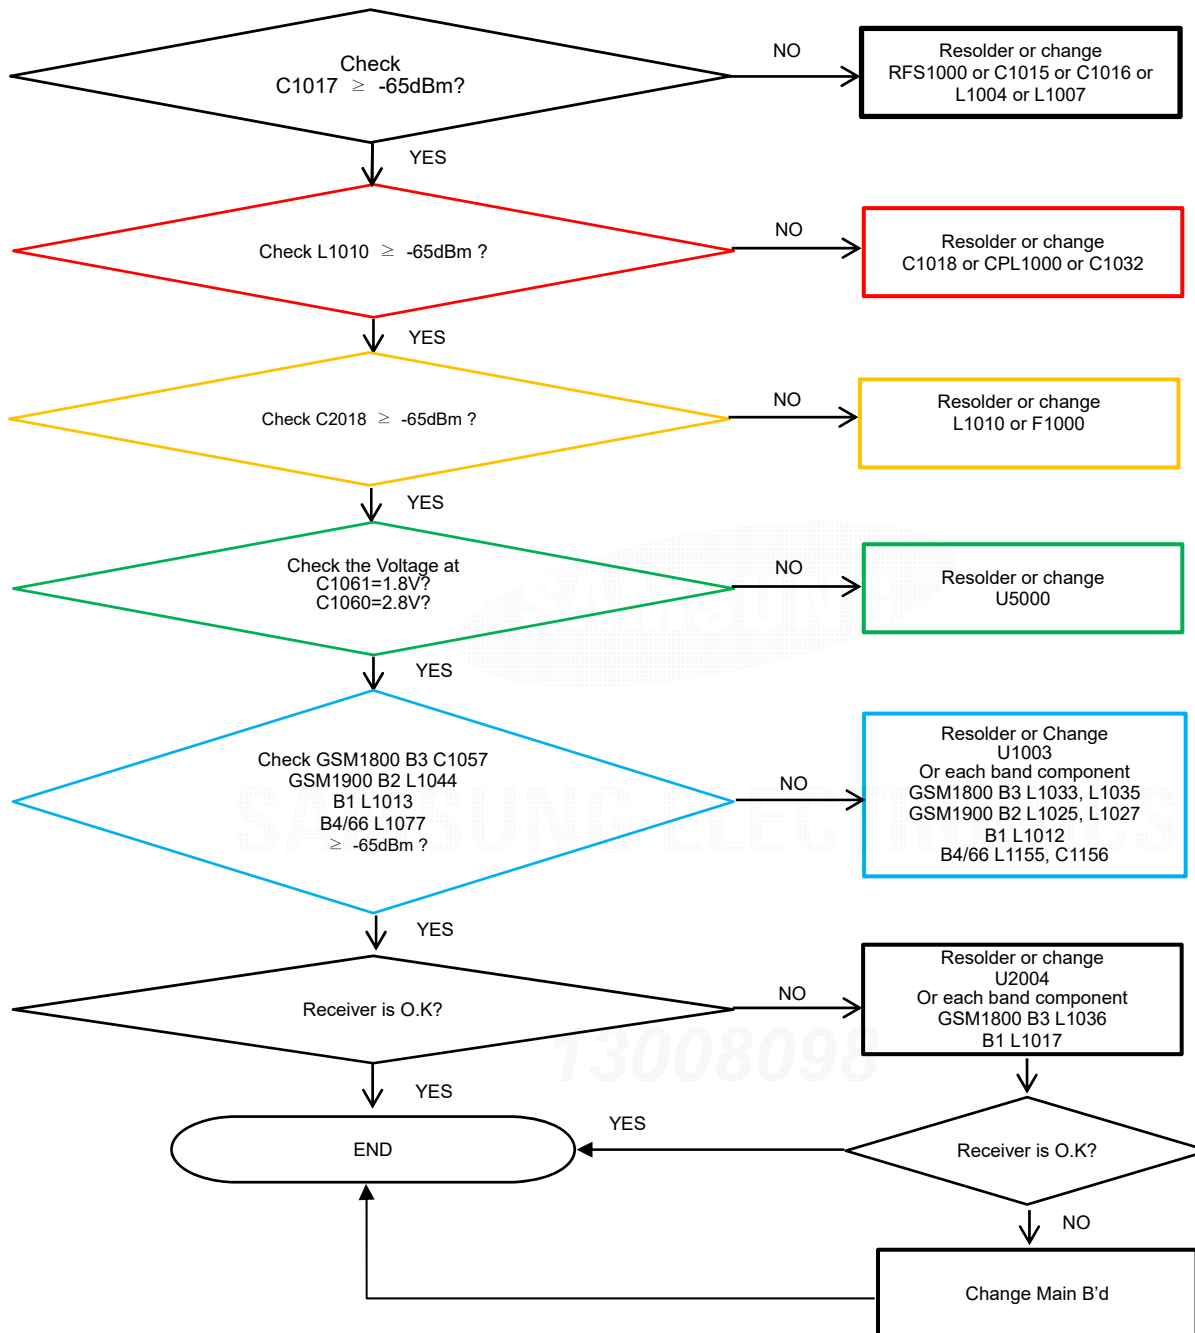


8. Level 3 Repair

8-4-23. LTE B7 Rx [SM-P205]

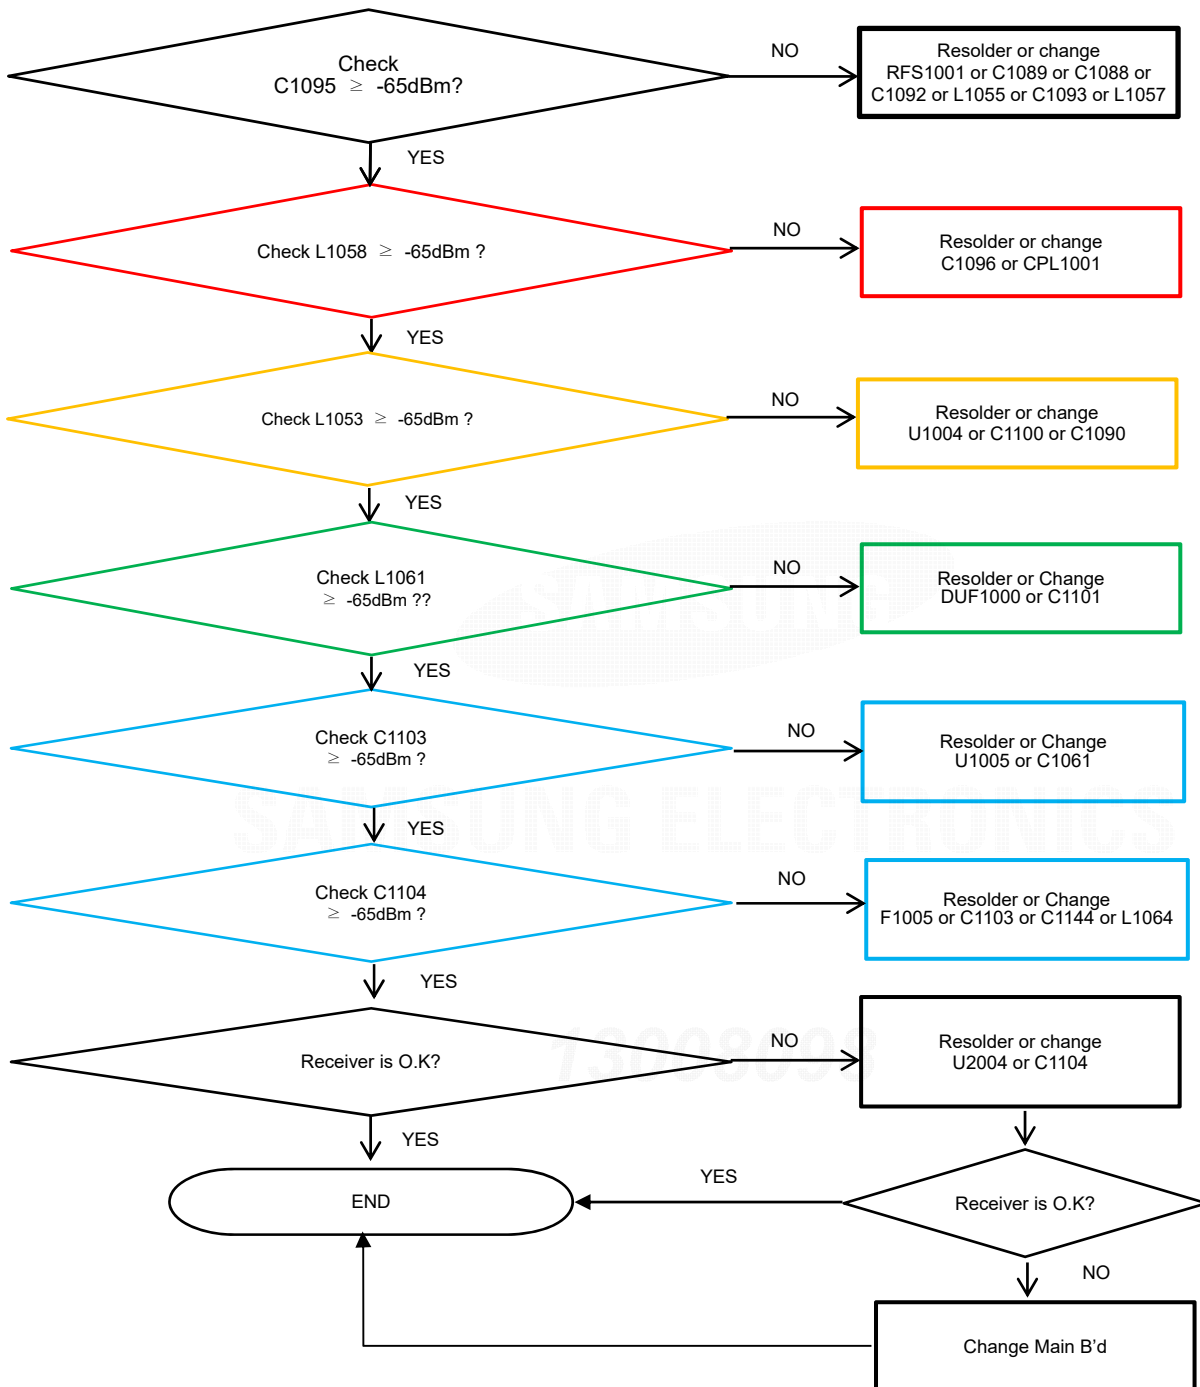


8. Level 3 Repair

8-4-24. LTE B38/41 Rx [SM-P205]

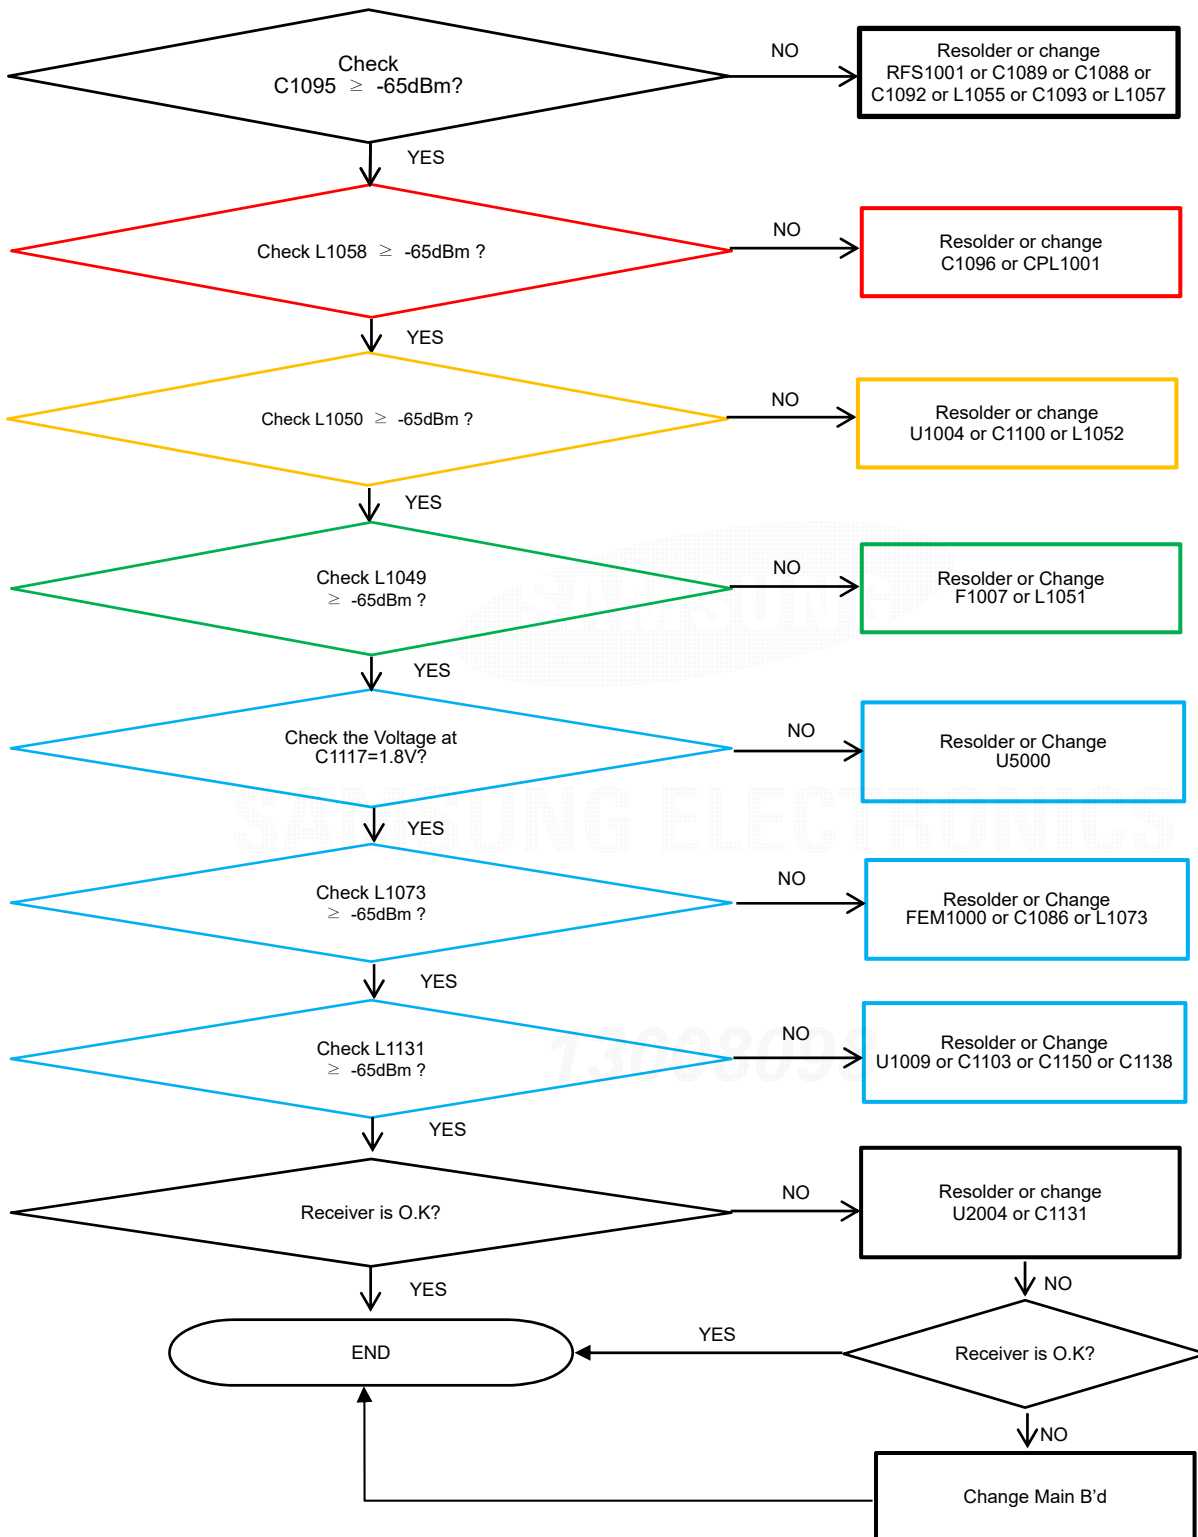


8. Level 3 Repair

8-4-25. LTE B40 Rx [SM-P205]

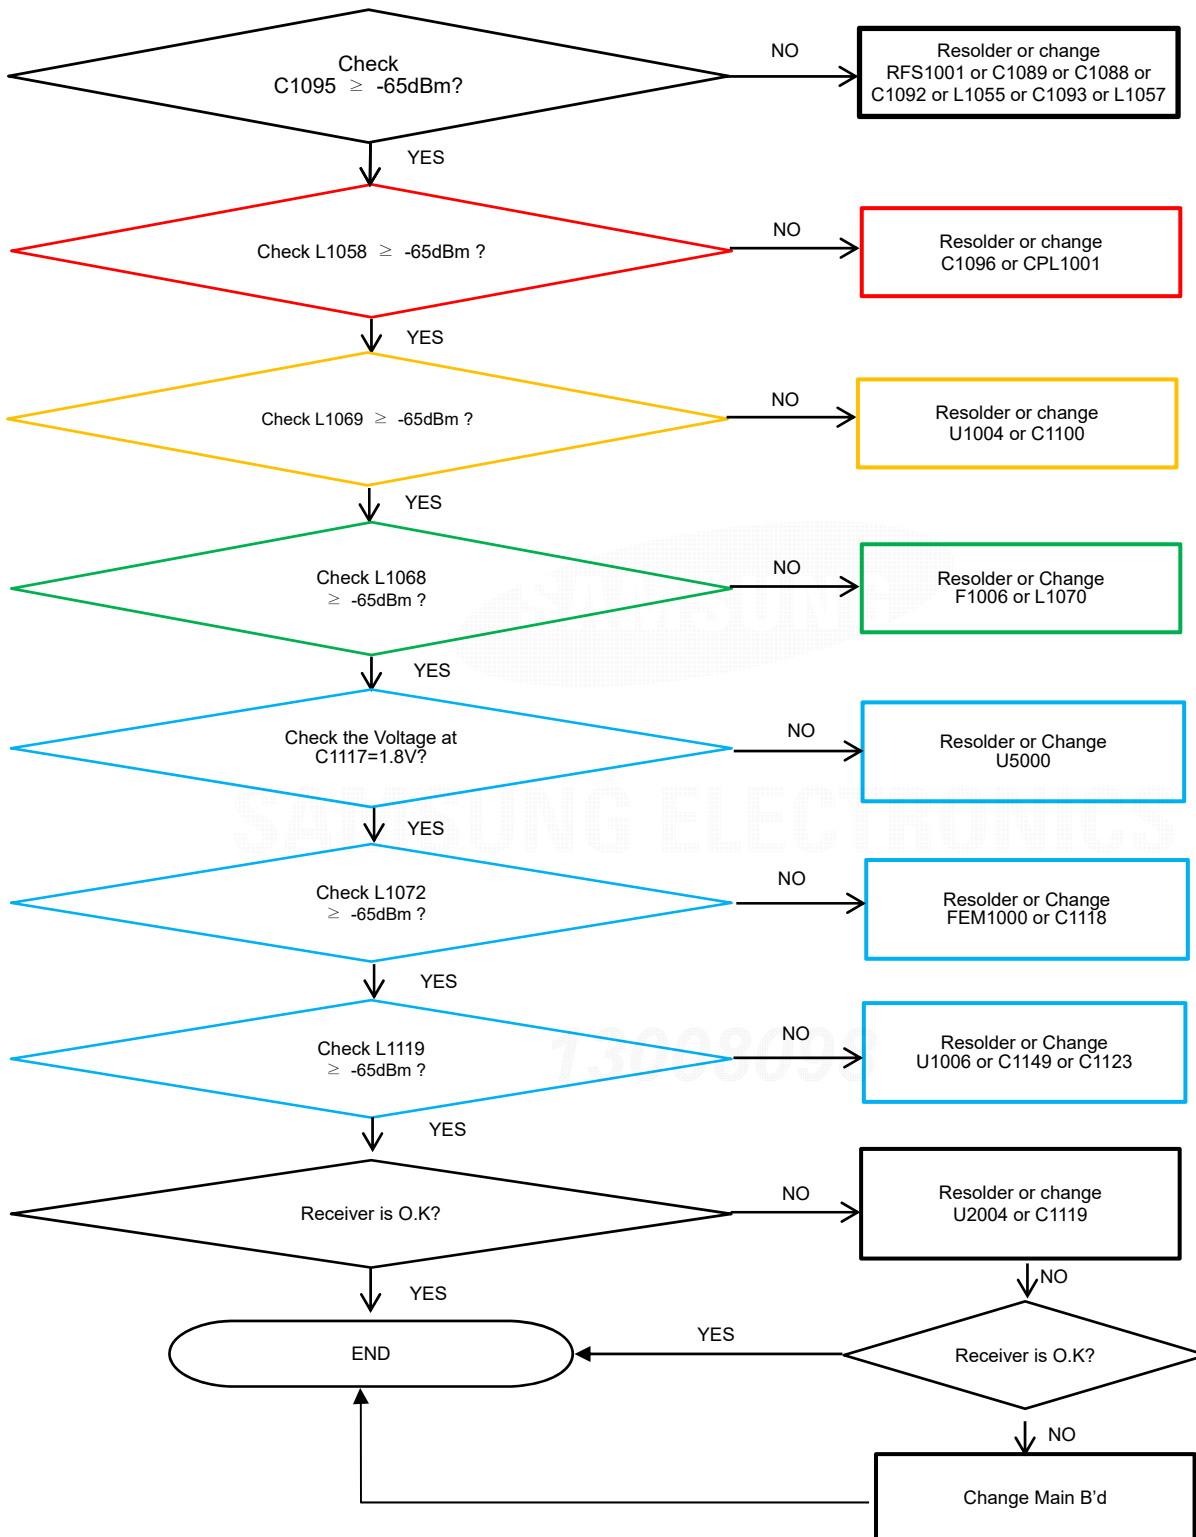


8. Level 3 Repair

8-4-26. GSM 850/900, WCDMA B5/8, LTE B5/8/12/17/20 Tx [SM-P205]

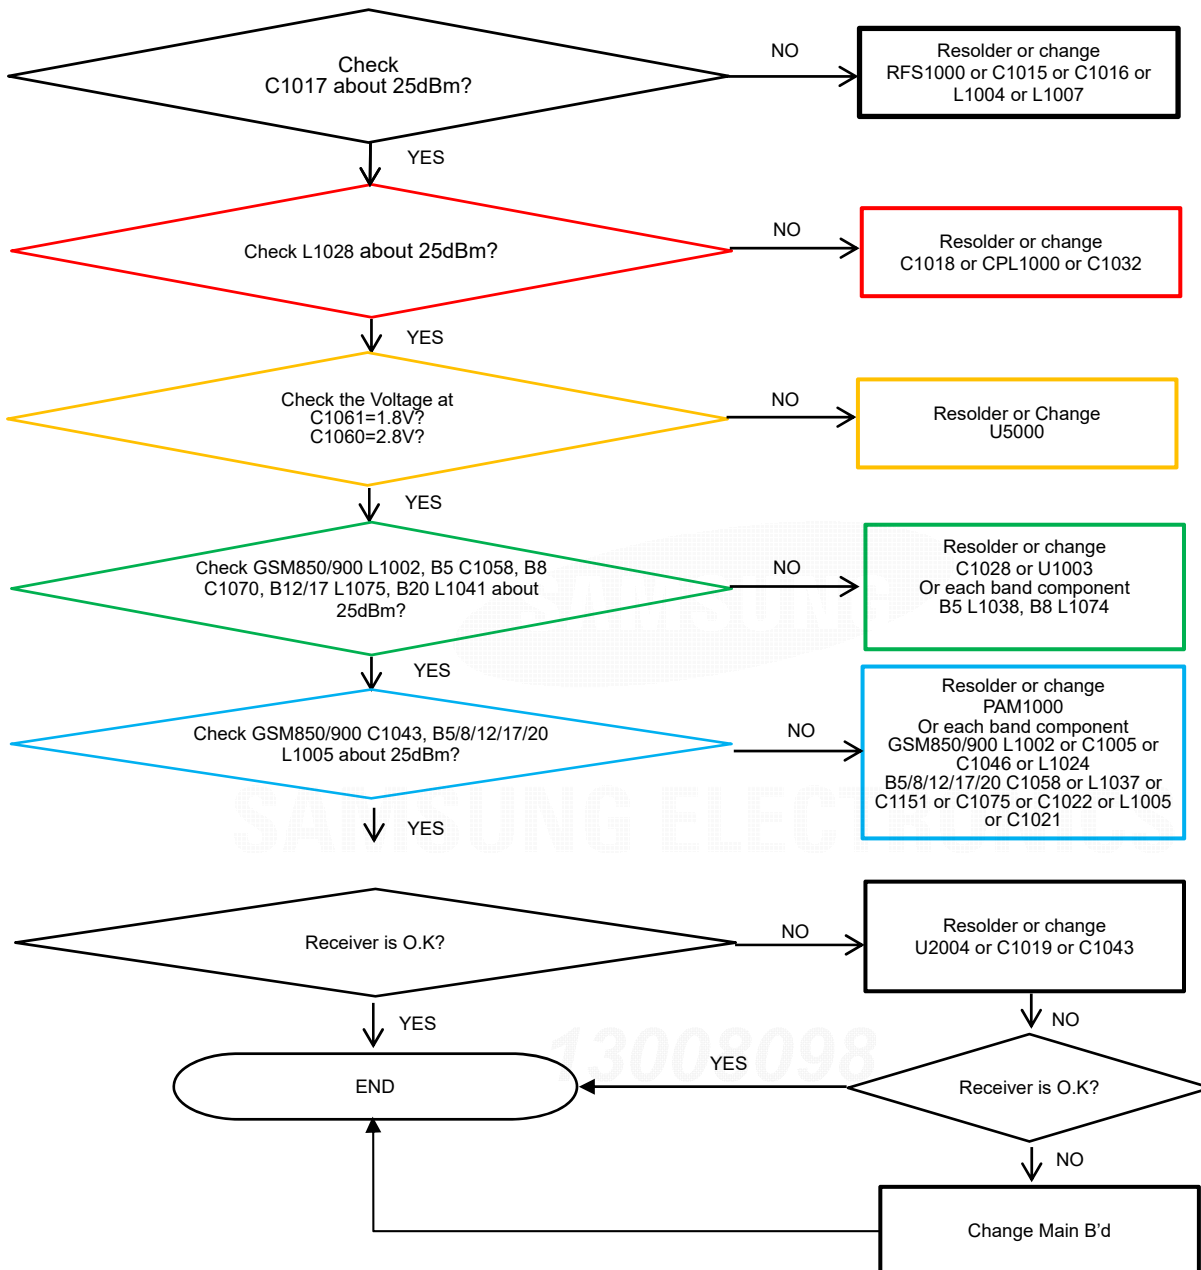


8. Level 3 Repair

8-4-27. LTE B28 Tx [SM-P205]

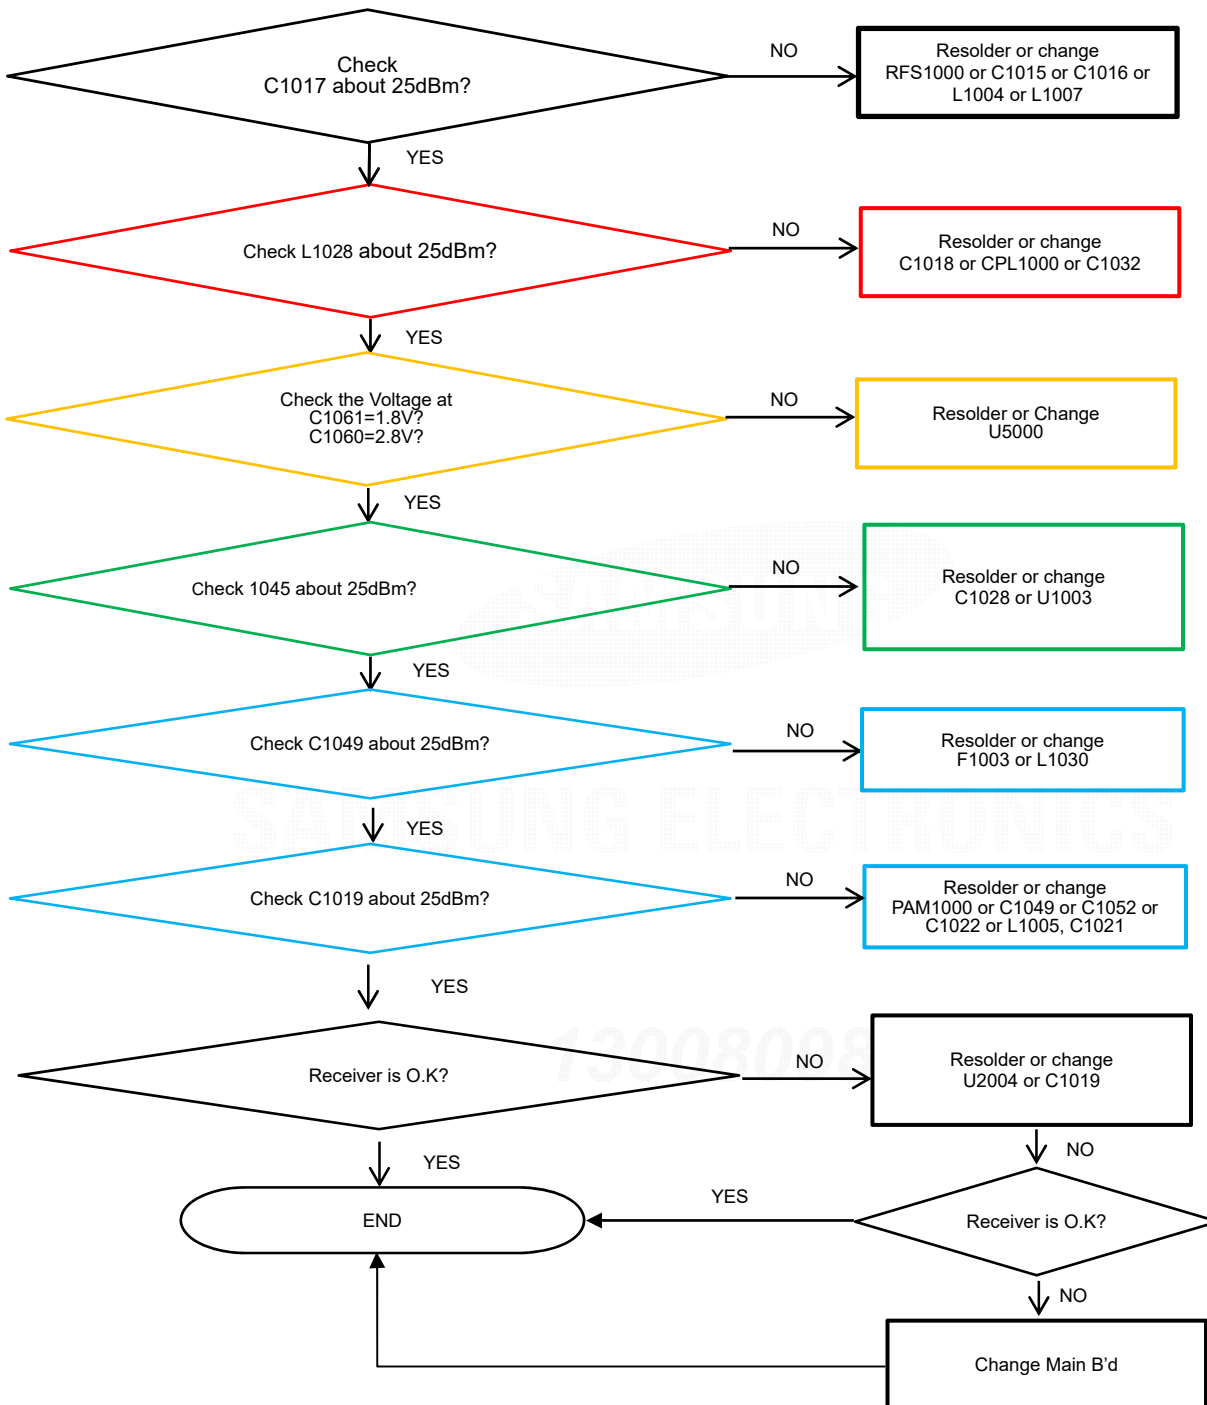


8. Level 3 Repair

8-4-28. LTE B7 Tx [SM-P205]

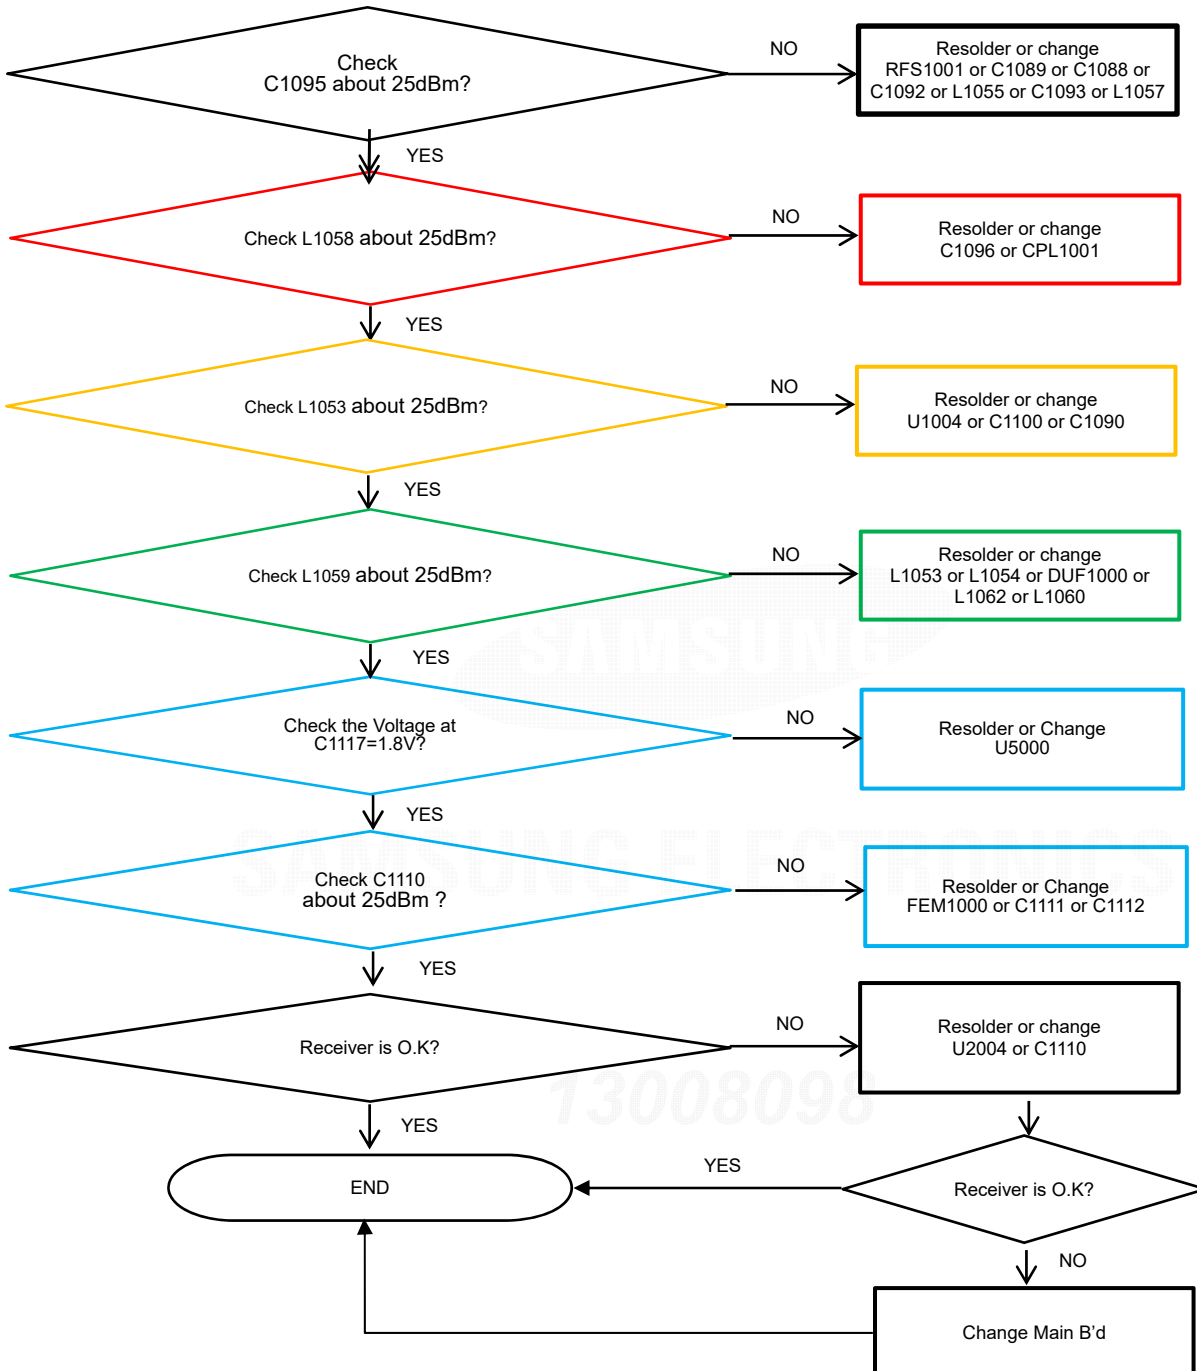


8. Level 3 Repair

8-4-29. LTE B38/40 Tx [SM-P205]

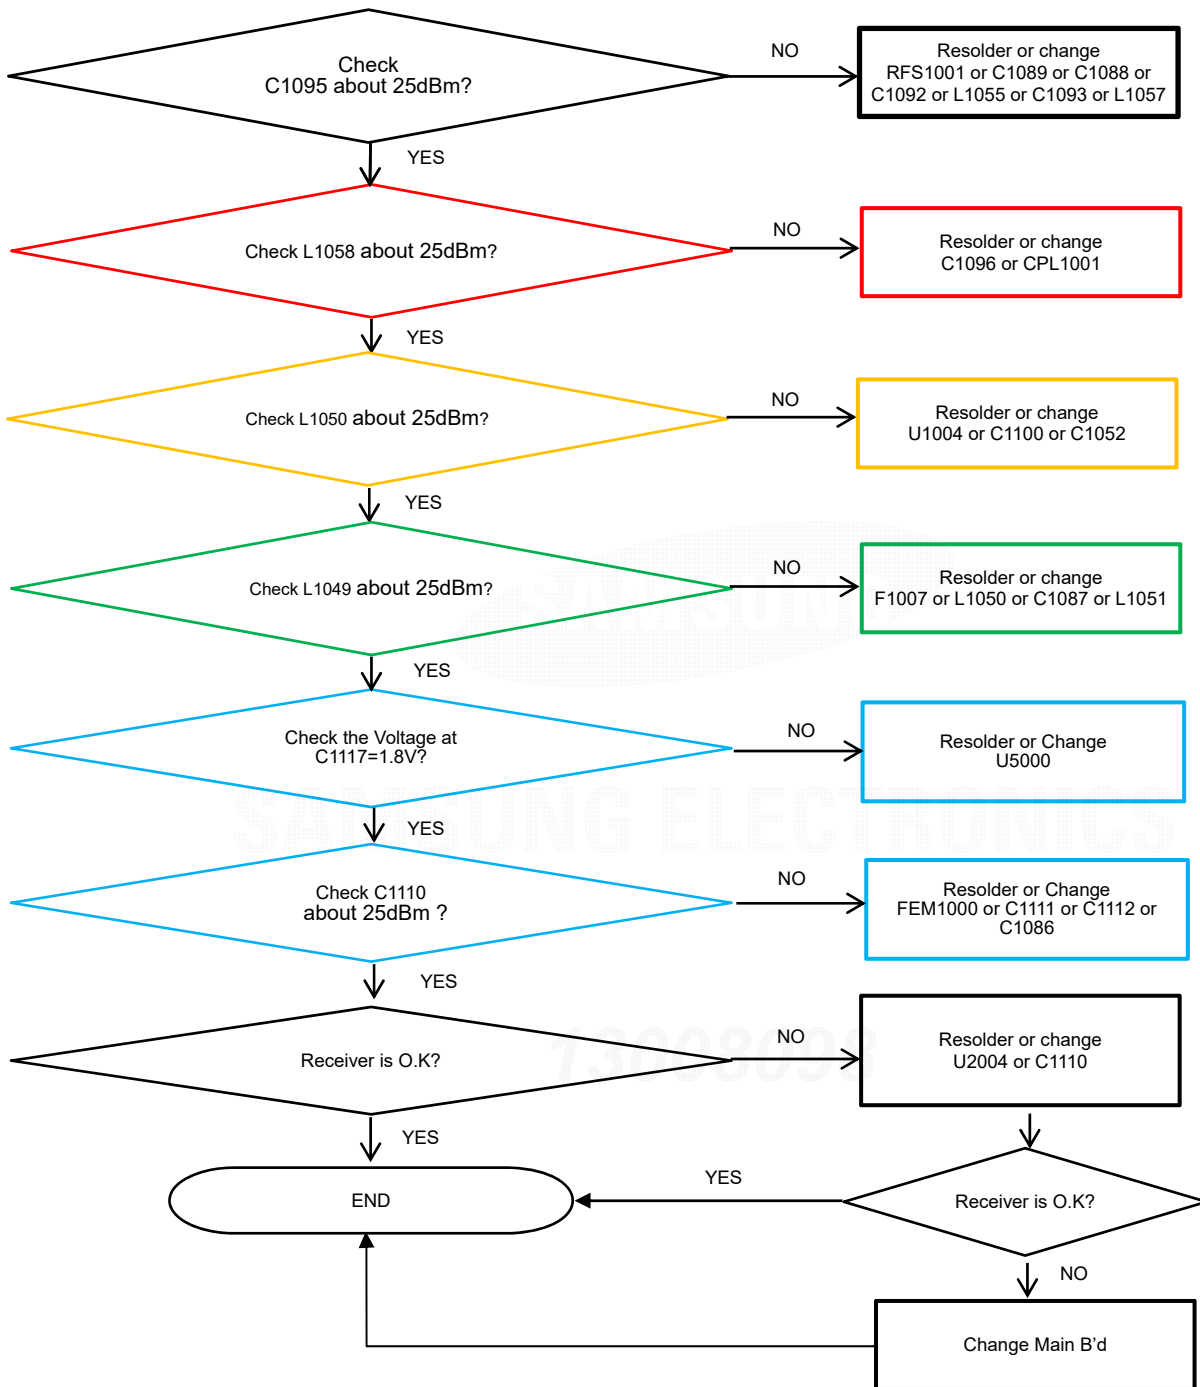

8. Level 3 Repair

8-4-30. LTE B41 Tx [SM-P205]

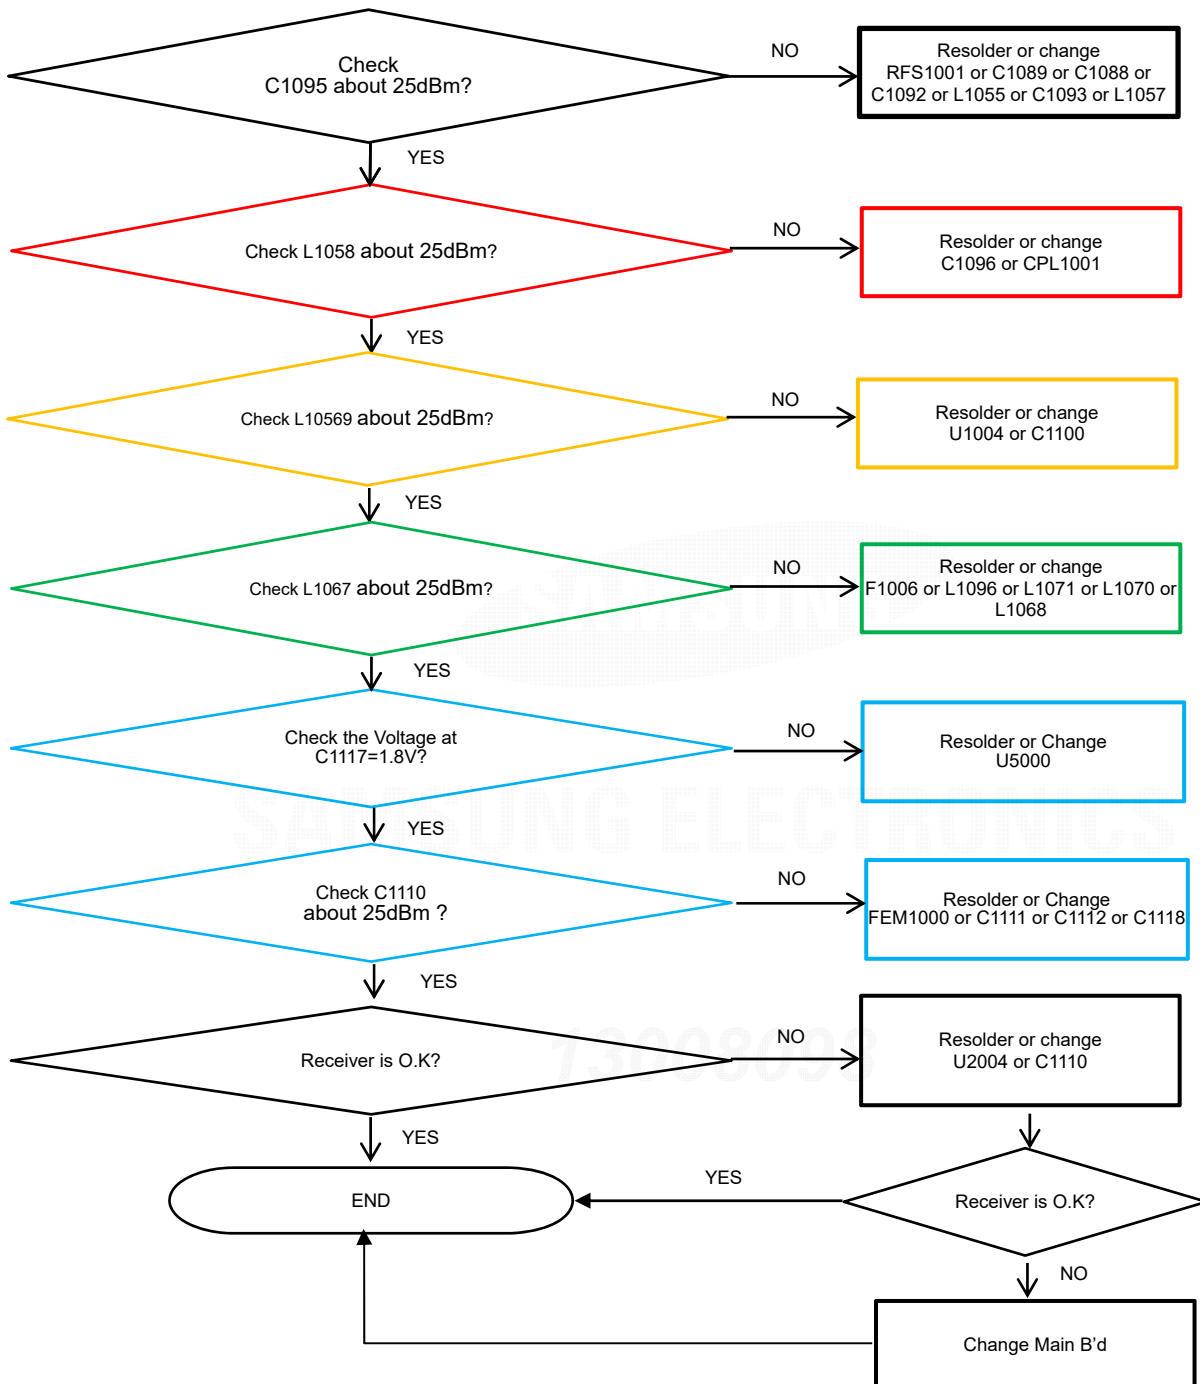

8-5. Service Schematics

- NC Point(Top View)

