




3. 故障排除流程图和电路图

3-1. 基带



3-1-1. 通电

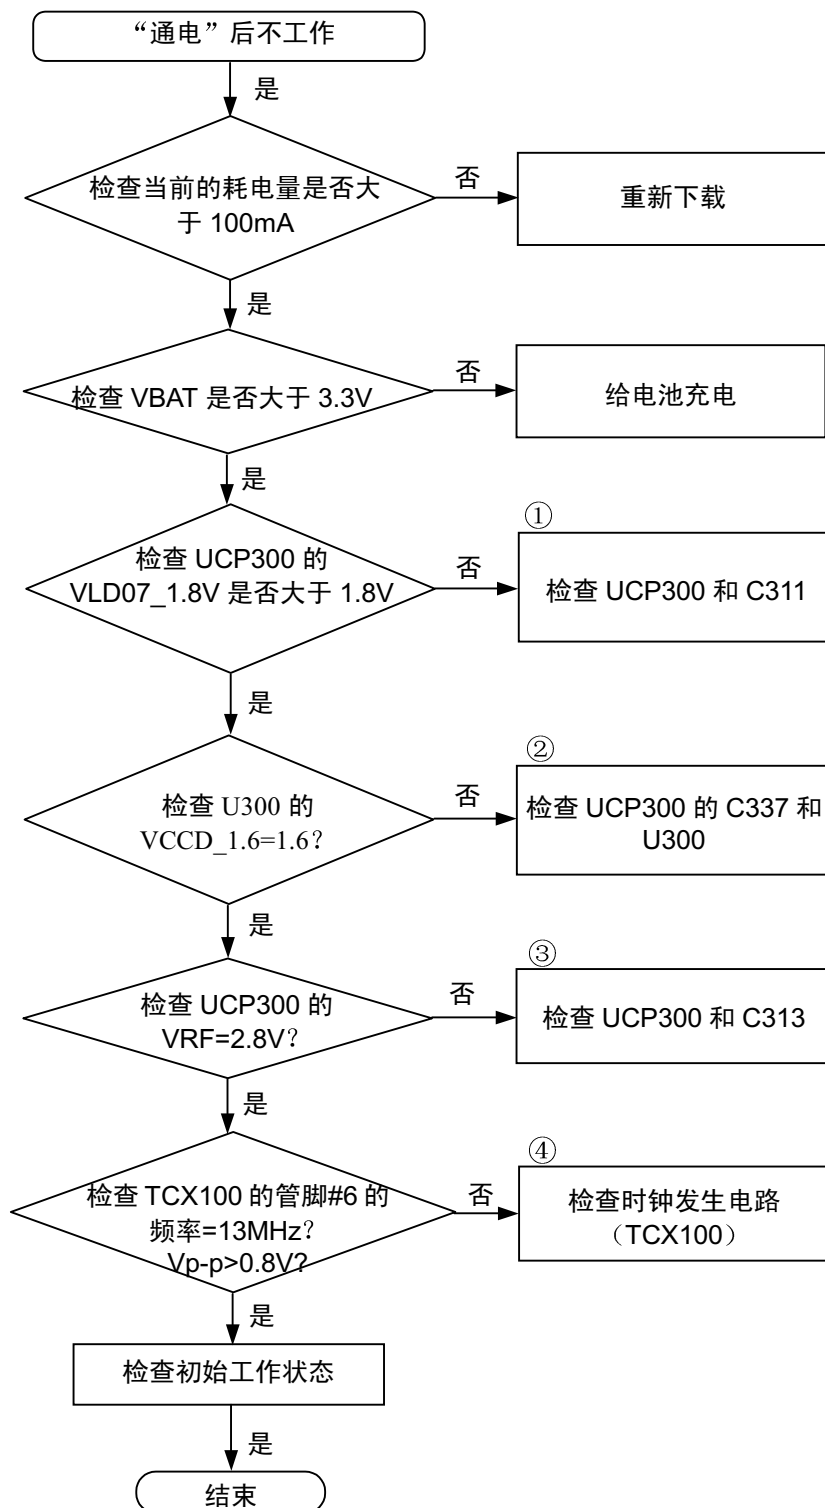





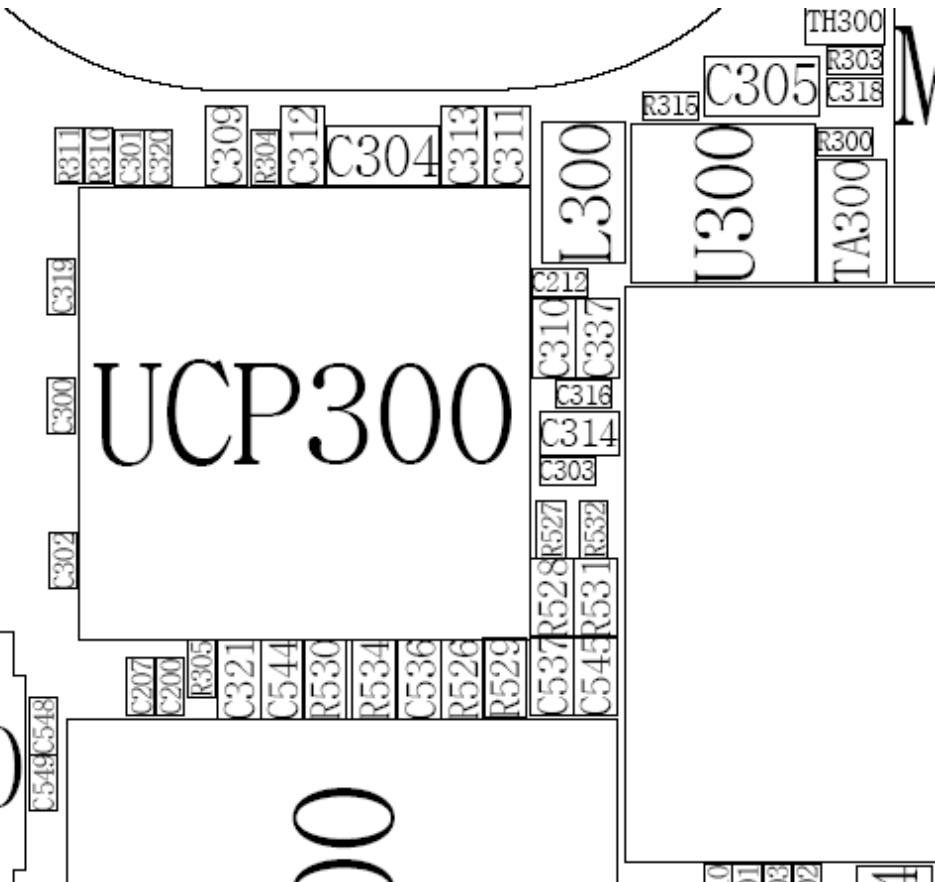




3-1-2. 初始化

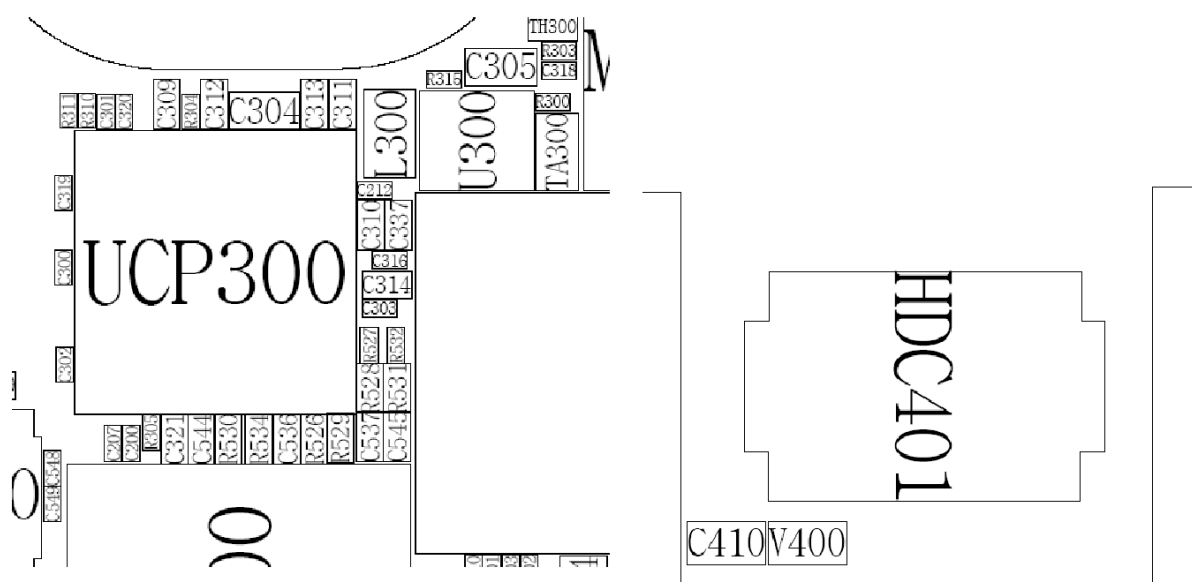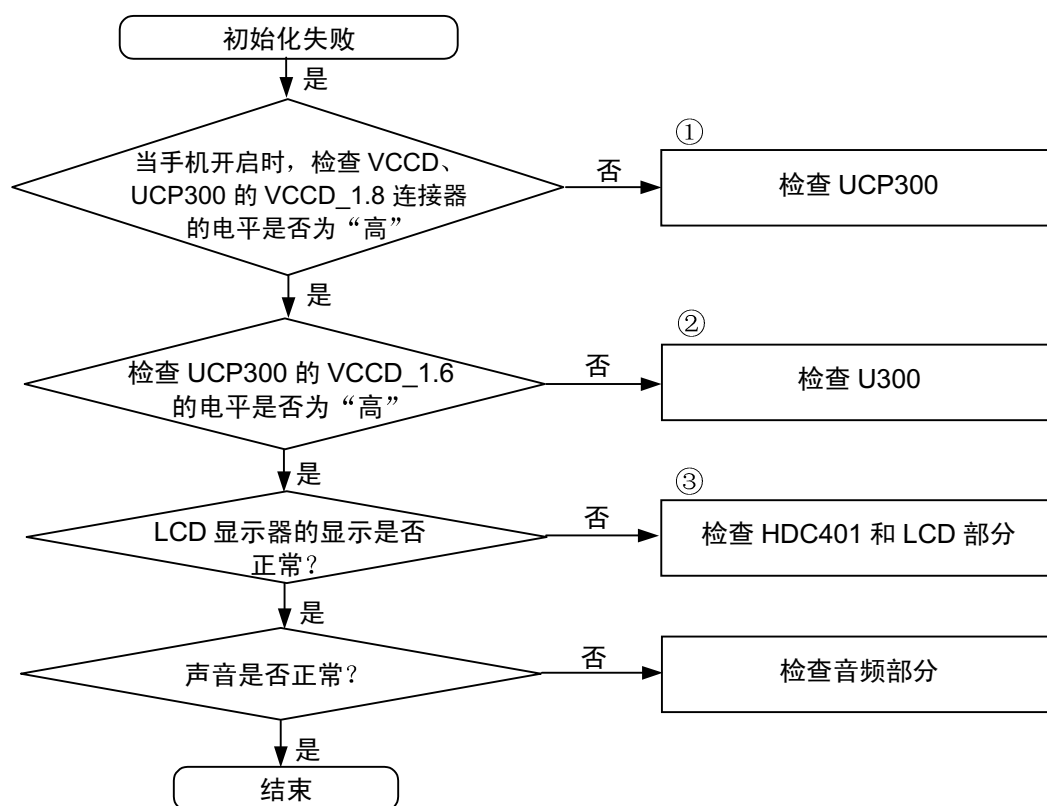

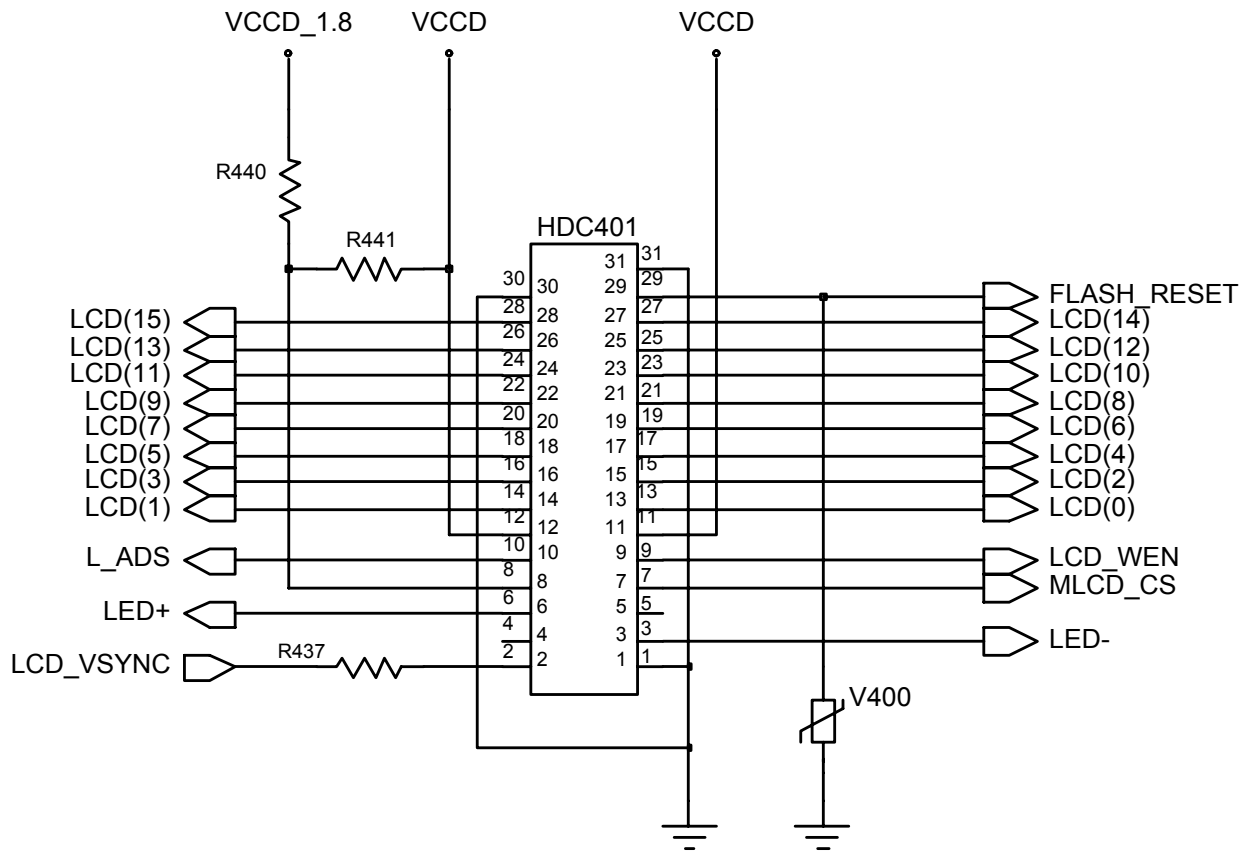



3-1-3. SIM 卡部分


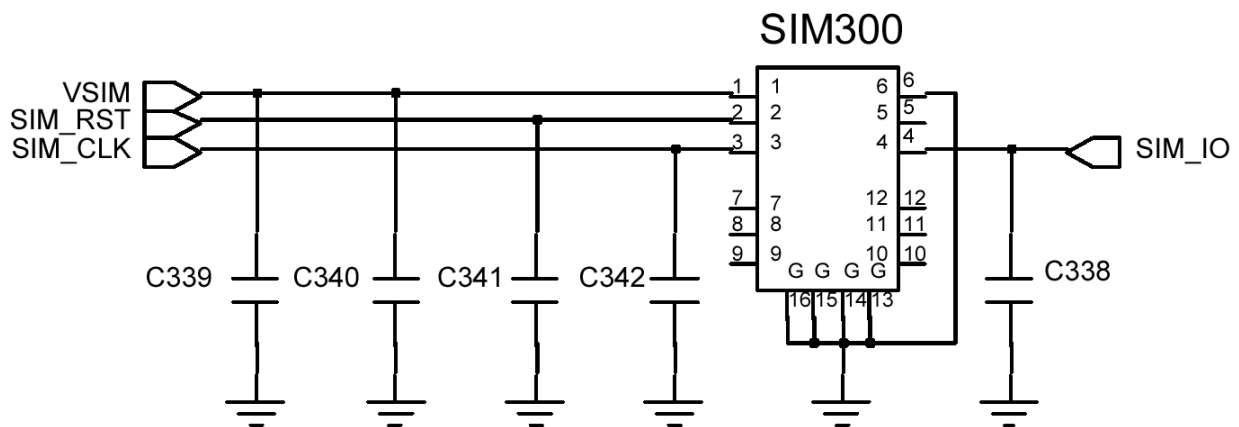
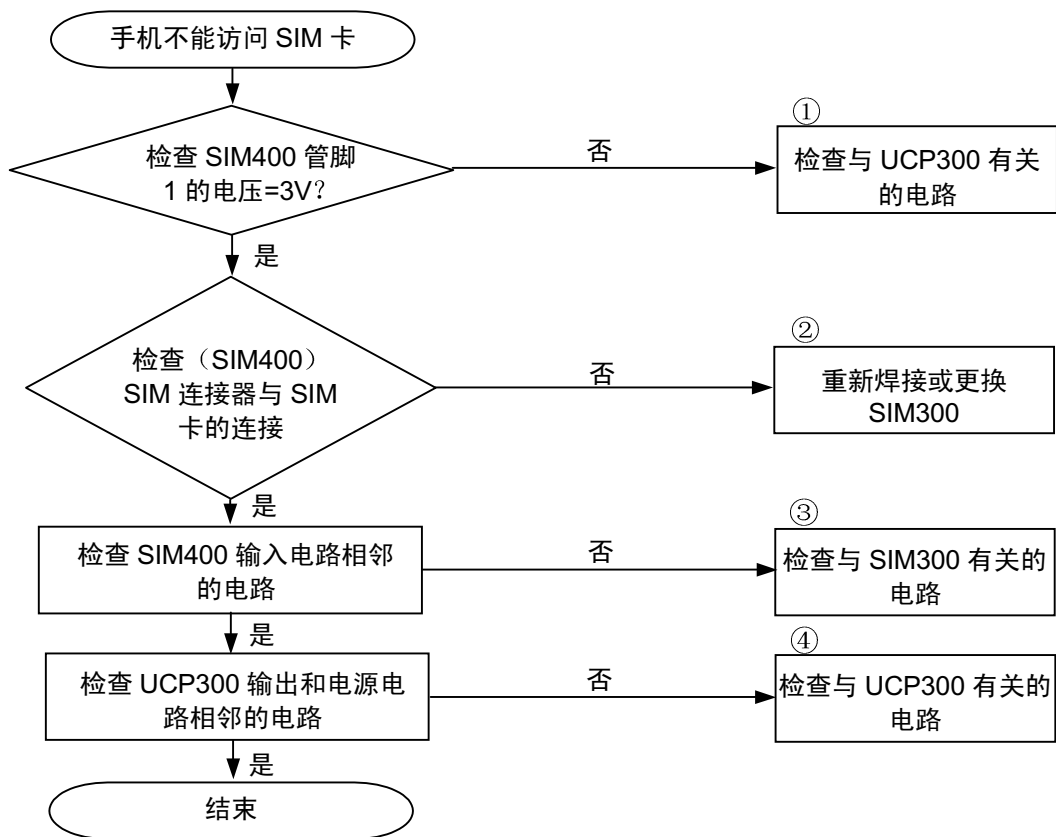


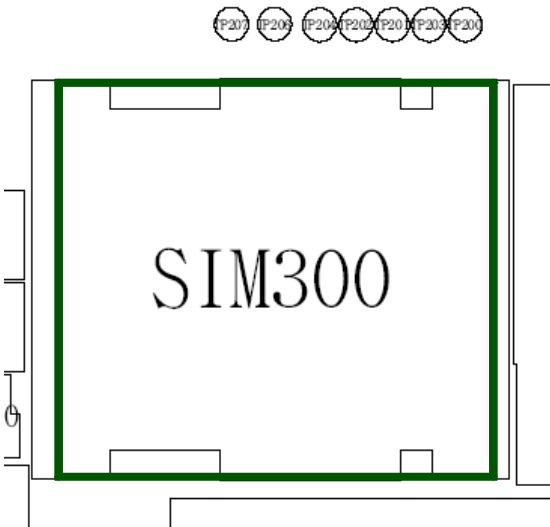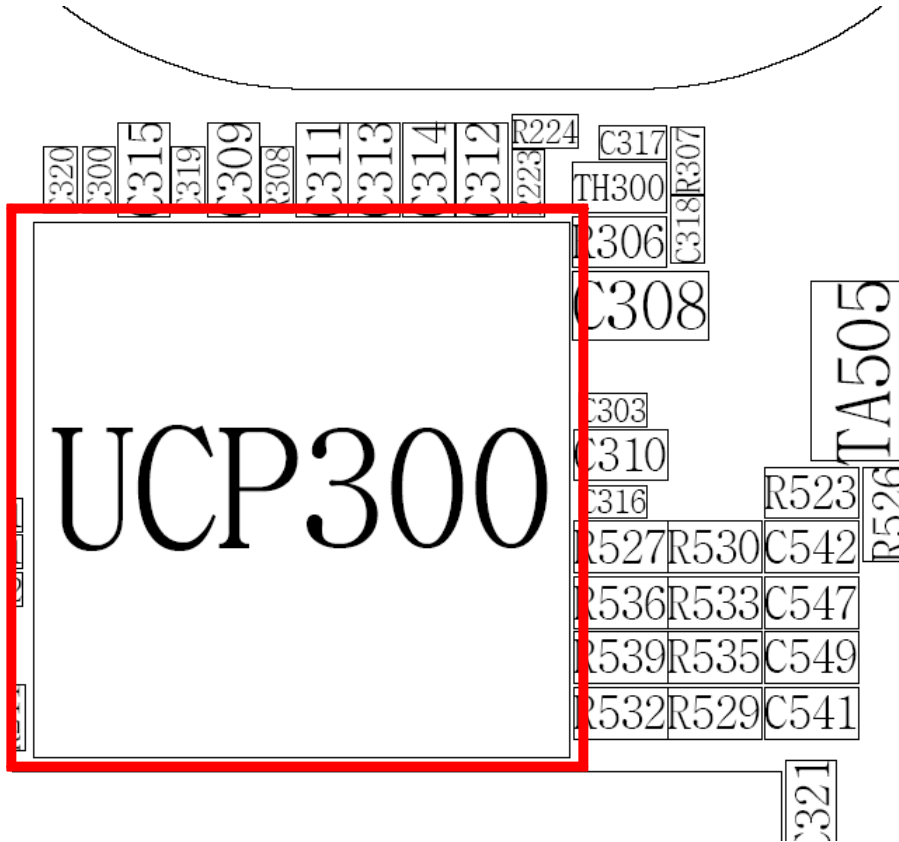



3-1-4. 充电部分

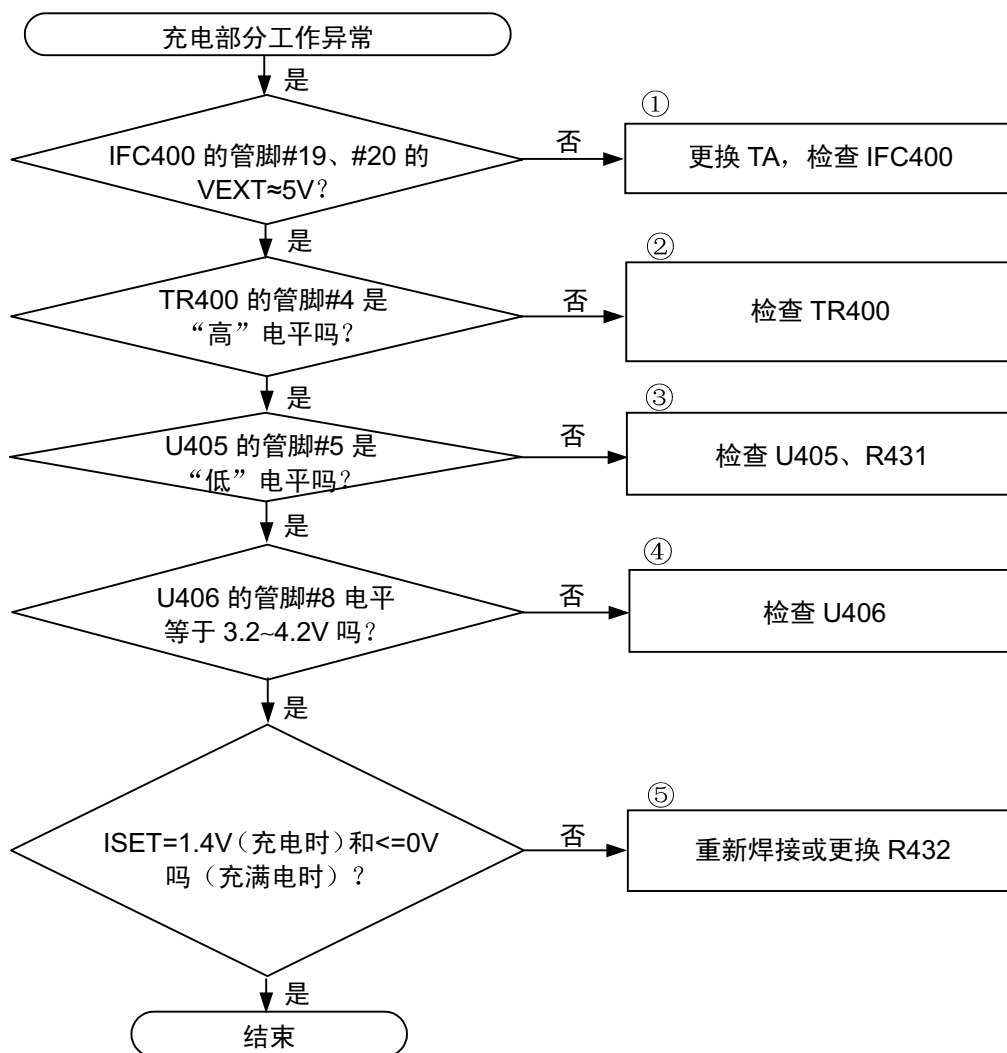


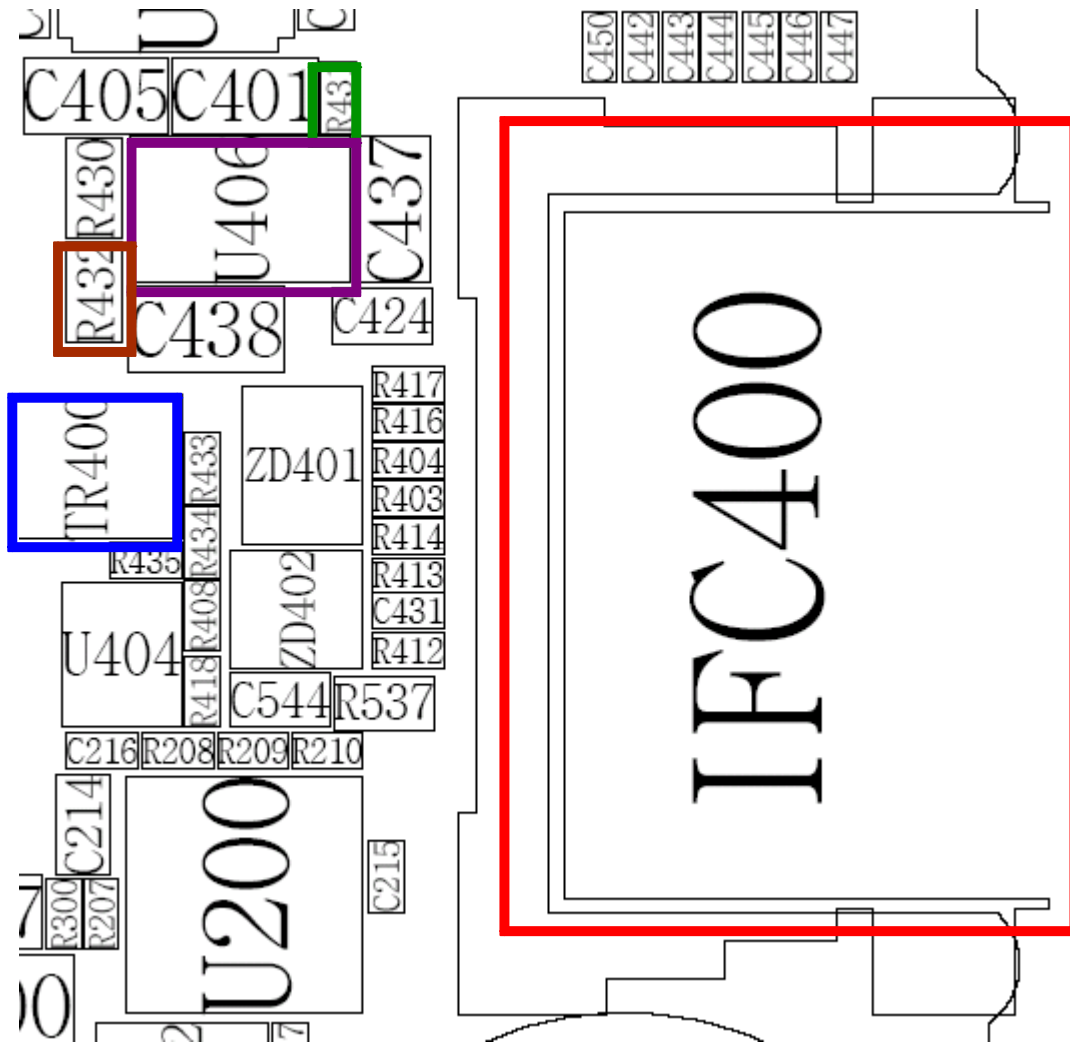

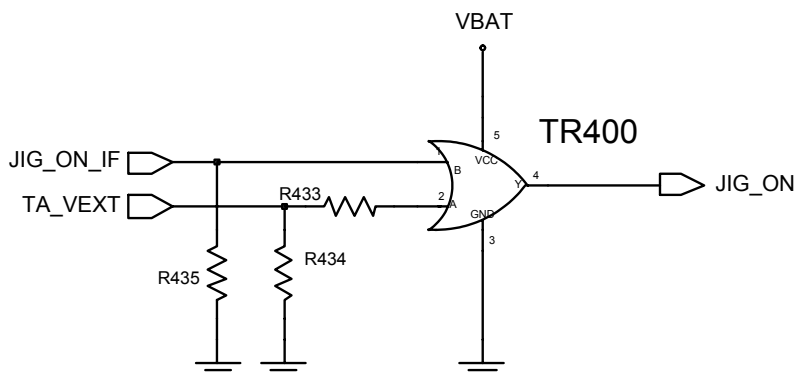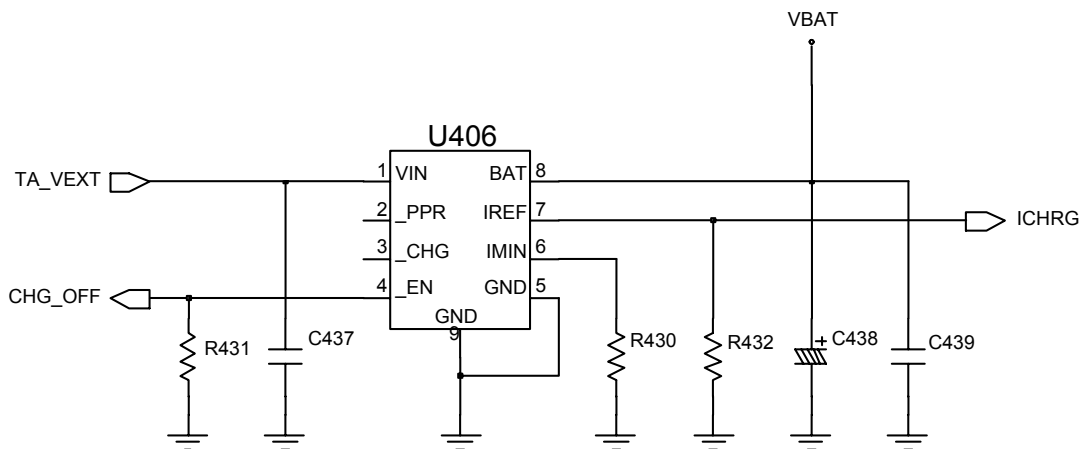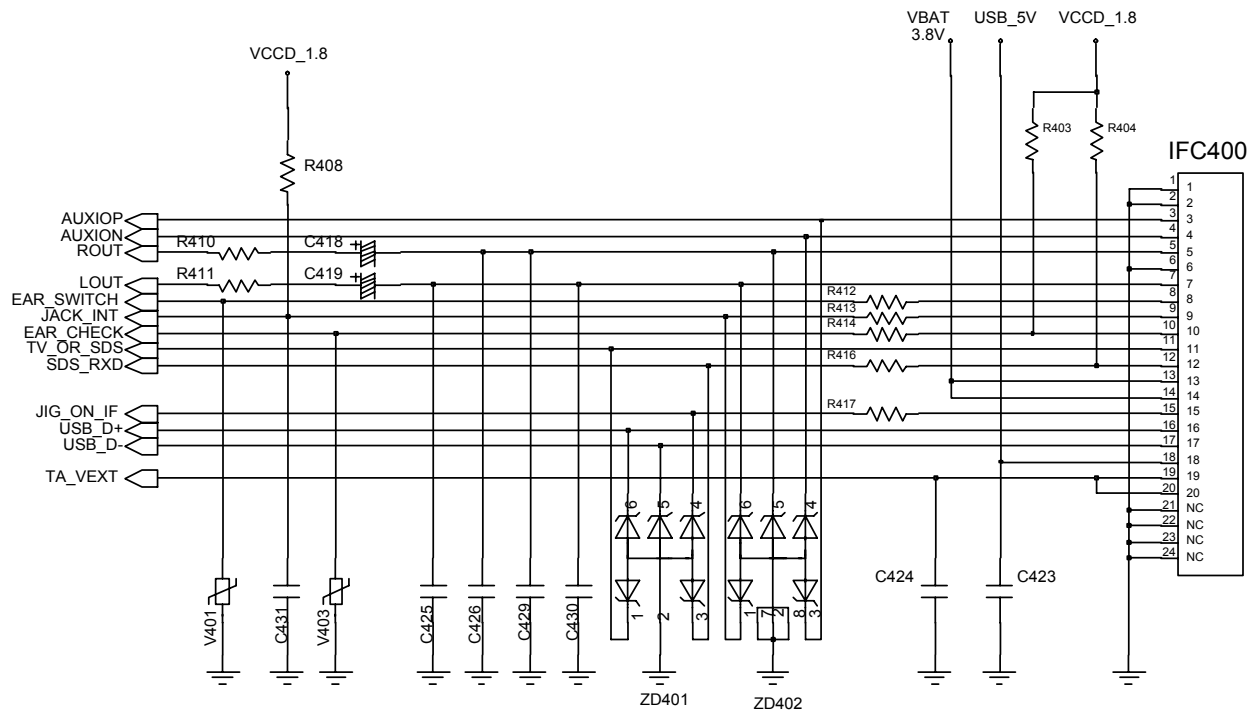



3-1-5 麦克风部分

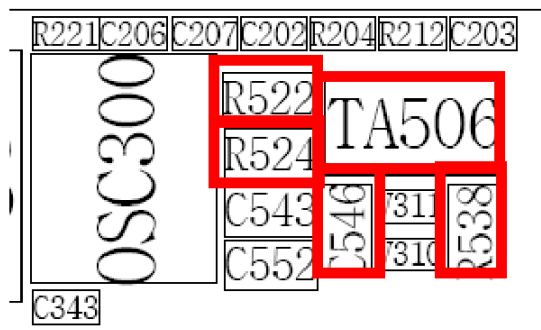
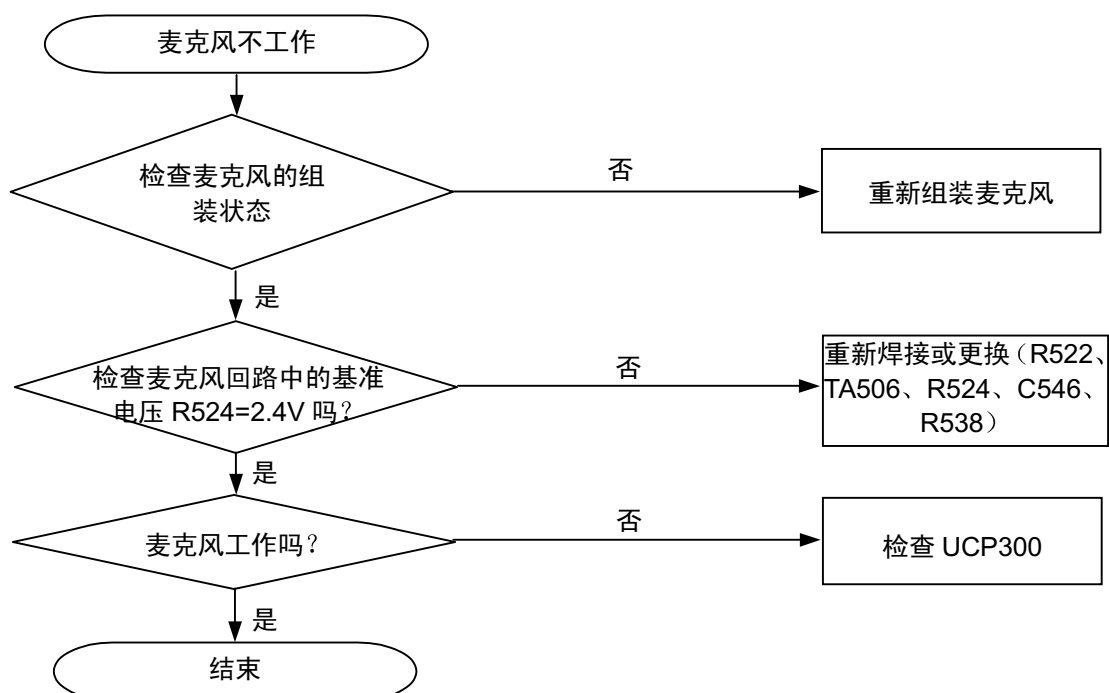


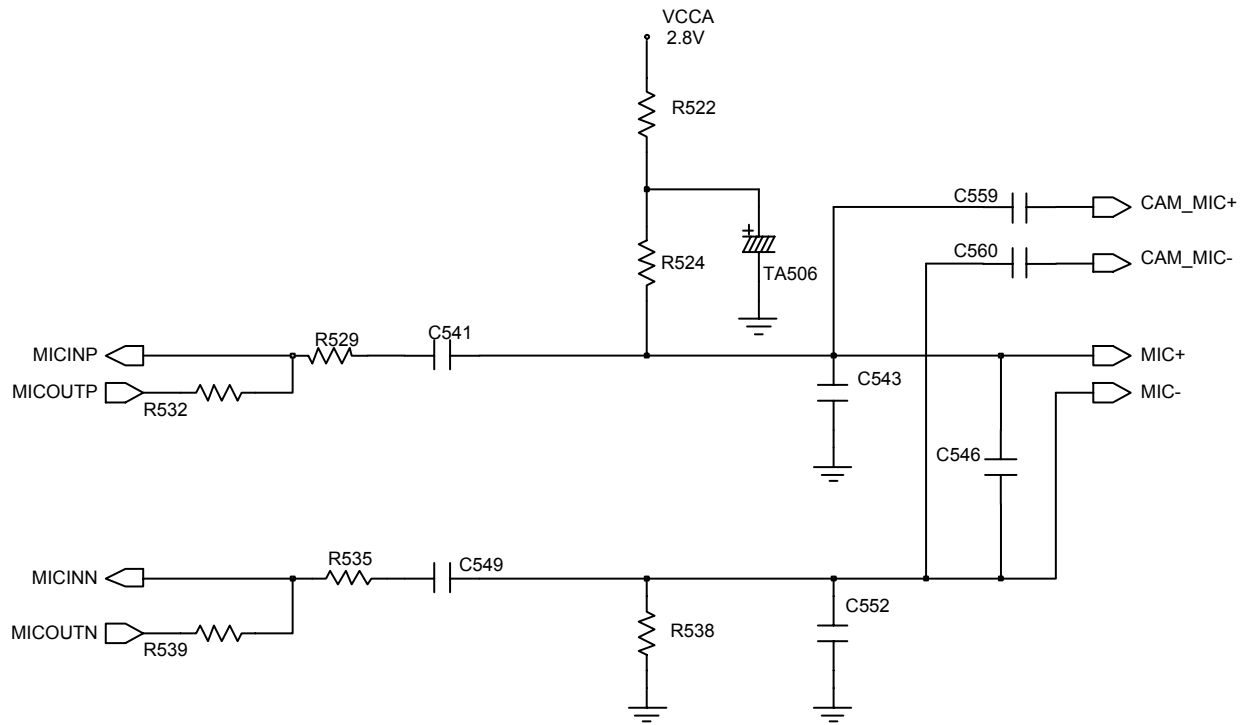



3-1-6 扬声器部分

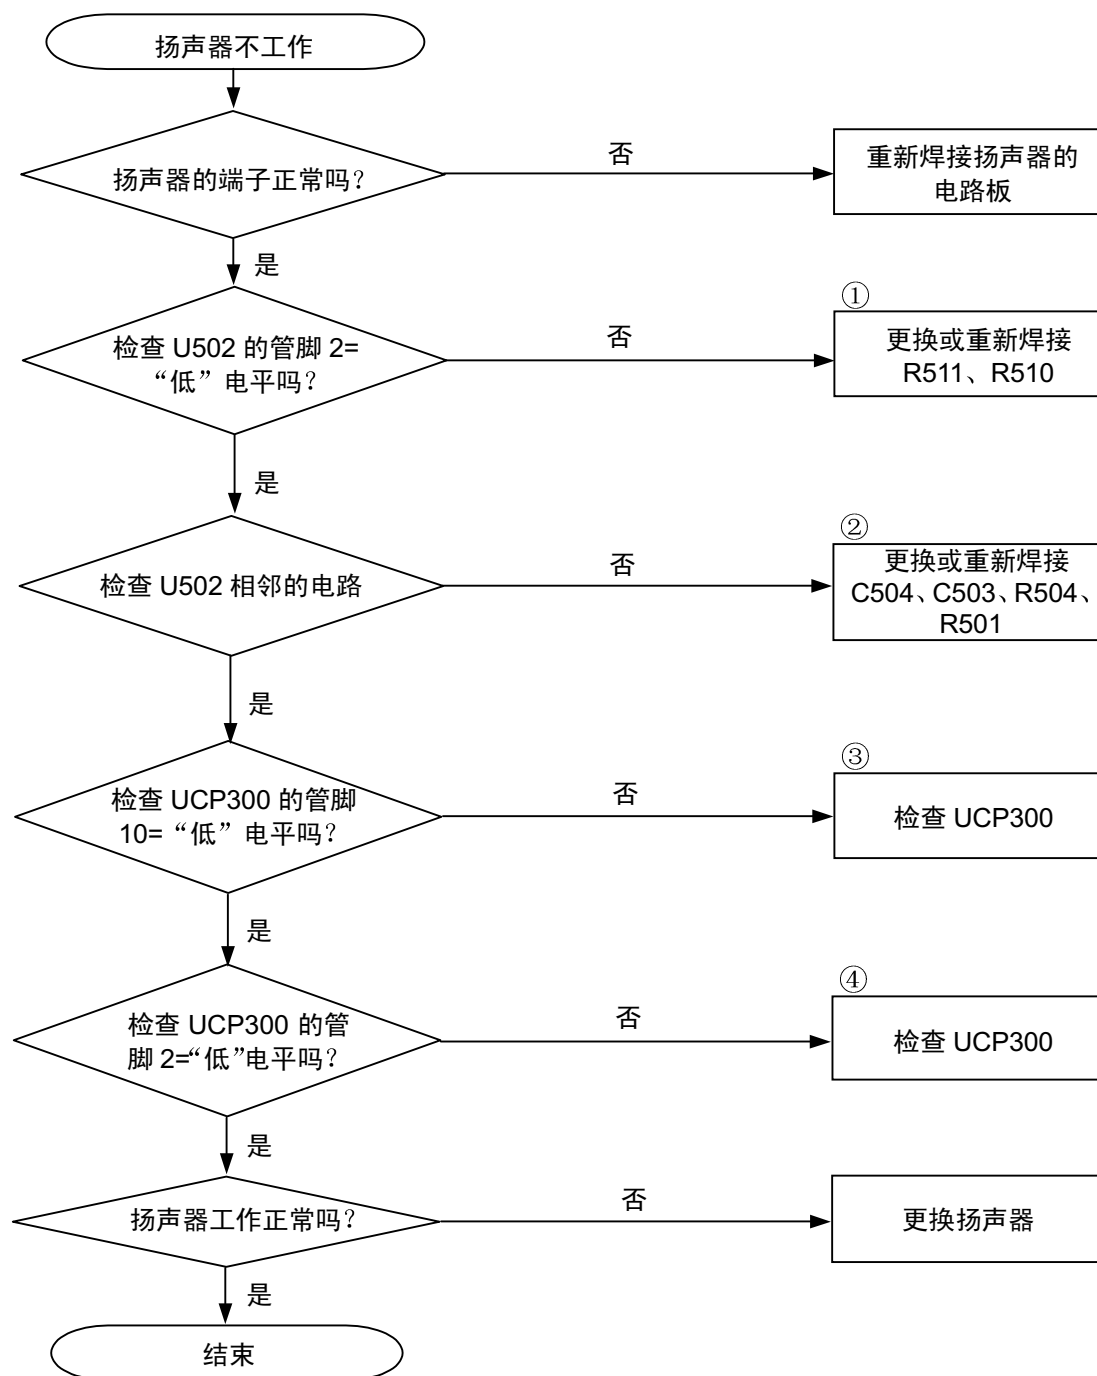


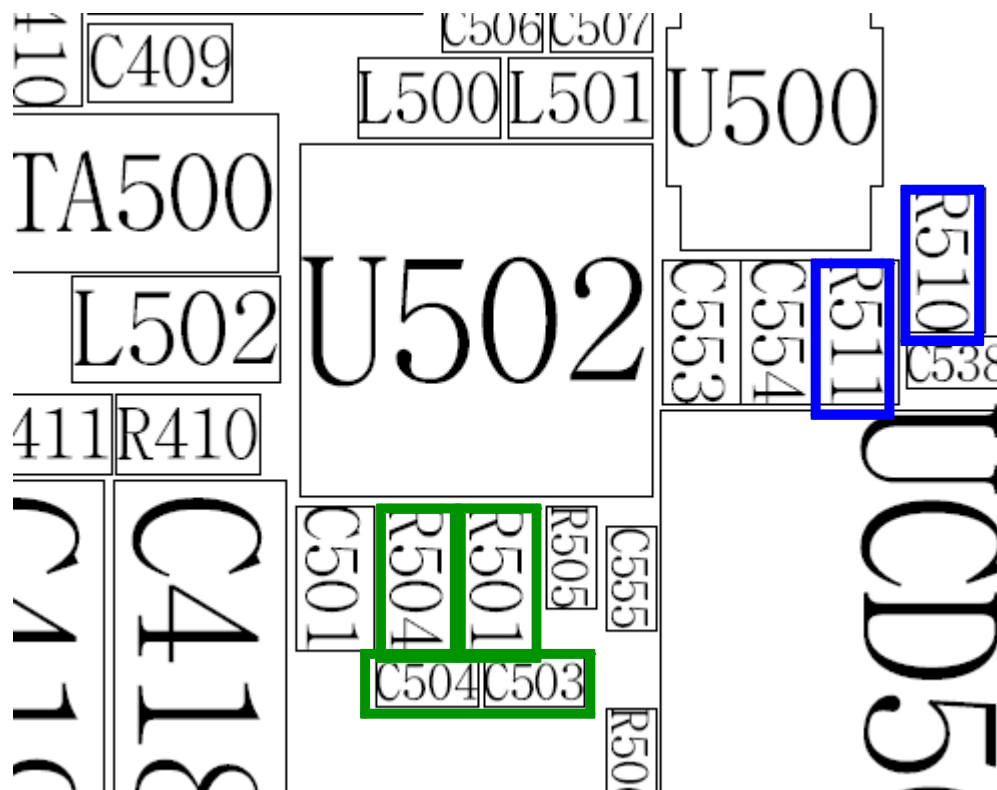

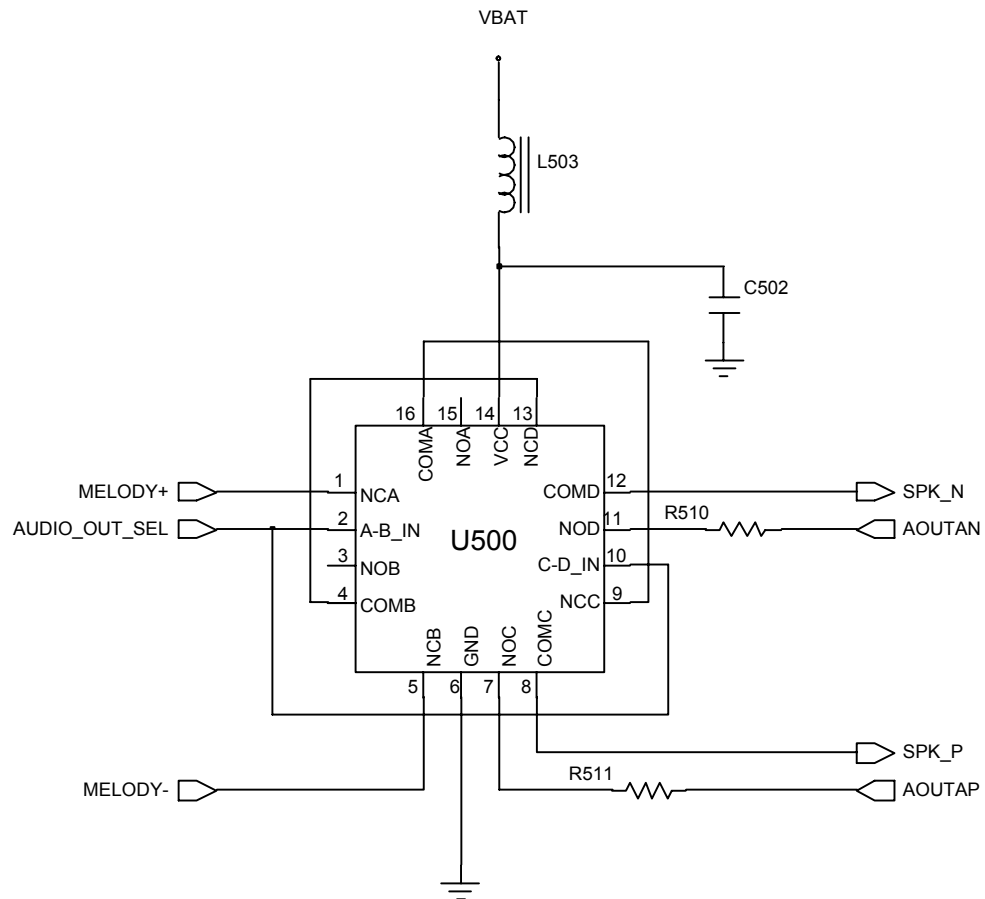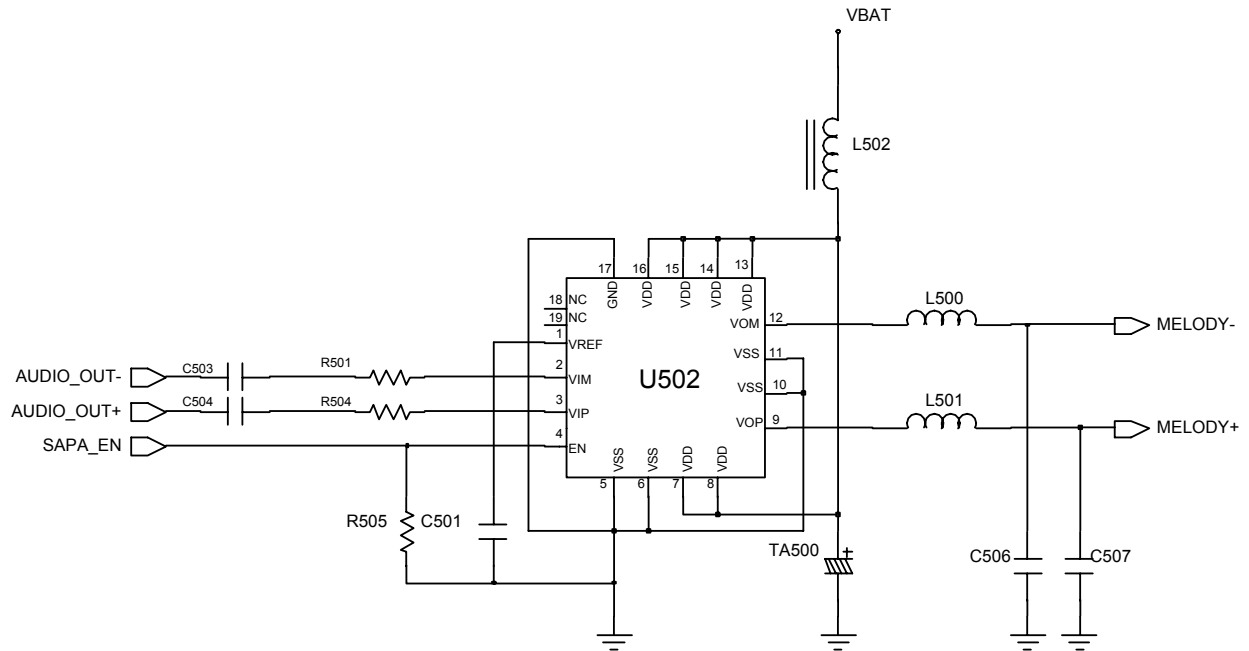



3-1-7 LCD

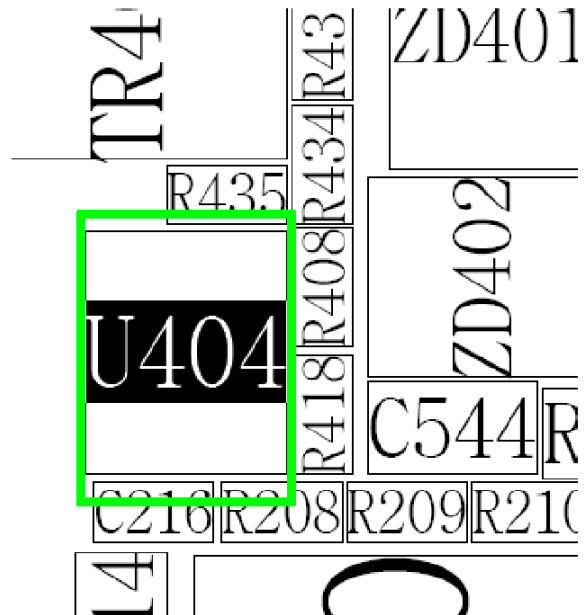
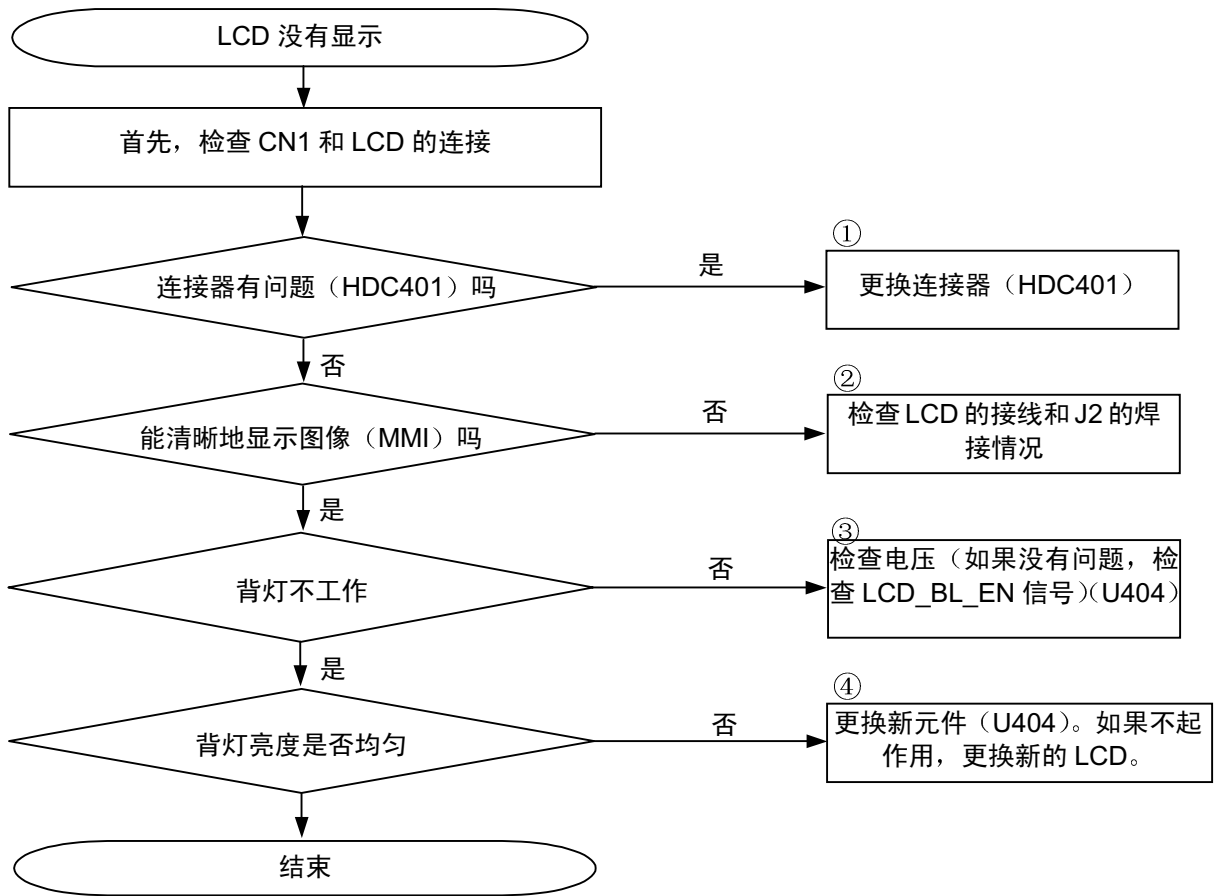


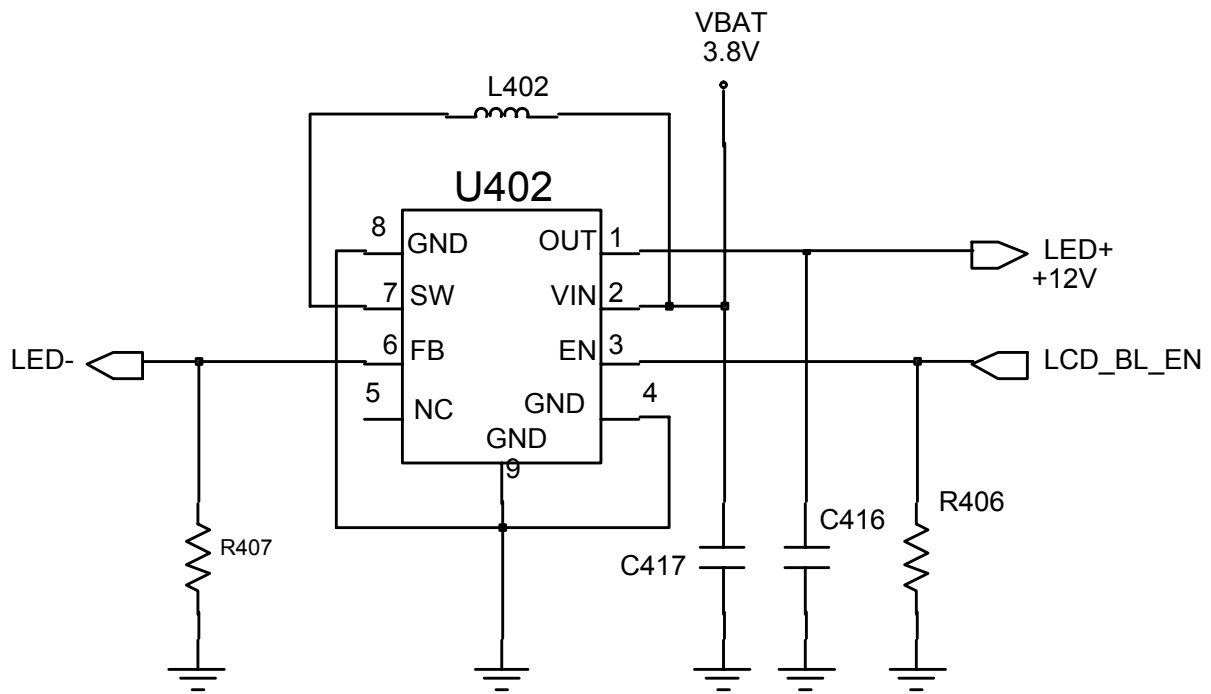

3-1-8. 照相机

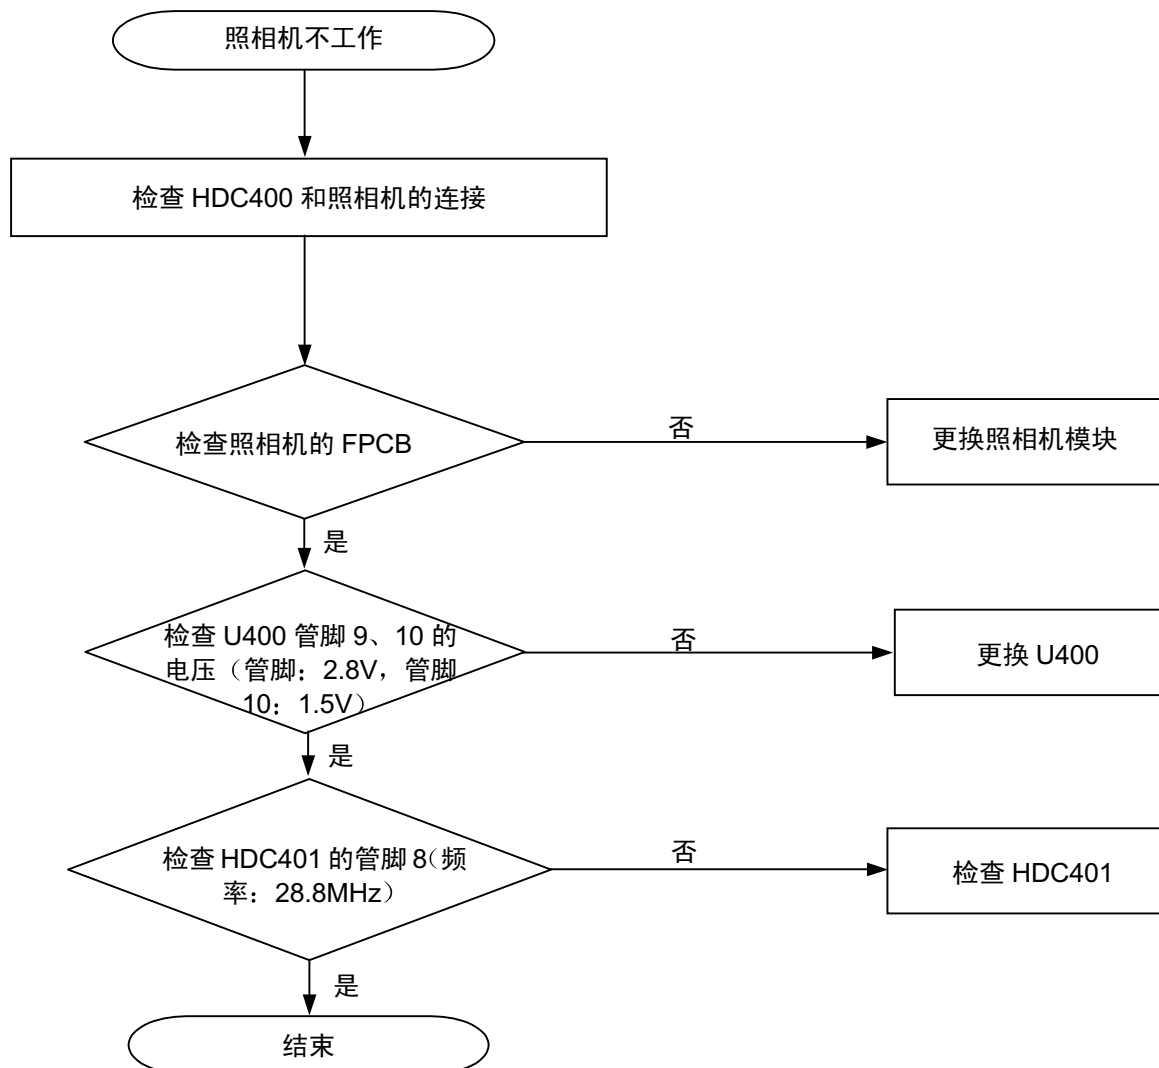


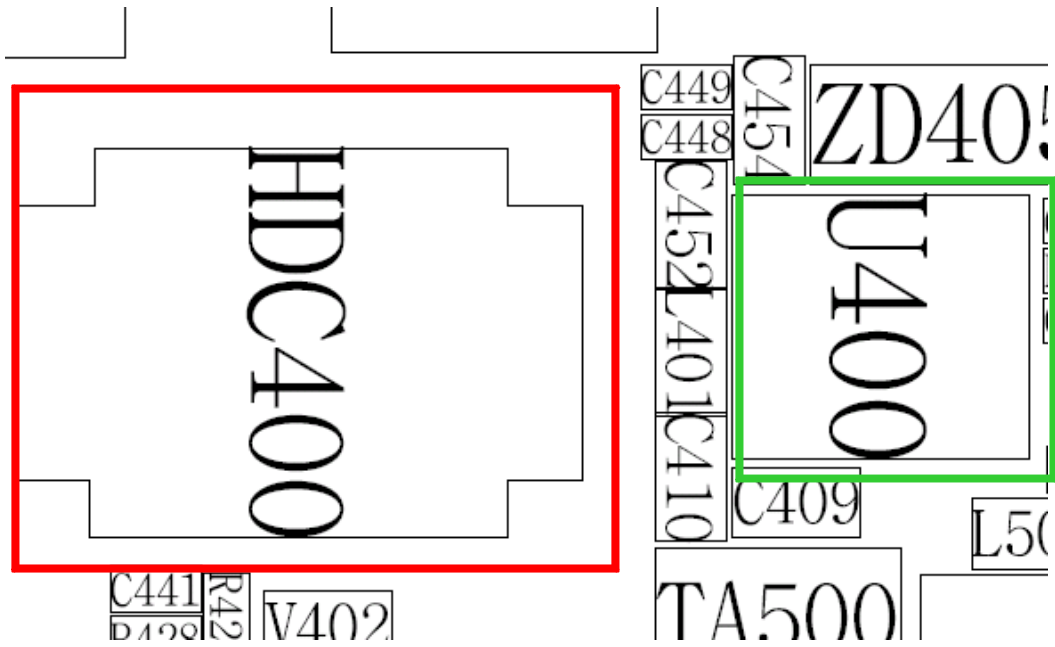

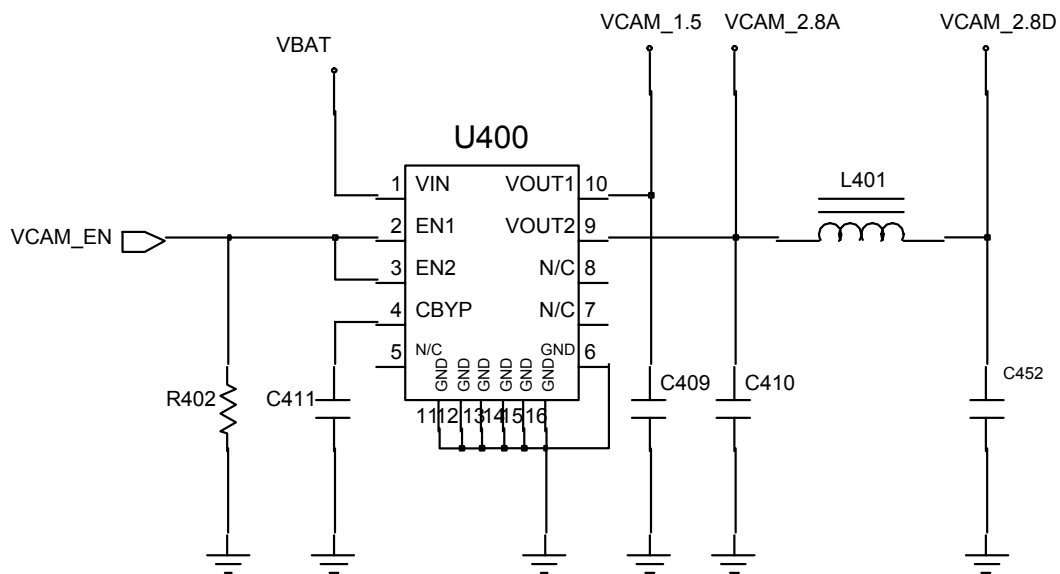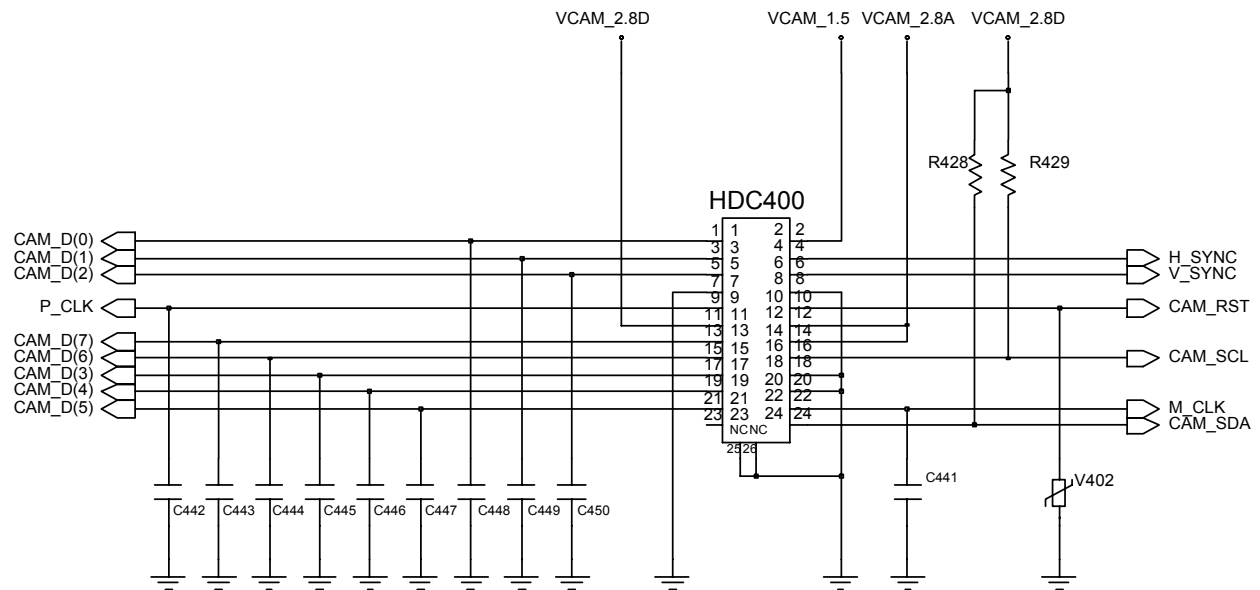


3-2 RF


3-2-1 GSM 接收器

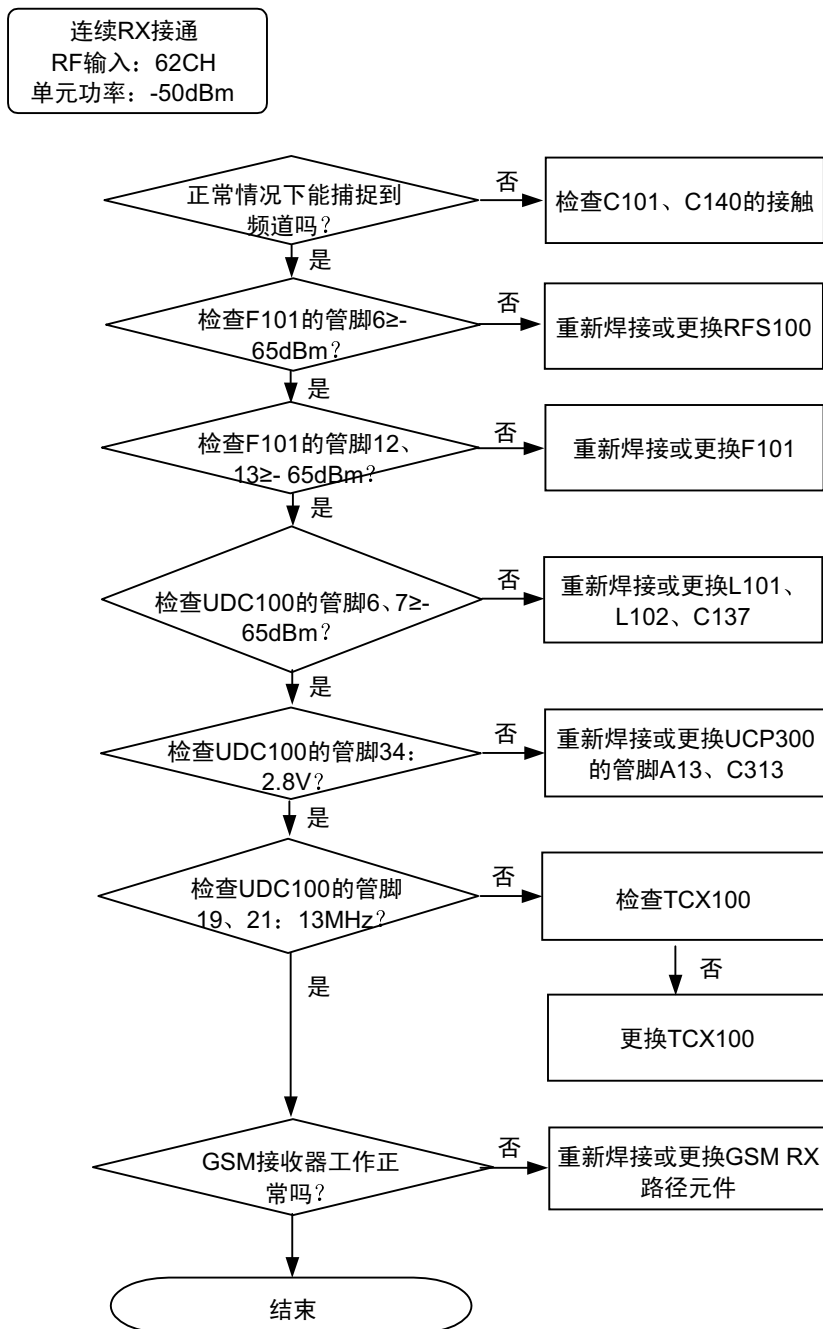


3-2-2 DCS 接收器

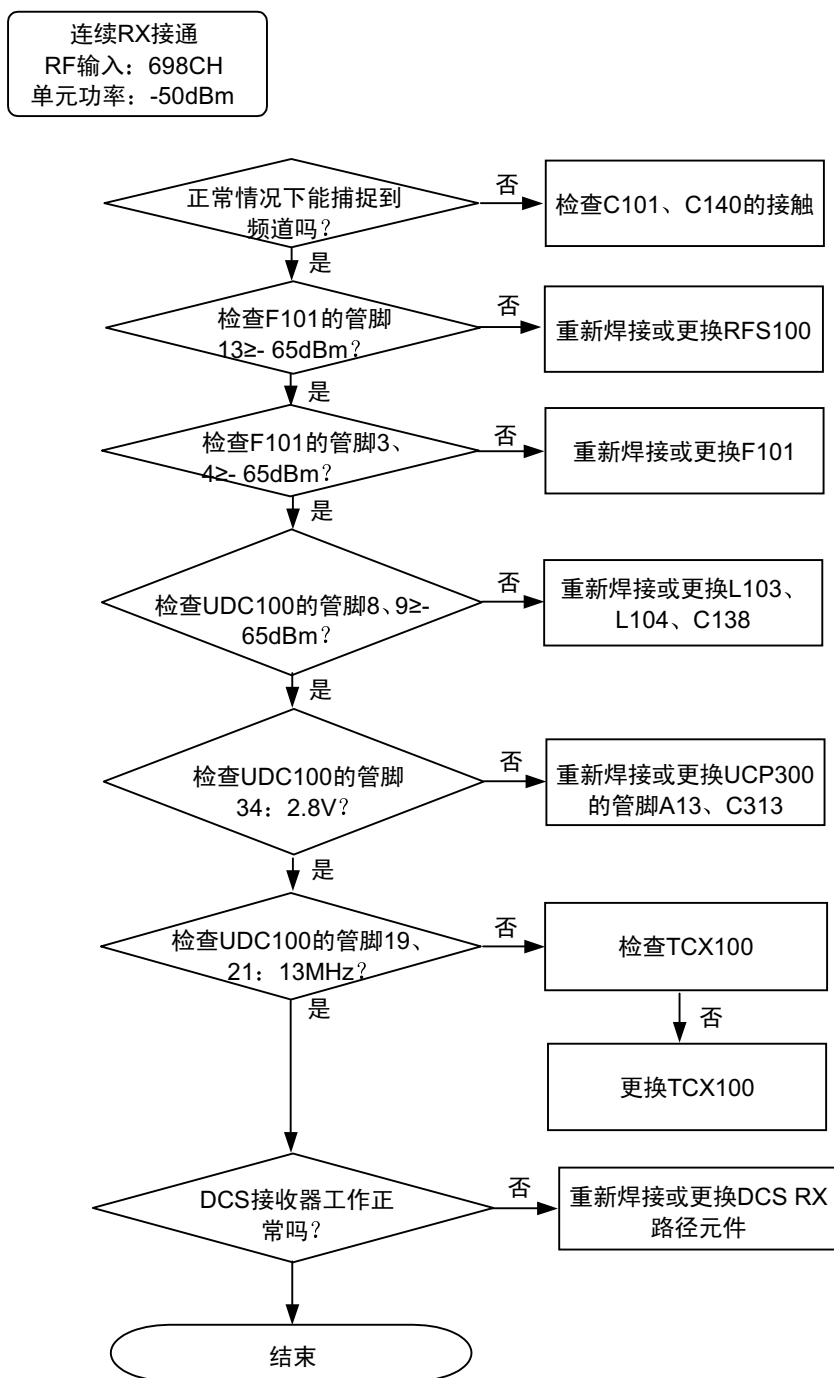


3-2-3 PCS 接收器

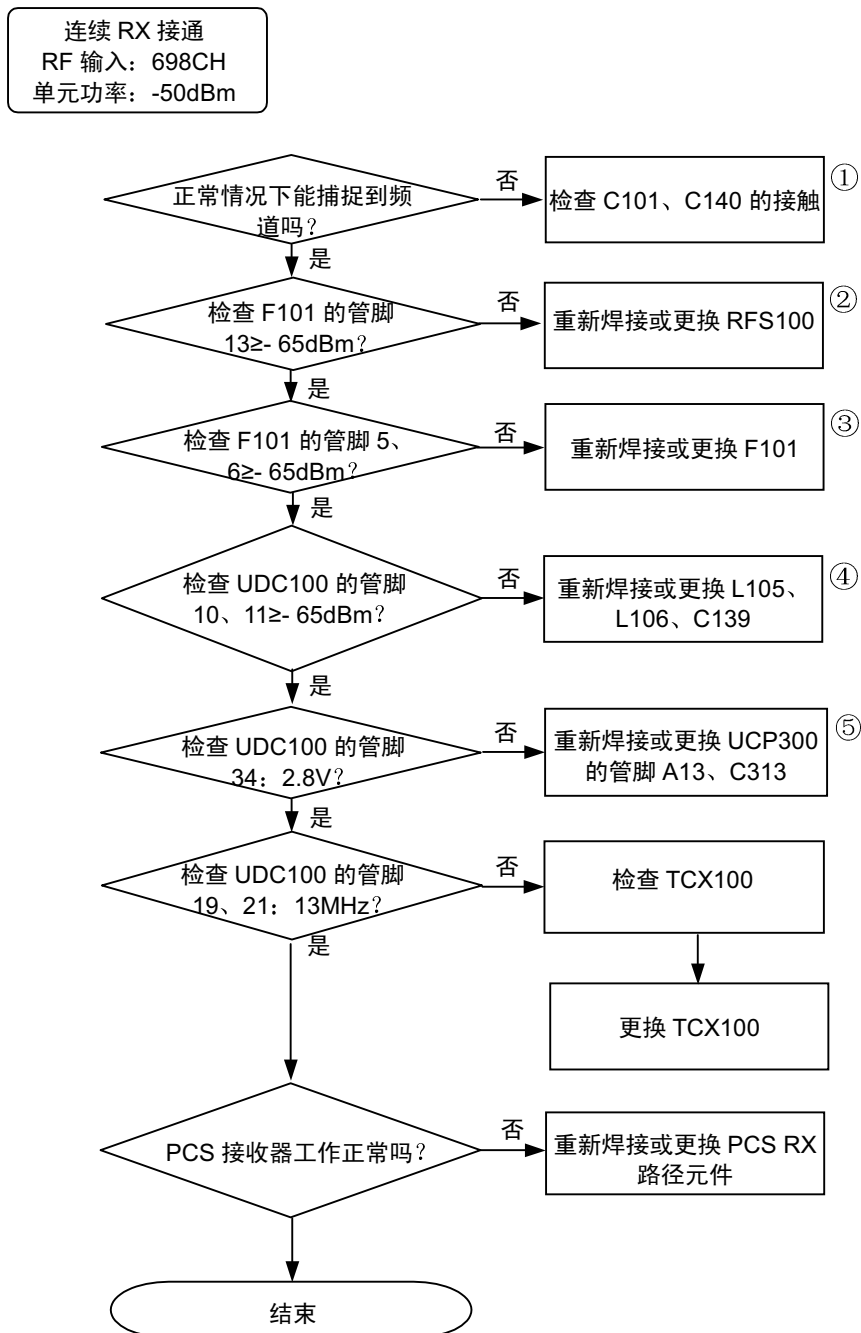


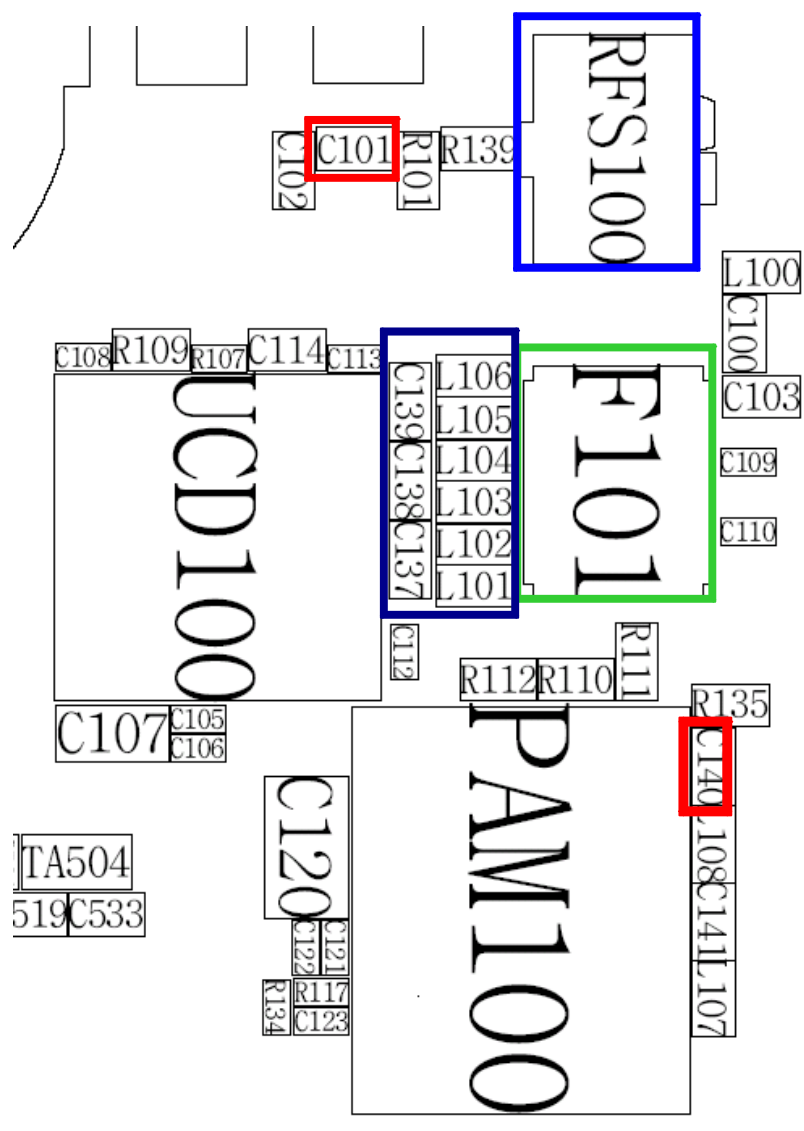


3-2-4 GSM 发送器

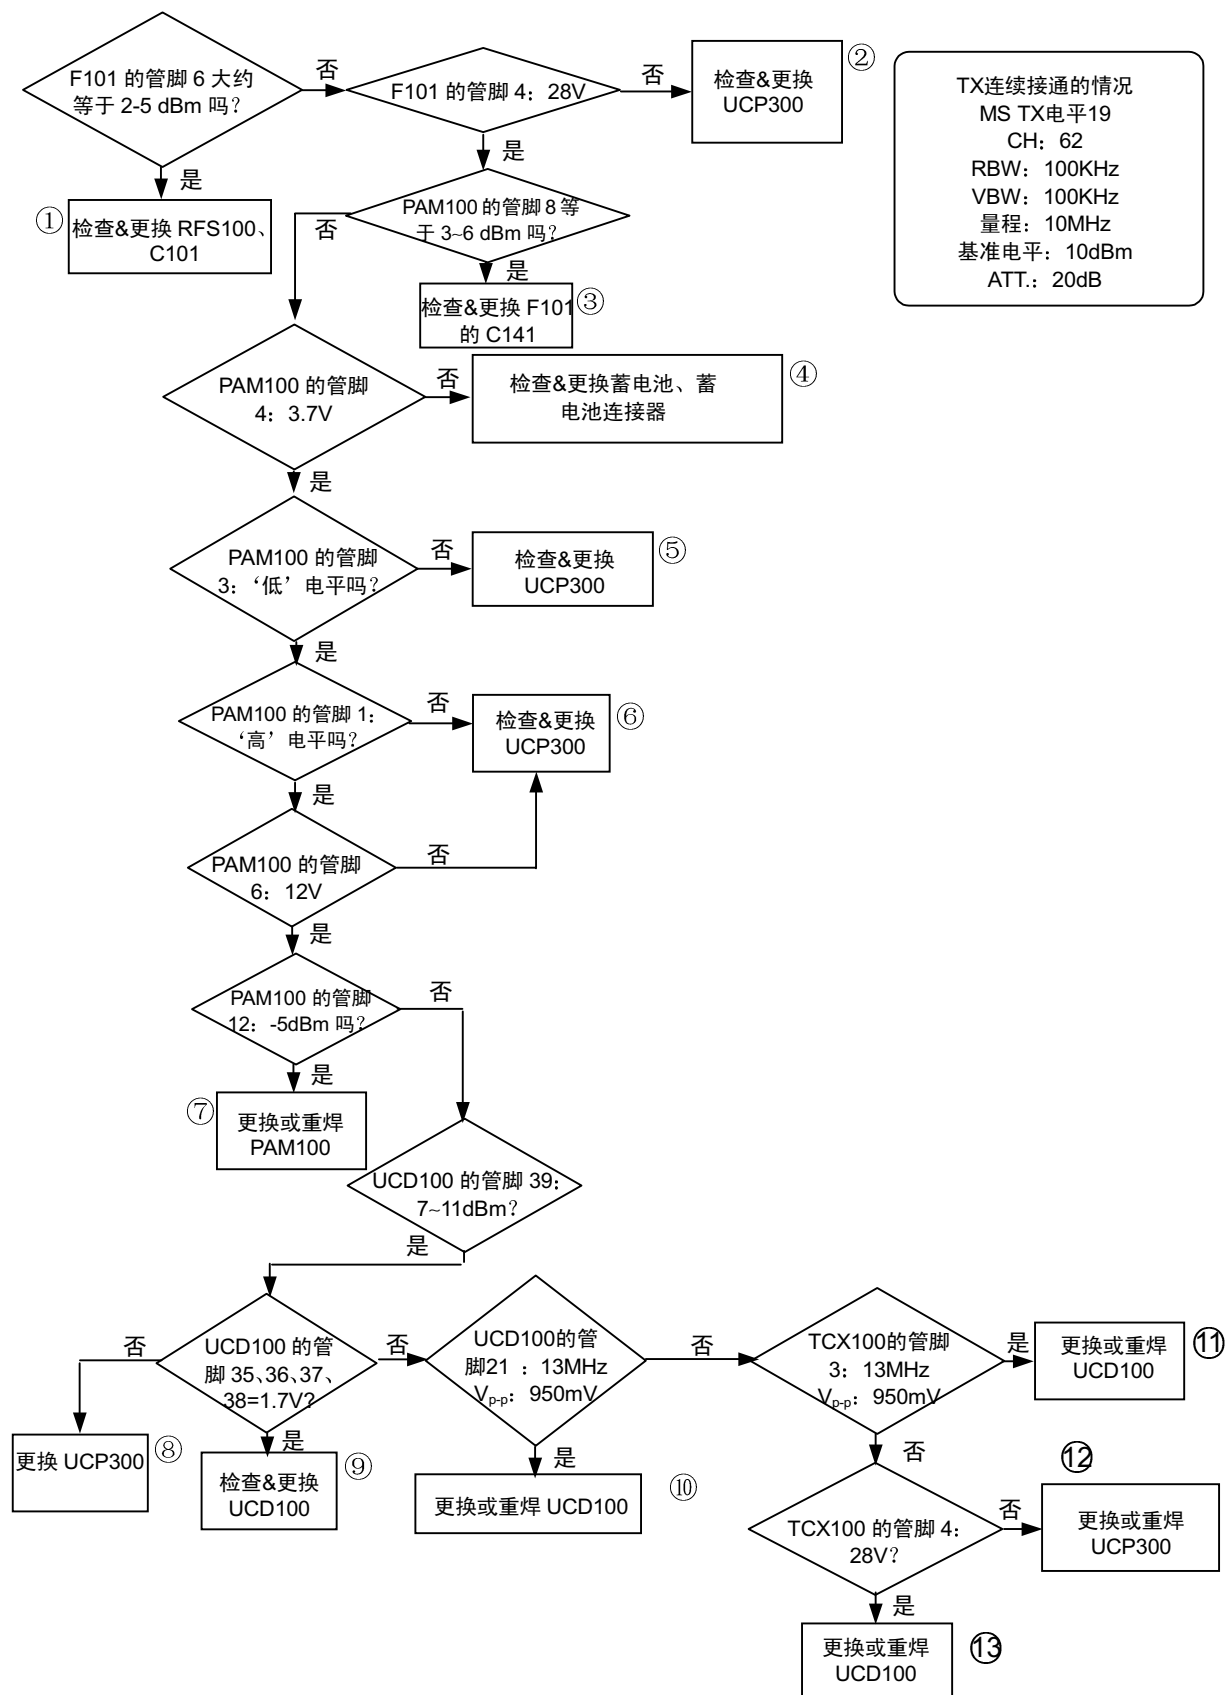

3-2-5 DCS 发送器

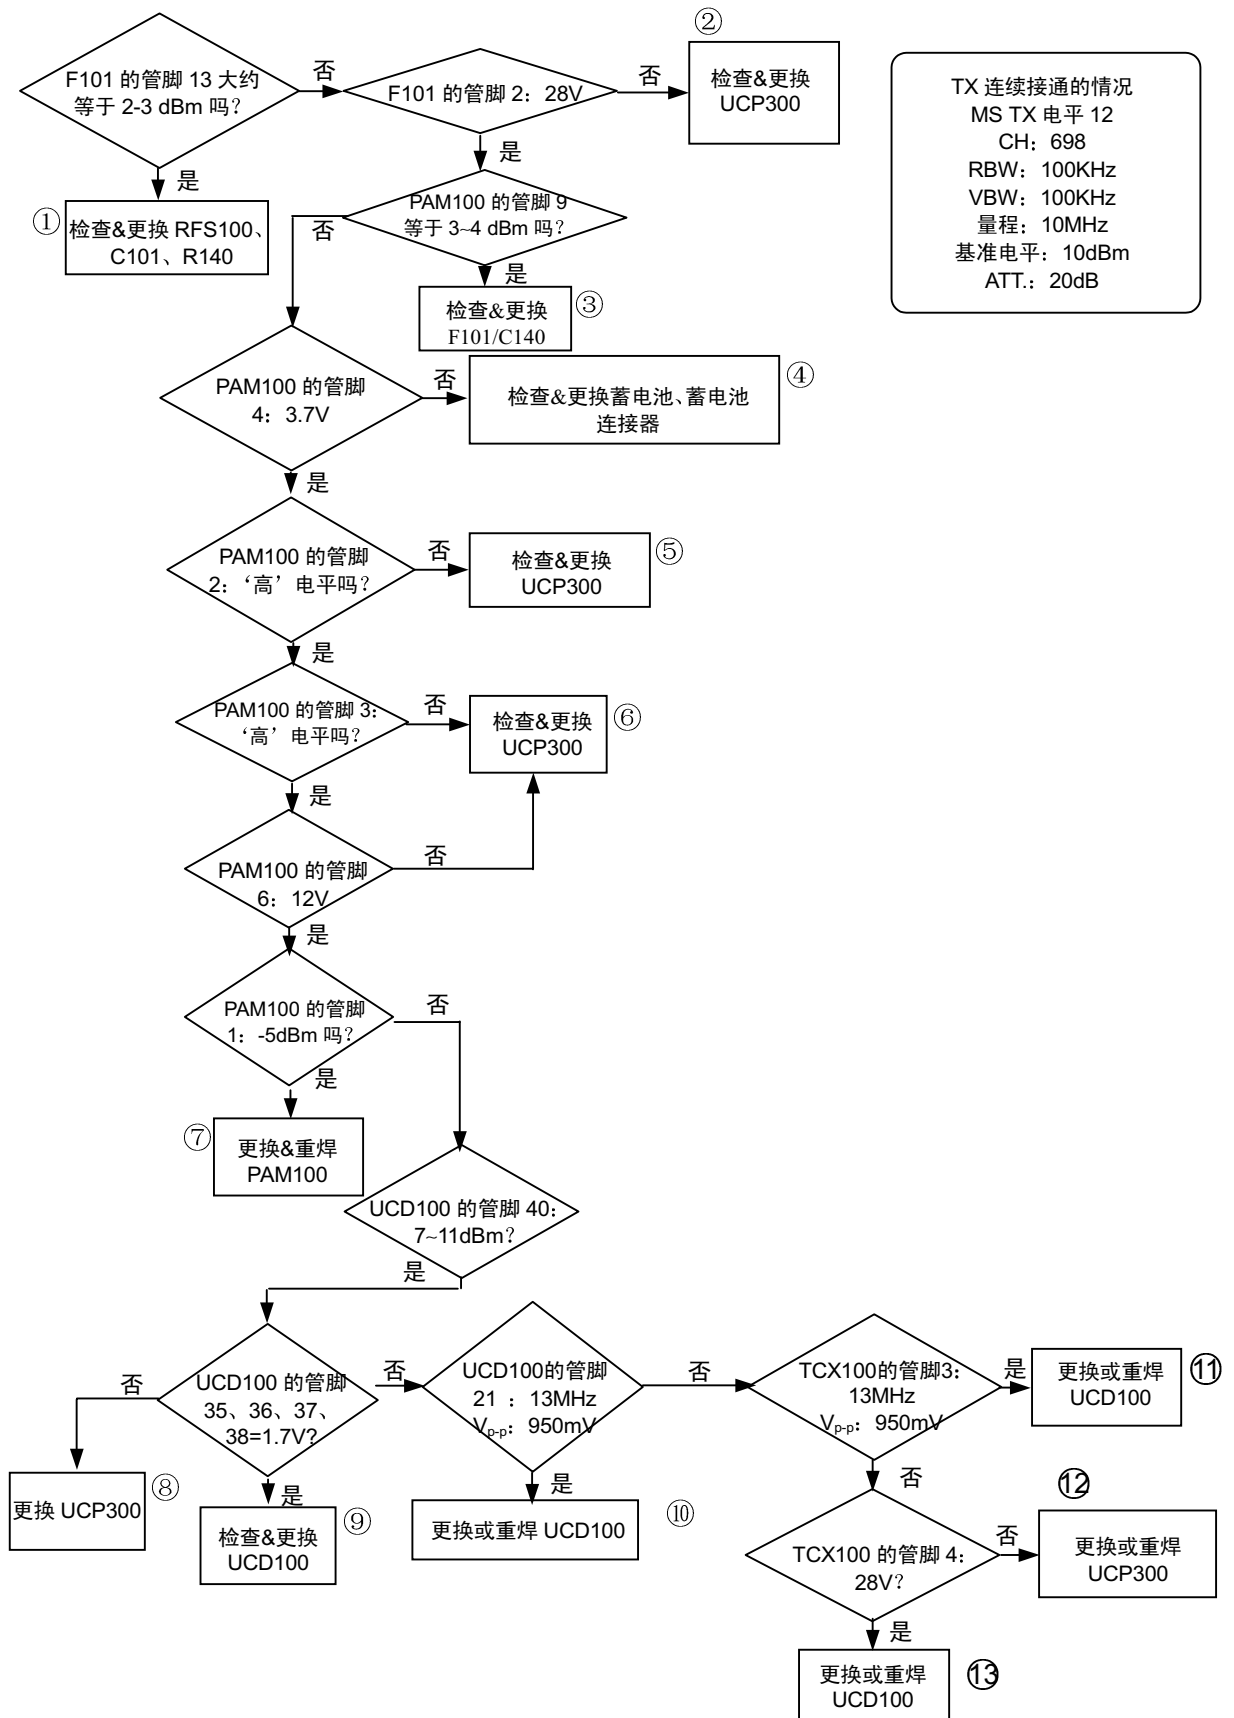

3-2-6 PCS 发送器

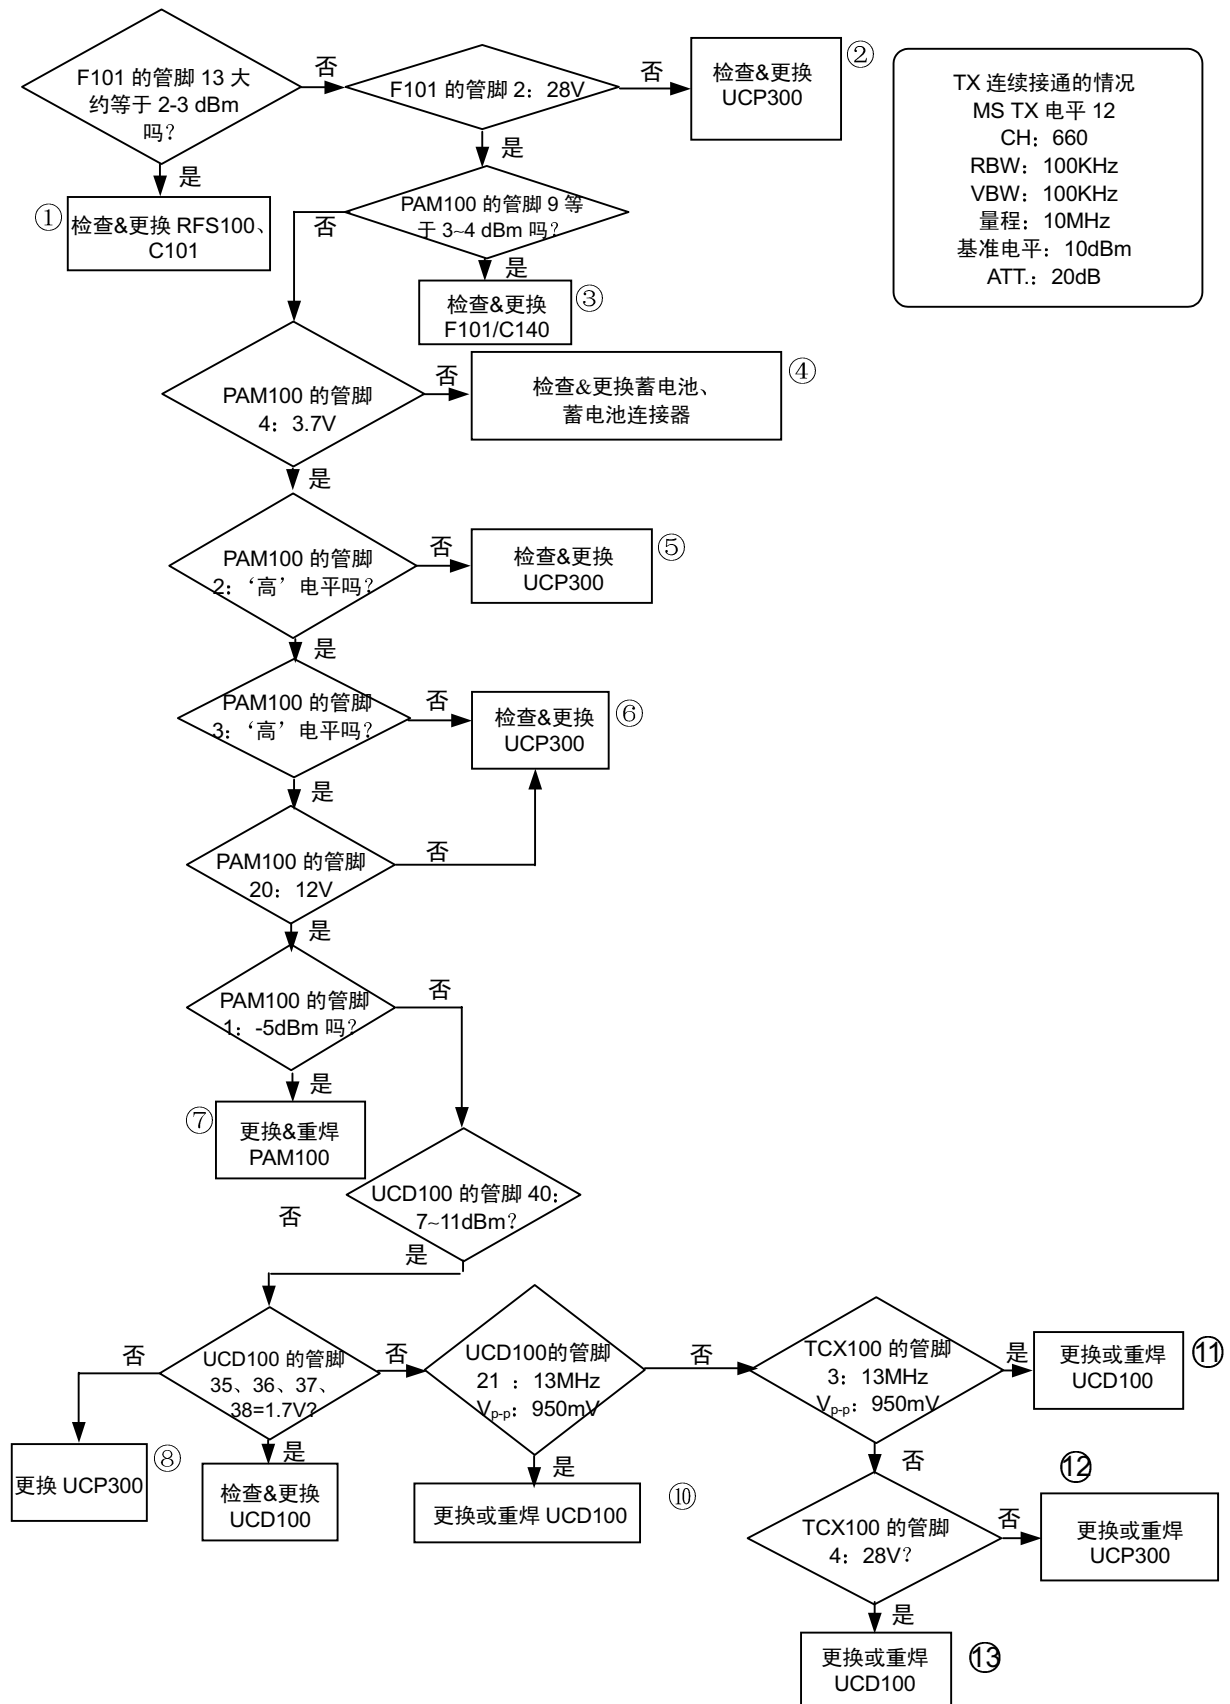

3-2-7 蓝牙部分

