

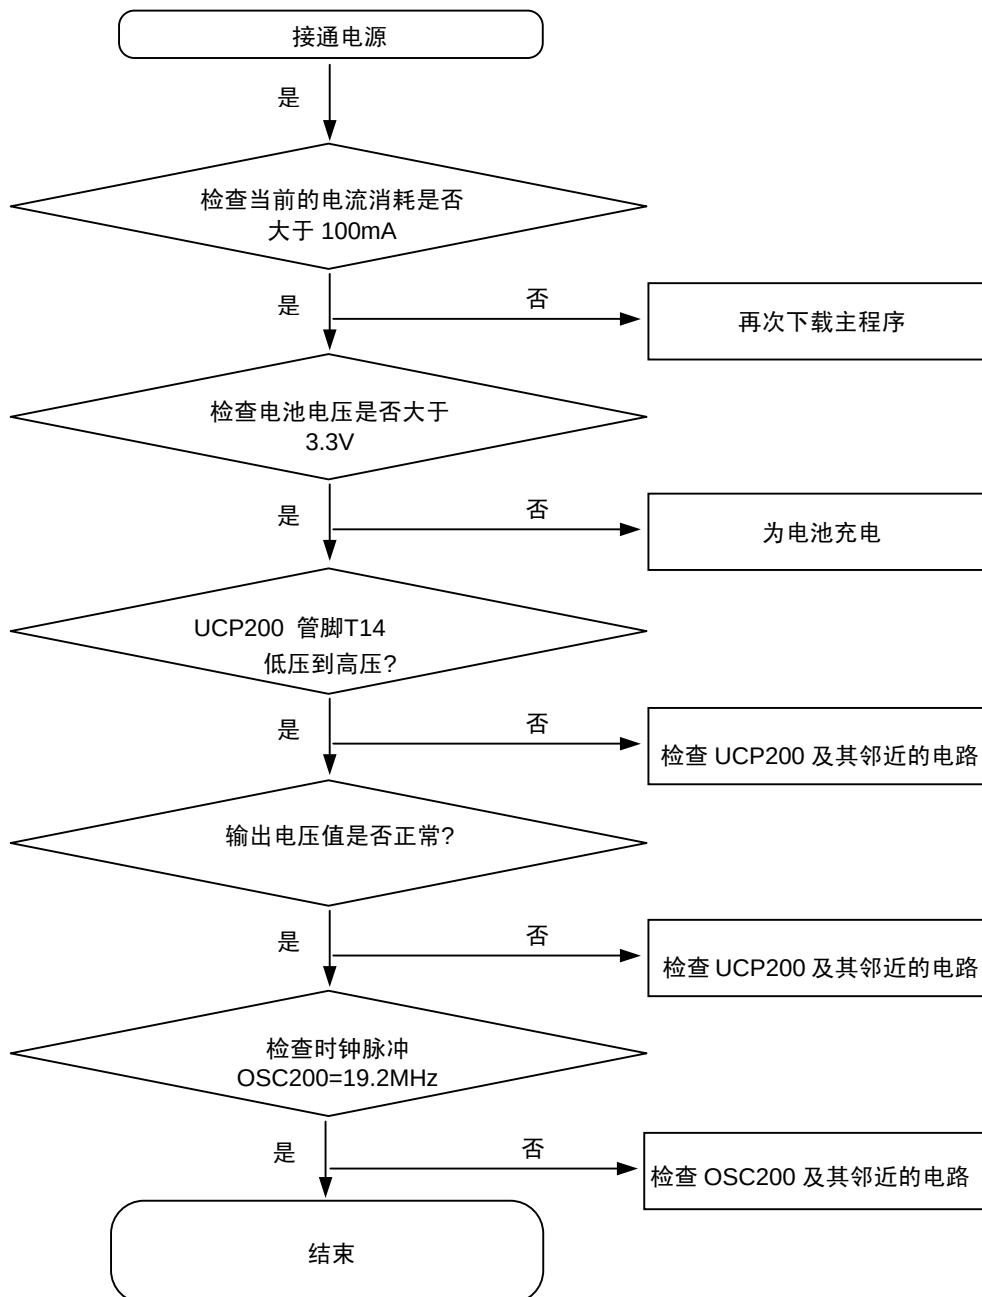



9. 故障排除流程图

9-1. 逻辑部分


9-1-1 通电

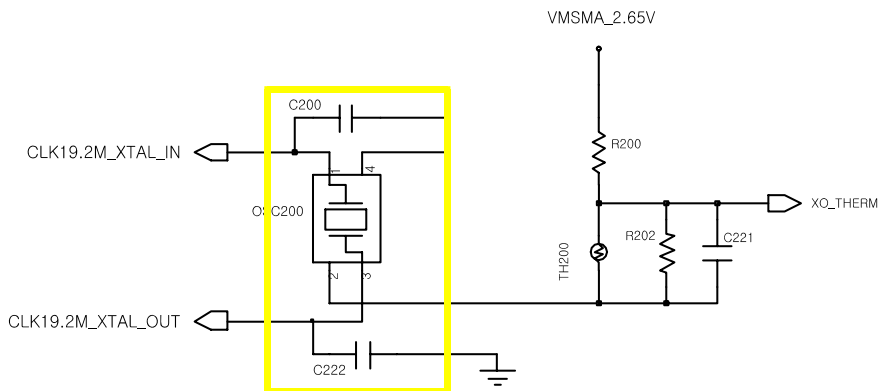


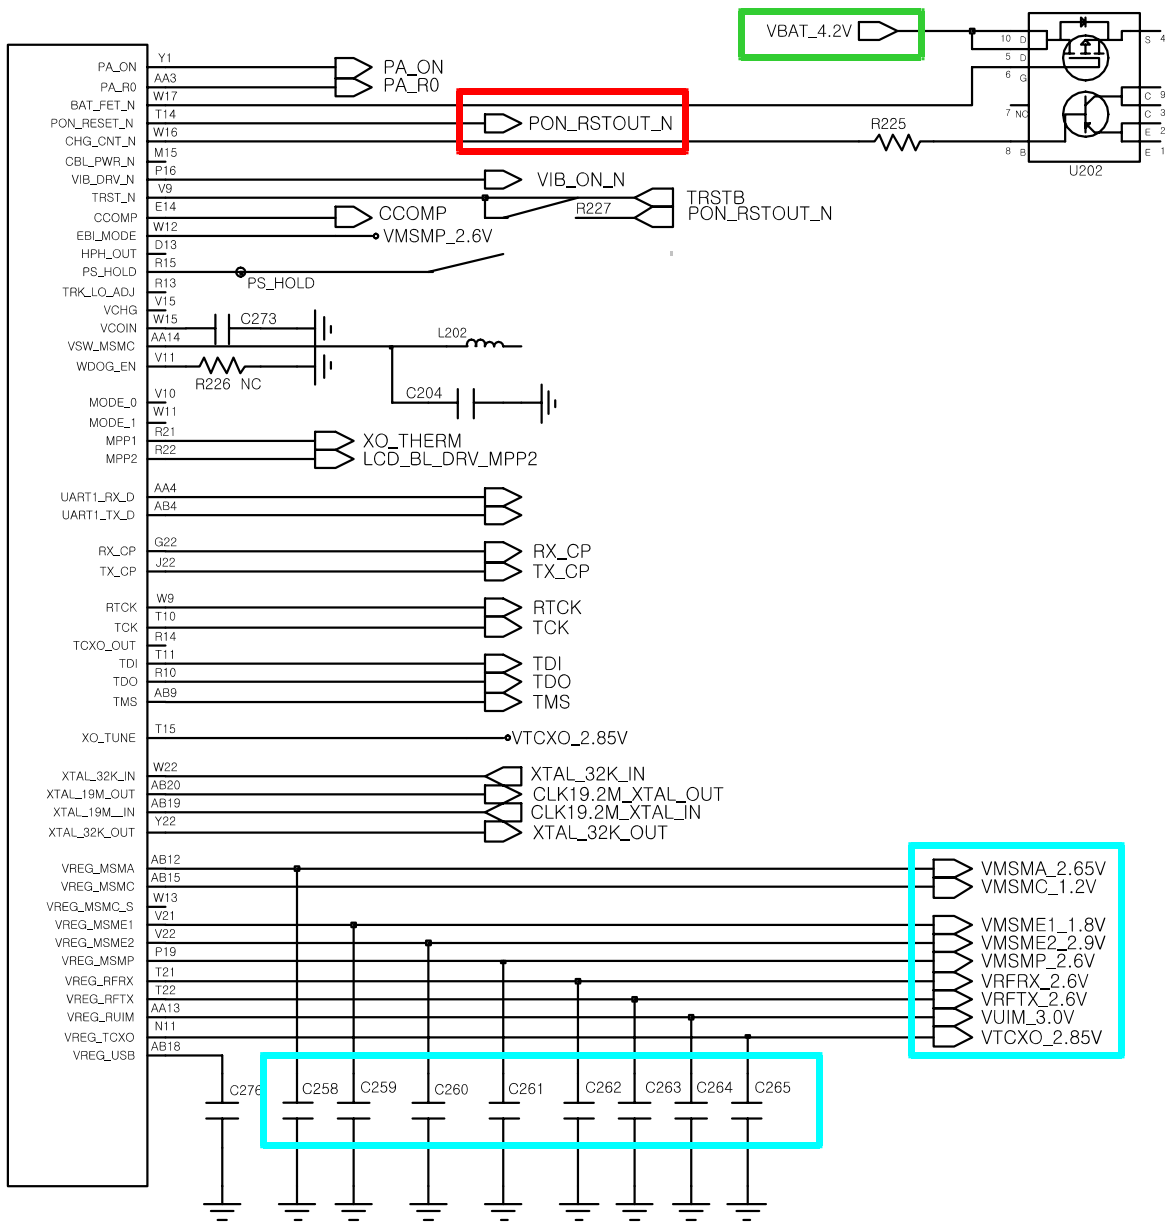


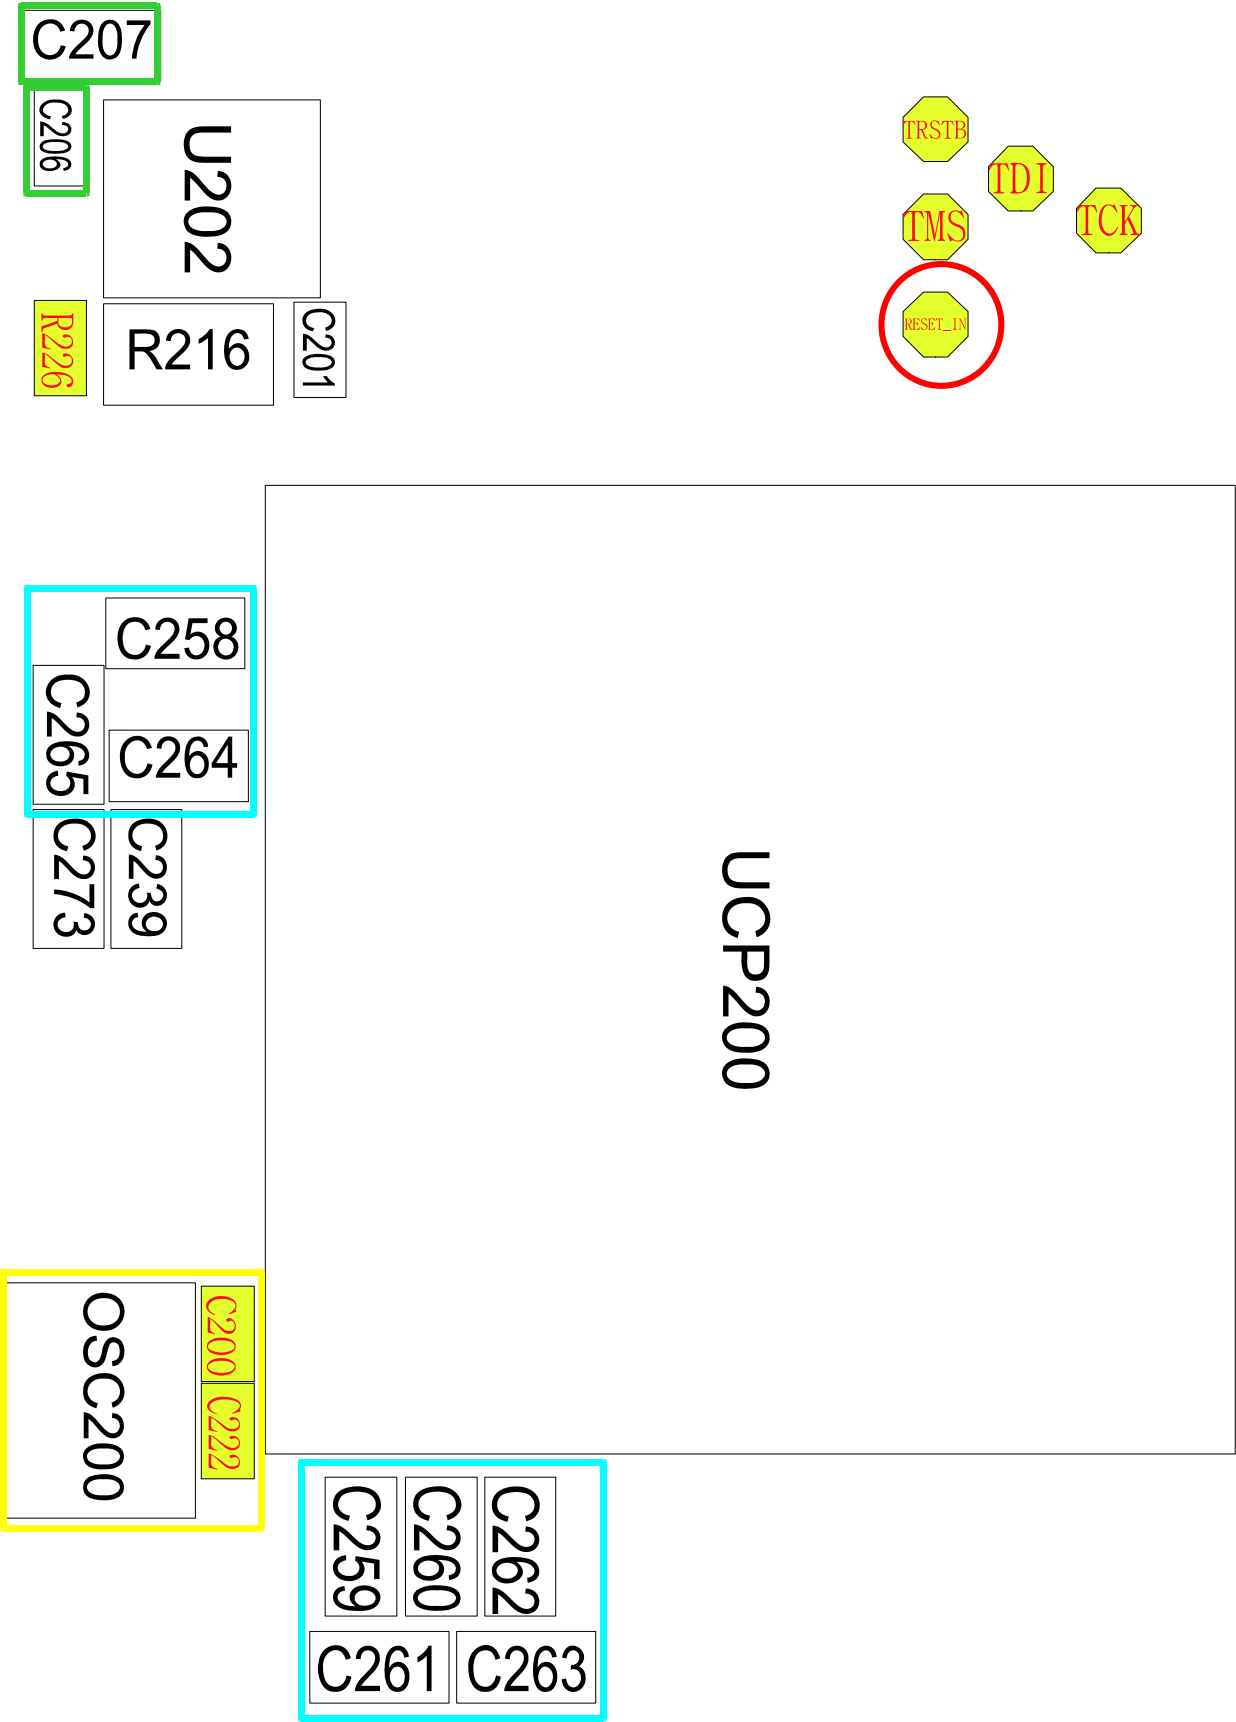


9-1-2 LCD 的运行


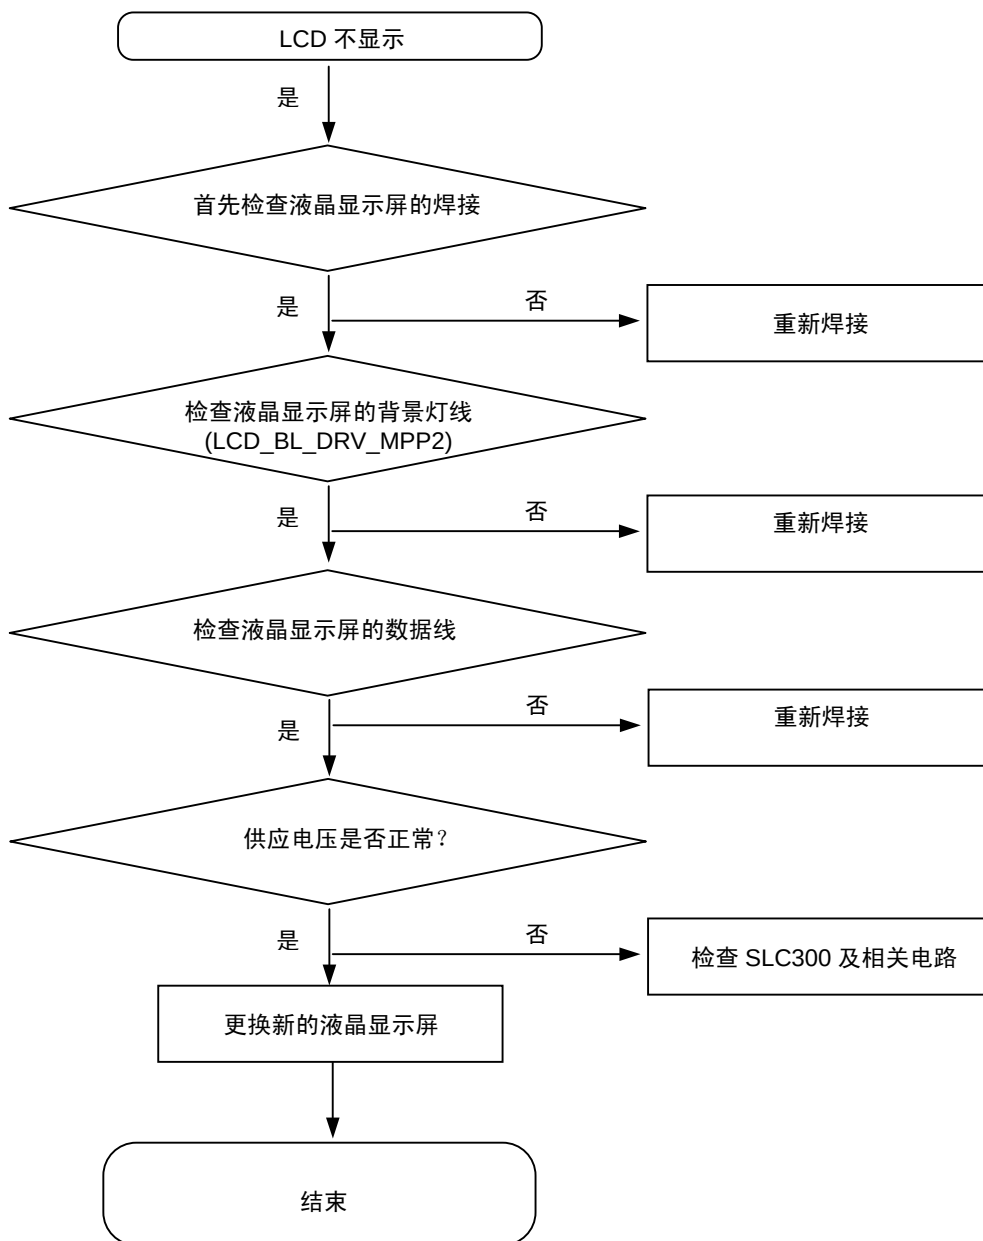


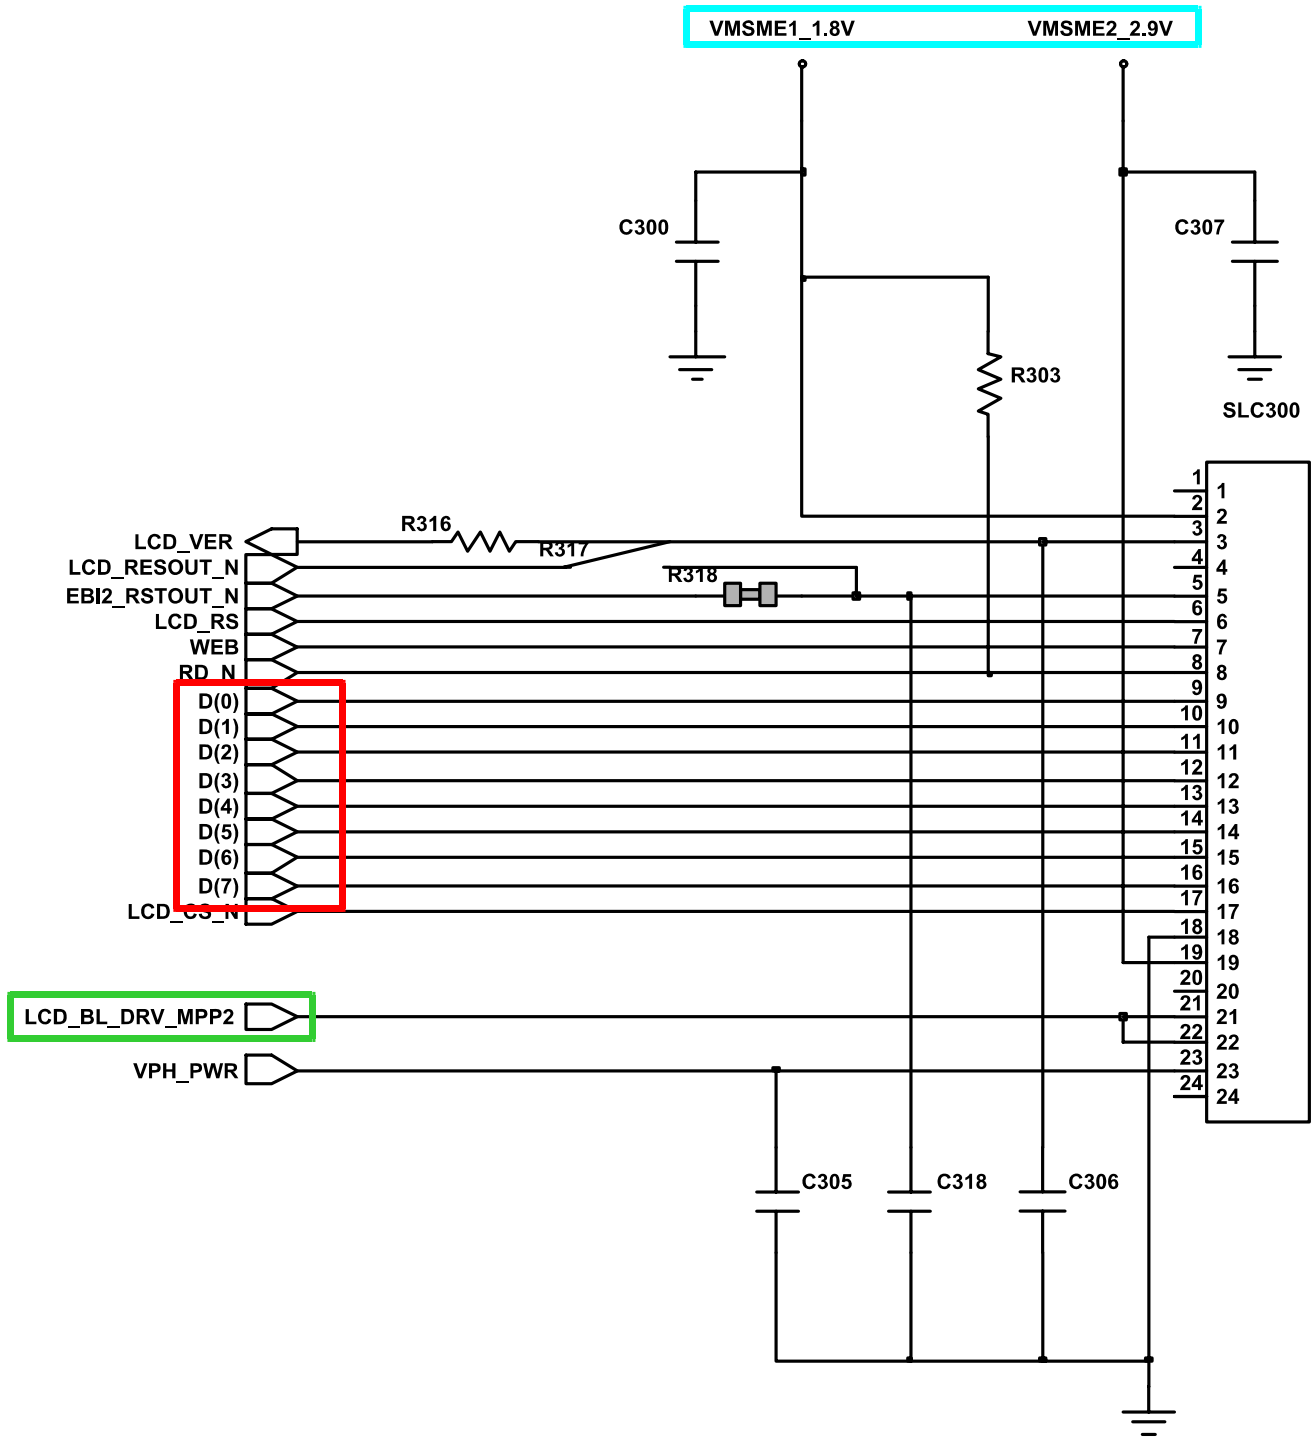

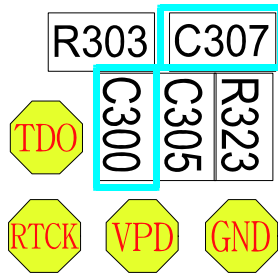


9-1-3 扬声器

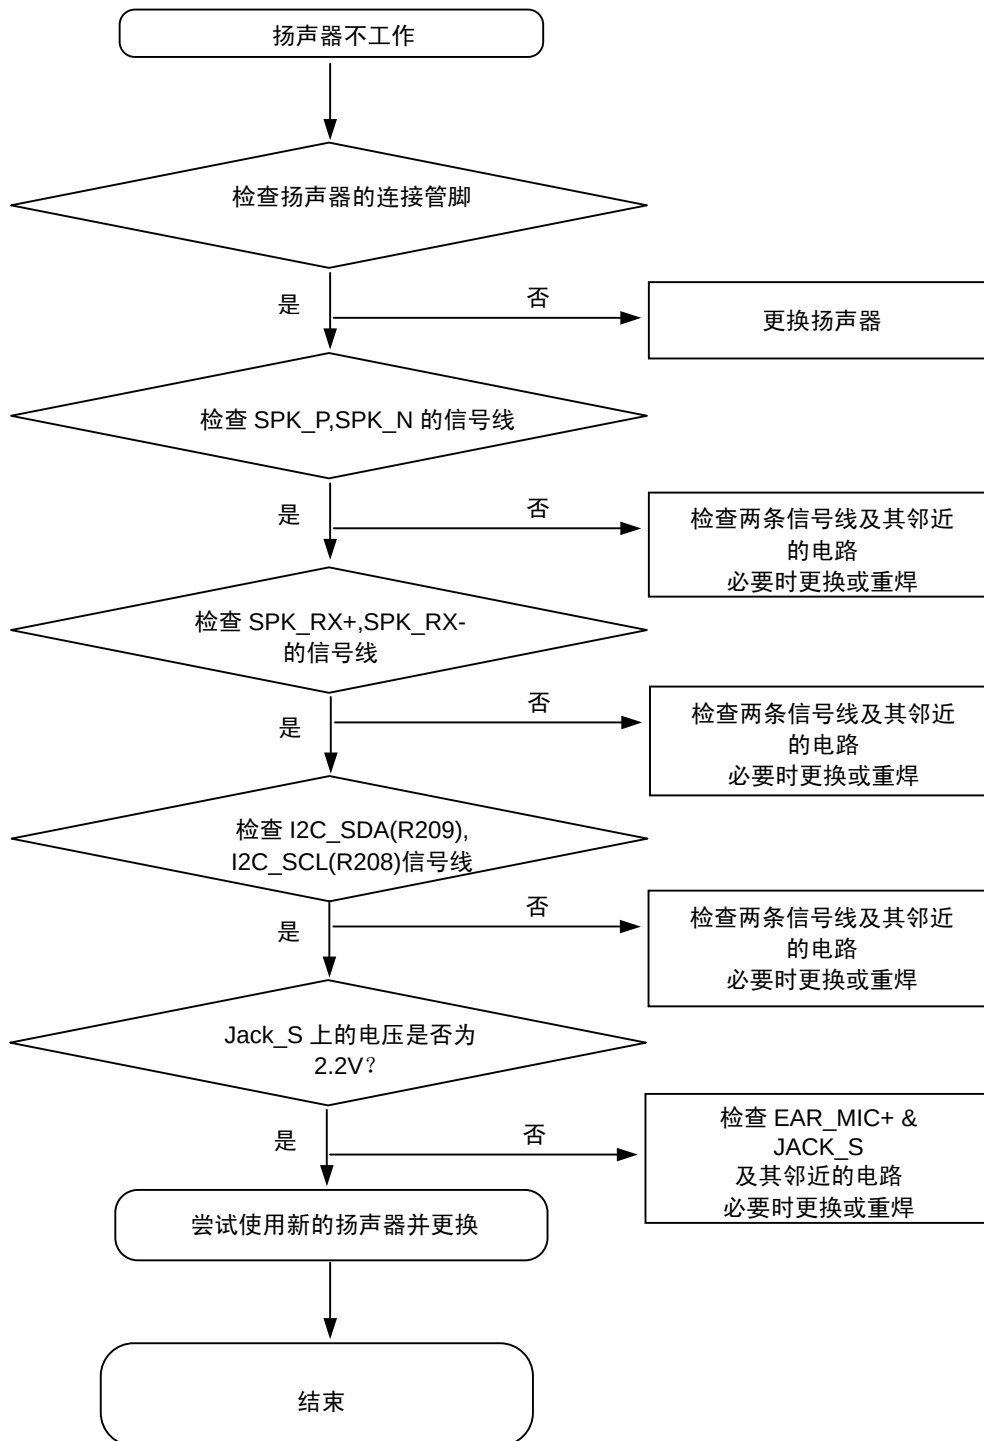

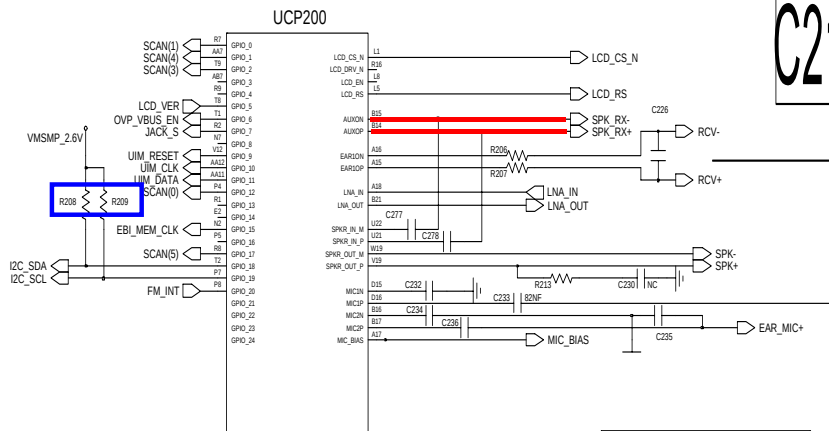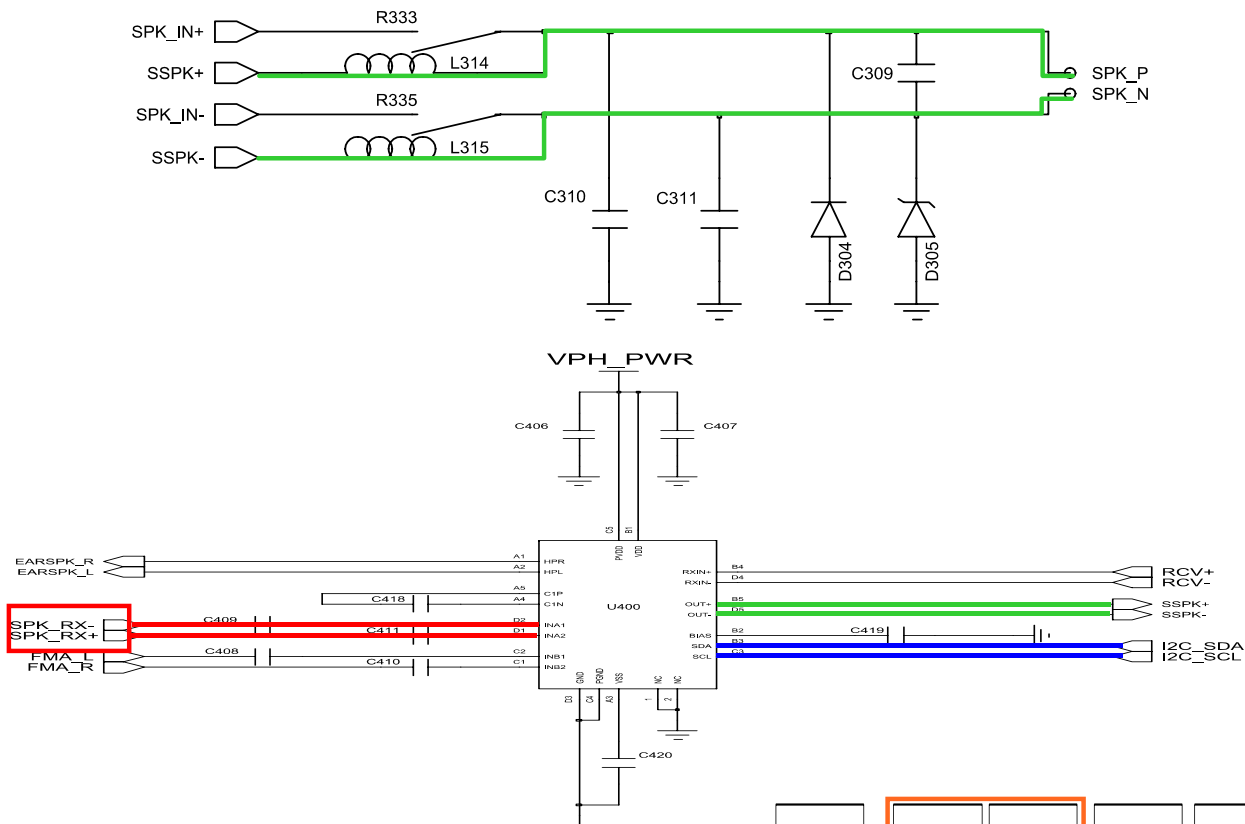



C211 R208 R209 C215 C208

UCP200

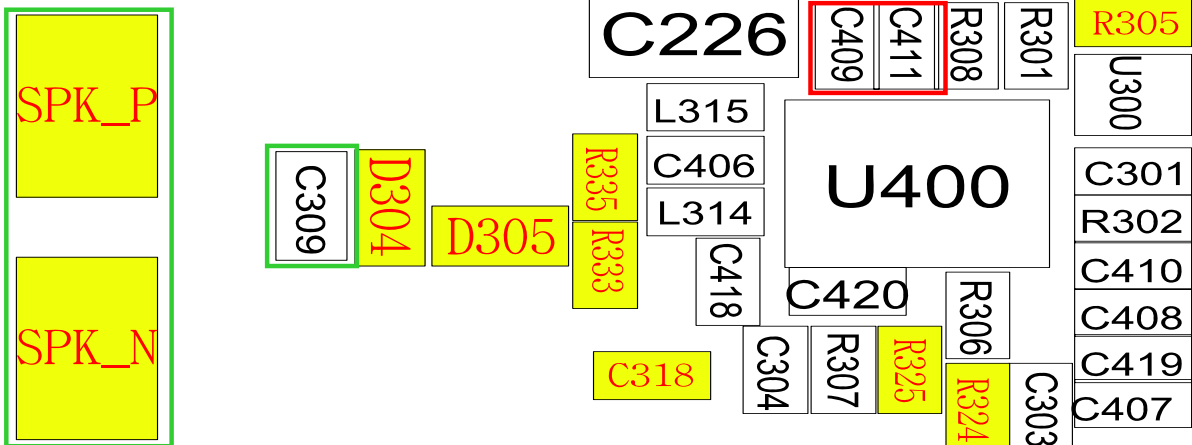


9-1-4 话筒检查



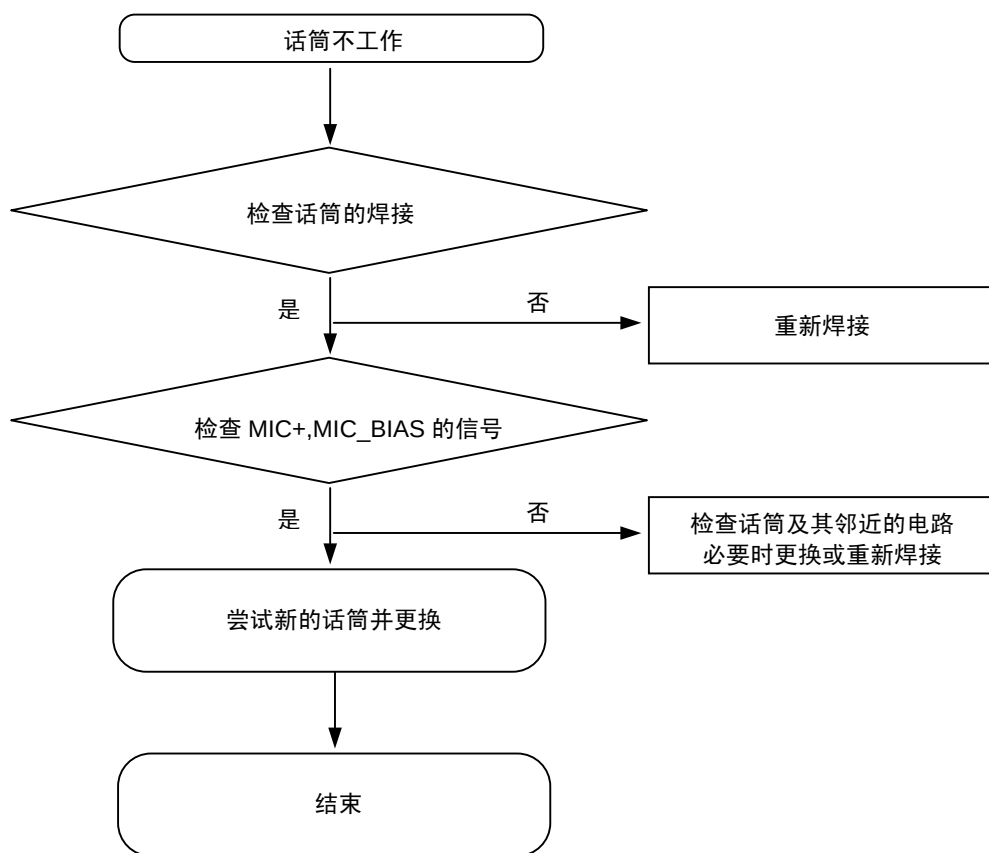


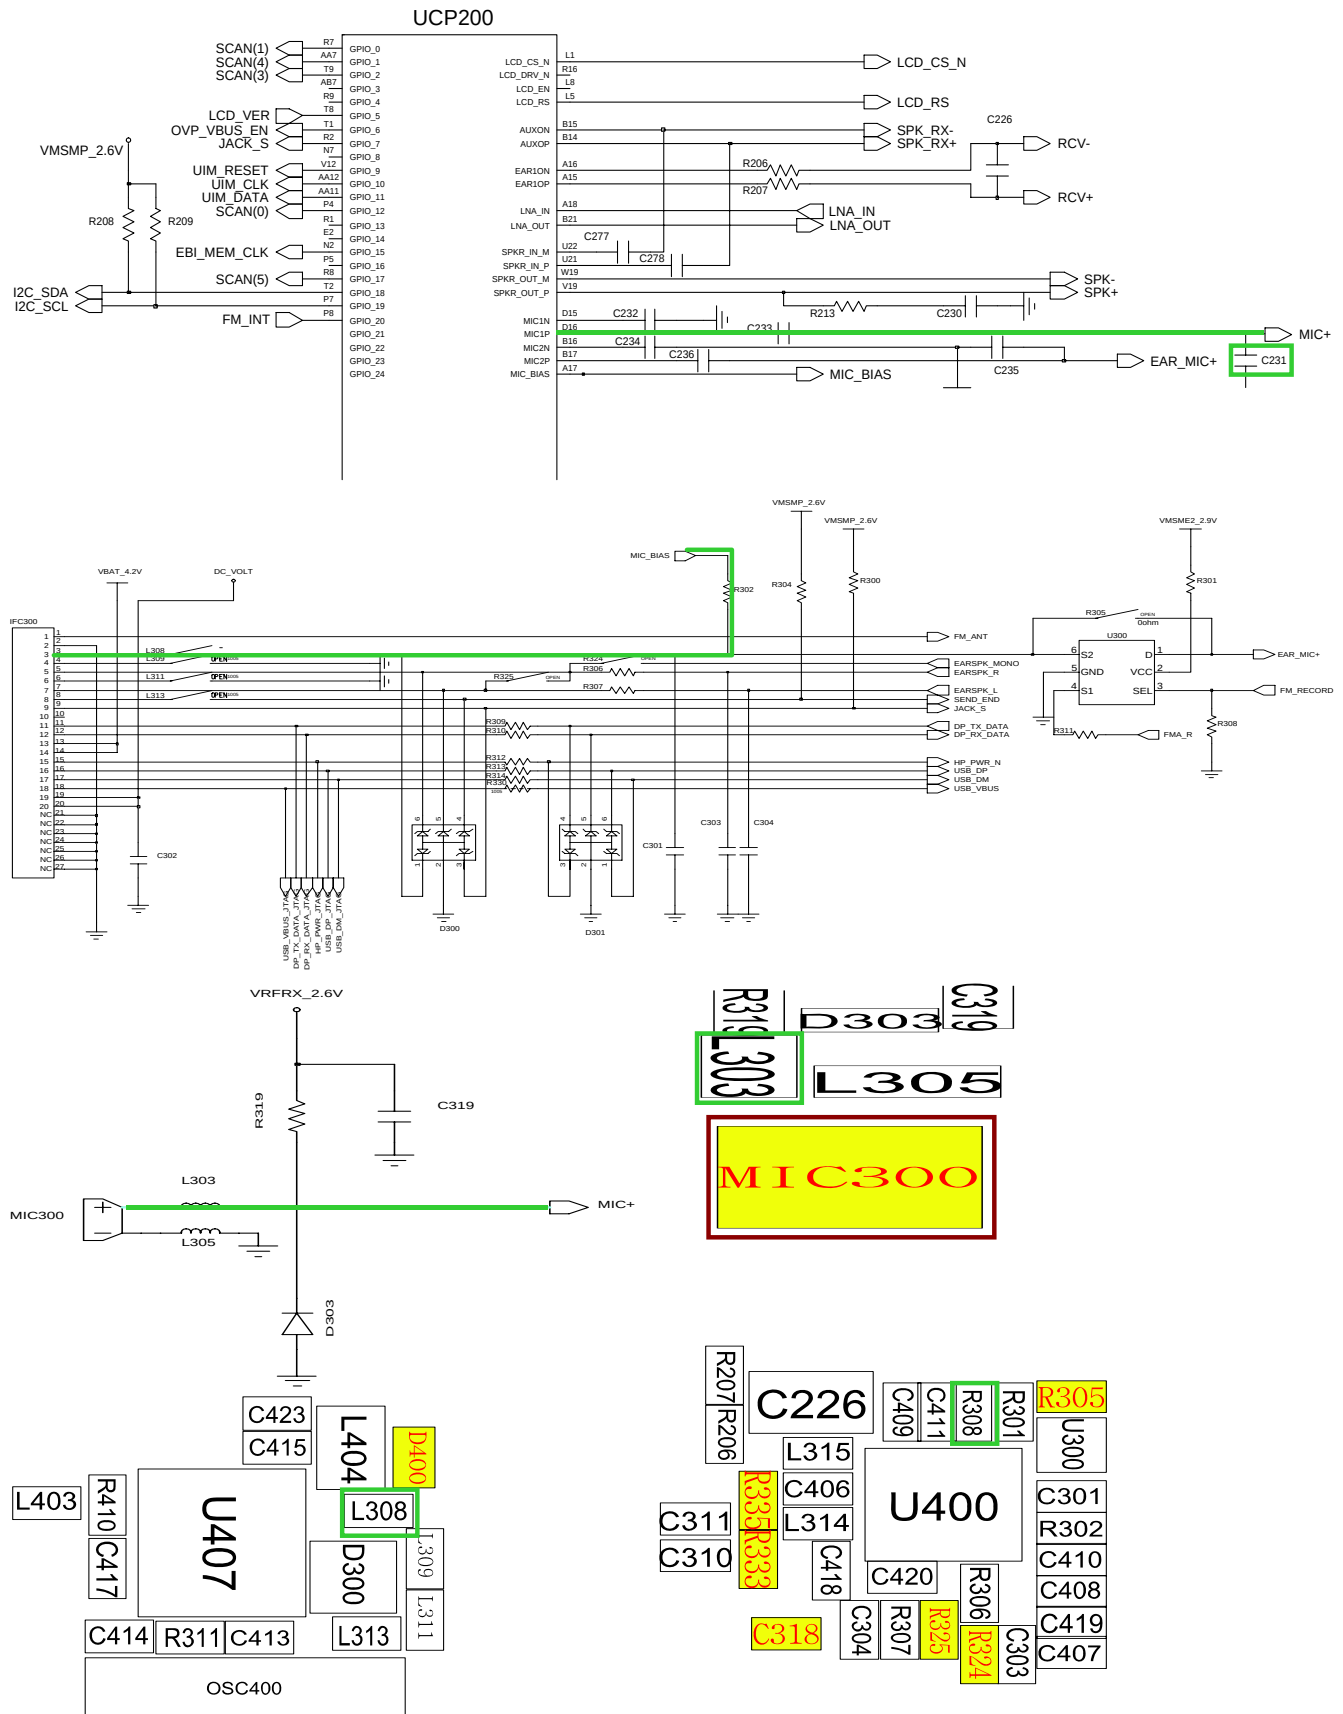

9-1-5 FM 收音机

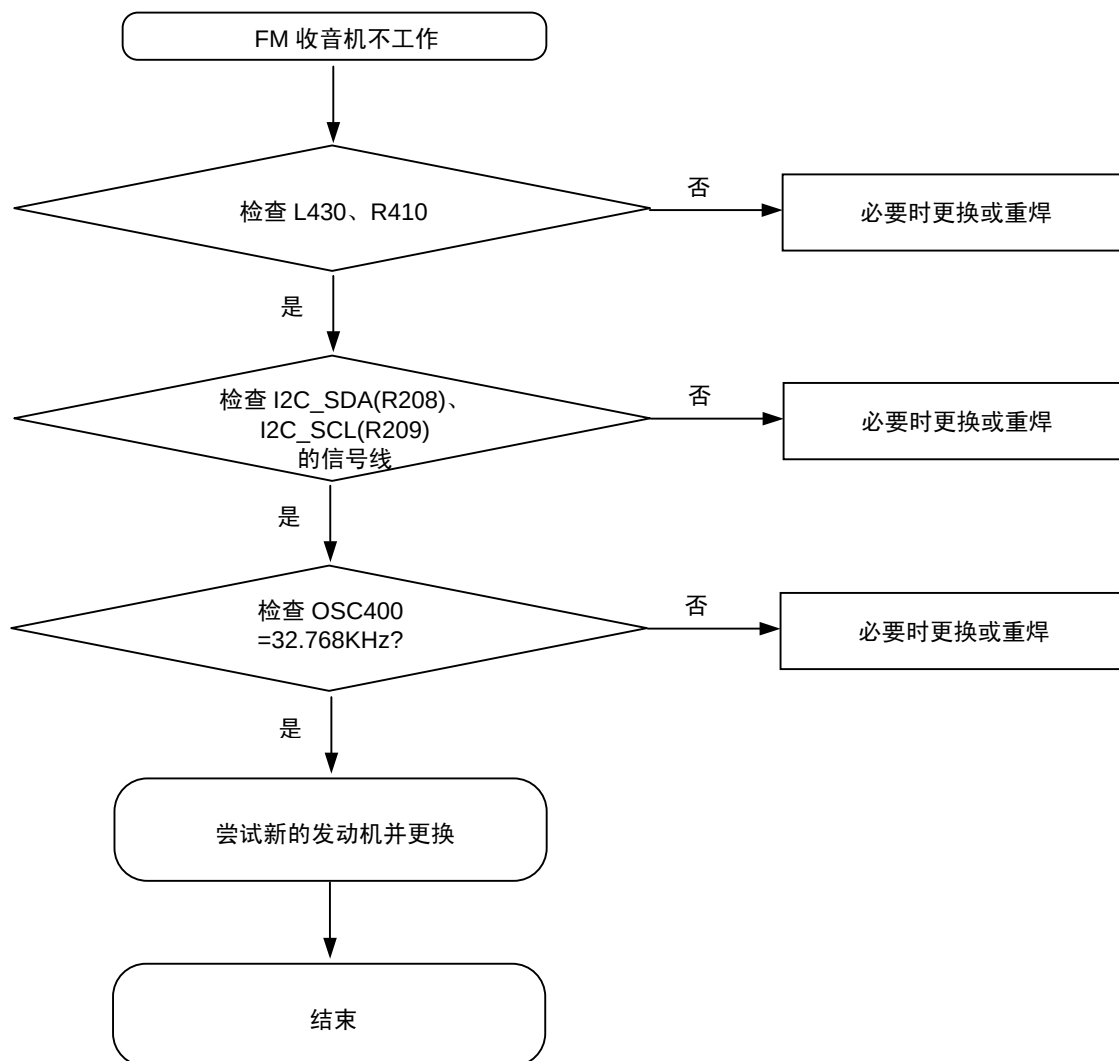




FM RECEIVER Block

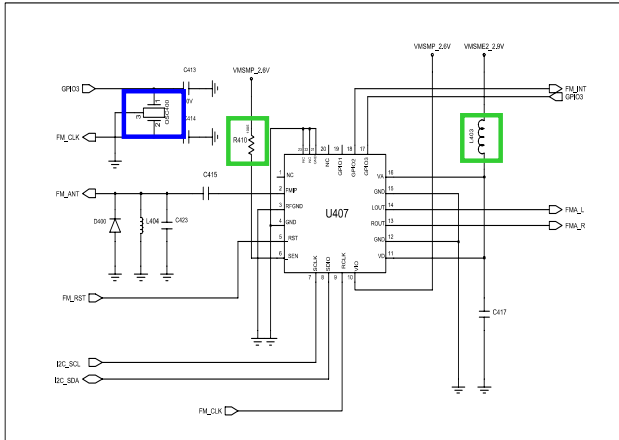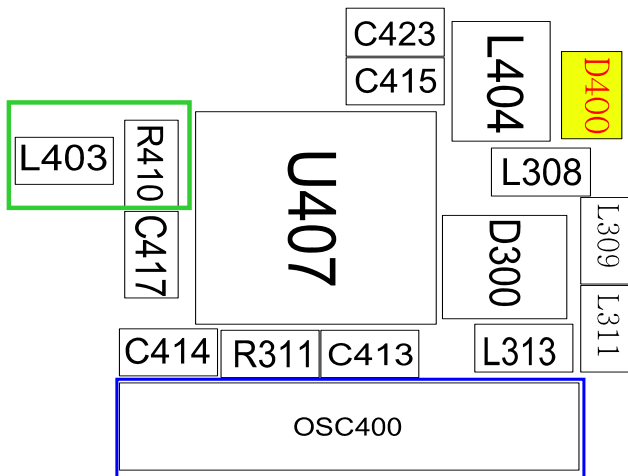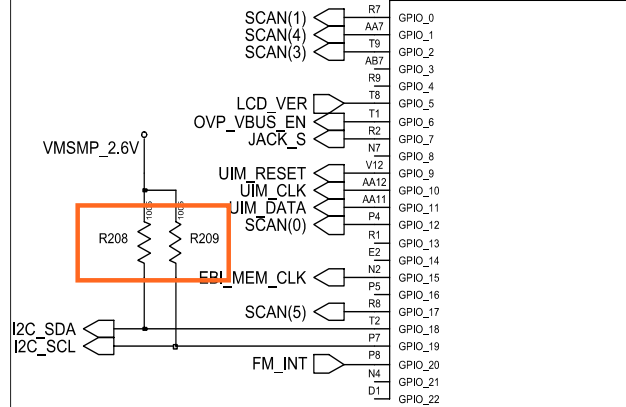
UCP200-1
QSC6010

UCP200


9-1-6 按键输入检查

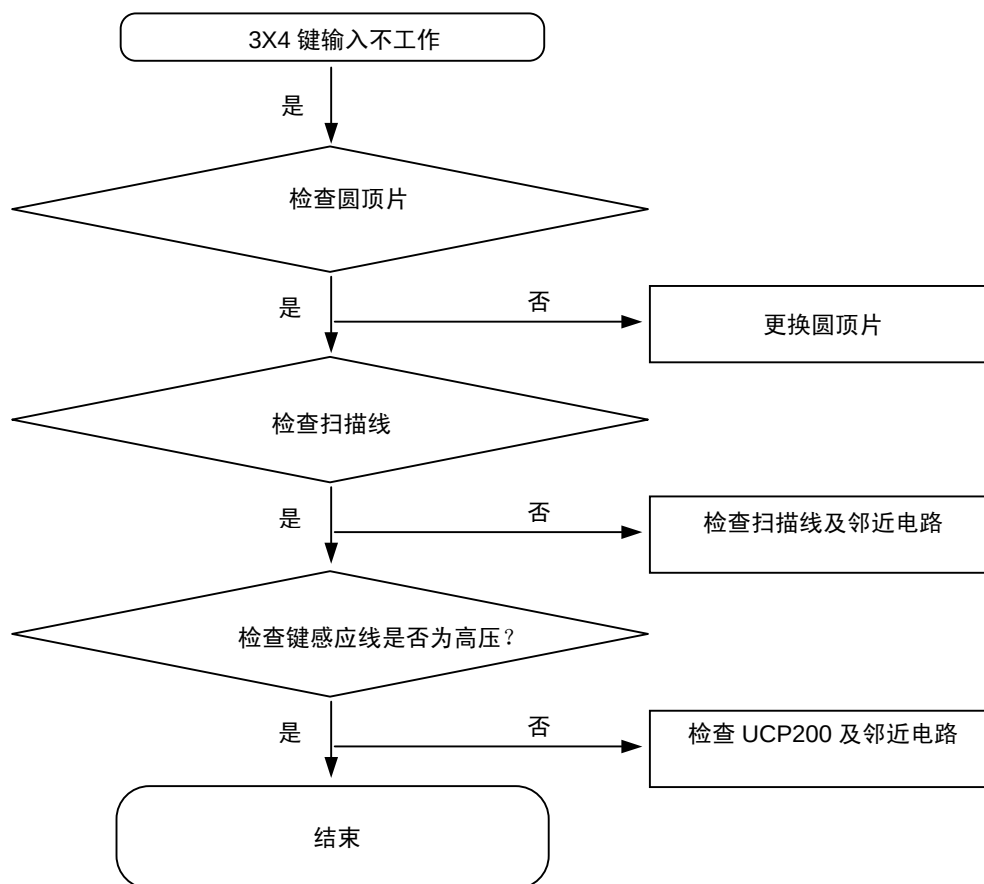


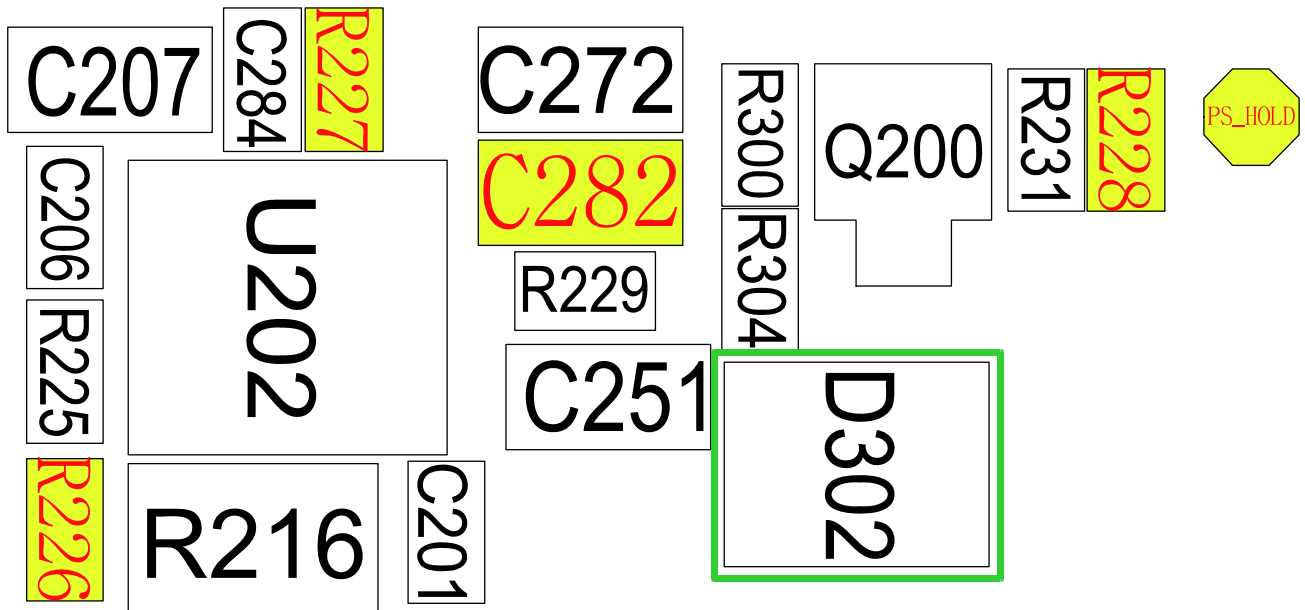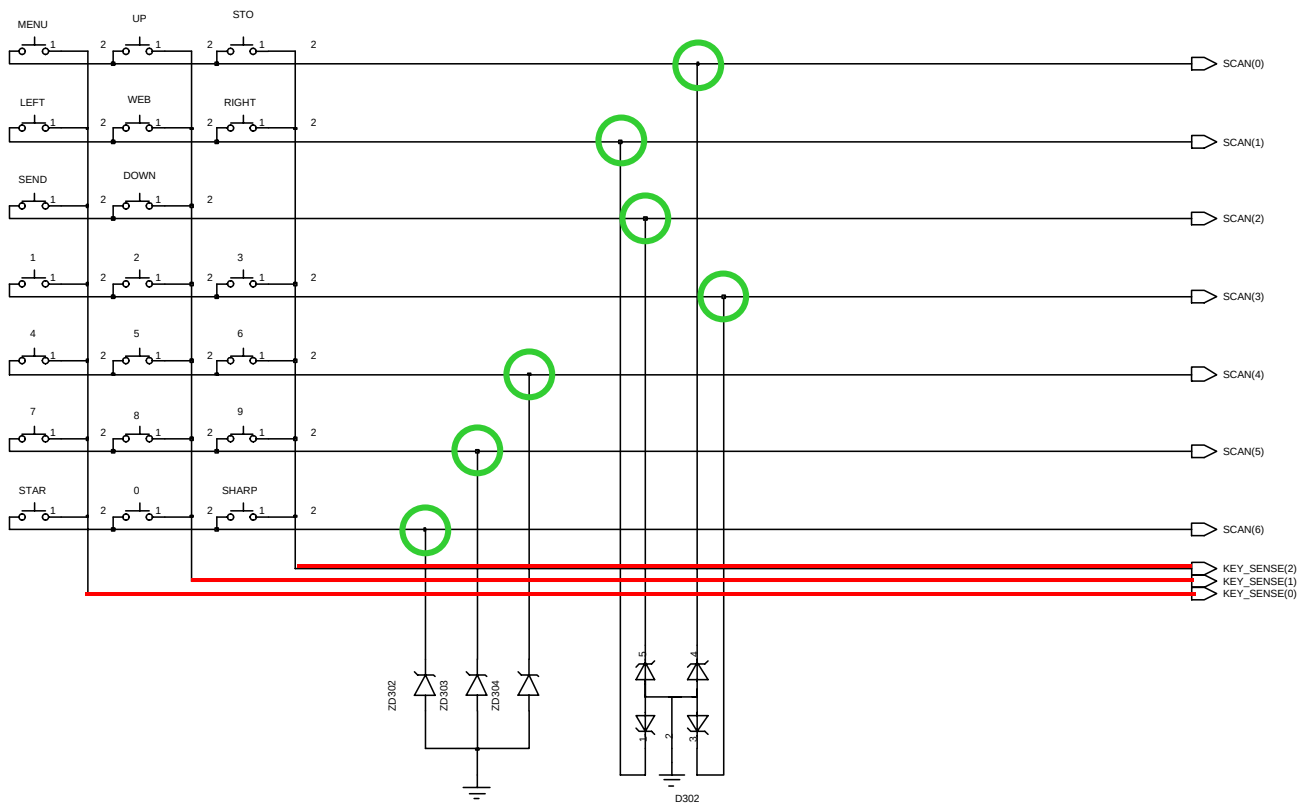

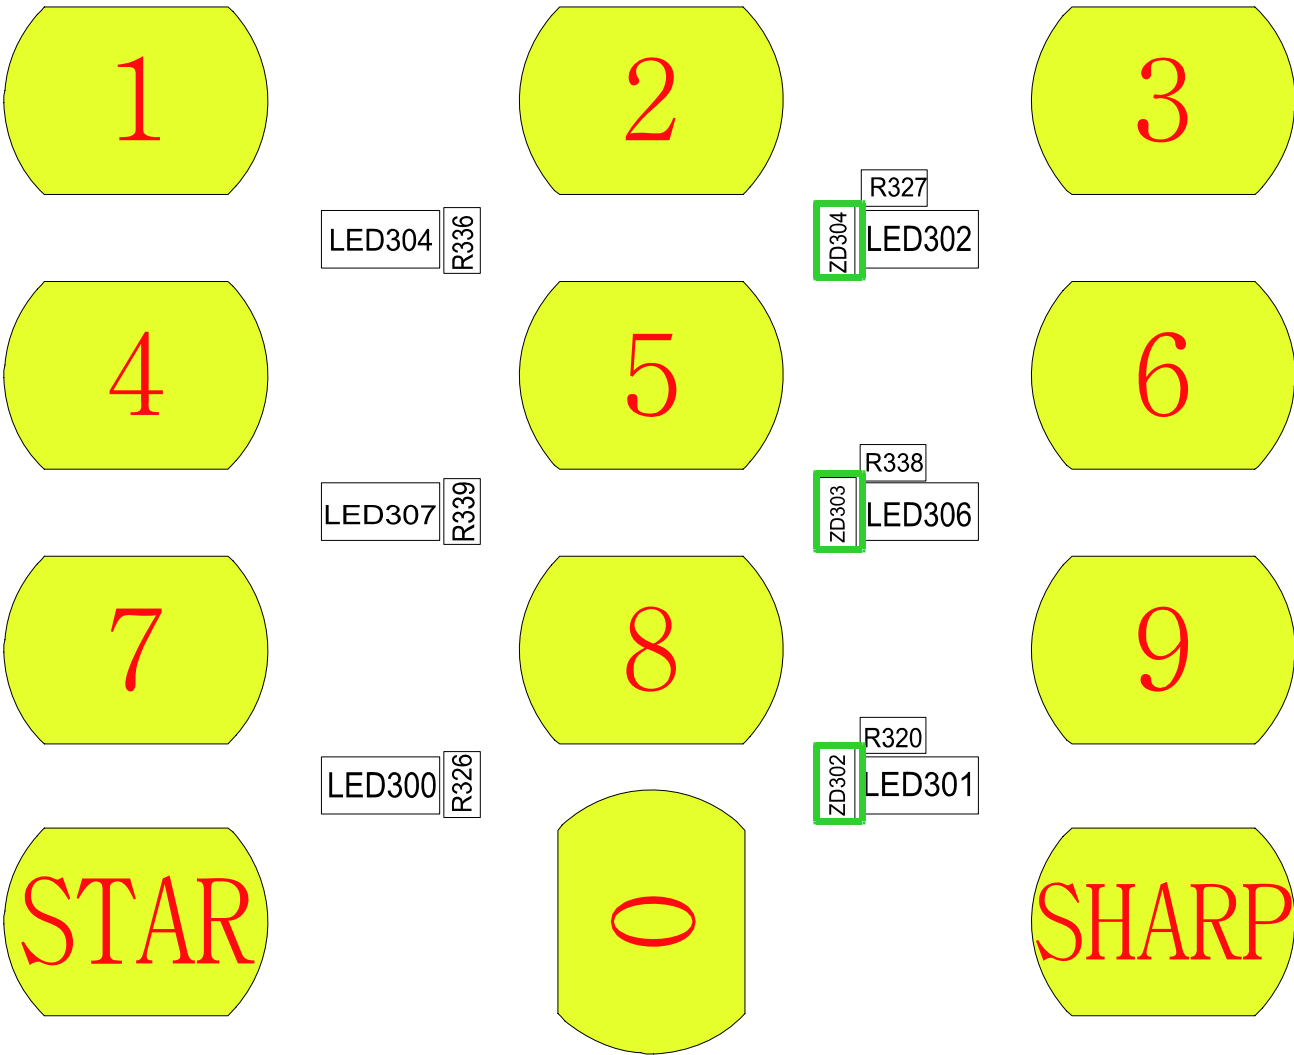


9-1-7 发动机检查

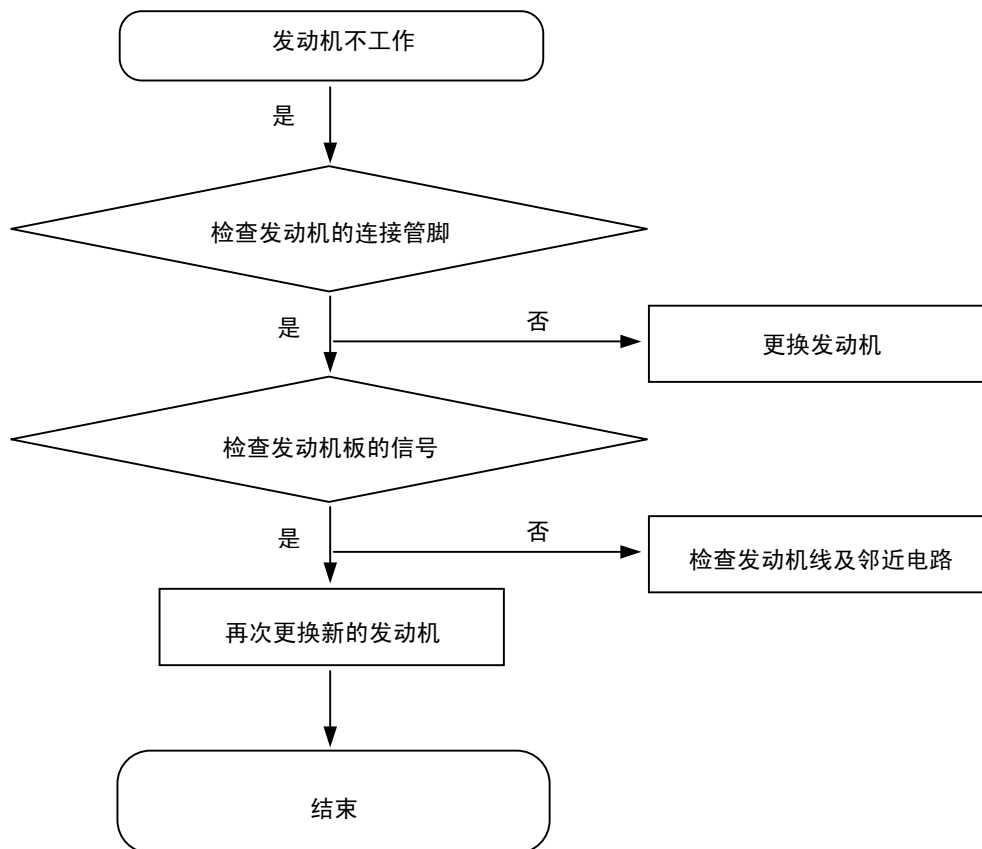


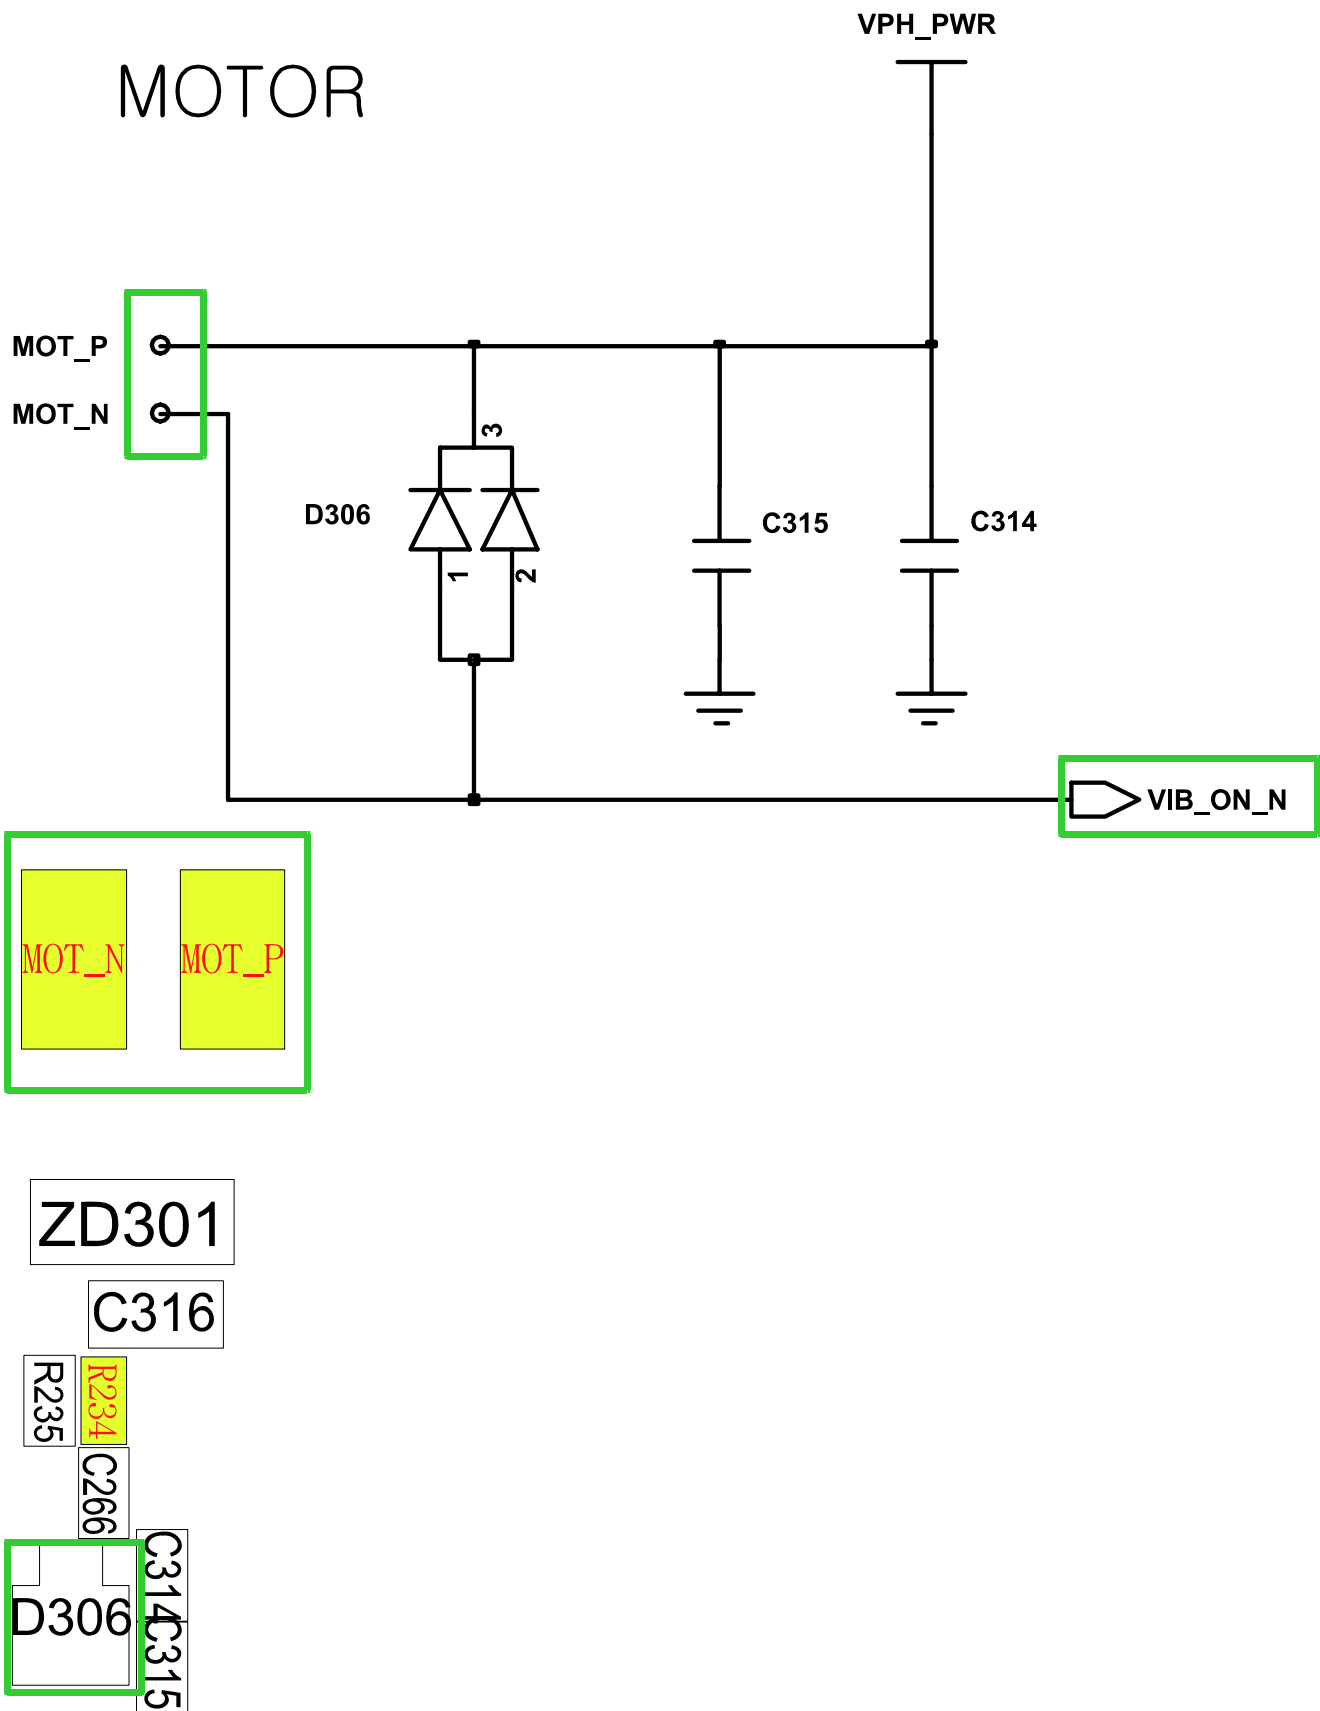


9-2. 射频部分

9-2-1.RX路径

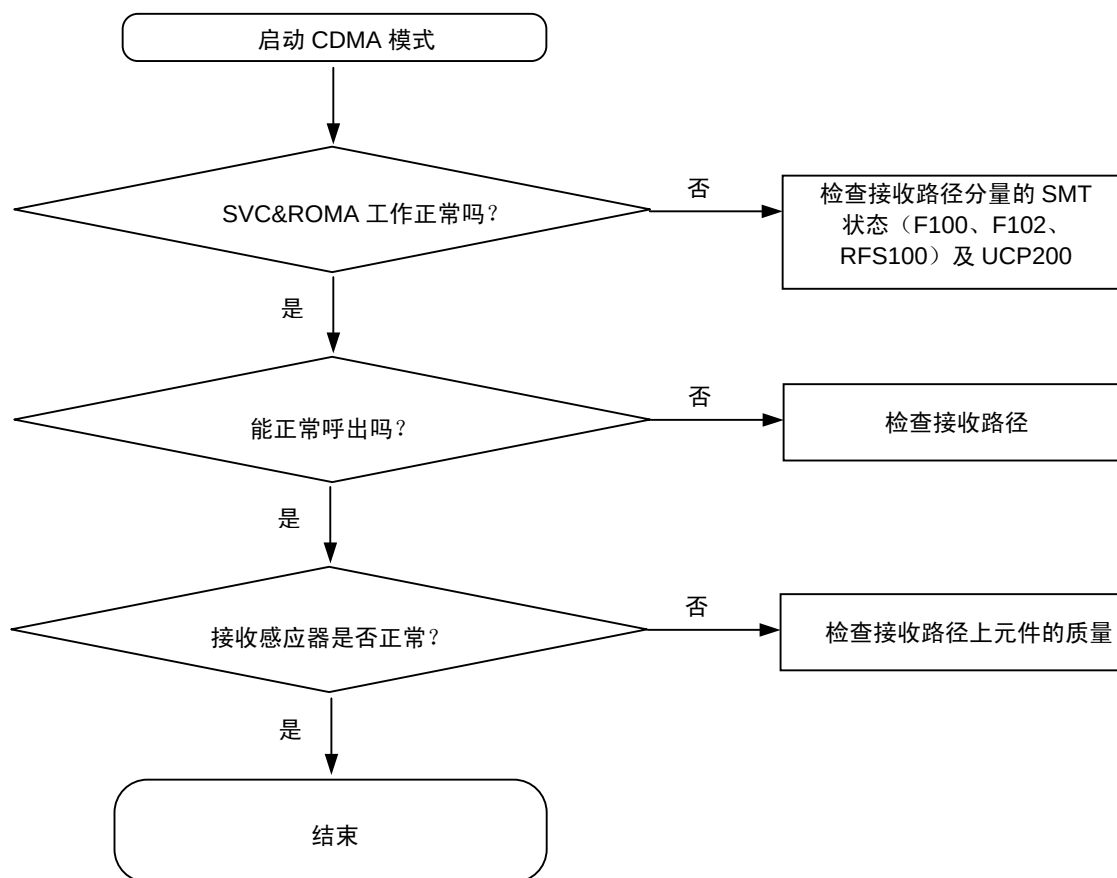

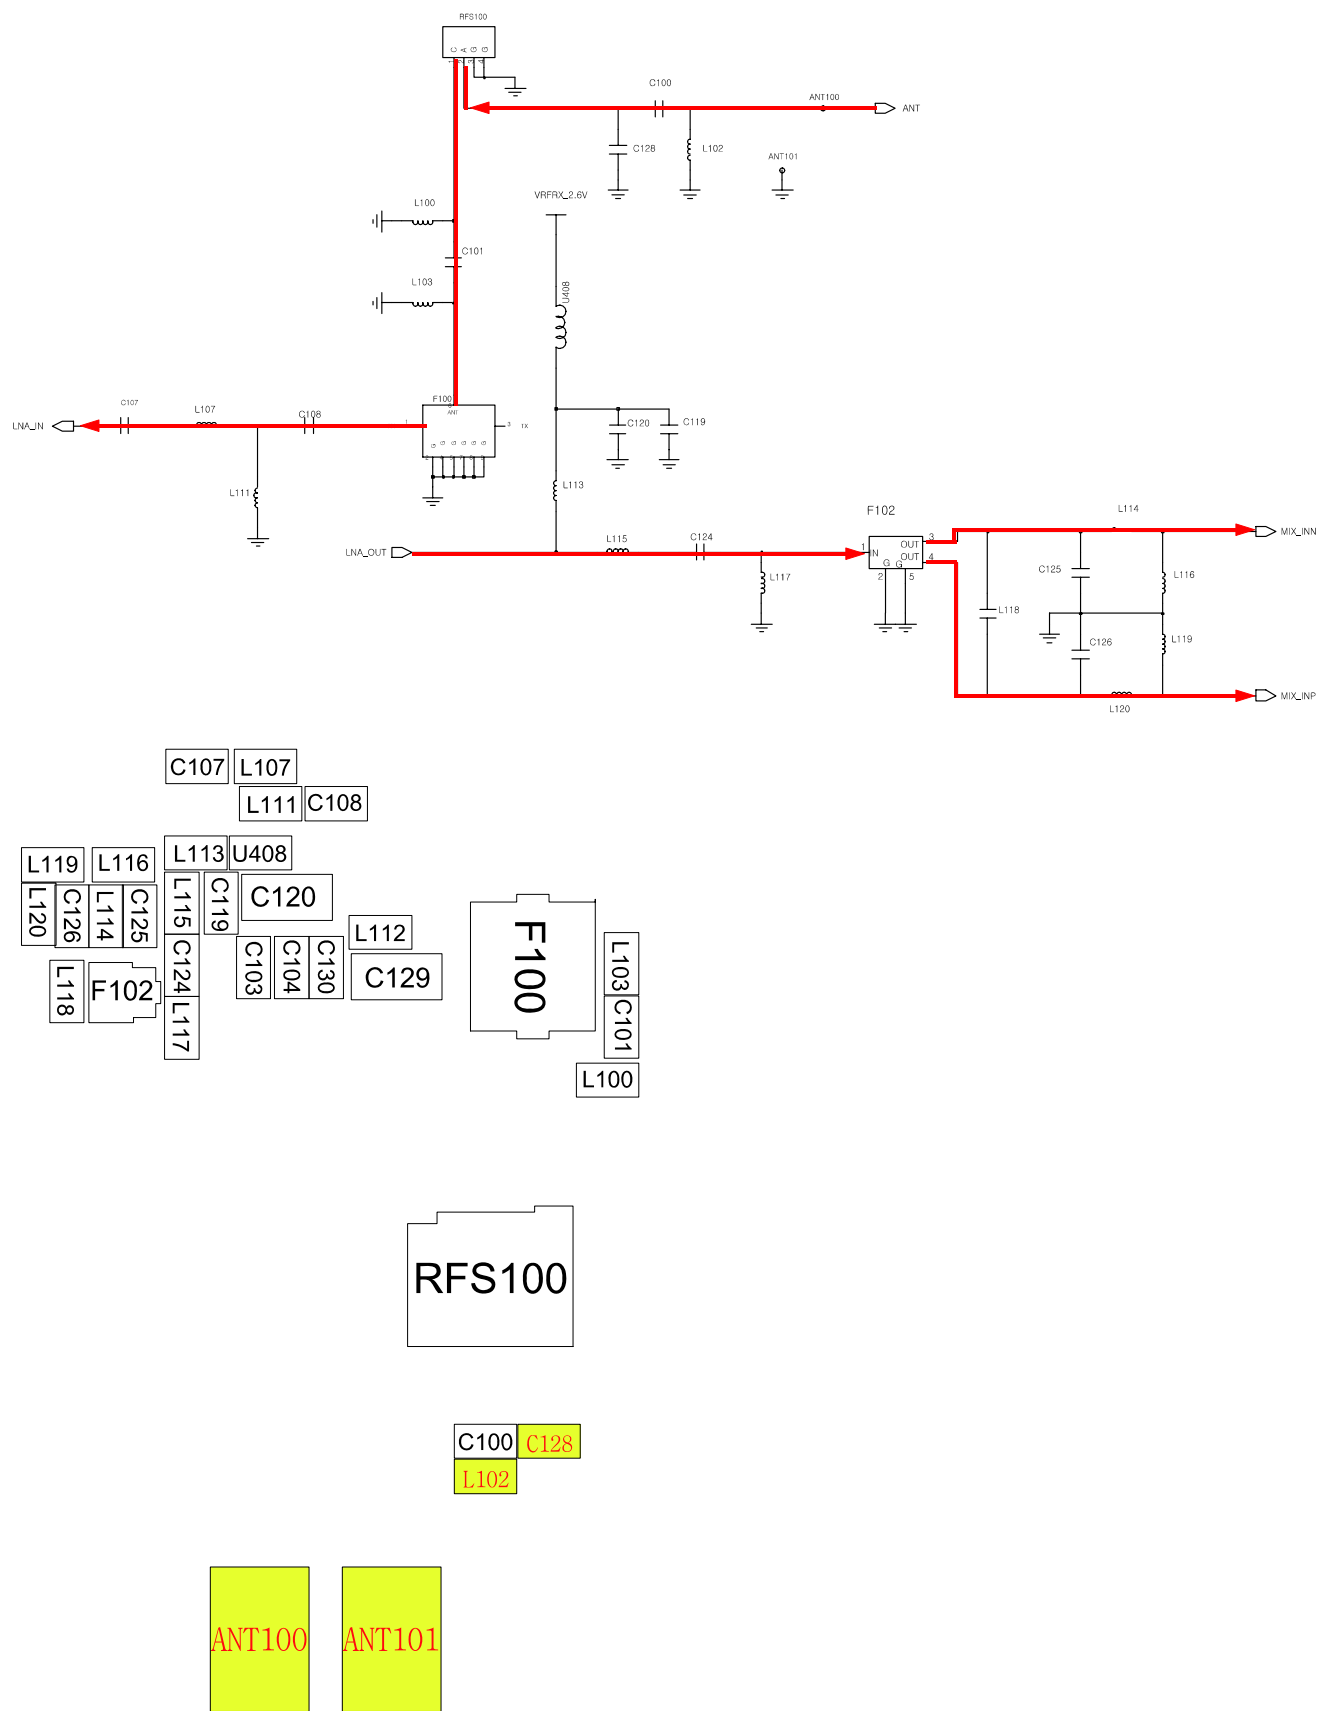


9-2-2 TX路径

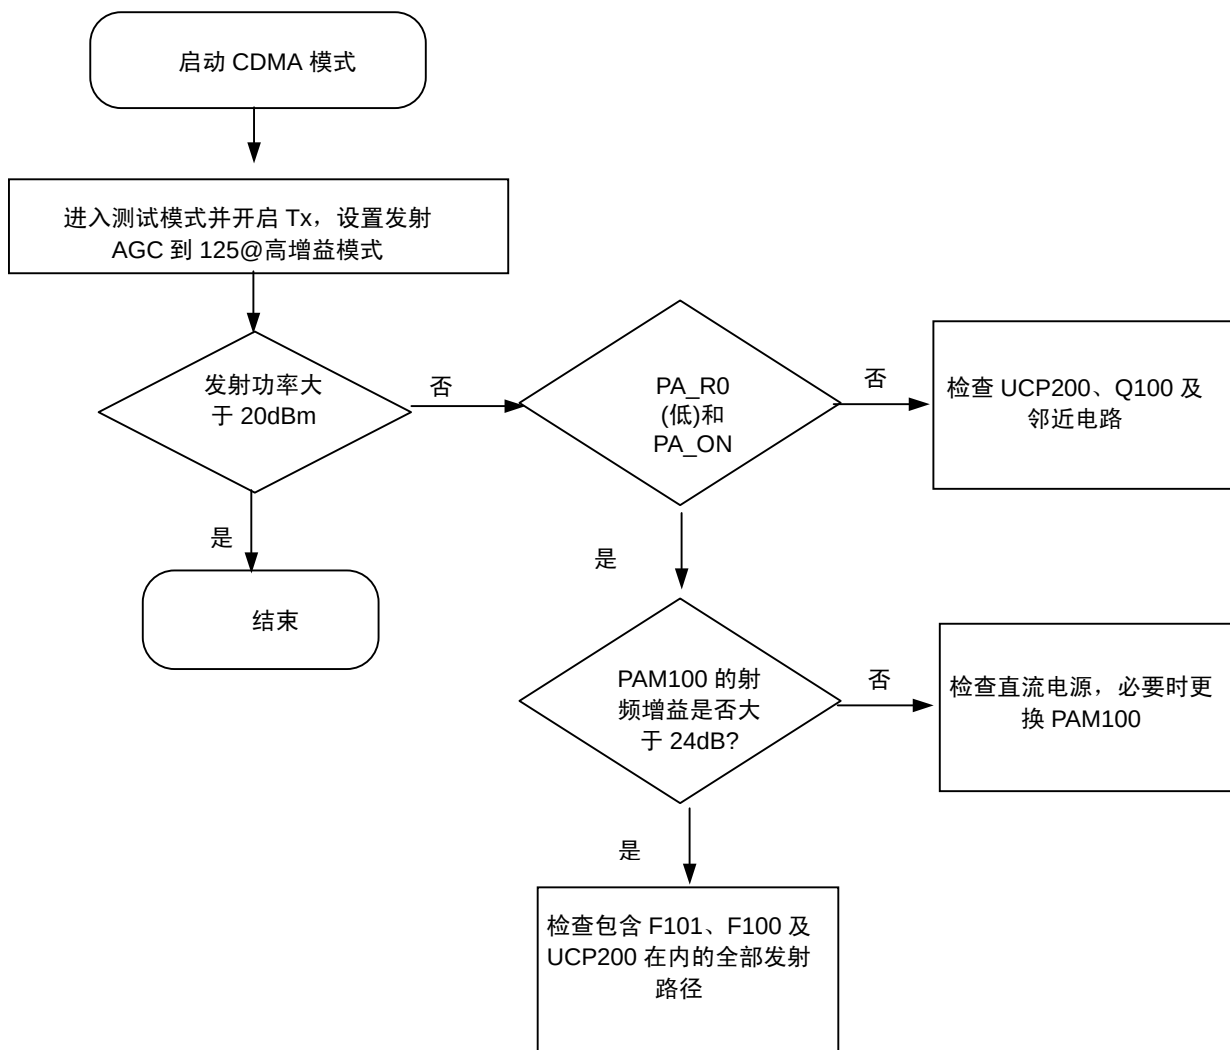




7.框图

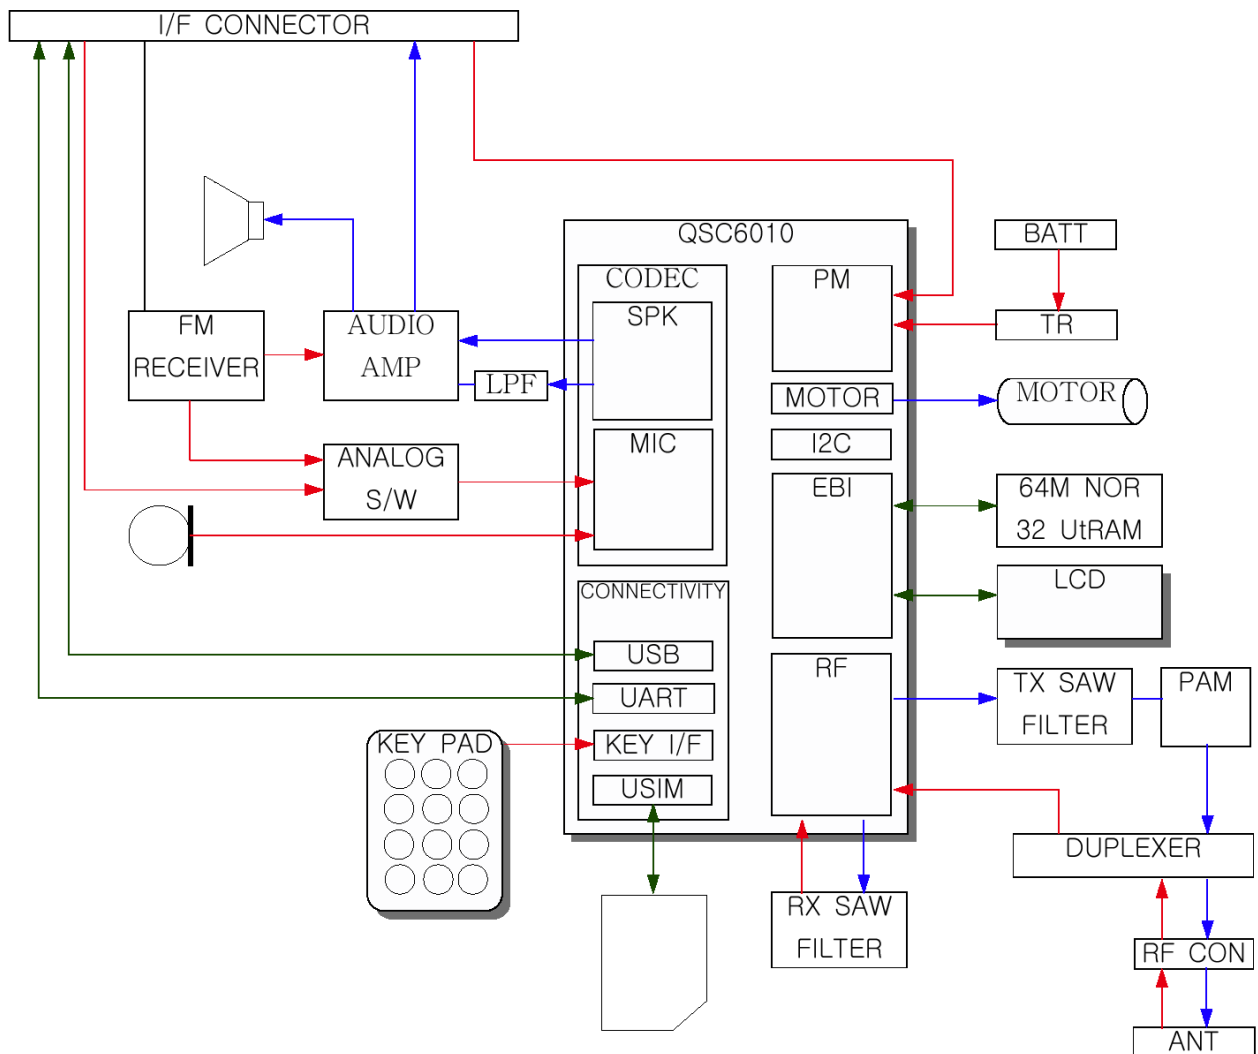

8.主板图

8.1主板顶部

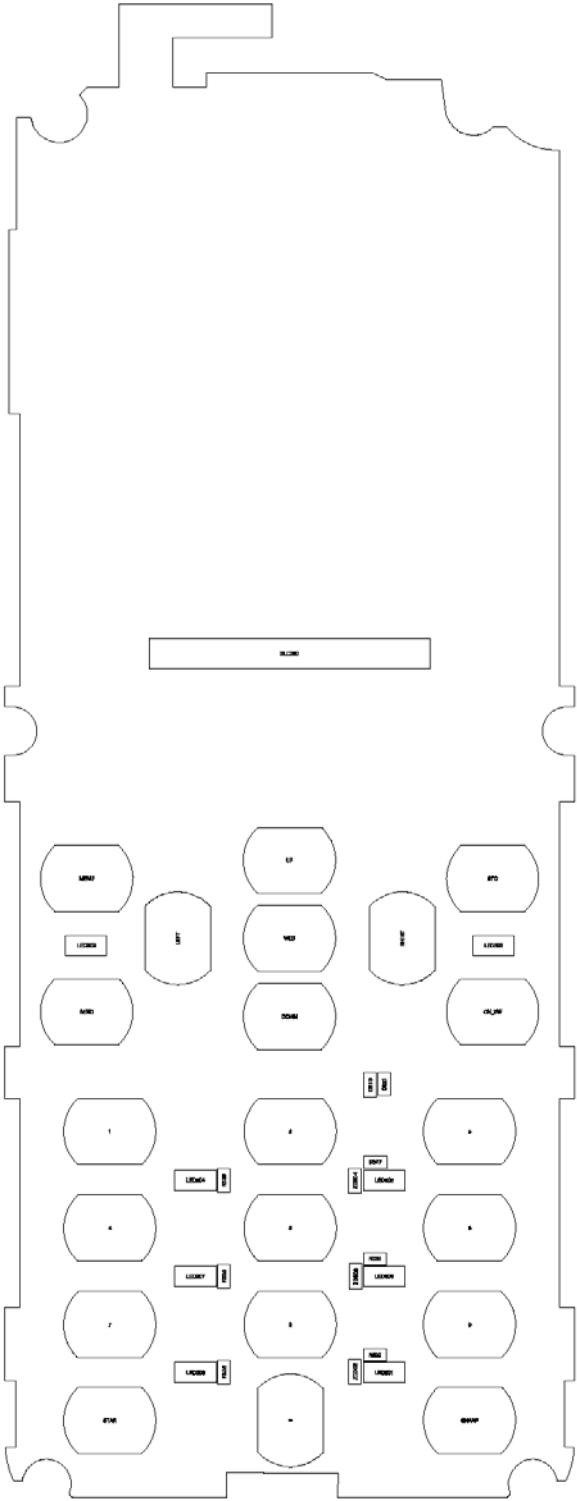

8.2 主板底部

