



F370 MAIN BOARD TOP

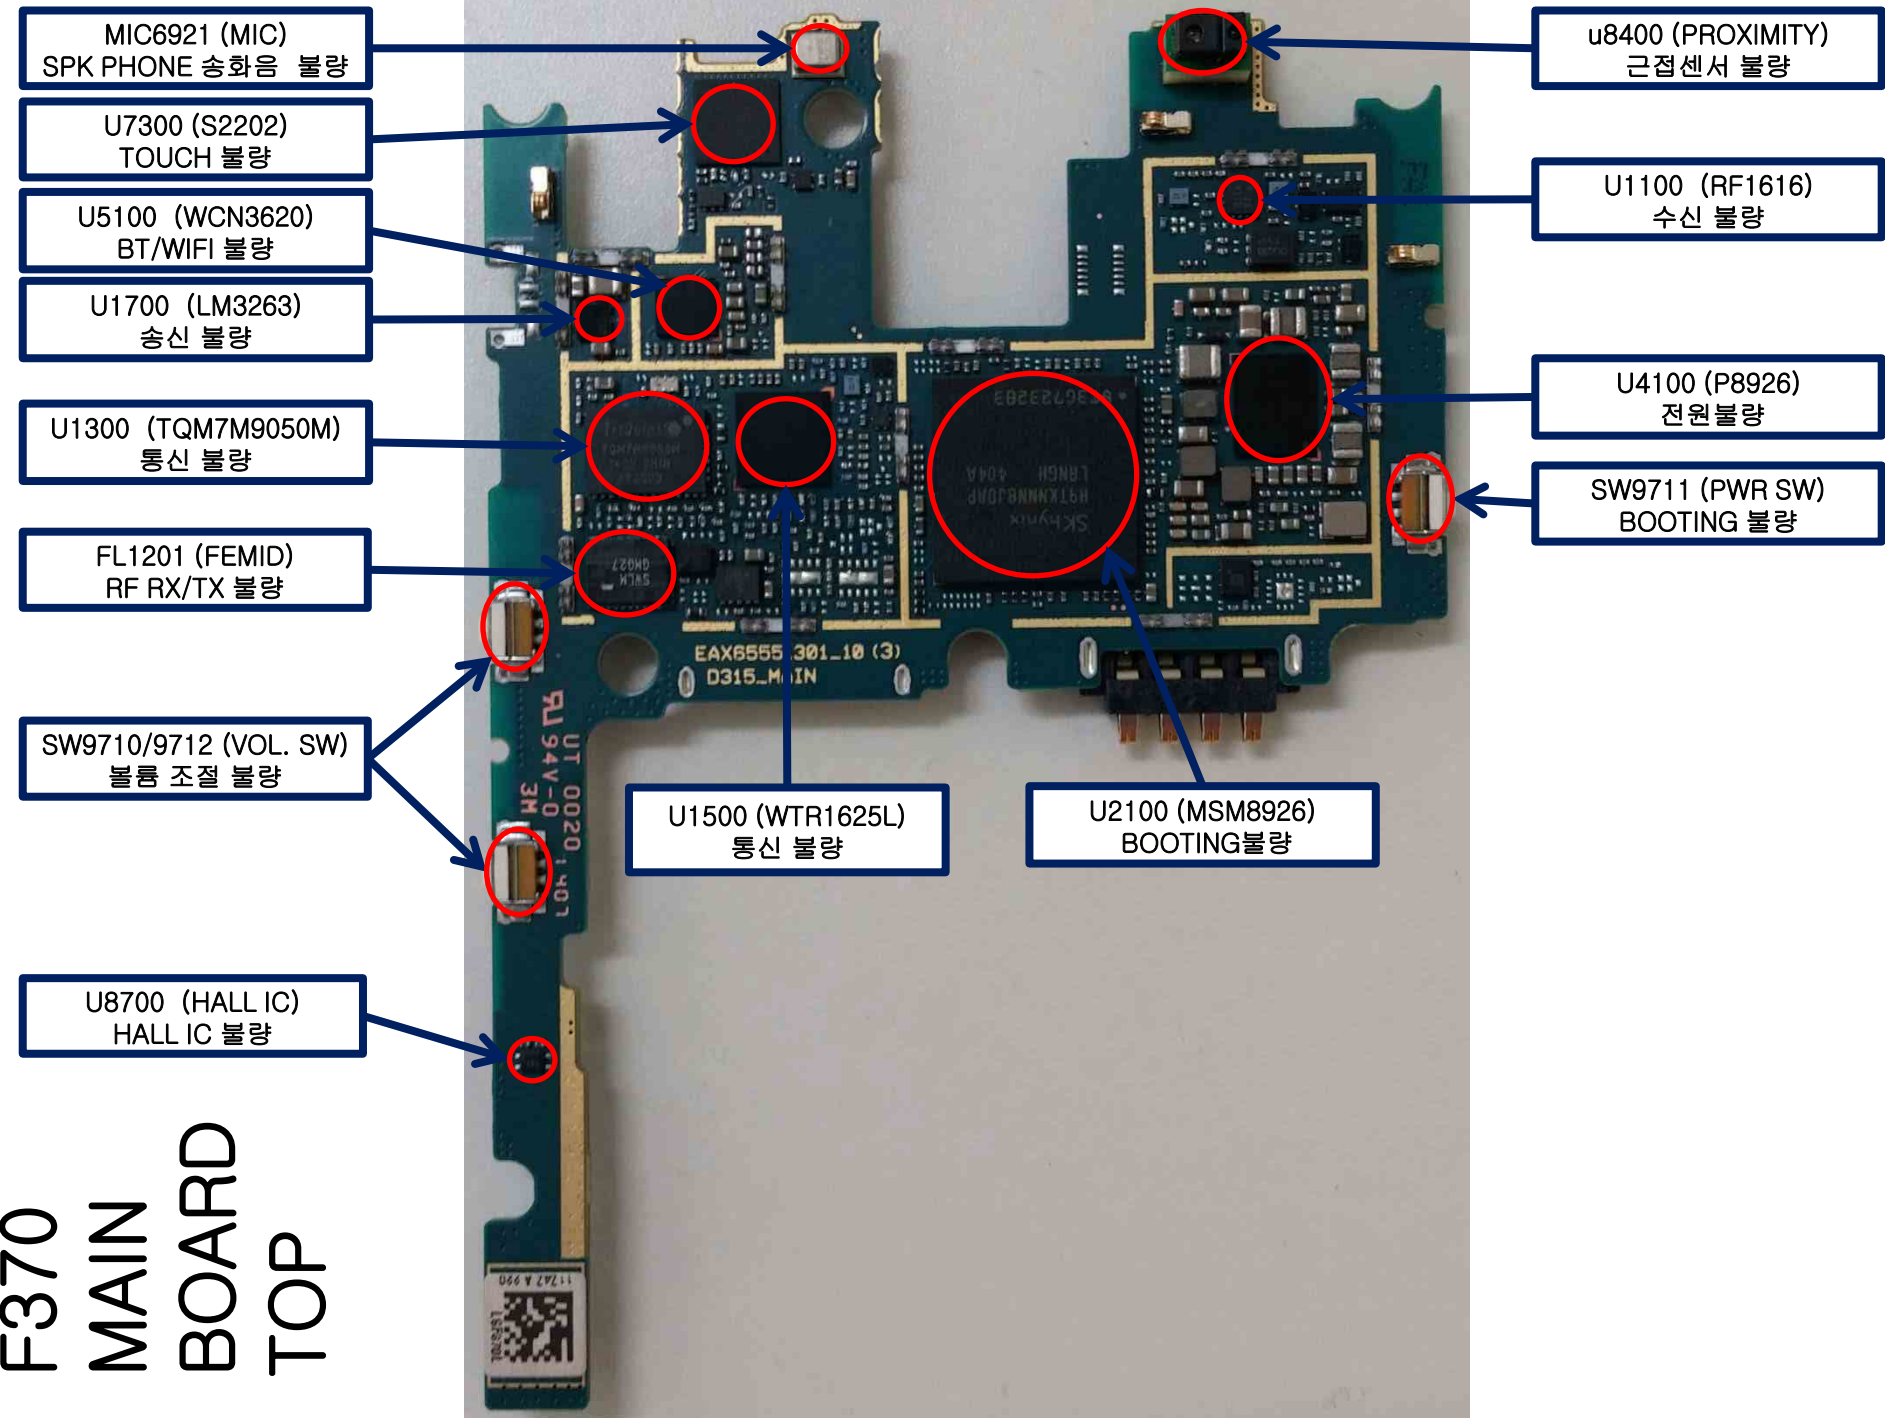

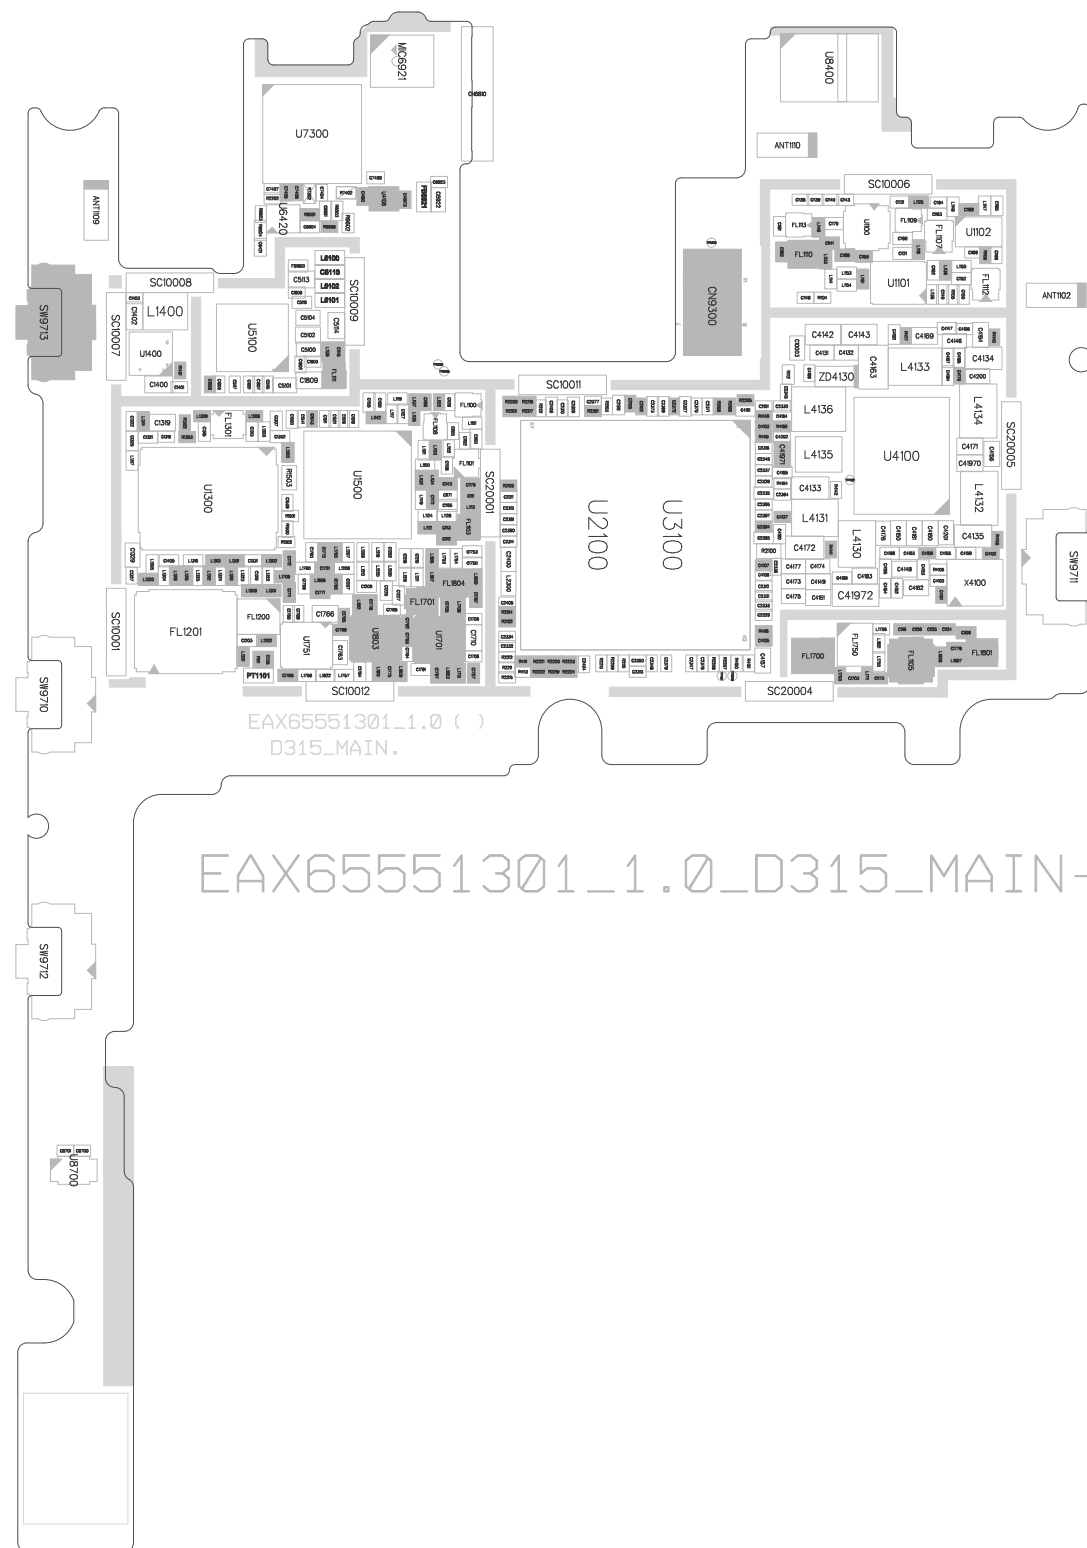


EAX65551301_1.0 ()
D315_MAIN.

EAX65551301_1.0_D315_MAIN-TOP

F370 MAIN BOARD BOT

- CN7400
(FRONT CAM CONN.)
FRONT CAM 불량
- U8100 (BMC150)
ACCEL, COMPASS 불량
- CN7300 (MAIN CAM CONN.)
MAIN CAM 불량
- U3200 (eMMC MEMORY)
부팅 불량
- CN9100
(BATTERY CONN.)
부팅 불량

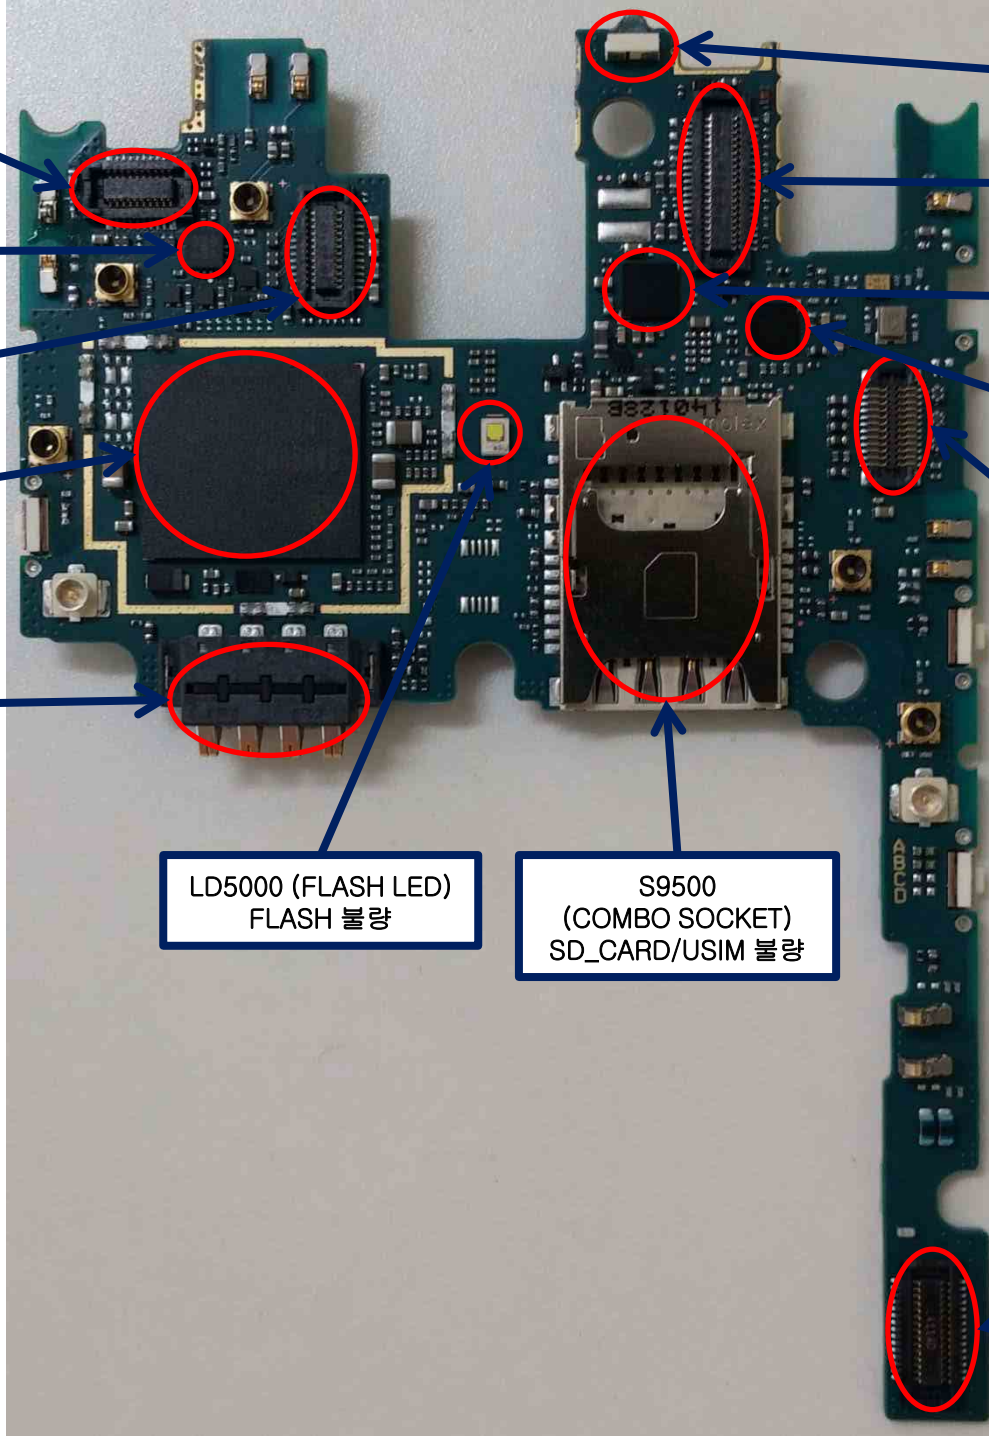

LD5000 (FLASH LED)
FLASH 불량

S9500
(COMBO SOCKET)
SD_CARD/USIM 불량

CN10000
(F_LOWER CONN.)
충전
/USB/HOMEKEY/MIC/진
동/통화 불량


CN7100 (LCD CONN.)
LCD 불량

U5200 (PN547)
NFC 불량

U6100 (WCD9320)
AUDIO 불량


CN7200
(TOUCH CONN.)
터치 불량

LD8950 (IRRC)
리모컨 불량

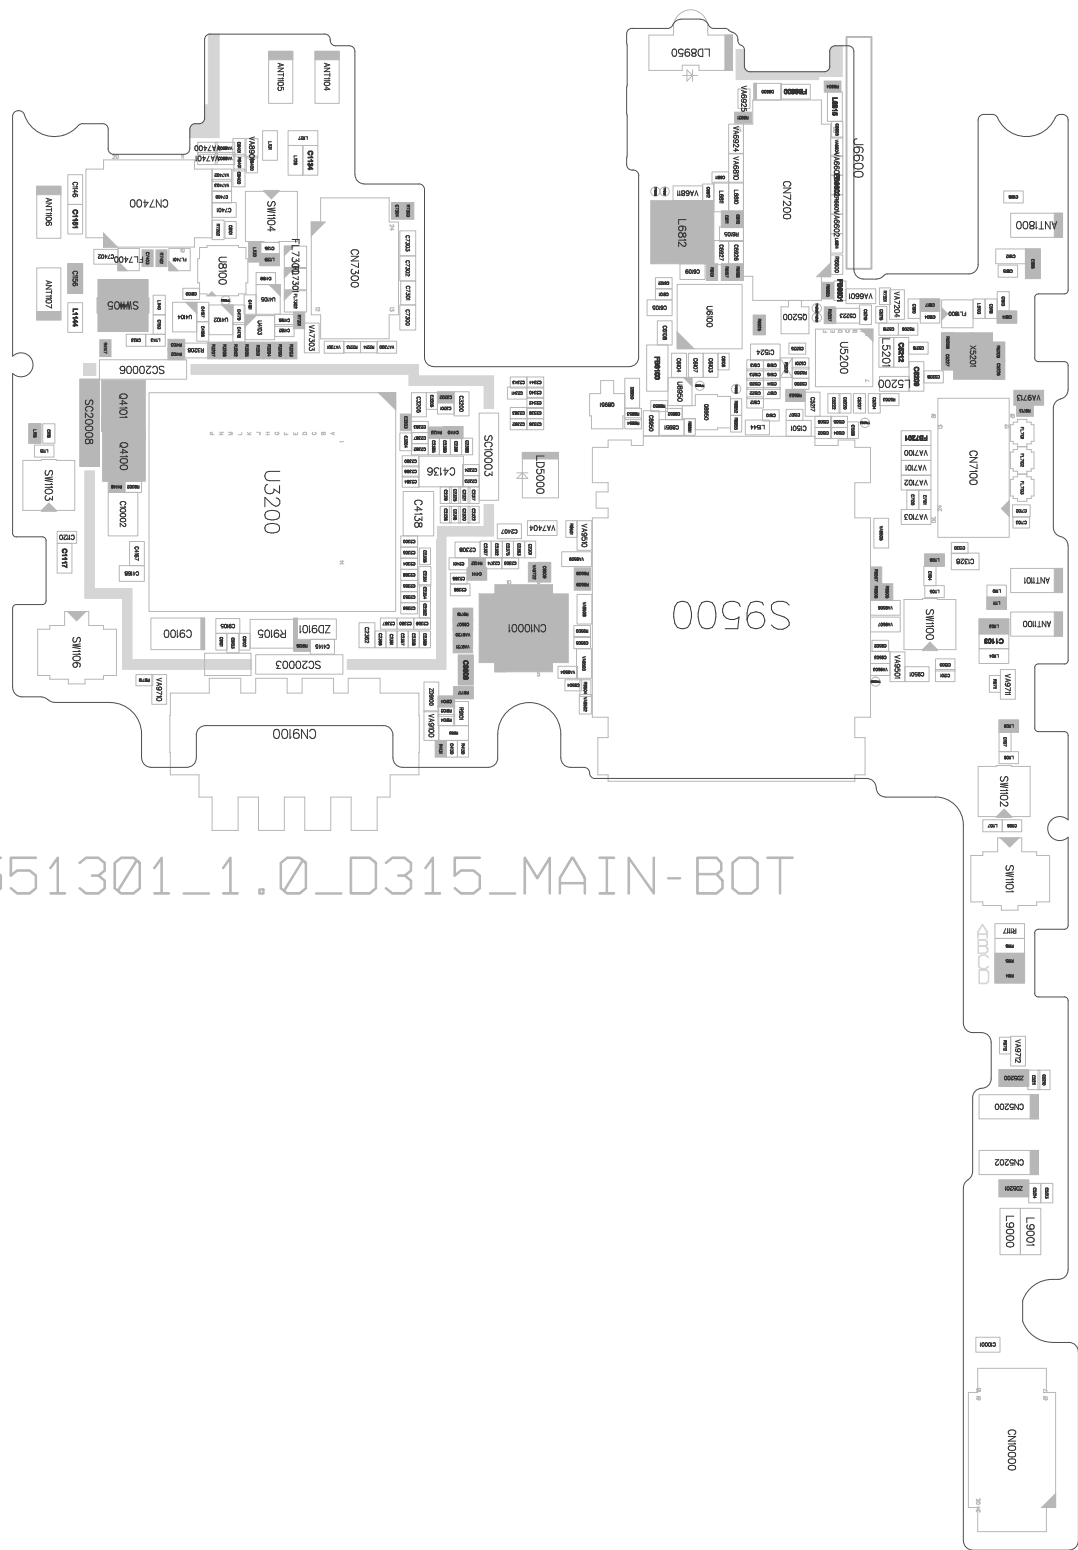



EAX65551301_1.0_D315_MAIN-BOT


F370 Lower FPCB

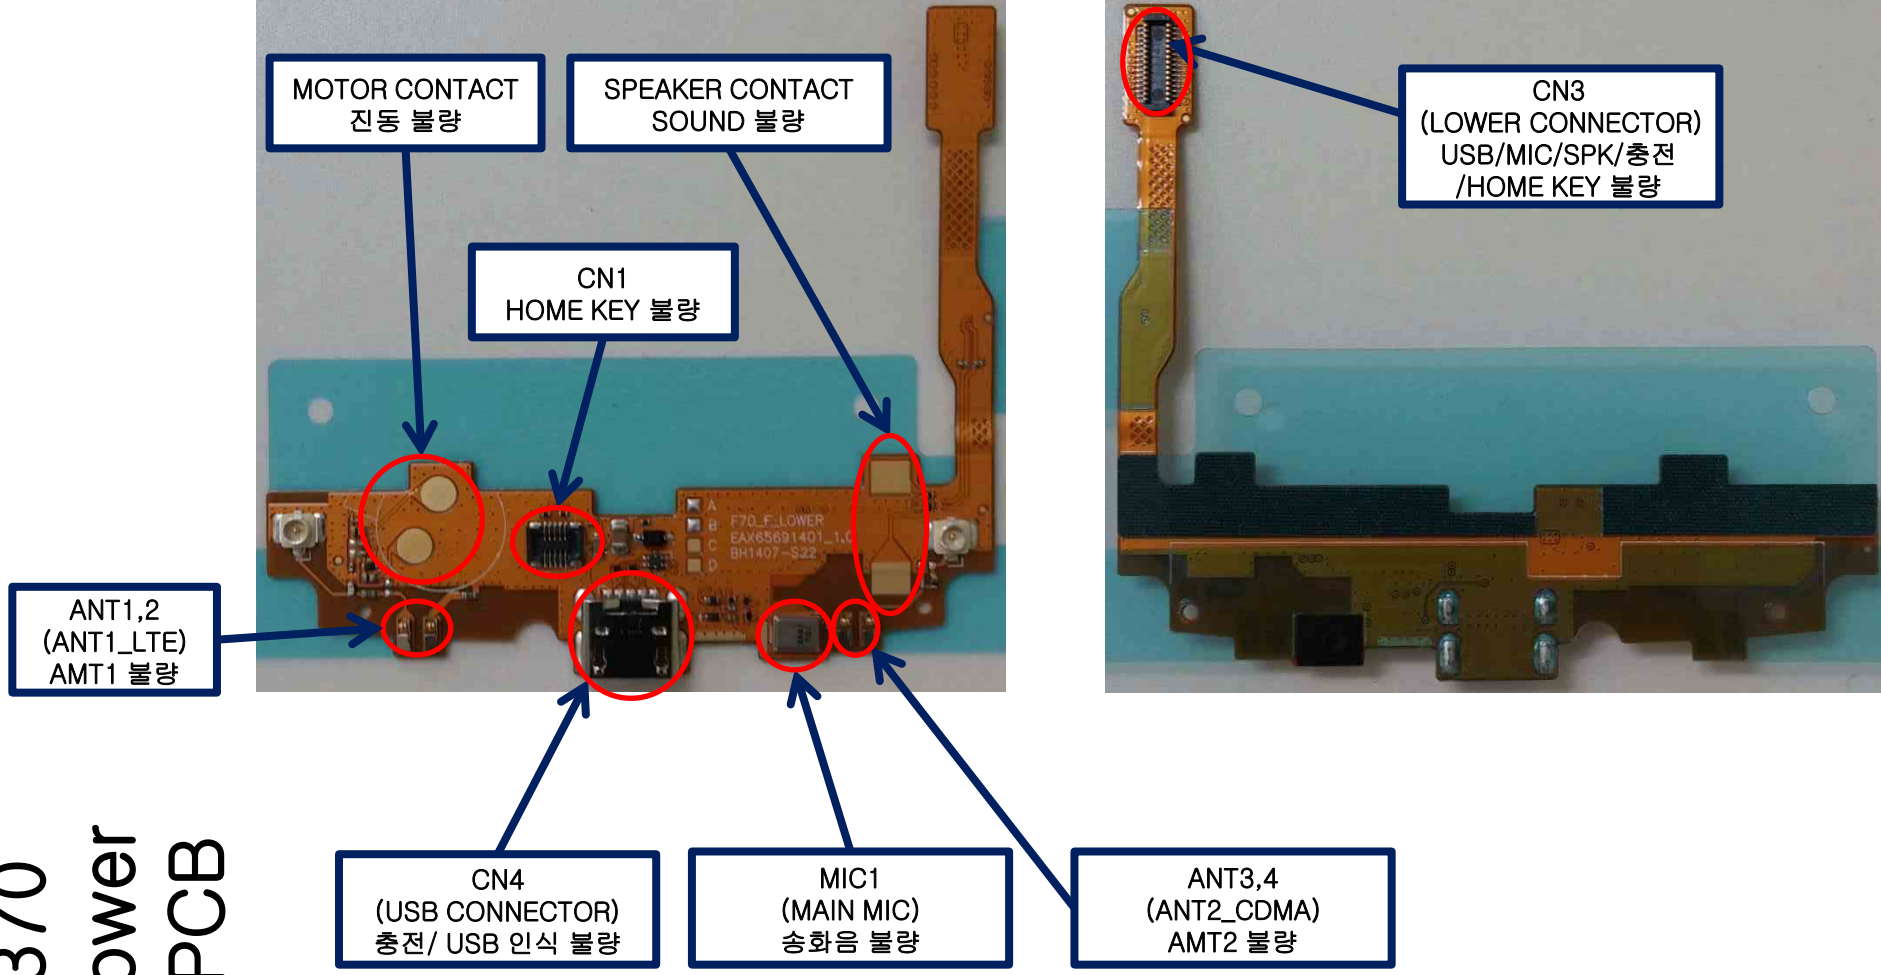




F370
HOME_Key
FPCB

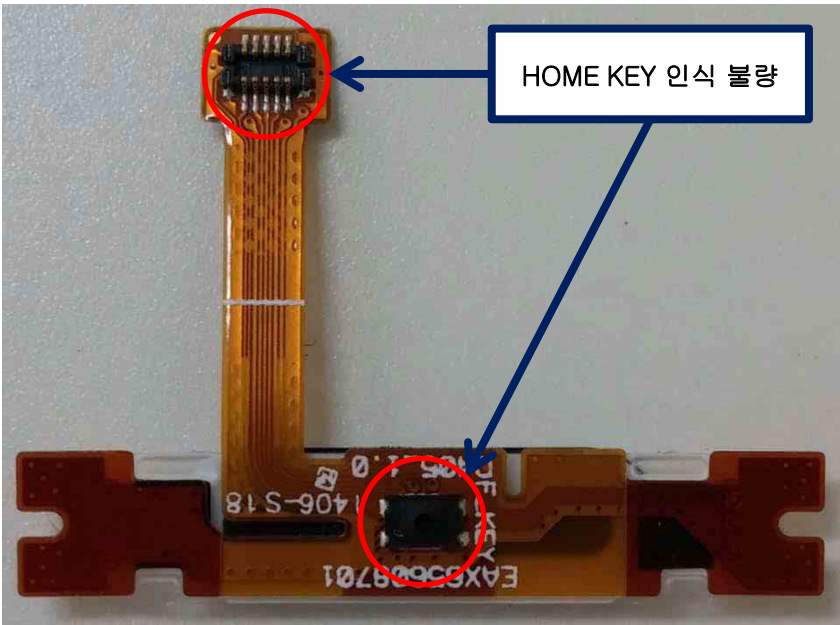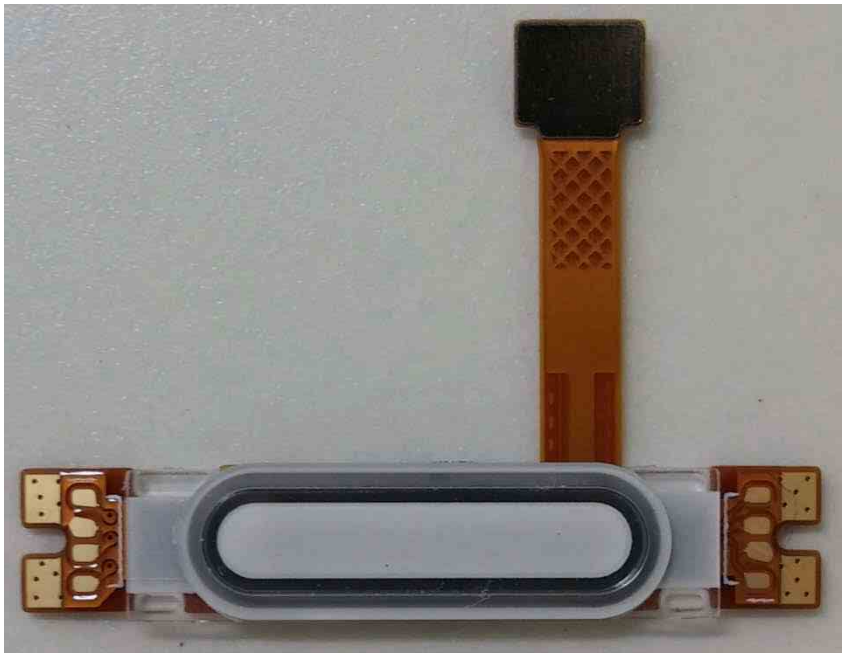


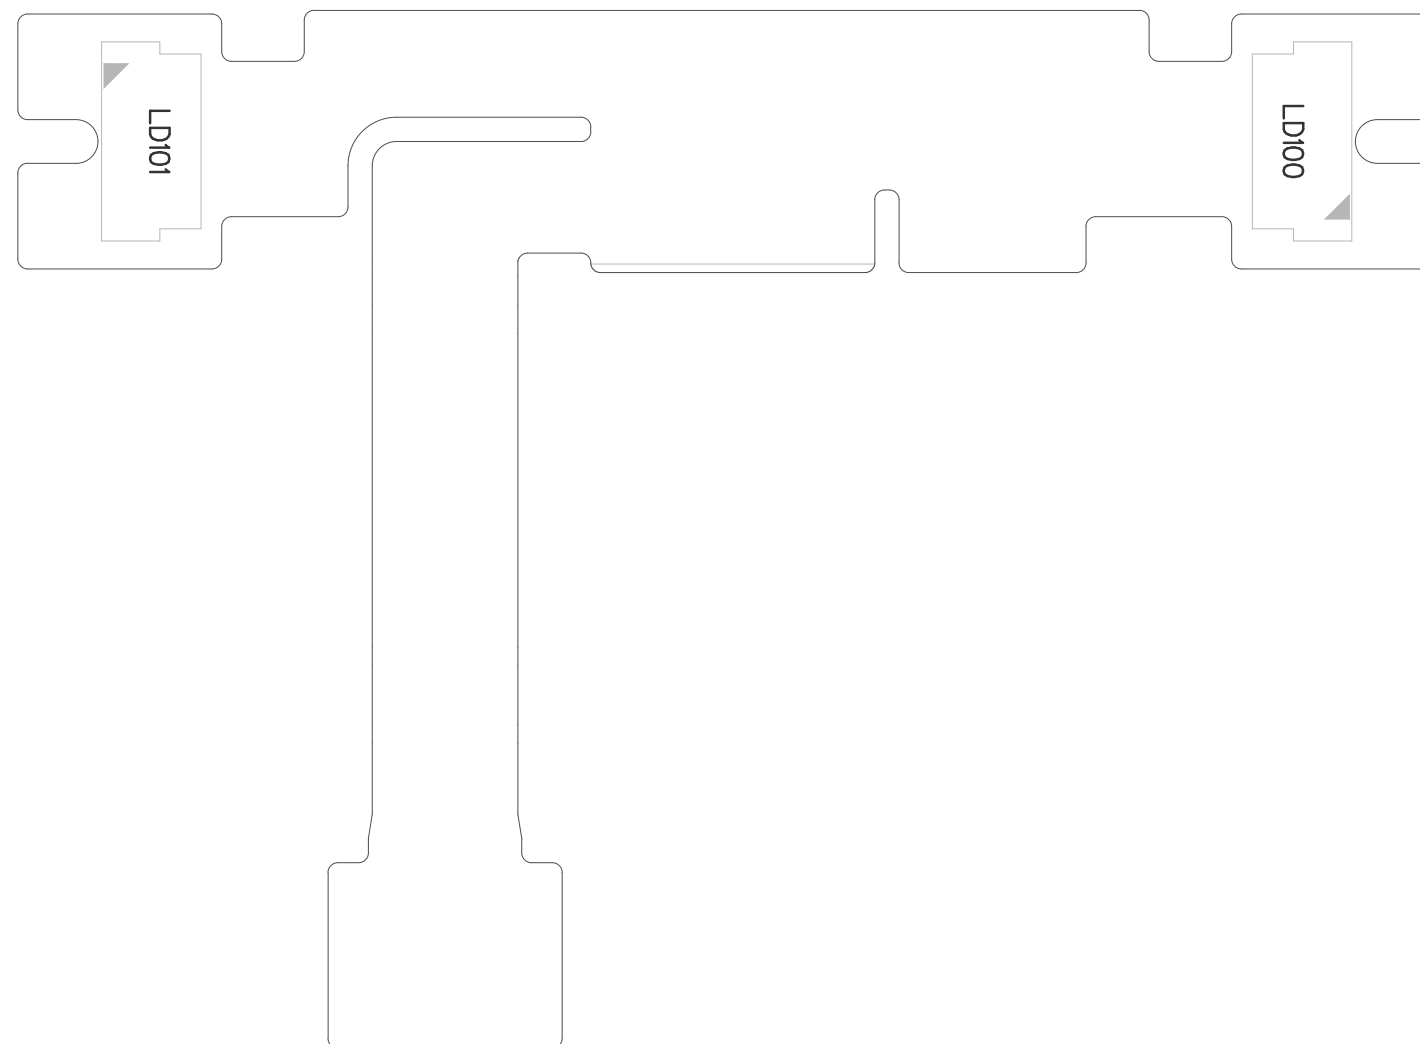


EAX65608701_1.0_D405_F-KEY_TOP

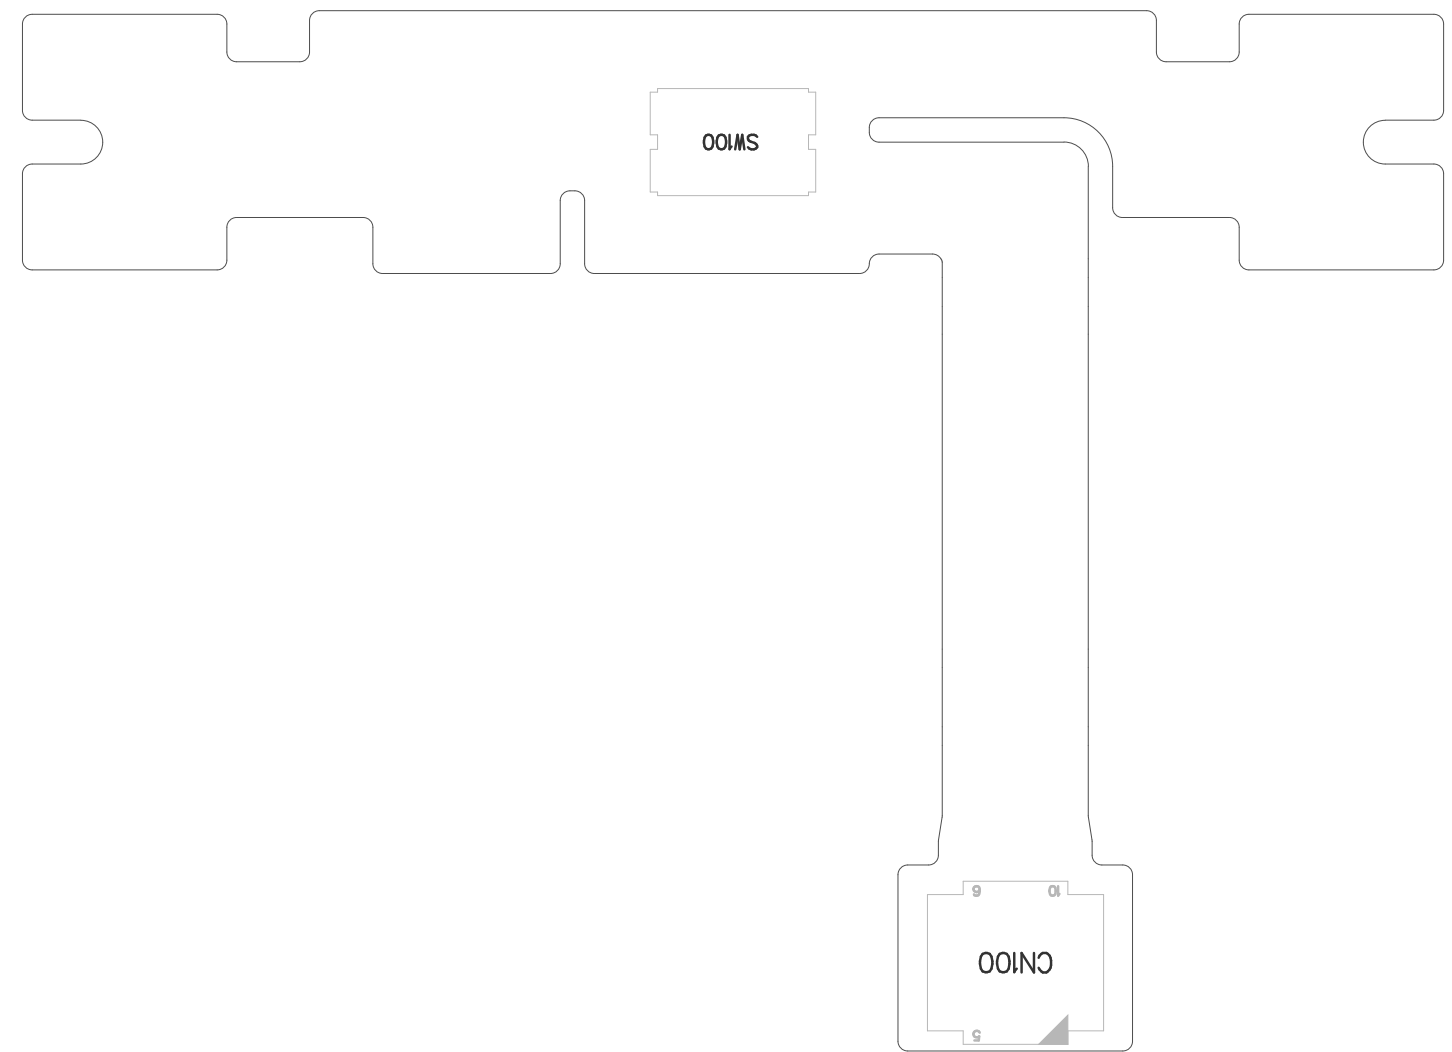


EAX65608701_1.0_D405_F-KEY_BOT

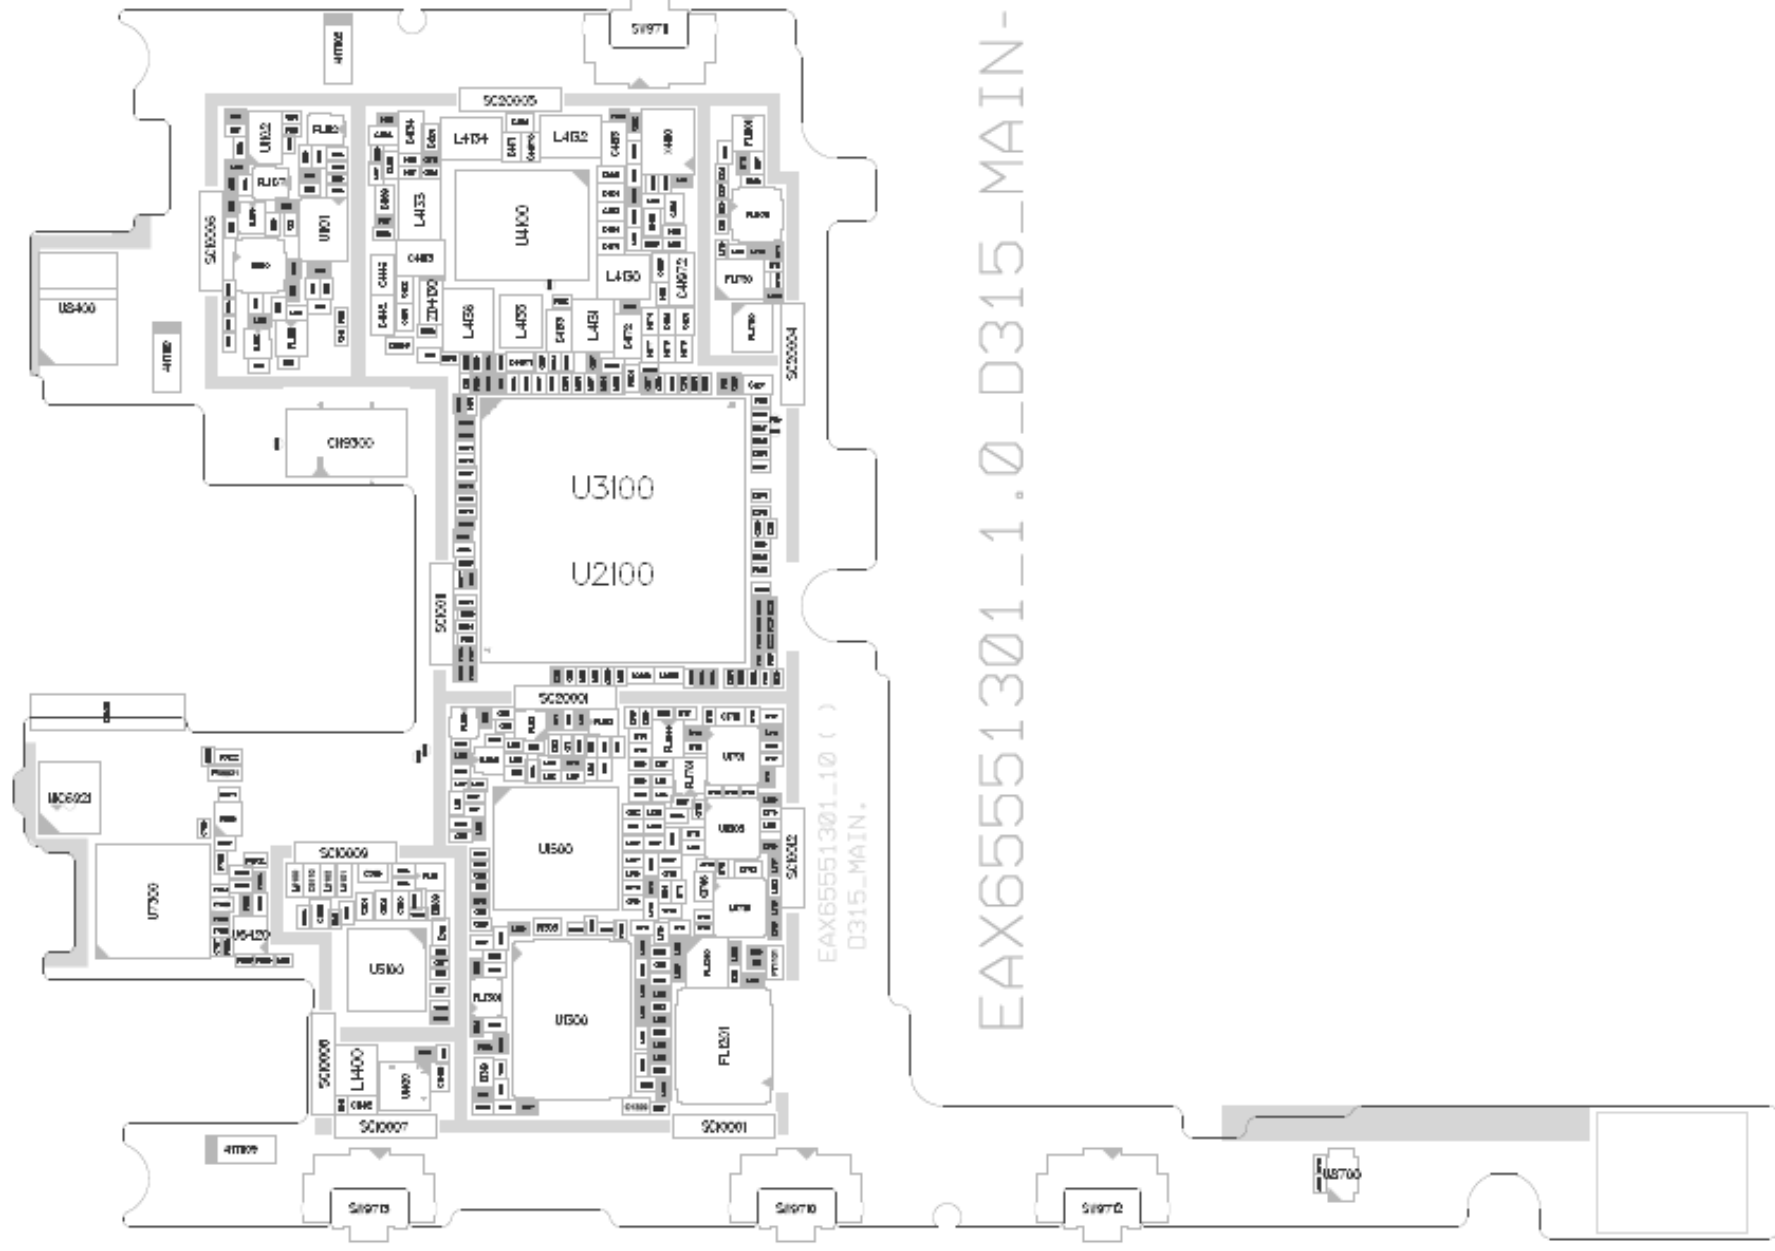


EAX65551301_1.0_D315_MAIN-TOP

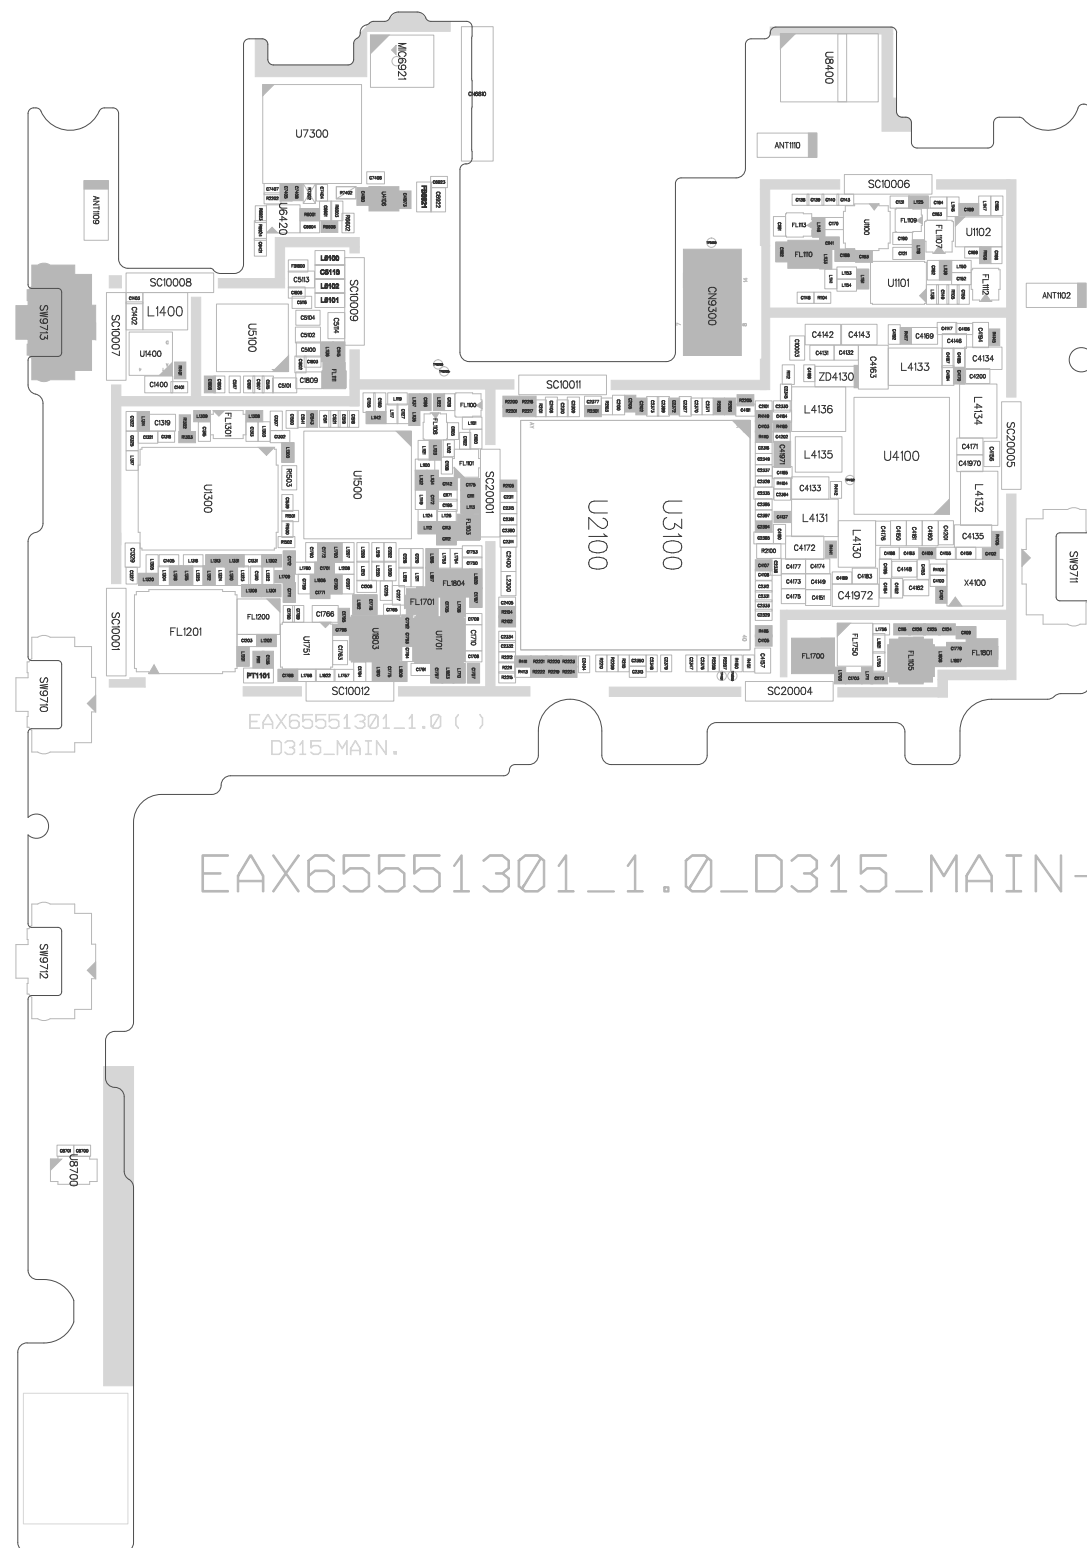

EAX65551301_1.0 ()
D315_MAIN.
EAX65551301_1.0_D315_MAIN-TOP

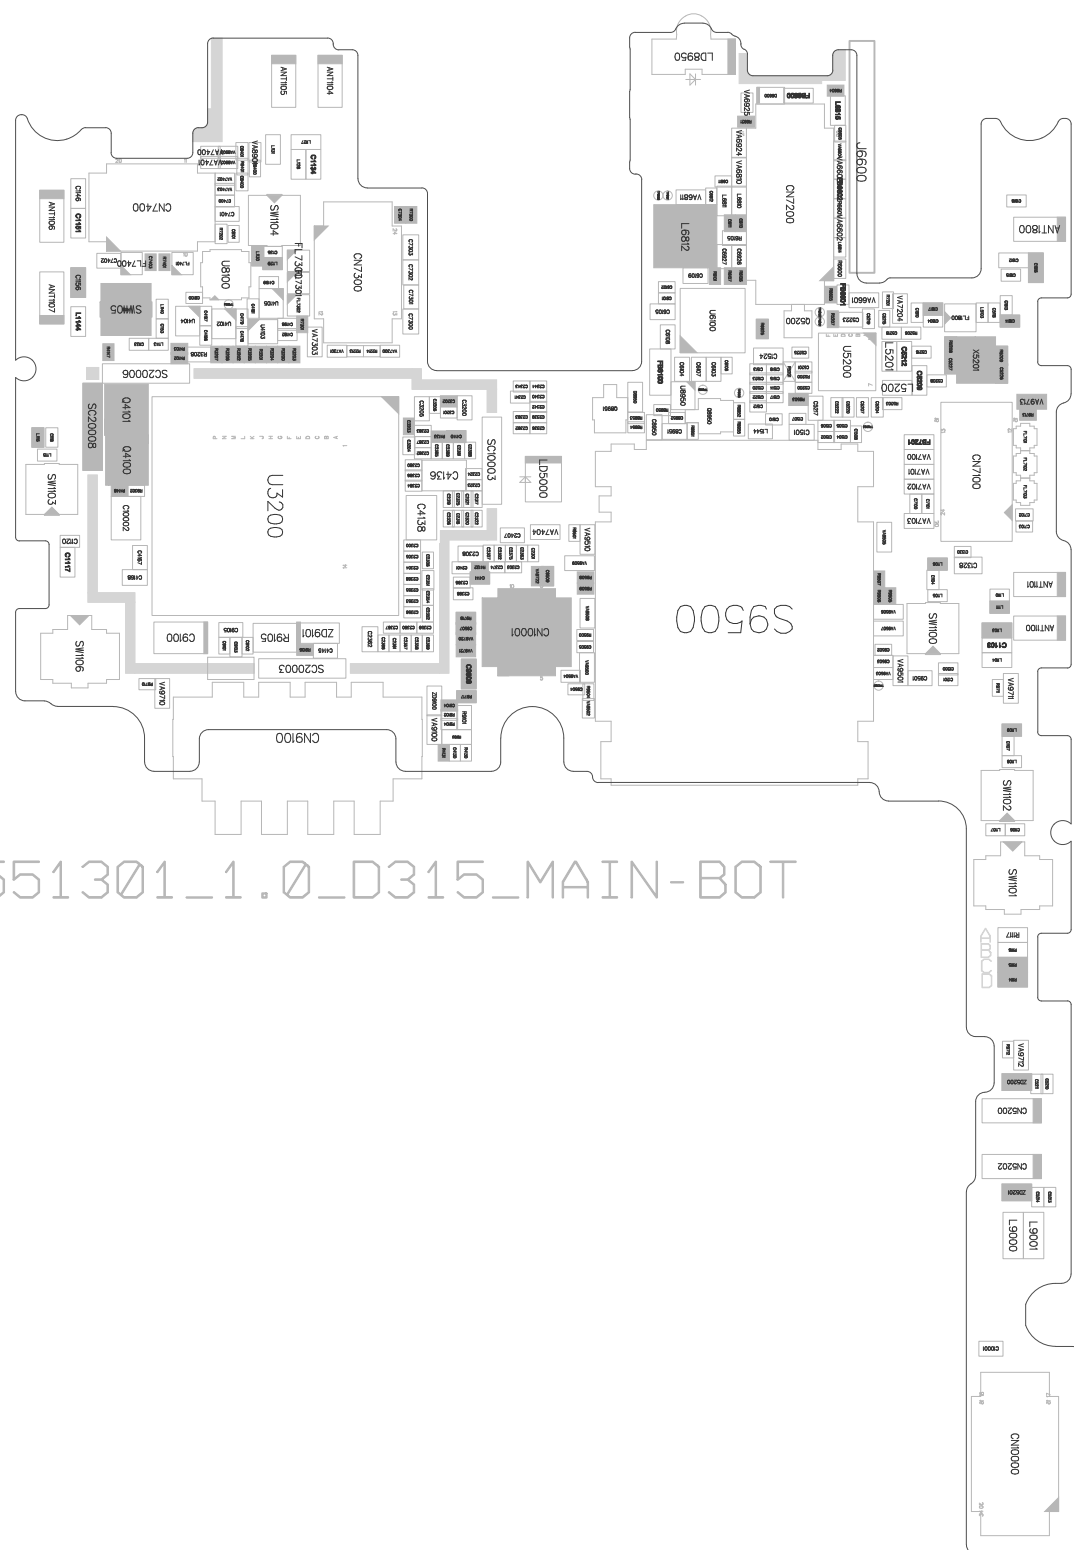



EAX65551301_1.0_D315_MAIN-BOT

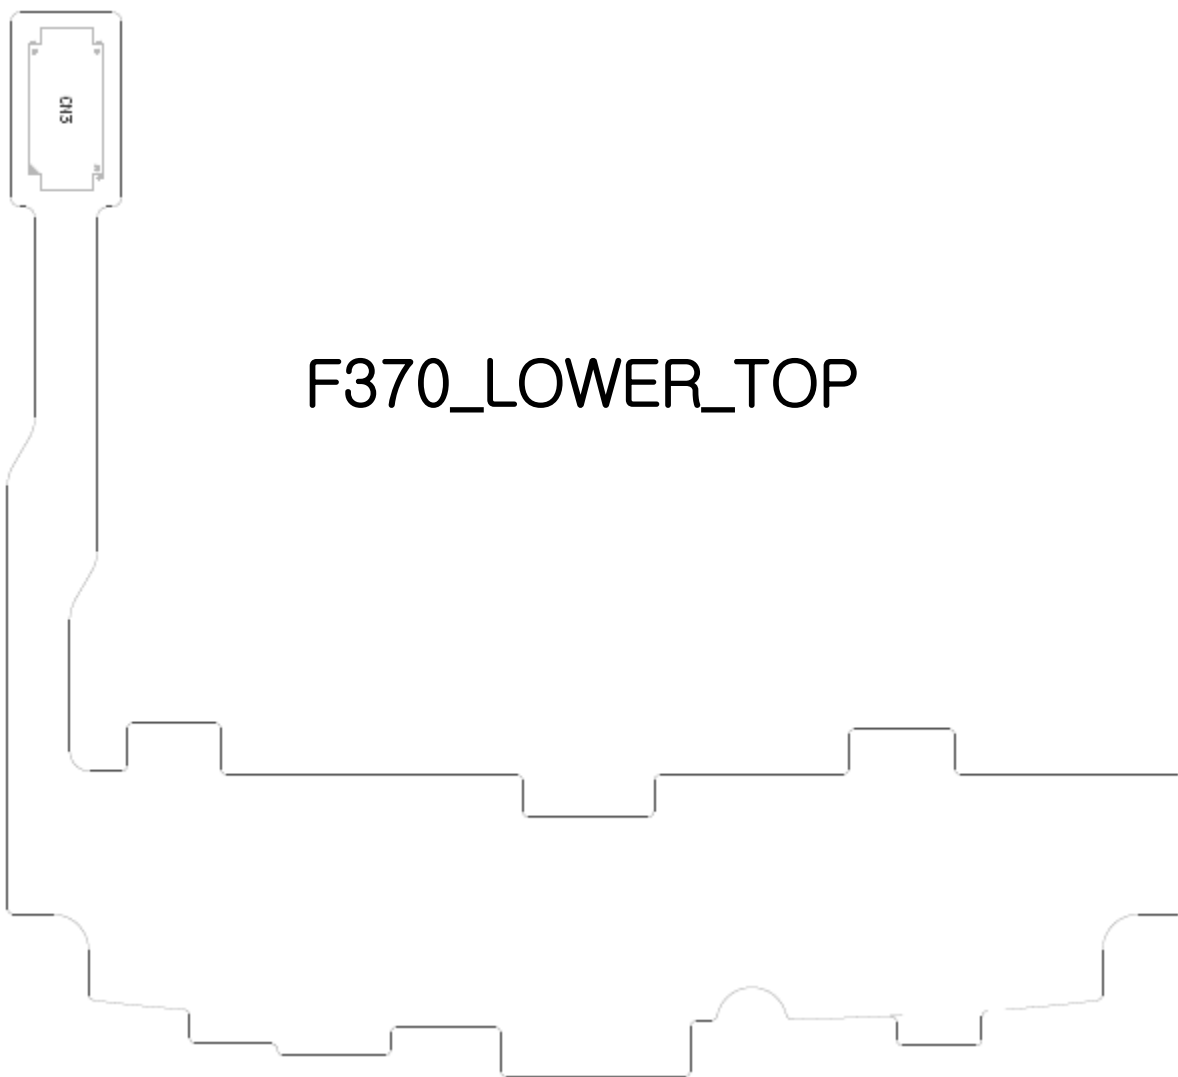


F370_LOWER_TOP

F370_LOWER_BOT

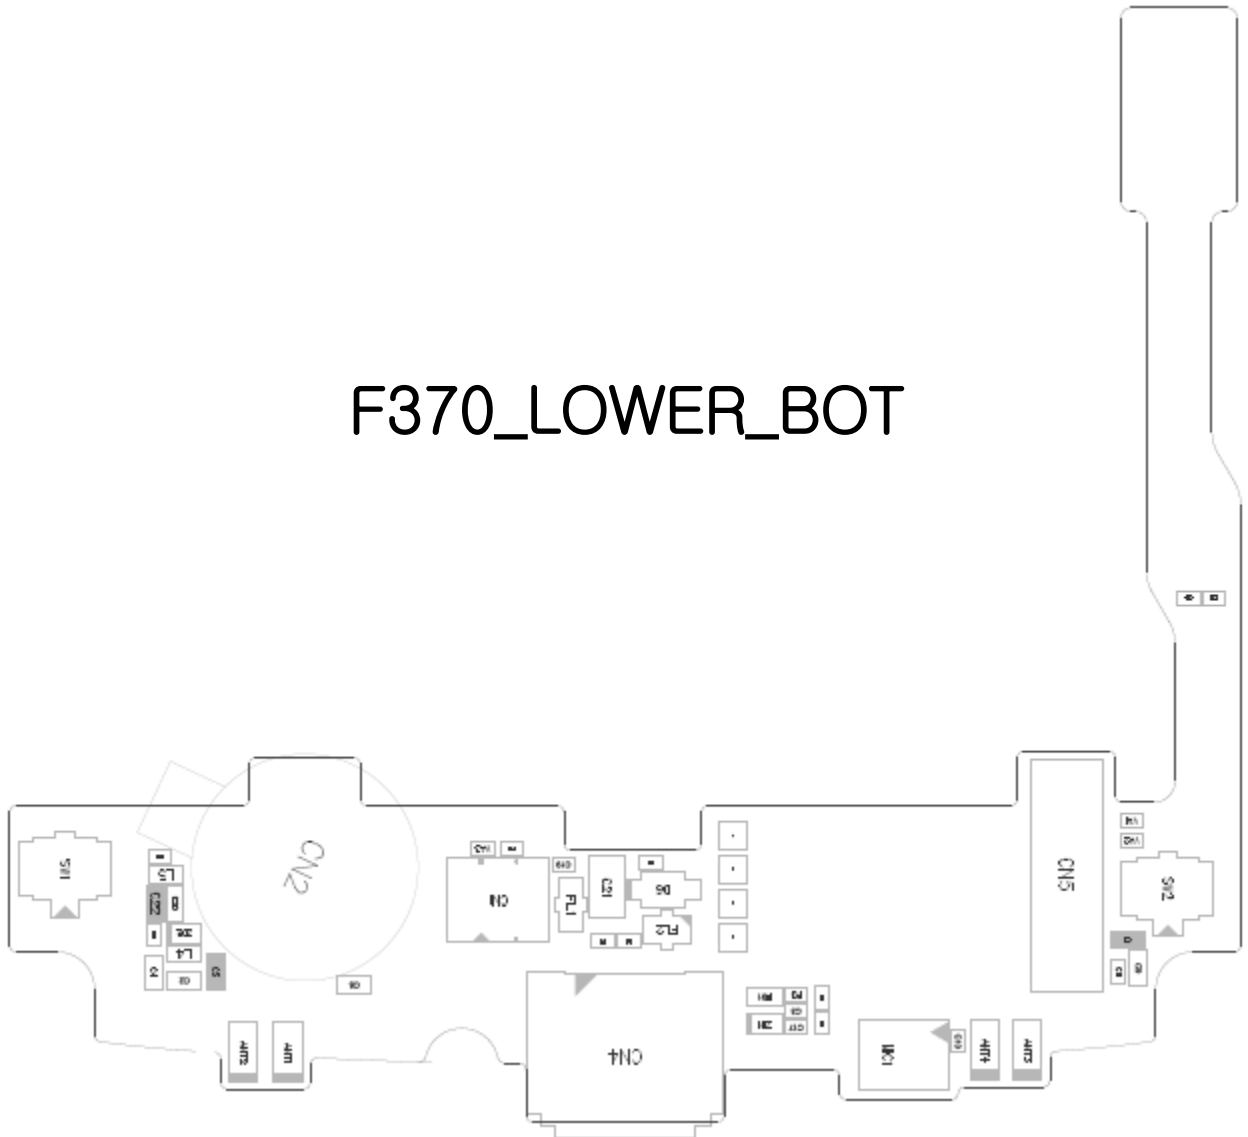


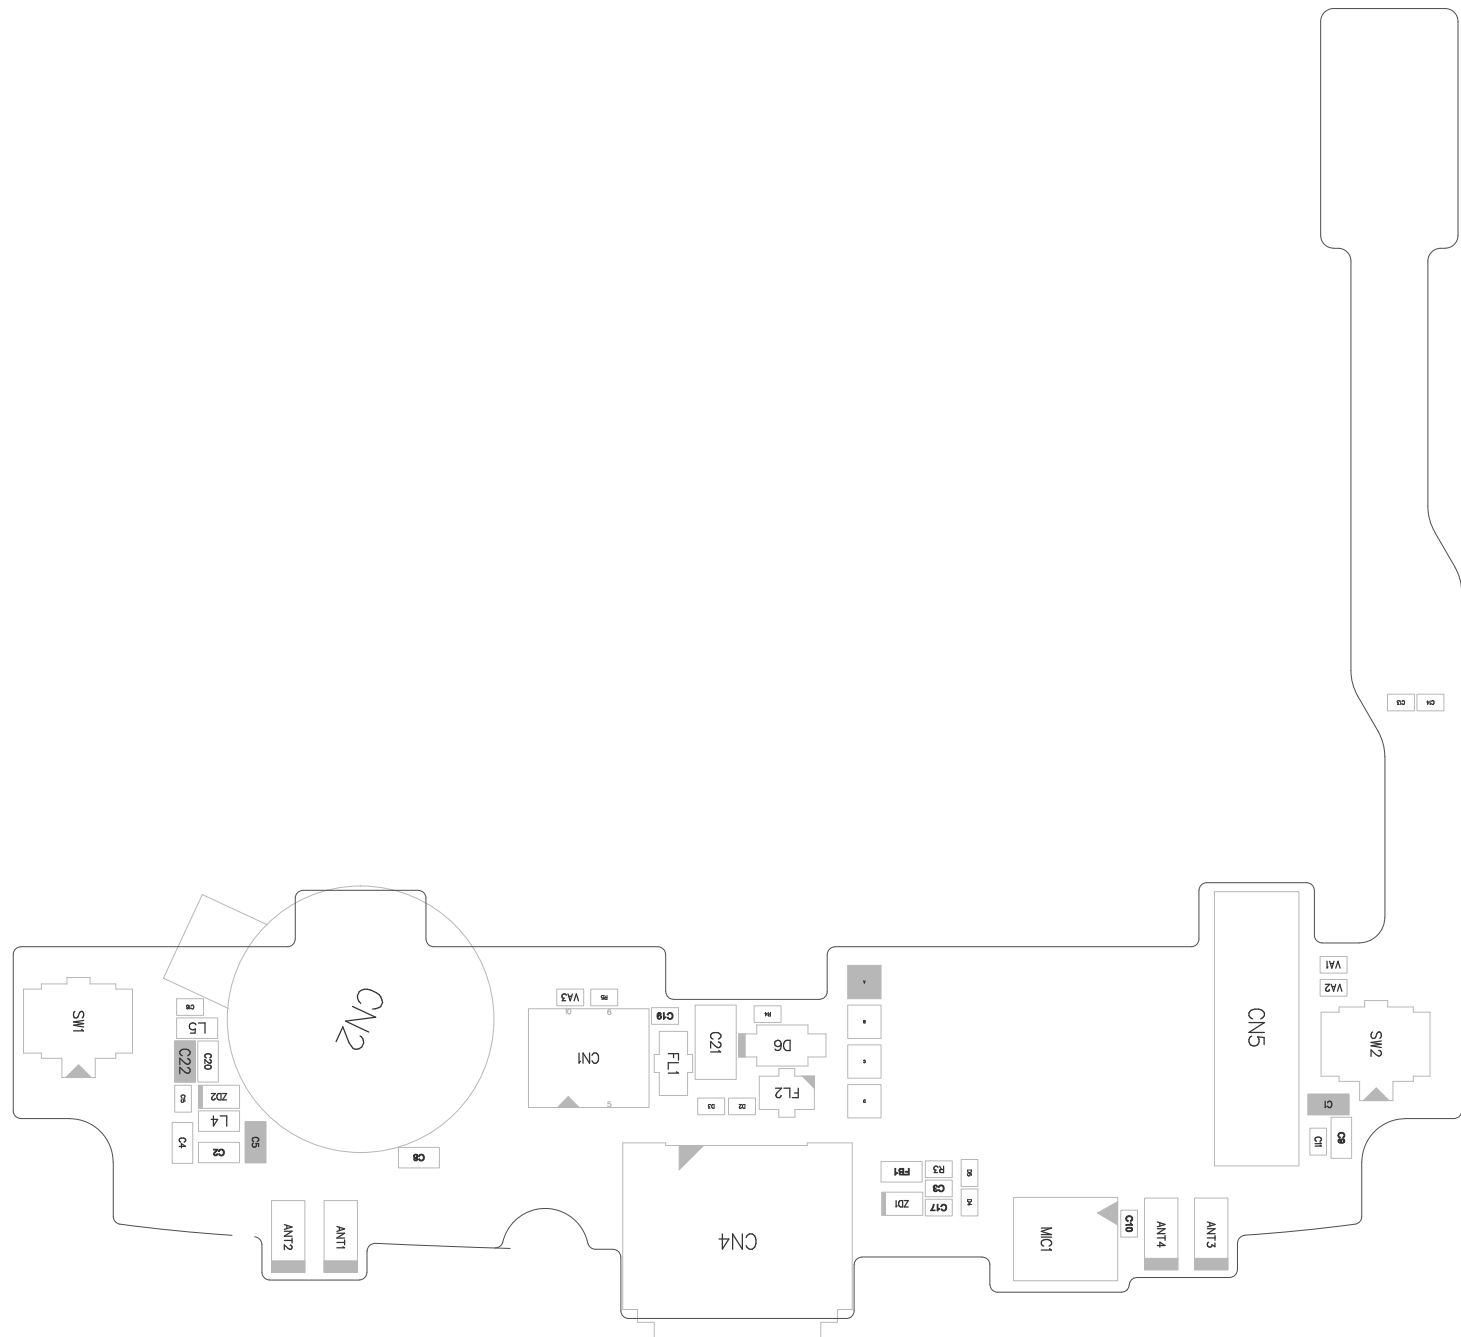

D315_F_LOWER_1.0_BOT

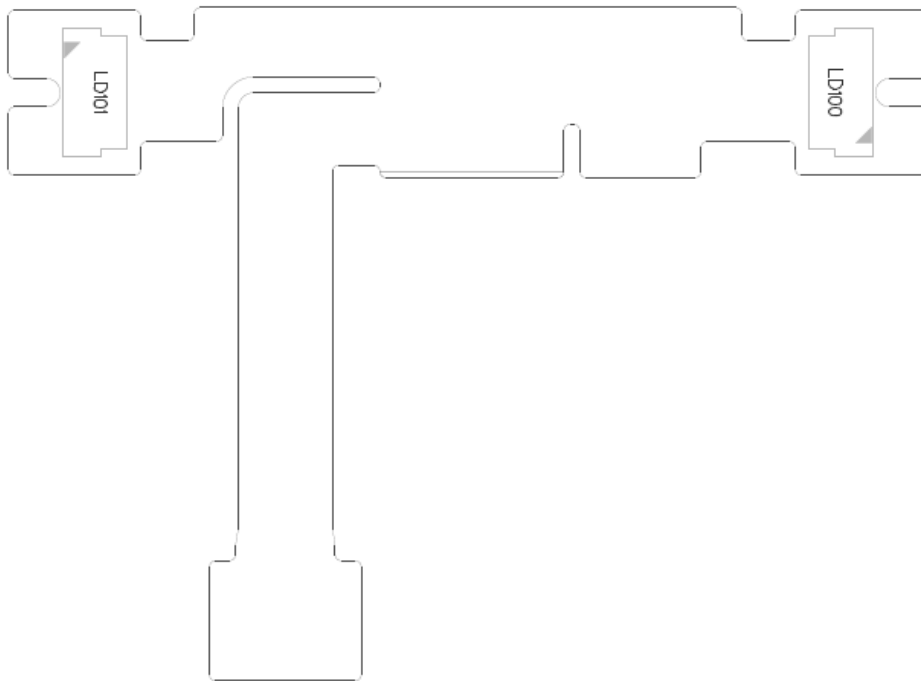

EAX65608701_1.0_D405_F-KEY_TOP

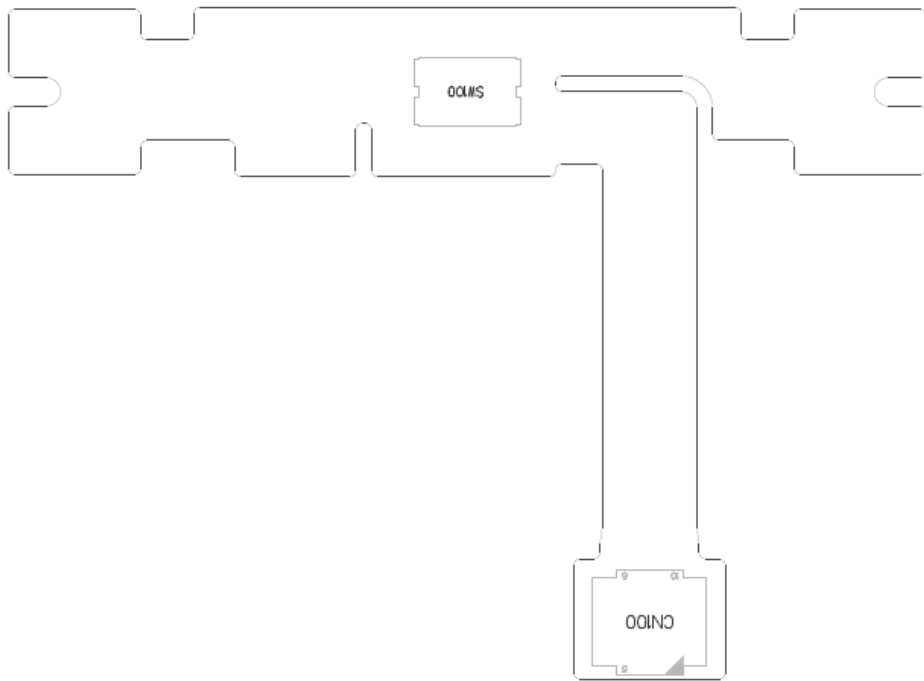

EAX65608701_1.0_D405_F-KEY_BOT