
Application Note : User Guide For Telink tLight APP

AN-BLE-16021900-E1

Ver 1.0.0

2016/2/22

Brief:

This document is the user guide for Telink BLE Mesh lighting smart control APP “tLight”.



TELINK SEMICONDUCTOR

Published by
Telink Semiconductor

**Bldg 3, 1500 Zuchongzhi Rd,
Zhangjiang Hi-Tech Park, Shanghai, China**

© Telink Semiconductor
All Right Reserved

Legal Disclaimer

Telink Semiconductor reserves the right to make changes without further notice to any products herein to improve reliability, function or design. Telink Semiconductor disclaims any and all liability for any errors, inaccuracies or incompleteness contained herein or in any other disclosure relating to any product.

Telink Semiconductor does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights, nor the rights of others

The products shown herein are not designed for use in medical, life-saving, or life-sustaining applications. Customers using or selling Telink Semiconductor products not expressly indicated for use in such applications do so entirely at their own risk and agree to fully indemnify Telink Semiconductor for any damages arising or resulting from such use or sale.

Information:

For further information on the technology, product and business term, please contact Telink Semiconductor Company (www.telink-semi.com).

For sales or technical support, please send email to the address of:

telinknsales@telink-semi.com

telinknsupport@telink-semi.com

Revision History

Version	Major Changes	Date	Author
1.0.0	Initial release	2016/2	M.S.S., Cynthia

1 Table of contents

1	Brief Introduction	4
2	Step-by-Step User Guide	4

2 Table of figures

Figure 1	Main interface of tLight APP.....	4
Figure 2	Mesh network setting window.....	5
Figure 3	Light list in Mesh network	6
Figure 4	Single-light control window.....	7
Figure 5	Group assignment window.....	8
Figure 6	Group control window.....	9

1 Brief Introduction

This document mainly presents the instruction of Telink BLE Mesh lighting smart control APP “tLight” (light_1028.apk).

This APP applies to mobile phone with Android 4.4 (or above) and Bluetooth 4.0 (or above) support, and serves to control light nodes within specified BLE Mesh network.

2 Step-by-Step User Guide

The icon of the tLight APP installed on a mobile phone is shown as .

This APP currently supports functions including Mesh network setting, all on/off control, night mode, sleep mode, single light control and group control. Operation steps are shown as below:

- 1) Open Bluetooth function on mobile phone, and start tLight APP to enter its main interface (as shown in Figure 1).

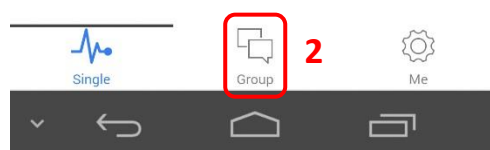
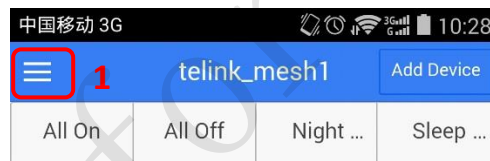


Figure 1 Main interface of tLight APP

- 2) Add Mesh network: Click the “Menu” icon (as shown in mark 1 of Figure 1) at the top left corner of the main interface, the “Add Mesh” window will pop up. On this window, user can set name and password of the mesh network to be added.



Figure 2 Mesh network setting window

The default Mesh network name and password for Telink factory default Demo lights are “telink_mesh1” and “123”, respectively.

As shown in Figure 2, to add a network for the first time, user can set network name and password as default values correspondingly for both “Mesh Setting” and “Factory Default Setting”, then click the “Save” button to save the setting.

If user needs to use this APP to control lights of other Mesh network, he can modify network name and password as needed on Mesh network setting window, i.e. set the contents under “Mesh Setting”/“Factory Default Setting” as name and password for the network to be added/the network added during last operation, respectively. For example, to change network name and password as “telink_mesh2” and “456” from “telink_mesh1” and “123”, user should fill “telink_mesh2” and “456”

under “Mesh Setting”, fill “telink_mesh1” and “123” under “Factory Default Setting”, then click “Save” to save the new setting.

After Mesh network is added, all lights with matched network name and password will be connected with the APP automatically, and the light list is available on the main window in the form of single-light icons.



Figure 3 Light list in Mesh network

- 3) All on/off control: By clicking the “All On” (as shown in mark 1 of Figure 3)/ “All Off” (as shown in mark 2 of Figure 3) button on the main interface, user can turn on/ turn off all lights within the network, respectively.
- 4) Night mode: By clicking the “Night” button (as shown in mark 3 of Figure 3), luminance of all lights within the network will be set as maximum.
- 5) Sleep mode: By clicking the “Sleep” button (as shown in mark 4 of Figure 3), luminance of all lights within the network will be set as minimum (5% of

maximum).

6) Single light control:

- a) Turn on/off single light: Clicking a single-light icon is to switch on/off state of corresponding light. If the light is turned on, click the icon to turn off the light; if the light is turned off, click the icon to turn on the light.
- b) Luminance/Color/Color temperature control for single light: Long press a single-light icon, corresponding single-light control window will pop up, as shown in Figure 4. On this window, user can adjust luminance, color and color temperature of the light, as well as assign group for the light.

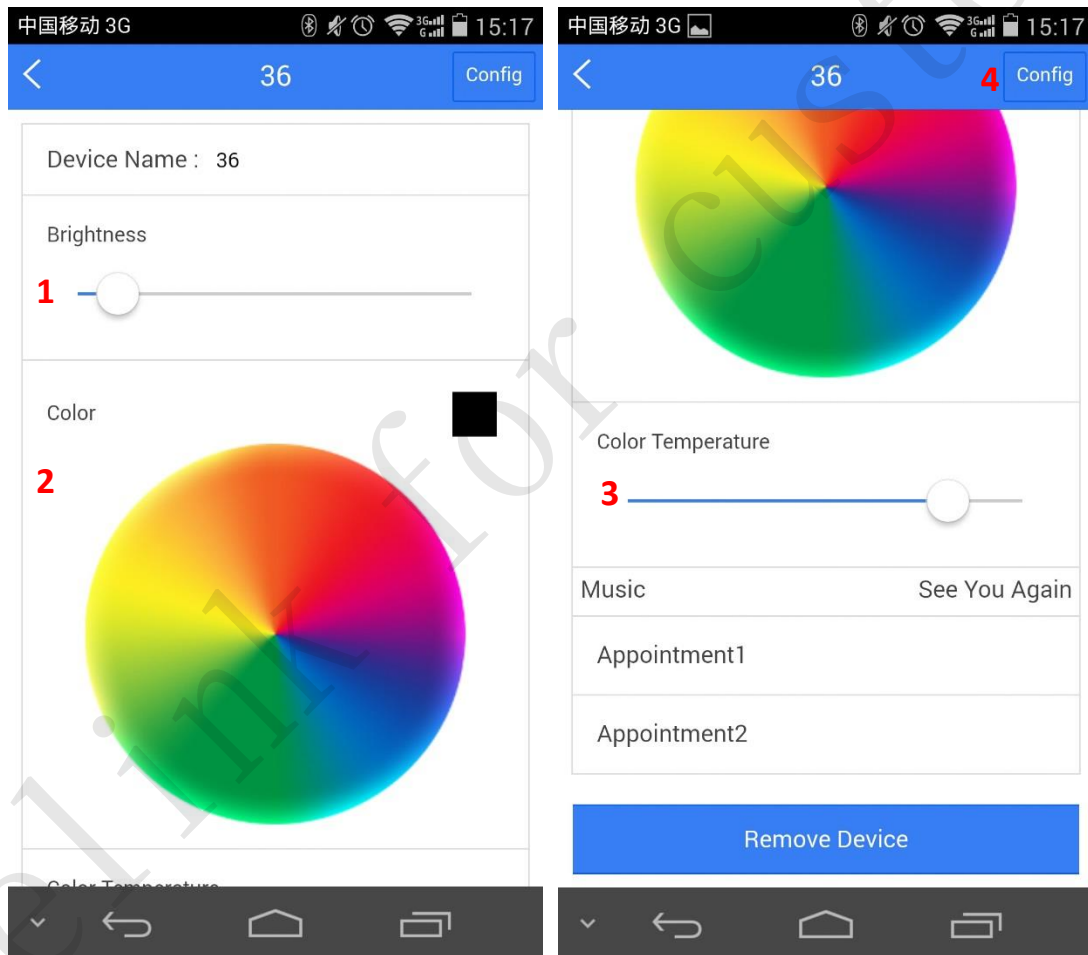


Figure 4 Single-light control window

- ✧ Luminance control: Sliding the “Brightness” bar (as shown in mark 1 of Figure 4) is to adjust luminance of the light. By sliding the bar from left to right, light luminance will be increased gradually.
- ✧ Color control: The color mixer under “Color” (as shown in mark 2 of Figure 4)

serves to adjust color of the light.

- ✧ Color temperature control: Sliding the “Color Temperature” bar (as shown in mark 3 of Figure 4) is to adjust color temperature of the light. By sliding the bar from left to right, light color temperature will become warmer gradually.
- ✧ Music: The function is to be added in further versions.
- ✧ Assign group for single light: Click the “Config” button (as shown in mark 4 of Figure 4) at the top right corner of single-light control window, the “Group Edit” window will pop up, as shown in Figure 5. User can assign group for the light on this window. By clicking to select a group name (e.g. “Family Room”), user can add the light into corresponding group; by clicking to deselect the group name, user can delete the light from the group. After successful group assignment operation, the light will blink for three times.



Figure 5 Group assignment window

- 7) Group on/off control: Click the “Group” icon on the main interface of APP (as shown in mark 2 of Figure 1), the “Group” window will pop up, as shown in Figure 6. On this window, user can turn on/off all lights within the network or within a group.
- As shown in mark 1 of Figure 6, by clicking the “On”/“Off” button next to “All Devices”, user can turn on/off all lights within the network.
 - As shown in mark 2 of Figure 6, by clicking the “On”/“Off” button next to a group name (e.g. “Family Room”), user can turn on/off all lights within the group.

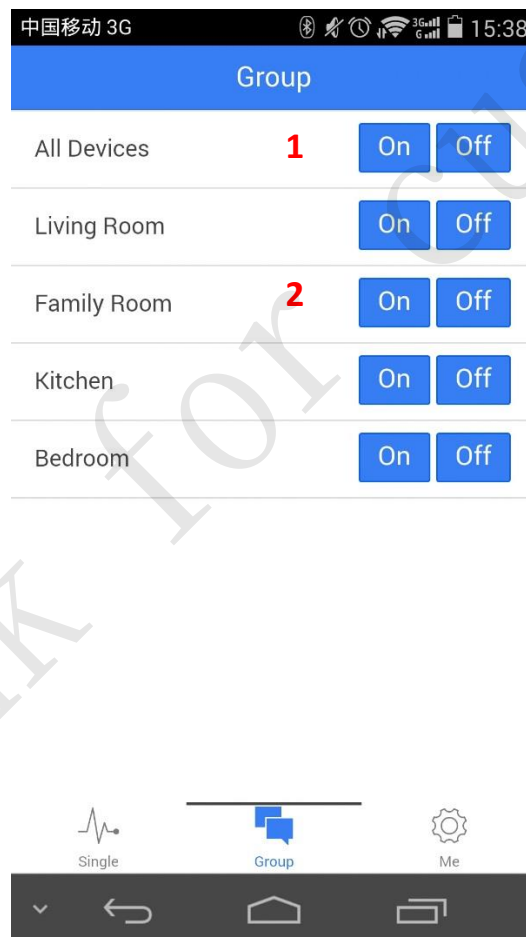


Figure 6 Group control window

- 8) The “Me” function on the main window of the APP is to be added in further versions.