Upgrading your MCP With Flash Media

This method is the most reliable means to update your MPC PLC and HMI without requiring third party programs, and a computer. This process involves using a USB Memory Stick, and a SD Card.


NOTE: This updating process assumes you are updating an MCP already loaded software version 1.4xx or later. Older MCP software versions had different and/or less sensors: If you are updating older MCPs to this version, you will need to order an MCP Update Kit from Nyle to update the MCP, which contains the extra sensors and instructions required. Additionally, the wiring for the MCP version 1.403 requires both Ethernet ports on the PLC to the network switch. Incorrect wiring may result in failure to properly update, and run.

Before you begin your software update, please navigate to the “Configuration” page of the Main Control Panel (MCP) and record all settings. After the update you will need to confirm all settings, and some upgrades may require setting new configuration items that did not previously exist.


PREPARE THE MEDIA:

1. Download the update media source file.
2. Extract the zipped files.
3. Move the Folder contents of SD Card_Files (FCDATA01) to a blank FAT32 formatted SD Card.
4. Move the contents of the folder USB_MediaFiles (hgauto.ini, mcp1403.zld, and mcp1403.znx files, and the backups folder) to the root directory of a blank FAT32 formatted USB-A Drive.


Your properly provisioned SD Card should look like this:

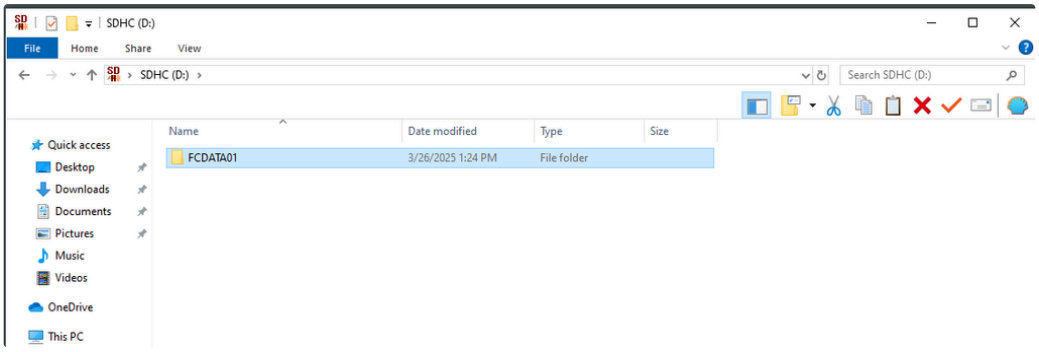


The properly provisioned USB media file system should appear like this:

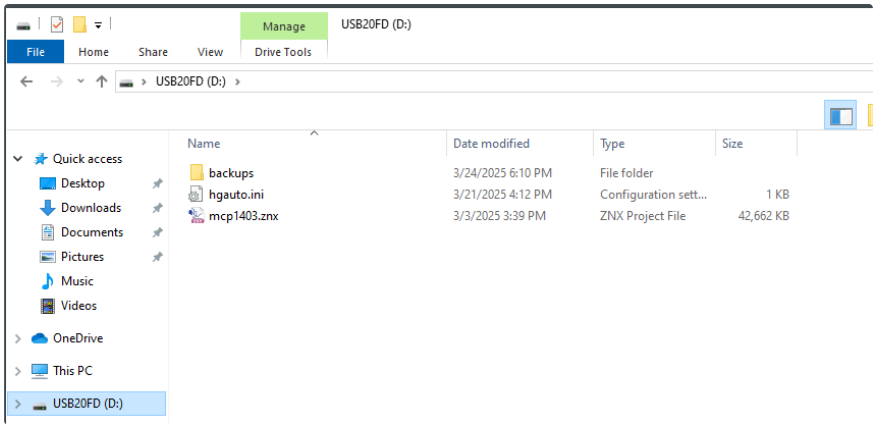


Next insert the USB media as shown:

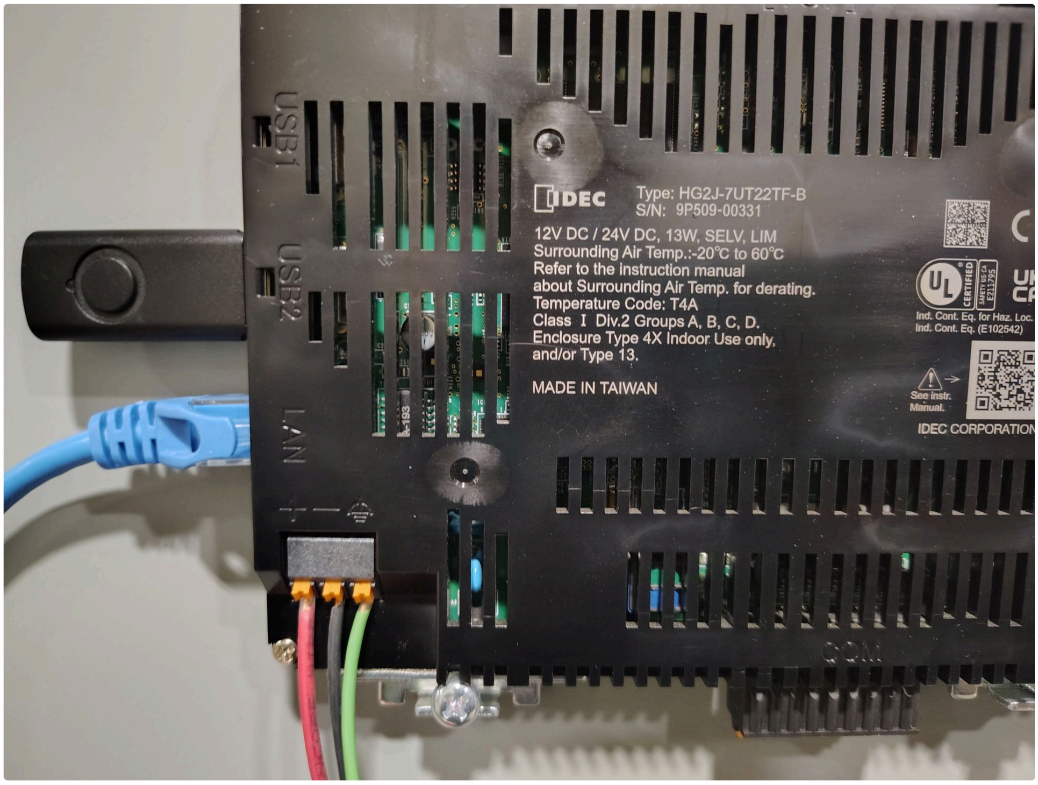

The Confirmation window will appear in approximately 10 seconds from USB media insertion.

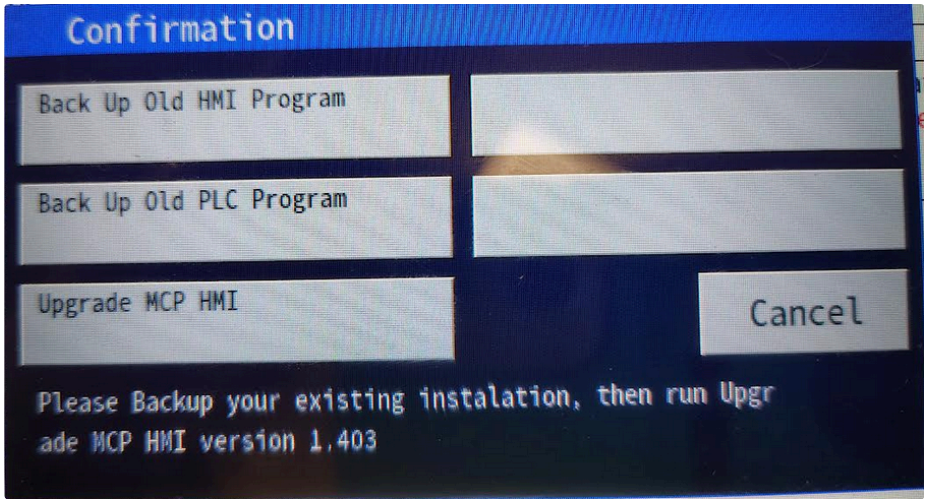


From the Confirmation window please backup your PLC and MCP program files. This will save the files to the "**backup**" folder on the USB media. When selecting to backup the HMI or PLC code, you may be prompted for a password to perform the data transfer functions. For the HMI, the credentials are User and 1000.

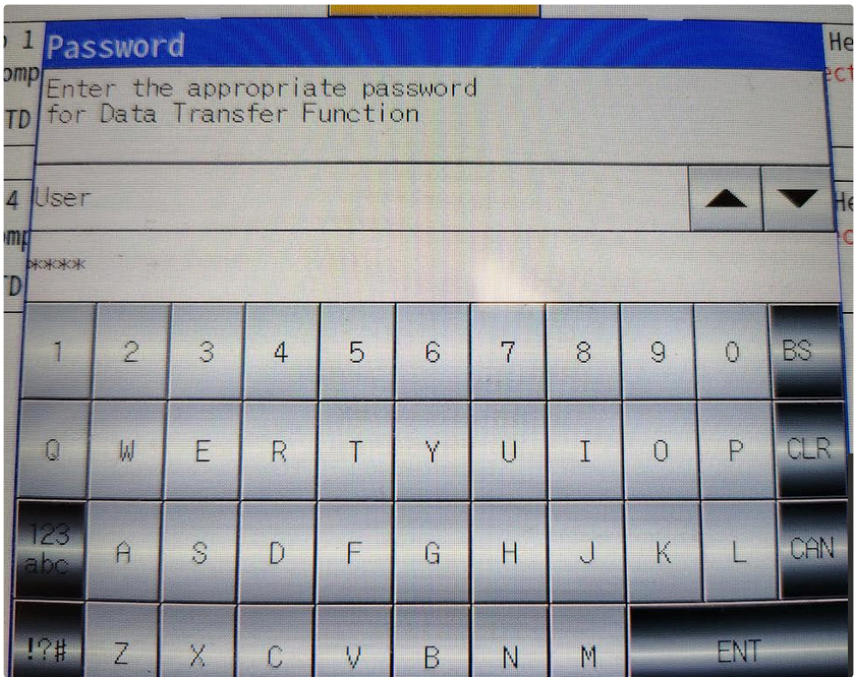

User is User. Password is 1000

To backup the PLC, you will be prompted for the HMI credentials, which is again, User and password 1000.
Then you will be prompted again for the PLC password which is DRYW00D1

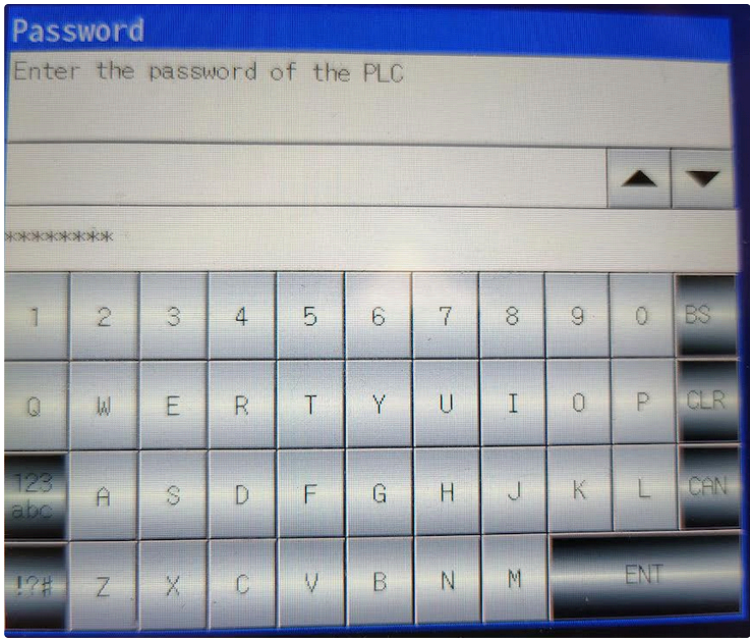


The PLC has no username listed, the password is DRYW00D1

Once backups of your existing code are successfully created, select the “Upgrade MCP HMI” button to upgrade the MCP HMI. The HMI may reboot, flash, and beep during this process. This is normal. Once the HMI upgrade completes, you will see a confirmation window where you can acknowledged the completed process by pressing “**Ack**”. Remove the USB upgrade media.

UPDATE THE PLC.

Now power off the MCP, remove the USB media, and save your backup folder files to a secure location.
Before powering the MCP PLC back on, insert your newly formatted MCP upgrade SD card into the MCP PLC.

Next power on the MCP PLC and HMI. The HMI may take longer than usual to initialize. This is normal while the PLC program files are updating. Once your MCP has reinitialized, eject the MCP Upgrade SD Card, and reinsert your original SD card. The MCP update the card as necessary. Confirm the upgrade process has completed successfully by pressing the **DIAG** button on the lower right side of the HMI screen, and verify the upgraded HMI and PLC version have been updated.

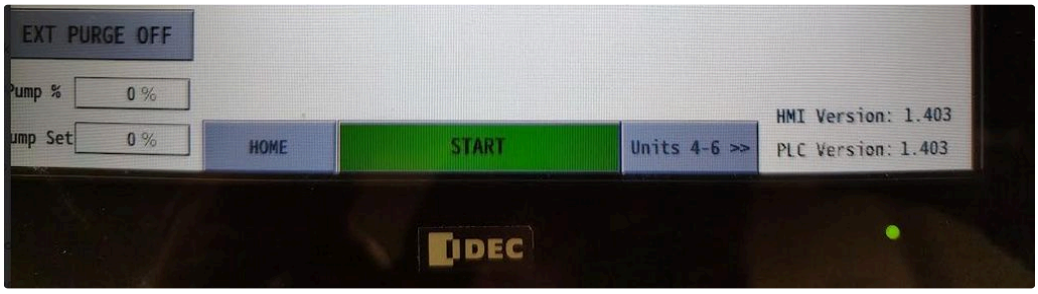

Finally, configure the MCP as required for your use and or verify your settings.
Your MCP is now upgraded.

Precautions:
Do not over write your existing MCP SD card as all your logs and configuration files will be deleted.

Do not attempt to use your MCP Upgrade SD Card as the MCP operations SD Card. Should your system power off, or reboot, the program upgrade will execute again, and data or configurations may be lost.

Be sure to remove all the Upgrade Flash media from the MCP before resuming normal operation.

Should a problem arise, where you wish to return to the pre-upgrade state, the backup files, and old configuration files are required.