

Figure 98-38. Master caution lights (S/N 30597 and subsequent) (Sheet 1 of 5)


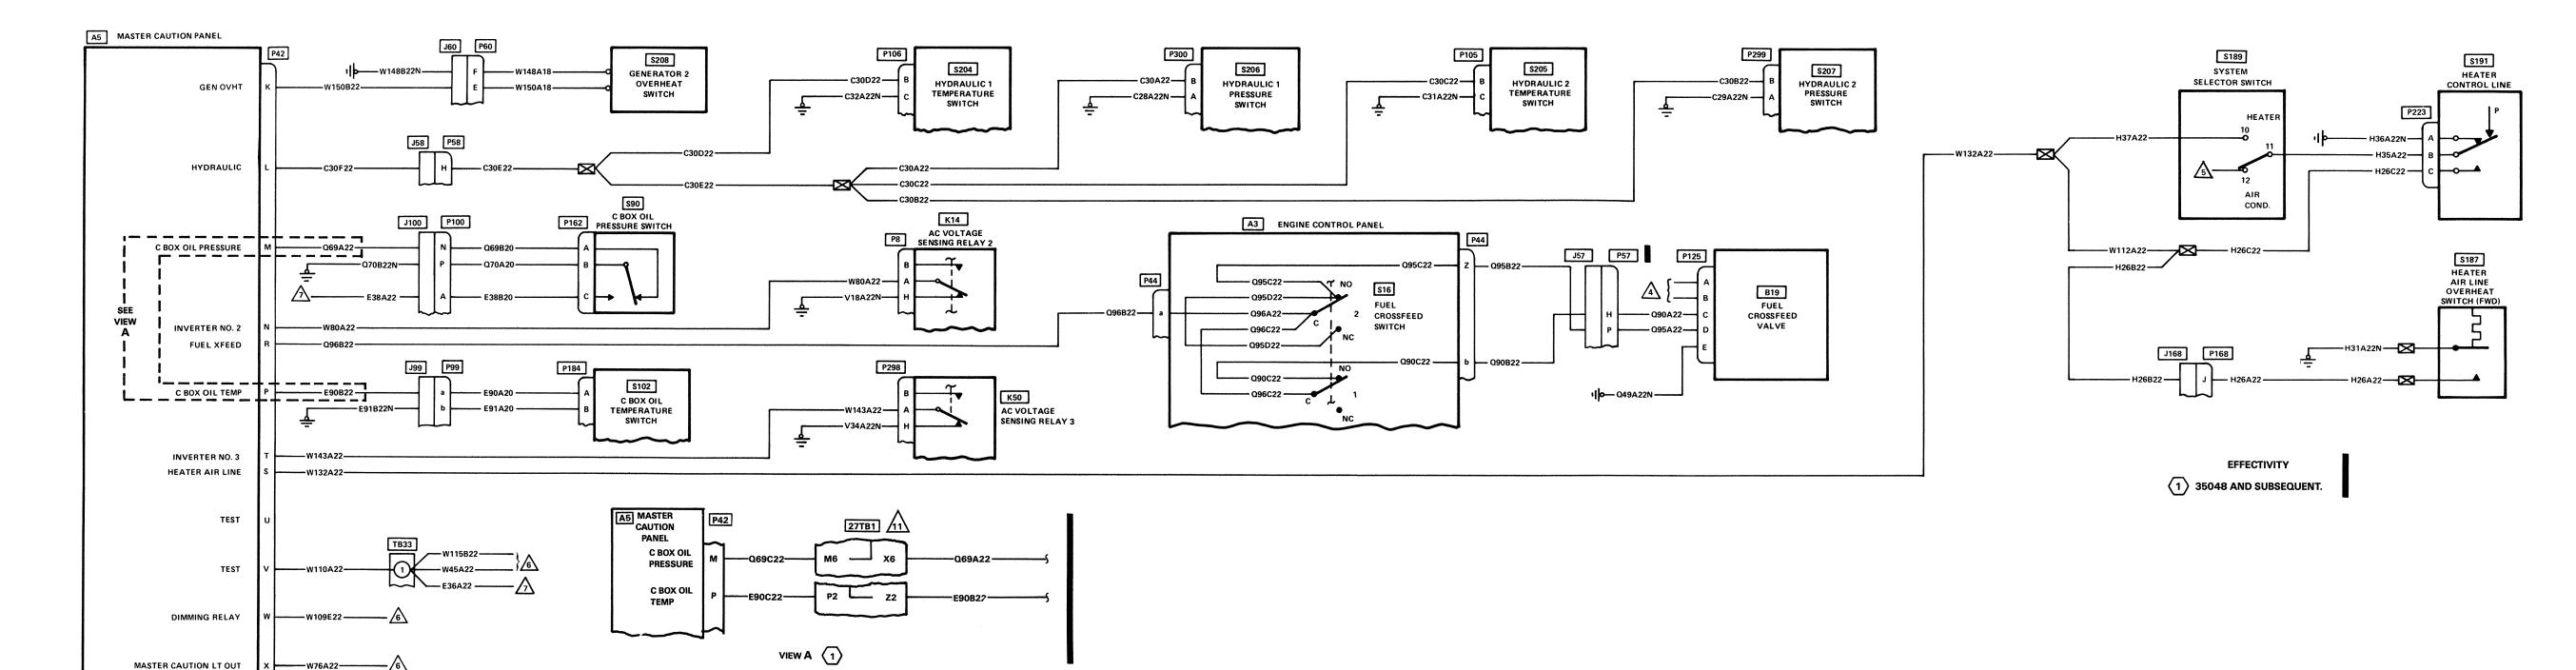


Figure 98-38. Master caution lights (S/N 30597 and subsequent) (Sheet 2)

212-M-98-38-2 212-475-021M

BHT-212-MM K3 GEN 1 RELAY K7 START 1 CONTROL W77A22 --P11 Z23 DC 1 CONTROL PANEL K33 NON ESSENTIAL K5 START 1 RELAY **BUS RELAY** Z13 LEFT FUEL CELL P45 S87 FUEL FLOW CB5

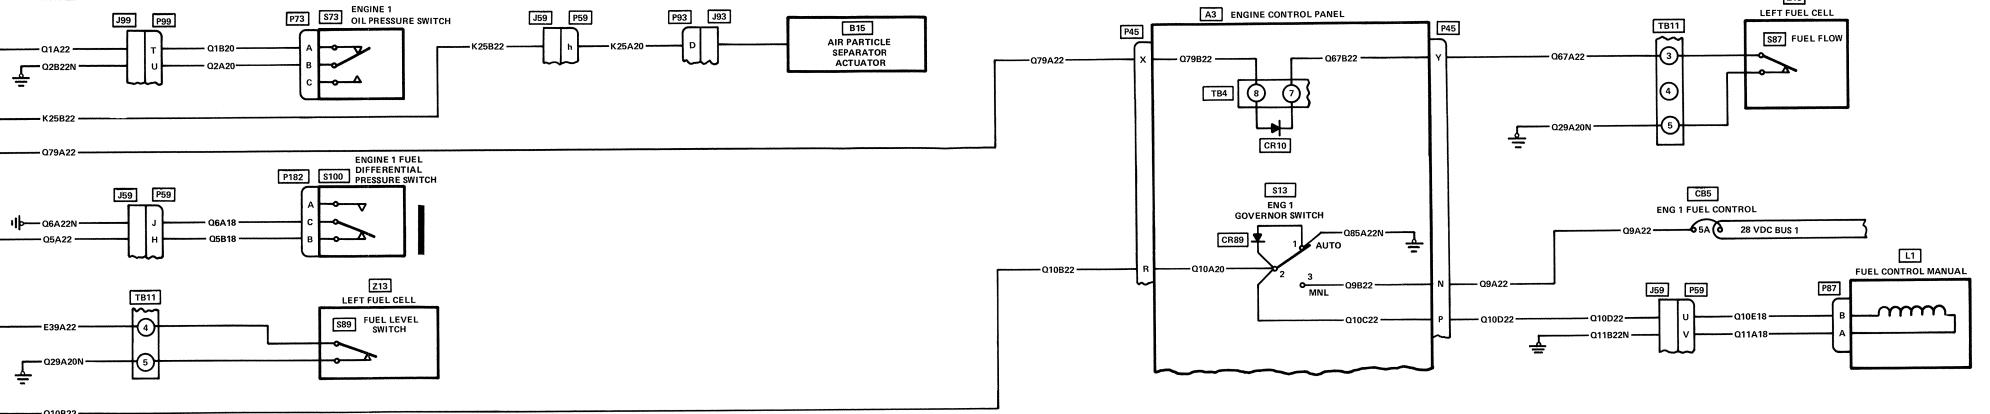

S210 MASTER CAUTION TEST SWITCH

PS6

POWER SUPPLY 2

ENGINE
INSTRUMENT LIGHTS

CB5
MASTER CAUTION

5A (8 28 VDC BUS 1

--- D75A20N-----

— L88C22 —— 6

A5 MASTER CAUTION PANEL

SYSTEM GND

SYSTEM PWR IN

EXT GND DIM CKT CONT

PANEL LIGHT CONT

DC GENERATOR

OIL PRESSURE

FUEL BOOST

FUEL FILTER


FUEL LOW

PARTICLE SEPARATOR

TEST

Figure 98-38. Master caution lights (S/N 30597 and subsequent) (Sheet 3)

212-M-98-38-3 212-475-021M

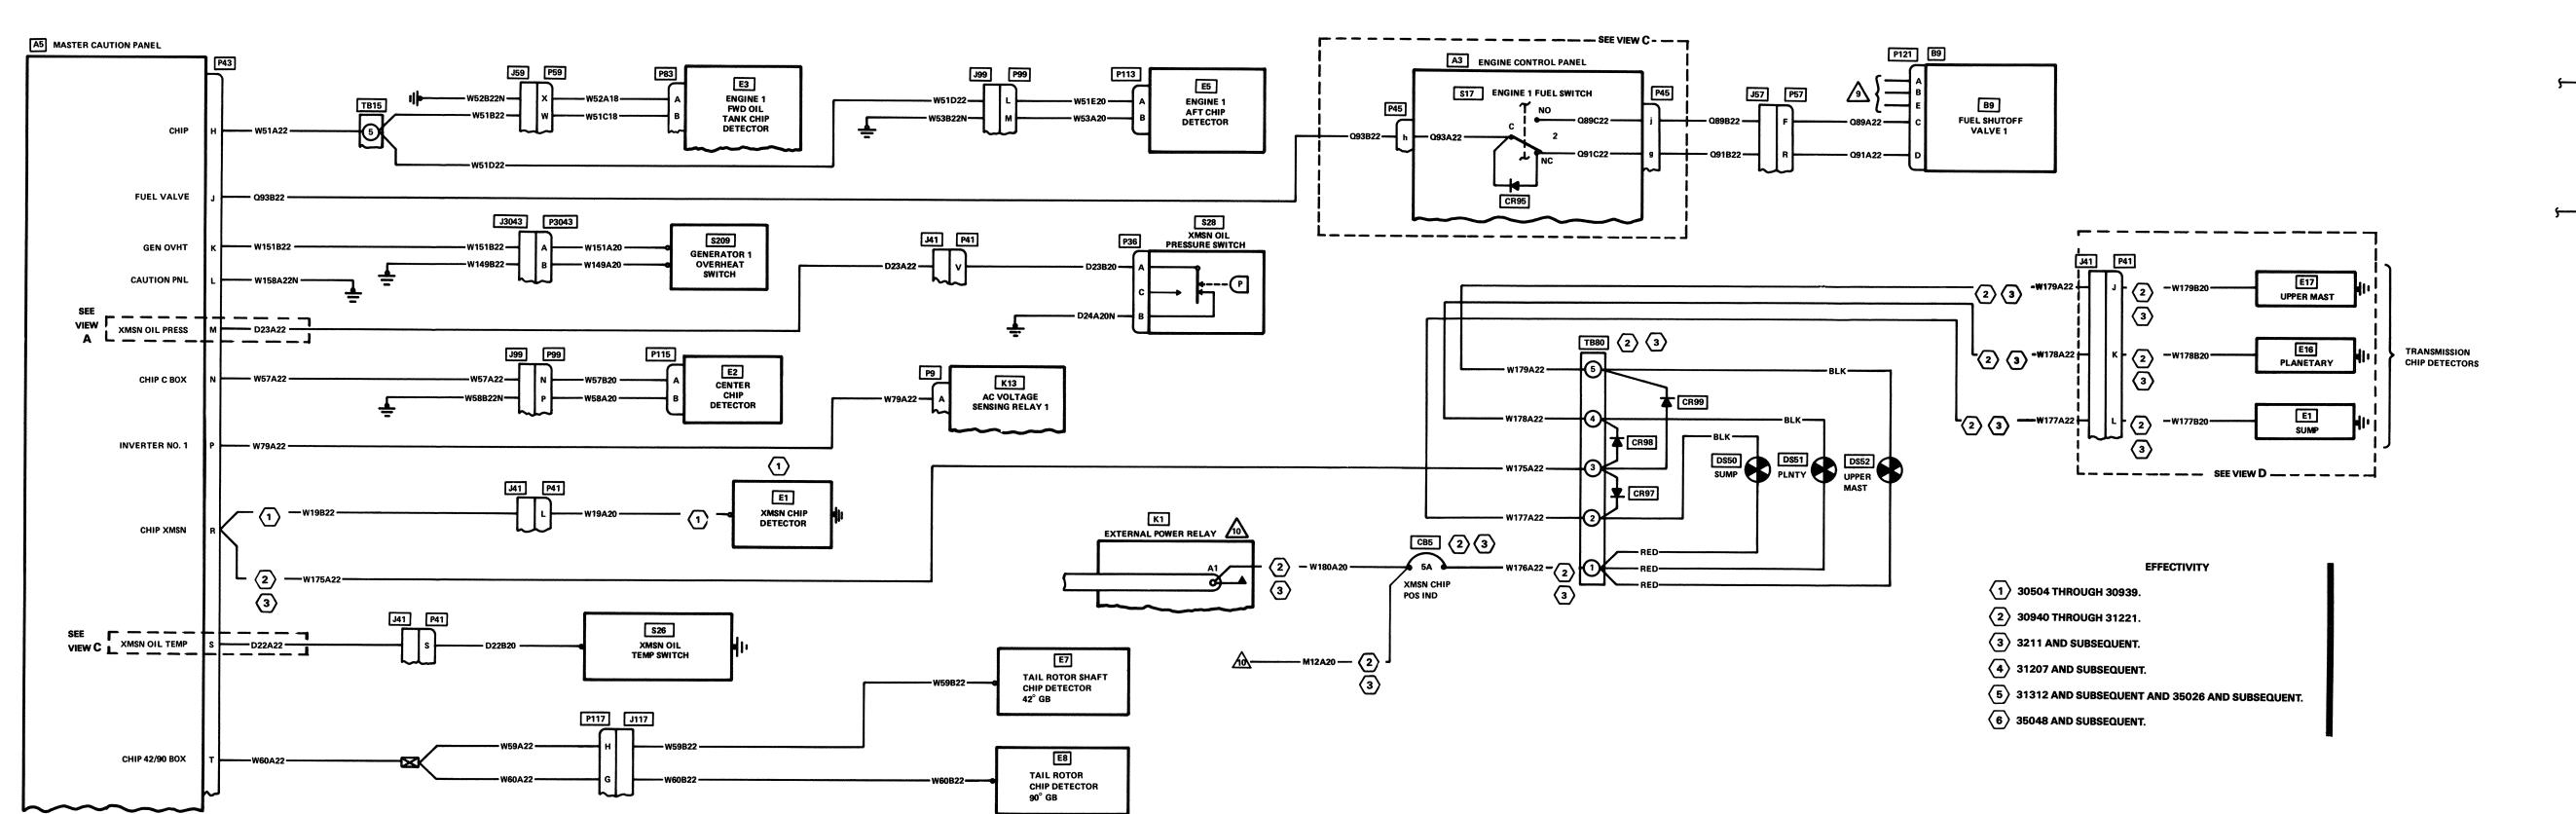

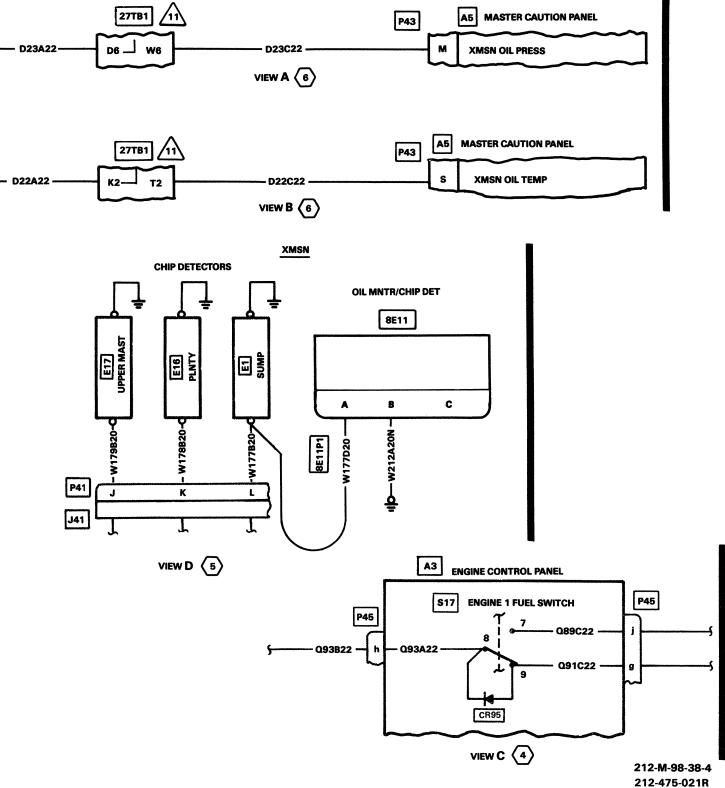


Figure 98-38. Master caution lights (S/N 30597 and subsequent) (Sheet 4)

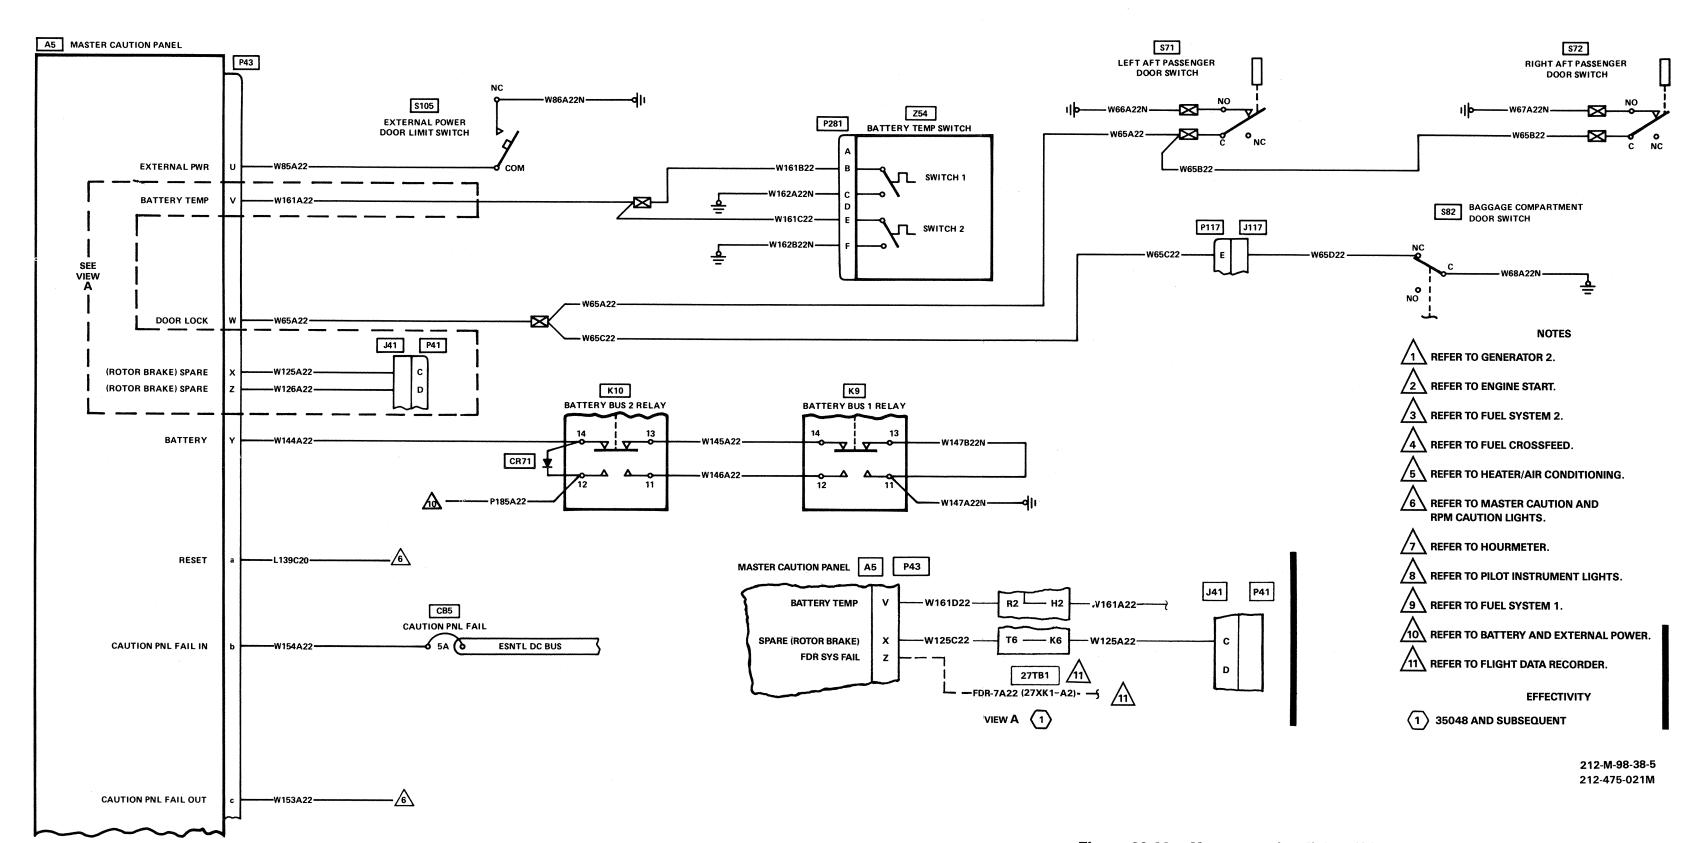


Figure 98-38. Master caution lights (S/N 30597 and subsequent) (Sheet 5)