**BHT-212-MM** 




## MAINTENANCE MANUAL

## VOLUME 9 POWER PLANT

### NOTICE

The instructions set forth in this manual, as supplemented or modified by Alert Service Bulletins and other directions issued by Bell Helicopter Textron and Airworthiness Directives issued by the Federal Aviation Administration, shall be strictly followed.



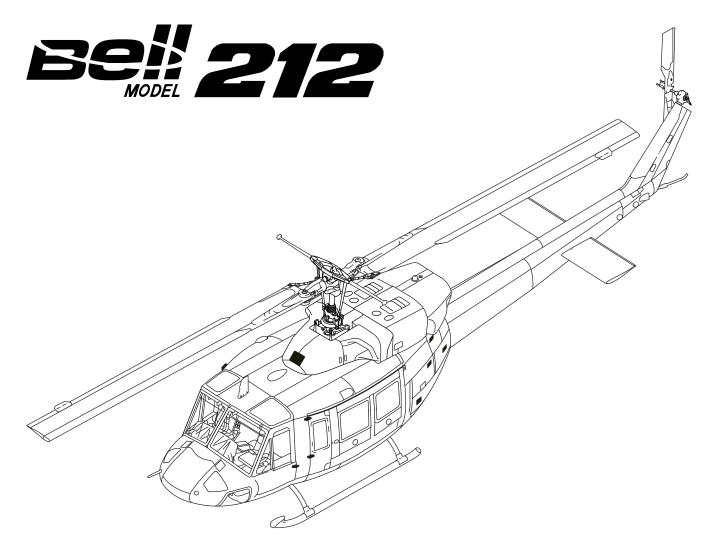

# WAINTENANCE MANUAL VOLUME 9 POWER PLANT

## **NOTICE**

The instructions set forth in this manual, as supplemented or modified by Alert Service Bulletins (ASB) or other directions issued by Bell Helicopter Textron Inc. and Airworthiness Directives (AD) issued by the applicable regulatory agencies, shall be strictly followed.

COPYRIGHT NOTICE
COPYRIGHT 2010
BELL ® HELICOPTER TEXTRON INC.
AND BELL HELICOPTER TEXTRON
CANADA LTD.
ALL RIGHTS RESERVED



A Textron Company

POST OFFICE BOX 482 • FORT WORTH, TEXAS 76101

7 JUNE 1993 REVISION 13 — 16 SEPTEMBER 2010



## PROPRIETARY RIGHTS NOTICE

These data are proprietary to Bell Helicopter Textron Inc. Disclosure, reproduction, or use of these data for any purpose other than helicopter operation or maintenance is forbidden without prior written authorization from Bell Helicopter Textron Inc.

## **DESTINATION CONTROL STATEMENT**

These commodities, technology, or software were exported from the United States in accordance with the Export Administration Regulations (EAR). Diversion contrary to U.S. law prohibited. The data contained in this manual are classified as ECCN EAR99.

Additional copies of this publication may be obtained by contacting:

Commercial Publication Distribution Center

Bell Helicopter Textron Inc.

P. O. Box 482

Fort Worth, Texas 76101-0482