

AIRBUS	TECHNICAL REPORT NOTA TÉCNICA		No. Núm.	ME-T-NT-110086
	Department Departamento	Stress Methods and Optimization	Aircraft Avión	Technologies
<u>Title / Título</u> Program PANCO Version 4.3 – User’s Manual				
<u>Keywords / Palabras clave</u> MANUALS, BUCKLING, COMPUTER PROGRAMS			Access class Clasificación acceso Airbus Amber P1	
			Revisions Record Registro de Revisiones Pag. 2	
<u>Summary / Resumen</u> This Technical Report describes the utilisation procedure of the PANCO Program, Version 4.3. The PANCO Program calculates reserve factors and applied and allowable stresses of uniform and non uniform metallic columns, with different support conditions under the action of axial and/or transversal loads.				
AIRBUS DEFENCE AND SPACE S.A.U. PROPERTY. This document shall neither be used nor completely or partially reproduced without previous written authorization of AIRBUS DEFENCE AND SPACE S.A.U. Military Aircraft Engineering Directorate. PROPIEDAD DE AIRBUS DEFENCE AND SPACE S.A.U.. Este documento no puede ser utilizado ni reproducido total o parcialmente sin la previa autorización escrita de la Dirección de Ingeniería de Aviones Militares AIRBUS DEFENCE AND SPACE S.A.U.				
Distribution / Distribución	Execution / Realización		Issue / Edición Issue date / Fecha edición C September 2024	
Structural Analysis	Author Autor Maritza Albizuri Fernandes		Signature Firma	
Stress Methods and Optimization			Electronic signature	
	Technical Approval Aprobación Técnica Gustavo Baños Lapuente			
	Authorisation Autorización			

This information is of origin
Airbus DS - Spain and is
not export controlled

AIRBUS DEFENCE AND SPACE S.A.U. PROPERTY. This document shall neither be used nor completely or partially reproduced without previous written authorization of **AIRBUS DEFENCE AND SPACE S.A.U.** Military Aircraft Engineering Directorate.

INDEX

1	INTRODUCTION	4
1.1	TECHNICAL SHEET OF THE PROGRAM	4
1.2	SOFTWARE PURPOSE AND DESCRIPTION	5
1.3	ABBREVIATIONS AND SYMBOLS	8
1.4	REFERENCES	9
1.5	DIFFERENCES BETWEEN VERSIONS	10
1.6	EXPORT CONTROL COMPLIANCE	12
2	PROGRAM EXECUTION	13
2.1	WINDOWS/PC VERSIONS	13
2.2	LINUX/HPC VERSIONS	13
3	INPUT DATA	15
3.1	INPUT DATA FILE	15
4	OUTPUT RESULTS	20
4.1	OUTPUT FILE	20
4.2	WINDOWS PC/GUI	21
4.3	ERROR MESSAGES	22
5	EXAMPLES	24
5.1	Example 1	24
5.2	Example 2	29

1 INTRODUCTION

1.1 TECHNICAL SHEET OF THE PROGRAM

Technical Report: **ME-T-NT-110086**

PROGRAM

DATE

PANCO

09/2024

OBJECTIVE

This program was developed to columns, with different support conditions under the action of axial and/or transversal loads.

LANGUAGE

DEVELOPMENT TOOLS

OS/PLATFORM

Fortran 77

Intel Composer XE 2018 (ifort 18)

Linux (RHEL) and Windows (x64)

Visual Basic Net

MS Visual Studio 2015

Windows (x64)

NUMBER OF LINES (APROX.)

EXECUTION MODE

6500 (Fortran, analysis core)

Console (input data in text file)

+ 4000 (Visual Basic.Net)

Interactive GUI

Total 10500

Notes:

- Blank lines and commented lines excluded
- Count for Visual Basic code excludes lines created by Visual Studio in designer.vb files

AUTHOR

VERSION

J. C. Gómez

1.0

Álvaro García Herrero

3.0

Darío Fernández / Emilio Murcia

3.3

Maritza Albizuri

4.3

ADDITIONAL DOCUMENTS

See list of applicable references in chapter 1.4.

1.2 SOFTWARE PURPOSE AND DESCRIPTION

The PANCO Program calculates reserve factors and applied and allowable stresses of uniform and non uniform metallic columns, with different support conditions under the action of axial and/or transversal loads.

A uniform column has a constant cross section along its complete length, and the applied axial load it's only applied at the ends of the beam.

Figure 1-1 below shows the coordinate system.

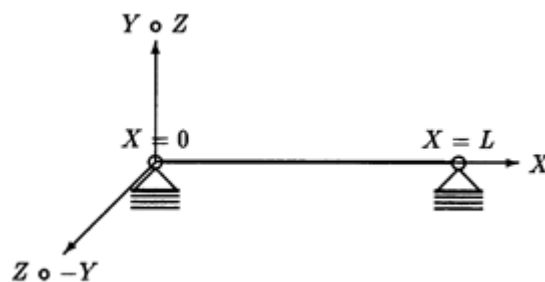


Figure 1-1. Coordinate system

A. The possible support conditions are the following ones:

Uniform Column:

a) Bending:

X= 0

X=L

Simply supported
Clamped
Simply supported
Free
Simply supported
Supported
Supported

Simply supported
Clamped
Clamped
Clamped
Supported
Clamped
Supported

b) Torsion:

X= 0

X=L

Free warping
Constrained warping
Free warping
Constrained warping
Gyration is always constrained at both ends

Free warping
Constrained warping
Constrained warping
Free warping

Non Uniform Column:

It is only analysed under bending loads, assuming the same support conditions as the uniform column ones under bending loads.

B. The types of loads that can be applied over the column are the following ones:

Uniform Column:

a) Axial loads:

- Tension or compression load at the ends of the column

b) Transversal loads:

- Discrete loads, applied at any point along the length of the column length
- Distributed loads along the whole length of part of it.
- Discrete bending moments, applied at any point along the column length

Non Uniform Column:

a. Axial loads:

- Discrete loads, applied at any point along the length of the column length
- Distributed loads applied on a part or the whole column length

b. Transversal loads: The same types as for uniform column

C. The types of analysis performed by the program are:

1. Column buckling: The program calculates the Reserve Factor as a column buckling, taking into account an elasto-plastic behaviour of the material. Column buckling loads will be the applied ones multiplied by the reserve factor obtained. Column buckling modes are:

Uniform Column:

- a. Bending buckling respect to Y and Z axis
- b. Torsion buckling
- c. Interaction between bending and crippling
- d. Buckling under bending and torsions loads

Non Uniform Column:

- a. Bending buckling respect to Y axis
2. Beam-Column load and stress distribution: The program calculates the internal loads, stresses and deflexion of the beam-column resultant of the axial and transversal applied loads, assuming a behaviour completely elastic of the column. If there are no axial loads applied, the program analyses the beam under transversal loads only.
3. Beam-Column strength: The program calculates the strength reserve factor by which the loads have to be multiplied in order to reach the material's allowable stress.

The program uses the successive approximation method of Newmark to calculate the column buckling reserve factor and to perform the beam-column analysis. This method follows an iterative process that ends when the relative variations obtained in the last two iterations is lower than 0.5E-04 (result is

correct till the fourth significant digit). The compared values are the reserve factor in column buckling and the mean deflexion in the strength analysis.

The strength reserve factor is calculated using Brent's method to iteratively calculate the loads and stress distribution for different load factors until the maximum or minimum stress in the beam-column equals the material allowable stress.

1.3 ABBREVIATIONS AND SYMBOLS

Symbol	Definition
E_t	Tension Elastic Modulus
E_c	Compression Elastic Modulus
G	Shear Elastic Modulus
F_{tu}	Ultimate allowable stress
F_{ty}	Tension Yield allowable stress
F_{cy}	Compression Yield allowable stress
ϵ	Ultimate Strain (in percentage)
L	Column length
A	Cross Section Area
I_{yy}	Cross Section Moment of Inertia about Y-axis
I_{zz}	Cross Section Moment of Inertia about Z-axis
J	Cross Section Torsion constant
R	Cross Section warping constant
y_0	Y coordinate of the shear center respect to the center of gravity
z_0	Z coordinate of the shear center respect to the center of gravity
F_{cc}	Crippling allowable stress
D_s	Distance from de Neutral Axis to the upper fiber (in the same plane that the transversal applied loads)
D_i	Distance from de Neutral Axis to the lower fiber (in the same plane that the transversal applied loads)
N_g	Number of sections for geometry analysis along the column
x_i	X Coordinate of the section i
A_i	Cross section area at Section i
I_i	Moment of Inertia about the axis perpendicular to the applied bending loads plane at Section i
DS_i	Distance from the Neutral Axis to the upper fiber (in the same plane that the transversal applied loads) at Section i
DI_i	Distance from the Neutral Axis to the lower fiber (in the same plane that the transversal applied loads) at Section i
WP	Working plane
N_{Px}	Number of Sections where a discrete axial load is applied
x_{Pxi}	X Coordinate where the discrete axial load i is applied
F_{x1i}	Value of the discrete axial load i
N_{qx}	Number of Sections where a distributed axial load is applied
x_{qxi}	X Coordinate where the distributed axial load i is applied

q_{x1i}	Value of the distributed axial load at section i
N_{Pt}	Number of Sections where a discrete transversal load is applied
X_{Pti}	X Coordinate where the discrete transversal load i is applied
P_t	Value of the discrete transversal load i
N_{qt}	Number of Sections where a distributed transversal load is applied
X_{qti}	X Coordinate where the distributed transversal load i is applied
q_{ti}	Value of the distributed transversal load i
N_M	Number of Sections where a discrete bending moment is applied
X_{Mi}	X Coordinate where the discrete bending moment i is applied
M_i	Value of the discrete bending moment i

1.4 REFERENCES

	<i>Document Reference</i>	<i>Issue</i>	<i>Title</i>
Ref. 1	NT-00-ECE-042	A	Manual Teórico del Programa PANCO, Versión 1.0
Ref. 2	NT-00-ECE-042	A	Manual del Programador del Programa PANCO, Versión 1.0
Ref. 3	TE-T-MM-240010	A	COMPLIANCE WITH EXPORT CONTROL REGULATIONS IN STRUCTURAL ANALYSIS METHODS AND SOFTWARE

1.5 DIFFERENCES BETWEEN VERSIONS

- Version 1.0:

Initial version developed in Fortran 77/90 for computer VAX.

- Version 2.0:

Program adapted to new computer Sun of Solaris.

- Version 2.2:

Correction of bugs.

- Version 3.x:

Now, the user can choose the language for screen dialogs and for the output file, between Spanish and English.

The data flow of the program is modified. Now, the input data as well as the output results are provided by means of files:

- Input file: With the input data grouped in the same way as for other applications.
- Output file: With all the input data and output results in printable form.

Since the format and arrangement of the input file is completely different from previous version, input files are not compatible between versions.

The new program source code is structured to allow the creation of a Dynamic Link Library DLL for Windows operating system.

In parallel with this, a Windows application has been developed as Graphic User Interface GUI for the program PANCO. This application uses the same input file and provides the same output results. The analysis is performed by calling to the DLL, compiled from the same source as the official Fortran version.

Version 3.3 introduces several bug corrections that improve the program's stability and usability, among others:

- The Windows GUI application can be invoked with the input file as an argument for direct calculation: "`panco.exe example.dat`" creates a file named `example.sal`, located in the same folder as `example.dat`, with results in English.
- The warping constant can be zero.
- Non uniform columns with many sections are calculated correctly.
- Fields in the GUI can be safely modified and are correctly calculated in real time.
- GUI fixed for bending support conditions 5, 6 and 7.
- The RF for Z-axis bending is now correctly calculated and displayed.
- RFs are shown in accordance with Airbus policy (truncated; 2 decimals, "> 2").
- The output file offers now a clearer view of results. For instance, units are displayed.
- Various GUI usability enhancements.

- Version 4.0

Improved calculation of the allowable stress for buckling+crippling failure mode, such that it always has a value below the column buckling allowable stress.

Corrected bug in GUI that caused an insufficient clearing of the variables when performing consecutive analysis and writing the results.

Besides, now the Name, Version and Copyright of the program are reported, as well as the date of execution of the analysis in the heading of the output file.

- Version 4.1:

Corrected precision error in the code when comparing real variables.

- Version 4.2

Improved calculation of the allowable stress of combined buckling + crippling, taking now the minimum value between the one obtained with the Johnson-Euler curve and the one obtained with the Euler-Engesser curve. The allowable values obtained with this method are higher than the ones obtained with the previous versions, thus it is not considered a critical update.

- Version 4.3

Added reserve factor calculation for the strength analysis as a beam-column. Strength analysis results are displayed only in the output text file obtained with the console version of the program or with the "Export results" option but not directly displayed in the GUI.

1.6 EXPORT CONTROL COMPLIANCE

The Input/Output data used with stress software shall be part of a set of documentation of higher order, and will be generally meaningless isolated from this documentation. All the digital data associated to a stress document shall be considered affected by the same confidentiality and security restrictions indicated in the document. Airbus DS reporting formats include provisions for applying Export Control marking.

It is recommended, in any case, that a dedicated labelling/marketing is systematically applied to input data files of stress softwares taking advantage the available provisions to incorporate titles or comments within those files.

Instructions and recommendations for classification and labelling of data, within this particular scope, can be found in the following reference:

TE-T-MM-240010 "COMPLIANCE WITH EXPORT CONTROL REGULATIONS IN STRUCTURAL ANALYSIS METHODS AND SOFTWARE" (Ref. 3)

2 PROGRAM EXECUTION

Prior to the program execution, it is necessary to create the input data file, as described in section 3.1. The program can be then executed by typing its full path name.

2.1 WINDOWS/PC VERSIONS

The Visual Basic executable program `panco.exe` (as well as an electronic copy of this manual and the program examples) is located in the folder:

```
\\efs\InfoCalculo\Soft\panco
```

To execute the program, the user has to click twice on the Visual Basic executable program.

There is another executable file with the same name, which is the Fortran program in console mode, in the subdirectory `.\Consola` within that folder (and another copy of the console-mode executable in `\\efs\InfoCalculo\Soft\Consola`, this last path than can be added to the Windows system PATH to facilitate its use).

The program asks for the language to use, the name of the input file and the name of the output file.

```
Idioma / Language:
=====

1 ... ESPANOL
2 ... ENGLISH
Idioma / Language: 2
Name of the input file: Example.dat
Name of the output file: Results.sal
```

Details of the input and output files are provided in next sections. The CPU time for calculation is negligible.

It is possible to execute the program with a single command, including the input and output filenames and the language as parameters. The above example can be executed as follows:

```
panco Example.dat Results.sal 2
```

If the third parameter (language) is omitted, the English language will be taken by the program.

2.2 LINUX/HPC VERSIONS

To run interactively this version of the program (console application) in the Airbus DS HPC-Linux environment, you must have already done the assignment of the symbols list in Airbus DS Structural Analysis Office using the command:

```
. asignaciones_calculo
```

This instruction can be executed in the commands terminal prior to execute the program, but it is strongly recommended to include this statement in the files `".profile"`, and `".kshrc"` (if working in Korn Shell) or `".bashrc"` (if you work in Bash Shell). To do this, the following lines should be included in the file `".profile"`:

```
. asignaciones_calculo
ENV=$HOME/.kshrc
export ENV
BASH_ENV=$HOME/.bashrc
export BASH_ENV
```

In files ".kshrc" and ".bashrc" the following line shall be added:

```
. asignaciones_calculo
```

The instruction to run the program in interactive mode in the HPC-Linux server is:

```
panco
```

This console application can be executed in one single command, by passing as arguments the input data file, the desired name of the output results file, and an integer number to select the report language (1 is Spanish, 2 is English):

```
panco Example.dat Results.sal 2
```

If the third parameter (language) is omitted, the Spanish language will be used.

3 INPUT DATA

3.1 INPUT DATA FILE

In this chapter, it is described the structure of the input file, which is required for the correct execution of the PANCO program.

This file contains all the necessary data that defines the problem. It basically contains eleven data groups, all of them are necessary. They will be numbered from 1 to 11 and must be in order in the input file.

All the numerical data contained in this file will be read in a free format. The variables will be separated by one or more blank spaces. The numbering of each group will be included in the first column.

Note that groups 5, 6 and 7 depend on the value assumed in Group 2.

Listed below are the contents of each data group:

- **GROUP 1: Title of the problem**

Four lines, containing the title of the problem to be solved, which will appear at the header of the output file:

Line 1 1 First line of the title

Line 2 Second line of the title

Line 3 Third line of the title

Line 4 Fourth line of the title

- **GROUP 2: Type of the Column**

Line 1 2 TYPE OF COLUMN: 1 Uniform, 2 Non Uniform

Line 2 1 (if the column is Uniform) or 2 (if the column is Non Uniform)

- **GROUP 3: Units**

Line 1 3 UNITS (N/daN/Kgf/lbf/klb, mm/cm/in)

Line 2 Force Units and Length Units (i.e. N,mm)

- **GROUP 4: Material Data**

Line 1 4 MATERIAL DATA

Line 2 Et Ec G Ftu Fty Fcy e

- **GROUP 5: Geometry**

Line 1 5 GEOMETRY

Then, if Type of Column = 1: Uniform column

Line 2 L A Iyy Izz J R y₀ z₀ Fcc Ds Di

The values have to comply with the following requirements:

$L > 0$

$A > 0$

$I_{yy} \geq 0$ If it is equal to 0, the following analyses will not be performed:

- Bending buckling about Y Axis
- Torsion buckling
- Bending + Torsion buckling
- Buckling about Y axis + Crippling
- Beam-Column Bending about Y axis

$I_{zz} \geq 0$ If it is equal to 0, the following analyses will not be performed:

- Bending buckling about Z Axis
- Torsion buckling
- Bending + Torsion buckling
- Buckling about Z axis + Crippling
- Beam-Column Bending about Z axis

$J \geq 0$ If $J = 0$ and $R = 0$, the following analyses will not be performed:

- Torsion buckling
- Bending + Torsion buckling

$R \geq 0$ If $J = 0$ and $R = 0$, the following analysis will not be performed:

- Torsion buckling
- Bending + Torsion buckling

If $y_0 = 0$, there is no interaction between the buckling about Y axis and Torsion buckling

If $z_0 = 0$, there is no interaction between the buckling about Z axis and Torsion buckling

If $F_{cc} = 0$, the following analysis will not be performed:

- Bending + Crippling buckling

If $D_s = 0$ or $D_i = 0$ the stresses due to the beam-column bending will be zero at the corresponding fiber.

Then, if Type of Column = 2: Non Uniform column

Line 2	N_g	x_1	A_1	I_1	DS_1	DI_1
Line i		x_i	A_i	I_i	DS_i	DI_i
Line N_g		x_{Ng}	A_{Ng}	I_{Ng}	DS_{Ng}	DI_{Ng}

The values have to comply with the following requirements:

$$X \geq 0$$

$$A > 0$$

$I \geq 0$ If $I = 0$ the following analysis will not be performed:

- Bending buckling about Y axis
- Beam-Column bending about Y axis

If $DS_i = 0$ or $DI_i = 0$, the stresses due to the beam-column bending will be zero at the corresponding fiber.

• **GROUP 6:**

Line 1 6 WORK PLANE AND SUPPORT CONDITIONS:

Then, if Type of Column = 1: Uniform column

Line 2 WP (WP = 1 for XZ working plane and WP = 2 for XY working plane)

Line 3 SPy, SPz (support conditions about Y axis Bending and Z axis Bending)

$SP_i = 1$	Simply supported - Simply supported
$SP_i = 2$	Clamped - Clamped
$SP_i = 3$	Simply supported - Clamped
$SP_i = 4$	Free - Clamped
$SP_i = 5$	Simply supported - Supported
$SP_i = 6$	Supported - Clamped
$SP_i = 7$	Supported - Supported

Line 4 SPx (support conditions about X axis Torsion)

$SP_x = 1$	Free warping - Free warping
$SP_x = 2$	Constrained warping - Constrained warping
$SP_x = 3$	Free warping - Constrained warping
$SP_x = 4$	Constrained warping - Free warping

Line 5 Ry1 Ry2 (XZ bending stiffness at support i; line and fields exist if SPy =5, 6 or 7)

Line 6 Rz1 Rz2 (XY bending stiffness at support I; line and fields exist if SPz =5, 6 or 7)

Then, if Type of Column = 2: Non Uniform column

Line 2 SPy (support conditions about Y axis Bending, as above)

Line 3 Ry1 Ry2 (XZ bending stiffness at support i, line and fields exist if SPy =5, 6 or 7)

- **GROUP 7:**

Line 1 7 DISCRETE AXIAL LOADS

Then, if Type of Column = 1: Uniform column

Line 2 1 X_{Px1} F_{x1}

F_{x1} is negative for compression loads and positive for tension loads.

Then, if Type of Column = 2: Non Uniform column

Line 2 N_{Px} X_{Px1} F_{x1}

Line i X_{Pxi} F_{xi}

Line N_{Px} $X_{Px,NPx}$ $F_{x,NPx}$

Positive loads have positive sign of X axis. Data will be typed in ascending order of x coordinate.

- **GROUP 8:**

If Type of Column = 1, then, this Group **must not appear**.

Line 1 8 DISTRIBUTED AXIAL LOADS

Line 2 N_{qx} X_{qx1} q_{x1}

Line i X_{qxi} q_{xi}

Line N_{qx} $X_{qx,Nqx}$ $q_{x,Nqx}$

Positive loads have positive sign of X axis. Data will be typed in ascending order of x coordinate. It will be considered that the load varies linearly along the column length.

Apart from the initial and final sections, the data for Sections in which any change is produced must be written also, and the total length of the column must be represented.

- **GROUP 9:**

Line 1 9 DISCRETE TRANSVERSAL LOADS

Line 2 N_{Pt} X_{Pt1} P_{t1}

Line i X_{Pti} P_{ti}

Line N_{Pt} $X_{Pt,NPt}$ $P_{t,NPt}$

Positive loads have negative sign of Y (or Z) axis. Data will be typed in ascending order of x coordinate.

- **GROUP 10:**

Line 1 10 DISTRIBUTED TRANSVERSAL LOADS

Line 2 N_{qt} X_{qt1} Q_{t1}

Line i X_{qti} Q_{ti}

Line N_{qt} $X_{qt,Nqt}$ $Q_{t,Nqt}$

Positive loads have negative sign of Y (or Z) axis. Data will be typed in ascending order of x coordinate.

Apart from the initial and final sections, the data for Sections in which any change is produced must be written also, and the total length of the column must be represented.

- **GROUP 11:**

Line 1 11 DISCRETE BENDING MOMENTS

Line 2 N_M X_{M1} M_1

Line i X_{Mi} M_i

Line N_M $X_{M,NM}$ M_{NM}

Positive moments have negative (positive) sign of Y (Z) axis for a working plane X. Data will be typed in ascending order of x coordinate.

4 OUTPUT RESULTS

This section includes the description of the output result file as well as the possible error messages.

4.1 OUTPUT FILE

The PANCO program creates one printable file with all the results of the analysis carried out. This file includes the following information:

- **Summary of the input data:**

- Type of column
- Material data
- Geometric Data
- Support conditions
- Applied loads & moments

- **Column Buckling analysis:**

Uniform Column:

- Buckling under Bending about Y axis Reserve Factor
- Buckling under Bending about Z axis Reserve Factor
- Buckling under Torsion about X axis Reserve Factor
- Buckling under Bending + Crippling about Y axis Reserve Factor
- Buckling under Bending + Crippling about Z axis Reserve Factor
- Buckling under Torsion + Bending Reserve Factor

Non Uniform Column:

- Buckling under Bending about Y axis Reserve Factor

For each RF, the program provides as well the corresponding values of the stress and the resultant elastic modulus corrected by plasticity (if it's required).

- **Load and stress distribution as a beam-column:**

Along the length of the column, for the significant X coordinates, the program provides:

- Deflection
- Axial force
- Bending moment
- Shear force
- Stress at Upper fiber
- Stress at Lower fiber

- **Beam-column strength analysis:**
 - Beam-column strength reserve factor
 - Deflection, forces, bending moments and stresses corresponding to the failure loads.

4.2 WINDOWS PC/GUI

An application has been developed in Visual Basic .NET for Windows environment. The original routines of the program for calculation and output results have been included in a Dynamic Link Library, which is used by this application. Therefore the same results will be obtained, with only differences due to rounding.

Since this is a Windows application, it must be installed in the user's PC before it can be executed. For installation, please contact with the system administrator.

The application can be executed a) "double clicking" in the file Panco.exe located in the PC's server, b) using the Calculo menu located in the Windows taskbar, or c) by means of a link in the "desktop".

The input data must be typed in the application form or retrieved from an input file. The form, after loading the data corresponding to the example 1 (see chapter 5), has the following appearance:

The screenshot shows the Panco 3.3 - Ejemplo_1.dat application window. It contains several sections for input data:

- Title:** Program PANCO, Example 1, Uniform column, Discrete loads.
- Language:** English (selected).
- Material:** Et = 71710, G = 27580, Fty = 400.0, e (%) = 7.00, Ec = 73770, Ftu = 476.0, Fcy = 400.0.
- Units:** Force = N, Length = mm.
- Geometry - Uniform Section:** L = 500.0, Yo = -11.698, A = 187.5, Zo = 0.0, Iyy = 44140.0, Fcc = 363.0, Izz = 6951.0, Ds = 20.0, J = 390.6, Di = 20.0, R = 1689790.0.
- Supports:** Bending-Y (Simply Supported - Simply Supported), Bending-Z (Simply Supported - Simply Supported), Torsion (Free warping - Free warping).
- Loads:** Discrete axial force: Fx (0.0, -15000.0), Discrete moment: My (0.0, -100000.0), Discrete moment: My (500.0, 200000.0).
- Results:** Column Buckling, Beam-Column Strength table.

	S _{allow}	Et	RF
Bending y	-358.8	38605.7	>2
Bending z	-108.0	73770.0	1.34
Torsion	-204.5	73768.8	>2
BendCrip y	-315.0	68794.8	>2
BendCrip z	N/A	N/A	N/A
BendTorsion	-182.4	73769.9	>2

Figure 1-2. Input data form

The program calculates the results for all the included loads at the moment it has all the required data. In example 1, there are one axial load and a couple of discrete bending moments and the user can read the results at the bottom framebox.

Note that the application does not display the results for the strength analysis as a beam-column in the graphic interface. However, these results are displayed in the text file obtained through the "Export results" option.

4.3 ERROR MESSAGES

When the program detects an error in the input data, it writes the corresponding message in the console and stops the execution. The error messages that might appear are listed below:

Error messages:

```
ERROR: The input file cannot be opened
ERROR: Erroneous group number in the input file
ERROR: No Group 1 in the input file
ERROR: End of file while reading Group 1 in the input file
ERROR: No Group 2 in the input file
ERROR: End of file while reading Group 2 in the input file
ERROR: Bad definition of Group 2
ERROR: No Group 3 in the input file
ERROR: End of file while reading Group 3 in the input file
ERROR: Bad definition of Group 3
ERROR: No Group 4 in the input file
ERROR: End of file while reading Group 4 in the input file
ERROR: Bad definition of Group 4
ERROR: No Group 5 in the input file
ERROR: End of file while reading Group 5 in the input file
ERROR: Bad definition of Group 5
ERROR: Group 5: Number of Sections higher than 100
ERROR: Group 5: Erroneous column length
ERROR: No Group 6 in the input file
ERROR: End of file while reading Group 6 in the input file
ERROR: Bad definition of Group 6
ERROR: Group 6: Bad definition of working plane
ERROR: Group 6: Support in Y axis bad defined
ERROR: Group 6: Support in Z axis bad defined
ERROR: Group 6: Support in Torsion bad defined
ERROR: End of file while reading group 7 in the input file
ERROR: Bad definition of Group 7
ERROR: Group 7: Number of Sections higher than 100
ERROR: Group 7: Erroneous number of Sections
ERROR: End of file while reading group 8 in the input file
ERROR: Bad definition of Group 8
ERROR: Group 8: Number of Sections higher than 100
ERROR: Group 8: Erroneous number of Sections
ERROR: End of file while reading group 9 in the input file
ERROR: Bad definition of Group 9
ERROR: Group 9: Number of Sections higher than 100
ERROR: Group 9: Erroneous number of Sections
ERROR: End of file while reading group 10 in the input file
ERROR: Bad definition of Group 10
ERROR: Group 10: Number of Sections higher than 100
ERROR: Group 10: Erroneous number of Sections
ERROR: End of file while reading group 11 in the input file
ERROR: Bad definition of Group 11
ERROR: Group 11: Number of Sections higher than 100
```

ERROR: Group 11: Erroneous number of Sections
ERROR: No applied loads
ERROR: Undefined working plane
ERROR: Undefined support conditions
ERROR: Et = 0
ERROR: Ec = 0
ERROR: G = 0
ERROR: Ftu = 0
ERROR: Fty = 0
ERROR: Fcy = 0
ERROR: e = 0
ERROR: Undefined type of analysis
ERROR: Erroneous geometric data
ERROR: Iyy = 0 o Izz = 0
ERROR: Maximum deflection is null
ERROR: Area calculation: Low Limit > Up Lim
ERROR: Area calculation: Disordered abscissas
ERROR: Area calculation: Low Limit out of interval
ERROR: Area calculation: Up Limit out of interval
ERROR: Area calculation: Different sub-intervals
ERROR: Convergence failure obtaining the root
ERROR: Null Maximum stress
ERROR: The output file cannot be opened
ERROR: The output file cannot be written
ERROR: The abscissas are not sorted
ERROR: Abscissa to be interpolated is out of interval

5 EXAMPLES

Input data and obtained results are presented for the two following examples.

5.1 Example 1

In the first example it will be analysed a Uniform Column, simply supported at both ends. The applied loads are showed in Figure 3 below:

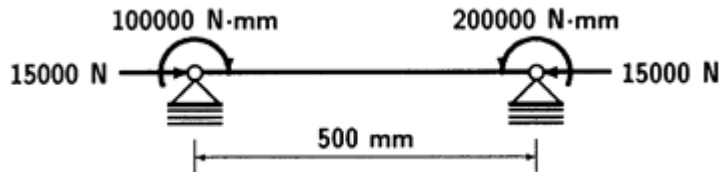


Figure 1-3. Example 1

The material properties of the column are:

$E_t =$	71710 N/mm ²
$E_c =$	73770 N/mm ²
$G =$	27580 N/mm ²
$F_{tu} =$	476 N/mm ²
$F_{ty} =$	400 N/mm ²
$F_{cy} =$	400 N/mm ²
$e =$	7 %

The length of the column is $L = 500$ mm, and the cross section geometric properties are:

$A =$	187.5 mm ⁴
$I_{yy} =$	44140.0 mm ⁴
$I_{zz} =$	6951.0 mm ⁴
$J =$	390.6 mm ⁴
$R =$	1689790.0 mm ⁴
$Y_o =$	-11.698 mm
$Z_o =$	0.0 mm
$F_{cc} =$	363.0 N/mm ²
$D_s =$	20.0 mm
$D_i =$	20.0 mm

Input file:

```

1 Program PANCO
  Example 1
  Uniform column
  Discrete loads
2 TYPE OF COLUMN: 1 Uniform, 2 Non Uniform
  1
3 UNITS: N/daN/Kgf/lbf/klb   mm/cm/in
  N   , mm
4 MATERIAL DATA: Et Ec G Ftu Fty Fcy Delta
  71710, 73770, 27580, 476.0, 400.0, 400.0, 7.00
5 GEOMETRY: [ Uniform => Xlong Area Iyy Izz Jtors Cwarp Ycc Zcc Scrip
  DisNaUF DisNaLF ]   [ Non Uniform => Nx X Area Iyy DisNaUF
  DisNaLF ]
  500.0, 187.5, 44140, 6951, 390.6, 1689790, -11.698, 0.0, 363.0, 20.0, 20.0
6 WORK PLANE AND SUPPORT CONDITIONS: [ Uniform => Plane (1-XZ/2-XY) / Supports
  (Bend-Y, Bend-Z / Tors-X) / Stiffness (Y, Z) ]   [ Non Uniform => Bend-Y /
  Stiff-Y ]
  1
  1, 1
  1
7 DISCRETE AXIAL LOADS
  1,      0.00,      -15000.0
11 DISCRETE BENDING MOMENTS
  2,      0.00,      -100000.00
      500.00,      200000.00

```

Output file:

Panco 4.3 (c) Airbus DS, Sep-2024 20-Sep-2024

Buckling and strength analysis for columns under axial and/or lateral load.

ANALYSIS TITLE:

=====
Program PANCO
Example 1
Uniform column
Discrete loads

INPUT DATA:

=====
Type of column:

Uniform (constant section and discrete axial load applied at both ends)

Material properties of the column:

Tension elastic modulus: Et = 71710.00 N/mm²
Compression elastic modulus: Ec = 73770.00 N/mm²
Shear elastic modulus: G = 27580.00 N/mm²
Ultimate tension stress: Ftu = 476.00 N/mm²
Tension yield stress: Fty = 400.00 N/mm²
Compression yield stress: Fcy = 400.00 N/mm²
Permanent strain at ultimate stress: e = 7.00 %

Geometrical data of the column:

Column length: L = 500.00 mm
Cross sectional area: A = 187.50 mm²
Moment of inertia about Y-axis: Iyy = 44140.00 mm⁴
Moment of inertia about Z-axis: Izz = 6951.00 mm⁴
Torsion constant: J = 390.60 mm⁴
Warping constant: R = 1689790.00 mm⁶
Y coordinate from Shear Center to CG: Yo = -11.70 mm
Z coordinate from Shear Center to CG: Zo = 0.00 mm
Crippling failure stress of the column: Fcc = 363.00 N/mm²
Distance from neutral axis to upper fibre: Ds = 20.00 mm
Distance from neutral axis to lower fibre: Di = 20.00 mm

Support conditions at both ends of the column:

Xs = 0 Xs = L

Flex. rel. to Y-axis: Simply supported Simply supported
Flex. rel. to Z-axis: Simply supported Simply supported
Torsion: : Free warping Free warping

Turn at both ends is not allowed in all cases

Applied loads on the column:

XS (mm)	AXIAL LOADS		TRANSVERSAL LOADS		
	Px (N)	px (N/mm)	Pt (N)	pt (N/mm)	Mf (N·mm)
0.000	15000.00	0.00	0.00	0.00	-100000.00
500.000	-15000.00	0.00	0.00	0.00	200000.00

COLUMN BUCKLING ANALYSIS:

=====
Stresses, tangent moduli and reserve factors for buckling loads:

BUCKLING MODE	S (N/mm ²)	Et (N/mm ²)	R.F.
Bending about Y - axis	-358.8	38605.7	>2
Bending about Z - axis	-108.0	73770.0	1.34
Torsion	-204.5	73768.8	>2
Bending-Y + Crippling	-315.0	68794.8	>2
Bending-Z + Crippling	---	---	---
Bending-Y + Torsion	-182.4	73769.9	>2

FORCES AND STRESS DISTRIBUTION AS BEAM-COLUMN:

Maximum and minimum summary:

		MAXIMUM		MINIMUM	
		XS (mm)	VALUE	XS (mm)	VALUE
Deflection (DELTA)		0.000	0.00 mm	262.500	-1.67 mm
Axial force (FA)		0.000	-15000.00 N	0.000	-15000.00 N
Bending moment (MF)		487.500	200106.44 N·mm	0.000	100000.00 N·mm
Shear force (FC)		0.000	374.73 N	500.000	-14.36 N
Up fibre stress (S_FS)		0.000	-125.31 N/mm ²	487.500	-170.67 N/mm ²
Low fibre stress (S_FI)		487.500	10.67 N/mm ²	0.000	-34.69 N/mm ²

Deflection, forces, bending moments and stresses corresponding to the applied loads:

XS (mm)	DELTA (mm)	FA (N)	MF (N·mm)	FC (N)	S_FS (N/mm ²)	S_FI (N/mm ²)
0.000	0.00000	-15000.00	100000.00	374.73	-125.31	-34.69
12.500	-0.14307	-15000.00	104645.97	368.69	-127.42	-32.58
25.000	-0.28104	-15000.00	109215.55	362.51	-129.49	-30.51
37.500	-0.41370	-15000.00	113705.41	356.00	-131.52	-28.48
50.000	-0.54083	-15000.00	118112.27	349.23	-133.52	-26.48
62.500	-0.66221	-15000.00	122432.93	342.20	-135.47	-24.53
75.000	-0.77764	-15000.00	126664.22	334.93	-137.39	-22.61
87.500	-0.88689	-15000.00	130803.05	327.41	-139.27	-20.73
100.000	-0.98979	-15000.00	134846.42	319.65	-141.10	-18.90
112.500	-1.08612	-15000.00	138791.36	311.66	-142.89	-17.11
125.000	-1.17570	-15000.00	142634.98	303.44	-144.63	-15.37
137.500	-1.25834	-15000.00	146374.52	295.00	-146.32	-13.68
150.000	-1.33385	-15000.00	150007.20	286.34	-147.97	-12.03
162.500	-1.40206	-15000.00	153530.41	277.47	-149.57	-10.43
175.000	-1.46281	-15000.00	156941.53	268.41	-151.11	-8.89
187.500	-1.51592	-15000.00	160238.12	259.14	-152.60	-7.40
200.000	-1.56122	-15000.00	163417.75	249.69	-154.05	-5.95
212.500	-1.59858	-15000.00	166478.09	240.06	-155.43	-4.57
225.000	-1.62784	-15000.00	169416.94	230.24	-156.76	-3.24
237.500	-1.64885	-15000.00	172232.11	220.27	-158.04	-1.96
250.000	-1.66148	-15000.00	174921.58	210.13	-159.26	-0.74
262.500	-1.66560	-15000.00	177483.38	199.84	-160.42	0.42
275.000	-1.66108	-15000.00	179915.62	189.40	-161.52	1.52
287.500	-1.64781	-15000.00	182216.55	178.82	-162.56	2.56
300.000	-1.62567	-15000.00	184384.48	168.11	-163.55	3.55
312.500	-1.59455	-15000.00	186417.83	157.28	-164.47	4.47
325.000	-1.55437	-15000.00	188315.09	146.34	-165.33	5.33
337.500	-1.50502	-15000.00	190074.91	135.29	-166.12	6.12
350.000	-1.44643	-15000.00	191696.00	124.14	-166.86	6.86
362.500	-1.37850	-15000.00	193177.16	112.89	-167.53	7.53
375.000	-1.30117	-15000.00	194517.30	101.57	-168.14	8.14
387.500	-1.21438	-15000.00	195715.45	90.17	-168.68	8.68
400.000	-1.11807	-15000.00	196770.75	78.71	-169.16	9.16
412.500	-1.01218	-15000.00	197682.45	67.19	-169.57	9.57
425.000	-0.89667	-15000.00	198449.83	55.62	-169.92	9.92
437.500	-0.77150	-15000.00	199072.36	44.01	-170.20	10.20
450.000	-0.63665	-15000.00	199549.58	32.36	-170.42	10.42
462.500	-0.49208	-15000.00	199881.16	20.70	-170.57	10.57
475.000	-0.33779	-15000.00	200066.81	9.01	-170.65	10.65
487.500	-0.17377	-15000.00	200106.44	-2.67	-170.67	10.67
500.000	0.00000	-15000.00	200000.00	-14.36	-170.62	10.62

STRENGTH ANALYSIS AS BEAM-COLUMN:

Beam-column strength reserve factor: >2

Maximum and minimum summary:

		MAXIMUM		MINIMUM	
		XS (mm)	VALUE	XS (mm)	VALUE
Deflection (DELTA)		0.000	0.00 mm	262.500	-4.36 mm
Axial force (FA)		0.000	-32871.71 N	0.000	-32871.71 N
Bending moment (MF)		350.000	495878.12 N·mm	0.000	219144.70 N·mm
Shear force (FC)		0.000	1424.09 N	500.000	-742.61 N
Up fibre stress (S_FS)		0.000	-274.61 N/mm ²	350.000	-400.00 N/mm ²
Low fibre stress (S_FI)		350.000	49.37 N/mm ²	0.000	-76.02 N/mm ²

Deflection, forces, bending moments and stresses corresponding to the failure loads:

XS (mm)	DELTA (mm)	FA (N)	MF (N·mm)	FC (N)	S_FS (N/mm ²)	S_FI (N/mm ²)
0.000	0.00000	-32871.71	219144.70	1424.09	-274.61	-76.02
12.500	-0.36911	-32871.71	236756.47	1394.32	-282.59	-68.04
25.000	-0.72670	-32871.71	253989.48	1363.48	-290.40	-60.23
37.500	-1.07193	-32871.71	270816.28	1329.88	-298.02	-52.61
50.000	-1.40399	-32871.71	287209.91	1294.15	-305.45	-45.18
62.500	-1.72207	-32871.71	303144.19	1256.35	-312.67	-37.96
75.000	-2.02540	-32871.71	318593.56	1216.54	-319.67	-30.96
87.500	-2.31322	-32871.71	333533.38	1174.79	-326.44	-24.19
100.000	-2.58482	-32871.71	347939.72	1131.15	-332.97	-17.66
112.500	-2.83949	-32871.71	361789.56	1085.71	-339.24	-11.39
125.000	-3.07655	-32871.71	375060.69	1038.53	-345.26	-5.37
137.500	-3.29537	-32871.71	387731.97	989.69	-351.00	0.37
150.000	-3.49531	-32871.71	399783.09	939.26	-356.46	5.83
162.500	-3.67581	-32871.71	411194.78	887.33	-361.63	11.00
175.000	-3.83629	-32871.71	421948.72	833.99	-366.50	15.87
187.500	-3.97625	-32871.71	432027.84	779.31	-371.07	20.44
200.000	-4.09518	-32871.71	441415.94	723.39	-375.32	24.69
212.500	-4.19264	-32871.71	450098.06	666.30	-379.26	28.63
225.000	-4.26819	-32871.71	458060.19	608.15	-382.86	32.23
237.500	-4.32146	-32871.71	465289.75	549.03	-386.14	35.51
250.000	-4.35208	-32871.71	471775.06	489.04	-389.08	38.45
262.500	-4.35975	-32871.71	477505.84	428.25	-391.68	41.04
275.000	-4.34419	-32871.71	482472.81	366.78	-393.93	43.29
287.500	-4.30515	-32871.71	486668.09	304.73	-395.83	45.20
300.000	-4.24243	-32871.71	490085.00	242.20	-397.38	46.74
312.500	-4.15586	-32871.71	492718.06	179.26	-398.57	47.94
325.000	-4.04531	-32871.71	494562.94	116.05	-399.40	48.77
337.500	-3.91071	-32871.71	495616.91	52.65	-399.88	49.25
350.000	-3.75198	-32871.71	495878.12	-10.84	-400.00	49.37
362.500	-3.56913	-32871.71	495346.19	-74.30	-399.76	49.13
375.000	-3.36217	-32871.71	494022.00	-137.65	-399.16	48.53
387.500	-3.13118	-32871.71	491907.62	-200.79	-398.20	47.57
400.000	-2.87625	-32871.71	489006.41	-263.59	-396.89	46.25
412.500	-2.59753	-32871.71	485323.12	-325.97	-395.22	44.59
425.000	-2.29519	-32871.71	480863.53	-387.84	-393.20	42.57
437.500	-1.96946	-32871.71	475634.81	-449.09	-390.83	40.20
450.000	-1.62058	-32871.71	469645.31	-509.61	-388.11	37.48
462.500	-1.24885	-32871.71	462904.81	-569.32	-385.06	34.43
475.000	-0.85460	-32871.71	455423.84	-628.12	-381.67	31.04
487.500	-0.43819	-32871.71	447214.50	-685.63	-377.95	27.32
500.000	0.00000	-32871.71	438289.41	-742.61	-373.91	23.27

5.2 Example 2

In the second Example, it will analyzed a Non Uniform column, fixed at both ends. The applied loads are showed in Figure 3 below:

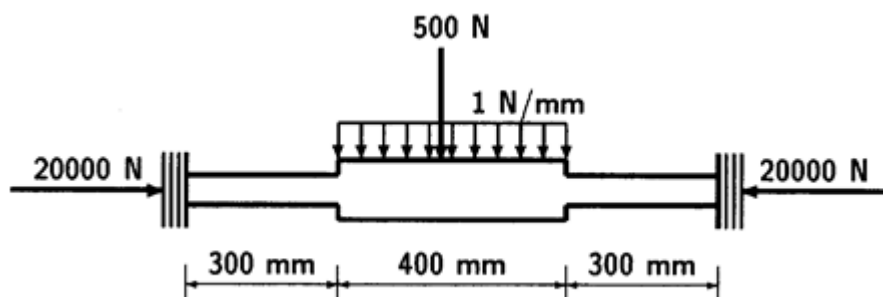


Figure 1-4. Example 2

The material properties of the column are:

$E_t =$	71710 N/mm
$E_c =$	73770 N/mm ²
$G =$	27580 N/mm ²
$F_{tu} =$	476 N/mm ²
$F_{ty} =$	400 N/mm ²
$F_{cy} =$	400 N/mm ²
$e =$	7 %

The length of the column is $L = 1000$ mm, and the cross section geometric properties are:

- Normal section:

$A =$	250 mm ²
$I_{yy} =$	15000 mm ⁴
$D_s =$	25 mm
$D_i =$	25 mm

- Reinforced section:

$A =$	400 mm ²
$I_{yy} =$	25000 mm ⁴
$D_s =$	40 mm
$D_i =$	40 mm

Input file:

```

1 Program PANCO
  Example 2
  Not uniform column
  Discrete and distributed loads
2 TYPE OF COLUMN: 1 Uniform, 2 Non Uniform
2
3 UNITS: N/daN/Kgf/lbf/klb   mm/cm/in
  N, mm
4 MATERIAL DATA: Et Ec G Fty Fty Fcy Delta
  71710, 73770, 25580, 476.0, 400.0, 400.0, 7.00
5 GEOMETRY: [ Uniform => Xlong Area Iyy Izz Jtors Cwarp Ycc Zcc Scrip
  DisNaUF DisNaLF ]   [ Non Uniform => Nx X Area Iyy DisNaUF
  DisNaLF ]
6,      0.00,      250.0,      15000.0,      25.00,      25.00
      300.00,      250.0,      15000.0,      25.00,      25.00
      300.00,      400.0,      25000.0,      40.00,      40.00
      700.00,      400.0,      25000.0,      40.00,      40.00
      700.00,      250.0,      15000.0,      25.00,      25.00
      1000.00,      250.0,      15000.0,      25.00,      25.00
6 WORK PLANE AND SUPPORT CONDITIONS: [ Uniform => Plane (1-XZ/2-XY) / Supports
  (Bend-Y, Bend-Z / Tors-X) / Stiffeness (Y, Z) ]   [ Non Uniform => Bend-Y /
  Stiff-Y ]
2
7 DISCRETE AXIAL LOADS
2,      0.00,      20000.0
      1000.00,      -20000.0
9 DISCRETE TRANSVERSAL LOADS
1,      500.00,      500.0
10 DISTRIBUTED TRANSVERSAL LOADS
6,      0.00,      0.0
      300.00,      0.0
      300.00,      1.0
      700.00,      1.0
      700.00,      0.0
      1000.00,      0.0

```

Output file:

Panco 4.3 (c) Airbus DS, Sep-2024 20-Sep-2024

Buckling and strength analysis for columns under axial and/or lateral load.

ANALYSIS TITLE:
=====

Program PANCO
Example 2
Not uniform column
Discrete and distributed loads

INPUT DATA:
=====

Type of column:

Not uniform (variable section and discrete axial load applied on several sections)

Material properties of the column:

Tension elastic modulus:	Et =	71710.00 N/mm ²
Compression elastic modulus:	Ec =	73770.00 N/mm ²
Shear elastic modulus:	G =	25580.00 N/mm ²
Ultimate tension stress:	Ftu =	476.00 N/mm ²
Tension yield stress:	Fty =	400.00 N/mm ²
Compression yield stress:	Fcy =	400.00 N/mm ²
Permanent strain at ultimate stress:	e =	7.00 %

Geometrical data of the column:

XS (mm)	AREA (mm ²)	INERTIA (mm ⁴)	DISTANCE FROM NEUTRAL AXIS TO	
			UPPER FIBRE (mm)	LOWER FIBRE (mm)
0.00000	250.00	15000.00	25.000	25.000
299.99960	250.00	15000.00	25.000	25.000
300.00000	400.00	25000.00	40.000	40.000
699.99957	400.00	25000.00	40.000	40.000
700.00000	250.00	15000.00	25.000	25.000
1000.00000	250.00	15000.00	25.000	25.000

Support conditions at both ends of the column:

	Xs = 0	Xs = L
Flex. rel. to Y-axis:	Clamped	Clamped
Turn at both ends is not allowed in all cases		

Applied loads on the column:

XS (mm)	AXIAL LOADS		TRANSVERSAL LOADS		
	Px (N)	px (N/mm)	Pt (N)	pt (N/mm)	Mf (N·mm)
0.000	20000.00	0.00	0.00	0.00	0.00
300.000	0.00	0.00	0.00	0.00	0.00
300.000	0.00	0.00	0.00	1.00	0.00
500.000	0.00	0.00	500.00	1.00	0.00
700.000	0.00	0.00	0.00	1.00	0.00
700.000	0.00	0.00	0.00	0.00	0.00

1000.000 -20000.00 0.00 0.00 0.00 0.00

COLUMN BUCKLING ANALYSIS:

=====

BUCKLING MODE	R.F.
Bending about Y-axis	>2

Stresses and tangent moduli corresponding to buckling loads:

XS (mm)	S (N/mm ²)	Et (N/mm ²)
0.000	-226.05	73761.5
25.000	-226.05	73761.5
50.000	-226.05	73761.5
75.000	-226.05	73761.5
100.000	-226.05	73761.5
125.000	-226.05	73761.5
150.000	-226.05	73761.5
175.000	-226.05	73761.5
200.000	-226.05	73761.5
225.000	-226.05	73761.5
250.000	-226.05	73761.5
275.000	-226.05	73761.5
300.000	-226.05	73761.5
300.000	-141.28	73770.0
325.000	-141.28	73770.0
350.000	-141.28	73770.0
375.000	-141.28	73770.0
400.000	-141.28	73770.0
425.000	-141.28	73770.0
450.000	-141.28	73770.0
475.000	-141.28	73770.0
500.000	-141.28	73770.0
525.000	-141.28	73770.0
550.000	-141.28	73770.0
575.000	-141.28	73770.0
600.000	-141.28	73770.0
625.000	-141.28	73770.0
650.000	-141.28	73770.0
675.000	-141.28	73770.0
700.000	-141.28	73770.0
700.000	-226.05	73761.5
725.000	-226.05	73761.5
750.000	-226.05	73761.5
775.000	-226.05	73761.5
800.000	-226.05	73761.5
825.000	-226.05	73761.5
850.000	-226.05	73761.5
875.000	-226.05	73761.5
900.000	-226.05	73761.5
924.999	-226.05	73761.5
949.998	-226.05	73761.5
974.997	-226.05	73761.5
1000.000	-226.05	73761.5

FORCES AND STRESS DISTRIBUTION AS BEAM-COLUMN:

=====

Maximum and minimum summary:

		MAXIMUM		MINIMUM	
		XS (mm)	VALUE	XS (mm)	VALUE
Deflection	(DELTA)	999.999	0.00 mm	500.000	-4.87 mm
Axial force	(FA)	0.000	-20000.00 N	0.000	-20000.00 N
Bending moment	(MF)	500.000	160420.12 N·mm	0.000	-141972.84 N·mm

Shear force (FC)	225.000	754.83 N	775.000	-754.83 N
Up fibre stress (S_FS)	0.000	156.62 N/mm ²	500.000	-306.67 N/mm ²
Low fibre stress (S_FI)	500.000	206.67 N/mm ²	0.000	-316.62 N/mm ²

Deflection, forces, bending moments and stresses corresponding to the applied loads:

XS (mm)	DELTA (mm)	FA (N)	MF (N·mm)	FC (N)	S_FS (N/mm ²)	S_FI (N/mm ²)
0.000	0.00000	-20000.00	-141972.84	451.84	156.62	-316.62
25.000	-0.03951	-20000.00	-129932.60	513.04	136.55	-296.55
50.000	-0.15345	-20000.00	-116403.84	571.07	114.01	-274.01
75.000	-0.33398	-20000.00	-101543.44	621.21	89.24	-249.24
100.000	-0.57260	-20000.00	-85521.12	664.25	62.54	-222.54
125.000	-0.86015	-20000.00	-68520.25	699.74	34.20	-194.20
150.000	-1.18695	-20000.00	-50734.41	727.21	4.56	-164.56
175.000	-1.54278	-20000.00	-32368.15	746.32	-26.05	-133.95
200.000	-1.91711	-20000.00	-13631.74	754.83	-57.28	-102.72
225.000	-2.29925	-20000.00	5260.80	754.83	-88.77	-71.23
250.000	-2.67838	-20000.00	24093.07	752.08	-120.16	-39.84
275.000	-3.04372	-20000.00	42649.77	735.22	-151.08	-8.92
300.000	-3.38465	-20000.00	60718.04	712.96	-181.20	21.20
300.000	-3.38466	-20000.00	60718.32	711.78	-147.15	47.15
325.000	-3.69849	-20000.00	77932.38	666.39	-174.69	74.69
350.000	-3.98554	-20000.00	93985.75	618.86	-200.38	100.38
375.000	-4.24035	-20000.00	108769.23	565.84	-224.03	124.03
400.000	-4.45781	-20000.00	122180.79	508.95	-245.49	145.49
425.000	-4.63334	-20000.00	134128.77	448.52	-264.61	164.61
450.000	-4.76277	-20000.00	144529.84	385.02	-281.25	181.25
475.000	-4.84260	-20000.00	153313.88	318.43	-295.30	195.30
500.000	-4.86979	-20000.00	160420.06	250.69	-306.67	206.67
500.000	-4.86979	-20000.00	160420.12	-250.65	-306.67	206.67
525.000	-4.84263	-20000.00	153314.42	-318.43	-295.30	195.30
550.000	-4.76278	-20000.00	144529.91	-385.05	-281.25	181.25
575.000	-4.63332	-20000.00	134128.31	-448.52	-264.61	164.61
600.000	-4.45781	-20000.00	122180.75	-508.91	-245.49	145.49
625.000	-4.24037	-20000.00	108769.60	-565.85	-224.03	124.03
650.000	-3.98555	-20000.00	93985.89	-618.88	-200.38	100.38
675.000	-3.69848	-20000.00	77932.19	-666.40	-174.69	74.69
700.000	-3.38466	-20000.00	60718.59	-711.75	-147.15	47.15
700.000	-3.38465	-20000.00	60718.25	-712.96	-181.20	21.20
725.000	-3.04373	-20000.00	42650.04	-735.22	-151.08	-8.92
750.000	-2.67838	-20000.00	24093.20	-752.10	-120.16	-39.84
775.000	-2.29924	-20000.00	5260.67	-754.83	-88.77	-71.23
800.000	-1.91711	-20000.00	-13631.72	-754.83	-57.28	-102.72
825.000	-1.54276	-20000.00	-32368.45	-746.33	-26.05	-133.95
850.000	-1.18695	-20000.00	-50734.38	-727.19	4.56	-164.56
875.000	-0.86016	-20000.00	-68519.97	-699.74	34.20	-194.20
900.000	-0.57260	-20000.00	-85521.05	-664.29	62.54	-222.54
924.999	-0.33395	-20000.00	-101543.44	-621.22	89.24	-249.24
949.998	-0.15347	-20000.00	-116402.61	-571.02	114.00	-274.00
974.997	-0.03955	-20000.00	-129930.31	-513.03	136.55	-296.55
1000.000	0.00000	-20000.00	-141972.73	-451.90	156.62	-316.62

STRENGTH ANALYSIS AS BEAM-COLUMN:

=====

Beam-column strength reserve factor: 1.17

Maximum and minimum summary:

		MAXIMUM		MINIMUM	
		XS (mm)	VALUE	XS (mm)	VALUE
Deflection	(DELTA)	999.997	0.00 mm	500.000	-6.37 mm
Axial force	(FA)	0.000	-23574.77 N	0.000	-23574.77 N
Bending moment	(MF)	500.000	208470.69 N·mm	0.000	-183420.53 N·mm
Shear force	(FC)	225.000	1001.85 N	775.000	-1001.85 N

Up fibre stress (S_{FS}) 0.000 211.40 N/mm² 500.000 -392.49 N/mm²
 Low fibre stress (S_{FI}) 500.000 274.62 N/mm² 0.000 -400.00 N/mm²

Deflection, forces, bending moments and stresses corresponding to the failure loads:

XS (mm)	DELTA (mm)	FA (N)	MF (N · mm)	FC (N)	S _{FS} (N/mm ²)	S _{FI} (N/mm ²)
0.000	0.00000	-23574.77	-183420.53	533.04	211.40	-400.00
25.000	-0.05115	-23574.77	-168953.84	626.71	187.29	-375.89
50.000	-0.19908	-23574.77	-152205.69	715.82	159.38	-347.98
75.000	-0.43406	-23574.77	-133405.59	793.33	128.04	-316.64
100.000	-0.74534	-23574.77	-112806.50	860.16	93.71	-282.31
125.000	-1.12115	-23574.77	-90686.34	915.48	56.84	-245.44
150.000	-1.54891	-23574.77	-67341.56	958.43	17.94	-206.54
175.000	-2.01518	-23574.77	-43088.89	988.37	-22.48	-166.11
200.000	-2.50608	-23574.77	-18255.59	1001.84	-63.87	-124.73
225.000	-3.00744	-23574.77	6824.20	1001.85	-105.67	-82.93
250.000	-3.50489	-23574.77	31811.80	997.66	-147.32	-41.28
275.000	-3.98415	-23574.77	56370.71	971.39	-188.25	-0.35
300.000	-4.43114	-23574.77	80168.63	936.70	-227.91	39.32
300.000	-4.43114	-23574.77	80169.02	934.85	-187.21	69.33
325.000	-4.84236	-23574.77	102755.58	873.67	-223.35	105.47
350.000	-5.21827	-23574.77	123772.85	809.20	-256.97	139.10
375.000	-5.55171	-23574.77	143052.44	736.27	-287.82	169.95
400.000	-5.83603	-23574.77	160437.34	657.38	-315.64	197.76
425.000	-6.06530	-23574.77	175787.88	573.13	-340.20	222.32
450.000	-6.23416	-23574.77	188977.38	484.22	-361.30	243.43
475.000	-6.33817	-23574.77	199901.36	390.78	-378.78	260.91
500.000	-6.37354	-23574.77	208470.56	295.67	-392.49	274.62
500.000	-6.37354	-23574.77	208470.69	-295.61	-392.49	274.62
525.000	-6.33820	-23574.77	199902.28	-390.79	-378.78	260.91
550.000	-6.23417	-23574.77	188977.45	-484.28	-361.30	243.43
575.000	-6.06527	-23574.77	175787.09	-573.12	-340.20	222.32
600.000	-5.83603	-23574.77	160437.41	-657.32	-315.64	197.76
625.000	-5.55173	-23574.77	143053.17	-736.27	-287.82	169.95
650.000	-5.21827	-23574.77	123773.09	-809.25	-256.97	139.10
675.000	-4.84234	-23574.77	102755.28	-873.68	-223.35	105.47
700.000	-4.43115	-23574.77	80169.47	-934.80	-187.21	69.33
700.000	-4.43114	-23574.77	80169.07	-936.69	-227.91	39.32
725.000	-3.98416	-23574.77	56371.17	-971.39	-188.25	-0.35
750.000	-3.50489	-23574.77	31812.06	-997.68	-147.32	-41.28
775.000	-3.00743	-23574.77	6823.99	-1001.85	-105.67	-82.93
800.000	-2.50608	-23574.77	-18255.51	-1001.85	-63.87	-124.72
825.000	-2.01516	-23574.77	-43089.37	-988.40	-22.48	-166.11
850.000	-1.54891	-23574.77	-67341.43	-958.38	17.94	-206.53
875.000	-1.12117	-23574.77	-90685.69	-915.47	56.84	-245.44
900.000	-0.74534	-23574.77	-112806.29	-860.23	93.71	-282.31
924.999	-0.43401	-23574.77	-133405.81	-793.35	128.04	-316.64
949.998	-0.19910	-23574.77	-152204.00	-715.73	159.37	-347.97
974.997	-0.05121	-23574.77	-168950.62	-626.70	187.29	-375.88
1000.000	0.00000	-23574.77	-183420.25	-533.14	211.40	-400.00