USER MANUAL

- TECHNICAL DATASHEET –

Product: Smart Intercom
Version: 1.9.0
Developed by: Emblyx

Quick Reference & Links

Please use the following official resources for real-time validation, firmware updates, and comprehensive digital documentation:

- **Official Product Page & Specifications:**
  www.emblyx.com/product/intercom
- **Latest Installation Guide:**
  www.emblyx.com/products/intercom/manuals/installation-guide.pdf
- **About Emblyx:**
  www.emblyx.com/discover-us
- **Technical Support & Customer Contact Desk:**
  www.emblyx.com/contact
- **List of Supported Intercoms:**
  Electra PASS Analog: IA.01, IA.02, IA.03N, IA.04N
  Electra PASS Digital: PAS.17A, PAS.27N, PAS.37A, MCS.42A, MCS.47N
  All telephone-style intercoms with RJ11 plug: Resel/Restel, Interada, Betamex, Tehnoton, etc.
  Electra Touch Line: Smart/Smart+ (coming soon)
  Genway: WL-02, WL-03, WL-06 (coming soon)
- **Latest Firmware Releases:**
  https://github.com/emblyx/products/tree/main/intercom



Contents

Quick Reference & Links 2
1. Product Overview 5
1.1 General Description 5
1.2 Core Functionalities 5
1.3 Package Contents 6
2. Technical Specifications 7
2.1 Hardware Specifications 7
2.2 Electrical & Power Specifications 8
2.3 Battery Safety 9
3. Hardware Installation & Electrical Wiring 10
3.1 Mounting Location 10
3.2 Mounting with the Installation Cable 11
3.3 Wiring Connection 12
4. Initial Device Setup (Provisioning) 13
4.1 General Overview 13
4.2 Mobile Application Pairing Process 13
4.3 Troubleshooting 14
5. Device Configuration 15
5.1 General Overview 15
5.2 Initial Intercom Configuration 15
5.3 Troubleshooting 16
6. Detailed Feature Descriptions 17
6.1 General Overview 17
6.2 Web Dashboard 17
6.3 ESP RainMaker 20
6.4 Safe Manager (Safe Mode) 20
6.5 Chat Bot 21
6.6 Smart Home Platform Integrations 22
6.7 WebAPI Commands 22
7. Regulatory, Warranty & Technical Support 24
7.1 Regulatory Compliance 24

7.2 Waste Electrical and Electronic Equipment (WEEE) 24
7.3 Legal Information 24
7.4 Contact Information 24

1. Product Overview

1.1 General Description

The Smart Intercom is a smart access solution designed to upgrade existing building intercom systems into smartphone-controlled entry systems. It enables remote door unlocking, access management, and real-time notifications without requiring hubs, complex installation, or structural modifications.

Designed for residential, rental, and business environments, it integrates with a wide range of traditional intercom systems and major smart home platforms, providing a fast and scalable path to modern access control.

1.2 Core Functionalities

- **Remote Door Unlock**
  Control door access from anywhere in the world directly via smartphone. Users can unlock doors instantly without being physically present at the intercom panel.
- **Automatic Unlock (Auto Access)**
  Configure automatic unlocking scenarios based on user preferences or conditions, enabling seamless entry without manual interaction.
- **Smart Intercom Integration**
  Compatible with multiple existing intercom brands and systems (e.g., Electra, Resel, Comelit and others), allowing retrofit deployment without replacing the current infrastructure.
- **Real-Time Notifications**
  Receive instant alerts on your phone when someone rings the intercom, ensuring you never miss a visitor, delivery, or guest.
- **Shared Access Management**
  Easily grant, manage, and revoke access for family members, guests, tenants, or employees, with flexible permission control.
- **Smart Home Compatibility**
  Integrates with major smart home ecosystems, enabling automation scenarios and centralized control alongside other connected devices.
- **No-Hub Architecture**
  Operates without any hubs or external control units, reducing installation complexity and cost.

- **Fast Installation**
  Designed for quick deployment (approximately 5 minutes), requiring no specialized tools or technical expertise.
- **Secure Remote Access**
  Encrypted communication ensures secure control and authentication for all remote operations.
- **Multi-Use Case Support**
  Suitable for residential homes, apartment buildings, rental properties, offices, and property management scenarios where flexible access control is required.

1.3 Package Contents

Before starting the physical deployment, the retail box includes the following components:

- **Product Packaging**
  Includes QR codes, support links, social media channels, and product information.
- **Emblyx Smart Intercom Device**
  The smart module that controls your intercom directly from your phone
- **Wall Mount Support**
  Designed for secure and clean wall installation
- **Installation Cable (30 cm)**
  Used to connect the device to your existing intercom systems
- **18650 Rechargeable Li-ion Battery**
  Powers the Smart Intercom device directly. Supports up to 2 batteries connected in **parallel.**
- **Installation Accessories**
  Includes mounting accessories for quick installation.



2. Technical Specifications

This section provides the key technical specifications of the Smart Intercom, including electrical, hardware, and operational characteristics.

2.1 Hardware Specifications

Component	Specification Details
Microcontroller	ESP32-S2-MINI-2-N4R2
USB-C Port (input only)	Allows charging the device **Important Safety Notice:** Do not leave the intercom connected to the building intercom system while it is charging from a wall power outlet. For safe use during charging, unplug the wire connector or use a power bank instead
Intercom Port	JST-XH 5-pin (2.54mm pitch) cable assembly
Intercom Installation Cable	JST-XH 5-pin to 5-pin cable (2.54mm pitch), 300mm
Extension Port	DB125-2.54-5P-GN 5-position 2.54mm PCB terminal block
RJ11 Port	RJ11 PCB connector
Battery Slot	Supports up to 2 standard 18650 rechargeable Li-ion batteries connected in **parallel** for extended runtime and backup power operation **Important Safety Notice:** Ensure correct polarity alignment according to the markings on the battery cap and inside the battery slot
Case	3D-printed enclosure made from matte white 9600 resin
Dimensions and Weight	9.2 x 8.6 x 3.6 cm and 250g

2.2 Electrical & Power Specifications

Parameter	Operational Rating
Wireless Interfaces	Wi-Fi 802.11 b/g/n (2.4 GHz only)
Input Intercom Voltage	0 – 70 V AC/DC
Input Supply Voltage: • USB-C • Battery • Operating Range	 4.5 – 5 VDC 3 – 4.2 VDC 2.9 – 5.5 VDC
Input Charging Current (max)	Up to 1200 mA per battery
Typical Charging Time (estimated based on 1 × 18650, 3000 mAh)	~ 2 hours
Power Consumption: • Power Saving Mode • Active Mode • Peak (max rating)	 ~ 1.8 mA ~ 20 mA ~ 700mA – 1A
Battery Lifetime: (estimated based on 2 × 18650, 3000 mAh each) • Auto Unlock (Inactive Sleep enabled) • Manual Unlock or Auto Unlock (Inactive Sleep disabled)	 ~ 4-5 months ~ 3 months *Battery life can be extended using higher-capacity cells or two 18650 batteries in parallel
Operating Temperature	-10°C to +50°C

2.3 Battery Safety

The Smart Intercom uses rechargeable Li-Ion 18650 batteries.

Warnings:
• Use only high-quality rechargeable 18650 Li-Ion batteries.
• Do not short-circuit, crush, puncture, or disassemble batteries.
• Do not expose batteries to fire, excessive heat, or direct sunlight.
• Do not charge damaged or swollen batteries.
• Replace batteries only with equivalent types.
• Keep batteries out of reach of children.
• Dispose of batteries according to local regulations.

Failure to follow these instructions may result in fire, explosion, or injury.

3. Hardware Installation & Electrical Wiring

Please consult the latest **Installation Guide** for correct and complete installation procedures.

Important: Ensure the installation is performed by someone familiar with intercom wiring and electrical safety. If you have any doubts, contact Emblyx Support for assistance.

3.1 Mounting Location

Determine the optimal positioning:

- A - Mount the device below the existing intercom using the pre-existing screw point, allowing the included wall mount bracket to slide and secure into place.
- B - Alternatively, mount it on the side using the included double-sided adhesive tape, or secure it with an additional screw for extra stability.


A



B



In both cases, route the installation cable through the cable guide channel on the mount bracket, ensuring it is positioned between the wall and the wall mount support for a clean installation and proper cable management.

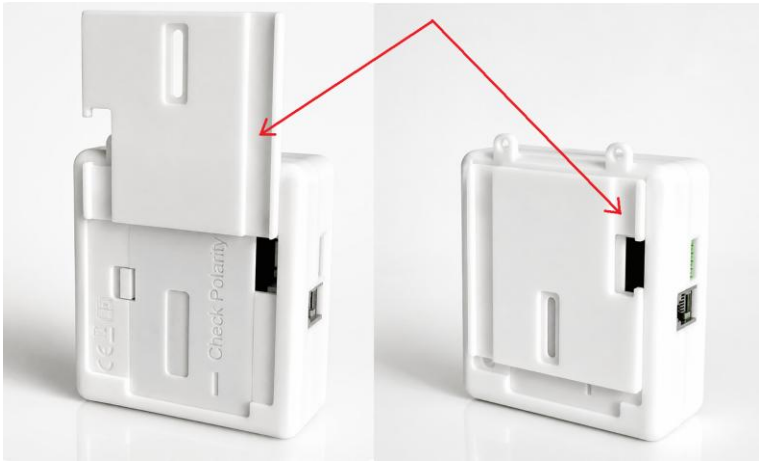

3.2 Mounting with the Installation Cable

You can now open the existing intercom, route the installation cable beneath the intercom and through the cable guide on the wall mount bracket.

Secure the bracket in place using a screw or double-sided tape.









You can now identify the 2–5 intercom wires, connect them to the supplied installation cable in any order. Make sure the wires do not touch each other (Chapter 3.3 Wiring Connection).

Leave any unused wires disconnected, and then close the intercom.

Next, connect the cable to the Smart Intercom port, ensuring sufficient wire length for proper placement, then install the batteries. Verify correct battery polarity according to the markings on the battery slot and cover.








3.3 Wiring Connection

The Smart Intercom supports intercom systems with up to 5-wire configurations.


Identify the incoming wires from the external building intercom system (outside the apartment unit), which are typically terminated with screw terminals or pin connectors.

For intercom systems equipped with an RJ11 interface, simply plug the connector directly without the need to open or disassemble any wiring, ensuring a quick and straightforward installation.

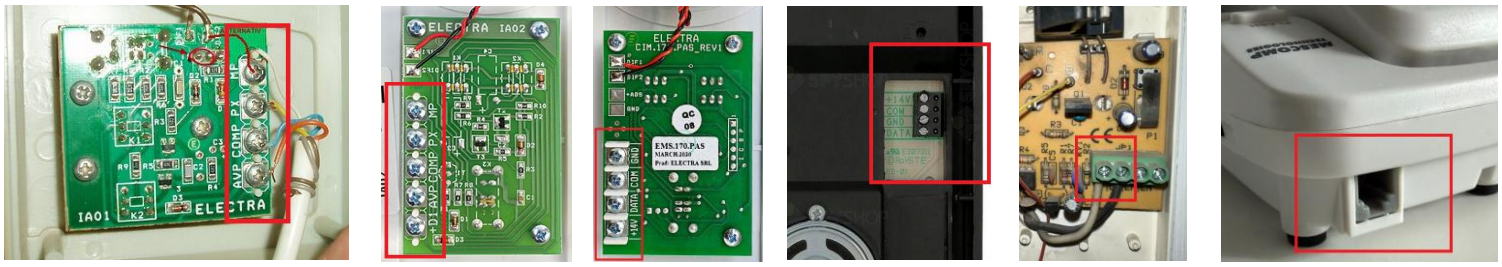

Connect the included installation cable to each corresponding pin of the intercom system interface, ensuring that each connection is properly isolated and that no unintended contact or short circuits occur between wires.

The order of the wires does not matter, as the system automatically detects and maps all connections as part of its core functionality.

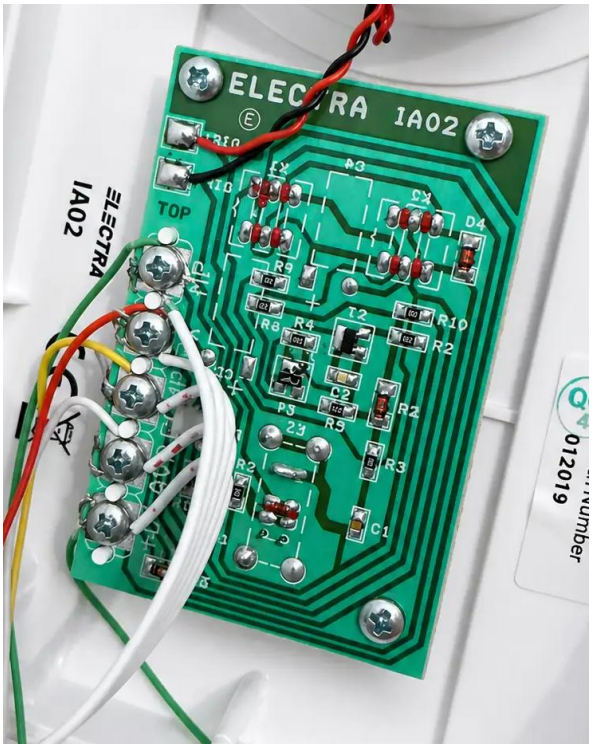


4. Initial Device Setup (Provisioning)

Please consult the latest **Installation Guide** for correct and complete installation procedures.

Install **ESP Rainmaker** from the App Store (iOS) or Google Play (Android), create an account, sign in, and grant required permissions (Bluetooth, location, and network access).

When power is first applied to a non-configured or freshly factory-reset device, a short beep will indicate that it is ready for pairing. You can press the reset button to restart the device and restart the process.


4.1 General Overview

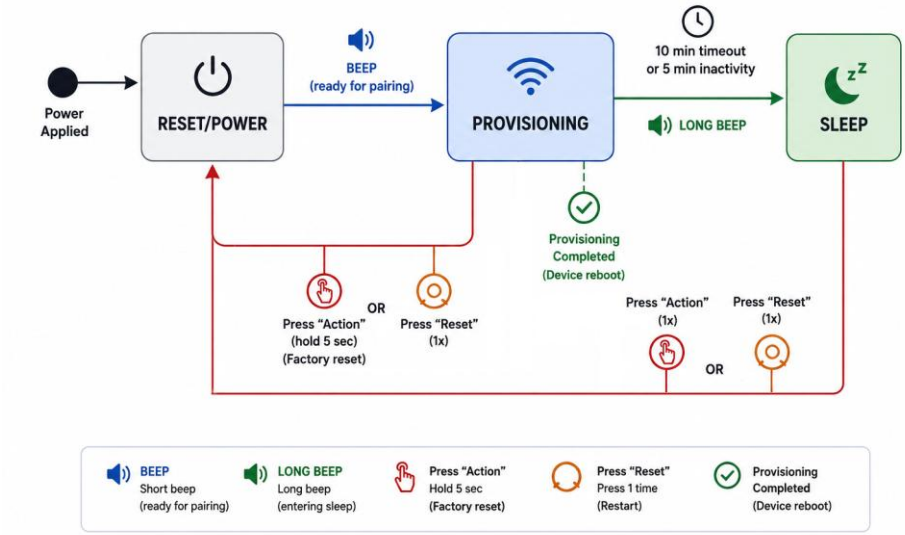

4.2 Mobile Application Pairing Process

1. Press the "**Reset**" button on the Smart Intercom device
2. Confirm that the buzzer **beeps once** (device enters pairing mode)
3. **ESP RainMaker**
    1. Tap Add Device
    2. Scan the Setup QR Code shown in the side image or on the packaging
    3. Tap Join PROV_EmblyxIntercom
    4. Select your Wi-Fi 2.4 GHz network and enter the password
    5. Tap Start
    6. Wait until the device is successfully paired and appears in the device list
4. Device will now restart and you will get the confirmation that the device is ready to be used

Setup Code

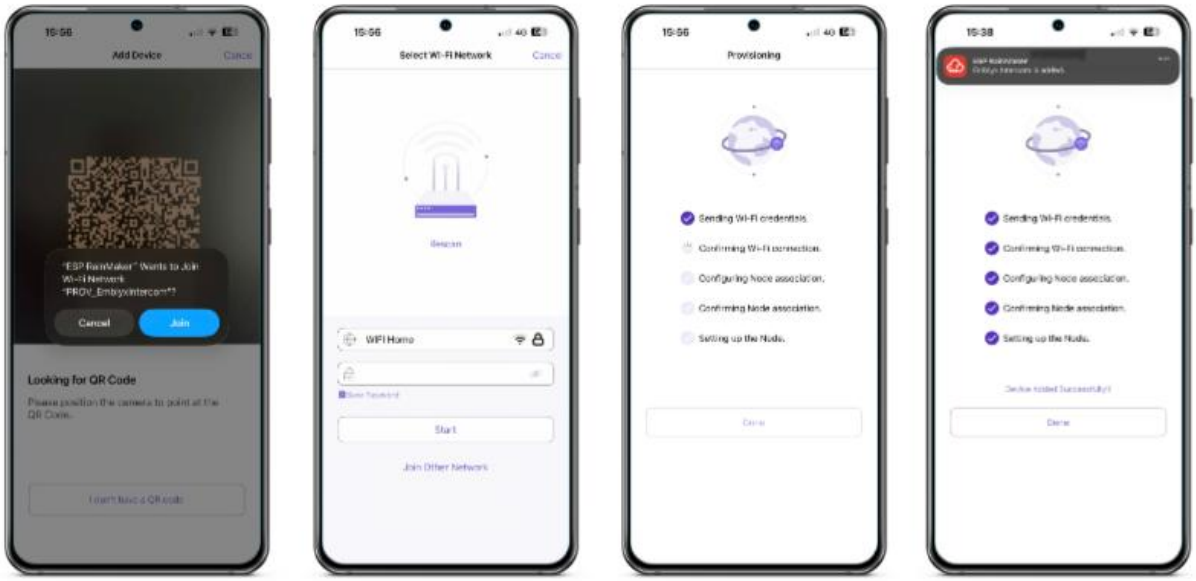

4.3 Troubleshooting

In general, if any step fails, press and hold the "Action" button for 5 seconds until you hear a long beep. The device will reset and you can start the setup process again.

Common Issues & Solutions:


1. **No device beep after pressing “Reset”**
   Verify that the batteries are correctly inserted and properly oriented. The device may not be receiving power.
2. **QR code scanning returns an error**
   First, verify that the device emits a beep after reset. Force-close and reopen the ESP RainMaker application, then try scanning again. Also check that the Wi-Fi network "PROV_EmblyxIntercom" is visible and available.
3. **Can’t find your WiFi network**
   Ensure you are within range of your Wi-Fi network, then tap "Rescan" and wait for the network list to refresh. In environments with a large number of nearby Wi-Fi networks (typically more than 30), networks may be prioritized based on signal strength and your network may not appear immediately. Moving closer to the router and rescanning can help.
4. **Configuration step displays warnings or remains loading indefinitely**
   In some cases, the "Setting up the Node" step may continue loading even though the device has already been successfully added. If you receive a confirmation message indicating that the device was added and the Dashboard is available, you can safely close the provisioning window and continue normal operation.

5. Device Configuration

Please consult the latest **Installation Guide** for correct and complete installation procedures.

Please ensure you are standing in front of the building's outdoor intercom. This step is required to configure the device for your specific apartment number.

5.1 General Overview

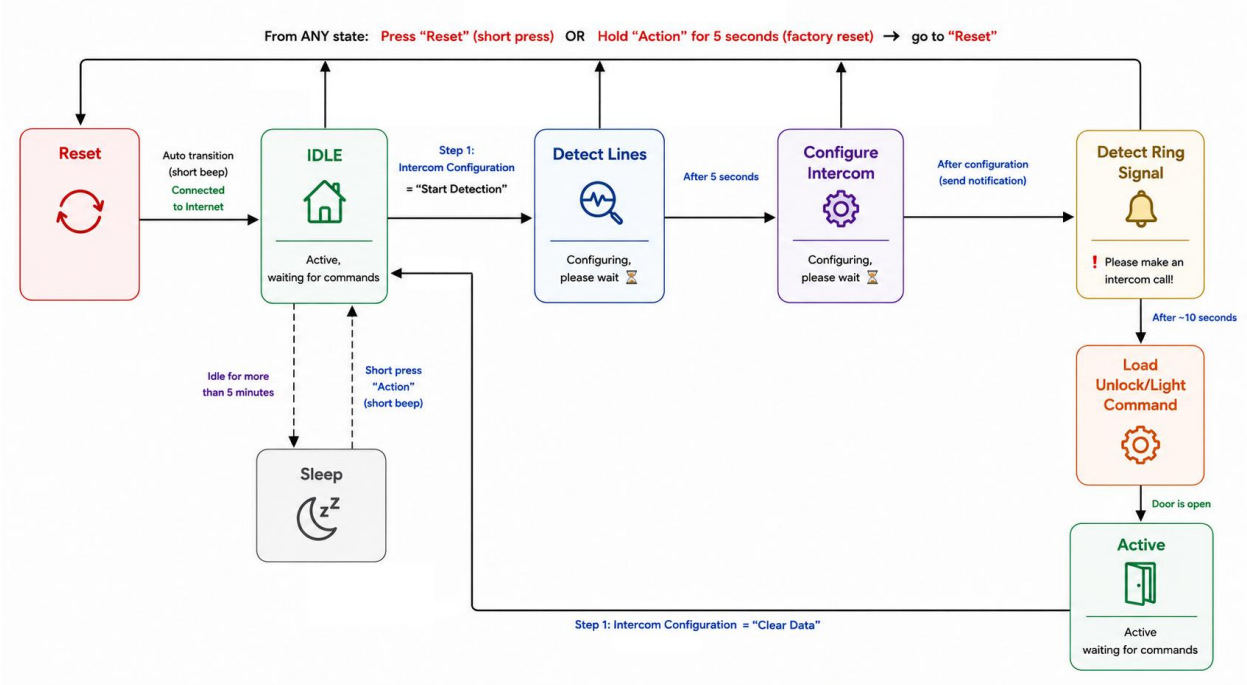


5.2 Initial Intercom Configuration

To start the configuration, go to the intercom at the building entrance. In the next step, you will make a call to configure the device.

Open **ESP RainMaker** and select the **Emblyx Intercom** device:

1. Confirm the *"System Status"* is ***"Active, always online"***. If not, please wake up the device
2. Select *"Intercom Configuration"* → ***"Start Detection"***
    1. The status will change to ***"Configuring, please wait ⏳"***. This may take up to 20 seconds
3. When you see the notification or the status displays ***" ❗ Please make an intercom call!"***, ring your apartment within 20 seconds
4. The system will automatically perform another configuration to learn the signal and the commands
    1. The door will unlock automatically
    2. *" Intercom Configuration"* will be marked as ***" ✅ Configured"*** *

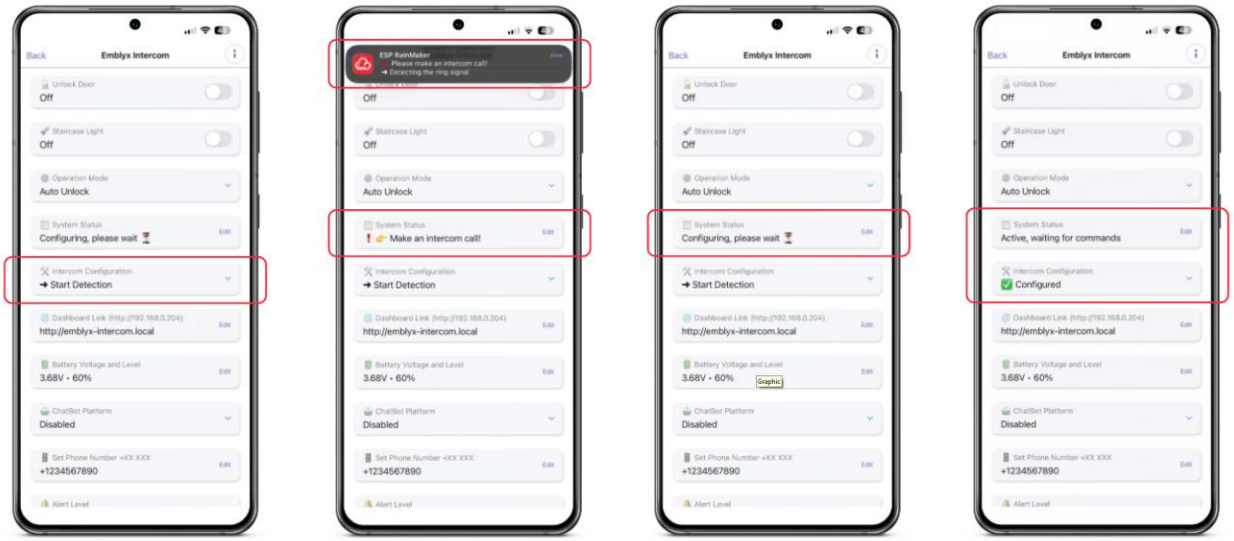

5.3 Troubleshooting

In general, if any step fails, you can start the configuration again

Common Issues & Solutions:


1. **Parameters appear incorrect or are not updating**
   Refresh the device page by pulling down to refresh or completely close and reopen the ESP RainMaker application. In some cases, the app session may become stale and continue displaying outdated parameter values until a refresh is performed.
2. No ***"Please make an intercom call!"*** notification is received
   Ensure that notifications are enabled on your phone and that the device is not in silent, Do Not Disturb, or Focus mode. In most cases, the notification was simply missed. If notifications are working correctly and no message is received, the Smart Intercom may not be detecting any activity on the connected wires. Verify that all intercom wires are correctly connected and securely installed, then try again.
3. **Notification is received and a call is made to the apartment, but the door does not unlock**
   If *"Intercom Configuration"* shows ***" ✅ Configured"*** but *"Door Unlock Command"* shows ***" ❌ Not Configured"***, the unlock signal was not automatically detected or the intercom type may not be supported. Signal analysis can occasionally fail, so it is recommended to repeat the detection process.
   If the issue persists, perform a manual unlock command detection:
   1. Two people are required.
   2. Select **"***Door Unlock Command***"** → **"Start Detection"**.
   3. Ring your apartment from the building entrance panel.
   4. The second person should answer the call and manually unlock the door on the existing intercom.
   5. The Smart Intercom will attempt to detect and learn the unlock command automatically.
4. **Still having problems? Please contact Emblyx Support. We can assist you remotely and complete the configuration together.**

6. Detailed Feature Descriptions

All features are available through the local **Web Dashboard**.
Only a subset of these features is available in the **ESP RainMaker** app.

Any feature can be added so don't hesitate to contact us 😊.

6.1 General Overview

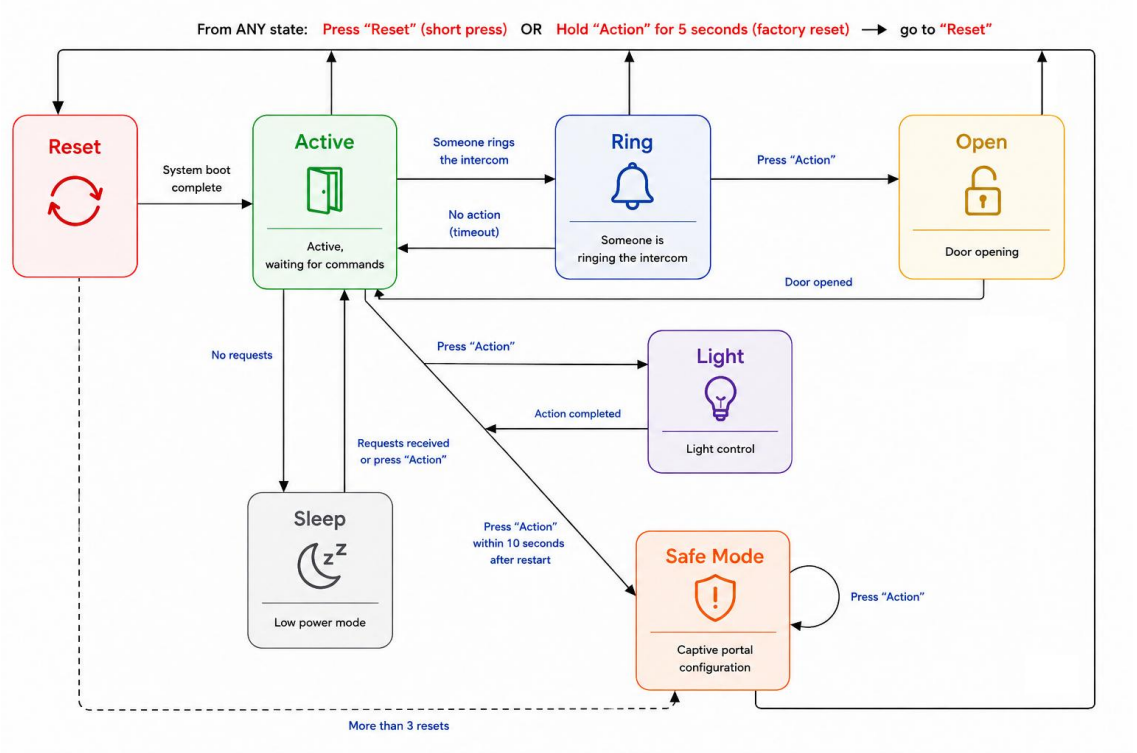

6.2 Web Dashboard

Overview:

- **Operation Mode**
  - **Manual Unlock** → allows the door to be unlocked manually from the application.
  - **Auto Unlock** → automatically unlocks the door according to the configured schedule, days, and time intervals.
  - **Disabled** → disables intercom monitoring and detection while keeping the device active in a low-power idle state to preserve battery life.
  - **Power Off for 20h** → places the device into deep sleep mode for 20 hours. During this period, the device is powered down and unavailable. This mode provides maximum battery life.
- **Unlock Door** → send the unlock door command.
- **Staircase Light** → on supported intercom systems, activates the staircase lighting circuit.
- **Select Days** → available only in Auto Unlock mode. Select the days on which automatic door unlocking is enabled. Outside the selected days, the door can only be unlocked manually.
- **Number of Active Hours** → select between 1 and 3 time intervals during which Auto Unlock will be active.
- **Active Hours** → define the start and end times for each Auto Unlock interval.

- **Turn OFF Outside Active Hours** → significantly improves battery life by disabling intercom monitoring outside the configured active hours (for example, during the night). While disabled, intercom calls will not be detected and manual door unlocking will not be available.
- **Intercom Configuration**
  - **No Action** → no action is performed
  - → **Start Detection** → starts the automatic intercom signal detection and configuration process.
  - → **Clear Data** → removes all detected intercom configuration data.
- **Door Unlock Command**
  - **No Action** → no action is performed
  - → **Start Detection** → starts the unlock command detection process.
  - → **Clear Data** → removes all detected intercom configuration data.
  - → **Load Default Data** → loads a predefined unlock and staircase light command profile for supported intercom systems.

Charts

(For advanced users only. Incorrect configuration may damage the device or cause improper operation of the intercom system)

- **Select Chart sequence control**
  - **No Action** → no action is performed
  - **RING / OPEN / LIGHT signal sequence**
    - **Signal sequence size (units)** → how many pulses are in the command
    - **Pulse index control** → select the desired pulse to configure
    - **Pulse voltage (0-50V)** → select the pulse voltage, maximum 50V
    - **Pulse pause (ms)** → select the pulse pause in milliseconds
    - **Pulse duration (ms)** → select the pulse duration in milliseconds
    - **PWM Duty** → selects the duty applicable to the OPEN / LIGHT command
    - **Signal Sync Delay (ms)** → for supported intercoms, enables signal synchronization
  - **Discard Changes** → ignores current changes
  - **Save Changes** → saves modifications
- **IDLE / RING / OPEN / LIGHT Signal Sequence (V / ms)** → general representation of the intercom signal
- **Detection Status**
  - **Intercom Type** → what type of intercom has been detected
  - **Intercom Lines** → the analysis performed on the input lines systems.

Calibration

(For advanced users only. Incorrect configuration may damage the device or cause improper operation of the intercom system)

- **Enable Developer Mode** → enables additional parameters to be configured
- **Reset Calibration values** → reset calibration to default values
- **Calibration: Find Line** → configures the input line detection
- **Calibration: Find Pulse** → configures the detection of pulses
- **Calibration: Signal Detection** → configures the detection of the input lines signal
- **Calibration: Intercom Driver** → multiple characteristics of different intercom types
- **Calibration: WiFi Manager** → configuration related to the WiFi reconnect and TX power
- **Calibration: Server Manager** → server URLs and connection timeout
- **Calibration: Diag Manager** → parameters for logging

Settings

- **Temperature** → CPU temperature (not internal housing)
- **Battery Level** → battery level
- **Chat Bot Platform**
  - **Disabled** → disables Chat Bot functionality
  - **WhatsApp** → enables WhatsApp messages and notifications
    - **Set Phone Number (+XX) XXX** → you need to set the phone number with country prefix

    - **Telegram** → enables Telegram messages and notifications
        - **Join the Telegram Bot** → you need to click on it to enable the bot configuration to your account
    - **SMS** → enables SMS messages and notifications (can be a bit slow)
        - **Set Phone Number (+XX) XXX** → you need to set the phone number with country prefix
- **Enable User Authentication** → enables/disables authentication to the Web Dashboard
    - **User Name** → user name for authentication
    - **Passwords** → password for authentication
- **Alert Level**
    - **Disabled** → no alerts will be sent to your phone or generated by the intercom, except for critical notifications.
    - **Emblyx Only** → only alerts (buzzer sounds) will be generated by the emblyx intercom
    - **Phone Only** → only alerts will be sent to your phone
    - **Emblyx & Phone** → both alerts will be sent to your phone or generated by the emblyx intercom
- **Reset Configuration**
    - **No Action** → no action is performed
    - **Main Settings** → reset to default main configuration (intercom type, operation mode, etc.)
    - **Calibration Data** → resets only calibration data
    - **WiFi Settings** → reset WiFi network to default, setup is required (scanning QR code, select WiFi, etc.)
    - **Apple HomeKit** → resets Apple HomeKit profile
    - **Factory Reset** → factory reset, complete setup is required after that
- **Restart** → restart the device
- **Safe Manager Portal** → enters safe mode, a new WiFi connection will be created, connect to it for basic actions

Backup

- **Backup Name** → enters backup name
- **Backup Data** → creates the backup
- **Backup Files** → each backup file (maximum 3 due to memory constraints)
- **Backup Index** → select which backup file to use
- **Load Backup** → load the selected backup file
- **Delete Backup** → delete the selected backup file (if index is 0, all backup files will be deleted)
- **Download Backup** → download the selected backup files to your computer
- **Upload Backup** → upload backup file from your computer

Usage

- **Enable Usage Statistics** → show important information and statistics (no battery impact, recommended enabled)
- **Reset Statistics** → clears all the data
- **Battery Estimation** → a rough estimation of how long the battery will last (no exact, since each battery has a different discharge rate)
- **Active Requests** → shows which modules keep the device awake, and including total and battery impact
- **Reset History** → history of reset reasons
- **Trace History** → history of the latest functions called

Log

- **Debug Level**
    - **Disabled** → logging is disabled. No diagnostic information is recorded
    - **Firmware Level** → displays logs generated by the ESP-IDF framework and underlying system components
    - **Error Level** → displays only error messages and critical failures
    - **Application Level** → default setting, provides balanced diagnostic information and troubleshooting data
    - **Application Verbose Level** → displays detailed application logs
    - **All Levels** → displays all available logs from both the application and firmware
- **Web Serial Portal** → allows you to visualize the log data only for authenticated sessions (password can be requested via Contact page)

Contact

- **Status** → shows the Emblyx server status
- **Links** → quick access to useful resources and support pages
- **Apple HomeKit QR** → QR code for adding the device to Apple Home

Statistics → device information, including WiFi related information, version number, uptime, etc.

Light → light / dark mode

6.3 ESP RainMaker

Most features are already covered in the Web Dashboard section above. This chapter focuses only on features that are unique to the mobile application.

- **System Status**
  - **Starting up, please wait** → device is starting up and initializing
  - **Active, always online** → device is awake, connected, and ready to process commands
  - **Power Saving, commands are delayed** → device is currently in power-saving mode and may not respond immediately. Press the "Action" button once or send any command from the ESP RainMaker app to wake it up. Remote wake-up may take up to 2–3 minutes
  - **Configuring, please wait** → configuration is in progress. This process may take up to 20 seconds.
  - **Updating firmware, please wait** → firmware update is currently in progress
  - **Active, optimizing battery life** → device is fully functional while using a battery-optimized connection. Press any button or send any command to wake it up (up to 10 seconds)
  - **Make an intercom call!** → an intercom call is required for signal detection and configuration
  - **Unlock the door!** → device is unlocking the door
  - **Restarting, please wait** → device restart is in progress
  - **Sending the command** → command is being transmitted by the device
  - **Entering Safe Mode** → device has entered Safe Mode due to a detected issue. Limited functionality may be available until normal operation is restored
- **Dashboard Link** → shows the IP address for the Web Dashboard and also the local address
- **Restore Backup** → restores the selected backup. Useful when configuration changes need to be reverted
- **Ring Status (used for automations)** → this is only read-only status, used when creating Scenes or Automations

You can also tap the "i" button in the top-right corner to access additional options, including device control and access sharing.

6.4 Safe Manager (Safe Mode)

If the device becomes unresponsive and cannot be recovered using the standard Factory Reset procedure, you can enter **Safe Mode** and recover the device through the **Safe Manager Wi-Fi Captive Portal**.


Safe Mode can be activated in either of the following ways:


- The device experiences more than three consecutive unexpected restarts (manual resets using the “Reset” button do not count).
- Press once the “Action” button once after powering on or restarting the device.


Once Safe Mode is active, the device will create a Wi-Fi access point named **SM_EmblyxIntercom**.

Connect to this network using your smartphone or computer. The Safe Manager portal should open automatically. If it does not, open your web browser and navigate to the portal manually.

From the Safe Manager interface, you can upload and install a new firmware version. The latest firmware releases are available at: https://github.com/emblyx/products/tree/main/intercom

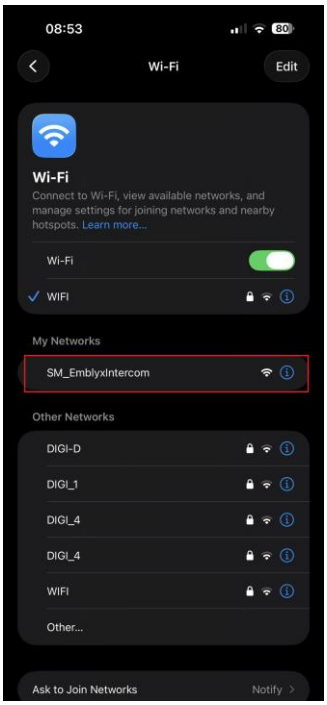


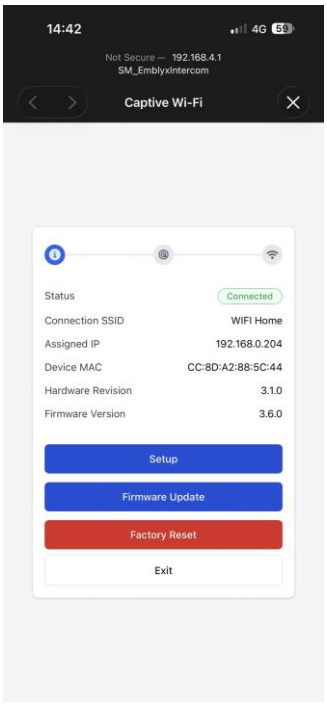


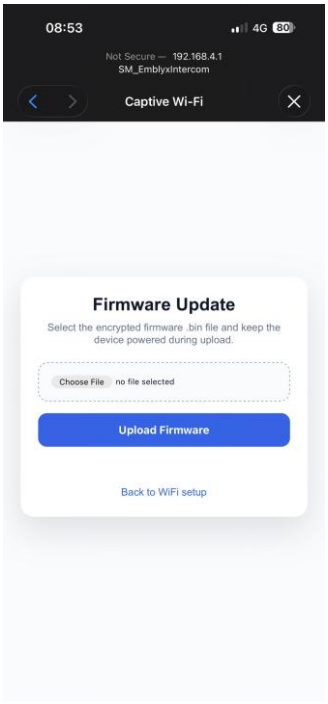


6.5 Chat Bot

It supports WhatsApp, Telegram and SMS integration, which can be controlled individually as shown in the example below:

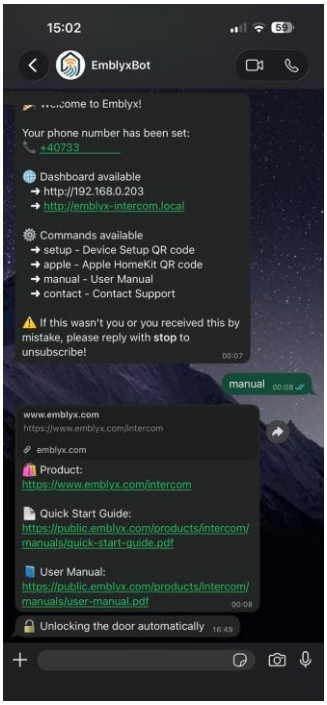

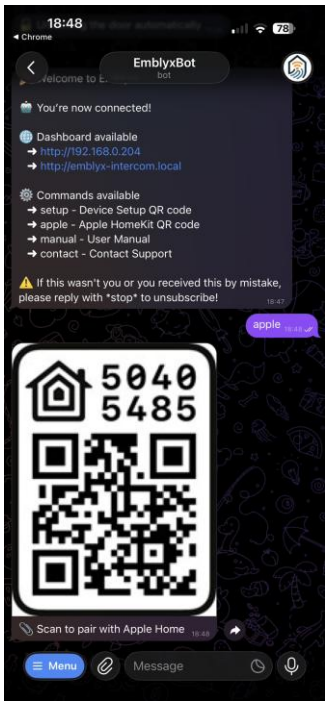

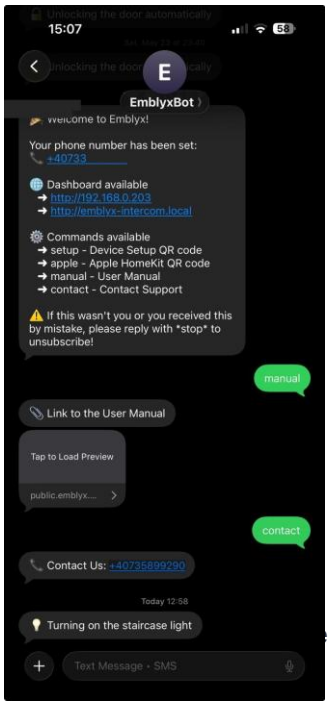

6.6 Smart Home Platform Integrations

- **Google Assistant / Amazon Alexa**
  Integration available in the ESP RainMaker app under **Settings → Voice Services**.

- **Apple HomeKit**
  Scan the HomeKit setup QR code from the **Web Dashboard → Contact** page, or retrieve it using the **Chat Bot commands**.



6.7 WebAPI Commands

The device supports several HTTP commands for automation. Additional commands can be requested through our Contact page.

Commands are available only while the device is in the **Active** state (always online), as they rely on synchronous HTTP requests. During the **Sleep** state (optimizing battery), communication is handled via MQTT through the mobile app.

Available commands (more details in Chapter 6.2 Web Dashboard):

- **unlockdoor** → send the unlock the door command
- **staircaselight** → on supported intercom systems, activates the staircase lighting circuit
- **operationmode** → set the door unlock operation mode, it requires below values:
  - **manual** → door will be unlocked manually
  - **auto** → door will be unlocked automatically
  - **disabled** → intercom functionality is disabled
  - **poweroff** → places the device into deep sleep mode for 20 hours
- **alertlevel** → set the notification level, it requires below values:
  - **disabled** → all notifications will be disabled
  - **emblyxonly** → only emblyx intercom device notification will be allowed
  - **phoneonly** → only phone notification will be allowed
  - **emblyxphone** → all notifications will be enabled
- **battery** → get the battery voltage and level
- **ipaddress** → get the ip address
- **restart** → restart the device

You can request only 1 command request per 1 second, multiple commands are ignored and “Too many requests” will be returned.

If you enable **Web Dashboard → Settings → Enable User Authentication** an additional parameter needs to be added “-u user:password” (case sensitive), while default user is “Emblyx” and password “12345678”, otherwise it can be removed.

You can as well use the DNS “*emblyx-intercom.local*” instead of the IP address, but in some cases, you might expect slow performance and could require extra parameters for increased timeout and retry, we recommend to use the IP address (can be found in **ESP Rainmaker → Dashboard Link**).

Typical command:

- curl "***[ip-address]***/api/***[command]***"
- curl "***[ip-address]***/api/***[command]***?value=***[value]***"
- curl -G -u ***user***:***password*** "***[ip-address]***/api/***[command]***" -d "value=***[value]***"

Examples:

- curl --max-time 10 "192.168.0.204/api/unlockdoor"
- curl --max-time 10 "192.168.0.204/api/operationmode?value=auto"
- curl -G --max-time 10 "http://192.168.0.204/api/operationmode" -d "value=auto"
- curl --max-time 10 "192.168.0.204/api/battery"
- curl --max-time 10 -u Emblyx:12345678 "http://192.168.0.204/api/alertlevel?value=disabled"
- curl --max-time 10 "emblyx-intercom.local/api/ipaddress"
- curl --max-time 10 "emblyx-intercom.local/api/staircaselight"
- curl --max-time 10 -u Emblyx:12345678 "emblyx-intercom.local/api/restart"
- curl --max-time 15 --retry 3 --retry-delay 2 --retry-all-errors "emblyx-intercom.local/api/battery"

Error codes:

- **200 Request sent** → no error, request sent successfully
- **400 Missing or invalid value** → additional parameter value is missing or has incorrect value (case sensitive)
- **401 Access unauthorized** → user or password is missing or incorrect
- **404 Not found** → incorrect command or address
- **409 Command not configured** → Unlock Door or Staircase Light is not configured / supported
- **429 Too many requests** → request was sent too quickly, max 1 per second

7. Regulatory, Warranty & Technical Support

7.1 Regulatory Compliance

The Emblyx Smart Intercom (Model: EBLX-SI) complies with the essential requirements and other relevant provisions of the following European Union Directives 2014/53/EU (Radio Equipment Directive - RED), 2011/65/EU and (EU) 2015/863 (RoHS).

The product bears the CE marking and has been assessed for compliance with applicable requirements related to:

• Electrical safety
• Electromagnetic compatibility (EMC)
• Efficient use of the radio spectrum
• Cybersecurity requirements applicable under RED
• Restriction of hazardous substances (RoHS)

The full EU Declaration of Conformity and supporting compliance documentation are available from the manufacturer.

7.2 Waste Electrical and Electronic Equipment (WEEE)

This product must not be disposed of with household waste.

The crossed-out wheeled bin symbol indicates that electrical and electronic equipment must be collected separately and recycled according to local regulations.

Users are responsible for returning end-of-life products to appropriate collection points for recycling and recovery.

Proper disposal helps protect the environment and human health.

7.3 Legal Information

Terms of Service, Warranty & Privacy Policy, and other legal information are available on the Emblyx website.

Please visit www.emblyx.com for the latest versions.

7.4 Contact Information

For technical assistance, warranty claims, replacement requests, or general product inquiries, please contact us:

- Contact Page: www.emblyx.com/contact
- Support Email: support@emblyx.com
- Phone: +40 735 899 290 (Mon - Fri, 09:00 - 17:00 EEST)