

DAHLE VolumePro

DE Bedienungsanleitung

UK/US Operating instructions

FR Instructions de service

ES | Manual de instrucciones

IT Istruzioni per l'uso

PT Manual de instruções

NL Gebruiksaanwijzing

DK Betjeningsvejledning

FI Käyttöohje

NO Bruksanvisning

SE Bruksanvisning

SI Navodila za uporabo

HR Upute za uporabu

HU Kezelési útmutató

RU Руководство по эксплуатации

EE Kasutusjuhend

LT Naudojimo instrukcija

LV Lietošanas instrukcija

CZ Návod k obsluze

SK Návod na obsluhu

PL Instrukcja obsługi

RO Instrucțiuni de utilizare

ВG Упътване за употреба

TR Kullanım Kılavuzu

GR Οδηγίες χειρισμού

تعليمات الاستعمال <u>AE</u>

<u>JP</u> 取扱説明書


CN操作指南












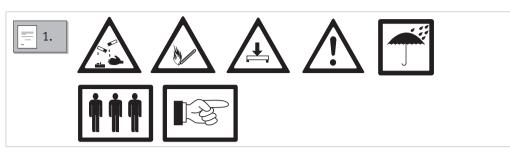

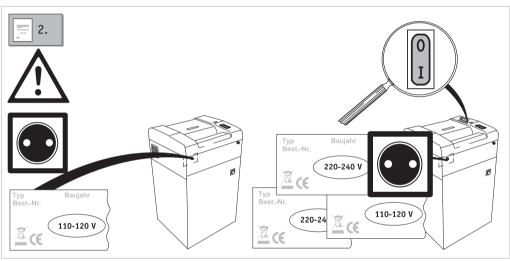

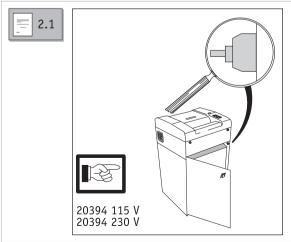


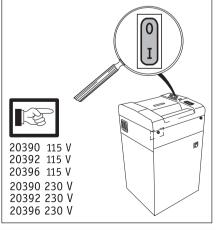





	20390	20392	20394	20396		
a		0 mm 0 mm 0 mm				
Kg C b	Ω = 150,0 kg	Ω = 153,0 kg	Ω = 114,0 kg	∩ = 152,0 kg		
	20390 230 V 20390 115 V d = 6 mm DIN 66399 P-2 0-2 T-2 E-2 220-240 V 1900 W/8,3 A 50-60 Hz 110-115 V	20392 230 V 20392 115 V d = 2,0 mm e = 15 mm DIN 66399 P-5 F-2 O-4 T-5 E-4	20394 230 V 20394 115 V d = 0,8 mm e = 4,7 mm NSA/CSS specification 02-01 DIN 66399 P-7 F-3 T-6 220-240 V 1650 W/7,3 A 50-60 Hz 110-115 V	20396 230 V 20396 115 V 20396 115 V d = 3,9 mm		
	1600 W / 14 A 50-60 Hz	< 70 dl 20390 20392 20394 20396	230 V 5 230 V 2 230 V	52		
DIN A4 80 g/m ²	190 l	20396 20390 20392 20394 20396	115 V 5	52 [] 82 [] 8 [] 82 []		




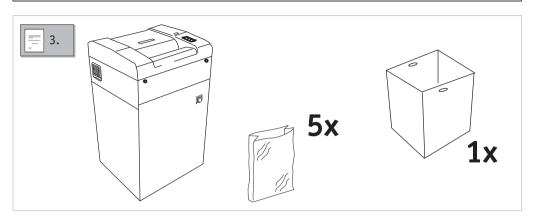


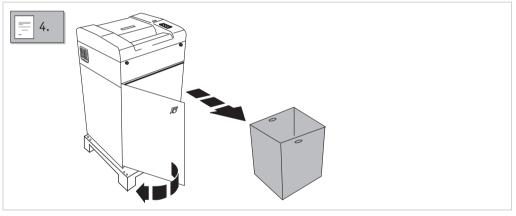


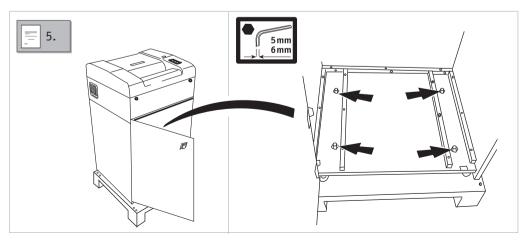




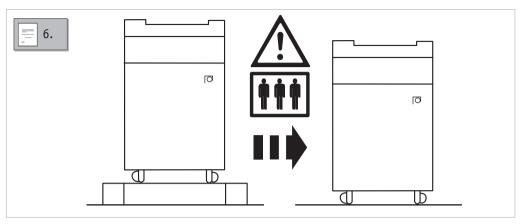


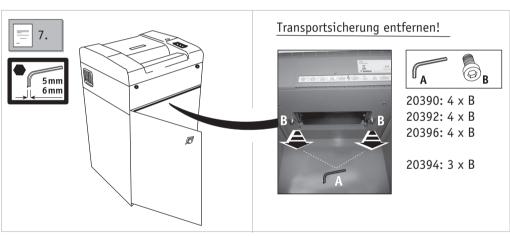


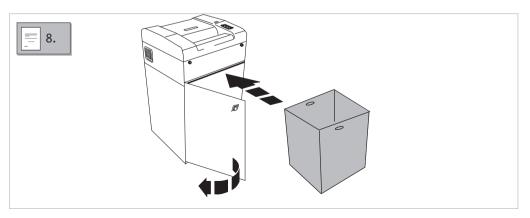




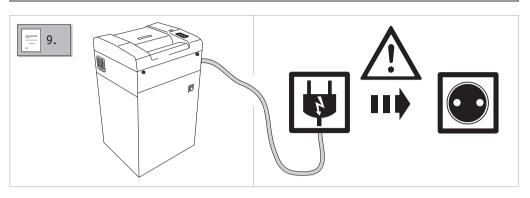

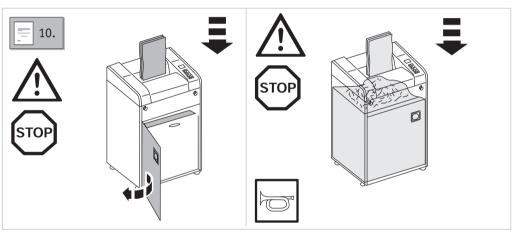

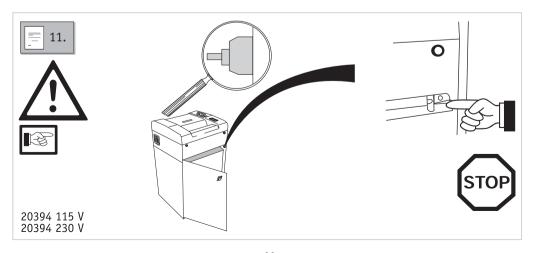



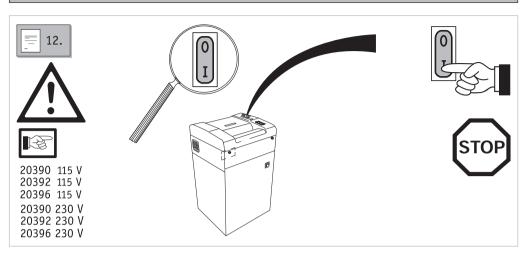























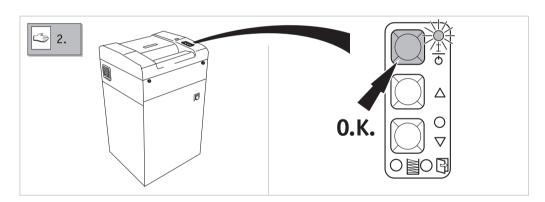


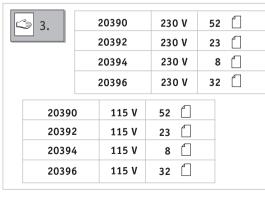


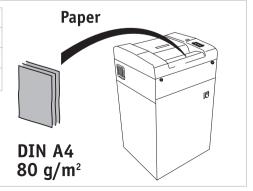




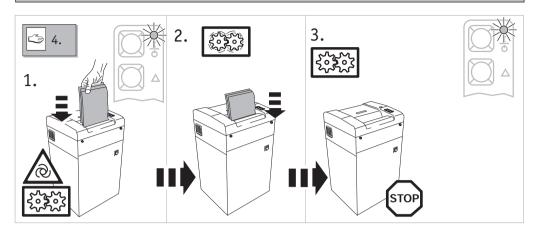


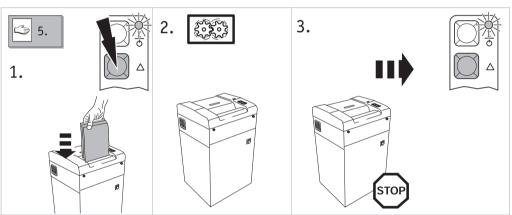


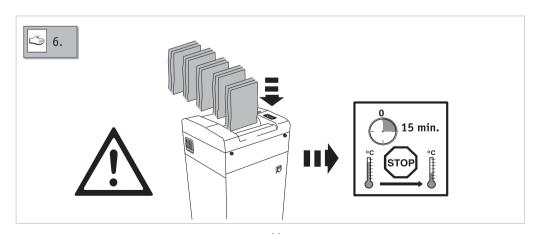




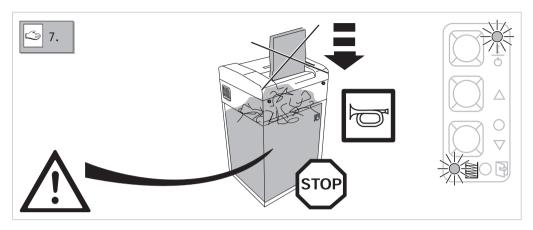


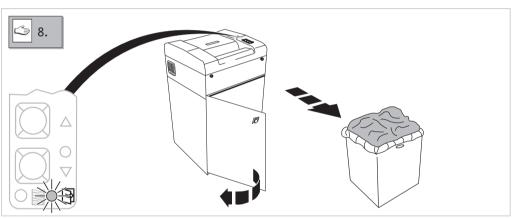


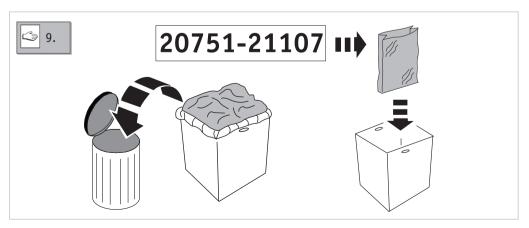




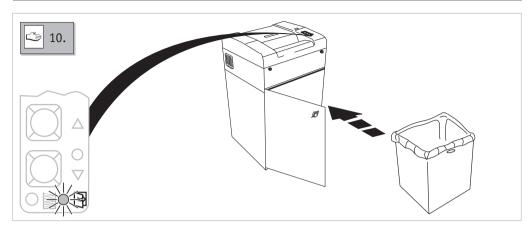


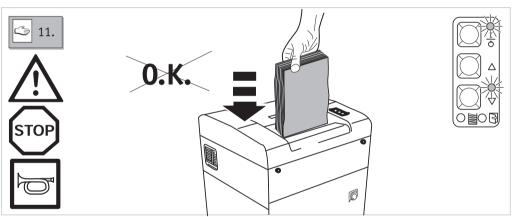


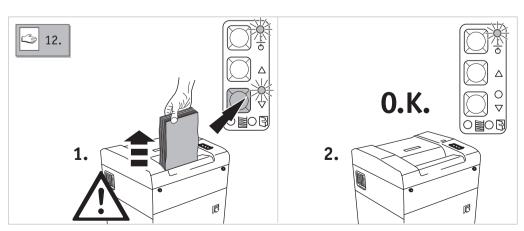




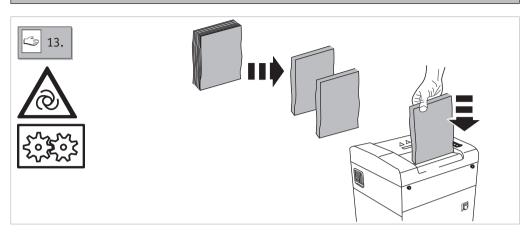


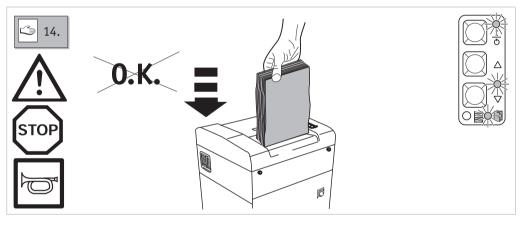


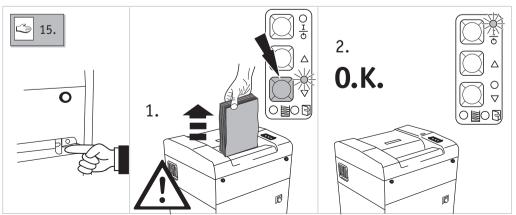




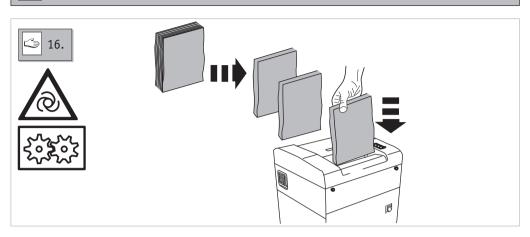


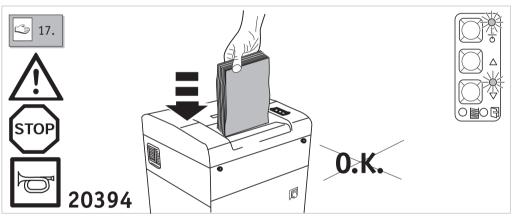


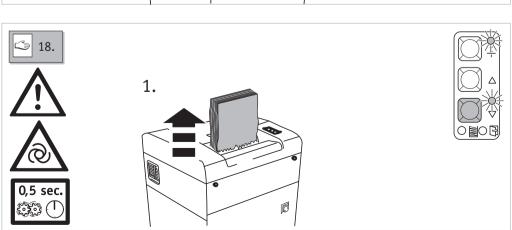




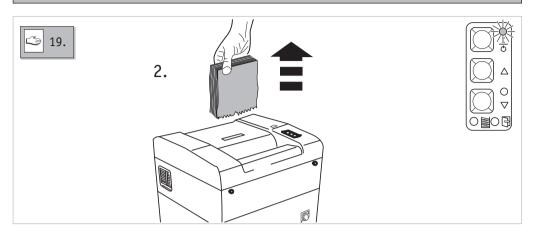


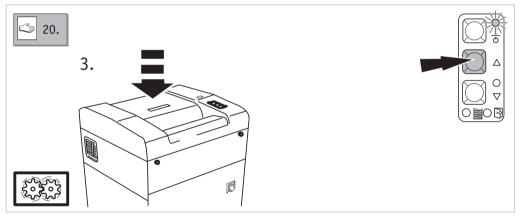


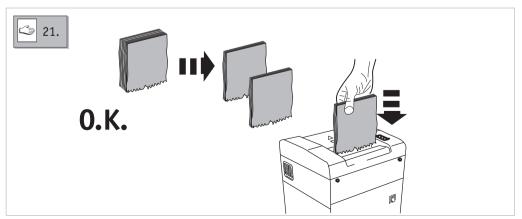




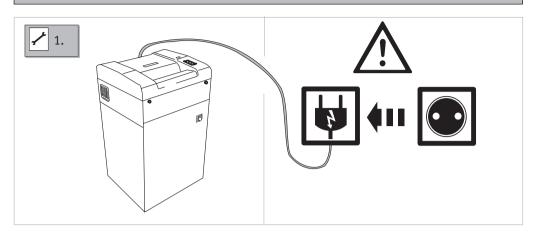


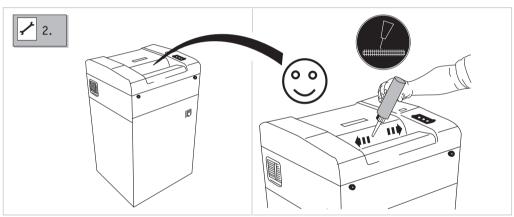


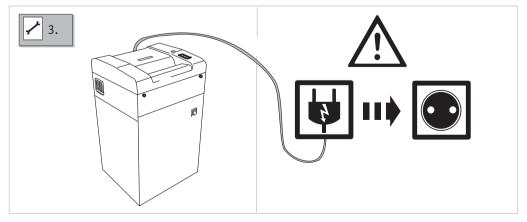




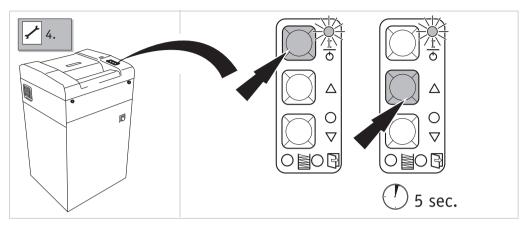


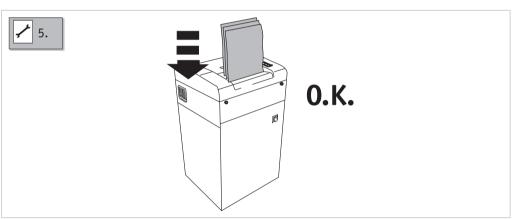

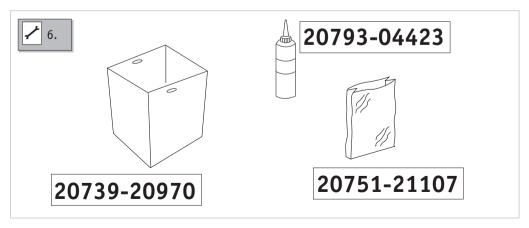



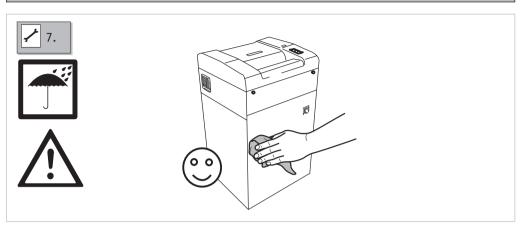

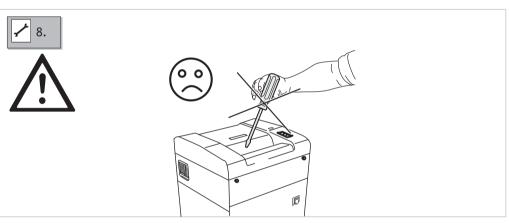

Headquarters:

Novus Dahle GmbH & Co. KG Breslauer Straße 34-38 49808 Lingen | Germany

Service contact:

Novus Dahle GmbH & Co. KG Nikolaus-A.-Otto-Straße 11 96472 Rödental | Germany

Tel.: +49 9563 75299-0 Fax: +49 9563 75299-333 E-Mail: info@dahle.de Web: www.dahle.de

