Media Wall & Dining Wall: Build Guide

Version 49 · for Emma and Dave · sizes in cm



Your room, piece by piece

Any order: each piece has what to check, buy, cut and build. Tap a name to go to it (the PDF's bookmarks list them too).

No.	Piece	Time	£
MEDIA WALL			
1	The media wall base	2–3 days	517–1,012
2	The oak worktop	½ day	250–450
3	The oak uprights and shelves	2–3 days	420–765
SIDE WALL AND PC			

4	The side-wall run and the PC shelf	1 day	60–130
CHIMNEY BREAST AND DOOR			
5	The glass case	½ day	90–170
6	The shelf over the door and its boxes	2 h	55–90
DINING WALL AND BAR			
7	The dining cabinet and table	3–4 days	906–1,535
8	The bar	1 day	120–200
THE SOFA			
9	The record table	½ day	170–210
10	The C-table	½ day	8–15
11	The wall cabinets	2 h	70–100
WINDOW CORNER			
12	The alcove shelves	2 h	70–110
THE WHOLE ROOM			
A	The network	2 h	51–70
B	Cables and the socket	2–3 days	165–345
C	Paint	2–3 days	220–540
D	Lighting	1 day	288–795
E	Connect and finish	1 day	433–725
	Also on the list (the basket, the rug, the ottoman…)		489–998
	Everything	about 17–22 days	**4,382–8,260**

Start here · Good to know · For the timber merchant

Start here

Five rules

- **Check every wall before you drill** with the detector; never straight above, below or beside a socket or switch.
- **Measure twice, cut once.** Walls are rarely square: cut to the smallest measurement.
- **Two people for anything over 15 kg:** the uprights, the worktop, the table, the TV.
- **Electrics:** isolate, lock off and prove dead every time. Anything new is an electrician's (the stop list in Cables and the socket).
- **Dry-fit everything** before glue or screws.

Measure and mark

1. The alcove's width at the floor, 76, 134, 155 and 196 cm and at the ceiling: cut everything to the smallest.
2. The floor's level across the alcove, and the chimney breast's flatness with a long level.
3. The door's swing, and the sofa: overall width, depth with the return, back height.
4. Count the LPs and games (PS2, Xbox 360, Xbox One), and measure ten cases of each.
5. Make a cardboard template of the alcove at worktop height: walls are rarely square.

Set up a datum

6. Find the floor's highest point across the alcove (you measured its level in *Start here*). Every height in this plan is measured from there.
7. Stand the laser in the middle of the room, level it, and mark a line at exactly 100 cm above that high point on the alcove's back wall, both side walls and the chimney breast.
8. Measure every other height up or down from the 100 line, not up from the floor: the floor is the thing that isn't level.

The alcove's heights

9. Put a strip of masking tape down each side wall and the back wall of the alcove and mark these heights on it:
10. 73: the tops of the frames and bay 3 (the worktop's underside).
11. 76: the worktop's top.
12. 130 and 134: the Series X shelf, underside and top.
13. 153 and 155.4: the record ledge and the wrap ledge, underside and top.
14. 192 and 196: the high shelf, underside and top.
15. Carry the 153 and 155.4 lines along the side wall to 250 cm out from the alcove's back wall, for the wrap ledge and the PC shelf.

Across the back wall

16. Mark the uprights' positions from the side wall: the left one 50.5–55, the right one 181.5–186. Turn the laser to its vertical line and draw both lines from the worktop line to the ceiling.
17. Mark the base from the side wall along the floor: filler 0–3, then bay 3 3–63, bay 2 63–123, bay 1 123–183, filler to 186.

On the chimney breast

18. Find the breast's centre: 58.75 cm from its alcove-side corner. Draw it plumb from the floor to 170.
19. Mark the “now playing” ledge's top at 104, level, and its two concealed brackets 6 cm in from each side of the breast.
20. Mark the glass display case's bottom edge at 137 and its top at 222, 90 wide, centred on the line; its oak cleat's top edge at 212. (The dining table isn't here: it's in its cabinet by the stairs, *The dining cabinet and table*.)

Check for cables

21. Run the detector along every line where you'll drill: the cleats, the spacer blocks, the upright brackets, the ledge's brackets, the PC shelf and, on the stairs wall, the cabinet's two wall brackets.
22. Mark anything it finds in red, and compare with your own photos from *Cables and the socket*.

Move a fixing 5 cm rather than drill near a cable.

Check before moving on: Every figure within 1 cm of the plan. If not, send the numbers and the drawings are redone first.

Check before moving on: Every line level end to end, and the uprights' lines plumb.

Measuring sheet: 11 things to check before you buy

One session with a tape: measure each, write it in, send us the page.

WHAT	The TV's remote receiver, bottom centre of the screen's frame The TV between the uprights
WE DREW	soundbar top 82, in front of the stand's foot
WHY IT MATTERS	0.6 over the frame's edge: sit the bar on the worktop 2 cm proud of the stand's foot, not against it, so the remote's beam from the sofa clears it; if a button stutters, pair LG's Magic Remote (it talks to the TV by radio)
YOURS (CM)	
WHAT	The TV's HDMI plugs, with the screen 2.15 from the corner post The TV between the uprights
WE DREW	behind the screen
WHY IT MATTERS	plugs stay behind the panel; if a stiff lead pushes out, use 90° HDMI adapters
YOURS (CM)	

WHAT	Xbox 360, original, + RetroTINK-6X CE Bay 1, Xbox (BESTÅ frame on the 9 cm plinth)
WE DREW	16 tall row
WHY IT MATTERS	7.7 above; 25.9 beside it for the RetroTINK: measure it when it arrives
YOURS (CM)	
WHAT	Vibration: the consoles and the deck share the base with the sub Bay 2, PlayStation and the sub (BESTÅ frame on the plinth)
WE DREW	the sub on its riser, clear of the divider and the frame; the deck on isolation feet
WHY IT MATTERS	the 360 is a bay away, the PS2 and PS1 a divider away: play a disc game and a record at film volume; if anything skips, turn the sub down for that source, or put it back under the dining wall
YOURS (CM)	
WHAT	The side-wall socket beside the slim drawers Bay 3: the LP crates and the slim game column
WE DREW	the middle slim drawer pulled out passes 5.6 from the wall
WHY IT MATTERS	the plugs must stand less than that off the wall: flat (angled) plugs, leads down; measure yours
YOURS (CM)	
WHAT	The two doors and their hinges The compact dining cabinet (the plan)
WE DREW	a full-height stainless piano hinge each, screwed every 10 cm into a solid oak edge
WHY IT MATTERS	the hinge's load isn't published: hang the table door, open it flat, and check its far end doesn't drop before you load the cabinet
YOURS (CM)	


WHAT	Stair side: the stair's foot and the door The compact dining cabinet (the plan)
WE DREW	the stair box's face at -41; the door's edge reaches -44
WHY IT MATTERS	seated, the backs reach 8.7 into the door's swing: keep the door shut while you eat. Measure a chair's depth: 52.3 or less and the door clears
YOURS (CM)	
WHAT	Its stairs end Your black shelf on the stairs wall (a fixed 10 cm gap)
WE DREW	an earlier look at your photo put it about 41 past the stair box
WHY IT MATTERS	35 past it: if you measure 41 there, the shelf is about 194 long; the gap stays 10
YOURS (CM)	
WHAT	The shelf over the door Your picks (in the plan)
WE DREW	the door's 198 and a 7 architrave
WHY IT MATTERS	11.3 over two 15-high boxes; check your architrave
YOURS (CM)	
WHAT	The step drawers Your picks (in the plan)
WE DREW	a riser 19.5 under a 2.2 tread, the stairs 59 wide
WHY IT MATTERS	each tread needs a bearer under it once its riser comes out: a joiner's job, or build them into the new stairs
YOURS (CM)	
WHAT	Its height The storage ottoman (replaces your blue cord one)
WE DREW	the sofa's seat about 45
WHY IT MATTERS	a footrest level with the seat; ISTOOLS don't publish it: check
YOURS (CM)	

Media wall

1 · The media wall base

The plinth, two BESTÅ frames and bay 3's carcass, with the drawers, the LP crates and the oak face frame.

Media wall · 2–3 days · You · about £517–1,012

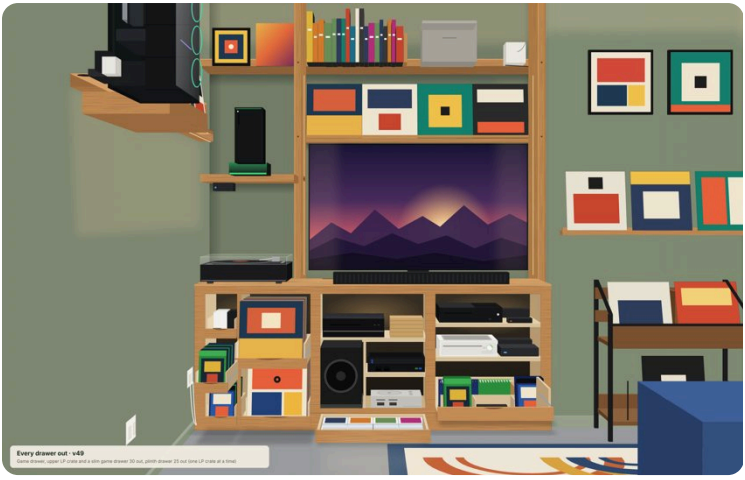

Check

First: The Cat6, the socket and the PC's conduits (Cables) and the paint first: the base hides that wall.

Measure	We drew	Why
Xbox 360, original, + RetroTINK-6X CE	16 tall row	7.7 above; 25.9 beside it for the RetroTINK: measure it when it arrives

Vibration: the consoles and the deck share the base with the sub	the sub on its riser, clear of the divider and the frame; the deck on isolation feet	the 360 is a bay away, the PS2 and PS1 a divider away: play a disc game and a record at film volume; if anything skips, turn the sub down for that source, or put it back under the dining wall
The side-wall socket beside the slim drawers	the middle slim drawer pulled out passes 5.6 from the wall	the plugs must stand less than that off the wall: flat (angled) plugs, leads down; measure yours

Buy

QTY	2
WHAT	**IKEA BESTÅ frame, 60 × 40 × 64** Two IKEA BESTÅ 60×40×64 frames, white stained oak effect, for bays 1–2
WHERE	IKEA
£	70–200

QTY	1
WHAT	**Plinth frame, 18 mm ply** Plinth for bays 1–2: 18 mm ply ladder frame 120 × 38 × 9 cm with a clear bay under bay 2, plus shims
WHERE	Timber merchant
£	15–30

QTY	1
WHAT	**Plinth drawer: oak front, ply box, runners** Hidden plinth drawer: oak front 54 × 6 with a finger-pull groove underneath, 12 mm ply box 52 × 34 × 5, 300 mm full-extension runners
WHERE	Timber merchant
£	30–50

QTY	1
WHAT	**Bay 3 carcass, 18 mm birch ply** Bay 3 carcass: 18 mm birch ply, 60 × 40 × 73 cm from the floor, connector bolts, and a 12 mm birch-ply divider 38 × 69.4 that splits it into the slim game column and the LP column
WHERE	Timber merchant
£	50–90

QTY	2
WHAT	**Face-out LP crate: ply, oak lip, runners** Two face-out LP crates, 34.9 × 40 (a 33 cm trough): 12 and 9 mm birch ply cut to size, 15 mm oak lips, raked rests, felt, two pairs of 400 mm runners rated 68–70 kg
WHERE	Timber merchant
£	120–200

QTY	3
WHAT	**Slim game drawer: ply, oak lip, runners** Three slim drawers for the game column, 15.3 × 40: 6 mm birch ply sides and backs, 12 mm bases, oak lips, felt, three pairs of 400 mm runners (light duty is enough); a 2 m USB-C lead and a grommet for the pads drawer
WHERE	Timber merchant
£	70–130

QTY	4
WHAT	**IKEA BESTÅ shelf, 56 × 36** BESTÅ shelves, 56 × 36 cm (20 kg max each), two each for bays 1 and 2
WHERE	DIY shop or online
£	12–32

QTY	1
WHAT	**Sub riser and ply divider** The sub in bay 2: an isolation riser for it (dense foam or sorbothane, about 22 × 28 × 3), 12 mm birch ply for the divider (35.3 × 38) and the part shelf (32.2 × 36), four shelf pins, felt pads
WHERE	Timber merchant
£	25–45

QTY	1 set
WHAT	**Anti-tip brackets and spacers** Anti-tip brackets and 4 cm spacer blocks: both frames and bay 3
WHERE	DIY shop or online
£	15–25

QTY	1
WHAT	**Game drawer: ply, soft-close runners** Game drawer kit: 12 mm birch ply cut to size, 350 mm full-extension soft-close runners (35–49 kg), oak lip, follower block, felt
WHERE	Timber merchant
£	50–90

QTY	1
WHAT	**Oak face frame, 186 cm** Oak face frame, 20 mm, 186 cm for the base
WHERE	Timber merchant
£	60–120


QTY	
WHAT	**Total**
WHERE	
£	**517–1,012**

Cut


Solid oak, hardwax oil: each piece to scale




Birch ply, 18 mm: board 1 of 3, 122 × 61

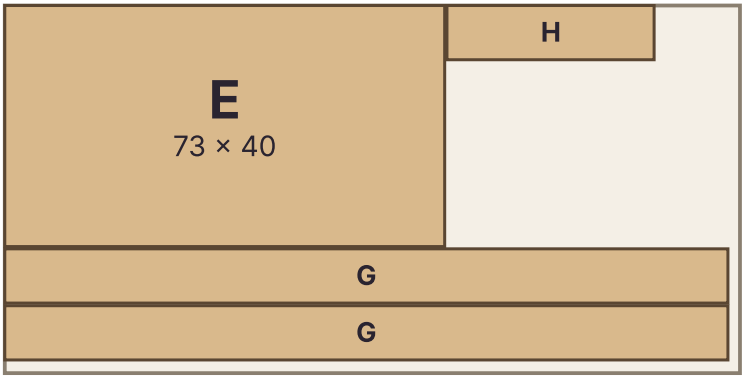

Birch ply, 18 mm: board 2 of 3, 122 × 61

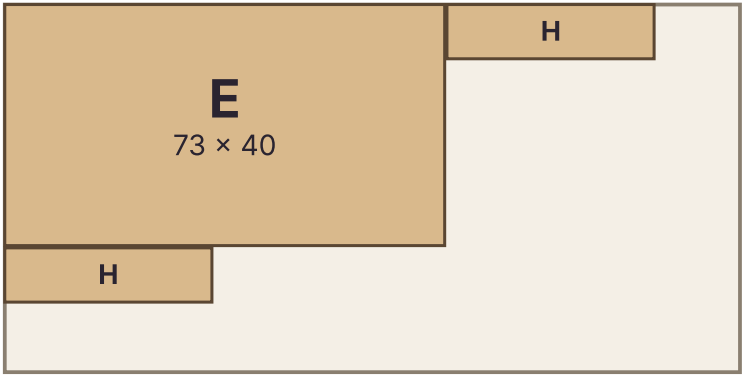


Birch ply, 18 mm: board 3 of 3, 122 × 61

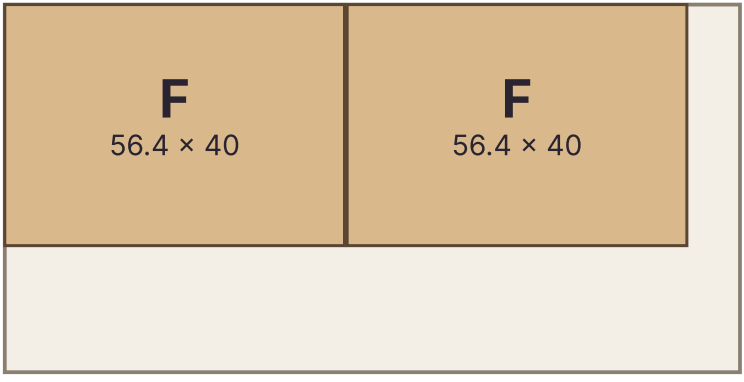


Birch ply, 12 mm: board 1 of 3, 122 × 61




Birch ply, 12 mm: board 2 of 3, 122 × 61

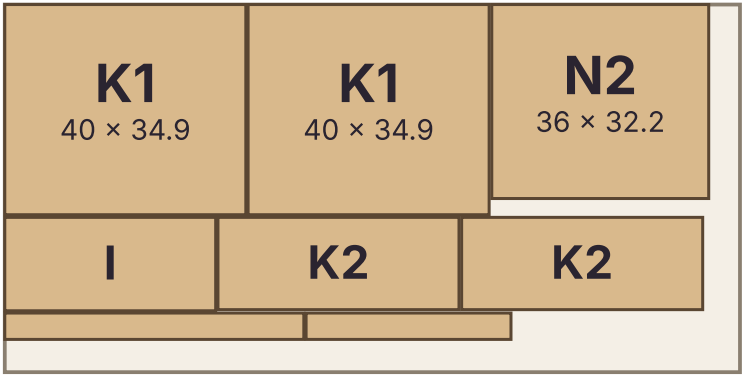


Birch ply, 12 mm: board 3 of 3, 122 × 61

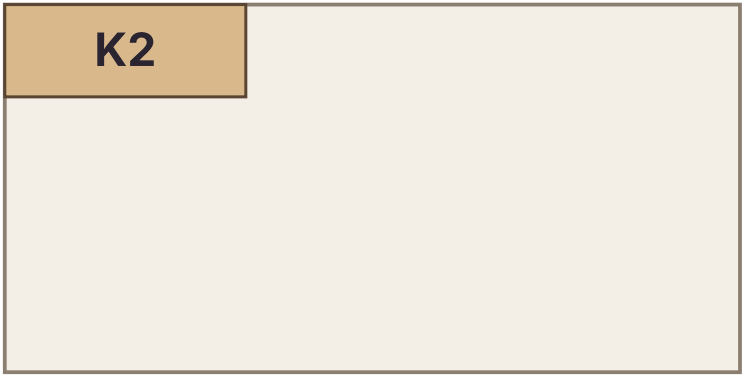

Birch ply, 9 mm: board 1 of 1, 122 × 61

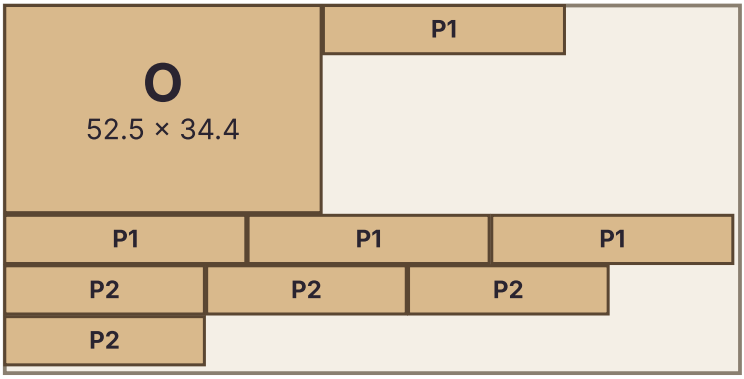

Birch ply, 6 mm: board 1 of 1, 122 × 122

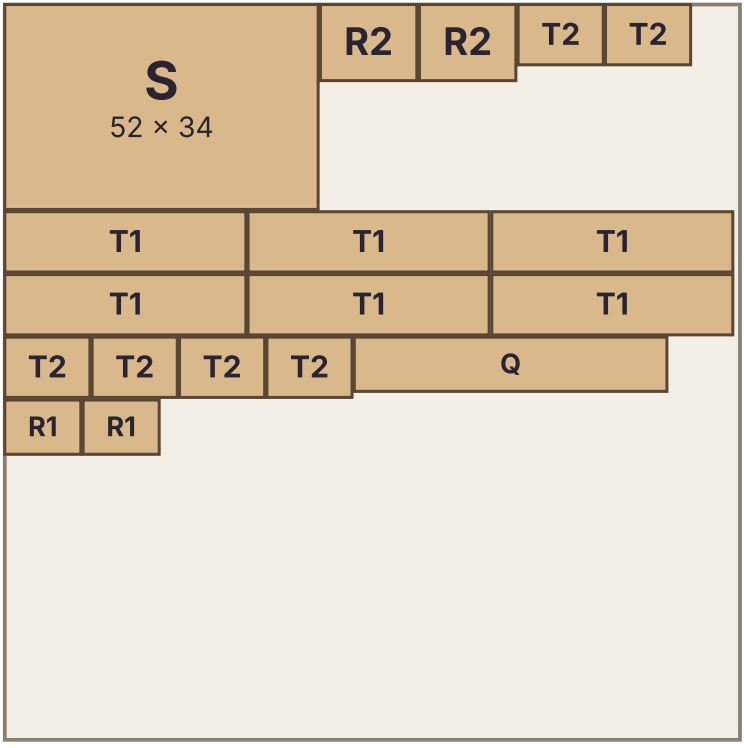

PART	**A**
WHAT	Face frame
SIZE (CM)	186 × 73 overall, 2 thick, stiles about 5 wide
QTY	1 set
FROM	Solid oak
NOTES	End stiles scribed to the walls

PART	**B**
WHAT	Drawer fronts
SIZE (CM)	game drawer 56.8 × 6.5 × 2 · plinth drawer 54 × 6 × 2
QTY	1 · 1
FROM	Solid oak
NOTES	Finger pull cut underneath

PART	**C**
WHAT	LP crate lips · slim drawer lips
SIZE (CM)	36.3 × 5 × 1.5 · 16.5 × 5 × 1.5
QTY	2 · 3
FROM	Solid oak
NOTES	Cut to the face frame's openings, less 3 mm

PART	**D**
WHAT	Follower blocks · Xbox One lift block
SIZE (CM)	19 × 12 × 2 · 15 × 12 × 2
QTY	2 · 1
FROM	Solid oak
NOTES	Offcuts, felted underneath

PART	**E**
WHAT	Bay 3 sides
SIZE (CM)	73 × 40
QTY	2
FROM	Birch ply
NOTES	The record carcass, standing on the floor

PART	**F**
WHAT	Bay 3 top and bottom
SIZE (CM)	56.4 × 40
QTY	2
FROM	Birch ply
NOTES	Between the sides; back left open to the channel

PART	**G**
WHAT	Plinth rails
SIZE (CM)	120 × 9
QTY	2
FROM	Birch ply
NOTES	Front and back of the ladder frame under bays 1–2

PART	**H**
WHAT	Plinth cross-pieces
SIZE (CM)	34.4 × 9
QTY	3
FROM	Birch ply
NOTES	At both ends and under the bay 1–bay 2 joint, so the bay under bay 2 stays clear for the drawer

PART	**I**
WHAT	Game drawer sides
SIZE (CM)	35 × 15.5
QTY	2
FROM	Birch ply
NOTES	

PART	**J**
WHAT	Game drawer back · front panel
SIZE (CM)	51.9 × 15.5 · 51.9 × 6
QTY	1 · 1
FROM	Birch ply
NOTES	

PART	**K**
WHAT	LP crate bases · slim drawer bases
SIZE (CM)	34.9 × 40 · 15.3 × 40
QTY	2 · 3
FROM	Birch ply
NOTES	The sides and ends stand on them

PART	**L**
WHAT	Bay 3 divider
SIZE (CM)	69.4 × 38
QTY	1
FROM	Birch ply
NOTES	17.8 in from the left side, the full height inside

PART	**M**
WHAT	Plinth drawer sides · ends
SIZE (CM)	34 × 4.4 · 49.6 × 4.4
QTY	2 · 2
FROM	Birch ply
NOTES	A 52 × 34 × 5 box

PART	**N**
WHAT	Bay 2 divider · part shelf
SIZE (CM)	35.3 × 38 · 32.2 × 36
QTY	1 · 1
FROM	Birch ply
NOTES	The sub's column on the left; the PS2 over the PS1 on the right

PART	**O**
WHAT	Game drawer base
SIZE (CM)	52.5 × 34.4
QTY	1
FROM	Birch ply
NOTES	In a 6 mm groove

PART	**P**
WHAT	LP crate sides · ends
SIZE (CM)	40 × 8 · 33.1 × 8
QTY	4 · 4
FROM	Birch ply
NOTES	Two of each per crate: a 33 cm trough

PART	**Q**
WHAT	Game drawer cross divider
SIZE (CM)	51.9 × 9
QTY	1
FROM	Birch ply
NOTES	13 cm back from the front

PART	**R**
WHAT	Game drawer bin walls · bin floors
SIZE (CM)	12.6 × 9 · 16 × 12.6
QTY	2 · 2
FROM	Birch ply
NOTES	Floors raked so the cases lean about 13°

PART	**S**
WHAT	Plinth drawer base
SIZE (CM)	52 × 34
QTY	1
FROM	Birch ply
NOTES	Screwed under the box

PART	**T**
WHAT	Slim drawer sides · backs and fronts
SIZE (CM)	40 × 10 · 14.1 × 10
QTY	6 · 6
FROM	Birch ply
NOTES	Three boxes 15.3 wide, 14.1 inside

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from

these layouts.

Build

Tools


- Drill-driver with pilot and countersink bits
- SDS drill with a 7 mm masonry bit
- Spirit level, 60 and 120 cm
- Combination square
- Clamps
- Tape measure

Fixings

- 4 × 40 and 4 × 50 mm wood screws
- 5 × 60 mm screws and brown wall plugs
- Wood glue

How the wall goes together, layer by layer

Side sections to scale, room on the left. Dashed: the upright and the breast's face beyond the cut, and the deck's lid open

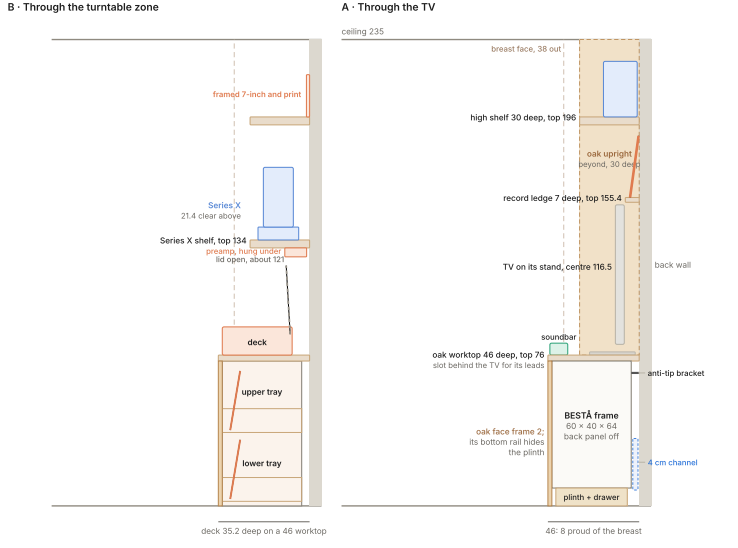

The plinth under bays 1 and 2

1. Lay the two 120 × 9 rails on edge, 38 cm apart outside, and stand the three 34.4 × 9 cross-pieces between them: one at each end and one in the middle, at 60.
2. Pre-drill, glue and screw through the rails into each cross-piece end with two 4 × 40 screws.
3. Measure both diagonals: when they're equal the frame is square. The plinth is 120 × 38 × 9. The opening between 0 and 60 (the end nearer the side wall) stays clear: it's the hidden drawer's bay, under bay 2.
4. Stand it in the alcove 63 cm from the side wall (bay 3 stands on the floor between it and the wall) and 4 cm off the back wall. Level it with shims, side to side and front to back.

The BESTÅ frames

5. Assemble both frames to IKEA's instructions, but leave the back panels off: the open backs are how the cables and the sub's port breathe.
6. Join the two frames side by side with IKEA's connectors.
7. Stand them on the plinth, their backs flush with its back edge, so their fronts sit 2 cm proud of the plinth (the face frame covers the step).

Bay 3, the carcass for the LP crates and the slim column

8. While the sides are flat, mark the runner lines on their inner faces: on the right side 2.3 and 37.0 cm up from the bottom edge, for the two LP crates; on the left side 2.3, 25.1 and 47.9, for the three slim drawers.
9. Stand the bottom panel between the two sides, flush with their bottom edges, and the top panel flush with their top edges. Pre-drill, countersink, glue and screw with four 4 × 50 screws a joint.
10. Check the diagonals for square. The carcass is 60 × 40 × 73, open at the back.
11. Stand it in its place, 3–63 from the side wall, its top level with the frames' tops at 73. Shim under it if the floor drops away.
12. Clamp it to bay 2 and fit two connector bolts at the front and two at the back.

Fix it to the wall

13. Screw a 4 cm spacer block to the back wall behind the top of each bay, at 68 high, with plugs.
14. Push the whole base back against the blocks.
15. Fit two anti-tip brackets per bay through the blocks into the wall. Do this before anything heavy goes in: a full LP crate pulled out is about 30 kg in front of the unit.
16. Lay a level across all three tops: within 1 mm over 186 cm. Shim and re-check.

The cable channel

17. Lay the flat two-compartment trunking on the floor in the 4 cm channel behind the base: mains on the wall side, data on the other.
18. Run the leads in now: the two mains leads from the side-wall socket enter through the face frame's notch and run back in the 3 cm filler beside bay 3; the Cat6 and Deco B's lead come down the right-hand corner.
19. Keep the channel behind bay 2 empty: the sub's port breathes into it. Switch 2 and the retro 6-way stand on edge behind bay 1.

Tools

- Drill-driver
- Router with a 6 mm straight bit (the game drawer's base groove)
- Combination square
- Spirit level
- Clamps
- Mitre saw or tenon saw


Fixings

- Runners: two pairs of 400 mm (68–70 kg) for the LP crates, three pairs of 400 mm light-duty for the slim drawers, one pair of 350 mm soft-close, one pair of 300 mm
- 3.5 × 16 mm screws for the runners (every hole)
- Four shelf pins for the part shelf
- Two small steel angle brackets for the divider
- Panel pins, wood glue, felt

The game drawer: covers on show at the front, every title readable from above at the back


Bay 1, bottom row. Section left, plan right. Nothing stands behind anything else

Side section through bay 1

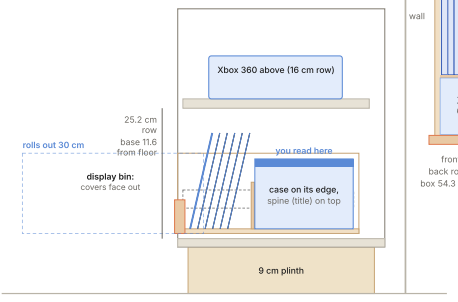

box 35 cm deep on 350 mm full-extension soft-close runners
5 cm free behind the box, then the 4 cm cable channel
bins: 19 cm cases leaning 13°, about 18.5 cm tall

Top view, drawer pulled out

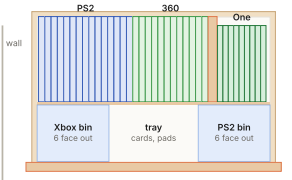


front: oak lip with finger pull, matching the record drawer
back row: 15 PS2 + 12 Xbox 360 + follower block + 9 Xbox One
box 54.3 × 35 cm outside · 51.9 cm inside · 16 cm bins, 18.7 cm tray

Bay 3: two LP crates under the turntable, a slim game column beside them


Section left through the LP crates, plan right. Pull a crate and flip through the covers like a record shop browser; the slim drawers flip the same way for games

Side section through bay 3

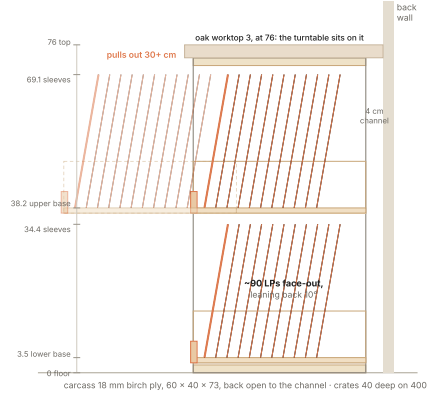

carcass 18 mm birch ply, 60 × 40 × 73, back open to the channel · crates 40 deep on 400 mm runners
12 mm base, 9 mm sides, 5 cm oak lip · 2.6 and 2.1 cm finger room (top panel at 71.2)

Bay 3 from above

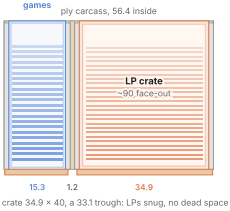

LP crate 34.9 × 40, a 33.1 trough: LPs snug, no dead space
slim drawers 15.3 × 40, 14.1 inside: DVD-size cases face-out
12 mm ply divider · 12.7 mm runners each side
an LP crate is about 30 kg full: open one at a time

The console shelves

20. Bay 1, from the top: rows of 16 (Xbox One), 16 (Xbox 360), then the game drawer's 25.2. Put the shelves on the pin holes nearest those heights.

21. Bay 2: the PS3's row of 23.7 at the top, on a full-width shelf. Below it, the PS2 and the PS1 sit beside the sub (next part).

Bay 2's sub column

22. Stand the 12 mm divider on the bay's floor, 23.4 cm from the bay's left inner face, tight under the PS3 shelf. Check it's plumb.
23. Fix it with one small angle bracket at the bottom (into the frame's bottom panel) and one at the top (into the PS3 shelf's underside).
24. Drill two 5 mm pin holes in the divider's right face at the height of the frame's pin holes for the PS2/PS1 shelf. Fit the part shelf on four pins.
25. Pair the sub with the soundbar now: its PAIR button is on the back, and it's hard to reach once it's in.
26. Lay the isolation riser on the column's floor, its front edge flush with the frame's front.
27. Stand the sub on it with the grille facing the room, centred: 1 cm to the divider, 1 cm to the frame's side. Slide it forward until its front is flush with the face frame's front (2 cm proud of the frame). Run its lead out of the back.
28. Check it touches nothing but the riser. If it does, a sheet of felt between, or nudge it.

The game drawer (bay 1, bottom row)

29. Fit the 350 mm runners to the frame's sides, level, so the drawer's base will sit about 1 cm above the frame's bottom panel. Drill pilot holes: BESTÅ sides are particleboard. If a screw won't hold, glue a 12 mm ply packer behind the runner.
30. Rout a 6 mm deep groove 1 cm up from the bottom on the inner faces of the sides, back and front panel, 9 mm wide, for the base.
31. Glue and screw the box together round the base: outside 54.3 × 35. Check the width against the runner maker's figure (usually the opening less 25.4 mm) before the glue sets.
32. Fit the cross divider 13 cm back from the front, and the two bin walls 16 cm in from each side. Glue in the bin floors with a slight back-rake, so the cases lean about 13°.
33. Felt the base and make the follower blocks.
34. Fit the runners' inner members to the box, hang it, and check it runs true empty.

Bay 3: the divider, the LP crates and the slim drawers

35. Stand the 12 mm divider in the bay, its left face 17.8 cm from the left side's inner face, the full height inside. Check it's plumb and parallel to the side at front and back (measure both), then fix it with two small angle brackets top and bottom.
36. Mark the runner lines on the divider's faces: on its right face 2.3 and 37.0 (the crates), on its left face

2.3, 25.1 and 47.9 (the slim drawers), matching the lines on the sides.

37. Screw the crates' 400 mm runners to the right side and the divider's right face; the slim drawers' to the left side and the divider's left face. Use every hole: a full crate is about 30 kg.

38. For each LP crate, glue and pin the two 40 × 8 sides and two 33.1 × 8 ends on top of the 34.9 × 40 base. The trough is 33 inside: snug for 31.4 sleeves, like a record shop's crate.

39. Glue a raked rest (an oak offcut) at the back of each crate, so the sleeves lean back about 10°. Felt the trough.

40. For each slim drawer, glue and pin the 6 mm sides, back and front onto the 15.3 × 40 base: 14.1 inside, for 13.5 cm game cases face-out. In the top one, glue a 6 mm strip down the middle (two pads on edge each side) and drill a 20 mm hole in the back for the USB-C lead's grommet.

41. Hang each box and run it in and out empty, then with ten records or ten games. Feed the charging lead from a USB plug on the 10-gang down the channel, with a loop of slack so the drawer opens fully.

The hidden plinth drawer

42. Make the box: the two 34 × 4.4 sides, the two 49.6 × 4.4 ends between them, the 6 mm base screwed underneath. It's 52 × 34 × 5.

13. Pack the plinth's inner faces under bay 2 with ply strips so the 300 mm runners sit the box's width plus their allowance apart, and fit the runners with the box 1.6 cm off the floor.
14. Felt the runners: the drawer sits under the sub.

The face frame and the drawer fronts

15. Cut the stiles (about 5 wide, and one 2 wide over bay 3's divider) and the rails from 2 cm oak. The bottom rail covers the plinth, 9 tall under bays 1–2, with an opening 54 × 6 for the plinth drawer, 1.6 up, under bay 2.
16. Scribe the two end stiles to the walls, then glue and pin the frame to the frames' fronts and bay 3. Notch the bottom rail's left end for the two socket leads.
17. Screw the oak lips onto the game drawer, the two LP crates, the three slim drawers and the plinth drawer from inside each box, with a 2–3 mm gap all round to the face frame.
18. Cut each finger pull underneath its lip: a cove routed along the back of the bottom edge.


Check before moving on: The tops level within 1 mm across 186 cm, and nothing rocks.

Check before moving on: Every drawer runs smoothly, the two crates clear each other by 2 cm, and the slim drawers by 2.8.

2 · The oak worktop

One solid oak worktop scribed to the alcove, over the base.

Media wall · ½ day · You + a helper · about £250–450

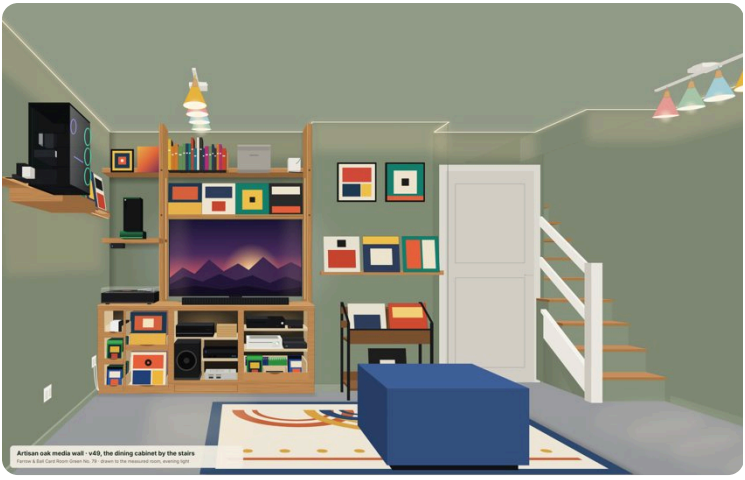

Check

First: The base, levelled and fixed.


Buy

QTY	1
WHAT	**Solid oak worktop, 300 × 62** One solid oak worktop, 300 × 62 cm, full stave: the alcove top (186 × 46), chamfered front; keep the offcut
WHERE	Timber merchant
£	250–450

QTY	
WHAT	**Total**
WHERE	
£	**250–450**

Cut

Solid oak, hardwax oil: each piece to scale

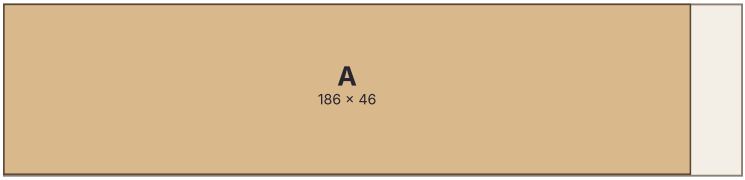

PART	**A**
WHAT	Worktop
SIZE (CM)	186 × 46 × 3
QTY	1
FROM	Solid oak
NOTES	From one 300 × 62 full-stave worktop; chamfered front

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from these layouts.

Build

Tools

- Hardboard or cardboard, 190 × 50, for the template
- Compass or a pencil on a block, for scribing
- Track saw or circular saw with a guide
- Jigsaw
- Router with a straight bit
- Random-orbit sander, 120 and 180 grit
- Drill-driver
- A helper

Fixings

- 4 × 30 mm screws with washers (9)
- Hardwax oil

Make a template

1. Cut the hardboard to about 190 × 50 and push it into the alcove at worktop height, its back edge against the back wall.
2. Set the compass to the widest gap at one end and run it down the side wall, so the pencil copies the wall's line onto the board. Cut to the line. Do the other end the same way.
3. Mark the front edge at 46 cm from the back wall all along. The template is now the worktop's exact shape.

Cut the oak

4. Lay the board best face up, grain running along its length. Lay the template on it and draw round it.
5. Cut just outside the line with the track saw, then sand or plane to the line.
6. Keep the offcut flat and oiled with the rest: it's spare oak for any repair.
7. Chamfer the worktop's top front edge with a 3 mm chamfer, sanded by hand.

Cut the openings

8. The TV slot: 3 cm wide, from 1 to 4 cm in from the back edge, running 78.25–158.25 from the side wall. Clamp a batten as a guide and rout it in passes, or drill each end and jigsaw between. Push the brush strip in.
9. The grommet hole behind the deck: 35 mm, its centre 2.5 cm from the back edge and 25.25 from the side wall.

Finish and fix

10. Sand to 120, then 180. Oil every face: top, underside, both ends and the cut edges of the slot. Two coats, a night between them.
11. Two of you lift it in and push it back to the wall. It should touch both side walls along their length.
12. Inside each bay, drill three 5 mm holes up through the top panel, elongated front to back to about 12 mm long, so the oak can move with the seasons.


3. Screw up through them into the worktop with 4 × 30 screws and washers. They must not come out through the top: check the length against a scrap.

Check before moving on: Tight to both walls, and the slot sits over the channel.

3 · The oak uprights and shelves

Two uprights to the ceiling, the high shelf, the Series X shelf, the record ledge and the “now playing” ledge.

Media wall · 2–3 days · You + a helper · about £420–765

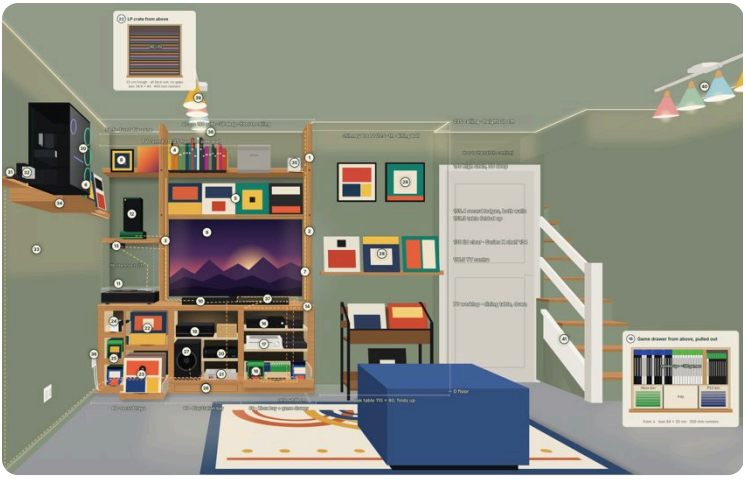

Check

First: The worktop on.

Measure	We drew	Why
The TV's remote receiver, bottom centre of the screen's frame	soundbar top 82, in front of the stand's foot	0.6 over the frame's edge: sit the bar on the worktop 2 cm proud of the stand's foot, not against it, so the remote's beam from the sofa clears it; if a button stutters, pair LG's Magic Remote (it talks to the TV by radio)

The TV's HDMI plugs, with the screen 2.15 from the corner post	behind the screen	plugs stay behind the panel; if a stiff lead pushes out, use 90° HDMI adapters

Buy

QTY	2
WHAT	**Solid oak upright, 165 × 30 × 4.5** Two solid oak uprights, 165 × 30 × 4.5 cm (cut to 159), quarter-sawn if possible
WHERE	Timber merchant
£	150–300

QTY	1 set
WHAT	**Solid oak for the shelves and the side-wall run** Solid oak for the shelves: high shelf in two lengths (128.9 and 51.7 × 30 × 4), Series X shelf 55 × 30 × 4, record ledge 128.9 × 7 × 2.4, the side-wall run from one board 225 × 30 × 4 (cut to its sweep), lips
WHERE	Timber merchant
£	230–380


QTY	1 set
WHAT	**Oak wedges, dowel, concealed brackets** Oak wedges, 10 mm oak dowel for pegs and dowels, concealed upright brackets; two concealed shelf brackets for the PC shelf, rated 40 kg+ a pair
WHERE	Timber merchant
£	30–60

QTY	1
WHAT	**“Now playing” oak ledge and brackets** The “now playing” ledge on the breast, with the table by the stairs: oak 105.5 × 7 × 2.4 with a 1.5 lip (from the shelf board's offcut), two concealed brackets
WHERE	Timber merchant
£	10–25

QTY	
WHAT	**Total**
WHERE	
£	**420–765**

Cut

Solid oak, hardwax oil: each piece to scale

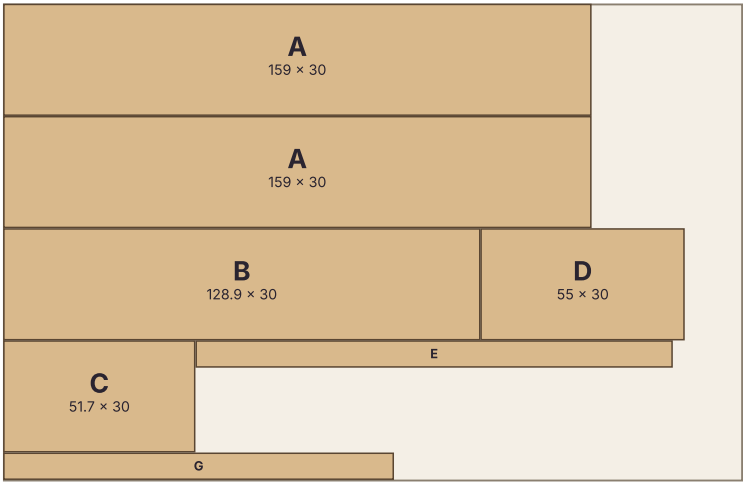

PART	**A**
WHAT	Uprights
SIZE (CM)	159 × 30 × 4.5
QTY	2
FROM	Solid oak
NOTES	Buy 165 long and scribe to the ceiling; housings, mortises, LED and cable grooves cut on the bench

PART	**B**
WHAT	High shelf, long length
SIZE (CM)	128.9 × 30 × 4
QTY	1
FROM	Solid oak
NOTES	Housed 1.2 into both uprights and pegged

PART	**C**
WHAT	High shelf, short length
SIZE (CM)	51.7 × 30 × 4
QTY	1
FROM	Solid oak
NOTES	Housed into the left upright; cleat on the side wall

PART	**D**
WHAT	Series X shelf
SIZE (CM)	55 × 30 × 4
QTY	1
FROM	Solid oak
NOTES	Two through-tenons 6 × 2.4, wedged flush

PART	**E**
WHAT	Record ledge
SIZE (CM)	128.9 × 7 × 2.4
QTY	1
FROM	Solid oak
NOTES	Housed and pegged

PART	**F**
WHAT	Ledge lips
SIZE (CM)	128.9 × 1.5 × 0.9 · 126 × 1.5 × 0.9
QTY	1 · 1
FROM	Solid oak
NOTES	Glued along the ledge's and the run's front edges

PART	**G**
WHAT	“Now playing” ledge
SIZE (CM)	105.5 × 7 × 2.4, lip 1.5
QTY	1
FROM	Solid oak
NOTES	On the breast at 104, two concealed brackets

PART	**H**
WHAT	Wedges · pegs · dowels
SIZE (CM)	6 × 3, tapering · 10 mm dowel, 5 long · 10 mm dowel
QTY	2 + spares · 6 + 6 · 8
FROM	Solid oak
NOTES	Glued

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from these layouts.

Build

Cut the uprights to length

1. Measure from the worktop to the ceiling at each upright's position. The plan says 159; ceilings vary.
2. Cut each upright 2 mm under its measurement, then scribe its top to the ceiling as you did the worktop.
3. Mark each upright's faces: which side faces the TV, and the back edge that goes against the wall.

The housings (both uprights)

4. Measure from each upright's foot (the end on the worktop). The high shelf's housing is 116–120 up, the full 30 depth, 1.2 deep, on the TV-side face of both uprights.
5. The record ledge's housing is 77–79.4 up, 0–7 from the back edge, 1.2 deep, on the TV-side face of both.
6. On the left upright's other face (the turntable side), a second high shelf housing at 116–120, full depth, for the short length.
7. Clamp a straight batten as a guide, set the router 4 mm deep and rout, then step down to 12 mm in passes. Square the ends with a chisel. Practise on an offcut first.

The through-mortises (left upright)

8. Two mortises, each 6 wide and 2.4 tall, at 54.8–57.2 up from the foot, 12–18 and 20–26 cm from the back edge.
9. Mark them on both faces with a square and a knife. Drill most of each out with the 20 mm bit, halfway from each face, then chisel to the lines.
10. On the TV-side face, flare the top and bottom of each mortise outwards 3–4 mm, for the wedges.

The tenons (Series X shelf)

11. On the shelf's west end (the end that goes through the upright), mark two tenons 6 wide and

2.4 thick, centred in its 4 cm thickness, 12–18 and 20–26 from its back edge, 4.5 long.

12. Saw the shoulders and cheeks, and cut away the rest of the end back to the shoulder line.
13. Saw a kerf 3 cm deep across the middle of each tenon, parallel to the shelf's faces.
14. Test-fit through the mortises: snug, pushed in by hand.

The grooves

15. On each upright's TV-side face, rout a groove for the LED channel (usually about 1.7 wide × 0.8 deep: check yours), 2 cm in from the front edge, from 2 cm above the worktop to just under the high shelf's housing.
16. On each upright's back edge, rout a 2 × 1.5 cable groove the full length: the left one for the Series X's HDMI and power and the vinyl lead, the right one for Deco B's 12 V and patch leads.
17. Notch both uprights' tops for the ceiling LED strip.

Dry-fit, then fix

18. Lay each upright on the floor with its shelves in their housings. Check every joint closes before any glue.
19. Drill two 10 mm holes 3 cm deep in each upright's foot, and matching holes in the worktop at the marked positions (dowel centres make this exact).

Glue the dowels into the uprights only, so they can come out.

20. Lay the Series X's and the vinyl leads into the left upright's back groove, and Deco B's into the right one's.
21. Stand the right upright on its dowels against the breast's side. Screw it to the reveal through three countersunk holes, with plugs, and plug the holes with oak.
22. Stand the left upright on its dowels, check it's plumb with the laser, and fix it to the back wall with the concealed brackets.
23. Slide the long high shelf and the record ledge into their housings from the front.
24. Screw a 30 cm cleat to the breast's side face (the reveal) for the short high shelf, and another at the Series X shelf's underside height. Slide the short high shelf in from the front onto its cleat and into its housing.
25. Feed the Series X shelf's tenons through the mortises from the turntable side, onto its cleat. Glue the wedges and drive them into the kerfs from the TV side. When dry, saw them flush and plane: proud, they'd touch the TV.
26. Pegs: drill 10 mm through each upright's face into the housed shelf ends, 4 cm deep, about 4 cm from the front edge. Glue in a peg and saw it flush.

The “now playing” ledge on the breast


27. Cut it 105.5 × 7 × 2.4 from the shelf board's offcut and glue a 1.5 cm lip along its front edge, so a sleeve stands against the wall without sliding.
28. Mark a level line on the chimney breast at 101.6 (the ledge's underside), 6 cm in from each side of the breast.
29. Fit its two concealed brackets to the maker's instructions, slide the ledge on, and stand three LPs on it.

Side wall and PC

4 · The side-wall run and the PC shelf

One oak run from the corner to the PC, the PC shelf and its keyboard tray.

Side wall and PC · 1 day · You · about £60–130

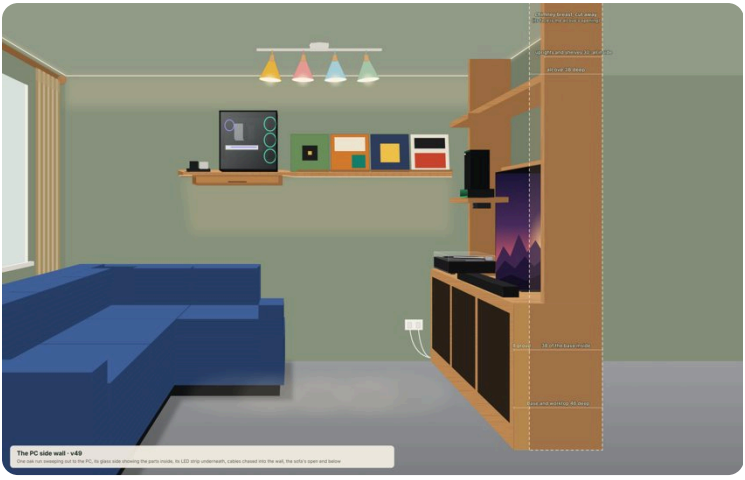

Check

First: The uprights in (the run's cleat meets the left one).

Buy

QTY	1
WHAT	**PC tidy kit: sleeve, grommet** PC tidy kit: braided sleeve, shelf-notch grommet
WHERE	DIY shop or online
£	5–15

QTY	1
WHAT	**Powered 4-port USB 3 hub** A powered USB 3 hub, 4-port with its own adapter, screwed under the side run's front edge below the PC: pads, the keyboard and a stick within reach of the sofa
WHERE	DIY shop or online
£	15–30

QTY	1
WHAT	**Remote PC power button** A remote power button for the PC: a wireless switch on the motherboard's power header (card in a spare slot), its push button on the wrap ledge
WHERE	DIY shop or online
£	10–30


QTY	1
WHAT	**Magnetic dust filter** A magnetic mesh dust filter cut to the PC's top exhaust
WHERE	DIY shop or online
£	5–10

QTY	1
WHAT	**Keyboard tray: oak housing, ply tray, runners** Keyboard tray for the PC shelf: 7 cm oak housing under it, 12 mm ply tray 54 × 26 with an oak lip, 300 mm light-duty runners
WHERE	Timber merchant
£	25–45


QTY	
WHAT	**Total**
WHERE	
£	**60–130**

Cut

Solid oak, hardwax oil: each piece to scale

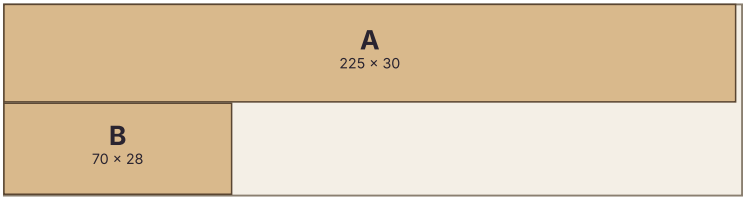

Birch ply, 12 mm: board 1 of 1, 122 × 61

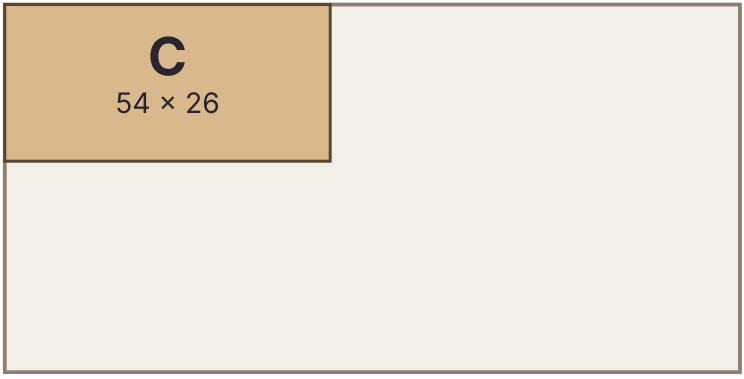

PART	**A**
WHAT	Side-wall run
SIZE (CM)	220 long × 7 sweeping to 28 × 4, from one 225 × 30 × 4 board
QTY	1
FROM	Solid oak
NOTES	On an oak cleat, concealed brackets under the PC end; LED groove under the front edge

PART	**B**
WHAT	Keyboard tray housing
SIZE (CM)	70 × 28 × 7, sides 7 × 2
QTY	1
FROM	Solid oak
NOTES	Screwed under the PC shelf

PART	**C**
WHAT	Keyboard tray
SIZE (CM)	54 × 26
QTY	1
FROM	Birch ply
NOTES	Oak lip on its front edge

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from these layouts.


Build

Tools

- SDS drill
- Drill-driver
- Dowel jig
- Spirit level and laser
- Jigsaw
- Clamps

Fixings

- Two concealed shelf brackets rated 40 kg+ a pair
- 300 mm light-duty runners, one pair
- An oak-coloured brush grommet
- 10 mm dowels (2)
- 5 × 60 mm screws and plugs

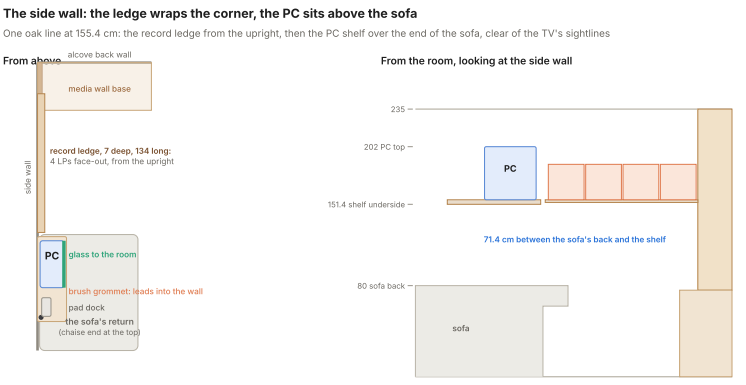

The cleats

1. Screw the first cleat to the side wall with its top on the 153 line, from 30 cm out from the back wall (in line with the uprights' fronts) to 164 cm out. Plugs every 25 cm.
2. Screw the second with its top at 151.4 (the PC shelf's underside), from 168 to 250 cm out.

The wrap ledge

3. Lay the ledge on its cleat, its alcove end in line with the uprights' fronts, and screw up through the cleat into it.
4. Glue the lip along its front edge.

The PC shelf and its tray

5. Fit the concealed brackets into the wall at the shelf's height, through the cleat, to the maker's instructions.

6. Cut the grommet hole in the shelf's back corner, over the top of the chased conduit.
7. Screw the keyboard tray's housing to the shelf's underside, stopping 12 cm short of the sofa end so the cables drop past it. Fit the runners inside it and slide the tray in.
8. Slide the shelf onto its brackets and down onto the cleat. Lean on it: it shouldn't move.

The PC's leads

9. Fit the brush grommet. Pull the HDMI (active optical: the end marked "source" at the PC) and the Cat6 down the 38 mm conduit with its draw wire.
10. Take the plug off the C13 lead, feed its bare end down the 25 mm conduit, and at the bottom fit the rewireable plug: brown to L, blue to N, green-and-yellow to E, the cord grip on the outer sheath, a 13 A fuse.
11. At the bottom, all three run behind the skirting into the plinth's notch and the channel; the mains lead goes on to the 10-gang behind the TV.

The PC's extras

12. Screw the powered USB hub under the side run's front edge, below the PC, ports facing the sofa. Its adapter plugs into the 10-gang along the PC's

mains route; its lead runs up through the grommet to the PC.

13. Remote power button: with the PC unplugged, push the receiver card into a spare slot and plug its lead onto the motherboard's power-switch pins (the case's own button lead plugs into the card's pass-through). Stick the push button to the wrap ledge's underside, by the sofa end.
14. Lay the magnetic dust filter on the PC's top exhaust; brush it off once a month.

Check before moving on: One level line with the ledge over the TV, the sweep runs smooth with no flat spots, and the PC end holds your weight leaning on it.

Chimney breast and door

5 · The glass case

An oak frame on the chimney breast with three glass shelves and a lift-off glass front.

Chimney breast and door · ½ day · You · about £90–170



Check

First: The breast painted.

Buy


QTY	1 set
WHAT	**Glass case: 4 mm toughened front, three 6 mm shelves, cut to size** The glass display case's glass: toughened, cut to size, polished edges: a 4 mm front 85.6 × 82.2 that lifts off, and three 6 mm shelves 85.6 × 9.2
WHERE	A glass cutter
£	70–130

QTY	1 set
WHAT	**Glass case: oak frame, oak-faced ply back, pins, cleat, LED strip** The glass display case's oak and fittings: the frame from the oak offcuts (two sides 85 × 12 × 2, top and bottom 86 × 12 × 2), a 6 mm oak-faced ply back 86 × 81, twelve shelf pins for glass, an oak French cleat 80 long, a warm white LED strip under the top on the strips' app
WHERE	Timber merchant
£	20–40


QTY	
WHAT	**Total**
WHERE	
£	**90–170**

Cut

Oak-faced ply, 6 mm: board 1 of 1, 122 × 122

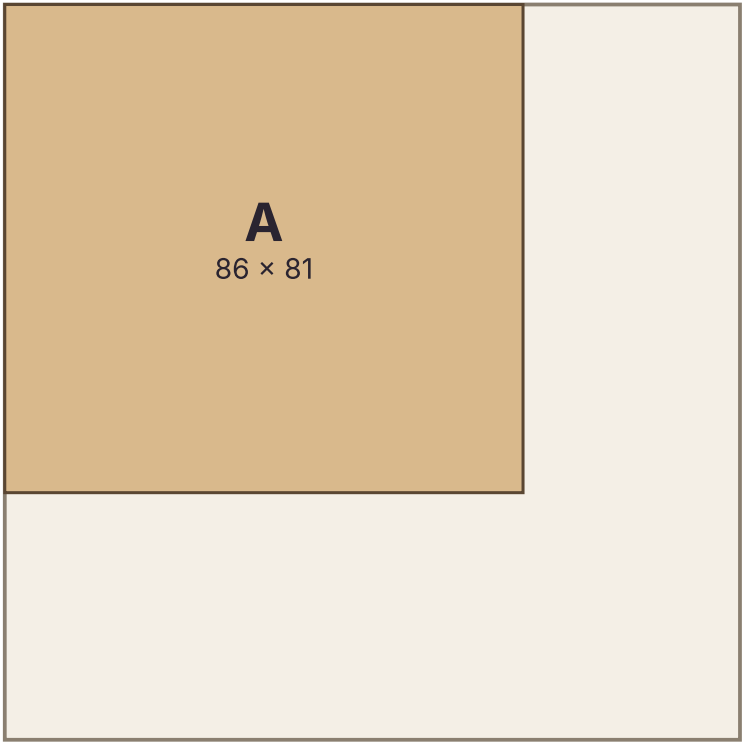

Solid oak, hardwax oil: each piece to scale



PART	**A**
WHAT	Glass case back
SIZE (CM)	86 × 81
QTY	1
FROM	Oak-faced ply
NOTES	Pinned into the frame's rebate

PART	**B**
WHAT	Case sides
SIZE (CM)	85 × 12 × 2
QTY	2
FROM	Solid oak
NOTES	From the oak offcuts; rebated for the back

PART	**C**
WHAT	Case top and bottom
SIZE (CM)	86 × 12 × 2
QTY	2
FROM	Solid oak
NOTES	Between the sides

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from these layouts.

Build

The glass display case on the breast

1. Rout a 5 mm groove 6 mm deep along the inside of the top and bottom pieces, 1.5 cm in from their front edges, for the glass front: the top's groove 12 mm deep, so the front lifts up into it and drops into the bottom one.
2. Rout a 6 mm rebate along the back edges of all four pieces for the ply back.
3. Drill the shelf-pin holes on the sides' inner faces, front and back, 3 cm in from each edge: at 19, 40 and 61 above the bottom piece's top (the shelves at 158, 179 and 200 on the wall).

4. Glue and dowel the frame together (sides between the top and the bottom), check the diagonals, then glue and pin the ply back into its rebate.
5. Stick the LED strip under the top, just behind the groove, and run its lead out through a 10 mm hole in the back's top corner, down the breast's side to a plug (the strips' app runs it).
6. Screw one cleat strip to the case's back, 10 under its top, the bevel down and facing the wall. Screw the other to the breast at 212 (its top edge), level, the bevel up and facing out, with 5 × 60 screws in plugs every 20 cm.
7. Lift the case onto the cleat (two people: about 16 kg before the glass), check it's level, and fix its bottom edge to the breast with two small mirror plates.
8. Fit the pins and lay in the three glass shelves; lift the front up into the top groove and drop it into the bottom one. Fill it.

6 · The shelf over the door and its boxes

An oak shelf on two brackets over the hall door, two lidded boxes on it.

Chimney breast and door · 2 h · You · about £55–90



Check

First: The architrave's top measured (Check).

Measure	We drew	Why
The shelf over the door	the door's 198 and a 7 architrave	11.3 over two 15-high boxes; check your architrave

Buy

QTY	1 set
WHAT	**Oak shelf over the door, two KUGGIS boxes** An oak shelf over the hall door, 91 × 27, on two brackets, and two IKEA KUGGIS lidded boxes 35 × 26 × 15, white
WHERE	IKEA
£	35–60

QTY	2
WHAT	**IKEA KUGGIS box, 35 × 26 × 15** Two IKEA KUGGIS lidded boxes, 35 × 26 × 15, white, for your black shelf
WHERE	IKEA
£	20–30

QTY	
WHAT	**Total**
WHERE	
£	**55–90**

Cut

Solid oak, hardwax oil: each piece to scale



PART	**A**
WHAT	Door shelf
SIZE (CM)	91 × 27 × 2.7
QTY	1
FROM	Solid oak
NOTES	From the worktop's offcut; two brackets

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from these layouts.

Over the hall door, and the boxes

1. The oak shelf's top at 208.7, on two brackets above the architrave (check it's no more than 7 wide).
2. Two KUGGIS boxes on it; two on your black shelf, either side of the laser, 1 over its front.

Dining wall and bar

7 · The dining cabinet and table

Two oak boxes under your shelf: the table folds into one, the six chairs live in the other.

Dining wall and bar · 3–4 days · You + a helper · about £906–1,535



Check

First: The stairs wall painted; the black shelf's 10 cm gap kept.

Measure	We drew	Why
The two doors and their hinges	a full-height stainless piano hinge each, screwed every 10 cm into a solid oak edge	the hinge's load isn't published: hang the table door, open it flat, and check its far end doesn't drop before you load the cabinet

Stair side: the stair's foot and the door	the stair box's face at -41; the door's edge reaches -44	seated, the backs reach 8.7 into the door's swing: keep the door shut while you eat. Measure a chair's depth: 52.3 or less and the door clears
Its stairs end	an earlier look at your photo put it about 41 past the stair box	35 past it: if you measure 41 there, the shelf is about 194 long; the gap stays 10

Buy

QTY	1 set
WHAT	**Solid oak for the table, two 92.5 × 90 halves** Solid oak for the table: two halves 90 × 92.5 × 2.7, each a centre 78.5 × 90 of edge-glued staves with two pegged breadboard ends (the cutting list)
WHERE	Timber merchant
£	265–460

QTY	1 set
WHAT	**Oak-faced ply, cut to size: two boxes, two doors** The dining cabinet: oak-faced ply cut to size, 18 mm for its two boxes (four ends, two tops, two floors), the linen shelf, the chair shelf and the two doors (90.5 and 45.5 × 183.8); a 6 mm ply back for each box (the cutting list)
WHERE	Timber merchant
£	230–410

QTY	1 set
WHAT	**Oak: hinge rail, aprons, four legs, door stops** Oak for the cabinet's hinge rail (91 × 15.4 × 7), the eight apron rails, the four tapered legs (6.5 × 4.5) and two door stops
WHERE	Timber merchant
£	35–70

QTY	1
WHAT	**Piano hinge, 1800 × 50 (the table)** Altro continuous piano hinge, 1800 × 50, cut to 90: the table's foot
WHERE	Online (Altro)
£	16–20

QTY	1 set
WHAT	**Folding leg brackets (4), tabletop fasteners (16)** Folding, self-locking table-leg brackets, a set of four, and sixteen figure-8 tabletop fasteners for the aprons
WHERE	DIY shop or online
£	60–75

QTY	1 set
WHAT	**Two door piano hinges, catches, magnet, hooks** The doors' hinges and catches: two Altro continuous piano hinges, 1800 × 32 × 1 mm, stainless, one the height of each door; four magnetic catches (the doors and the folded table), a 10 mm flush magnet and two steel cups to hold an open door flat, a small brass hook for the cloth bag, two steel angle brackets for the wall
WHERE	Online (Altro)
£	35–65


QTY	3 pairs
WHAT	**Grey padded folding chairs (Brayden Studio)** Folding chairs, six: your grey padded ones (Brayden Studio on Wayfair, sold in pairs, so three sets of two): wooden frames, grey linen, a 47 × 47 seat with a 6.5 cm cushion, a 110° back, 168 kg; folded 90 × 10 × 47, they live in the cabinet. The estimate is about £80–130 a pair: read the listing's price
WHERE	Wayfair
£	240–390

QTY	3
WHAT	**Lee Valley flip-top hinge** Three Lee Valley 40574 narrow flip-top hinges (solid brass, 1.27 × 7.0 cm) for the joint
WHERE	Lee Valley
£	25–45


QTY	
WHAT	**Total**
WHERE	
£	**906–1,535**

Cut


Solid oak, hardwax oil: each piece to scale

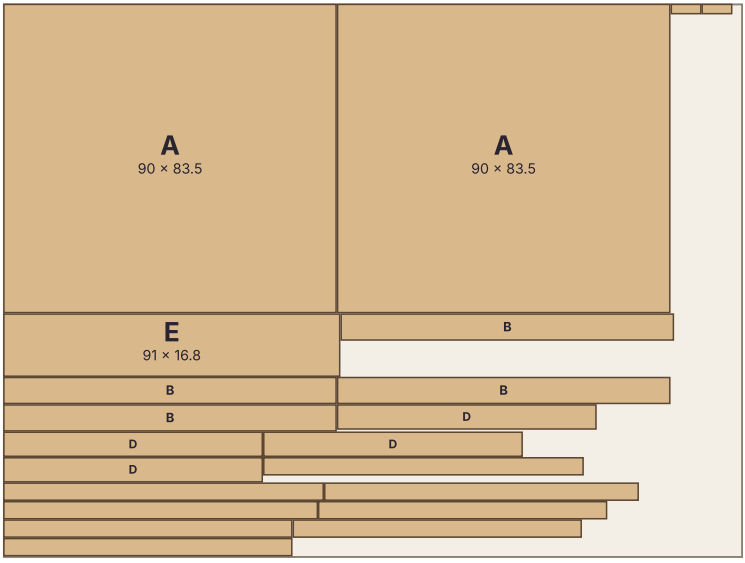


Oak-faced ply, 18 mm: board 1 of 3, 244 × 122

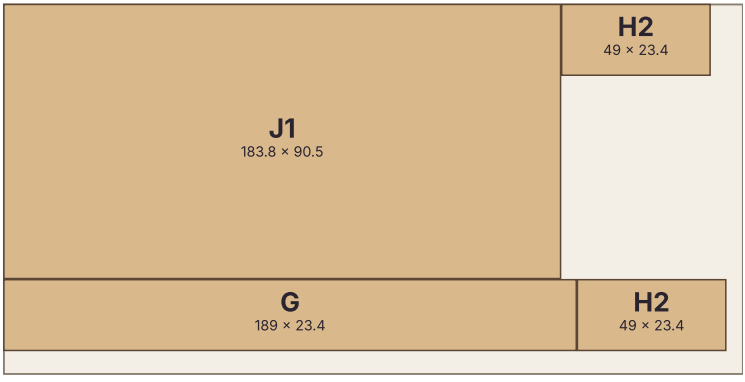

Oak-faced ply, 18 mm: board 2 of 3, 244 × 122

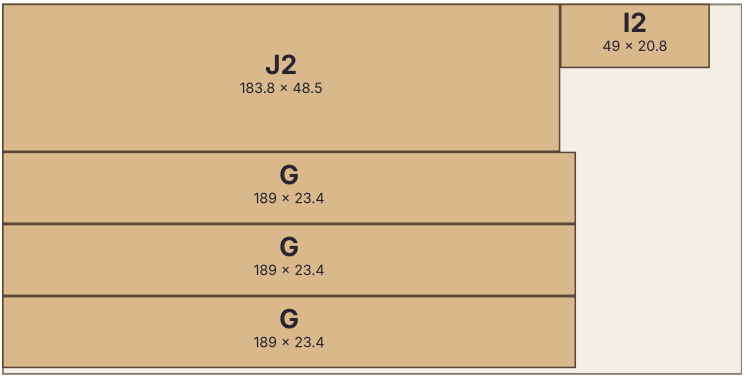


Oak-faced ply, 18 mm: board 3 of 3, 244 × 122

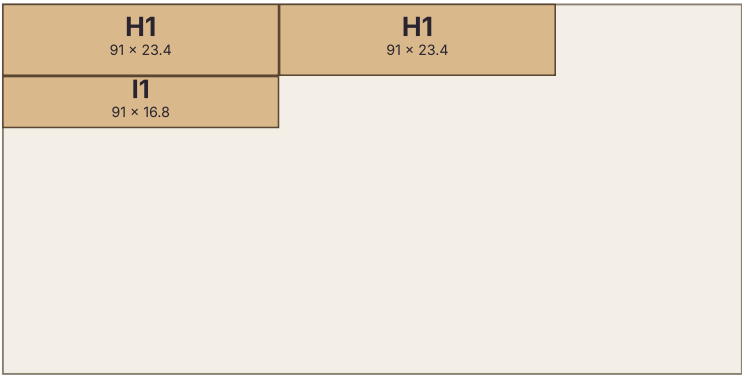

Birch ply, 6 mm: board 1 of 2, 244 × 122



Birch ply, 6 mm: board 2 of 2, 244 × 122

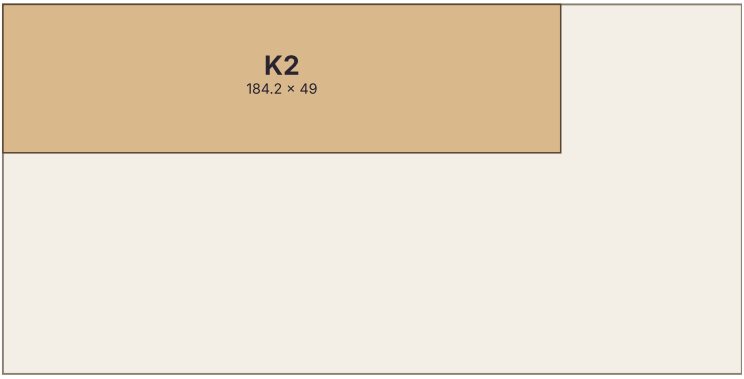

PART	**A**
WHAT	Table halves, centres
SIZE (CM)	83.5 × 90 × 2.7
QTY	2
FROM	Solid oak
NOTES	Edge-glued staves: 78.5 between the shoulders, plus a 2.5 tongue each end

PART	**B**
WHAT	Breadboard ends
SIZE (CM)	90 × 7 × 2.7
QTY	4
FROM	Solid oak
NOTES	Pegged with three 10 mm pegs each, in slotted holes

PART	**C**
WHAT	Apron rails
SIZE (CM)	outer half 86.5 and 78 · inner half 84.9 and 78, all × 4.6 × 2
QTY	2 + 2 · 2 + 2
FROM	Solid oak
NOTES	A frame under each half, held on figure-8 fasteners

PART	**D**
WHAT	Table legs
SIZE (CM)	6.5 × 4.5, cut 70 long
QTY	4
FROM	Solid oak
NOTES	Tapered on the two inside faces from 25 cm down to 4.5 × 3.5 at the foot; trimmed to the floor once the table's hung and level

PART	**E**
WHAT	Hinge rail
SIZE (CM)	91 × 16.8 × 7
QTY	1
FROM	Solid oak
NOTES	Across the table box, its top at 73.3, its front 4 behind the door's back (the cloth bag hangs past it); the table's piano hinge 4.6 back from its front

PART	**F**
WHAT	Door stops (the cabinet)
SIZE (CM)	8 × 2.5 × 1.2
QTY	2
FROM	Solid oak
NOTES	Under each box's top, behind its door's free edge; a magnetic catch let into each

PART	**G**
WHAT	Cabinet ends
SIZE (CM)	189 × 23.4
QTY	4
FROM	Oak-faced ply
NOTES	Full height and depth, two for each box; the doors sit between them

PART	**H**
WHAT	Cabinet tops · floors
SIZE (CM)	91 × 23.4 · 49 × 23.4
QTY	2 · 2
FROM	Oak-faced ply
NOTES	One of each per box, between its ends; the floors' top faces at 3

PART	**I**
WHAT	Cabinet linen shelf · chair shelf
SIZE (CM)	91 × 16.8 · 49 × 20.8
QTY	1 · 1
FROM	Oak-faced ply
NOTES	Top faces at 168.6 (the table box, set 4 back for the cloth bag) and 95.8 (the chair box)

PART	**J**
WHAT	Cabinet doors
SIZE (CM)	90.5 · 48.5, both × 183.8
QTY	1 · 1
FROM	Oak-faced ply
NOTES	The table door, then the chair door: oak-faced both sides, grain upright, all four edges lipped; a piano hinge on the edge by the boxes' join, a finger slot near the other

PART	**K**
WHAT	Cabinet backs
SIZE (CM)	91 · 49, both × 184.2
QTY	1 · 1
FROM	Birch ply
NOTES	Glued and pinned in each box, between its ends, its floor and its top

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from these layouts.

Build

Tools


- Drill-driver and a countersink
- A self-centring (Vix) bit for the piano hinges' pilot holes
- 35 mm and 10 mm Forstner bits
- Router with straight bits and a guide
- Jigsaw or track saw
- Hacksaw (to cut the table's piano hinge)
- Chisels
- Clamps, at least four 100 cm
- Long spirit level and a square
- Tape measure and pencil
- A helper for standing the boxes and hanging the table

Fixings

- Altro continuous piano hinge, 1800 × 50, cut to 90 (the table's foot)
- Two Altro continuous piano hinges, 1800 × 32 × 1 mm, stainless (the doors), not cut
- Three Lee Valley 40574 narrow flip-top hinges (1.27 × 7.0) and their screws
- Folding, self-locking table-leg brackets, a set of four
- Sixteen figure-8 tabletop fasteners
- Four magnetic catches
- A 10 mm flush magnet and two steel cups
- A small brass cup hook (the cloth bag)
- Two steel angle brackets, plugs and 5 × 70 mm screws for your solid wall
- 4 × 50, 4 × 30 and 3.5 × 16 mm wood screws (the short ones for the piano hinges), 25 mm panel pins, wood glue
- Plastic shims, felt pads, hardwax oil, 10 mm oak dowel for the breadboard pegs


The compact cabinet's two boxes, from the front

Doors and table off; heights to each panel's top face. Ends, tops and floors 23.4 deep; inside 20.8 deep, 2 back for the inset doors.

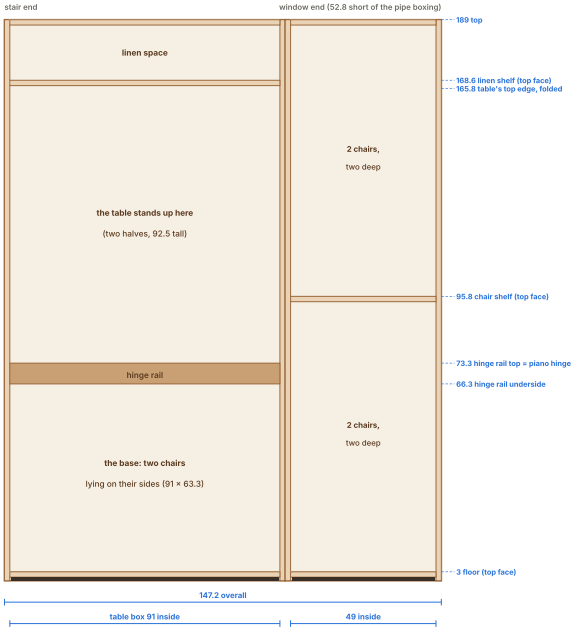

The compact cabinet: how the table comes down

Through the table box, wall on the right. Folded (dashed): 4 back from the door, two chairs lying under it. Open: the door turned back, the table down.

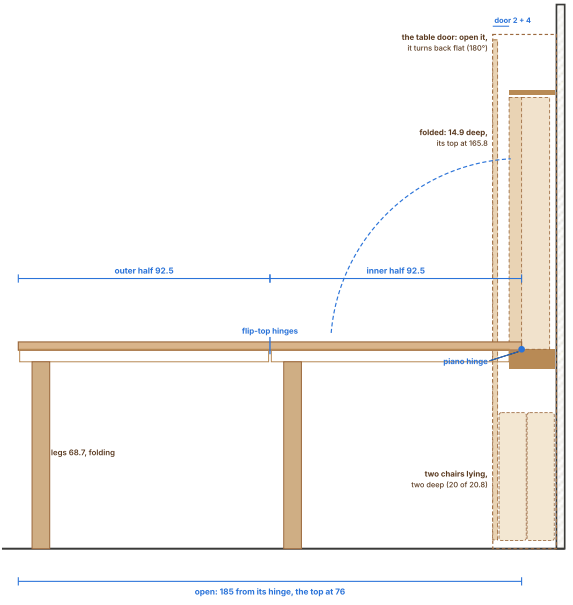

Before you start: check and mark out

1. Measure the gap under your shelf at both ends: it must be at least 191. The boxes are 189 tall and need 2 cm to tip up into place.
2. Mark the cabinet's footprint on the floor: 147.2 long and 23.4 deep off the wall, its stair end 45 cm short of the stair box (that strip stays clear for the stairs' foot). Its window end is then 52.8 cm short of the pipe boxing's face. Mark the line between the two boxes, 94.6 from the stair end.
3. Your stairs wall is solid: the two brackets go in with plugs and screws. Run the detector over both spots first, as for every hole.
4. Lay a long level along the footprint. Note the low end: the shims go there later.
5. Oil every oak face and edge (two thin coats, a day apart) before you assemble anything: it's much easier on flat parts, and a board oiled on one side cups.

The two boxes

6. Each box is two ends with a top and a floor between them, a back and a shelf. Lay the ends flat, inside faces up, and mark on each: the floor's top face at 3, the top flush with the end's top edge, and a line 2 back from the front edge, full height. The shelves and the hinge rail stand

behind that line; the door sits in front of it, flush with the front edges.

7. On the table box's two ends mark the hinge rail (66.3–73.3) and the linen shelf's top face at 168.6. On the chair box's ends mark the chair shelf's top face at 95.8.
8. Stand two ends up and fit their top and floor between them, flush at the front: glue, pre-drill and drive three 4 × 50 screws through each end into each panel's end grain. The table box is 91 inside, the chair box 49. Each floor's bottom face is at 1.2.
9. Fit the chair shelf in the chair box, its front edge on the line, and the linen shelf in the table box 4 behind the line (a hook for the cloth bag goes in front of it): glue and three screws through each end.
10. Measure both diagonals of each box's front: when they're equal, it's square. Glue and pin each 6 mm back (91 or 49 × 184.2) between the ends, the floor and the top; it holds the box square.
11. Glue and screw two battens under each floor, one 1 cm back from the front edge and one at the back: that's the plinth.

Stand them and fix them to the wall

12. With your helper, tip the table box up and walk it onto its marks, back to the wall; then the chair box beside it at the window end.

13. Shim under the battens until both are level along their length, plumb at the front, and flush with each other at the front and the top. Check again after a minute: they settle.
14. Clamp the two meeting ends together and screw them to each other with four 4 × 30 screws from inside the chair box, at about 20, 70, 120 and 170 up. Now they're one cabinet.
15. Screw an angle bracket under each box's top, in the middle, and into the wall with plugs and 5 × 70 screws. They stop it tipping; the floor takes the weight.

The hinge rail

16. Slide the oak hinge rail (91 × 16.8 × 7) into the table box against the back, its top face at 73.3: its front stands 4 behind the line, like the folded table's, so the cloth bag on the door's hook clears it.
17. Glue it, then drive two 4 × 50 screws through each end into it. It carries the table's whole weight when it's open, so don't skip the glue.

The two table halves

18. Ask the timber merchant for two centre panels of edge-glued staves, each 83.5 × 90 × 2.7: 78.5 between the shoulders plus a 2.5 tongue at each end, and four breadboard ends 90 × 7 × 2.7.

19. On each end of each centre panel, rout a tongue 2.5 long and 0.9 thick, centred in its thickness: take 0.9 off each face with the router against a batten.
20. In each breadboard end's inner edge, rout a groove 0.9 wide and 2.6 deep, centred, full length. Dry-fit: flush with the panel's long edges and flat across the joint.
21. Drill three 10 mm peg holes down through each breadboard end and its tongue: one at the centre and one 8 cm in from each side, 1.3 cm from the breadboard's inner edge. Take the ends off and elongate the two outer holes in each tongue to 16 mm along the width, so the panel can move.
22. Glue only the middle 10 cm of each tongue, clamp the ends on and drive the pegs (glue the outer pegs into the breadboard only). Saw flush, sand to 180 and oil both faces equally.
23. Each half is now 92.5 × 90. Chamfer the underside edges 1 cm, except the two edges that will meet at the joint.

The aprons (the frame under each half)

24. Lay both halves face down on a clean blanket, their joint edges together, as on the drawing of the halves from underneath.
25. The outer half: its two long rails (86.5) run along the half 4 cm in from the sides and 3 cm in from both ends; its two short rails (78) fit between them

at the ends. Glue and screw the corners (two 4 × 50 each).

26. The inner half: the same, but its frame stops 4.6 short of the wall end (that strip rests on the hinge rail): long rails 84.9, short rails 78.
27. Fix each frame to its half with figure-8 tabletop fasteners every 25 cm (four a rail): recess each in the rail's top edge with the 35 mm bit, screw it to the rail and then up into the top with 4 × 30 screws. They hold the top flat but let it move.

The legs

28. Cut the four legs 70 long from the 6.5 × 4.5 oak. They're trimmed to the floor at the end.
29. Screw a folding bracket to the underside of each half where its legs stand (see the drawing): on the inner half against the end rail by the joint, the leg centres 8.25 cm from the joint and 32 cm in from each side; on the outer half in the two corners at the far end, centres 8.25 cm in from the end and the sides.
30. Screw each leg's top into its bracket. Fold them: the inner half's legs fold towards the wall end, the outer half's towards the joint. Folded, each leg lies flat inside its apron frame.

Join the halves: three flip-top hinges

31. Turn the halves face up, their meeting edges together, flush across the top. Mark three hinges along the joint: 10 cm in from each side and one in the middle.
32. Rout each hinge's two leaves into the two edges to the hinge's depth with a guide, square the recesses with a chisel and screw the hinges in.
33. Swing it: open, the two tops are flush; folded, the outer half lies flat on the inner half, top face to top face, with nothing proud.

Hang the table

34. Cut the 50 mm piano hinge to 90 with a hacksaw and file the ends smooth.
35. With the inner half face down, screw one leaf of the piano hinge along its wall end, on the underside, the knuckle exactly on the end edge: a screw every 10 cm, pilot holes first.
36. Fold the outer half onto the inner half. With your helper, lift the folded table upright into the table box, its wall end down on the hinge rail, its underside facing the room, centred (0.5 each side).
37. Screw the hinge's other leaf to the rail's top face, the knuckle 4.6 back from the rail's front. That leaves 4 in front of the folded table for the cloth bag on the door. One screw at each end first, try the swing, then the rest.

38. Try it: it swings down to flat with its top at 76 and back up to stand in the box without touching the sides. The folded table's top edge is at 165.8, just under the linen shelf.

The catches and the finger pull

39. Screw two magnetic catches under the linen shelf's front edge, 15 cm in from each side, and their plates on the folded table's top edge: they hold it upright.
40. Rout a finger pull 12 long and 1.5 deep in the underside of the inner half's apron rail by the joint, in the middle: folded, it's at the top, and that's what you pull to bring the table down. No knob, so nothing presses into the pads on the door.

Hang the two doors

41. The table door (90.5 × 183.8) hangs on the table box's window end and the chair door (48.5 wide) on the chair box's stair end. The two hinges sit side by side where the boxes meet, and each door opens away from the other, turning 180° to lie flat over it.
42. Lay a door face down, its hinge edge up. Screw one leaf of a 32 mm piano hinge along that edge, centred (1.9 short of each end), the knuckle just proud of the door's face: a 3.5 × 16 screw every 10 cm into pilot holes made with the self-centring bit.

13. Stand the door in its opening on 2 mm packers, with an even gap all round. Screw the hinge's other leaf to the inside face of the end it hangs on, the knuckle just proud of the front edge: one screw at the top and one at the bottom first, try the swing, then the rest.
14. Hang the table door first, then the chair door. Each should shut flush with the front edges and open right back, flat against the other door.
15. Glue an oak door stop under each box's top, behind its door's free edge, with a magnetic catch let into it and the catch's plate on the door's back: the door closes flush and stays shut.
16. Let the 10 mm flush magnet into the chair door's face, 36.1 from its hinge edge and 100 up, and the two steel cups into the table door's face at the same height, 32.2 and 40 from its hinge edge. Whichever door is open now holds flat against the other.
17. Screw a small brass hook to the table door's back, high up in the middle: the cloth bag (the tablecloth and napkins) hangs on it, in the space in front of the folded table.
18. Rout an upright finger slot in each door 5 cm in from its free edge, 26 long, 2.5 wide and 1 deep, at about 92–118 from the floor; ease its edges and oil it.
19. Open the table door flat and press down gently on its far end: it mustn't drop. If it does, check every

hinge screw is in tight before you load the cabinet.

Level the table and trim the legs

50. Open the table door and lay it back over the chair door. Open the table: pull it down, unfold the inner half's legs till they click, lower it; flip the outer half over and unfold its legs till they click.
51. Lay the level across it in both directions. Mark each leg where it should meet the floor so the top is level at 76, fold the legs, saw them off square and stick felt pads on.

Load the chairs and check

52. Lay two folded chairs on their sides in the table box's base, under the hinge rail, one behind the other: the back one first.
53. Open the chair door. Stand two folded chairs on the chair box's floor, one behind the other, and two on its shelf the same way.
54. Fold the table up, shut both doors and stand back: two plain oak doors, nothing on show.

Check before moving on: The table swings down and up without touching the box's sides, all four legs click, the top is level at 76 both ways, the catches hold it folded, and each door shuts flush with an even gap and turns back flat against the other without its far end dropping.

8 · The bar

A cupboard scribed between the cabinet and the wall, an oak counter, the ENHET frame and mirror over it.

Dining wall and bar · 1 day · You · about £120–200



Check

First: The dining cabinet in (the bar is scribed to it).


Buy

QTY	1 set
WHAT	**The bar: oak-faced ply cupboard, oak counter, hinges** The bar beside the dining cabinet: 18 mm oak-faced ply for a cupboard 42.5 × 22 × 87 on a 3 cm plinth (two ends, a floor, a shelf, a back, two doors), a 27 mm oak counter 42.5 × 22.4, two pairs of soft-close hinges, two brass knobs
WHERE	Timber merchant
£	70–120


QTY	1 set
WHAT	**Over the bar: IKEA ENHET frame, mirror, glass rail, LED** Over the bar: an IKEA ENHET wall frame with shelves, 40 × 15 × 75, anthracite, a 3 mm acrylic mirror cut to 42 × 97, a warm white LED strip
WHERE	IKEA
£	50–80

QTY	
WHAT	**Total**
WHERE	
£	**120–200**

Cut

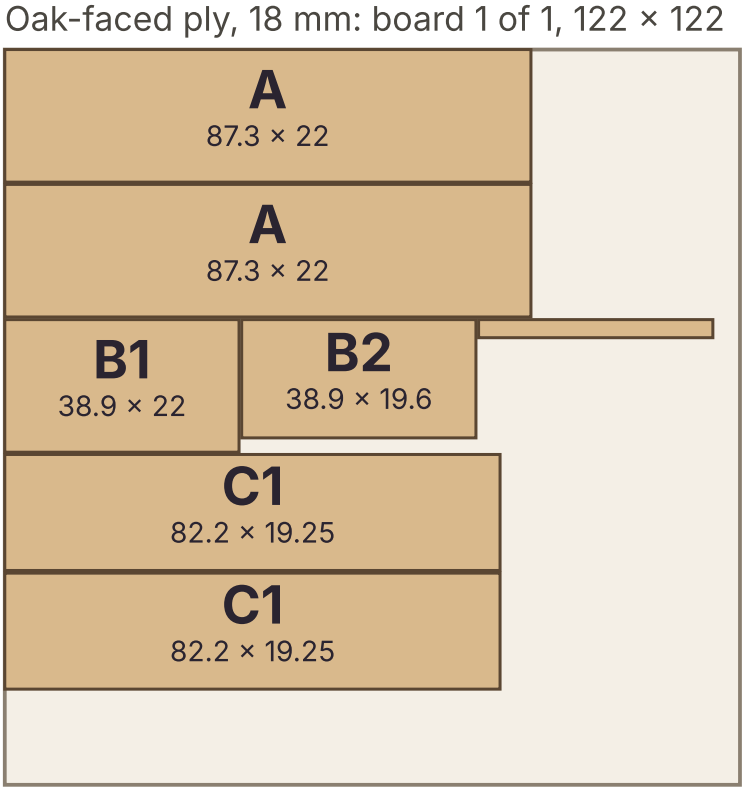

Birch ply, 6 mm: board 1 of 1, 122 × 61

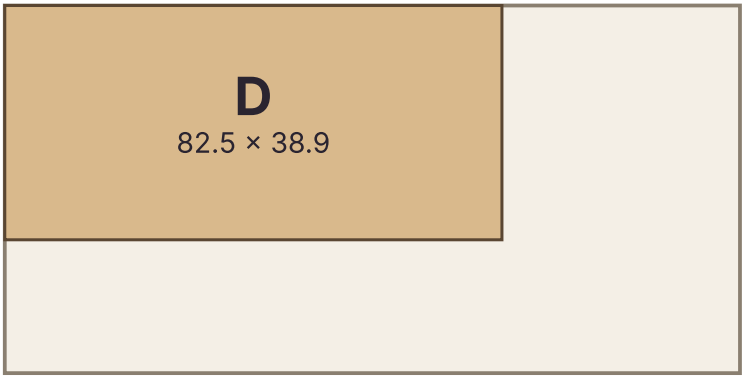

Solid oak, hardwax oil: each piece to scale



PART	**A**
WHAT	Bar ends
SIZE (CM)	87.3 × 22
QTY	2
FROM	Oak-faced ply
NOTES	Scribed to the cabinet's end and the wall

PART	**B**
WHAT	Bar floor · shelf
SIZE (CM)	38.9 × 22 · 38.9 × 19.6
QTY	1 · 1
FROM	Oak-faced ply
NOTES	The floor on a 3 plinth set back 2; the shelf's top at 40.8

PART	**C**
WHAT	Bar doors · plinth front
SIZE (CM)	82.2 × 19.25 · 38.9 × 3
QTY	2 · 1
FROM	Oak-faced ply
NOTES	Soft-close hinges; edges lipped

PART	**D**
WHAT	Bar back
SIZE (CM)	38.9 × 82.5
QTY	1
FROM	Birch ply
NOTES	Glued and pinned between the ends

PART	**E**
WHAT	Bar counter
SIZE (CM)	42.5 × 22.4 × 2.7
QTY	1
FROM	Solid oak
NOTES	From the worktop's offcut

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from these layouts.

Build

The bar beside the cabinet

1. Measure the gap at the floor, at 45 and at 90: the cabinet's end to your shelf's end, less the 10 cm gap. Drawn: 42.5 wide, 22 deep.
2. Scribe the two ends to the cabinet's end and the wall, then glue and screw the floor, the shelf and

the back between them; the plinth front set back 2.

3. Stand it, check it's level, and screw it to the wall through the back's top rail and to the cabinet's end (4 × 30, from inside).
4. Fix the oak counter on top, 2.7 thick, its front edge flush; hang the doors on soft-close hinges with a push catch (no handle to catch the table door).
5. Over it: the ENHET frame on the wall, its bottom at 112, plugged into the solid wall; the mirror behind it; the glasses on its shelves.

The sofa

9 · The record table

Two KALLAX on their backs on a ply base with castors, under a hinged oak lid.

The sofa · ½ day · You · about £170–210




Buy

QTY	1 set
WHAT	**Record table: two KALLAX, oak lid, ply base, castors** The record table: two IKEA KALLAX 42 × 42, an 18 mm oak board 60 × 120 (the lid, 90 × 50), 12 mm ply for the base, four 50 mm castors, a piano hinge cut to 83, two lid stays
WHERE	IKEA
£	170–210

QTY	
WHAT	**Total**
WHERE	
£	**170–210**

Cut

Birch ply, 12 mm: board 1 of 1, 122 × 61

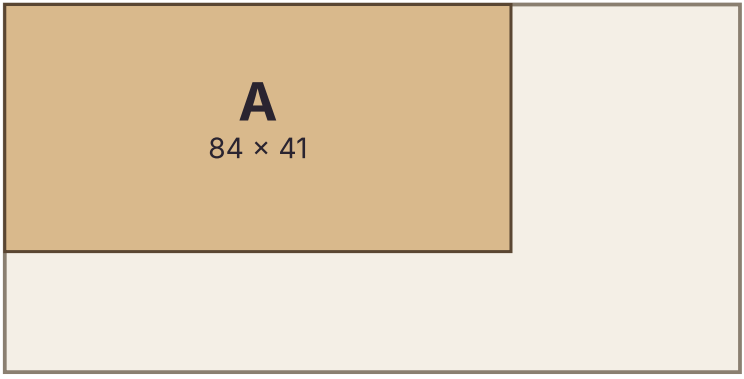

Solid oak, hardwax oil: each piece to scale



PART	**A**
WHAT	Record table base
SIZE (CM)	84 × 41
QTY	1
FROM	Birch ply
NOTES	Screwed to the two KALLAX's open backs; the castors under it

PART	**B**
WHAT	Record table lid
SIZE (CM)	90 × 50 × 1.8
QTY	1
FROM	Solid oak
NOTES	From one 18 mm oak board 60 × 120; piano hinge along its back

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from these layouts.

Build

The record table

1. Assemble the two KALLAX as IKEA shows, then lay them on their backs side by side and screw them together through the sides (4 × 30).
2. Screw the 12 mm ply base to their open backs and the four castors to the base, 3 cm in from each corner.
3. Hinge the oak lid (90 × 50) along one long side; fit both lid stays so it can't drop. Full of LPs it's about 65 kg: roll it, don't lift it.

10 · The C-table

An oak top over the sofa's open end, an upright and a foot weighed down by a steel plate.

The sofa · ½ day · You · about £8–15




Buy

QTY	1 set
WHAT	**C-table: oak top, upright and foot, steel plate** The C-table: a 400 × 200 × 6 mm steel plate (PlazCutz), four felt pads, 4 × 40 mm screws and wood glue (the oak is the Snowdon pack's second board)
WHERE	Timber merchant
£	8–15

QTY	
WHAT	**Total**
WHERE	
£	**8–15**

Cut

Solid oak, hardwax oil: each piece to scale

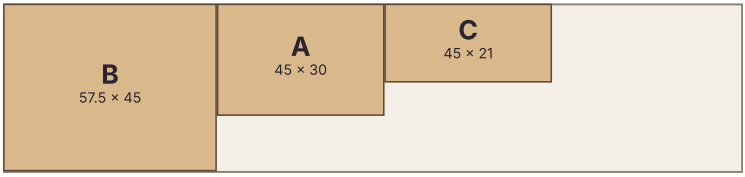

PART	**A**
WHAT	C-table top
SIZE (CM)	45 × 30 × 1.8
QTY	1
FROM	Solid oak
NOTES	From the Snowdon pack's second board; outer corners rounded

PART	**B**
WHAT	C-table upright
SIZE (CM)	45 × 57.5 × 1.8
QTY	1
FROM	Solid oak
NOTES	Screwed and plugged to the top's and the foot's outer edges

PART	**C**
WHAT	C-table foot
SIZE (CM)	45 × 21 × 1.8
QTY	1
FROM	Solid oak
NOTES	The steel plate under it

Sizes are finished sizes, length × width × thickness; a 4 mm saw cut between pieces. Ply parts can be cut by the merchant from these layouts.

Build

The C-table

1. Cut the top 45 × 30, the upright 45 × 57.5 and the foot 45 × 21 from the second 18 mm oak board; round the top's and the foot's outer corners (a 3 cm radius).
2. Glue and screw the upright to the top's outer edge with three 4 × 40 mm screws, counterbored and plugged, square to it; then the foot to the upright's bottom the same way.
3. Sand to 180 and give it two coats of hardwax oil.
4. Screw the 400 × 200 × 6 mm steel plate under the foot (four 4 × 20 mm screws through drilled holes), its back edge 1 cm in from the foot's; stick felt pads under the plate.
5. Stand it at the sofa's open end, the foot's back edge just under the seat's edge, the top 12 over the seat. A full mug on the far edge mustn't make it rock.

11 · The wall cabinets

Two glass-fronted cabinets on a rail over the sofa's corner.

The sofa · 2 h · You + a helper · about £70–100



Buy

QTY	2
WHAT	**IKEA EKET wall cabinet, 35 cube, glass door** Two IKEA EKET wall cabinets with glass doors, 35 × 35 × 35, walnut effect, with their rails, and plugs and screws for a solid wall
WHERE	IKEA
£	70–100

QTY WHAT	**Total**
WHERE £	**70–100**

Build

The wall cabinets

1. Mark the rail's line over the sofa's corner, the cabinets' bottoms at 162; detector first.
2. Screw IKEA's rail to the wall with 5 × 60 screws in brown plugs, level; hang the two EKET on it and tighten their fittings.

Window corner

12 · The alcove shelves

Two oak floating shelves on concealed brackets in the window corner.

Window corner · 2 h · You · about £70–110



Buy

QTY	2
WHAT	**Oak floating shelf, 900 × 230** Two oak floating shelves 900 × 230 with concealed brackets (B&Q Shelf Depot), for the window corner
WHERE	B&Q
£	70–110

QTY WHAT	**Total**
WHERE £	**70–110**

Build

The alcove shelves

1. Mark the tops at 182 and 212 in the window corner; detector first.
2. Fix each concealed bracket with its own screws into plugs in the solid wall, check it's level, and slide the shelf on.

The whole room

A · The network

The mesh up and the two switches, before any cables.

The whole room · 2 h · You · about £51–70

Buy

QTY	11
WHAT	**Cat6 patch lead, 0.5–2 m** Cat6 patch leads, 0.5–2 m
WHERE	DIY shop or online
£	15–20

QTY	2
WHAT	**TP-Link TL-SG108 8-port switch** TP-Link TL-SG108 8-port switch: one for the living room, one to replace the 5-port in bedroom 3
WHERE	DIY shop or online
£	36–50

QTY	
WHAT	**Total**
WHERE	
£	**51–70**


Do

Tools

- A phone with the Deco app
- A laptop for the hub's settings page

Every floor has its own Cat6 link back to bedroom 3

Deco A and Switch 1 live with the Hub 5 and the gaming PCs in bedroom 3; two spare ports can wire the projector and the music room

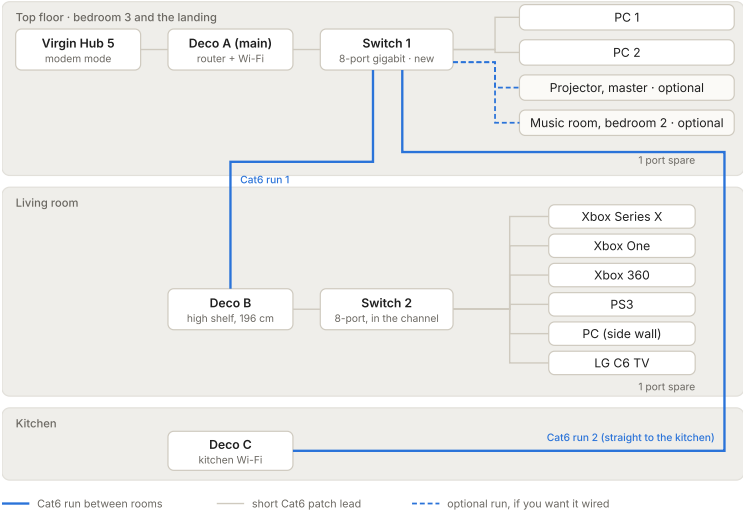

1. Unplug everything from the Hub 5. Log in at 192.168.0.1 with the password on its base, then Modem Mode → Enable Modem Mode → Apply. Its page moves to 192.168.100.1.
2. Connect a hub port to Deco A in bedroom 3 and set it up in the Deco app, reusing the old Wi-Fi name and password. If it shows no internet, try another hub port and restart the hub.
3. Plug the new 8-port Switch 1 into Deco A's other port, then the PCs into Switch 1.
4. Add Deco B in the living room and Deco C in the kitchen. For now they link over Wi-Fi.
5. Speed-test each room, and check the Xbox's network settings show NAT: Open.

Check before moving on: Internet in every room, and NAT: Open on the Xbox.

B · Cables and the socket

The Cat6 runs, the double socket and the PC's conduits: your own job, with the stop list.

The whole room · 2–3 days · You · about £165–345

Buy

QTY	2–4 runs
WHAT	**Cat6 solid copper cable** Cat6 solid pure copper, round (not CCA): two runs, four with the optional ones
WHERE	DIY shop or online
£	30–60

QTY	1 set
WHAT	**Cat6 tools: punch-down, keystones, tester, draw rods** Cat6 tools: a punch-down tool, RJ45 keystones and two surface boxes (or plugs and a crimper), a cable tester, a draw-rod set
WHERE	DIY shop or online
£	30–60

QTY	1
WHAT	**Double socket and back box** A double socket in the same finish, and a deeper back box if the old one is shallow
WHERE	DIY shop or online
£	5–15

QTY	1 set
WHAT	**Safety kit: GS38 tester, lock-off, socket tester** Electrical safety kit: a two-pole voltage tester to GS38 with its proving unit, an MCB lock-off and padlock, a plug-in socket tester
WHERE	DIY shop or online
£	45–90

QTY	1 set
WHAT	**Insulated screwdrivers, strippers, cutters** Insulated (VDE) screwdrivers, wire strippers and side cutters
WHERE	DIY shop or online
£	20–40

QTY	1 set
WHAT	**Oval conduit, 38 and 25 mm, and a 5 m C13 lead** Conduit: 38 mm and 25 mm oval, about 4 m each, two draw wires, one oak-coloured brush grommet; a 5 m C13 lead with a rewireable 13 A plug for the PC
WHERE	Timber merchant
£	15–35

QTY	1
WHAT	**Wall chaser for a day, and filler** For the chase: a wall chaser with dust extraction for a day (or a bolster chisel and club hammer), one-coat filler
WHERE	DIY shop or online
£	20–45

QTY	
WHAT	**Total**
WHERE	
£	**165–345**

Do

Tools


- Two-pole voltage tester (GS38) and its proving unit
- MCB lock-off and padlock
- Plug-in socket tester
- Insulated screwdrivers, wire strippers, side cutters
- Cat6 punch-down tool (or crimper) and a cable tester
- Draw rods
- Wall chaser with dust extraction, or a bolster and club hammer
- Cable and pipe detector
- SDS drill
- Safety glasses, ear defenders, FFP2 masks
- A helper

Fixings

- Cable clips for the Cat6 in the loft space or under the boards
- Brown wall plugs and 4 × 30 screws for the conduit clips

Power map: your 10-gang (now with the PC) plus a 6-way for the retro set

Everything modern on the left outlet, always on; the five retro consoles and the RetroTINK on the right, switched at the wall

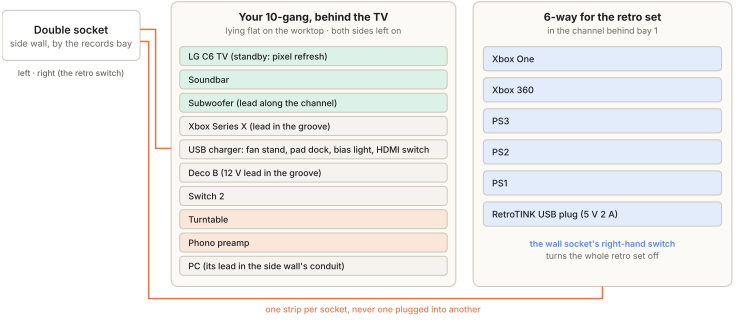

• The socket on the side wall is a single today: you swap it for a double at the same spot (like for like, your own job: *Cables and the socket*). • The retro switch moves to the wall: with the TV 2 cm from the left upright, the 10-gang's own switches can't be reached any more. • Rear speakers: your double socket behind the sofa's short side. Your lamp and the grow lights: the double behind the plant stand. • The sub plugs into the 10-gang: its lead drops through the worktop's slot to the back of bay 2. Both spot bars use existing ceiling points. • Load check: the 10-gang about 1.55 kW with everything on, PC included (850 W at most); the 6-way up to 0.8 kW. Each under 13 A (3 kW). • Check the 10-gang is surge-protected; if not, use a surge-protected one for the TV and consoles. Label both outlets.

Before you start: the stop list

1. Stop and call an electrician if: the tester shows anything live after you've isolated; the wiring is old (rubber or fabric sheath, or red and black with no earth); there are more wires than you can match to your photo; there are scorch marks or the old socket is loose or hot; the consumer unit has rewireable fuses or no RCD; or the job grows into a new circuit.
2. Nothing in this step is notifiable in England: the socket is a like-for-like swap on an existing circuit, outside a bathroom. It must still be done to the wiring regulations, which is what this routine is for.

The Cat6 runs (low voltage: no isolation needed)

3. Measure each route on the house plan and add 2–3 m: bedroom 3, across the landing, down through the airing cupboard.
4. Lift a floorboard in the airing cupboard. Drill a 20 mm hole through the plate below (detector first), and feed a draw rod down to the alcove's right corner. Tape both Cat6 cables and a spare to it and pull them through. Pull the kitchen run on down the same way, past the right upright's groove.
5. Keep the Cat6 away from mains: cross at right angles, never run alongside in the same hole. Clip it every 30 cm; never staple through it or kink it.
6. Punch each end down onto a keystone in a surface box (or crimp a plug), to the T568B

colours on both ends. Label both ends.

7. Test each run with the cable tester: all eight lights in order. Re-terminate any that don't.

Isolate the socket circuit

8. Tell everyone in the house you're working on the electrics.
9. At the consumer unit, switch off the breaker for the side-wall socket's circuit (usually a ring marked "sockets"). If the labels aren't clear, switch off the main switch instead.
10. Fit the MCB lock-off and padlock to that breaker, keep the key in your pocket, and tape a note on the board: "Working on this circuit, do not switch on".
11. Prove your voltage tester on its proving unit: it must light.
12. At the socket, with it pulled forward on its cables, test between every pair: live and neutral, live and earth, neutral and earth. No reading on any of them.
13. Prove the tester on the proving unit again. Only now is it safe to touch.

Swap the single socket for a double

14. Unscrew the old socket and ease it out. Photograph the wiring before you undo anything.

15. Check the stop list against what you see: an earth (green-and-yellow) wire present and sleeved, no scorching, the cable sheath into the box.
16. If the double needs a bigger box, chop the plaster out round the old box to the new box's outline and fit the new box with plugs and screws, the cables through its grommets.
17. Connect wire for wire: brown (or red) to L, blue (or black) to N, green-and-yellow to the earth terminal. Two cables in the old box go into the same terminals together. Strip only enough so no copper shows outside a terminal, and tighten every screw firmly.
18. Fold the cables in neatly without trapping them, and screw the socket on level.
19. Remove the lock-off, switch on, and plug the socket tester into each outlet: it should show correct wiring on both.

The PC's two conduits in the side wall

20. Mark the route from behind the PC shelf's back corner straight down to skirting height, then along behind the skirting to the base's plinth. Run the detector along it: move it if anything shows. Never chase near the socket's cables, which run straight up, down or across from it.
21. Chase two channels side by side, 5 cm apart: one for the 38 mm oval conduit (data: HDMI and Cat6), one for the 25 mm (the PC's mains lead). Vertical

only on the wall, no deeper than the conduit needs. Wear the mask: the dust is silica.

22. Take the skirting off along the route, fix both conduits with a draw wire inside each, and refit the skirting over them.
23. Fill the chase with one-coat filler, sand flush, and photograph the route with a tape measure in the shot before you paint.

Finish

24. Mark every route on the plan, and keep the photos with it.

> **Check before moving on:** The socket tester shows correct wiring on both outlets, both Cat6 runs test good end to end, and every route is photographed.

The wiring plan, before the carcass goes in

Lay the channel's trunking, the conduits and every lead below, label both ends, then build the base over them. Mains on one side of the trunking, HDMI, Cat6 and audio on the other.

Device	Leads, and where they plug in	Route
TV	mains → 10-gang (left outlet)	Behind the TV, on the worktop

Soundbar	mains → 10-gang (left outlet); HDMI eARC → TV HDMI 2	Along the worktop's back edge
Sub	mains → 10-gang (left outlet)	Down the slot behind the TV to the back of bay 2; keep its port clear
Series X	mains → 10-gang (left outlet); HDMI → TV HDMI 3	Down the groove behind the turntable-side upright
PC	mains (5 m C13) → 10-gang (left outlet); HDMI (active optical, 5 m) → TV HDMI 1; Cat6 → Switch 2	Brush grommet, then the two conduits chased into the side wall, behind the skirting to the plinth
Deco B · Switch 2	12 V → 10-gang (left outlet) · mains → 10-gang (left outlet); Cat6 from the landing	Deco B down the other upright's groove; Switch 2 on edge in the channel
Turntable · preamp	mains → 10-gang (left outlet); RCA → 3.5 mm (2 m) → soundbar AUX	The vinyl lead down the turntable-side groove
USB charger	mains → 10-gang (left outlet): fan stand, pad dock, bias light, HDMI switch	On the worktop behind the TV
Xbox One · Xbox 360 · PS3	mains → Retro 6-way (right outlet); HDMI → switch → TV HDMI 4	The channel's data side
PS2	mains → Retro 6-way (right outlet); component → RetroTINK; optical → soundbar	The channel

PS1 · RetroTINK	mains → Retro 6-way (right outlet) · USB 5 V 2 A → Retro 6-way (right outlet); SCART → RetroTINK → switch	The channel

C · Paint

Card Room Green on the walls and the skirting.

The whole room · 2–3 days · You · about £220–540

Buy

QTY	1 lot
WHAT	**Farrow & Ball Card Room Green: emulsion, eggshell, primer** Card Room Green: Estate (or Modern) Emulsion for walls, ceiling, alcove and chimney breast; Estate Eggshell for skirting and radiator (the door and its frame stay white); primer and undercoat
WHERE	DIY shop or online
£	200–500

QTY	1 set
WHAT	**Woodwork primer, sanding pads, sugar soap** Woodwork primer, sanding pads and sugar soap for the white skirting and door
WHERE	DIY shop or online
£	20–40

QTY	
WHAT	**Total**
WHERE	
£	**220–540**

Do

Tools

- Roller, tray and extension pole
- 25 and 50 mm brushes
- Dust sheets, masking tape
- Step ladder

1. Paint an A4 board in Card Room Green and look at it by day and with the LED strip on.
2. Wash the skirting and door with sugar soap, sand to a key, and prime them.
3. Two coats of emulsion on the walls, ceiling, alcove and chimney breast.
4. Two coats of eggshell in the same green on the skirting and radiator (the door and its frame stay white).
5. Leave it a week to cure before fixing anything to it.

Check before moving on: Two even coats, and no white showing at the edges or behind the radiator.

D · Lighting

The two spot bars and the LED strips.

The whole room · 1 day · You · about £288–795

Check

First: Cables done; the paint dry.

Buy

QTY	8
WHAT	**Smart colour E14 bulb** Eight smart colour E14 bulbs for the bars: WiZ Colour P45 E14, 4.9 W (Wi-Fi, no hub), or Philips Hue White and Colour E14 lustre, 5.1 W, if a WiZ shows below its shade; both under the bar's 6 W
WHERE	DIY shop or online
£	100–360

QTY	1 set
WHAT	**Smart colour LED strip, 4.5 m, with channels** Smart colour strips for the upright grooves and under the side-wall run, in the same app as the bulbs: about 4.5 m of RGB and tunable-white strip (Philips Hue Lightstrip Plus, or WiZ's strip kits, cut at their marks), three aluminium channels with opal diffusers, plug-in power on the 10-gang (no fused spur); a 6500K bias light for the TV stays plain white
WHERE	DIY shop or online
£	90–220

QTY	2
WHAT	**Dunelm Wolston 4-light spot bar** Two Dunelm Elements Wolston 4-light spotlight bars, £49 each (bulbs above)
WHERE	Dunelm
£	98–110

QTY	1
WHAT	**Smart scene button (optional)** Optional: a smart button for the bars, so a scene is one press rather than the app (WiZ remote or Hue dimmer switch)
WHERE	DIY shop or online
£	0–25

QTY	1
WHAT	**Ceiling strip channel and diffuser (later)** Later: aluminium channel and opal diffuser for the existing ceiling LED strip (optional)
WHERE	DIY shop or online
£	0–80

QTY WHAT	**Total**
WHERE £	**288–795**

Do

Tools

- Two-pole voltage tester (GS38) and its proving unit
- MCB lock-off and padlock
- Insulated screwdrivers, wire strippers
- Step ladder
- A helper to hold the bar

Fixings

- Connector block or lever connectors (if the bar's flex needs them)
- Earth sleeving, insulating tape

Before you start

1. No dimmers: smart bulbs need full power, so leave the light switches as they are and keep them on. A dimmer in front of a smart bulb makes it flicker and can damage it.
2. The same stop list as *Cables and the socket*. Here, also stop if a ceiling point has no earth (the bars need one), or the rose has more wires than you can match to your photo.

Isolate the lighting circuit

3. Tell everyone in the house you're working on the electrics.
4. At the consumer unit, switch off the breaker for the lighting circuit (usually marked "lights", 6 A). If

the labels aren't clear, switch off the main switch instead.

5. Fit the MCB lock-off and padlock to that breaker, keep the key in your pocket, and tape a note on the board: "Working on this circuit, do not switch on".
6. Prove your voltage tester on its proving unit: it must light.
7. At each switch and each ceiling point, with the cover off, test between every pair: live and neutral, live and earth, neutral and earth. No reading on any of them.
8. Prove the tester on the proving unit again. Only now is it safe to touch.

Take down the old fittings, hang the bars

9. Unscrew each old fitting's cover. Prove dead again at its terminals. Photograph the wiring, mark the switched live (the wire from the switch) with tape, then disconnect and take the fitting down.
10. Fix bar 1's mounting plate to the ceiling over the rose between the TV and the sofa, the bar running from the TV towards the window, with screws into the joist or the plate's fixings. Bar 2's goes on the pendant point by the stairs, running the same way, along the west wall.
11. Connect earth first (green-and-yellow to the bar's earth), then neutral to N and the switched live to L, in the bar's terminal block; any loop wires go

back together exactly as they were. Tighten, tuck, and fit the canopy.

12. Fit the smart colour bulbs and point every head straight down, evenly spread along the bar. Tilt one only if its pool lands in the TV's screen or someone's eyes. If a WiZ bulb shows below its shade's rim, use the shorter Hue lustre there.

Power on and test

13. Remove the lock-off and switch on, wall switches on. In the bulbs' app, add all eight, group them as bar 1 and bar 2, set warm white at about half, then save the four presets, Evening, Bright, Cosy and Film, from the lighting presets below (levels, and colours if you want them). Your red lamp's colour bulbs go in the same presets. With the table open, bar 2 sits between 45 and 55, the ceiling strip at most 40, and bar 1 down to 15 (the table rule): save that as a fourth scene, Table, if your app can't do it on its own.

The low-voltage lights (nothing to isolate)

14. Cut the smart strip at its marks into three lengths: one for each upright's groove and one for the side-wall run. Press each into its aluminium channel under the opal diffuser; take the uprights' leads down their grooves to the strip's power on the 10-gang (smart colour).

15. The side-wall run's strip: in its channel in the groove under the run's front edge, 1.5 cm back from the edge, the full 220 cm; its lead drops with the PC's through the brush grommet into the conduit, to the same power.
16. Add the strips to the app beside the bars' bulbs, so each preset sets the wall's glow too: warm white for Bright, low and coloured for Cosy and Film.
17. Clip the ceiling strip through its notches in the uprights; stick the bias light round the back of the TV on its USB port.
18. Stand your red lamp in its spot (the 3D room shows the three), its bulbs green, pink and purple, top to bottom.

Check before moving on: Every bulb answers the app, the presets recall, and from the sofa no spot head shows in the screen or shines in your eyes.

E · Connect and finish

The TV, the consoles, the sound and the turntable, wired and tidied.

The whole room · 1 day · You · about £433–725

Check

First: The media wall built.

Buy

QTY	1
WHAT	**6-way surge-protected extension** 6-way surge-protected extension for the retro set (Xbox One, 360, PS3, PS2, PS1, RetroTINK)
WHERE	Online
£	20–35

QTY	1
WHAT	**4-port USB charger** 4-port USB charger, 5 V 2 A per port (HDMI switch, fan stand, pad dock, bias light)
WHERE	DIY shop or online
£	10–20

QTY	1
WHAT	**USB plug, 5 V 2 A** USB plug, 5 V 2 A or more, for the RetroTINK on the retro 6-way
WHERE	Online
£	5–10

QTY	1 set
WHAT	**Cable kit: grommets, velcro ties, labels** Cable kit: brush grommets, velcro ties, labels
WHERE	DIY shop or online
£	20–30

QTY	1
WHAT	**Flat trunking, 2 m** Flat two-compartment trunking for the 4 cm channel behind the base, about 2 m
WHERE	DIY shop or online
£	10–20

QTY	1
WHAT	**5-in-1 4K HDMI switch** 5-in-1 4K60 HDMI switch with remote
WHERE	DIY shop or online
£	20–35

QTY	1
WHAT	**Active optical HDMI cable, 5 m** Active optical HDMI cable for the PC, certified Ultra High Speed (48 Gbps), about 5 m
WHERE	DIY shop or online
£	20–60

QTY	5 + 2
WHAT	**HDMI lead, 1–2 m, and 90° adapters** High Speed HDMI leads, 1–2 m; two 90° HDMI adapters in case the TV's plugs need them
WHERE	DIY shop or online
£	25–40

QTY	1
WHAT	**RetroTINK-6X upscaler** RetroTINK-6X CE upscaler for the PS2 and PS1 (order on restock; UK price includes VAT and import fees)
WHERE	Online
£	200–240

QTY	1
WHAT	**PS2 component cable** PS2 component video cable, good quality
WHERE	DIY shop or online
£	10–20

QTY	1
WHAT	**Optical cable, 2 m** Optical (TOSLINK) cable, 2 m, PS2 straight to the soundbar
WHERE	DIY shop or online
£	5–10

QTY	1
WHAT	**PS1 RGB SCART cable** RGB SCART cable for the PS1
WHERE	DIY shop or online
£	8–15

QTY	1
WHAT	**Replacement stylus** Replacement stylus for the turntable (exact match for its model)
WHERE	DIY shop or online
£	15–40

QTY	1
WHAT	**Phono preamp (only if needed)** External phono preamp (only if the deck has a PHONO/LINE switch)
WHERE	DIY shop or online
£	40–100

QTY	1
WHAT	**RCA to 3.5 mm lead, 2 m** RCA-to-3.5 mm lead, 2 m: preamp under the Series X shelf to the soundbar's AUX
WHERE	DIY shop or online
£	5–10


QTY	1 set
WHAT	**Isolation feet and a record brush** Isolation feet for the turntable; a carbon-fibre record brush
WHERE	DIY shop or online
£	20–40

QTY	
WHAT	**Total**
WHERE	
£	**433–725**

Do

Tools

- Phone with the Deco app
- Velcro ties

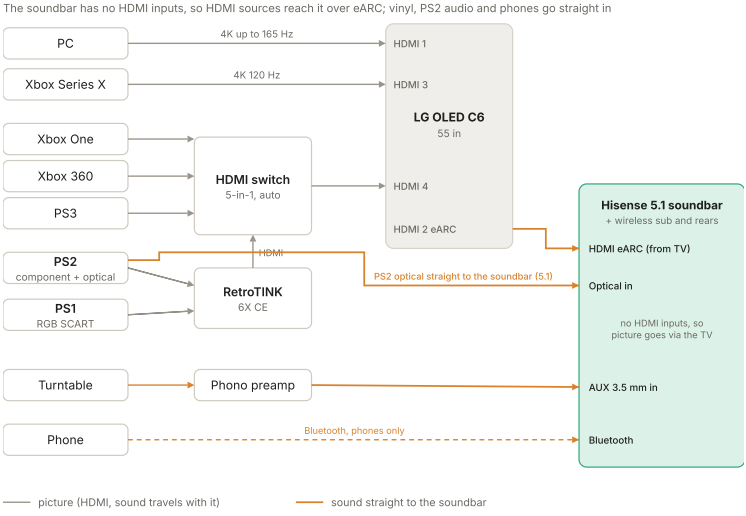

1. TV inputs: HDMI 1 the PC, HDMI 2 the soundbar (eARC), HDMI 3 the Series X, HDMI 4 the HDMI switch (Xbox One, 360, PS3, RetroTINK).
2. The PS2 by component into the RetroTINK and by optical to the soundbar; the PS1 by RGB SCART.
3. The deck to the preamp, the preamp to the soundbar's AUX; set the tracking weight; soundbar in Music mode for vinyl.
4. Network stage 2: plug each Cat6 run into its Deco, check Deco B and C show "Ethernet", and give the Series X and PC high priority.
5. Label both outlets of the double socket and each HDMI switch input; set the sub and rear levels from the sofa.

Check before moving on: Everything on the network's "done when" list, and every source plays through the soundbar.

Good to know

Six techniques you'll use

1. **Fixing into brick.** Detect, mark, drill with the SDS on hammer setting, clear the dust, push in a brown (7 mm) wall plug and drive a 5 × 60 mm screw. In plasterboard, find a stud, or use heavy-duty plasterboard fixings rated for the load.
2. **Cutting oak cleanly.** Put masking tape over the cut line, score it with a knife, cut with the good face down (circular or track saw) or up (jigsaw). Clamp a straight edge as a guide.
3. **Routing a housing** (a shallow slot a shelf sits in). Clamp a straight batten as a guide, set the bit 4 mm deep, rout, then step down to 12 mm in passes. Practise on an offcut first.
4. **A wedged through-tenon.** Mark the 6 × 2.4 cm mortise on both faces of the upright and drill most of it out with a 20 mm bit from each side. Chisel it to the line. Saw the tenon on the shelf's end. Saw a kerf down its middle, glue it, tap it home, then drive a glued oak wedge into the kerf. When it's dry, saw it flush and plane it.
5. **Dowelling.** Use a dowel jig to drill matching 10 mm holes 3 cm deep in both parts, glue the dowels, clamp.
6. **Oiling.** Sand to 180 grit, wipe off the dust, rub on a thin coat of hardwax oil, wipe off the excess after 15 minutes, let it dry overnight, give it a second

coat. Do the undersides too, so the boards don't cup.

Where beginners usually go wrong

- **Cutting the worktop to the tape instead of to a template.** Make a cardboard template of the alcove first; walls are rarely square.
- **Skipping the dry-fit.** Gluing a tenon that doesn't fit is the one mistake you can't undo.
- **Oil on one side only.** The board cups within a week.
- **Loading the LP crates before the anti-tip brackets go in.** A full crate weighs about 30 kg.
- **Folding the table up with something on it.** Clear it first, every time, and keep both turn buttons turned when it's up.

Tools

You don't need a workshop. Hire the two big tools for a weekend (a track saw and an SDS drill), or ask the timber merchant to cut the oak and ply to the cut lists: most will, for a small charge, and that removes the hardest cuts.

MEASURE AND MARK

TOOL	Tape measure (5 m) and a steel rule
WHAT IT'S FOR	every cut and every height
GET IT	Buy
ABOUT £	10–15

TOOL	Combination square
WHAT IT'S FOR	squaring lines across boards and checking corners
GET IT	Buy
ABOUT £	10–15

TOOL	Spirit level, 60 cm and 120 cm
WHAT IT'S FOR	levelling the base, the shelves and the table
GET IT	Buy
ABOUT £	15–30

TOOL	Cross-line laser level
WHAT IT'S FOR	marking all the heights round the alcove in one go
GET IT	Buy or borrow
ABOUT £	30–60

TOOL	Cable and pipe detector
WHAT IT'S FOR	checking every wall before you drill: non-negotiable
GET IT	Buy
ABOUT £	15–30

TOOL	Pencil, masking tape, a marking knife
WHAT IT'S FOR	marking cuts (tape stops oak splintering)
GET IT	Buy
ABOUT £	5

CUT

TOOL	Track saw, or a circular saw with a straight-edge guide
WHAT IT'S FOR	the worktop, the table top and the long shelves
GET IT	Hire or borrow
ABOUT £	25–40 a day

TOOL	Jigsaw
WHAT IT'S FOR	notches and the cable slot
GET IT	Buy or borrow
ABOUT £	40–70
TOOL	Tenon saw (Japanese pull saw is easiest)
WHAT IT'S FOR	the tenons and the wedge kerfs
GET IT	Buy
ABOUT £	15–25
TOOL	Sharp chisels, 6, 12 and 25 mm, and a mallet
WHAT IT'S FOR	cleaning out mortises and housings
GET IT	Buy
ABOUT £	30–50

DRILL AND FIX

TOOL	Cordless drill-driver (18 V)
WHAT IT'S FOR	pilot holes and screws; most of the job
GET IT	Buy or borrow
ABOUT £	60–120
TOOL	SDS or hammer drill with masonry bits
WHAT IT'S FOR	plugs into the brick walls and the chimney breast
GET IT	Hire or borrow
ABOUT £	15–25 a day
TOOL	Dowel jig and 10 mm brad-point bit
WHAT IT'S FOR	the dowels under the uprights and at the wrap ledge
GET IT	Buy
ABOUT £	20–35

TOOL	Clamps: four 60 cm sash or F-clamps, four small
WHAT IT'S FOR	glue-ups and holding work while you fix it
GET IT	Buy
ABOUT £	40–60

TOOL	Stud finder (if any wall is plasterboard)
WHAT IT'S FOR	finding studs to fix into
GET IT	Buy
ABOUT £	15

SHAPE AND FINISH

TOOL	Router (1/4 in is enough) with a straight bit and a guide
WHAT IT'S FOR	the housings, the LED grooves and the cable groove
GET IT	Hire, borrow or buy
ABOUT £	60–120

TOOL	Random-orbit sander, 120 and 180 grit
WHAT IT'S FOR	smoothing the oak before oiling
GET IT	Buy or borrow
ABOUT £	40–70

TOOL	Hardwax oil, lint-free cloths, a brush
WHAT IT'S FOR	finishing the oak
GET IT	Buy
ABOUT £	25–35

ELECTRICS (YOUR OWN: STEPS 3 AND 12)

TOOL	Two-pole voltage tester to GS38, with its proving unit
WHAT IT'S FOR	proving every wire dead before you touch it: non-negotiable
GET IT	Buy
ABOUT £	35–70

TOOL	MCB lock-off and a small padlock
WHAT IT'S FOR	keeping the circuit off while you work on it
GET IT	Buy
ABOUT £	8–15

TOOL	Plug-in socket tester
WHAT IT'S FOR	checking the new double socket is wired the right way round
GET IT	Buy
ABOUT £	8–15

TOOL	Insulated (VDE) screwdrivers, wire strippers, side cutters
WHAT IT'S FOR	the socket and the ceiling fittings
GET IT	Buy
ABOUT £	20–40

TOOL	Wall chaser with dust extraction (or a bolster and club hammer)
WHAT IT'S FOR	the PC's two conduits in the side wall
GET IT	Hire
ABOUT £	25–45 a day

TOOL	Cat6 punch-down tool and a cable tester
WHAT IT'S FOR	terminating and checking the Cat6 runs
GET IT	Buy
ABOUT £	20–35

SAFETY

TOOL	Safety glasses, ear defenders, FFP2 dust masks
WHAT IT'S FOR	every cut, every sanding job; oak dust is an irritant
GET IT	Buy
ABOUT £	15–25

TOOL	Work gloves; a first-aid kit
WHAT IT'S FOR	handling boards and sheet goods
GET IT	Buy
ABOUT £	10

TOOL	A sturdy step ladder
WHAT IT'S FOR	the high shelf, the ceiling and the PC shelf
GET IT	Borrow
ABOUT £	—

Also on the list

QTY	1
WHAT	**Drip trays for the plant stand** Drip trays or a waterproof mat under the pots on the plant stand's slatted tiers; if you add clip-on grow lights later, a smart plug with a schedule
WHERE	DIY shop or online
£	10–20

QTY	1 set
WHAT	**Felt pads** Felt pads under the vinyl stand's feet, so it slides out from the breast without marking the floor
WHERE	DIY shop or online
£	3–6

QTY	1
WHAT	**Storage ottoman, navy velvet, 76 × 76 (ISTOOLS)** A storage ottoman in navy velvet, about 76 × 76 × 45 with a lift-off padded lid, in place of your blue cord one: ISTOOLS Large Velvet Storage Ottoman, 76 × 76 (check its height and price on the listing), or Dunelm's Square Opulent Velvet Storage Footstool in navy, 62 square, if you'd like it smaller
WHERE	Dunelm
£	140–310

QTY	1
WHAT	**Rug, about 230 × 160** A rug about 230 × 160 in front of the sofa: cream with deep blue, rust and ochre goes with the green, the oak and the blue sofa (the plan draws one as a guide)
WHERE	Timber merchant
£	120–300

QTY	1 set
WHAT	**Step drawers: ply boxes, oak fronts, runners** Drawers in the bottom three steps: three drawer boxes in 12 mm ply, 51 × 14.5 fronts in oak, three pairs of 350 mm runners, bearers under the treads
WHERE	Timber merchant
£	180–320

QTY	1
WHAT	**Blanket basket, water hyacinth, 59 × 51 × 29** The blanket basket at the sofa's open end: Dibor's Lakelyn water hyacinth lined basket, large, 59 × 51 × 29
WHERE	DIY shop or online
£	36–42

QTY	
WHAT	**Total**
WHERE	
£	**489–998**

For the timber merchant

Every part, by what it's cut from. The code is the piece's number and the part's letter in it. Finished sizes in cm, length × width × thickness.

Solid oak, hardwax oil

CODE	**1A**
PART	Face frame
SIZE (CM)	186 × 73 overall, 2 thick, stiles about 5 wide
QTY	1 set

CODE	**1B**
PART	Drawer fronts
SIZE (CM)	game drawer 56.8 × 6.5 × 2 · plinth drawer 54 × 6 × 2
QTY	1 · 1

CODE	**1C**
PART	LP crate lips · slim drawer lips
SIZE (CM)	36.3 × 5 × 1.5 · 16.5 × 5 × 1.5
QTY	2 · 3

CODE	**1D**
PART	Follower blocks · Xbox One lift block
SIZE (CM)	19 × 12 × 2 · 15 × 12 × 2
QTY	2 · 1

CODE	**2A**
PART	Worktop
SIZE (CM)	186 × 46 × 3
QTY	1

CODE	**3A**
PART	Uprights
SIZE (CM)	159 × 30 × 4.5
QTY	2

CODE	**3B**
PART	High shelf, long length
SIZE (CM)	128.9 × 30 × 4
QTY	1

CODE	**3C**
PART	High shelf, short length
SIZE (CM)	51.7 × 30 × 4
QTY	1

CODE	**3D**
PART	Series X shelf
SIZE (CM)	55 × 30 × 4
QTY	1

CODE	**3E**
PART	Record ledge
SIZE (CM)	128.9 × 7 × 2.4
QTY	1

CODE	**3F**
PART	Ledge lips
SIZE (CM)	128.9 × 1.5 × 0.9 · 126 × 1.5 × 0.9
QTY	1 · 1

CODE	**3G**
PART	“Now playing” ledge
SIZE (CM)	105.5 × 7 × 2.4, lip 1.5
QTY	1

CODE	**3H**
PART	Wedges · pegs · dowels
SIZE (CM)	6 × 3, tapering · 10 mm dowel, 5 long · 10 mm dowel
QTY	2 + spares · 6 + 6 · 8
CODE	**4A**
PART	Side-wall run
SIZE (CM)	220 long × 7 sweeping to 28 × 4, from one 225 × 30 × 4 board
QTY	1
CODE	**4B**
PART	Keyboard tray housing
SIZE (CM)	70 × 28 × 7, sides 7 × 2
QTY	1
CODE	**5B**
PART	Case sides
SIZE (CM)	85 × 12 × 2
QTY	2
CODE	**5C**
PART	Case top and bottom
SIZE (CM)	86 × 12 × 2
QTY	2
CODE	**6A**
PART	Door shelf
SIZE (CM)	91 × 27 × 2.7
QTY	1
CODE	**7A**
PART	Table halves, centres
SIZE (CM)	83.5 × 90 × 2.7
QTY	2

CODE	**7B**
PART	Breadboard ends
SIZE (CM)	90 × 7 × 2.7
QTY	4

CODE	**7C**
PART	Apron rails
SIZE (CM)	outer half 86.5 and 78 · inner half 84.9 and 78, all × 4.6 × 2
QTY	2 + 2 · 2 + 2

CODE	**7D**
PART	Table legs
SIZE (CM)	6.5 × 4.5, cut 70 long
QTY	4

CODE	**7E**
PART	Hinge rail
SIZE (CM)	91 × 16.8 × 7
QTY	1

CODE	**7F**
PART	Door stops (the cabinet)
SIZE (CM)	8 × 2.5 × 1.2
QTY	2

CODE	**8E**
PART	Bar counter
SIZE (CM)	42.5 × 22.4 × 2.7
QTY	1

CODE	**9B**
PART	Record table lid
SIZE (CM)	90 × 50 × 1.8
QTY	1

CODE	**10A**
PART	C-table top
SIZE (CM)	45 × 30 × 1.8
QTY	1

CODE	**10B**
PART	C-table upright
SIZE (CM)	45 × 57.5 × 1.8
QTY	1

CODE	**10C**
PART	C-table foot
SIZE (CM)	45 × 21 × 1.8
QTY	1

Birch ply, 18 mm

CODE	**1E**
PART	Bay 3 sides
SIZE (CM)	73 × 40
QTY	2

CODE	**1F**
PART	Bay 3 top and bottom
SIZE (CM)	56.4 × 40
QTY	2

CODE	**1G**
PART	Plinth rails
SIZE (CM)	120 × 9
QTY	2

CODE	**1H**
PART	Plinth cross-pieces
SIZE (CM)	34.4 × 9
QTY	3

Birch ply, 12 mm

CODE	**1I**
PART	Game drawer sides
SIZE (CM)	35 × 15.5
QTY	2

CODE	**1J**
PART	Game drawer back · front panel
SIZE (CM)	51.9 × 15.5 · 51.9 × 6
QTY	1 · 1

CODE	**1K**
PART	LP crate bases · slim drawer bases
SIZE (CM)	34.9 × 40 · 15.3 × 40
QTY	2 · 3

CODE	**1L**
PART	Bay 3 divider
SIZE (CM)	69.4 × 38
QTY	1

CODE	**1M**
PART	Plinth drawer sides · ends
SIZE (CM)	34 × 4.4 · 49.6 × 4.4
QTY	2 · 2

CODE	**1N**
PART	Bay 2 divider · part shelf
SIZE (CM)	35.3 × 38 · 32.2 × 36
QTY	1 · 1

CODE	**4C**
PART	Keyboard tray
SIZE (CM)	54 × 26
QTY	1

CODE	**9A**
PART	Record table base
SIZE (CM)	84 × 41
QTY	1

Birch ply, 9 mm

CODE	**1O**
PART	Game drawer base
SIZE (CM)	52.5 × 34.4
QTY	1

CODE	**1P**
PART	LP crate sides · ends
SIZE (CM)	40 × 8 · 33.1 × 8
QTY	4 · 4

Birch ply, 6 mm

CODE	**1Q**
PART	Game drawer cross divider
SIZE (CM)	51.9 × 9
QTY	1

CODE	**1R**
PART	Game drawer bin walls · bin floors
SIZE (CM)	12.6 × 9 · 16 × 12.6
QTY	2 · 2

CODE	**1S**
PART	Plinth drawer base
SIZE (CM)	52 × 34
QTY	1

CODE	**1T**
PART	Slim drawer sides · backs and fronts
SIZE (CM)	40 × 10 · 14.1 × 10
QTY	6 · 6

CODE	**7K**
PART	Cabinet backs
SIZE (CM)	91 · 49, both × 184.2
QTY	1 · 1

CODE	**8D**
PART	Bar back
SIZE (CM)	38.9 × 82.5
QTY	1

Oak-faced ply, 6 mm

CODE	**5A**
PART	Glass case back
SIZE (CM)	86 × 81
QTY	1

Oak-faced ply, 18 mm (the dining cabinet and the bar)

CODE	**7G**
PART	Cabinet ends
SIZE (CM)	189 × 23.4
QTY	4

CODE	**7H**
PART	Cabinet tops · floors
SIZE (CM)	91 × 23.4 · 49 × 23.4
QTY	2 · 2

CODE	**7I**
PART	Cabinet linen shelf · chair shelf
SIZE (CM)	91 × 16.8 · 49 × 20.8
QTY	1 · 1

CODE	**7J**
PART	Cabinet doors
SIZE (CM)	90.5 · 48.5, both × 183.8
QTY	1 · 1

CODE	**8A**
PART	Bar ends
SIZE (CM)	87.3 × 22
QTY	2

CODE	**8B**
PART	Bar floor · shelf
SIZE (CM)	38.9 × 22 · 38.9 × 19.6
QTY	1 · 1

CODE	**8C**
PART	Bar doors · plinth front
SIZE (CM)	82.2 × 19.25 · 38.9 × 3
QTY	2 · 1

Sheets to buy, nested

Every ply part laid out on the fewest boards (a full sheet is 244 × 122; half and quarter sheets where a full one would be mostly offcut), a 4 mm saw cut between parts, grain along the long side. Hand these to the merchant with the cutting list.

SHEET	Oak-faced ply, 18 mm (the dining cabinet and the bar)
BOARDS (CM)	3 × 244 × 122
PARTS	19
USED	68%
BIGGEST OFFCUTS, AND WHAT FOR	244 × 38.95: a spare shelf or a drawer box; 152.6 × 16.8: drawer sides, cleats or jigs
SHEET	Oak-faced ply, 6 mm
BOARDS (CM)	1 × 122 × 122
PARTS	1
USED	47%
BIGGEST OFFCUTS, AND WHAT FOR	122 × 40.6: a spare shelf or a drawer box; 35.6 × 81: a spare shelf or a drawer box
SHEET	Birch ply, 18 mm
BOARDS (CM)	3 × 122 × 61
PARTS	9
USED	60%
BIGGEST OFFCUTS, AND WHAT FOR	122 × 20.6: drawer sides, cleats or jigs; 122 × 11.2: packers, shims and test cuts
SHEET	Birch ply, 12 mm
BOARDS (CM)	1 × 244 × 122
PARTS	18
USED	59%
BIGGEST OFFCUTS, AND WHAT FOR	244 × 24.6: drawer sides, cleats or jigs; 25.1 × 34.9: packers, shims and test cuts
SHEET	Birch ply, 9 mm
BOARDS (CM)	1 × 122 × 61
PARTS	9
USED	56%
BIGGEST OFFCUTS, AND WHAT FOR	28.7 × 34.4: packers, shims and test cuts; 88.5 × 8: packers, shims and test cuts

SHEET	Birch ply, 6 mm
BOARDS (CM)	2 × 244 × 122
PARTS	21
USED	59%
BIGGEST OFFCUTS, AND WHAT FOR	244 × 33.3: a spare shelf or a drawer box; 161.1 × 38.9: a spare shelf or a drawer box