Media Wall & Dining Wall: Build Guide

Version 41 · Oct 21, 2026 · for Emma and Dave · sizes in cm



For anyone who's hung shelves and built flat-pack but not cut a joint. Each step: what to do, what to check, and how long it takes. Steps 3 and 12 are the electrics, with the point to stop and call an electrician. Finished sizes, in cm.

Before you start: five rules

- **Check every wall before you drill.** Run the cable and pipe detector over the spot, and never drill straight above, below or beside a socket or switch: cables run vertically and horizontally from them.
- **Measure twice, mark once, cut once.** Walls are rarely square: measure the alcove at the floor, 76, 134, 155, 196 and the ceiling, and cut to the smallest.
- **Two people for anything over 15 kg**: the uprights, the worktop, the table top, the TV.
- **The electrics are yours, within limits.** Swapping the socket for a double and the two ceiling fittings are like-for-like jobs, not notifiable under Part P in England, as long as they meet the wiring regulations. Isolate, lock off and prove dead every time. Anything new (a new circuit, the consumer unit, work by a bath or shower) is an electrician's, and so is anything on the stop list in section 9.
- **Dry-fit everything** (assemble without glue or screws) before the final fix.

Measuring sheet: 11 things to check before you buy

One session with a tape: measure each, write it in, send us the page.

What	We drew	Why it matters	Yours (cm)
The TV's remote receiver, bottom centre of the screen's frame The TV between the uprights	soundbar top 82, in front of the stand's foot	0.6 over the frame's edge: sit the bar on the worktop 2 cm proud of the stand's foot, not against it, so the remote's beam from the sofa clears it; if a button stutters, pair LG's Magic Remote (it talks to the TV by radio)	

The TV's HDMI plugs, with the screen 2.15 from the corner post The TV between the uprights	behind the screen	plugs stay behind the panel; if a stiff lead pushes out, use 90° HDMI adapters	
Xbox 360, original, + RetroTINK-6X CE Bay 1, Xbox (BESTÅ frame on the 9 cm plinth)	16 tall row	7.7 above; 25.9 beside it for the RetroTINK: measure it when it arrives	
Vibration: the consoles and the deck share the base with the sub Bay 2, PlayStation and the sub (BESTÅ frame on the plinth)	the sub on its riser, clear of the divider and the frame; the deck on isolation feet	the 360 is a bay away, the PS2 and PS1 a divider away: play a disc game and a record at film volume; if anything skips, turn the sub down for that source, or put it back under the dining wall	
The side-wall socket beside the slim drawers Bay 3: the LP crates and the slim game column	the middle slim drawer pulled out passes 5.6 from the wall	the plugs must stand less than that off the wall: flat (angled) plugs, leads down; measure yours	
The two doors and their hinges The compact dining cabinet (the plan)	a full-height stainless piano hinge each, screwed every 10 cm into a solid oak edge	the hinge's load isn't published: hang the table door, open it flat, and check its far end doesn't drop before you load the cabinet	
Stair side: the stair's foot and the door The compact dining cabinet (the plan)	the stair box's face at -41; the door's edge reaches -44	seated, the backs reach 8.7 into the door's swing: keep the door shut while you eat. Measure a chair's depth: 52.3 or less and the door clears	
Its stairs end Your black shelf on the stairs wall (a fixed 10 cm gap)	an earlier look at your photo put it about 41 past the stair box	35 past it: if you measure 41 there, the shelf is about 194 long; the gap stays 10	
The shelf over the door Your picks (in the plan)	the door's 198 and a 7 architrave	11.3 over two 15-high boxes; check your architrave	
The step drawers Your picks (in the plan)	a riser 19.5 under a 2.2 tread, the stairs 59 wide	each tread needs a bearer under it once its riser comes out: a joiner's job, or build them into the new stairs	
Its height The storage ottoman (replaces your blue cord one)	the sofa's seat about 45	a footrest level with the seat; ISTOOLS don't publish it: check	

Buy and adapt first

For each piece: the cheap thing to buy, and a build only where nothing made fits.

Piece	How	What
Media wall, bays 1–2	Buy and adapt	Two IKEA BESTÅ frames[5] on a ply plinth, behind an oak face frame
Media wall, bay 3	Build	No frame takes a 33 cm LP trough beside a slim game column: birch ply, cut list below
Uprights, shelves, worktop	Build	Solid oak scribed to your alcove; the merchant can cut it

Dining cabinet and table	Build	Nothing made folds a table for six round six chairs; the nearest, a fold-down wall table[45], opens to 80 × 138 and holds no chairs
The bar beside the cabinet	Build, then buy	The cupboard is scribed to a 42.5 × 22 gap; over it, an IKEA ENHET frame[90]; the counter from the worktop's offcut
Glass case	Buy and adapt	Toughened glass cut to size[64]; the frame from the oak offcuts
Record table	Buy and adapt	Two IKEA KALLAX[80] on their backs, an oak lid, castors
Alcove shelves	Buy	Two oak floating shelves[96]
Wall cabinets	Buy	Two IKEA EKET[95]
Shelf over the door	Buy and adapt	Two IKEA KUGGIS boxes[77]; the shelf from the worktop's offcut
Blanket basket · ottoman	Buy	Dibor's Lakelyn[79] · the ISTOOLS ottoman[68]
Step drawers	Build (a joiner)	Each tread needs a bearer once its riser is cut[101]

Tools

You don't need a workshop. Hire the two big tools for a weekend (a track saw and an SDS drill), or ask the timber merchant to cut the oak and ply to the cut lists: most will, for a small charge, and that removes the hardest cuts.

Tool	What it's for	Get it	About £
MEASURE AND MARK			
Tape measure (5 m) and a steel rule	every cut and every height	Buy	10–15
Combination square	squaring lines across boards and checking corners	Buy	10–15
Spirit level, 60 cm and 120 cm	levelling the base, the shelves and the table	Buy	15–30
Cross-line laser level	marking all the heights round the alcove in one go	Buy or borrow	30–60
Cable and pipe detector	checking every wall before you drill: non-negotiable	Buy	15–30
Pencil, masking tape, a marking knife	marking cuts (tape stops oak splintering)	Buy	5
CUT			
Track saw, or a circular saw with a straight-edge guide	the worktop, the table top and the long shelves	Hire or borrow	25–40 a day
Jigsaw	notches and the cable slot	Buy or borrow	40–70
Tenon saw (Japanese pull saw is easiest)	the tenons and the wedge kerfs	Buy	15–25
Sharp chisels, 6, 12 and 25 mm, and a mallet	cleaning out mortises and housings	Buy	30–50
DRILL AND FIX			
Cordless drill-driver (18 V)	pilot holes and screws; most of the job	Buy or borrow	60–120
SDS or hammer drill with masonry bits	plugs into the brick walls and the chimney breast	Hire or borrow	15–25 a day
Dowel jig and 10 mm brad-point bit	the dowels under the uprights and at the wrap ledge	Buy	20–35

Clamps: four 60 cm sash or F-clamps, four small	glue-ups and holding work while you fix it	Buy	40–60
Stud finder (if any wall is plasterboard)	finding studs to fix into	Buy	15
SHAPE AND FINISH			
Router (1/4 in is enough) with a straight bit and a guide	the housings, the LED grooves and the cable groove	Hire, borrow or buy	60–120
Random-orbit sander, 120 and 180 grit	smoothing the oak before oiling	Buy or borrow	40–70
Hardwax oil, lint-free cloths, a brush	finishing the oak	Buy	25–35
ELECTRICS (YOUR OWN: STEPS 3 AND 12)			
Two-pole voltage tester to GS38, with its proving unit	proving every wire dead before you touch it: non-negotiable	Buy	35–70
MCB lock-off and a small padlock	keeping the circuit off while you work on it	Buy	8–15
Plug-in socket tester	checking the new double socket is wired the right way round	Buy	8–15
Insulated (VDE) screwdrivers, wire strippers, side cutters	the socket and the ceiling fittings	Buy	20–40
Wall chaser with dust extraction (or a bolster and club hammer)	the PC's two conduits in the side wall	Hire	25–45 a day
Cat6 punch-down tool and a cable tester	terminating and checking the Cat6 runs	Buy	20–35
SAFETY			
Safety glasses, ear defenders, FFP2 dust masks	every cut, every sanding job; oak dust is an irritant	Buy	15–25
Work gloves; a first-aid kit	handling boards and sheet goods	Buy	10
A sturdy step ladder	the high shelf, the ceiling and the PC shelf	Borrow	—

Six techniques you'll use

1. **Fixing into brick.** Detect, mark, drill with the SDS on hammer setting, clear the dust, push in a brown (7 mm) wall plug and drive a 5 × 60 mm screw. In plasterboard, find a stud, or use heavy-duty plasterboard fixings rated for the load.
2. **Cutting oak cleanly.** Put masking tape over the cut line, score it with a knife, cut with the good face down (circular or track saw) or up (jigsaw). Clamp a straight edge as a guide.
3. **Routing a housing** (a shallow slot a shelf sits in). Clamp a straight batten as a guide, set the bit 4 mm deep, rout, then step down to 12 mm in passes. Practise on an offcut first.
4. **A wedged through-tenon.** Mark the 6 × 2.4 cm mortise on both faces of the upright and drill most of it out with a 20 mm bit from each side. Chisel it to the line. Saw the tenon on the shelf's end. Saw a kerf down its middle, glue it, tap it home, then drive a glued oak wedge into the kerf. When it's dry, saw it flush and plane it.
5. **Dowelling.** Use a dowel jig to drill matching 10 mm holes 3 cm deep in both parts, glue the dowels, clamp.
6. **Oiling.** Sand to 180 grit, wipe off the dust, rub on a thin coat of hardwax oil, wipe off the excess after 15 minutes, let it dry overnight, give it a second coat. Do the undersides too, so the boards don't cup.

The order of work

#	Stage	What to do	Check before moving on	Time

1	PREP **Measure and count**	The alcove's width at the floor, 76, 134, 155 and 196 cm and at the ceiling: cut everything to the smallest. The floor's level across the alcove, and the chimney breast's flatness with a long level. The door's swing, and the sofa: overall width, depth with the return, back height. Count the LPs and games (PS2, Xbox 360, Xbox One), and measure ten cases of each. Make a cardboard template of the alcove at worktop height: walls are rarely square.	Every figure within 1 cm of the plan. If not, send the numbers and the drawings are redone first.	2 h
2	NETWORK **Network, stage 1**	Unplug everything from the Hub 5. Log in at 192.168.0.1 with the password on its base, then Modem Mode → Enable Modem Mode → Apply. Its page moves to 192.168.100.1. Connect a hub port to Deco A in bedroom 3 and set it up in the Deco app, reusing the old Wi-Fi name and password. If it shows no internet, try another hub port and restart the hub. Plug the new 8-port Switch 1 into Deco A's other port, then the PCs into Switch 1. Add Deco B in the living room and Deco C in the kitchen. For now they link over Wi-Fi. Speed-test each room, and check the Xbox's network settings show NAT: Open.	Internet in every room, and NAT: Open on the Xbox.	2 h
3	POWER & CABLES NETWORK **Cables and the socket, your own job**	The Cat6: two runs from bedroom 3, across the landing and down through the airing cupboard, one to the alcove's right corner for Deco B, one on to the kitchen for Deco C, a spare pulled with each; the optional runs to the master and bedroom 2 if you want them. Low voltage: no rules beyond care. The socket: swap the single on the side wall for a double at the same spot, with the circuit isolated, locked off and proved dead (the safe routine is in this step). Like for like, so not notifiable. The PC's two conduits: chase them into the solid side wall from behind the PC shelf to skirting height and behind the skirting to the base, 38 mm oval for the HDMI and Cat6, 25 mm for the PC's mains lead, a draw wire in each. Make good. Stop and call an electrician if anything on the stop list turns up (old wiring, no earth, a reading where there should be none, anything you can't match). Before you fill a chase, photograph it with a tape measure in shot, and mark every route on the plan.	The socket tester shows correct wiring on both outlets, both Cat6 runs test good end to end, and every route is photographed.	2–3 days
4	PAINT **Paint**	Paint an A4 board in Card Room Green and look at it by day and with the LED strip on. Wash the skirting and door with sugar soap, sand to a key, and prime them. Two coats of emulsion on the walls, ceiling, alcove and chimney breast. Two coats of eggshell in the same green on the skirting and radiator (the door and its frame stay white). Leave it a week to cure before fixing anything to it.	Two even coats, and no white showing at the edges or behind the radiator.	2–3 days, then a week to cure
5	PREP **Mark the heights**	With the laser level: 73 and 76 for the worktop, 130 and 134 for the Series X shelf, 153 and 155.4 for the ledges, 192 and 196 for the high shelf. The uprights at 50.5–55 and 181.5–186 cm from the side wall. On the breast: the “now playing” ledge's top at 104 and the framed LPs' bottom edges at 165, centred. Run the cable detector along every line you will drill, and mark anything it finds.	Every line level end to end, and the uprights' lines plumb.	1 h

6	MEDIA WALL **Build the base**	Order the oak and ply from the cutting list (below the steps), a week or two ahead: most merchants cut to size for a small charge. Build the 9 cm plinth for bays 1–2, with the open bay for the hidden drawer under bay 2. Level it with shims. Assemble the two BESTÅ frames with their back panels left off and stand them on the plinth. Build bay 3 from 18 mm ply, 60 × 40 × 73, and bolt it to bay 2. Screw the 4 cm spacer blocks to the wall, push the base against them and fit the anti-tip brackets. Lay the flat two-compartment trunking in the channel behind (mains one side, data the other) and run the cables in.	The tops level within 1 mm across 186 cm, and nothing rocks.	1 day
7	MEDIA WALL **Fit the worktop**	Cut the worktop from the 300 × 62 oak board, using the template from step 1; keep the offcut. Scribe the ends to the walls; cut the TV slot over the channel and the grommet hole behind the deck. Oil it on every face, undersides and cut ends included. Screw it up through the frame tops in slotted holes, so the oak can move.	Tight to both walls, and the slot sits over the channel.	½ day
8	MEDIA WALL **Fit out the base**	Shelves on their pins at the fit-proof heights for the consoles. The game drawer in bay 1: runners on the frame's sides, then the box (its cut list is with this step). Bay 3: the 12 mm divider first (17.8 cm in from the left side), then the LP crates' runners at 2.3 and 37.0 cm on the right and the three slim drawers' at 2.3, 25.1 and 47.9 on the left, then each box. The hidden plinth drawer under bay 2. Bay 2: the divider and the part shelf, then the sub on its riser, its front flush with the face frame.	Every drawer runs smoothly, the two crates clear each other by 2 cm, and the slim drawers by 2.8.	1–2 days
9	MEDIA WALL **Uprights and shelves**	On the bench: cut the housings and the mortises in both uprights, and the LED groove and cable groove. Dry-fit each upright with its shelves before any glue. Lay Deco B's leads in the groove behind the right upright. Stand the uprights on their dowels and fix the concealed brackets to the back wall. Fit the high shelf and the ledge, then the Series X shelf: wedge its tenons, and peg the housings. On the chimney breast: the “now playing” ledge, its top at 104, on two concealed brackets, 6 cm in from each side of the breast (with the table by the stairs).	Uprights plumb, shelves level, the TV slides in with 2 cm each side, and the “now playing” ledge is level with an LP standing on it.	2–3 days
10	MEDIA WALL **The side-wall run and the PC end**	Cut the run from its 225 × 30 × 4 board: mark the front edge from the full-size template (7 cm deep along the LPs, sweeping out to 28 under the PC, a 5 cm radius on the end), jigsaw just outside the line and rout to it with a bearing-guided bit; rout the LED groove under the front edge. Screw the oak cleat along the side wall and fit the concealed brackets for the PC end. Lift the run on, its alcove end in line with the uprights' fronts, and screw it down to the cleat from above (plugged). Screw the keyboard tray's housing under it and fit its runners. Fit the brush grommet and pull the PC's leads down the two chased conduits with the draw wires: data in the big one, its mains lead in the small one. The PC's extras: screw the powered USB hub under the run's front edge below the PC, fit the remote power button's card and stick its button under the wrap ledge by the sofa, and lay the magnetic filter on the top exhaust.	One level line with the ledge over the TV, the sweep runs smooth with no flat spots, and the PC end holds your weight leaning on it.	1 day

11	DINING TABLE **The dining cabinet: the table and the six chairs in one**	Check the gap under your shelf (191 or more), mark the two boxes' footprint and oil every oak part first. Build the two boxes on the floor: the ends, the tops and floors, the 6 mm backs to square them, the linen shelf in the table box and the chair shelf in the chair box, both set back behind the doors. Stand them on their marks, screw them to each other, shim them level and fix them to your solid wall at the top; fit the oak hinge rail across the table box at 73.3, set back for the pads. On the bench: the two halves with their breadboard ends, the apron frames, the legs on their folding brackets, and the three flip-top hinges at the joint. Hang the table on its piano hinge and fit its catches and finger pull; hang the two doors on their piano hinges, then the stops, the magnet and the six pad hooks; level the table and trim the legs; load the six chairs and hang their pads.	The table swings down and up without touching the box's sides, all four legs click, the top is level at 76 both ways, the catches hold it folded, and each door shuts flush with an even gap and turns back flat against the other without its far end dropping.	3–4 days
12	LIGHTING **Lighting: smart spot bars and the LED strips, your own job**	Isolate the lighting circuit at the consumer unit, lock it off and prove it dead at each ceiling point. Take down the two old fittings. The light switches stay as they are: the smart bulbs need full power, so no dimmers. Hang bar 1 on the rose between the TV and the sofa and bar 2 on the pendant point by the stairs, earth first, both running from the TV towards the window; fit the smart colour bulbs and point every head straight down, evenly spread; tilt one only if its pool lands badly. The LED strips in the uprights' grooves and under the side-wall shelf on their plug-in driver (on the 10-gang), the ceiling strip through its notches, the bias light on the TV; your red lamp in its spot. Power back on, switches on: add the eight bulbs to the app, group them as bar 1 and bar 2, and save the three presets (Paint and light): Bright, Cosy and Film. With the table open, bar 2 comes up to 80 and bar 1 down to 15 (the table rule).	Every bulb answers the app, the presets recall, and from the sofa no spot head shows in the screen or shines in your eyes.	1 day
13	AV NETWORK **Connect and finish**	TV inputs: HDMI 1 the PC, HDMI 2 the soundbar (eARC), HDMI 3 the Series X, HDMI 4 the HDMI switch (Xbox One, 360, PS3, RetroTINK). The PS2 by component into the RetroTINK and by optical to the soundbar; the PS1 by RGB SCART. The deck to the preamp, the preamp to the soundbar's AUX; set the tracking weight; soundbar in Music mode for vinyl. Network stage 2: plug each Cat6 run into its Deco, check Deco B and C show "Ethernet", and give the Series X and PC high priority. Label both outlets of the double socket and each HDMI switch input; set the sub and rear levels from the sofa.	Everything on the network's "done when" list, and every source plays through the soundbar.	1 day
14	YOUR PICKS **Your picks: the bar, the record table, the shelves and cabinets**	The bar: scribe its ply cupboard (42.5 × 22 × 87.3 on a 3 plinth) between the cabinet and your shelf's end, keeping the 10 cm gap clear; fix it to the wall and the cabinet, then the counter and the ENHET frame over it, its bottom at 112. The record table: screw the two KALLAX together on their backs, the 12 mm ply base and four castors under them, the oak lid (90 × 50) on two hinges with two lid stays. The wall cabinets: the two EKET on IKEA's rail over the sofa's corner, bottoms at 162, the rail into the solid wall. The alcove shelves: two oak floating shelves 90 × 23, tops at 182 and 212, brackets into the solid wall. Over the hall door: the oak shelf 91 × 27, top at 208.7, clear of the architrave; two KUGGIS boxes on it and two on your black shelf. The step drawers: with the new stairs, by the joiner (a bearer under each tread).	Each piece level and fixed; the bar's door clears the open table door; the record table rolls and its lid stays up; the 10 cm gap is clear.	1–2 days

The wiring plan, before the carcass goes in

Lay the channel's trunking, the conduits and every lead below, label both ends, then build the base over them. Mains on one side of the trunking, HDMI, Cat6 and audio on the other.

Device	Leads, and where they plug in	Route
TV	mains → 10-gang (left outlet)	Behind the TV, on the worktop
Soundbar	mains → 10-gang (left outlet); HDMI eARC → TV HDMI 2	Along the worktop's back edge
Sub	mains → 10-gang (left outlet)	Down the slot behind the TV to the back of bay 2; keep its port clear
Series X	mains → 10-gang (left outlet); HDMI → TV HDMI 3	Down the groove behind the turntable-side upright
PC	mains (5 m C13) → 10-gang (left outlet); HDMI (active optical, 5 m) → TV HDMI 1; Cat6 → Switch 2	Brush grommet, then the two conduits chased into the side wall, behind the skirting to the plinth
Deco B · Switch 2	12 V → 10-gang (left outlet) · mains → 10-gang (left outlet); Cat6 from the landing	Deco B down the other upright's groove; Switch 2 on edge in the channel
Turntable · preamp	mains → 10-gang (left outlet); RCA → 3.5 mm (2 m) → soundbar AUX	The vinyl lead down the turntable-side groove
USB charger	mains → 10-gang (left outlet): fan stand, pad dock, bias light, HDMI switch	On the worktop behind the TV
Xbox One · Xbox 360 · PS3	mains → Retro 6-way (right outlet); HDMI → switch → TV HDMI 4	The channel's data side
PS2	mains → Retro 6-way (right outlet); component → RetroTINK; optical → soundbar	The channel
PS1 · RetroTINK	mains → Retro 6-way (right outlet) · USB 5 V 2 A → Retro 6-way (right outlet); SCART → RetroTINK → switch	The channel

Roughly 17–22 working days spread over a few weekends, the electrics and the Cat6 included, plus the paint drying. Steps 6–11 can be split: the base and the dining cabinet first, the oak joinery once you're confident.

Where beginners usually go wrong

- **Cutting the worktop to the tape instead of to a template.** Make a cardboard template of the alcove first; walls are rarely square.
- **Skipping the dry-fit.** Gluing a tenon that doesn't fit is the one mistake you can't undo.
- **Oil on one side only.** The board cups within a week.
- **Loading the LP crates before the anti-tip brackets go in.** A full crate weighs about 30 kg.
- **Folding the table up with something on it.** Clear it first, every time, and keep both turn buttons turned when it's up.

The cutting list

Every made part in one list, grouped by what it's cut from, for the timber merchant. Sizes are finished sizes in cm, length × width × thickness. The cut lists in the other sections say how each part joins; this list is for ordering.

Solid oak, hardwax oil

Ask for it planed all round; scribe the uprights and worktop on site

Part	Size (cm)	Qty	Notes	Section

Uprights	159 × 30 × 4.5	2	Buy 165 long and scribe to the ceiling; housings, mortises, LED and cable grooves cut on the bench	Media wall
High shelf, long length	128.9 × 30 × 4	1	Housed 1.2 into both uprights and pegged	Media wall
High shelf, short length	51.7 × 30 × 4	1	Housed into the left upright; cleat on the side wall	Media wall
Series X shelf	55 × 30 × 4	1	Two through-tenons 6 × 2.4, wedged flush	Media wall
Record ledge	128.9 × 7 × 2.4	1	Housed and pegged	Media wall
Side-wall run	220 long × 7 sweeping to 28 × 4, from one 225 × 30 × 4 board	1	On an oak cleat, concealed brackets under the PC end; LED groove under the front edge	Media wall
Ledge lips	128.9 × 1.5 × 0.9 · 126 × 1.5 × 0.9	1 · 1	Glued along the ledge's and the run's front edges	Media wall
Keyboard tray housing	70 × 28 × 7, sides 7 × 2	1	Screwed under the PC shelf	Media wall
Worktop	186 × 46 × 3	1	From one 300 × 62 full-stave worktop; chamfered front	Media wall
Face frame	186 × 73 overall, 2 thick, stiles about 5 wide	1 set	End stiles scribed to the walls	Media wall

Drawer fronts	game drawer 56.8 × 6.5 × 2 · plinth drawer 54 × 6 × 2	1 · 1	Finger pull cut underneath	Media wall
LP crate lips · slim drawer lips	36.3 × 5 × 1.5 · 16.5 × 5 × 1.5	2 · 3	Cut to the face frame's openings, less 3 mm	Media wall
“Now playing” ledge	105.5 × 7 × 2.4, lip 1.5	1	On the breast at 104, two concealed brackets (with the table by the stairs)	Media wall
Follower blocks · Xbox One lift block	19 × 12 × 2 · 15 × 12 × 2	2 · 1	Offcuts, felted underneath	Media wall
Wedges · pegs · dowels	6 × 3, tapering · 10 mm dowel, 5 long · 10 mm dowel	2 + spares · 6 + 6 · 8	Glued	Media wall
Table halves, centres	83.5 × 90 × 2.7	2	Edge-glued staves: 78.5 between the shoulders, plus a 2.5 tongue each end	Dining table
Breadboard ends	90 × 7 × 2.7	4	Pegged with three 10 mm pegs each, in slotted holes	Dining table
Apron rails	outer half 86.5 and 78 · inner half 84.9 and 78, all × 4.6 × 2	2 + 2 · 2 + 2	A frame under each half, held on figure-8 fasteners	Dining table
Table legs	6.5 × 4.5, cut 70 long	4	Tapered on the two inside faces from 25 cm down to 4.5 × 3.5 at the foot; trimmed to the floor once the table's hung and level	Dining table

Hinge rail	91 × 16.8 × 7	1	Across the table box, its top at 73.3, its front 4 behind the door's back (the cloth bag hangs past it); the table's piano hinge 4.6 back from its front	Dining table
Door stops (the cabinet)	8 × 2.5 × 1.2	2	Under each box's top, behind its door's free edge; a magnetic catch let into each	Dining table

Oak-faced ply, 18 mm (the dining cabinet and the bar)

Ask the merchant to cut it to size and edge the visible edges with oak lipping

Part	Size (cm)	Qty	Notes	Section
Cabinet ends	189 × 23.4	4	Full height and depth, two for each box; the doors sit between them	Dining table
Cabinet tops · floors	91 × 23.4 · 49 × 23.4	2 · 2	One of each per box, between its ends; the floors' top faces at 3	Dining table
Cabinet linen shelf · chair shelf	91 × 16.8 · 49 × 20.8	1 · 1	Top faces at 168.6 (the table box, set 4 back for the cloth bag) and 95.8 (the chair box)	Dining table
Cabinet doors	90.5 · 48.5, both × 183.8	1 · 1	The table door, then the chair door: oak-faced both sides, grain upright, all four edges lipped; a piano hinge on the edge by the boxes' join, a finger slot near the other	Dining table
Bar ends	87.3 × 22	2	Scribed to the cabinet's end and the wall	The bar
Bar floor · shelf	38.9 × 22 · 38.9 × 19.6	1 · 1	The floor on a 3 plinth set back 2; the shelf's top at 40.8	The bar
Bar doors · plinth front	82.2 × 19.25 · 38.9 × 3	2 · 1	Soft-close hinges; edges lipped	The bar

Oak-faced ply, 6 mm

Part	Size (cm)	Qty	Notes	Section
Glass case back	86 × 81	1	Pinned into the frame's rebate	Glass case

Birch ply, 18 mm

Part	Size (cm)	Qty	Notes	Section
Bay 3 sides	73 × 40	2	The record carcass, standing on the floor	Media wall
Bay 3 top and bottom	56.4 × 40	2	Between the sides; back left open to the channel	Media wall

Plinth rails	120 × 9	2	Front and back of the ladder frame under bays 1–2	Media wall
Plinth cross-pieces	34.4 × 9	3	At both ends and under the bay 1–bay 2 joint, so the bay under bay 2 stays clear for the drawer	Media wall

Birch ply, 12 mm

Part	Size (cm)	Qty	Notes	Section
Game drawer sides	35 × 15.5	2		Media wall
Game drawer back · front panel	51.9 × 15.5 · 51.9 × 6	1 · 1		Media wall
LP crate bases · slim drawer bases	34.9 × 40 · 15.3 × 40	2 · 3	The sides and ends stand on them	Media wall
Bay 3 divider	69.4 × 38	1	17.8 in from the left side, the full height inside	Media wall
Plinth drawer sides · ends	34 × 4.4 · 49.6 × 4.4	2 · 2	A 52 × 34 × 5 box	Media wall
Bay 2 divider · part shelf	35.3 × 38 · 32.2 × 36	1 · 1	The sub's column on the left; the PS2 over the PS1 on the right	Media wall
Keyboard tray	54 × 26	1	Oak lip on its front edge	Media wall
Record table base	84 × 41	1	Screwed to the two KALLAX's open backs; the castors under it	Record table

Birch ply, 9 mm

Part	Size (cm)	Qty	Notes	Section
Game drawer base	52.5 × 34.4	1	In a 6 mm groove	Media wall
LP crate sides · ends	40 × 8 · 33.1 × 8	4 · 4	Two of each per crate: a 33 cm trough	Media wall

Birch ply, 6 mm

Part	Size (cm)	Qty	Notes	Section
Cabinet backs	91 · 49, both × 184.2	1 · 1	Glued and pinned in each box, between its ends, its floor and its top	Dining table
Game drawer cross divider	51.9 × 9	1	13 cm back from the front	Media wall
Game drawer bin walls · bin floors	12.6 × 9 · 16 × 12.6	2 · 2	Floors raked so the cases lean about 13°	Media wall
Plinth drawer base	52 × 34	1	Screwed under the box	Media wall
Bar back	38.9 × 82.5	1	Glued and pinned between the ends	The bar
Slim drawer sides · backs and fronts	40 × 10 · 14.1 × 10	6 · 6	Three boxes 15.3 wide, 14.1 inside	Media wall

Hardware

Runners are sold in pairs

Part	Size (cm)	Qty	Notes	Section
LP crate runners · slim drawer runners	400 mm full extension, 68–70 kg a pair · 400 mm light duty	2 pairs · 3 pairs	Into bay 3's sides and the divider	Media wall


Game drawer runners	350 mm full extension, soft-close	1 pair	Accuride DZ3832EC or Screwfix 964VN	Media wall
Plinth drawer and keyboard tray runners	300 mm full extension · 300 mm light duty	1 pair · 1 pair		Media wall
Flip-top hinges	Lee Valley 40574, solid brass, 1.27 × 7.0	3	Routed into the meeting edges of the two halves, 10 in from each side and the middle	Dining table
Piano hinge	Altro continuous, 1800 × 50, cut to 90	1	The table's foot, on the hinge rail's top face	Dining table
Leg brackets · tabletop fasteners	folding, self-locking · figure-8	4 · 16	The legs fold inside the aprons; the fasteners hold the aprons to the tops	Dining table
Door hinges (the cabinet)	Altro continuous, 1800 × 32, stainless	2	1 mm thick, one a door, not cut: centred on the 183.8 door, 1.9 short at each end; a screw every 10 cm, the knuckle just proud of the faces	Dining table
Catches, magnets and hooks	catches · 10 mm magnet, cups · hooks	4 · 1 + 2 · 6	Magnetic catches: two in the door stops, two under the linen shelf for the folded table. A flush magnet and two steel cups hold an open door flat. A small brass cup hook takes the cloth bag	Dining table
Wall brackets (the cabinet)	steel angle, 5 × 70 screws, plugs	2	One under each box's top into your solid wall	Dining table
Sub isolation riser	dense foam or sorbothane, about 22 × 28 × 3	1	Under the sub in bay 2	Media wall
Concealed brackets	for the uprights; two for the PC shelf, 40 kg+ a pair	1 set		Media wall

Sheets to buy, nested


Every ply part laid out on the fewest boards (a full sheet is 244 × 122; half and quarter sheets where a full one would be mostly offcut), a 4 mm saw cut between parts, grain along the long side. Hand these to the merchant with the cutting list.

Sheet	Boards (cm)	Parts	Used	Biggest offcuts, and what for


Oak-faced ply, 18 mm (the dining cabinet and the bar)	3 × 244 × 122	19	68%	244 × 38.95: a spare shelf or a drawer box; 152.6 × 16.8: drawer sides, cleats or jigs
Oak-faced ply, 6 mm	1 × 122 × 122	1	47%	122 × 40.6: a spare shelf or a drawer box; 35.6 × 81: a spare shelf or a drawer box
Birch ply, 18 mm	3 × 122 × 61	9	60%	122 × 20.6: drawer sides, cleats or jigs; 122 × 11.2: packers, shims and test cuts
Birch ply, 12 mm	1 × 244 × 122	18	59%	244 × 24.6: drawer sides, cleats or jigs; 25.1 × 34.9: packers, shims and test cuts
Birch ply, 9 mm	1 × 122 × 61	9	56%	28.7 × 34.4: packers, shims and test cuts; 88.5 × 8: packers, shims and test cuts
Birch ply, 6 mm	2 × 244 × 122	21	59%	244 × 33.3: a spare shelf or a drawer box; 161.1 × 38.9: a spare shelf or a drawer box

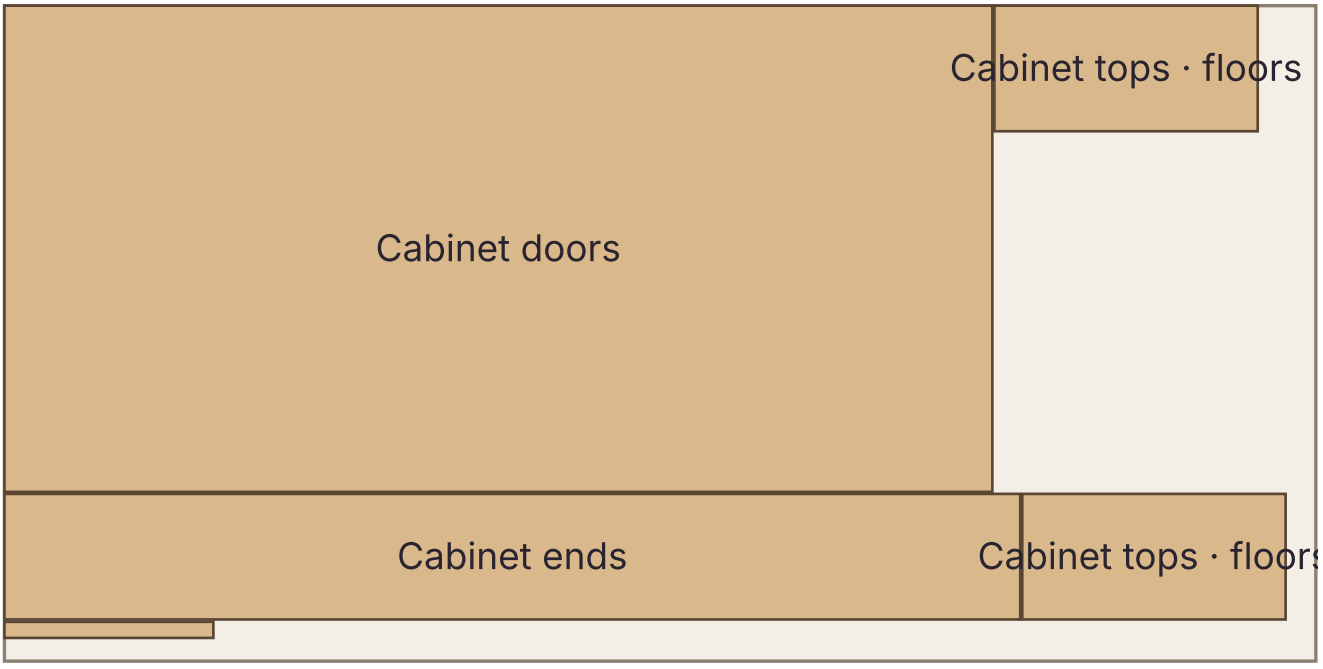


Oak-faced ply, 18 mm (the dining cabinet and the bar), sheet 1 of 3

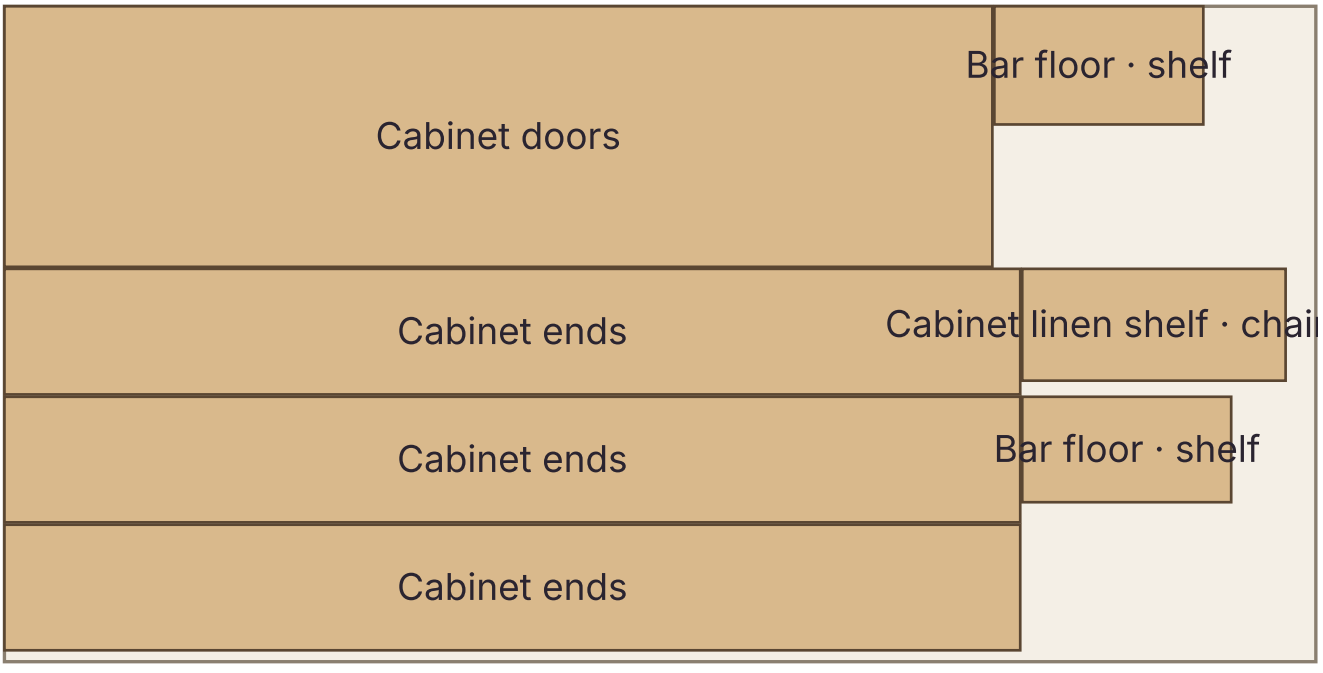


Oak-faced ply, 18 mm (the dining cabinet and the bar), sheet 2 of 3

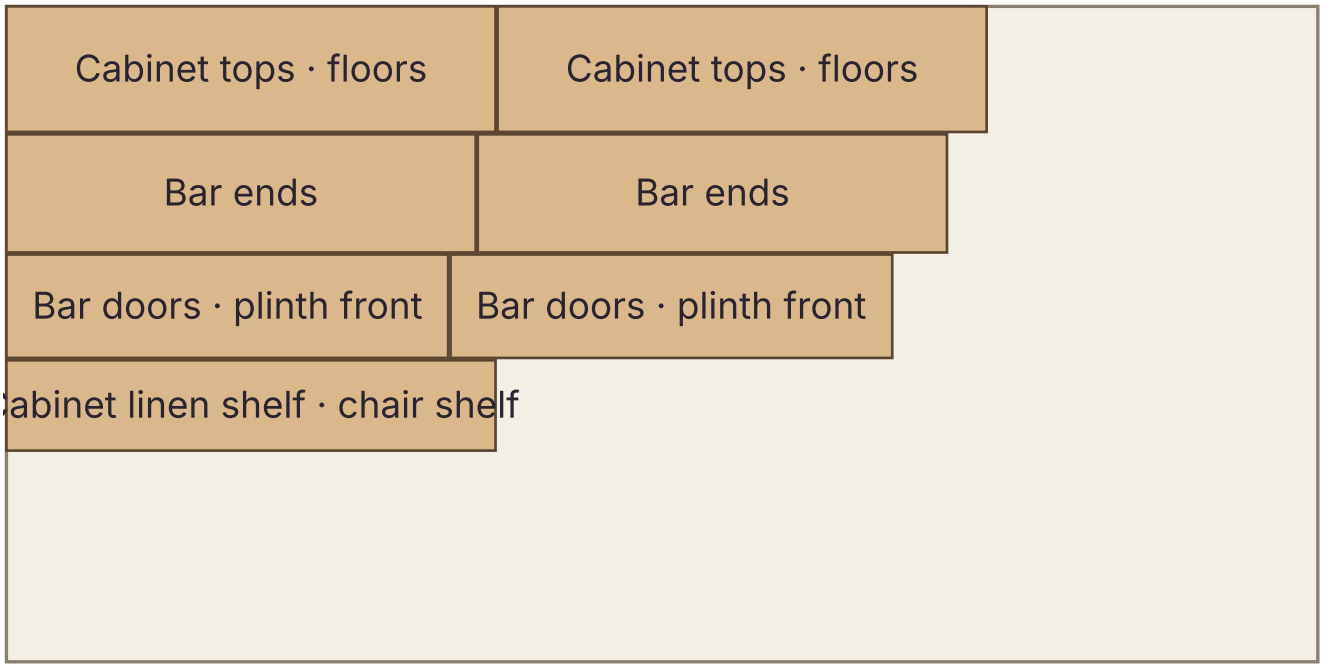


Oak-faced ply, 18 mm (the dining cabinet and the bar), sheet 3 of 3

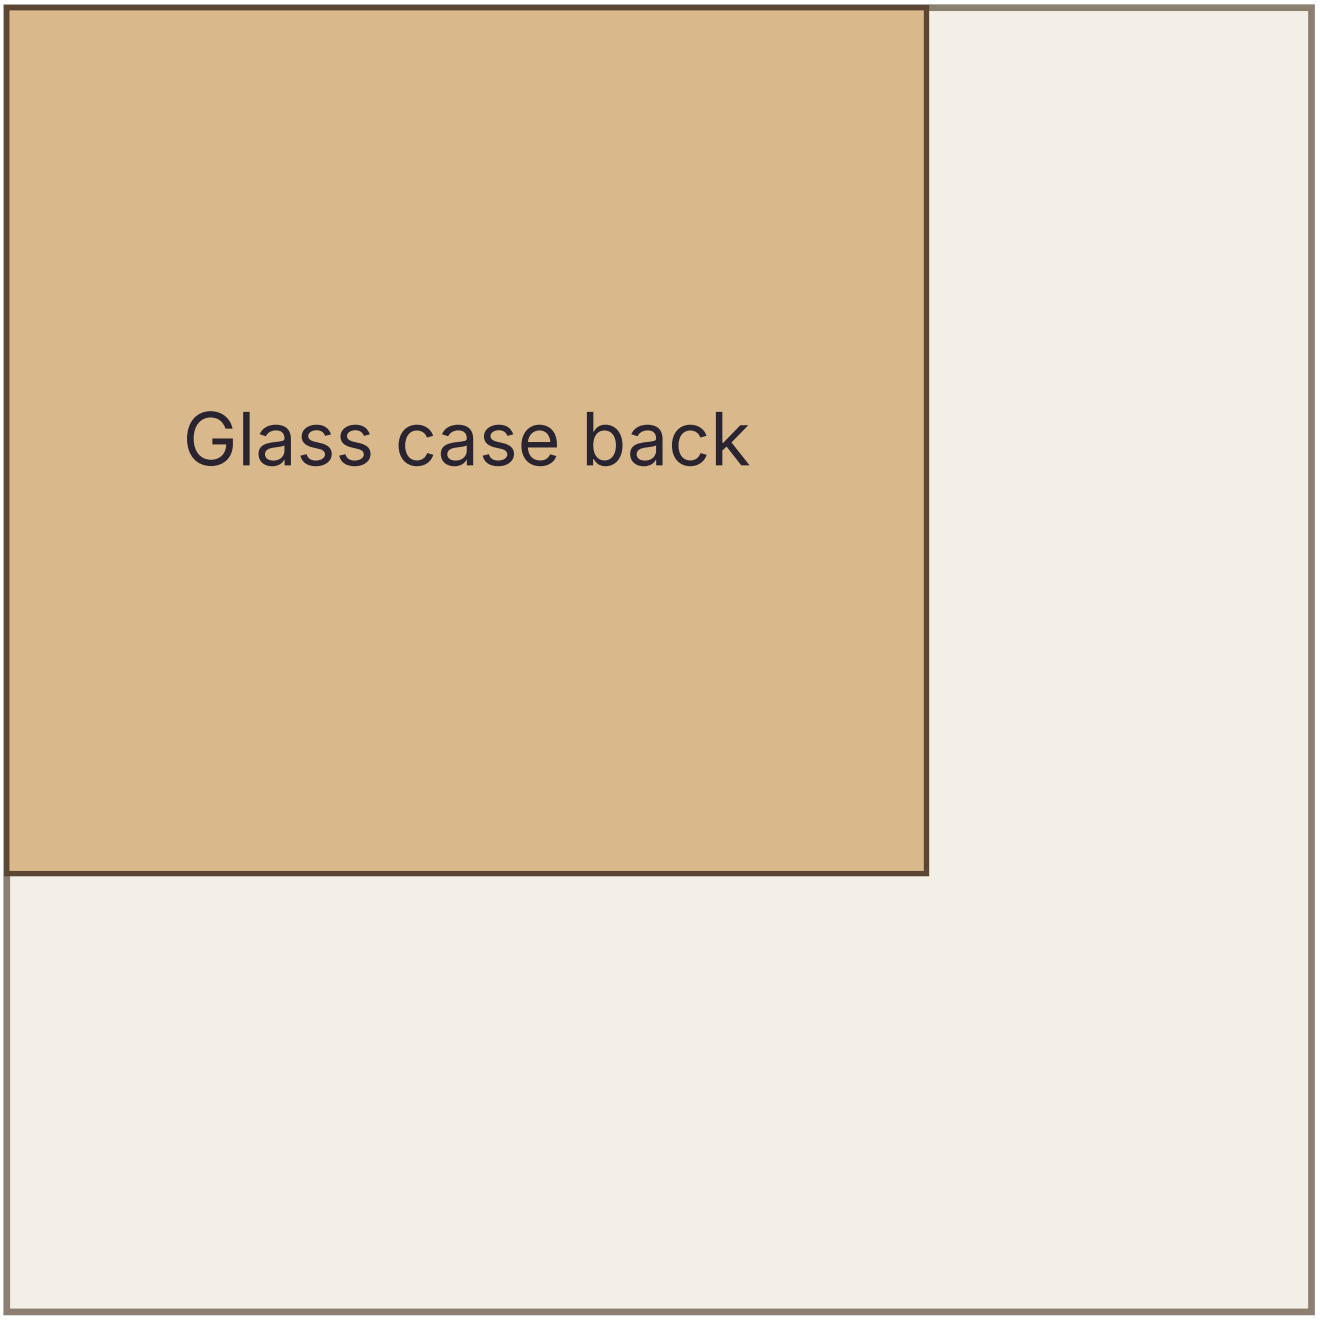


Oak-faced ply, 6 mm, sheet 1 of 1

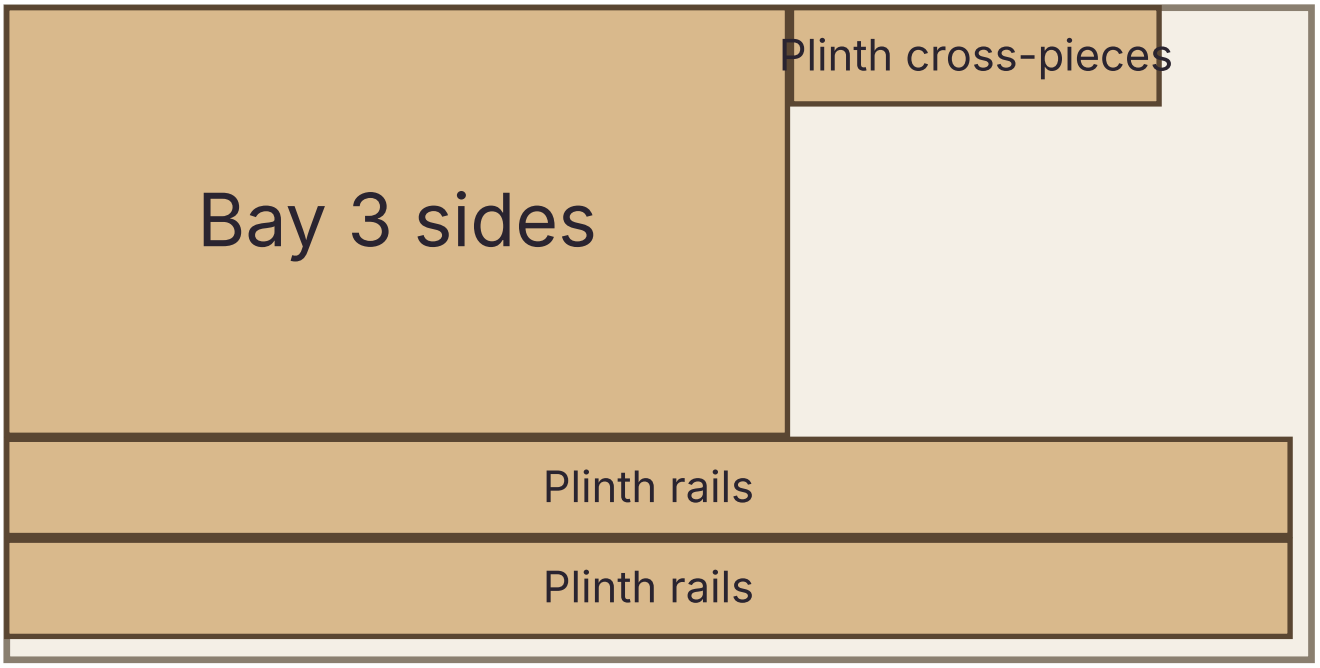


Birch ply, 18 mm, sheet 1 of 3

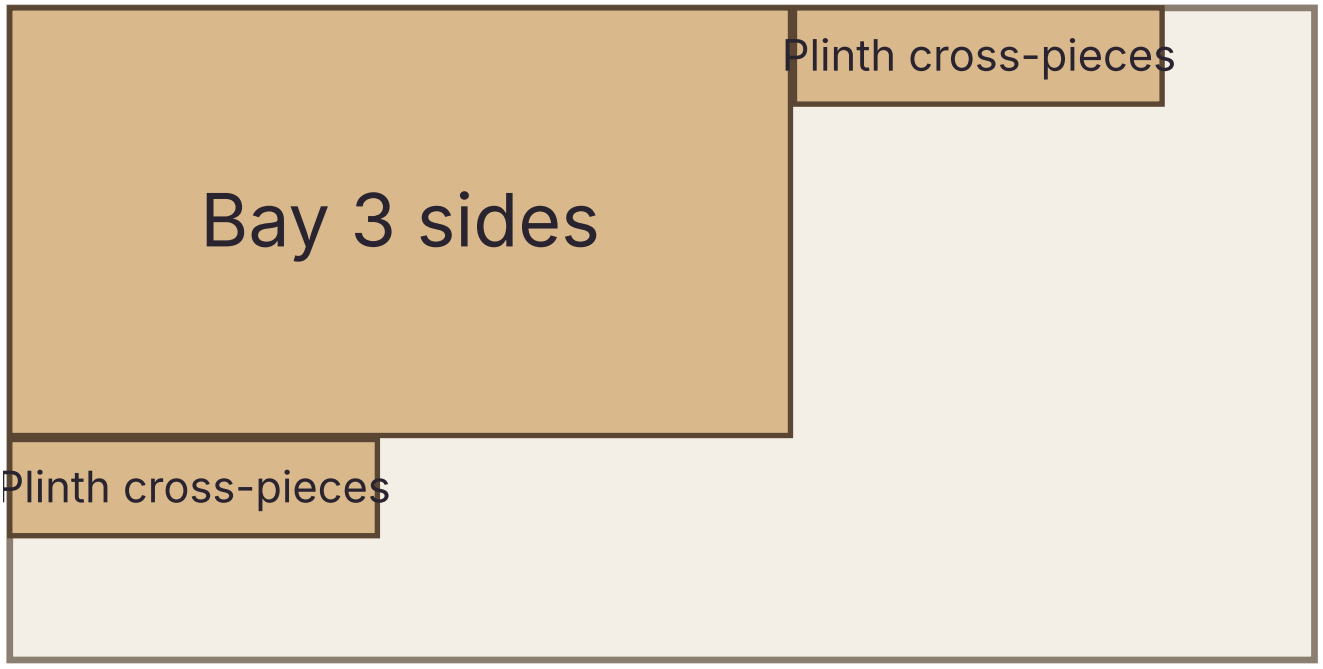


Birch ply, 18 mm, sheet 2 of 3

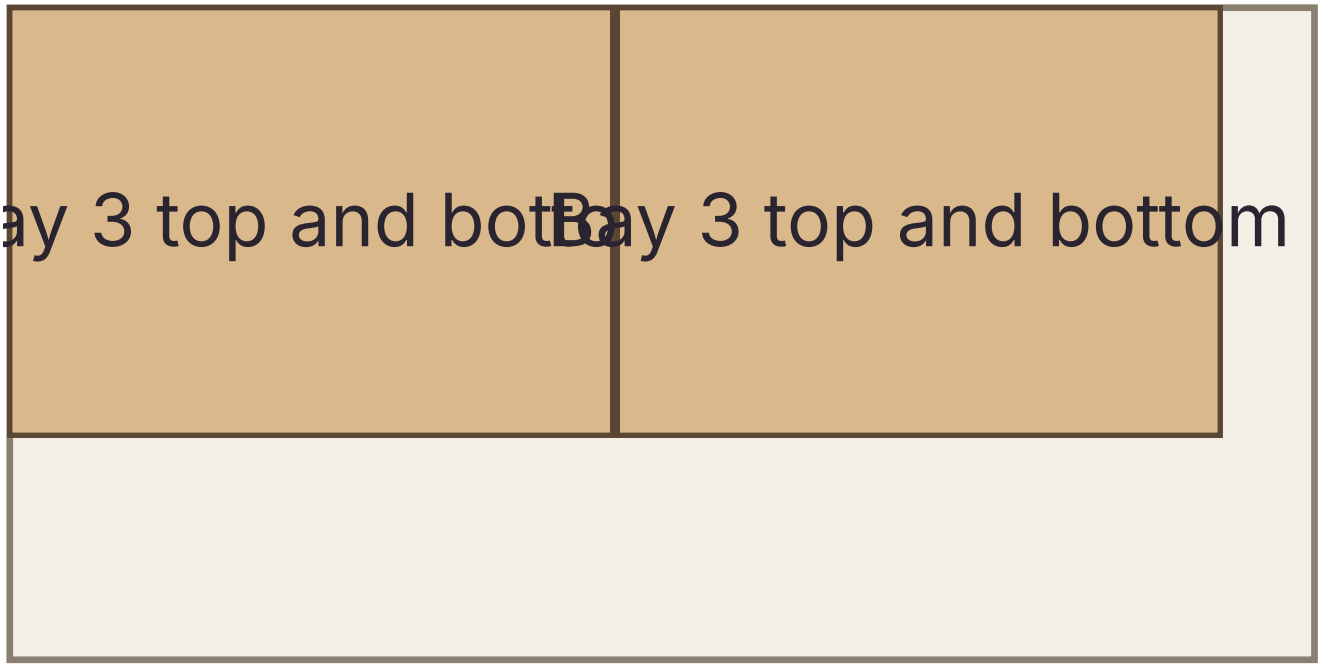


Birch ply, 18 mm, sheet 3 of 3

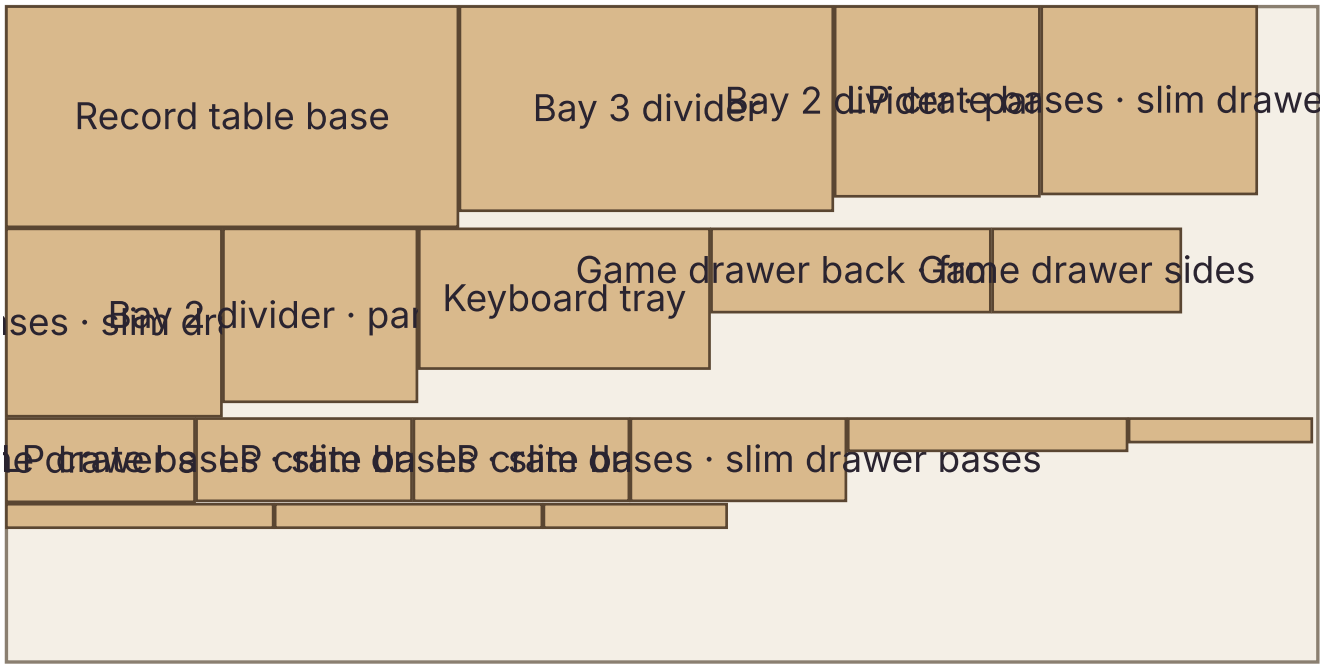


Birch ply, 12 mm, sheet 1 of 1

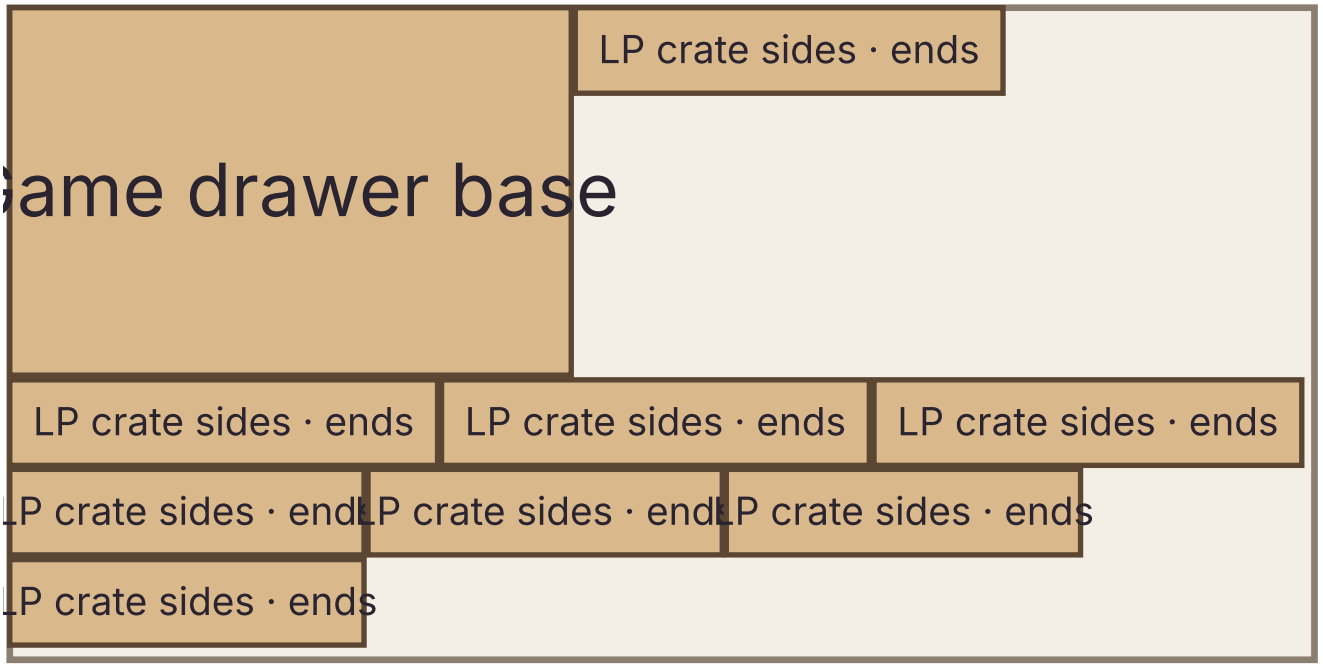

Birch ply, 9 mm, sheet 1 of 1

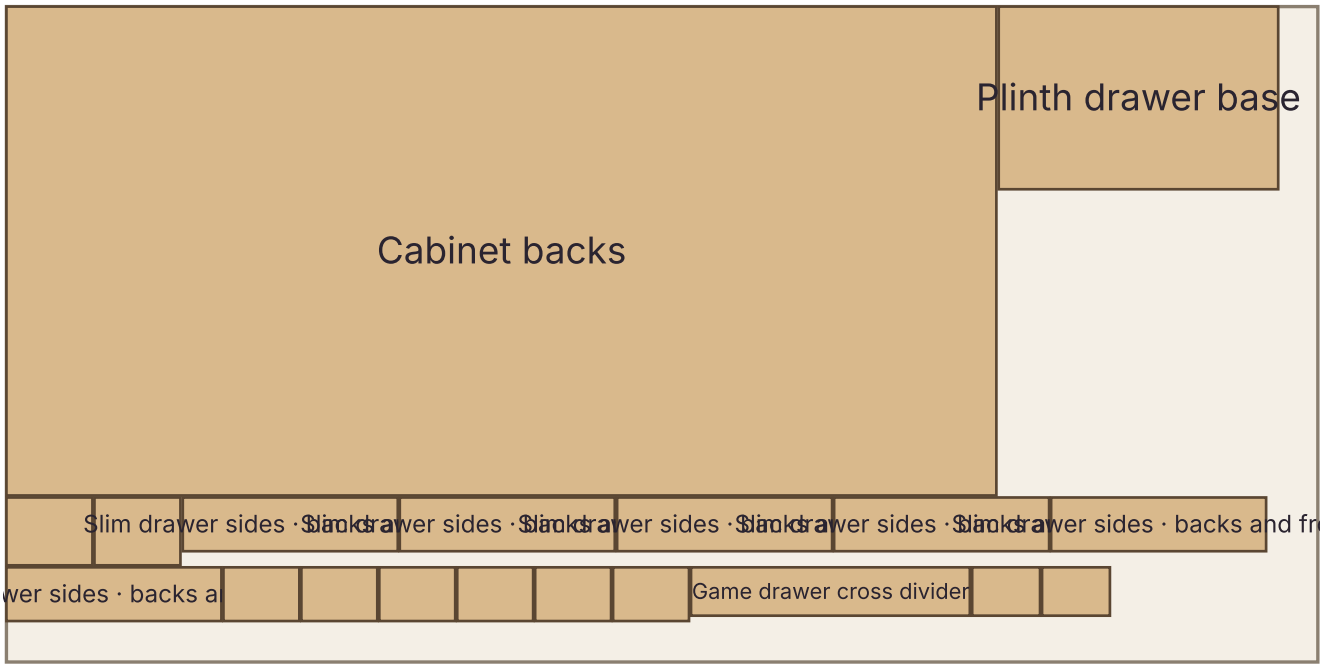

Birch ply, 6 mm, sheet 1 of 2

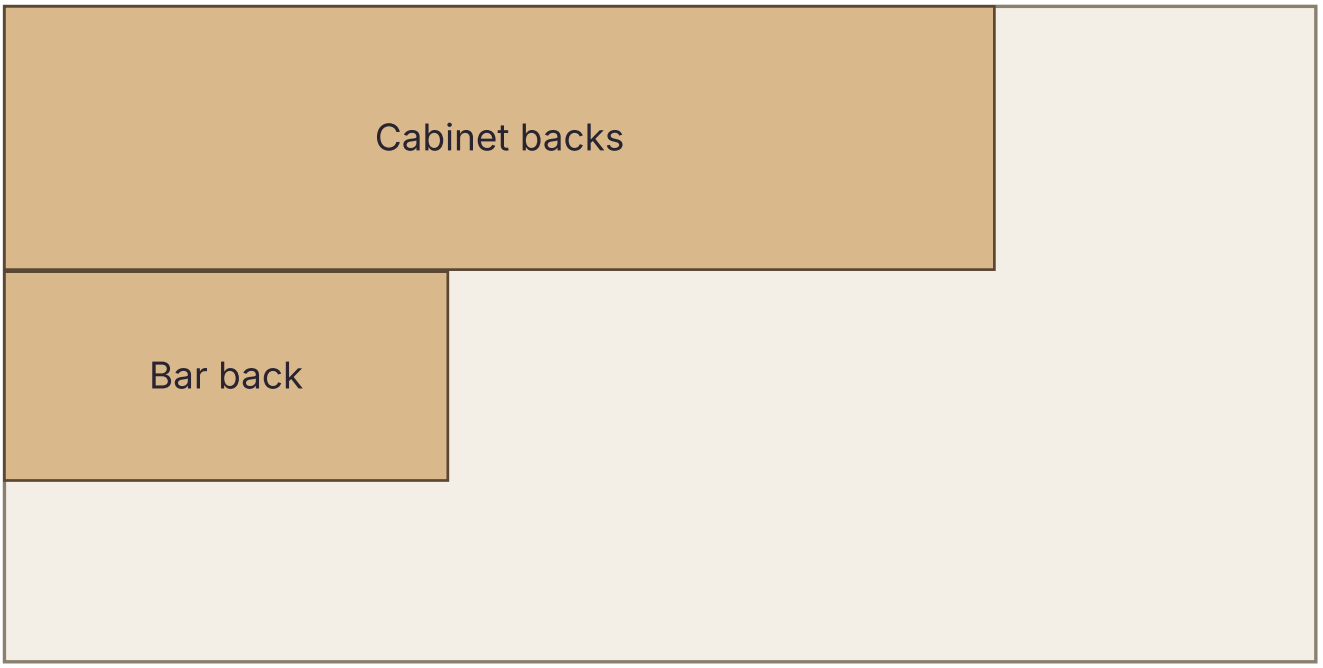

Birch ply, 6 mm, sheet 2 of 2

Step by step, in full

Step 1 · Measure and count · You · 2 h

PREP

Tools

- Tape measure
- Spirit level, 120 cm
- A notebook



The whole room.

1. The alcove's width at the floor, 76, 134, 155 and 196 cm and at the ceiling: cut everything to the smallest.
2. The floor's level across the alcove, and the chimney breast's flatness with a long level.
3. The door's swing, and the sofa: overall width, depth with the return, back height.
4. Count the LPs and games (PS2, Xbox 360, Xbox One), and measure ten cases of each.
5. Make a cardboard template of the alcove at worktop height: walls are rarely square.

Check before moving on: Every figure within 1 cm of the plan. If not, send the numbers and the drawings are redone first.

Step 2 · Network, stage 1 · You · 2 h

NETWORK

Buy first: 1 Network, now (the buy list).

Parts


- Two TP-Link TL-SG108 8-port switches
- Cat6 patch leads, 0.5–2 m (11)

Tools

- A phone with the Deco app
- A laptop for the hub's settings page

Every floor has its own Cat6 link back to bedroom 3

Deco A and Switch 1 live with the Hub 5 and the gaming PCs in bedroom 3; two spare ports can wire the projector and the music room

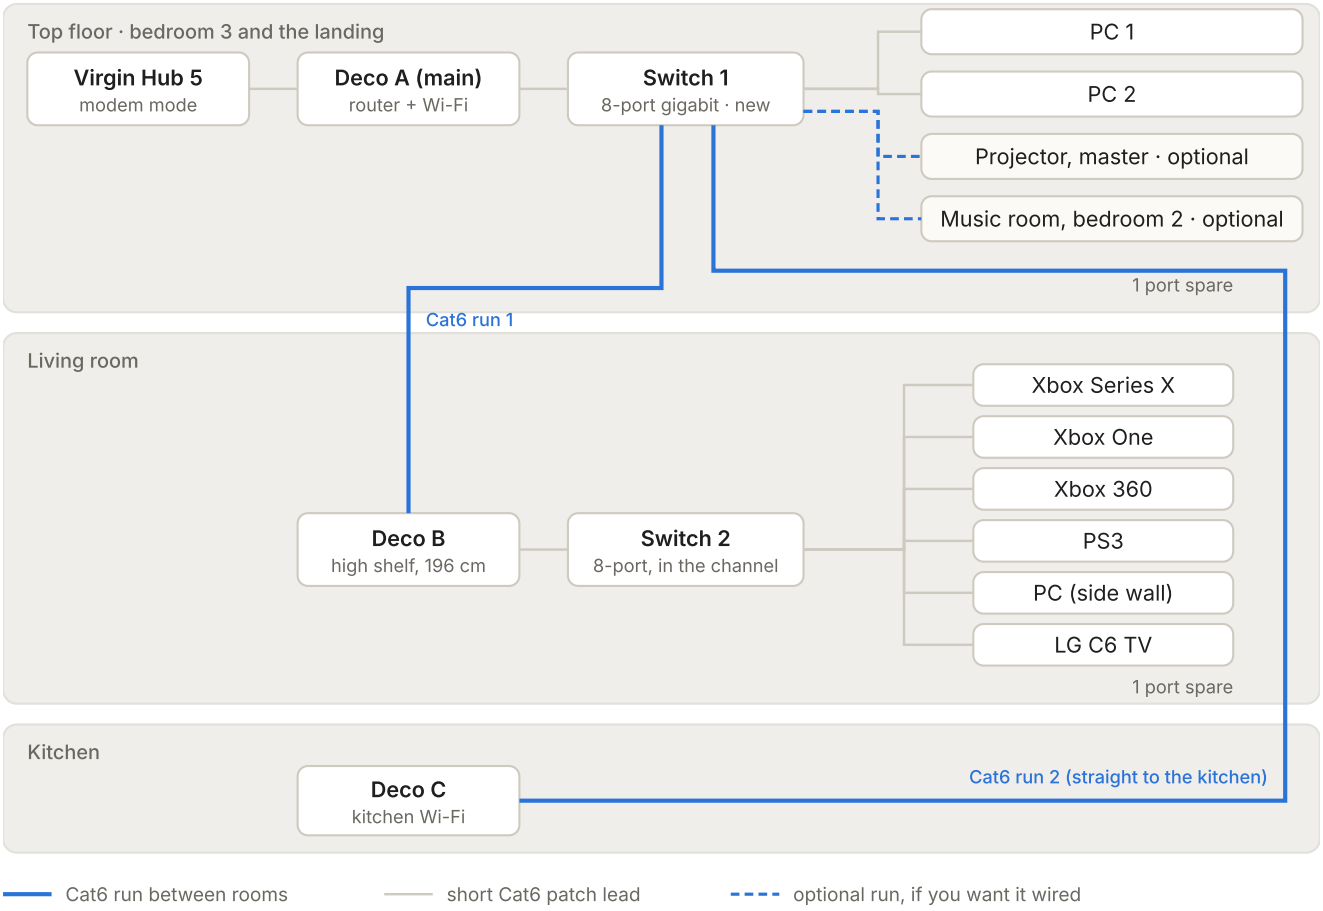

1. Unplug everything from the Hub 5. Log in at 192.168.0.1 with the password on its base, then Modem Mode → Enable Modem Mode → Apply. Its page moves to 192.168.100.1.
2. Connect a hub port to Deco A in bedroom 3 and set it up in the Deco app, reusing the old Wi-Fi name and password. If it shows no internet, try another hub port and restart the hub.
3. Plug the new 8-port Switch 1 into Deco A's other port, then the PCs into Switch 1.
4. Add Deco B in the living room and Deco C in the kitchen. For now they link over Wi-Fi.
5. Speed-test each room, and check the Xbox's network settings show NAT: Open.

Check before moving on: Internet in every room, and NAT: Open on the Xbox.

Step 3 · Cables and the socket, your own job · You + a helper · 2–3 days

POWER & CABLES NETWORK

Buy first: 2 Cables and power (the buy list).

Parts

- Cat6 solid pure copper (not CCA), 2–4 runs
- RJ45 keystones and two surface boxes, or RJ45 plugs
- A double socket in the same finish, and a deeper back box if the old one is shallow
- Conduit: 38 mm and 25 mm oval, about 4 m each, two draw wires
- A 5 m C13 lead with a rewireable 13 A plug, for the PC
- One-coat filler

Hardware and fixings


- Cable clips for the Cat6 in the loft space or under the boards
- Brown wall plugs and 4 × 30 screws for the conduit clips

Tools

- Two-pole voltage tester (GS38) and its proving unit
- MCB lock-off and padlock
- Plug-in socket tester
- Insulated screwdrivers, wire strippers, side cutters
- Cat6 punch-down tool (or crimper) and a cable tester
- Draw rods
- Wall chaser with dust extraction, or a bolster and club hammer
- Cable and pipe detector
- SDS drill
- Safety glasses, ear defenders, FFP2 masks
- A helper

Power map: your 10-gang (now with the PC) plus a 6-way for the retro set


Everything modern on the left outlet, always on; the five retro consoles and the RetroTINK on the right, switched at the wall

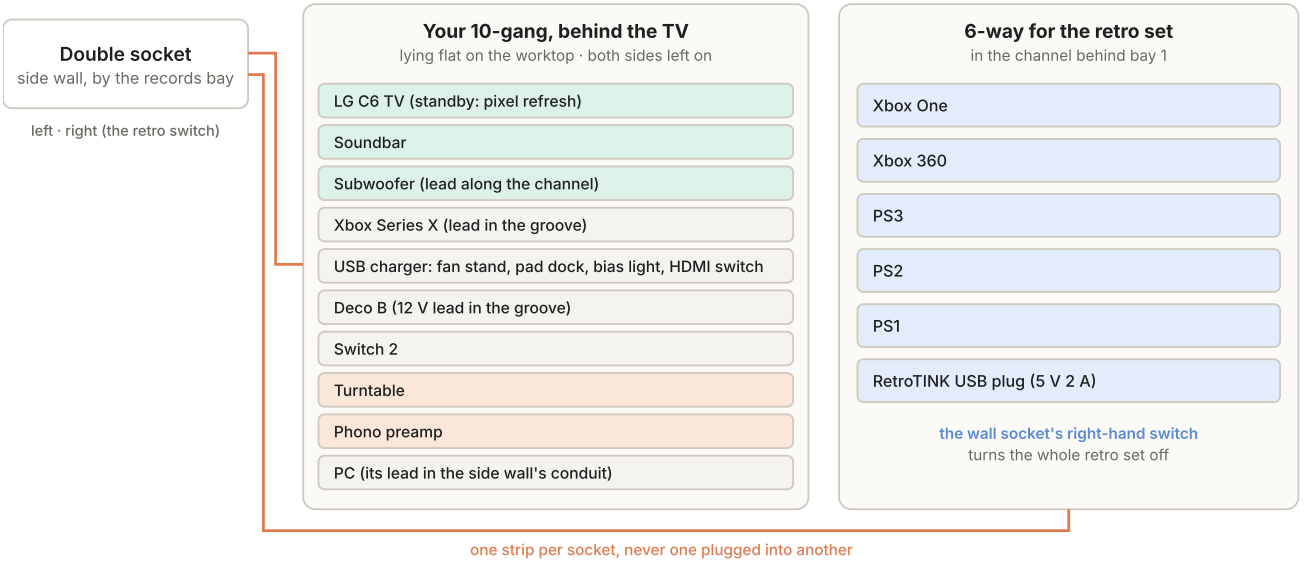

- The socket on the side wall is a single today: you swap it for a double at the same spot (like for like, your own job: step 3).
- The retro switch moves to the wall: with the TV 2 cm from the left upright, the 10-gang's own switches can't be reached any more.
- Rear speakers: your double socket behind the sofa's short side. Your lamp and the grow lights: the double behind the plant stand.
- The sub plugs into the 10-gang: its lead drops through the worktop's slot to the back of bay 2. Both spot bars use existing ceiling points.
- Load check: the 10-gang about 1.55 kW with everything on, PC included (850 W at most); the 6-way up to 0.8 kW. Each under 13 A (3 kW).
- Check the 10-gang is surge-protected; if not, use a surge-protected one for the TV and consoles. Label both outlets.

Cable routes: everything ends in the channel behind the base

Front view, schematic, with the side wall folded flat to the left so the PC's route shows; the sub sits in bay 2

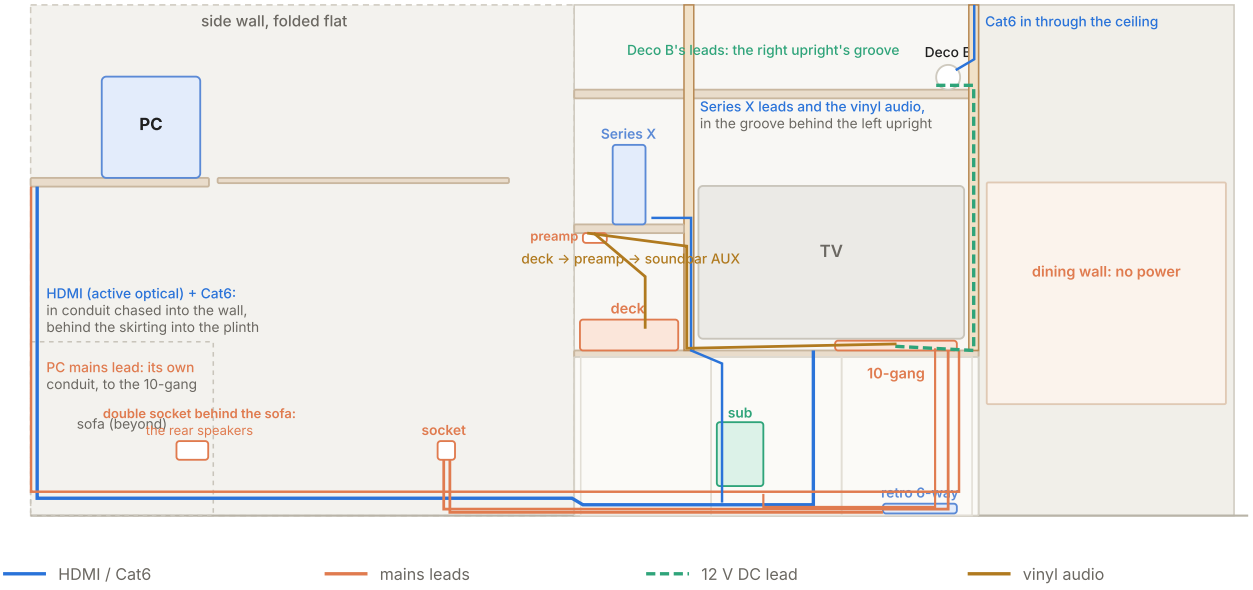

Before you start: the stop list

1. Stop and call an electrician if: the tester shows anything live after you've isolated; the wiring is old (rubber or fabric sheath, or red and black with no earth); there are more wires than you can match to your photo; there are scorch marks or the old socket is loose or hot; the consumer unit has rewireable fuses or no RCD; or the job grows into a new circuit.
2. Nothing in this step is notifiable in England: the socket is a like-for-like swap on an existing circuit, outside a bathroom. It must still be done to the wiring regulations, which is what this routine is for.

The Cat6 runs (low voltage: no isolation needed)

3. Measure each route on the house plan and add 2–3 m: bedroom 3, across the landing, down through the airing cupboard.
4. Lift a floorboard in the airing cupboard. Drill a 20 mm hole through the plate below (detector first), and feed a draw rod down to the alcove's right corner. Tape both Cat6 cables and a spare to it and pull them through. Pull the kitchen run on down the same way, past the right upright's groove.
5. Keep the Cat6 away from mains: cross at right angles, never run alongside in the same hole. Clip it every 30 cm; never staple through it or kink it.
6. Punch each end down onto a keystone in a surface box (or crimp a plug), to the T568B colours on both ends. Label both ends.
7. Test each run with the cable tester: all eight lights in order. Re-terminate any that don't.

Isolate the socket circuit

8. Tell everyone in the house you're working on the electrics.
9. At the consumer unit, switch off the breaker for the side-wall socket's circuit (usually a ring marked "sockets"). If the labels aren't clear, switch off the main switch instead.
10. Fit the MCB lock-off and padlock to that breaker, keep the key in your pocket, and tape a note on the board: "Working on this circuit, do not switch on".
11. Prove your voltage tester on its proving unit: it must light.
12. At the socket, with it pulled forward on its cables, test between every pair: live and neutral, live and earth, neutral and earth. No reading on any of them.
13. Prove the tester on the proving unit again. Only now is it safe to touch.

Swap the single socket for a double

14. Unscrew the old socket and ease it out. Photograph the wiring before you undo anything.

15. Check the stop list against what you see: an earth (green-and-yellow) wire present and sleeved, no scorching, the cable sheath into the box.
16. If the double needs a bigger box, chop the plaster out round the old box to the new box's outline and fit the new box with plugs and screws, the cables through its grommets.
17. Connect wire for wire: brown (or red) to L, blue (or black) to N, green-and-yellow to the earth terminal. Two cables in the old box go into the same terminals together. Strip only enough so no copper shows outside a terminal, and tighten every screw firmly.
18. Fold the cables in neatly without trapping them, and screw the socket on level.
19. Remove the lock-off, switch on, and plug the socket tester into each outlet: it should show correct wiring on both.

The PC's two conduits in the side wall

20. Mark the route from behind the PC shelf's back corner straight down to skirting height, then along behind the skirting to the base's plinth. Run the detector along it: move it if anything shows. Never chase near the socket's cables, which run straight up, down or across from it.
21. Chase two channels side by side, 5 cm apart: one for the 38 mm oval conduit (data: HDMI and Cat6), one for the 25 mm (the PC's mains lead). Vertical only on the wall, no deeper than the conduit needs. Wear the mask: the dust is silica.
22. Take the skirting off along the route, fix both conduits with a draw wire inside each, and refit the skirting over them.
23. Fill the chase with one-coat filler, sand flush, and photograph the route with a tape measure in the shot before you paint.

Finish

24. Mark every route on the plan, and keep the photos with it.

Check before moving on: The socket tester shows correct wiring on both outlets, both Cat6 runs test good end to end, and every route is photographed.

Step 4 · Paint · You · 2–3 days, then a week to cure

PAINT

Buy first: 3 Paint (the buy list).

Parts

- Card Room Green emulsion and eggshell, primer and undercoat
- Sugar soap, sanding pads, woodwork primer

Tools

- Roller, tray and extension pole
- 25 and 50 mm brushes
- Dust sheets, masking tape
- Step ladder

1. Paint an A4 board in Card Room Green and look at it by day and with the LED strip on.
2. Wash the skirting and door with sugar soap, sand to a key, and prime them.
3. Two coats of emulsion on the walls, ceiling, alcove and chimney breast.
4. Two coats of eggshell in the same green on the skirting and radiator (the door and its frame stay white).
5. Leave it a week to cure before fixing anything to it.

Check before moving on: Two even coats, and no white showing at the edges or behind the radiator.

Step 5 · Mark the heights · You · 1 h

PREP

Tools


- Cross-line laser level
- Tape measure
- Pencil and masking tape
- Cable and pipe detector
- Spirit level, 120 cm



The media wall with its parts numbered.

The media wall and the chimney breast from the front, to scale

The TV in line with the sofa, the turntable, Series X and records on the left, the consoles and games under the TV. Heights in cm

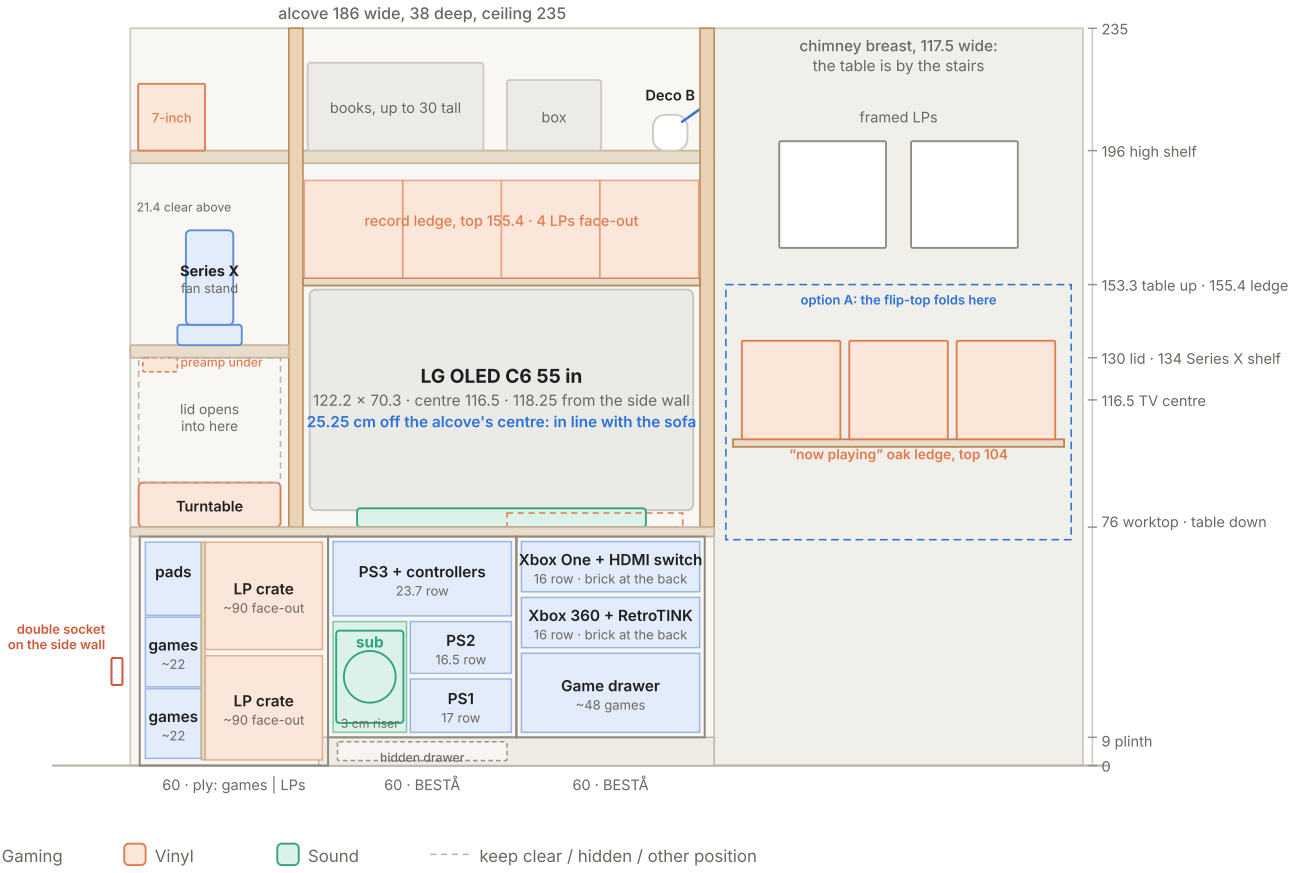

Set up a datum

1. Find the floor's highest point across the alcove (you measured its level in step 1). Every height in this plan is measured from there.
2. Stand the laser in the middle of the room, level it, and mark a line at exactly 100 cm above that high point on the alcove's back wall, both side walls and the chimney breast.
3. Measure every other height up or down from the 100 line, not up from the floor: the floor is the thing that isn't level.

The alcove's heights

4. Put a strip of masking tape down each side wall and the back wall of the alcove and mark these heights on it:
5. 73: the tops of the frames and bay 3 (the worktop's underside).
6. 76: the worktop's top.
7. 130 and 134: the Series X shelf, underside and top.
8. 153 and 155.4: the record ledge and the wrap ledge, underside and top.
9. 192 and 196: the high shelf, underside and top.
10. Carry the 153 and 155.4 lines along the side wall to 250 cm out from the alcove's back wall, for the wrap ledge and the PC shelf.

Across the back wall

11. Mark the uprights' positions from the side wall: the left one 50.5–55, the right one 181.5–186. Turn the laser to its vertical line and draw both lines from the worktop line to the ceiling.
12. Mark the base from the side wall along the floor: filler 0–3, then bay 3 3–63, bay 2 63–123, bay 1 123–183, filler to 186.

On the chimney breast

13. Find the breast's centre: 58.75 cm from its alcove-side corner. Draw it plumb from the floor to 170.
14. Mark the “now playing” ledge's top at 104, level, and its two concealed brackets 6 cm in from each side of the breast.
15. Mark the glass display case's bottom edge at 137 and its top at 222, 90 wide, centred on the line; its oak cleat's top edge at 212. (The dining table isn't here: it's in its cabinet by the stairs, step 11.)

Check for cables

16. Run the detector along every line where you'll drill: the cleats, the spacer blocks, the upright brackets, the ledge's brackets, the PC shelf and, on the stairs wall, the cabinet's two wall brackets.
17. Mark anything it finds in red, and compare with your own photos from step 3. Move a fixing 5 cm rather than drill near a cable.

Check before moving on: Every line level end to end, and the uprights' lines plumb.

Step 6 · Build the base · You · 1 day

MEDIA WALL

Buy first: 4 Base unit (the buy list).

Parts

- Two IKEA BESTÅ frames 60 × 40 × 64
- 18 mm birch ply: bay 3 sides 73 × 40 (2), top and bottom 56.4 × 40 (2); plinth rails 120 × 9 (2), cross-pieces 34.4 × 9 (3)
- Four 4 cm spacer blocks (ply offcuts, 4 × 10 × 1.8)
- Anti-tip brackets: two per bay (6)
- Flat two-compartment trunking, about 2 m
- Plastic shims
- Four connector bolts (furniture joint connectors)

Hardware and fixings

- 4 × 40 and 4 × 50 mm wood screws
- 5 × 60 mm screws and brown wall plugs
- Wood glue

Tools


- Drill-driver with pilot and countersink bits
- SDS drill with a 7 mm masonry bit
- Spirit level, 60 and 120 cm
- Combination square
- Clamps
- Tape measure



Every drawer out, in place.


The media wall and the chimney breast from the front, to scale

The TV in line with the sofa, the turntable, Series X and records on the left, the consoles and games under the TV. Heights in cm

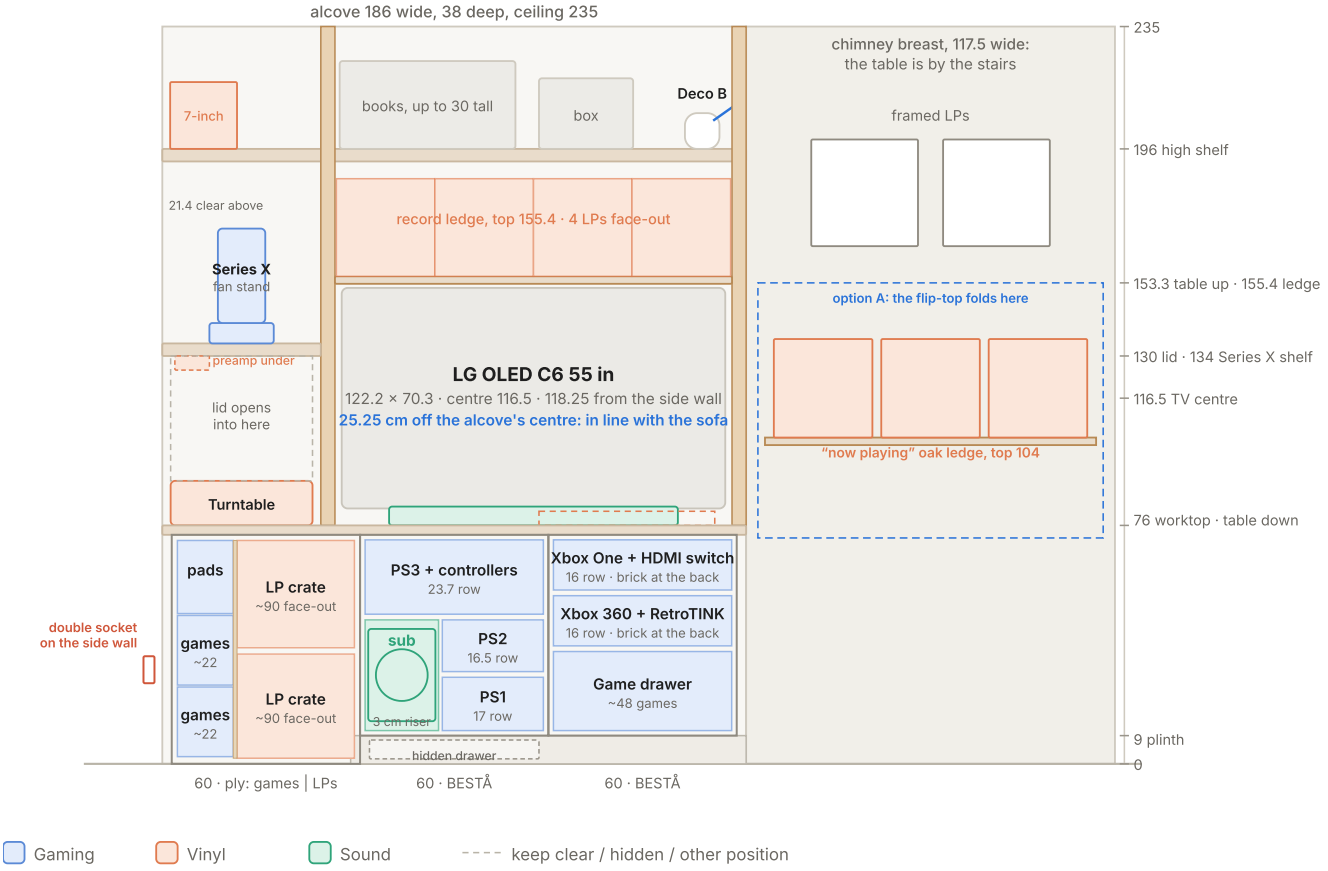

How the wall goes together, layer by layer

Side sections to scale, room on the left. Dashed: the upright and the breast's face beyond the cut, and the deck's lid open

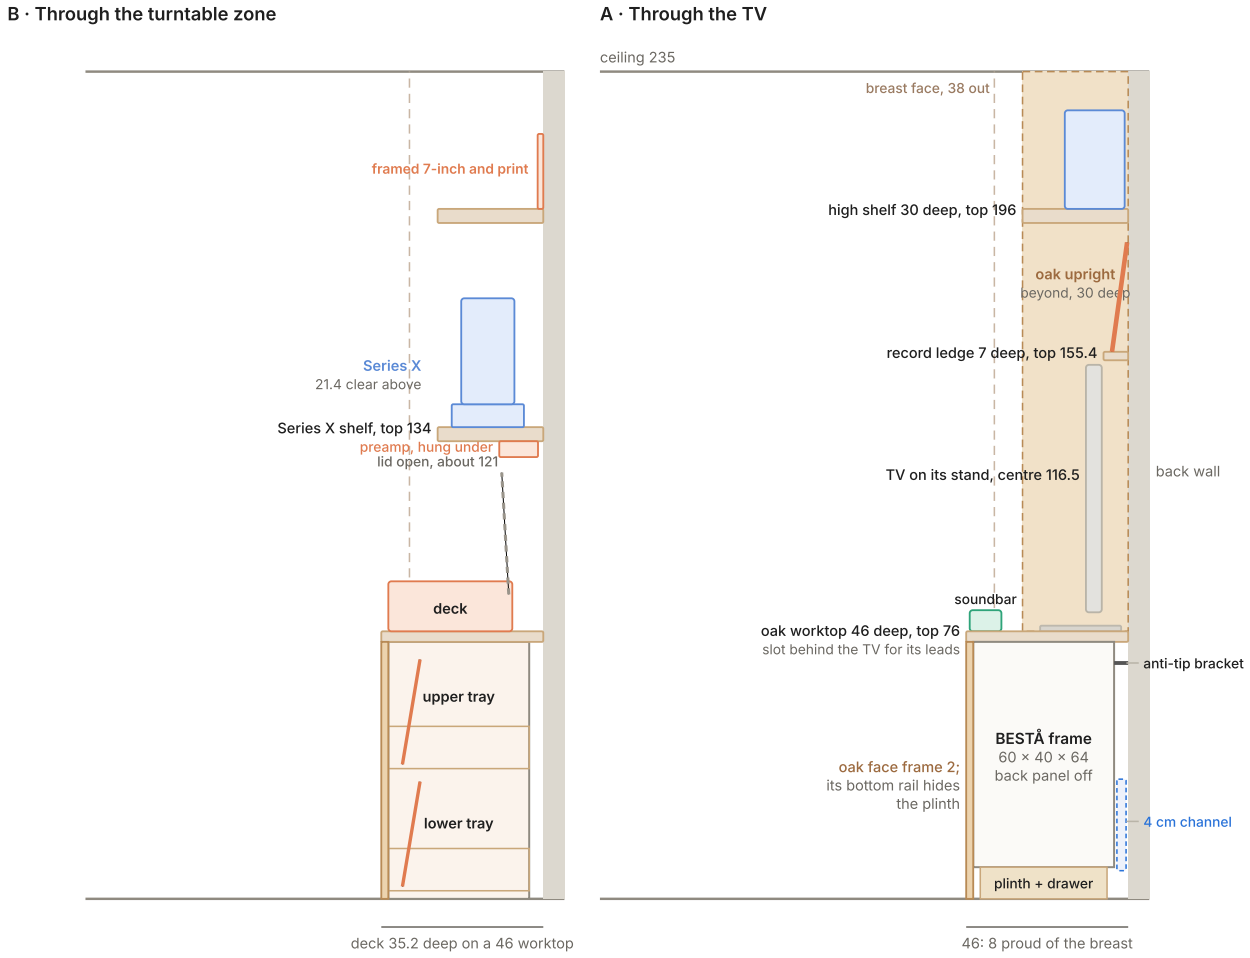

Cut list for this step

Part	From	Size (cm)	Qty	Notes
Face frame	Solid oak, hardwax oil	186 × 73 overall, 2 thick, stiles about 5 wide	1 set	End stiles scribed to the walls
Bay 3 sides	Birch ply, 18 mm	73 × 40	2	The record carcass, standing on the floor
Bay 3 top and bottom	Birch ply, 18 mm	56.4 × 40	2	Between the sides; back left open to the channel
Plinth rails	Birch ply, 18 mm	120 × 9	2	Front and back of the ladder frame under bays 1–2
Plinth cross-pieces	Birch ply, 18 mm	34.4 × 9	3	At both ends and under the bay 1–bay 2 joint, so the bay under bay 2 stays clear for the drawer

The plinth under bays 1 and 2

1. Lay the two 120 × 9 rails on edge, 38 cm apart outside, and stand the three 34.4 × 9 cross-pieces between them: one at each end and one in the middle, at 60.
2. Pre-drill, glue and screw through the rails into each cross-piece end with two 4 × 40 screws.
3. Measure both diagonals: when they're equal the frame is square. The plinth is 120 × 38 × 9. The opening between 0 and 60 (the end nearer the side wall) stays clear: it's the hidden drawer's bay, under bay 2.

4. Stand it in the alcove 63 cm from the side wall (bay 3 stands on the floor between it and the wall) and 4 cm off the back wall. Level it with shims, side to side and front to back.

The BESTÅ frames

5. Assemble both frames to IKEA's instructions, but leave the back panels off: the open backs are how the cables and the sub's port breathe.
6. Join the two frames side by side with IKEA's connectors.
7. Stand them on the plinth, their backs flush with its back edge, so their fronts sit 2 cm proud of the plinth (the face frame covers the step).

Bay 3, the carcass for the LP crates and the slim column

8. While the sides are flat, mark the runner lines on their inner faces: on the right side 2.3 and 37.0 cm up from the bottom edge, for the two LP crates; on the left side 2.3, 25.1 and 47.9, for the three slim drawers.
9. Stand the bottom panel between the two sides, flush with their bottom edges, and the top panel flush with their top edges. Pre-drill, countersink, glue and screw with four 4 × 50 screws a joint.
10. Check the diagonals for square. The carcass is 60 × 40 × 73, open at the back.
11. Stand it in its place, 3–63 from the side wall, its top level with the frames' tops at 73. Shim under it if the floor drops away.
12. Clamp it to bay 2 and fit two connector bolts at the front and two at the back.

Fix it to the wall

13. Screw a 4 cm spacer block to the back wall behind the top of each bay, at 68 high, with plugs.
14. Push the whole base back against the blocks.
15. Fit two anti-tip brackets per bay through the blocks into the wall. Do this before anything heavy goes in: a full LP crate pulled out is about 30 kg in front of the unit.
16. Lay a level across all three tops: within 1 mm over 186 cm. Shim and re-check.

The cable channel

17. Lay the flat two-compartment trunking on the floor in the 4 cm channel behind the base: mains on the wall side, data on the other.
18. Run the leads in now: the two mains leads from the side-wall socket enter through the face frame's notch and run back in the 3 cm filler beside bay 3; the Cat6 and Deco B's lead come down the right-hand corner.
19. Keep the channel behind bay 2 empty: the sub's port breathes into it. Switch 2 and the retro 6-way stand on edge behind bay 1.

Check before moving on: The tops level within 1 mm across 186 cm, and nothing rocks.

Step 7 · Fit the worktop · You + a helper · ½ day

MEDIA WALL

Buy first: 5 Oak joinery (the buy list).

Parts

- One solid oak worktop, 300 × 62 × 3, full stave
- A 60 mm brush strip and a 35 mm brush grommet

Hardware and fixings

- 4 × 30 mm screws with washers (9)
- Hardwax oil

Tools


- Hardboard or cardboard, 190 × 50, for the template
- Compass or a pencil on a block, for scribing
- Track saw or circular saw with a guide
- Jigsaw
- Router with a straight bit
- Random-orbit sander, 120 and 180 grit
- Drill-driver
- A helper



The finished media wall.

How the wall goes together, layer by layer

Side sections to scale, room on the left. Dashed: the upright and the breast's face beyond the cut, and the deck's lid open

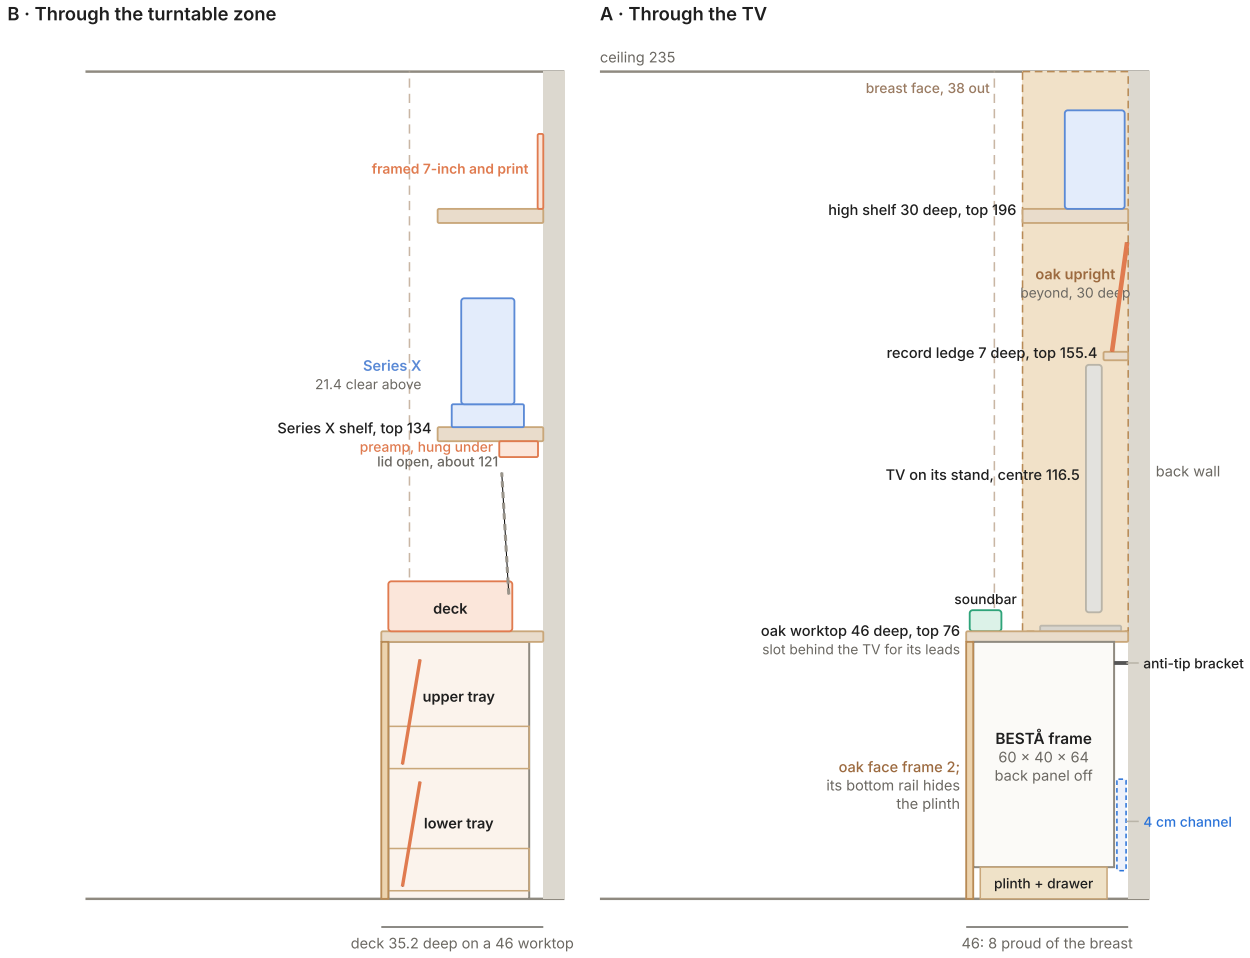

Cut list for this step

Part	From	Size (cm)	Qty	Notes
Worktop	Solid oak, hardwax oil	186 × 46 × 3	1	From one 300 × 62 full-stave worktop; chamfered front

Make a template

1. Cut the hardboard to about 190 × 50 and push it into the alcove at worktop height, its back edge against the back wall.
2. Set the compass to the widest gap at one end and run it down the side wall, so the pencil copies the wall's line onto the board. Cut to the line. Do the other end the same way.
3. Mark the front edge at 46 cm from the back wall all along. The template is now the worktop's exact shape.

Cut the oak

4. Lay the board best face up, grain running along its length. Lay the template on it and draw round it.
5. Cut just outside the line with the track saw, then sand or plane to the line.
6. Keep the offcut flat and oiled with the rest: it's spare oak for any repair.
7. Chamfer the worktop's top front edge with a 3 mm chamfer, sanded by hand.

Cut the openings

8. The TV slot: 3 cm wide, from 1 to 4 cm in from the back edge, running 78.25–158.25 from the side wall. Clamp a batten as a guide and rout it in passes, or drill each end and jigsaw between. Push the brush strip in.
9. The grommet hole behind the deck: 35 mm, its centre 2.5 cm from the back edge and 25.25 from the side wall.

Finish and fix

10. Sand to 120, then 180. Oil every face: top, underside, both ends and the cut edges of the slot. Two coats, a night between them.
11. Two of you lift it in and push it back to the wall. It should touch both side walls along their length.
12. Inside each bay, drill three 5 mm holes up through the top panel, elongated front to back to about 12 mm long, so the oak can move with the seasons.
13. Screw up through them into the worktop with 4 × 30 screws and washers. They must not come out through the top: check the length against a scrap.

Check before moving on: Tight to both walls, and the slot sits over the channel.

Step 8 · Fit out the base · You · 1–2 days

MEDIA WALL

Parts

- Four BESTÅ shelves 56 × 36
- Game drawer: 12 mm ply sides 35 × 15.5 (2), back 51.9 × 15.5, front panel 51.9 × 6; 9 mm base 52.5 × 34.4; 6 mm divider 51.9 × 9, bin walls 12.6 × 9 (2), bin floors 16 × 12.6 (2); oak lip 56.8 × 6.5 × 2; follower blocks
- LP crates (×2): 12 mm base 34.9 × 40; 9 mm sides 40 × 8 and ends 33.1 × 8; oak lip 36.3 × 5 × 1.5; felt
- Slim drawers (×3): 12 mm base 15.3 × 40; 6 mm sides 40 × 10, back and front 14.1 × 10; oak lip 16.5 × 5 × 1.5; a 2 m USB-C lead and a grommet for the top one
- Bay 3's divider: 12 mm ply 69.4 × 38
- Plinth drawer: 12 mm sides 34 × 4.4 and ends 49.6 × 4.4, 6 mm base 52 × 34, oak front 54 × 6 × 2
- Bay 2: 12 mm divider 35.3 × 38, part shelf 32.2 × 36, the sub's isolation riser about 22 × 28 × 3
- The oak face frame, 2 cm thick: stiles about 5 wide, rails; 186 × 73 overall

Hardware and fixings

- Runners: two pairs of 400 mm (68–70 kg) for the LP crates, three pairs of 400 mm light-duty for the slim drawers, one pair of 350 mm soft-close, one pair of 300 mm
- 3.5 × 16 mm screws for the runners (every hole)
- Four shelf pins for the part shelf
- Two small steel angle brackets for the divider
- Panel pins, wood glue, felt

Tools

- Drill-driver
- Router with a 6 mm straight bit (the game drawer's base groove)
- Combination square
- Spirit level
- Clamps
- Mitre saw or tenon saw




Every drawer out, in place.

The drawer layouts: where each drawer is and what goes in it

Seven drawers in the alcove base, all to scale: A the game drawer, B the hidden plinth drawer, C and D the LP crates, E to G the slim drawers beside them

Where each drawer is: the alcove base from the front

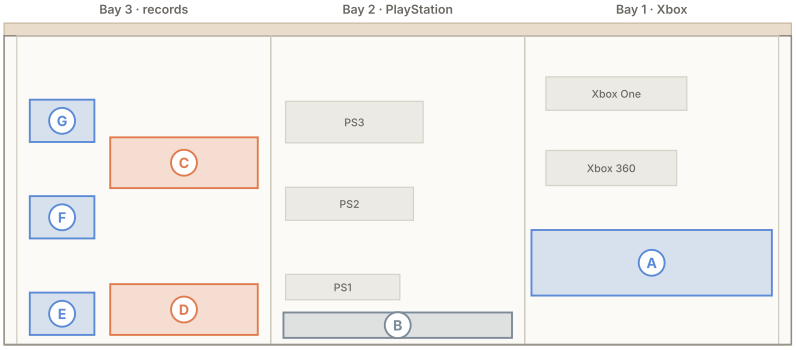


186 wide: 3 + 60 + 60 + 60 + 3 · worktop at 76 · front view, 3.6 px per cm

- A · Game drawer: bay 1, bottom row (11.6–27.1 up)
- B · Plinth drawer: hidden under bay 2 (1.6–7.6 up)
- C · Upper LP crate: bay 3, right (37–69.1 up)
- D · Lower LP crate: bay 3, right (2.3–34.4 up)
- E · Slim drawer, games: bay 3, left (2.3 up)
- F · Slim drawer, games: bay 3, left (25.1 up)
- G · Slim drawer, pads and remotes: bay 3, left (47.9 up)

Open one LP crate at a time: full, one is about 30 kg.
Anti-tip brackets fix the base to the wall first.
Every front: a plain oak lip, finger pull underneath.

A · Game drawer


box 54.3 × 35 · 350 mm soft-close runners · rolls out 30

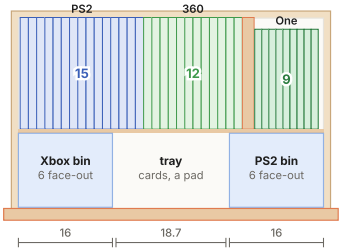

back: 36 spine-up, titles on top (19 cm cases on edge)
front: 12 face-out · about 48 games in all

B · Hidden plinth drawer


box 52 × 34 × 5 inside · 300 mm runners · finger pull

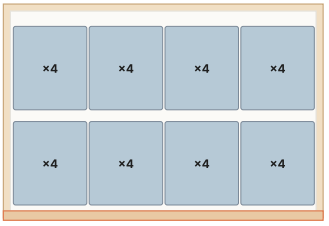

32 PS1 games flat: 8 stacks of 4 jewel cases
or remotes, spare pads, cables and manuals

C and D · LP crates

box 34.9 × 40 · 400 mm runners

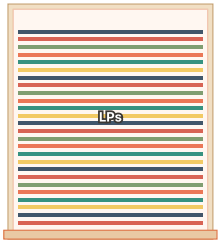

trough 33.1: snug, no dead space

face-out, leaning back 10°
~90 LPs each · two crates

E, F, G · Slim drawers

15.3 × 40 · 400 mm



14.1


E, F: ~22 games
each, face-out
G: 4 pads, remotes,
a charging lead

Plans drawn from above at 5 px per cm, front (the room) at the bottom; the elevation at 3.6 px per cm. Sizes: BESTÅ frame 60 × 40 × 64 (IKEA);
game cases 19 × 13.5 × 1.4 and 17 × 13.5 × 1.2; jewel case 14.2 × 12.5 × 1; LP sleeve 31.4; pads 16 × 10.6 × 6.6; runners Emuca 400 mm, Accuride 350 mm (see the fit proof).

The game drawer: covers on show at the front, every title readable from above at the back


Bay 1, bottom row. Section left, plan right. Nothing stands behind anything else

Side section through bay 1

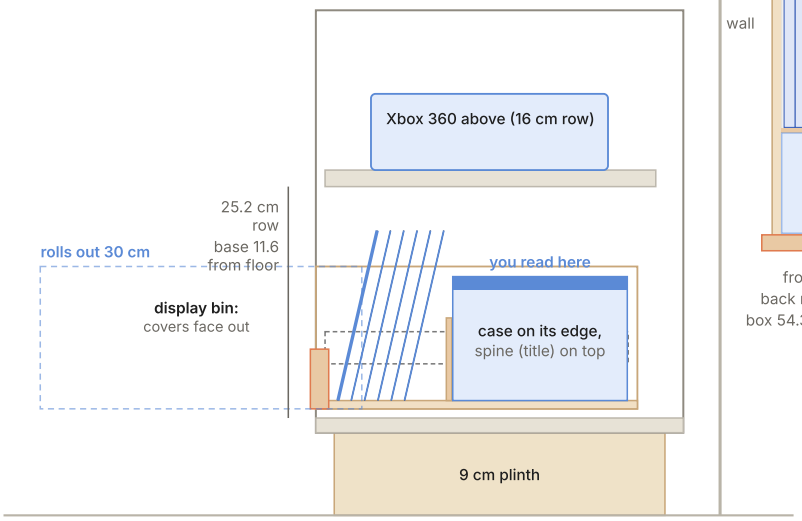

box 35 cm deep on 350 mm full-extension soft-close runners
5 cm free behind the box, then the 4 cm cable channel
bins: 19 cm cases leaning 13°, about 18.5 cm tall

Top view, drawer pulled out

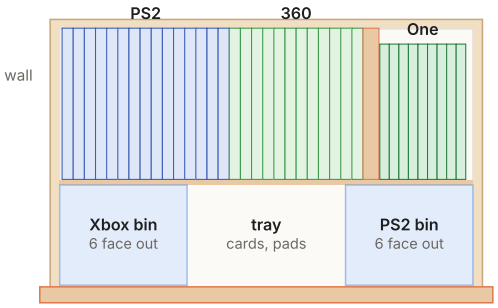


front: oak lip with finger pull, matching the record drawer
back row: 15 PS2 + 12 Xbox 360 + follower block + 9 Xbox One
box 54.3 × 35 cm outside · 51.9 cm inside · 16 cm bins, 18.7 cm tray

Bay 3: two LP crates under the turntable, a slim game column beside them


Section left through the LP crates, plan right. Pull a crate and flip through the covers like a record shop browser; the slim drawers flip the same way for games

Side section through bay 3

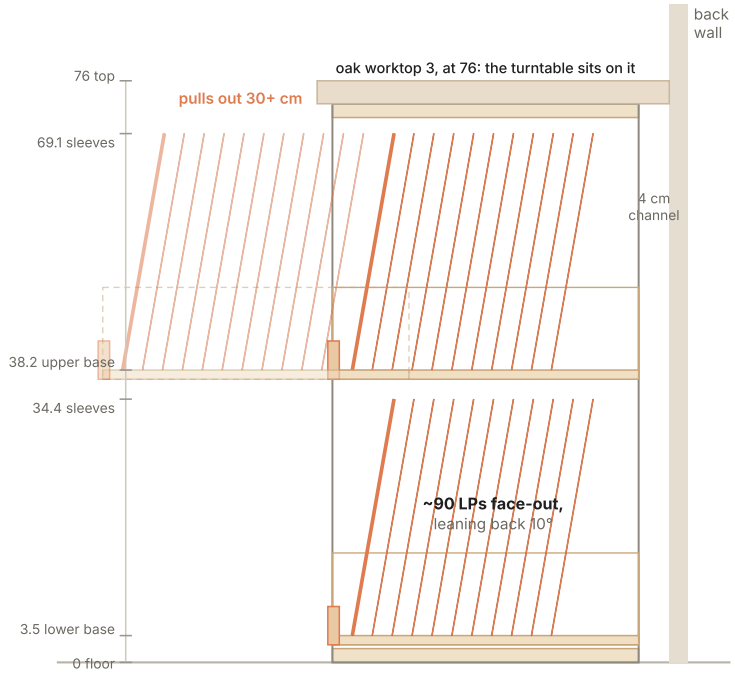

carcass 18 mm birch ply, 60 × 40 × 73, back open to the channel · crates 40 deep on 400 mm runners
12 mm base, 9 mm sides, 5 cm oak lip · 2.6 and 2.1 cm finger room (top panel at 71.2)

Bay 3 from above

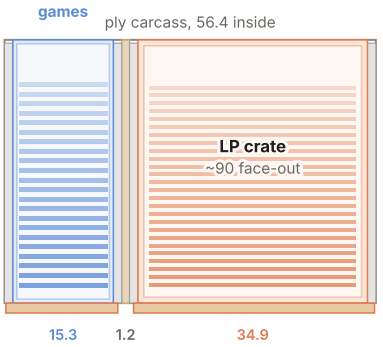


LP crate 34.9 × 40, a 33.1 trough: LPs snug, no dead space
slim drawers 15.3 × 40, 14.1 inside: DVD-size cases face-out
12 mm ply divider · 12.7 mm runners each side
an LP crate is about 30 kg full: open one at a time

Storage options: what fits each space, to scale


Front views and views from above of every storage space in the wall, with counts, and where the overflow would go

Bays 1 and 2: inside each BESTÅ frame

56.8 wide × 40 deep inside; rows as planned, front view

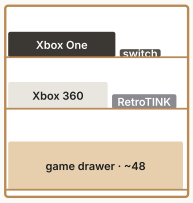

Bay 1 · Xbox

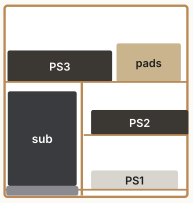

Bay 2 · PlayStation + sub

Swap any 16 cm row for two KUGGIS boxes, 26 × 35 × 15, side by side (52 of 56.8 wide).

Bay 3 from above: LP crate and slim drawer

56.4 inside: a 15.3 slim drawer, the divider, a 34.9 LP crate



games | divider | LPs: no dead space

≈ 90 LPs a crate, two crates

= 180 LPs, all face-out


beside them 44 games face-out

and a drawer for pads and remotes

trough 33.1: thick outer sleeves fit

Hidden plinth drawer, from above

box 52 × 34 × 5 inside, under bay 2; finger pull, not push-to-open

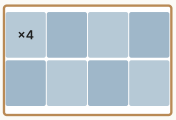

32 PS1 games flat

jewel cases 14.2 × 12.5 × 1, 8 stacks of 4

or: remotes, spare pads, cables, manuals

Series X shelf, front view

50.5 wide, 134 to the high shelf at 192: 58 clear



15 air each side, 21.4 above

Microsoft: at least 4 above, 10–15 recommended all round

Under it: the deck, lid opens to 121

High shelf, front view: as planned, or as LP overflow

186 long, 30 deep, 39 clear to the ceiling; the left-hand 50.5 keeps the framed 7-inch and the print



about 1 m of books, a lidded box, a print

As planned



≈ 380 LPs spine-out at about 3.3 mm each; a 31.4 sleeve overhangs the 30 cm shelf by 1.4

As LP overflow

PC shelf, from above

82 along the wall × 28 out, at 155.4; keyboard tray in a 7 cm housing under it



side wall along the top · alcove to the right

Keyboard tray: 300 mm runners, rolls 25 cm out; the housing stops 12 short of the sofa end so the cables drop past it. Full-size wireless keyboard and mouse.

If the collection outgrows the wall

two overflow options, both face-out or spine-out to match

1 · LPs spine-out on the high shelf: about 380 more

No building; books move to the second option's top.

2 · A second record unit, west of the sofa, under the window

Another LP column like bay 3 (40 × 46 × 73, two crates): 180 LPs.
At x 300–360 it leaves 123 cm to the table set for six (100 to walk).



front view, 60 × 73 (shown at half height)

All to one scale, 2.2 px per cm. Sizes: KUGGIS box 26 × 35 × 15 (IKEA); jewel case 142 × 125 × 10 mm (Wikipedia: Optical disc packaging); consoles, sleeves, Series X and the trays from the fit proof (section 3 of the plan).

Cut list for this step

Part	From	Size (cm)	Qty	Notes
Drawer fronts	Solid oak, hardwax oil	game drawer 56.8 × 6.5 × 2 · plinth drawer 54 × 6 × 2	1 · 1	Finger pull cut underneath
LP crate lips · slim drawer lips	Solid oak, hardwax oil	36.3 × 5 × 1.5 · 16.5 × 5 × 1.5	2 · 3	Cut to the face frame's openings, less 3 mm

Follower blocks · Xbox One lift block	Solid oak, hardwax oil	19 × 12 × 2 · 15 × 12 × 2	2 · 1	Offcuts, felted underneath
Game drawer sides	Birch ply, 12 mm	35 × 15.5	2	
Game drawer back · front panel	Birch ply, 12 mm	51.9 × 15.5 · 51.9 × 6	1 · 1	
LP crate bases · slim drawer bases	Birch ply, 12 mm	34.9 × 40 · 15.3 × 40	2 · 3	The sides and ends stand on them
Bay 3 divider	Birch ply, 12 mm	69.4 × 38	1	17.8 in from the left side, the full height inside
Plinth drawer sides · ends	Birch ply, 12 mm	34 × 4.4 · 49.6 × 4.4	2 · 2	A 52 × 34 × 5 box
Bay 2 divider · part shelf	Birch ply, 12 mm	35.3 × 38 · 32.2 × 36	1 · 1	The sub's column on the left; the PS2 over the PS1 on the right
Game drawer base	Birch ply, 9 mm	52.5 × 34.4	1	In a 6 mm groove
LP crate sides · ends	Birch ply, 9 mm	40 × 8 · 33.1 × 8	4 · 4	Two of each per crate: a 33 cm trough
Game drawer cross divider	Birch ply, 6 mm	51.9 × 9	1	13 cm back from the front
Game drawer bin walls · bin floors	Birch ply, 6 mm	12.6 × 9 · 16 × 12.6	2 · 2	Floors raked so the cases lean about 13°
Plinth drawer base	Birch ply, 6 mm	52 × 34	1	Screwed under the box
Slim drawer sides · backs and fronts	Birch ply, 6 mm	40 × 10 · 14.1 × 10	6 · 6	Three boxes 15.3 wide, 14.1 inside
LP crate runners · slim drawer runners	Hardware	400 mm full extension, 68–70 kg a pair · 400 mm light duty	2 pairs · 3 pairs	Into bay 3's sides and the divider
Game drawer runners	Hardware	350 mm full extension, soft-close	1 pair	Accuride DZ3832EC or Screwfix 964VN

Plinth drawer and keyboard tray runners	Hardware	300 mm full extension · 300 mm light duty	1 pair · 1 pair	
Sub isolation riser	Hardware	dense foam or sorbothane, about 22 × 28 × 3	1	Under the sub in bay 2

The console shelves

1. Bay 1, from the top: rows of 16 (Xbox One), 16 (Xbox 360), then the game drawer's 25.2. Put the shelves on the pin holes nearest those heights.
2. Bay 2: the PS3's row of 23.7 at the top, on a full-width shelf. Below it, the PS2 and the PS1 sit beside the sub (next part).

Bay 2's sub column

3. Stand the 12 mm divider on the bay's floor, 23.4 cm from the bay's left inner face, tight under the PS3 shelf. Check it's plumb.
4. Fix it with one small angle bracket at the bottom (into the frame's bottom panel) and one at the top (into the PS3 shelf's underside).
5. Drill two 5 mm pin holes in the divider's right face at the height of the frame's pin holes for the PS2/PS1 shelf. Fit the part shelf on four pins.
6. Pair the sub with the soundbar now: its PAIR button is on the back, and it's hard to reach once it's in.
7. Lay the isolation riser on the column's floor, its front edge flush with the frame's front.
8. Stand the sub on it with the grille facing the room, centred: 1 cm to the divider, 1 cm to the frame's side. Slide it forward until its front is flush with the face frame's front (2 cm proud of the frame). Run its lead out of the back.
9. Check it touches nothing but the riser. If it does, a sheet of felt between, or nudge it.

The game drawer (bay 1, bottom row)

10. Fit the 350 mm runners to the frame's sides, level, so the drawer's base will sit about 1 cm above the frame's bottom panel. Drill pilot holes: BESTÅ sides are particleboard. If a screw won't hold, glue a 12 mm ply packer behind the runner.
11. Rout a 6 mm deep groove 1 cm up from the bottom on the inner faces of the sides, back and front panel, 9 mm wide, for the base.
12. Glue and screw the box together round the base: outside 54.3 × 35. Check the width against the runner maker's figure (usually the opening less 25.4 mm) before the glue sets.
13. Fit the cross divider 13 cm back from the front, and the two bin walls 16 cm in from each side. Glue in the bin floors with a slight back-rake, so the cases lean about 13°.
14. Felt the base and make the follower blocks.
15. Fit the runners' inner members to the box, hang it, and check it runs true empty.

Bay 3: the divider, the LP crates and the slim drawers

16. Stand the 12 mm divider in the bay, its left face 17.8 cm from the left side's inner face, the full height inside. Check it's plumb and parallel to the side at front and back (measure both), then fix it with two small angle brackets top and bottom.
17. Mark the runner lines on the divider's faces: on its right face 2.3 and 37.0 (the crates), on its left face 2.3, 25.1 and 47.9 (the slim drawers), matching the lines on the sides.
18. Screw the crates' 400 mm runners to the right side and the divider's right face; the slim drawers' to the left side and the divider's left face. Use every hole: a full crate is about 30 kg.
19. For each LP crate, glue and pin the two 40 × 8 sides and two 33.1 × 8 ends on top of the 34.9 × 40 base. The trough is 33 inside: snug for 31.4 sleeves, like a record shop's crate.
20. Glue a raked rest (an oak offcut) at the back of each crate, so the sleeves lean back about 10°. Felt the trough.

21. For each slim drawer, glue and pin the 6 mm sides, back and front onto the 15.3 × 40 base: 14.1 inside, for 13.5 cm game cases face-out. In the top one, glue a 6 mm strip down the middle (two pads on edge each side) and drill a 20 mm hole in the back for the USB-C lead's grommet.
22. Hang each box and run it in and out empty, then with ten records or ten games. Feed the charging lead from a USB plug on the 10-gang down the channel, with a loop of slack so the drawer opens fully.

The hidden plinth drawer

23. Make the box: the two 34 × 4.4 sides, the two 49.6 × 4.4 ends between them, the 6 mm base screwed underneath. It's 52 × 34 × 5.
24. Pack the plinth's inner faces under bay 2 with ply strips so the 300 mm runners sit the box's width plus their allowance apart, and fit the runners with the box 1.6 cm off the floor.
25. Felt the runners: the drawer sits under the sub.

The face frame and the drawer fronts

26. Cut the stiles (about 5 wide, and one 2 wide over bay 3's divider) and the rails from 2 cm oak. The bottom rail covers the plinth, 9 tall under bays 1–2, with an opening 54 × 6 for the plinth drawer, 1.6 up, under bay 2.
27. Scribe the two end stiles to the walls, then glue and pin the frame to the frames' fronts and bay 3. Notch the bottom rail's left end for the two socket leads.
28. Screw the oak lips onto the game drawer, the two LP crates, the three slim drawers and the plinth drawer from inside each box, with a 2–3 mm gap all round to the face frame.
29. Cut each finger pull underneath its lip: a cove routed along the back of the bottom edge.

Check before moving on: Every drawer runs smoothly, the two crates clear each other by 2 cm, and the slim drawers by 2.8.

Step 9 · Uprights and shelves · You + a helper · 2–3 days

MEDIA WALL

Parts

- Two oak uprights, 165 × 30 × 4.5 (cut to fit)
- High shelf: 128.9 × 30 × 4 and 51.7 × 30 × 4
- Record ledge 128.9 × 7 × 2.4 and its lip
- Series X shelf 55 × 30 × 4
- Two oak cleats for the reveal, 30 long
- The “now playing” ledge 105.5 × 7 × 2.4 and its lip, two concealed brackets
- The glass case: oak sides 85 × 12 × 2 (2), top and bottom 86 × 12 × 2 (2), a 6 mm oak-faced ply back 86 × 81, a 4 mm toughened front 85.6 × 82.2, three 6 mm toughened shelves 85.6 × 9.2, two oak cleat strips 80 × 6 × 1.8 cut at 45°
- Oak wedges (2 + spares), 10 mm oak dowel for pegs and the uprights' dowels

Hardware and fixings

- Four concealed upright brackets
- 5 × 60 mm screws and plugs
- Wood glue
- LED strip in its aluminium channel (from the lighting phase)
- Twelve 5 mm shelf pins for glass, with rubber sleeves
- A warm white LED strip, 85 cm, for the case


Tools

- Router with a straight bit and a guide batten
- Chisels 6, 12 and 25 mm, and a mallet
- Japanese pull saw
- Drill with a 10 mm brad-point bit and a 20 mm bit
- Dowel jig or dowel centres
- Combination square, marking knife
- Spirit level and laser
- Clamps
- A helper


Artisan oak: how the joints work

Drawn to scale at 7 px per cm. The joints carry the load and are left on show, finished in hardwax oil

A · Wedged through-tenons, from above

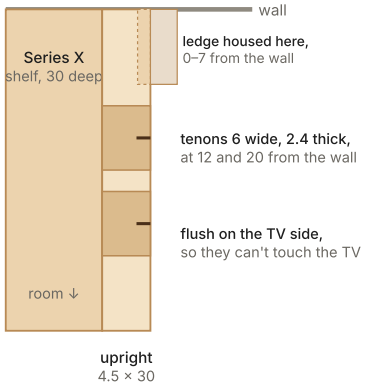


B · The same joint from the front

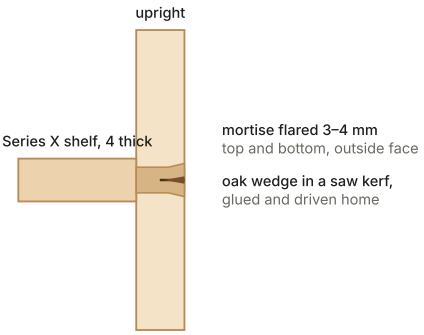

The kerf runs flat, so the wedge spreads the tenon up and down, along the upright's grain, and can't split it.

C · Housed shelf, pegged

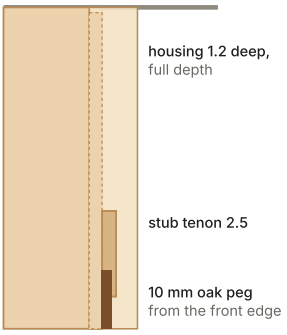


- Through-tenons (A, B): the Series X shelf (top 134) passes through the left upright on two tenons, 12 and 20 cm from the wall, wedged and planed flush: proud, they'd touch the TV.
- Housed and pegged (C): the three lengths of the high shelf (top 196) and the record ledge (top 155.4). The peg shows as a dark dot on the upright's face.
- Uprights: 159 long, worktop to ceiling, each on two 10 mm dowels into the worktop, scribed to the ceiling, with two concealed brackets. The left one also screws to the side wall, and

How the wall goes together, layer by layer


Side sections to scale, room on the left. Dashed: the upright and the breast's face beyond the cut, and the deck's lid open

B · Through the turntable zone

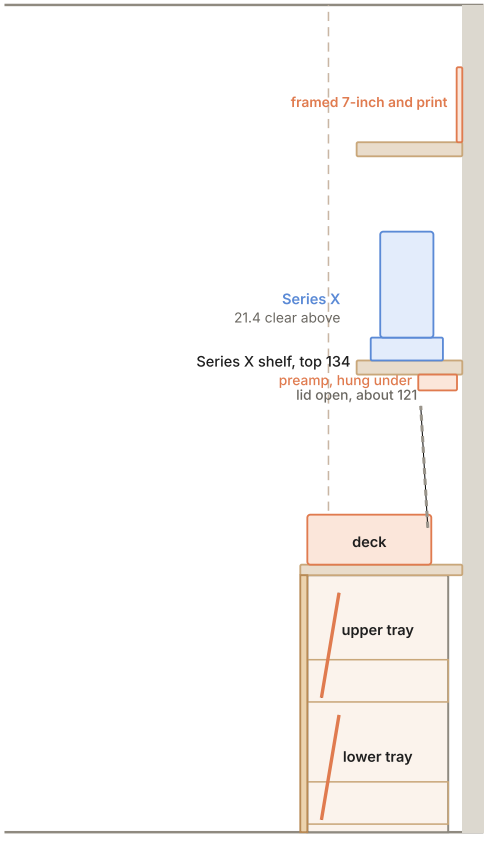

deck 35.2 deep on a 46 worktop

A · Through the TV

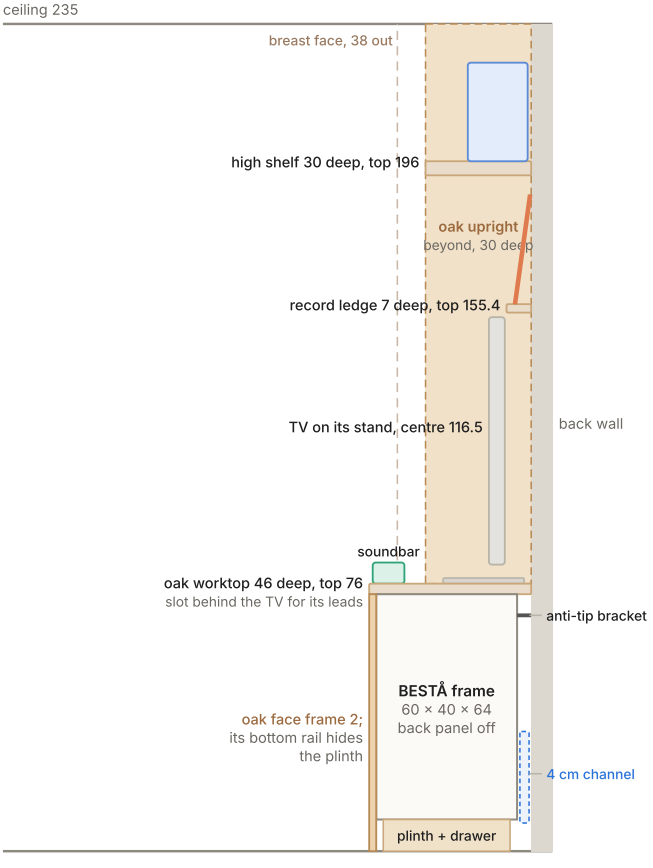

46: 8 proud of the breast

Cut list for this step

Part	From	Size (cm)	Qty	Notes
Uprights	Solid oak, hardwax oil	159 × 30 × 4.5	2	Buy 165 long and scribe to the ceiling; housings, mortises, LED and cable grooves cut on the bench
High shelf, long length	Solid oak, hardwax oil	128.9 × 30 × 4	1	Housed 1.2 into both uprights and pegged
High shelf, short length	Solid oak, hardwax oil	51.7 × 30 × 4	1	Housed into the left upright; cleat on the side wall
Series X shelf	Solid oak, hardwax oil	55 × 30 × 4	1	Two through-tenons 6 × 2.4, wedged flush
Record ledge	Solid oak, hardwax oil	128.9 × 7 × 2.4	1	Housed and pegged
Ledge lips	Solid oak, hardwax oil	128.9 × 1.5 × 0.9 · 126 × 1.5 × 0.9	1 · 1	Glued along the ledge's and the run's front edges
“Now playing” ledge	Solid oak, hardwax oil	105.5 × 7 × 2.4, lip 1.5	1	On the breast at 104, two concealed brackets (with the table by the stairs)
Wedges · pegs · dowels	Solid oak, hardwax oil	6 × 3, tapering · 10 mm dowel, 5 long · 10 mm dowel	2 + spares · 6 + 6 · 8	Glued

Cut the uprights to length

1. Measure from the worktop to the ceiling at each upright's position. The plan says 159; ceilings vary.
2. Cut each upright 2 mm under its measurement, then scribe its top to the ceiling as you did the worktop.
3. Mark each upright's faces: which side faces the TV, and the back edge that goes against the wall.

The housings (both uprights)

4. Measure from each upright's foot (the end on the worktop). The high shelf's housing is 116–120 up, the full 30 depth, 1.2 deep, on the TV-side face of both uprights.
5. The record ledge's housing is 77–79.4 up, 0–7 from the back edge, 1.2 deep, on the TV-side face of both.
6. On the left upright's other face (the turntable side), a second high shelf housing at 116–120, full depth, for the short length.
7. Clamp a straight batten as a guide, set the router 4 mm deep and rout, then step down to 12 mm in passes. Square the ends with a chisel. Practise on an offcut first.

The through-mortises (left upright)

8. Two mortises, each 6 wide and 2.4 tall, at 54.8–57.2 up from the foot, 12–18 and 20–26 cm from the back edge.
9. Mark them on both faces with a square and a knife. Drill most of each out with the 20 mm bit, halfway from each face, then chisel to the lines.
10. On the TV-side face, flare the top and bottom of each mortise outwards 3–4 mm, for the wedges.

The tenons (Series X shelf)

11. On the shelf's west end (the end that goes through the upright), mark two tenons 6 wide and 2.4 thick, centred in its 4 cm thickness, 12–18 and 20–26 from its back edge, 4.5 long.

12. Saw the shoulders and cheeks, and cut away the rest of the end back to the shoulder line.
13. Saw a kerf 3 cm deep across the middle of each tenon, parallel to the shelf's faces.
14. Test-fit through the mortises: snug, pushed in by hand.

The grooves

15. On each upright's TV-side face, rout a groove for the LED channel (usually about 1.7 wide × 0.8 deep: check yours), 2 cm in from the front edge, from 2 cm above the worktop to just under the high shelf's housing.
16. On each upright's back edge, rout a 2 × 1.5 cable groove the full length: the left one for the Series X's HDMI and power and the vinyl lead, the right one for Deco B's 12 V and patch leads.
17. Notch both uprights' tops for the ceiling LED strip.

Dry-fit, then fix

18. Lay each upright on the floor with its shelves in their housings. Check every joint closes before any glue.
19. Drill two 10 mm holes 3 cm deep in each upright's foot, and matching holes in the worktop at the marked positions (dowel centres make this exact). Glue the dowels into the uprights only, so they can come out.
20. Lay the Series X's and the vinyl leads into the left upright's back groove, and Deco B's into the right one's.
21. Stand the right upright on its dowels against the breast's side. Screw it to the reveal through three countersunk holes, with plugs, and plug the holes with oak.
22. Stand the left upright on its dowels, check it's plumb with the laser, and fix it to the back wall with the concealed brackets.
23. Slide the long high shelf and the record ledge into their housings from the front.
24. Screw a 30 cm cleat to the breast's side face (the reveal) for the short high shelf, and another at the Series X shelf's underside height. Slide the short high shelf in from the front onto its cleat and into its housing.
25. Feed the Series X shelf's tenons through the mortises from the turntable side, onto its cleat. Glue the wedges and drive them into the kerfs from the TV side. When dry, saw them flush and plane: proud, they'd touch the TV.
26. Pegs: drill 10 mm through each upright's face into the housed shelf ends, 4 cm deep, about 4 cm from the front edge. Glue in a peg and saw it flush.

The “now playing” ledge on the breast

27. Cut it 105.5 × 7 × 2.4 from the shelf board's offcut and glue a 1.5 cm lip along its front edge, so a sleeve stands against the wall without sliding.
28. Mark a level line on the chimney breast at 101.6 (the ledge's underside), 6 cm in from each side of the breast.
29. Fit its two concealed brackets to the maker's instructions, slide the ledge on, and stand three LPs on it.

The glass display case on the breast

30. Rout a 5 mm groove 6 mm deep along the inside of the top and bottom pieces, 1.5 cm in from their front edges, for the glass front: the top's groove 12 mm deep, so the front lifts up into it and drops into the bottom one.
31. Rout a 6 mm rebate along the back edges of all four pieces for the ply back.
32. Drill the shelf-pin holes on the sides' inner faces, front and back, 3 cm in from each edge: at 19, 40 and 61 above the bottom piece's top (the shelves at 158, 179 and 200 on the wall).
33. Glue and dowel the frame together (sides between the top and the bottom), check the diagonals, then glue and pin the ply back into its rebate.
34. Stick the LED strip under the top, just behind the groove, and run its lead out through a 10 mm hole in the back's top corner, down the breast's side to a plug (the strips' app runs it).
35. Screw one cleat strip to the case's back, 10 under its top, the bevel down and facing the wall. Screw the other to the breast at 212 (its top edge), level, the bevel up and facing out, with 5 × 60 screws in plugs every 20 cm.
36. Lift the case onto the cleat (two people: about 16 kg before the glass), check it's level, and fix its bottom edge to the breast with two small mirror plates.
37. Fit the pins and lay in the three glass shelves; lift the front up into the top groove and drop it into the bottom one. Fill it.

Check before moving on: Uprights plumb, shelves level, the TV slides in with 2 cm each side, and the “now playing” ledge is level with an LP standing on it.

Step 10 · The side-wall run and the PC end · You · 1 day

MEDIA WALL

Parts

- Wrap ledge 134 × 7 × 2.4 and its lip
- PC shelf 82 × 28 × 4
- Two oak cleats, 2 cm
- Keyboard tray: oak housing 70 × 28 × 7 (sides 7 × 2), 12 mm ply tray 54 × 26 with an oak lip

Hardware and fixings

- Two concealed shelf brackets rated 40 kg+ a pair
- 300 mm light-duty runners, one pair
- An oak-coloured brush grommet
- 10 mm dowels (2)
- 5 × 60 mm screws and plugs

Tools


- SDS drill
- Drill-driver
- Dowel jig
- Spirit level and laser
- Jigsaw
- Clamps



The side-wall run and the PC end.

The side wall: the ledge wraps the corner, the PC sits above the sofa

One oak line at 155.4 cm: the record ledge from the upright, then the PC shelf over the end of the sofa, clear of the TV's sightlines

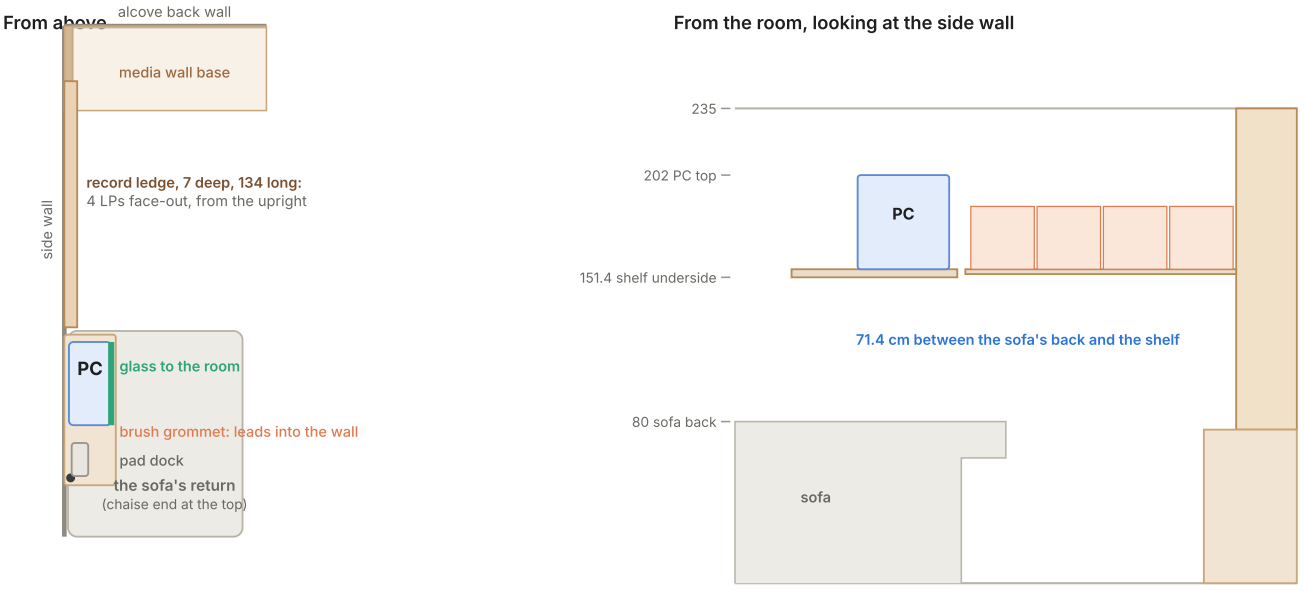

Cut list for this step

Part	From	Size (cm)	Qty	Notes
Side-wall run	Solid oak, hardwax oil	220 long × 7 sweeping to 28 × 4, from one 225 × 30 × 4 board	1	On an oak cleat, concealed brackets under the PC end; LED groove under the front edge
Keyboard tray housing	Solid oak, hardwax oil	70 × 28 × 7, sides 7 × 2	1	Screwed under the PC shelf
Keyboard tray	Birch ply, 12 mm	54 × 26	1	Oak lip on its front edge
Concealed brackets	Hardware	for the uprights; two for the PC shelf, 40 kg+ a pair	1 set	

The cleats

1. Screw the first cleat to the side wall with its top on the 153 line, from 30 cm out from the back wall (in line with the uprights' fronts) to 164 cm out. Plugs every 25 cm.
2. Screw the second with its top at 151.4 (the PC shelf's underside), from 168 to 250 cm out.

The wrap ledge

3. Lay the ledge on its cleat, its alcove end in line with the uprights' fronts, and screw up through the cleat into it.
4. Glue the lip along its front edge.

The PC shelf and its tray

5. Fit the concealed brackets into the wall at the shelf's height, through the cleat, to the maker's instructions.
6. Cut the grommet hole in the shelf's back corner, over the top of the chased conduit.
7. Screw the keyboard tray's housing to the shelf's underside, stopping 12 cm short of the sofa end so the cables drop past it. Fit the runners inside it and slide the tray in.
8. Slide the shelf onto its brackets and down onto the cleat. Lean on it: it shouldn't move.

The PC's leads

9. Fit the brush grommet. Pull the HDMI (active optical: the end marked "source" at the PC) and the Cat6 down the 38 mm conduit with its draw wire.

10. Take the plug off the C13 lead, feed its bare end down the 25 mm conduit, and at the bottom fit the rewireable plug: brown to L, blue to N, green-and-yellow to E, the cord grip on the outer sheath, a 13 A fuse.
11. At the bottom, all three run behind the skirting into the plinth's notch and the channel; the mains lead goes on to the 10-gang behind the TV.

The PC's extras

12. Screw the powered USB hub under the side run's front edge, below the PC, ports facing the sofa. Its adapter plugs into the 10-gang along the PC's mains route; its lead runs up through the grommet to the PC.
13. Remote power button: with the PC unplugged, push the receiver card into a spare slot and plug its lead onto the motherboard's power-switch pins (the case's own button lead plugs into the card's pass-through). Stick the push button to the wrap ledge's underside, by the sofa end.
14. Lay the magnetic dust filter on the PC's top exhaust; brush it off once a month.

Check before moving on: One level line with the ledge over the TV, the sweep runs smooth with no flat spots, and the PC end holds your weight leaning on it.

Step 11 · The dining cabinet: the table and the six chairs in one · You + a helper · 3–4 days

DINING TABLE

Buy first: 6 Dining wall (the buy list).

Parts

- Oak-faced ply, cut to size by the merchant, 18 mm: four ends 189 × 23.4; the table box's top and floor 91 × 23.4 and the chair box's 49 × 23.4; the linen shelf 91 × 16.8 and the chair shelf 49 × 20.8; the table door 90.5 × 183.8 and the chair door 48.5 × 183.8 (oak both sides, grain upright, all edges lipped)
- 6 mm ply: the two backs, 91 × 184.2 and 49 × 184.2
- Solid oak: two table halves, each a centre 78.5 × 90 × 2.7 of edge-glued staves and two breadboard ends 90 × 7 × 2.7; the hinge rail 91 × 16.8 × 7; eight apron rails 2 thick × 4.6 deep (outer half: two 86.5 long, two 78; inner half: two 84.9 long, two 78); four legs 6.5 × 4.5, cut 70 long and trimmed to the floor; two door stops 8 × 2.5 × 1.2; four 1.2 cm battens 3 wide for the plinth, two 91 and two 49 long

Hardware and fixings

- Altro continuous piano hinge, 1800 × 50, cut to 90 (the table's foot)
- Two Altro continuous piano hinges, 1800 × 32 × 1 mm, stainless (the doors), not cut
- Three Lee Valley 40574 narrow flip-top hinges (1.27 × 7.0) and their screws
- Folding, self-locking table-leg brackets, a set of four
- Sixteen figure-8 tabletop fasteners
- Four magnetic catches
- A 10 mm flush magnet and two steel cups
- A small brass cup hook (the cloth bag)
- Two steel angle brackets, plugs and 5 × 70 mm screws for your solid wall
- 4 × 50, 4 × 30 and 3.5 × 16 mm wood screws (the short ones for the piano hinges), 25 mm panel pins, wood glue
- Plastic shims, felt pads, hardwax oil, 10 mm oak dowel for the breadboard pegs

Tools


- Drill-driver and a countersink
- A self-centring (Vix) bit for the piano hinges' pilot holes
- 35 mm and 10 mm Forstner bits
- Router with straight bits and a guide
- Jigsaw or track saw
- Hacksaw (to cut the table's piano hinge)
- Chisels
- Clamps, at least four 100 cm
- Long spirit level and a square
- Tape measure and pencil
- A helper for standing the boxes and hanging the table



The dining cabinet open for six.


The compact cabinet's two boxes, from the front

Doors and table off; heights to each panel's top face. Ends, tops and floors 23.4 deep; inside 20.8 deep, 2 back for the inset doors.

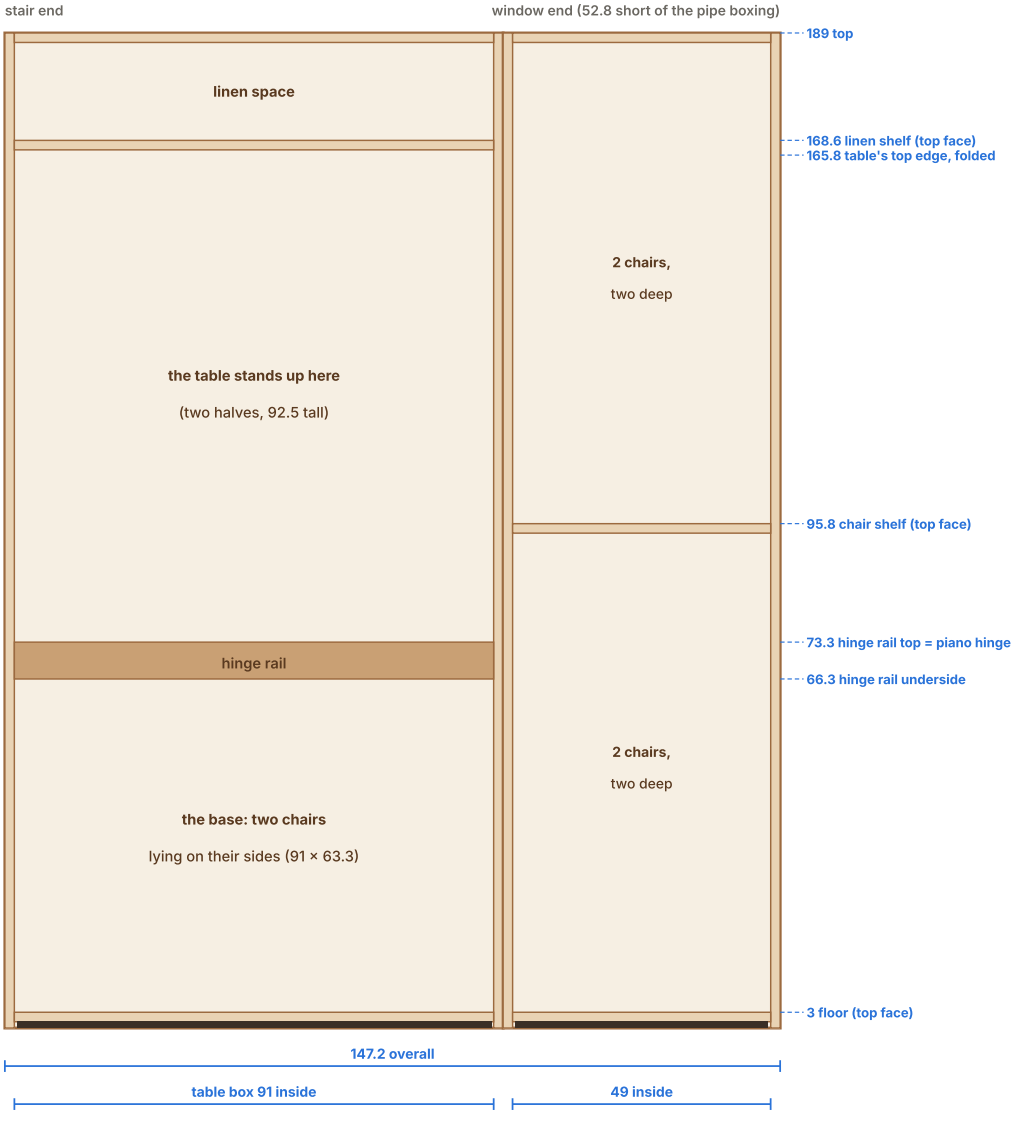


The table's two halves, from underneath

Laid out open, to scale. Breadboard ends 7 wide; apron frame 2 × 4.6, 4 in from the sides, 3 from the ends; legs fold inside it.

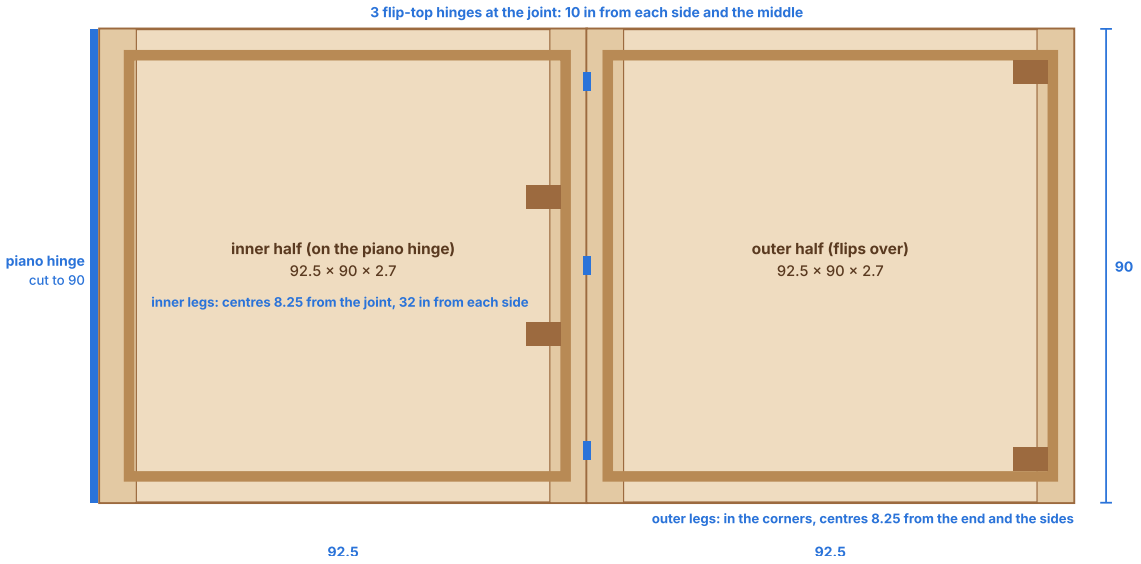


The compact cabinet: how the table comes down

Through the table box, wall on the right. Folded (dashed): 4 back from the door, two chairs lying under it. Open: the door turned back, the table down.

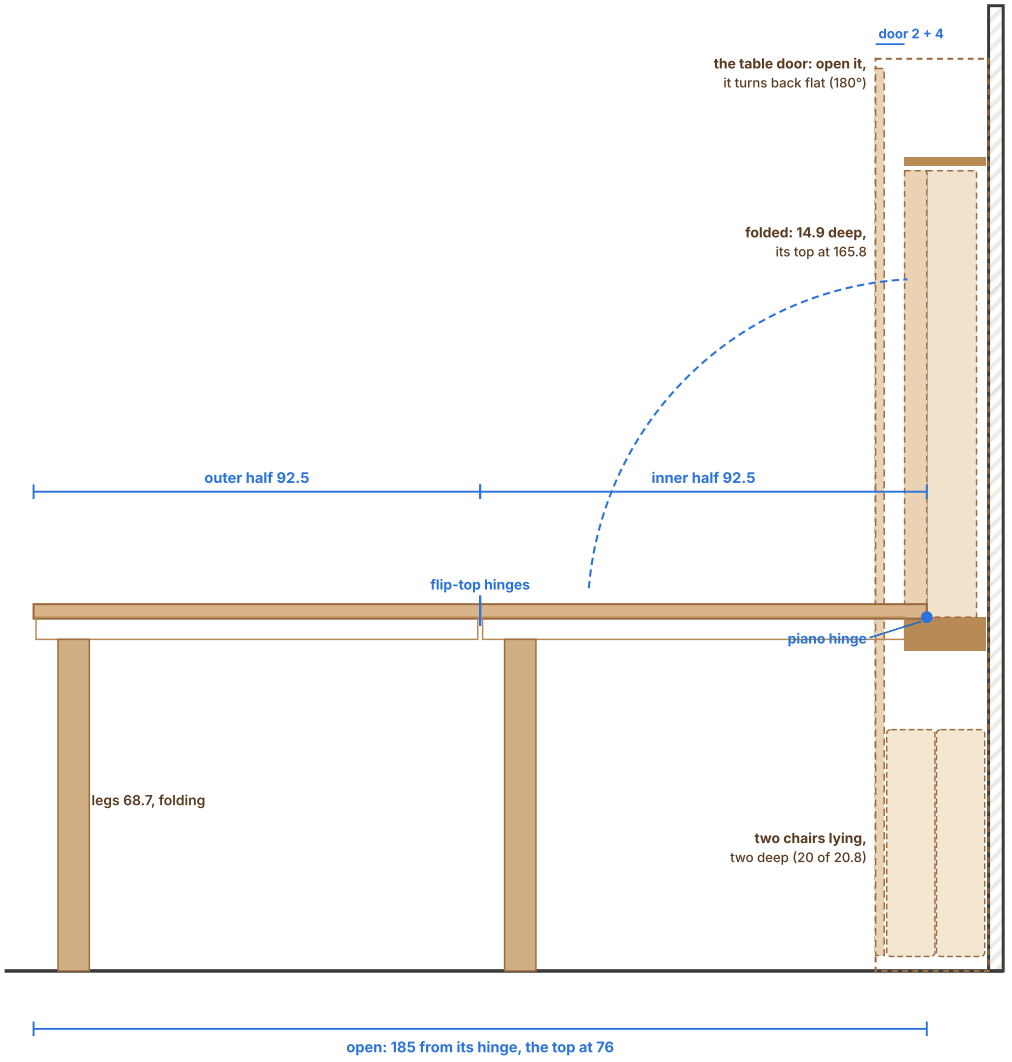

The compact dining cabinet, packed away

The stairs wall from the room, to scale (1 cm = 2.55 px). Doors see-through: the table and two chairs behind the table door, four chairs behind the chair door.

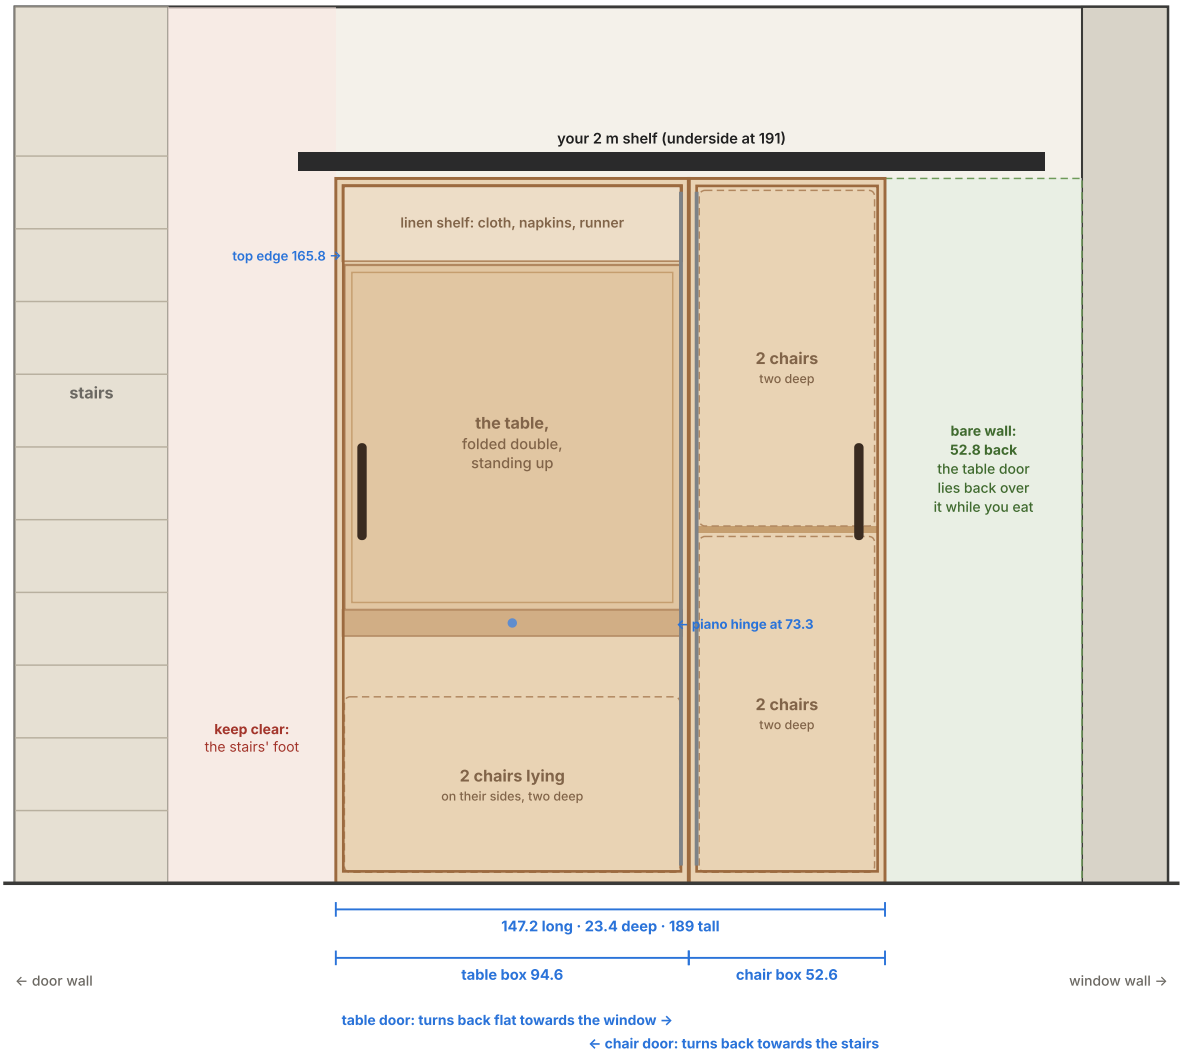

Cut list for this step

Part	From	Size (cm)	Qty	Notes
Table halves, centres	Solid oak, hardwax oil	83.5 × 90 × 2.7	2	Edge-glued staves: 78.5 between the shoulders, plus a 2.5 tongue each end
Breadboard ends	Solid oak, hardwax oil	90 × 7 × 2.7	4	Pegged with three 10 mm pegs each, in slotted holes
Apron rails	Solid oak, hardwax oil	outer half 86.5 and 78 · inner half 84.9 and 78, all × 4.6 × 2	2 + 2 · 2 + 2	A frame under each half, held on figure-8 fasteners

Table legs	Solid oak, hardwax oil	6.5 × 4.5, cut 70 long	4	Tapered on the two inside faces from 25 cm down to 4.5 × 3.5 at the foot; trimmed to the floor once the table's hung and level
Hinge rail	Solid oak, hardwax oil	91 × 16.8 × 7	1	Across the table box, its top at 73.3, its front 4 behind the door's back (the cloth bag hangs past it); the table's piano hinge 4.6 back from its front
Door stops (the cabinet)	Solid oak, hardwax oil	8 × 2.5 × 1.2	2	Under each box's top, behind its door's free edge; a magnetic catch let into each
Cabinet ends	Oak-faced ply, 18 mm (the dining cabinet and the bar)	189 × 23.4	4	Full height and depth, two for each box; the doors sit between them
Cabinet tops · floors	Oak-faced ply, 18 mm (the dining cabinet and the bar)	91 × 23.4 · 49 × 23.4	2 · 2	One of each per box, between its ends; the floors' top faces at 3
Cabinet linen shelf · chair shelf	Oak-faced ply, 18 mm (the dining cabinet and the bar)	91 × 16.8 · 49 × 20.8	1 · 1	Top faces at 168.6 (the table box, set 4 back for the cloth bag) and 95.8 (the chair box)
Cabinet doors	Oak-faced ply, 18 mm (the dining cabinet and the bar)	90.5 · 48.5, both × 183.8	1 · 1	The table door, then the chair door: oak-faced both sides, grain upright, all four edges lipped; a piano hinge on the edge by the boxes' join, a finger slot near the other
Cabinet backs	Birch ply, 6 mm	91 · 49, both × 184.2	1 · 1	Glued and pinned in each box, between its ends, its floor and its top
Flip-top hinges	Hardware	Lee Valley 40574, solid brass, 1.27 × 7.0	3	Routed into the meeting edges of the two halves, 10 in from each side and the middle

Piano hinge	Hardware	Altro continuous, 1800 × 50, cut to 90	1	The table's foot, on the hinge rail's top face
Leg brackets · tabletop fasteners	Hardware	folding, self-locking · figure-8	4 · 16	The legs fold inside the aprons; the fasteners hold the aprons to the tops
Door hinges (the cabinet)	Hardware	Altro continuous, 1800 × 32, stainless	2	1 mm thick, one a door, not cut: centred on the 183.8 door, 1.9 short at each end; a screw every 10 cm, the knuckle just proud of the faces
Catches, magnets and hooks	Hardware	catches · 10 mm magnet, cups · hooks	4 · 1 + 2 · 6	Magnetic catches: two in the door stops, two under the linen shelf for the folded table. A flush magnet and two steel cups hold an open door flat. A small brass cup hook takes the cloth bag
Wall brackets (the cabinet)	Hardware	steel angle, 5 × 70 screws, plugs	2	One under each box's top into your solid wall

Before you start: check and mark out

1. Measure the gap under your shelf at both ends: it must be at least 191. The boxes are 189 tall and need 2 cm to tip up into place.
2. Mark the cabinet's footprint on the floor: 147.2 long and 23.4 deep off the wall, its stair end 45 cm short of the stair box (that strip stays clear for the stairs' foot). Its window end is then 52.8 cm short of the pipe boxing's face. Mark the line between the two boxes, 94.6 from the stair end.
3. Your stairs wall is solid: the two brackets go in with plugs and screws. Run the detector over both spots first, as for every hole.
4. Lay a long level along the footprint. Note the low end: the shims go there later.
5. Oil every oak face and edge (two thin coats, a day apart) before you assemble anything: it's much easier on flat parts, and a board oiled on one side cups.

The two boxes

6. Each box is two ends with a top and a floor between them, a back and a shelf. Lay the ends flat, inside faces up, and mark on each: the floor's top face at 3, the top flush with the end's top edge, and a line 2 back from the front edge, full height. The shelves and the hinge rail stand behind that line; the door sits in front of it, flush with the front edges.
7. On the table box's two ends mark the hinge rail (66.3–73.3) and the linen shelf's top face at 168.6. On the chair box's ends mark the chair shelf's top face at 95.8.
8. Stand two ends up and fit their top and floor between them, flush at the front: glue, pre-drill and drive three 4 × 50 screws through each end into each panel's end grain. The table box is 91 inside, the chair box 49. Each floor's bottom face is at 1.2.
9. Fit the chair shelf in the chair box, its front edge on the line, and the linen shelf in the table box 4 behind the line (a hook for the cloth bag goes in front of it): glue and three screws through each end.

10. Measure both diagonals of each box's front: when they're equal, it's square. Glue and pin each 6 mm back (91 or 49 × 184.2) between the ends, the floor and the top; it holds the box square.
11. Glue and screw two battens under each floor, one 1 cm back from the front edge and one at the back: that's the plinth.

Stand them and fix them to the wall

12. With your helper, tip the table box up and walk it onto its marks, back to the wall; then the chair box beside it at the window end.
13. Shim under the battens until both are level along their length, plumb at the front, and flush with each other at the front and the top. Check again after a minute: they settle.
14. Clamp the two meeting ends together and screw them to each other with four 4 × 30 screws from inside the chair box, at about 20, 70, 120 and 170 up. Now they're one cabinet.
15. Screw an angle bracket under each box's top, in the middle, and into the wall with plugs and 5 × 70 screws. They stop it tipping; the floor takes the weight.

The hinge rail

16. Slide the oak hinge rail (91 × 16.8 × 7) into the table box against the back, its top face at 73.3: its front stands 4 behind the line, like the folded table's, so the cloth bag on the door's hook clears it.
17. Glue it, then drive two 4 × 50 screws through each end into it. It carries the table's whole weight when it's open, so don't skip the glue.

The two table halves

18. Ask the timber merchant for two centre panels of edge-glued staves, each 83.5 × 90 × 2.7: 78.5 between the shoulders plus a 2.5 tongue at each end, and four breadboard ends 90 × 7 × 2.7.
19. On each end of each centre panel, rout a tongue 2.5 long and 0.9 thick, centred in its thickness: take 0.9 off each face with the router against a batten.
20. In each breadboard end's inner edge, rout a groove 0.9 wide and 2.6 deep, centred, full length. Dry-fit: flush with the panel's long edges and flat across the joint.
21. Drill three 10 mm peg holes down through each breadboard end and its tongue: one at the centre and one 8 cm in from each side, 1.3 cm from the breadboard's inner edge. Take the ends off and elongate the two outer holes in each tongue to 16 mm along the width, so the panel can move.
22. Glue only the middle 10 cm of each tongue, clamp the ends on and drive the pegs (glue the outer pegs into the breadboard only). Saw flush, sand to 180 and oil both faces equally.
23. Each half is now 92.5 × 90. Chamfer the underside edges 1 cm, except the two edges that will meet at the joint.

The aprons (the frame under each half)

24. Lay both halves face down on a clean blanket, their joint edges together, as on the drawing of the halves from underneath.
25. The outer half: its two long rails (86.5) run along the half 4 cm in from the sides and 3 cm in from both ends; its two short rails (78) fit between them at the ends. Glue and screw the corners (two 4 × 50 each).
26. The inner half: the same, but its frame stops 4.6 short of the wall end (that strip rests on the hinge rail): long rails 84.9, short rails 78.
27. Fix each frame to its half with figure-8 tabletop fasteners every 25 cm (four a rail): recess each in the rail's top edge with the 35 mm bit, screw it to the rail and then up into the top with 4 × 30 screws. They hold the top flat but let it move.

The legs

28. Cut the four legs 70 long from the 6.5 × 4.5 oak. They're trimmed to the floor at the end.
29. Screw a folding bracket to the underside of each half where its legs stand (see the drawing): on the inner half against the end rail by the joint, the leg centres 8.25 cm from the joint and 32 cm in from each side; on the outer half in the two corners at the far end, centres 8.25 cm in from the end and the sides.
30. Screw each leg's top into its bracket. Fold them: the inner half's legs fold towards the wall end, the outer half's towards the joint. Folded, each leg lies flat inside its apron frame.

Join the halves: three flip-top hinges

31. Turn the halves face up, their meeting edges together, flush across the top. Mark three hinges along the joint: 10 cm in from each side and one in the middle.
32. Rout each hinge's two leaves into the two edges to the hinge's depth with a guide, square the recesses with a chisel and screw the hinges in.
33. Swing it: open, the two tops are flush; folded, the outer half lies flat on the inner half, top face to top face, with nothing proud.

Hang the table

34. Cut the 50 mm piano hinge to 90 with a hacksaw and file the ends smooth.
35. With the inner half face down, screw one leaf of the piano hinge along its wall end, on the underside, the knuckle exactly on the end edge: a screw every 10 cm, pilot holes first.
36. Fold the outer half onto the inner half. With your helper, lift the folded table upright into the table box, its wall end down on the hinge rail, its underside facing the room, centred (0.5 each side).
37. Screw the hinge's other leaf to the rail's top face, the knuckle 4.6 back from the rail's front. That leaves 4 in front of the folded table for the cloth bag on the door. One screw at each end first, try the swing, then the rest.
38. Try it: it swings down to flat with its top at 76 and back up to stand in the box without touching the sides. The folded table's top edge is at 165.8, just under the linen shelf.

The catches and the finger pull

39. Screw two magnetic catches under the linen shelf's front edge, 15 cm in from each side, and their plates on the folded table's top edge: they hold it upright.
40. Rout a finger pull 12 long and 1.5 deep in the underside of the inner half's apron rail by the joint, in the middle: folded, it's at the top, and that's what you pull to bring the table down. No knob, so nothing presses into the pads on the door.

Hang the two doors

41. The table door (90.5 × 183.8) hangs on the table box's window end and the chair door (48.5 wide) on the chair box's stair end. The two hinges sit side by side where the boxes meet, and each door opens away from the other, turning 180° to lie flat over it.
42. Lay a door face down, its hinge edge up. Screw one leaf of a 32 mm piano hinge along that edge, centred (1.9 short of each end), the knuckle just proud of the door's face: a 3.5 × 16 screw every 10 cm into pilot holes made with the self-centring bit.
43. Stand the door in its opening on 2 mm packers, with an even gap all round. Screw the hinge's other leaf to the inside face of the end it hangs on, the knuckle just proud of the front edge: one screw at the top and one at the bottom first, try the swing, then the rest.
44. Hang the table door first, then the chair door. Each should shut flush with the front edges and open right back, flat against the other door.
45. Glue an oak door stop under each box's top, behind its door's free edge, with a magnetic catch let into it and the catch's plate on the door's back: the door closes flush and stays shut.
46. Let the 10 mm flush magnet into the chair door's face, 36.1 from its hinge edge and 100 up, and the two steel cups into the table door's face at the same height, 32.2 and 40 from its hinge edge. Whichever door is open now holds flat against the other.
47. Screw a small brass hook to the table door's back, high up in the middle: the cloth bag (the tablecloth and napkins) hangs on it, in the space in front of the folded table.
48. Rout an upright finger slot in each door 5 cm in from its free edge, 26 long, 2.5 wide and 1 deep, at about 92–118 from the floor; ease its edges and oil it.
49. Open the table door flat and press down gently on its far end: it mustn't drop. If it does, check every hinge screw is in tight before you load the cabinet.

Level the table and trim the legs

50. Open the table door and lay it back over the chair door. Open the table: pull it down, unfold the inner half's legs till they click, lower it; flip the outer half over and unfold its legs till they click.

51. Lay the level across it in both directions. Mark each leg where it should meet the floor so the top is level at 76, fold the legs, saw them off square and stick felt pads on.

Load the chairs and check

52. Lay two folded chairs on their sides in the table box's base, under the hinge rail, one behind the other: the back one first.
53. Open the chair door. Stand two folded chairs on the chair box's floor, one behind the other, and two on its shelf the same way.
54. Fold the table up, shut both doors and stand back: two plain oak doors, nothing on show.

Check before moving on: The table swings down and up without touching the box's sides, all four legs click, the top is level at 76 both ways, the catches hold it folded, and each door shuts flush with an even gap and turns back flat against the other without its far end dropping.

Step 12 · Lighting: smart spot bars and the LED strips, your own job · You + a helper · 1 day

LIGHTING

Buy first: 7 Lighting (the buy list).

Parts

- Both Wolston-style spot bars and eight smart colour E14 bulbs under 6 W (WiZ Colour P45 4.9 W, or Hue E14 lustre 5.1 W)
- Smart colour strip, RGB and tunable white (about 4.5 m: Hue Lightstrip Plus or WiZ, in the bulbs' app), three aluminium channels with opal diffusers, its plug-in power
- 6500K bias light for the TV
- Your red lamp, with its colour bulbs

Hardware and fixings

- Connector block or lever connectors (if the bar's flex needs them)
- Earth sleeving, insulating tape

Tools

- Two-pole voltage tester (GS38) and its proving unit
- MCB lock-off and padlock
- Insulated screwdrivers, wire strippers
- Step ladder
- A helper to hold the bar

Before you start

1. No dimmers: smart bulbs need full power, so leave the light switches as they are and keep them on. A dimmer in front of a smart bulb makes it flicker and can damage it.
2. The same stop list as step 3. Here, also stop if a ceiling point has no earth (the bars need one), or the rose has more wires than you can match to your photo.

Isolate the lighting circuit

3. Tell everyone in the house you're working on the electrics.
4. At the consumer unit, switch off the breaker for the lighting circuit (usually marked "lights", 6 A). If the labels aren't clear, switch off the main switch instead.
5. Fit the MCB lock-off and padlock to that breaker, keep the key in your pocket, and tape a note on the board: "Working on this circuit, do not switch on".
6. Prove your voltage tester on its proving unit: it must light.
7. At each switch and each ceiling point, with the cover off, test between every pair: live and neutral, live and earth, neutral and earth. No reading on any of them.
8. Prove the tester on the proving unit again. Only now is it safe to touch.

Take down the old fittings, hang the bars

9. Unscrew each old fitting's cover. Prove dead again at its terminals. Photograph the wiring, mark the switched live (the wire from the switch) with tape, then disconnect and take the fitting down.

10. Fix bar 1's mounting plate to the ceiling over the rose between the TV and the sofa, the bar running from the TV towards the window, with screws into the joist or the plate's fixings. Bar 2's goes on the pendant point by the stairs, running the same way, along the west wall.
11. Connect earth first (green-and-yellow to the bar's earth), then neutral to N and the switched live to L, in the bar's terminal block; any loop wires go back together exactly as they were. Tighten, tuck, and fit the canopy.
12. Fit the smart colour bulbs and point every head straight down, evenly spread along the bar. Tilt one only if its pool lands in the TV's screen or someone's eyes. If a WiZ bulb shows below its shade's rim, use the shorter Hue lustre there.

Power on and test

13. Remove the lock-off and switch on, wall switches on. In the bulbs' app, add all eight, group them as bar 1 and bar 2, set warm white at about half, then save the three presets, Bright, Cosy and Film, from the lighting presets below (levels, and colours if you want them). Your red lamp's colour bulbs go in the same presets. With the table open, bar 2 comes up to at least 80 and bar 1 down to 15 (the table rule): save that as a fourth scene, Table, if your app can't do it on its own.

The low-voltage lights (nothing to isolate)

14. Cut the smart strip at its marks into three lengths: one for each upright's groove and one for the side-wall run. Press each into its aluminium channel under the opal diffuser; take the uprights' leads down their grooves to the strip's power on the 10-gang (smart colour).
15. The side-wall run's strip: in its channel in the groove under the run's front edge, 1.5 cm back from the edge, the full 220 cm; its lead drops with the PC's through the brush grommet into the conduit, to the same power.
16. Add the strips to the app beside the bars' bulbs, so each preset sets the wall's glow too: warm white for Bright, low and coloured for Cosy and Film.
17. Clip the ceiling strip through its notches in the uprights; stick the bias light round the back of the TV on its USB port.
18. Stand your red lamp in its spot (the 3D room shows the three), its bulbs green, pink and purple, top to bottom.

Check before moving on: Every bulb answers the app, the presets recall, and from the sofa no spot head shows in the screen or shines in your eyes.

Step 13 · Connect and finish · You · 1 day

AV NETWORK

Buy first: 8 TV, consoles and AV, 9 Vinyl kit, 10 Finishing (the buy list).

Parts


- HDMI switch, RetroTINK, HDMI leads, optical and SCART cables, the active optical HDMI for the PC
- Stylus, preamp, RCA-to-3.5 mm lead, record brush
- Labels

Tools

- Phone with the Deco app
- Velcro ties


Everything sounds through the Hisense: directly where it can, via the TV where it can't

The soundbar has no HDMI inputs, so HDMI sources reach it over eARC; vinyl, PS2 audio and phones go straight in

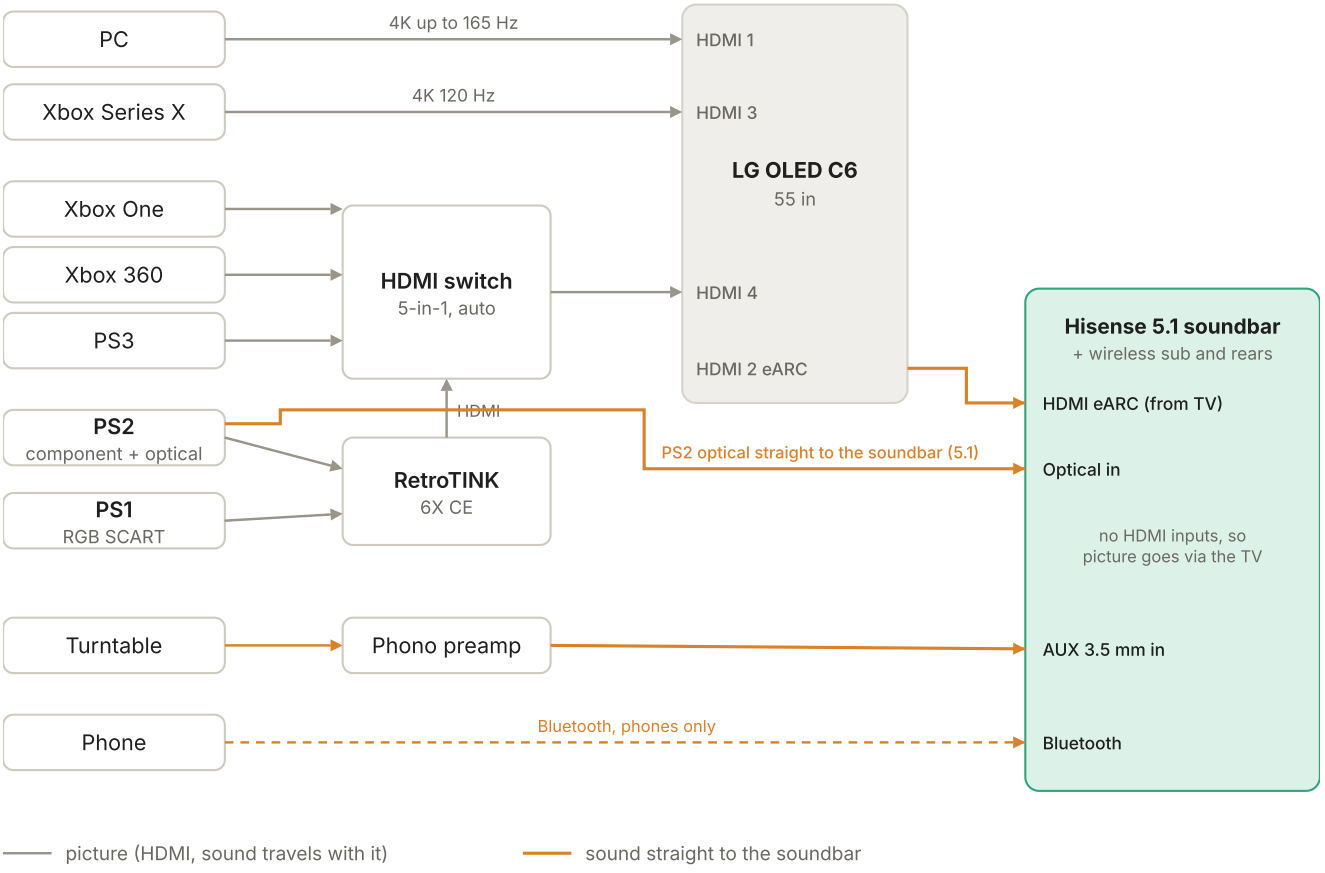

Power map: your 10-gang (now with the PC) plus a 6-way for the retro set


Everything modern on the left outlet, always on; the five retro consoles and the RetroTINK on the right, switched at the wall

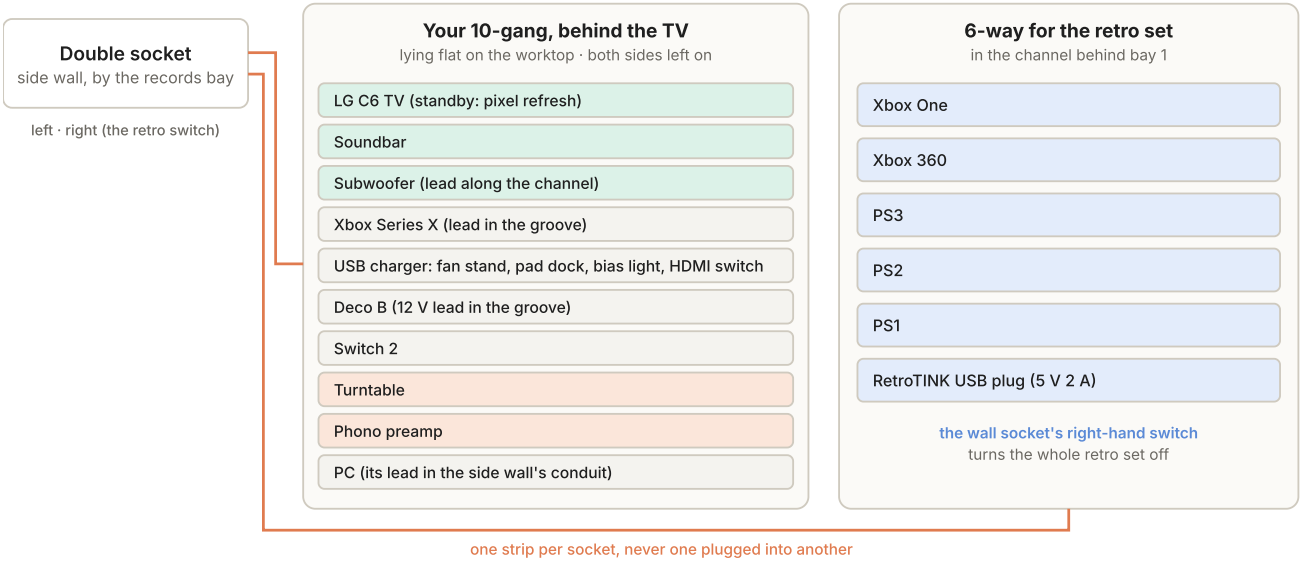

- The socket on the side wall is a single today: you swap it for a double at the same spot (like for like, your own job: step 3).
- The retro switch moves to the wall: with the TV 2 cm from the left upright, the 10-gang's own switches can't be reached any more.
- Rear speakers: your double socket behind the sofa's short side. Your lamp and the grow lights: the double behind the plant stand.
- The sub plugs into the 10-gang: its lead drops through the worktop's slot to the back of bay 2. Both spot bars use existing ceiling points.
- Load check: the 10-gang about 1.55 kW with everything on, PC included (850 W at most); the 6-way up to 0.8 kW. Each under 13 A (3 kW).
- Check the 10-gang is surge-protected; if not, use a surge-protected one for the TV and consoles. Label both outlets.

Every floor has its own Cat6 link back to bedroom 3

Deco A and Switch 1 live with the Hub 5 and the gaming PCs in bedroom 3; two spare ports can wire the projector and the music room

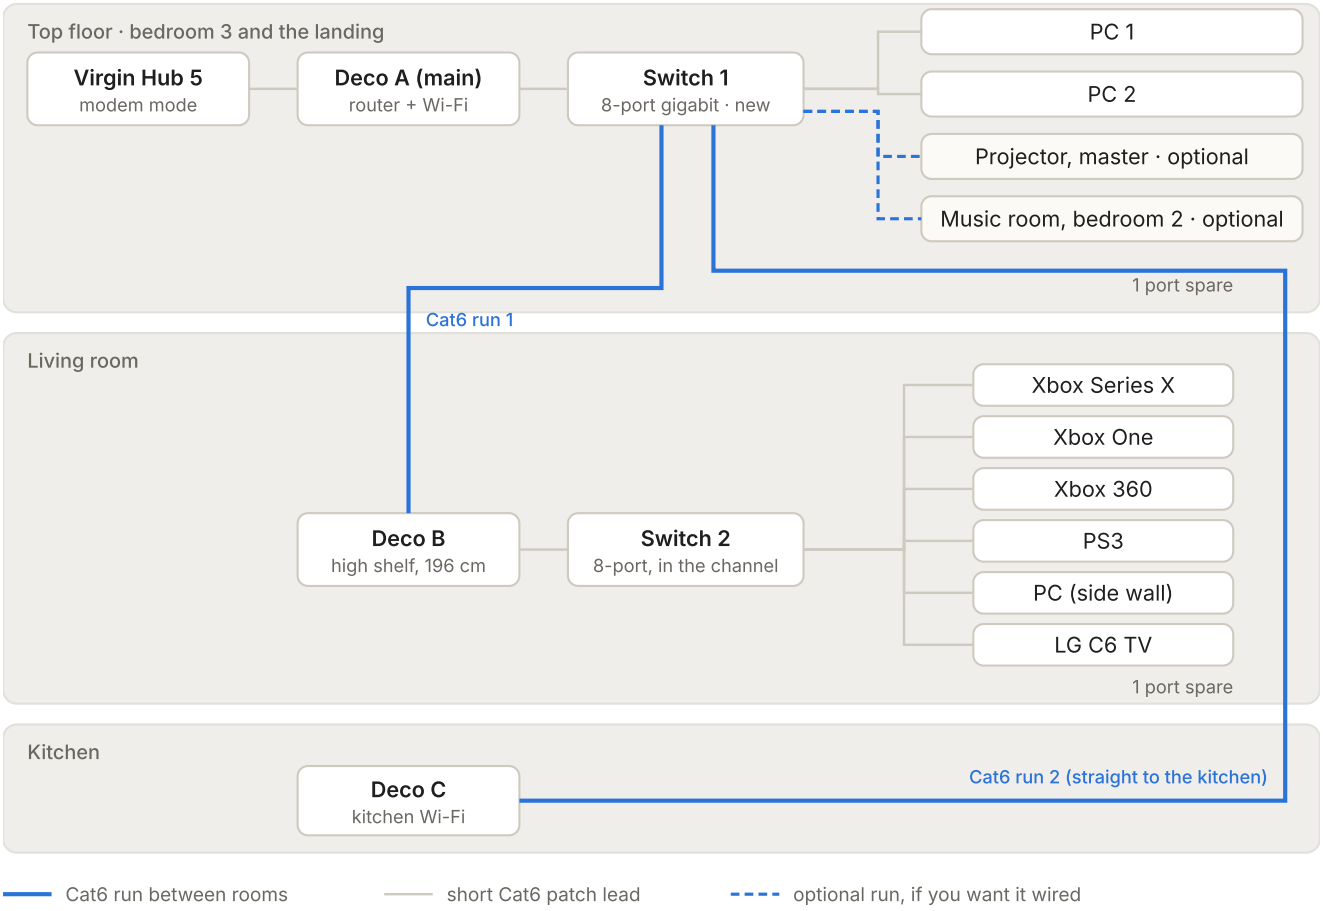

1. TV inputs: HDMI 1 the PC, HDMI 2 the soundbar (eARC), HDMI 3 the Series X, HDMI 4 the HDMI switch (Xbox One, 360, PS3, RetroTINK).
2. The PS2 by component into the RetroTINK and by optical to the soundbar; the PS1 by RGB SCART.
3. The deck to the preamp, the preamp to the soundbar's AUX; set the tracking weight; soundbar in Music mode for vinyl.
4. Network stage 2: plug each Cat6 run into its Deco, check Deco B and C show "Ethernet", and give the Series X and PC high priority.
5. Label both outlets of the double socket and each HDMI switch input; set the sub and rear levels from the sofa.

Check before moving on: Everything on the network's "done when" list, and every source plays through the soundbar.

Step 14 · Your picks: the bar, the record table, the shelves and cabinets · You + a helper · 1–2 days

YOUR PICKS

Parts

- The bar's ply (the cutting list: ends, floor, shelf, doors, plinth front, back), its oak counter, an IKEA ENHET frame 40 × 15 × 75, a 3 mm acrylic mirror
- Two IKEA KALLAX 42 × 42, a 12 mm ply base, an 18 mm oak lid 90 × 50, four castors, two hinges and two lid stays
- Two IKEA EKET 35 × 35 × 35 with their rails; two oak floating shelves 90 × 23 with brackets; an oak shelf 91 × 27 on two brackets; four IKEA KUGGIS 35 × 26 × 15

Hardware and fixings

- 5 × 60 mm screws and brown plugs (solid wall)
- 4 × 30 and 4 × 40 mm wood screws
- Two soft-close hinges and a push catch for the bar's doors

Tools

- Detector
- SDS drill
- Drill-driver
- Spirit level
- Jigsaw or track saw
- Clamps

The bar beside the cabinet

1. Measure the gap at the floor, at 45 and at 90: the cabinet's end to your shelf's end, less the 10 cm gap. Drawn: 42.5 wide, 22 deep.
2. Scribe the two ends to the cabinet's end and the wall, then glue and screw the floor, the shelf and the back between them; the plinth front set back 2.
3. Stand it, check it's level, and screw it to the wall through the back's top rail and to the cabinet's end (4 × 30, from inside).
4. Fix the oak counter on top, 2.7 thick, its front edge flush; hang the doors on soft-close hinges with a push catch (no handle to catch the table door).
5. Over it: the ENHET frame on the wall, its bottom at 112, plugged into the solid wall; the mirror behind it; the glasses on its shelves.

The record table

6. Assemble the two KALLAX as IKEA shows, then lay them on their backs side by side and screw them together through the sides (4 × 30).
7. Screw the 12 mm ply base to their open backs and the four castors to the base, 3 cm in from each corner.
8. Hinge the oak lid (90 × 50) along one long side; fit both lid stays so it can't drop. Full of LPs it's about 65 kg: roll it, don't lift it.

The wall cabinets

9. Mark the rail's line over the sofa's corner, the cabinets' bottoms at 162; detector first.
10. Screw IKEA's rail to the wall with 5 × 60 screws in brown plugs, level; hang the two EKET on it and tighten their fittings.

The alcove shelves

11. Mark the tops at 182 and 212 in the window corner; detector first.
12. Fix each concealed bracket with its own screws into plugs in the solid wall, check it's level, and slide the shelf on.

Over the hall door, and the boxes

13. The oak shelf's top at 208.7, on two brackets above the architrave (check it's no more than 7 wide).
14. Two KUGGIS boxes on it; two on your black shelf, either side of the laser, 1 over its front.

The step drawers

15. With the new stairs: ask the joiner for three drawers in the bottom three risers, 51 × 14.5 oak fronts, boxes 35 deep on 350 mm runners, and a bearer under each tread.

Check before moving on: Each piece level and fixed; the bar's door clears the open table door; the record table rolls and its lid stays up; the 10 cm gap is clear.

Shopping list

About £4,374–8,245, in build order; no electrician on top.

Status	Item	Qty	Estimate (£)	Paid (£)
NETWORK	1 NETWORK, NOW			
☐ To do	Put the Virgin Hub 5 into modem mode			
☐ To do	Set up Deco A, Switch 1 and the PCs in bedroom 3			
☐ To do	Add Deco B and Deco C over Wi-Fi for now; speed-test each room and the Xbox			
☐ To buy	Cat6 patch leads, 0.5–2 m	11	15–20	
☐ To buy	TP-Link TL-SG108 8-port switch: one for the living room, one to replace the 5-port in bedroom 3	2	36–50	
POWER & CABLES NETWORK	2 CABLES AND POWER			
☐ To do	Cat6, your own job: two runs from bedroom 3, across the landing and down through the airing cupboard, one to the alcove's right corner (Deco B) and one on to the kitchen (Deco C), a spare pulled with each, and the optional runs to the master and bedroom 2 **(changed: no electrician)**			
☐ To buy	Cat6 solid pure copper, round (not CCA): two runs, four with the optional ones	2–4 runs	30–60	
☐ To buy	Cat6 tools: a punch-down tool, RJ45 keystones and two surface boxes (or plugs and a crimper), a cable tester, a draw-rod set **(new: you run the Cat6 yourselves)**	1 set	30–60	
☐ To do	Swap the single socket on the side wall for a double at the same spot: like for like, not notifiable; step 3 has the safe way to do it **(changed: your own job)**			
☐ To buy	A double socket in the same finish, and a deeper back box if the old one is shallow **(new)**	1	5–15	
☐ To buy	Electrical safety kit: a two-pole voltage tester to GS38 with its proving unit, an MCB lock-off and padlock, a plug-in socket tester **(new: for doing it yourselves)**	1 set	45–90	
☐ To buy	Insulated (VDE) screwdrivers, wire strippers and side cutters **(new)**	1 set	20–40	
☐ To buy	6-way surge-protected extension for the retro set (Xbox One, 360, PS3, PS2, PS1, RetroTINK) **(changed: switched at the wall)**	1	20–35	
☐ To buy	4-port USB charger, 5 V 2 A per port (HDMI switch, fan stand, pad dock, bias light)	1	10–20	
☐ To buy	USB plug, 5 V 2 A or more, for the RetroTINK on the retro 6-way	1	5–10	
☐ To buy	Cable kit: brush grommets, velcro ties, labels	1	20–30	
☐ To buy	Flat two-compartment trunking for the 4 cm channel behind the base, about 2 m	1	10–20	
☐ To do	Chase two conduits into the solid side wall for the PC, from behind the PC shelf down to skirting height and behind the skirting to the base's plinth: 38 mm oval for the HDMI and Cat6, 25 mm oval for the PC's mains lead; make good and paint **(changed: your own job; the PC now runs from the 10-gang)**			
☐ To buy	Conduit: 38 mm and 25 mm oval, about 4 m each, two draw wires, one oak-coloured brush grommet; a 5 m C13 lead with a rewireable 13 A plug for the PC **(changed)**	1	15–35	
☐ To buy	For the chase: a wall chaser with dust extraction for a day (or a bolster chisel and club hammer), one-coat filler **(new)**	1	20–45	
☐ To buy	PC tidy kit: braided sleeve, shelf-notch grommet	1	5–15	
☐ To buy	A powered USB 3 hub, 4-port with its own adapter, screwed under the side run's front edge below the PC: pads, the keyboard and a stick within reach of the sofa	1	15–30	
☐ To buy	A remote power button for the PC: a wireless switch on the motherboard's power header (card in a spare slot), its push button on the wrap ledge	1	10–30	
☐ To buy	A magnetic mesh dust filter cut to the PC's top exhaust	1	5–10	
PAINT	3 PAINT			
☐ To do	Sample Farrow & Ball Card Room Green No. 79 on an A4 board; check it by day and with the LED strip on			
☐ To buy	Card Room Green: Estate (or Modern) Emulsion for walls, ceiling, alcove and chimney breast; Estate Eggshell for skirting and radiator (the door and its frame stay white); primer and undercoat		200–500	
☐ To buy	Woodwork primer, sanding pads and sugar soap for the white skirting and door	1	20–40	

Status	Item	Qty	Estimate (£)	Paid (£)
☐ To do	Paint the whole room before anything is fixed: alcove and breast included; skirting and door from white to eggshell			
● MEDIA WALL	**4 BASE UNIT**			
☑ Done	Check the alcove back wall for fixings (solid)			
☐ To do	Measure the alcove's width at the floor, 76, 134, 155 and 196 and the ceiling, and the floor's level across it			
☑ Done	Check the side wall where the ledge and PC shelf go, and the chimney breast where the dining wall goes: solid (you confirmed) **(new)**			
☐ To buy	Two IKEA BESTÅ 60×40×64 frames, white stained oak effect, for bays 1–2	2	70–200	
☐ To buy	Plinth for bays 1–2: 18 mm ply ladder frame 120 × 38 × 9 cm with a clear bay under bay 2, plus shims	1	15–30	
☐ To buy	Hidden plinth drawer: oak front 54 × 6 with a finger-pull groove underneath, 12 mm ply box 52 × 34 × 5, 300 mm full-extension runners **(changed: no push-to-open at floor level, as v6.1 said)**	1	30–50	
☐ To buy	Bay 3 carcass: 18 mm birch ply, 60 × 40 × 73 cm from the floor, connector bolts, and a 12 mm birch-ply divider 38 × 69.4 that splits it into the slim game column and the LP column **(the divider)**	1	50–90	
☐ To buy	Two face-out LP crates, 34.9 × 40 (a 33 cm trough): 12 and 9 mm birch ply cut to size, 15 mm oak lips, raked rests, felt, two pairs of 400 mm runners rated 68–70 kg **(snug crates, no dead space)**	2	120–200	
☐ To buy	Three slim drawers for the game column, 15.3 × 40: 6 mm birch ply sides and backs, 12 mm bases, oak lips, felt, three pairs of 400 mm runners (light duty is enough); a 2 m USB-C lead and a grommet for the pads drawer	3	70–130	
☐ To buy	BESTÅ shelves, 56 × 36 cm (20 kg max each), two each for bays 1 and 2	4	12–32	
☐ To buy	The sub in bay 2: an isolation riser for it (dense foam or sorbothane, about 22 × 28 × 3), 12 mm birch ply for the divider (35.3 × 38) and the part shelf (32.2 × 36), four shelf pins, felt pads **(the sub moves into the media wall)**	1	25–45	
☐ To buy	Anti-tip brackets and 4 cm spacer blocks: both frames and bay 3	1 set	15–25	
☐ To do	Measure about ten games of each kind (PS2, Xbox 360, Xbox One) before cutting the game drawer			
☐ To buy	Game drawer kit: 12 mm birch ply cut to size, 350 mm full-extension soft-close runners (35–49 kg), oak lip, follower block, felt	1	50–90	
☐ To do	Build the plinth and bay 3, fix everything to the wall, fit the shelves, drawers and trays; place the TV and soundbar			
● MEDIA WALL	**5 OAK JOINERY**			
☐ To buy	Two solid oak uprights, 165 × 30 × 4.5 cm (cut to 159), quarter-sawn if possible	2	150–300	
☐ To buy	Solid oak for the shelves: high shelf in two lengths (128.9 and 51.7 × 30 × 4), Series X shelf 55 × 30 × 4, record ledge 128.9 × 7 × 2.4, the side-wall run from one board 225 × 30 × 4 (cut to its sweep), lips **(one run for the ledge and the PC shelf)**	1 set	230–380	
☐ To buy	Oak wedges, 10 mm oak dowel for pegs and dowels, concealed upright brackets; two concealed shelf brackets for the PC shelf, rated 40 kg+ a pair	1	30–60	
☐ To buy	One solid oak worktop, 300 × 62 cm, full stave: the alcove top (186 × 46), chamfered front; keep the offcut **(no backboard, the table's in its cabinet)**	1	250–450	
☐ To buy	Oak face frame, 20 mm, 186 cm for the base	1	60–120	
☐ To buy	Keyboard tray for the PC shelf: 7 cm oak housing under it, 12 mm ply tray 54 × 26 with an oak lip, 300 mm light-duty runners **(new: back from v6.1)**	1	25–45	
☐ To do	Cut the joints and fit the uprights, shelves, ledges and face frame; notch the uprights for the ceiling strip			
● DINING TABLE	**6 DINING WALL**			
☐ To buy	Solid oak for the table: two halves 90 × 92.5 × 2.7, each a centre 78.5 × 90 of edge-glued staves with two pegged breadboard ends (the cutting list) **(185 open)**	1 set	265–460	

Status	Item	Qty	Estimate (£)	Paid (£)
☐ To buy	The dining cabinet: oak-faced ply cut to size, 18 mm for its two boxes (four ends, two tops, two floors), the linen shelf, the chair shelf and the two doors (90.5 and 45.5 × 183.8); a 6 mm ply back for each box (the cutting list) **(two boxes, 144 long, with hinged doors and no drawer)**	1 set	230–410	
☐ To buy	Oak for the cabinet's hinge rail (91 × 15.4 × 7), the eight apron rails, the four tapered legs (6.5 × 4.5) and two door stops **(the rail set back for the pads)**	1	35–70	
☐ To buy	Altro continuous piano hinge, 1800 × 50, cut to 90: the table's foot	1	16–20	
☐ To buy	Folding, self-locking table-leg brackets, a set of four, and sixteen figure-8 tabletop fasteners for the aprons	1	60–75	
☐ To buy	The doors' hinges and catches: two Altro continuous piano hinges, 1800 × 32 × 1 mm, stainless, one the height of each door; four magnetic catches (the doors and the folded table), a 10 mm flush magnet and two steel cups to hold an open door flat, a small brass hook for the cloth bag, two steel angle brackets for the wall **(hinged doors, not sliding)**	1	35–65	
☐ To buy	Folding chairs, six: your grey padded ones (Brayden Studio on Wayfair, sold in pairs, so three sets of two): wooden frames, grey linen, a 47 × 47 seat with a 6.5 cm cushion, a 110° back, 168 kg; folded 90 × 10 × 47, they live in the cabinet. The estimate is about £80–130 a pair: read the listing's price **(they replace the beech FRÖSVI and its tie-on pads)**	6	240–390	
☐ To buy	Three Lee Valley 40574 narrow flip-top hinges (solid brass, 1.27 × 7.0 cm) for the joint	3	25–45	
MEDIA WALL	**5 OAK JOINERY**			
☐ To buy	The glass display case's glass: toughened, cut to size, polished edges: a 4 mm front 85.6 × 82.2 that lifts off, and three 6 mm shelves 85.6 × 9.2	1 set	70–130	
☐ To buy	The glass display case's oak and fittings: the frame from the oak offcuts (two sides 85 × 12 × 2, top and bottom 86 × 12 × 2), a 6 mm oak-faced ply back 86 × 81, twelve shelf pins for glass, an oak French cleat 80 long, a warm white LED strip under the top on the strips' app	1 set	20–40	
☐ To do	Build the glass display case and hang it on the chimney breast, from 137 to 222, centred (step 9)			
DINING TABLE	**6 DINING WALL**			
☐ To buy	The “now playing” ledge on the breast, with the table by the stairs: oak 105.5 × 7 × 2.4 with a 1.5 lip (from the shelf board's offcut), two concealed brackets	1	10–25	
☐ To do	Build the dining cabinet: the two boxes, screwed to each other and to the wall, the hinge rail, the two table halves on their aprons and legs, hang the table on its piano hinge, then the two doors on theirs (step 11)			
☐ To do	Open the table, level it at 76 and trim the legs to the floor; load the six chairs (two lying in the table box's base, four standing in the chair box)			
LIGHTING	**7 LIGHTING**			
☐ To do	Swap both ceiling fittings for the spot bars, turned to run from the TV towards the window: like for like, your own job; step 12 has the safe way. The light switches stay as they are (smart bulbs need full power) **(no dimmers)**			
☐ To buy	Eight smart colour E14 bulbs for the bars: WiZ Colour P45 E14, 4.9 W (Wi-Fi, no hub), or Philips Hue White and Colour E14 lustre, 5.1 W, if a WiZ shows below its shade; both under the bar's 6 W	8	100–360	
☐ To buy	Smart colour strips for the upright grooves and under the side-wall run, in the same app as the bulbs: about 4.5 m of RGB and tunable-white strip (Philips Hue Lightstrip Plus, or WiZ's strip kits, cut at their marks), three aluminium channels with opal diffusers, plug-in power on the 10-gang (no fused spur); a 6500K bias light for the TV stays plain white **(smart colour, so the whole wall changes with a scene)**	1	90–220	
☐ To buy	Two Dunelm Elements Wolston 4-light spotlight bars, £49 each (bulbs above) **(changed: two)**	2	98–110	
☐ To buy	Optional: a smart button for the bars, so a scene is one press rather than the app (WiZ remote or Hue dimmer switch)	1	0–25	

Status	Item	Qty	Estimate (£)	Paid (£)
☐ To do	Set up the smart bulbs in their app: group them as bar 1 and bar 2, then save the three presets (Bright, Cosy, Film; Paint and light) with their levels and colours, and the table rule; your red lamp's bulbs go in the same scenes			
☐ To buy	Later: aluminium channel and opal diffuser for the existing ceiling LED strip (optional)	1	0–80	
AV **8 TV, CONSOLES AND AV**				
☐ To buy	5-in-1 4K60 HDMI switch with remote	1	20–35	
☐ To do	Measure the PC-to-TV cable route (about 4–5 m along the skirting)			
☐ To buy	Active optical HDMI cable for the PC, certified Ultra High Speed (48 Gbps), about 5 m	1	20–60	
☐ To buy	High Speed HDMI leads, 1–2 m; two 90° HDMI adapters in case the TV's plugs need them	5 + 2	25–40	
☐ To buy	RetroTINK-6X CE upscaler for the PS2 and PS1 (order on restock; UK price includes VAT and import fees)	1	200–240	
☐ To buy	PS2 component video cable, good quality	1	10–20	
☐ To buy	Optical (TOSLINK) cable, 2 m, PS2 straight to the soundbar	1	5–10	
☐ To buy	RGB SCART cable for the PS1	1	8–15	
☐ To do	Connect the TV inputs; set up the PS2 and RetroTINK			
AV **9 VINYL KIT**				
☐ To buy	Replacement stylus for the turntable (exact match for its model)	1	15–40	
☐ To buy	External phono preamp (only if the deck has a PHONO/LINE switch)	1	40–100	
☐ To buy	RCA-to-3.5 mm lead, 2 m: preamp under the Series X shelf to the soundbar's AUX **(changed: shorter)**	1	5–10	
☐ To buy	Isolation feet for the turntable; a carbon-fibre record brush	1	20–40	
☐ To do	Set the tracking weight; soundbar in Music mode			
AV **NETWORK** **10 FINISHING**				
☐ To do	Turn on HDMI-CEC (SIMPLINK); PS3 Control for HDMI off			
☐ To do	Deco app: prioritise the Series X and PC, guest Wi-Fi, automatic firmware			
☐ To do	Label both outlets of the double socket (left: everything, right: retro) and each HDMI switch input			
☐ To do	Set the sub and rear speaker levels from the sofa			
☐ To buy	Drip trays or a waterproof mat under the pots on the plant stand's slatted tiers; if you add clip-on grow lights later, a smart plug with a schedule	1	10–20	
☐ To buy	Felt pads under the vinyl stand's feet, so it slides out from the breast without marking the floor	1	3–6	
☐ To buy	A storage ottoman in navy velvet, about 76 × 76 × 45 with a lift-off padded lid, in place of your blue cord one: ISTOOLS Large Velvet Storage Ottoman, 76 × 76 (check its height and price on the listing), or Dunelm's Square Opulent Velvet Storage Footstool in navy, 62 square, if you'd like it smaller	1	140–310	
☐ To buy	A rug about 230 × 160 in front of the sofa: cream with deep blue, rust and ochre goes with the green, the oak and the blue sofa (the plan draws one as a guide)	1	120–300	
DINING TABLE **6 DINING WALL**				
☐ To buy	The bar beside the dining cabinet: 18 mm oak-faced ply for a cupboard 42.5 × 22 × 87 on a 3 cm plinth (two ends, a floor, a shelf, a back, two doors), a 27 mm oak counter 42.5 × 22.4, two pairs of soft-close hinges, two brass knobs	1 set	70–120	
☐ To buy	Over the bar: an IKEA ENHET wall frame with shelves, 40 × 15 × 75, anthracite, a 3 mm acrylic mirror cut to 42 × 97, a warm white LED strip	1 set	50–80	
☐ To do	Build the bar beside the dining cabinet: scribe it between the cabinet's end and your shelf's end (the 10 cm gap stays clear for the plant), screw it to the wall and the floor; the mirror, then the ENHET frame from 112 (step 11)			

Status	Item	Qty	Estimate (£)	Paid (£)
AV NETWORK **10 FINISHING**				
☐ To buy	Two IKEA EKET wall cabinets with glass doors, 35 × 35 × 35, walnut effect, with their rails, and plugs and screws for a solid wall	2	70–100	
☐ To do	Hang the two wall cabinets over the sofa's corner, 162 to 197 up, just past the PC shelf's end			
☐ To buy	Two oak floating shelves 900 × 230 with concealed brackets (B&Q Shelf Depot), for the window corner	2	70–110	
☐ To do	Fix the two alcove shelves in the window corner, tops at 182 and 212, into the solid wall			
☐ To buy	An oak shelf over the hall door, 91 × 27, on two brackets, and two IKEA KUGGIS lidded boxes 35 × 26 × 15, white	1 set	35–60	
☐ To buy	Two IKEA KUGGIS lidded boxes, 35 × 26 × 15, white, for your black shelf	2	20–30	
☐ To buy	Drawers in the bottom three steps: three drawer boxes in 12 mm ply, 51 × 14.5 fronts in oak, three pairs of 350 mm runners, bearers under the treads	1 set	180–320	
☐ To do	Have the step drawers made with the new stairs (a joiner: each tread needs a bearer once its riser is cut)			
☐ To buy	The blanket basket at the sofa's open end: Dibor's Lakelyn water hyacinth lined basket, large, 59 × 51 × 29	1	36–42	
☐ To buy	The record table: two IKEA KALLAX 42 × 42, an 18 mm oak board 60 × 120 (the lid, 90 × 50), 12 mm ply for the base, four 50 mm castors, a piano hinge cut to 83, two lid stays	1 set	170–210	
☐ To do	Build the record table: the two KALLAX screwed together on their backs, the ply base and castors, the oak lid on its hinge and stays			