Home Network & Media Wall Plan

Revised Oct 23, 2026 · @emma · version 41 (revision 37: a bar built in beside the dining cabinet, more storage, your black shelf 10 cm off the boxing, the lamp's cap, the lights in Views, Extras lined up), drawn to your measurements

What changed: a build step for your picks (step 14), one measuring sheet first in the guide, the costs split into for move-in and can wait, your banister from the photo, and the fit proof cleaned.

1 · The plan on a page



Drawn to your measurements, in Card Room Green.

£4,374–8,245
the whole plan, item by item in section 11; no electrician on top

87 of 121
fit checks pass outright; 22 are tight, 12 need a check on site (section 3)

291 · 6
LPs (191 in the wall, 100 in your vinyl stand) · seats at the table, the chairs kept inside it

Area	Decision
Alcove	The TV in line with the sofa between two oak uprights, the right one a corner post against the breast; on the left, the turntable on the worktop and the Series X on a shelf at 134; below, three 60 cm bays: the LP crates and a slim column of game and pad drawers under the turntable, then the PlayStations with the sub and the Xbox consoles under the TV.
Side wall	One oak run from the corner: a 7 cm ledge with four more LPs that sweeps out into the PC's shelf above the sofa's open end, a smart colour strip underneath, clear of the TV's sightlines.
Dining	The compact dining cabinet under your shelf by the stairs: two oak boxes, 147.2 long and 23.4 deep, with the table and your six grey padded folding chairs inside. The table swings down and opens to 185 × 90, six in comfort; packed away it's two plain oak doors. The chimney breast keeps a “now playing” ledge and two framed LPs. It's the only table now: the long sliding cabinet and the flip-top are set aside (appendix). A more compact version, an 80-wide table, makes it 10 shorter but keeps four chairs inside, not six (section 5): your call.
Records and games	About 291 LPs: 191 in the wall, every one face-out (180 in the LP crates, 8 on the two ledges, 3 on the “now playing” ledge), and 100 in your vinyl stand (50 face-out on top, 50 spine-up between its wires). Games: about 92 face-out or spine-up in the game drawers, and 32 PS1 games in the plinth drawer.
Heights	Worktop and table 76 · TV centre 116.5 · Series X shelf 134 · ledges and PC shelf 155.4 · high shelf 196, 39 under the 235 ceiling.
Colour and light	Card Room Green No. 79, colour-drenched. The ceiling LED strip, smart colour strips in the uprights and under the side run, a bias light, and two Wolston-style spot bars with smart colour bulbs on your two existing ceiling points; one app, one scene for the lot.
Power and network	Your own job: the side-wall socket becomes a double, left for the 10-gang (everything modern, the PC included), right for the retro set, switched at the wall. Deco A in bedroom 3, Cat6 down the airing cupboard.

What it costs, piece by piece

Piece	Things to buy	About
The media wall	15	£1,177–2,202
The side wall and the PC	7	£95–210
The dining cabinet	10	£1,026–1,735
The chimney breast	3	£100–195
Lighting	5	£288–795
Paint	2	£220–540
Network	4	£111–190
Electrics (your own job)	3	£70–145
Power and cables	5	£65–115
TV, consoles and AV	7	£288–420
Vinyl kit	4	£80–190
Your picks	6	£401–552
Finishing touches	2	£13–26
Can wait (after you move in)	3	£440–930
All of it	**76**	**£4,374–8,245**


Every item, piece by piece, is in section 11's cost overview; the buy list there ticks them off.

2 · The room

Everything is drawn from your hand-measured sketch; where the agent's floor plan disagrees, your tape wins. The L-sofa is from your photo[24]: about 266 long, the return a typical 168 until you measure it, an ottoman end towards the TV, 13 cm off the window wall.

The living room from above, as you measured it

To scale, north at the top. Media wall in the alcove, one oak run on the side wall over the sofa, the dining cabinet under your shelf by the stairs, two spot bars

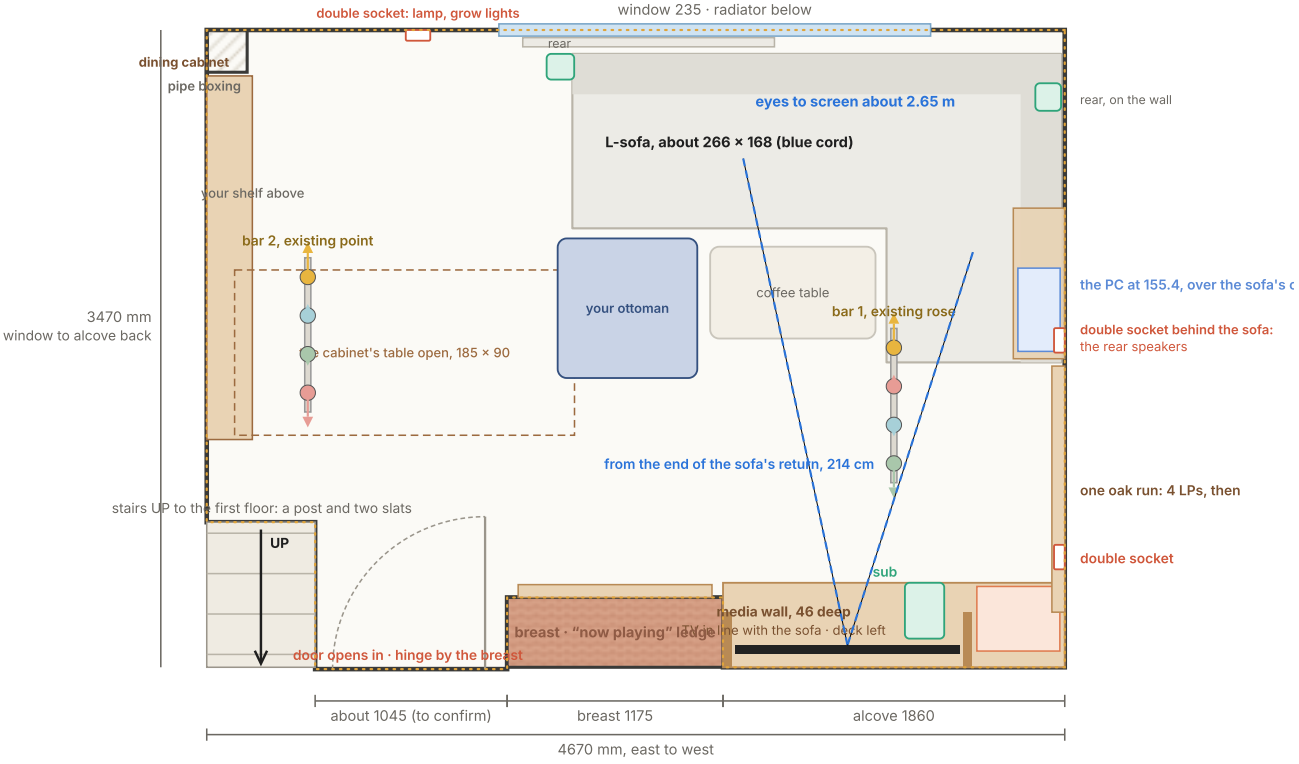

Ceiling 2350 mm. Sofa from your notes (long side to 40 cm short of the window's end; return 168 assumed). Both spot bars run from the TV towards the window.



The whole room in 3D, from above the window side, the dining cabinet packed away by the stairs.

From your sketch	mm	Notes
Room, east to west along the window	4670	The media wall is the south wall, shared with the hall and garage
Window wall to the alcove's back wall	3470	To the chimney breast's face: 3090
Ceiling	2350	
TV alcove, east wall to the breast	1860 × 380	Floor to ceiling
Chimney breast	1175	Projects 380 on the alcove side, 390 on the west side: the dining wall
Window and radiator (north wall)	2350 · 1370	Window starts 730 from the east wall; radiator ends 130 inside its west end; the glass from 880 to 2120 up, set 220 back in its reveal over a deep sill (from your note; the depth is drawn, please check it)
Skirting	60 × 20	White now; Card Room Green eggshell in the plan
West end: recess, door, stair box	935 / 1045 / 660 / 820	Drawn roughly: please confirm which is which
Stairs, beside the door	820 wide	They go **up** to the first floor, rising away from the room; on the room side a low white wall with your banister above it, from your photo: a square post at the foot and two flat slats up to the wall by the door[85]


From the sofa: from the middle of the long side your eyes are about 2.65 m from the screen, which a 55-inch fills at about 26°: right for TV and games. It's about 4° off-centre; the screen's centre is just above a seated eye line. The lowest spot shade is at 212.6 cm.

Your new storage ottoman

Yours is 75 square and 44 high, in blue cord[42]. No navy cord storage ottoman is made that size[71], so the plan's is navy velvet.

- **Our pick: ISTOOLS Large Velvet Storage Ottoman, 76 × 76, navy**[68]. It's the nearest size made to yours (1 cm wider each way), with a padded lid that lifts off, a box inside for your games and cards, and a wooden frame on short legs. They don't publish its height (we've drawn 45) and the price varies by size and colour (about £300 at 76): check both on the listing before ordering.
- **Smaller and cheaper: Dunelm Square Opulent Velvet Storage Footstool, navy**, 62 × 62 × 39, 18 deep inside, £139–199[69]. It gives 14 cm back each way.
- **Bigger: Dunelm Zoe Pinstripe Square Storage Footstool**, 96 × 96 × 49, navy, £99.50–199[70]. It's a coffee-table size, and too big for the gap beside your coffee table.

Your games and cards in it. Inside it is about 70 square and 28 deep (as drawn; check the real one when it comes). Square board games come in a 30 × 30 × 8 box (Ticket to Ride's, the usual size[72]), so **12 fit**: two by two, three layers deep. A 10 cm strip along one side takes about 38 card decks on edge[73].

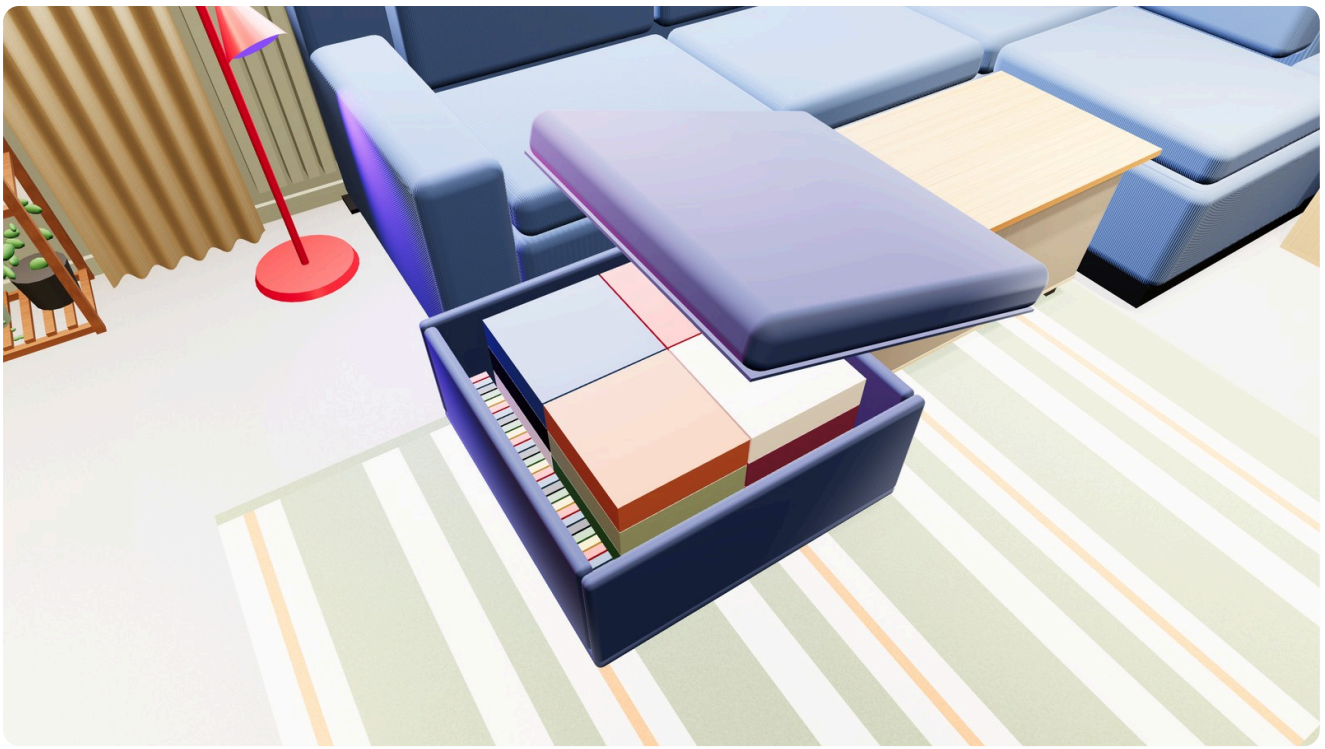

The storage ottoman where yours stands, beside the coffee table, its padded lid lifted.

The storage you picked

What	Where	Size
Shelf over the hall door, two lidded boxes[77]	Over the architrave (check its height)	91 × 27 at 206; boxes 35 × 26 × 15
Two lidded boxes on your black shelf[77]	Either side of the laser	35 × 26 × 15 each
Two oak alcove shelves[96]	The window corner, over the plant stand	two 90 × 23, tops at 182 and 212
Two wall cabinets, glass doors[95]	The side wall over the sofa's corner, past the PC shelf	two 35 cubes, 162 to 197 up
Drawers in the bottom three steps[101]	The stairs by the door	fronts 51 × 14.5, 35 deep
Blanket basket, water hyacinth[79]	Against the side wall at the sofa's open end	51 × 29 × 59: five throws folded long[74] stack 42.5 of its 57

Fix the wall cabinets and the shelves into plugs in the solid wall, anti-tip as the makers say. The step drawers are a joiner's job: each tread needs a bearer once its riser is cut, so build them with the new stairs.



The step drawers, pulled out.

The record table

Your coffee table's 90 × 50, from two IKEA KALLAX[80] on their backs: two bins of LPs, spine-up, about 80 in each. An oak lid lifts on a piano hinge along the TV side; it rolls on castors. 48.5 high.



Lid up: about 160 LPs in two bins.


- **Buy:** two KALLAX 42 × 42 (£19 each)[80]; an 18 mm oak board, 60 × 120[81]; 12 mm ply[82]; four 50 mm castors, 50 kg each[83]; a piano hinge cut to 83[49]; two lid stays[84].
- **Make:** build both KALLAX and screw them together side by side. Screw the ply (84 × 41) to the open backs; a castor 4 in from each corner.

- **The lid:** the oak cut to 90 × 50, corners rounded, oiled; hinged to the TV side's top edge, 3.5 over each end; a stay each end, stopping at about 80°.
- **Check:** loaded, about 65 kg; the castors take 200. The records stand on the ply, not the KALLAX shelves.

The house

The house: where the Decos and Cat6 runs go

Deco A and Switch 1 move to bedroom 3 with the Hub 5. Both Cat6 runs drop through the airing cupboard, right over the media wall's corner

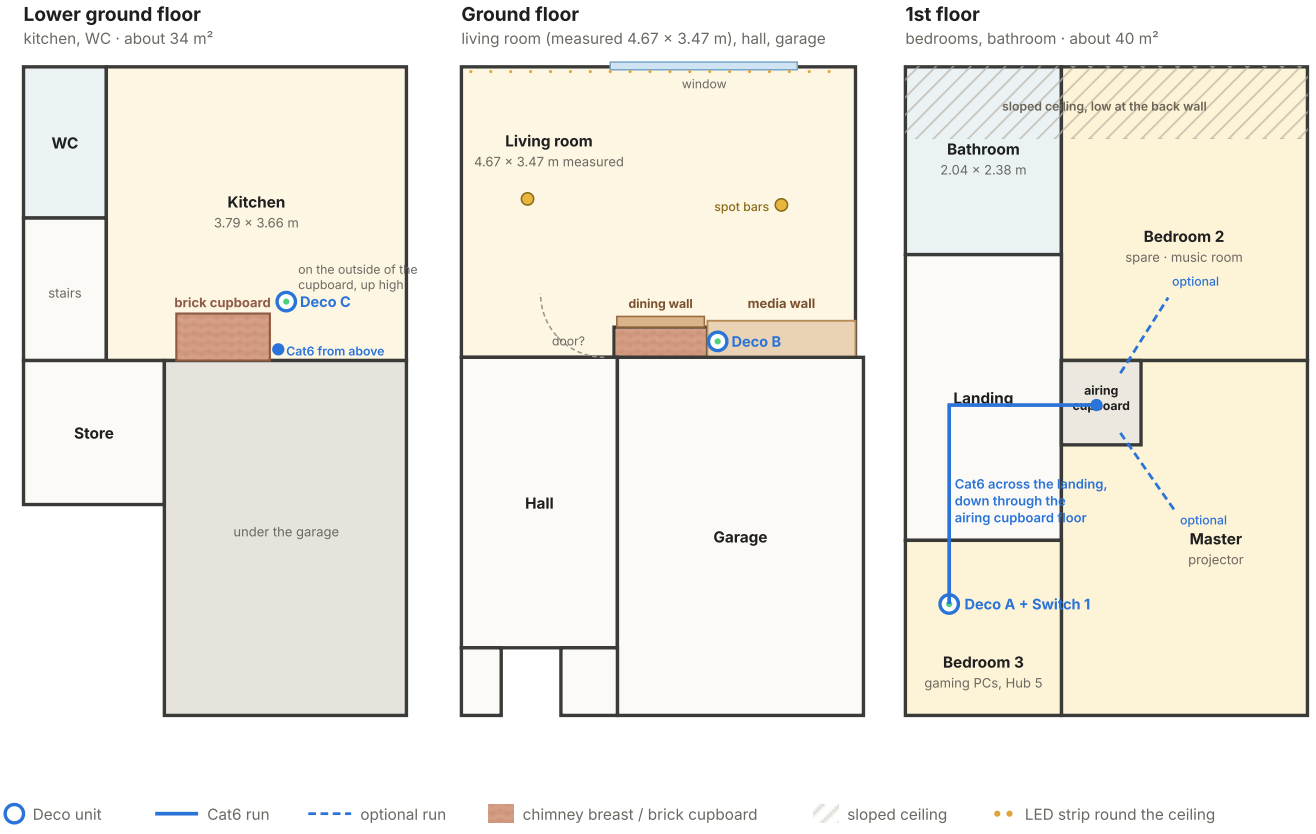

Outline traced from the agent's plan (north, the window side, at the top). The living room's alcove, chimney breast and windows are placed from your measurements.

Deco A and Switch 1 sit with the Hub 5 and the gaming PCs in bedroom 3; both Cat6 runs go across the landing and drop through the airing cupboard, which sits over the alcove's corner (section 9).

3 · The media wall



Numbered view: the game drawer and the lower LP crate are pulled out 30 cm.

OAK JOINERY	
1	Solid oak uprights, 4.5 × 30, worktop to ceiling (159 long)
2	The right upright is a corner post against the breast
3	Flush wedged tenons carry the Series X shelf (134)
4	High shelf, top 196: books up to 30 cm
5	Record ledge above the TV: 4 LPs face-out
6	The oak run wraps the corner: 4 more LPs face-out
7	LED groove in each upright: a smart colour strip washes the wall
8	High shelf, over the turntable: a small framed sleeve
ON THE WORKTOP	
9	LG OLED C6 55in · centre 116.5 high, 118.25 from the side wall
10	Soundbar · eARC, optical and AUX inputs
11	Turntable (AT-LP120X size allowed) · lid clear to 130
12	Xbox Series X on its fan stand · 15 cm air each side
13	Phono preamp, hung under the shelf at the back
14	Solid oak worktop 186 × 46 × 3, top at 76
IN THE ALCOVE BASE	
15	Oak face frame; its bottom rail hides the 9 cm plinth
16	Xbox One + HDMI switch · its brick flat at the back
17	Xbox 360 + RetroTINK · its brick flat at the back
18	Game drawer: 2 face-out bins, spine-up rows behind
19	PS3 + controller basket · bay 2 top row
20	PS2 · bay 2, beside the sub
21	PS1 · under the PS2
22	Upper record tray: an LP crate, ~90 face-out, under the turntable
23	Lower LP crate: the same, shown pulled out
24	Slim drawer: pads and remotes, a charging lead
25	Two slim game drawers: ~22 games each, face-out
26	Hidden slim drawer in the plinth, finger pull
27	Sub · bay 2, under the TV, on an isolation riser

THE CHIMNEY BREAST (THE TABLE IS BY THE STAIRS)	
28	“Now playing” oak ledge: what's on and the next two
29	Two framed LPs above
THE SIDE WALL	
30	PC on the oak run, above the sofa's open end
31	Brush grommet: the PC's leads drop into the wall
32	Pad charging dock
33	PC cables chased into the wall: no spine, no trunking
34	Keyboard tray under the shelf, rolls out
POWER, NETWORK AND LIGHT	
35	Deco B: leads in the groove behind the right upright
36	Double socket: its right switch is the retro switch
37	10-gang extension, hidden behind the TV
38	LED strip round the ceiling edge (as now)
39	Smart spot bar on the existing rose, TV to window
40	Second smart spot bar, existing point by the door
41	Stairs UP to the first floor, beside the door (direction to confirm)

Built to your alcove: 186 wide, 38 deep, 235 to the ceiling

- **Base:** 3 cm filler, three 60 cm bays, 3 cm filler. Bays 1 and 2 are IKEA BESTÅ 60×40×64 frames on a 9 cm plinth (tops at 73, back panels off); bay 3 is an 18 mm ply carcass 60 × 40 × 73 from the floor, split by

a 12 mm divider into the slim game column (two face-out game drawers and the pads drawer) and the LP column (two face-out LP crates) under the turntable. One oak face frame runs across all three; its bottom rail hides the plinth and a hidden drawer under bay 2 with a finger pull (no push-to-open at floor level).


- **Depth:** 40 cm frames, a 4 cm cable channel behind and the 2 cm face frame make 46 cm from the back wall, 8 cm proud of the chimney breast.
- **Worktop:** solid oak, 186 × 46 × 3, top at 76, with a brush-lined slot behind the TV and a grommet behind the deck.
- **Oak uprights:** 4.5 × 30 cm, 159 cm from the worktop to the ceiling. The left one is at 50.5–55, between the turntable zone and the TV. The right one stands against the breast at 181.5–186, a corner post that frames the TV. That leaves 126.5 cm between them, 2.15 cm clear of the TV each side.
- **TV:** centre 118.25 cm from the side wall, in line with the sofa, on LG's stand set 2 cm off the back wall: bottom 81.4, centre 116.5, top 151.7. The soundbar sits centred under it at the worktop's front edge.
- **The turntable zone:** 50.5 cm between the side wall and the left upright. The deck sits on the worktop with 2.65 cm each side and its lid opens to about 121. Above it is an oak shelf at 134, through-tenoned into the upright, carrying the Series X on its fan stand; the phono preamp hangs underneath at the back.
- **Shelves above:** the record ledge at 155.4 between the uprights, four LPs face-out; the high shelf at 196, wall to wall in two lengths, with books, a box, a print, a small framed sleeve and Deco B.
- **Bay 2 with the sub:** the PS3 keeps the top row. Below its shelf the bay splits: on the left the sub's column, 23.4 cm wide, then a 12 mm ply divider, then 32.2 cm for the PS2 over the PS1 on a part shelf. The sub stands on a 3 cm isolation riser with 1 cm each side and 2.9 above. Its front is flush with the face frame, so its driver faces the room and its rear port has 15.6 cm to the wall.
- **Power:** the side-wall socket in front of the records bay becomes a double. Its two leads enter through a notch at the left end of the face frame's bottom rail and run back through the plinth to the channel.

The media wall, looked over again

- **The TV's remote:** the soundbar's top is 0.6 above the screen's bottom edge, right where LG puts the remote's receiver. Sit the bar 2 cm proud of the stand's foot so the beam from the sofa clears it; LG's Magic Remote works by radio once paired, so it doesn't mind either way (a check in the fit proof).
- **Heat:** every console bay is open front and back, the bricks lie flat at the back with nothing on top, and the Series X has 15 cm each side and 21 above.
- **One remote for most of it:** HDMI-CEC (SIMPLINK) lets the TV's remote work the soundbar and the modern consoles (step 13); the HDMI switch has its own remote for the retro side.

The media wall and the chimney breast from the front, to scale


The TV in line with the sofa, the turntable, Series X and records on the left, the consoles and games under the TV. Heights in cm

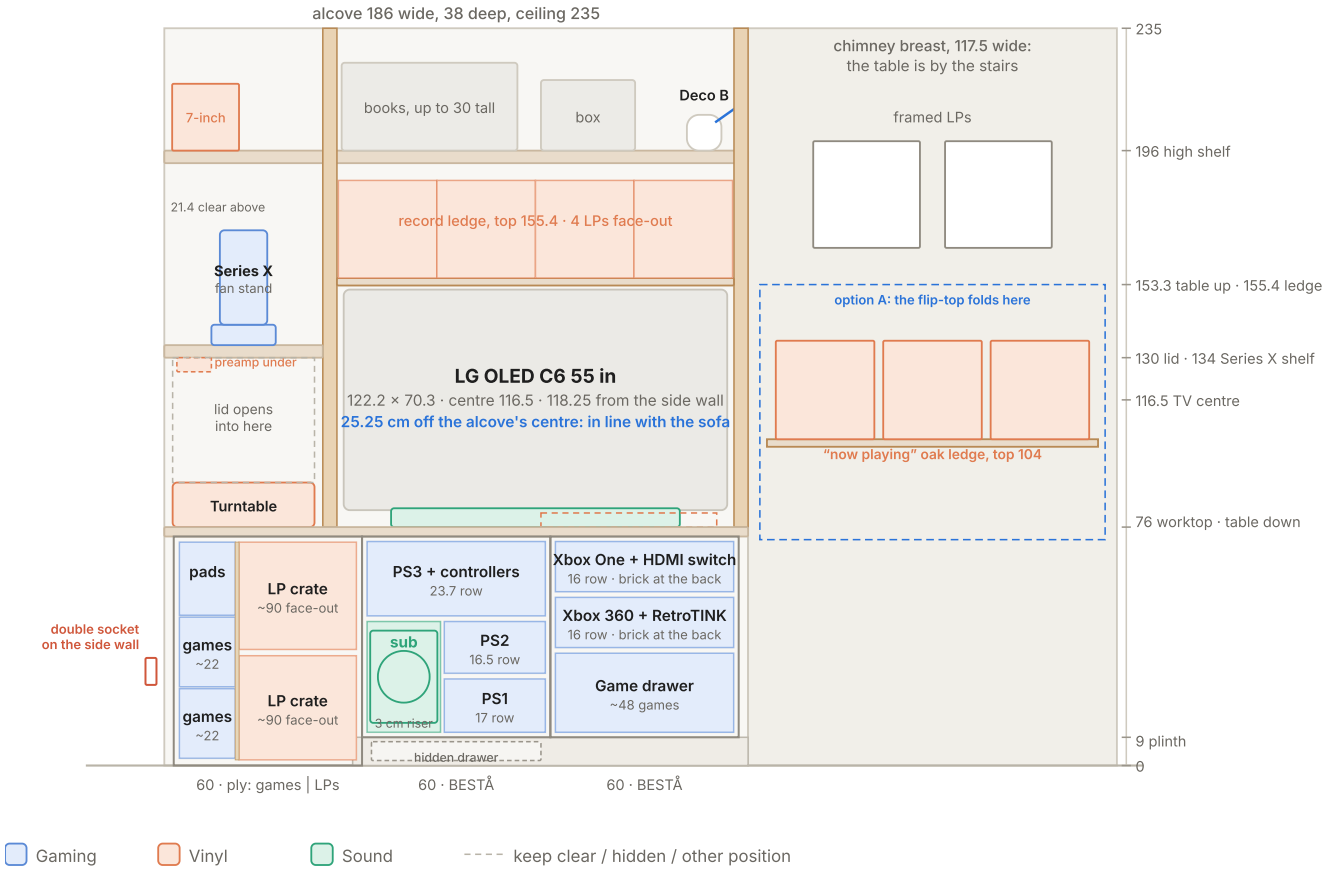

Gaming Vinyl Sound keep clear / hidden / other position

How the wall goes together, layer by layer

Side sections to scale, room on the left. Dashed: the upright and the breast's face beyond the cut, and the deck's lid open

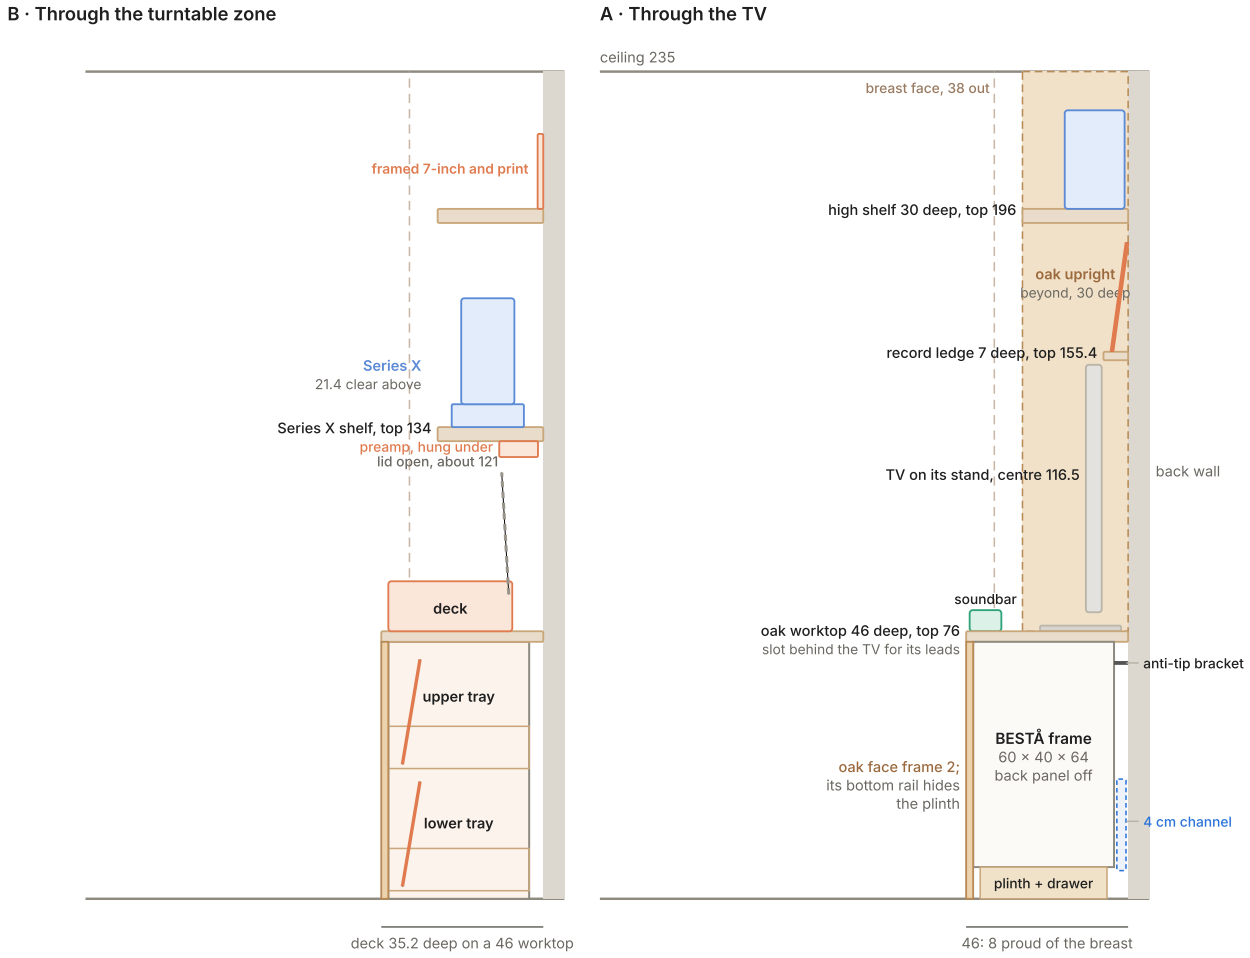

The sub in the media wall

You asked for the sub back in the unit, with the Xbox bricks moved behind. It fits, and it sits in the best spot for it: under the TV, beside the soundbar, so the bass comes from the same place as the picture. Here's how the base makes room, and what was checked.

- **The bricks go to the back.** The Xbox One's brick (17 × 7.5 × 4.8[11]) and the Xbox 360's (allowed 21 × 10 × 6[16]) lie flat at the back of their shelves, by the channel's power leads. Microsoft asks for a ventilated space, flat on the rubber pads, with nothing on top[26]; the bays are open front and back.
- **That frees bay 1's fronts** beside the two Xboxes, so the HDMI switch (beside the Xbox One, where its remote reaches it) and the RetroTINK (beside the Xbox 360) move up from bay 2.
- **Bay 2's lower half becomes two columns:** the sub on the left, under the TV, and the PS2 over the PS1 on the right. The sub is 21.4 × 30.4 × 29.4[3]; its column is 23.4 wide and 35.3 tall.
- **The port:** the sub's front sits flush with the face frame, so its rear port is 15.6 cm from the wall through the open back and the channel. That's inside the 15–30 cm advised for a rear port[25], at the low end, so the channel behind bay 2 stays clear: Switch 2 and the retro 6-way move behind bay 1.
- **Vibration, the one thing to test:** Microsoft advises keeping the Xbox 360 away from subwoofers[27], and the deck shares the worktop. The 360 is a whole bay away, the sub stands on an isolation riser without touching the divider or the frame, and the deck has isolation feet. Once it's built, play a disc game and a record at film volume. If anything skips, turn the sub down for that source; if it still does, the sub can go back under the dining wall.

- **The dining wall is clear underneath:** no cover to make, and nothing to move for eight at the table.

The fit proof: every item against its published size

Each zone lists what goes in it, its size and its source (section 12), the space, what's left and a verdict. 87 of the 121 checks fit outright and none fail; 22 are tight, most of them snug by design; 12 need a check on site (the TV's plugs, the RetroTINK's size, the sub's vibration, the soundbar and the TV's remote eye, the stairs wall, and your shelf's height).

The TV between the uprights

126.5 between the oak uprights, the right one a corner post against the breast; the ledge's underside at 153

Item	Size (cm)	Space	Spare (cm)	Result
LG OLED C6 55 in, on its stand	122.2 × 70.3 × 4.5 panel; 75.7 tall on the stand [2]	126.5 wide	2.15 each side	**Fits**
Top of the screen	151.7 (bottom 81.4, centre 116.5) [2]	ledge at 153	1.3	**Fits**
LG stand base	47 × 23 [2]	worktop 46 deep	set 2 cm off the wall: 11 cm in front of it for the soundbar's leads	**Fits**
Soundbar, Hisense AX5100G, centred under the TV	92 × 9 × 6 tall [3]	x 72.25–164.25, top 82	the sightline to the screen's bottom passes 83.54–84.17 over it	**Fits**
The TV's remote receiver, bottom centre of the screen's frame	screen bottom 81.4 [2]	soundbar top 82, in front of the stand's foot	0.6 over the frame's edge: sit the bar on the worktop 2 cm proud of the stand's foot, not against it, so the remote's beam from the sofa clears it; if a button stutters, pair LG's Magic Remote (it talks to the TV by radio)	**Check**
The TV's HDMI plugs, with the screen 2.15 from the corner post	C6 sockets face sideways on the back panel [2]	behind the screen	plugs stay behind the panel; if a stiff lead pushes out, use 90° HDMI adapters	**Check**

The turntable zone, left of the TV

50.5 wide × 46 deep, worktop 76 to the Series X shelf's underside at 130

Item	Size (cm)	Space	Spare (cm)	Result
Turntable, AT-LP120X size (worst case)	45.2 × 35.2 × 14.2 with its lid [8]	50.5 wide	2.65 each side	**Fits, tight**
Its depth, with room behind for the lid's hinges	35.2, front 2 cm in from the worktop's edge [8]	46 deep, to the painted wall	8.8 behind it	**Fits**
Lid open	cover 44.1 × 34.6; standing up, its top at about 121 [17]	shelf underside 130	about 9	**Fits**
Phono preamp, hung under the shelf at the back	about 11 × 11 × 4.5	125.5–130, at the back	4.4 over the open lid's edge; lift the lid gently	**Fits, tight**
Series X fan stand on the shelf	20.5 × 20.5 (assumed; model to confirm)	50.5 × 30 shelf	15 each side	**Fits**
Xbox Series X, standing	15.1 × 15.1 × 30.1 tall [4]	top at 170.6	21.4 clear above (Microsoft's minimum is 4); 15 each side, inside the 10–15 it recommends	**Fits**
Deco B on the high shelf, at the breast end	11 × 11 × 11.4 [7]	31.5 wide past the lidded box, 39 to the ceiling	beside the lidded box, 27 clear above	**Fits**

Shelves above the TV

ledge top 155.4, 7 deep; high shelf top 196, 30 deep; ceiling 235

Item	Size (cm)	Space	Spare (cm)	Result
Four LPs on the record ledge	4 × 31.4 = 125.6 wide [13]	126.5 long	0.9: snug, as drawn	**Fits**
Ledge LPs leaning back 8°	tops at 186.5 [13]	high shelf underside 192	5.5 to lift one out over the 1.5 lip	**Fits**
Books on the high shelf	up to 30 tall	39 to the ceiling	9 over the tallest	**Fits**
Oak uprights	159 long (worktop to ceiling) [1]	235 ceiling	buy 165 and scribe to the ceiling	**Fits**

Bay 1, Xbox (BESTÅ frame on the 9 cm plinth)

56.8 wide inside, 40 deep; the bricks lie at the back of their rows

Item	Size (cm)	Space	Spare (cm)	Result
Xbox One, original, + HDMI switch	33.3 × 27.4 × 7.9; switch 12.7 × 5.9 × 2.5 [12,10]	16 tall row	8.1 above; the switch in the 23.5 beside it, at the front for its remote	**Fits**
Xbox 360, original, + RetroTINK-6X CE	30.9 × 25.8 × 8.3; RetroTINK allowed 23 × 23 × 8 (no size published) [12,9]	16 tall row	7.7 above; 25.9 beside it for the RetroTINK: measure it when it arrives	**Check**
Both bricks, flat at the back of their rows	Xbox One 17 × 7.5 × 4.8; Xbox 360 allowed 21 × 10 × 6 [11,16,26]	behind the switch and the RetroTINK, by the channel's power leads	23 + 10 = 33 of the 40 depth for the RetroTINK and the 360's brick; on their rubber pads, nothing on top, open to the channel; 2 cm or more from the consoles' rear vents	**Fits**
Game drawer	box 54.3 × 35 on 350 mm runners; cases 19 × 13.5 × 1.4 [15,13]	25.2 tall row, 40 deep	about 3 above the leaning cases; 5 behind the box	**Fits**
Depth with the leads	console 27.4 + HDMI plug about 5 [12]	40 deep, back open	about 7.6, then the 4 cm channel	**Fits**

Bay 2, PlayStation and the sub (BESTÅ frame on the plinth)

56.8 × 40 inside: the sub's column 23.4, a 12 mm divider, then 32.2 for the PS2 over the PS1

Item	Size (cm)	Space	Spare (cm)	Result
PS3, original, + controller basket	32.5 × 27.4 × 9.8 [12]	23.7 tall row, full width	13.9 above; 24.3 beside for the basket	**Fits**
The sub in its column	21.4 × 30.4 × 29.4 tall, on a 3 isolation riser [3]	23.4 wide × 35.3 tall	1 each side, 2.9 above; it mustn't touch the divider or the frame	**Fits, tight**
The sub's driver and port	front-firing driver, rear port; its front flush with the face frame [3,25]	15.6 from the port to the wall, through the open back and the channel	inside the 15–30 advised for a rear port, at its low end: keep the channel behind bay 2 clear (Switch 2 and the retro 6-way go behind bay 1)	**Fits, tight**
PS2, original, over the PS1	30.2 × 18.3 × 7.8 · 27 × 18.8 × 6 [12]	32.2 wide; 16.5 and 17 rows on a part shelf	PS2 1 each side, 8.7 above; PS1 2.6 each side, 11 above; both open front and back	**Fits, tight**
Vibration: the consoles and the deck share the base with the sub	Microsoft: keep the Xbox 360 away from high-vibrating sources such as subwoofers [27]	the sub on its riser, clear of the divider and the frame; the deck on isolation feet	the 360 is a bay away, the PS2 and PS1 a divider away: play a disc game and a record at film volume; if anything skips, turn the sub down for that source, or put it back under the dining wall	**Check**
Hidden slim drawer in the plinth	box 52 × 34 × 5, 300 mm full-extension runners, a finger-pull groove (no push-to-open at floor level) [15]	9 cm plinth, 120 wide	about 2 above and below the box; felt its runners, it's under the sub	**Fits**
Switch 2 (TL-SG108) and the retro 6-way in the channel	15.8 × 10.1 × 2.5; 6-way about 34 × 6 × 4 [6]	4 cm channel, behind bay 1	on their edges, clear of the sub's port	**Fits, tight**

Bay 3: the LP crates and the slim game column

56.4 wide × 40 deep × 69.4 tall inside the ply carcass, split by a 12 mm divider

Item	Size (cm)	Space	Spare (cm)	Result
Across the bay	slim drawer 15.26 + divider 1.2 + LP crate 34.86, each drawer with 1.27 runners a side [15]	56.4 inside	exact: 15.26 + 2.54 + 1.2 + 34.86 + 2.54 = 56.4; nothing left over	**Fits**
LPs in the crate	31.4 sleeves face-out, leaning back 10° [13,36]	33.06 trough	0.83 each side: snug like a shop crate; outer sleeves up to 32.4 still fit	**Fits, tight**
Crate heights	lower sleeves to 34.4, upper to 69.1 [13]	top panel underside 71.2	2.6 and 2.1 to lift a sleeve	**Fits**
Games in the slim drawers, face-out	DVD-size cases 13.5 wide, 19 tall, leaning back 10° [13]	14.06 inside (6 mm ply sides)	0.56 spare: they flip like the records; about 22 a drawer in 40 deep	**Fits, tight**
The game drawers' height	cases stand 18.71 on a 1.2 base [13]	22.8 from one drawer to the next	2.89 clear over the cases	**Fits**
Pads in the top slim drawer	4 pads on edge, two side by side: 2 × 6.6 = 13.2 across, 16 long [35]	14.06 wide, 22.1 tall	0.86 across; 10.6 tall in 22.1; the remotes in front	**Fits, tight**
The side-wall socket beside the slim drawers	socket 14 in front of the base, 30 up	the middle slim drawer pulled out passes 5.6 from the wall	the plugs must stand less than that off the wall: flat (angled) plugs, leads down; measure yours	**Check**

The side wall: one oak run from the corner to the PC

at 155.4, 4 thick, 220 long: 7 deep by the LPs, 28 under the PC

Item	Size (cm)	Space	Spare (cm)	Result
The sweep from the ledge to the PC shelf	front edge 7 → 28 over 14 (z -118 to -132)	the last wrap LP ends at z -123.3; the PC starts at z -134	the LP stands on the start of the curve; 2 between the full depth and the case	**Fits**
Four more LPs on the wrap ledge	4 × 31.4 + gaps = 129.8 [13]	134 long	2.7	**Fits**
The PC on its shelf	23 × 45.3 × 46.6 tall (an average gaming case, e.g. Corsair 4000D) [29]	28 × 82	2.5 off the wall, the brush grommet and pad dock beyond it; height 46.6 under the 79.6 to the ceiling	**Fits**
Air above the PC	top at 202	235 ceiling	33 for the top exhaust	**Fits**
Shelf over the end of the sofa	underside 151.4 [24]	sofa back 80	71.4; the shelf covers only the 28 cm nearest the wall	**Fits**
Keyboard tray under the PC shelf	7 cm housing, tray rolls 25 out on 300 mm runners [15]	sofa back 80	64.4 over the sofa's back; pulled out, its front edge is 53 from the wall, still over the return's seat	**Fits**
Out of the TV's sightlines	PC about 54° left of the line to the screen from the sofa [1]	—	well clear of the screen's left edge	**Fits**

The compact dining cabinet (the plan)

two oak boxes, 147.2 × 23.4 × 189, hinged doors; table 185 × 90 open, six chairs inside

Item	Size (cm)	Space	Spare (cm)	Result
The cabinet under your shelf	189 tall [28]	shelf's underside about 191	2: room to tip it up into place	**Fits**
Its length	z -86 to -233.2: the table box 94.6, the chair box 52.6 [28,1,50]	the shelf's length; the stair's foot before it stays clear	52.8 of bare wall back by the pipe boxing	**Fits**
Its depth	23.4 to the doors' faces [1]	the pipe boxing beside it is 22 deep	1.4 prouder than the boxing	**Fits**
The two doors and their hinges	inset oak-faced ply: the table door 90.5 × 183.8, about 21 kg; the chair door 48.5 wide, about 11 kg [49]	a full-height stainless piano hinge each, screwed every 10 cm into a solid oak edge	the hinge's load isn't published: hang the table door, open it flat, and check its far end doesn't drop before you load the cabinet	**Check**
The table door open	it turns 180° and lies back flat over the chair door and the wall beyond [49,32]	its far end reaches z -269.3; your plant stand's front is at z -278.5	9.2 clear of the plant stand; a flush magnet in the chair door's face holds it open	**Fits**
The open table door and the window side's chairs	its face, lying open, at x 441.3 [62,23]	the nearest chair's side at x 438	3.3 clear: the chair pulls back past it	**Fits**
The chair door open	it turns 180° and lies back flat over the table door [49]	the table door 90.5 wide	well inside it; open it only with the table folded (the chairs come out first)	**Fits**
The table standing up in its bay	two halves 92.5 long, hinged at 73.3 [45,43]	the bay 91 wide inside	0.5 each side; its top edge at 165.8, under the linen shelf	**Fits, tight**
The linen shelf over the folded table	18.6 tall, 91 wide [45]	20.8 deep inside	the cloth, napkins, runner and candles, 4 back from the door	**Fits**
Folded, behind the table door	the table 14.9 deep, 4 back from the door (a hook for the cloth bag) [44]	20.8 inside, behind the table door	1.9 spare behind it	**Fits**
Lowering it and flipping the half	each half about 16 kg [43,30]	a 90 piano hinge at its foot; three flip-top hinges at the joint	it swings down like a drop-front: about 16 kg, two hands; the legs drop and lock as it comes down	**Fits**
The legs	oak 6.5 × 4.5, 68.7 long, a pair at each half's end [44]	four self-locking folding brackets	each pair folds flat inside its half's 4.6 apron; 68.7 of knee room under it	**Fits**
Two chairs in the base, on their sides	two folded, each 90 long and 47 tall, two deep (20) [62]	the base under the hinge rail: 91 wide, 63.3 tall, 20.8 deep	0.5 at each end, 16.3 over them, 0.8 spare deep: lift the front one out, then the back one	**Fits, tight**
Four chairs in the chair bay	one across (47), two deep (20), 90 tall [62]	the bay 49 wide, 20.8 deep; the shelf at 94	1 each side, 0.8 deep; two on the floor (3–93, 1 under the shelf), two on the shelf (95.8–185.8, 1.4 under the top)	**Fits, tight**

Your trailing plant on the shelf	strands 55–110 long, through the shelf's 10 gap [28]	the open table door's swing	8.21 clear of it; the pot stands on the shelf, over the door's top	**Fits**
Stair side: three chairs	58.1 of edge each [23,62,63]	174.4 from the far end to the cabinet	55 is the squeeze, 60 the aim: three sit in comfort	**Fits**
Stair side: the stair's foot and the door	chair backs at z -35.3 [1,28,62,63]	the stair box's face at -41; the door's edge reaches -44	seated, the backs reach 8.7 into the door's swing: keep the door shut while you eat. Measure a chair's depth: 52.3 or less and the door clears	**Check**
Window side: three chairs	58.1 of edge each [23,24]	174.4 from the sofa's arm (x 268) to the cabinet	three in comfort; backs at z -231.3, 47.2 clear of your plant stand	**Fits**
The far end and the coffee table	the table ends at x 269.2 [23]	the coffee table to x 193	76.2 between them: the coffee table stays put; a seventh chair fits at the end (23.2 behind its back)	**Fits**
The ottoman (a dinner spot)	76 square [42]	the open table reaches x 269.2; the ottoman to x 276	6.8 under the table's end, so while you eat it goes in front of the media wall (x 190–266): 3.2 clear of the table's end	**Fits**
The table's side and the sofa	window edge at z -178.3 [24]	the sofa's front at z -201	22.7 between them: the table passes the sofa's end	**Fits**
Light over the table	bar 2 on the existing pendant point [28]	point about (412, -143)	over the table; the table rule turns bar 2 up when it's open	**Fits**
Fixing it	two boxes on the floor, screwed together, two angle brackets at the top [50]	your stairs wall: solid	plugs and 5 × 70 screws; the floor takes the weight, the wall only steadies it	**Fits**

Your black shelf on the stairs wall (a fixed 10 cm gap)

2 m, 25 deep, its top at 196, over the dining cabinet

Item	Size (cm)	Space	Spare (cm)	Result
Its window end and the pipe boxing	z -276 [91,28]	the boxing's side at z -286, 22 out	10 short of it, always: geometry.py and the 3D room both pin it there	**Fits**
Its stairs end	z -76, 2 m back from the gap [91,28]	an earlier look at your photo put it about 41 past the stair box	35 past it: if you measure 41 there, the shelf is about 194 long; the gap stays 10	**Check**
Over the dining cabinet	its underside at 191 [1]	the cabinet 189 tall, z -86 to -233.2	2 over it; the cabinet stays where it was (the shelf moved 8 towards the stairs)	**Fits**
Your hanging plant at its window end	z -268 [28]	the shelf's end, 10 off the boxing	9 in from the end, as in your photo	**Fits**

Your picks (in the plan)

the bar beside the cabinet, the wall storage, the step drawers, the basket, the record table

Item	Size (cm)	Space	Spare (cm)	Result
Blankets: the tall basket	51 × 29 × 59, 49 × 27 inside [79,74]	five throws, each folded long to 47 × 25 × 8.5	flat, 5 use 42.5 of its 57 (about 75 litres)	**Fits**
Blankets: the basket's corner	x 2–31, z -74 to -125 [1]	the sofa's open end at z -128	3 off the sofa's end, 29 out from the wall; it takes the floor plant suggestion's corner	**Fits**
The record table: its footprint	lid 90 × 50, the KALLAX pair 83 × 40.7 [80]	your coffee table's 90 × 50	the same footprint; 48.5 high, 0.5 over the lift-top	**Fits**
The record table: LPs	two bins 33 square × 39 deep [80,13,36]	an LP 31.4 square in its sleeve	1.6 to spare across, 7.6 under the lid; about 80 a bin, 160 in all	**Fits, tight**
The record table: castors	four 50 mm, 200 kg together [83]	loaded about 65 kg	the ply base carries the records, not the KALLAX's shelves	**Fits**
The shelf over the door	91 × 27, from 206 [77,1]	the door's 198 and a 7 architrave	11.3 over two 15-high boxes; check your architrave	**Check**
Boxes on your black shelf	two 35 × 26 × 15 [77]	the shelf 25 deep, the laser in the middle	1 over the shelf's front; either side of the laser	**Fits, tight**
D, the built-in bar: its slot	42.5 wide, scribed [1]	the cabinet's end z -233.2 to the boxing -286	fixed to the wall and the floor, the boxing and the cabinet's end	**Fits**
D: its depth	the counter 22.4 off the wall [1]	the open table door lies back 23.4 off it	1 behind the door; 35.8 of the bar is behind it while you eat	**Fits, tight**
D: the counter	top at 90 [92]	a usual worktop, 90	standing height to pour at	**Fits**
D: bottles	16: 4 across, 2 deep, two shelves [66]	inside 38.9 × 19.6; 70 cl up to 35 × 9.5	two deep need 19 of the 19.6	**Fits, tight**
D: the ENHET frame over the counter	40 × 15 × 75, from 112 [90]	the bar 42.5 wide; your black shelf's underside at 191	1.25 each side; 22 over the counter to work; 4 under the shelf	**Fits**
D: glasses on its shelves	a tall glass 23 [93,90]	25 between its shelves, 3 kg each	three glasses a shelf, or bottles to 22	**Fits**
D and your hanging plant	its strands fall through the shelf's 10 cm gap [91,28]	the bar ends at the shelf's end, z -276	the gap stays clear to the floor for them; the table door's swing stays 12 clear of them	**Fits**
The alcove shelves	two 90 × 23 at 182 and 212 [96,50]	the plant stand's top 158	20.2 over it; into the solid wall	**Fits**
The wall cabinets	two 35 cubes, 162 to 197 [95]	the ceiling at 235; EKET asks for 5 over it	38 over them; past the PC shelf's end (z -212) by 4	**Fits**

The step drawers	three, fronts 51 × 14.5, 35 deep [101]	a riser 19.5 under a 2.2 tread, the stairs 59 wide	each tread needs a bearer under it once its riser comes out: a joiner's job, or build them into the new stairs	**Check**

How many can sit down

the compact cabinet's table, in this room, with chairs a person wide and backs 41 behind the edge

Item	Size (cm)	Space	Spare (cm)	Result
The compact cabinet (the plan)	6 in comfort [23,39]	3 on the stair side, 3 on the window side	58.1 and 58.1 of edge each; a seventh at the far end with a spare chair	**Fits**
The 80-wide version	6 in comfort [23,39]	3 on the stair side, 3 on the window side	58.1 and 58.1 of edge each; a seventh at the far end with a spare chair; four chairs inside, not six	**Fits**
A fourth chair a side	eight round it [23,24,1]	174.4 and 174.4 of edge	43.6 each: under the 55 squeeze	**Doesn't fit**
A longer table in the cabinet	halves over 113.9 [28]	they must stand up under your shelf	113.9 is the most that folds away; 92.5 leaves the linen shelf's space	**Fits**

The chimney breast, with the table by the stairs

breast 117.5 wide; the “now playing” ledge 105.5 × 7, top 104

Item	Size (cm)	Space	Spare (cm)	Result
Three LPs on the ledge	3 × 31.4 = 94.2 [13]	105.5 long	2.83 between and at the ends	**Fits**
Beside the turntable	ledge 104 up, 7 deep [8]	the deck's top at about 90.2, an arm's reach to the left	sleeve off the ledge, record on, sleeve back: the base stands 8 proud of the breast, the ledge 7	**Fits**

The glass display case on the chimney breast (in the plan)

90 × 85 × 12, from 137 to 222

Item	Size (cm)	Space	Spare (cm)	Result
On the breast, centred	90 wide [64]	breast 117.5 wide	13.75 each side	**Fits**
Under the ceiling	top at 222 [64]	235 ceiling	13 above it	**Fits**
Over the “now playing” sleeves	bottom at 137 [13]	the sleeves' tops at 135.09	1.91 between	**Fits, tight**
Its four spaces	19, 21, 21, 20 high [64]	7-inch singles 18.4, boxed games, figures, small plants	the bottom one takes tumblers and coupes (about 9–14) if you build the drinks cabinet under it	**Fits**
Depth, front to back	12 deep, a 4 mm front, 6 mm shelves [64]	the vinyl stand below it stands 32 out	it stays no further out than a picture ledge; the stand and its sleeves sit under it	**Fits**

The room

467 × 347, ceiling 235

Item	Size (cm)	Space	Spare (cm)	Result
Eyes to screen from the sofa	the L-sofa's long side against the window wall, 10 off the radiator [1,24]	335 window wall to screen	about 2.65 m; a 55-inch fills about 26°	**Fits**
From the end of the sofa's return	sitting up at its end, 214 from the screen [24]	straight ahead of the TV	the TV's move puts it square on to this seat	**Fits**
TV centre against seated eyes	116.5 [2]	eyes at 105–112	about 1–2.5° above the eye line	**Fits**
Both spotlight bars under the ceiling	22.4 drop [14]	235 ceiling	lowest shade at 212.6	**Fits**
Both bars turned to run TV to window	84 long along the room [14,28]	bar 2 at 55 from the west wall	bar 1 spans z -62.5 to -146.5; bar 2 now runs along the wall, so its end no longer reaches past the west wall	**Fits**
Smart colour bulbs in the bars	8 × E14: WiZ P45 4.9 W, 4.5 × 10.1; or Hue lustre 5.1 W, 4.5 × 7.7 [14,38]	the bar's 6 W a lamp; 15 cm shades	1.1 W under; the WiZ's 10.1 sits inside a 15 shade with its holder; if it shows below the rim, the Hue's 7.7 doesn't	**Fits**

Your plant stand and your vinyl stand

the window wall's west end, 107 between the curtains' stack and the pipe boxing; the chimney breast, 117.5 wide

Item	Size (cm)	Space	Spare (cm)	Result
A: the plant stand in the window corner (recommended)	98 × 29.5 × 158 [32]	x 338 to 445	x 342.5–440.5: 4.5 from the curtains, 4.5 from the boxing; daylight from the window beside it; 77 to the ceiling for the top plants	**Fits, tight**
A: the vinyl stand on the breast	70 × 32 × 78 [33]	breast 117.5 wide, the “now playing” ledge's underside at 101.6	23.75 each side, 23.6 under the ledge; a step from the turntable	**Fits**
A: LPs in its top bays, face-out	2 bays × 32.3; an LP 31.4 [33,13]	shelf at about 46	0.9 spare a bay; the front LP's top at about 77.4, 24.2 under the ledge; about 50 LPs	**Fits, tight**
A: LPs on its bottom shelf, between the wires	4 wires 19.5 tall [33,13]	70 wide, 38 high	three slots of LPs standing; about 50 more (about 100 in all)	**Fits**
B: the vinyl stand in the window corner, as today	70 wide [33]	107 between the curtains and the boxing	37 to spare	**Fits**
B: the plant stand on the breast	98 wide, 158 tall [32]	breast 117.5; the frames from about 147.3	9.75 each side; the “now playing” ledge comes off and the two frames go up 30 (or elsewhere): at 158 it stands past the frames' bottoms	**Fits, tight**
Your red lamp	28 base [1]	the window corner is taken in A and B	it moves to the sofa's west end (in the 3D room, drag it anywhere)	**Fits**

The storage ottoman (replaces your blue cord one)

76 × 76 × 45, navy velvet, on the rug

Item	Size (cm)	Space	Spare (cm)	Result
Its size against the old one	76 square [68,42]	yours 75 square, 44 high	1 wider each way: the nearest size made	**Fits**
Beside the coffee table	x 200–276 [68]	coffee table to x 193	7 between them; 5.5 off the sofa's front	**Fits**
Its height	about 45 [68]	the sofa's seat about 45	a footrest level with the seat; ISTOOLS don't publish it: check	**Check**
Inside	about 28 deep under the lid [68,72]	your games and cards	12 square games and the cards (Storage and a bar, below); the Dunelm one is 18 deep: a layer or two	**Fits**

Your rear speakers (from your photos)

the AX5100G's rears, 9 × 14.4 × 10.9, on stands behind each end of the sofa

Item	Size (cm)	Space	Spare (cm)	Result
In the gap behind the sofa	each pole 2.5 across, its flat base under the radiator [3,48]	3 between the radiator's face and the sofa's back	0.25 each side of the pole: snug	**Fits, tight**
In front of the curtains	the speakers' backs at z -298.4 [48]	the curtains, drawn, lie flat behind each pole at z -298.9	0.5 in front, open or drawn; the radiator 0.1 behind the cloth	**Fits**
The curtain pole	its top at 224.4 [1]	the ceiling strip at 234.4	10 under it, as in your photo; 9.6 over the window's head	**Fits**
Above the sofa's back	the speakers 96–110.4 [48,24]	the sofa's back 80 tall	16 above it, about seated ear height, as in your photo	**Fits**
Power and the link cable	the rears are linked by a cable; one plugs in [3]	your double socket behind the sofa's short side (x 0, z -140)	the left rear is a step from it; the link runs along the skirting behind the sofa	**Fits**

Measuring sheet: 11 things to check before you buy

One session with a tape: measure each, write it in, send us the page.

What	We drew	Why it matters	Yours (cm)
The TV's remote receiver, bottom centre of the screen's frame The TV between the uprights	soundbar top 82, in front of the stand's foot	0.6 over the frame's edge: sit the bar on the worktop 2 cm proud of the stand's foot, not against it, so the remote's beam from the sofa clears it; if a button stutters, pair LG's Magic Remote (it talks to the TV by radio)	
The TV's HDMI plugs, with the screen 2.15 from the corner post The TV between the uprights	behind the screen	plugs stay behind the panel; if a stiff lead pushes out, use 90° HDMI adapters	

Xbox 360, original, + RetroTINK-6X CE Bay 1, Xbox (BESTÅ frame on the 9 cm plinth)	16 tall row	7.7 above; 25.9 beside it for the RetroTINK: measure it when it arrives	
Vibration: the consoles and the deck share the base with the sub Bay 2, PlayStation and the sub (BESTÅ frame on the plinth)	the sub on its riser, clear of the divider and the frame; the deck on isolation feet	the 360 is a bay away, the PS2 and PS1 a divider away: play a disc game and a record at film volume; if anything skips, turn the sub down for that source, or put it back under the dining wall	
The side-wall socket beside the slim drawers Bay 3: the LP crates and the slim game column	the middle slim drawer pulled out passes 5.6 from the wall	the plugs must stand less than that off the wall: flat (angled) plugs, leads down; measure yours	
The two doors and their hinges The compact dining cabinet (the plan)	a full-height stainless piano hinge each, screwed every 10 cm into a solid oak edge	the hinge's load isn't published: hang the table door, open it flat, and check its far end doesn't drop before you load the cabinet	
Stair side: the stair's foot and the door The compact dining cabinet (the plan)	the stair box's face at -41; the door's edge reaches -44	seated, the backs reach 8.7 into the door's swing: keep the door shut while you eat. Measure a chair's depth: 52.3 or less and the door clears	
Its stairs end Your black shelf on the stairs wall (a fixed 10 cm gap)	an earlier look at your photo put it about 41 past the stair box	35 past it: if you measure 41 there, the shelf is about 194 long; the gap stays 10	
The shelf over the door Your picks (in the plan)	the door's 198 and a 7 architrave	11.3 over two 15-high boxes; check your architrave	
The step drawers Your picks (in the plan)	a riser 19.5 under a 2.2 tread, the stairs 59 wide	each tread needs a bearer under it once its riser comes out: a joiner's job, or build them into the new stairs	
Its height The storage ottoman (replaces your blue cord one)	the sofa's seat about 45	a footrest level with the seat; ISTOOLS don't publish it: check	

Safety

- **Wall cabinets, shoe cabinets, the bar and the media wall:** fix each to the wall with the anti-tip fittings for a solid wall; IKEA's own listings say they must be anchored.
- **Drilling:** check for pipes and cables with a detector before every hole; the side wall carries the PC's leads.
- **The step drawers:** a bearer under each tread once its riser is cut out: a joiner's job, or build them into the new stairs.

- **An old textured (Artex) ceiling:** if it's older than about 2000, have it tested for asbestos before sanding, drilling or skimming it.
- **Mains electrics:** the sockets and the light fittings: done to Part P, or by an electrician.
- **The dining table:** never swing it up or down with anything on it; check all four legs have clicked before you load it.
- **The record table:** about 65 kg with its LPs: roll it, don't lift it, and fit both lid stays so the lid can't drop.

Console sizes, every version

The bays are sized for the largest version of each console. The model number is on the label underneath; a smaller version just leaves more room.

Console	Version	W × D × H (cm)	Power
PS1	Original (largest) · PS one	27.0 × 18.8 × 6.0 · 19.3 × 14.4 × 3.8	Built in · external adapter
PS2	Original (largest) · Slim	30.2 × 18.3 × 7.8 · 23.1 × 15.2 × 2.8	Built in · external brick
PS3	Original (largest) · Slim · Super Slim	32.5 × 27.4 × 9.8 · 29.0 × 29.0 × 6.5 · 29.0 × 23.0 × 6.0	Built in
Xbox 360	Original (largest) · S · E	30.9 × 25.8 × 8.3 · about 27.0 × 26.4 × 7.5 · 25.4 × 26.4 × 6.7	External brick
Xbox One	Original (largest) · S · X	33.3 × 27.4 × 7.9 · 29.5 × 22.9 × 6.4 · 30.0 × 24.0 × 6.0	External brick · built in
Xbox Series X	Standing	15.1 × 15.1 footprint, 30.1 tall	Built in


The drawer layouts

Seven drawers in the alcove base, all drawn to scale from above: **A** the game drawer (bay 1), **B** the hidden plinth drawer under bay 2, **C** and **D** the two face-out LP crates and **E** to **G** the slim drawers beside them (bay 3). Each one shows its compartments, what goes in them and how many, and its runners. Every front is a plain oak lip with a finger pull cut underneath.

The drawer layouts: where each drawer is and what goes in it

Seven drawers in the alcove base, all to scale: A the game drawer, B the hidden plinth drawer, C and D the LP crates, E to G the slim drawers beside them

Where each drawer is: the alcove base from the front

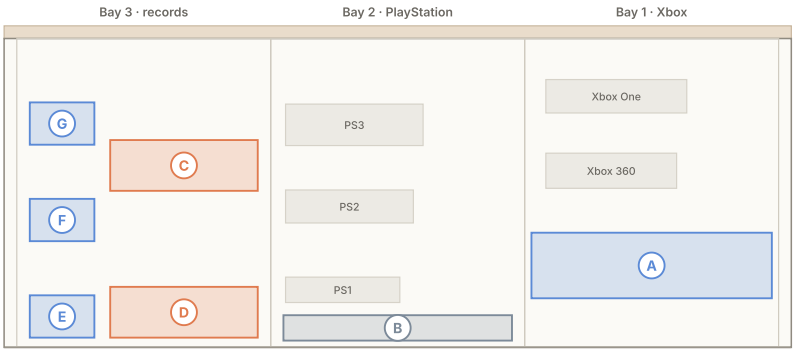


186 wide: 3 + 60 + 60 + 60 + 3 · worktop at 76 · front view, 3.6 px per cm

- **A · Game drawer: bay 1, bottom row (11.6–27.1 up)**
- **B · Plinth drawer: hidden under bay 2 (1.6–7.6 up)**
- **C · Upper LP crate: bay 3, right (37–69.1 up)**
- **D · Lower LP crate: bay 3, right (2.3–34.4 up)**
- **E · Slim drawer, games: bay 3, left (2.3 up)**
- **F · Slim drawer, games: bay 3, left (25.1 up)**
- **G · Slim drawer, pads and remotes: bay 3, left (47.9 up)**

Open one LP crate at a time: full, one is about 30 kg.
Anti-tip brackets fix the base to the wall first.
Every front: a plain oak lip, finger pull underneath.

A · Game drawer


box 54.3 × 35 · 350 mm soft-close runners · rolls out 30

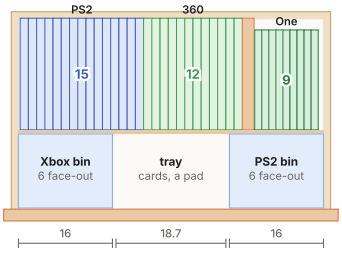

back: 36 spine-up, titles on top (19 cm cases on edge)
front: 12 face-out · about 48 games in all

B · Hidden plinth drawer


box 52 × 34 × 5 inside · 300 mm runners · finger pull

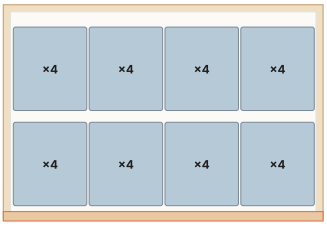

32 PS1 games flat: 8 stacks of 4 jewel cases
or remotes, spare pads, cables and manuals

C and D · LP crates

box 34.9 × 40 · 400 mm runners

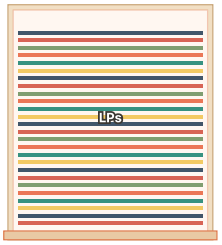

face-out, leaning back 10°
~90 LPs each · two crates

E, F, G · Slim drawers

15.3 × 40 · 400 mm



E, F: ~22 games
each, face-out
G: 4 pads, remotes,
a charging lead

Plans drawn from above at 5 px per cm, front (the room) at the bottom; the elevation at 3.6 px per cm. Sizes: BESTÅ frame 60 × 40 × 64 (IKEA);
game cases 19 × 13.5 × 1.4 and 17 × 13.5 × 1.2; jewel case 14.2 × 12.5 × 1; LP sleeve 31.4; pads 16 × 10.6 × 6.6; runners Emuca 400 mm, Accuride 350 mm (see the fit proof).



Every drawer out, in place: the game drawer, an LP crate and a slim drawer 30 cm out.


The game drawer (bay 1, bottom row)

Unchanged. Two display bins at the front show covers face-out even with the drawer shut (Xbox left, PS2 right, a small tray between them); behind them the rest of the games stand on edge with the spine on top, so every title faces up when you roll it out.

The game drawer: covers on show at the front, every title readable from above at the back


Bay 1, bottom row. Section left, plan right. Nothing stands behind anything else

Side section through bay 1

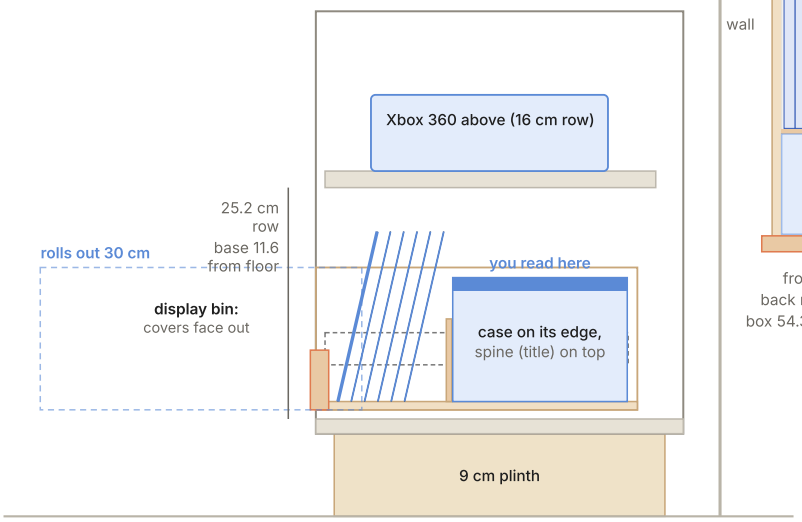

box 35 cm deep on 350 mm full-extension soft-close runners
5 cm free behind the box, then the 4 cm cable channel
bins: 19 cm cases leaning 13°, about 18.5 cm tall

Top view, drawer pulled out

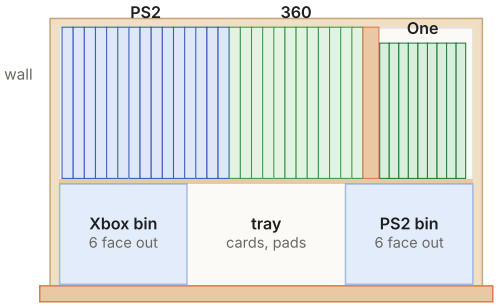

front: oak lip with finger pull, matching the record drawer
back row: 15 PS2 + 12 Xbox 360 + follower block + 9 Xbox One
box 54.3 × 35 cm outside · 51.9 cm inside · 16 cm bins, 18.7 cm tray

- **Box:** about 54.3 × 35 cm outside on 350 mm full-extension soft-close runners screwed to the BESTÅ sides; sides 15 cm; 9 mm base lined in felt. About 48 games.
- **Runners:** Accuride DZ3832EC (43 kg) or Screwfix Essentials 964VN (40 kg); not IKEA's BESTÅ runners, which aren't full extension.
- **The bricks:** both Xbox bricks lie flat at the back of their shelves, on their rubber pads, beside the channel's power leads, with nothing on top. Microsoft only asks that the space is ventilated[26], and these bays are open at the front and the back.

4 · The records and the turntable

Your plant stand and your vinyl stand

- **Your plant stand:** 98 × 29.5 × 158. Two slatted towers of five tiers, with an open middle holding two shelves for taller plants.
- **Your vinyl stand:** 70 × 32 × 78. A black steel frame and rustic wood: two face-out bays on top, LPs standing between wire dividers below.
- **Sizes** from the listings you sent[32,33].
- **Two good places:** the window's west corner and the chimney breast (free now the table is by the stairs), so two layouts. In the 3D room, Tools › Layout switches between them; in Edit room you can drag either anywhere.
- **A, recommended: plants in the window corner, records on the breast.**
  - The plant stand goes against the window wall, between the curtains' stack and the pipe boxing: 107 cm for its 98, so 4.5 each side. Measure before it goes in; if it's tight, open the curtains' stack a little towards the window.
  - Its plants get daylight from the window beside them; at 158 it leaves 77 to the ceiling.
  - The vinyl stand goes on the breast, centred, under the “now playing” ledge (23.6 cm clear). Pick a record from its top bays, play it on the deck an arm's reach away, stand its sleeve on the ledge.
  - About 100 more LPs.
- **B: records in the window corner, as today, plants on the breast.**
  - The plants become the breast's display, 9.75 cm clear each side.
  - At 158 tall the stand comes up past the two frames, so the frames go up above it (or elsewhere) and the “now playing” ledge comes off.
- **Either way:**
  - Your red lamp moves from the window corner to the sofa's west end.
  - Drip trays or a waterproof mat under the pots protect the slats and the carpet.
  - Felt pads under the vinyl stand.



Layout A, from the 3D room: your plant stand in the window's west corner.




Layout A: your vinyl stand on the chimney breast, under the “now playing” ledge, beside the turntable.

The vinyl is in one place, in the alcove: the deck on the worktop, the records in the two LP crates right underneath it, the preamp tucked under the shelf above, and the “now playing” ledge on the breast an arm's reach away. Pull a crate, pick a record, play it, and stand its sleeve on the ledge.

Bay 3: two LP crates under the turntable, a slim game column beside them


Section left through the LP crates, plan right. Pull a crate and flip through the covers like a record shop browser; the slim drawers flip the same way for games

Side section through bay 3

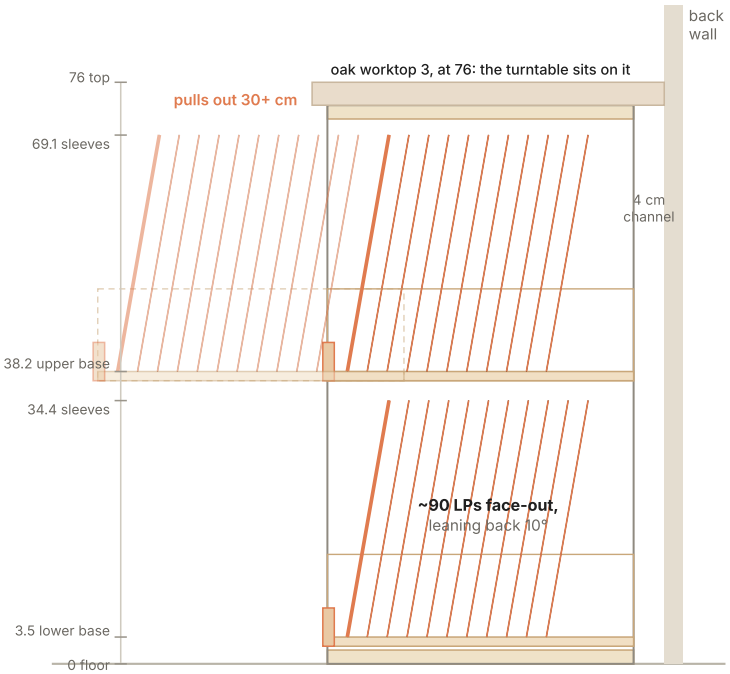

carcass 18 mm birch ply, 60 × 40 × 73, back open to the channel · crates 40 deep on 400 mm runners
12 mm base, 9 mm sides, 5 cm oak lip · 2.6 and 2.1 cm finger room (top panel at 71.2)

Bay 3 from above

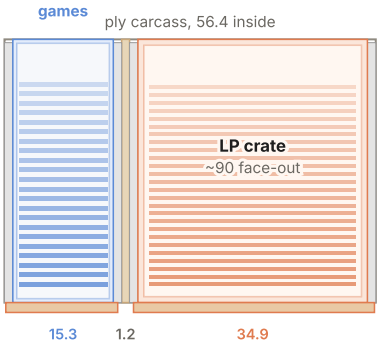

LP crate 34.9 × 40, a 33.1 trough: LPs snug, no dead space
slim drawers 15.3 × 40, 14.1 inside: DVD-size cases face-out
12 mm ply divider · 12.7 mm runners each side
an LP crate is about 30 kg full: open one at a time

The glass display case on the chimney breast

You picked it: a tall glass case on the breast, 90 × 85 × 12 deep, centred from 137 to 222, 13 under the ceiling. Three 6 mm glass shelves on pins, a 4 mm toughened front that lifts off[64], a warm strip inside. An oak frame from the offcuts on a hidden cleat, about 16 kg empty. Step 9 builds it; about £90–170.



The case on the breast with collectibles, the “now playing” ledge and your vinyl stand under it.



The same case with a black frame and a bit of everything: 7-inch singles, a cap and figures, small plants.

How bay 3 works

- **Why it changed:** with LPs only, v15's trays had about 10 cm of empty width each side. Now a 12 mm divider splits the bay: the LP crates take only the width LPs need, and the rest becomes a slim column that does a job.
- **The LP crates:** a 33.06 cm trough, the snug width record shops use[36]: the sleeves stand with a little play and you flip them by their top edges. They lean back 10°; the last one leans on a raked oak rest. Outer sleeves up to 32.4 still fit.
- **Capacity:** about 90 LPs per crate; two crates, about 180 LPs, the same as before.
- **The slim column:** three drawers 15.26 wide, 14.06 inside. The bottom two hold DVD-size game cases face-out (13.5 wide), about 22 each, flipped like the records. The top one holds four pads on edge[35], the TV, soundbar and streaming remotes, and a USB-C lead fed from the 10-gang to charge a pad in the drawer.
- **Runners:** 400 mm full extension everywhere; 68–70 kg a pair under the crates. A full crate weighs about 30 kg: open one at a time, and fit the anti-tip brackets before loading.

Dimension	Figure	How it adds up
Bay 3 carcass	60 × 40 × 73 outside, 56.4 × 69.4 inside	18 mm birch ply; back open to the channel; a 12 mm divider 17.8 in from the left
Across the bay	15.26 + 2.54 + 1.2 + 34.86 + 2.54 = 56.4	Slim drawer, its runners, the divider, the LP crate, its runners: nothing left over
LP crate	34.86 × 40 outside, 33.06 × 38.2 inside	9 mm sides and ends; 0.8 either side of a 31.4 sleeve
Slim drawers	15.26 × 40 outside, 14.06 inside	6 mm sides; bases at 2.3, 25.1 and 47.9
Lower crate · upper crate	Undersides 2.3 · 37.0; sleeves to 34.4 · 69.1	2.6 and 2.1 cm finger room; top panel at 71.2

The turntable zone

- **The deck:** on isolation feet, 2 cm back from the worktop's front edge, with 8.8 cm behind it for the lid's hinges. The zone takes a deck up to the size of an AT-LP120X (45.2 × 35.2 cm); most decks are smaller.
- **The lid:** AT's cover is 44.1 × 34.6 cm[17], so standing open its top edge is at about 121; the shelf's underside is at 130.
- **Bass:** the sub is in bay 2, in the same base the deck sits on. It stands on an isolation riser, clear of the divider and the frame, and the deck stands on isolation feet. If a record skips or hums at film volume, turn the sub down for vinyl.
- **Signal path:** turntable set to PHONO → the preamp under the shelf → a 2 m RCA-to-3.5 mm lead down the groove behind the left upright and along the back of the worktop to the soundbar's AUX. If the deck has no PHONO/LINE switch, plug it straight into the AUX.
- **Soundbar:** Music mode, bass up, surround, night and dialogue modes off. Always the AUX cable, never Bluetooth.


Storage options, to scale

Storage options: what fits each space, to scale


Front views and views from above of every storage space in the wall, with counts, and where the overflow would go

Bays 1 and 2: inside each BESTÅ frame

56.8 wide × 40 deep inside; rows as planned, front view

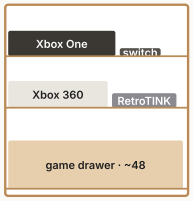

Bay 1 · Xbox

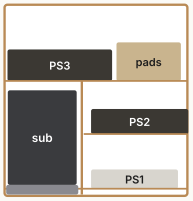

Bay 2 · PlayStation + sub

Swap any 16 cm row for two KUGGIS boxes, 26 × 35 × 15, side by side (52 of 56.8 wide).

Bay 3 from above: LP crate and slim drawer

56.4 inside: a 15.3 slim drawer, the divider, a 34.9 LP crate



games | divider | LPs: no dead space

≈ 90 LPs a crate, two crates

= 180 LPs, all face-out


beside them 44 games face-out

and a drawer for pads and remotes

trough 33.1: thick outer sleeves fit

Hidden plinth drawer, from above

box 52 × 34 × 5 inside, under bay 2; finger pull, not push-to-open

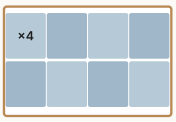

32 PS1 games flat

jewel cases 14.2 × 12.5 × 1, 8 stacks of 4

or: remotes, spare pads, cables, manuals

Series X shelf, front view

50.5 wide, 134 to the high shelf at 192: 58 clear



15 air each side, 21.4 above

Microsoft: at least 4 above, 10–15 recommended all round

Under it: the deck, lid opens to 121

High shelf, front view: as planned, or as LP overflow

186 long, 30 deep, 39 clear to the ceiling; the left-hand 50.5 keeps the framed 7-inch and the print



about 1 m of books, a lidded box, a print

As planned



≈ 380 LPs spine-out at about 3.3 mm each; a 31.4 sleeve overhangs the 30 cm shelf by 1.4

As LP overflow

PC shelf, from above

82 along the wall × 28 out, at 155.4; keyboard tray in a 7 cm housing under it



side wall along the top · alcove to the right

Keyboard tray: 300 mm runners, rolls 25 cm out; the housing stops 12 short of the sofa end so the cables drop past it. Full-size wireless keyboard and mouse.

If the collection outgrows the wall

two overflow options, both face-out or spine-out to match

1 · LPs spine-out on the high shelf: about 380 more

No building; books move to the second option's top.

2 · A second record unit, west of the sofa, under the window

Another LP column like bay 3 (40 × 46 × 73, two crates): 180 LPs.

At x 300–360 it leaves 123 cm to the table set for six (100 to walk).



front view, 60 × 73 (shown at half height)

All to one scale, 2.2 px per cm. Sizes: KUGGIS box 26 × 35 × 15 (IKEA); jewel case 142 × 125 × 10 mm (Wikipedia: Optical disc packaging); consoles, sleeves, Series X and the trays from the fit proof (section 3 of the plan).

Where every record lives

Where	What	How many
Bay 3, the two LP crates	LPs, face-out	About 180 LPs
The breast	The “now playing” ledge	3 LPs, the one that's on and the next two

Above the TV	Oak record ledge, the "now playing" wall	4 LPs
Side wall	The oak run round the corner	4 LPs
Your vinyl stand	LPs, face-out on top, spine-up below	About 100 LPs (50 + 50)
Total		**About 291 LPs: 191 in the wall, every one face-out, and 100 in the stand**

If the collection is bigger than this, tell me the count. The neatest overflow is another LP column like bay 3's (40 wide, two crates, 180 LPs), or LPs spine-out on the high shelf.

5 · The dining wall

The compact dining cabinet is the plan: you asked for "a smaller build on the cabinet", so the same table and the same six chairs now pack into **two oak boxes side by side**, 147.2 × 23.4 × 189, under your shelf by the stairs, 1.4 cm proud of the pipe boxing. Shut, it's two plain oak doors. Open, the table is 185 × 90 and six sit in comfort, three a side, on your grey padded chairs.



Packed away, in the 3D room: the table box and the chair box side by side.

- **Where the length went.** Two chairs now **lie on their sides in the table box's base**, under the hinge rail, where the sliding cabinet had its drawer. The other four **stand in a box one chair wide**: two deep on its floor and two deep on its shelf. The chairs are padded, so there are no seat pads to keep.
- **Hinged doors that turn right back.** Each door hangs on a full-height stainless piano hinge[49] with its knuckle just in front of the faces, so it turns 180° and lies flat over its neighbour. Nothing stands out into the room. Open, the table door reaches 36.1 past the cabinet's window end, 9.2 clear of your plant stand.
- **The table box, at the stair end** (91 inside). The 185 × 90 solid oak table stands up in it in two 92.5 × 90 halves, folded face to face, on its oak hinge rail at 73.3. The two lying chairs are underneath it. Above it is the **linen shelf** for the cloth, the napkins, the runner and the candles.
- **The chair box, at the window end** (49 inside): four folded chairs, 2 cm wider than a chair, with a fixed shelf at 95.8.
- **The table is unchanged:** the two halves meet flush on three brass flip-top hinges[30], each a centre of staves between pegged breadboard ends. Four tapered oak legs fold flat inside the aprons. Each half is about 16 kg.

Using it

1. **Opening:** clear the floor in front of it and push the ottoman to the sofa. Open the chair door, lay it back over the table door and take the four chairs out, then shut it.
2. Open the table door and lay it back over the chair door, where a flush magnet holds it. Lift the two chairs out of the base, front one first.

3. Pull the finger pull at the top of the folded table and lower it halfway on its piano hinge[43]. Unfold the inner half's two legs until each clicks[44], then lower it onto them. Lift the outer half up and over, unfold its legs until they click, and lower it. The table is 185 long, its top at 76, level with the media wall's worktop.
4. **Folding away:** do it the other way round. Fold the legs and the outer half, swing the table up until the catches take it, then put the two chairs in the base and shut the table door. Then the four chairs go in the chair box. Use two hands, and never fold it with anything on the table.

The chairs: your grey padded ones

Your chairs[62]: Brayden Studio's **wooden folding chairs in linen**, sold in pairs, a 47 × 47 seat with a 6.5 cm cushion, 168 kg each. **Folded they're 90 × 10 × 47**: only 1 cm thicker and 1 cm taller than the beech FRÖSVI the cabinet was drawn for, so they pack in the same way with three small changes:


- **23.4 deep instead of 22**, so two stand one behind the other (20.8 inside for two at 10). The cabinet stands 1.4 cm proud of the pipe boxing.
- **The chair box 49 wide inside** (was 46), for a 47 chair: the cabinet is 147.2 long.
- **The chair shelf at 94** (was 93.5), so a 90 chair stands under it and over it with a centimetre to spare. Two still lie in the table box's base, 0.5 clear at each end.

The listing doesn't give the open chair's depth, height or seat height, so those are drawn at a like-for-like chair's[63]: 61 deep, 78.7 tall, the seat at 44.5. Seated on the stair side, a chair's back reaches into the door's swing: **keep the door shut while you eat** unless they measure 52.3 deep or less. About £80–130 a pair.

The idea is a proven one: fold-down tables built into wall units are made this way[45]. Your stairs wall is solid (your answer)[50], so the boxes stand on the floor and are screwed to the wall at the top with plugs and screws so they can't tip.

The compact dining cabinet, packed away

The stairs wall from the room, to scale (1 cm = 2.55 px). Doors see-through: the table and two chairs behind the table door, four chairs behind the chair door.

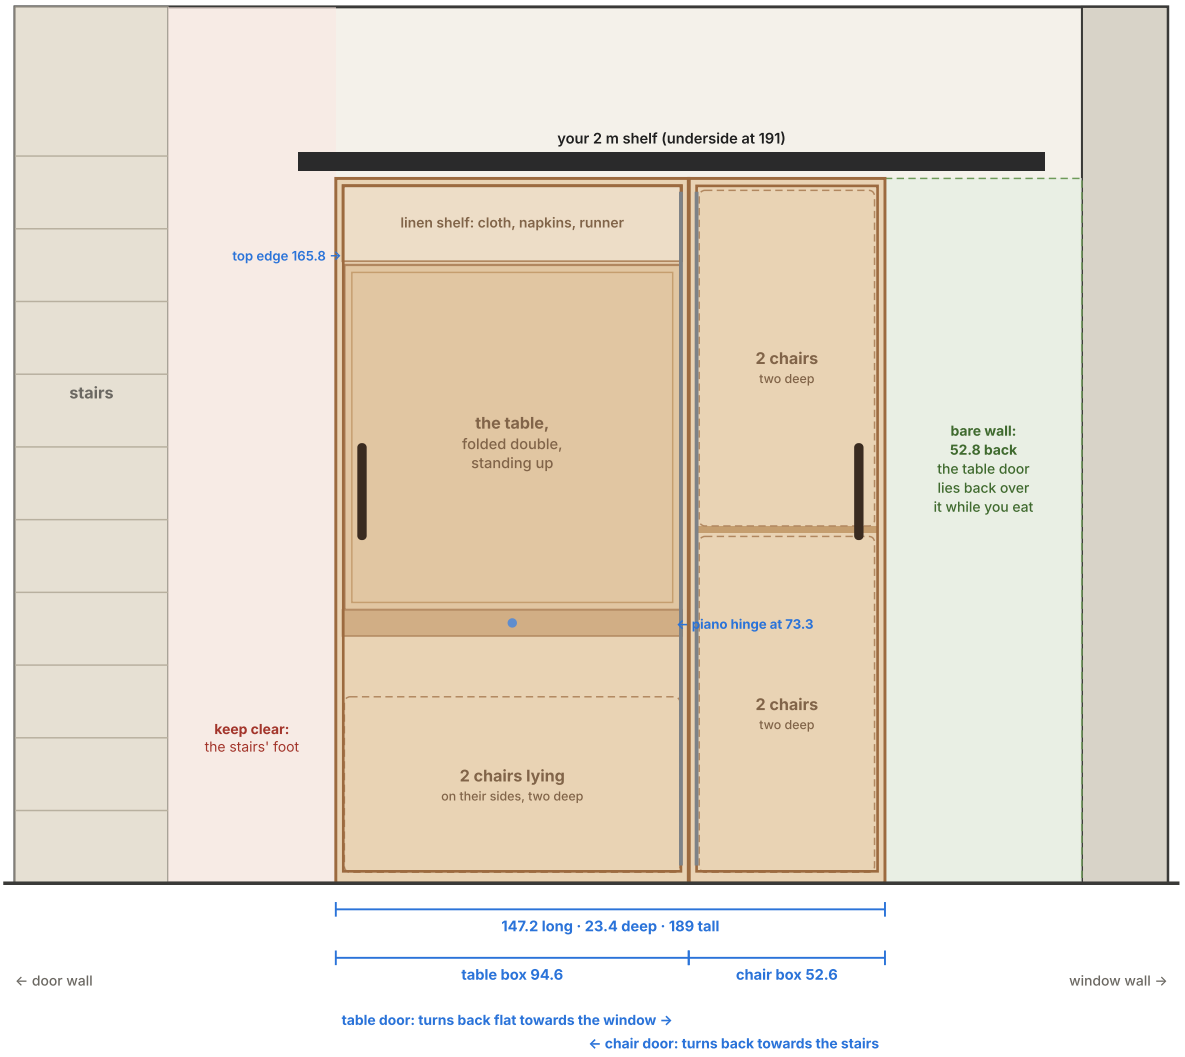



The chair door turned back flat over the table door: four folded chairs.


How many sit down

Six, all in comfort: three on the stair side (58.1 cm of edge each) and three on the window side (58.1 each, from the sofa's arm to the cabinet). The open table door clears the nearest window-side chair by 3.3 cm. The coffee table stays where it is, and a seventh chair fits at the far end if you bring one.

Table	Seats	How	Notes
The compact cabinet (the plan)	6 in comfort	3 on the stair side, 3 on the window side	58.1 and 58.1 of edge each; a seventh at the far end with a spare chair
The 80-wide version	6 in comfort	3 on the stair side, 3 on the window side	58.1 and 58.1 of edge each; a seventh at the far end with a spare chair; four chairs inside, not six
A fourth chair a side	eight round it	174.4 and 174.4 of edge	43.6 each: under the 55 squeeze
A longer table in the cabinet	halves over 113.9	they must stand up under your shelf	113.9 is the most that folds away; 92.5 leaves the linen shelf's space

The compact cabinet open for six

From above, to scale. The table door turned back flat over the chair door and the wall beyond (dashed: its swing); three a side, all in comfort.

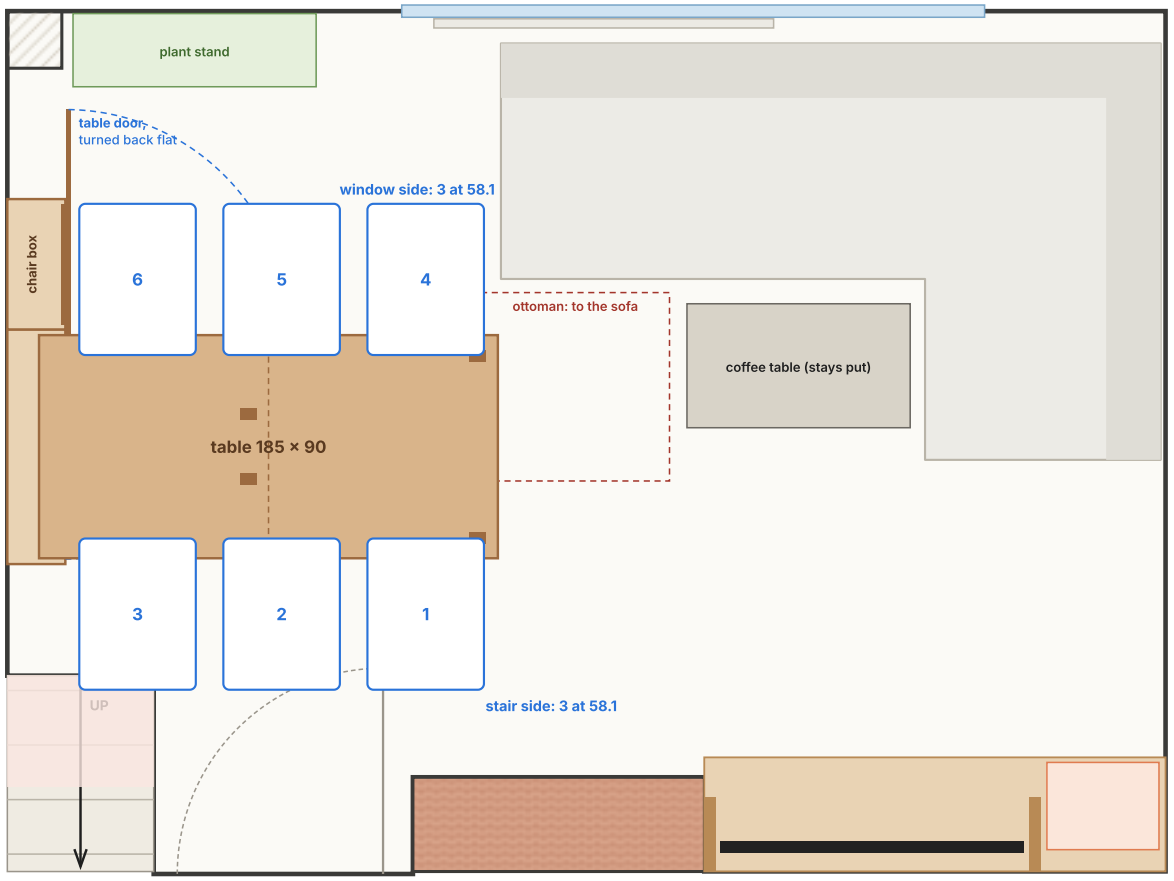




Open for six in the 3D room: the table door turned back flat over the chair door.

How it's built

Step 11 of the build guide builds it in order, with every size. You build the two boxes and screw them together and to the wall. Then the hinge rail, the two halves with their aprons and legs, and the joint. Then you hang the table, the catches, and the two doors on their piano hinges. The drawings below are the ones to have open on the bench.


The compact cabinet's two boxes, from the front

Doors and table off; heights to each panel's top face. Ends, tops and floors 23.4 deep; inside 20.8 deep, 2 back for the inset doors.

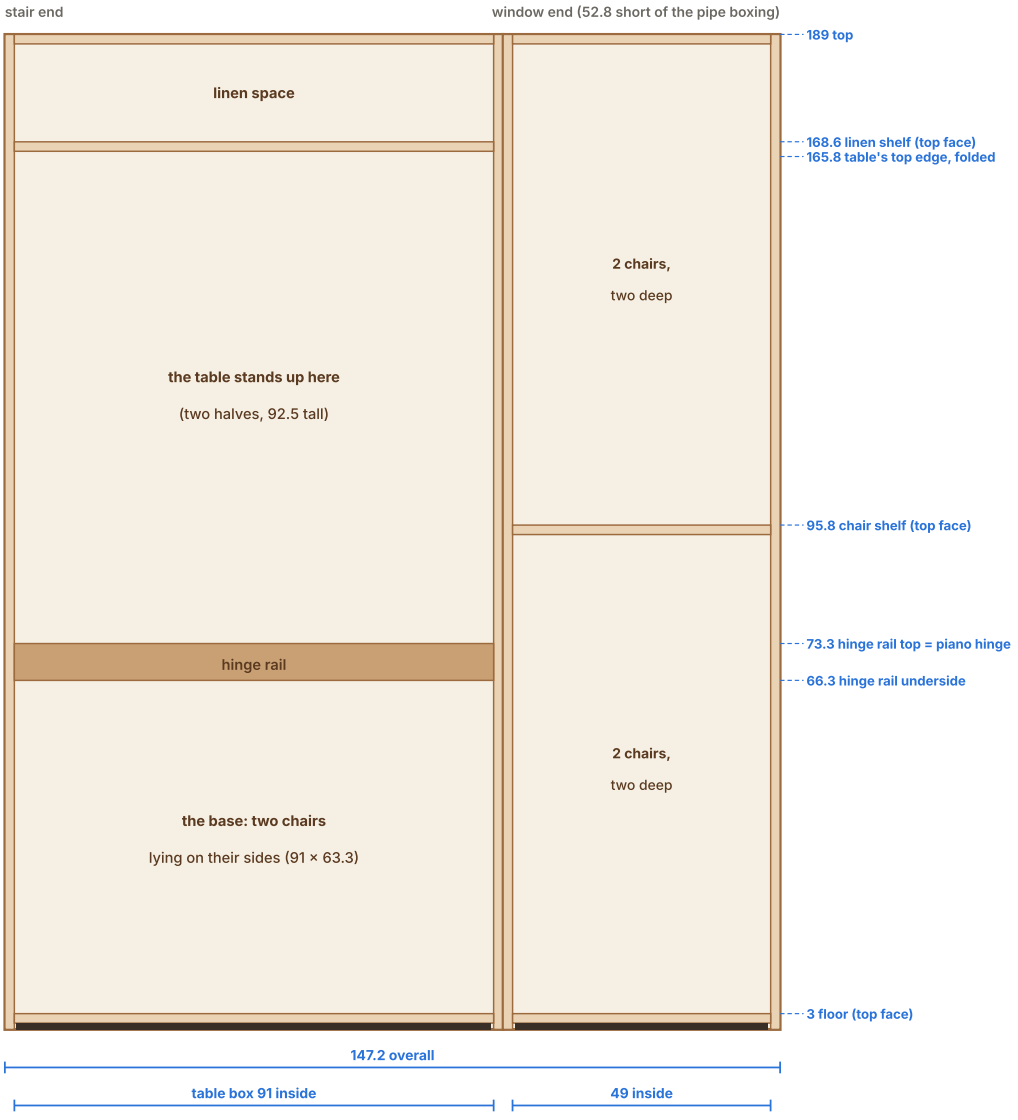


The compact cabinet: how the table comes down

Through the table box, wall on the right. Folded (dashed): 4 back from the door, two chairs lying under it. Open: the door turned back, the table down.

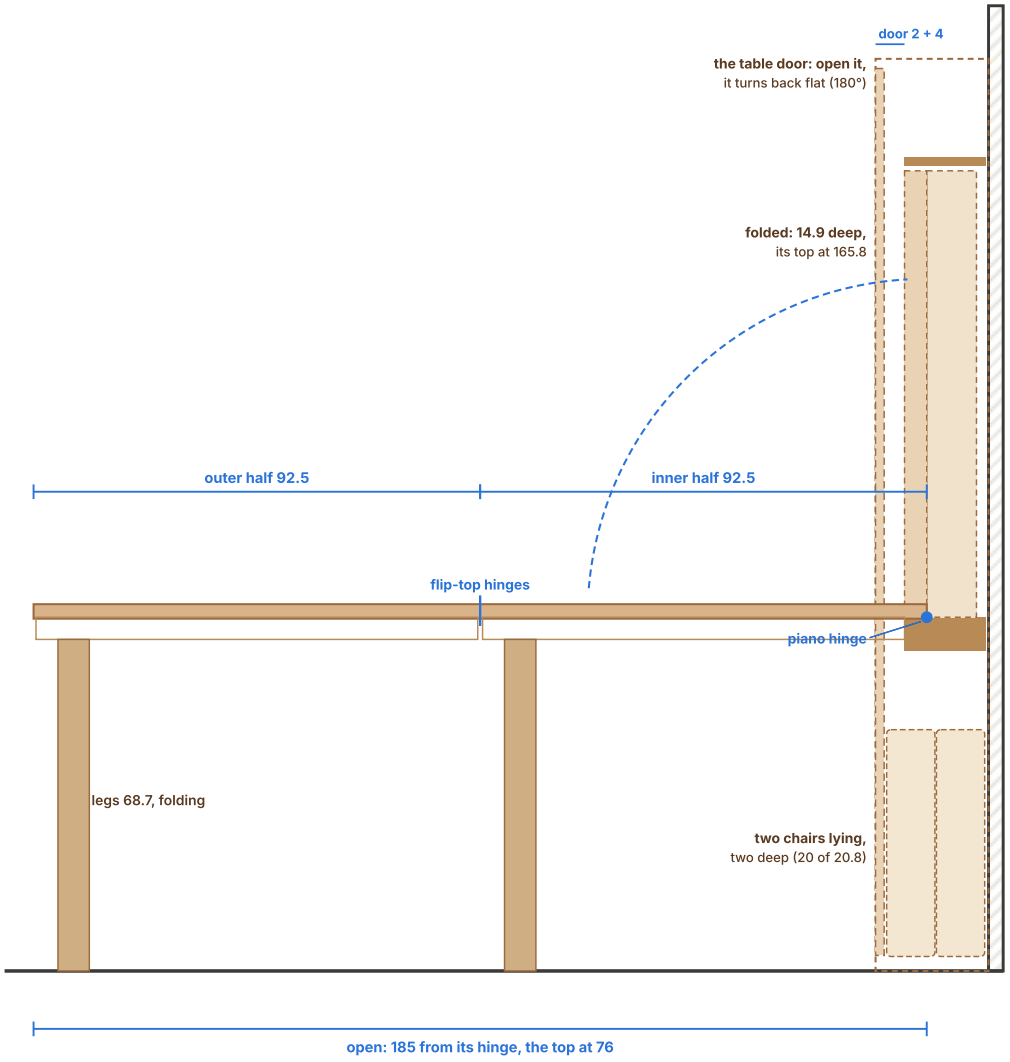

The table's two halves, from underneath

Laid out open, to scale. Breadboard ends 7 wide; apron frame 2 × 4.6, 4 in from the sides, 3 from the ends; legs fold inside it.

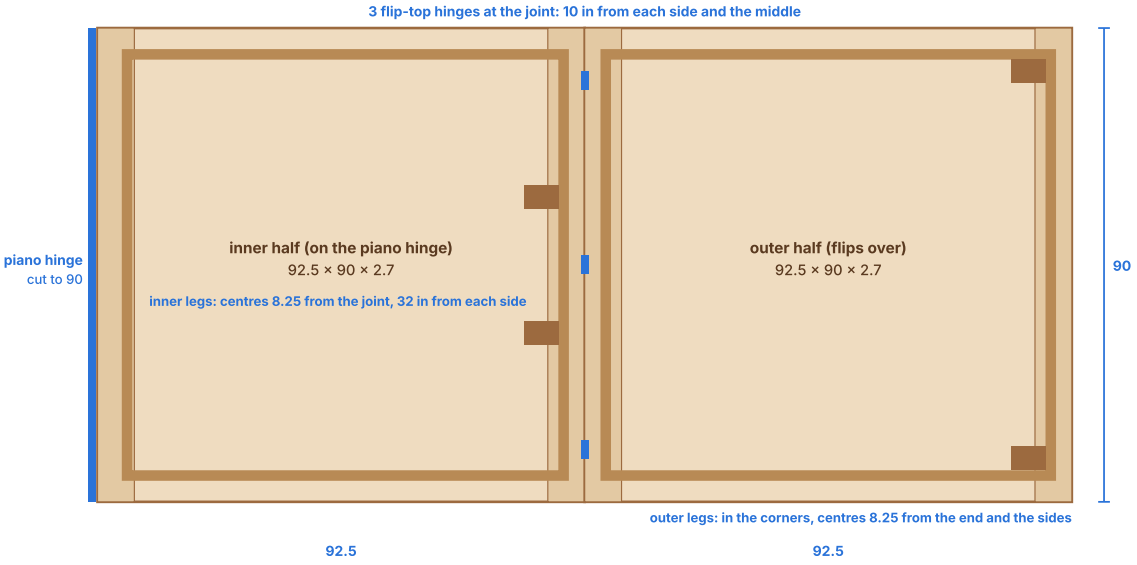

- **The two boxes:** oak-faced ply, cut to size by the merchant. Each has two ends 189 tall and 23.4 deep, a top and a floor between them, a 6 mm back and a shelf set back behind the door. The table box is 91

inside and the chair box 49. They're screwed to each other through their meeting ends, so they read as one cabinet.

- **The doors:** 90.5 and 48.5 wide, 183.8 tall, 18 mm oak-faced ply, about 21 and 11 kg. They're inset flush with the front edges, the grain upright, each on a 1800 mm stainless piano hinge (1.9 short of each end) on the boxes' meeting ends. A stop with a magnetic catch sits behind each free edge.
- **The hinge rail:** solid oak, 91 × 16.8 × 7, across the table box with its top at 73.3, its front 4 behind the door (the cloth bag hangs on the door in front of it). The table's piano hinge sits 4.6 back from its front. It carries the table's whole weight when it's open.
- **The halves and the joint** are as before: edge-glued oak with pegged breadboard ends, each on an apron frame, the legs folding flat inside on self-locking brackets, three brass flip-top hinges at the joint.

It costs about £1,026–1,735, the chairs included: the "6 Dining wall" rows of the buy list (section 11).

Safety: never swing the table up or down with anything on it. Check all four legs have clicked before you load it, and let the catches take it when it's folded. Hang the table door, open it flat and check its far end doesn't drop before you load the cabinet: piano hinges don't publish a load, so that's the test.

The bar beside the cabinet

A back-bar 42.5 wide between the cabinet and the pipe boxing, 22.4 deep: no deeper than the open table door. A cupboard for 16 bottles[66], an oak counter at 90[92], a 3 mm acrylic mirror[65] and an IKEA ENHET frame[90] over it, 4 under your black shelf. With the table door back, 35.8 of it is behind the door: set the drinks out first.



The bar beside the dining cabinet, under your black shelf.



Open: the bottles inside, glasses on the frame.

- **Build:** 18 mm oak-faced ply as for the cabinet: two ends scribed to the cabinet and the wall, a floor on a 3 cm plinth set back 2, a shelf at 40.8, a 6 mm back, two doors on soft-close hinges; the 27 mm oak counter screwed up through the ends; the carcass screwed to the wall, the plinth to the floor. Then the mirror, stuck on, and the ENHET frame on its own fixings, anchored as IKEA says.

6 · The side wall


One oak line at 155.4 cm runs over the TV between the uprights and, past the turntable zone, along the side wall. On the side wall it's **one run**, 4 thick: a 7 cm ledge with four LPs face-out that sweeps out to the 28 cm PC shelf. A warm LED strip under its front edge washes the wall below.



The side wall from the room: the oak run round the corner with its four LPs.

The side wall: the ledge wraps the corner, the PC sits above the sofa

One oak line at 155.4 cm: the record ledge from the upright, then the PC shelf over the end of the sofa, clear of the TV's sightlines

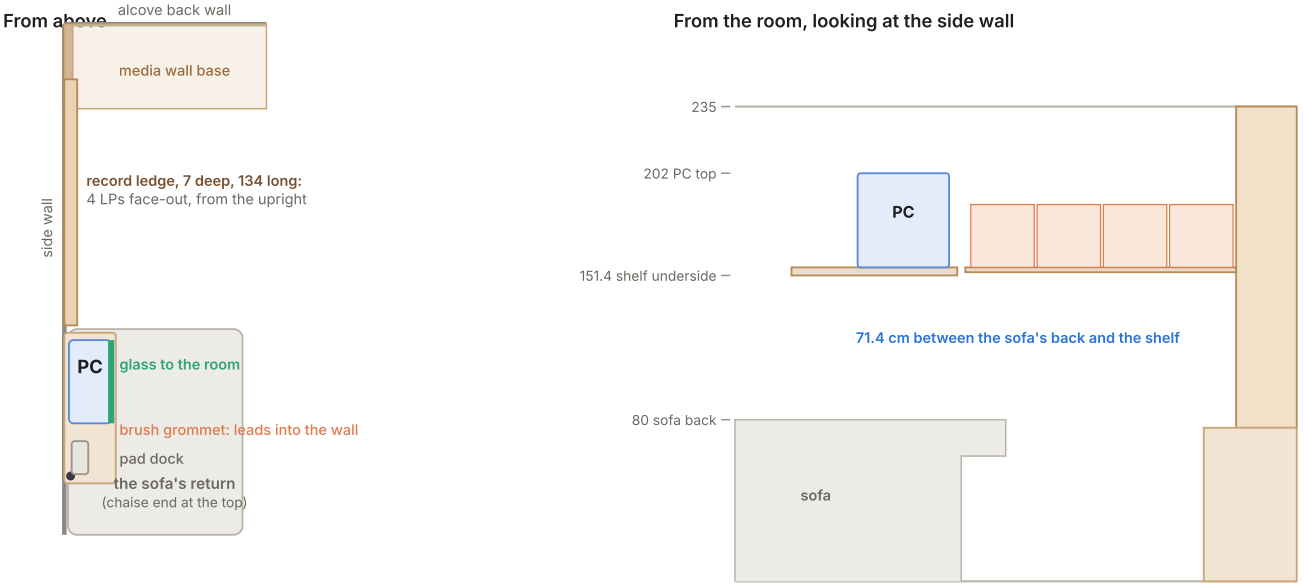

- **The run:** 220 cm long, 4 thick, cut from one 225 × 30 × 4 oak board to a full-size template: 7 deep along the LPs (with a 1.5 cm lip), easing out to 28 over 14 cm just past the last LP. It sits on an oak cleat

screwed to the side wall, dowelled to the left upright's front edge.

- **The PC end:** 82 × 28 cm, on two concealed heavy-duty brackets (40 kg+ a pair) as well as the cleat, 71.4 cm above the sofa's back. The case sits with its glass to the room and its front towards the alcove. The ports face the window and stay open to the air (no screen, so nothing traps the exhaust); from the sofa you look at the glass side, not the ports. The pad dock sits beyond the case.
- **Cables:** through a brush grommet at the shelf's back corner straight into a 25 mm conduit chased into the side wall (it's solid, as you confirmed), down to skirting height and behind the skirting to the base's plinth; you chase it yourselves in step 3, with a second, smaller conduit beside it for the PC's mains lead, then it's filled and painted, so nothing shows. A draw wire left in it pulls the next lead through. The HDMI is an active optical cable (about 5 m), "source" end at the PC.
- **Power:** the PC plugs into the 10-gang behind the TV: its lead (a 5 m C13 lead with a rewireable plug, fed down bare and the plug fitted at the bottom) runs in its own 25 mm conduit beside the data one. The 10-gang's load check, with the PC, is in section 9. No new socket.
- **Keyboard tray (back from v6.1):** the shelf sits on a 7 cm oak housing with a tray on 300 mm light-duty runners that rolls 25 cm out towards the room. It holds a full-size wireless keyboard and mouse: pull it out, lift the keyboard onto your lap, park it again. The housing stops 12 cm short of the sofa end so the cables drop past it; its underside is 144.4, 64.4 above the sofa's back.
- **Headroom:** the shelf's underside is at 151.4, and it covers only the 28 cm of the sofa nearest the wall.

The PC end, looked over again

- **Air:** a mid-tower draws in at the front (towards the alcove) and blows out at the back and top. Both stay open: the case's top is at 202, 33 clear of the ceiling; a magnetic dust filter on the top exhaust keeps the dust out while it's off.
- **Reach from the sofa:** the PC's own power button is on its top, behind your head. A remote power button (a small card on the motherboard's power pins and a push button under the wrap ledge by the sofa end) starts it from the seat, and a powered USB 3 hub under the run's front edge puts pads, the keyboard's dongle and a stick within reach.
- **Lit, and seen:** the glass side faces the room, so its fans and lights read as part of the wall at night (the 3D view's "PC lit" button shows it). Keep its lights on a slow single colour if they pull the eye from the TV.
- **Leads:** labelled at both ends (step 13), all three down the chased conduits; nothing hangs below the shelf.


7 · The oak joinery

Above the worktop the wall is furniture rather than cladding: two solid oak uprights, shelves carried on joints you can see, and the Card Room Green wall showing between them.

- **Uprights:** solid oak, 4.5 × 30 cm, 159 cm long, each on two 10 mm dowels into the worktop, scribed to the ceiling and held to the back wall with concealed brackets; the left one also screws to the side wall.
- **Wedged through-tenons:** the Series X shelf (top 134) passes through the left upright on two tenons, 6 cm wide and 2.4 thick, 12 and 20 cm from the wall. They're wedged and planed flush: standing proud, they'd touch the TV.
- **Housed and pegged:** the high shelf (two lengths, top 196) and the record ledge (top 155.4) are housed 1.2 cm into the uprights and pinned with 10 mm oak pegs, which show as dark dots.
- **LED grooves:** a routed groove on each upright's inner face holds a smart colour strip that washes the wall either side of the TV: warm white day to day, any colour for a scene.
- **Hidden cables:** a 2 × 1.5 cm groove down the back of the left upright carries the Series X's HDMI and power and the vinyl lead; the same groove in the right upright carries Deco B's 12 V lead and patch lead.
- **Finish:** hardwax oil throughout; lightly limed or smoked oak avoids the bright orange "new oak" look.

Artisan oak: how the joints work

Drawn to scale at 7 px per cm. The joints carry the load and are left on show, finished in hardwax oil

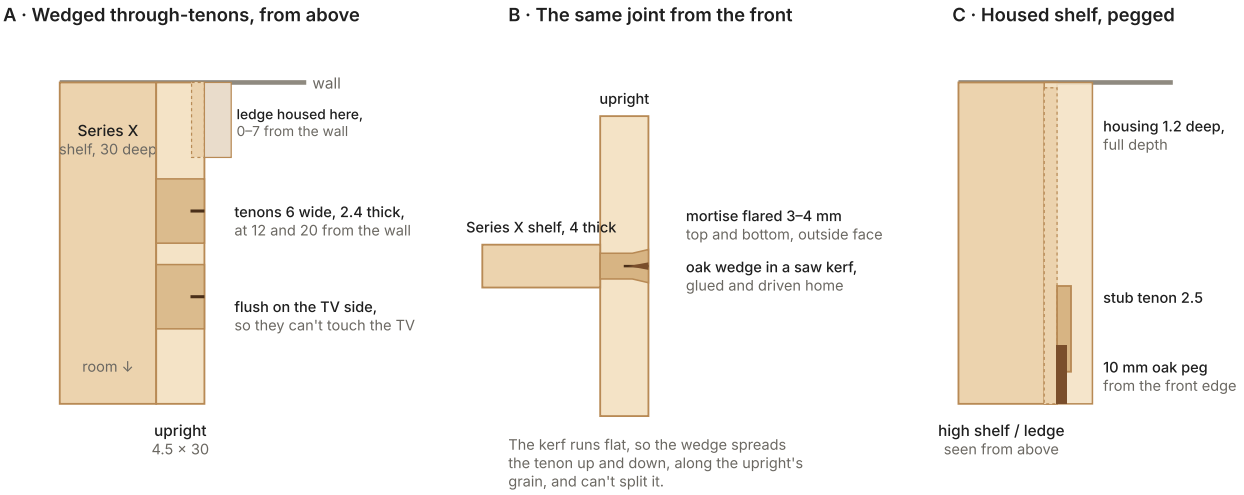

• Through-tenons (A, B): the Series X shelf (top 134) passes through the left upright on two tenons, 12 and 20 cm from the wall, wedged and planed flush: proud, they'd touch the TV.

• Housed and pegged (C): the three lengths of the high shelf (top 196) and the record ledge (top 155.4). The peg shows as a dark dot on the upright's face.

• Uprights: 159 long, worktop to ceiling, each on two 10 mm dowels into the worktop, scribed to the ceiling, with two concealed brackets. The left one also screws to the side wall, and

Joinery cut list


Part	Material	Finished size (cm)	Joints	Qty
Uprights	Solid oak, quarter-sawn if you can	159 × 30 × 4.5 (buy 165 and scribe)	Housings for the high shelf and ledge; mortises for the Series X shelf in the right one; LED groove inside; cable groove at the back of the right one	2
High shelf	Solid oak	128.9 × 30 × 4 and 51.7 × 30 × 4	Housed 1.2 into the uprights, pegged; the short length on a cleat on the side wall	2
Record ledge	Solid oak	128.9 × 7 × 2.4; lip 0.9 × 1.5	Housed and pegged	1

Series X shelf	Solid oak	55 × 30 × 4 (50.5 + 4.5 through)	Two through-tenons 6 × 2.4, wedged flush; cleat on the reveal	1
Side-wall run	Solid oak, one 225 × 30 × 4 board	220 long, 7 deep sweeping to 28, 4 thick; lip 0.9 × 1.5 along the 7 cm part	Cleat, two concealed brackets under the PC end; LED groove under the front edge	1
Worktop	One solid oak worktop, 300 × 62	186 × 46 × 3	Chamfered front; cut edges sealed; keep the offcut	1 board
Face frame	Oak, 20 mm	186 × 73, stiles about 5 wide	Glued and pinned; end stiles scribed	1 set
Wedges · pegs · dowels	Oak · 10 mm oak dowel	6 × 3, tapering · 5 long	Glued	2 + spares · 6 · 8
Keyboard tray	Oak housing sides 7 × 2, ply tray, oak lip	70 × 28 × 7; tray 54 × 26	Housing screwed under the shelf; 300 mm runners	1

8 · Paint and light

Paint: Farrow & Ball Card Room Green No. 79

The room is colour-drenched in Card Room Green: walls, ceiling, alcove, chimney breast, skirting and the radiator. The door and its frame stay white, as they are: a crisp edge to the green, like the window. There's no trunking left to paint. It's a soft grey-green that lets the oak and the records lead.

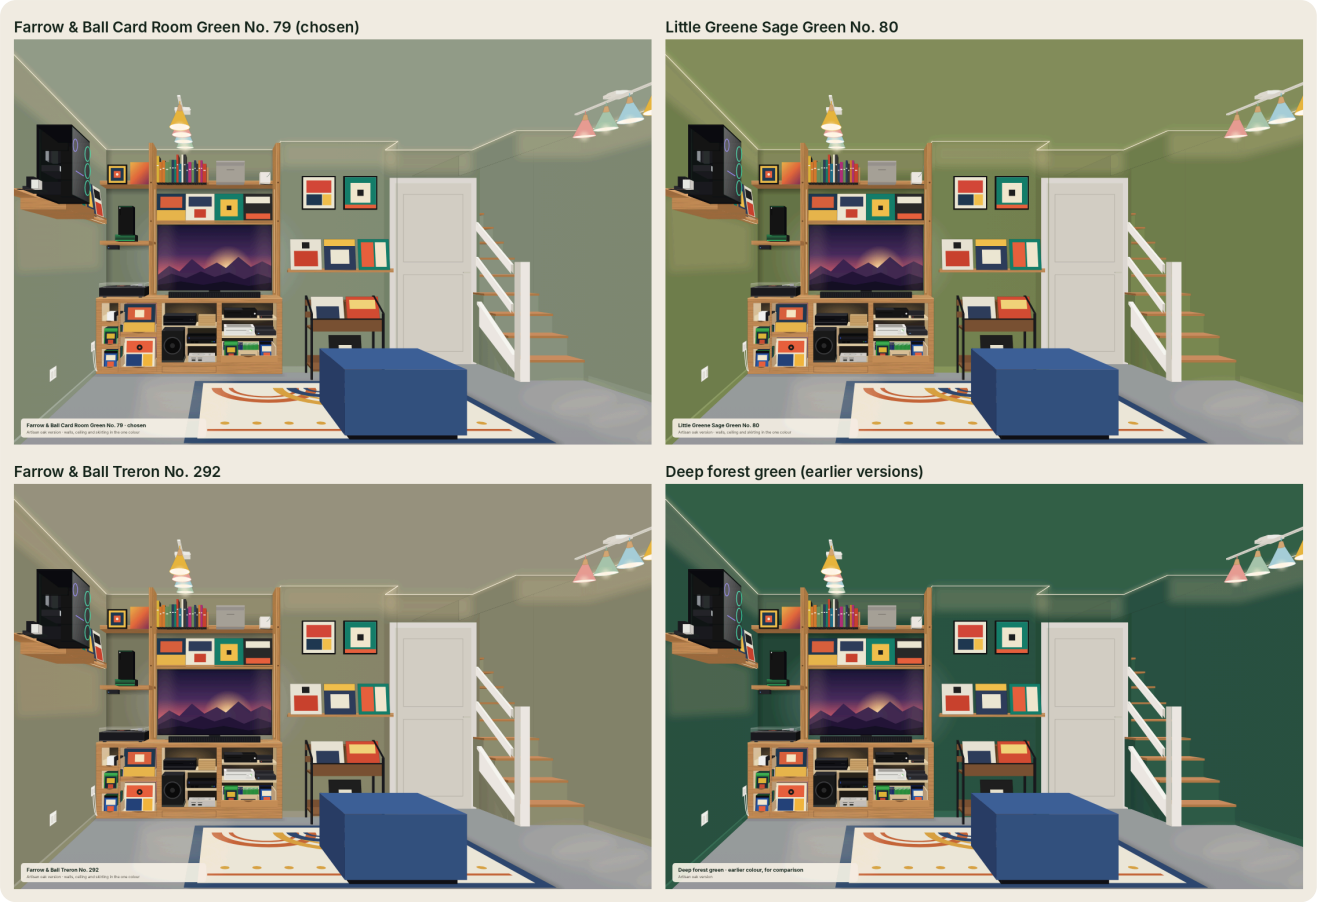


The wall in Card Room Green (chosen) beside Sage Green, Treron and the earlier deep green.

- **Finishes:** Estate or Modern Emulsion on walls, ceiling, alcove and breast; Estate Eggshell in the same colour on skirting and radiator (the door stays white) (Modern Eggshell if the skirting takes knocks).
- **Order:** paint before anything is fixed, so nothing needs cutting in round the uprights, shelves or the dining wall.

Wall	Area (less window and door)	Two coats
Media wall	6.2 m²	0.9 L
Chimney breast	3.7 m²	0.5 L
Door wall	0.8 m²	0.1 L
Stairs wall	6.3 m²	0.9 L
Window wall	10.2 m²	1.5 L
PC wall	7.3 m²	1.0 L
All walls	**34.4 m²**	**4.9 L: two 2.5 L tins**[89]

Trying a different colour on one wall in the 3D room (Look): that wall needs one 2.5 L tin.

Skirting: Card Room Green too

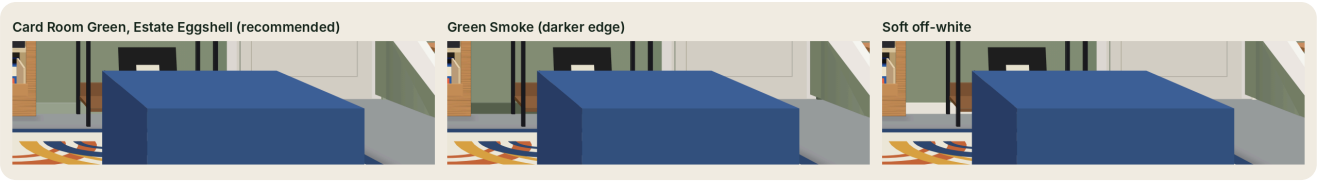

Recommended: Card Room Green in Estate Eggshell, which completes the drench and hides scuffs far better than white. Darker option: Green Smoke. Over the white gloss: wash, key, woodwork primer, two coats of eggshell.

Light, in three warm layers

- **The LED strip on the ceiling** (as now): round the room's edge, into the alcove and across the breast; 2700K on a dimmer.
- **Built into the oak (smart colour):** an RGB and tunable-white strip in each upright's groove and one under the side-wall run's front edge[37], in the same app as the bars' bulbs, so each scene sets them too; on their plug-in power on the 10-gang (no fused spur). The 6500K bias light on the back of the TV stays plain white: it's there for the picture, not the mood.
- **Your red lamp:** the three-headed floor lamp you have, its colour bulbs green at the top, pink in the middle and purple at the bottom. A deep green room needs a low layer as well as the light from above; it's also the one to leave on for a film. It can stand in any of the three spots in the 3D room.
- **Two spot bars** in the style of Dunelm's Wolston (£49 each; 84 × 16 cm, 22.4 cm drop; 4 × E14, 6 W max[14]) on your two existing ceiling points, **both running from the TV towards the window**. Bar 1 hangs on the rose straight out from the TV unit, halfway to the sofa; bar 2 on the pendant point by the stairs, along the west wall, so its end no longer comes near that wall. **Smart colour bulbs**: eight E14 bulbs under the bar's 6 W, the WiZ Colour P45 (4.9 W, 4.5 × 10.1 cm) or, if it shows below a shade, the shorter Philips Hue lustre (5.1 W, 4.5 × 7.7 cm)[38]. Smart bulbs need full power, so **no dimmers**: the wall switches stay as they are and stay on; level and colour come from the app (or an optional smart button). **Turn them as you like:** each bar turns on its rose and clears every wall at any angle (bar 2 by 5.5 cm), and each head aims on its own; tap a bar or the red lamp in the 3D room to try it.

Where the heads point: all eight heads straight down, evenly spread along each bar, so their pools overlap into one even light over the room: that's the **Bright** preset, the default. Tilt a head only if its pool lands badly (in the TV's screen from the sofa, or in someone's eyes). Set the bulbs to warm white (3000K) for Bright, 2700K for Cosy, and save colours for the presets you want them in.

Three lighting presets

Three presets instead of six buttons: **Bright** (the default), **Cosy** and **Film**, each set on the strip's controller, the inline dimmer on the uprights' LED driver, and the bars' and the lamp's smart bulbs in their app. Save the three as scenes in the app (and on the smart button if you get one). In the 3D room the Lights tab has the three tiles, the evening or daytime switch, and every light's slider folded under them.

Light	Control	Bright	Cosy	Film
Ceiling LED strip	its own controller	70%	20%	10%
Uprights' grooves and the side shelf	the strips' app (smart colour)	50%	55%	15%
TV bias light	comes on with the TV	off	off	on
Bar 1, between the TV and the sofa	smart bulbs: the app	60%	45%	off
Bar 2, by the stairs	smart bulbs: the app	60%	30%	10%

Your red lamp	its colour bulbs: the app	50%	75%	60%

Levels are brightness in the app for the smart bars and the lamp, and roughly how far up the strip's controller and the uprights' inline dimmer go. A preset changes how bright the heads are (and their colour), not where they point.

Two rules

- The table's open, so bar 2 lights it: on top of whichever preset is on, bar 2 comes up to at least 80, bar 1 down to 15 or less, and the TV's bias light goes off.
- Evening or daytime is a switch of its own: daytime is the sun through the window, with any preset.

Bright

Everything on at a comfortable, even level: tidying, chatting, finding the remote. The default. *Colour: bars warm white 3000 K, every head straight down.*

Lighting preset: Bright

Everything on at a comfortable, even level: tidying, chatting, finding the remote. The default.



From above, to scale: the window at the top, the media wall bottom right. Glows show each light's level.


- All eight heads straight down, spread a little along each bar, so the pools overlap.
- The ceiling strip and the uprights fill the edges; the lamp adds a low warm layer.
- Turn the strip down first as the evening goes on: it's the flattest light in the room.

Cosy

Low and warm, for records and quiet evenings: light on the deck and the shelves, the lamp's colours on. *Colour: bars 2700 K, the lamp's three colour bulbs on (green, pink, purple).*

Lighting preset: Cosy

Low and warm, for records and quiet evenings: light on the deck and the shelves, the lamp's colours on.

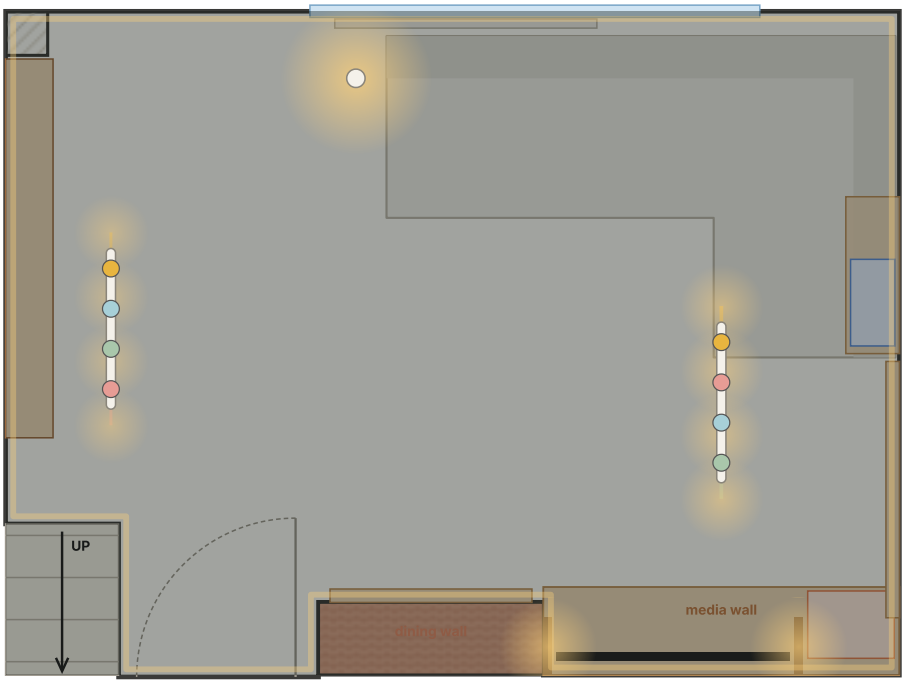

Ceiling LED strip
20% · its own controller

Uprights' grooves and the side shelf
55% · the strips' app (smart colour)

TV bias light
off · comes on with the TV

Bar 1
45% · smart bulbs: the app

Bar 2, by the stairs
30% · smart bulbs: the app

Your red lamp
75% · its colour bulbs: the app

From above, to scale: the window at the top, the media wall bottom right. Glows show each light's level.

- Bar 1's pink head on the turntable and the Series X, blue on the record ledge.
- The uprights' grooves up, washing the wall either side of the TV.
- The lamp up for reading sleeves on the sofa; the ceiling strip nearly off.

Film

Films and games: the screen is the brightest thing in the room, with a little warm light round it so your eyes don't strain. *Colour: the bias light cool white behind the TV, the lamp low.*

Lighting preset: Film

Films and games: the screen is the brightest thing in the room, with a little warm light round it so your eyes don't strain.



Ceiling LED strip
10% · its own controller

Uprights' grooves and the side shelf
15% · the strips' app (smart colour)

TV bias light
on · comes on with the TV

Bar 1
off · smart bulbs: the app

Bar 2, by the stairs
10% · smart bulbs: the app

Your red lamp
60% · its colour bulbs: the app


From above, to scale: the window at the top, the media wall bottom right. Glows show each light's level.

- Bar 1 off: its heads hang in front of the screen, and even tilted away they'd catch it.
- The bias light and your red lamp do the work.
- Bar 2 just glowing on the framed LPs, so the far end of the room isn't a black hole.

With the table open

Lighting: Bright, with the table open

The table rule on top of the preset: bar 2 at least 80, bar 1 at most 15, the TV's bias light off

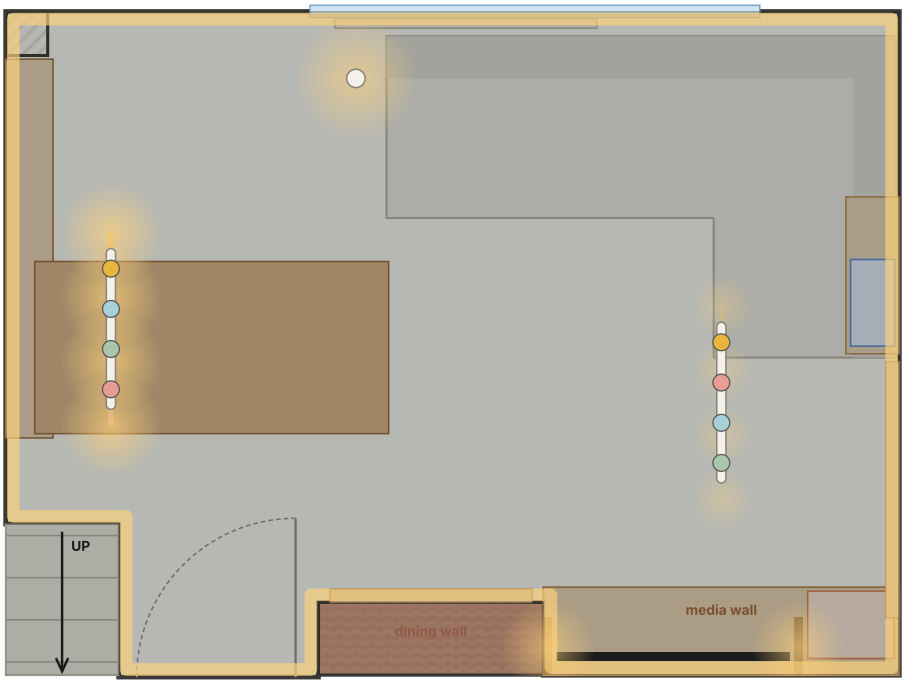

Ceiling LED strip
70% · its own controller

Uprights' grooves and the side shelf
50% · the strips' app (smart colour)

TV bias light
off · comes on with the TV

Bar 1
15% · smart bulbs: the app

Bar 2, by the stairs
80% · smart bulbs: the app

Your red lamp
50% · its colour bulbs: the app


From above, to scale: the window at the top, the media wall bottom right. Glows show each light's level.

9 · Power, cables and network

Power

Power map: your 10-gang (now with the PC) plus a 6-way for the retro set

Everything modern on the left outlet, always on; the five retro consoles and the RetroTINK on the right, switched at the wall

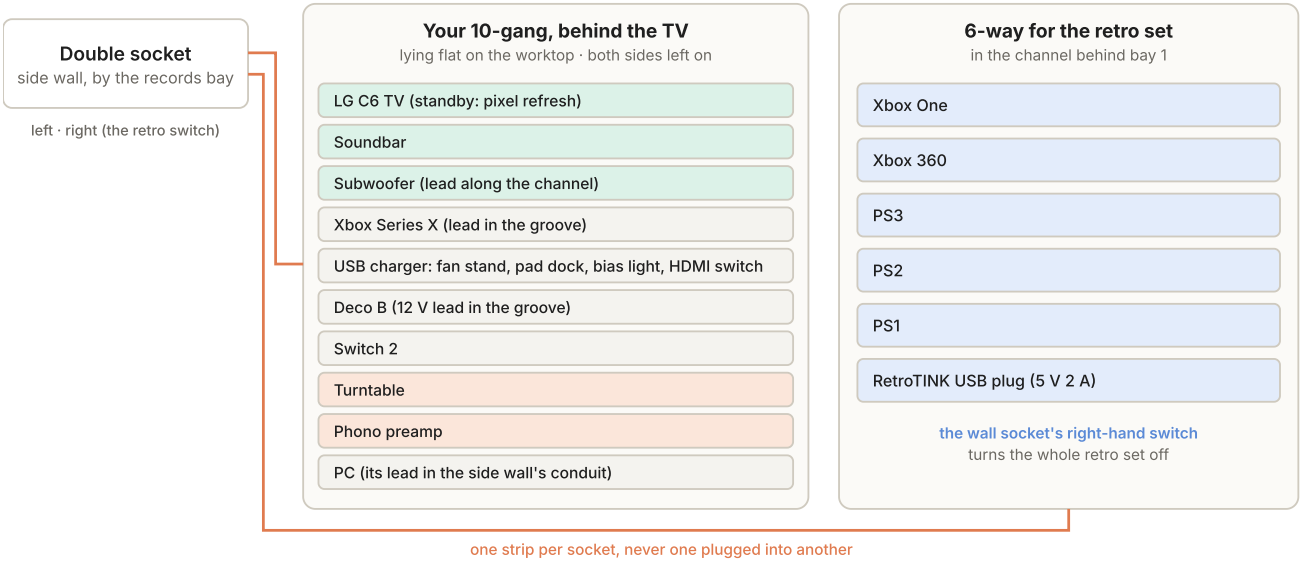

- The socket on the side wall is a single today: you swap it for a double at the same spot (like for like, your own job: step 3).
- The retro switch moves to the wall: with the TV 2 cm from the left upright, the 10-gang's own switches can't be reached any more.
- Rear speakers: your double socket behind the sofa's short side. Your lamp and the grow lights: the double behind the plant stand.
- The sub plugs into the 10-gang: its lead drops through the worktop's slot to the back of bay 2. Both spot bars use existing ceiling points.
- Load check: the 10-gang about 1.55 kW with everything on, PC included (850 W at most); the 6-way up to 0.8 kW. Each under 13 A (3 kW).
- Check the 10-gang is surge-protected; if not, use a surge-protected one for the TV and consoles. Label both outlets.

- **The socket:** the single on the side wall just in front of the records bay, about 30 cm up, becomes a double at the same spot. The left outlet feeds the 10-gang; the right one feeds the retro 6-way, so its own switch is now the retro switch. The 10-gang's switches sit behind the TV, where you can't reach them any more.
- **10-gang:** lying flat on the worktop behind the TV, both sides left on: TV, soundbar, sub, Series X, USB charger, Deco B, Switch 2, the deck, the preamp and now the PC. With everything running that's about 1.55 kW (the PC's 850 W at most), under the strip's 13 A (3 kW).
- **Retro 6-way:** in the channel behind bay 1 (bay 2's back is the sub's port): Xbox One, Xbox 360, PS3, PS2, PS1, RetroTINK.
- **OLED care:** leave the TV in standby so it runs its pixel refresh.

Socket by socket

Socket	Feeds	On or off
Side wall, double, left outlet	The 10-gang behind the TV: TV, soundbar, sub, Series X, USB charger (fan stand, pad dock, bias light, HDMI switch), Deco B, Switch 2, the turntable, the preamp, the PC and the uprights' LED driver	Always on: about 1.55 kW with everything running, PC included

Side wall, double, right outlet	The retro 6-way in the channel: Xbox One, Xbox 360, PS3, PS2, PS1, the RetroTINK's USB plug	The wall switch is the retro switch: off between sessions; up to about 0.8 kW with a launch PS3
Behind the sofa's short side, double (yours)	The rear speakers; a spare outlet for a phone charger or a lamp by the sofa	On
Window wall behind the plant stand, double (yours)	Your red lamp and the plant stand's grow lights: both within reach of it, layout A	On; the grow lights on a plug-in timer
Ceiling points 1 and 2	The two spot bars, with smart colour bulbs	Switches left on; level and colour from the app

One strip per outlet, never one plugged into another, and each under its 13 A (3 kW) limit: about 1.55 kW on the 10-gang and up to 0.8 kW on the retro 6-way, about 10 A together.

Electrics: your own job

You're doing the electrics yourselves. In England, Part P of the Building Regulations decides what needs an electrician or building control.

- **Notifiable (not for you):** a new circuit, a replacement consumer unit, or any change to a circuit round a bath or shower.
- **Not notifiable (yours):** the socket swapped for a double, and the two spot bars in place of the old fittings. Like for like, so no electrician and no building control.
- **Still to the wiring regulations** (BS 7671), every time.
- **The light switches stay:** the bars' smart bulbs need full power, so there are no dimmers to fit.
- **Not mains work at all:** the Cat6 and the conduits.

The safe routine, every time

1. **Isolate:** switch off that circuit's breaker at the consumer unit (the lighting circuit for the bars, the socket circuit for the socket). If the labels aren't clear, switch off the main switch.
2. **Lock off:** fit the MCB lock-off and padlock, keep the key in your pocket, and tape a note on the board.
3. **Prove dead:** check the tester lights on its proving unit, test between every pair of terminals (live–neutral, live–earth, neutral–earth), then check the tester on the proving unit again.
4. **Photograph** the wiring before you disconnect anything, and connect the new one wire for wire: brown (or red) to L, blue (or black) to N, green-and-yellow to earth, sleeved, no copper showing, every screw tight.
5. **Test:** power back on, then the socket tester in both outlets; each bar's four bulbs come on and join the app.


Stop and call an electrician if...

- the tester shows anything live after you've isolated;
- the wiring is old (rubber or fabric sheath, or red and black with no earth), or there's no earth at a ceiling point (the spot bars need one);
- there are more wires than you can match to your photo (two-way switching, a loop in a ceiling rose you can't follow), or scorch marks, or a loose, hot or crumbling fitting;
- the consumer unit has rewireable fuses or no RCD;
- a job grows into a new circuit, consumer unit work, or anything by the bath or shower.

Cable routes

Cable routes: everything ends in the channel behind the base

Front view, schematic, with the side wall folded flat to the left so the PC's route shows; the sub sits in bay 2

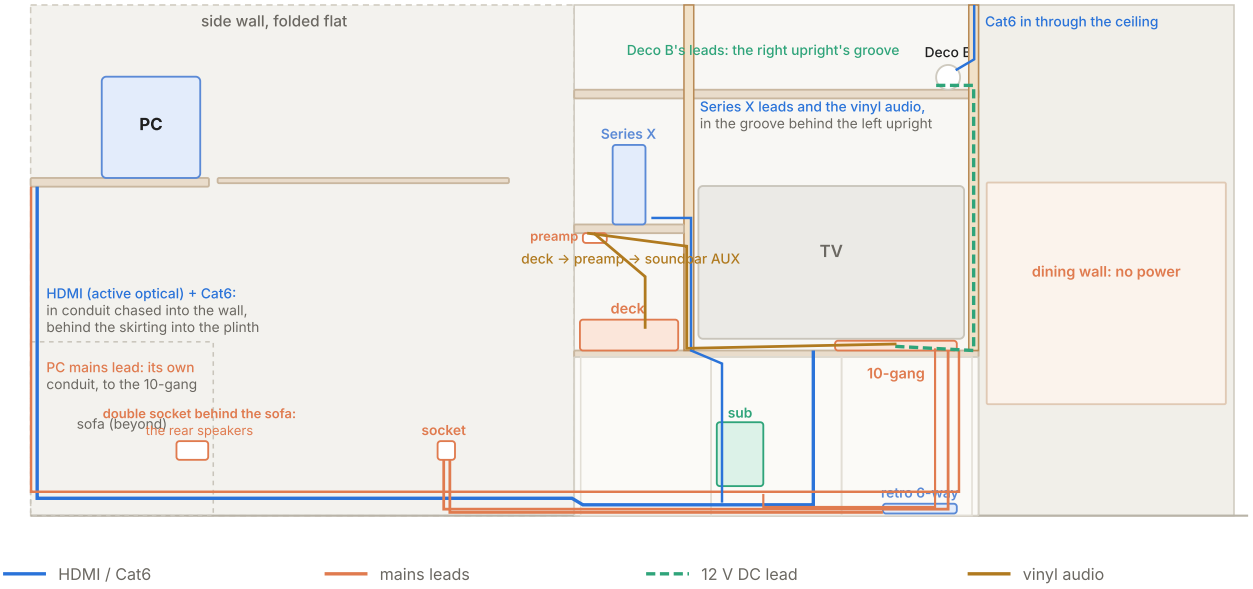

- **The channel:** 4 cm behind the frames, flat two-compartment trunking: mains on one side, HDMI, Cat6 and audio on the other. Switch 2 and the retro 6-way stand on edge in it.
- **The grooves behind the uprights:** the left one takes the Series X's HDMI and power and the vinyl lead, the right one Deco B's 12 V and patch leads, down to the worktop's slot.
- **The PC:** through the shelf's brush grommet into two conduits chased into the side wall (the HDMI and Cat6 in a 38 mm one, its mains lead in a 25 mm one), behind the skirting and into the plinth notch; the mains lead goes on to the 10-gang.
- **The sub:** its mains lead from the 10-gang drops through the slot behind the TV to the back of bay 2, about 1 m. Keep the channel behind the sub clear: its port needs the air.
- **Airflow:** console bays stay open-backed; the Series X has 15 cm each side and 21 above.

The wiring plan, before the carcass goes in

Lay the channel's trunking, the conduits and every lead below, label both ends, then build the base over them. Mains on one side of the trunking, HDMI, Cat6 and audio on the other.


Device	Leads, and where they plug in	Route
TV	mains → 10-gang (left outlet)	Behind the TV, on the worktop

Soundbar	mains → 10-gang (left outlet); HDMI eARC → TV HDMI 2	Along the worktop's back edge
Sub	mains → 10-gang (left outlet)	Down the slot behind the TV to the back of bay 2; keep its port clear
Series X	mains → 10-gang (left outlet); HDMI → TV HDMI 3	Down the groove behind the turntable-side upright
PC	mains (5 m C13) → 10-gang (left outlet); HDMI (active optical, 5 m) → TV HDMI 1; Cat6 → Switch 2	Brush grommet, then the two conduits chased into the side wall, behind the skirting to the plinth
Deco B · Switch 2	12 V → 10-gang (left outlet) · mains → 10-gang (left outlet); Cat6 from the landing	Deco B down the other upright's groove; Switch 2 on edge in the channel
Turntable · preamp	mains → 10-gang (left outlet); RCA → 3.5 mm (2 m) → soundbar AUX	The vinyl lead down the turntable-side groove
USB charger	mains → 10-gang (left outlet): fan stand, pad dock, bias light, HDMI switch	On the worktop behind the TV
Xbox One · Xbox 360 · PS3	mains → Retro 6-way (right outlet); HDMI → switch → TV HDMI 4	The channel's data side
PS2	mains → Retro 6-way (right outlet); component → RetroTINK; optical → soundbar	The channel
PS1 · RetroTINK	mains → Retro 6-way (right outlet) · USB 5 V 2 A → Retro 6-way (right outlet); SCART → RetroTINK → switch	The channel

Network

Every floor has its own Cat6 link back to bedroom 3

Deco A and Switch 1 live with the Hub 5 and the gaming PCs in bedroom 3; two spare ports can wire the projector and the music room

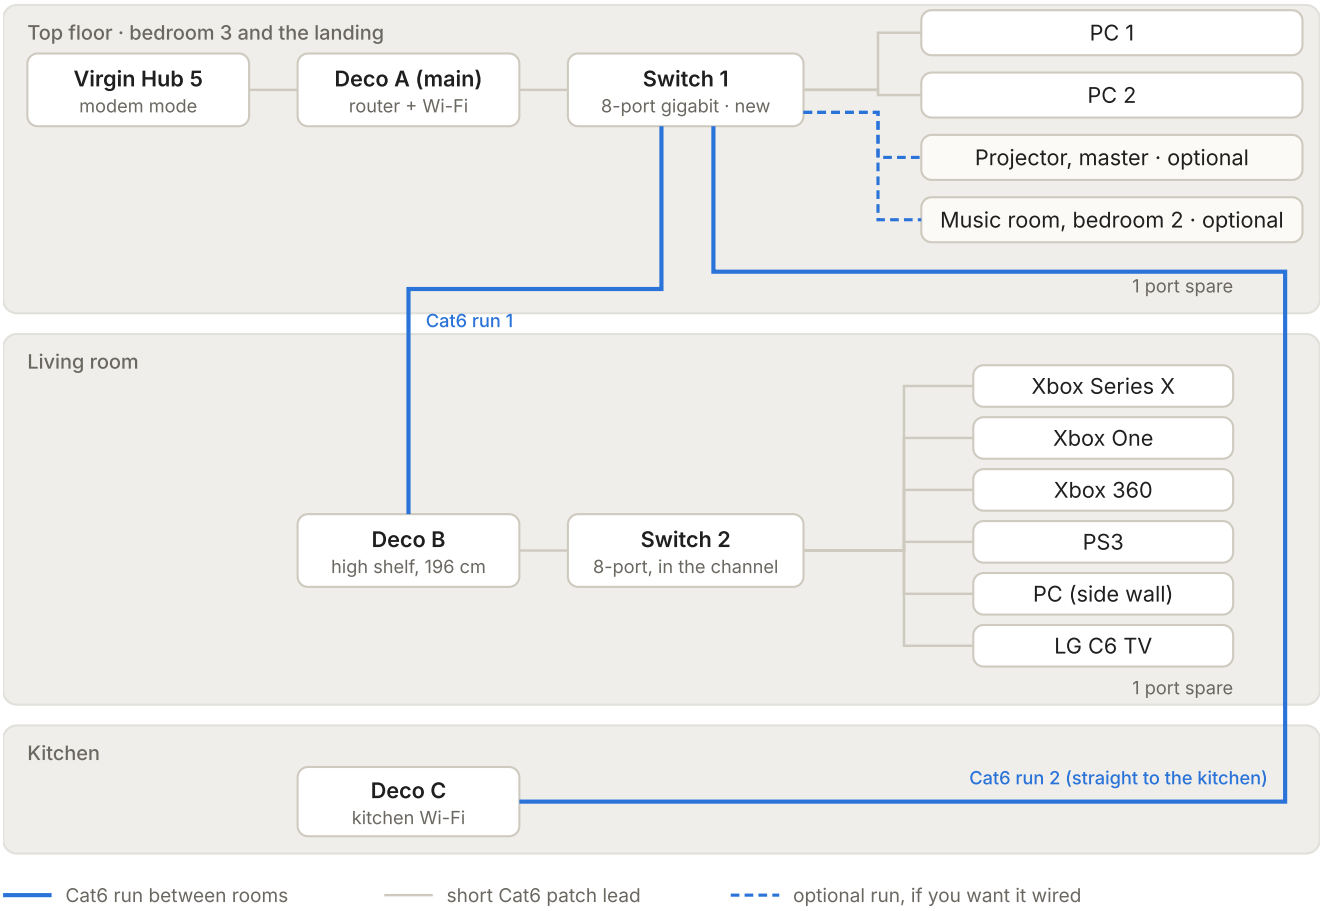

- **Bedroom 3:** the Hub 5 (in modem mode), Deco A and Switch 1 sit together with the gaming PCs. Switch 1's eight ports: the uplink, two PCs, the two Cat6 runs down to Deco B and Deco C, and, if you want them, the projector in the master and the music room in bedroom 2.
- **The route down:** across the landing to the airing cupboard, which sits over the alcove's corner, and down through its floor. Run 1 comes through the living room ceiling in the alcove's right corner to Deco B; run 2 follows the right upright's groove down and through the floor to the kitchen, where Deco C goes on the outside of the brick cupboard, up high.
- **Sloped ceilings:** bedroom 2 and the bathroom slope down to the back wall; keep any Deco or desk in bedroom 2 on the high side.

What each part does

Part	Where	Job	Why it's needed
Virgin Hub 5, in modem mode	Bedroom 3	Brings the internet in, nothing else	Two routers fighting (double NAT) breaks Xbox online play; its Wi-Fi switches off
Deco A (main)	Bedroom 3	The router: Wi-Fi, parental controls, HomeShield	HomeShield and parental controls only work when the Deco is the router
Switch 1, 8-port	Bedroom 3	Turns Deco A's spare port into seven	The two PCs, both Cat6 runs down, and the optional projector and music-room runs

Deco B	Living room, high shelf at 196	Wi-Fi for the living room, and the wired point for the wall	Fixes the living room's weak 5 GHz side
Switch 2, 8-port	Standing on edge in the channel behind the base	Turns Deco B's spare port into seven	The Series X, Xbox One, Xbox 360, PS3, PC and TV each get a cable, one port spare
Deco C	Kitchen, high on the outside of the brick cupboard	Wi-Fi for the kitchen	The kitchen gets poor signal on every band today
Cat6 runs 1 and 2	Bedroom 3 → airing cupboard → alcove corner, and on to the kitchen	The wired link between Decos ("Ethernet backhaul")	Without it the Decos relay each other over the 5 GHz band the phones use, losing speed at each hop

Stage 1: the mesh up today, before any cables

1. Unplug everything from the hub. Log in at 192.168.0.1 with the password on its base, then Modem Mode → Enable Modem Mode → Apply. Its settings page moves to 192.168.100.1.
2. Connect a hub port to Deco A and set it up in the Deco app, reusing the old Wi-Fi name and password. If it shows no internet, try another port and restart the hub.
3. Plug Switch 1 into Deco A's other port, then the PCs into Switch 1.
4. Add Deco B in the living room and Deco C in the kitchen. For now they link over Wi-Fi.
5. Check the Xbox's network settings show NAT: Open.

Stage 2: after your Cat6 runs (step 3)

1. Plug run 1 into Deco B's free port (Switch 2 stays in the other) and run 2 into Deco C.
2. In the Deco app, check Deco B and Deco C show as "Ethernet".
3. Plug the Series X, Xbox One, Xbox 360, PS3, PC and TV into Switch 2.
4. Under QoS, give the Series X and the PC high priority; turn on guest Wi-Fi and automatic firmware.


Cabling rules

- Solid pure-copper Cat6, round; not CCA or flat cable for the long runs. Measure the real route and add 2–3 m.
- Cross mains at right angles; never staple through a cable; no kinks; label both ends. Never two cables between the same two devices.
- **Done when:** Deco B and C show "Ethernet", each PC shows 1.0 Gbps, the Xbox shows NAT: Open, and phones hold a strong signal in the kitchen and across the living room.

AV: everything sounds through the Hisense

Everything sounds through the Hisense: directly where it can, via the TV where it can't

The soundbar has no HDMI inputs, so HDMI sources reach it over eARC; vinyl, PS2 audio and phones go straight in

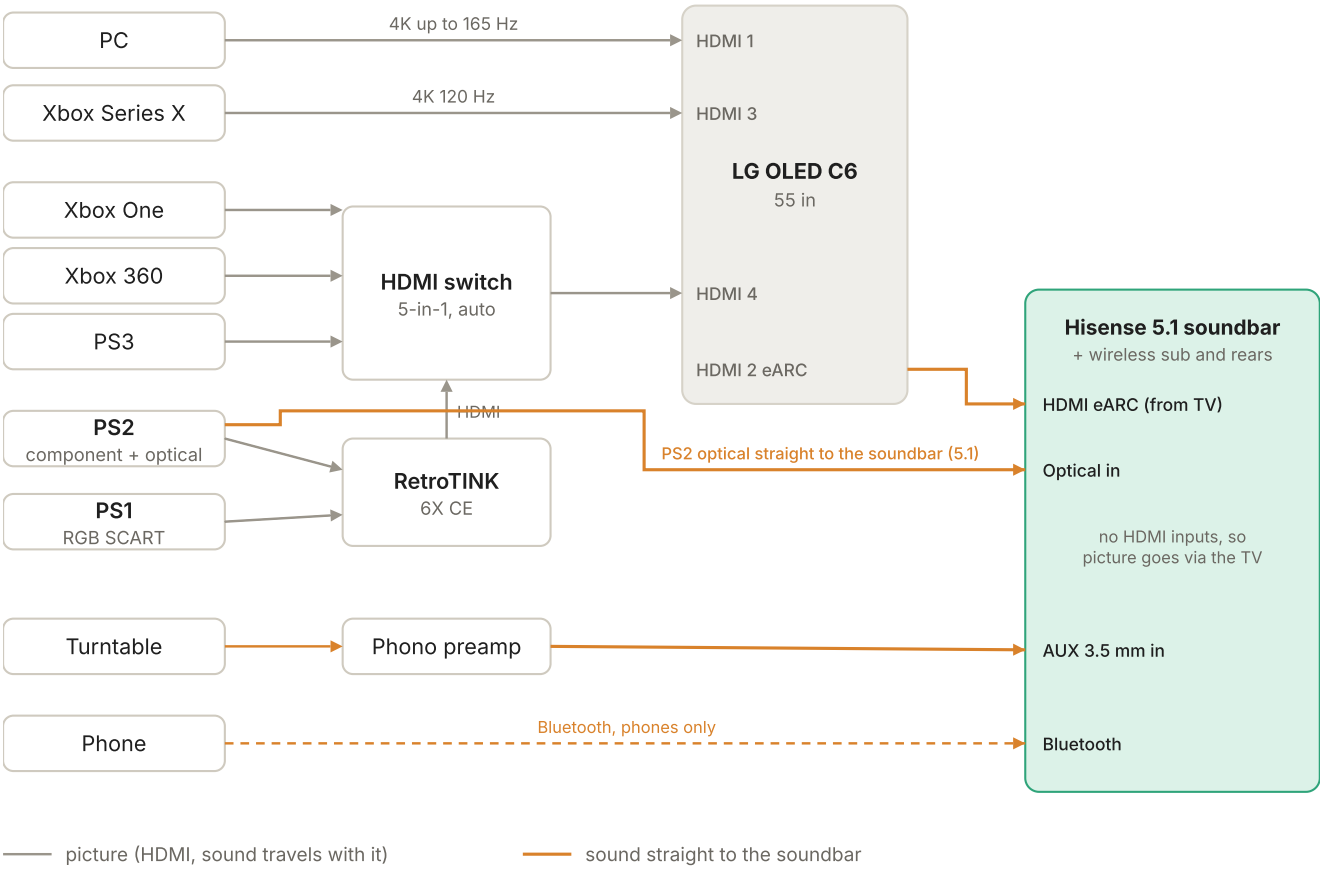


Source	Picture	Sound
PC · Xbox Series X	TV HDMI 1 · HDMI 3	Via the TV over eARC (5.1 or Atmos)
Xbox One, Xbox 360, PS3	HDMI switch → TV HDMI 4	Via the TV over eARC, 5.1
PS2	Component → RetroTINK → switch → TV	Optical straight to the soundbar
PS1	RGB SCART → RetroTINK → switch → TV	Stereo through the RetroTINK and eARC
Turntable · phone	—	Preamp → AUX · Bluetooth

TV settings: rename the inputs (HDMI 4 "Retro"), Deep Colour on HDMI 1, 3 and 4, Game Optimiser on the console inputs, sound out to HDMI eARC. RetroTINK-6X CE: a 5 V 2 A USB plug on the retro 6-way; the PS2's Component Video Out set to Y Cb/Pb Cr/Pr; RGB SCART for the PS1.

Sound layout

Sound: the sub on the front wall with the TV, the rears behind the sofa

To scale, north at the top. The sub is wireless: on the front wall it blends with the soundbar, out of the way of feet

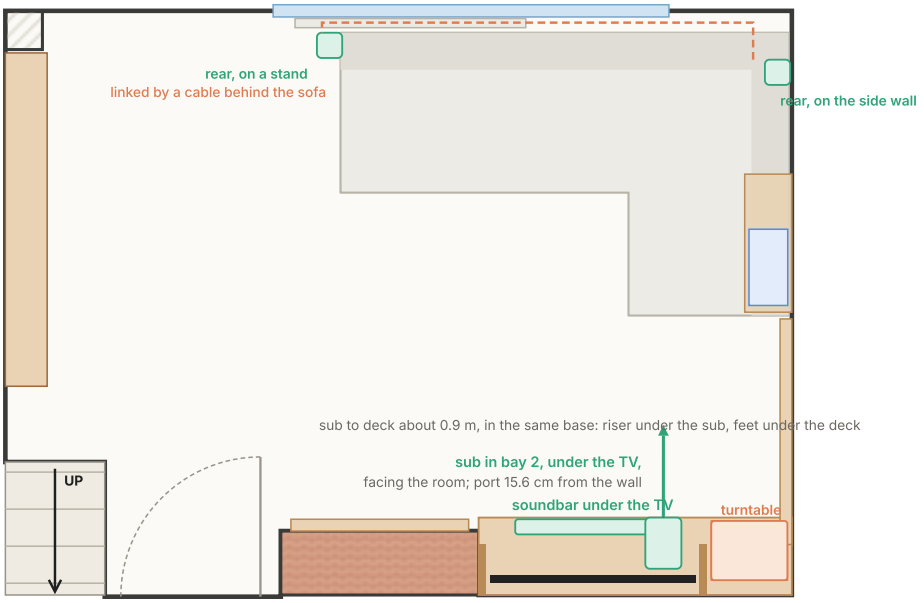

- **Sub:** wireless, in bay 2 under the TV, its driver facing the room and its rear port 15.6 cm from the wall through the open back (15–30 is advised[25]). Next to the soundbar, its bass blends with the bar instead of coming from behind you, and it's off the floor where feet and drinks are. If the bass booms, turn it down rather than moving it.
- **Rears:** the soundbar's own two rears, on slim floor stands directly behind the sofa (from your photos): one at each end of its long side, in the 13 cm gap between the sofa's back and the window wall, the **left** one in the corner and the **right** one at the window end, where the curtains hang in the same gap: closed, they fall over it and muffle it, so keep that end open when you watch. Both speakers sit just above the sofa's back, at about seated ear height (96–110.4), facing the room. They're linked by a cable along the skirting behind the sofa and powered from your double socket behind the sofa's short side. In the 3D room they move in Edit room.

10 · Build guide, for a first-time builder

Every step in full, the tools, the techniques, the cutting list and the nested sheets are in the Build Guide (its own PDF, and Build on the plan page). Here: what to buy first, the order of work and the wiring.

Buy and adapt first

For each piece: the cheap thing to buy, and a build only where nothing made fits.

Piece	How	What
Media wall, bays 1–2	Buy and adapt	Two IKEA BESTÅ frames[5] on a ply plinth, behind an oak face frame
Media wall, bay 3	Build	No frame takes a 33 cm LP trough beside a slim game column: birch ply, cut list below
Uprights, shelves, worktop	Build	Solid oak scribed to your alcove; the merchant can cut it
Dining cabinet and table	Build	Nothing made folds a table for six round six chairs; the nearest, a fold-down wall table[45], opens to 80 × 138 and holds no chairs
The bar beside the cabinet	Build, then buy	The cupboard is scribed to a 42.5 × 22 gap; over it, an IKEA ENHET frame[90]; the counter from the worktop's offcut
Glass case	Buy and adapt	Toughened glass cut to size[64]; the frame from the oak offcuts
Record table	Buy and adapt	Two IKEA KALLAX[80] on their backs, an oak lid, castors
Alcove shelves	Buy	Two oak floating shelves[96]
Wall cabinets	Buy	Two IKEA EKET[95]
Shelf over the door	Buy and adapt	Two IKEA KUGGIS boxes[77]; the shelf from the worktop's offcut
Blanket basket · ottoman	Buy	Dibor's Lakelyn[79] · the ISTOOLS ottoman[68]
Step drawers	Build (a joiner)	Each tread needs a bearer once its riser is cut[101]

The order of work

#	Stage	What to do	Check before moving on	Time
1	● PREP **Measure and count**	The alcove's width at the floor, 76, 134, 155 and 196 cm and at the ceiling: cut everything to the smallest. The floor's level across the alcove, and the chimney breast's flatness with a long level. The door's swing, and the sofa: overall width, depth with the return, back height. Count the LPs and games (PS2, Xbox 360, Xbox One), and measure ten cases of each. Make a cardboard template of the alcove at worktop height: walls are rarely square.	Every figure within 1 cm of the plan. If not, send the numbers and the drawings are redone first.	2 h

2	NETWORK **Network, stage 1**	Unplug everything from the Hub 5. Log in at 192.168.0.1 with the password on its base, then Modem Mode → Enable Modem Mode → Apply. Its page moves to 192.168.100.1. Connect a hub port to Deco A in bedroom 3 and set it up in the Deco app, reusing the old Wi-Fi name and password. If it shows no internet, try another hub port and restart the hub. Plug the new 8-port Switch 1 into Deco A's other port, then the PCs into Switch 1. Add Deco B in the living room and Deco C in the kitchen. For now they link over Wi-Fi. Speed-test each room, and check the Xbox's network settings show NAT: Open.	Internet in every room, and NAT: Open on the Xbox.	2 h
3	POWER & CABLES NETWORK **Cables and the socket, your own job**	The Cat6: two runs from bedroom 3, across the landing and down through the airing cupboard, one to the alcove's right corner for Deco B, one on to the kitchen for Deco C, a spare pulled with each; the optional runs to the master and bedroom 2 if you want them. Low voltage: no rules beyond care. The socket: swap the single on the side wall for a double at the same spot, with the circuit isolated, locked off and proved dead (the safe routine is in this step). Like for like, so not notifiable. The PC's two conduits: chase them into the solid side wall from behind the PC shelf to skirting height and behind the skirting to the base, 38 mm oval for the HDMI and Cat6, 25 mm for the PC's mains lead, a draw wire in each. Make good. Stop and call an electrician if anything on the stop list turns up (old wiring, no earth, a reading where there should be none, anything you can't match). Before you fill a chase, photograph it with a tape measure in shot, and mark every route on the plan.	The socket tester shows correct wiring on both outlets, both Cat6 runs test good end to end, and every route is photographed.	2–3 days
4	PAINT **Paint**	Paint an A4 board in Card Room Green and look at it by day and with the LED strip on. Wash the skirting and door with sugar soap, sand to a key, and prime them. Two coats of emulsion on the walls, ceiling, alcove and chimney breast. Two coats of eggshell in the same green on the skirting and radiator (the door and its frame stay white). Leave it a week to cure before fixing anything to it.	Two even coats, and no white showing at the edges or behind the radiator.	2–3 days, then a week to cure
5	PREP **Mark the heights**	With the laser level: 73 and 76 for the worktop, 130 and 134 for the Series X shelf, 153 and 155.4 for the ledges, 192 and 196 for the high shelf. The uprights at 50.5–55 and 181.5–186 cm from the side wall. On the breast: the “now playing” ledge's top at 104 and the framed LPs' bottom edges at 165, centred. Run the cable detector along every line you will drill, and mark anything it finds.	Every line level end to end, and the uprights' lines plumb.	1 h

6	MEDIA WALL **Build the base**	Order the oak and ply from the cutting list (below the steps), a week or two ahead: most merchants cut to size for a small charge. Build the 9 cm plinth for bays 1–2, with the open bay for the hidden drawer under bay 2. Level it with shims. Assemble the two BESTÅ frames with their back panels left off and stand them on the plinth. Build bay 3 from 18 mm ply, 60 × 40 × 73, and bolt it to bay 2. Screw the 4 cm spacer blocks to the wall, push the base against them and fit the anti-tip brackets. Lay the flat two-compartment trunking in the channel behind (mains one side, data the other) and run the cables in.	The tops level within 1 mm across 186 cm, and nothing rocks.	1 day
7	MEDIA WALL **Fit the worktop**	Cut the worktop from the 300 × 62 oak board, using the template from step 1; keep the offcut. Scribe the ends to the walls; cut the TV slot over the channel and the grommet hole behind the deck. Oil it on every face, undersides and cut ends included. Screw it up through the frame tops in slotted holes, so the oak can move.	Tight to both walls, and the slot sits over the channel.	½ day
8	MEDIA WALL **Fit out the base**	Shelves on their pins at the fit-proof heights for the consoles. The game drawer in bay 1: runners on the frame's sides, then the box (its cut list is with this step). Bay 3: the 12 mm divider first (17.8 cm in from the left side), then the LP crates' runners at 2.3 and 37.0 cm on the right and the three slim drawers' at 2.3, 25.1 and 47.9 on the left, then each box. The hidden plinth drawer under bay 2. Bay 2: the divider and the part shelf, then the sub on its riser, its front flush with the face frame.	Every drawer runs smoothly, the two crates clear each other by 2 cm, and the slim drawers by 2.8.	1–2 days
9	MEDIA WALL **Uprights and shelves**	On the bench: cut the housings and the mortises in both uprights, and the LED groove and cable groove. Dry-fit each upright with its shelves before any glue. Lay Deco B's leads in the groove behind the right upright. Stand the uprights on their dowels and fix the concealed brackets to the back wall. Fit the high shelf and the ledge, then the Series X shelf: wedge its tenons, and peg the housings. On the chimney breast: the “now playing” ledge, its top at 104, on two concealed brackets, 6 cm in from each side of the breast (with the table by the stairs).	Uprights plumb, shelves level, the TV slides in with 2 cm each side, and the “now playing” ledge is level with an LP standing on it.	2–3 days

10	MEDIA WALL **The side-wall run and the PC end**	Cut the run from its 225 × 30 × 4 board: mark the front edge from the full-size template (7 cm deep along the LPs, sweeping out to 28 under the PC, a 5 cm radius on the end), jigsaw just outside the line and rout to it with a bearing-guided bit; rout the LED groove under the front edge. Screw the oak cleat along the side wall and fit the concealed brackets for the PC end. Lift the run on, its alcove end in line with the uprights' fronts, and screw it down to the cleat from above (plugged). Screw the keyboard tray's housing under it and fit its runners. Fit the brush grommet and pull the PC's leads down the two chased conduits with the draw wires: data in the big one, its mains lead in the small one. The PC's extras: screw the powered USB hub under the run's front edge below the PC, fit the remote power button's card and stick its button under the wrap ledge by the sofa, and lay the magnetic filter on the top exhaust.	One level line with the ledge over the TV, the sweep runs smooth with no flat spots, and the PC end holds your weight leaning on it.	1 day
11	DINING TABLE **The dining cabinet: the table and the six chairs in one**	Check the gap under your shelf (191 or more), mark the two boxes' footprint and oil every oak part first. Build the two boxes on the floor: the ends, the tops and floors, the 6 mm backs to square them, the linen shelf in the table box and the chair shelf in the chair box, both set back behind the doors. Stand them on their marks, screw them to each other, shim them level and fix them to your solid wall at the top; fit the oak hinge rail across the table box at 73.3, set back for the pads. On the bench: the two halves with their breadboard ends, the apron frames, the legs on their folding brackets, and the three flip-top hinges at the joint. Hang the table on its piano hinge and fit its catches and finger pull; hang the two doors on their piano hinges, then the stops, the magnet and the six pad hooks; level the table and trim the legs; load the six chairs and hang their pads.	The table swings down and up without touching the box's sides, all four legs click, the top is level at 76 both ways, the catches hold it folded, and each door shuts flush with an even gap and turns back flat against the other without its far end dropping.	3–4 days
12	LIGHTING **Lighting: smart spot bars and the LED strips, your own job**	Isolate the lighting circuit at the consumer unit, lock it off and prove it dead at each ceiling point. Take down the two old fittings. The light switches stay as they are: the smart bulbs need full power, so no dimmers. Hang bar 1 on the rose between the TV and the sofa and bar 2 on the pendant point by the stairs, earth first, both running from the TV towards the window; fit the smart colour bulbs and point every head straight down, evenly spread; tilt one only if its pool lands badly. The LED strips in the uprights' grooves and under the side-wall shelf on their plug-in driver (on the 10-gang), the ceiling strip through its notches, the bias light on the TV; your red lamp in its spot. Power back on, switches on: add the eight bulbs to the app, group them as bar 1 and bar 2, and save the three presets (Paint and light): Bright, Cosy and Film. With the table open, bar 2 comes up to 80 and bar 1 down to 15 (the table rule).	Every bulb answers the app, the presets recall, and from the sofa no spot head shows in the screen or shines in your eyes.	1 day

13	AV NETWORK **Connect and finish**	TV inputs: HDMI 1 the PC, HDMI 2 the soundbar (eARC), HDMI 3 the Series X, HDMI 4 the HDMI switch (Xbox One, 360, PS3, RetroTINK). The PS2 by component into the RetroTINK and by optical to the soundbar; the PS1 by RGB SCART. The deck to the preamp, the preamp to the soundbar's AUX; set the tracking weight; soundbar in Music mode for vinyl. Network stage 2: plug each Cat6 run into its Deco, check Deco B and C show "Ethernet", and give the Series X and PC high priority. Label both outlets of the double socket and each HDMI switch input; set the sub and rear levels from the sofa.	Everything on the network's "done when" list, and every source plays through the soundbar.	1 day
14	YOUR PICKS **Your picks: the bar, the record table, the shelves and cabinets**	The bar: scribe its ply cupboard (42.5 × 22 × 87.3 on a 3 plinth) between the cabinet and your shelf's end, keeping the 10 cm gap clear; fix it to the wall and the cabinet, then the counter and the ENHET frame over it, its bottom at 112. The record table: screw the two KALLAX together on their backs, the 12 mm ply base and four castors under them, the oak lid (90 × 50) on two hinges with two lid stays. The wall cabinets: the two EKET on IKEA's rail over the sofa's corner, bottoms at 162, the rail into the solid wall. The alcove shelves: two oak floating shelves 90 × 23, tops at 182 and 212, brackets into the solid wall. Over the hall door: the oak shelf 91 × 27, top at 208.7, clear of the architrave; two KUGGIS boxes on it and two on your black shelf. The step drawers: with the new stairs, by the joiner (a bearer under each tread).	Each piece level and fixed; the bar's door clears the open table door; the record table rolls and its lid stays up; the 10 cm gap is clear.	1–2 days

The wiring plan, before the carcass goes in

Lay the channel's trunking, the conduits and every lead below, label both ends, then build the base over them. Mains on one side of the trunking, HDMI, Cat6 and audio on the other.

Device	Leads, and where they plug in	Route
TV	mains → 10-gang (left outlet)	Behind the TV, on the worktop
Soundbar	mains → 10-gang (left outlet); HDMI eARC → TV HDMI 2	Along the worktop's back edge
Sub	mains → 10-gang (left outlet)	Down the slot behind the TV to the back of bay 2; keep its port clear
Series X	mains → 10-gang (left outlet); HDMI → TV HDMI 3	Down the groove behind the turntable-side upright
PC	mains (5 m C13) → 10-gang (left outlet); HDMI (active optical, 5 m) → TV HDMI 1; Cat6 → Switch 2	Brush grommet, then the two conduits chased into the side wall, behind the skirting to the plinth
Deco B · Switch 2	12 V → 10-gang (left outlet) · mains → 10-gang (left outlet); Cat6 from the landing	Deco B down the other upright's groove; Switch 2 on edge in the channel
Turntable · preamp	mains → 10-gang (left outlet); RCA → 3.5 mm (2 m) → soundbar AUX	The vinyl lead down the turntable-side groove
USB charger	mains → 10-gang (left outlet): fan stand, pad dock, bias light, HDMI switch	On the worktop behind the TV

Xbox One · Xbox 360 · PS3	mains → Retro 6-way (right outlet); HDMI → switch → TV HDMI 4	The channel's data side
PS2	mains → Retro 6-way (right outlet); component → RetroTINK; optical → soundbar	The channel
PS1 · RetroTINK	mains → Retro 6-way (right outlet) · USB 5 V 2 A → Retro 6-way (right outlet); SCART → RetroTINK → switch	The channel

11 · Buy list and tracker

Every purchase and job, in build order, comes to about £4,374–8,245, with no electrician on top: the electrics are your own job, and the tools for them are on the list. Each phase carries its part's coloured label. Estimates are approximate UK prices; changed and new items are marked. Tick items off and write in what you paid.

Cost overview: each piece and what to buy for it

Qty	To buy	About
The media wall		**£1,177–2,202**
2 ×	IKEA BESTÅ frame, 60 × 40 × 64	£70–200
4 ×	IKEA BESTÅ shelf, 56 × 36	£12–32
1 ×	Plinth frame, 18 mm ply	£15–30
1 ×	Plinth drawer: oak front, ply box, runners	£30–50
1 ×	Bay 3 carcass, 18 mm birch ply	£50–90
2 ×	Face-out LP crate: ply, oak lip, runners	£120–200
3 ×	Slim game drawer: ply, oak lip, runners	£70–130
1 ×	Game drawer: ply, soft-close runners	£50–90
1 ×	Sub riser and ply divider	£25–45
1 set	Anti-tip brackets and spacers	£15–25
2 ×	Solid oak upright, 165 × 30 × 4.5	£150–300
1 set	Solid oak for the shelves and the side-wall run	£230–380
1 ×	Solid oak worktop, 300 × 62	£250–450
1 ×	Oak face frame, 186 cm	£60–120
1 set	Oak wedges, dowel, concealed brackets	£30–60
The side wall and the PC		**£95–210**
1 ×	Keyboard tray: oak housing, ply tray, runners	£25–45
1 set	Oval conduit, 38 and 25 mm, and a 5 m C13 lead	£15–35
1 ×	Wall chaser for a day, and filler	£20–45
1 ×	PC tidy kit: sleeve, grommet	£5–15
1 ×	Powered 4-port USB 3 hub	£15–30
1 ×	Remote PC power button	£10–30
1 ×	Magnetic dust filter	£5–10
The dining cabinet		**£1,026–1,735**
1 set	Oak-faced ply, cut to size: two boxes, two doors	£230–410
1 set	Solid oak for the table, two 92.5 × 90 halves	£265–460
1 set	Oak: hinge rail, aprons, four legs, door stops	£35–70

1 ×	Piano hinge, 1800 × 50 (the table)	£16–20
1 set	Two door piano hinges, catches, magnet, hooks	£35–65
1 set	Folding leg brackets (4), tabletop fasteners (16)	£60–75
3 ×	Lee Valley flip-top hinge	£25–45
3 pairs	Grey padded folding chairs (Brayden Studio)	£240–390
1 set	The bar: oak-faced ply cupboard, oak counter, hinges	£70–120
1 set	Over the bar: IKEA ENHET frame, mirror, glass rail, LED	£50–80
The chimney breast		**£100–195**
1 set	Glass case: 4 mm toughened front, three 6 mm shelves, cut to size	£70–130
1 set	Glass case: oak frame, oak-faced ply back, pins, cleat, LED strip	£20–40
1 ×	“Now playing” oak ledge and brackets	£10–25
Lighting		**£288–795**
2 ×	Dunelm Wolston 4-light spot bar	£98–110
8 ×	Smart colour E14 bulb	£100–360
1 set	Smart colour LED strip, 4.5 m, with channels	£90–220
1 ×	Smart scene button (optional)	£0–25
1 ×	Ceiling strip channel and diffuser (later)	£0–80
Paint		**£220–540**
1 lot	Farrow & Ball Card Room Green: emulsion, eggshell, primer	£200–500
1 set	Woodwork primer, sanding pads, sugar soap	£20–40
Network		**£111–190**
2 ×	TP-Link TL-SG108 8-port switch	£36–50
11 ×	Cat6 patch lead, 0.5–2 m	£15–20
2–4 runs	Cat6 solid copper cable	£30–60
1 set	Cat6 tools: punch-down, keystones, tester, draw rods	£30–60
Electrics (your own job)		**£70–145**
1 ×	Double socket and back box	£5–15
1 set	Safety kit: GS38 tester, lock-off, socket tester	£45–90
1 set	Insulated screwdrivers, strippers, cutters	£20–40
Power and cables		**£65–115**
1 ×	6-way surge-protected extension	£20–35
1 ×	4-port USB charger	£10–20
1 ×	USB plug, 5 V 2 A	£5–10
1 set	Cable kit: grommets, velcro ties, labels	£20–30
1 ×	Flat trunking, 2 m	£10–20

TV, consoles and AV		**£288–420**
1 ×	RetroTINK-6X upscaler	£200–240
1 ×	5-in-1 4K HDMI switch	£20–35
1 ×	Active optical HDMI cable, 5 m	£20–60
5 + 2	HDMI lead, 1–2 m, and 90° adapters	£25–40
1 ×	PS2 component cable	£10–20
1 ×	Optical cable, 2 m	£5–10
1 ×	PS1 RGB SCART cable	£8–15
Vinyl kit		**£80–190**
1 ×	Replacement stylus	£15–40
1 ×	Phono preamp (only if needed)	£40–100
1 ×	RCA to 3.5 mm lead, 2 m	£5–10
1 set	Isolation feet and a record brush	£20–40
Your picks		**£401–552**
2 ×	IKEA EKET wall cabinet, 35 cube, glass door	£70–100
2 ×	Oak floating shelf, 900 × 230	£70–110
1 set	Oak shelf over the door, two KUGGIS boxes	£35–60
2 ×	IKEA KUGGIS box, 35 × 26 × 15	£20–30
1 ×	Blanket basket, water hyacinth, 59 × 51 × 29	£36–42
1 set	Record table: two KALLAX, oak lid, ply base, castors	£170–210
Finishing touches		**£13–26**
1 ×	Drip trays for the plant stand	£10–20
1 set	Felt pads	£3–6
Can wait (after you move in)		**£440–930**
1 ×	Storage ottoman, navy velvet, 76 × 76 (ISTOOLS)	£140–310
1 ×	Rug, about 230 × 160	£120–300
1 set	Step drawers: ply boxes, oak fronts, runners	£180–320
All of it		**£4,374–8,245**

By phase

Phase	Estimate (£)	Biggest item
NETWORK 1 Network, now	51–70	two 8-port switches
POWER & CABLES NETWORK 2 Cables and power	265–545	the electrical safety kit and Cat6
PAINT 3 Paint	220–540	paint
MEDIA WALL 4 Base unit	457–892	record trays and the BESTÅ frames

MEDIA WALL 5 Oak joinery	835–1,525	the solid oak worktop
DINING TABLE 6 Dining wall	1,036–1,760	the oak table top
LIGHTING 7 Lighting	288–795	the eight smart bulbs
AV 8 TV, consoles and AV	288–420	RetroTINK-6X CE
AV 9 Vinyl kit	80–190	phono preamp
AV NETWORK 10 Finishing	854–1,508	the rug
Total	**4,374–8,245**	**no electrician: the electrics are your own job (section 9)**

Already owned: Virgin Hub 5, three Deco X1500s, two TL-SG105S switches (both become spares), LG OLED C6 55" and its stand, a 10-gang, the Hisense AX5100G 5.1 soundbar, the Series X fan stand, the turntable, the L-sofa and all the consoles.

The full tracker, row by row with a box for what you paid, is the Build Guide's shopping list (and Buy on the plan page).

12 · Other options and sources

Not in the plan or the costs. Each one is a switch in the 3D room (Room, Try options); ask for a build by name.

Option	Where	Size (cm)	About £
A bar under the glass case[67,49]	Chimney breast, under the case	90 × 39.1 × 20	80–130
A slim drinks trolley[56]	Beside the dining cabinet	20 × 43.2 × 86.5	36–70
A bar by the sofa[67]	Side wall at the sofa's open end	60 × 39 × 20	60–100
The lidded seagrass basket[75]	Sofa's open end	45 × 45 × 76	90–110
An oak blanket rail[78]	Beside the dining cabinet	45 wide, 12 off the wall	25–45
A tall mirror[57]	Beside the dining cabinet	40 × 150	25
A low oak shelf for plates[58]	Beside the dining cabinet	52.6 × 23.4 × 76	40–70
Two shoe cabinets[94]	Beside the dining cabinet	two 52 × 18 × 39	25–30
A lift-top coffee table[76]	Coffee table's place	90 × 50 × 48	39–80
A storage window seat[97]	Window corner	98 × 46 × 45	160–280
A bench with cubbies[98]	Your hall, or the window corner	104 × 30 × 48	80–130
A built-in cupboard[99]	Window corner, floor to ceiling	100 × 60	450–800
A hook rail over the door[100]	Over the hall door	49 × 11 × 14	12–25
An 80-wide table[62]	The dining cabinet	137.2 long; four chairs inside, not six	about the same
A smooth or patterned ceiling[103,104]	The ceiling (test the Artex first)	the whole ceiling	200–700
Oak-effect beams, coffers or an LED cove[105,106]	The ceiling	12 × 12 beams; cove 2 m lengths	450–1,050
Easy-care plants (Look: Plants)[88]	The stand and the sill	snake plants and pothos in 12 cm pots	9–15 each
One pot finish for all (Look: Pots)[86]	The stand, the sill, the shelf	about 23 pots, 12–24 cm	3–8 each
Self-watering inserts[87]	The stand's bigger pots	15 across, 1.2 litres, in a 16–17 pot	7 each
Decor to try (20 pieces)	Round the room	typical shop sizes	542–1,165 together
Small ideas (9)	Round the room	drawn to the room	310–605 together

Sources

Numbered sources are the item sizes used in the fit proof (section 3).

1. Your hand-measured sketch of the living room, in mm (alcove 1860 × 380, chimney breast 1175, ceiling 2350)
2. LG: OLED55C6 specifications: 1222 × 703 × 45.1 mm without stand, 1222 × 757 × 230 mm with stand, stand 470 × 230 mm, 14.1/15.9 kg, VESA 300 × 200 (lg.com, OLED55C6 product pages)
3. Trusted Reviews and Expert Reviews, Hisense AX5100G reviews: soundbar 920 × 60 × 90 mm, subwoofer 214 × 294 × 304 mm (W × H × D) with a rear-firing port, rear speakers 90 × 144 × 109 mm
4. Wikipedia, Xbox Series X: 151 × 151 × 301 mm; Pure Xbox (Nov 2020) quoting Microsoft: at least 4 cm clear above the console on an open stand, 10–15 cm recommended on all sides
5. IKEA: BESTÅ frame 60 × 40 × 64 cm (10247379); BESTÅ shelf 56 × 36 cm, 20 kg maximum load
6. TP-Link: TL-SG108 specifications, 158 × 101 × 25 mm (tp-link.com)
7. Laptop Outlet: TP-Link Deco X1500 3-pack listing, 110 × 110 × 114 mm per unit
8. Audio-Technica: AT-LP120XUSB specifications, 452 × 352 × 141.6 mm, 8 kg without dust cover (audio-technica.com)
9. RetroTINK: RetroTINK-6X CE shop page (power 5 V 2 A by USB; no size published)
10. UGREEN: 5-in-1 4K60 HDMI switch CM568 (90512), 127 × 59 × 25 mm
11. Original Xbox One power supply: 17 × 7.5 × 4.8 cm (6.69 × 2.96 × 1.88 in), as listed by several replacement-PSU sellers
12. Wikipedia: Comparison of PlayStation consoles (PS1 270 × 188 × 60, PS2 302 × 183 × 78, PS3 325 × 274 × 98 mm); Xbox One (333 × 274 × 79 mm); Neowin: official Xbox 360 dimensions (309 × 258 × 83 mm)
13. Record and case sizes: LP sleeve 31.4 cm (12⅜ in); 7-inch sleeve 18.3–18.4 cm; DVD-style keep case 19 × 13.5 × 1.4 cm; Xbox One case 17 × 13.5 × 1.1–1.2 cm (videogamecasesize.info; Walvis Products; Wikipedia: Keep case)
14. Dunelm: Elements Wolston 4-light spotlight bar, £49: 84 × 16 cm, 22.4 cm drop, shades 15 cm, E14 6 W max (dunelm.com, product 1000189449)
15. Emuca heavy-duty full-extension runners, 400 mm, 68 kg per pair; Accuride DZ3832EC 350 mm, 43 kg; runner fitting allowance 12.5 mm a side
16. Xbox 360 original 203 W power supply: no Microsoft size published; Akyga's 203 W replacement for it (AK-PD-14) is 210 × 77 × 55 mm (b2b.akyga.com), so an allowance of 21 × 10 × 6 cm is used here (measure yours)
17. Turntable Lab: Audio-Technica replacement dust cover for the AT-LP120XUSB (705-140XP-1815), 17.375 × 13.625 × 2.75 in (44.1 × 34.6 × 7.0 cm)
18. Häfele UK, Technology catalogue 2023, p. 7.206: Hebgo heavy-duty folding bracket 287.43.428, arm 580 mm, height 220 mm, 500 kg per pair, locks automatically when raised; up to 800 mm between brackets (Häfele 287.43.419 listing)
19. Screwfix: Union PowerLoad lift-off hinges, 100 × 88 mm, 3-pack (5938T), 120 kg maximum door weight
20. Emuca: table legs Ø60 mm, 710 mm, height adjustable 710–730 mm, 50 kg per leg (set of 4): 710 is the standard dining leg; the plan's oak legs are made to the same 71 cm
21. RS PRO 45 mm steel spring clip (RS 175-3588): 42.1 × 56 × 12.7 mm, packs of 10 (uk.rs-online.com)
22. IKEA: TERJE folding chair, 43 W × 49 D × 78 H cm, seat height 48 cm, tested for 110 kg
23. Book a Builder UK, small dining room ideas: 600 mm of table edge per diner; table edge to a wall 600 mm tight minimum, 750 mm to aim for, 1000–1100 mm to walk behind; dining height about 750 mm
24. Your photo of the sofa (18 Oct 2026) and your note (21 Oct): a blue corduroy L-sofa, two seats then the corner on the long side, which ends about 40 cm short of the window's west end (about 266 cm long); the return's 168 is a typical corner-sofa size until measured
25. Klipsch subwoofer placement guidance, as quoted by Cloudspress and TechYorker (2026): leave about 6–12 in (15–30 cm) between a rear-firing port and the nearest obstruction
26. Xbox Support (Microsoft), About the Xbox One power supply (archived): don't block its vents, don't put it in a confined space such as a bookcase, rack or stereo cabinet unless the space is well ventilated, don't stack devices on it, and lay it flat on its four rubber pads; the Xbox 360 brick's advice is the same
27. Xbox Support (Microsoft), Xbox 360 placement tips, as quoted on Gaming Stack Exchange: an open, well-ventilated area, a hard surface, and away from high-vibrating sources such as subwoofers
28. Your two photos of the west end (20 Oct 2026): the 2 m black shelf on the wall beside the stairs, scaled from its 2 m: it starts about 41 cm past the stair box and stops about 16 cm short of the window corner, top about 200; the pendant hangs about 55 cm out from the wall, a quarter of the way along it
29. Corsair 4000D Airflow, a typical mid-tower gaming case: 453 × 230 × 466 mm (TechPowerUp review)
30. Lee Valley: 40574 narrow flip-top hinges, solid brass, 1/2 in × 2 3/4 in (1.27 × 7.0 cm), for card and flip-top tables (leevalley.com); their 40208 card-table hinge is 1 3/16 in (3.0 cm) wide, too wide for a 27 mm edge

31. Your photo (20 Oct) and note: Dunelm hessian pencil-pleat curtains; Dunelm pencil-pleat drops run 137, 182 and 228 cm with a 3 in header; Dunelm 28 mm wooden poles, 120–360 cm, rings included (one per 10 cm), finials up to 8 cm more (dunelm.com)
32. Your plant stand, from the listing you sent (20 Oct): 98 × 29.5 × 158 cm (W × D × H), slatted wood; two five-tier towers with an open middle holding two shelves
33. Your vinyl stand, from the listing you sent (20 Oct): 70 × 32 × 78 cm (W × D × H), 63 to where the frame slopes; two top bays 32.3 wide split by a wooden divider, a 10 cm front board, wire dividers 19.5 tall on the bottom shelf; black steel and rustic wood
34. IKEA: OBEGRÄNSAD LED wall lamp, black (your 905.262.63; 005.262.48 and others by country): 52 × 36 × 6 cm, 5 W, five lighting programmes, hangs landscape or portrait, runs on a 5 V USB-A adapter sold separately (ikea.com); its face is a 16 × 16 grid of white LEDs. From the Swedish House Mafia collection (IKEA press kit, Sept 2022)
35. Sony: DualSense controller 160 × 66 × 106 mm (W × H × D); Microsoft: Xbox Wireless Controller 153 × 61 × 104 mm
36. Record-shop browser crates and LP storage boxes are made about 32.5–33 cm inside for 31.4 cm sleeves (31.8–32.4 in outer sleeves), flipped by the sleeves' top edges
37. Philips Hue Lightstrip Plus V4: 2 m base kit, cuttable every 33 cm, extendable with 1 m; WiZ Wi-Fi LED strip, 2 m starter kit, cuttable; both RGB and tunable white, in the same apps as the bars' bulbs (philips-hue.com; wizconnected.com)
38. Smart colour E14 bulbs for the bars: WiZ Colour P45 E14, 4.9 W, 4.5 × 10.1 cm, Wi-Fi, no hub (Philips UK specification sheet, 8719514437333); Philips Hue White and Colour Ambiance E14 lustre, 5.1 W, 45 × 77 mm (Philips Hue; Lampmasters)
39. IKEA UK: FRÖSVI folding chair, beech, £20 (705.343.15): solid beech, a slatted seat with no cushion, 44 W × 51 D × 77 H, seat 38 × 33 at 46 high, tested for 110 kg, a hanging hole in the back; its package 44 × 9 × 89 cm, 2.89 kg (no folded size is published). The padded version, white with a Knisa cover (805.343.34, £30), is 43 × 49 × 78, seat 48 (ikea.com/gb product pages, 21 Oct 2026)
40. Screwfix: Smith & Locke Mid Duty Anti-Slip Storage Hook, 200 × 200 mm, steel, 60 kg maximum load, £3.59 (8882J); FRÖSVI padded weighs 3.61 kg net (ikea.com.tw)
41. Buller Ltd: Folding Heavy Duty Bracket for Bench and Tables, 330 mm long, 82 mm wide, steel, grey primed, automatic lock when raised, 50 mm proud of the wall folded, 150 kg per pair (75 kg each), brackets at most 800 mm apart (bullerltd.co.uk)
42. Client, 20 Oct 2026: the sofa's ottoman, square, blue corduroy matching the sofa, "the size of a chair on the sofa": one seat, 75 × 75; its height taken at the seat's 44 until measured
43. IronmongeryDirect: Altro continuous piano hinge, 1800 × 50 × 1.2 mm, satin 304 stainless steel, £16.00 (SKU 302829; cut to length, screwed every 10 cm) (ironmongerydirect.co.uk)
44. ManoMano UK: folding, self-locking table-leg brackets, 75 × 60 × 55 mm, set of four with screws, about £58: lock at 90°, for legs at least 2½ in (6.4 cm) at the top; seller's rating 226.8 kg a bracket (manomano.co.uk, listing 219621358)
45. Clever (Italy): Slim fold-down table in a wall unit: folded 80 × 9 × 138 cm, open 80 × 138 × 74, a 1.8 cm top (clever.it): the same idea, a top hinged at its foot that stands up into the wall
46. Blum CLIP top 170° full-overlay hinge, self-closing (71T6540; cabinetparts.com): doors open past flat, so they lie back against the cabinet's front while you take the chairs out
47. Häfele UK catalogue 10.054, Slido Classic 40 IF C (files.hafele.co.uk/catalogfiles/www/16a10-54.pdf; NBS Source): two bypassing wooden doors inset in the carcass, top hung; doors 16–19 mm thick, up to 40 kg, 2200 tall and 1250 wide; fitting set for two doors with soft close 402.33.027; double top track for a 16 mm groove 402.33.652 (2.5 m, needs a top panel of 19 mm or more); bottom guide track 402.30.802 in a 6 mm groove. The track's section isn't published: the plan allows 5 cm of depth for it and the two doors
48. Client, 20 Oct 2026: "my surround speakers … exist standing behind the sofa", two photos of the room, and "they are directly behind the sofa on the left and right ends": the AX5100G's own rears, one behind each end of the sofa's long side, the speakers just above the sofa's back (scaled against its 80 cm in the photo); the stands' base drawn 11 cm square
49. IronmongeryDirect: Altro continuous piano hinge, 1800 × 32 × 1 mm, satin 304 stainless steel, £9.50 (SKU 517299): 16 mm leaves, so each fits on an 18 mm door's edge; one a door, full height. No load rating is published
50. Client, 21 Oct 2026: "the wall on the stairs is solid. electrics done ourselves"; and "i just need a smaller build on the cabinet if we can", "they dont particularly need to be oak chairs", "show me both versions for the cabinet"
51. Dunelm: Esme Washed Cotton Square Seat Pad, £9: 40 × 40 × 3 cm, ties, recycled polyester fill, 100% cotton cover, wipe clean; Blue, Honey, Ivory, Olive or Rose Pink (dunelm.com, product 1000279425)
52. IKEA UK: ÄNGSFRÄKEN chair pad, £4: round, 36 cm across, 3.0 cm thick, an anti-slip back and a hanging loop (no ties), machine wash 40°C; black, blue, brown-red or dark beige (ikea.com/gb)
53. IKEA UK: BRÄMÖN chair pad, £2 (504.846.65): 34 × 34 × 1.0 cm, ties, grey-beige, indoors or out (ikea.com/gb)
54. Habitat: Wooden Folding Chair, Light Wood, £21: open H79 × W42.5 × D47.5, seat 38 × 37 at 45; "packs away flat to just 7cm deep" (H87 × W43 × D7 folded) (habitat.co.uk, product 5548794)

55. Anonima Castelli Plia folding chair (Made in Design UK, £325): W46.9 × H88.8, 5.4 cm thick folded; steel and polycarbonate
56. VASAGLE 4-Tier Slim Kitchen Storage Trolley with Wheels, £35.99: 20 × 43.2 × 86.5 cm, particleboard and steel, rustic white and honey brown (songmicshome.co.uk, UKLRC050)
57. IKEA UK: NISSEDAL mirror, 40 × 150 cm, black (906.054.82) or white (706.054.83), £25 (was £30) (ikea.com/gb)
58. Dinner plates: IKEA FÄRGKLAR plate 26 cm (ikea.lt, 904.781.77); IKEA 365+ dinner plate 27 cm (dimensions.com)
59. Online Lighting: Slimline Medium Battery Operated LED Picture Light, satin nickel, £14.99 (166342): overall H 77 × W 279 × D 125 mm, shade H 16 × W 279 × D 16 mm, back plate H 70 × W 106 mm, three AA cells (onlinelighting.co.uk)
60. The Range: Made to Measure Blackout Roller Blind, from £24.99: width 10–240 cm, drop 10–210 cm, made to the size given, inside or outside the recess on top- or face-fix brackets (therange.co.uk)
61. Dickens Direct: 40cm USB Rechargeable LED Under Cabinet Light, wireless, motion sensor and touch, warm white (3000K), magnetic or adhesive fixing, £13.99 ex. VAT (PCJW256; dickensdirect.com)
62. Wayfair UK (Brayden Studio), sent by you: "2PCS Wooden Folding Dining Chair with Cushion, Padded Seat, Grey Breathable Linen Fabric, 6.5cm Thick Cushion, 110° Backrest, 168kg Capacity, No Assembly"; "a generously sized 47×47cm seat paired with a 6.5cm thick high-density sponge cushion. 90×10×47cm" (folded: 90 tall, 10 thick, 47 wide); listing u111353306; your photo of a pair (media-wall/inputs/chairs_padded_listing_photo.webp): bent-wood sides, buttoned seat and back
63. Costway: set of 2 wooden folding dining chairs with linen padded seat and backrest (53981642), the like-for-like chair the padded chairs' open depth, height and seat height are drawn at: 19 × 24 × 31 in (48.3 W × 61 D × 78.7 H cm), seat 17.5 in high (44.5), seat 16 × 17.5 in, folding size 19 × 36.5 in (48.3 × 92.7); 300 lb a chair; no folded thickness published (costway.com, 21 Oct 2026)
64. FHB Rundle (UK): custom-sized toughened glass panels, cut to your sizes, polished on all edges with docked corners, 0.3 m² minimum charged (fhbrundle.co.uk); toughened glass about £70–90 a m², polished edges about £5 a m² more (UK glass cost calculator, everycalculators.com)
65. Simply Plastics (UK): silver acrylic mirror sheet cut to size, ±1 mm, 3 mm (5 mm advised over 1200 × 1200) (simplyplastics.com)
66. 70 cl spirit bottles, makers' sheets: Univerre Platin 70 cl 349 tall × 74.0 across; Univerre Oblò bartop 192 × 94.7; Univerre London 238 × 92.0; Saverglass Premiere Spirit 70 cl 327.5 × 76.2; Verallia Caeli 700 ml 263.9 × 74.7 (univerre.ch, saverglass.com, uk.verallia.com)
67. Howdens: Blum soft-close flap stay, pack of two, steel, for doors 14–22 mm thick (HKE0069; howdens.com); a stay is sized by torque, half the flap's height × its weight (Sugatsune soft-down stays, global.sugatsune.com)
68. ISTOOLS (UK): Large Velvet Storage Ottoman, square, a lift-off upholstered lid on a memory-foam pad, a solid wooden frame, legs that screw on; 14 sizes from 48 × 43 to 120 × 120, among them 76 × 76 (30 × 30 in, "a small-flat coffee table"); blues include navy; the 76 × 76 listed at £304 on one of their velvet ottomans; height not given (istools.co.uk/products/square-plain-lid-coffee-table-ottoman-storage-large-velvet-footrest-ukw)
69. Dunelm: Square Opulent Velvet Storage Footstool, H 39 × W 62 × D 62 cm, legs 3.5, storage inside H 18 × 57.5 × 57.5, nine colours including navy, £139.30–199 (dunelm.com, product 1000249916)
70. Dunelm: Zoe Pinstripe Fabric Square Storage Footstool, H 49 × W 96 × D 96 cm, cotton blend, tested to 120 kg, navy among its colours, £199 (£99.50 in a sale) (dunelm.com, product 1000239490)
71. Homebase: Luxor Navy Blue Jumbo Cord Footstool, 55 × 55, 45 high (42 on diy.com), a fixed top, no storage, £136 (homebase.co.uk, 0739873)
72. Wikipedia, Ticket to Ride (board game): its box is 30 × 30 × 8 cm, and became a common reference size for medium-size games; a retailer lists the 2023 Days of Wonder box at 30 × 30 × 7.6 (en.wikipedia.org/wiki/Ticket_to_Ride_(board_game))
73. Kaufland (Austria): Bicycle Botanica playing cards, packaging 65 × 92 × 18 mm; Bicycle's poker-size cards are 88 × 63 mm (kaufland.at/product/400400869)
74. IKEA: OFELIA throw, 130 × 170 cm, white: package 38 × 33 × 8 cm, 0.67 kg, as sold folded (ikea.com/lv/en/p/ofelia-throw-white-50613224)
75. The Cotswold Company: Seagrass Basket With Lid, Large: 76 high × 45 wide × 45 deep (external), handwoven seagrass, £99 (cotswoldco.com/homeware/storage/baskets-and-general-storage/seagrass-basket-with-lid-large)
76. Sports Direct: Homelife Lifting Traditional Coffee Table, H48 × W90 × D50 cm, 53.5 high with the top lifted, a storage area inside, £39 (was £79.99) (sportsdirect.com/homelife-lifting-traditional-coffee-table-946062)
77. IKEA: KUGGIS box with lid, 26 × 35 × 15 cm, recycled PET with a bamboo lid; fits storage at least 26 deep (ikea.com.tr/en/p09610214)
78. Tools & Timber: oak dowels, 18 to 30 mm across, cut from 350 to 2400 mm long (toolsandtimber.co.uk/oak-dowels)
79. Dibor: Lakelyn Water Hyacinth Lined Basket, large H59 × W51 × D29 cm (medium H48 × W41 × D21), water hyacinth with a removable cotton lining, natural, £42 (dibor.co.uk/products/lakelyn-water-hyacinth-lined-basket); no lid listed

80. IKEA: KALLAX cube storage unit, 42 × 42 cm, grey wood effect (also white, black-brown, white stained oak effect): W 41.5 × D 39 × H 40.7 cm, 13 kg a shelf, £19 (ikea.com/gb/en/p/kallax-shelving-unit-grey-wood-effect-60477933); open-backed, a 33 cm square compartment
81. Snowdon Timber: oak furniture board, 18 × 600 × 1200 mm, £184.50 for a pack of three through Tesco Marketplace (tesco.com/shop/en-GB/products/326112258), single boards from snowdontimber.co.uk
82. Wickes: non-structural hardwood plywood sheet, 12 × 607 × 1829 mm, £22.50 (wickes.co.uk, product 112957)
83. Toolstation: MOVE IT swivel wheel castor, 50 mm, non-marking rubber tyre, 50 kg each, £3.29 (toolstation.com/swivel-wheel-castor/p29715); about 6.5 high overall (check the listing)
84. Eurofit Direct: toy box and lid stays, soft-down, for ottomans and toy boxes, £14.90 each or £29.81 a pair (eurofitdirect.co.uk/collections/toy-box-and-lid-stays)
85. Your photo of the stairs (23 Oct 2026, inputs/photo_stairs_banister_23oct.jpg): a square newel post at the foot, two flat slats raking up from it to the wall by the door, no spindles; a low white wall with a capping under them
86. IKEA UK: PERSILLADE plant pot, 12 cm, £3 (003.157.26); the range runs to 24 cm (ikea.com/gb)
87. elho: self-watering insert, 15 cm across, 12 cm high, holds 1.2 litres, for a 16–17 cm pot, £6.99 (elho.com)
88. Boma Garden Centre: Sansevieria trifasciata 'Laurentii', 12 cm pot, £14.99; Gardening Express: variegated snake plant, 12 cm pot, 30–50 cm tall, £8.99 on offer
89. Farrow & Ball: Estate Emulsion covers up to 14 m² a litre a coat (70 m² per 5 L), two coats recommended (farrow-ball.com paint calculator; DIY.ie listing, 35 m² per 2.5 L)
90. IKEA: ENHET wall frame with shelves, 40 × 15 × 75 cm, anthracite or white, steel, two shelves, 3 kg a shelf, to be anchored to the wall; about 32–39 € (ikea.com/th 404.816.05; islas.ikea.es 304.489.37)
91. Client, 22 Oct 2026: "The shelf on the wall alongside the stairs must always end 10cm short of the right-hand wall, regardless of any other sizing or positioning logic. It should never touch the right wall ... it reflects how the shelf is actually installed" (facing the stairs wall, the right-hand wall at the shelf's height is the pipe boxing's side)
92. Homebuilding & Renovating: the UK's usual worktop height is 900 mm to the top (homebuilding.co.uk/advice/kitchen-worktop-height); a raised bar counter 1000 to 1200
93. Stemmed wine glasses, makers' sizes: Rosendahl Grand Cru red 20.5 and 22.2 tall; CB2 Joplin 22.9; most 20 to 23 (culinaris.de, cb2.ca, dimensions.com)
94. IKEA UK: TRONES shoe cabinet/storage, white, 52 × 18 × 39 cm, a pack of two £25, about four pairs each; must be fixed to the wall (ikea.com/gb, 003.973.07)
95. IKEA: EKET wall cabinet with glass door, 35 × 35 × 35 cm, a suspension rail included, at least 5 cm to the ceiling; about 38 € (ikea.com/lv, ikea.com/cz)
96. B&Q: Shelf Depot oak floating shelf, L 900 × D 230 mm, a concealed steel bracket included (diy.com, 5060042781980); Wickes floating shelf brackets for solid walls
97. Window seats: a seat 17 to 19 in (43 to 48 cm) high and at least 16 in (41 cm) deep, 18 to 22 in better (hunker.com, askthebuilder.com); a lift-up lid stores the most
98. notonthehighstreet (Momentum): open-compartments shoe bench, 104 × 30 × 48 cm, a padded seat, 200 kg on the seat
99. FCI London: built-in wardrobes need 60 cm for a hanging rail (under 60, no standard rail); sliding doors 66 plus about 5 for the track (fcilondon.co.uk/blog/how-deep-should-built-in-wardrobes-be)
100. Linen Chest: metal over-door hanger, six hooks, 49 × 11 × 14 cm; UK-door racks fit doors 2.5 to 4.5 cm thick (linenchest.com; RISEMART, latestdeals.co.uk)
101. The Day: building drawers into a staircase, the usable size set by the stringers and the treads; UK Workshop: each tread needs support once its riser is cut (theday.com/?p=192887; ukworkshop.co.uk/threads/understair-storage.151071)
102. SanMar: a structured six-panel cap's spec sheet, bill (visor) 2¾ in (7 cm), crown 6¾ in measured over the top (sanmar.com, 72788); the client's photo of their cap, 22 Oct 2026 (green crown, brown brim, gold embroidery)
103. Trade2Base, Plastering Costs UK 2026: skim coat £150–£350 a room, Artex removal (or skimming over it) £300–£700 a room, plasterers' day rates about £180–£300 (trade2base.com/blog/plastering-costs-uk)
104. Supernova Asbestos Surveys: Artex asbestos testing kit, £34.99 with PPE, a UK-accredited lab's result in 48 hours; Artex made before about 1985 can hold chrysotile, so don't sand, scrape or drill it until you know (asbestos-surveys.org.uk/shop/testing-kit/artex)
105. Woodmosaic: PU faux wood ceiling beam, 12 × 12 cm, lengths 100, 195, 295 and 395 cm, 1–4 kg, £62–£349 by length (woodmosaic.co.uk/pu-faux-wood-beam-fake-wooden-decorative-ceiling-beams-false)
106. Mr Resistor: Orac C357 uplighting coving profile for LED tape, 2000 mm, £89.60 (mr-resistor.co.uk/product/28207); fitted LED coving in a typical UK room £350–£700 (coving.online, LED coving cost, 2026)
107. Virgin Media: Hub 5 modem mode
108. RetroTINK: Introducing the RetroTINK-6X CE (inputs including TOSLINK, deinterlacing); RetroTINK-2X Pro listed as legacy; RetroTINK-4K CE

109. Expert Reviews: LG C6 OLED review (4 × HDMI 2.1, one eARC, ports on the left); JB Hi-Fi: LG C6 specifications (165 Hz mode for PC sources)
110. Hisense AX5100G spec sheet (inputs, auto power-on); JB Hi-Fi Business: AX5100G (rears linked by cable, wireless to the soundbar)
111. TP-Link: Deco X1500 specifications (two gigabit ports per unit)
112. Glorious Vinyl Vault specifications (80 LPs and 24.5 kg per drawer), a check on the tray capacity
113. Screwfix: Essentials 964VN 350 mm runners; Metrol: Accuride DZ3832EC; IKEA: BESTÅ drawer runners
114. NIST SP 500-252 / CLIR pub121: Care and Handling of CDs and DVDs (store upright, book style)
115. Sony PS3 and Microsoft Xbox 360 S manuals: ventilation; IKEA UK: secure it
116. Ideal Home: colour drenching; The Paint Shed: colour drenching with Farrow & Ball; Livingetc: sage green shades (Card Room Green, Treron, Sage Green, Green Smoke)
117. Pontata: Card Room Green vs Little Greene Sage Green (approximate screen colours)
118. Homebase and NC Tiles: Farrow & Ball Card Room Green No. 79 in Modern Eggshell and Estate Eggshell
119. haart Medway: floor plans and listing photos for the house (Portsmouth Close)
120. ConsoleMods: PS2 Component Video Out setting
121. GOV.UK: Electrical safety, Approved Document P (2013 edition, for use in England): notifiable work is a new circuit, a replacement consumer unit, or an addition or alteration to a circuit in a special location (round a bath or shower); like-for-like replacements and additions to existing circuits elsewhere are not notifiable (gov.uk/government/publications/electrical-safety-approved-document-p)
122. IET Electrical: Part P, England and Wales (notifiable and non-notifiable work); Planning Portal: Electrics, Building Regulations (non-notifiable work must still meet the regulations, BS 7671)