vms

VMS User Manual

A practical guide for barangay fleet teams

English

Administrator • Custodian • Maintenance Personnel

Version 1.0 • 26 October 2026
Barangay Vehicle Management System

VMS • ENGLISH

Table of contents

01 Document information →

02 Introduction to VMS →

03 System requirements and access →

04 Login and navigation →

05 Administrator user guide →

06 Custodian user guide →

07 Maintenance Personnel user guide →

08 Vehicle Management →

09 Vehicle inspection and readiness →

10 Issue reporting →

11 Maintenance requests and proposals →

12 Repair approval and assignment →

13 Maintenance scheduling →

14 Repair completion and verification →

15 External repairs and donor parts →

16 Maintenance records and evidence →

17 Vehicle files and location →

18 Reports and activity history →

19 Complete maintenance workflow →

20 Troubleshooting →

21 Frequently asked questions →

22 Glossary →

23 Role-based quick reference →

VMS • 01

Document information

This manual covers the current operational VMS interface for one barangay. It includes all three operational roles in every language edition. Screens were captured from a local, seeded demonstration environment on 26 October 2026; figures and records are examples, not live operational data.

Procedure


1. Choose the chapter for your role, then follow the numbered procedure for the task.
2. Use the English labels shown in quotation marks to locate the actual controls. The application interface in the screenshots is English.
3. If a control is missing, check your role, assignment, and the record status before contacting your Administrator.

> **Remember**
>
> Review this manual when the application changes. Local dates and workflow timestamps use Asia/Manila. Never publish passwords, registration codes, or private records with screenshots.

VMS • 01

Document information

Actual VMS screen • Local seeded demonstration data

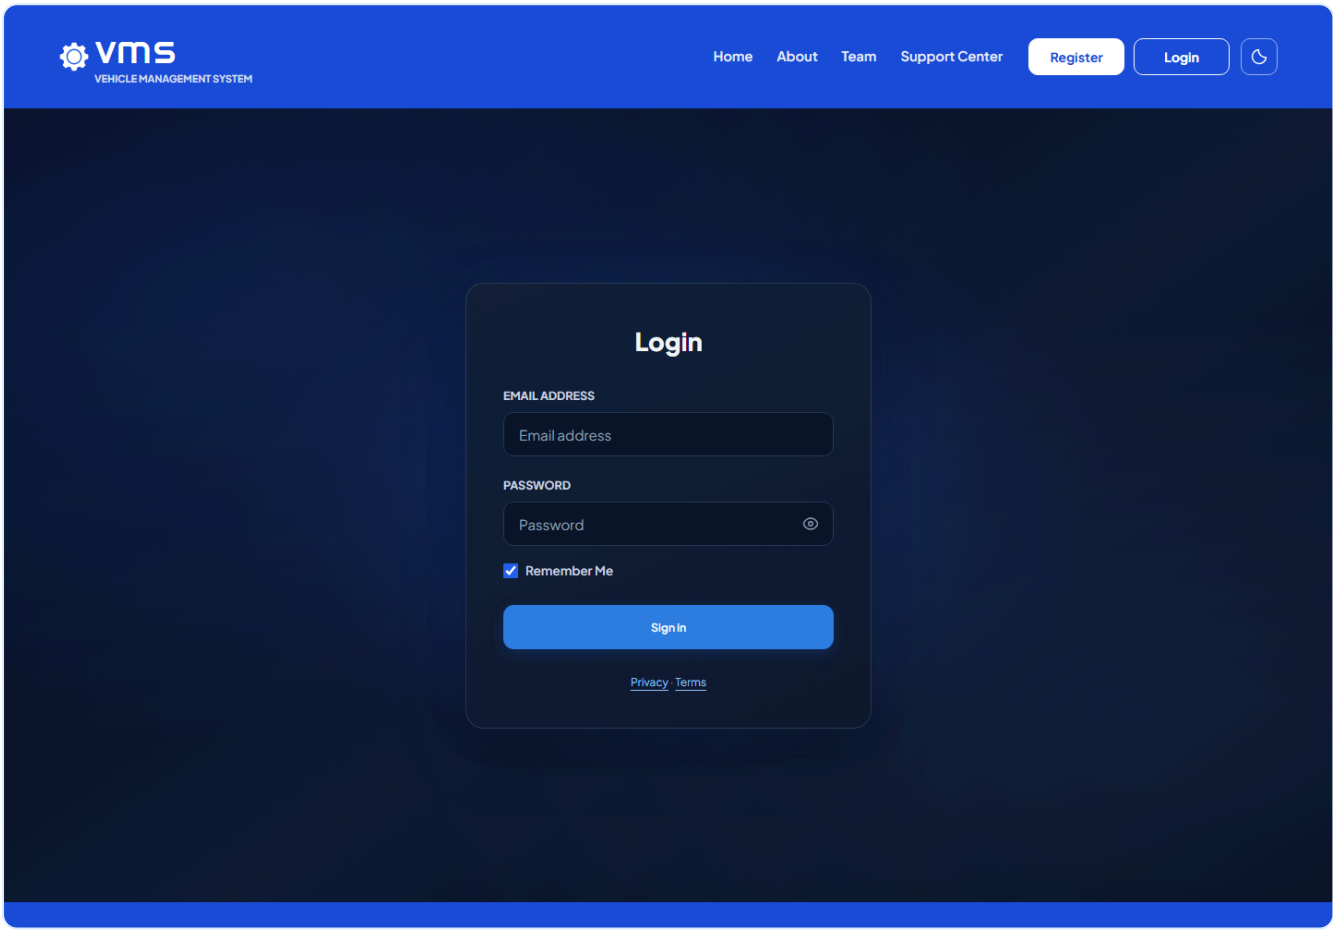

1. Document information — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 02

Introduction to VMS

The Barangay Vehicle Management System keeps vehicle profiles, readiness, issues, maintenance, schedules, and history together. Each barangay sees its own fleet. Access depends on roles and assignments, so a visible record does not automatically allow editing or approval.

Procedure


1. Open Dashboard to see the action queue and the totals available to your role.
2. Distinguish availability, physical condition, and readiness. Available does not mean a fresh operational check has passed.
3. Follow the handoff: Custodian proposes; Administrator approves and assigns; Maintenance Personnel repairs; an independent assigned Custodian verifies.

> **Remember**
>
> VMS records work and evidence. It does not replace a physical safety inspection or make an unsafe vehicle safe.

VMS • 02

Introduction to VMS

Actual VMS screen • Local seeded demonstration data

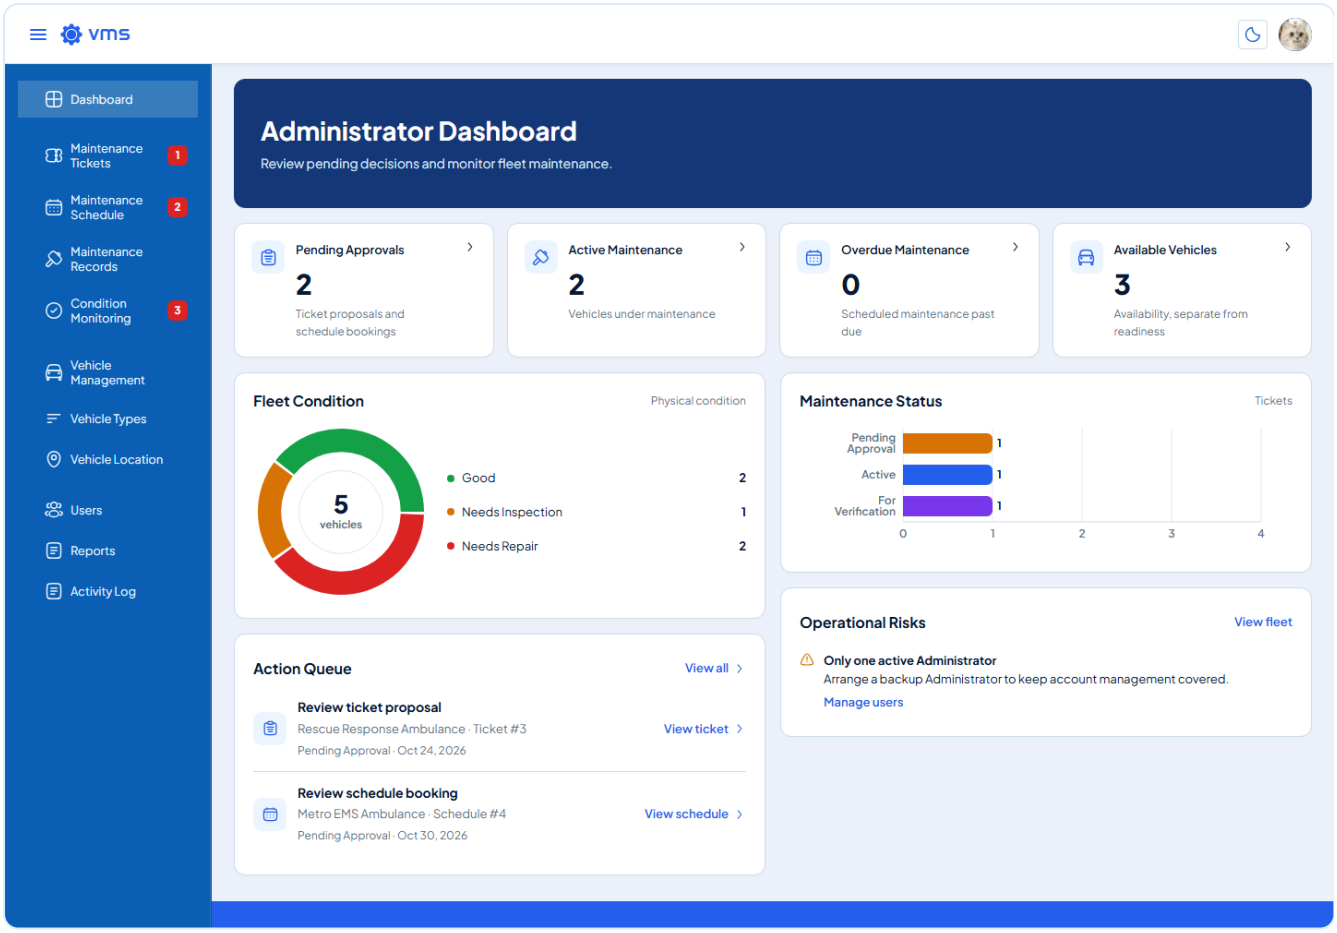

2. Introduction to VMS — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 03

System requirements and access

Use a current browser with JavaScript enabled and a stable connection. Desktop or tablet is easier for long forms; phone layouts are available. Ask your barangay for the deployed VMS address. Do not use example addresses from screenshots as production links.

Procedure


1. Open Register if you do not have an account. Enter your own contact details and the correct province, city, and barangay.
2. Later staff use the barangay Staff Registration Code and wait for their Administrator. The first barangay Administrator waits for Super Admin review and receives an activation code by email after confirmation.
3. For a first-Admin activation, sign in and enter the emailed 8-character code in the verification dialog. Contact the platform administrator if the code has not arrived. A sent code expires after seven days.

> **Remember**
>
> A registration code proves possession of an invitation, not official authority. Never share passwords or codes in Support Center reports.

VMS • 03

System requirements and access

Actual VMS screen • Local seeded demonstration data

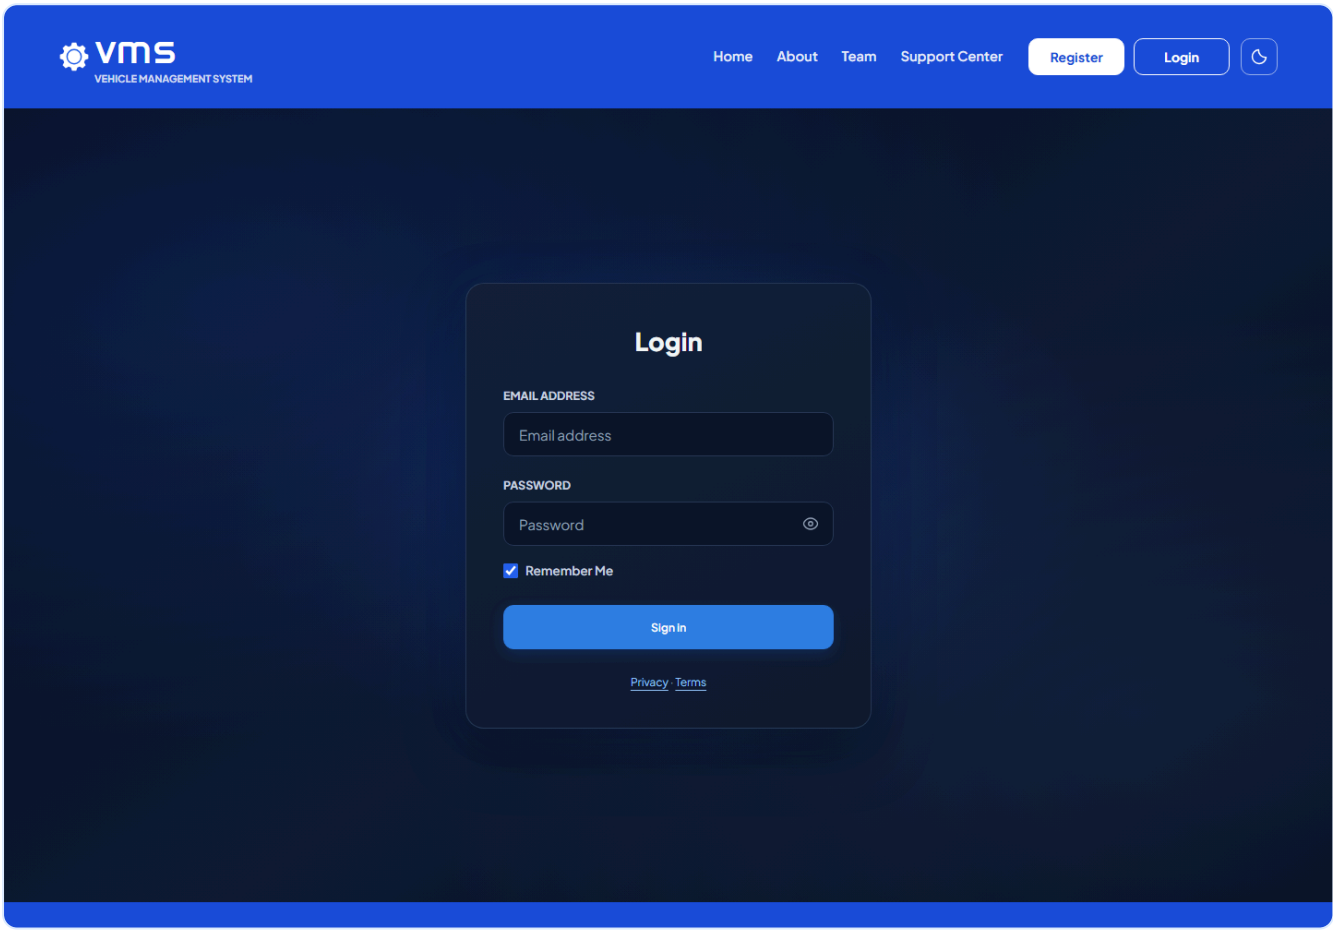

3. System requirements and access — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 04

Login and navigation

Sign in with an approved, active account. The sidebar lists modules for your assigned roles. When an action is restricted, do not attempt to bypass it by changing the URL.

Procedure


1. Enter Email Address and Password, then select Sign in. Use the eye button to show or hide the password.
2. Enable Remember Me only on a trusted personal device. Leave it off on shared devices.
3. Choose a sidebar module. Use the list search, status/date filters, and pagination; apply draft filters when an Apply control appears.
4. Open a record to see details and permitted actions. Use the account menu to sign out when finished.

> **Remember**
>
> If sign-in fails, check the address and credentials, then follow the approval message. Password recovery is handled by the barangay Administrator; there is no self-service password-reset link.

VMS • 04

Login and navigation

Actual VMS screen • Local seeded demonstration data

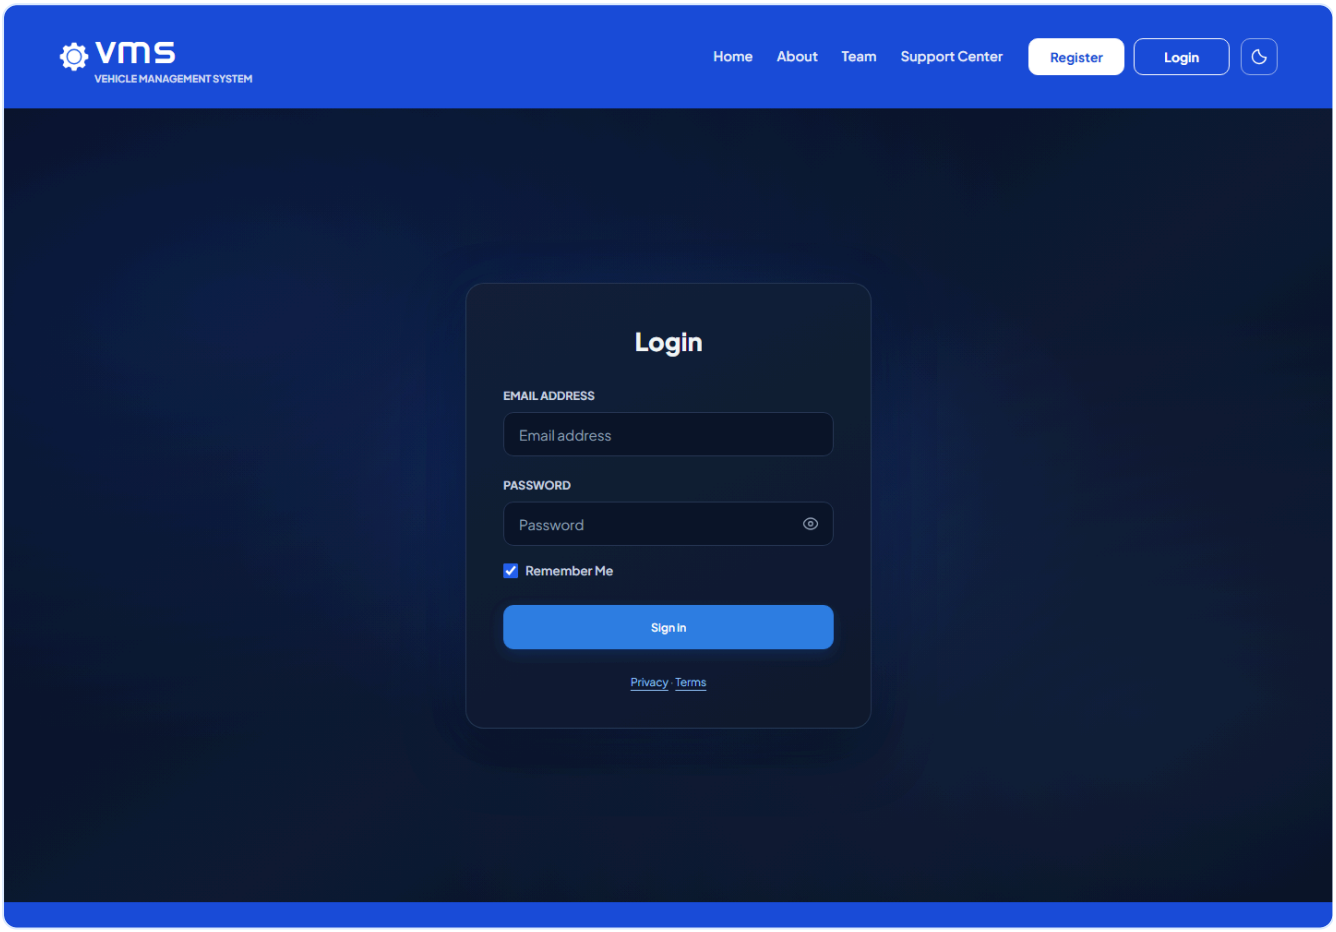

4. Login and navigation — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 05

Administrator user guide

The Administrator manages the barangay fleet and staff, reviews proposals and schedules, assigns mechanics, and generates reports. This role does not originate maintenance proposals or verify its own repair work.

Procedure


1. Review Dashboard action cards, then open Maintenance Tickets for Pending Approval proposals.
2. Check Users for pending staff; review identity before activating an account. Share the Staff Registration Code only through trusted channels and regenerate it if exposed.
3. Use Vehicle Management to maintain profiles, Vehicle Types for classifications, and Vehicle Location for hubs and location records.
4. Review Maintenance Schedule, completed Maintenance Records, Reports, and Activity Log. Use reasons for restricted or destructive actions when requested.

> **Remember**
>
> You cannot deactivate the last active Administrator or bypass open-work guards. Super Admin handles platform and first-Admin approval, not your fleet repairs.

VMS • 05

Administrator user guide

Actual VMS screen • Local seeded demonstration data

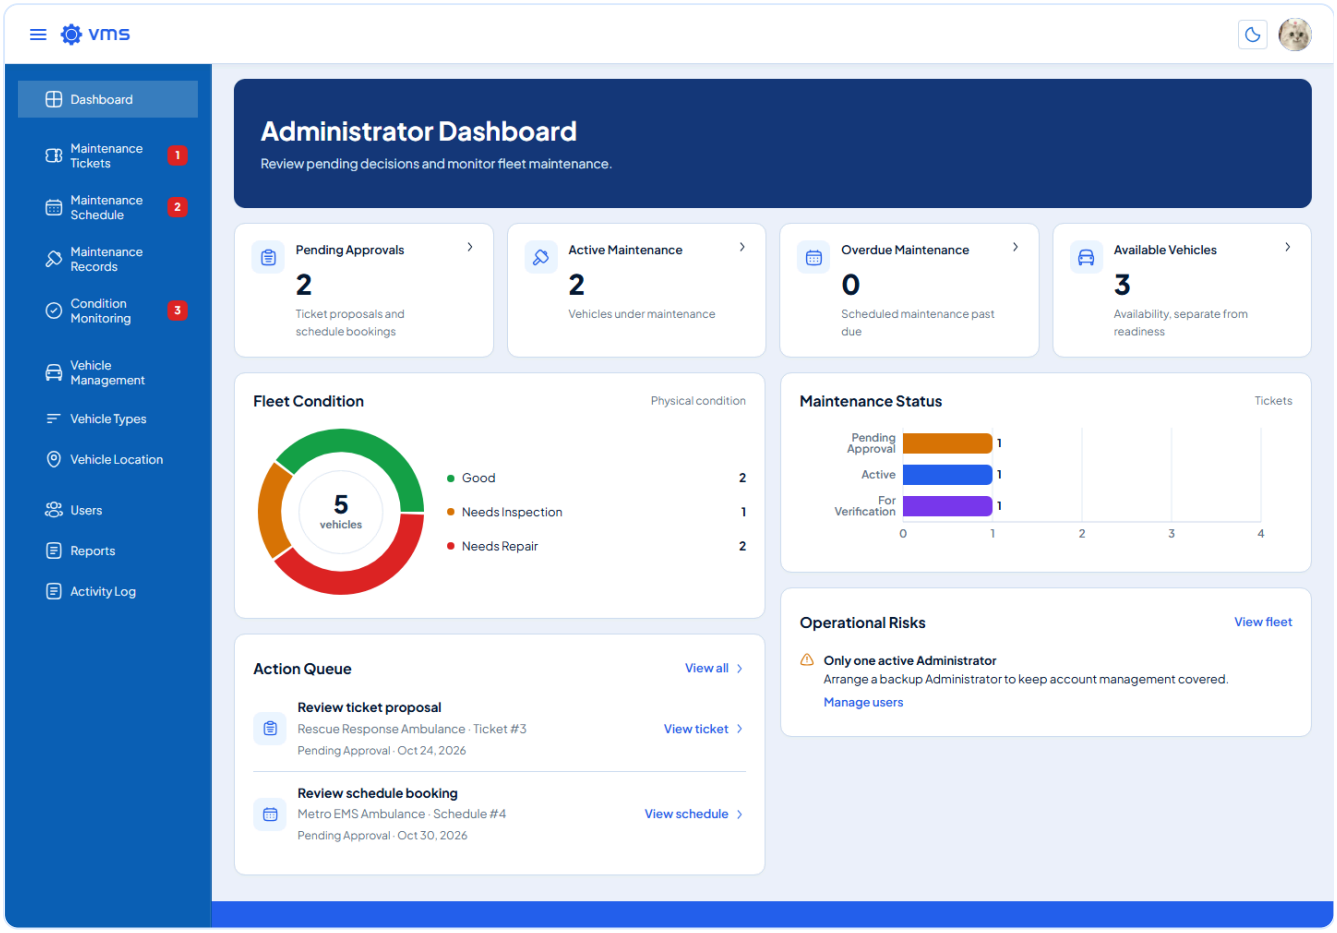

5. Administrator user guide — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 06

Custodian user guide

The Custodian performs hands-on vehicle checks, reports issues, proposes maintenance tickets, books schedules, and independently verifies completed repairs. Assignments and ownership checks restrict editing and verification.

Procedure


1. Use View Vehicles to open the vehicle and review its availability, condition, and readiness before use.
2. Record a routine check through Condition Monitoring, or use Report Vehicle Issue for an observed fault.
3. Select Propose Ticket when repair is needed. Book planned servicing through Maintenance Schedule.
4. Open My Tasks to review assigned verification and track work. Verify only after personally testing; then perform a fresh Readiness Check if eligible.

> **Remember**
>
> A person who performed repairs or handled the external repair cannot verify that ticket, even when holding multiple roles. Ask the Administrator to assign an independent Custodian.

VMS • 06

Custodian user guide

Actual VMS screen • Local seeded demonstration data

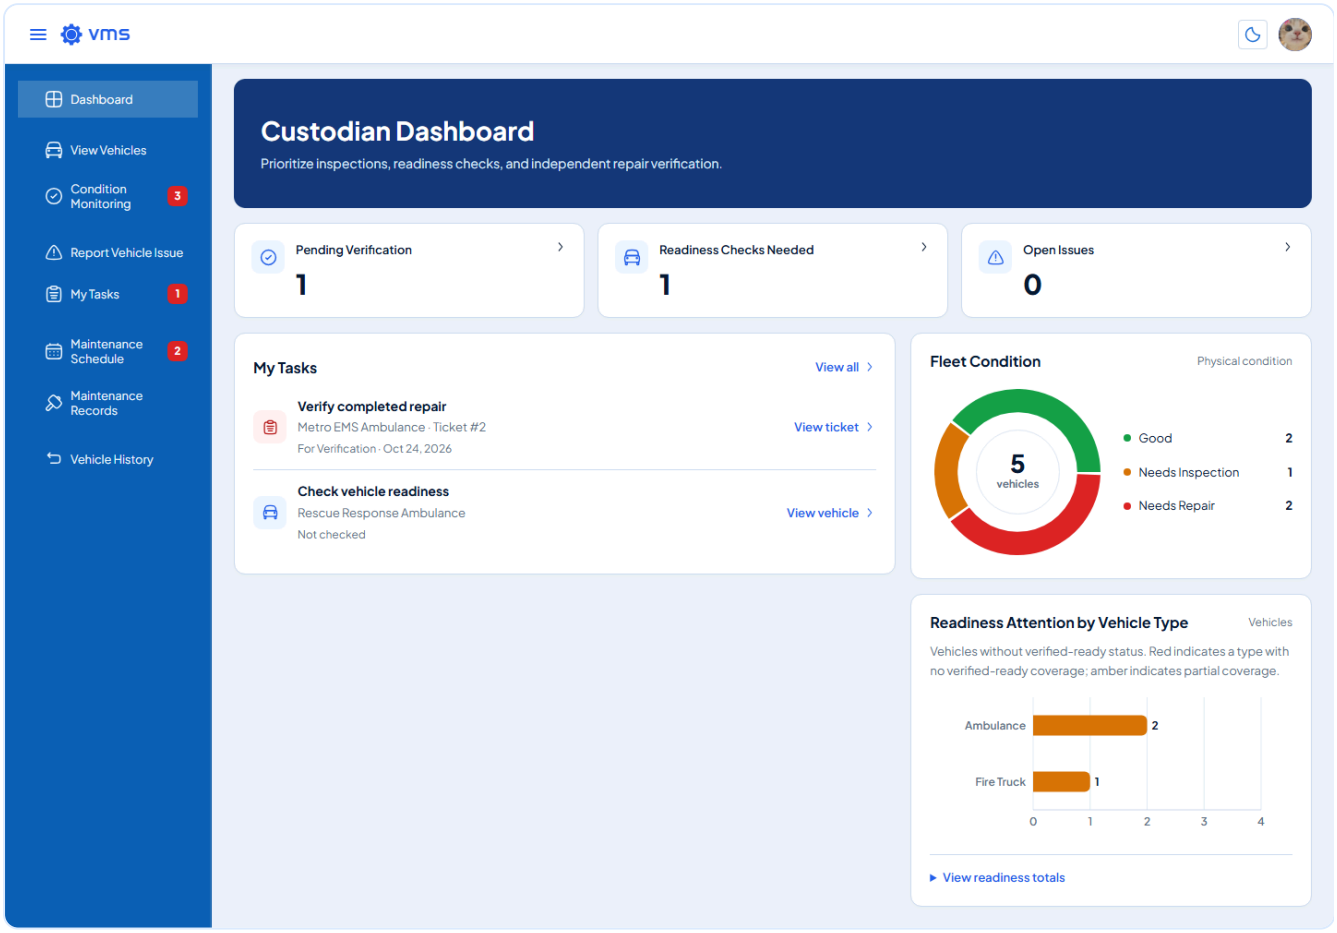

6. Custodian user guide — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 07

Maintenance Personnel user guide

Maintenance Personnel carry out assigned repairs and record the work and evidence. Their interface centers on My Work Orders, Maintenance Schedule, View Vehicles, and completed Maintenance Records.

Procedure


1. Open My Work Orders and select an assigned Active ticket. Check each work item and the repair method before starting.
2. Use Log Repairs for your assigned work items; record the actual repair, parts, cost, dates where requested, and evidence.
3. Complete all required items and submit for independent Custodian verification. Returned work must be corrected and submitted again.
4. Review Maintenance Schedule for assigned service and Maintenance Records for finished repair history.

> **Remember**
>
> The current single-role Maintenance Personnel sidebar has no standalone Issue Reports entry. The reporting permission still exists on the server, but this manual does not promise a hidden menu. Coordinate findings with the Custodian when no reporting control is available.

VMS • 07

Maintenance Personnel user guide

Actual VMS screen • Local seeded demonstration data

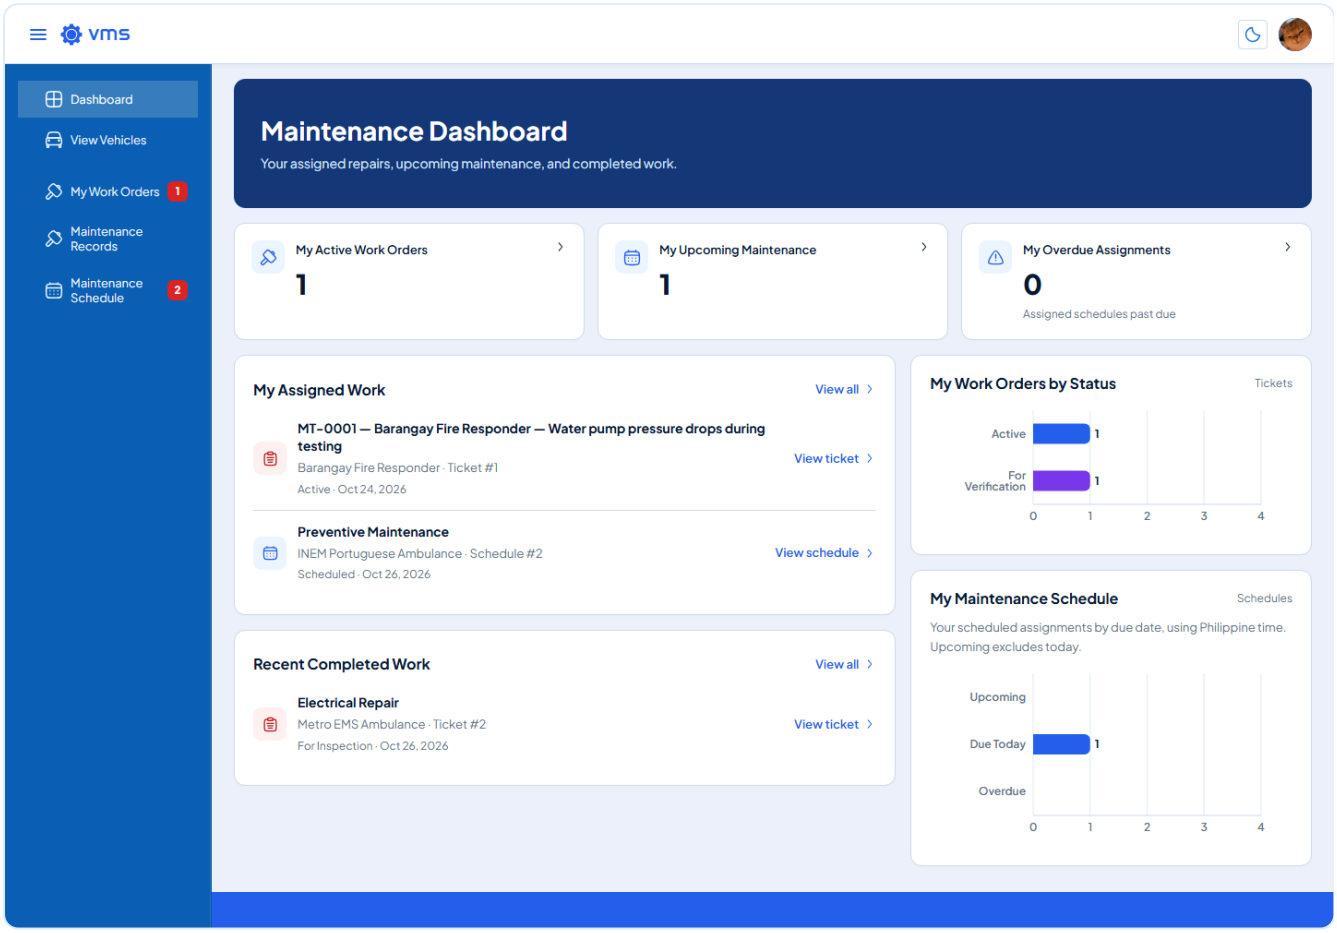

7. Maintenance Personnel user guide — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 08

Vehicle Management

Admin and Custodian can register vehicles using Add Vehicle. The registration form has three steps. Only Admin edits existing vehicle information or retires/restores vehicles.

Procedure


1. Open Vehicle Management (Admin) or View Vehicles (Custodian), then Add Vehicle.
2. In Basic Information select Land or Water, enter the name, plate or Registration/Hull No., and Vehicle Type.
3. Complete Specs: brand, model, year, capacity/unit, color, and fuel. Water vehicles require hull and engine details. Fill any required fields for the selected type.
4. Choose Photo & Location, optionally add a vehicle photo up to 4 MB, choose the station, review the entries, and submit once.
5. Open the saved vehicle profile for Files and permitted actions. Use search and filters to distinguish active, inactive, and decommissioned vehicles.

> **Remember**
>
> Archiving or decommissioning is blocked while open tickets exist. Decommissioning requires a reason. Recommissioning restores the record; it is not evidence of a fresh readiness test.

VMS • 08

Vehicle Management

Actual VMS screen • Local seeded demonstration data

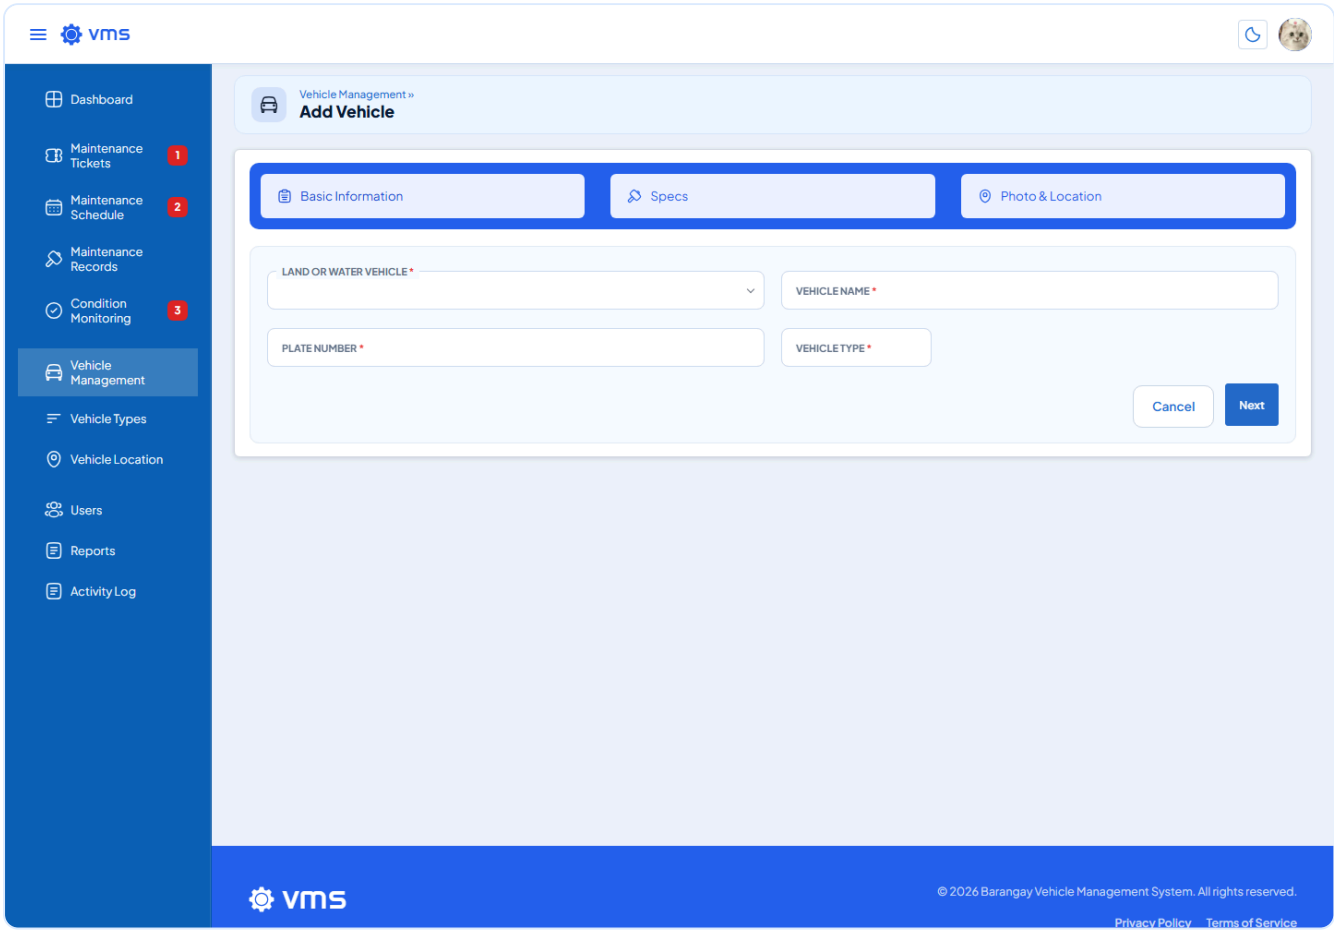

8. Vehicle Management — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 09

Vehicle inspection and readiness

Condition Monitoring records the physical result of a Custodian check. Readiness Check separately confirms that the Custodian personally checked and operated the vehicle. A passing readiness check is fresh for 24 hours.

Procedure


1. As Custodian, open Condition Monitoring and Add Condition Check. Select the vehicle, record Good or Needs Repair, and enter factual observations.
2. Submit the check. A Needs Repair result affects availability. Use the record action to propose a ticket or plan a schedule where appropriate.
3. For readiness, open a vehicle and choose Readiness Check. Read the eligibility result; an active repair or retired vehicle blocks confirmation.
4. Personally operate and test the eligible vehicle, attest truthfully, add notes if needed, and select Confirm Ready. After repair closure, perform a new check.

> **Remember**
>
> Do not bypass a blocked or failed eligibility check. The former standalone Request Custodian Inspection workflow is disabled in this build; routine Condition Monitoring remains available.

VMS • 09

Vehicle inspection and readiness

Actual VMS screen • Local seeded demonstration data

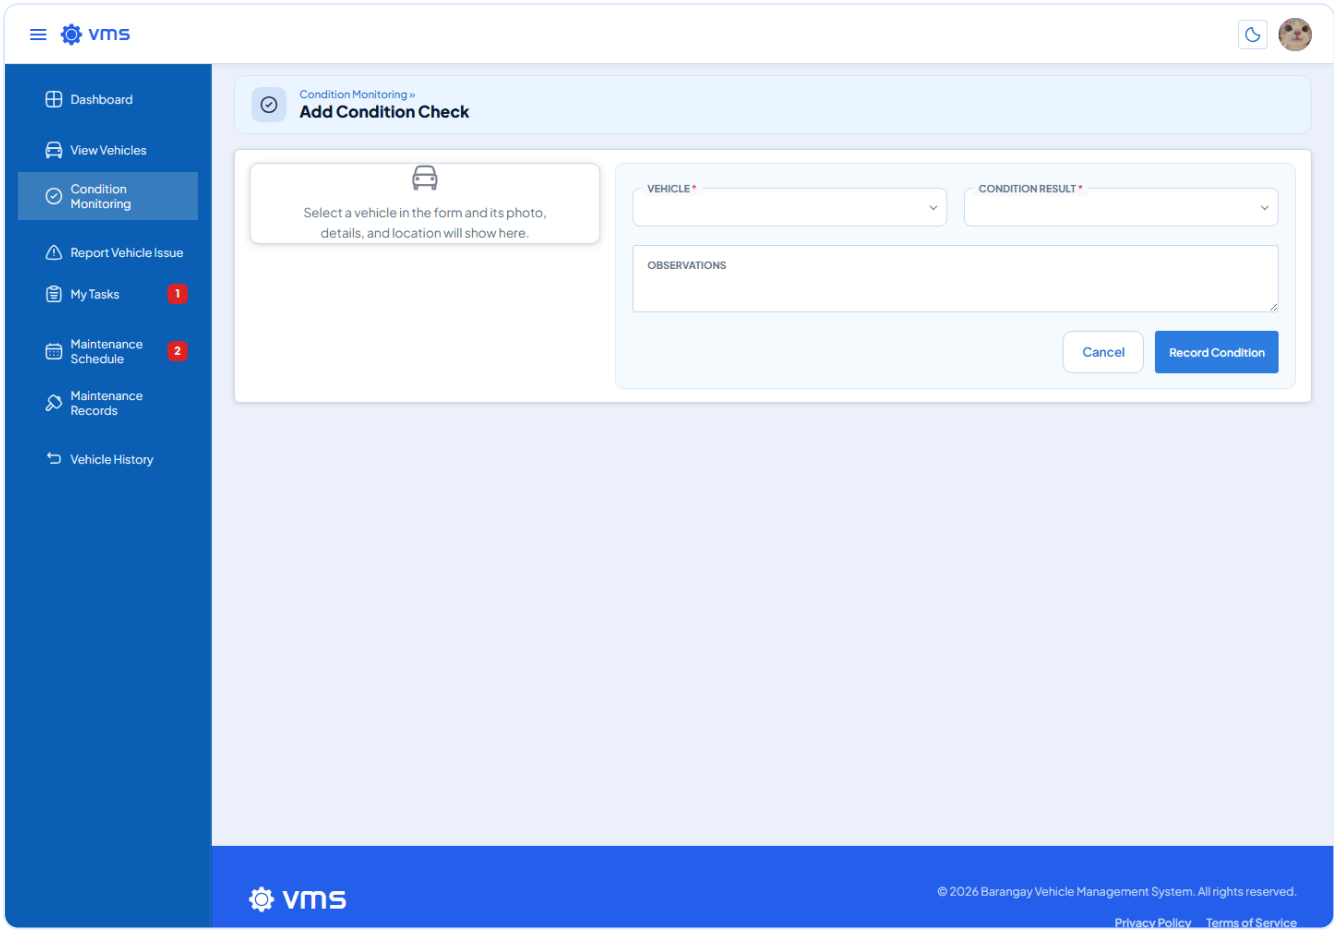

9. Vehicle inspection and readiness — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 10

Issue reporting

A Custodian uses Report Vehicle Issue to record an observed fault and follow it to resolution. An issue report is not an approved repair ticket. Reporting flags the vehicle Needs Inspection and notifies the relevant users.

Procedure


1. Open Report Vehicle Issue and use the report action. Select the affected vehicle.
2. Choose the issue type and severity (Low, Medium, High), and explain symptoms, timing, and the operational impact.
3. Add clear supporting photos or documents where useful, within the displayed file limits. Review existing-open-issue warnings before submitting.
4. Submit once and open the saved report. Use Propose Ticket when repairs are required. Follow Pending, Under Review, In Maintenance, and Resolved statuses.

> **Remember**
>
> A report does not automatically become a ticket. Only the Custodian proposes. Admin can dismiss an eligible unlinked report with a reason; this does not physically repair the vehicle.

VMS • 10

Issue reporting

Actual VMS screen • Local seeded demonstration data

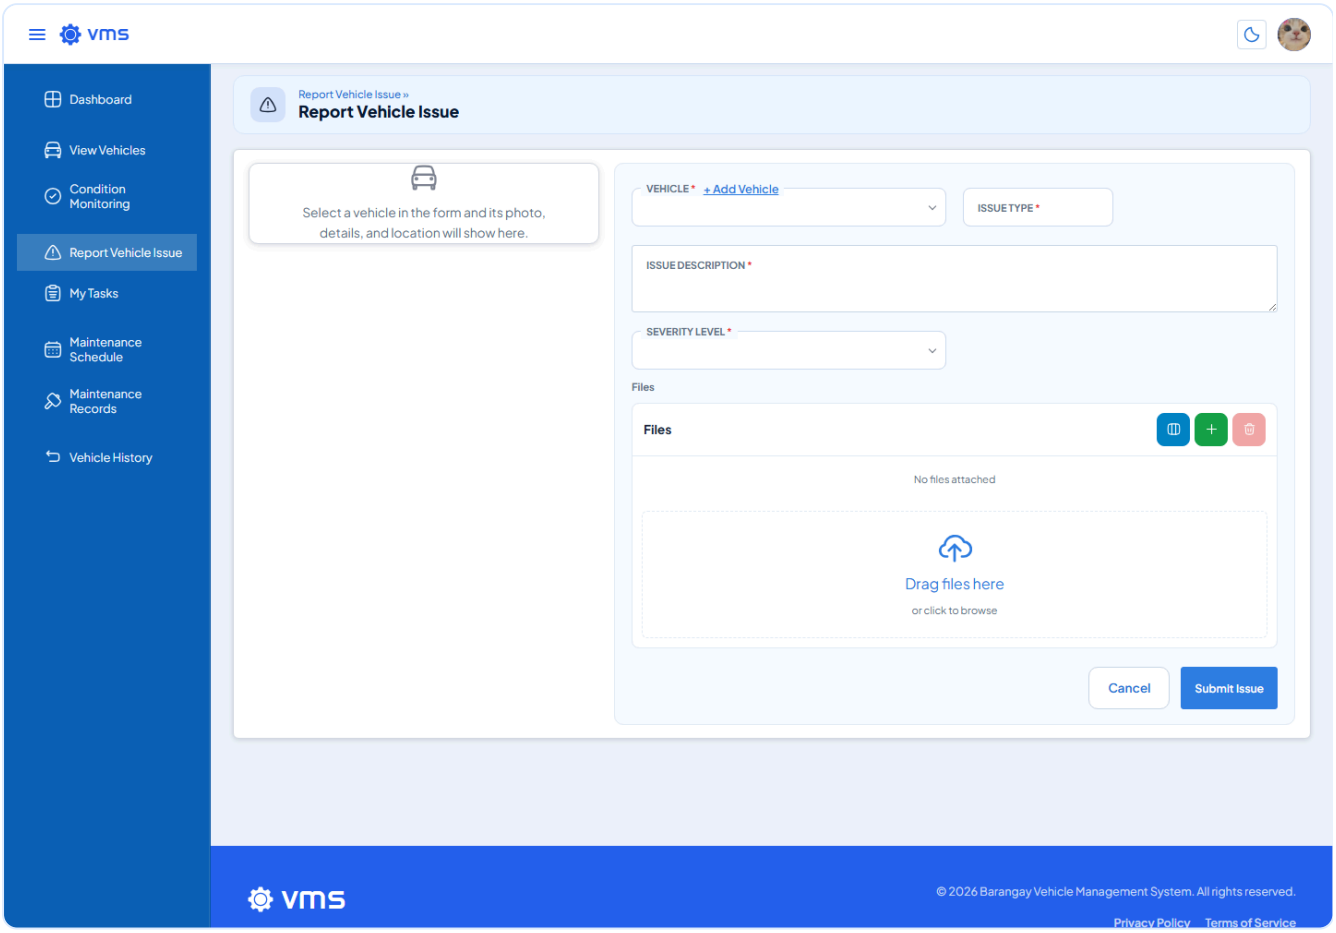

10. Issue reporting — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 11

Maintenance requests and proposals

Every maintenance ticket begins as Pending Approval. A Custodian proposes it after checking the need; due schedules can also generate proposals. The Administrator must review before work becomes active.

Procedure


1. In Report Vehicle Issue select Propose Ticket, or open the issue/condition record and choose its proposal action.
2. Select the vehicle, priority, and repair method. Add at least one work item with its maintenance type and the work needed. Ticket titles are generated by the system.
3. For an external shop, supply the required reason and work scope. For donor parts, select another eligible vehicle from the same barangay and identify the parts needed.
4. Review duplicates and any recurring-fault warnings, then submit. A suggested mechanic is a suggestion, not an assignment.
5. If Corrections Requested appears, read the reason, edit the permitted proposal fields, and resubmit for Admin review.

> **Remember**
>
> Do not create another ticket for the same unresolved work just to bypass review or duplicate protection.

VMS • 11

Maintenance requests and proposals

Actual VMS screen • Local seeded demonstration data

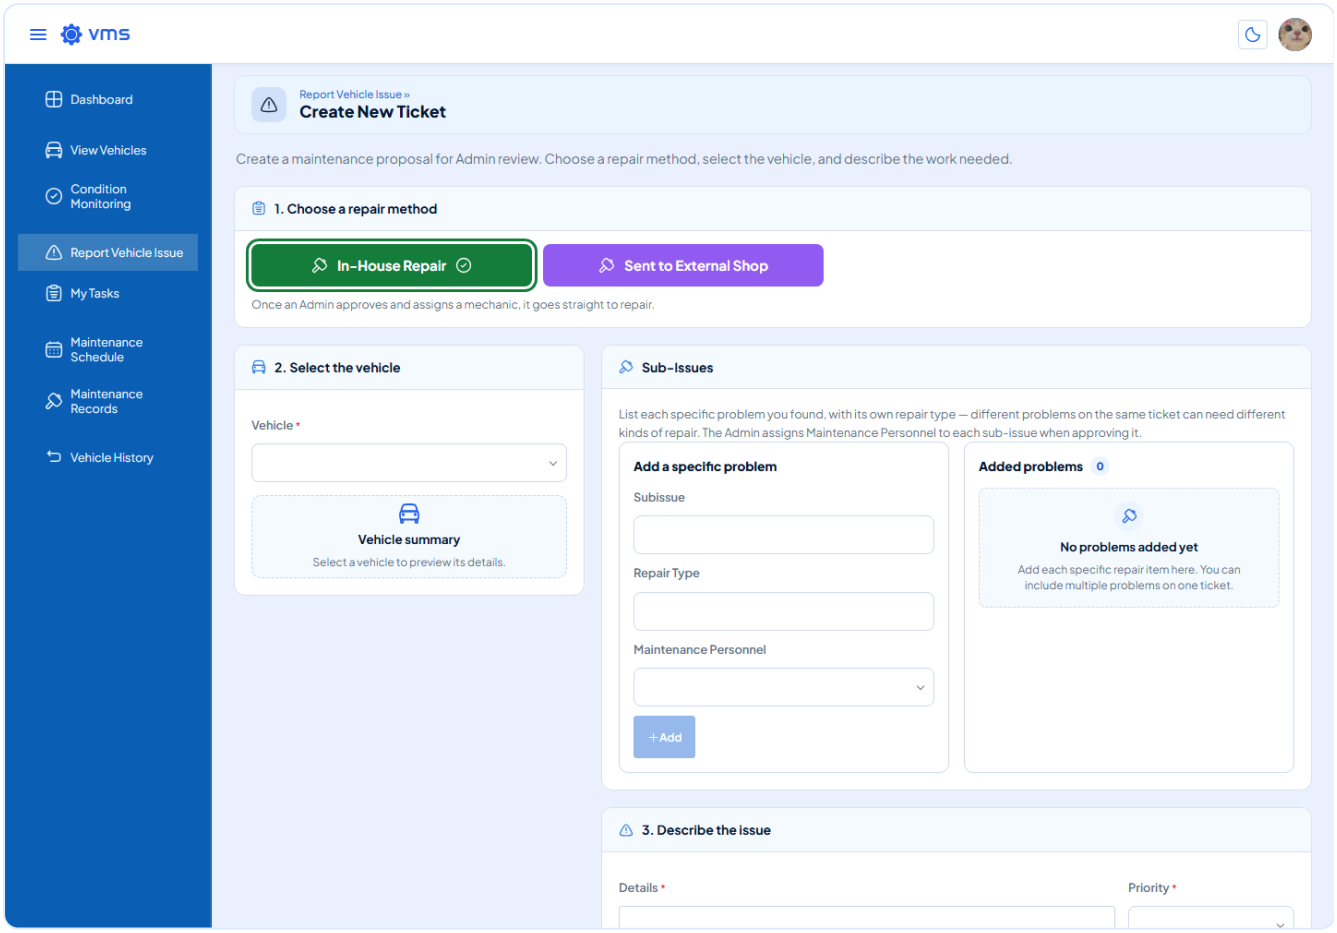

11. Maintenance requests and proposals — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 12

Repair approval and assignment

Only the Administrator approves a maintenance proposal. Review the vehicle, priority, work scope, repair method, independent verifier, and staff availability.

Procedure


1. Open Maintenance Tickets and choose a Pending Approval proposal. Read its work items and linked evidence.
2. Select active Maintenance Personnel for every in-house work item. Confirm the assigned Custodian can verify independently. External work uses the shop workflow instead of an in-house mechanic.
3. Approve and assign only when the proposal is ready. Otherwise request corrections or decline with a clear reason.
4. Confirm the resulting status and assignments. Active work changes vehicle availability; an approval is not proof that repair has finished.

> **Remember**
>
> Reassignment requires an eligible user and may require a reason. Read whether the action affects one work item or the whole ticket before confirming.

VMS • 12

Repair approval and assignment

Actual VMS screen • Local seeded demonstration data

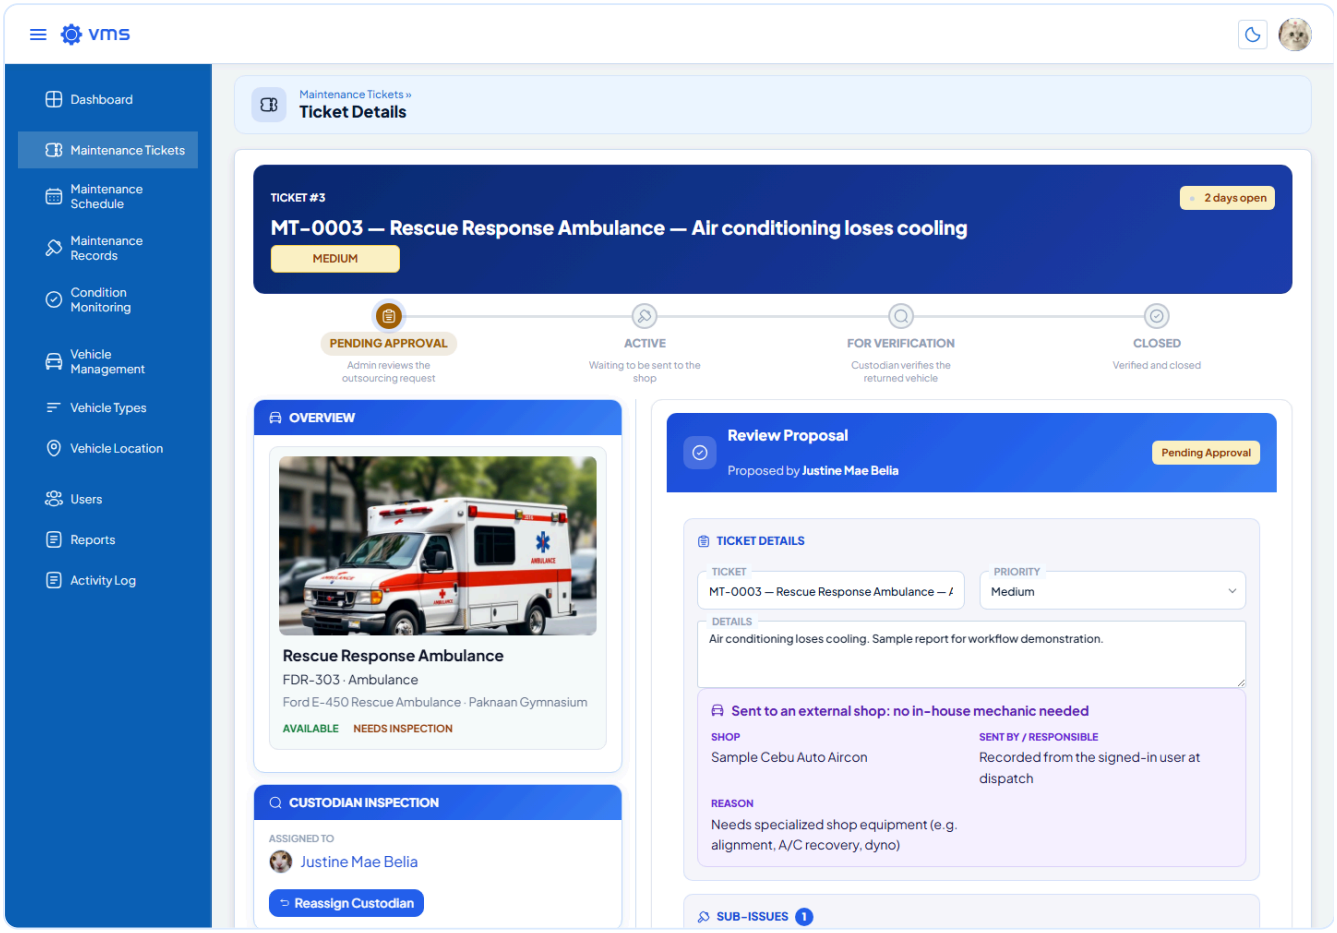

12. Repair approval and assignment — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 13

Maintenance scheduling

A Custodian books preventive maintenance; an Administrator approves or declines. A due schedule enters the reviewed ticket workflow. A booking alone does not authorize repair work.

Procedure


1. As Custodian, open Maintenance Schedule and Add Schedule. Select the vehicle, maintenance type, date, and required details.
2. If recurrence is needed, set the interval within the form limits (1–60 months). Review same-day conflict warnings and submit for approval.
3. As Administrator, review Pending Approval schedules, approve or decline with a reason, and assign or reassign eligible Maintenance Personnel where required.
4. As assigned Maintenance Personnel, open your schedule and follow the current action. If it links to a ticket, finish through that ticket. Complete only work actually performed; recurring next bookings follow completion.

> **Remember**
>
> If a due schedule has not advanced, contact the Administrator. Do not assume that a calendar date means work is approved or completed.

VMS • 13

Maintenance scheduling

Actual VMS screen • Local seeded demonstration data

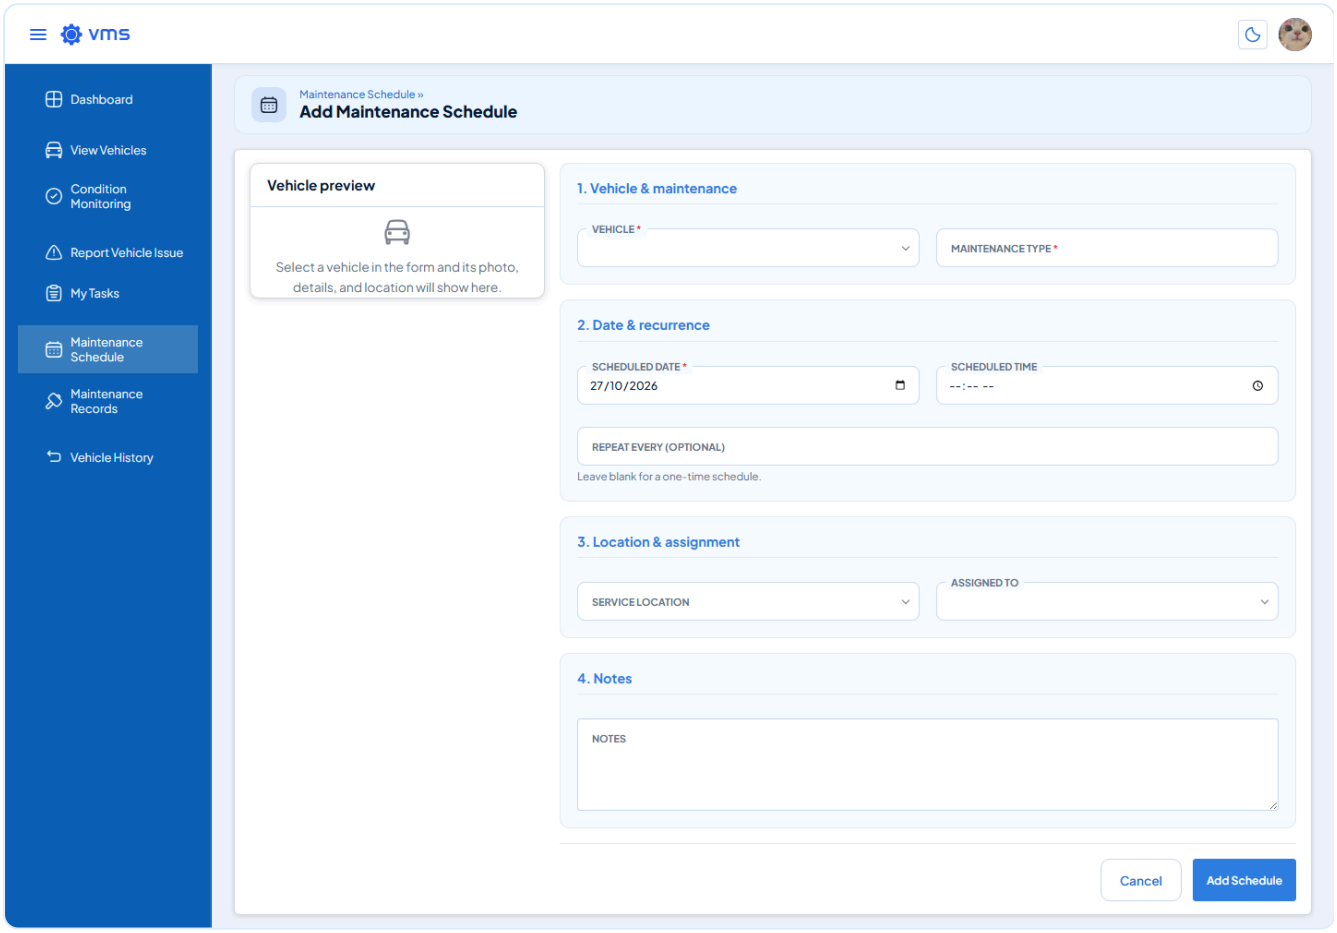

13. Maintenance scheduling — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 14

Repair completion and verification

Repair evidence is recorded per work item, then the assigned Custodian verifies the ticket as a whole. Approval closes the ticket. A failed test returns work for correction; repair completion and readiness confirmation are separate.

Procedure


1. As the assigned mechanic, open an Active work order and Log Repairs for each assigned item. Describe the actual work and parts; enter factual dates and non-negative costs where requested.
2. Add evidence within the displayed limits (up to 10 repair files, 8 MB each). Finish all required work, then use Submit for Verification if that action remains available.
3. As the assigned independent Custodian, open My Tasks, select the For Verification ticket, and choose Verify Repair. Inspect the repair evidence and personally test the vehicle.
4. Choose Approve only after a successful test and the required attestation. If any repair fails, choose Disapprove, identify failing items or add clear notes, and return it for rework.
5. Confirm the closed record, then perform a fresh eligible Readiness Check before relying on ready-to-respond status.

> **Remember**
>
> Never attest to a test you did not perform. Earlier mechanics and external handlers cannot verify the ticket; ask Admin for an independent verifier.

VMS • 14

Repair completion and verification

Actual VMS screen • Local seeded demonstration data

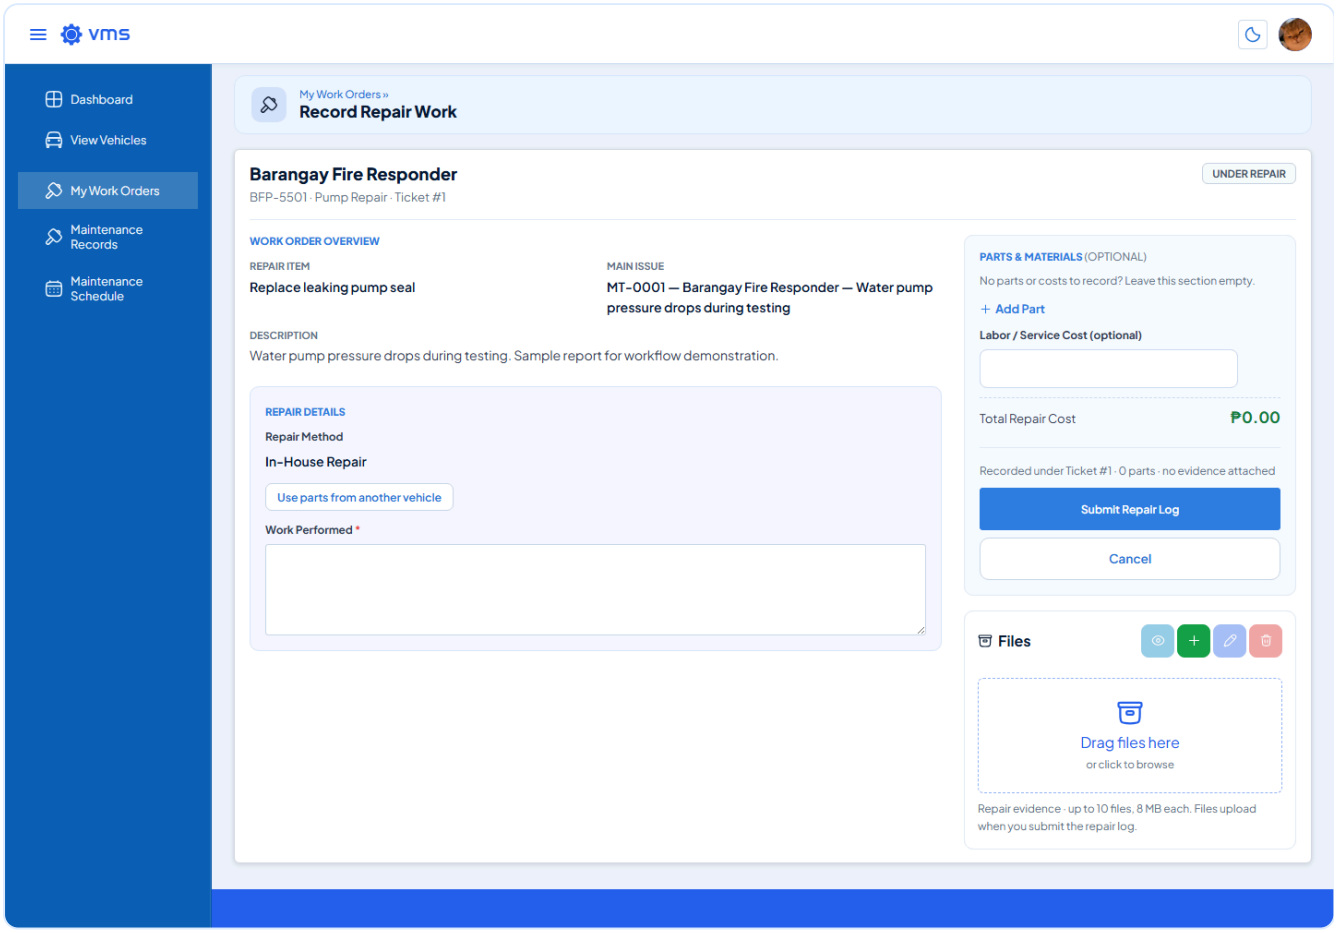

14. Repair completion and verification — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 15

External repairs and donor parts

Repair method is chosen in the reviewed proposal. External repairs track dispatch and return; donor-part repairs record the other vehicle and the part taken. Do not use either path to skip independent verification.

Procedure


1. For external work, Admin opens the approved ticket, records the shop and dispatch details, and marks the item sent to the shop.
2. When the vehicle returns, record the return and actual repair details, cost, receipt/evidence, and warranty where requested. Do not submit a repair while it is still at the shop.
3. For donor parts, choose a different non-retired vehicle in the same barangay and record the part, quantity, condition, installation details, and reason in the available form.
4. Submit actual completed repair evidence for Custodian verification. Record a fresh shop cycle if external work was rejected and sent back.

> **Remember**
>
> Direct Parts Transfer records are permanent final records, not the same as a proposed donor-part repair. Check the vehicle and quantities before saving. They do not have a general edit/delete workflow.

VMS • 15

External repairs and donor parts

Actual VMS screen • Local seeded demonstration data

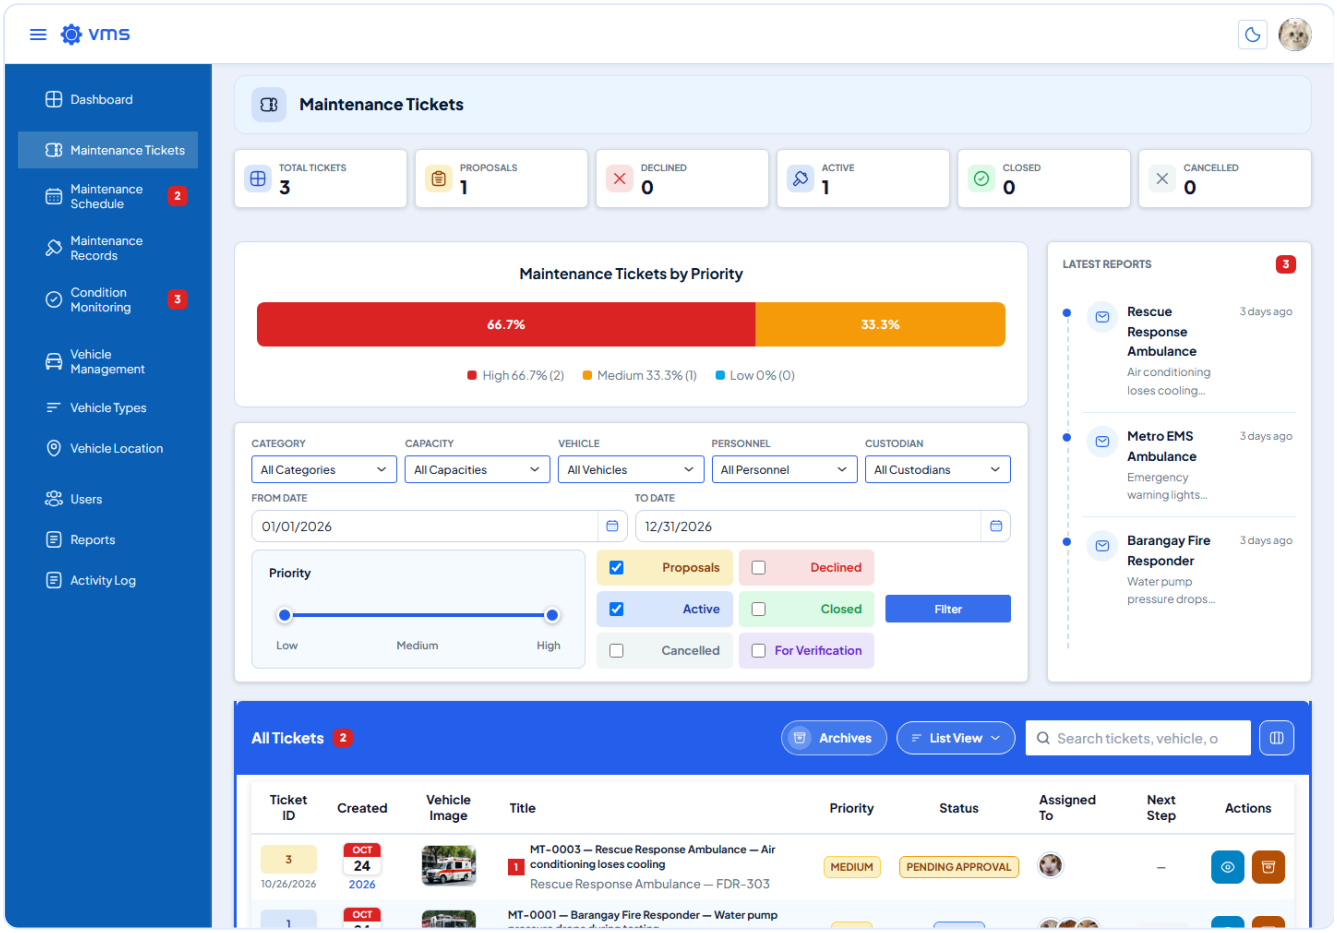

15. External repairs and donor parts — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 16

Maintenance records and evidence

Maintenance Records is the completed-repair ledger for the barangay. Each finished repair has its own row, including different work on the same vehicle. Ongoing or returned work belongs in the active work views.

Procedure


1. Open Maintenance Records. Filter by source, maintenance type, search text, and completion-date range.
2. Use source categories In-House Repair, Sent to External Shop, and Maintenance Schedule to narrow the ledger.
3. Open the specific repair row to inspect work, performer or shop, completion date, costs, evidence, and available verification details.
4. Admin may record authorized historical work using the available add action. Keep its separate verification/confirmation process distinct from current ticket closure.

> **Remember**
>
> Viewing the barangay ledger does not grant permission to edit another person’s repairs or verify your own work.

VMS • 16

Maintenance records and evidence

Actual VMS screen • Local seeded demonstration data

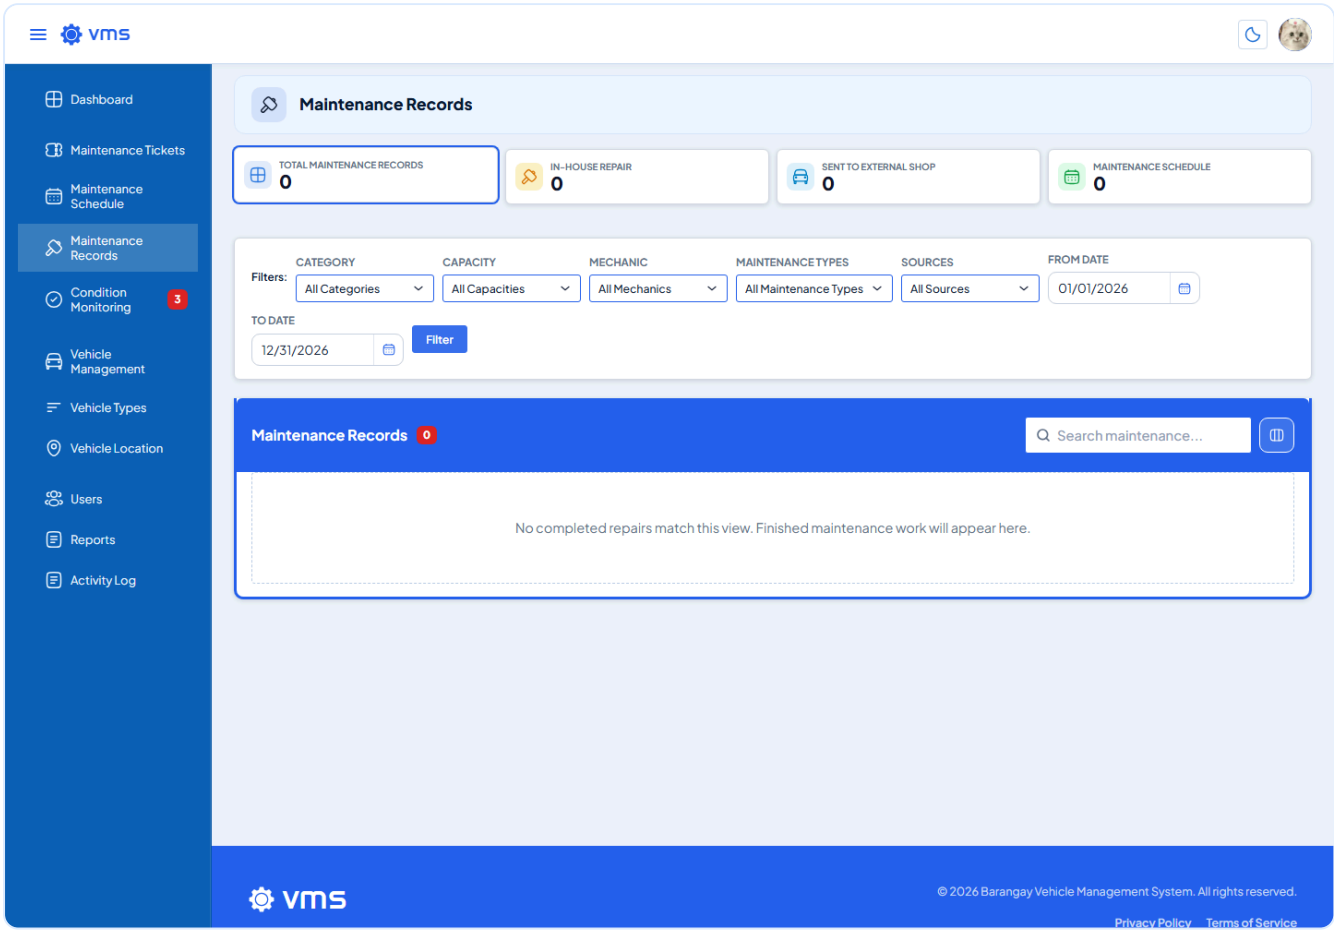

16. Maintenance records and evidence — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 17

Vehicle files and location

Vehicle documents live in the vehicle profile Files card. Location is a recorded station or hub; it is not live GPS tracking.

Procedure


1. Open Vehicle Management or View Vehicles, then the vehicle profile. Expand Files to view or upload an authorized document.
2. Give the file a clear title and category, choose an accepted file, and save. Vehicle files accept jpg/jpeg/png/pdf/doc/docx up to 10 MB; follow the displayed limit.
3. As Admin, open Vehicle Location to review the Vehicles Map and Vehicle Location Record. Select or manage hubs and save authorized location changes.
4. Use Map/Satellite or Download Map when available. If tiles or boundary data are unavailable, do not infer a service area from missing outlines.

> **Remember**
>
> Admin manages document deletion; Custodian and Maintenance Personnel can edit only their own uploads. Upload only material approved for your barangay; do not attach passwords or private identity documents unnecessarily.

VMS • 17

Vehicle files and location

Actual VMS screen • Local seeded demonstration data

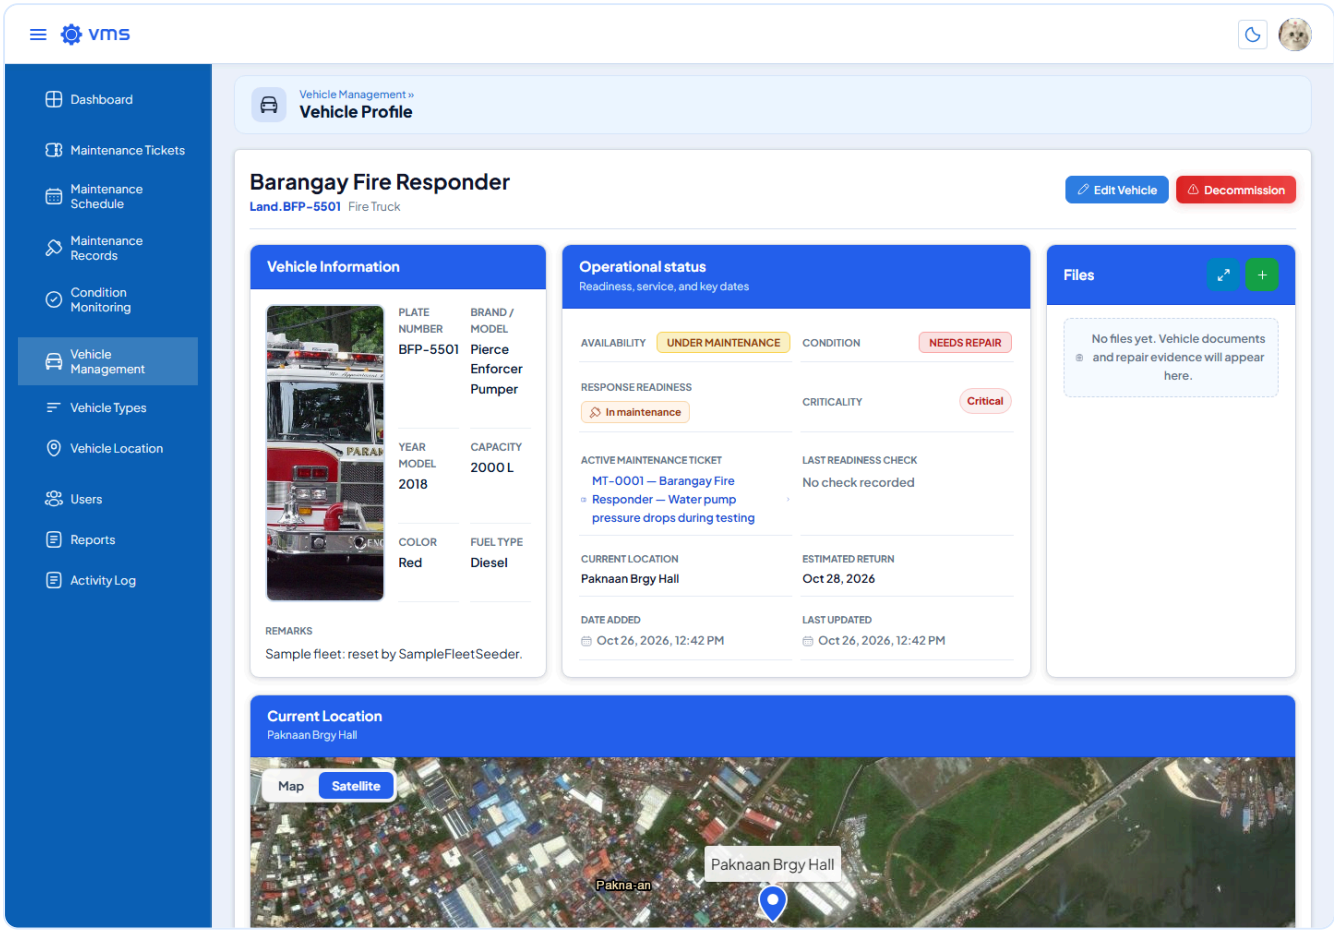

17. Vehicle files and location — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 18

Reports and activity history

Admin generates reports and views the Activity Log. Admin and Custodian can inspect Vehicle History. History is written by system actions; users do not manually create timeline events.

Procedure


1. As Admin, open Reports and choose the required inventory, type, location, issue, maintenance, schedule, or history report.
2. Select the relevant vehicle, date, location, or other available filters; generate and inspect the preview before sharing.
3. Use the offered Print or CSV export action. Print-to-PDF uses the browser’s print dialog; do not expect every report to provide a spreadsheet or direct PDF button.
4. For audit checks, open Activity Log (Admin) or Vehicle History (Admin/Custodian), search the record, and apply the date and activity filters.

> **Remember**
>
> Export only records you are authorized to share. Filters change the report scope; check headings, date ranges, and totals before relying on the result.

VMS • 18

Reports and activity history

Actual VMS screen • Local seeded demonstration data

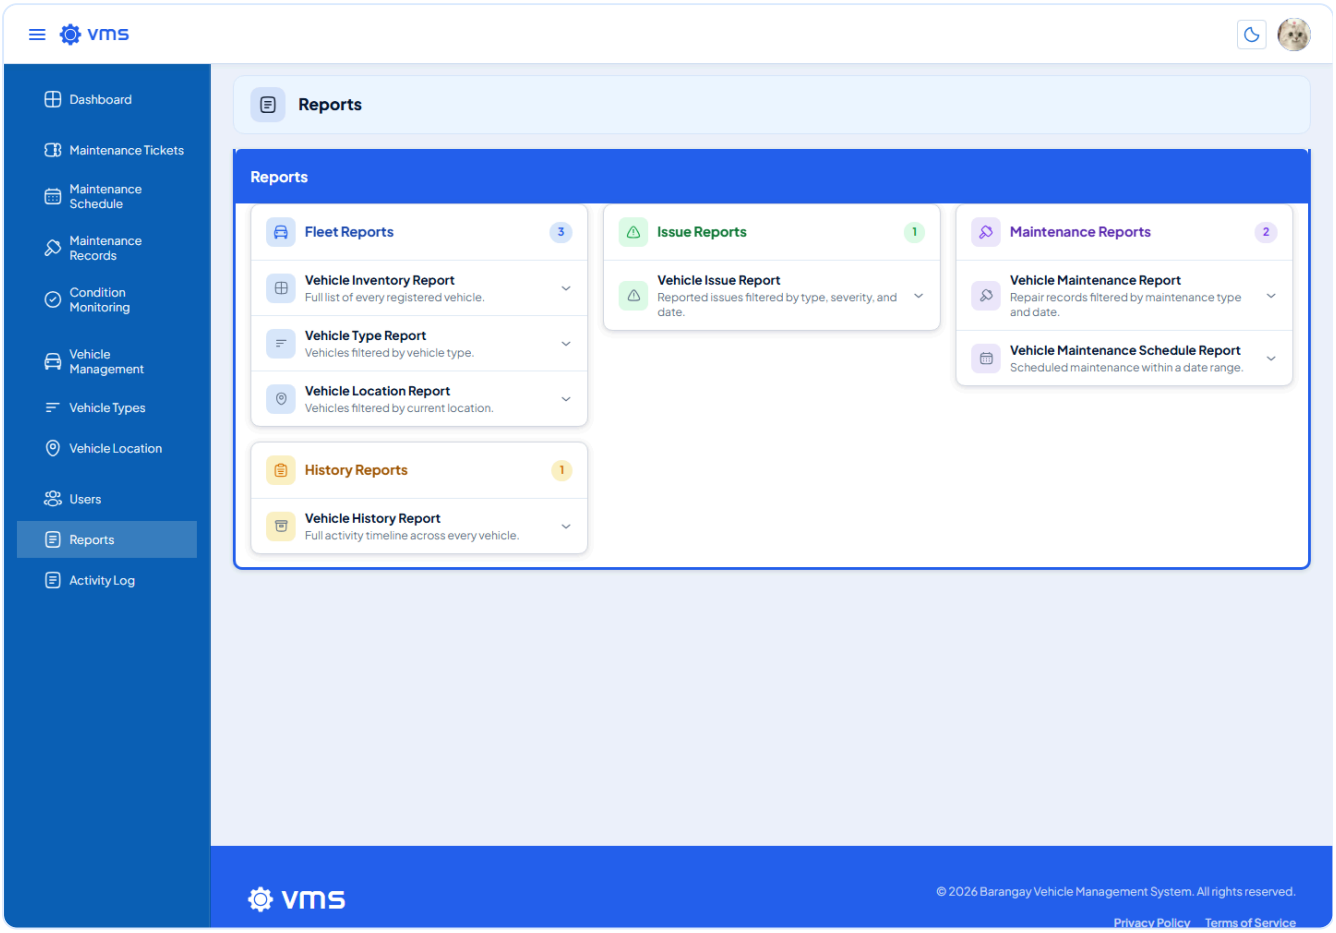

18. Reports and activity history — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 19

Complete maintenance workflow

Use this sequence to understand the handoff between all three roles. The workflow diagram is a guide to responsibility, not an indication that repairs are running automatically.

1. Propose	2. Review	3. Repair	4. Verify	5. Readiness
Custodian	Administrator	Maintenance Personnel	Custodian	Custodian

Procedure


1. Custodian identifies a condition or issue and submits a Pending Approval ticket proposal. A due schedule may create the same kind of proposal.
2. Administrator reviews, requests corrections or declines, or approves and assigns the work. Approved tickets become Active.
3. Maintenance Personnel record completed assigned work; Admin records external shop dispatch/return when applicable. All required items must reach the verification stage.
4. Assigned independent Custodian verifies the whole ticket. Approved closes it; Rejected returns identified work for correction and a new test.
5. Completed records and history retain the evidence. Custodian performs a fresh readiness check when the vehicle is eligible.

> **Remember**
>
> Closing a ticket does not automatically create a fresh ready-to-respond attestation. Verification must remain independent of the repair performer.

VMS • 19

Complete maintenance workflow

Actual VMS screen • Local seeded demonstration data

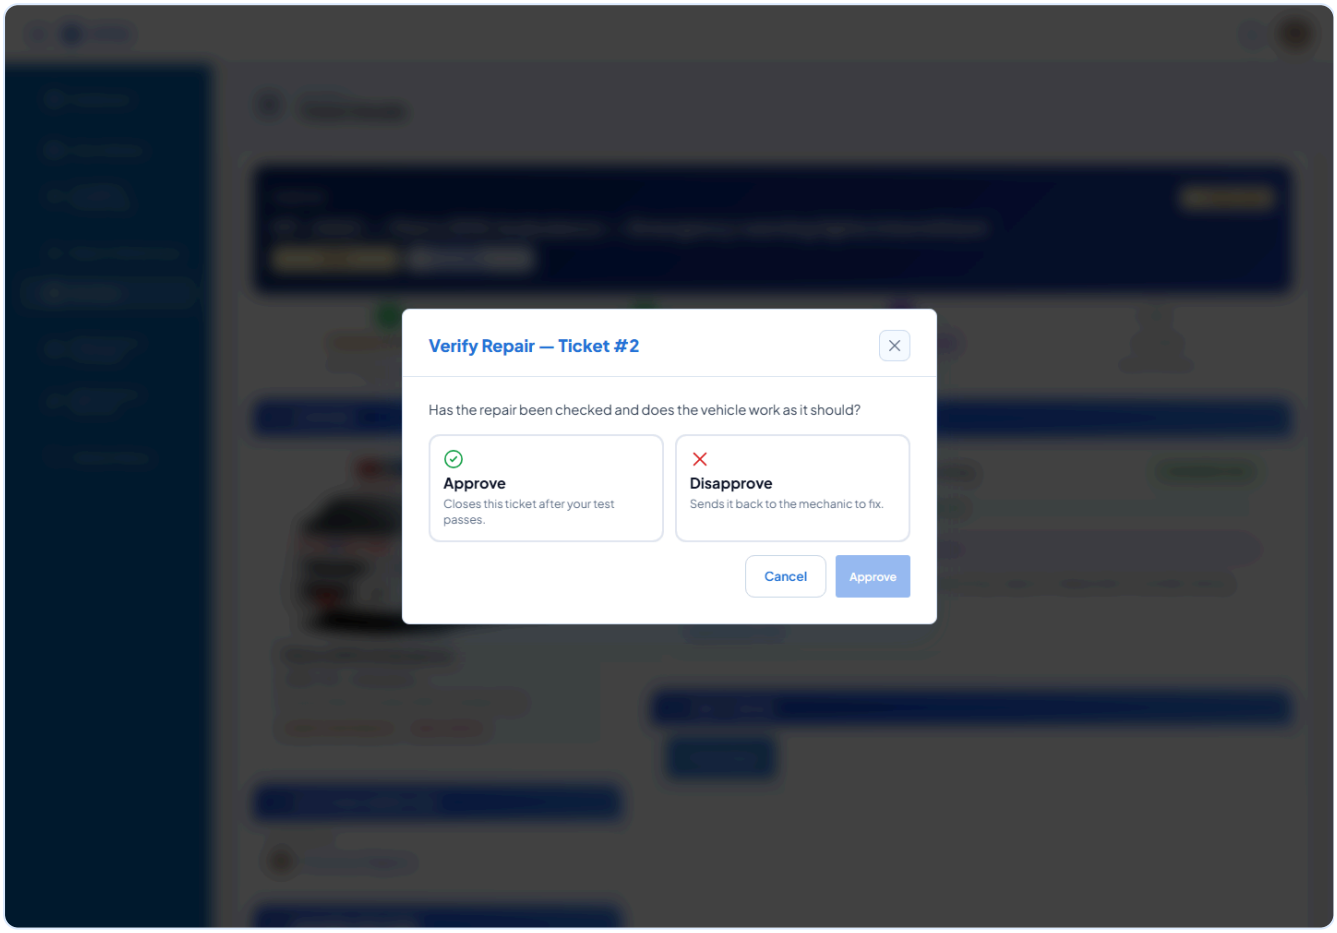

19. Complete maintenance workflow — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 20

Troubleshooting

Read the displayed message first. Preserve your notes before refreshing a long form. Do not repeat a successful submission just because an email or notification is delayed.

Procedure


1. Cannot sign in: check the email and password, connection, and approval status. Contact the barangay Admin for staff accounts or platform support for the first Admin.
2. Missing records: clear search and filters, check the date range, status, and Hidden/Archive view where offered. Hidden tickets are personal list preferences, not cancelled work.
3. Action disabled or forbidden: verify your role, assignment, and record status. Ask Admin to correct the assignment; never share another user’s login.
4. Readiness blocked: finish active repairs and independent verification first. If eligibility fails to load, close and retry after checking the connection.
5. Upload rejected or map unavailable: check file type/size and connection. Save only supported files; do not replace a missing boundary with an invented outline.

> **Remember**
>
> For unresolved concerns, send a concise description, record reference, and time to your Administrator or Support Center. Remove passwords, staff codes, and unnecessary personal data from screenshots.

VMS • 20

Troubleshooting

Actual VMS screen • Local seeded demonstration data

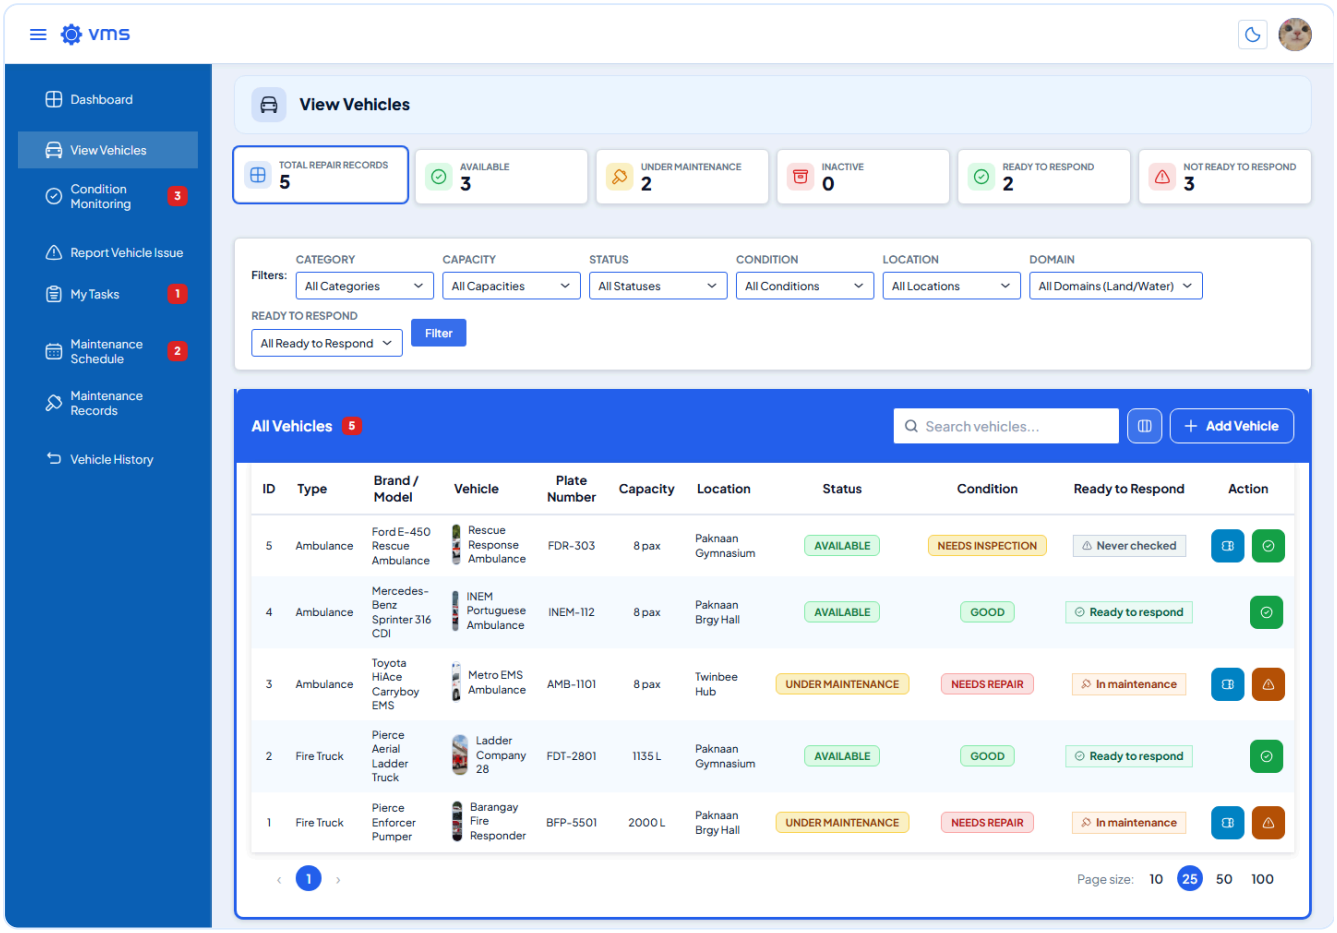

20. Troubleshooting — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 21

Frequently asked questions

These answers describe the current application, including limits that prevent mistaken approvals or unsafe readiness claims.

Procedure


1. Who creates a repair ticket? A Custodian proposes it, or a due schedule generates a proposal. Admin reviews and assigns; Maintenance Personnel do not create tickets.
2. Can a mechanic verify their own repair? No. An independent assigned Custodian must personally test and verify it, even for multi-role accounts.
3. Why is a vehicle Available but not ready? Availability, physical condition, and readiness are different. A passed readiness check becomes stale after 24 hours.
4. Does VMS track vehicles live? Vehicle Location records stations/hubs and location history; it is not a live GPS tracker.
5. Where is password reset? There is no public self-service reset in the current UI. Ask your barangay Admin. An unreachable first-Admin account can be raised with platform support.

> **Remember**
>
> An absent menu is not an invitation to use an undocumented endpoint. Ask for the appropriate role or the current approved workflow.

VMS • 21

Frequently asked questions

Actual VMS screen • Local seeded demonstration data

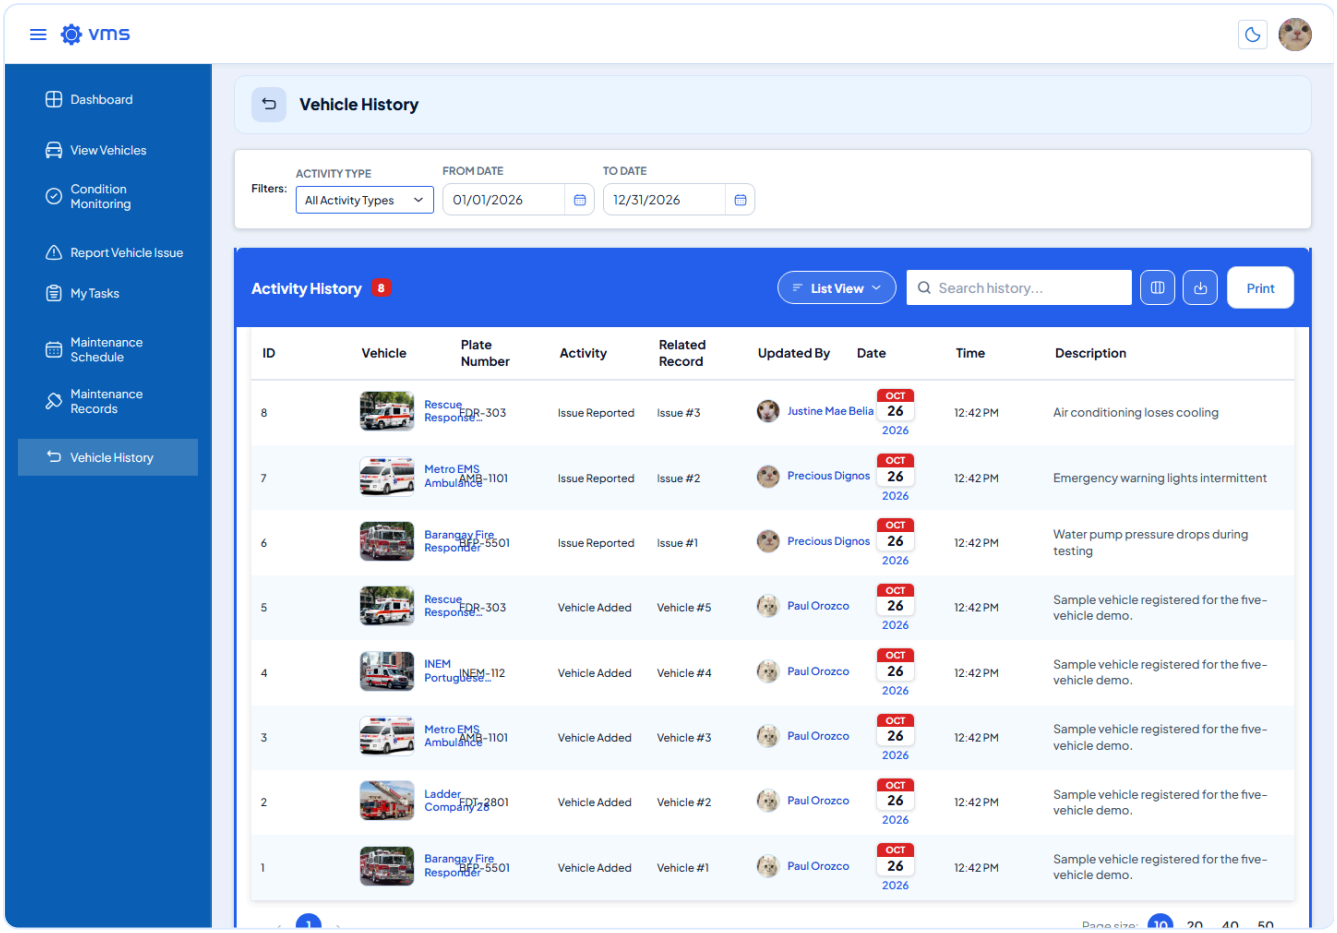

21. Frequently asked questions — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 22

Glossary

English interface terms are retained so you can match the guide to the application.


Procedure

1. Fleet / Vehicle Type: the barangay’s vehicles / the classification and Land or Water domain used for a vehicle.
2. Condition / Readiness: physical state / current evidence that a Custodian personally checked and operated an eligible vehicle.
3. Proposal / Ticket / Work item: request awaiting review / approved repair workflow record / one specific repair within the ticket.
4. For Verification / Rework: submitted for independent testing / work returned after a failed verification.
5. Hub / Ledger / Archive: recorded vehicle station / completed maintenance records / historical records. Hidden is a separate personal list preference.
6. Cannibalized / External: a repair using parts from a donor vehicle / work performed by an outside shop. Both require accurate records and independent verification.

VMS • 22

Glossary

Actual VMS screen • Local seeded demonstration data

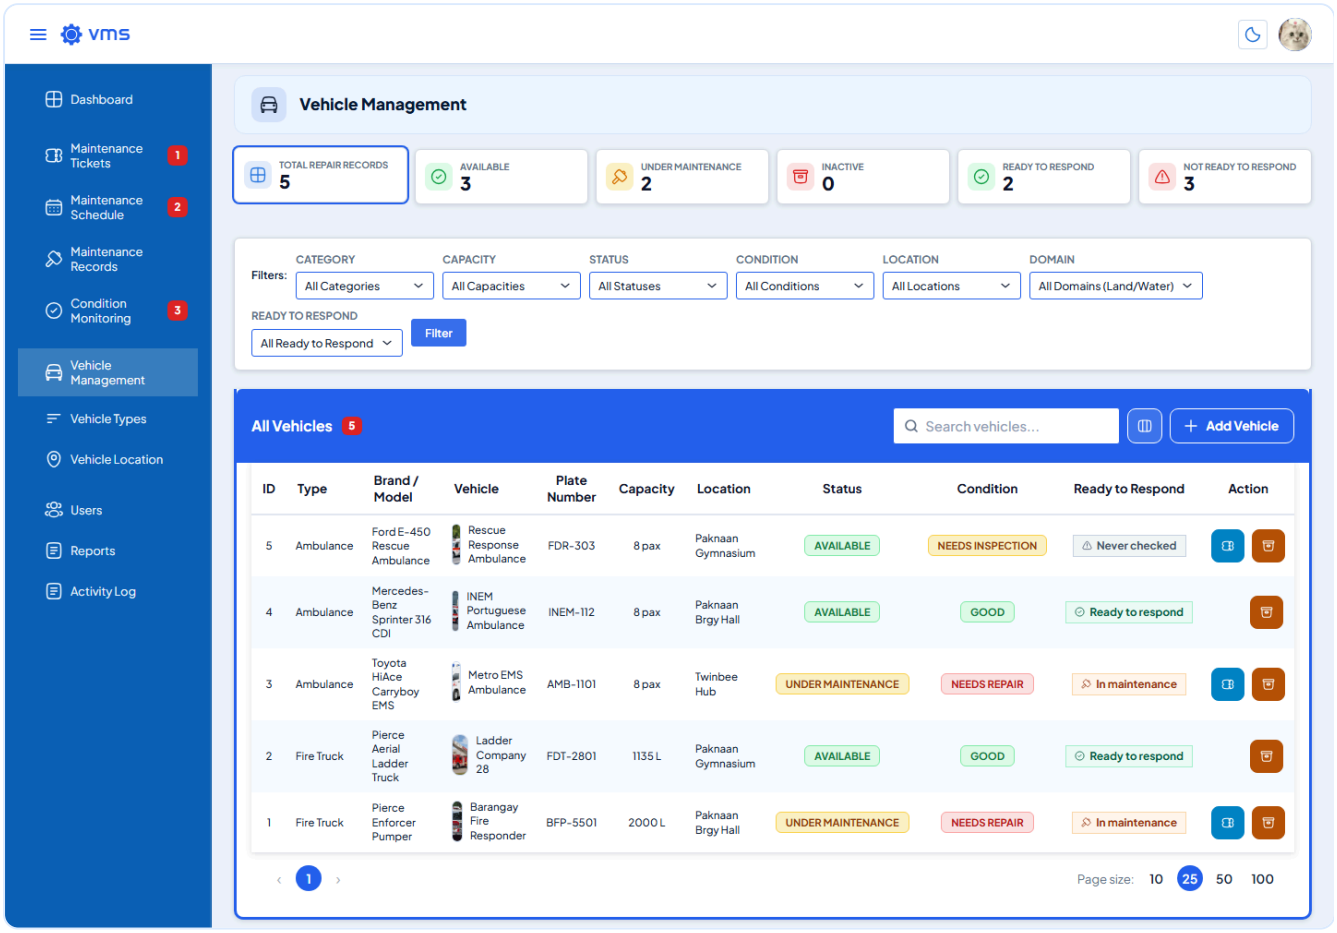

22. Glossary — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑

VMS • 23

Role-based quick reference

Keep this page nearby for routine handoffs. Controls also depend on record status, ownership, and assignment; multiple roles do not remove independence requirements.

Role	Quick reference
Administrator	manage staff and fleet; review ticket proposals; assign mechanics; approve schedules; handle external dispatch/return; generate Reports and view Activity Log.
Custodian	register vehicles; record condition and readiness; report issues; propose and correct tickets; book schedules; verify assigned repairs independently; view Vehicle History.
Maintenance Personnel	view vehicles; open My Work Orders; perform assigned repairs; record parts, cost, and evidence; submit completed work; correct rejected work; complete assigned service where the current workflow permits.


All users: protect account access; stay within your barangay and assignment; preserve evidence; read confirmation messages; sign out on shared devices.

> **Remember**
>
> Need help? Contact your barangay Administrator for account and work assignments. Use Support Center for platform account concerns. Do not include passwords or registration codes.

VMS • 23

Role-based quick reference

Actual VMS screen • Local seeded demonstration data

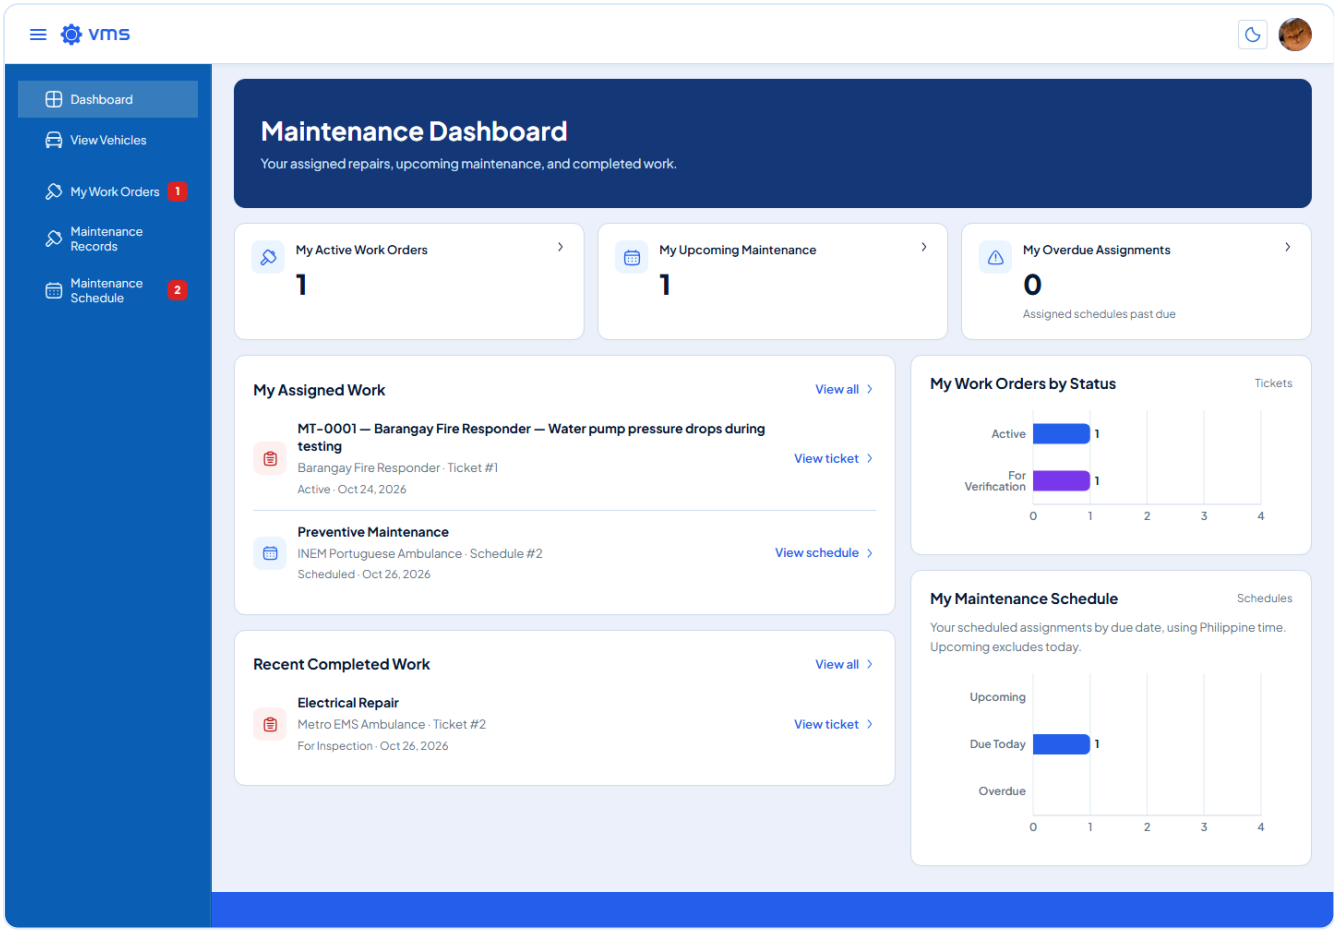

23. Role-based quick reference — Actual VMS screen • Local seeded demonstration data. English labels on the screen match the controls named in the procedure. Example records and totals may differ from your barangay.

Procedure ↑