
TAFE 7502 / TAFE8502
ENGINE


PARTS LIST

CYLINDER BLOCK

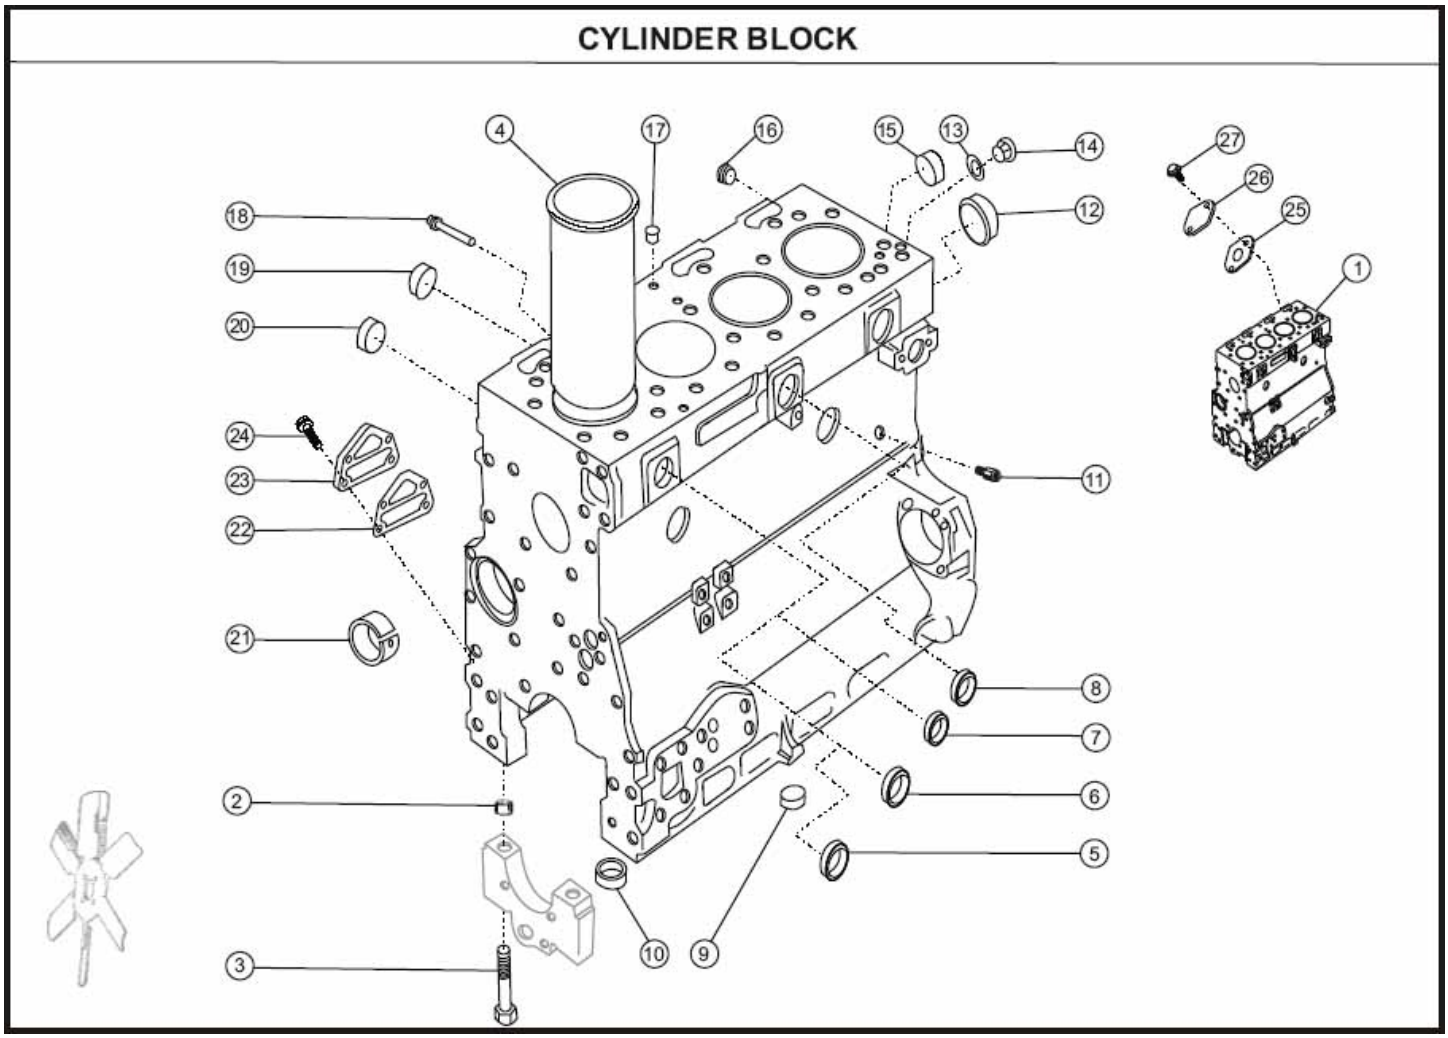


Sl No	Part No.	Description	Qty
CYLINDER BLOCK			
1	99DE0874	Cylinder Block	1
2	33142111	Thimble Main	10
3	32166329	Setscrew Cylinder	10
4	3135X041	Liner Cylinder	4
5	32418122	Plug Water Jacket	1
6	650710	Plug Cylinder	5
7	650713	Plug Water Rail	1
8	650710	Plug Cylinder	1
9	32416118	Plug	3
10	650588	Plug	1
11	32161114	Drain Plug	1
12	32416119	Plug Camshaft	1
13	3311R003	Washer Sealing	1
14	32168212	Plug Pressure Rail	1
15	32418122	Plug Water Jacket	2
16	650588	Plug	1
17	32417134	Plug Venturi /	1
18	2485A204	Plug	1
19	32418122	Plug Water Jacket	2
20	32418122	Plug Water Jacket	4
21	31134165	Bush Cylinder	1
22	36832144	Joint Cylinder	1
23	36171131	Plate Turbocharger	1
24	2314J033	Screw	4
25	36351123	Joint Cylinder	1
26	94DE0054	Plate Feed Pump	1
27	74DE0207	Screw	2

CRANK SHAFT

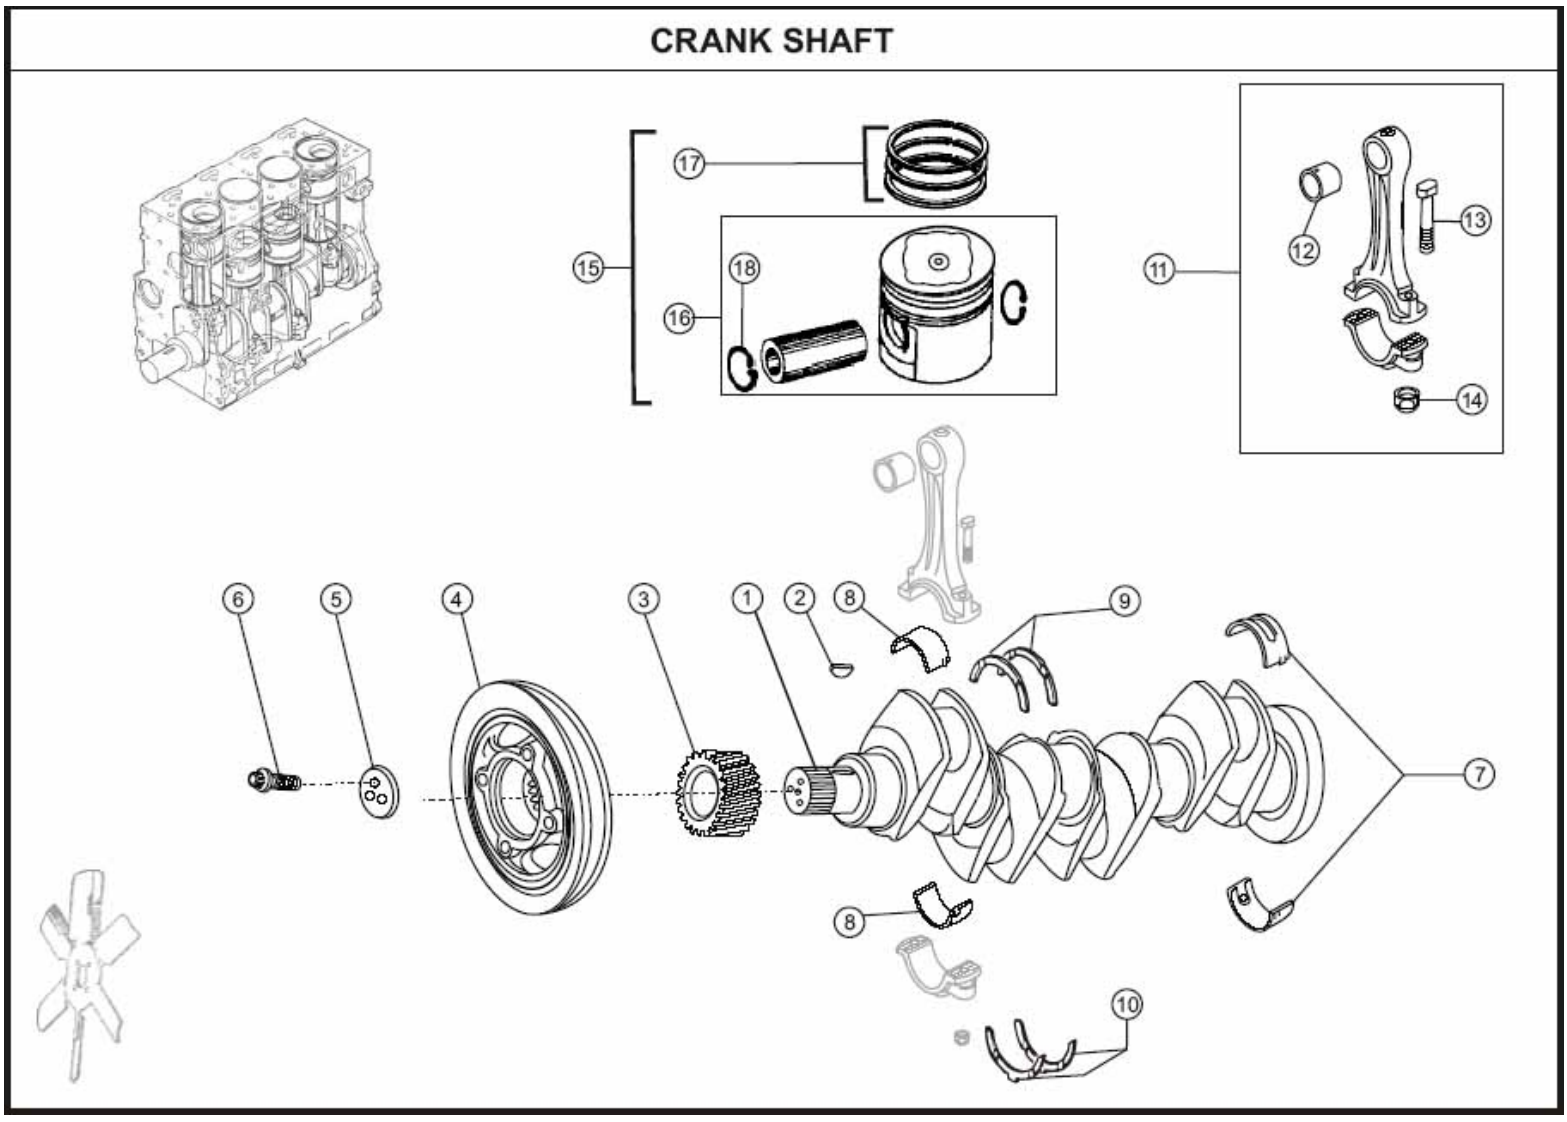


Sl No	Part No.	Description	Qty
CRANK SHAFT			
1	31315995	Crankshaft	1
2	00500012	Key Crankshaft	1
3	41DE0028	Gear Crankshaft	1
4	3114V014	Pulley Crankshaft	1
5	3241N001	Thrust Block	1
6	32186137	Screw Thrust Block	1
7	00081558	Bearings,	1
7A	0081558A	Bearings,	1
7B	0081558B	Bearings,	1
7C	0081558C	Bearings,	1
8	00085042	Bearing	1
8A	0085042A	Bearing,	1
8B	0085042B	Bearing,	1
8C	0085042C	Bearing,	1
9	31137311	Washer Main	2
9A	31137312	Washer Main	2
10	31137321	Washer Main	2
10A	31137322	Washer Main	2
11	41152912	Connecting Rod	4
12	31134123	Bush Connecting	1
13	32762144	Bolt, Connecting	2
14	33221328	Nut Connecting Rod	2
15	99DE1276	Piston Assembly	4
16	99DE0933	Piston Assy	4
17	99DE0934	Piston Rings	4
18	00170002	Circlip, Gudgeon	2

BALANCER AND LUB OIL PUMP

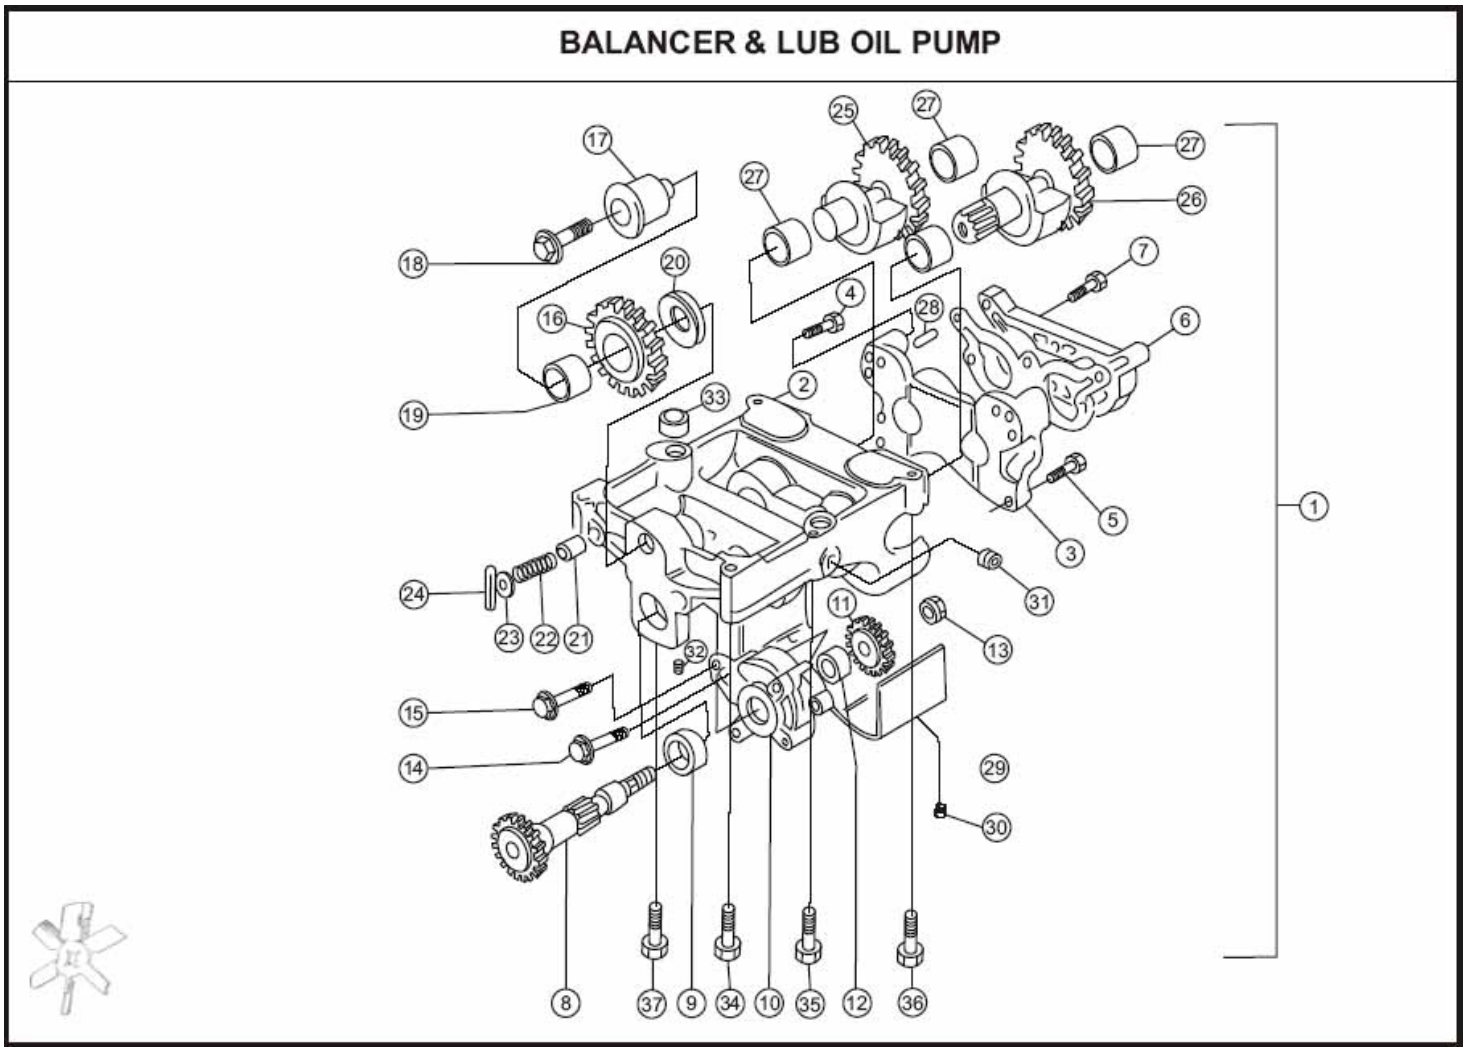


Sl No	Part No.	Description	Qty
BALANCER AND LUB OIL PUMP			
1	4111K064	Balancer Assembly	1
2	4145L007	Frame Balance	1
3	3753R042	Cover	1
4	2314J010	Screw	2
5	2314J005	Screw	2
6	3753R221	Cover	1
7	2315C052	Screw	4
8	3117V003	Shaft	1
9	2551A009	Needle Bearing	1
10	4132F041	Oil Pump	1
11	3116W001	Gear Balancer	1
12	2551A014	Bearing Lub Drive	1
13	33531136	Nut	1
14	2314H012	Screw	2
15	2314H006	Screw	1
16	3117C071	Gear Balancer	1
17	33451804	Hub	1
18	2314J666	Screw	1
19	2551A201	Bearing Needle	1
20	3321A002	Washer	1
21	3272E005	Plunger	1
22	3174D004	Spring	1
23	3342A611	Cap	1
24	3116K004	Weight Balance	1
25	3116K014	Weight Balance	1
26	2511A730	Bush	4
27	350042	Dowel	2
28	3661K001	Cover	1
29	2314C034	Screw	4
30	650586	Plug	1
31	33558314	Plug	1

BALANCER AND LUB OIL PUMP

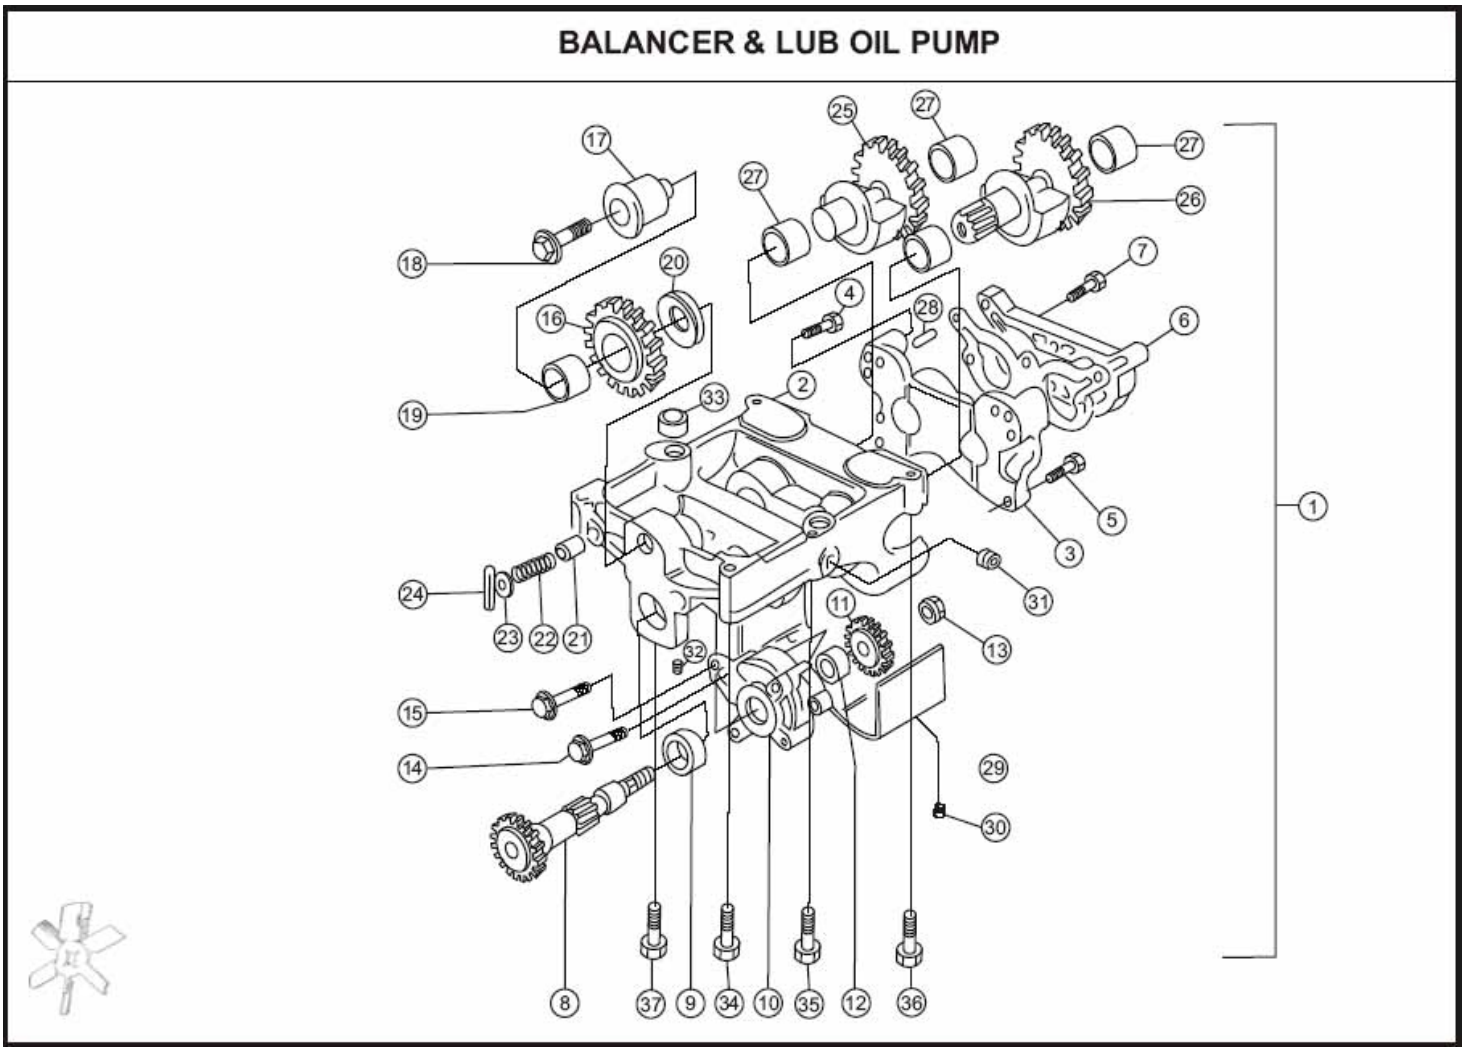


Sl No	Part No.	Description	Qty
BALANCER AND LUB OIL PUMP			
32	33137409	Thimble	2
33	2314J013	Screw	2
34	2314J013	Screw	1
35	2314J015	Screw	2
36	2314J011	Screw	1

TIMING GEAR AND CAM SHAFT

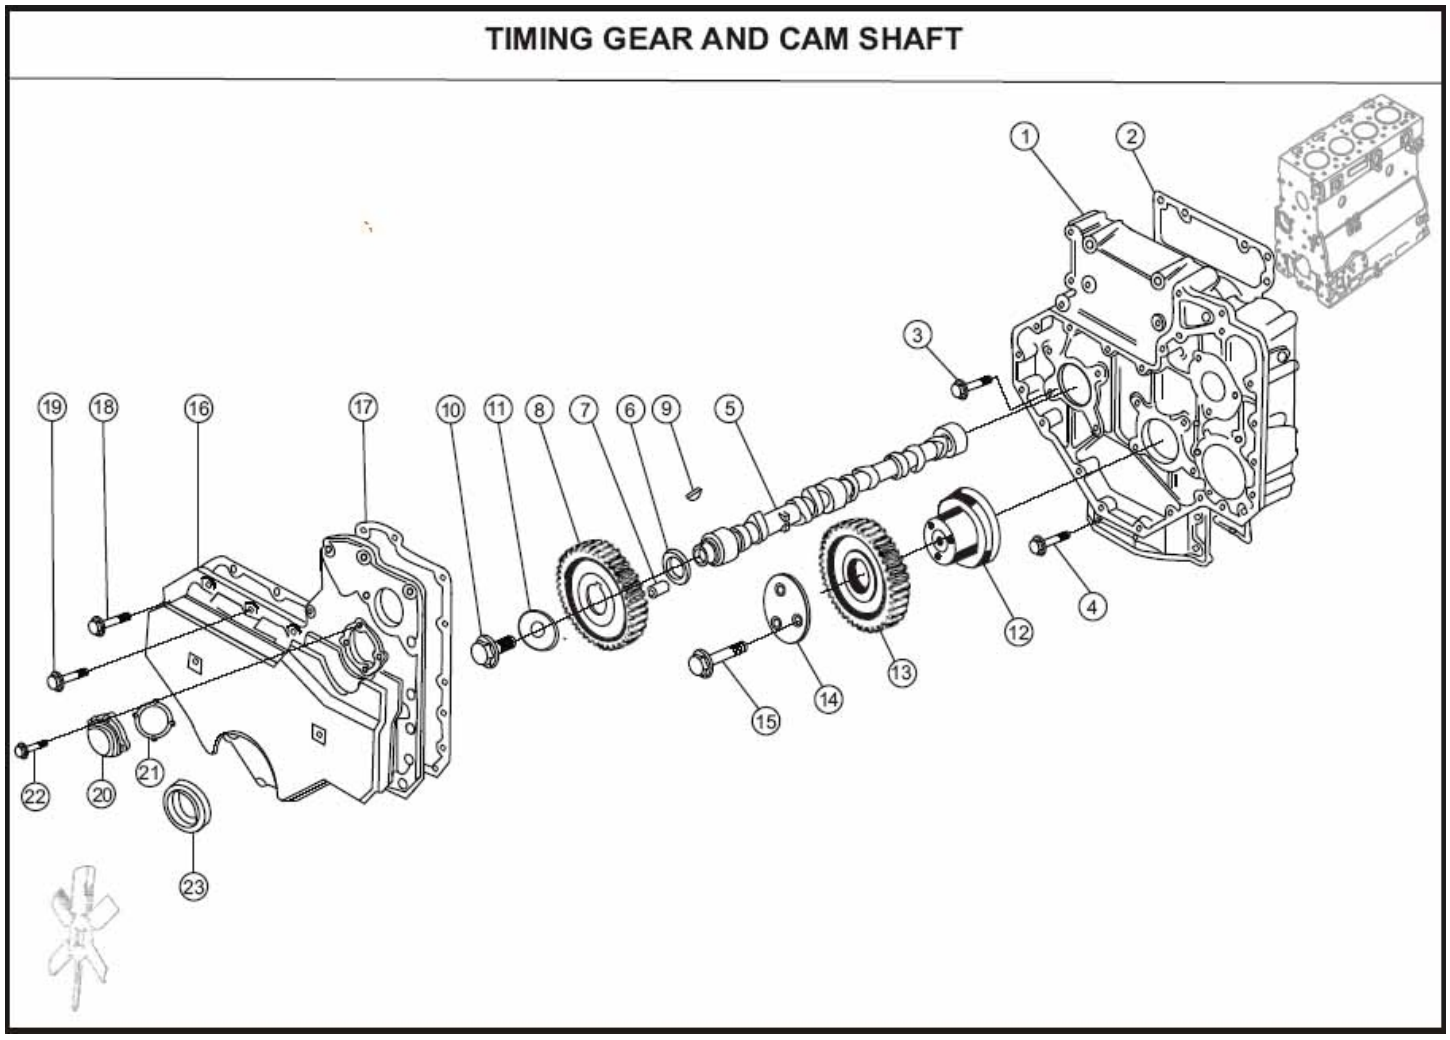


Sl No	Part No.	Description	Qty
TIMING GEAR AND CAM SHAFT			
1	44DE0131	Timing Case	1
2	36814158	Joint Cylinder	1
3	2314H003	Screw	7
4	2314H033	Screw	2
5	31415363	Camshaft	1
6	33153135	Plate Camshaft	1
7	2116053	Pin Camshaft	1
8	41DE0030	Gear Camshaft	1
9	500012	Key Crankshaft /	1
10	2314J606	Screw Camshaft	1
11	3321A003	Washer Camshaft	1
12	33426161	Hub Idler Gear	1
13	99DE0823	Gear Idler	1
14	3241H009	Plate Idler Gear	1
15	2314J010	Screw Idler Gear	3
16	99DE0973	Timing Case Cover	1
17	36813155	Joint Front Cover	1
18	2314K161	Screw Inspection	4
19	2314H033	Screw	14
20	3271W003	Cover Timing Case	1
21	33825427	Joint Timing Case	1
22	2314H032	Screw	4
23	73DE0015	Seal Timing Case	1

LUBRICATING OIL SUMP

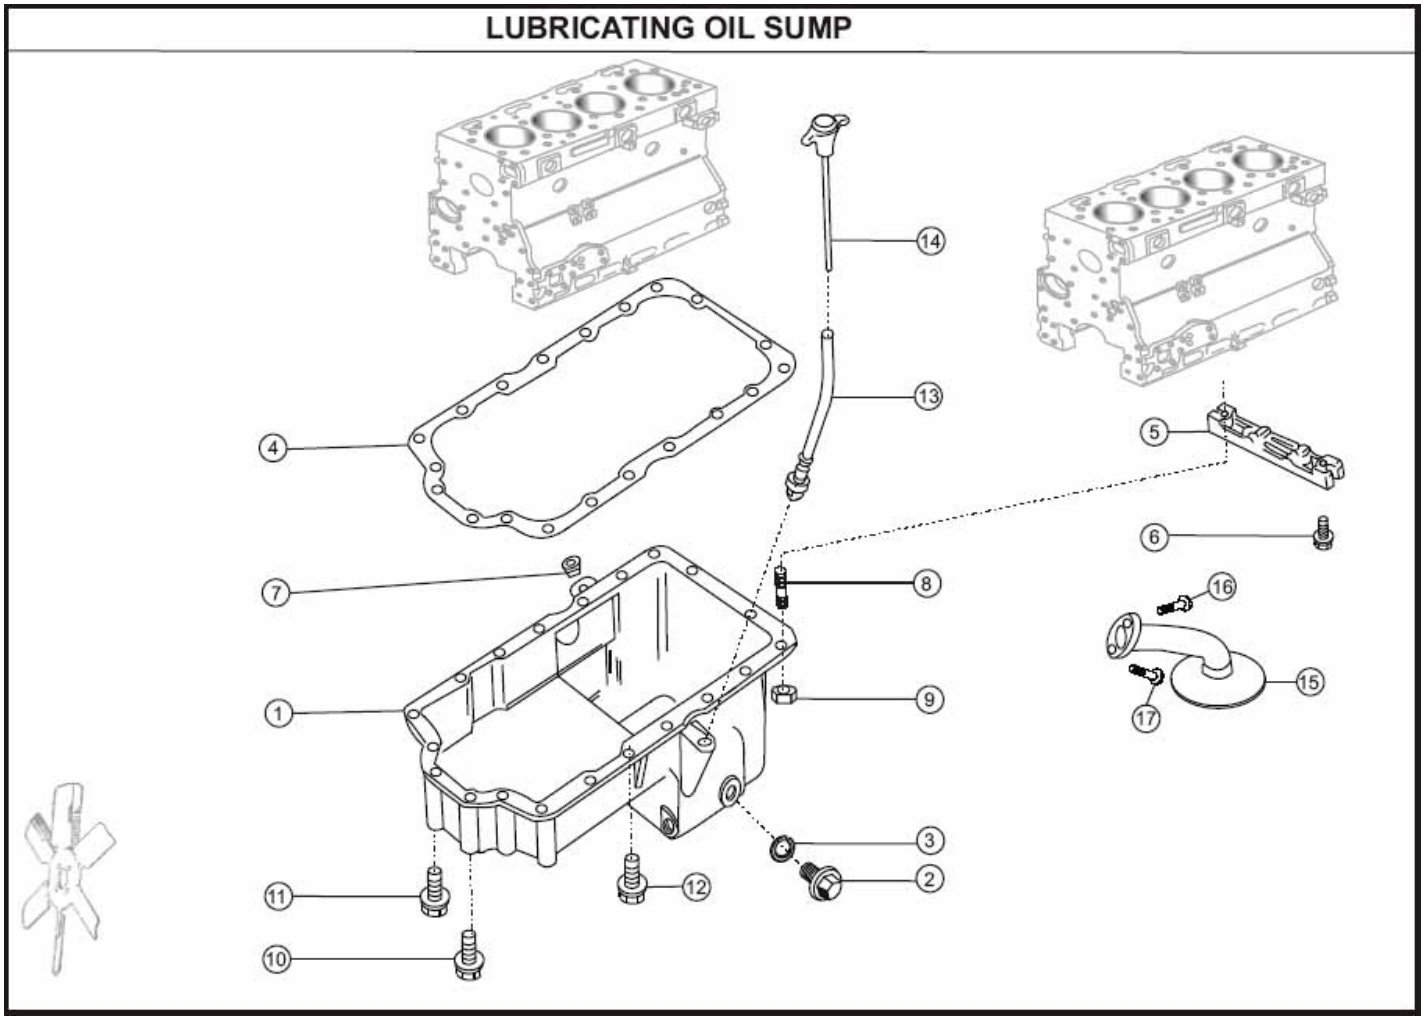


Sl No	Part No.	Description	Qty
LUBRICATING OIL SUMP			
1	3717J051	Sump Lubricating	1
2	32186405	Plug Lub Oil Sump	1
3	2415715	‘O’ Ring Sump	1
4	36815726	Joint Lubricating	1
5	3627P023	Bridge Piece	1
6	2311D039	Screw Bridge Piece	2
7	2431A016	Plug Lub Oil Sump	1
8	3254H004	Stud	2
9	2318A603	Nut	2
10	2314H023	Screw	5
11	2314H022	Screw	1
12	2314H015	Screw	11
13	99DE0815	Tube Dipstick	1
14	32S30026	Dipstick	1
15	4.13E+40	Pipe Lub Oil	1
16	2314H012	Screw	1
17	2314H006	Screw	1

CYLINDER HEAD

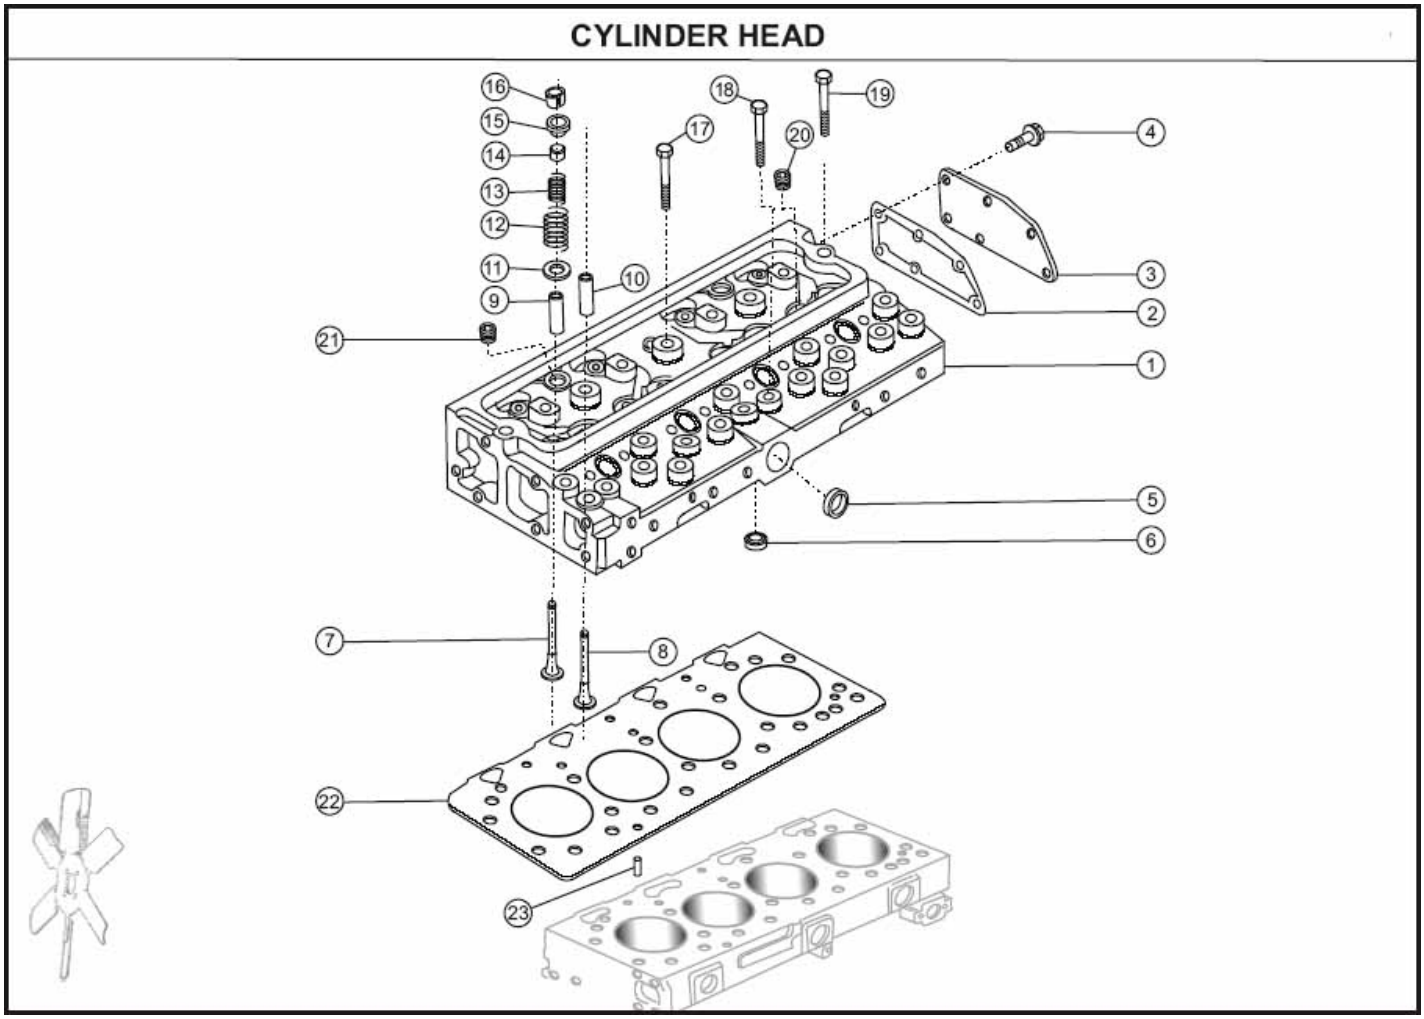


Sl No	Part No.	Description	Qty
CYLINDER HEAD			
NI	99DE0891	Cylinder Head(Major)	1
NI	99DE0892	Cylinder Head(Minor)	1
1	3712H073	Cylinder Head	1
2	3385R005	Joint cylinder	1
3	3623K007	Plate cylinder	1
4	2314H002	Setscrew Cylinder	3
5	650710	Plug	1
6	32417121	Plug cylinder head	4
7	91DE0005	Valve Inlet	4
8	91DE0007	Valve Exhaust	4
9	3343F041	Guide Inlet Valve	4
10	3343J002	Guide Exhaust	4
11	33415118	Locating Washer	8
12	31745122	Spring Inlet And	8
13	31744133	Spring Inlet And	8
14	33817117	Seal Valve Stem	8
15	33424107	Cap Valve Spring	8
16	33173108	Cotter Valve	8
17	32166221	Screw Cylinder	12
18	32166219	Screw Cylinder	8
19	32166222	Screw Cylinder	2
20	650586	Plug	2
21	650588	Plug	2
22	3681E'037	Gasket Cylinder	1
23	2114A046	Dowel Cylinder	2

ROCKER SHAFT ASSEMBLY

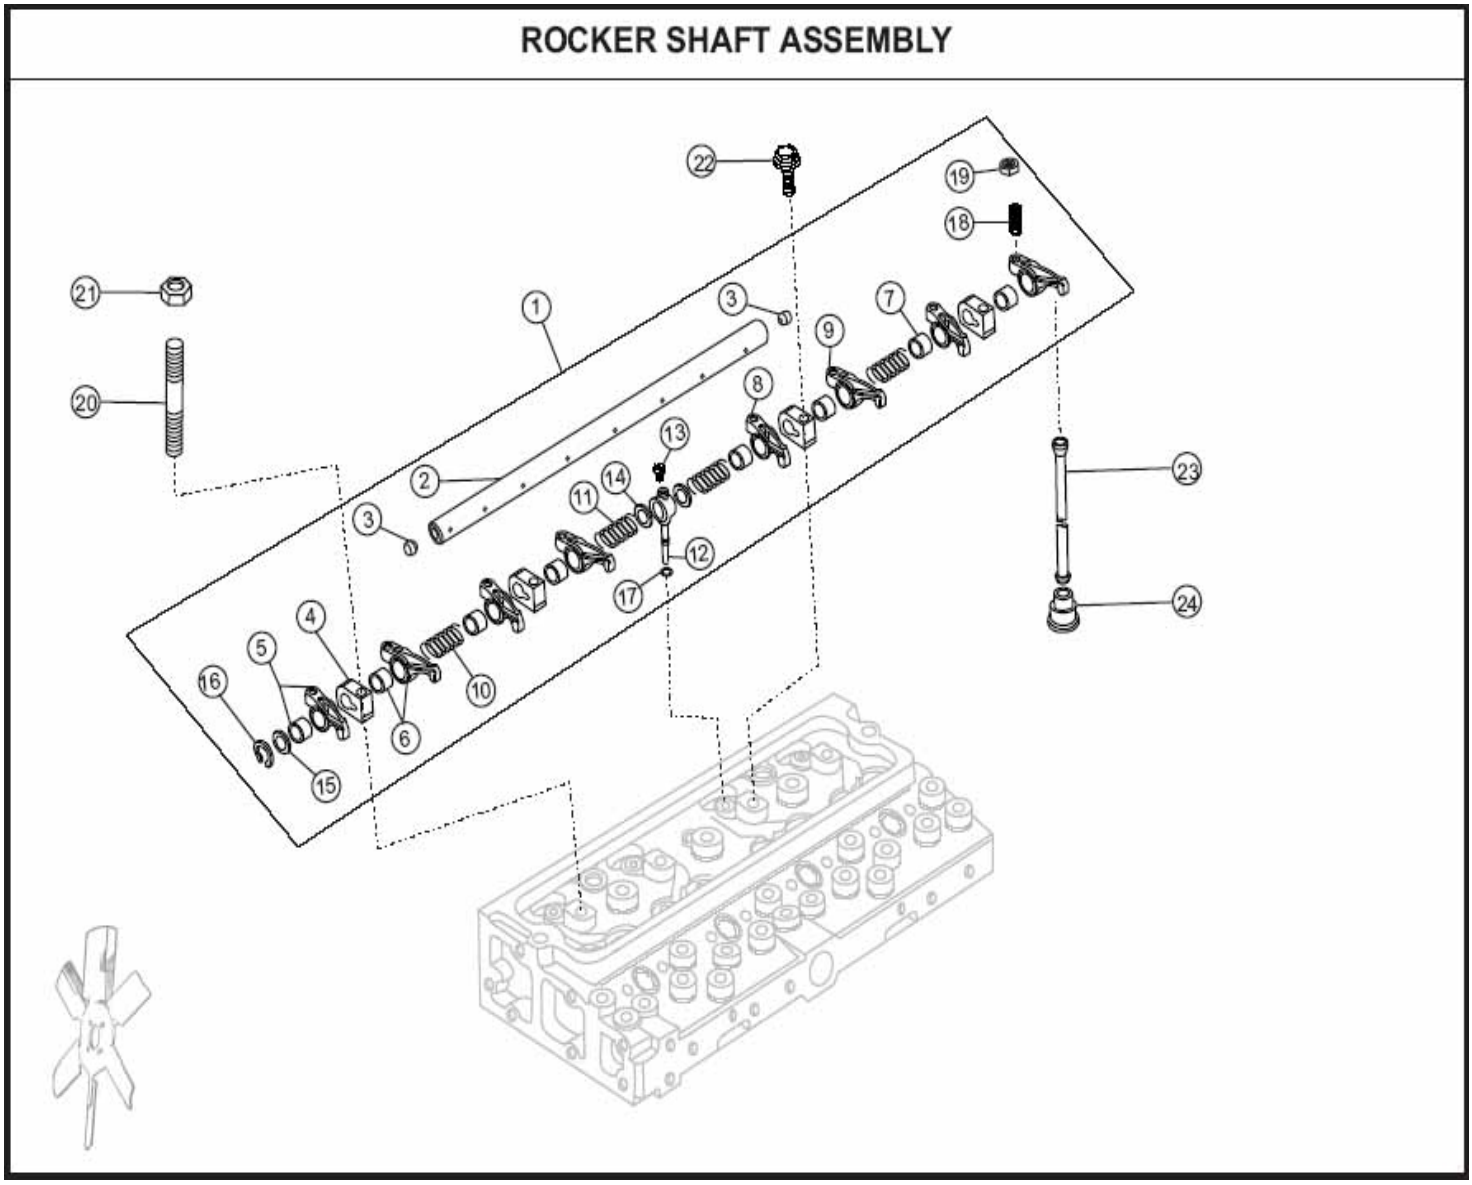

Sl No	Part No.	Description	Qty
ROCKER SHAFT ASSEMBLY			
1	99DE0889	Rocker Shaft	1
2	31411124	Shaft Rocker	1
3	00650507	Plug Rocker Shaft	2
4	10DE0519	Bracket Rocker	4
5	41151481	Lever Rocker L.H	4
6	41151482	Lever Rocker R.H	4
7	2511425	Bush Rocker Lever	8
8	37371504	Lever Rocker L.H	4
9	37371494	Lever Rocker R.H	4
10	31744123	Spring	2
11	31743108	Spring	2
12	3775E’012	Connection	1
13	02233022	Screw Rocker Shaft	1
14	33117426	Washer	2
15	33117434	Washer	2
16	00170151	Circlip	2
17	33811113	Olive (Seal)	1
18	00720579	Tappet Adjusting	8
19	00576052	Nut Tappet	8
20	2313H331	Stud Cylinder Head	3
21	57DE0081	Nut Rocker Shaft	3
22	2314J607	Screw Rocker Shaft	1
23	31434307	Push Rod	8
24	3142U031	Tappet	8


CYLINDER HEAD COVER

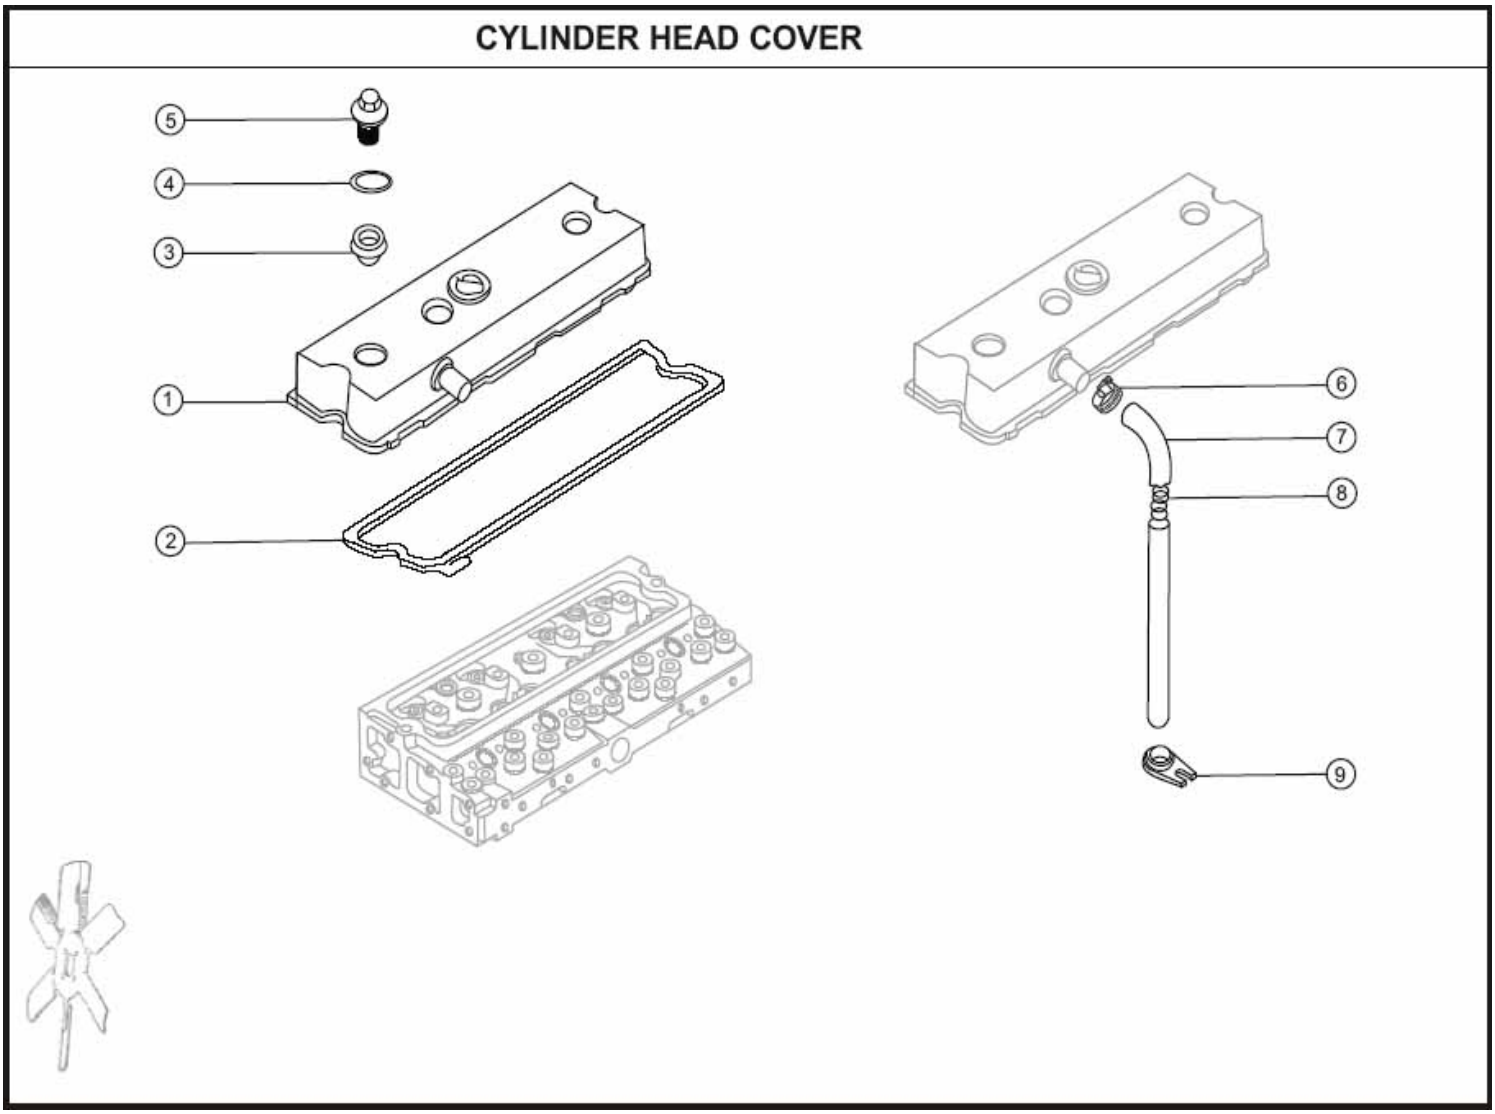

Sl No	Part No.	Description	Qty
CYLINDER HEAD COVER			
1	99DE0833	Cover Cylinder	1
2	3681A021	Joint Cylinder	1
3	33817135	Seal Cylinder Head	3
4	920009	Washer Plain	3
5	3274P003	Nut Cylinder Head	3
6	2481877	Clip Hose	1
7	33872532	Hose Cylinder Head	1
8	31754119	Coil Spring	1
9	36241123	Bracket Extension	1


FLYWHEEL HOUSING

FLYWHEEL AND HOUSING

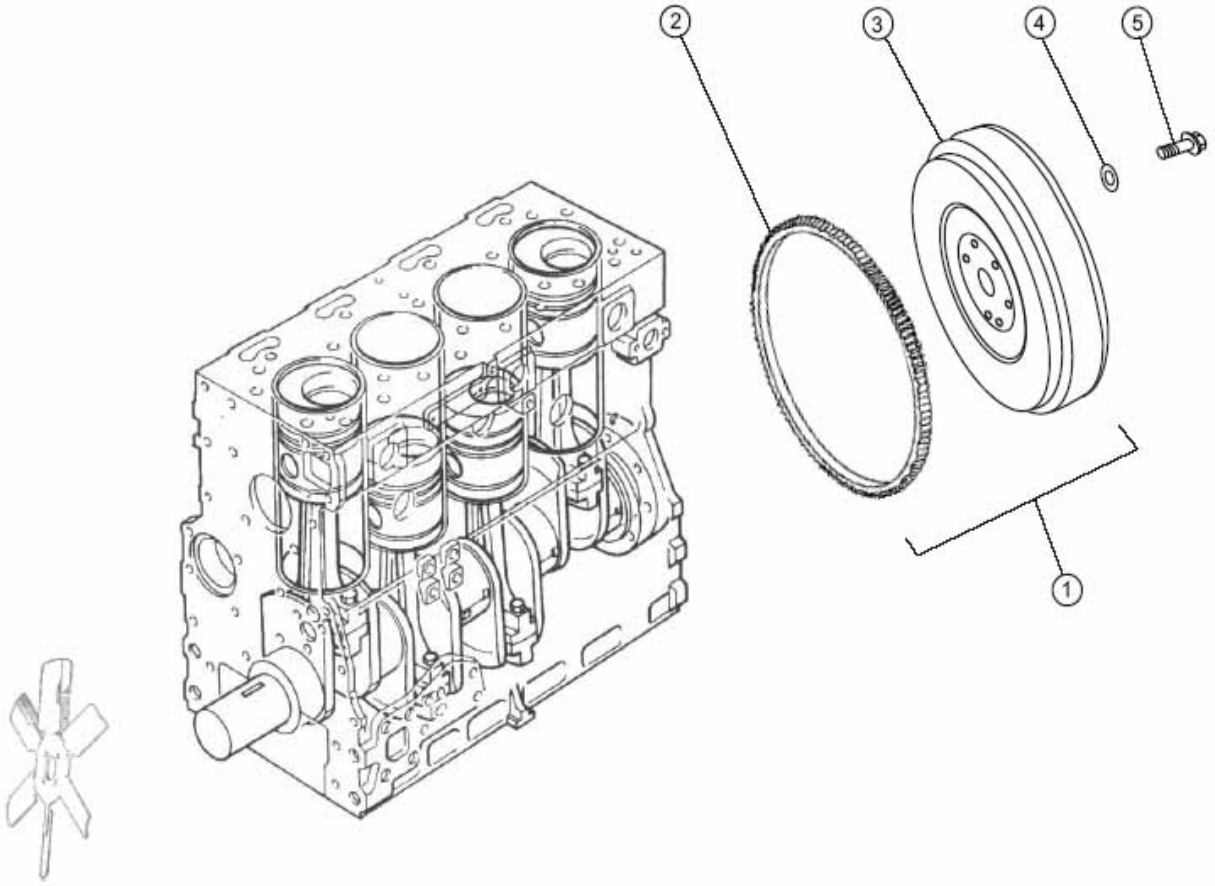


Sl No	Part No.	Description	Qty
FLYWHEEL HOUSING			
1	99DE0910	Flywheel And	1
2	410236	Ring Starter	1
3	40DE0194	Flywheel	1
4	33117127	Washer	6
5	2182122	Screw	6

WATER PUMP ASSEMBLY

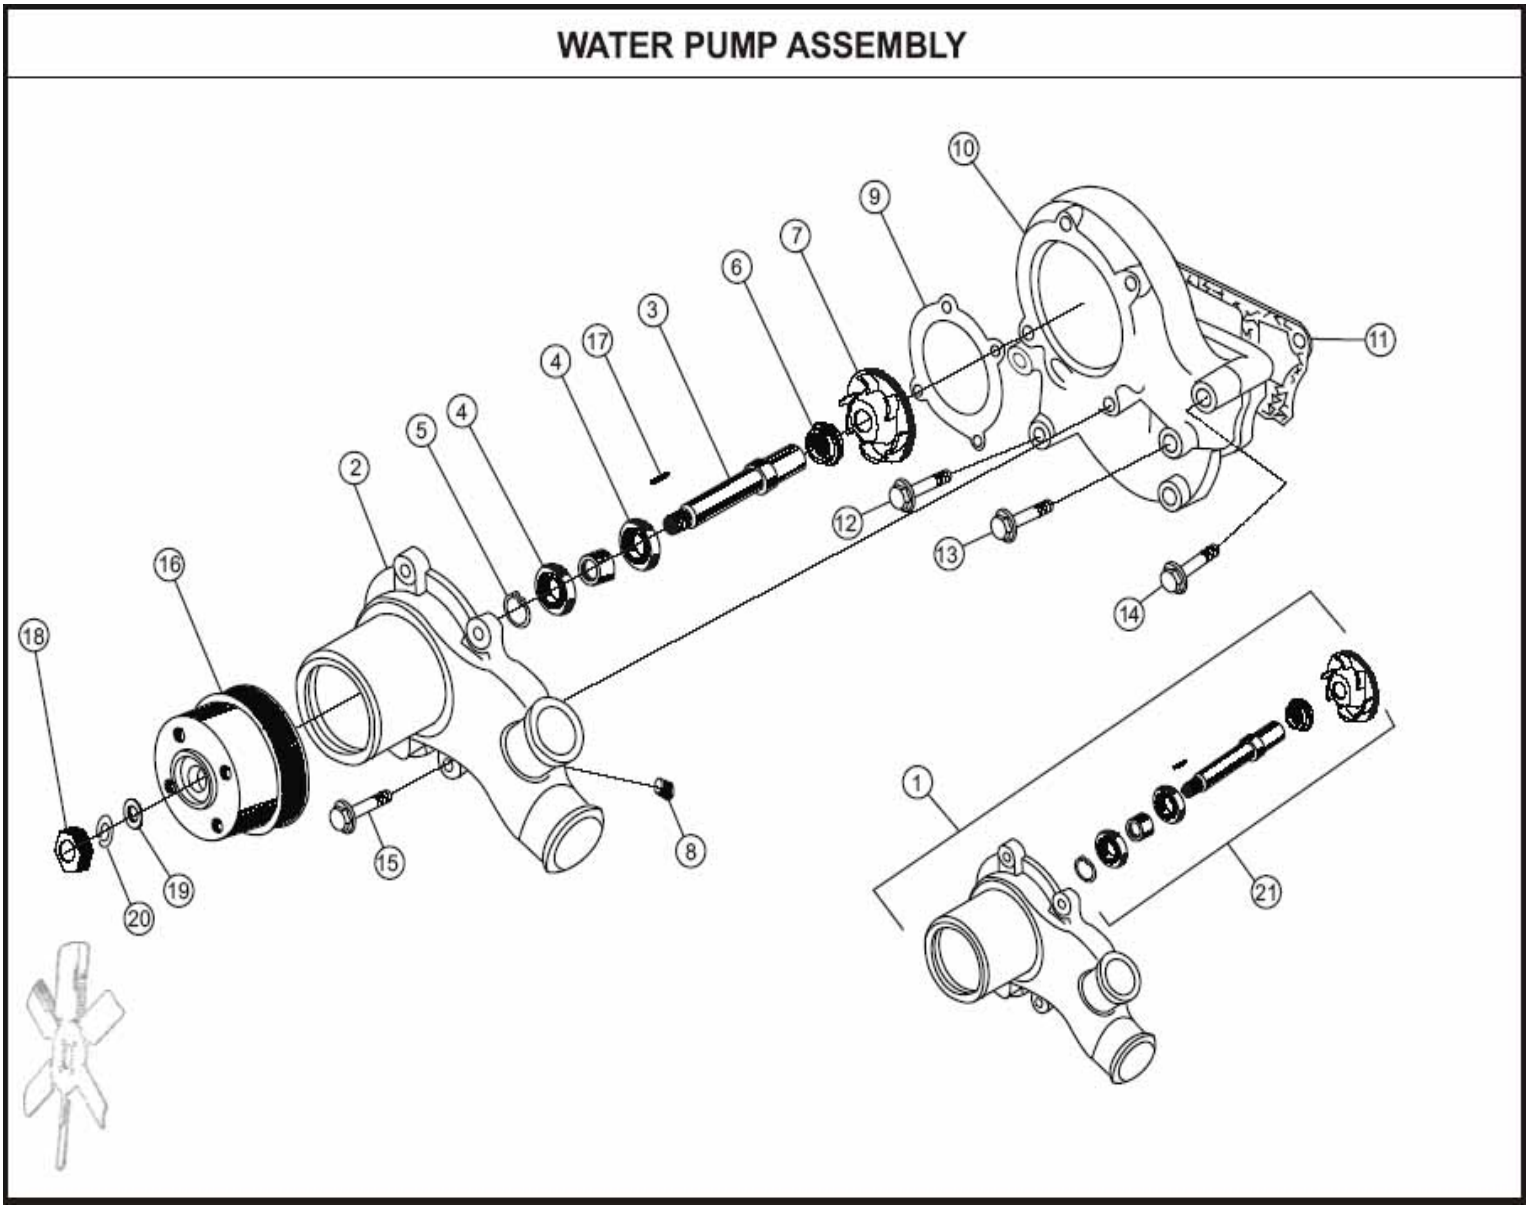


Sl No	Part No.	Description	Qty
WATER PUMP ASSEMBLY			
1	4131A035	Water Pump	1
2	3771F012	Body Water Pump	1
3	3276P015	Shaft	1
4	2521E405	Bearing	2
5	2721915	Circlip	1
6	2418M006	Seal Water Pump	1
7	3746X034	Impeller Water	1
8	2431154	Plug	1
9	3687H013	Joint	1
10	3771A072	Body	1
11	3687Y007	Joint	1
12	2314H006	Screw	1
13	2314K159	Screw	1
14	2314J006	Screw	3
15	2314H034	Screw	4
16	67DE0076	Pulley	1
17	500006	Key	1
18	576007	Nut	1
19	920009	Washer Plain	1
20	920058	Washer Spring	1
21	U5MW0106	Kit W/Pump	1

FUEL INJECTION PUMP

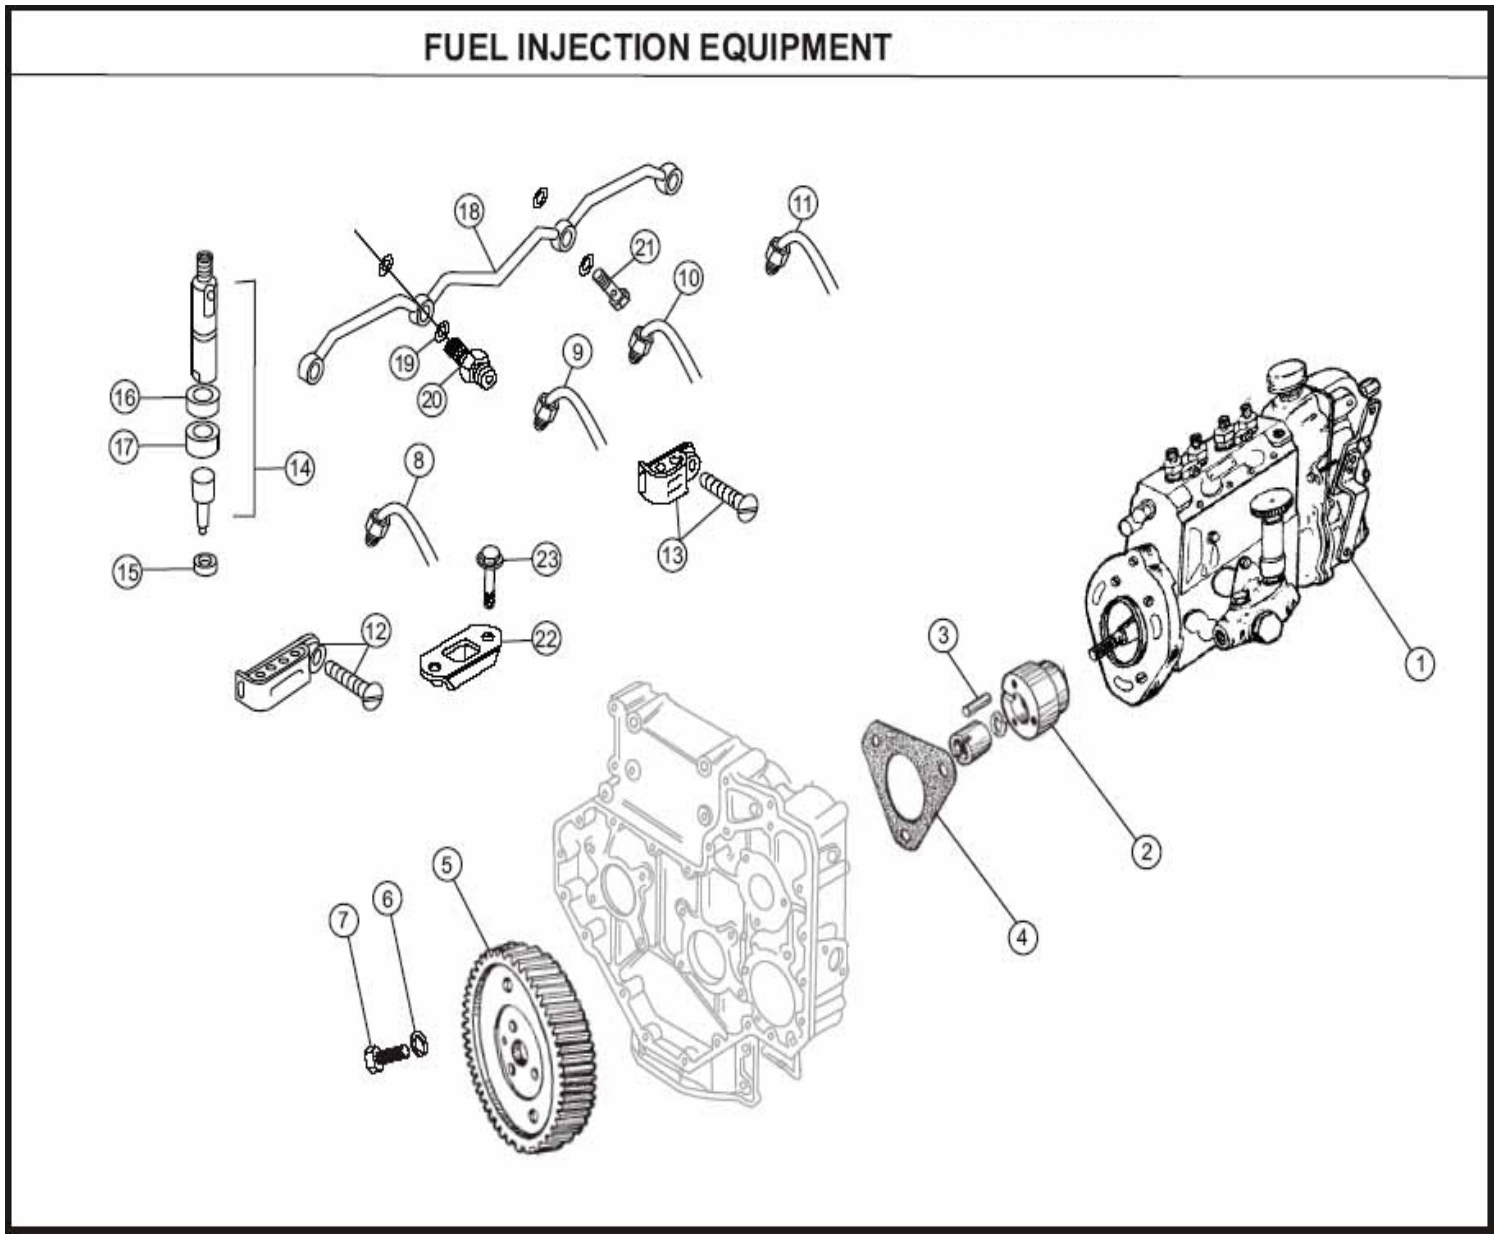

Sl No	Part No.	Description	Qty
FUEL INJECTION PUMP			
1	DE005601	Fuel Injection Equipment	1 for 7502
1	DE005600	Fuel Injection Equipment	1 for 8502
2	S4003804	Adaptor Fuel pump	1
3	2116078	Dowel Drive Gear	1
4	S4004921	Joint Fuel Pump	1
5	41DE0042	Gear Fuel Pump	1
6	00920053	Washer Spring	3
7	S4007403	Setscrew	3
8	99DE0987	Pipe Fuel Pump	1
9	99DE0988	Pipe Fuel Pump	1
10	99DE0989	Pipe Fuel Pump	1
11	99DE0990	Pipe Fuel Pump	1
12	18DE0071	Clip Assembly	1
13	18DE0078	Clip Assembly	1
14	DE005587	Atomiser Assembly	4
15	00921173	Washer	4
16	33813129	Distance Piece	4
17	33813131	Seal Atomiser	4
18	99DE1016	Pipe Fuel Oil	1
19	00921176	Washer	8
20	00095315	Bolt Main Leak Off	9
21	20DE0288	Union	1
22	DE05587A	Clamp Atomiser	4
23	2314H006	Screw	8
24	10DE0520	Bracket F.I.P	1
25	10DE0521	Bracket F.I.P	1


FUEL INJECTION PUMP

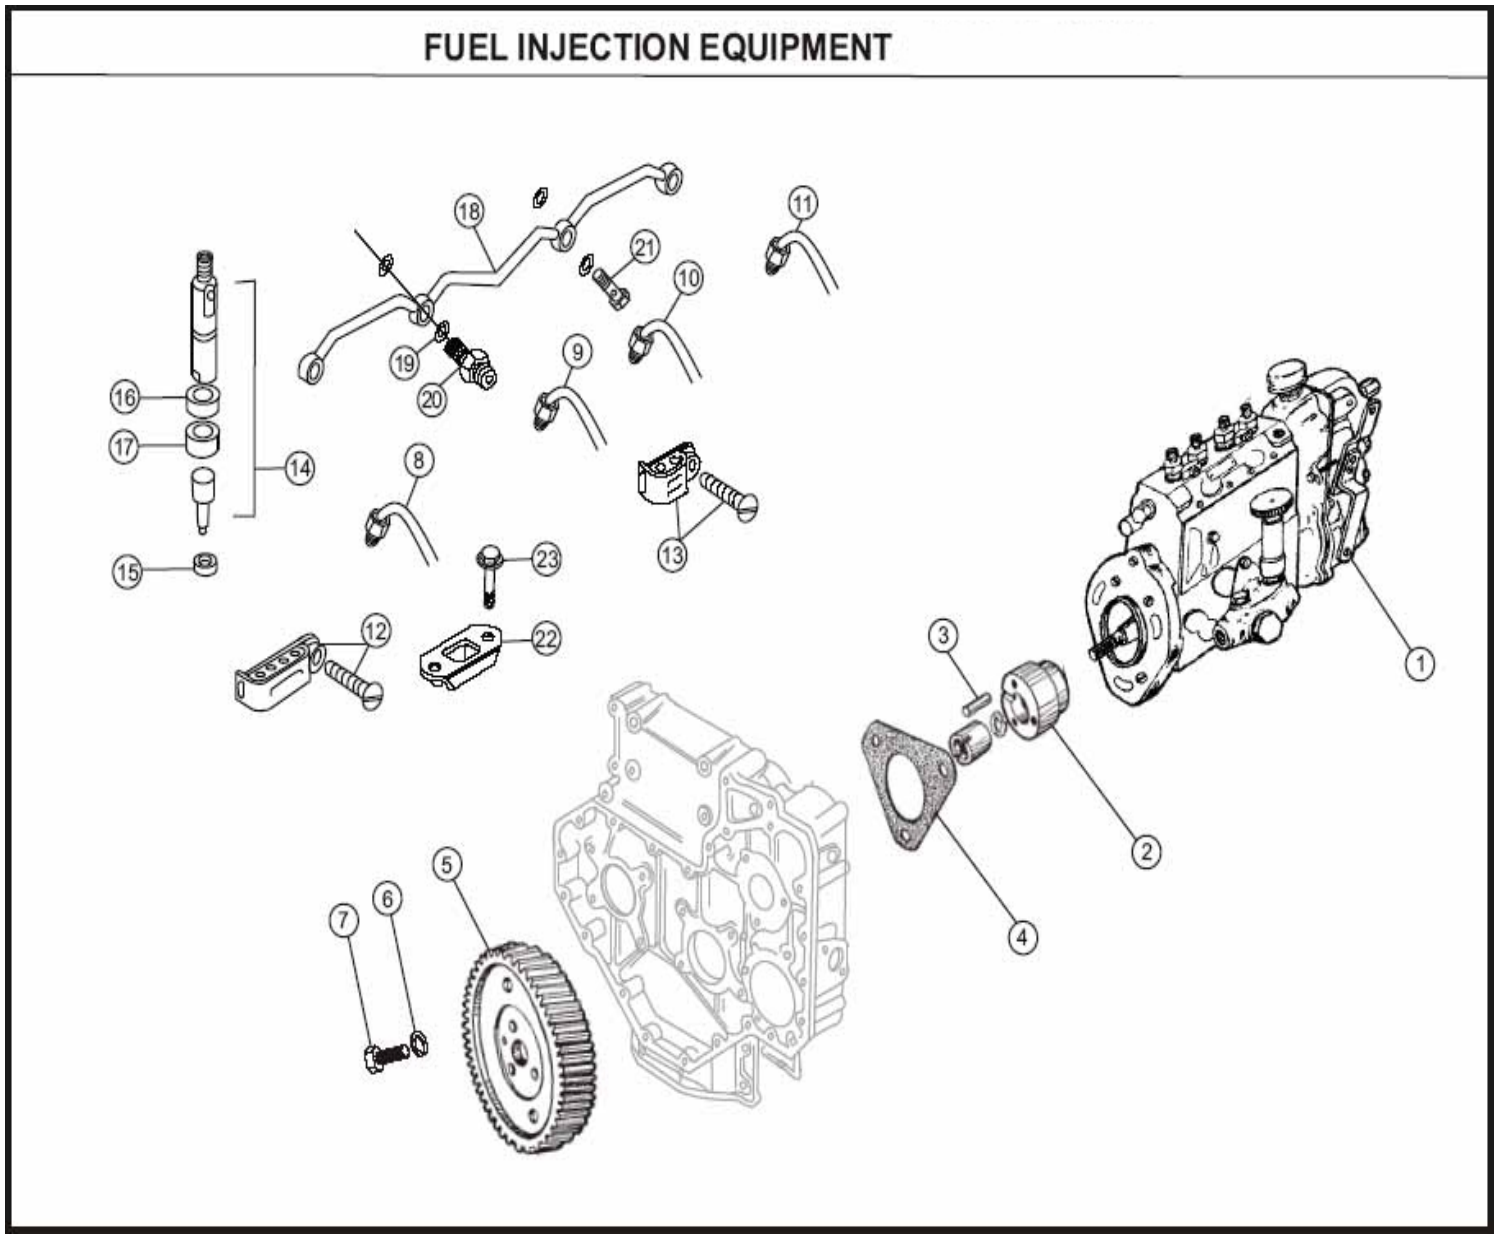

Sl No	Part No.	Description	Qty
FUEL INJECTION PUMP			
26	2314J002	Screw	2
27	2314J004	Screw	1
28	2314H006	Setscrew Bracket	1
29	57DE0080	Nut	1
30	20DE0306	Connection Block	1
31	09DE0006	Bolt Banjo	1
32	92DE0009	Washer	2

LUBRICATING OIL FILTER


LUBRICATING OIL FILTER AND COOLER

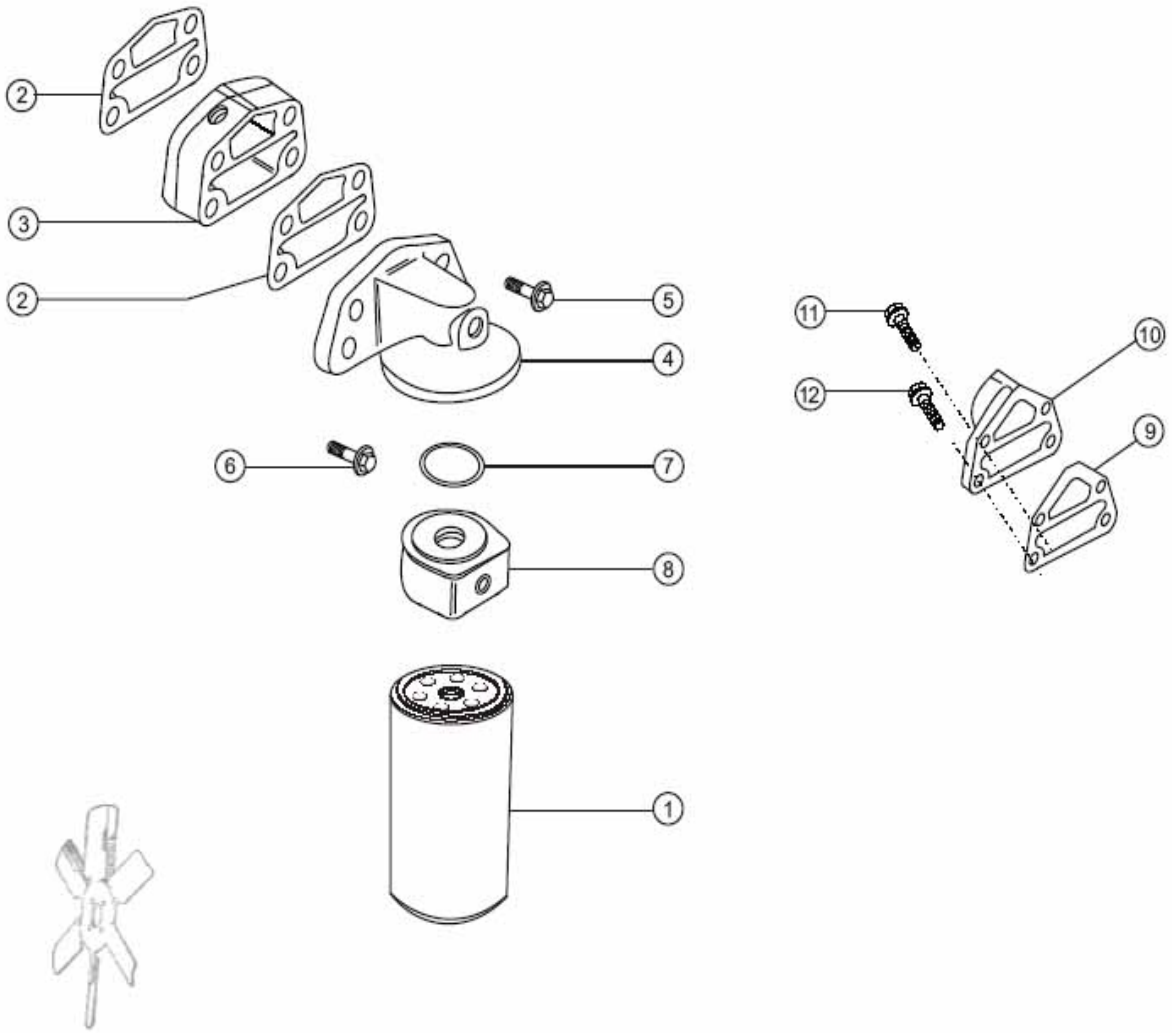


Sl No	Part No.	Description	Qty	
LUBRICATING OIL FILTER				
1	DE005585	Filter Lub. Oil	1	
2	3686T006	Joint Cylinder	1	
3	33DE0071	Spacer Lub Oil	1	
4	4.13E+20	Adaptor Lub Oil	1	
5	2314J049	Screw	2	
6	2314J040	Screw	2	
7	33813131	Seal	1	
8	DE005871	Cooler	1	
9	3686L007	Joint	1	
10	3766P097	Adaptor	1	
11	2314J033	Screw	3	
12	2314J037	Screw	1	
13	62DE0185	Pipe Oil Cooler	1	NI
14	62DE0186	Pipe Oil Cooler	1	NI
15	3346C004	Adaptor Water Feed	1	NI
16	34821121	Hose Oil Cooler	1	NI
17	3383A001	Hose Oil Cooler	1	NI

Sl No	Part No.	Description	Qty
DUAL FUEL FILTER			
1	DE005831	Dual Fuel Filter	1
NI	DE005743	Fuel Filter Element	2

DUAL FUEL FILTER

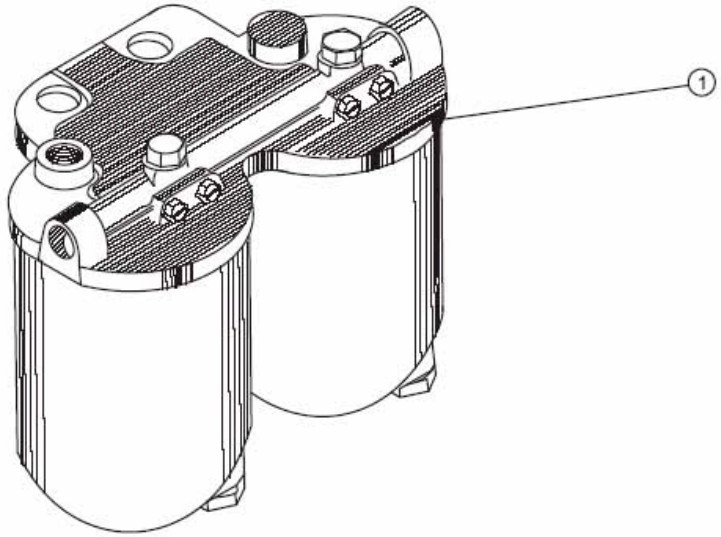


JOINTS AND GASKETS

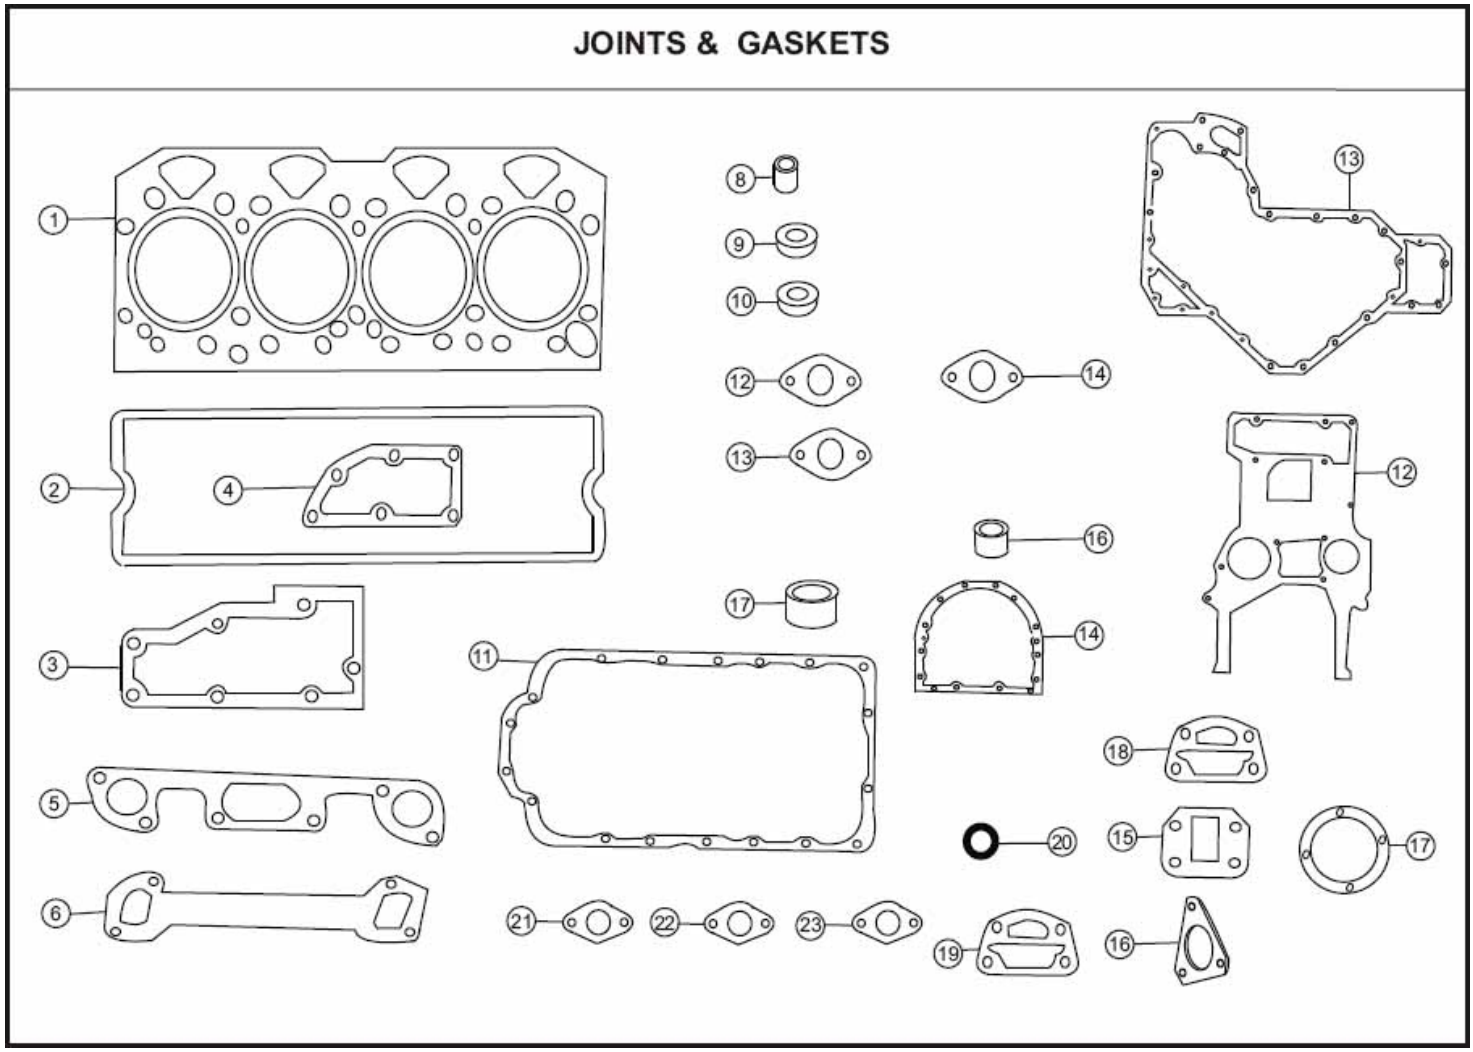

Sl No	Part No.	Description	Qty
JOINTS AND GASKETS			
NI	99DE0930	Joint Kit Minor –Top Over haul kit	1
NI	99DE0936	Joint Kit Minor – Bottom Over haul kit	1
1	3681E’037	Joint Gasket	1
2	3681A021	Joint Cylinder	1
3	3685F005	Joint Thermostat	1
4	3685R005	Joint Cylinder	1
5	3688C024	Joint Induction	1
6	3688C023	Joint Cylinder	2
7	36834152	Joint W/o	1
8	33817117	Seal Valve Stem	8
9	33811113	Olive Rocker Oil	1
10	33817135	Seal Cylinder Head	3
11	36815726	Joint Lub Oil Sump	1
12	36814158	Joint Block To	1
13	36813155	Joint Front Cover	1
14	36817181	Joint Cylinder	1
15	36851123	Joint Feed Pump	1
16	36828112	Joint Fuel Pump	1
17	3271W003	Joint FIP	1
18	3686T006	Joint Cylinder	1
19	3686L007	Joint L.O.	1
20	33813131	Seal Atomiser	4
21	36833163	Joint Angle Drive	1
22	36862199	Joint Lub Oil	1
23	36861466	Joint T/Case	1
24	3687H013	Joint W/p Front	1
25	3687Y007	Joint W/p Rear	1
26	73DE0015	Seal T/Case	1
27	2418F475	Seal Rear End	1
28	02415715	‘O’ Ring	1


Sl No	Part No.	Description	Qty
STARTER MOTOR			
1	DE005503	Starter Motor	1
2	2313C077	Stud	3
3	57DE0074	Nut	3

STARTER MOTOR

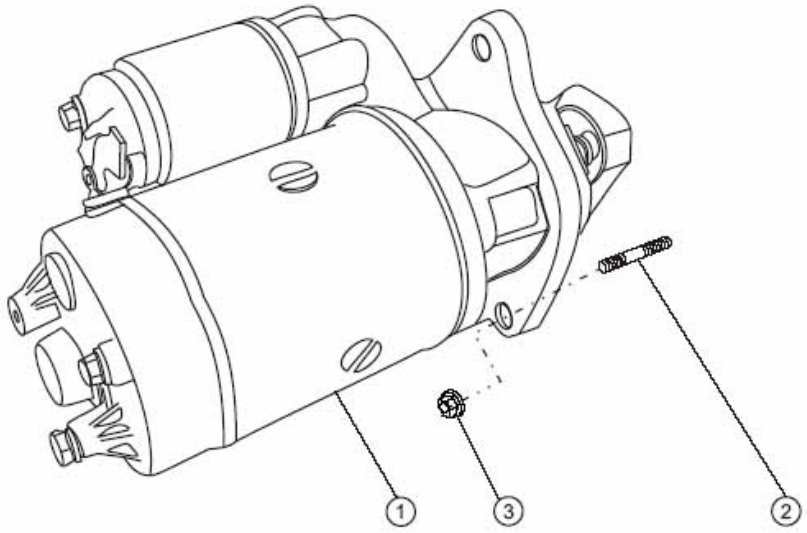




ALTERNATOR MOUNTING

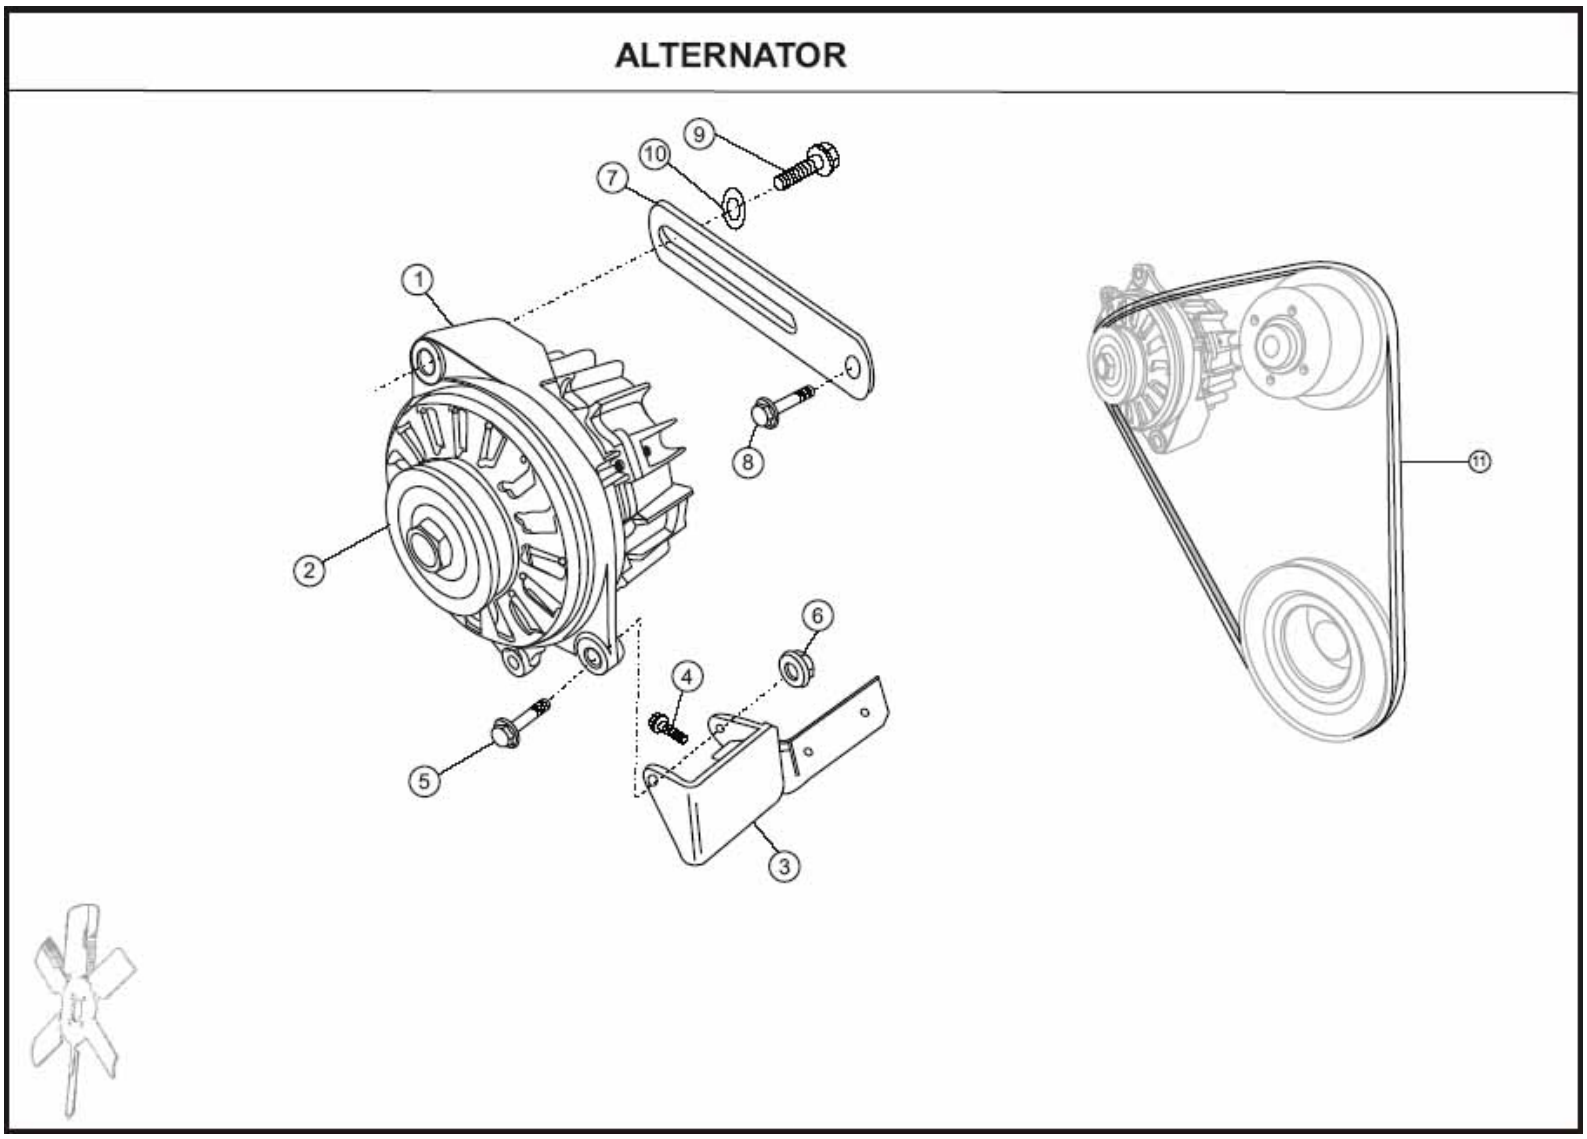

Sl No	Part No.	Description	Qty
ALTERNATOR MOUNTING			
1	DE005517	Alternator	1
2	67DE0022	Pulley Alternator	1
3	10DE0471	Bracket Alternator	1
4	2314J002	Screw	2
5	2314J015	Screw	1
6	2318A634	Nut	1
7	52DE0087	Lever Alternator	1
8	2314J011	Screw	1
9	2314H003	Screw	1
10	920443	Washer	1
11	07DE0024	Belt Alternator	1


Sl No	Part No.	Description	Qty
LUBRICATING OIL FILTER			
1	DE005585	Filter Lub. Oil	1
NI	DE005743	Fuel Filter Element	2

DUAL FUEL FILTER

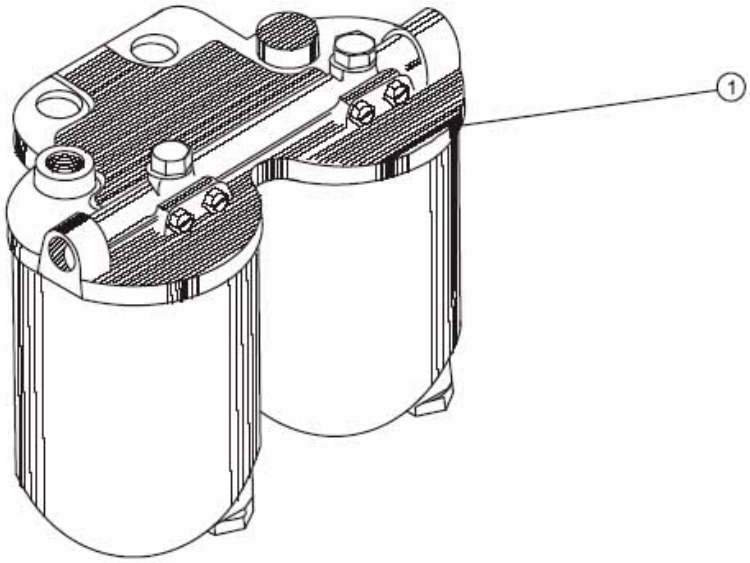


Sl No	Part No.	Description	Qty
ENGINE LIFTING BRACKET			
1	3621X007	Plate Engine	1
2	2314J003	Screw	4
3	3654W003	Plate Engine	1

ENGINE LIFTING BRACKET

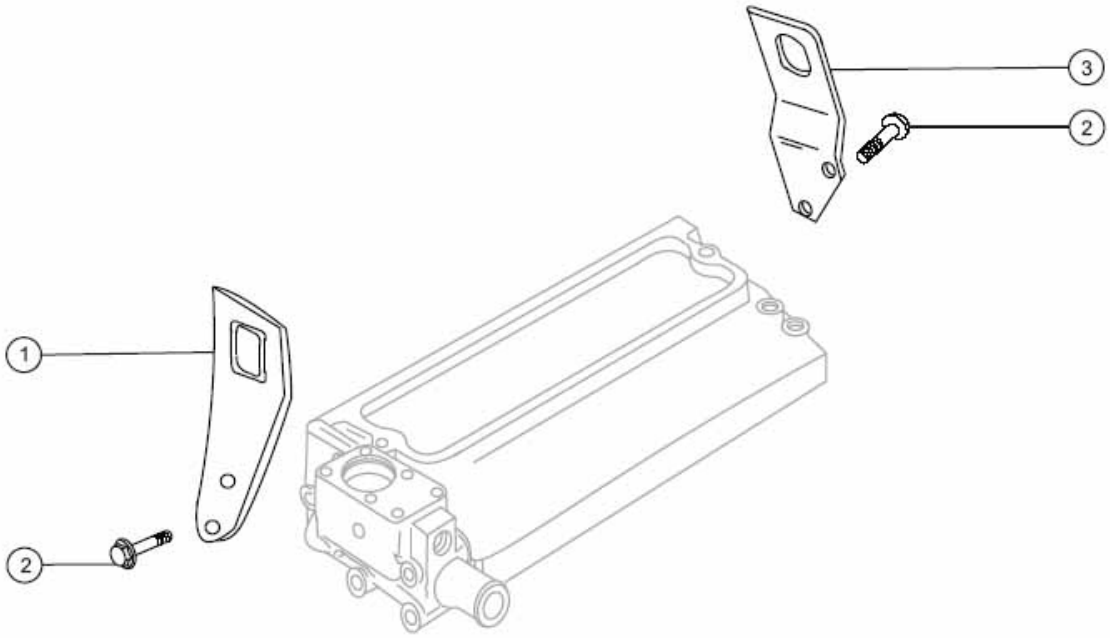


Sl No	Part No.	Description	Qty
AIR INDUCTION AND EXHAUST SYSTEM			
1	37787655	Manifold Inlet	1
2	3688C024	Joint	1
3	2314J033	Screw	4
	2314J041	Screw	1
	2313M078	Stud	1
	2318A604	Nut	1
4	2666108	Heater	1
5	3778E091	Exhaust Manifold	1
6	3688C023	Joint	2
NI	321P008	Stud	4
NI	2318A634	Nut	4
7	2313C080	Stud	3
8	2318A634	Nut	3
NI	49DE0110	Joint	1

EXHAUST SYSTEM

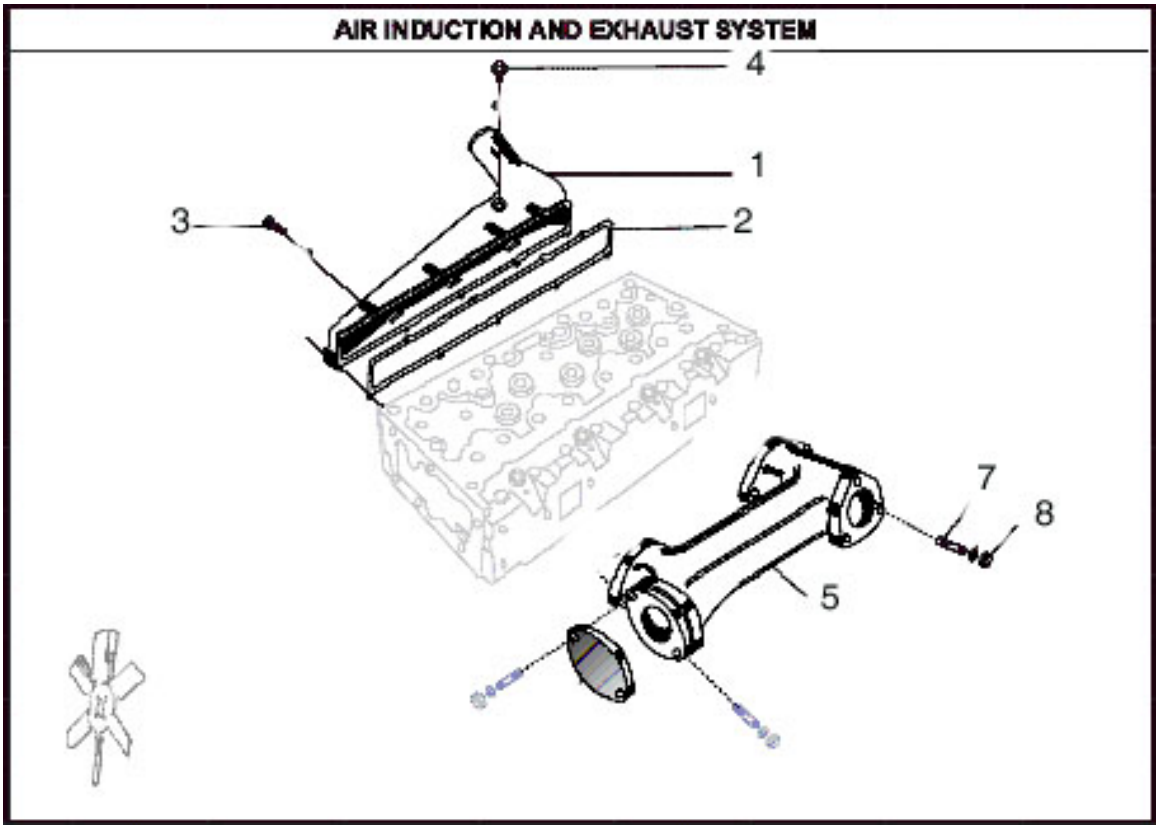

Sl No	Part No.	Description	Qty
REAR END OIL SEAL AND HOUSING			
1	00350009	Dowel Cylinder	2
2	36817181	Joint Rear End Oil	1
3	99DE0978	Housing Crankshaft	1
4	73DE0014	Seal Crankshaft	1
5	37513855	Housing Rear End	1
6	3212V002	Screw	2
7	2314H003	Screw	12

REAR END OIL SEAL AND HOUSING

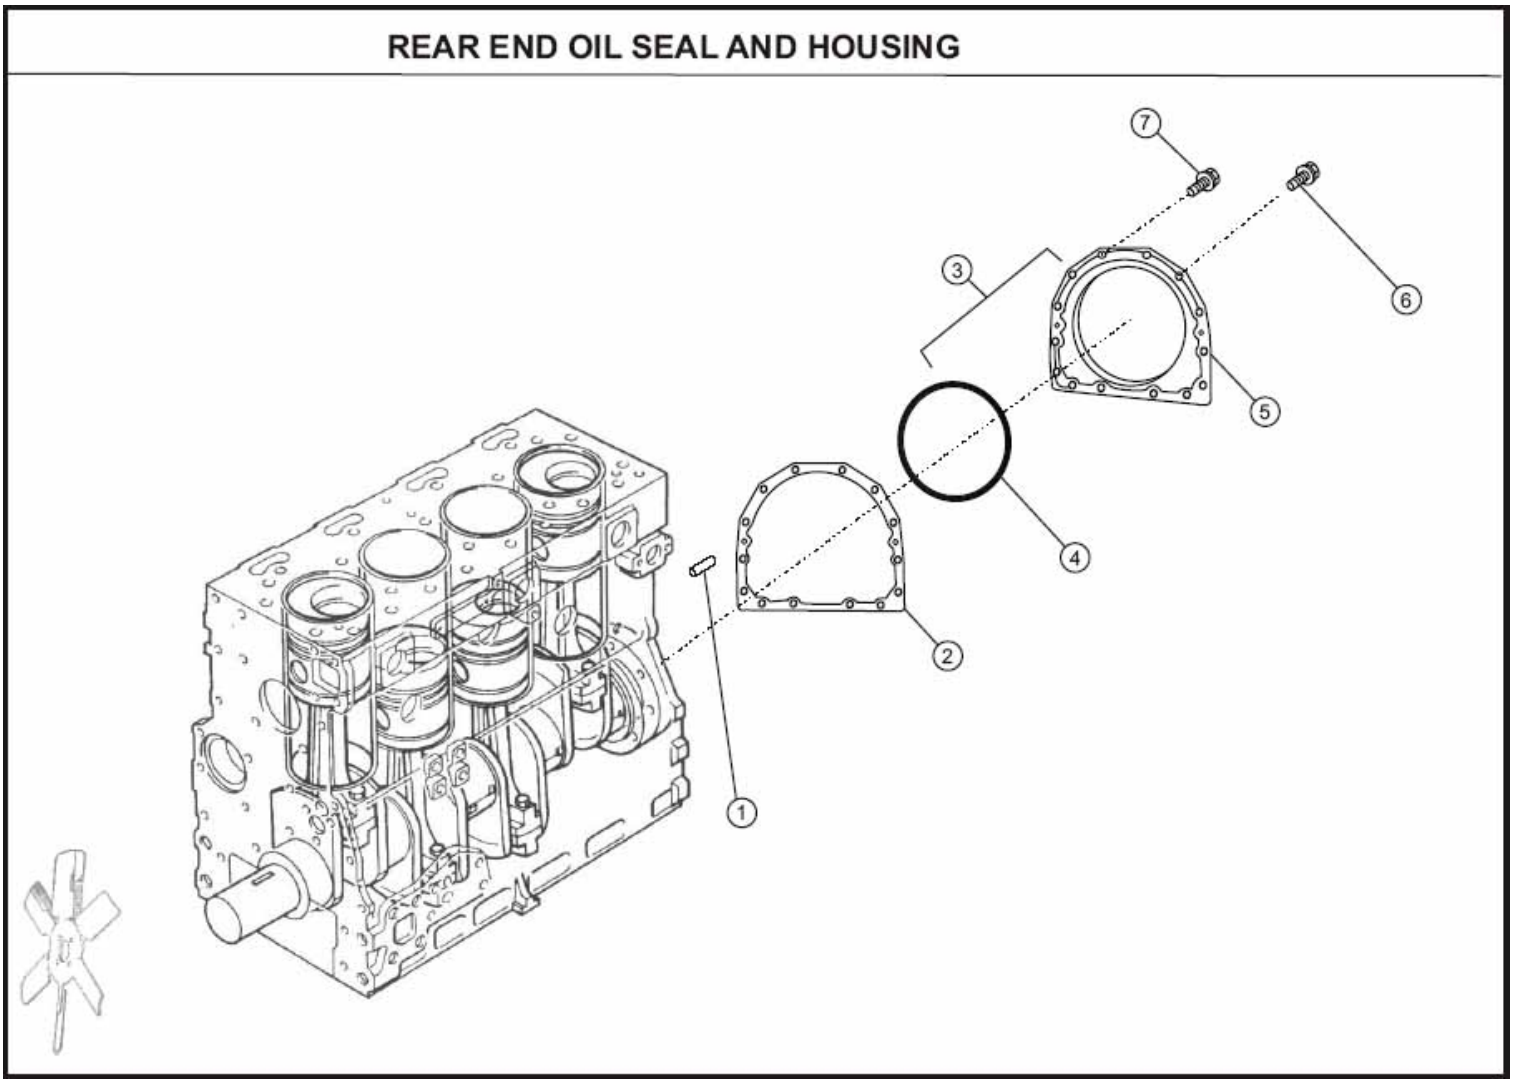

Sl No	Part No.	Description	Qty
WATER OUTLET BODY CONNECTION			
1	20DE0248	Connection Water	1
2	36834152	Joint	1
3	2314J005	Screw	2
4	3771K025	Body Water Outlet	1
5	3685F005	Joint	1
6	02485613	Thermostat	1
7	2314J004	Screw	1
8	2314H003	Screw	2
9	2314K166	Screw	1
10	2314J011	Screw	1
11	02431154	Plug	1
12	34828487	Hose	1
13	00180066	Clip	2

WATER OUTLET BODY CONNECTION

WATER OUTLET BODY & CONNECTION

