

EXHAUST SYSTEM

SL NO	PART NO	DESCRIPTION	QTY
1	1661930M95	Assy. Silencer with Clamp	1
2	0714460M01	U Bolt	1
3	0339374X01	Special Washer	2
3	0390972X01	Washer	2
4	0339169X01	M8 Hex Nut	2
5	0713277M04	Exhaust Elbow	1
6	0827877M01	Gasket	1
7	0714117M01	Nut Hex	3

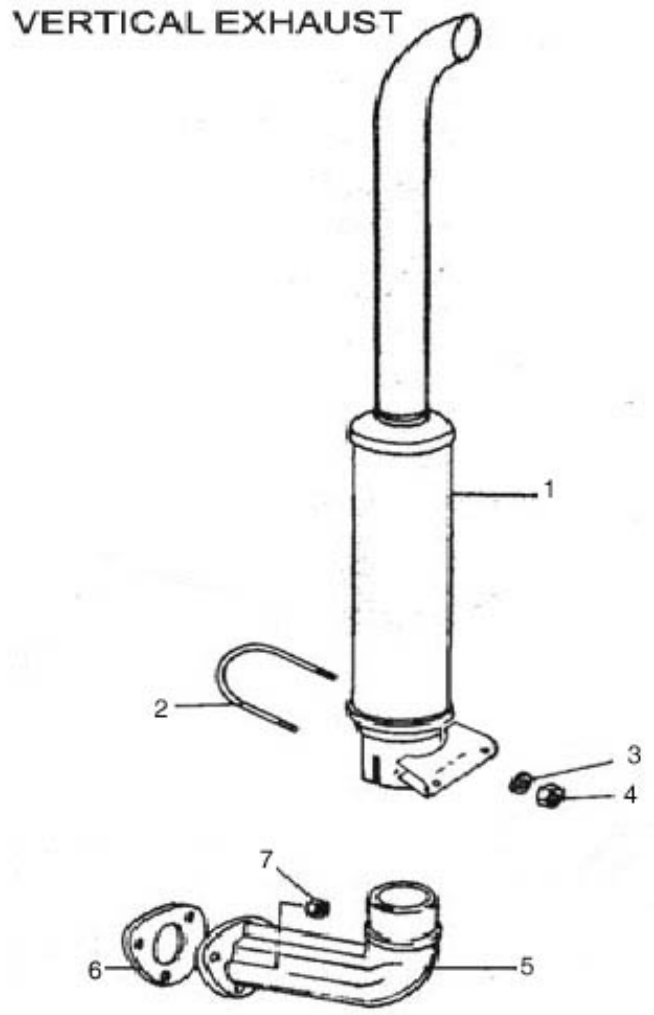


FAN ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	0897050M0165	Fan Blade	1
2	0897051M0165	Fan Blade	1
3	0885476M02	Tab Washer	2
4	0339368X01	Bolt	4
NI	4242553M01	Fan Belt	1

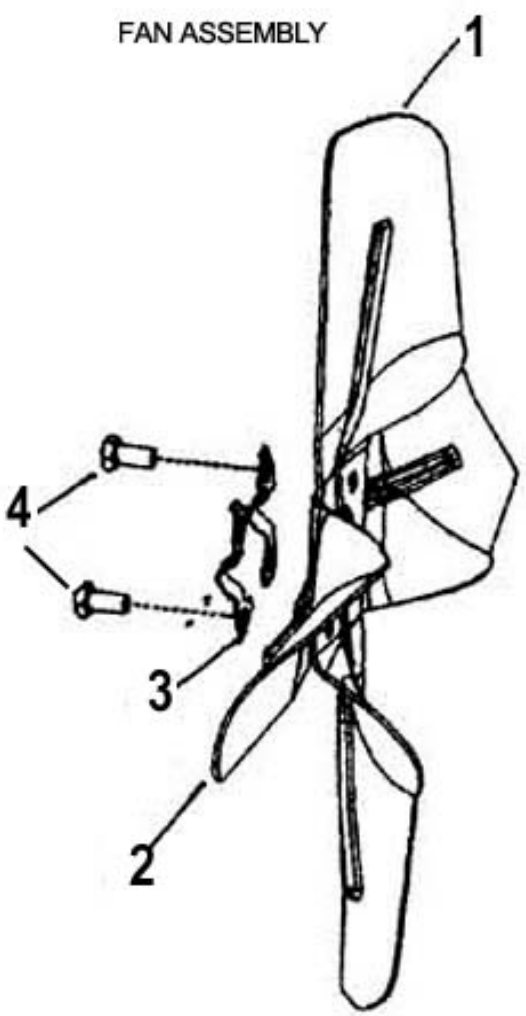


AIR CLEANER ASSEMBLY(DRUM)

SL NO	PART NO	DESCRIPTION	QTY
1	4242392M91	Assy. Oil Bath Air Cleaner	1
2	0898104M01	Hose - Air Cleaner to Inlet Manifold	1
3	0338618X01	Clip	2
4	4245885M92	Assy. Tube Air Intake	1
5	0715991M91	Assy . Pre cleaner	1
6	0338618X01	Clip	1
NI	0715993M01	Collar Air Intake	1
NI	0717464M91	Assy. Bracket Support	1
NI	0339761X01	Bolt - Hex	2
NI	0390972X01	Washer Flat	2
NI	0339374X01	Washer Lock	2
NI	0339169X01	Nut - Hex	2

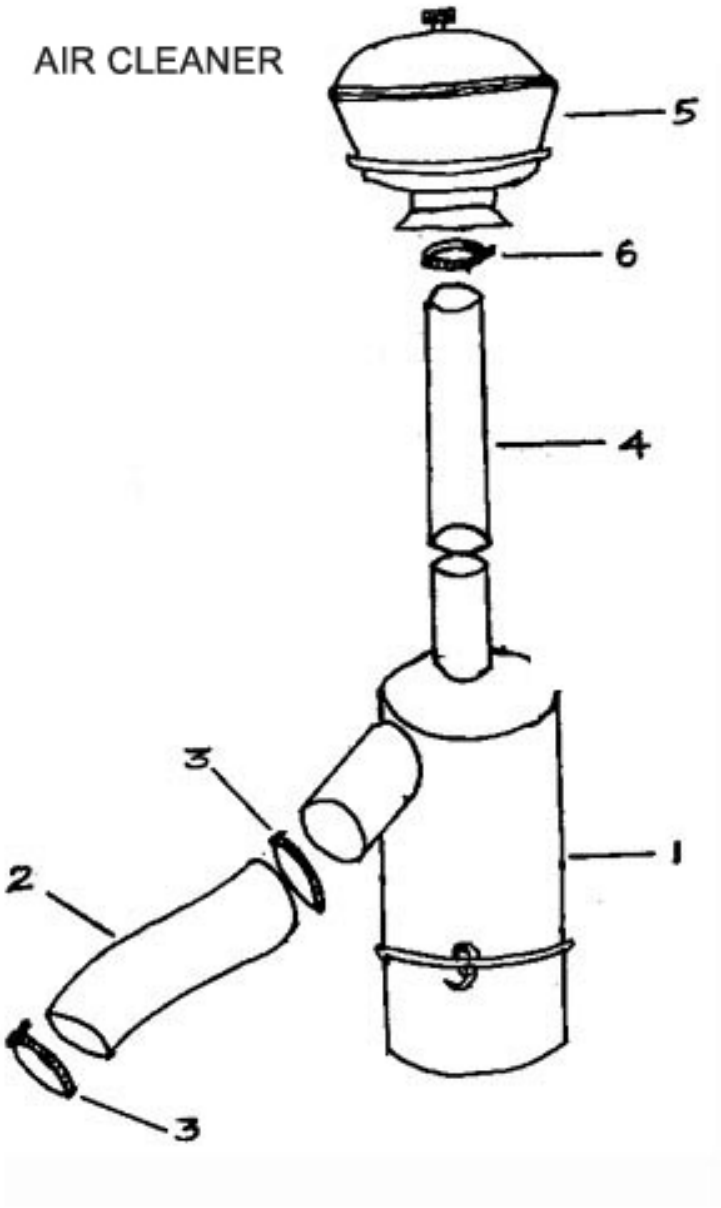


DRY AIR CLEANER

SL NO	PART NO	DESCRIPTION	QTY
1	0716 713 M01	Pre cleaner Hose	1
2	0338 618 X01	Hose Clip	1
3	0716 709 M01	Adaptor	1
4	0717430M91	Assembly Air Cleaner	1
5	4244003M91	Filter Outer	1
6	4244004M91	Filter Inner	1
7	0339 539 X01	Wing Nut	1
8	0716 711 M01	Boot Rubber	1
9	0338 618 X01	Hose Clip	2
10	1861746M01	Hose Air Cleaner	1
11	0717 503 M91	Bracket	1
12	0353 675 X01	Screw	4
13	0353 446 X01	Washer-Lock	4
14	0339 123 X01	Screw	2
15	0339 374 X01	Lock Washer	2
16	0716 714 M01	Sleeve	1
17	0716 561 M01	Beeding	1
18	0716 560 M01	Adaptor	1
19	3760 210 M01	Connector (Tube)	1
20	4245786M91	Vaccum Switch	1

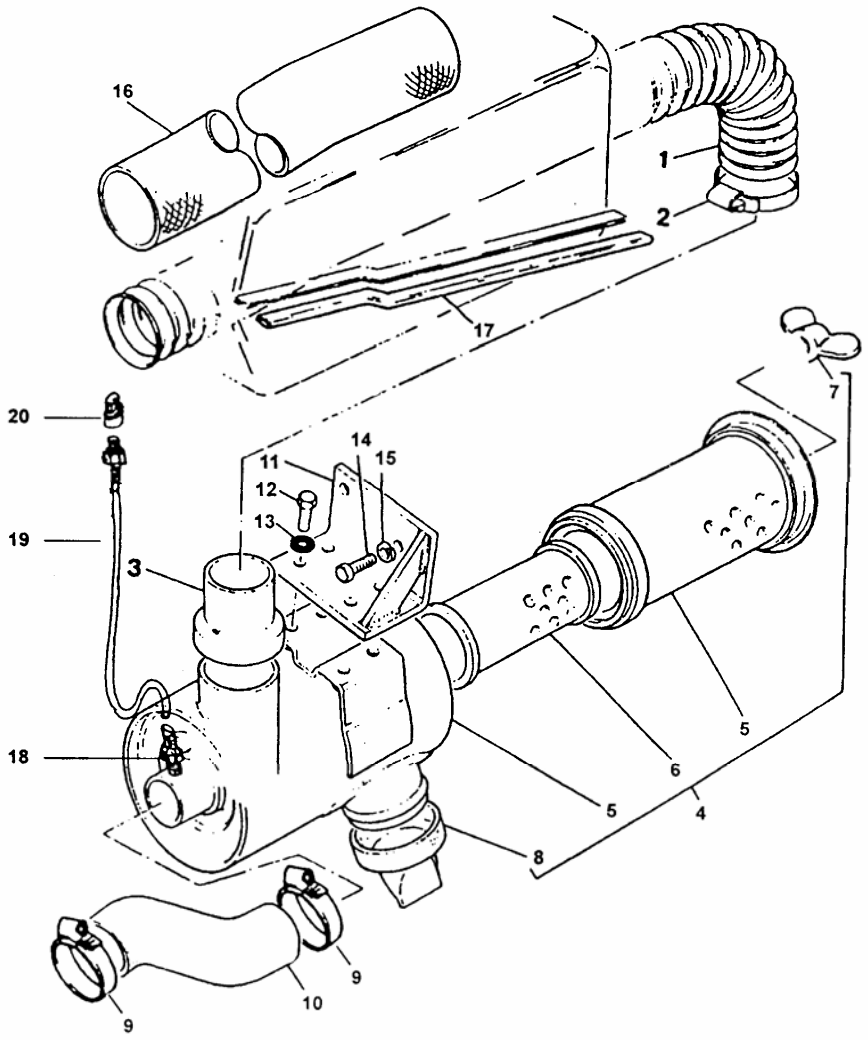


FRONT SUSPENSION

SL NO	PART NO	DESCRIPTION	QTY
1	3599722M92	Assy. Centre Beam - Front Axle	1
2	3599738M01	Pin Pivot	1
3	0376408X01	Screw	1
4	0377859X01	Elbow	1
5	3599774M01	Pin Retaining	1
6	0195414M01	Pin - Hair	2
7	1314A00601	Arm Assy. RH	1
7	1314A00501	Arm Assy. LH	1
8	0180345M02	Bushing - Spindle	4
8A	1441858X01	grease nipple - 90 degree	2
9	0195175M01	Bearing - Front Axle Spindle	2
10	0713983M91	Assy. Spindle RH	1
10	0713984M91	Assy. Spindle LH	1
11	0897242M01	Seal	2
12	1851800M91	Taper Roller Bearing - Inner	2
13	0712747M02	Hub - Front Wheel	2
14	0150662M01/ 0850127M01	Taper Roller Bearing - Outer	2
15	0180010M02	Washer - Bearing Retainer	2
16	0646060M01	Special Castle Nut	2
17	1442966X01	Pin Cotter	2
18	0646059M01	Gasket	2
19	0716583M02	Cap - Front Hub	2
20	0906863M01	Bolt Front Hub	12
21	0713986M02	Arm Spindle	2

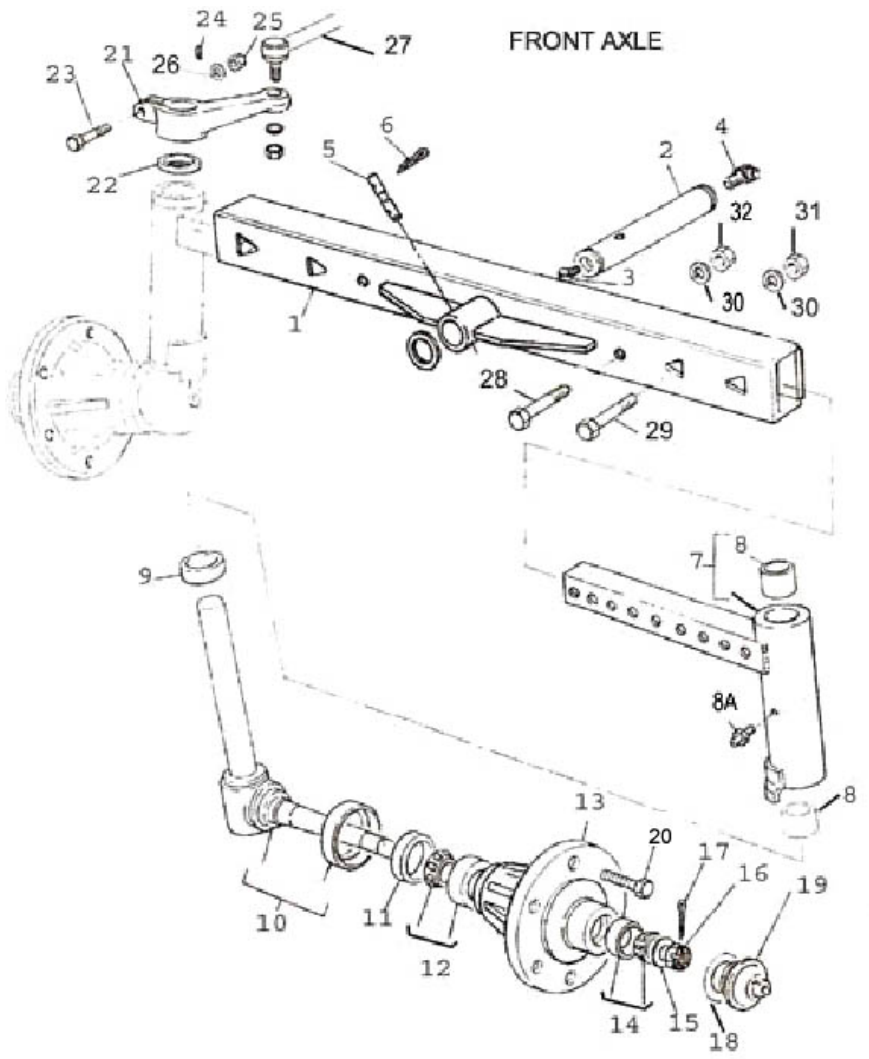


SL NO	PART NO	DESCRIPTION	QTY
22	0180355M02	Seal - Steering Arm Dust (Grease)	2
23	1442378X01	Bolt Hex	2
24	1440368X01	Key - Woodruff	2
25	0339643X01	Nut - Hex	1
26	0339369X01	Washer Lock	1
27	1860411M92	Drag Link	2
28	0353632X01	Bolt - Hex	2
29	0390719X01	Bolt Hex	4
30	0339377X01	Washer Lock	6
31	0353427X01	Nut	2
32	0339623X01	Nut	4

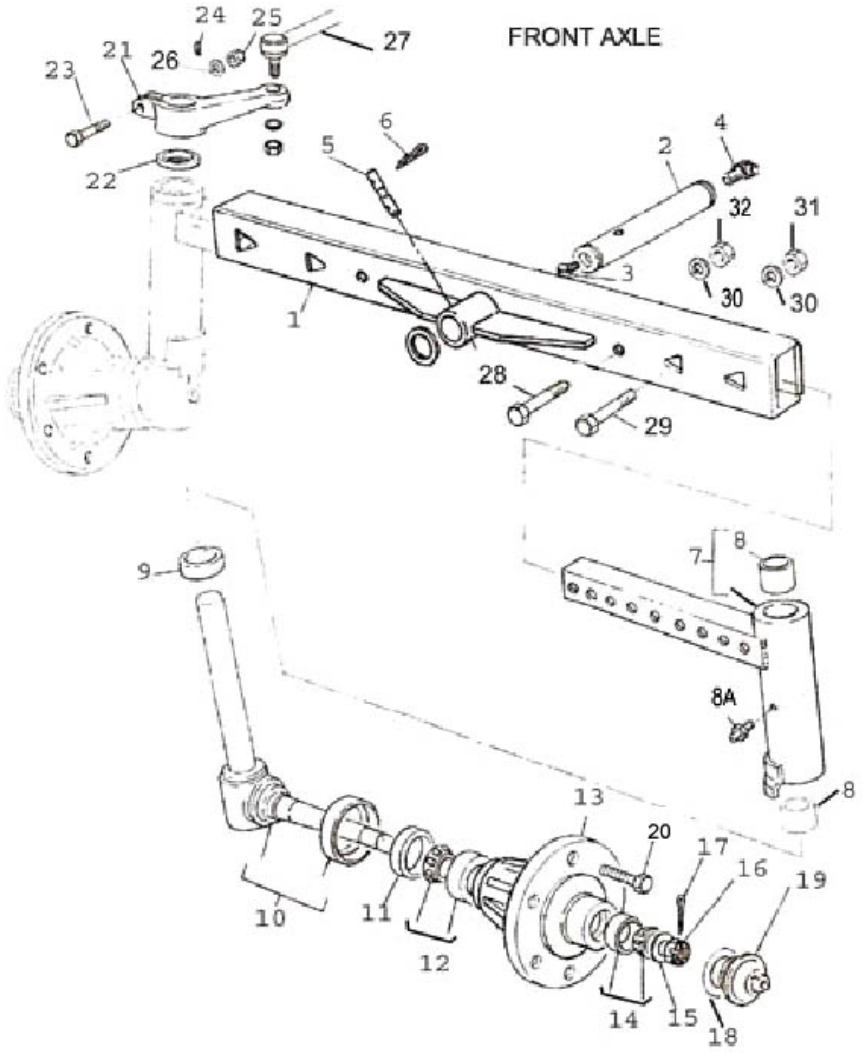


FRONT ENGINE SUPPORT ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	0377859X01	Elbow - 90	1
2	4252011M01	Front Engine Support	1
3	1660114M02	Bush	2
4	0355547X01	Plug	1
5	1661600M01	Shim	1
5	1863312M01	Shim	1
5	1863313M01	Shim	1
5	0717263M01	Shim	1
6	1670914M91	Hose	1
7	1670913M91	Hose	1
8	1670940M02	Bracket - Remote Greasing	1
9	0180990M01	Bulkhead Union	2
10	0353756X01	Flat Washer	2
11	0517254M01	Nut	2
12	0850778M01	Greaser	2

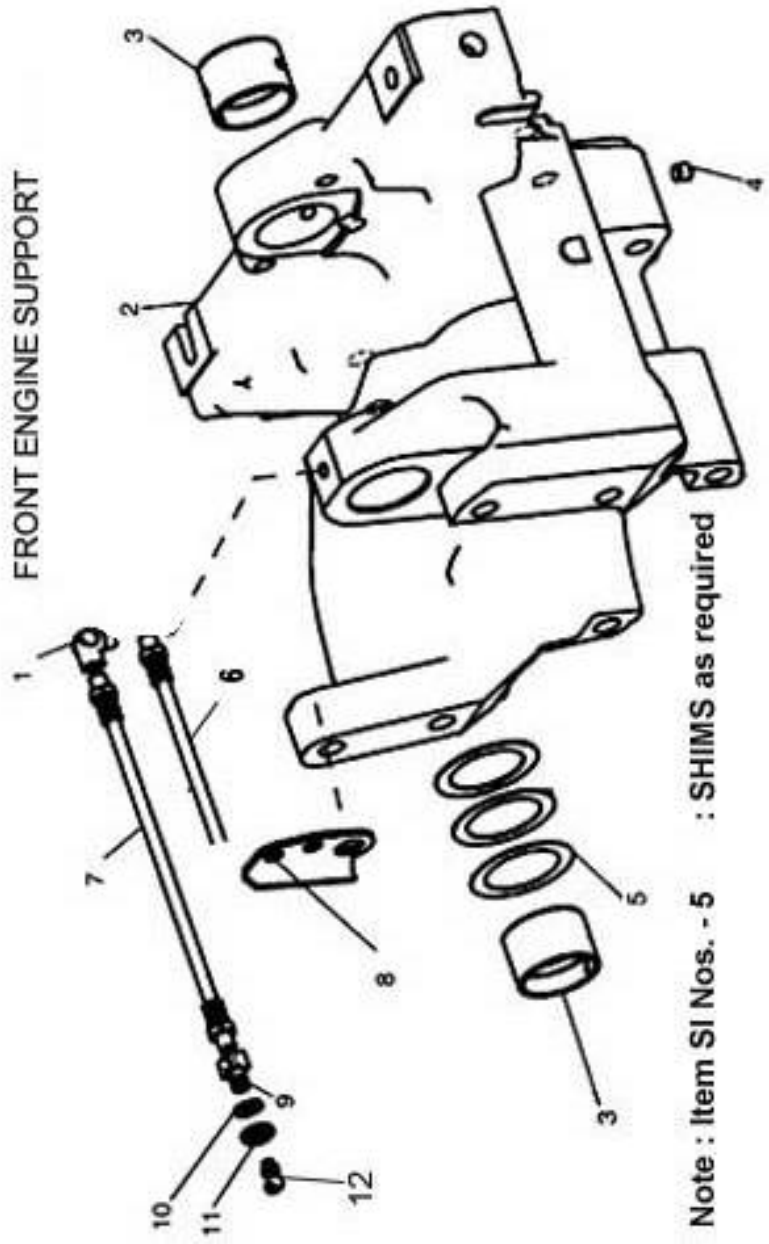


FRONT SUSPENSION (HSS)

SL NO	PART NO	DESCRIPTION	QTY
1	3599444M91	Center Beam	1
2	3599515M91	Arm RH (includes 0183086M01)	1
3	3599514M91	Arm LH (includes 0183086M01)	1
4	0183086M01	Bushing - Spindle	2
5	1441858M01	Grease Nipple - 90 Degree	2
6	3595181M92	Tie Rod Assembly (Includes items 6	1
6A	2127492K01	Ball End (M28) - Tie Rod	1
6B	2127493K01	Tube Tie Rod	1
6C	2127494K01	Lock Nut (M28x1.5)	1
6D	2127495K01	Rod Adjustable - Tie Rod	1
6E	2127496K01	Ball End (M20) - Tie Rod	1
6F	2127497K01	Lock Nut (M20x1.5)	1
6G	2127498K01	Nut Nyloc (M18x1.5)	2
6H	2127499K01	Locking Screw	1
6J	2127500K01	Locking Nut	1
7	1442965X01	Pin - Cotter	2
8	1694332M02	Arm Spindle - RH	1
9	1694333M02	Arm Spindle - LH	1
10	0183021M02	Seal -Spindle Arm Dust	2
11	0350355X01	Key - Woodruff	2
12	0353625X01	Bolt	2
13	0353433X01	Washer - Lock	2
14	0353629X01	Nut	2
15	0717018M91	Steering Cylinder	2
16	1440760X01	Nut Nyloc M16 X 1.5	2

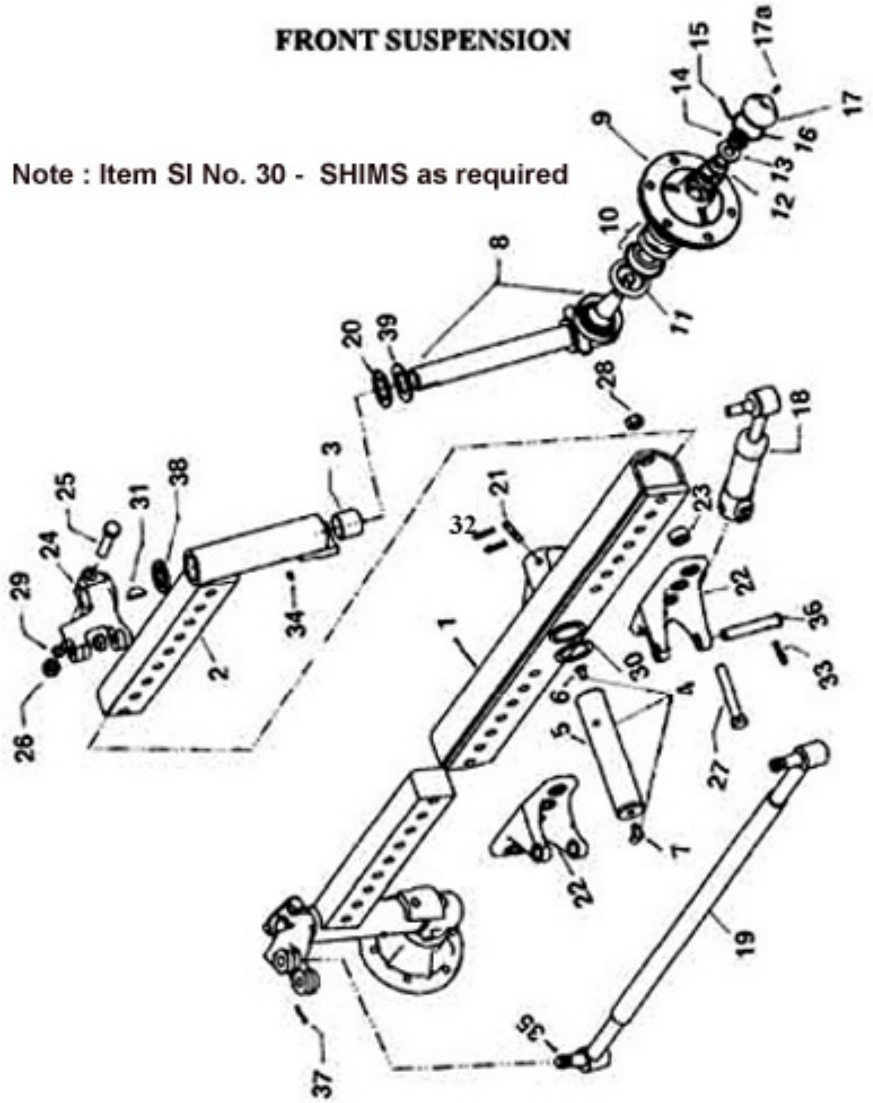


SL NO	PART NO	DESCRIPTION	QTY
17	1695594M01	Clevis Pin	2
18	0195415M01	Pin - cotter	2
19	0353632X01	Bolt	6
20	0353427X01	Nut-Hex	6
21	1696266M03	Reaction Bracket - RH	1
22	1696267M03	Reaction Bracket - LH	1
23	1692401M01	Spacer	2

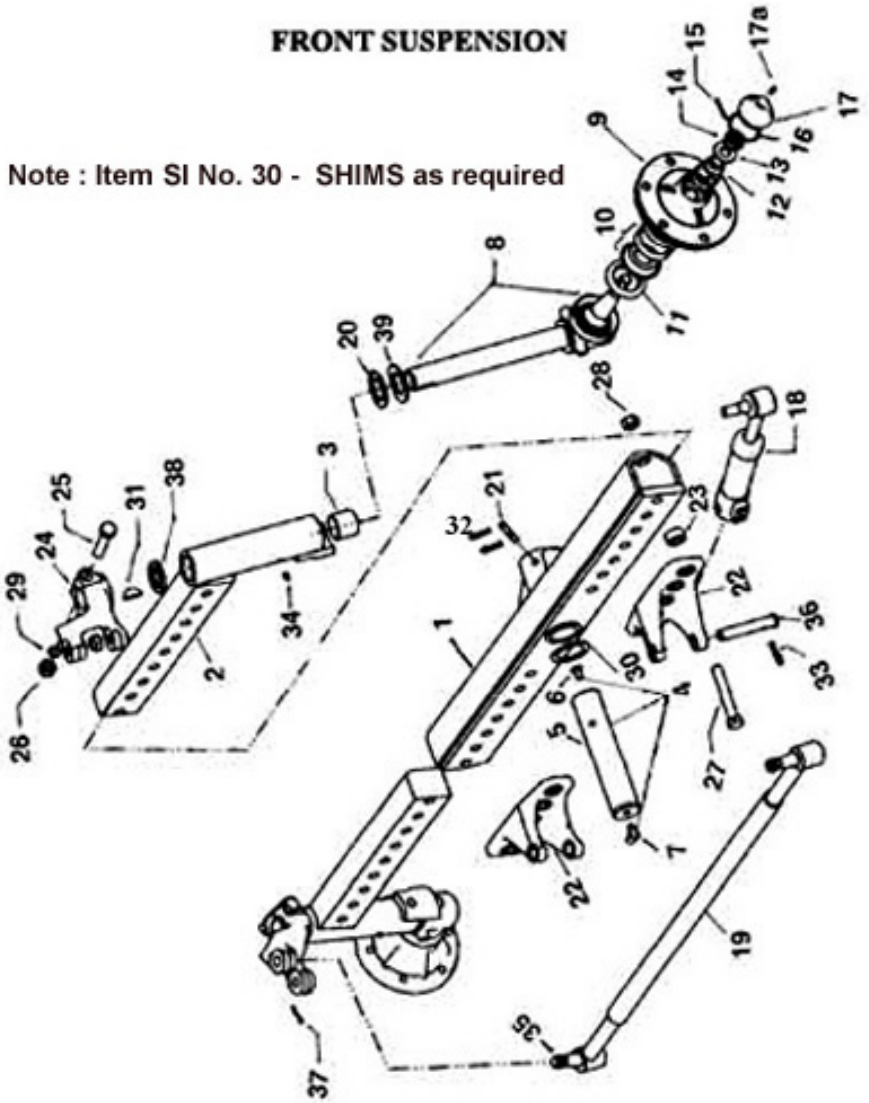


FRONT WHEEL HUB ASSY (HSS)

SL NO	PART NO	DESCRIPTION	QTY
1	1694234M91	Assy. Spindle LH	1
1	1694233M91	Assy. Spindle RH	1
2	0895322M91	Bearing	2
3	1851800M91	Taper Roller Bearing - Inner	2
4	0886336M01	Hub - Front Wheel	2
5	0180010M02	Washer	2
6	0353928X01	Nut (Slotted)	2
7	0646059M01	Gasket	2
8	1442966X01	Cotter Pin	2
9	0897242M01	Seal Dust	2
10	0716583M02	Cap - Front Hub	2
11	1441858X01	Grease Nipple	2
12	1868732M01	Spacer	2
13	3599263M01	Bearing Thrust	2

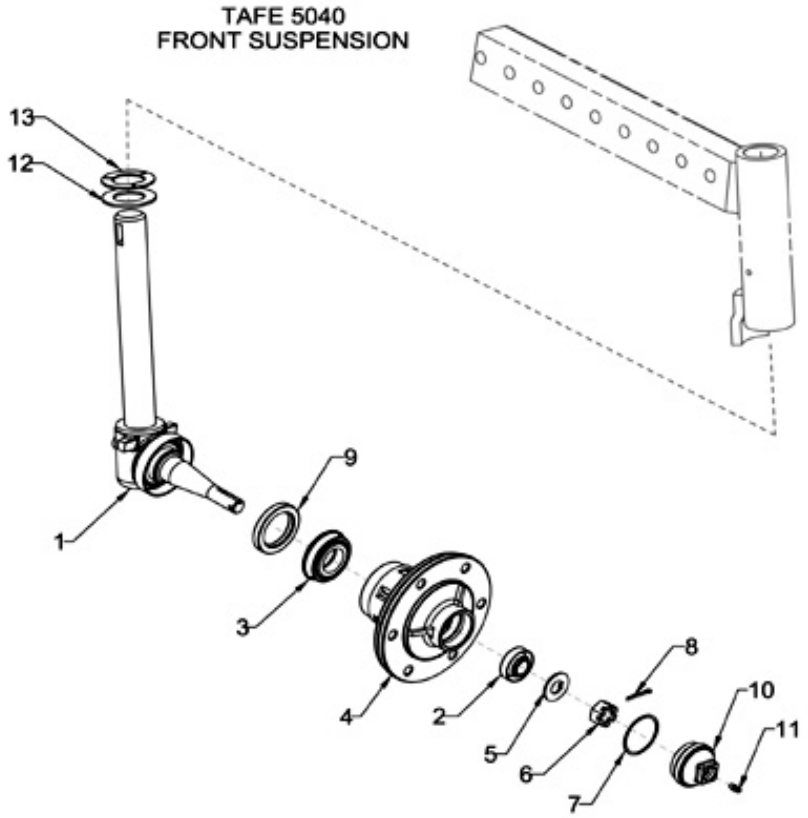


FRONT ENGINE SUPPORT (HSS)

SL NO	PART NO	DESCRIPTION	QTY
1	0377859X01	Elbow - 90	1
2	4252005M01	Front Engine Support	1
3	1660457M02	Bush 2	
4	0355547X01	PLUG	1
5	0717260M01	Shim	1
5	0717261M01	Shim	1
5	0717262M01	Shim	1
5	0717263M01	Shim	1
5	0717265M01	Shim	1
5	0717266M01	Shim	1
5	0717267M01	Shim	1
5	0717268M01	Shim	1
5	0365690X01	Shim	1
5	0365691X01	Shim	1
6	1670914M91	Hose	1
7	1670913M91	Hose	1
8	1670940M02	Bracket - Remote Greasing	1
9	1809904M01	Bulkhead Union	2
10	0353755X01	Flat Washer	2
11	0517254M01	Nut	2
12	0850778M01	Greaser	2

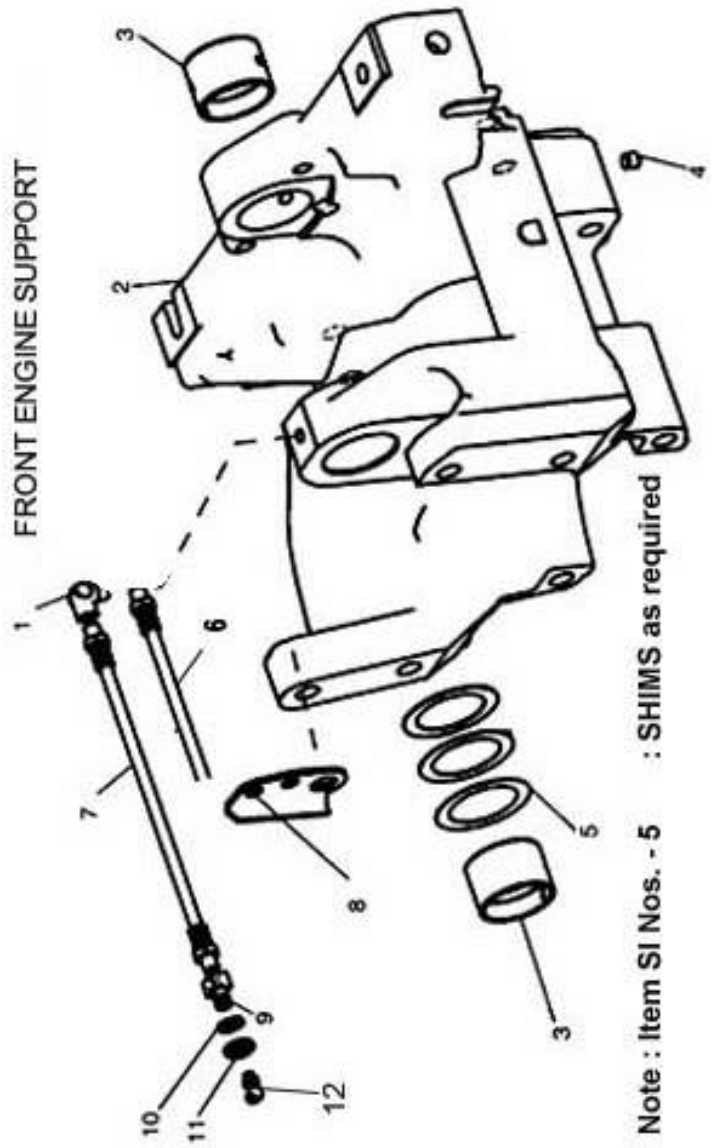


INSTALLATION FRONT WEIGHT

SL NO	PART NO	DESCRIPTION	QTY
NI	0717279M9265	Assy Front Weight Frame	1
1	4254307M91	Front Weight Frame	1
2	4254813M91	Assy. Hitch Pin	1
3	4254994M91	Front End Weight	AR
4	0353727X01	"Bolt Hex 5/8""Unc"	2
5	0354295X01	"Bolt Hex 5/8""Unc 4""L"	2
6	0353433X01	Lock Washer (Common)	4
7	0375099X01	"Nut 5/8""-11"	4

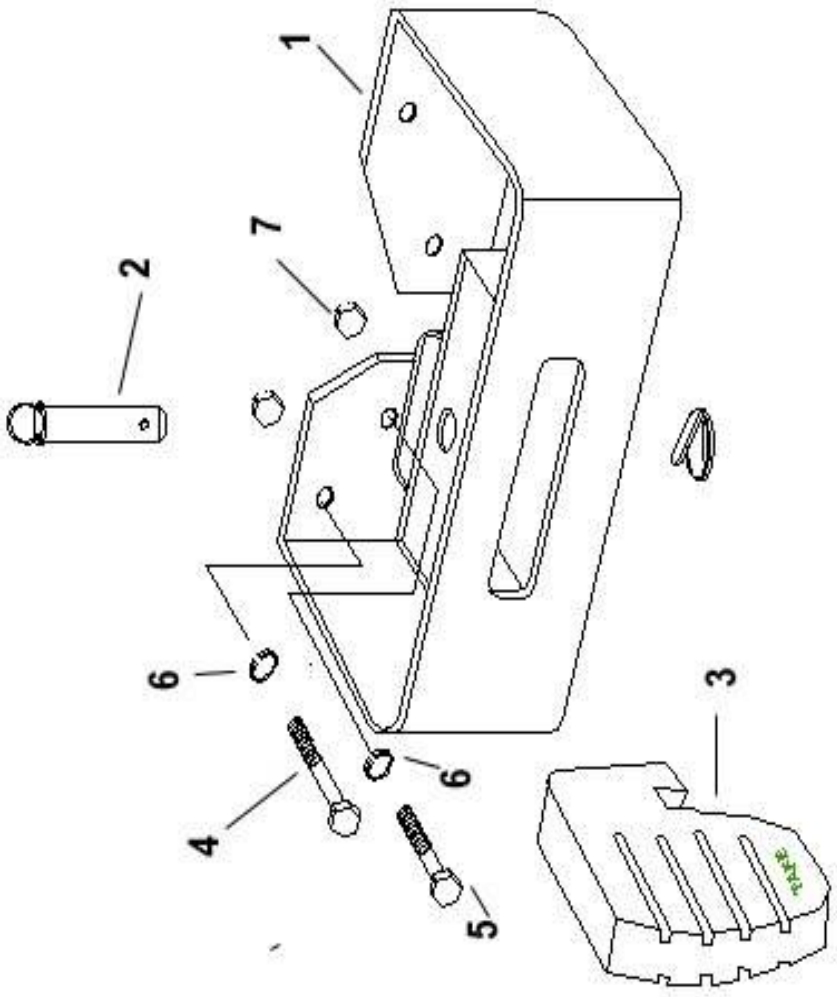


INSTALLATION RADIATOR &FUEL TANK

SL NO	PART NO	DESCRIPTION	QTY
1	4243721M91	Assy. Radiator Cap & Fan Shroud	1
2	0715923M01	Hose - Radiator Top	1
3	4246040M01	Hose - Radiator Bottom	1
4	0338616X01	Clip - Hose	4
5	0715494M01	Washer - Packing	4
6	0180705M02	Pad - Radiator Bottom	2
7	0390735X01	Washer Flat	2
8	0339369X01	Washer Lock	2
9	0339643X01	Nut - Hex	2
10	0714032M01	Brace	1
11	0339124X01	Screw Hex	1
12	0339374X01	Washer Lock	1
13	0339761X01	Bolt - Hex	1
14	0339374X01	Washer Lock	1
15	0339169X01	Nut - Hex	1
16	4254755M91	Assy. Cap Fuel Tank	1
17	4246277M91	Assy. Fuel Tank with Cap	1
18	0719924M91	Assy. Fuel Tap & Strainer	1
21	4242864M01	'O' Ring	1
20	4243131M01	Washer Flat	1
19	0339682X01	Nut - Hex Thin	1
22	0714002M01	Bolt - Carriage	2
23	0890486M01	Washertab	2
24	0890485M01	Pad - Rubber	2

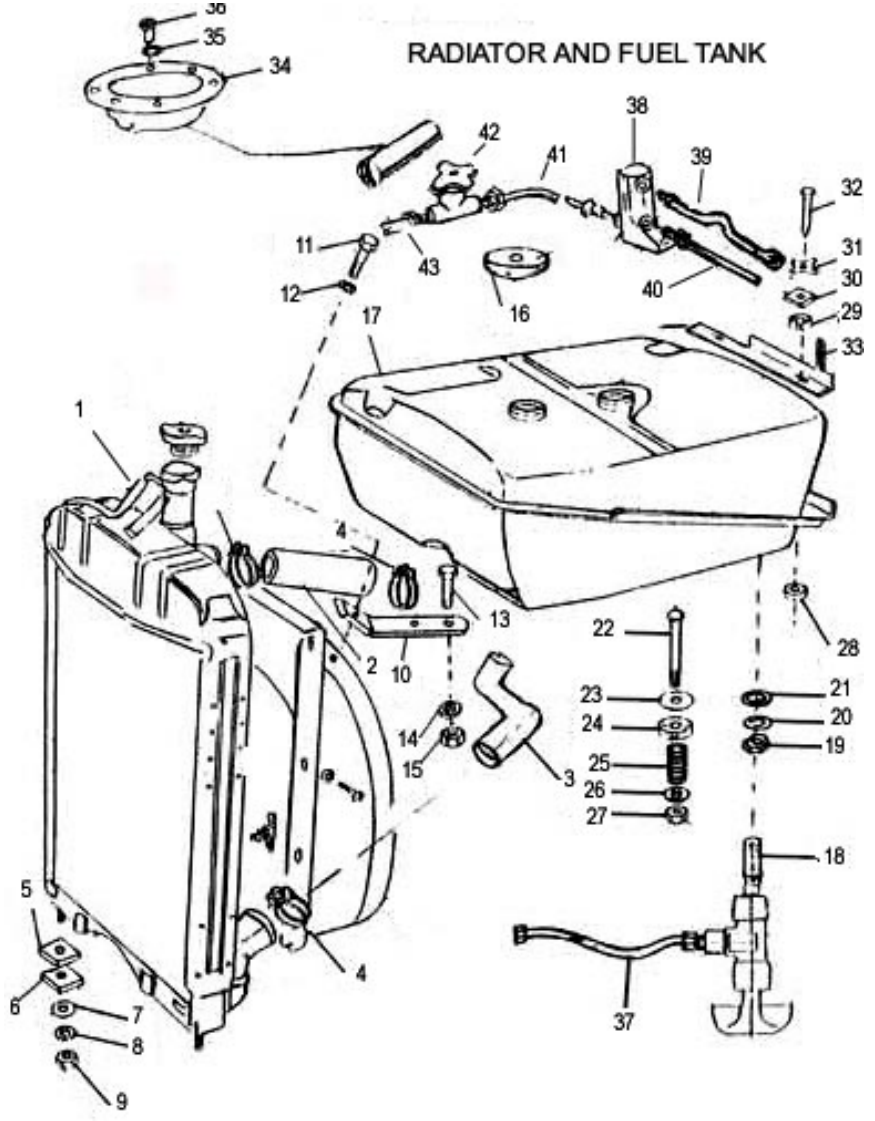


SL NO	PART NO	DESCRIPTION	QTY	
25	0891905M01	Spring	2	
26	0390972X01	Washer Flat	2	
27	1441461X01	Nut-Hex Lock Steel	2	
28	0898321M01	Pad - Rubber Lower	2	
29	0826783M01	Pad - Rubber Upper	2	
30	0826784M01	Plate - Packing	2	
31	0826786M01	Washer - Tab	2	
32	0339009X01	Bolt - Hex	2	
33	0714954M91	Assy. Bracket Battery Retainer	1	
34	0715954M91	Fuel Tank Unit	1	
36	1699765M01	Screw Hex	6	
35	0339382X01	Washer	6	
37	1219P00101	Assy. Hose Fuel Tap To Lift Pump	1	
38	0716892M91	Assy. Reserve Tank	1	NA
42	0715071M91	Heater Cock	1	NA
43	0000MX7129	Pipe Assy-	1	NA
41	0000MX7128	Pipe Assy	1	NA
39	0716795M91	Assy.Pipe - Reserve Tank To Fuel Tank	1	NA
40	0715548M92	Assy. Pipe INJ O/F To Fuel Tank	1	
NI	0716799M91	Assy. Pipe FIP O/F To Fuel Tank	1	NA
NI	0716701M91	Assy. Pipe - Pre Filter	1	
NI	0390972X01	Washer Flat	1	
NI	0719888M91	Assy. Pipe - Engine To Opg.	1	
NI	0714022M91	Assy Pipe Lift Pump To Filter	1	
NI	0713471M91	Assy.Pipe Filter To Inj. Pump	1	

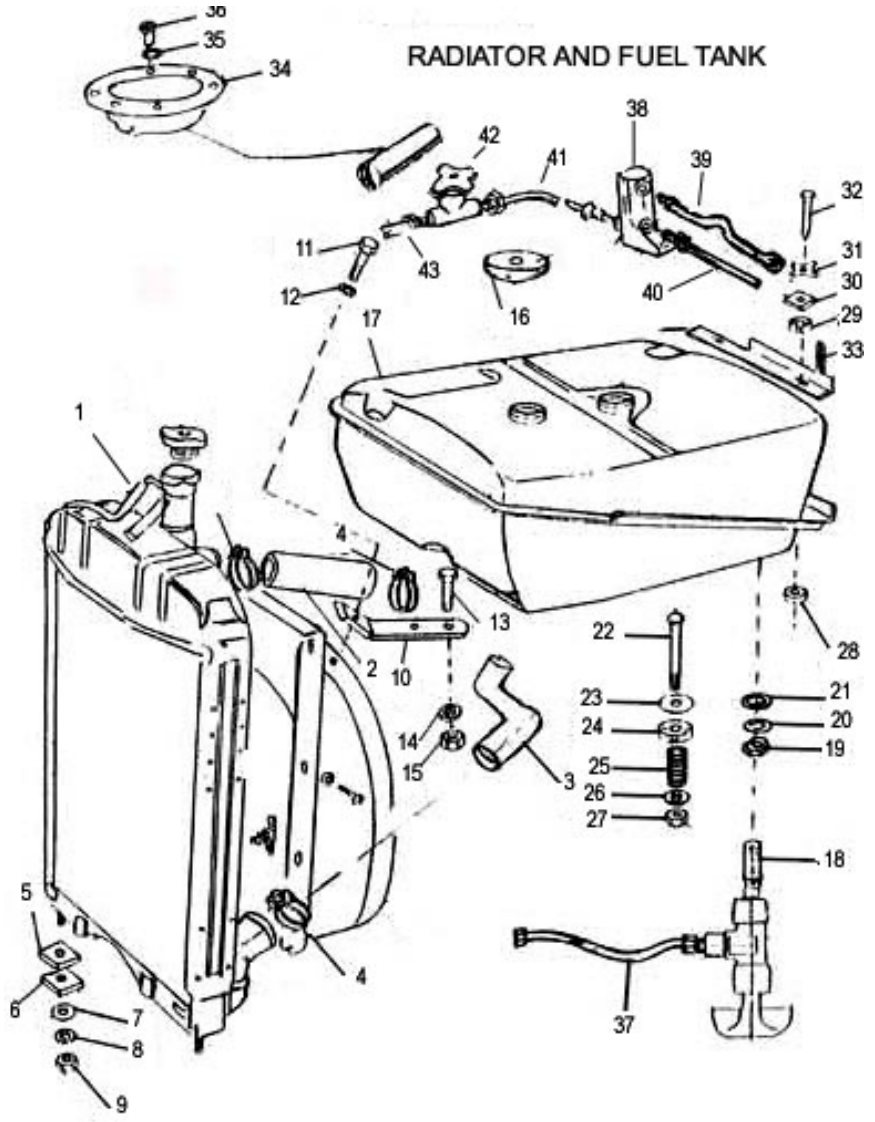


INSTALLATION RADIATOR &FUEL TANK(OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	4243721M91	Assy. Radiator Cap & Fan Shroud	1
2	0715923M01	Hose - Radiator Top	1
3	4246040M01	Hose - Radiator Bottom	1
4	0338616X01	Clip - Hose	4
5	0715494M01	Washer - Packing	4
6	0180705M02	Pad - Radiator Bottom	2
7	0390735X01	Washer Flat	2
8	0339369X01	Washer Lock	2
9	0339643X01	Nut - Hex	2
10	0714032M01	Brace	1
11	0339124X01	Screw Hex	1
12	0339374X01	Washer Lock	1
13	0339761X01	Bolt - Hex	1
14	0339374X01	Washer Lock	1
15	0339169X01	Nut - Hex	1
16	4254755M91	Assy. Cap Fuel Tank	1
17	4254806M91	Assy. Fuel Tank	1
18	0719924M91	Assy. Fuel Tap & Strainer	1
21	4242864M01	'O' Ring	1
20	4243131M01	Washer Flat	1
19	0339682X01	Nut - Hex Thin	1
22	0714002M01	Bolt - Carriage	2
23	0890486M01	Washertab	2
24	0890485M01	Pad - Rubber	2
25	0891905M01	Spring	2

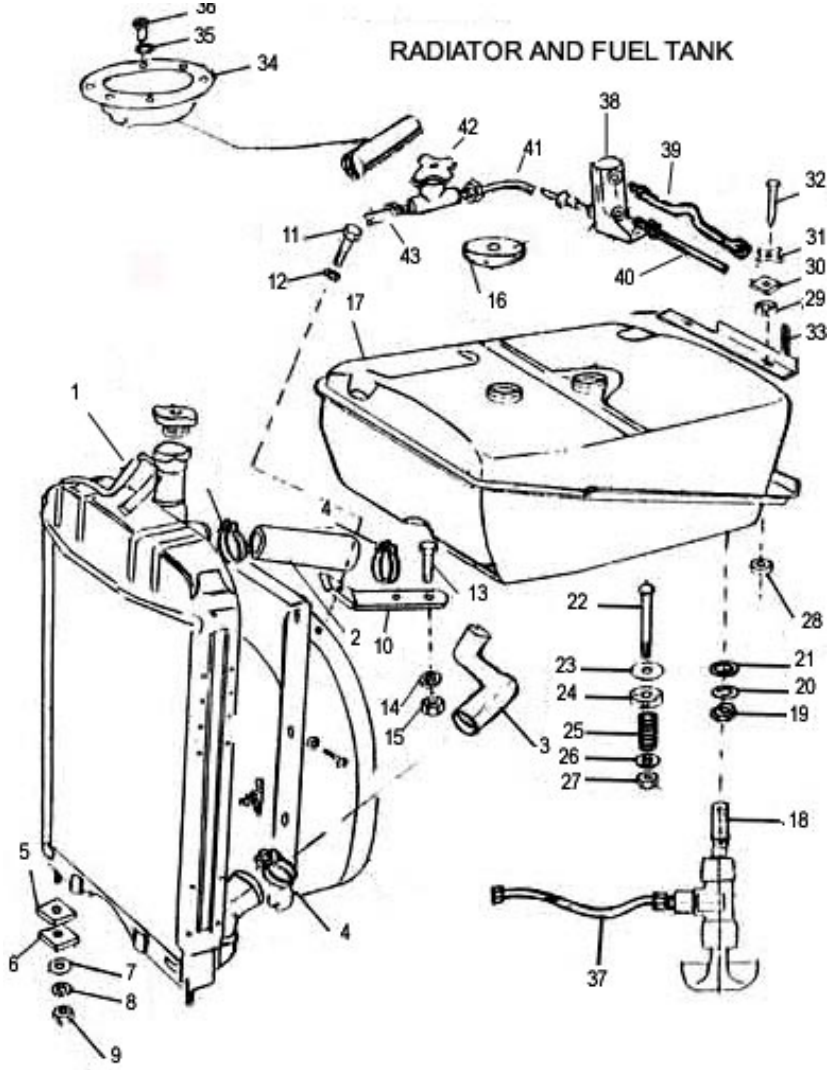


SL NO	PART NO	DESCRIPTION	QTY
26	0390972X01	Washer Flat	2
27	1441461X01	Nut-Hex Lock Steel	2
28	0898321M01	Pad - Rubber Lower	2
29	0826783M01	Pad - Rubber Upper	2
30	0826784M01	Plate - Packing	2
31	0826786M01	Washer - Tab	2
32	0339009X01	Bolt - Hex	2
33	0714078M91	Assy. Bracket Battery Retainer	1
34	0715954M91	Fuel Tank Unit	1
36	1699765M01	Screw Hex	6
35	0339382X01	Washer	6
37	1219P00101	Assy. Hose Fuel Tap To Lift Pump	1
38	0716892M91	Assy. Reserve Tank	1
42	0715071M91	Heater Cock	1
43	0716800M91	Pipe Assy-	1
41	0716802M91	Pipe Assy	1
39	0716795M91	Assy.Pipe - Reserve Tank To Fuel Tank	1
40	0715548M92	Assy. Pipe INJ O/F To Fuel Tank	1
NI	0716799M91	Assy. Pipe FIP O/F To Fuel Tank	1
NI	0716701M91	Assy. Pipe - Pre Filter	1
NI	0390972X01	Washer Flat	1
NI	0719888M91	Assy. Pipe - Engine To Opg.	1
NI	0717377M91	Assy Pipe Lift Pump To Filter	1
NI	0717379M91	Assy.Pipe Filter To Inj.Pipe	1

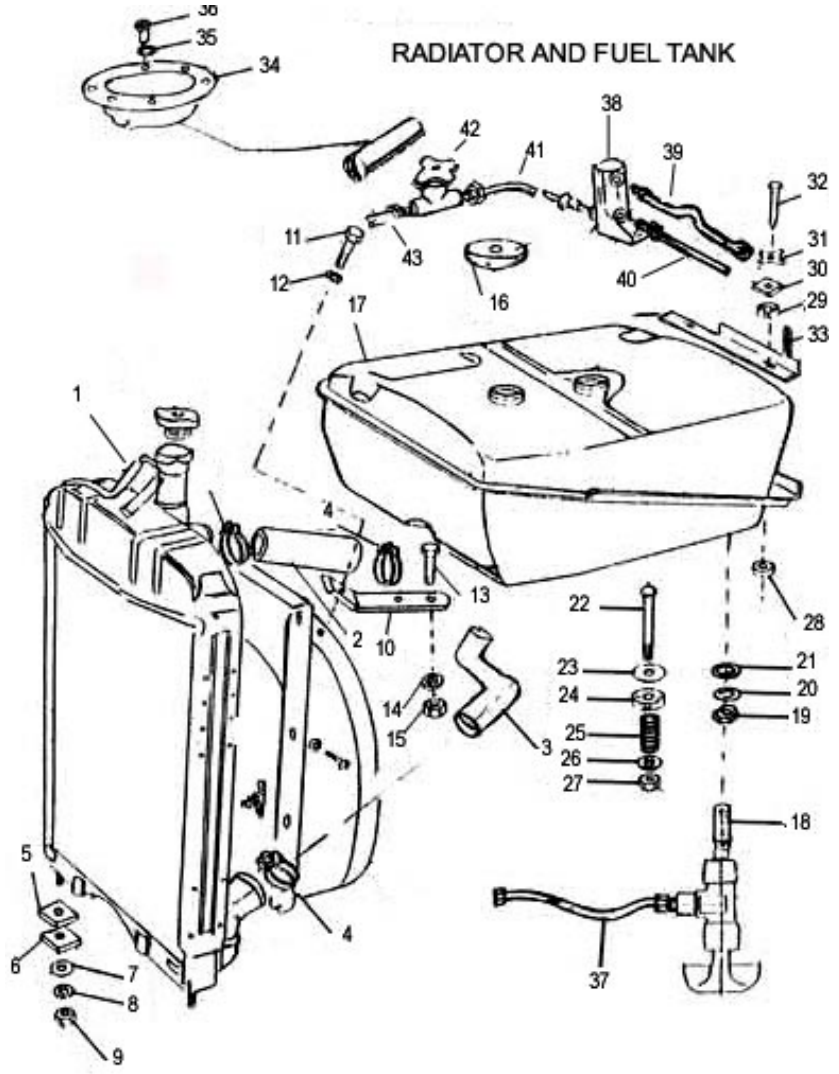


TRANSMISSION CASE ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	0715584M04	Transmission Case	1
2	0182099M91	Assy. Breather	1
3	4244697M01	Shaft Clutch Pedal	1
4	4244698M01	O-Ring Clutch Shaft	1
5	4247632M01	Bush Clutch Shaft	2
6	0180801M01	Bush Brake Shaft	2
7	0180474M01	Washer Sealing	1
8	0717257M03	Magnetic Drain Plug	1
9		Plug	1
10	0180481M01	Gasket-Trans.Case Bottom	1
11	0180482M02	Cover Transmission Bottom	1
12	0353901X01	Bolt	4
13	0002950X00	Plug Expansion	1
14	4245672M01	Shaft - Clutch Release Pivot	1
15	4244696M01	Plug Clutch Shaft	1
16	0358890X01	Snap Ring	1
17	1860011M01	Oil Seal	1
18	1671705M02	Pinion Main Drive - Dc	1
19	0713923M01	Bearing (1035 / 245)	1
20	0762101M01	Snap Ring	1
21	0180434M01	Gasket	1
22	1860876M02	Housing Main Drive - Dual Clutch	1
23	4242652M01	Precoated Sealant Screw	1
24	4242651M01	Precoated Sealant Screw	3

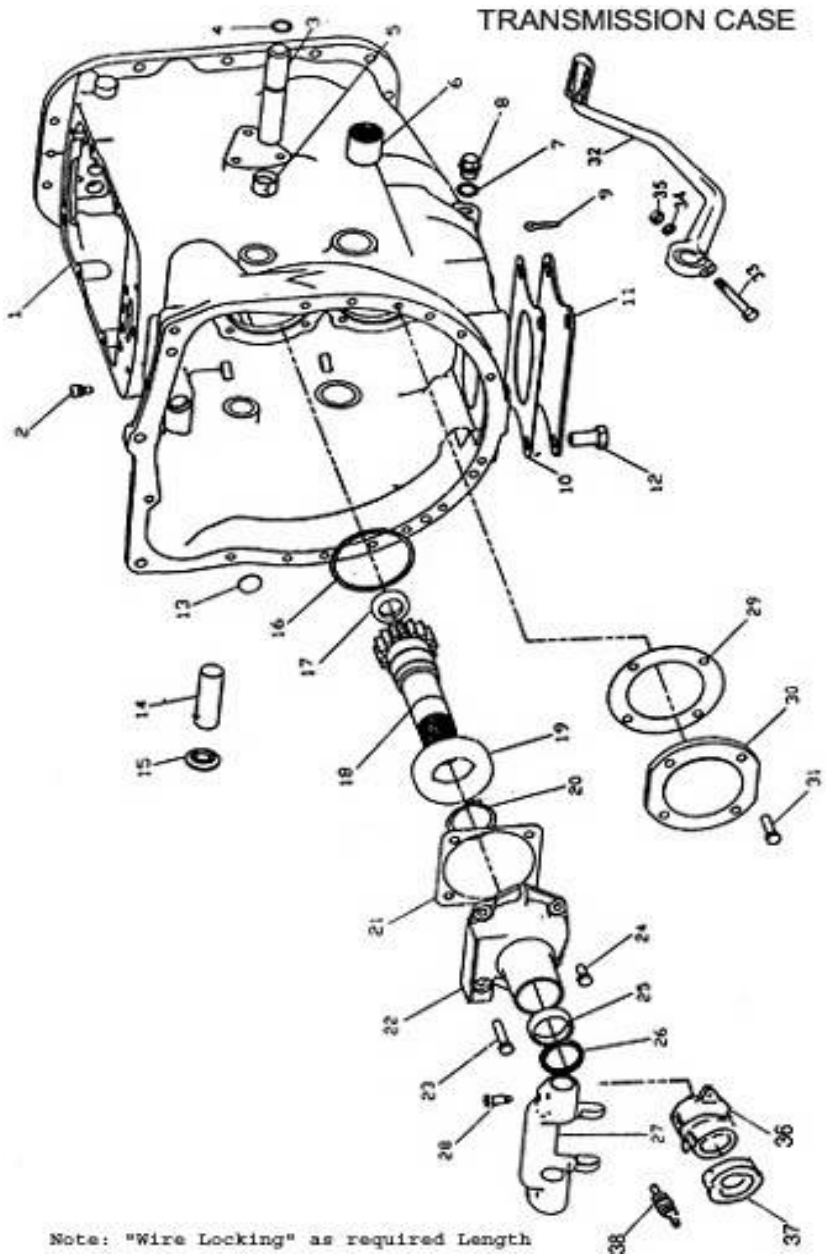


SL NO	PART NO	DESCRIPTION	QTY
25	0886668M01	Bearing (245 Dc)	1
26	1860867M03	Oil Seal	1
27	0886719M01	Fork Clutch Release	1
28	0881144M01	Screw Fork Lock	2
29	0181237M01	Gasket	1
30	4242964M01	Cap	1
31	4242653M01	Pre Coated Screw	4
32	0715785M91	Assy-Clutch Pedal	1
33	1442378X01	Bolt	1
34	0339369X01	Special Washer	1
35	0339643X01	Nut Hex	1
36	0886727M02	Carrier Clutch Release	1
37	0892862M03	Clutch Release Bearing (245)	1
38	1867690M02	Spring	1

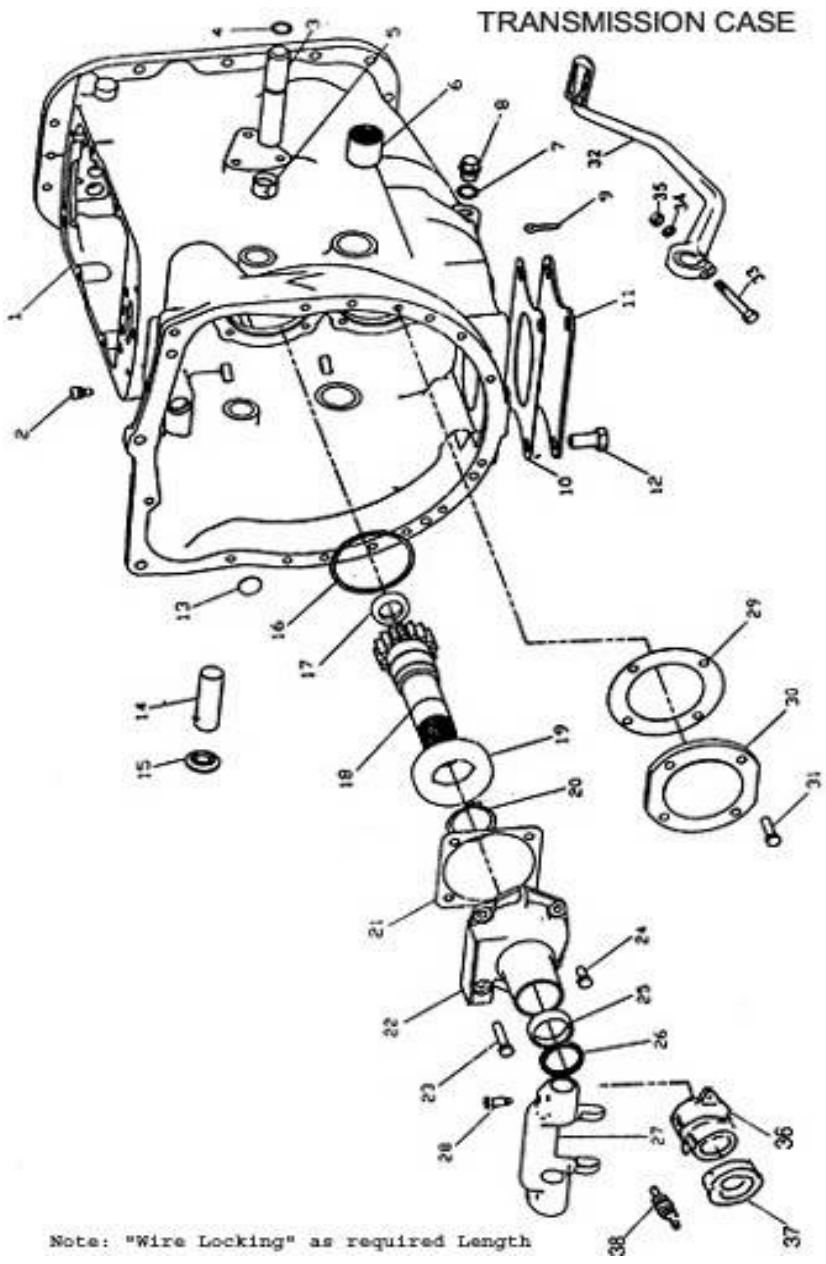


DUAL CLUTCH

SL NO	PART NO	DESCRIPTION	QTY
1	4252037M91	Clutch Cover Assy.	1
2	2125711K91	Adjusting Screw	3
3	2125712K01	Lock Nut	3
4	2125713K01	Release Lever	3
5	2125714K01	Cover Plate	1
6	2125715K01	Belleville Spring	1
7	2125716K01	Pressure Plate (Pto)	1
8	2126717 K01	Drive Plate (Pto)	1
9	2125718K01	Pressure Spring	6
10	2125719K01	Insulator	6
11	2127041K01	Secondary Fly Wheel	1
12	2125721K01	Pressure Plate	1
13	4246205M91	Driven Plate - 12 Inch	1
14	2125722K01	Facing	2
15	2125723K01	Rivet	40
16	2125724K01	Pin-Link To Lever	3
17	2125725K01	Cotter Pin	3
18	2125726K01	Anti Rattle Spring	3
19	2125727K01	Pin Retainer Spring	3
20	2125728K01	Pin-Lever To Cover	3
21	2125729K01	Link	3
22	2125730K01	Cotter Pin	3
23	2125731K01	Pin Pressure Plate To Link	3
24	2125732K01	Release Screw	3
25	2125733K01	Lock Nut	3
26	2124734K01	Facing	2

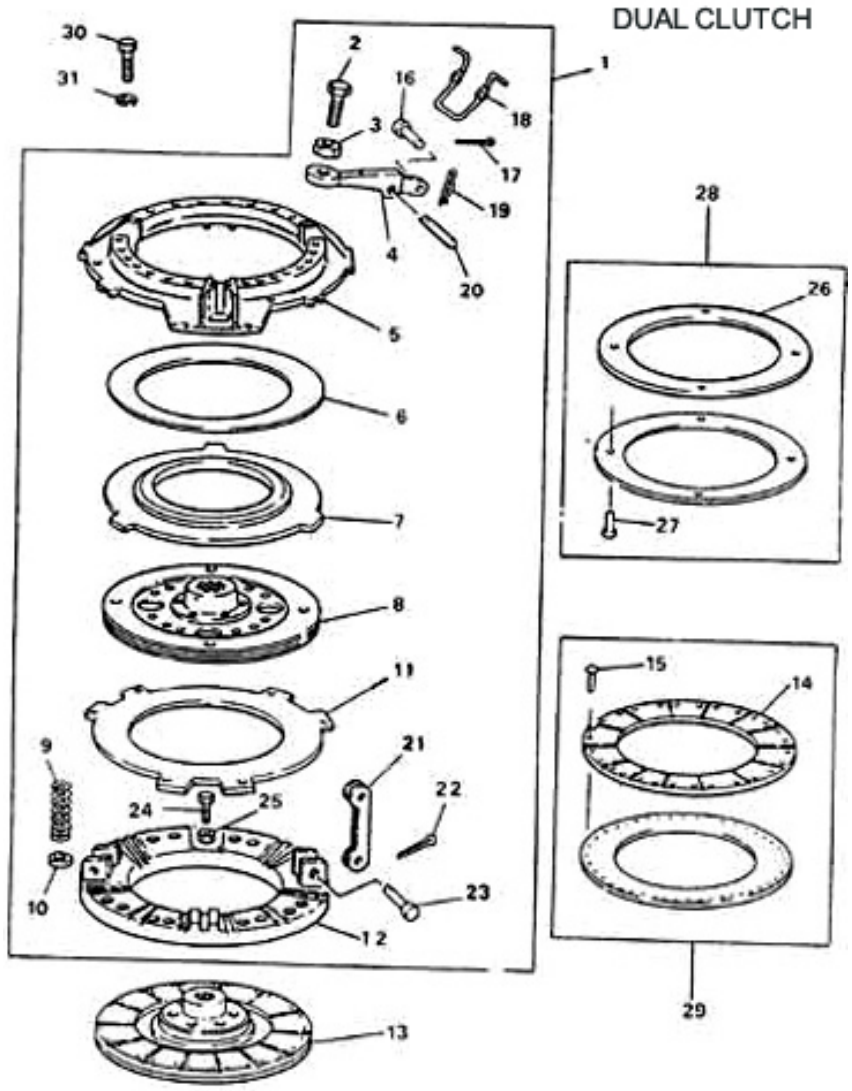


SL NO	PART NO	DESCRIPTION	QTY
27	2125735K01	Rivet-Brass	16
28	2125738K01	Service Kit-Driven Plate Pto	1
29	2125739k01	Service Kit - Driven Plate	1
30	0714404M01	Bolt - Hex Special	6
31	0339374X01	Washer Lock	6
NI	2125736K01	Clutch Service Kit-Major	
	(Includes Item No.2,4,9,10,16 To 25)		1
NI	2125737K01	Clutch Service Kit-Minor	
	(Includes Item No.2 To 4 And 16 To 25)		1

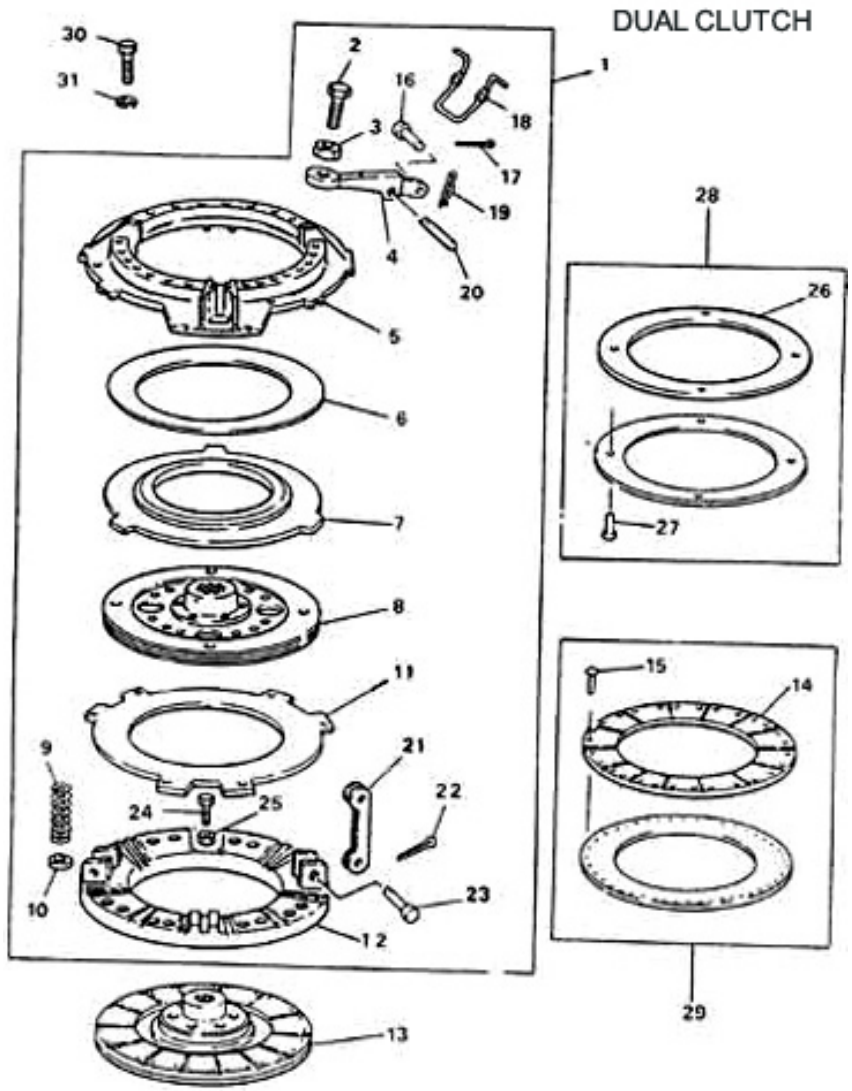


8 SPEED TRANSMISSION


SL NO	PART NO	DESCRIPTION	QTY
1	0184770M02	Coupler Planetary	1
2	0362463X01	Screw	4
3	0353434X01	Washer Lock	4
4	0180407M02	Plate Planetary Rear Cover	1
5	0897367M01	Washer Thrust	2
6	8000563P91	Assy Epicyclic Carrier(897711M92)	1
7	1865528M01	Ring Gear	1
8	0180408M02	Plate Planetary Front Cover	1
9	0180403M02	Shim Planetary	1
10	0180409M01	Pin Dowel	2
11	4244531M01	Main Shaft (245)	1
12	0195363M01	Snap Ring	2
13	0195493M01	Bearing (Common)	1
14	1682691M02	Gear Main Shaft - Inter & High	1
15	1682688M02	Gear Main Shaft - Low Speed	1
16	0338552X01	Bearing - Main Shaft	1
17	1682690M01	Gear	1
18	2700273M01	Bearing (245)	1
19	2700274M02	Spacer	1
20	0964944M01	Distance Piece	1
21	0964926M05	Input Shaft	1
22	0964929M01	Washer	1
23	4242651M01	Precoated Sealant Screw	1
24	0828020M01	Tab Washer	1

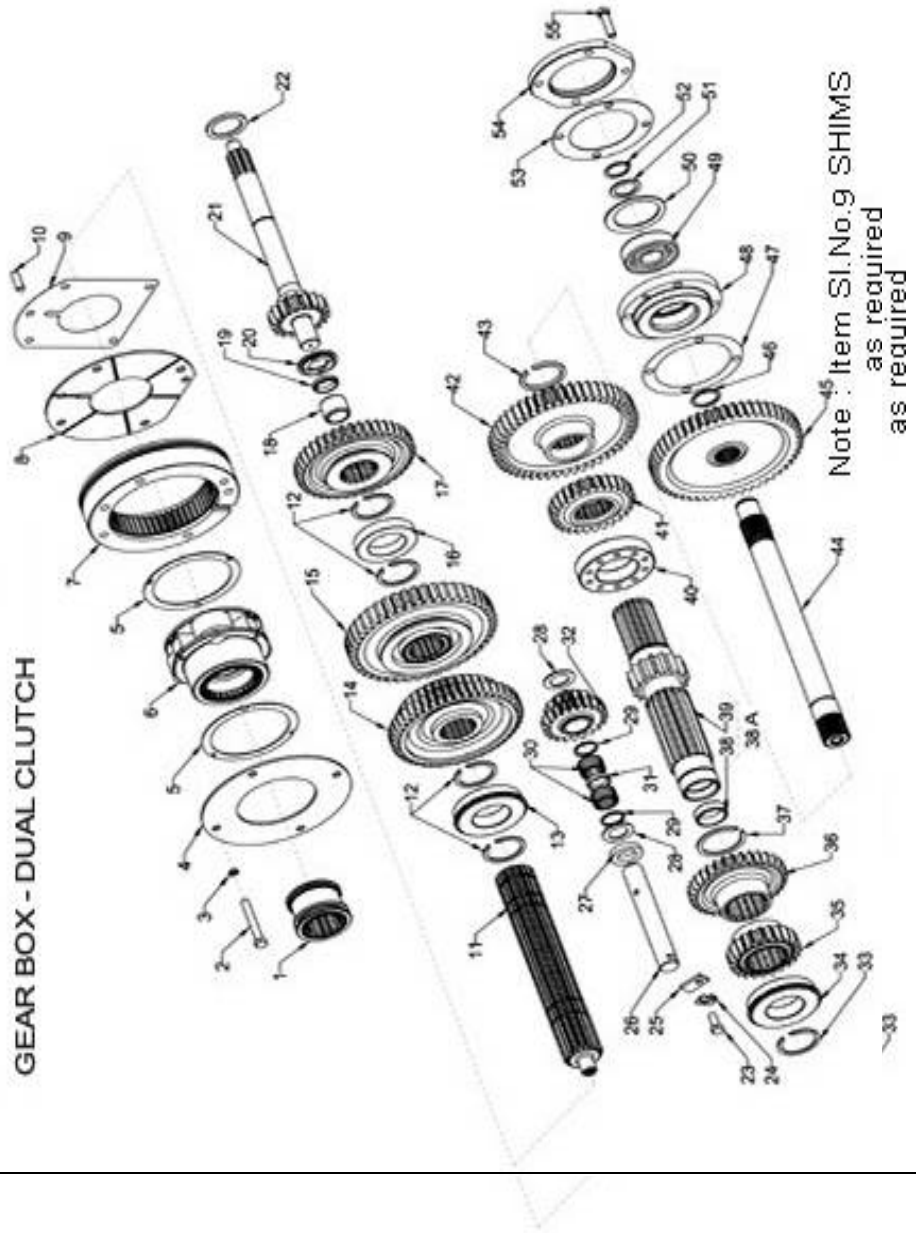

SL NO	PART NO	DESCRIPTION	QTY
25	0184789M01	Stop Reverse Cluster	1
26	0180445M01	Shaft Reverse Cluster	1
27	0189449M01	Spacer Washer	1
28	0180458M01	Washer Reverse Cluster	2
29	0183037M01	Washer Roller	2
30	0183039M01	Needle Roller (Common)	56
31	0183038M01	Spacer Roller	1
32	0183040M01	Gear Reverse Cluster	1
33	0195363M01	Snap Ring	1
34	0195493M01	Bearing (Common)	1
35	0180419M02	Pinion Counter Shaft - Inter. Speed	1
36	0180415M02	Pinion Counter Shaft - High Speed	1
37	0195500M01	Snap Ring	1
38	0195453M01	Bearing	1
39	0906472M03	Counter Shaft	1
40	0195507M01	Bearing (Common)	1
41	0964916M01	Pinion	1
42	0906468M03	Gear Constant Mesh	1
43	0195499M01	Snap Ring	1
44	1868533M02	Shaft - Front Pto	1
45	1671706M03	Gear Constant Mesh	1
46	0358913X02	Ring-Snap (Reliance Type)	1
47	0181237M01	Gasket	1
48	0899331M03	Housing - Pto Front Bearing	1
49	0899377M02	Ball Bearing	1
50	0355988M01	Snap Ring	1

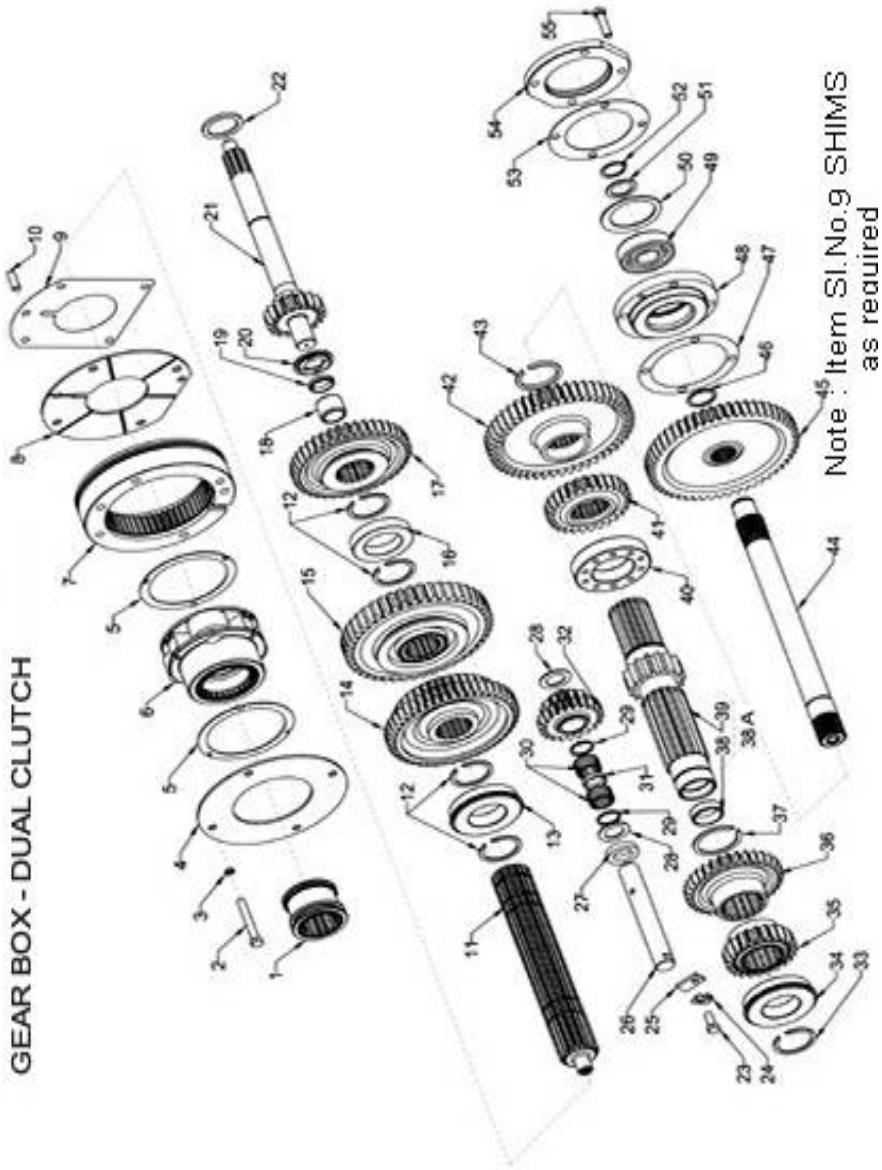


SL NO	PART NO	DESCRIPTION	QTY
51	0881122M02	Ring Retaining	1
52	0899385M01	Snap Ring	1

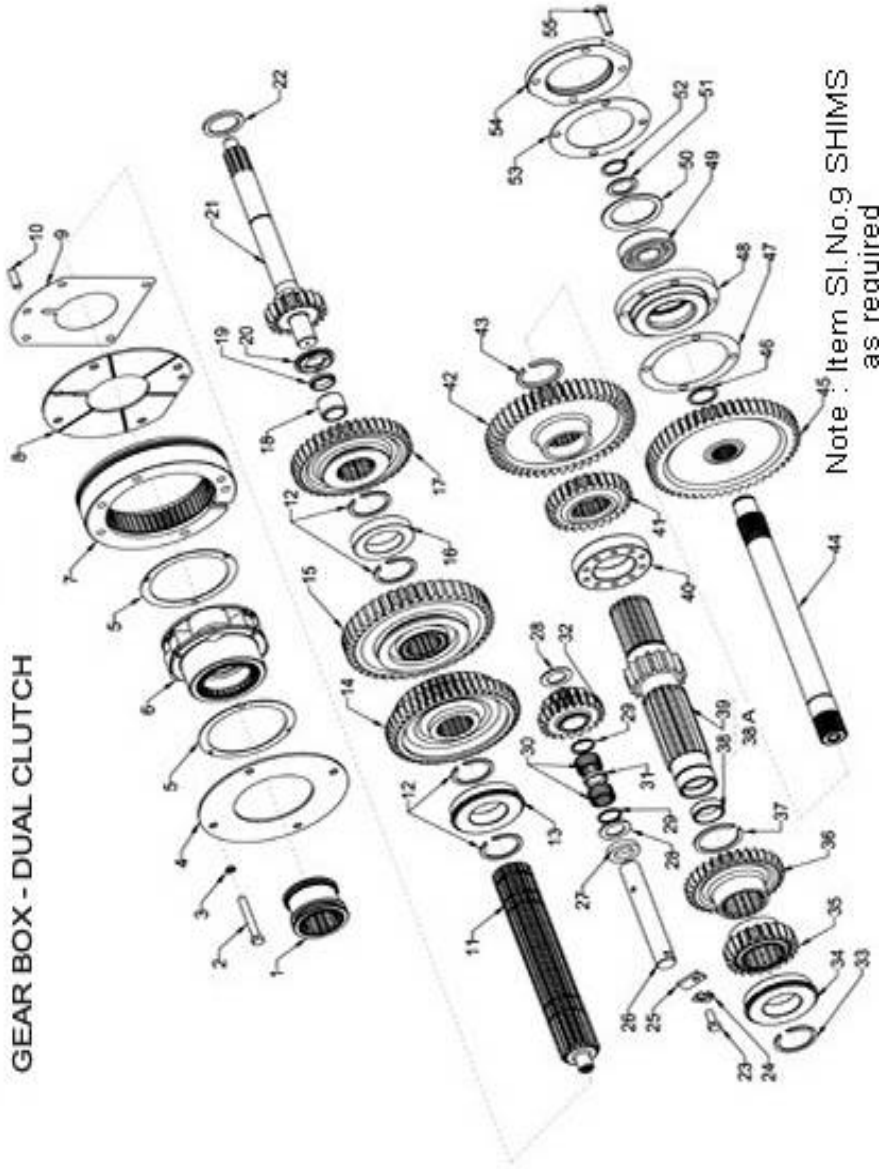


SELECTOR MECHANISM

SL NO	PART NO	DESCRIPTION	QTY
1	0002950X00	Plug Expansion	1
2	0711300M01	Shifter Rail - Planetary	1
3	1862866M02	Rail Shifter - 245	1
4	0180442M03	Shifter Rail	1
5	0716224M01	Rail Shifter - Inter & High	1
6	0191221M01	Spring	4
7	0180418M02	Plunger	4
8	0881144M01	Screw Fork Lock	6
9	0180443M01	Fork Planetary	1
10	0180446M01	Selector Planetory	1
11	1860773M01	Fork Selector	2
12	1862868M02	Selector	1
13	1873532M03	Fork – III Gear	1
14	1860761M01	Ball Retainer	1
15	1860767M01	Pin	1
16	0391838M01	Steel Ball	2
17	1860765M01	Plate Packing	1
18	1860764M01	Plate Stop	1
19	0362443X01	Bolt Hex	2
20	0353434X01	Washer Lock	2
21	0713990M01	Cup - Gear Shift Lever	2
22	0713991M01	Ring Locking	2
23	0713992M01	Lever - Gear Shift	1
24	0713993M02	Lever Planetary Gear Shift	1
25	0180581M02	Pin Gsl	2

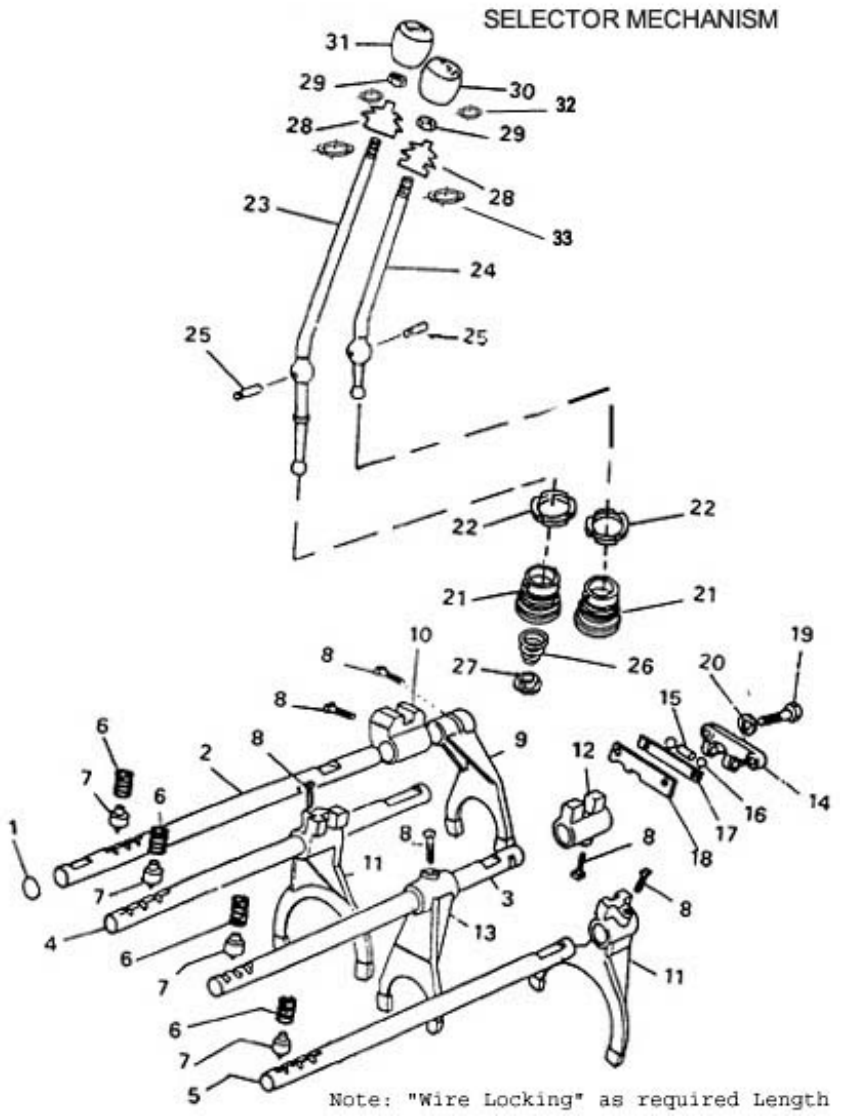


SL NO	PART NO	DESCRIPTION	QTY
26	0192007M01	Spring	1
27	1861024M01	Seat Spring	1
28	1694127M03	Cover-Shift Levers	2
29	1441303X01	Nut Hex	2
30	0717685M01	Knob High/Low Range	1
31	0717686M01	Knob Gear Shift Lever	1
32	4244693M01	Clip Snapper	2
33	3009816X01	Clip `Snapper'	2

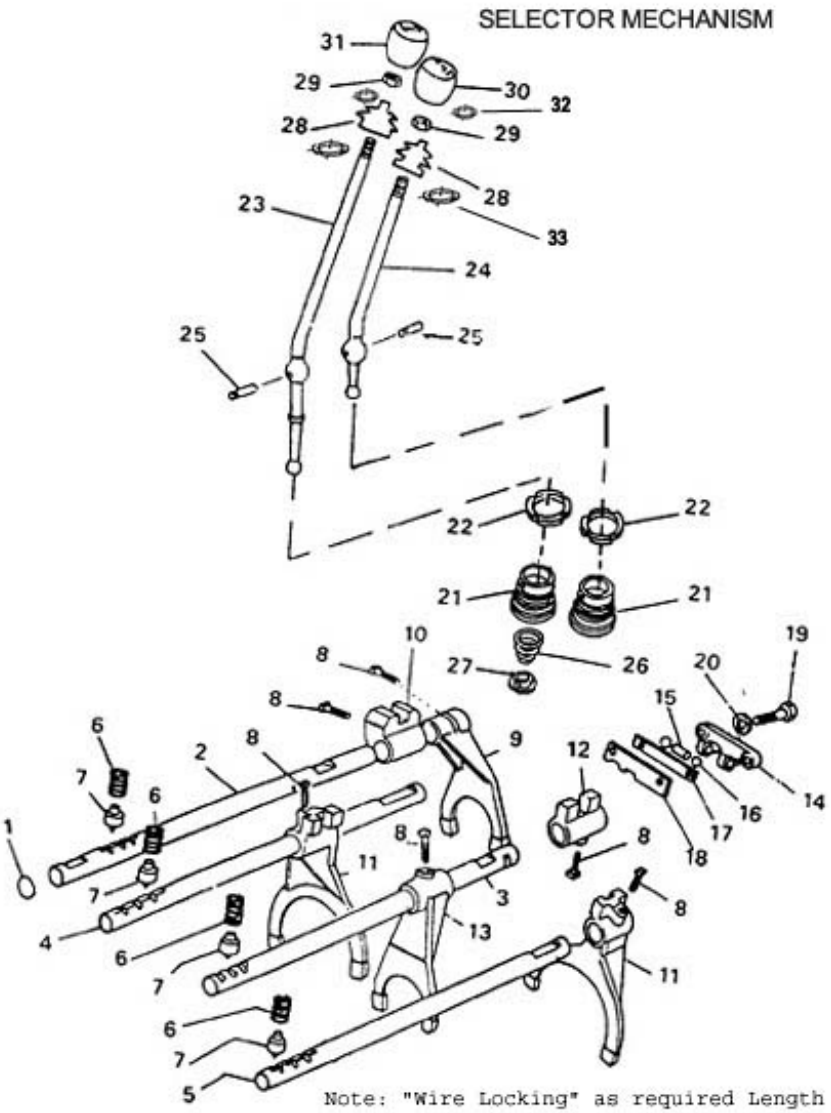


STEERING GEAR ASSY


SL NO	PART NO	DESCRIPTION	QTY
NI	0716093M91	Assembly Steering Gear	1
1	2125797K01	Box	1
2	2125583K01	Bush	4
3	2125612K01	Washer Welsh Plug	1
NI	2125683K01	Assembly Inner Column and Nut	2
4	2125590K01	Inner Column	1
5	2125584K01	Main Nut	1
6	2125613K01	Steel Ball 5/16" Dia.	27
7	2125585K01	Transfer Tube	1
8	2125586K01	Retainer Transfer Tube	1
9	2125602K01	Bolt	2
10	2125588K01	Rocker Shaft Secondary	1
11	2125599K01	Oil Seal	1
12	2125601K01	Oil Seal Felt	1
13	2125623K01	Drop Arm RH	1
14	2125609K01	Washer Spring	2
15	2125594K01	Nut	1
16	2125587K01	Rocker Shaft Primary	1
17	2125620K01	Shim	1
	2125621K01	Shim	1
	2125619K01	Shim	1
18	2125589K01	Peg Ball	1
19	2125615K01	Steel Ball 1/2" Dia.	1
20	2125611K01	Washer Tab	1
21	2125603K01	Bolt 2	

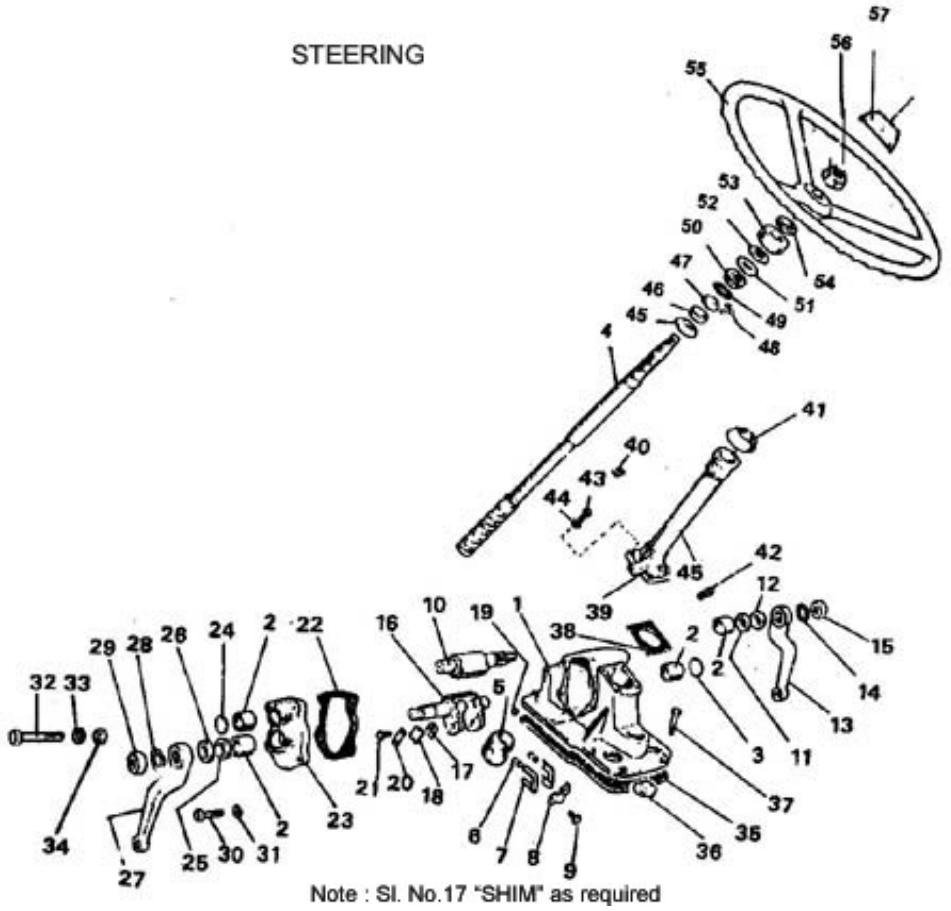

SL NO	PART NO	DESCRIPTION	QTY
22	2125618K01	Joint Cover	1
23	2125616K01	Cover Plate	1
24	2125612K01	Washer Welsh Plug	1
25	2125599K01	Oil Seal	1
26	2125601K01	Oil Seal Felt	1
27	2125622K01	Drop Arm. LH	1
28	2125609K01	Washer Spring	1
29	2125594K01	Nut	1
30	2125606K01	Bolt	2
31	2125608K01	Washer Spring	2
32	2125604K01	Bolt Dowel	2
33	2125607K01	Washer	2
34	2125595K01	Nut Nyloc	2
35	0180511M02	Gasket Steering Box to TC Housing	1
36	0713997M02	Plug Filler	1
37	0353700X01	Set Screw	8
38	2125617K01	Joint Tube Housing	1
39	2125798K01	Outer Tube Assembly	1
40	2125597K01	Grease Nipple	1
41	0716201M01	Grommet	1
42	2125580K01	Oil Plug	1
43	2125605K01	Bolt	4
44	2125608K01	Washer Spring	4
45	2125598K01	Grease Cup	1
46	2125592K01	Ball Race Ring	1
47	2125582K01	Spherical Ball Race	1

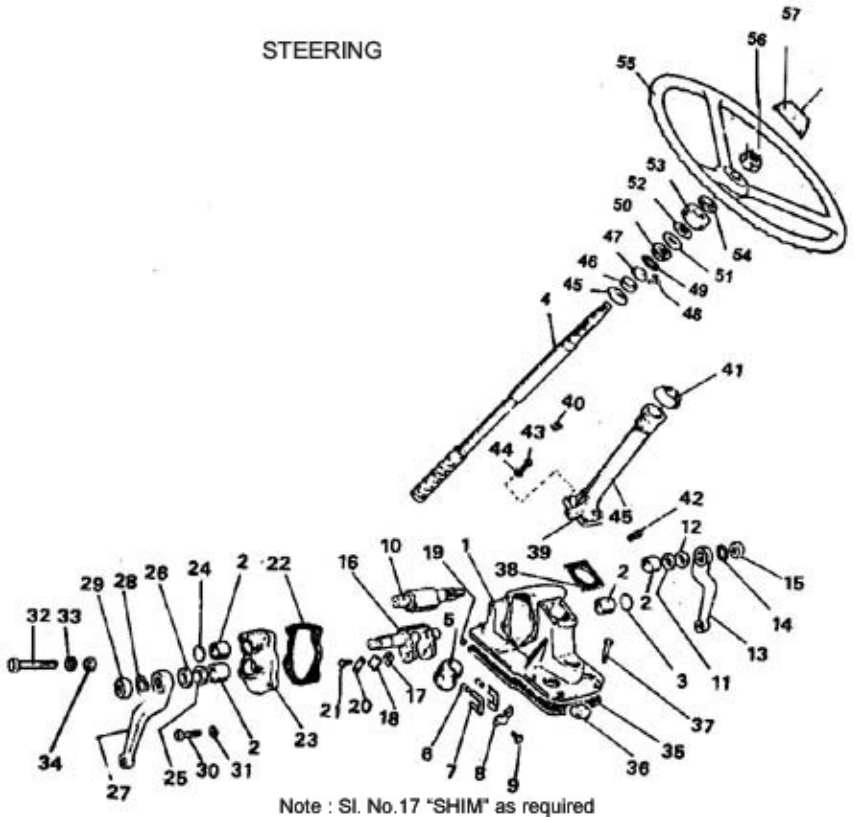


SL NO	PART NO	DESCRIPTION	QTY
48	2125614K01	Steel Ball 3/8" Dia.	12
49	2125600K01	Oil Seal 'O' Ring	1
50	2125581K01	Adjustable Ball Race	1
51	2125610K01	Washer Tab	1
52	2125593K01	Nut	1
53	1864867M01	Cover Steering Column	1
54	0827210M01	Washer Felt	1
55	0715831M01	Wheel Steering	1
56	0339682X01	Nut - Hex Thin	1
57	0717028M91	Assembly Cap Steering	1

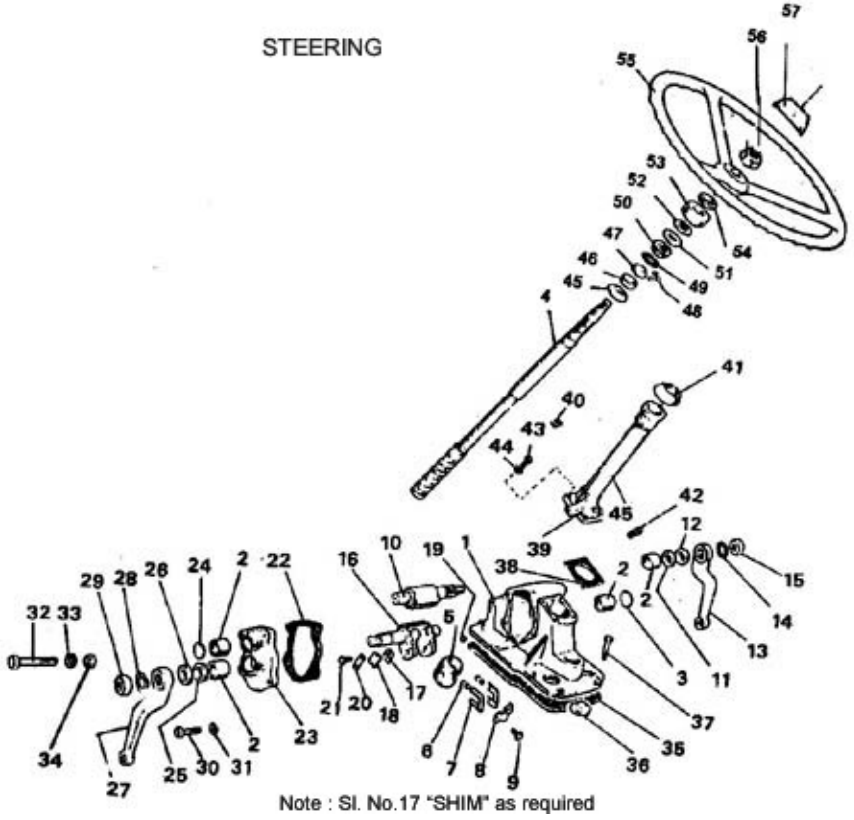


HYDROSTATIC STEERING

SL NO	PART NO	DESCRIPTION	QTY
1	0827210M01	Felt Washer	1
2	0716201M01	Grommet	1
3	0339123X01	Screw	4
3	0339376X01	Lock Washer	4
3	3009492X1	Screw	4
4	0339123X01	Screw	4
4	0339374X01	Flat Washer	4
4	0390972X01	Flat Washer	4
5	4255099M91	Assy Housing Steering Unit	1
6	0339376X01	Lock Washer	4
6	3009492X01	Bolt Hex	4
6	0390734X01	Flat Washer	4
7	4249288M91	Assy Pipe Stg Rt(Stg Rt Port)	1
8	4249289M91	Assy Pipe Stg Lt(Stg Lt Port)	1
9	4249291M91	Assy Pipe Lt2(T To Cyl Lt Hose-LH Side)	1
10	4249290M91	Assy Pipe Rt2(T To Cyl Rt Hose-LH Side)	1
11	4249293M91	Assy Pipe Rt3(T To Cyl Rt Hose-RH Side)	1
12	4249294M91	Assy Pipe Rt3(T To Cyl Lt Hose-RH Side)	1
13	4244253M91	Steering Column	1

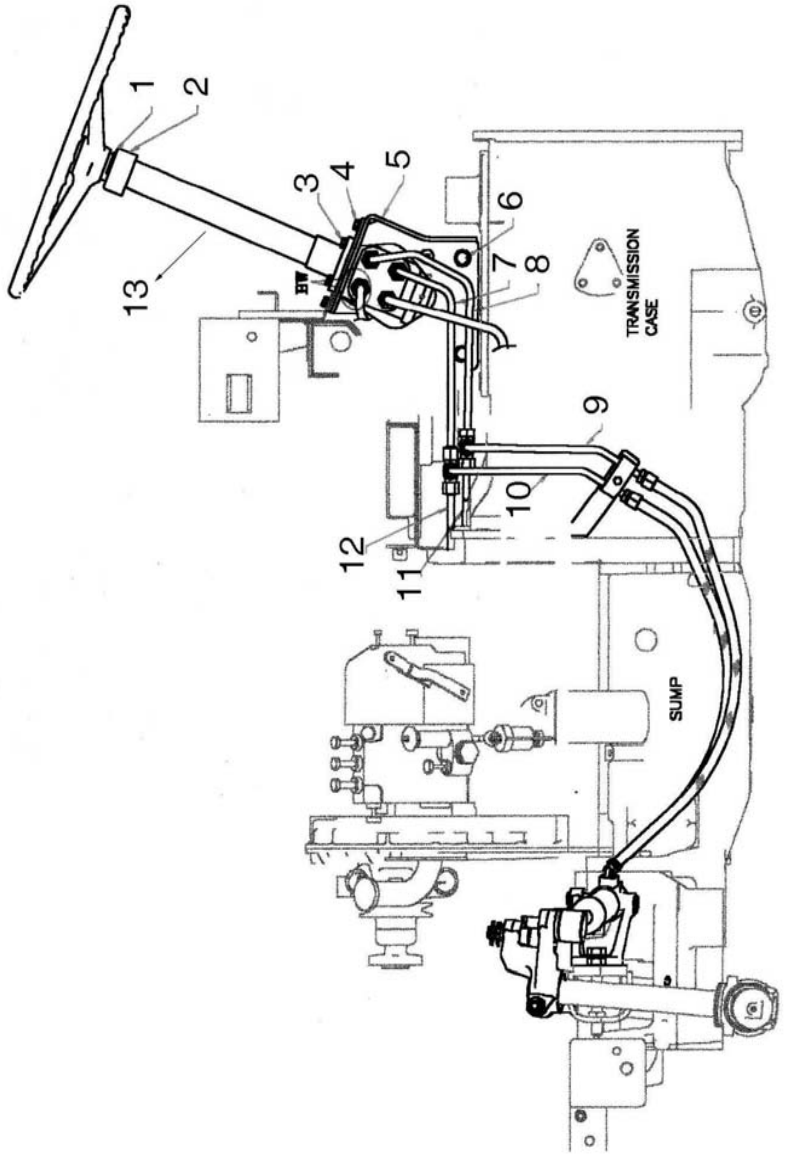


HYDROSTATIC STEERING

SL NO	PART NO	DESCRIPTION	QTY
1	0773126M92	Steering Pump	1
2	0831497M01	O Ring	1
3	3772717M91	Expansion Tank Assy	1
4	4256368M01	Adaptor-Pump Return Port	1
5	4256313M91	Assy Pipe Elbow Pump Outlet Port	1
6	0717328M01	Bracket-Pipe Support	1
7	0339030X01	Nut	3
8	0717314M02	Pad Rubber	6
9	0717511M01	Cover Clamp -Pipe	1
10	0339096X01	Hex Bolt	3
11	0717329M01	Cover Clamp -Pipe	1
12	0717329M01	Cover Clamp -Pipe	1
13	0717561M01	Plate Clamppipe	1
14	4256308M91	Assy Pipe Pump Return To Stg Gear	1
15	4256310M91	Assy Pipe Pump Outlet To Stg Gear	1
16	4255160M91	Assy Hose Pump Return To Stg Gear	1
17	4255158M91	Assy Hose Pump Outlet To Stg Gear	1
NI	1686462M02	External Gear-Pump	1
NI	0011940X01	Key Woodruff-Pump	1

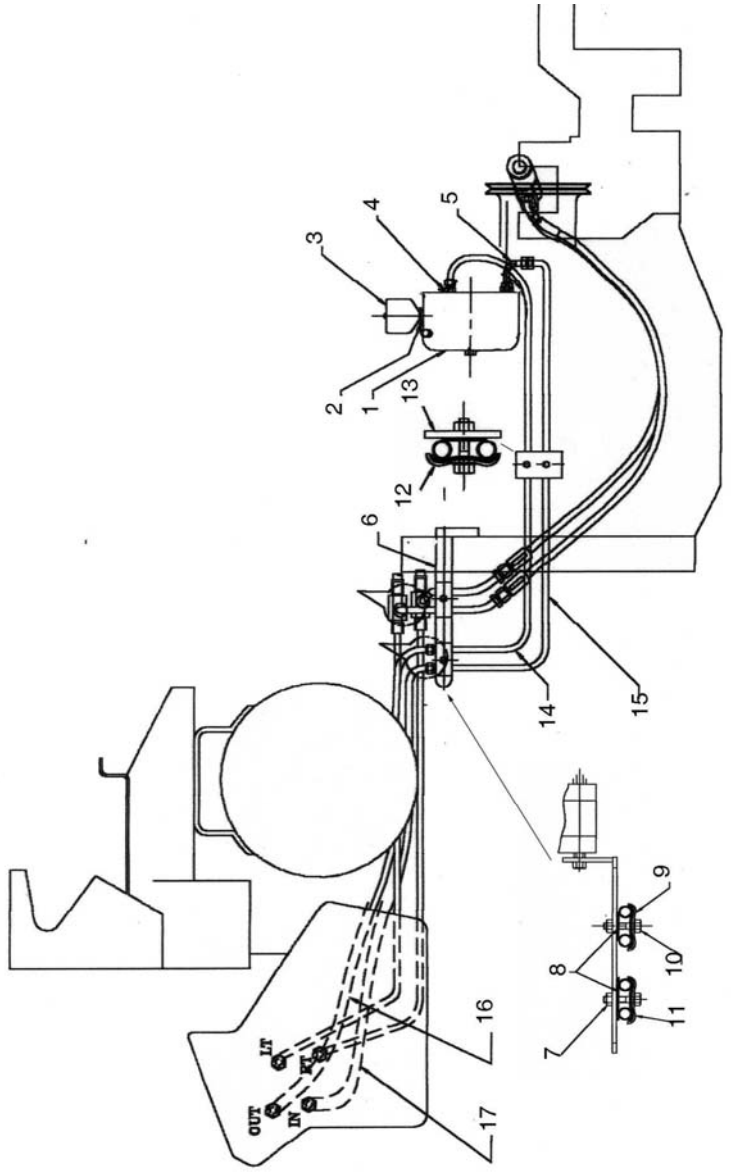


HYDROSTATIC STEERING

SL NO	PART NO	DESCRIPTION	QTY
1	4246056M01	Gear Port Adaptor13/16"	2
2	4246050M01	Gear Port Adaptor11/16"	2
3	4246734M01	O Ring	4
4	4243756M01	Top Plate	1
5	0715831M01	Steering Wheel	1
6	0717028M91	Steering Wheel Cap And Motif	1
7	4249206M91	Hydrostatic Steering Unit	1

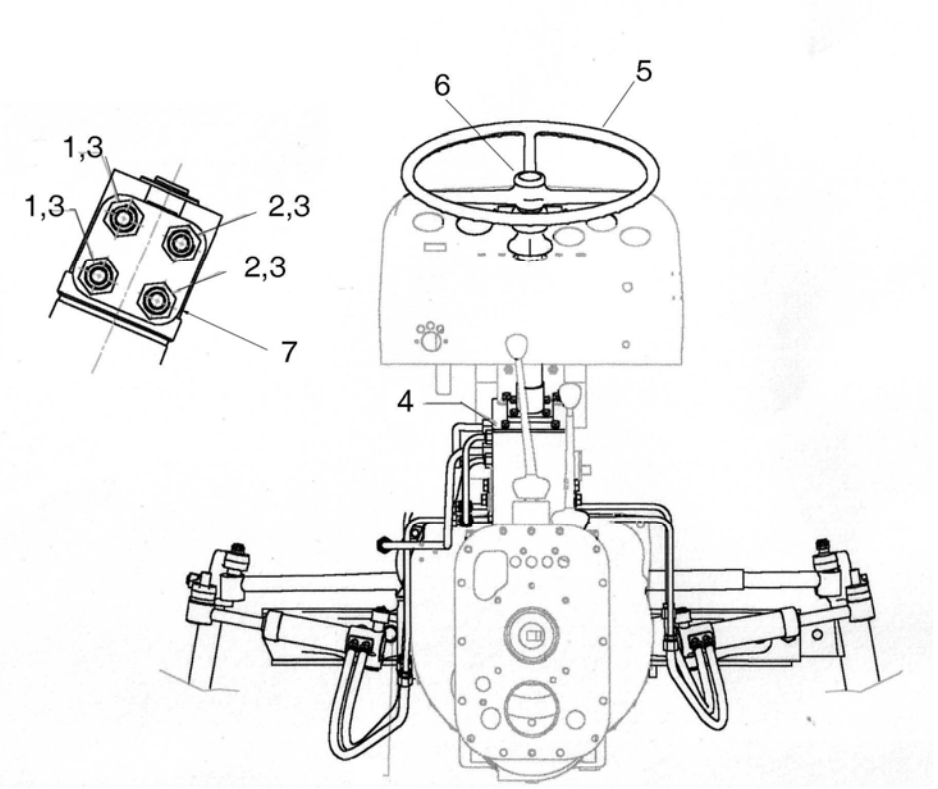


HYDROSTATIC STEERING

SL NO	PART NO	DESCRIPTION	QTY
1	3019582X91	Elbow Assy	4
2	1689005M01	Cylinder Hose	4
3	4249294M91	Assy Pipe Rt3(T To Cyl Lt Hose-Rh Side)	1
4	4249293M91	Assy Pipe Rt3(T To Cyl Rt Hose-Rh Side)	1
5	4246052M01	Joint-11/16"-16un Thread	2

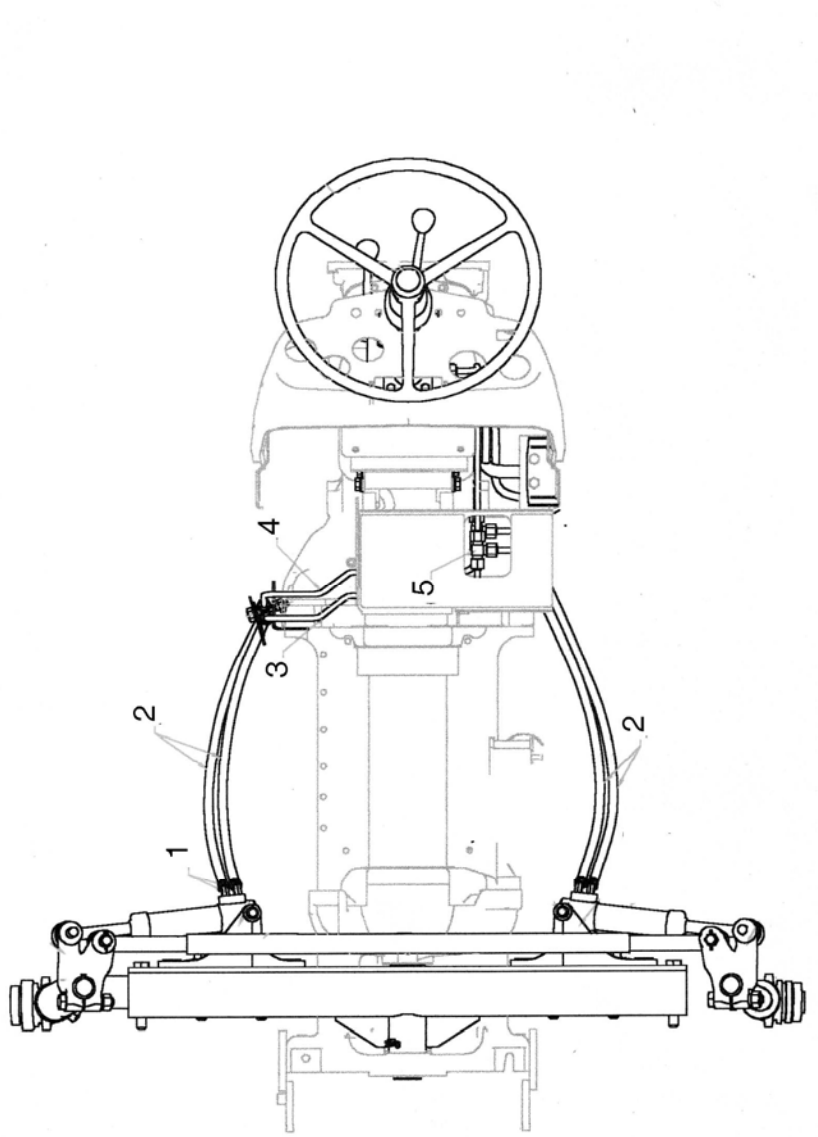


CENTRE HOUSING ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	1664511M05	Centre Housing (Di/245).	1
2	0183267M01	Stud	4
3	1860900M02	Stud - Anchor Bracket	4
4	0195569M01	Stud	4
5	1869491M0160	Cover Plate	1
6	1660551M01	Gasket	1
7	0353676X01	Bolt Hex	3
8	0353446X01	Lock Washer	3
9	0717257M03	Plug - Drain	1
10	0180474M01	Washer - Sealing	1
11	0181225M91	Trough Assy.	1
12	0339229X01	Bolt Hex	2
13	1441462X01	Nut Hex	2
14	0195453M01	Bearing	1
15	0532883M01	Bushing - PTO	1
16	3599003M91	Assy. Pto Shaft	1
17	0713923M01	Bearing - Pto Shaft	1
18	0831581M02	Circlip	1
19	1004633M01	'O' Ring	1
20	3599002M01	Housing - Pto Seal	1
21	3699801M01	Seal	1
22	0533183M01	Shield	1 NA
23	0353697X01	Screw	2
24	0532888M01	Cap - PTO	1

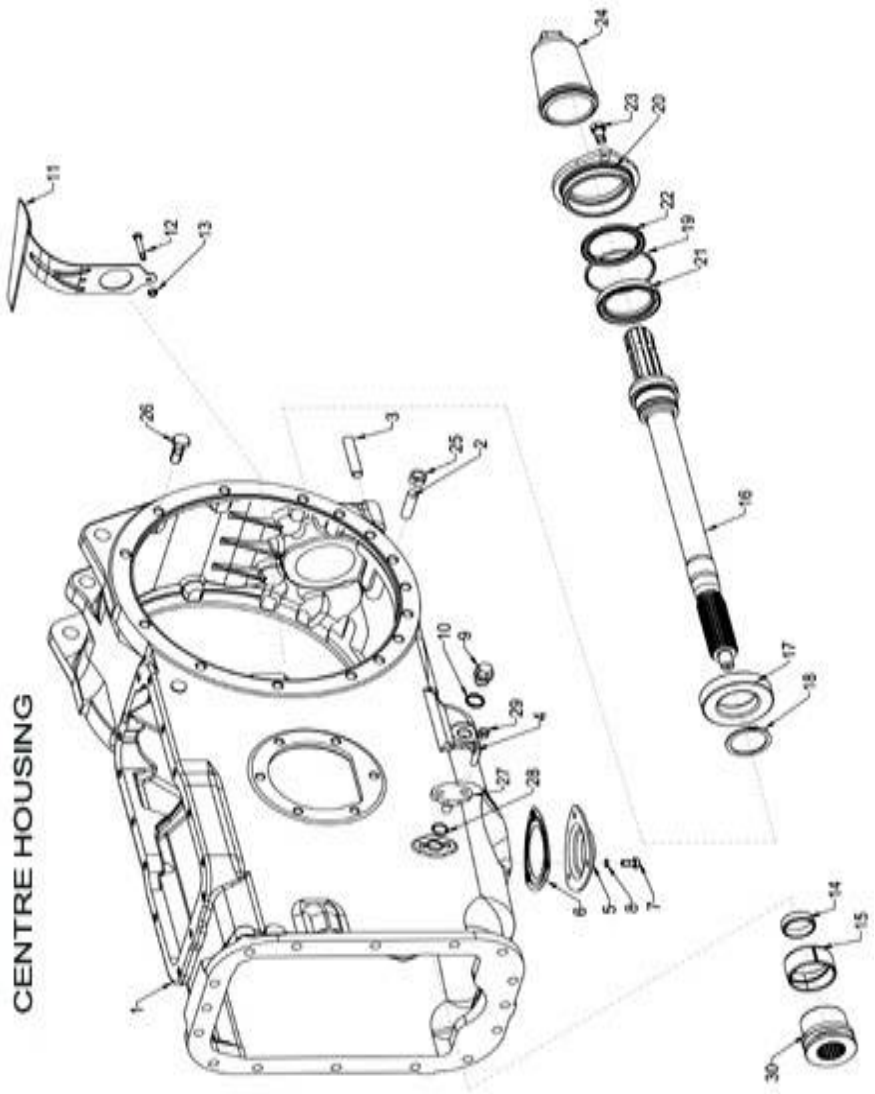


SL NO	PART NO	DESCRIPTION	QTY
25	0353437X01	Nut Hex	4
26	0354277X01	Bolt	26
27	0898643M01	Pin Pump Support	2
28	0851258M01	O Ring	2
29	0353916X01	Nut Hex	4
30	0713590M01	Hub - Pto	1

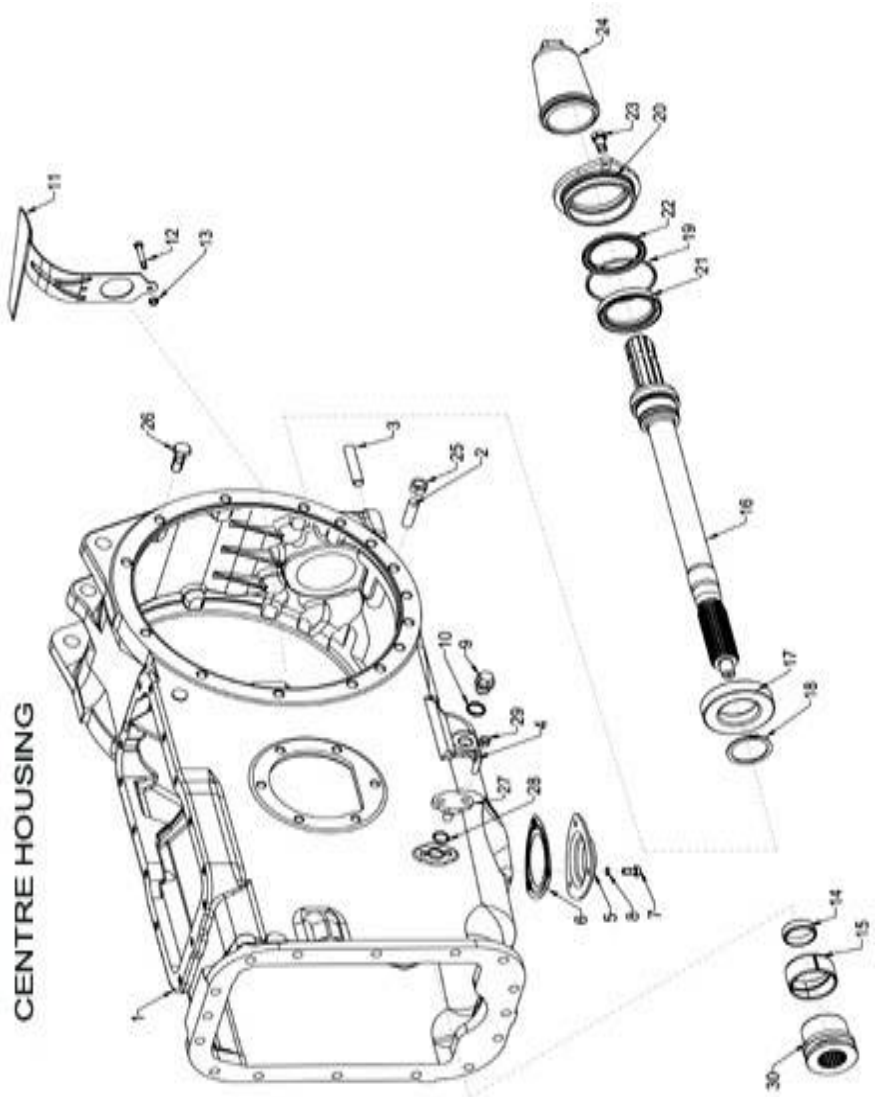


CENTRE HOUSING ASSEMBLY (OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	0719211M91	Centre Housing (Di/245).	1
2	0377616X01	Stud	4
2A	0377617X01	Stud	8
3	1860900M02	Stud - Anchor Bracket	4
4	0195569M01	Stud	4
5	1869491M0160	Cover Plate	1
6	1660551M01	Gasket	1
7	0353676X01	Bolt Hex	3
8	0353446X01	Lock Washer	3
9	0717257M03	Plug - Drain	1
10	0180474M01	Washer - Sealing	1
11	0195453M01	Bearing	1
12	0532883M01	Bushing - PTO	1
13	3599003M91	Assy. Pto Shaft	1
14	0713923M01	Bearing - Pto Shaft	1
15	0831581M02	Circlip	1
16	1004633M01	'O' Ring	1
17	3599002M01	Housing - Pto Seal	1
18	3699801M01	Seal	1
19	0533183M01	Shield	1 NA
20	0353697X01	Screw - Hex Housing PTO Seal To C.H.	2
21	0532888M02	Cap - PTO	1
22	0353437X01	Nut Hex	4
23	0898643M01	Pin Pump Support	2

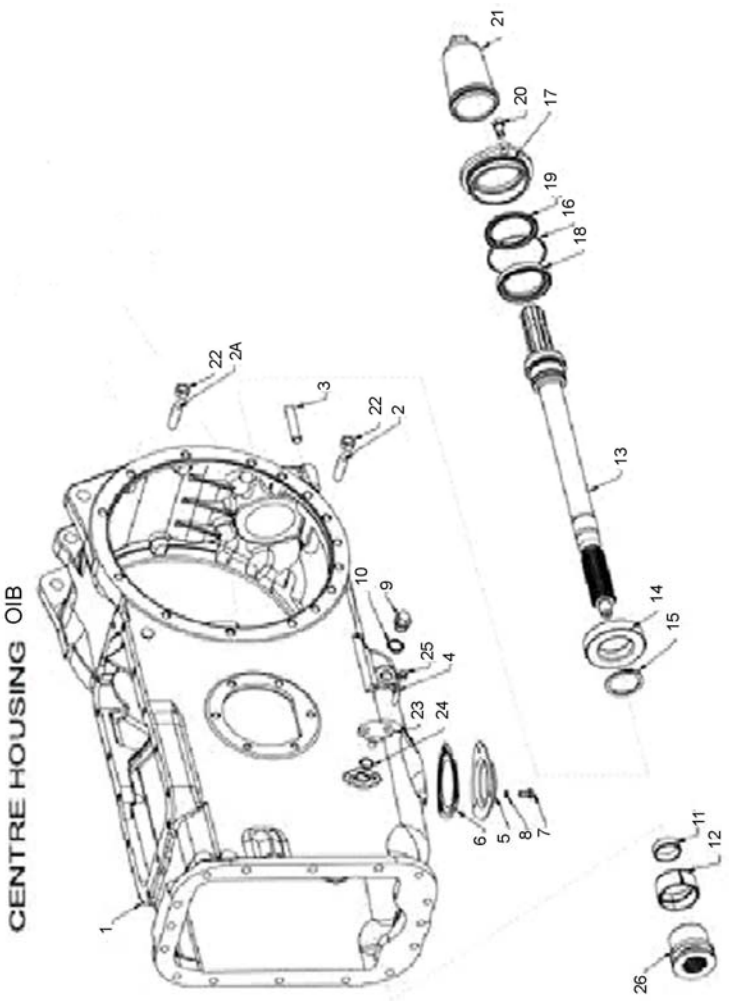


SL NO	PART NO	DESCRIPTION	QTY
24	0851258M01	O Ring	2
25	0353916X01	Nut Hex	4
26	0713590M01	Hub - PTO	1

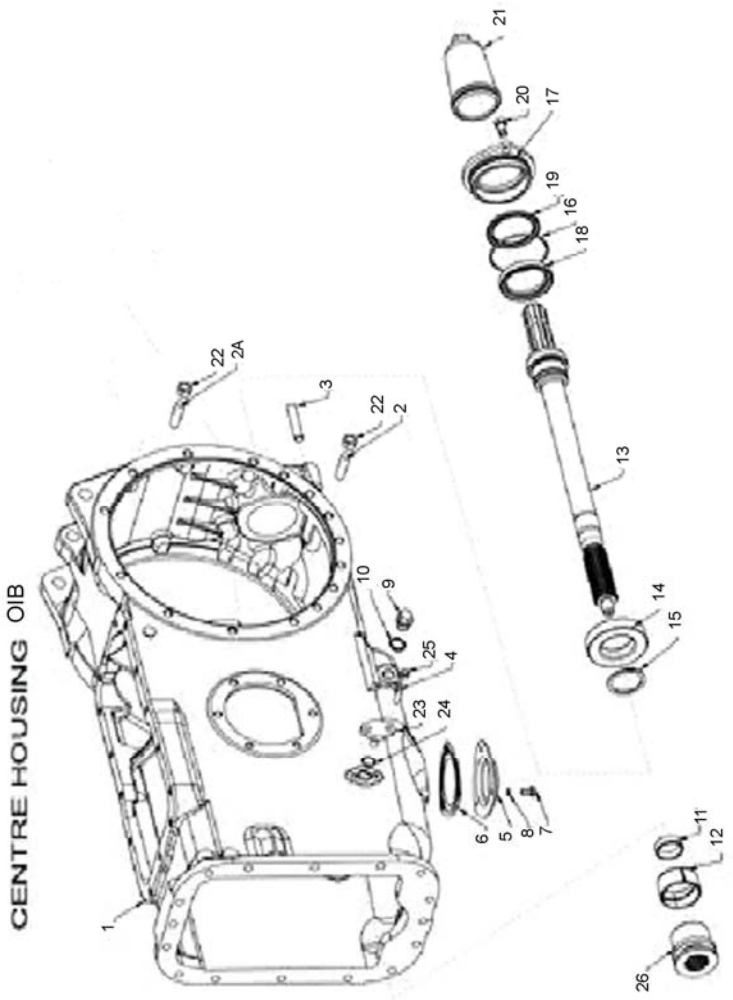


SIDE COVER ASSEMBLY RH

SL NO	PART NO	DESCRIPTION	QTY
NI	0717901M92	Assy. Response Cover (Item 1-10)	1
1	1871873M01	Cover	1
2	0898207M02	Tube	1
3	1869407M02	Shaft	1
4	0377426X01	Ring	1
5	1001833M01	'O' Ring	1
6	1869136M01	Spring	1
7	1869134M02	Cam	1
8	1869408M01	Plate - Lever Adjusting	1
9	0360588X01	Pin - Spirol	1
10	0360559X01	Pin - Spirol	1
11	0181217M04	Gasket	1
12	1662278M02	Lever - Response	1
13	1668053M01	Plate - Draft Response	1
14	0716888M01	Screw	1
15	0717881M01	Screw Pan Head	4
16	0377748X01	Washer - Fibre	2
17	0717092M91	Indicator - Oil Level	1
	2449A00101	Threaded Dip Stick	1

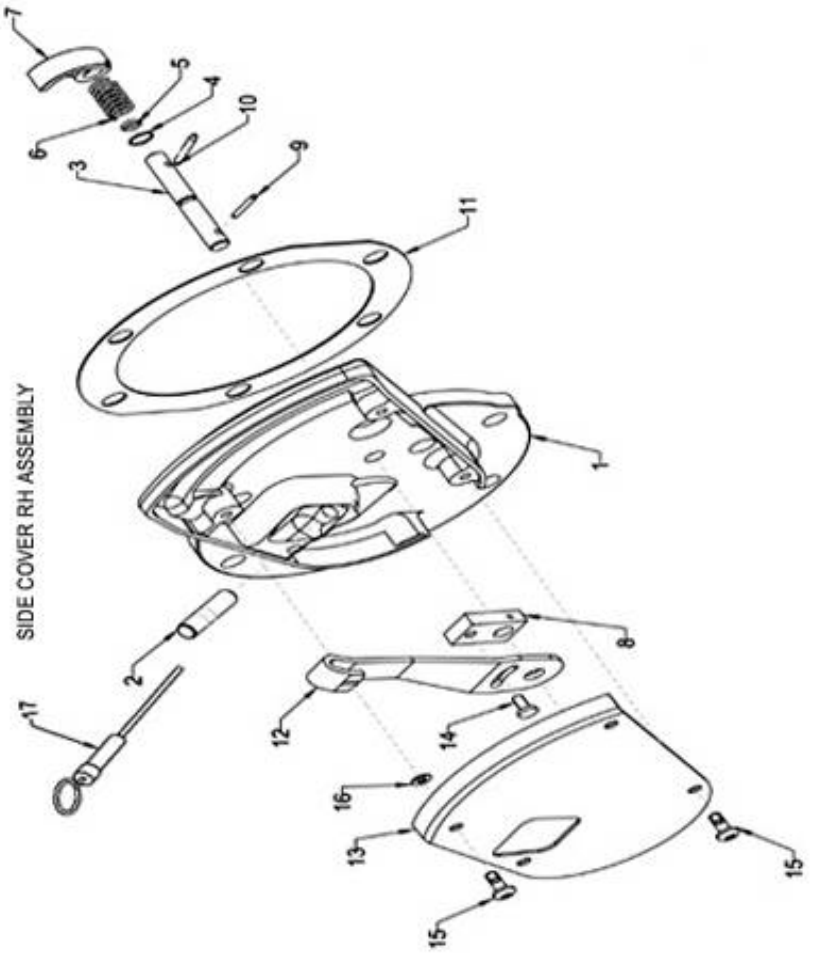


SIDE COVER ASSEMBLY LH

SL NO	PART NO	DESCRIPTION	QTY
1	1868909M0208	Fork Pto	1
2	0180418M02	Plunger	1
3	0191221M01	Spring	1
4	0181217M04	Gasket	1
5	0888108M05	Cover - Pto	1
6	0195562M01	O Ring	1
7	0353213X01	Locking Ring	1
8	0714555M92	Lever Assy Pto	1
9	0715592M01	Thin Nut	1
10	0717683M01	Knob Pto Shift Lever	1
11	1440999X01	Slotted Spring Pin	1
12	4242655M01	Precoated Sealant Screw	1
13	4242654M01	Precoated Sealant Screw	5

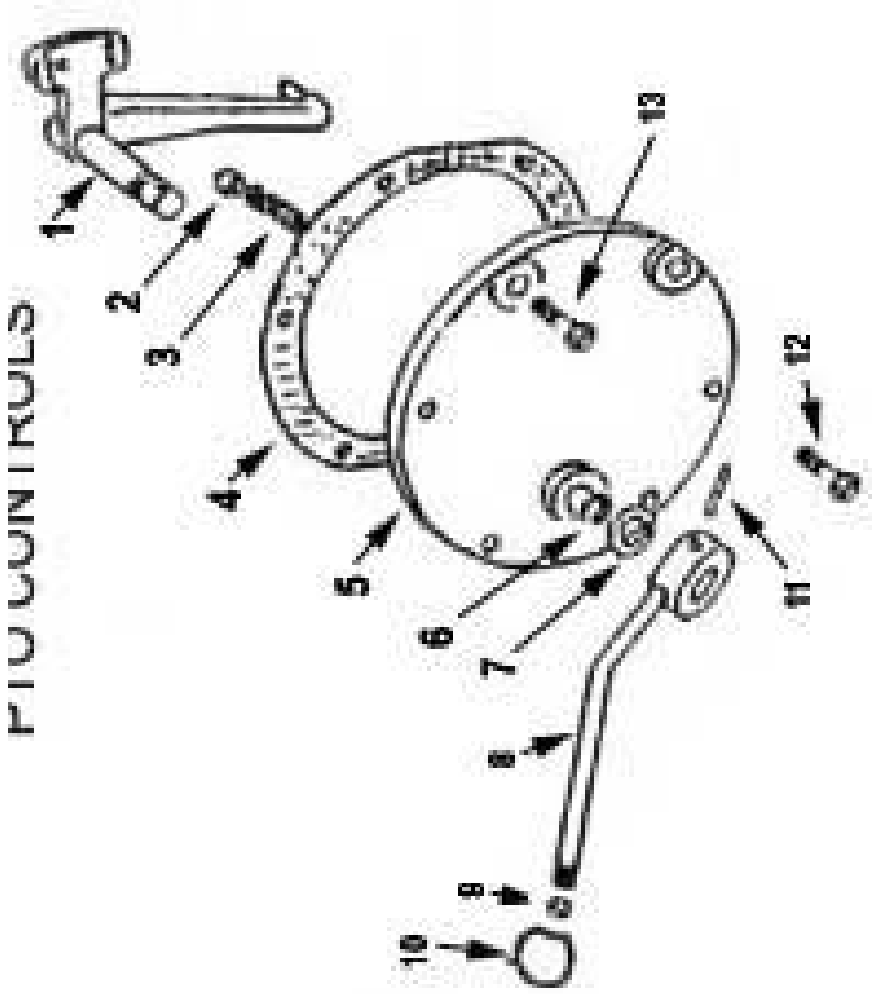


REAR AXLE HOUSING – RH ASSEMBLY(DRUM)

SL NO	PART NO	DESCRIPTION	QTY
1	0717718M02	Axle Housing . RH	1
2	0717753M01	Bush Diff Lock	1
3	0717917M01	Coupler Diff Lock	1
4	0717756M01	Fork - Diff. Lock	1
5	0355723X01	Pin Spring	1
6	0715631M01	Shim	AR
6	0715634M01	Shim	AR
6	0716692M02	Shim - Rear Axle Bearing.	AR
7	1850909M91	Bearing	1
8	1865014M01	Clevis	1
9	0353428X01	Locknut (0576 153)	1
10	0717752M01	Shaft - Diff. Lock	1
11	0364784X01	O Ring	1
12	0717755M01	Spring Diff Lock	1
13	1441302X01	Screw	2
14	0339376X01	Lock Washer	2
15	0354454X01	Groove Pin	1
16	0717880M9165	Assy. Bracket - Diff. Lock	1
17	1871783M01	Pedal - Diff. Lock	1
18	1860961M01	Shaft Diff Lock Pedal	1
NI	0906811M01	Boot	1

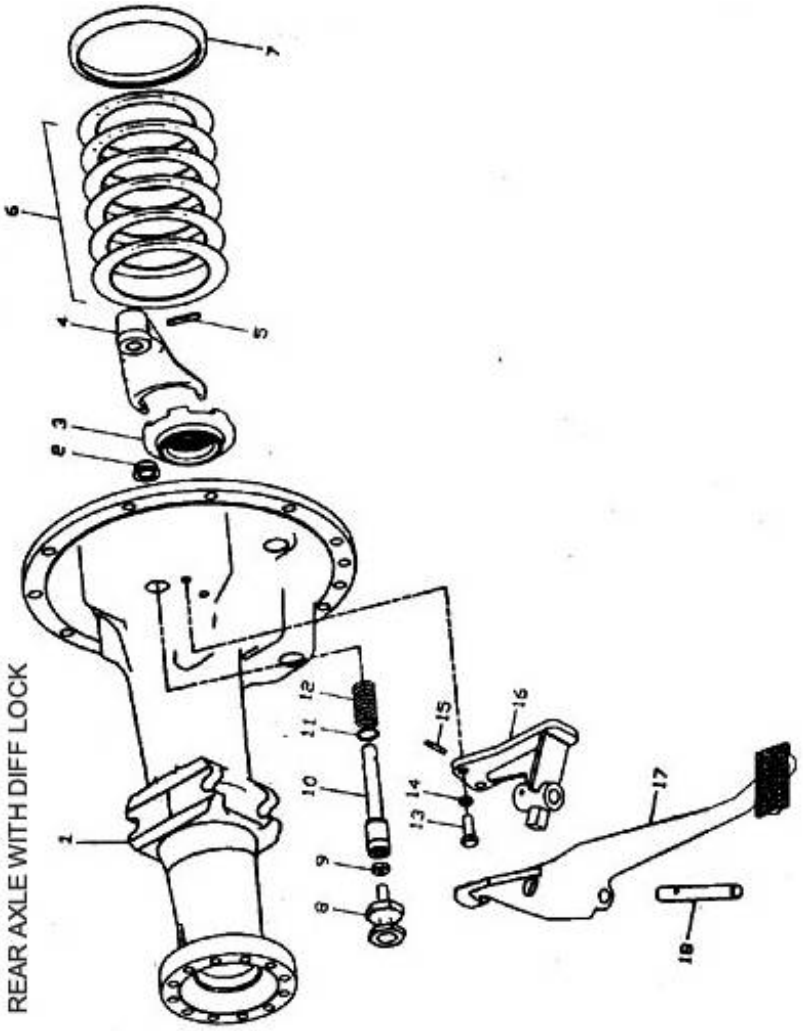


REAR AXLE HOUSING – LH ASSEMBLY(DRUM)

SL NO	PART NO	DESCRIPTION	QTY
1	0183259M02	Shim	1
2	0183260M02	Shim	1
3	0183261M02	Shim	1
4	4244061M01	Hsg. Rear Axle LH - Drum Brake	1
5	4248487M01	Shaft - Lower Link	2
6	0716047M01	Bush - Brake Camshaft	1
7	0013710X00	Plug - Expansion	1
8	3019575X01	Washer Flat	2
9	0714334M01	Nut - Hex Nylock	2
10	0183254M01	Gasket - C Hsg To Axle Hsg Joint	2
11	0827707M06	Brake Drum	2
12	8001174P91	Assy. Rear Axle Shaft & Bearing	2(incl 14-19)
13	0897038M91	Assy. Rear Axle Shaft & Bolt	2
14	1210C00901	Shaft - Rear Axle	2
15	0185400M01	Bolt - Rear Axle	16
16	0195677M01	Seal - Oil	2
17	0183255M03	Retainer	2
18	1850088M91	Taper Roller Bearing	2
19	0180596M02	Collar	2
20	0361544X01	Bolt-Hex Axle Housing To Retainer	24
21	0353432X01	Washer Lock	24
22	0195678M02	Seal - Oil	2
23	0180004M01	Nut - Rear Wheel	16

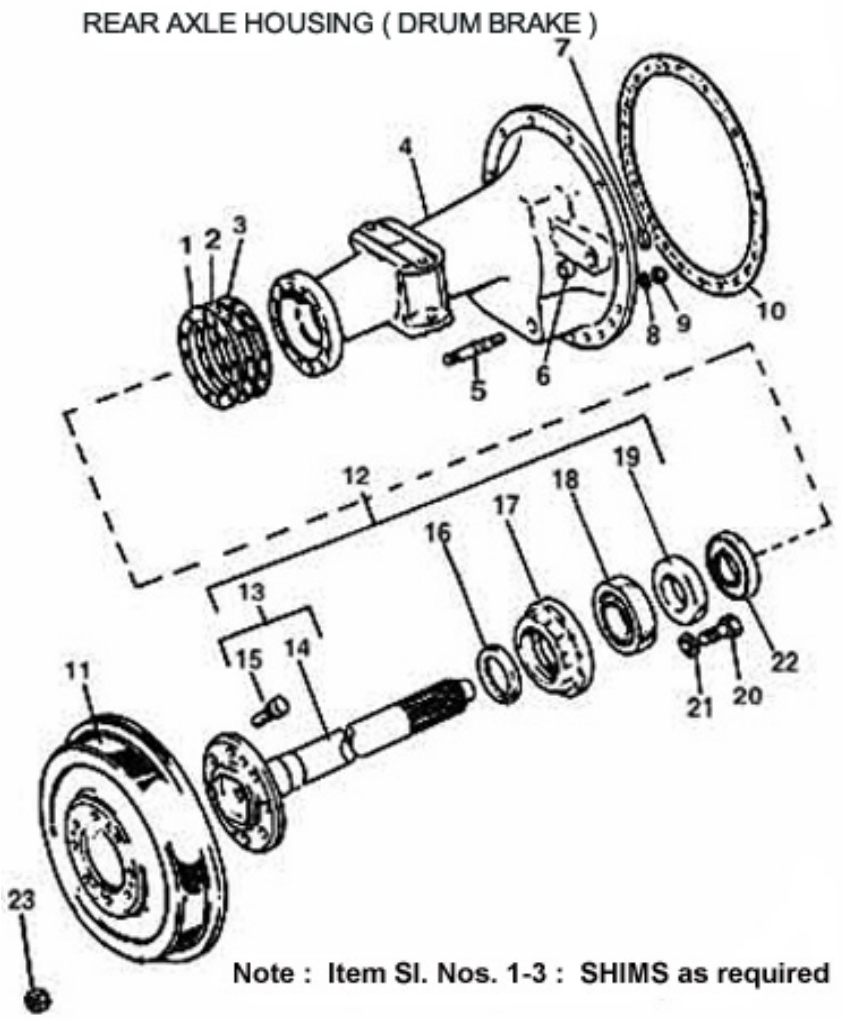


DIFFERENTIAL ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	1662955M01	Crown Wheel	1
2	1662956M02	Pinion	1
3	0712502M01	Bolt	12
4	0712503M01	Nut	12
5	0717736M02	Nut - Driving Pinion Lock	2
6	0717782M01	Washer Nut Lock	1
7	1850087M91	Taper Roller Bearing (Drum Brake)	1
8	0181246M02	Screw Differential	6
9	3771134M0109	Diff. Case RH -Order4242305m91)	1
10	0717916M01	Cap Diff. Coupling	1
11	0717891M03	Gear Differential	2
12	1210C00601	Joint Diff. Cross	1
13	2746322M03	Pinion Differential	4
14	4246028M02	Washer - Diff. Pinion Thrust	4
15	4245410M01	Washer - Diff. Gear Thrust	2
16	0716966M0109	Diff. Case LH -Order4242305m91)	1
	3771132M0109	Diff. Case LH for OIB(0719934M91)	1
17	0196097M01	Snap Ring	1
18	0191250M01	Bearing (Common)	1
19	0899199M01	Screw Hex	6
20	0518862M0109	Sleeve Pinion	1
21	0714475M92	Sleeve Pinion (Di/245)	1
22	1850092M92	Taper Roller Bearing (0185778M01/0185777M01)	2
23	0719785M91	Assy. Oil Splasher	1

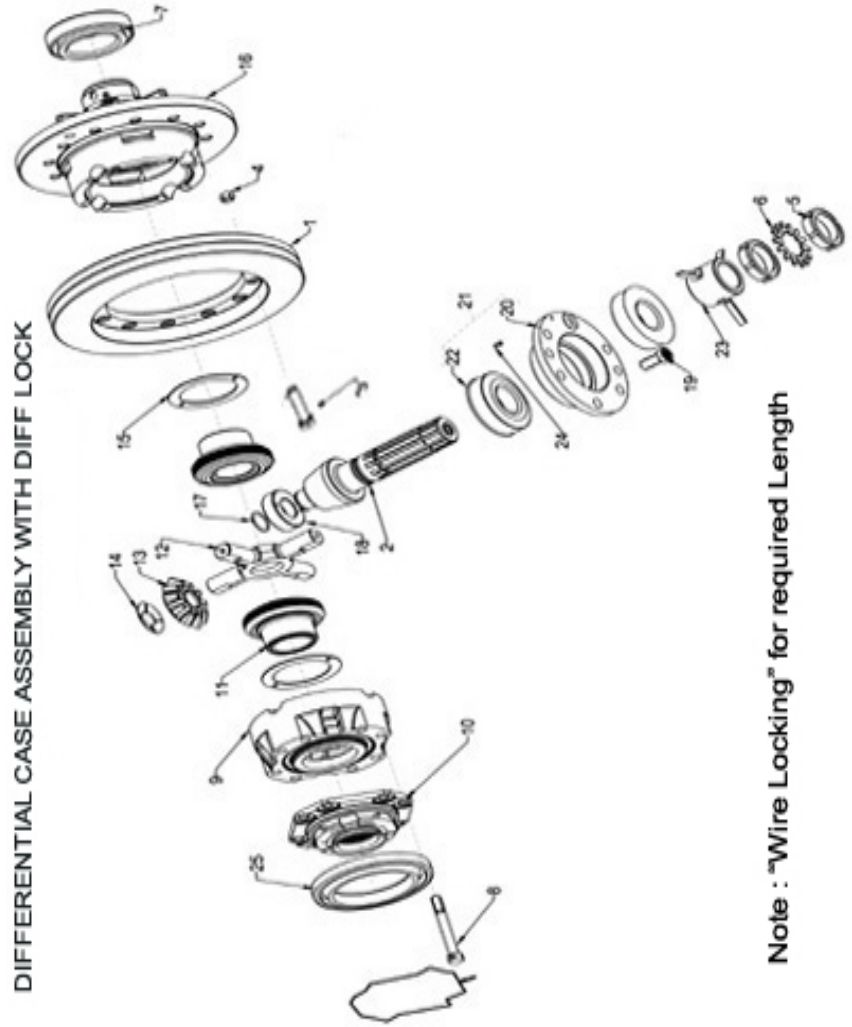


SL NO	PART NO	DESCRIPTION	QTY
24	0181253M01	Pin	1
25	1860909M91	Taper Roller Bearing	1
NI	4242305M91	Assy Diff Case LH&RH	1
NI	0719934M91	Assy Diff Case LH&RH for IOB	1

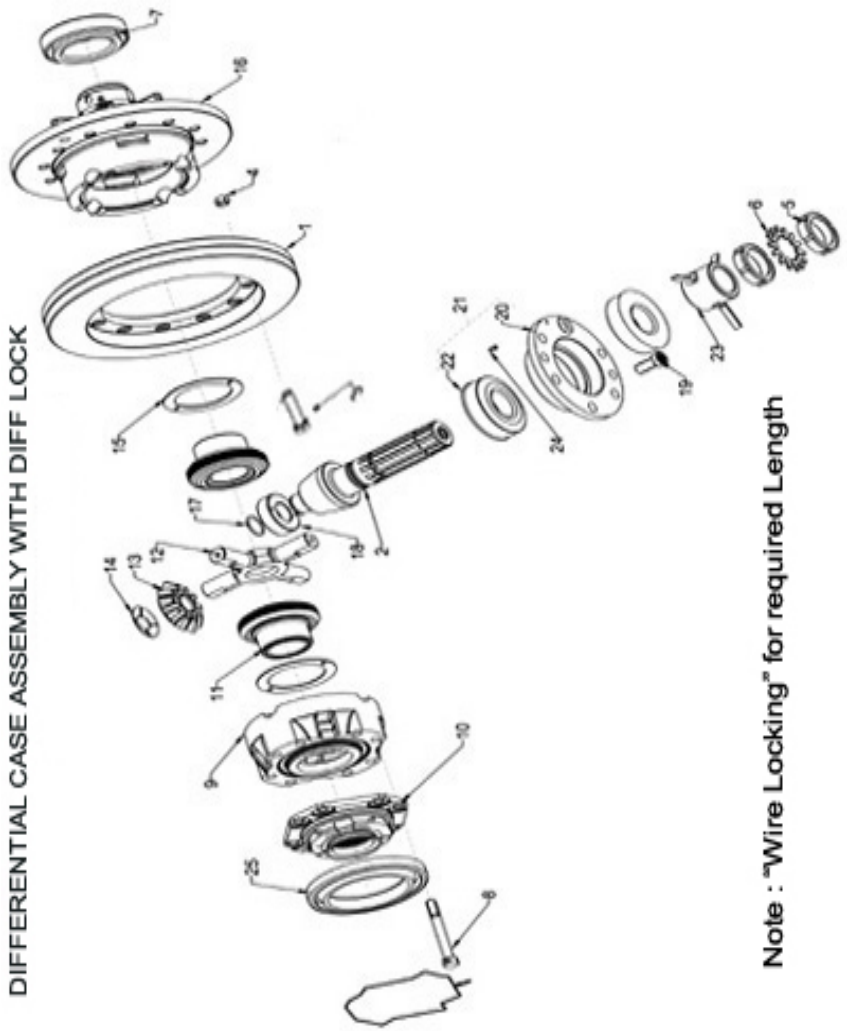


BRAKE ASSEMBLY(DRUM)

SL NO	PART NO	DESCRIPTION	QTY
1	0827143M91	Assy. Brake Less Camshaft	2
2	0827707M06	Brake Drum	1
3	2125752K01	Spring Shoe To Anchor Pin	4
4	2125749K01	Anchor Pin Plate	2
5	2125745K01	Shoe Hold Down Kit	2
6	4250750M91	Lined Shoe	4
7	2125753K01	Spring Adjuster End	2
8	2125754K01	Adjuster Assy.	2
9	2125757K01	Tappet Adjustable	2
10	2125755K01	Barrel	2
11	2125756K01	Tappet Plain	2
12	2125750K01	Space Washer	4
13	2125746K01	Anchor Pin	4
14	2125743K01	Steady Post	4
15	2125742K01	Back Plate	2
16	2125744K01	Nut Steady Post	4
17	0825040M01	Plate Cover Camshaft	2
18	0825041M01	Spring - Cover Plate	2
19	0713921M02	Lever - Rear Brake	2
20	0339666X01	Bolt Hex	2
21	0016346X00	Key - Woodruff	2
22	0892545M01	Shaft - Cam	2

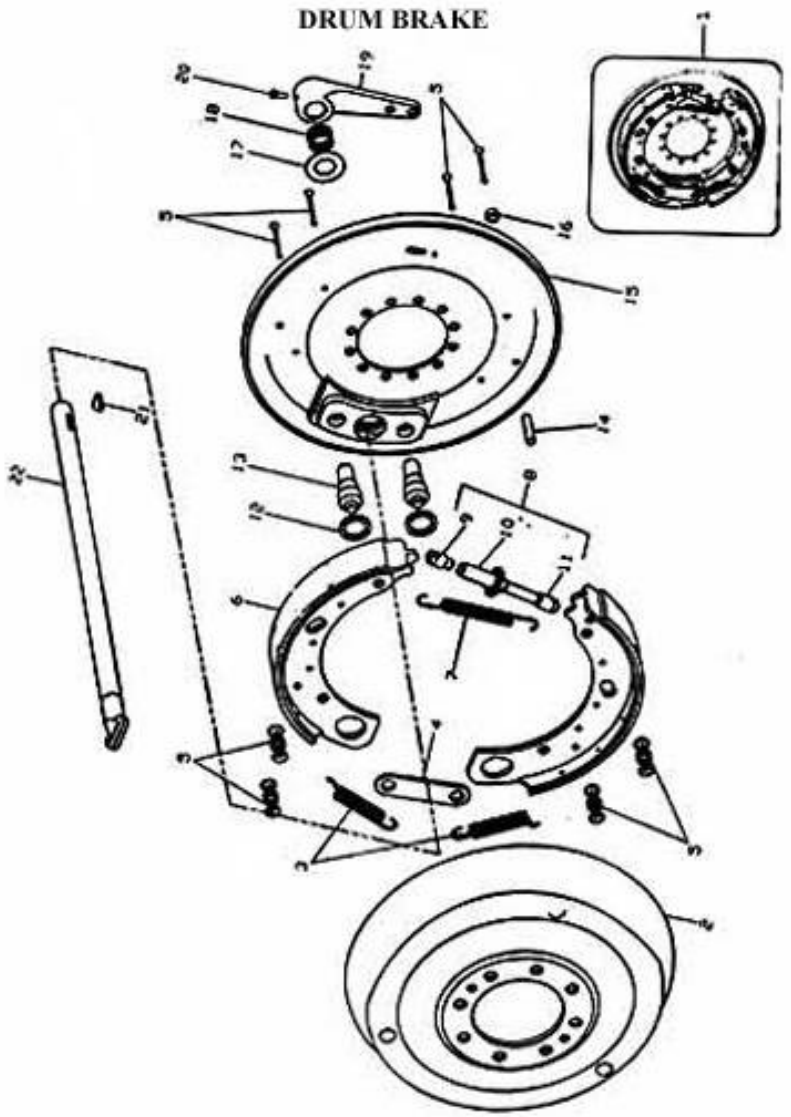


ATTACHMENT REAR AXLE

SL NO	PART NO	DESCRIPTION	QTY
1	1861986M02	Gasket	1
2	0377181X01	Bolt Hex	10
3	0377185X01	Nut Hex	10
4	0377825X01	Bolt	5
5	0353700X01	Set Screw	1
6	0886548M01	Shaft Rear Drive (Common)	1
6A	0719290M91	Rear Drive Shaft Sub-Assy.	1
7	0886353M01	Abutment	1
8	0886352M01	Spring	1
9	0195513M01	Bearing (Common)	1
10	1871924M01	Coupling - Rear Drive	1
11	0354087X01	Cotter Pin	1
12	0181408M01	Gasket	1

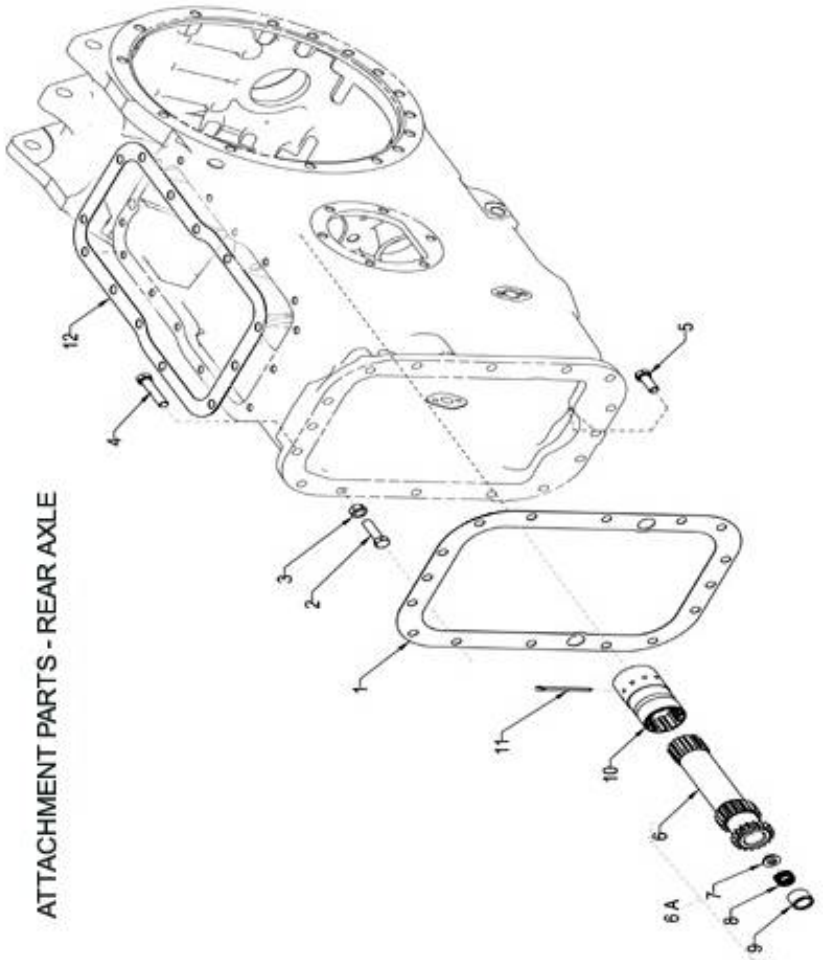


HYDRAULIC LIFT COVER

SL NO	PART NO	DESCRIPTION	QTY
1	1870951M03	Cover1	
2	0825031M02	Plug Side	2
3	0826238M01	Washer Sealing	1
4	0826237M01	Plug Top	1
5	0376805X01	Bolt	3
6	0377143X01	Bolt	4
7	0377145X01	Bolt	5
8	0377144X01	Bolt	2
9	0182099M91	Assy. Breather	1
10	0376807X01	Nut - Hex	4
11	0195562M01	'O' Ring	1
12	0355286X01	Setscrew Hex Socket	1
13	0195593M01	Ball lead	1
14	1869074M01	Pin - Dowel	1
15	0898229M01	Stand Pipe	1
16	0195561M01	'O' Ring	3
17	0195874M01	Washer Back up	2
18	0180908M01	Cap	1
19	0715073M01	Plug	1
20	0353700X01	Bolt	2
21	0353432X01	Washer Lock	2
22	0180997M01	Shaft Link	1
23	0898135M93	Assy Control Spring (Incl items 24-34)	1
24	0180973M02	Link Hydraulic Lift Cover	1

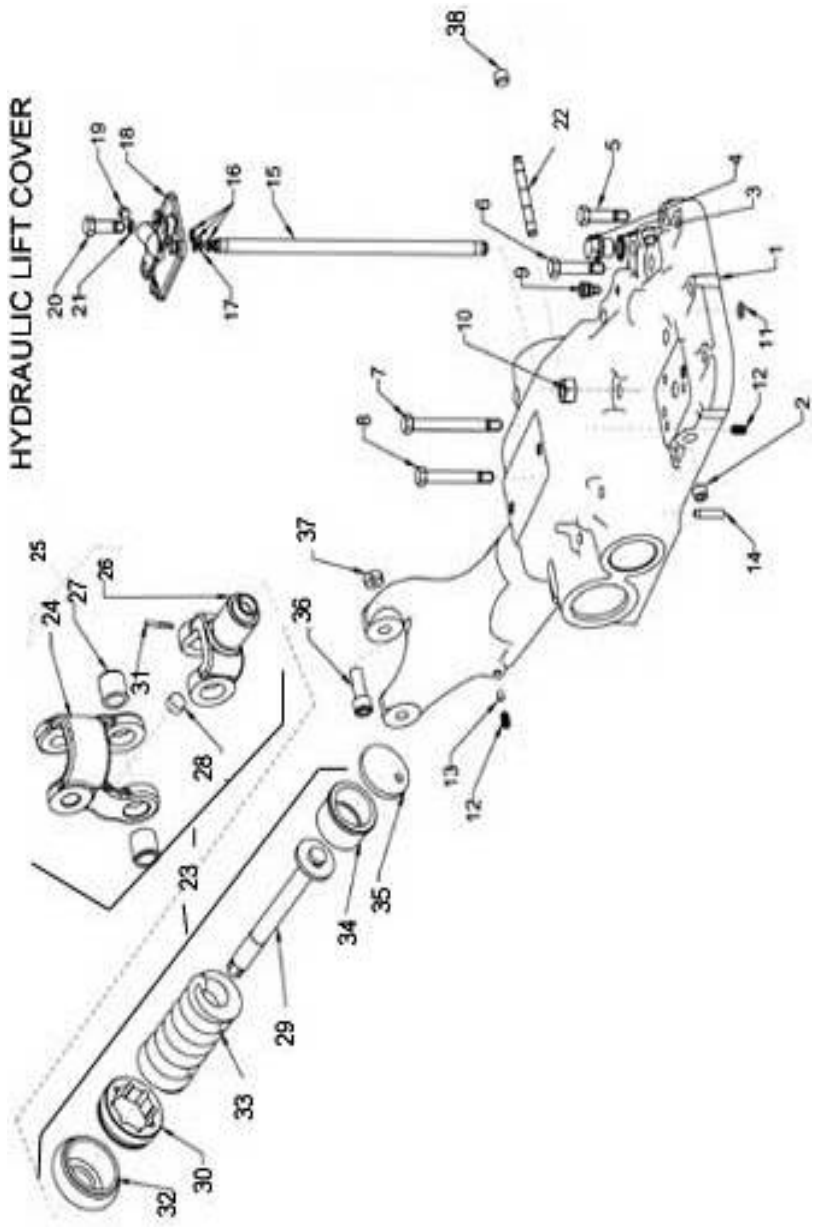


SL NO	PART NO	DESCRIPTION	QTY
25	0180975M93	Assy. Clevis and Rocker	1
26	0180972M02	Clevis Hydraulic Lift Cover	1
27	0180974M01	Bushing Top Link	2
28	0180982M01	Plug Clevis Rubber	1
29	0886348M02	Plunger - Control Spring	1
30	0180979M02	Nut-Control Spring Retainer	1
31	0195573M01	Pin Groove	1
32	0887654M02	Boot-Rubber	1
33	0182582M01	Spring	1
34	0886351M01	Seat - Control Spring	1
35	0180981M01	Disc Overload Stop	1
36	0363593X01	Cap Screw Hex Socket	2
37	0353437X01	Nut	2
38	0825031M02	Plug Side	1

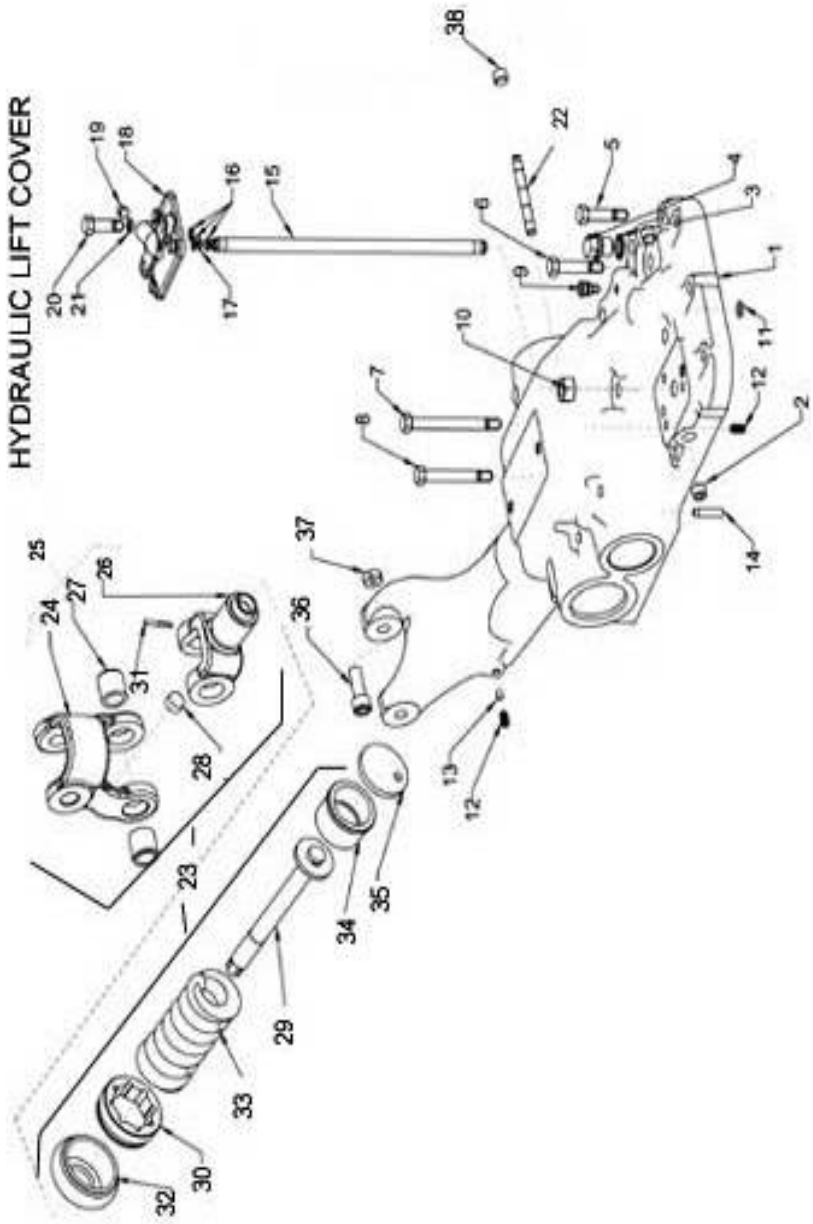


LIFT SHAFT AND LIFT ARMS

SL NO	PART NO	DESCRIPTION	QTY
1	0899149M03	Shaft	1
2	0359136X01	'O' Ring	2
3	1870934M01	Bush	2
4	0717037M01	Arm Ram	1
5	0420608M01	Coiled Spring Pin (0371925X01)	1
6	0717036M01	Rod Connecting	1
7	1665737M91	Assy Piston (Includes 13,14)	1
8	0897563M01	Cup	1
9	1665740M01	Piston	1
10	3761475M01	'O' Ring	1
11	3761478M01	Seal - Slip	1
12	0899257M01	Stud Rear	2
13	0899258M01	Stud Front	2
14	0897560M03	Cylinder	1
15	0362429X01	Bolt	2
15	1870190M92	Assy Bracket Complete	1
17	1660324M91	Assy Link Draft Control	1
18	1661918M91	Assy Link Position Control	1
19	1869093M93	Assy Lever & Cam	1
20	1661547M92	Assy Cam	1
21	0898137M01	Spring	1
22	0354120X01	Nut	1
23	0898153M02	Screw - Set	1
24	0355616X01	Washer	1
25	0354039X01	Pin-Cotter	1
26	0897575M02	Lift Arm	2

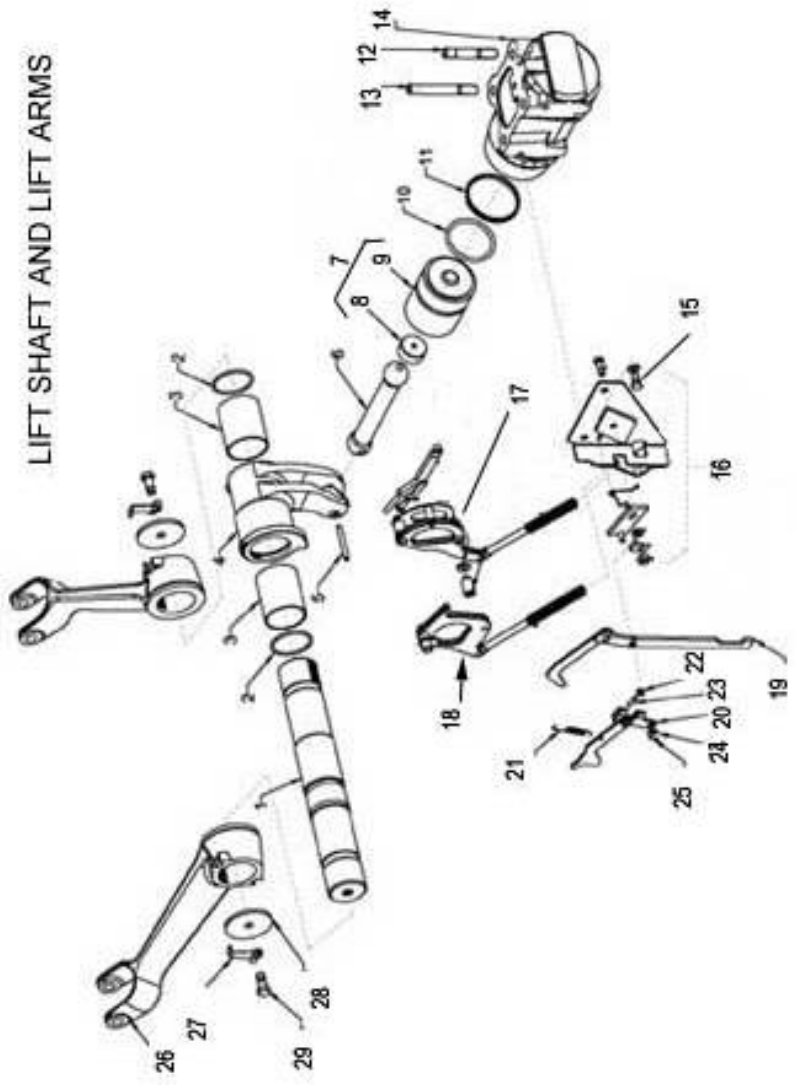


SL NO	PART NO	DESCRIPTION	QTY
27	0897581M03	Tab Washer	2
28	0897580M01	Washer Hydraulic Lift	2
29	0361526X01	Bolt	2

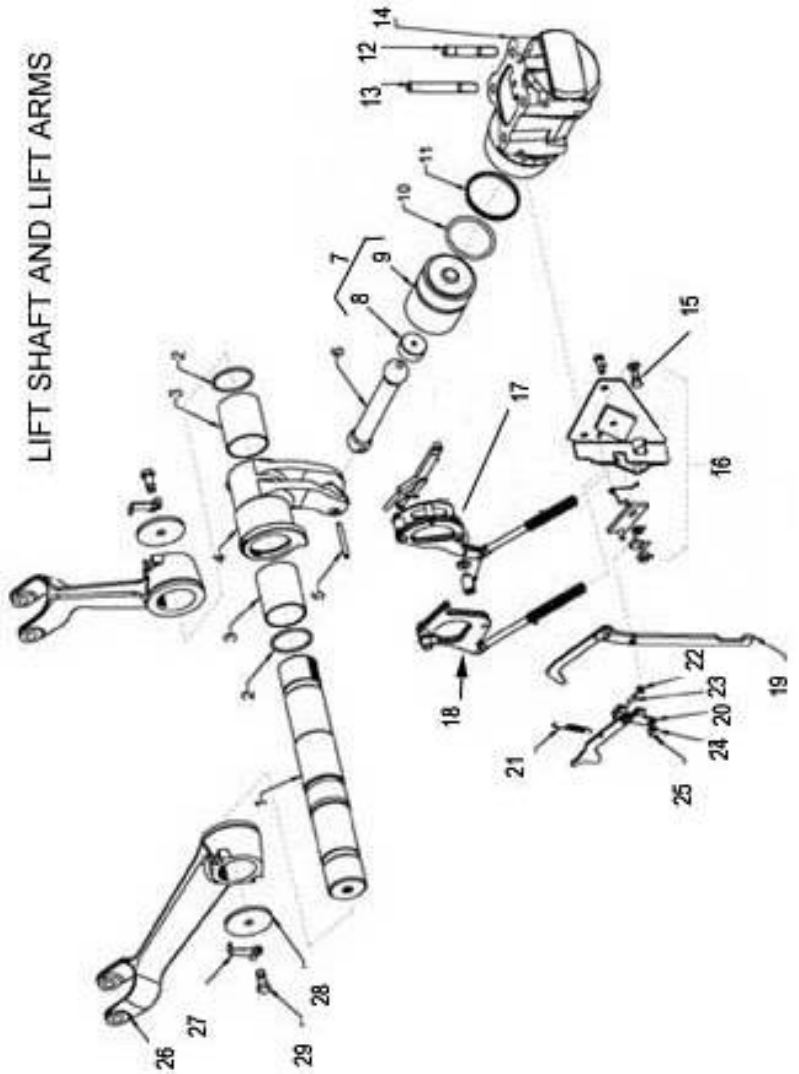


HYDRAULIC PUMP MARK III

SL NO	PART NO	DESCRIPTION	QTY
NI	0719793M91	Hydraulic Pump - MARK III	1
1	1868538M04	Coupling	1
2	1871659M01	Special Nut	2
3	1871659M01	Special Nut	2
4	1665500M01	Body Front Section	1
4A	1665499M92	Assy. Body Front Section	1
5	0195567M01	Plug Allen Cap	2
6	0377494X01	`O' Ring	4
7	0831528M01	O' Ring	4
8A	0716180M01	Bush Bearing	1
8B	0716180M01	Bush Bearing	1
9	1664589M01	Washer	2
10	0180924M02	Block Hydraulic Pump Front Cam	1
11	1860038M01	Piston	2
12	0897493M01	Piston Ring	4
13	0180933M01	Follower Cam	1
14	0180925M02	Block Hydraulic Pump Rear Cam	1
15A	0716219M91	Assy - Cam Shaft	1
15	0716220M01	Cam Shaft	1
16	1000251M01	Bearing	1
17A	1696259M92	Body Assy.-Hyd. Pump Rear Section	1
17	0377528X01	Stud	4
18	1696260M01	Body Rear Section	1
19	1868431M03	Plug Cap	2
20	1868743M01	Snap Ring	4

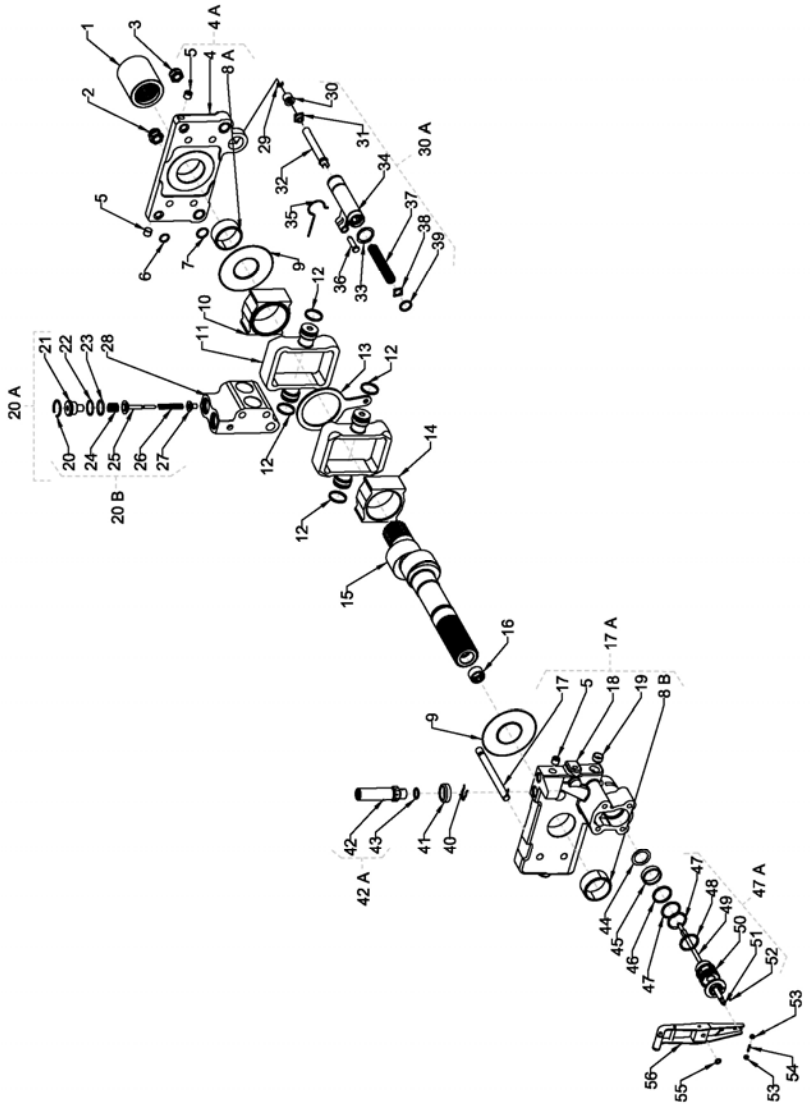


SL NO	PART NO	DESCRIPTION	QTY
21	1868741M01	Plug - Valve Chamber	4
22	1868742M01	`O' Ring	4
23	1870849M01	Washer Back-Up	4
24	0180928M01	Spring	4
25	0180930M02	Valve Outlet	4
26	0180927M02	Spring Pump Inlet Valve	4
27	1660116M01	Valve Inlet	4
28	1868435M03	Valve Chamber	2
29	3000261X01	Ring Retaining	1
30A	1681790M91	Assy Oscillator Cont Valve	1
30	1681786M01	Collar Oscillator Drive	1
31	1862576M02	Guide Oscillator Drive	1
32	1686740M01	Balancer Tube	1
33	0195946M01	3/8" Shaft Retaining Ring	2
34	1869826M93	Oscillator	1
35	1671699M01	Retainer Oscillator Pin	1
36	0831130M01	Pin	1
37	0180940M01	Spring Control Valve	1
38	1869830M02	Disc Oscillator Drive Retainer	1
39	1442622X01	Circlip	1
41	3598178M02	Washer Cap	1
42	0884747M93	Assy. Safety Valve	1
43	0831452M01	'O' Ring	1
44	1868485M01	Washer Special	1
44	0359290X01	O Ring	1
45	1868486M01	Spacer Valve Sleeve	1

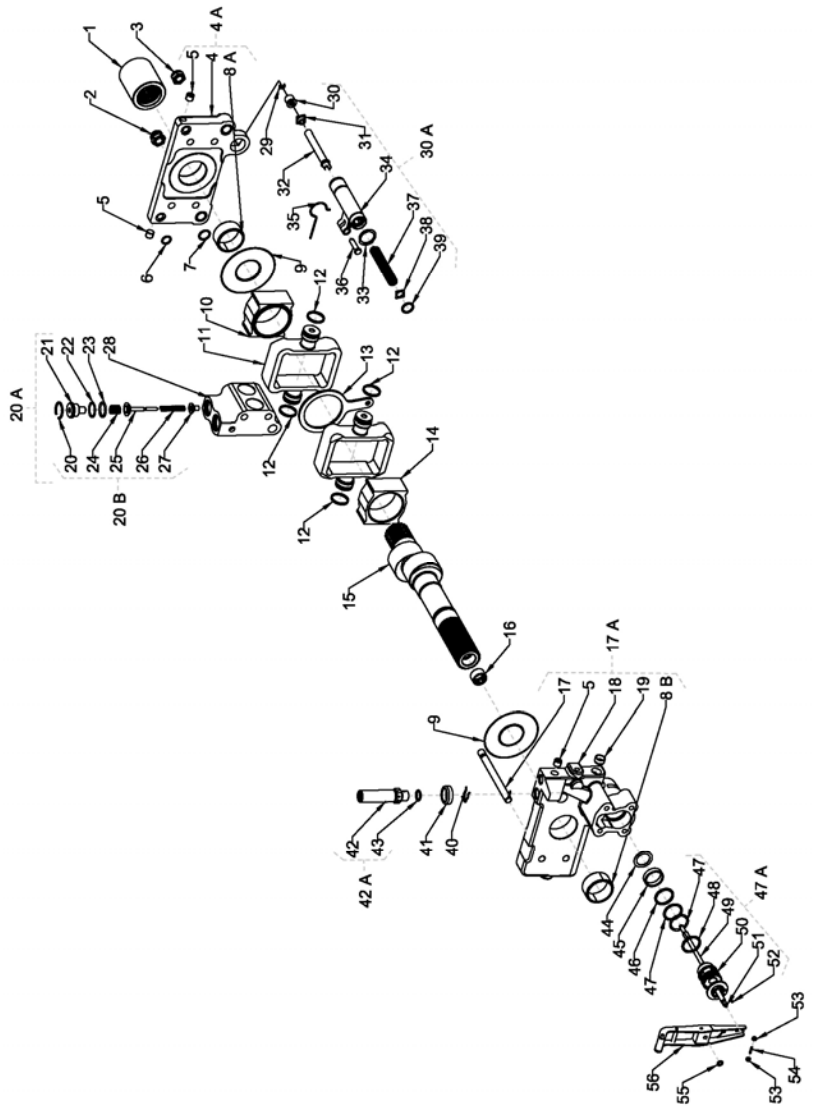


46	0377543X01	Washer Backup	1

SL NO	PART NO	DESCRIPTION	QTY
47A	3611085M91	Valve Assy.	1
47	0377502X01	`O' Ring	2
48	0377497X01	Washer	1
49	1681783M91	Rod Oscillator Drive	1
50	1870764M92	Spool & Valve	1
51	3599775M01	Rod	1
52	0377492X01	Pin Spirol	1
53	0897599M01	Roller Valve Lever	2
54	0897504M01	Pin	1
55	0377493X01	Self Locking Ring	1

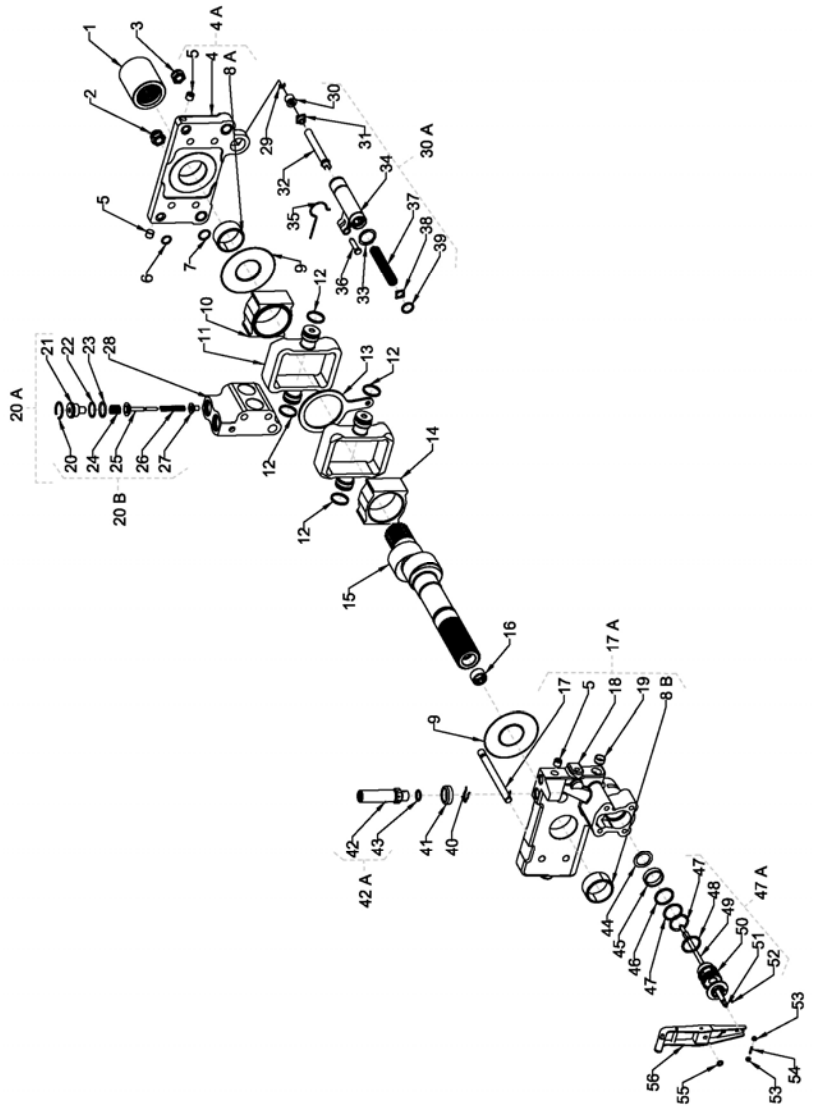


HYDRAULIC PUMP MARK III

SL NO	PART NO	DESCRIPTION	QTY
1A	0358334X01	Screw	2
1B	0355810X01	Screw	2
2	0376719X01	Spring Washer	4
3			
4	3599747M91	Cover Assy	1
4A	3599748M91	Cover	1
4B	3599723M01	Pin	1
5	1868459M01	Bush Actuating Rod	1
6	1442621X01	`O' Ring	1
7	0377499X01	Washer Special	1
8	0358936X01	Snap Ring	1
9	1868456M01	Gasket	1
10	1870811M01	Valve Non Return	1
11	1870810M01	Sealing Ring	1
12	0719062M01	Housing Intake 245	1
14	0363645X01	Hex Nut	1
15	1870089M01	Clip Retaining	1
16	1869529M02	Gasket	1
17	1868466M01	Seal Non-Returnable Valve	1
18	1868460M01	Retainer Seal	1
19	1868465M01	Spring Non Return Valve	1
20	1868464M01	Cap Spring	1
21	0377501X01	Circlip Non-Return Valve	1
22	0361023X01	3/16" Steel Ball	1
23	1868452M01	Spring Bias Response	1

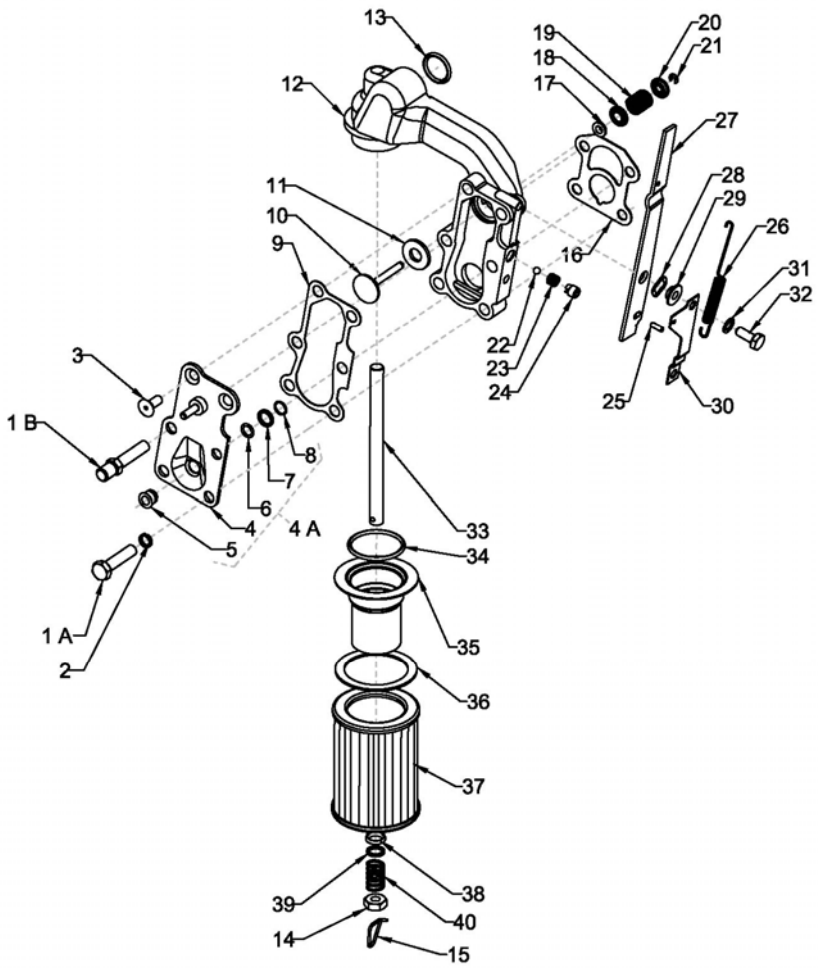


SL NO	PART NO	DESCRIPTION	QTY
24	1868451M02	Bush	1
25	0377489X01	Pin Spirol	1
26	1868454M02	Spring	1
27	1868453M02	Lever Response	1
28	0377500X01	Washer Wave	1
29	1868444M01	Bush Shoulder	1
31	0016229X00	Washer	2
32	0362352X01	Screw Hex	2
33	0377531X01	Stud Strainer Retaining	1
34	0195876M01	`O' Ring	1
35	1671633M01	Suction Tube	1
36	1868433M01	Gasket Strainer Assembly	1
37	0522231M04	Strainer	1
38	1007240M01	`O' Ring	1
39	0377499X01	Washer Special	1
40	1868469M01	Spring Strainer Retainer	1

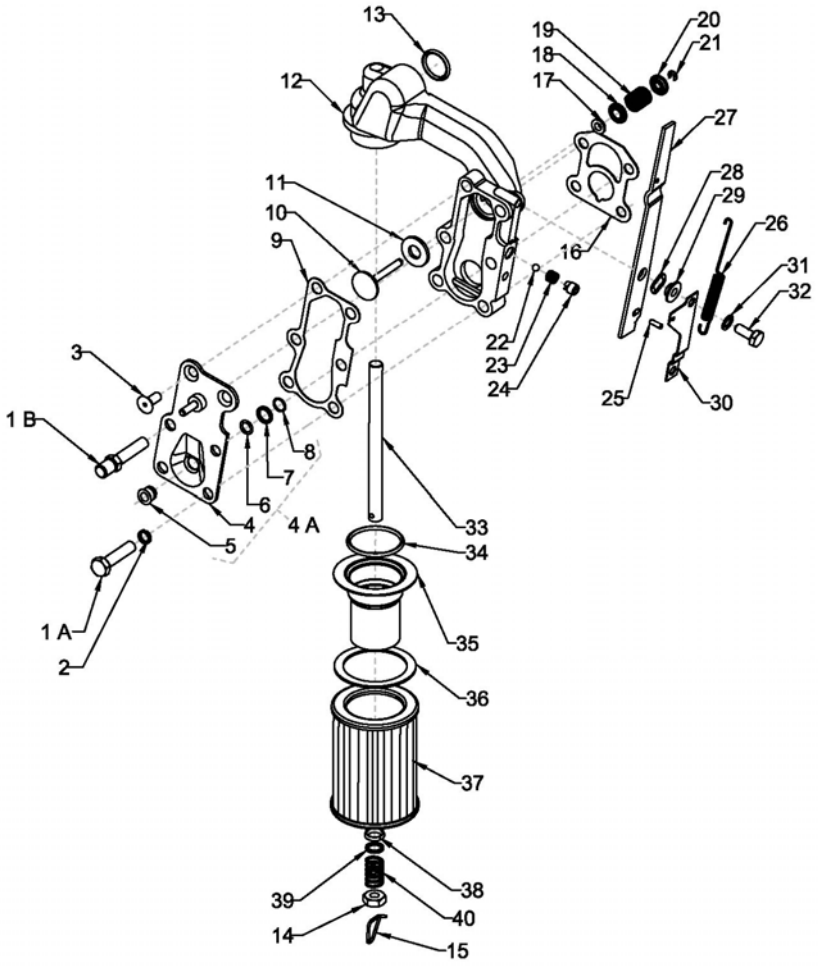


QUADRANT ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	1870219M93	Assy. Shaft-Position Control	1
2	1870243M92	Assy. Shaft-Draft Control	1
3	1870241M01	Shaft (Order 1870 243 M92)	1
4	0377747X01	Washer	1
5	0898194M01	Pin Roll	1
6	0354039X01	Pin-Cotter	1
7	0195561M01	'O' Ring	3
8	0898196M02	Roller	1
9	1870225M01	Bush	1
10	1870240M01	Support Quadrant	1
11	0358945X01	Ring Snap	1
12	1870244M01	Pin Draft Shaft	1
13	0364281X01	'O' Ring	1
14	0762026M01	'O' Ring	1
15	0898189M02	Roller Quadrant	1
16	1869074M01	Pin-Dowel	1
17	1869075M01	Disc Spring	1
18	1674620M01	Assy. Quadrant Position	1
19	0898198M91	Stop	1
20	1870341M92	Assy. Lever Position	1
21	1860403M01	Knob Adjustment	1
22	1870338M02	Quadrant Draft	1
23	0355564X01	Nut	2
24	0353441X01	Washer	2
25	0898201M01	Stop	1

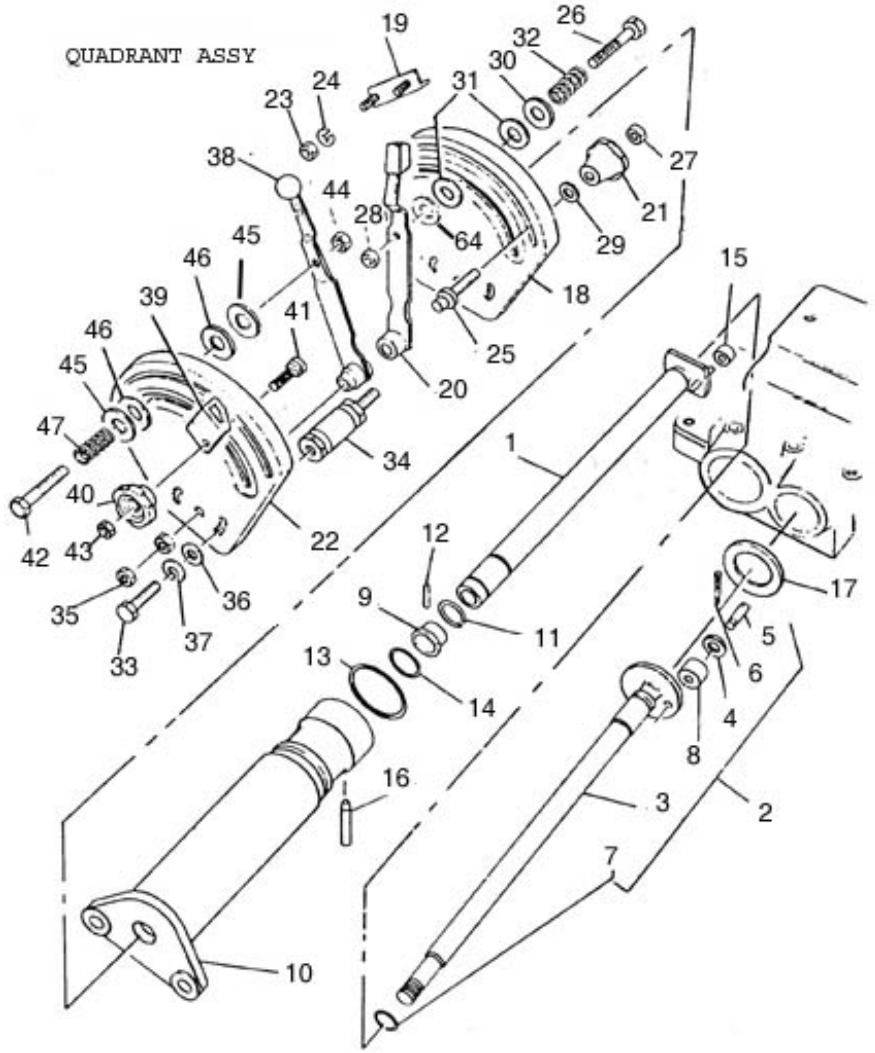


SL NO	PART NO	DESCRIPTION	QTY
26	0377607X01	Screw	1
27	0353918X01	Nut	4
28	0353919X01	Nut	1
29	0353754X01	Washer flat	1
30	0377581X01	Washer	4
31	0181041M01	Washer	4
32	1872240M01	Spring Lever	1
33	0353536X01	Bolt	2
34	1870294M01	Spacer	2
35	0353430X01	Nut	2
36	0353756X01	Washer-Flat	2
37	0353434X01	Washer-Lock	2
38	1870340M91	Assy. Lever Draft	1
39	0884387M01	Slide	1
40	1860402M01	Knob Adjustment	1
41	0898183M01	Retainer	1
42	0377607X01	Screw	1
43	0353918X01	Nut	1
44	0353919X01	Nut	1
45	0377581X01	Washer	2
46	0181041M01	Washer	2
47	1872240M01	Spring Lever	1

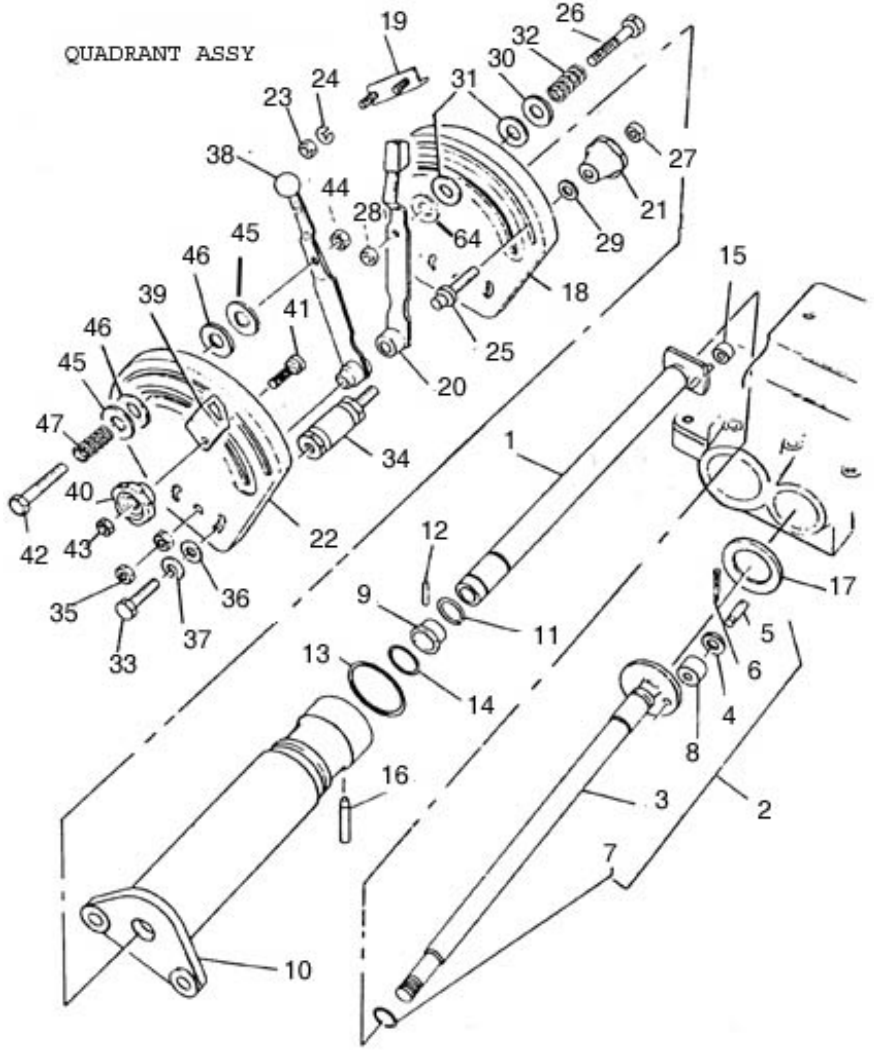


BRAKE CONTROLS

SL NO	PART NO	DESCRIPTION	QTY
1	0713455M91	Assy. Brake Cross Shaft	1
2	0012501X00	Key Woodruff	1
3	0713458M01	Stud	1
4	0713459M01	Special Washer	1
5	0353430X01	Nut Hex	2
6	0719299M91	Assy Brake Pedal RH	1
7	1861171M92	Assy. Pedal RH	1
8	0195910M01	Bush	1
9	0713942M01	Lock Combined Brake	1
10	0181958M02	Spring Combined Brake	1
11	3009445X01	Screw Hex	1
12	1441461X01	Nut Hex	1
13	1441858X01	Grease Nipple - 90 Degree	1
14	0716425M91	Assembly Pedal LH	1
15	1442378X01	Bolt	1
16	0339369X01	Special Washer	1
17	0339643X01	Nut Hex	1
18	0713955M92	Assy Brake Rod	2
19	1868691M01	Spring	2
	)19206X01	Pin Clevis	4
	142965X01	Cotter Pin	6
	'14908M9160	Assy. Hand Brake	1
	'14846M91	Assy Hand Brake Rod	2
	)19207X01	Pin Clevis	2
	390734X01	Flat Washer	6

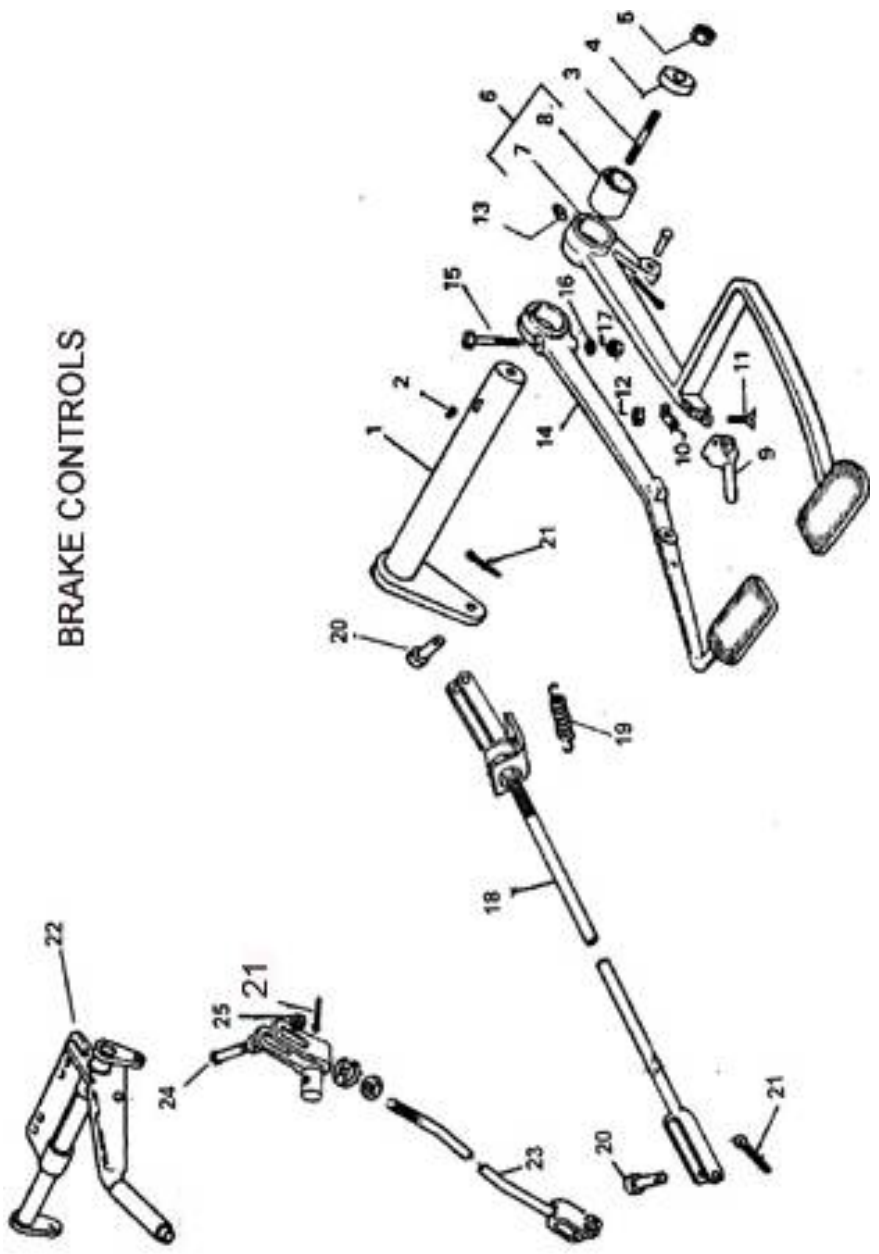


BOX LEVELLING ASSEMBLY(DRUM)

SL NO	PART NO	DESCRIPTION	QTY
1	0719313M91	Box Levelling Sub Assy	1
2	4251622M01	Box Levelling (Common)	1
3	0831263M01	Bearing (Common)	1
NI	4251801M01	Race Thrust Bearing	2
NI	1860834M02	Thrust Washer	1
NI	0352438X01	Circlip	1
4	4251625M01	Shaft Levelling	1
5	0719172M01	Lever Levelling	1
6	0181345M01	Gear Levelling	1
7	0195648M01	Rivet	1
8	0195644M01	Plug Expansion	1
9	4251800M01	Fork Levelling	1
10	0193092M01	Ring Locking	1
11	1441858X01	Grease Nipple - 90 Degree	2
12	0897660M01	Knuckle	2
13	0376399X01	Pin Levelling	4
14	0354066X01	Cotter Pin	4
15	0713398M91	Assy. Lift Rod - Exports	1
16	0392247X01	Bolt	2
17	0339682X01	Nut Hex (Common)	4
18	4242545M91	Assy. Check Chain LH	1
19	4244042M91	Assy. Check Chain RH	1
20	0714061M01	Anchor Check Chain	2
21	0713646M01	Chain Check	2

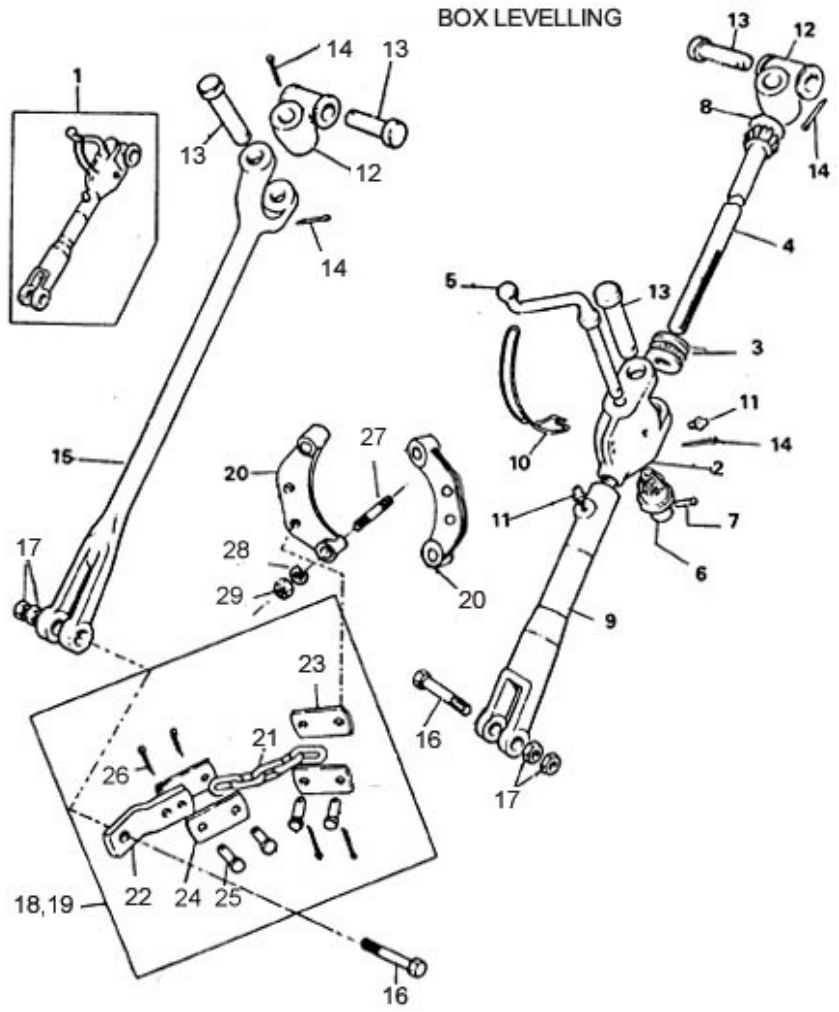


SL NO	PART NO	DESCRIPTION	QTY
22	0714946M01	Check Chain Bracket-245	2
23	0714065M01	Link Plate Short	4
24	0714064M01	Link Plate Long	4
25	3019206X01	Pin Clevis	8
26	1442965X01	Pin Cotter	8
27	1860900M02	Stud	4
28	0353439X01	Washer	4
29	0353437X01	Nut - Hex	4

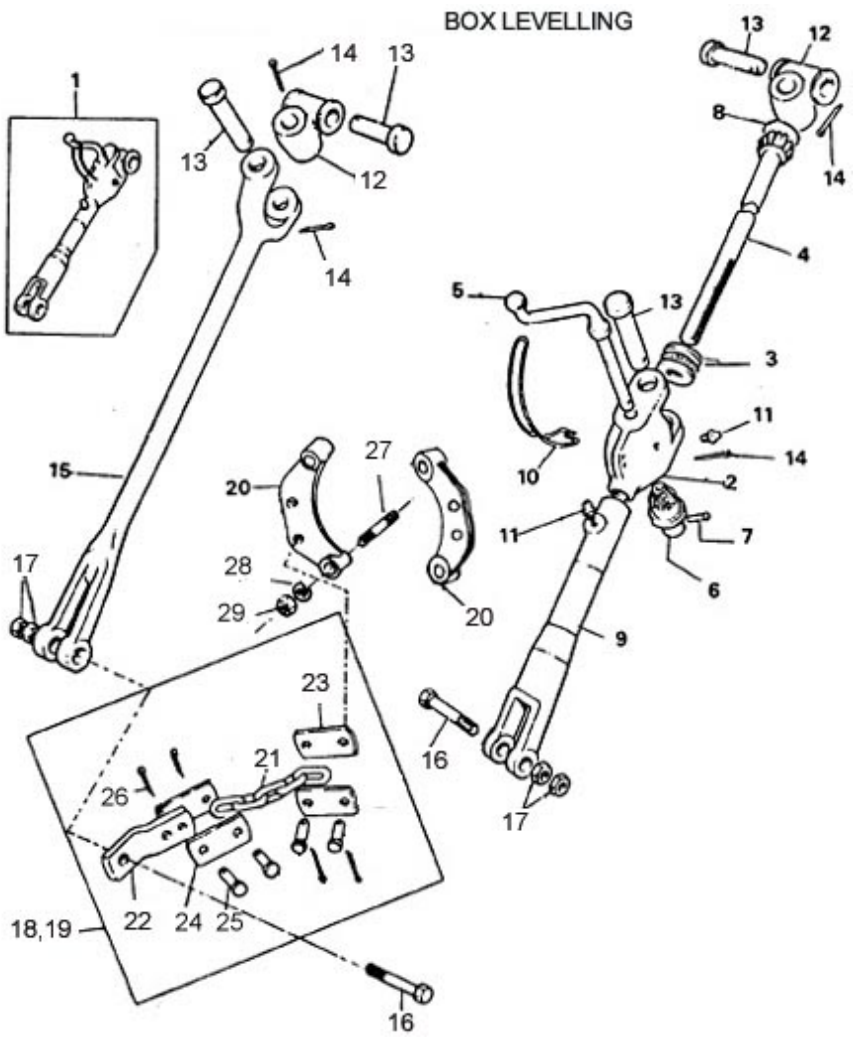


BOX LEVELLING ASSEMBLY(OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	0719313M91	Box Levelling Sub Assy	1
2	4251622M01	Box Levelling (Common)	1
3	0831263M01	Bearing (Common)	1
NI	4251801M01	Race Thrust Bearing	2
NI	1860834M02	Thrust Washer	1
NI	0352438X01	Circlip	1
4	4251626M01	Shaft Levelling	1
5	0719172M01	Lever Levelling	1
6	0181345M01	Gear Levelling	1
7	0195648M01	Rivet	1
8	0195644M01	Plug Expansion	1
9	4251800M01	Fork Levelling	1
10	0193092M01	Ring Locking	1
11	1441858X01	Grease Nipple - 90 Degree	2
12	0897660M01	Knuckle	2
13	0376399X01	Pin Levelling	4
14	0354066X01	Cotter Pin	4
15	0716838M92	Assy. Lift Rod - Exports	1
16	0392247X01	Bolt	2
17	0339682X01	Nut Hex (Common)	4
18	4245990M91	Assy. Check Chain LH	1
19	4245989M91	Assy. Check Chain RH	1
20	0714061M01	Anchor Check Chain	2
21	0713646M01	Chain Check	2
22	0714946M01	Check Chain Bracket-245	2

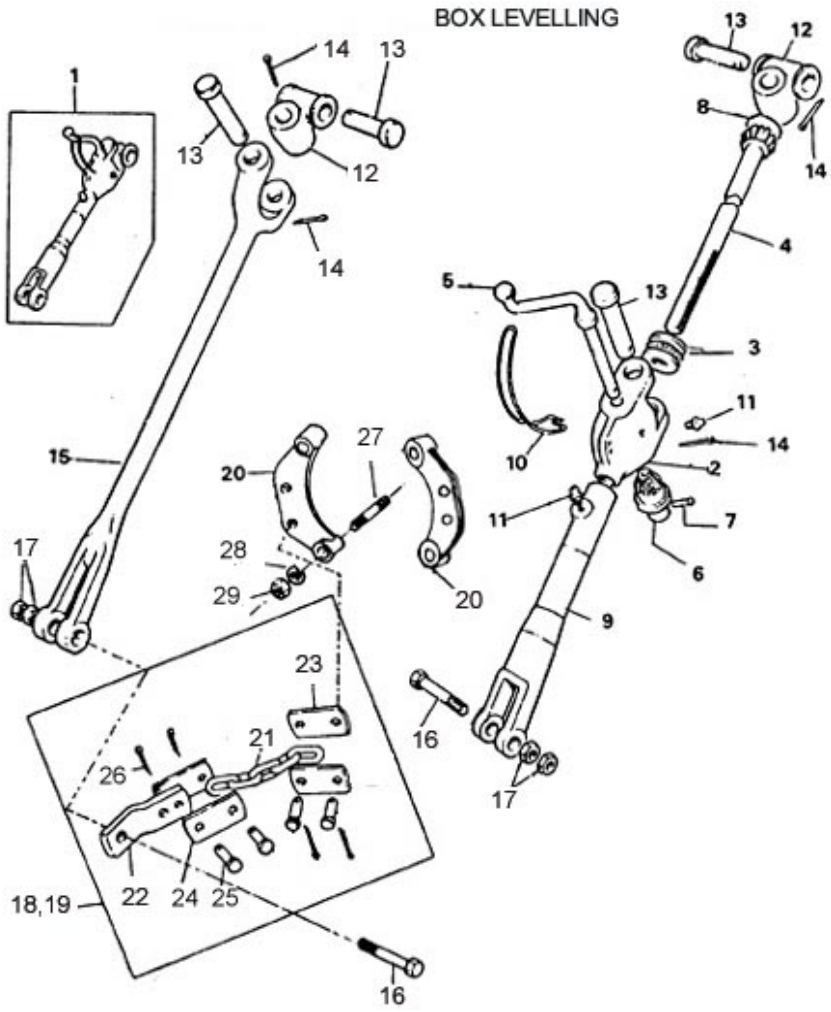


SL NO	PART NO	DESCRIPTION	QTY
23	0714064M01	Link Plate	4
24	0714064M01	Link Plate	4
25	3019206X01	Pin Clevis	8
26	1442965X01	Pin Cotter	8
27	1860900M02	Stud	4
28	0353439X01	Washer	4
29	0353437X01	Nut - Hex	4

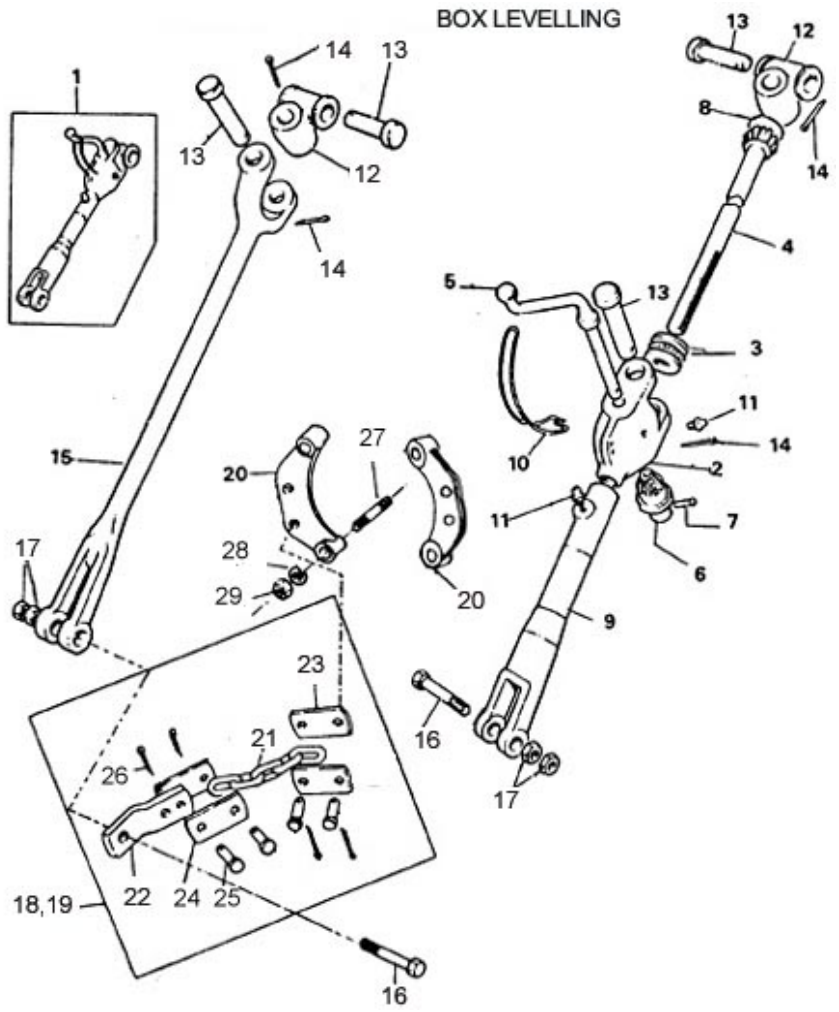

HYDRAULIC LINKAGES(DRUM/OIB)


SL NO	PART NO	DESCRIPTION	QTY
1	1869289M94	Assy. Lower Link	2
2	0714938M91	Assy. Top Link	1
3	0831513M01	Pin - Top Link	1
4	0195589M01	Pin Clevis	1
5	0810285M92	Assy Pin & Ring	4
6	1869218M01	Clip	2
7	1869219M01	Clip	2
8	0886428M01	Interchangeable Ball	2
9	0353762X01	Flat Washer	2
10	0339682X01	Nut Hex (Common)	4

TOP LINK AND LOWER LINKS

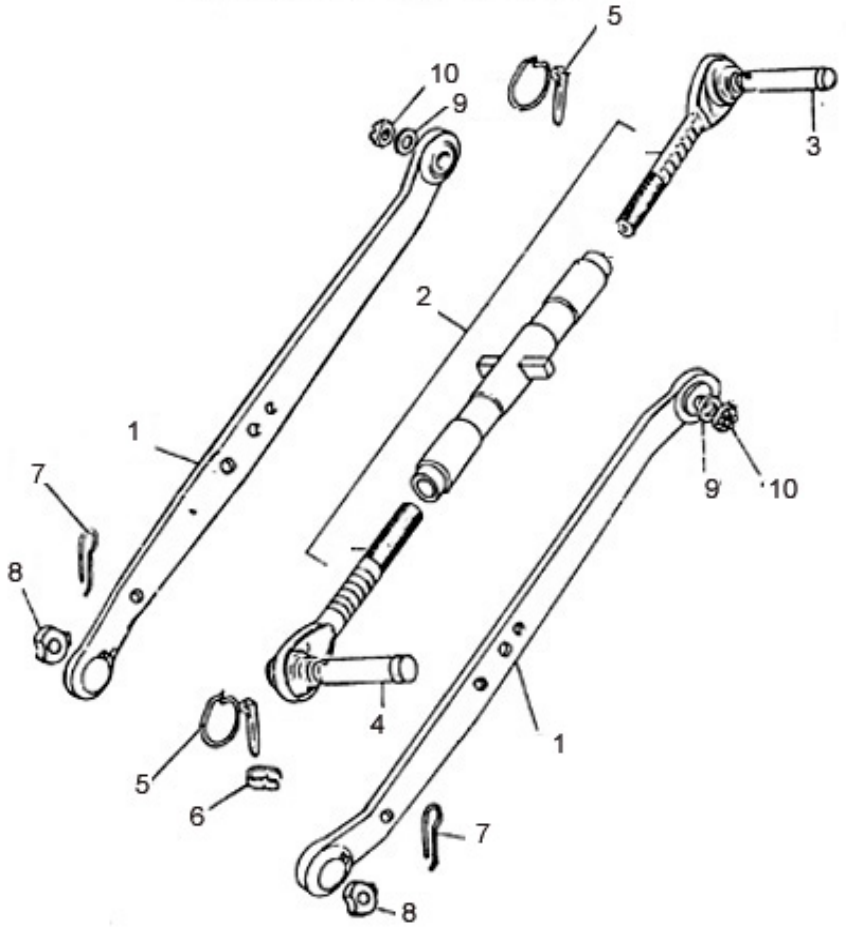


HOOD ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	0717494M91	Assy. Hood And Cap	1
2	0717525M91	Assy. Wrapper And Bracket	1
	4256437M91	Assy. Grille	1
3	0716380M91	Assy. Grille Upper (4256437M91)	1
4	0716372M01	Centre Plate Grille (4256437M91)	1
5	0716374M91	Assy. Grille & PadsLower(4256437M91)	1
6	0717516M01	Beading Rubber	1
7	0717478M01	Side Panel RH	1
8	0717479M01	Side Panel LH	1
9	0717545M01	Sealing Strip Radiator	2
10	4246082M01	Side Plate LH	1
11	4246081M01	Side Plate RH	1
12	0717575M01	C' Sunk Slotted Screw	6
13	4242867M01	Hood Emblem LH	1
13	4242868M01	Hood Emblem RH	1
14	4242584M91	Assy. Battery Platform	1
15	0717514M02	Beading Rubber	1
16	0180673M01	Bumper Rubber	2
17	4248260M92	Assy. Lever & Spindle	2
20	4246072M01	Washer Hood Lock	2
19	4248261M01	Cam Hood Lock	2
18	4246073M01	Washer Hood Lock-Fibre	2
21	1441462X01	Nut Nyloc M6 * 1	2
22	0717517M01	Bolt Hood Pivot	2

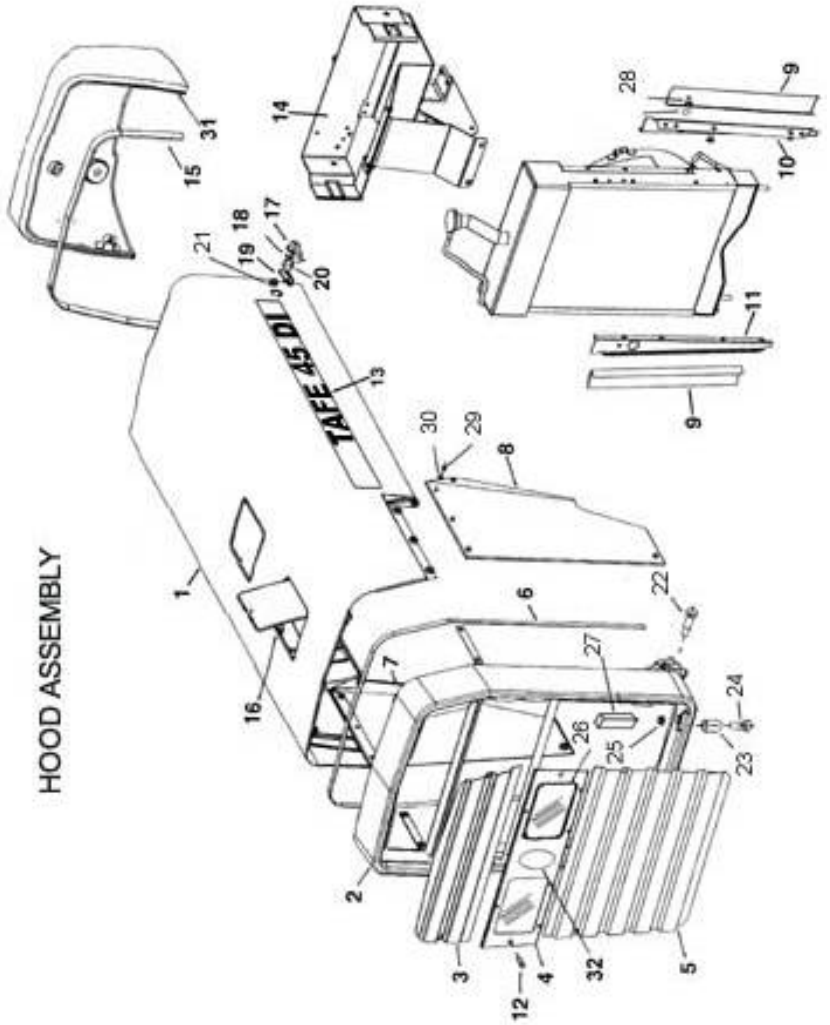


SL NO	PART NO	DESCRIPTION	QTY
23	0717453M01	Stopper Hood	2
24	3009287X01	Socket Head Cap Screw	2
25	0339169X01	Nut - Hex	2
26	0718085M01	Seal - Head Lamp	2
27	0716346M01	Pad	12
28	0714324M01	Screw Self Tapping	8
29	0339560X01	Screw	8
31	0717515M01	Beading Rubber (Hood - Instrument Panel)	1
30	0390971X01	Washer Flat	8
32	4242657M01	Front Monogram	1
NI	4242311M01	Hay Guard	1
NI	4242313M01	Pad Rubber - Hay Guard	1
NI	4242312M01	Top Plate Hay Guard	1
NI	0339666X01	Screw - Hex	2
NI	0339375X01	Washer Lock	2

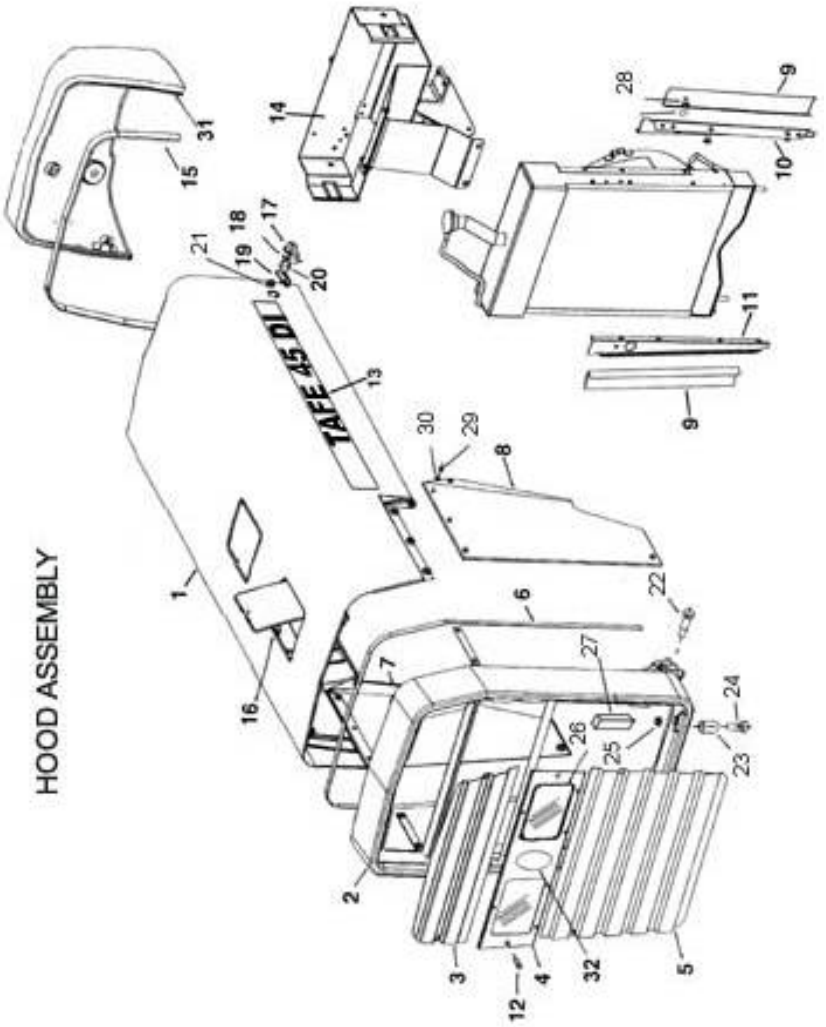


INSTRUMENT AND SWITCHES

SL NO	PART NO	DESCRIPTION	QTY	
1	4249646M91	Light Switch	1	
2	1229P00101	Indicator Switch	1	
3	0715953M91	Fuel Gauge	1	
4	4249891M91	Oil Pressure Gauge	1	
5	0713727M93	Warning Light	1	
6	4245394M91	Turn Indicator Lamp	1	
7	0713726M91	Indicator Light	1	
8	0715249M91	Rpm / Hour Meter	1	
9	0715137M91	Ammeter	1	
10	0713722M91	Horn Switch	1	
11	4256387M92	Temperature Gauge	1	
12	2329C00101	Bellow-Ignition Switch	1	NA
13	4245803M91	Hazard Warning Switch	1	
14	4243513M91	Ignition Switch	1	
15	4246326M01	Assy. Instrument Panel	1	
16	0713721M91	Push Pull Switch	1	NA
17	4255725M91	Warning Lamp - Trailer 1	1	NA
NI	0719247M01	Sticker-Indicator Switch	1	
NI	0715557M01	New Index Plate	1	
NI	0713706M91	Fuse box	1	

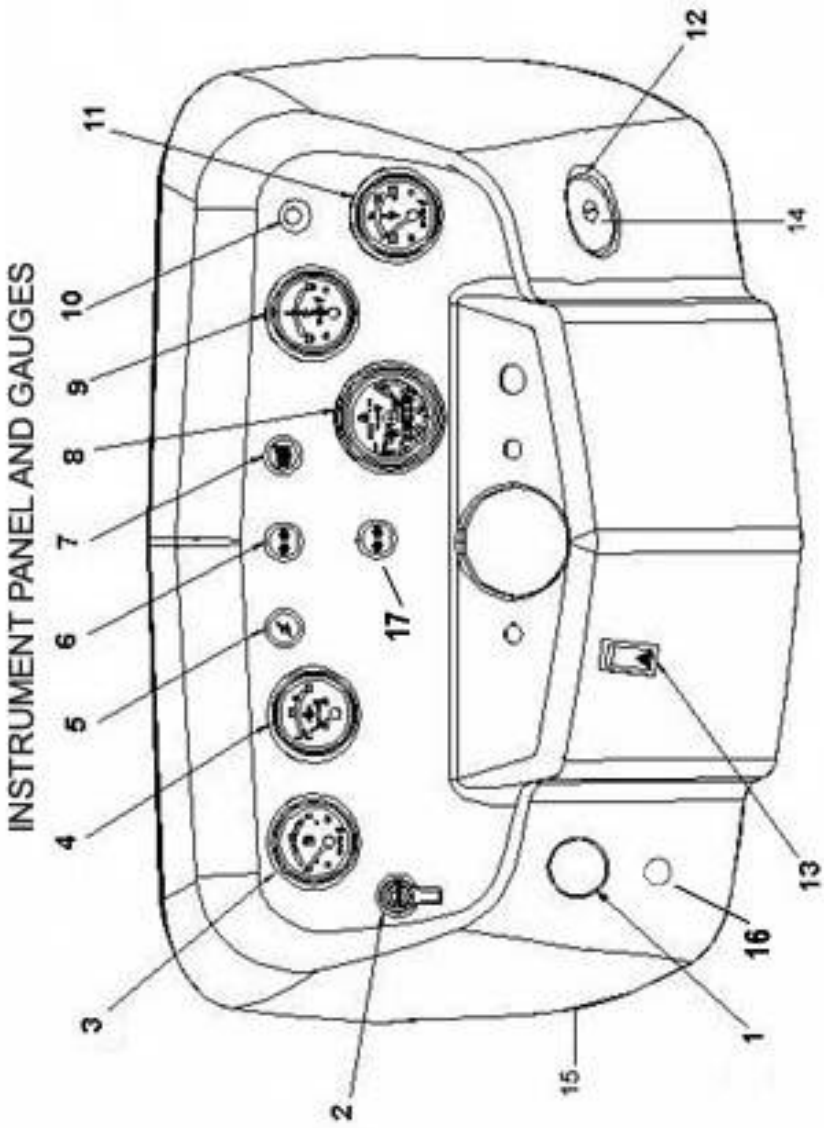


INSTRUMENT AND SWITCHES-OIB

SL NO	PART NO	DESCRIPTION	QTY	
1	1668816M02	Light Switch	1	
2	1682977M01	Indicator Switch	1	
3	0715953M91	Fuel Gauge	1	
4	4249891M91	Oil Pressure Gauge	1	
5	0716241M91	Warning Light	1	
6	4245394M91	Turn Indicator Lamp	1	
7	0713726M91	Indicator Light	1	
8	4251002M92	Electronic RPM Meter	1	
9	0715137M91	Ammeter	1	
10	0713722M91	Horn Switch	1	NA
11	4256387M92	Temperature Gauge	1	
12	2329C00101	Bellow-Ignition Switch	1	NA
13	4245803M91	Hazard Warning Switch	1	NA
14	1874535M03	Ignition Switch	1	
	1695447M01	Key	1	
	1694534M01	Bezel	1	
15	2423A01001	Assy. Instrument Panel	1	
16	0713721M91	Push Pull Switch	1	NA
17	4255725M91	Warning Lamp - Trailer 1	1	NA
NI	0719247M01	Sticker-Indicator Switch	1	
NI	0715557M01	New Index Plate	1	
NI	0713706M91	Fuse box	1	

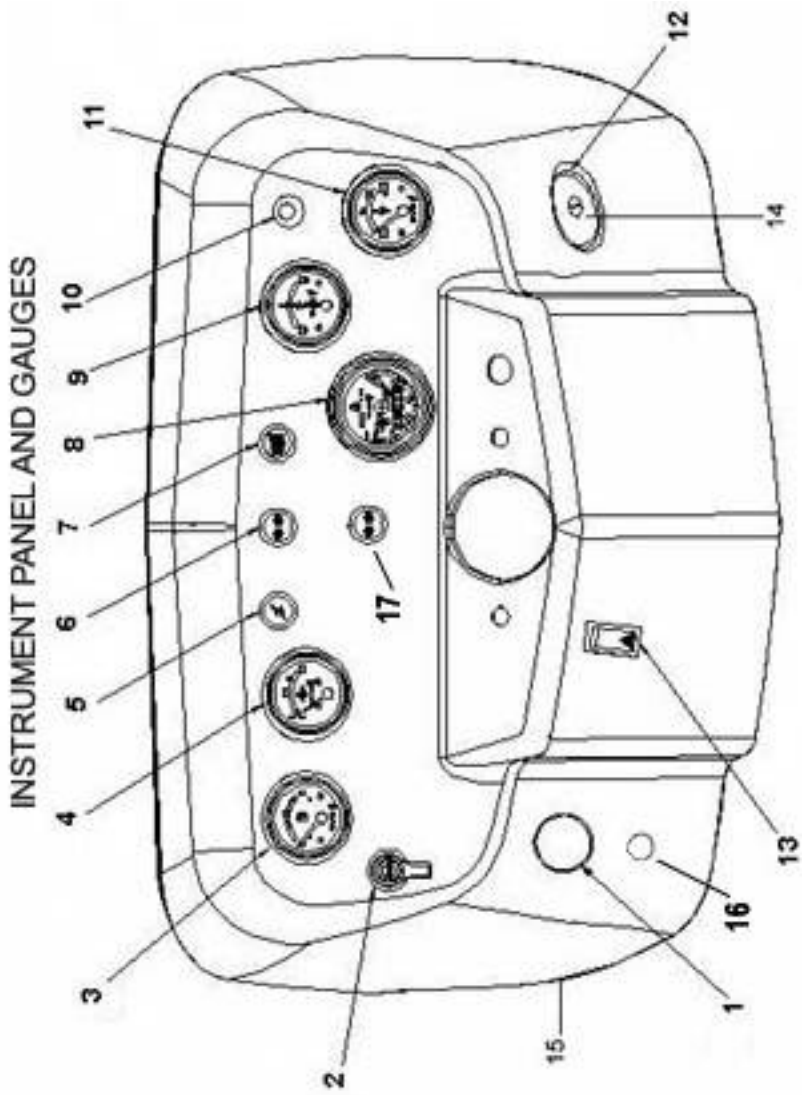


BATTERY PLATFORM

SL NO	PART NO	DESCRIPTION	QTY
1	4242584M91	Assy. Battery Platform	1
2	3009492X01	Screw Hex Battery Platform to Eng.	2
3	0339376X01	Washer Lock	2
4	1440004X01	Screw Hex.	2
5	0339369X01	Washer Lock	2
6	0716538M91	Assy. Battery Retainer with Pads	1
7	0390972X01	Washer Flat	2
8	0718434M01	Nut-Wing	2
	0716325M01	Stud	1
9	0714954M91	Assy. Bracket Battery Retainer	1

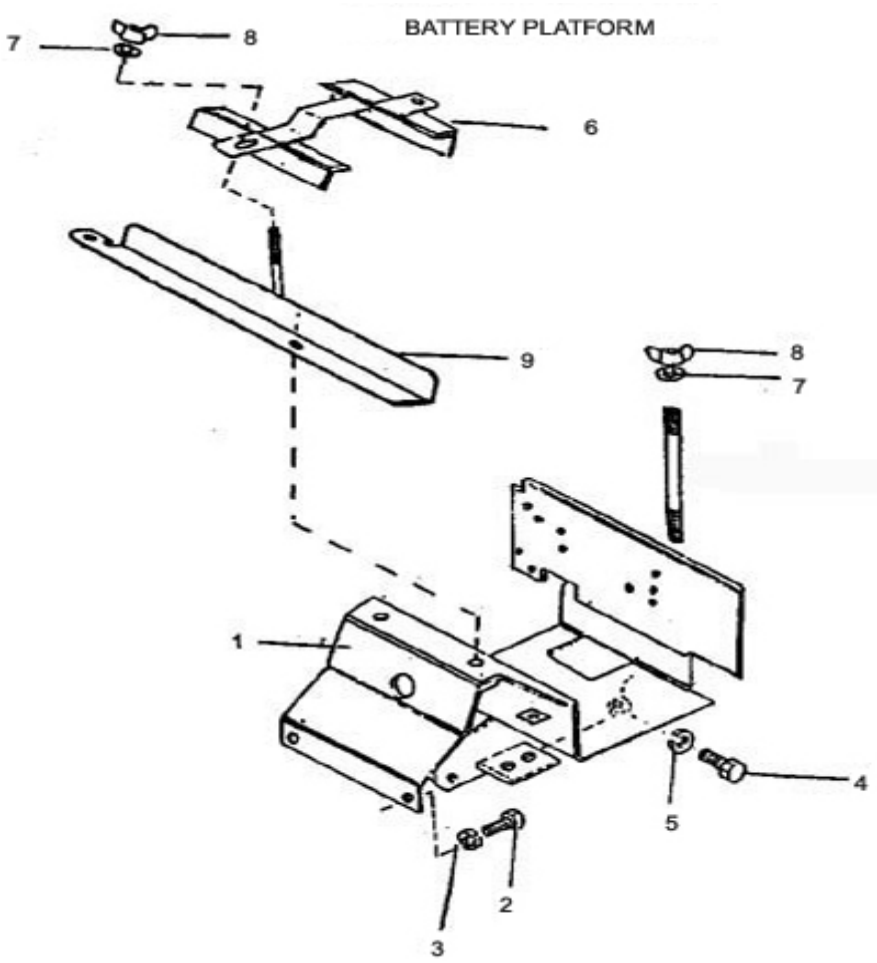


HAND THROTTLE CONTROLS

SL NO	PART NO	DESCRIPTION	QTY
1	4242629M91	Assembly Throttle Control Lever	1
2	0377119X01	Grommet	1
3	0880714M01	Disc Friction	1
4	0880712M01	Belleville Washer	3
5	0714859M01	Spacer	1
6	1861554M01	Bracket	1
7	0880713M01	Washer Special	2
8	0884737M01	Nut Hex Nyloc	1
9	4242424M01	Lever Throttle Control	1
10	0339096X01	Bolt Hex	1
11	0390971X01	Flat Washer	2
12	0339375X01	Lock Washer	1
13	0339030X01	Nut Hex	1
14	0339804X01	Bolt	1
15	0717684M01	Knob - Throttle Control	1
16	0339666X01	Screw - Hex	2
17	0339375X01	Washer Lock	2
18	0339030X01	Nut - Hex	2
19	4242426M91	Assembly Cross Shaft	1
20	0390734X01	Washer Flat	2
21	0714863M02	Washer Double Coil	1
22	4242422M01	Quadrant Lever - Cross Shaft	1
23	0339096X01	Bolt Hex - Lever Cross Shaft	1
24	0390971X01	Washer Flat	2
25	0339375X01	Washer Lock	1

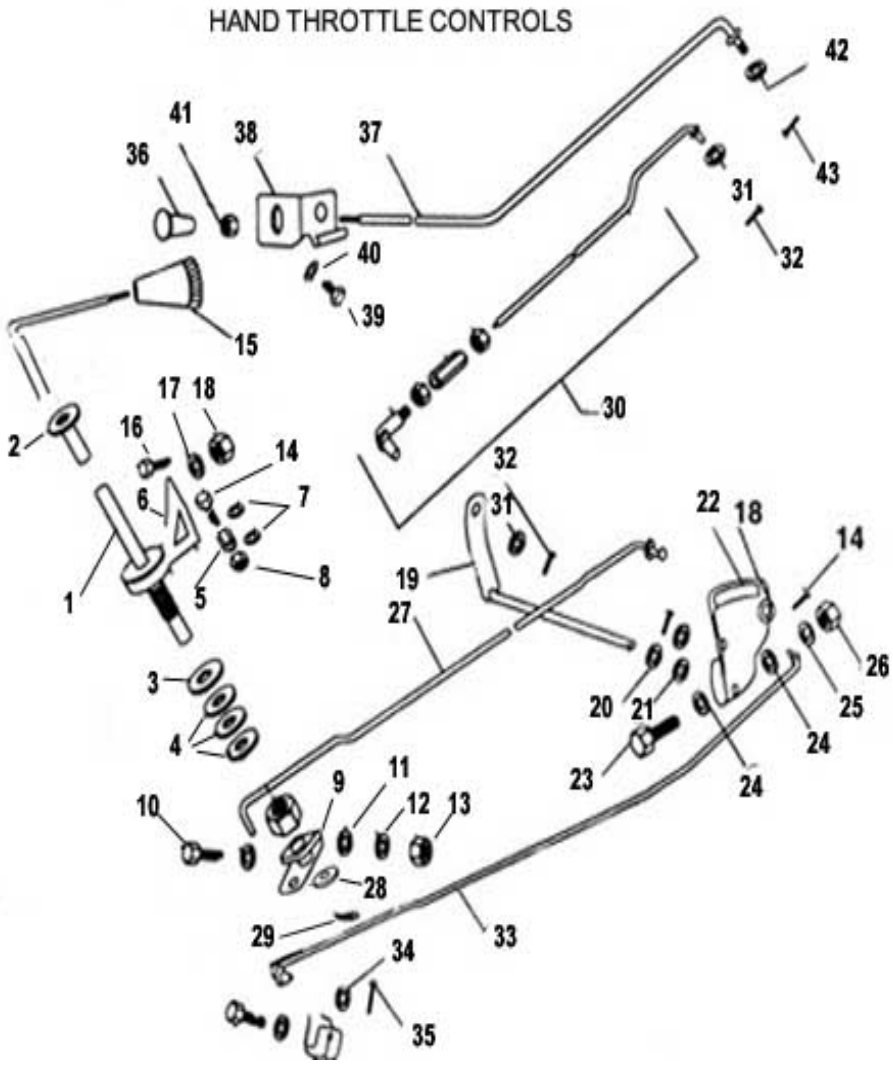


HAND THROTTLE CONTROLS

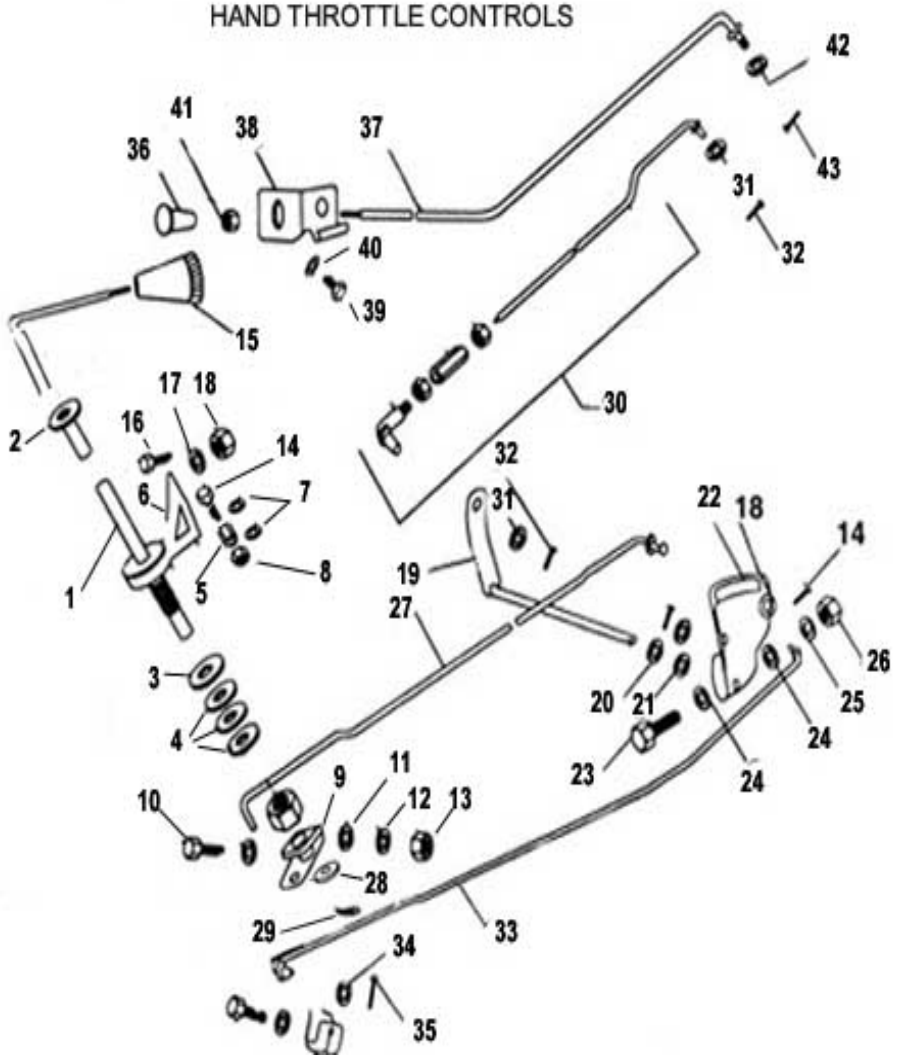

SL NO	PART NO	DESCRIPTION	QTY
26	0339030X01	Nut - Hex	1
27	0714865M91	Assembly Rod Link Hand Throttle	1
28	0390971X01	Washer Flat	2
29	1442967X01	Pin - Cotter	2
30	0713968M92	Assembly Rod - Throttle Control	1
31	0390972X01	Washer Flat	2
32	1442957X01	Pin - Cotter	2
33	0714874M91	Assembly Rod Link Foot Throttle	1
34	0390972X01	Washer Flat	1
35	1442967X01	Pin - Cotter	1
36	0715689M01	Knob - Fuel Cut Off	1
37	4246118M92	Assembly Cut Off Lever	1
38	0899024M03	Bracket - Fuel Cut Off	1
39	3009506X01	Screw - Bracket Mounting	1
40	0339369X01	Washer Lock	1
41	0390995X01	Nut Hex	2
42	0390469X01	Flat Washer	1
43	1442957X01	Pin - Cotter	1


FOOT THROTTLE

SL NO	PART NO	DESCRIPTION	QTY
1	1860939M03	Foot Rest RH	1
2	1672928M06	Foot Rest LH	1
3	0897547M01	Pedal Foot Throttle	1
4	0828655M02	Support	1
5	0893470M93	Relay Shaft Foot Throttle	1
6	0714871M91	Assy Lever Shaft	1
7	0195610M01	Pin Clevis	1
8	0828656M01	Spring	1
9	1442967X01	Pin - Cotter	1
10	0353502X01	Screw - Hex	2
11	0353441X01	Washer Lock	2
12	0890066M01	Bolt - Hex	1
13	0375108X01	Nut - Hex	1
14	0339096X01	Bolt Hex	1
15	0390971X01	Flat Washer	2
16	0339375X01	Lock Washer	1
17	0339030X01	Nut Hex	1
18	0888320M01	Spacer	1
19	0353709X01	Bolt - Hex	1
20	0353432X01	Washer Lock	4
21	0376476X01	Washer Flat	1
22	0353700X01	Set Screw	3

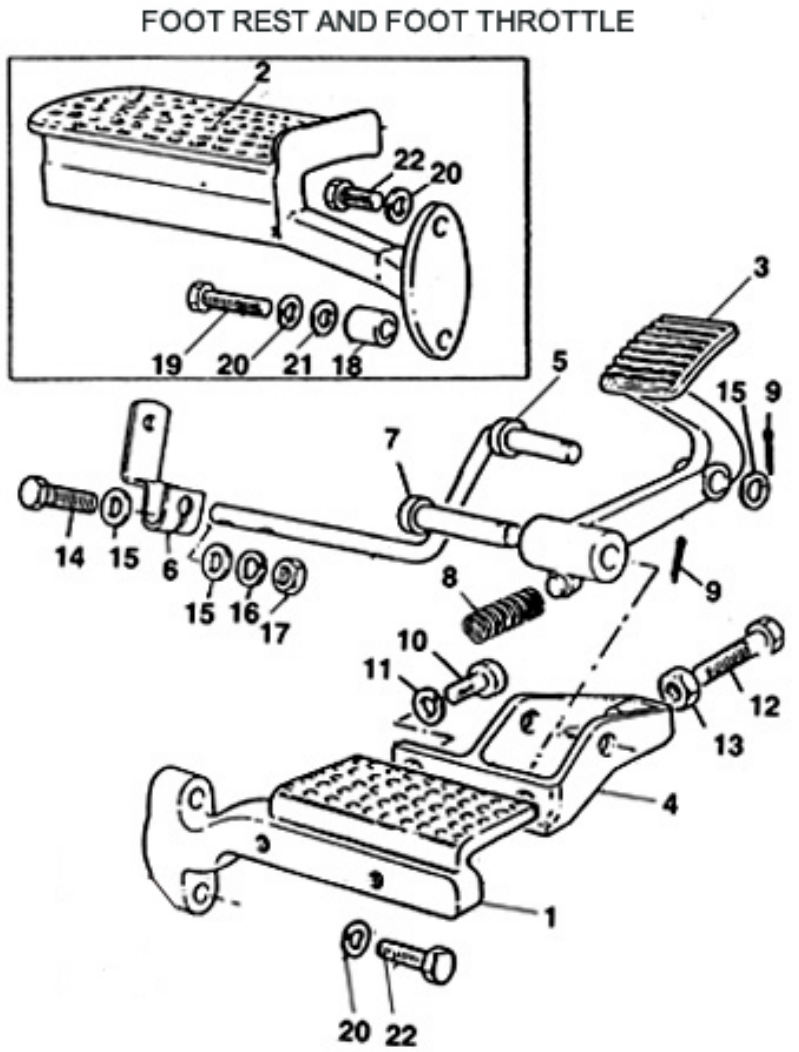


STEP ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	4243745M9165	Assy. Foot Step LH	1
2	4243746M9165	Assy. Foot Step RH	1
3	4243219M01	Foot Step - RH	1
4	4243220M01	Foot Step - LH	1
5	4245181M01	Step - Bracket Rear RH	1
5	4245182M01	Step Bracket-Rear LH	1
9	0717032M01	Step Support - R.H	1
10	0715824M01	Step Support-L.H.	1
11	0714208M01	Sq.Neck Bolt(M8x16)	8
12	0339374X01	Special Washer	8
13	0339169X01	M8 Hex Nut	8
16	1866453M01	Stop Plate	1
17	0180770M01	Bolt	1
18	0195681M01	Washer	1
20	0353428X01	Locknut (0576 153)	1
NI	4246065M01	Lock Clutch Pedal	1
NI	1441461X01	Nut	1

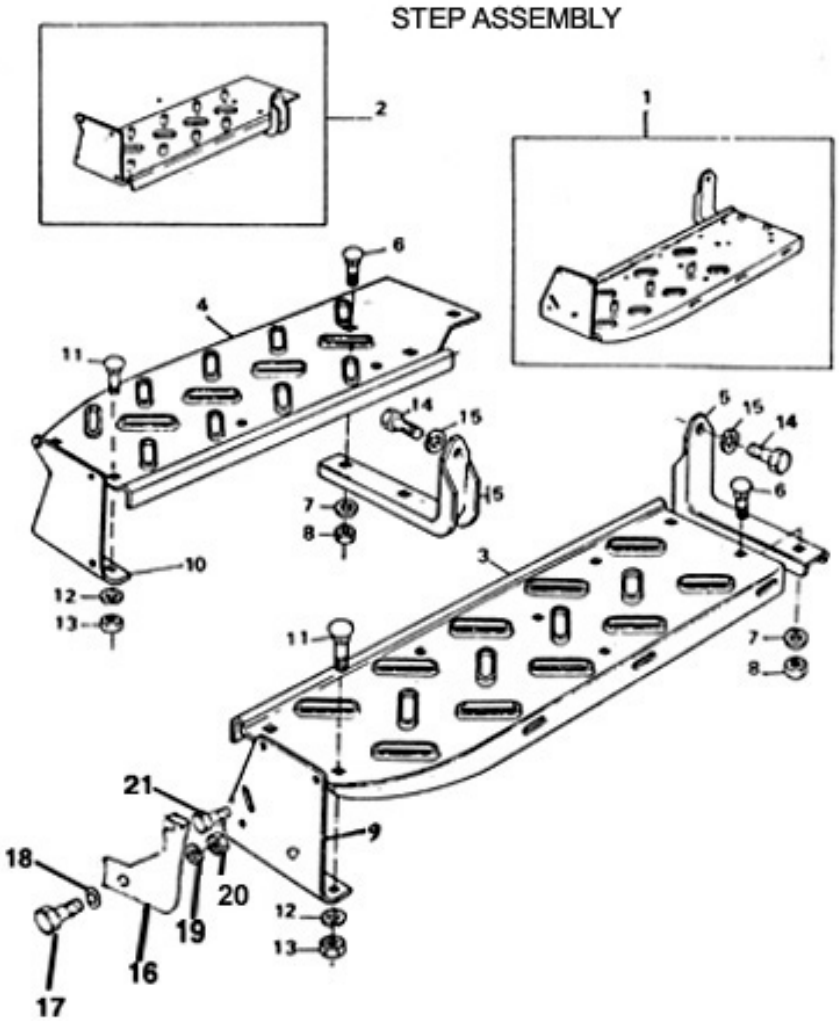


FENDER RH ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	4242261M93	Assy Fender RH	1
	0717924M92	Assy Fender RH	1
2	0719177M91	Assy. Rear Lamp RH	1
3	4246094M91	Assy. Side Lamp RH	1
4	4248082M91	Assy. Work Lamp	1
5	4243223M01	Extension Plate RH	1
	0716877M01	Extension Plate RH for OIB	1
6	0339123X01	M8 Hex Bolt Length 20	5
7	0390972X01	Washer	10
8	0339374X01	Special Washer	5
9	0339169X01	M8 Hex Nut	5
10	4242065M92	Tool Box	1
11	3009492X01	Screw Hex (Ftf/1035/245)	2
12	0339376X01	Lock Washer	2
13	3009693X01	Hex Nut-M 10	2
14	4247866M91	RH Fender Harness	1
	0715810M91	RH Fender Harness for OIB	1
15	1442925X01	Fender Bolt	2
16	0339623X01	Nut Hex	2
17	3019575X01	Flat Washer	2
18	0339377X01	Spring Washer	2
NI	0715835M01	Power Cord Tie	2

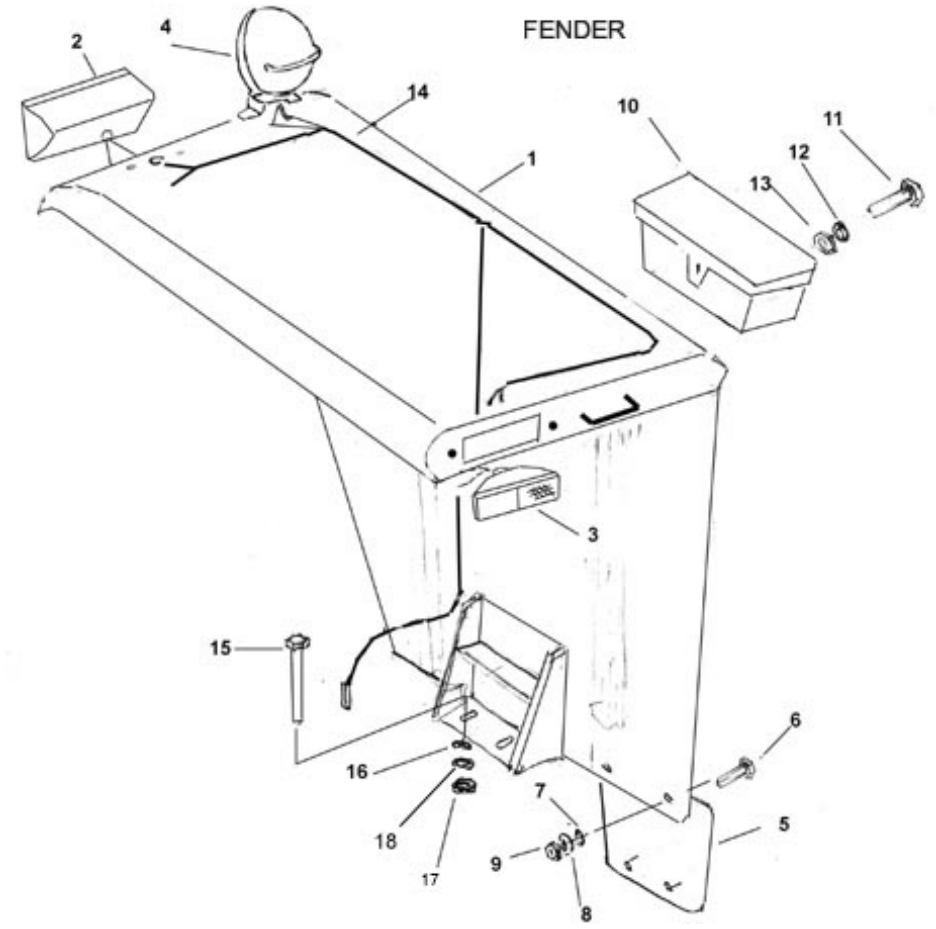


FENDER LH ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	4242260M93	Assy. Fender LH	1
	0717923M92	Assy. Fender LH for OIB	1
2	0719119M91	Assy. Rear Lamp LH	1
3	4246095M91	Assy. Side Lamp LH	1
4	4243221M01	Extension Plate LH	1
	0716877M01	Extension Plate LH for OIB	1
5	0339123X01	Screw - Hex	5
6	0390972X01	Washer Flat	10
7	0339374X01	Washer Lock	5
8	0339169X01	Nut - Hex	5
9	4247865M91	Assy. Fender Harness LH	1
	0715811M91	Assy. Fender Harness LH-for OIB	1
10	1442925X01	Fender Bolt (New)	2
11	0339623X01	Nut Hex	2
12	3019575X01	Flat Washer	2
13	0339377X01	Spring Washer	2
NI	0715835M01	Power Cord Tie	2

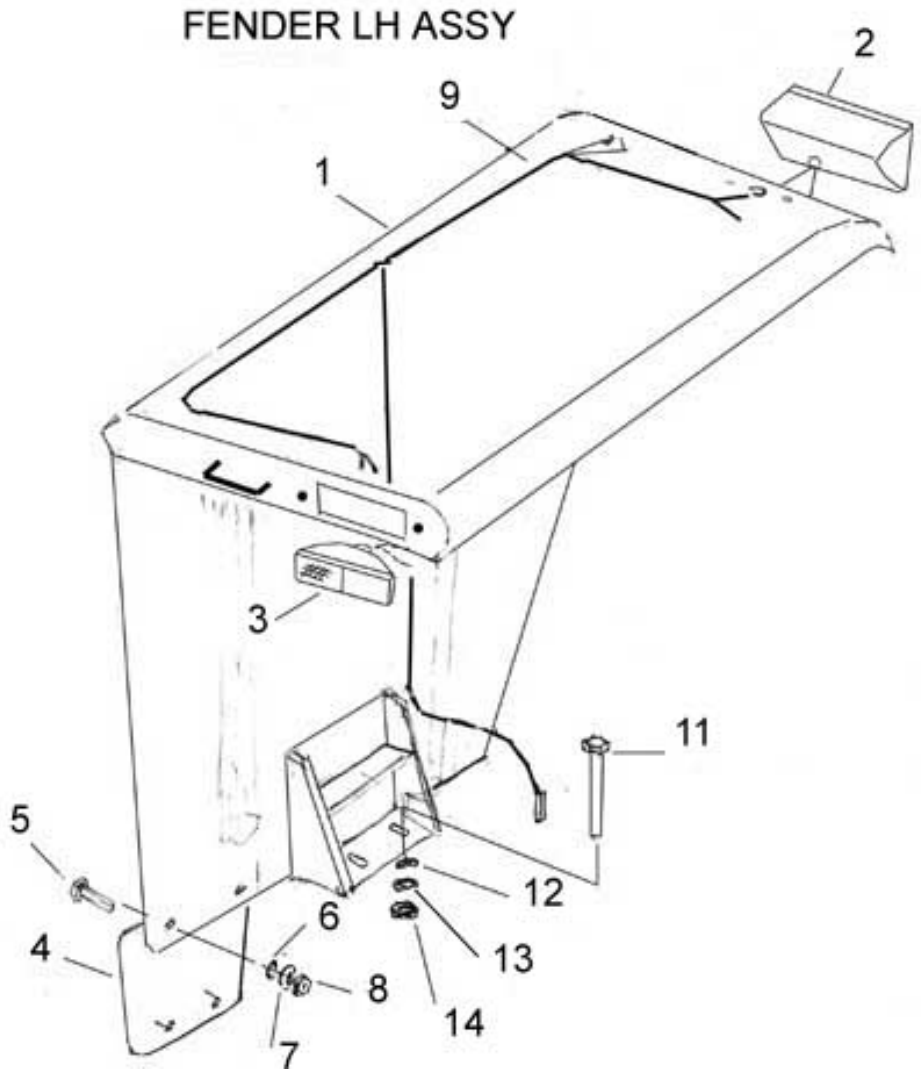

BATTERY


SL NO	PART NO	DESCRIPTION	QTY
1	0719092M91	Battery	1
2	4246108M91	Battery Cable - Positive	1
3	4246109M91	Battery Cable - Negative	1
4	0714244M91	Cable Starter Motor-Earth	1

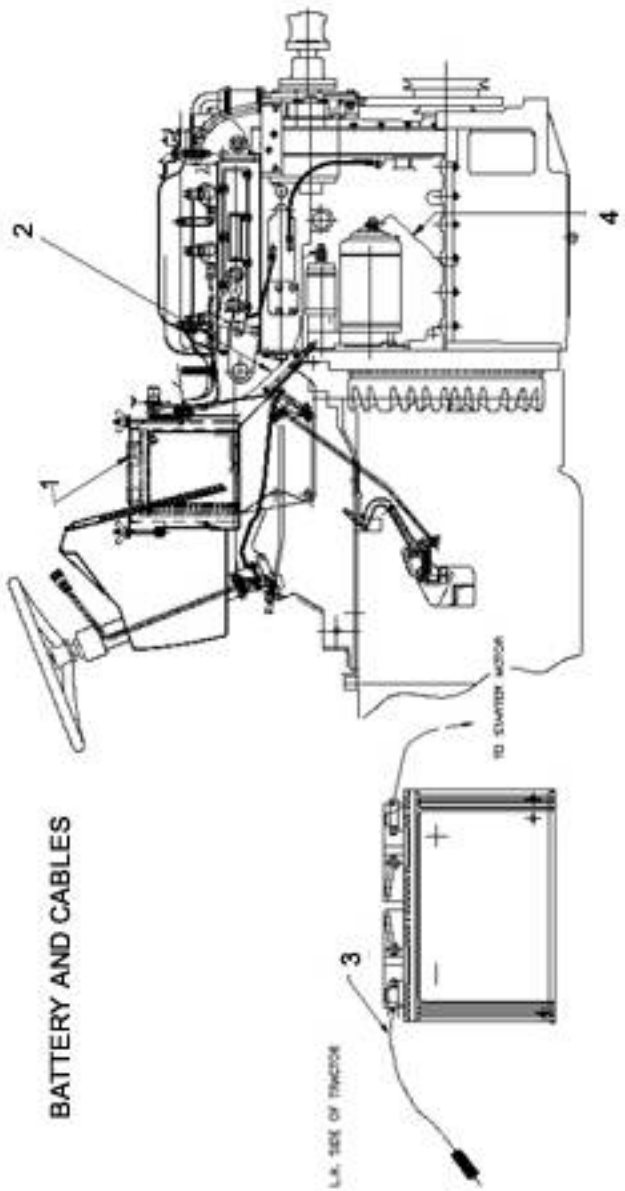

BATTERY AND CABLES


ELECTRICALS

SL NO	PART NO	DESCRIPTION	QTY
1	4251283M91	Alternator	1
	4251840M91	Alternator for OIB	1
2	0715938M91	Starter Motor (Exports)	1
3	1224A00101	Assy. Main Harness	1
	4251536M91	Assy. Main Harness for OIB	1
4	1874709M01	Brake Light Switch	1
5	3697346M01	Neutral Safety Switch	1
6	4245089M91	Starter Relay	1
7	4243286M92	Electronic Flasher	1
8	0715954M91	Assy Tank Unit Mx6654	1
9	4251450M91	Assy. Head Lamp (RH Traffic)	2
	0716280M91	Assy. Head Lamp (LH Traffic)	2
10	4245814M92	Horn	1
11	0715251M91	Temperature Sensor Unit	1

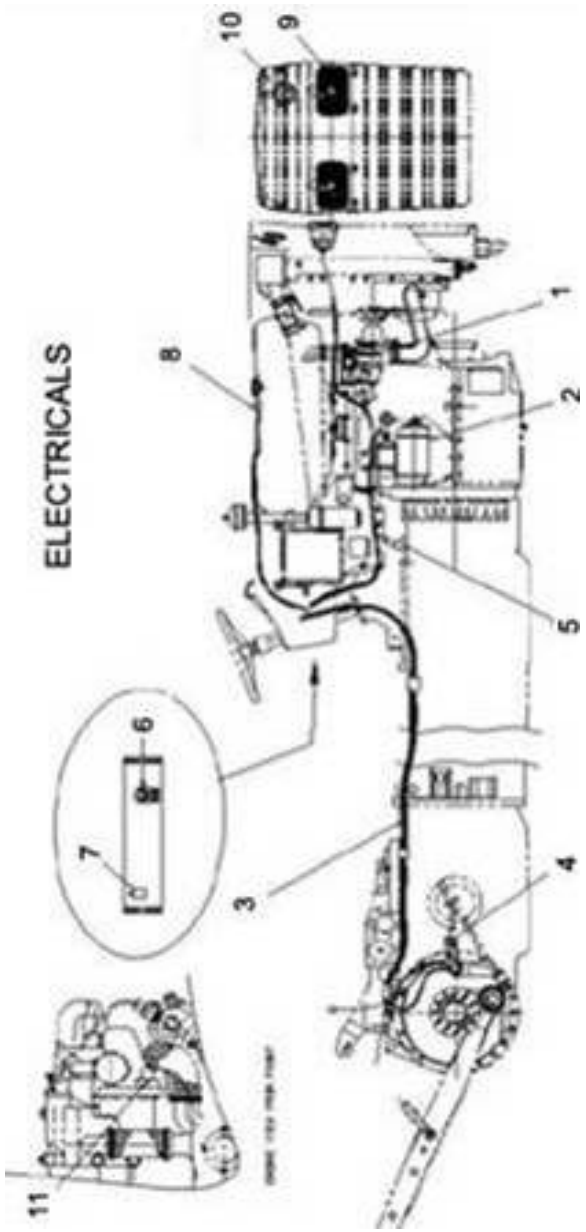


REAR AND FRONT WHEEL ASSEMBLY(OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	0827181M02	Front Tyre - 6.00 X 16	2
2	0827182M02	Front Tube - 6.00 X 16	2
3	0195638M91	Front Wheel - 6.00 X 16	2
4	0906863M01	Bolt Front Hub	12
5	0719047M91	Rear Wheel - 13.6 X 28	2
6	0712558M01	Rear Tube - 13.6 X 28	2
7	0712559M02	Rear Tyre - 13.6 X 28	2
12	0180004M01	Nut Rear Wheel	16

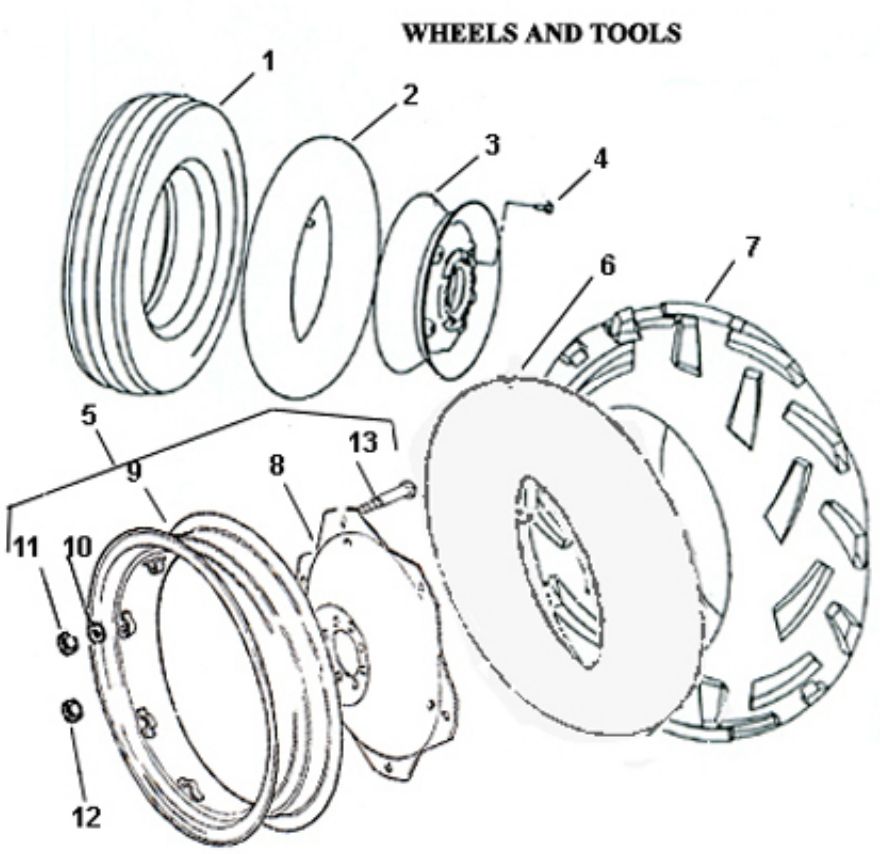


REAR AND FRONT WHEEL ASSEMBLY(DRUM)

SL NO	PART NO	DESCRIPTION	QTY
1	0827181M02	Front Tyre - 6.00 X 16	2
2	0827182M02	Front Tube - 6.00 X 16	2
3	0195638M91	Front Wheel - 6.00 X 16	2
4	0906863M01	Bolt Front Hub	12
5	0713491M91	Rear Wheel - 13.6 X 28	2
6	0712999M01	Rear Tube - 13.6 X 28	2
7	0713000M02	Rear Tyre - 13.6 X 28	2
12	0180004M01	Nut Rear Wheel	16

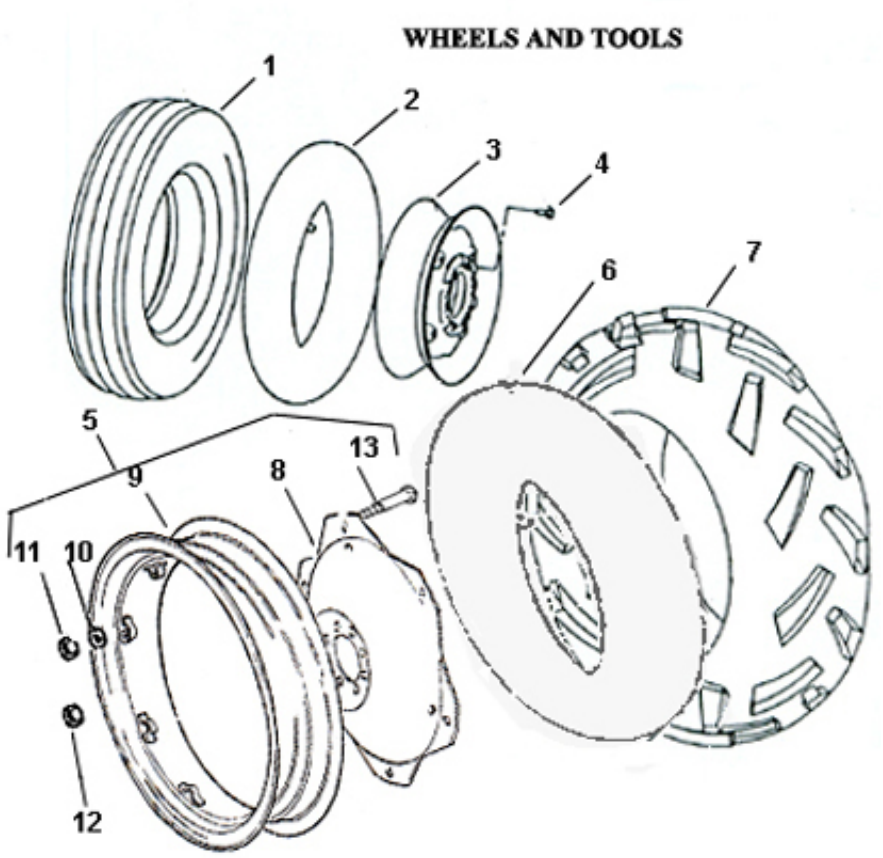


INSTALLATION TRAILOR SOCKET(DRUM/OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	4244744M91	Trailor Socket - 7 Pole	1
2	4255760M91 / 4247565M91	Trailer Socket Harness	1
3	4250673M91	Bracket Trailer's Socket	1
4		Screw	2
5		Spring Washer	2
6		Nut	2

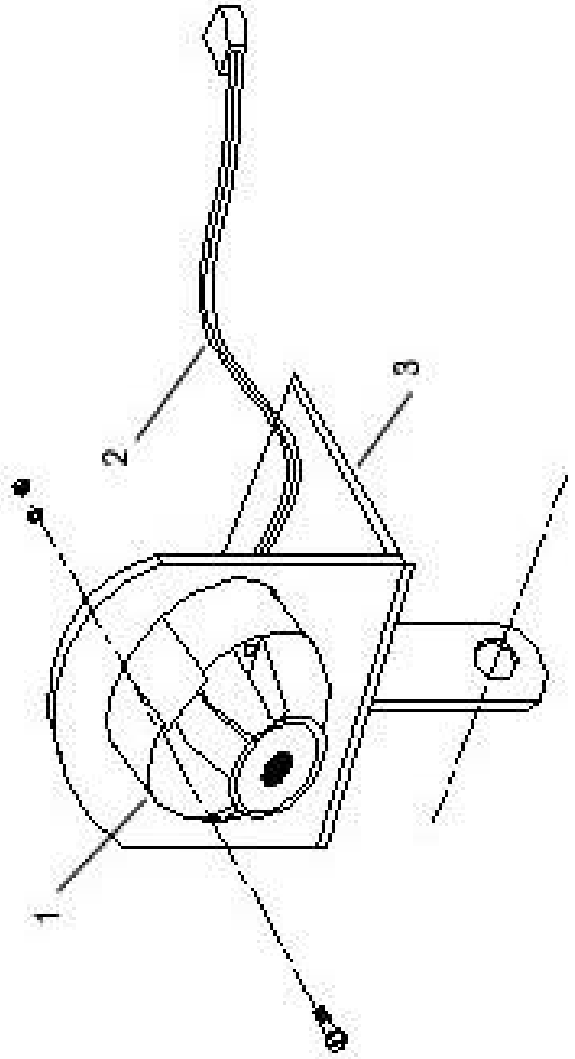


INSTALLATION OIL PIPE KIT

SL NO	PART NO	DESCRIPTION	QTY
NI	8000914P91	Oil Pipe Kit	1
1	4242764M91	Assy. Oil Pipe	1
2	4246270M01	Bolt Banjo	1
3	4246271M01	Seal Washer	2
4	4242688M0165	Bracket Oil Pipe	1
5	4246272M01	Lock Nut	1
6	4242640M91	Assy Connector (Export)	1
7	1680263M01	Coupling	1
8	3611673M01	Dust Plug	1

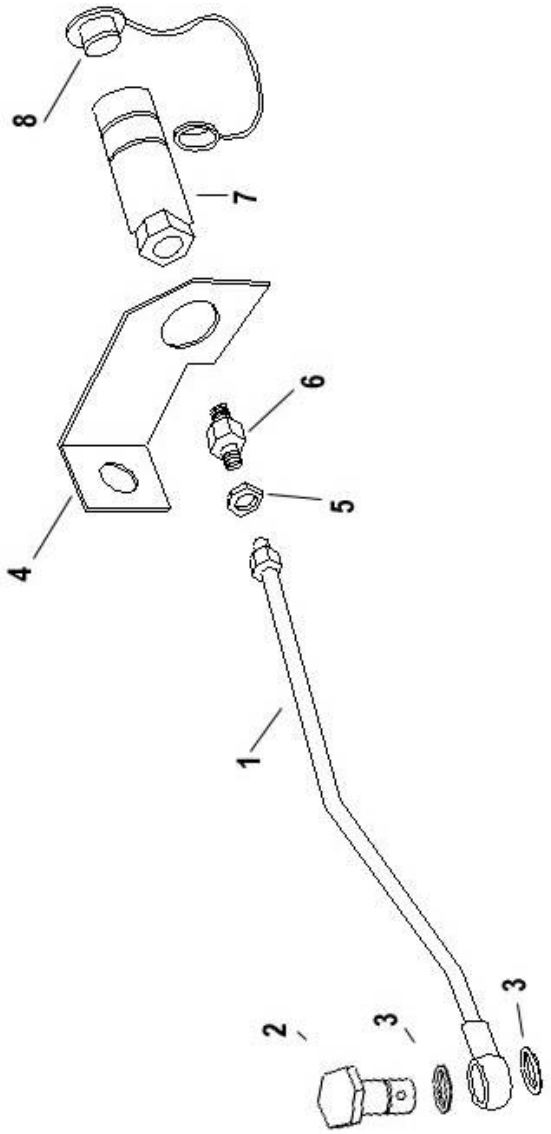


INSTALLATION SEAT ASSEMBLY

SL NO	PART NO	DESCRIPTION	QTY
1	0715697M91	Seat Assembly	1
2	4242326M01	Plate - Seat Support	1
3	0353700 X01	Bolt Hex	2
4	0353432 M01	Lock Washer	2
	0715274M01	Washer	2

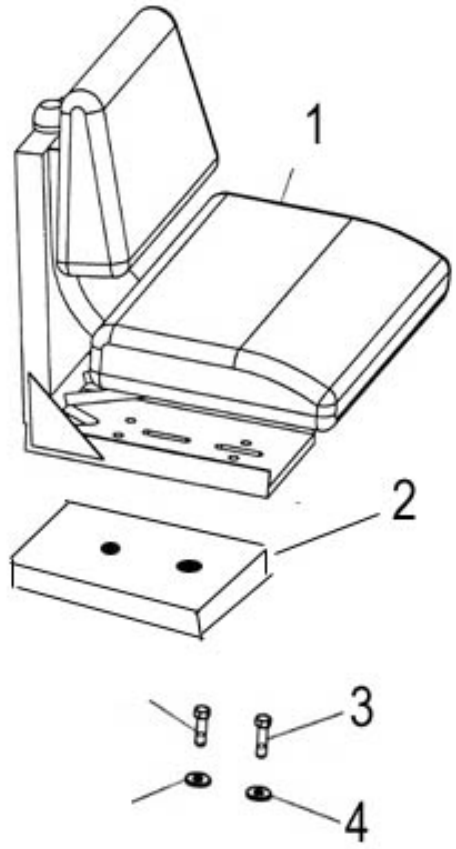


CHAIN STABILISER KIT(DRUM)

SL NO	PART NO	DESCRIPTION	QTY
NI	0717144M91	Chain Stabiliser Kit(Includes Item 1-10)	1
1	0717145M91	Stabilizer Chain Assembly	2
2	0717864M91	Assy. Bracket Stabilizer RH	1
3	0717864M91	Assy. Bracket Stabilizer LH	1
4	0646101M02	Anchor pin	2
5	0353433X01	Washer - Lock	2
6	0353427X01	Nut-Hex	2
7	0810285M92	Assy.Linch Pin & Ring	2
8	0354571X01	Bolt Hex	2
9	0353440X01	Lock Washer	2
10	0353435X01	Nut Hex	2

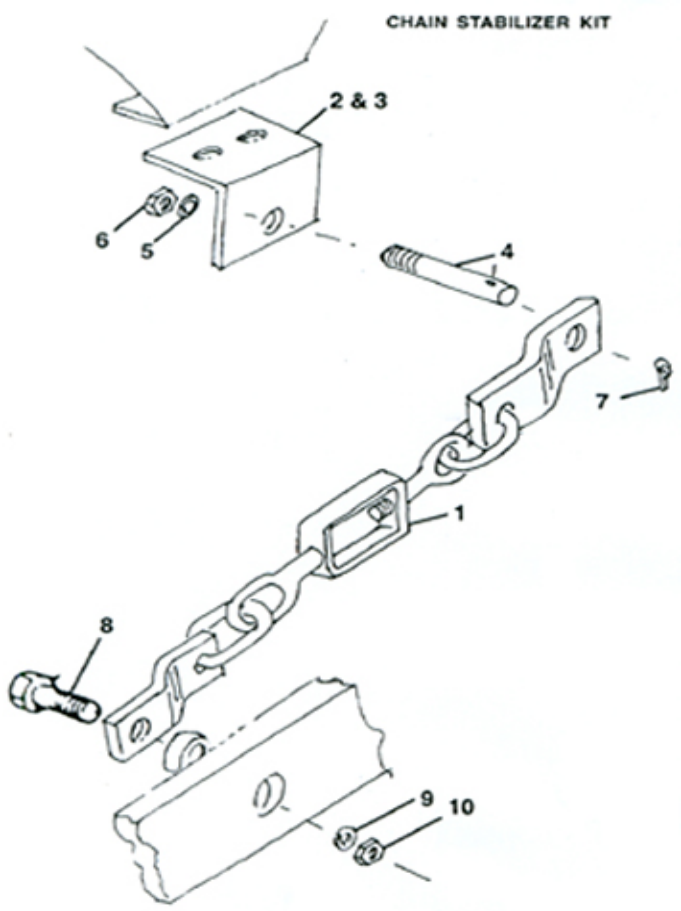


CHAIN STABILISER KIT(OIB)

SL NO	PART NO	DESCRIPTION	QTY
NI	2380A00101	Chain Stabiliser Kit(Includes Item 1-10)	1
1	0717145 M91	Stabilizer Chain Assembly	2
2	2480A00101	Assy. Bracket Stabilizer RH	1
3	2480A00101	Assy. Bracket Stabilizer LH	1
4	0646101M02	Anchor pin	2
5	0353433X01	Washer - Lock	2
6	0353427X01	Nut-Hex	2
7	0810285M92	Assy.Linch Pin & Ring	2
8	0354571X01	Bolt Hex	2
9	0353440X01	Lock Washer	2
10	0353435X01	Nut Hex	2

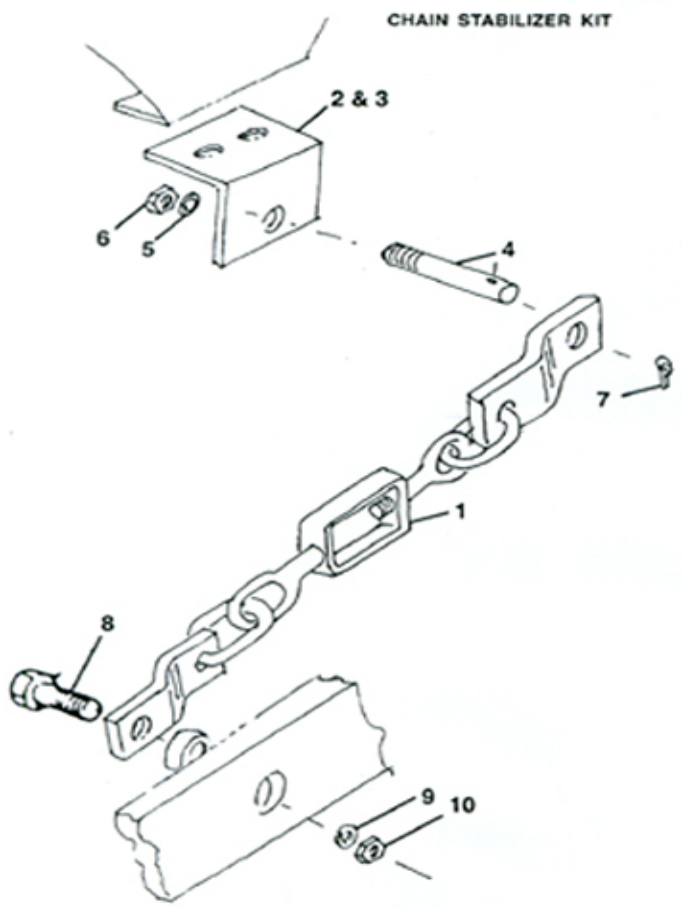


SWINGING DRAW BAR

SL NO	PART NO	DESCRIPTION	QTY
NI	2281A00101	Swinging Draw Bar	1
1		Assy Attachment Brkt. Welded	1
2		Locking Strip	2
3		Stud	4
4		Nut	4
5		Assembly Support Pin	1
6		Clevis Pin	2
7		Hair Pin	2
8		Pin	1
9		Assembly Frame Welded	1
10		Assembly Hinge Pin	1
11		Assembly Linch Pin And Ring	2
12		Drawbar Long	1
13		Nut	2
14		Washer	2
15		Hex Bolt	2
16		Assy.Linch Pin & Ring	1
17		Clevis Adaptor	1
18		Assembly Drawbar Pin	1

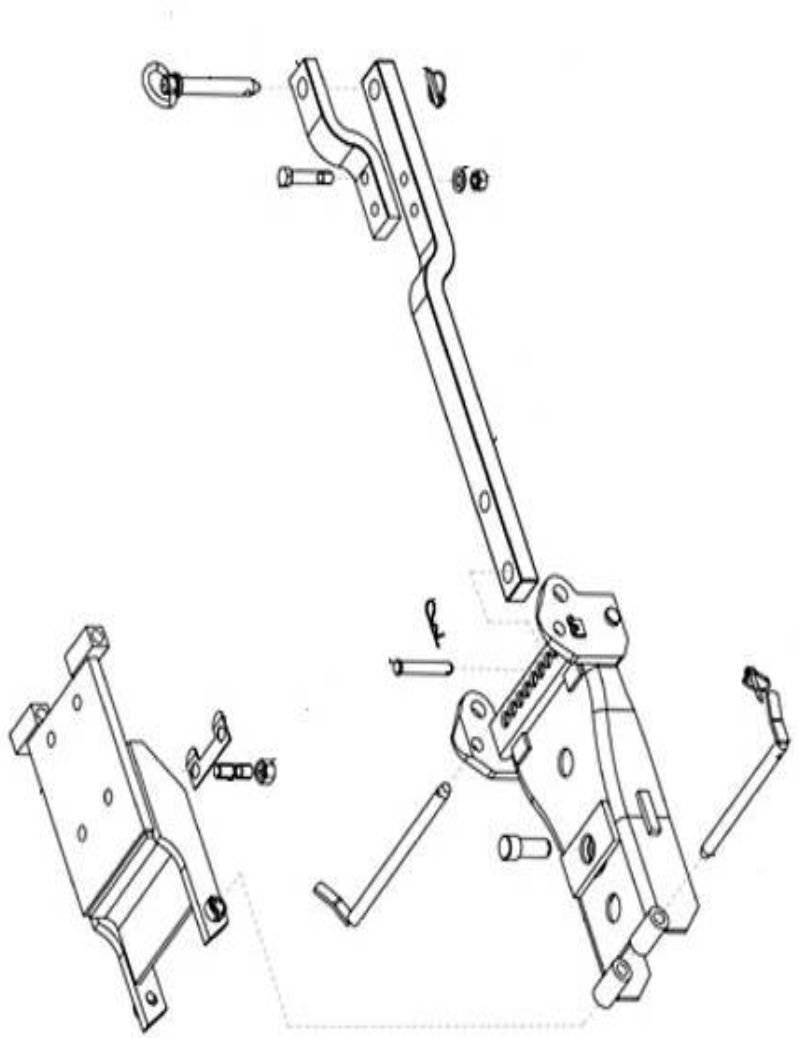


ELECTRICALS (DRUM)

SL NO	PART NO	DESCRIPTION	QTY
1	4249891M91	Oil Pressure Gauge	1
2	0715953M91	Fuel Gauge	1
3	0713726M91	Indicator Light	1
4	4245394M91	Turn Indicator Lamp	1
5	0713727M93	Warning Lamp- Ignition On	1
6	0715249M91	Rpm / Hour Meter	1
7	0715137M91	Meter	1
8	0713722M91	Horn Switch	1
9	4256387M92	Temperature Gauge	1
10	4243513M91	Starter Switch	1
11	4245803M91	Hazard Warning Switch	1
12	4249646M91	Light Switch	1
13	1229P00101	Assy. Indicator Switch	1

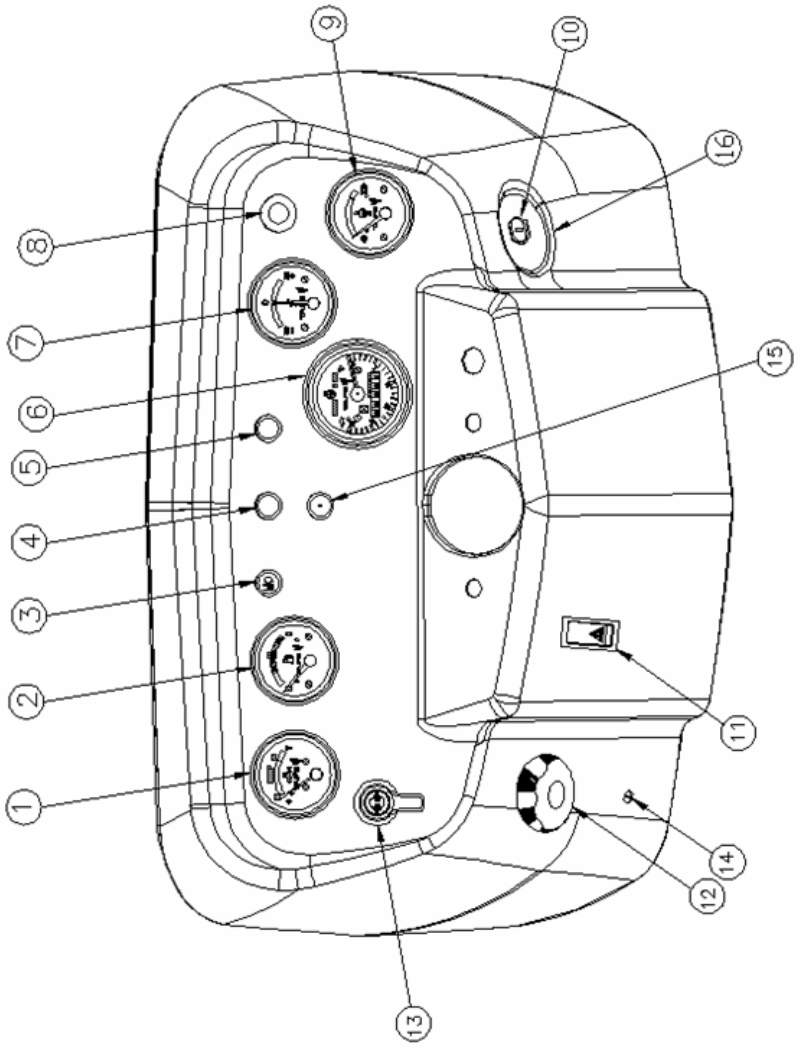


ELECTRICALS (DRUM)

SL NO	PART NO	DESCRIPTION	QTY
1	4246108M91	Battery Cable - Positive	1
2	4246109M91	Battery Cable - Negative	1
3	0714244M91	Cable Starter Motor-Earth	1

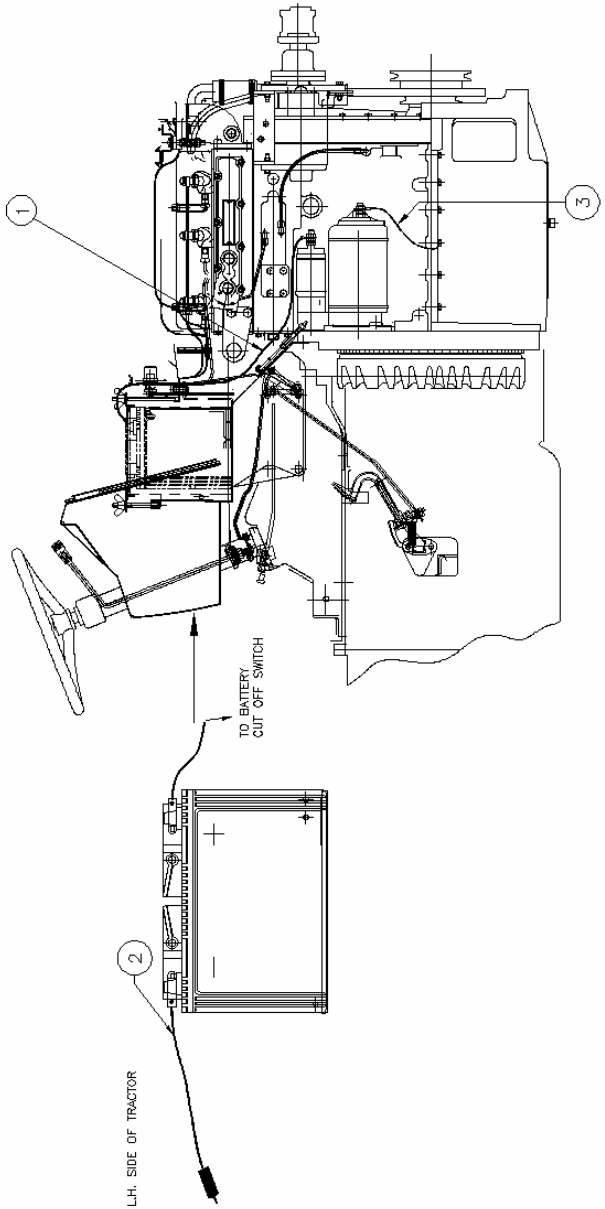


ELECTRICALS (DRUM)

SL NO	PART NO	DESCRIPTION	QTY
1	4247865M91	Rear Harness LH	1
2	4247866M91	Rear Harness RH	1
3	4246095M91	Assy. Side Lamp LH	1
4	4246094M91	Assy. Side Lamp RH	1
5	0719119M91	Assy. Rear Lamp LH	1
6	0719177M91	Assy. Rear Lamp RH	1
7	4248082M91	Assy. Work Lamp	1
8	4251717M91	Reflex Reflector	2

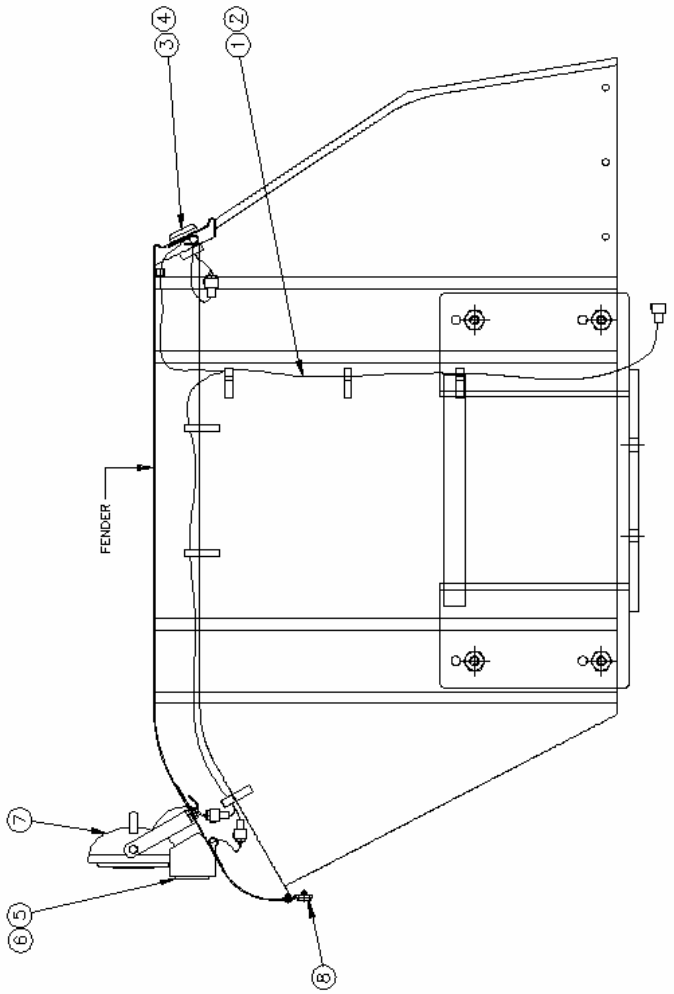


ELECTRICALS (IOB)

SL NO	PART NO	DESCRIPTION	QTY
1	4246108M91	Battery Cable - Positive	1
2	4246109M91	Battery Cable - Negative	1
3	0714244M91	Cable Starter Motor-Earth	1

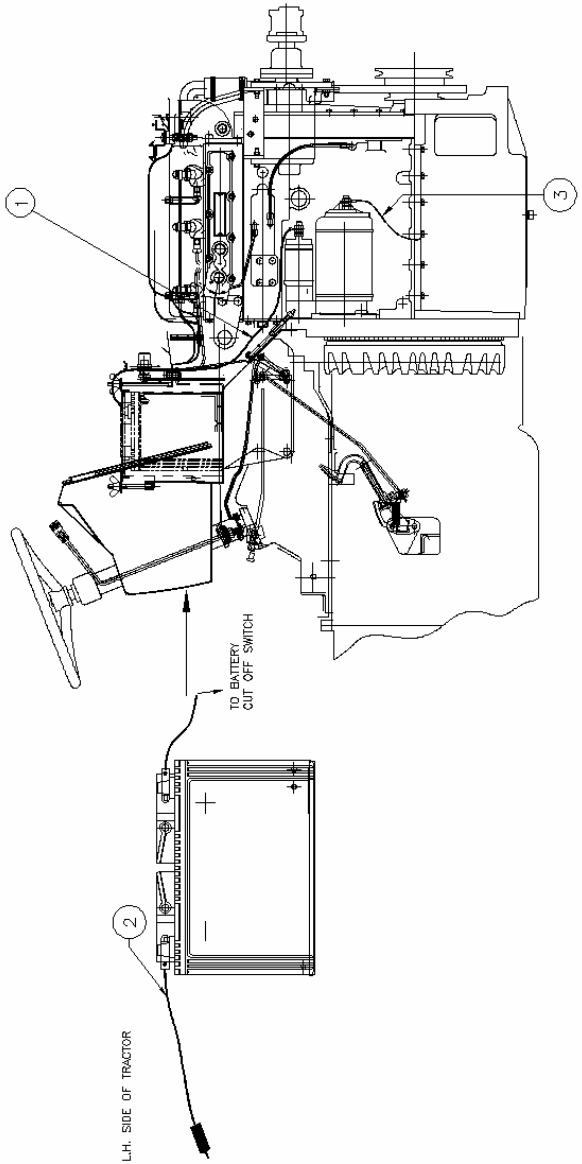


FENDER ELECTRICALS (OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	0715811M91	Rear Harness LH	1
2	0715810M91	Rear Harness RH	1
3	0719193M91	Assy. Side Lamp LH	1
4	0719194M91	Assy. Side Lamp RH	1
5	0715104M91	Assy. Rear Lamp LH	1
6	0715105M91	Assy. Rear Lamp RH	1
7	4248082M91	Assy. Work Lamp	1
8	4251717M91	Reflex Reflector	2

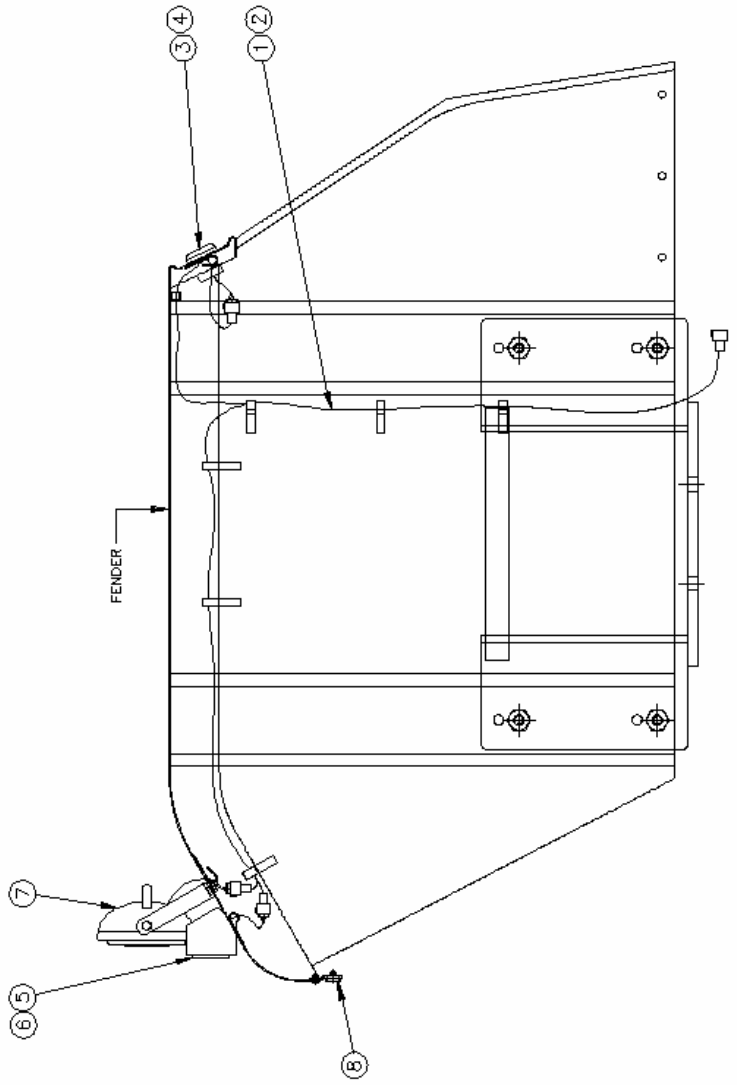


HOOD ASSEMBLY(OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	0717493M91	Assy. Hood And Cap	1
2	0717525M91	Assy. Wrapper And Bracket	1
NI	4256437M91	Assy. Grille	1
3	0716380M91	Assy. Grille Upper	1
4	0716372M01	Centre Plate Grille	1
5	0716374M91	Assy. Grille & Pads - Lower	1
6	0717516M01	Beading Rubber	1
7	0717478M01	Side Panel RH	1
8	0717479M01	Side Panel LH	1
9	0717545M01	Sealing Strip Radiator	2
10	4246082M01	Side Plate LH	1
11	4246081M01	Side Plate RH	1
12	0717575M01	C' Sunk Slotted Screw	6
13	4242867M01	Hood Emblem LH - TAFE 45 DI	1
13	4242868M01	Hood Emblem TAFE 45DI RH	1
14	0717539M91	Assy. Battery Platform	1
15	0717514M02	Beading Rubber	1
16	0180673M01	Bumper Rubber	2
17	4248260M92	Assy. Lever & Spindle	2
20	4246072M01	Washer Hood Lock	2
19	4248261M01	Cam Hood Lock	2
18	4246073M01	Washer Hood Lock-Fibre	2
21	1441462X01	Nut Nyloc M6 * 1	2
22	0717517M01	Bolt Hood Pivot	2

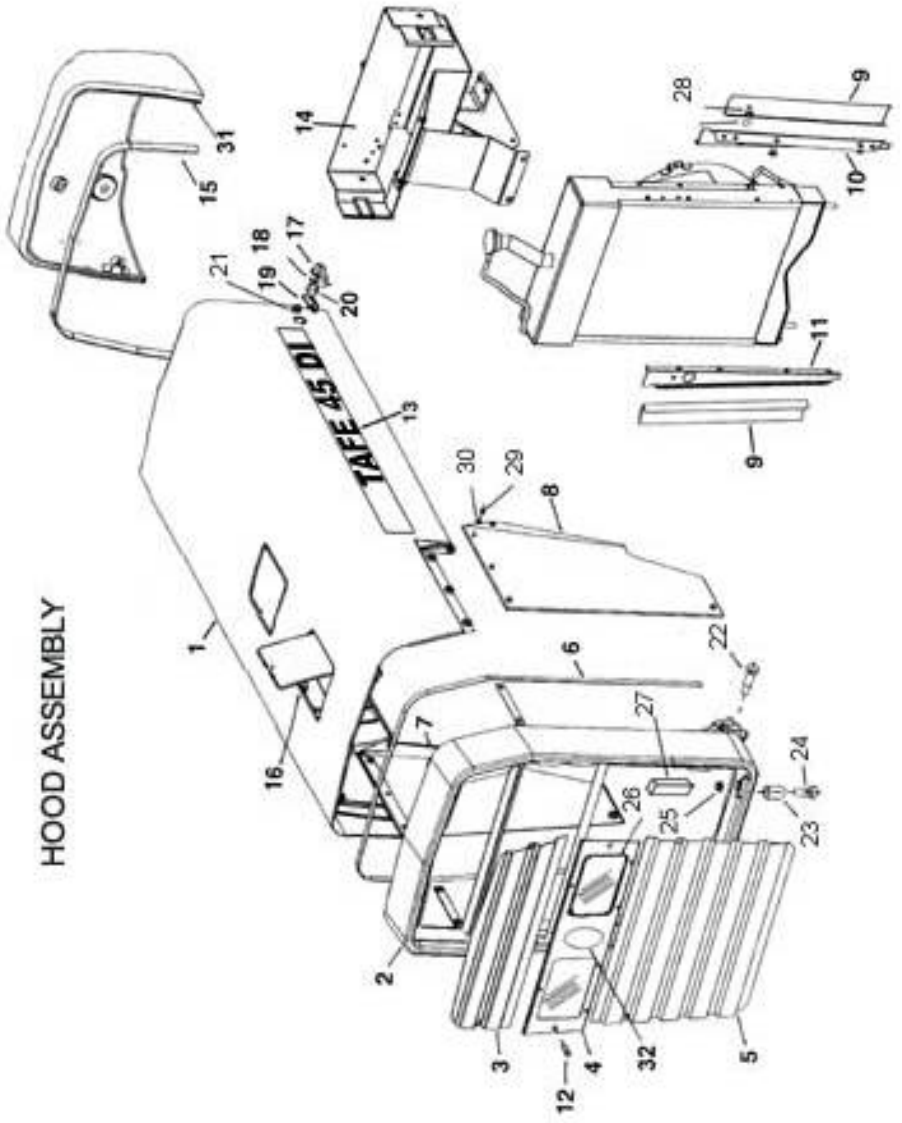


SL NO	PART NO	DESCRIPTION	QTY
23	0717453M01	Stopper Hood	2
24	3009287X01	Socket Head Cap Screw	2
25	0339169X01	Nut - Hex	2
26	0718085M01	Seal - Head Lamp	2
27	0716346M01	Pad	12
28	0714324M01	Screw Self Tapping	8
29	0339560X01	Screw	8
31	0717515M01	Beading Rubberl)	1
30	0390971X01	Washer Flat	8
32	4242657M01	Front Monogram	1
NI	0717576M01	Hay Guard	1
NI	4242313M01	Pad Rubber - Hay Guard	1
NI	4242500M01	Sticker OIB RH	1
	4242656M01	Sticker OIB LH	1

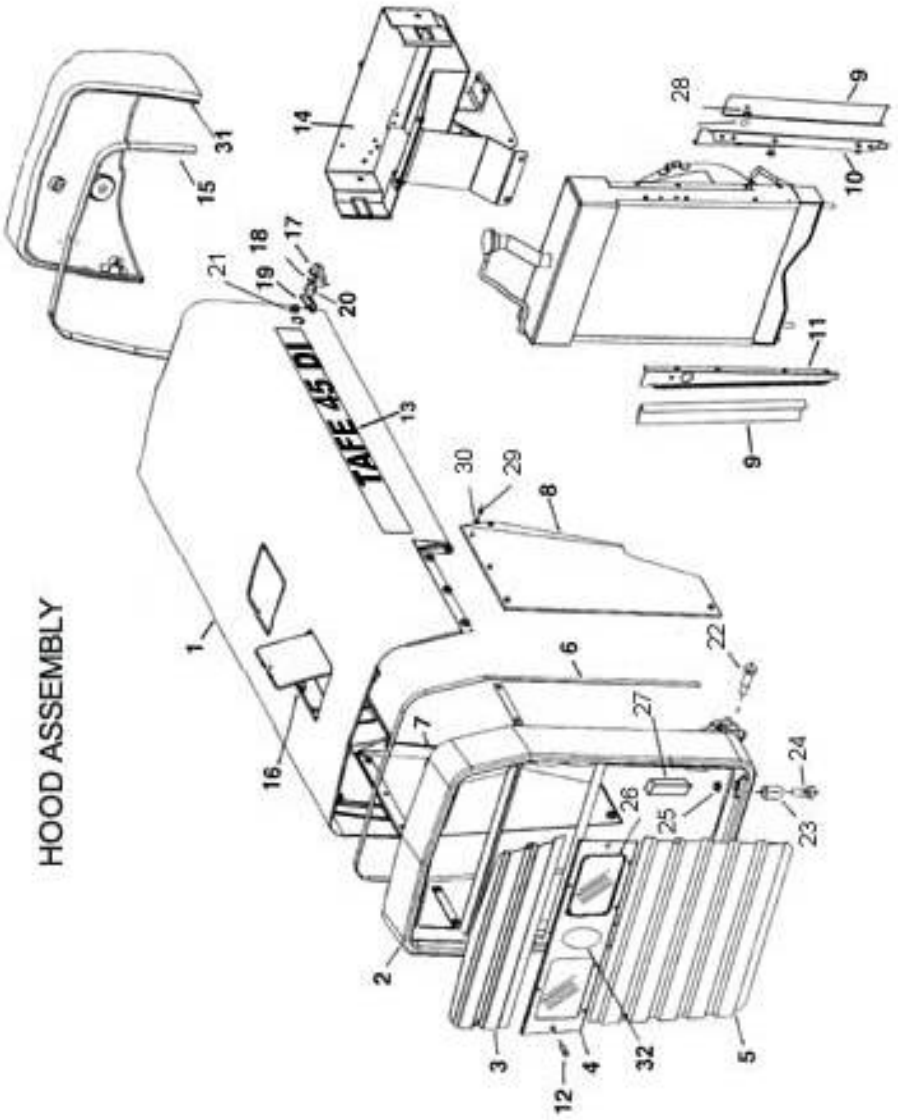


REAR AXLE DIFF LOCK(OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	1871783 M01	Pedal	1
2	1860961 M01	Shaft	1
3	0354454 X01	Pin	1

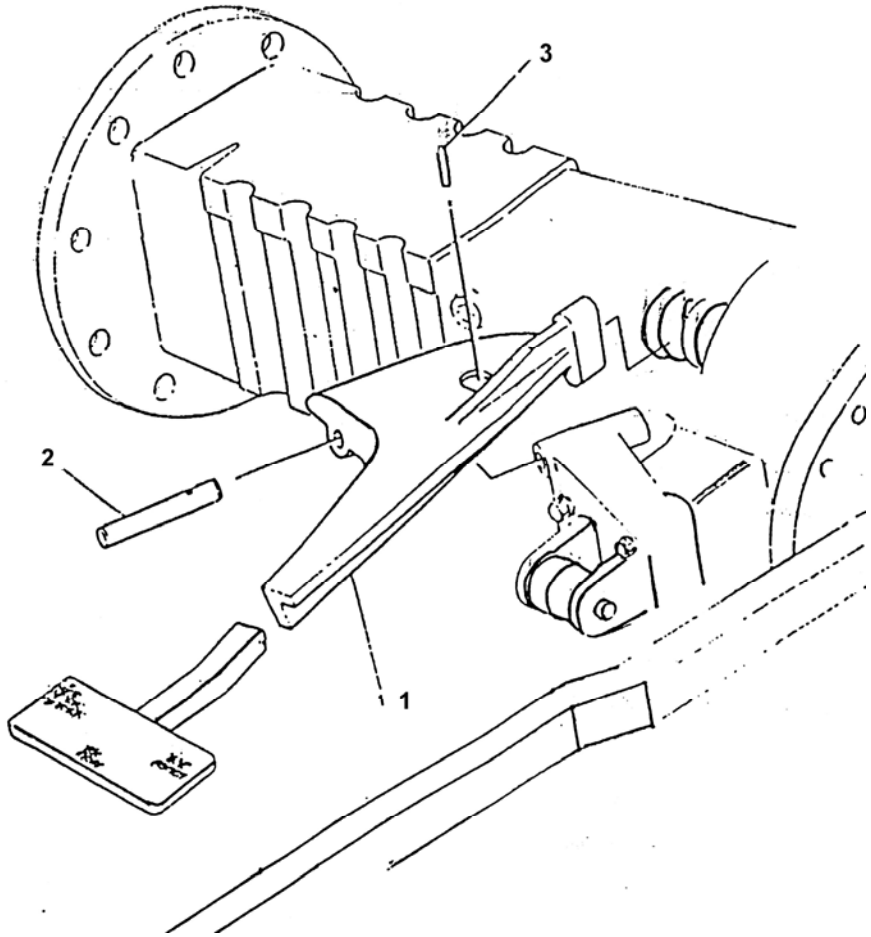


REAR AXLE HOUSING(OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	3759143M01	Axle Housing RH	1
1	3759144M01	Axle Housing LH	1
2	0377 622X01	Bolt	18
3	0377 626X01	Nut	12
4	3759196M01	'O' Ring	2
5	0361549X01	Bolt	24
6	0363625 X01	Nut	24
7	0376721 X01	Lock Washer	24
8	0180004 M01	Nut	16
9	0339605 X01	Circlip	2
10	3613686 M01	Collar	2
11	1440519 X01	Circlip	2
12	3697992 M01	Bearing Ball	2
13	3698907 M01	Oil Seal	2
14	0717915 M01	Shaft-Rear Axle	2
15	3697699 M02	End Cover	2
16	3611939 M01	Seal Labyrinth	2

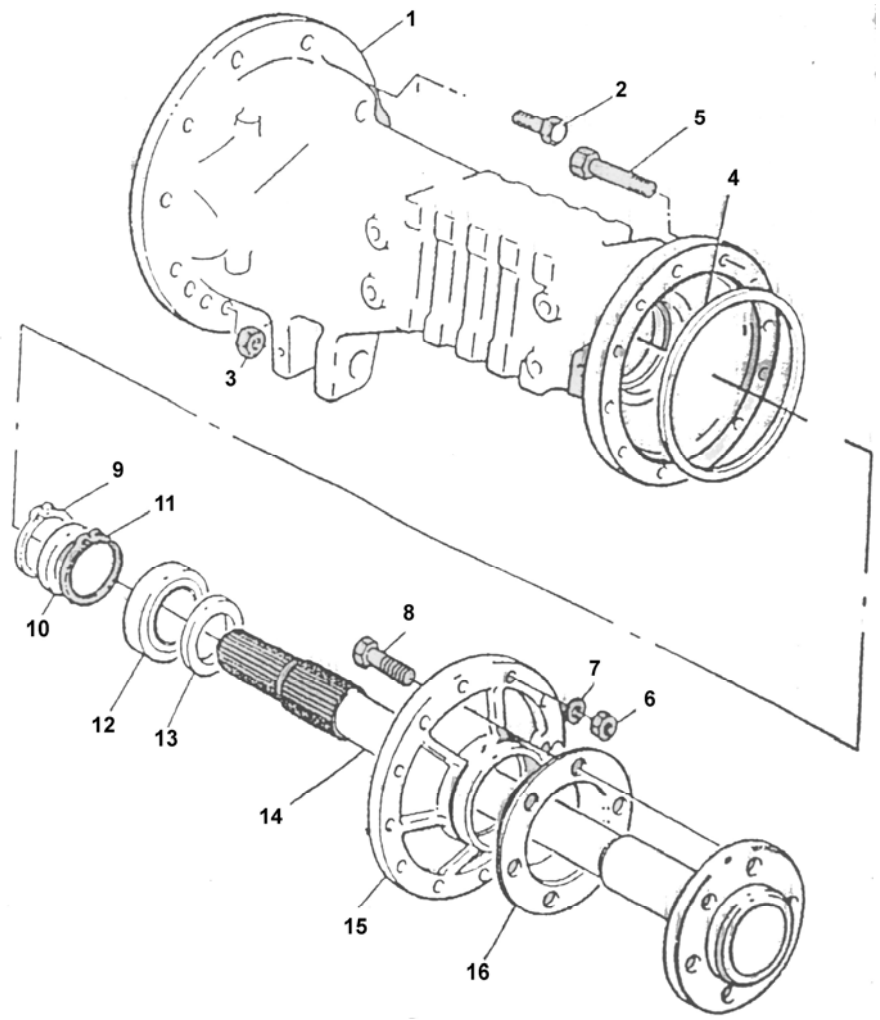


REAR AXLE DIFF LOCK MECHANISM (OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	1865014 M01	Clevis	1
2	0906811 M01	Boot	1
3	0353428 X01	Nut	1
4	0851258 M01	'O' Ring	1
5	0358950 X01	Circlip	1
6	3611355 M01	Collar	1
7	1694353 M01	Spring	1
8	3613150 M01	Shaft	1
9	1860838 M01	'O' Ring	4
10	3614193 M02	Plate Diff Carrier RH	1
11	0355723 X01	Pin	1
12	0906807 M01	Fork	1
13	0717917 M01	Coupler	1
14	3614194 M02	Plate Diff Carrier LH	2
15	0376 407 X01	Screw	4

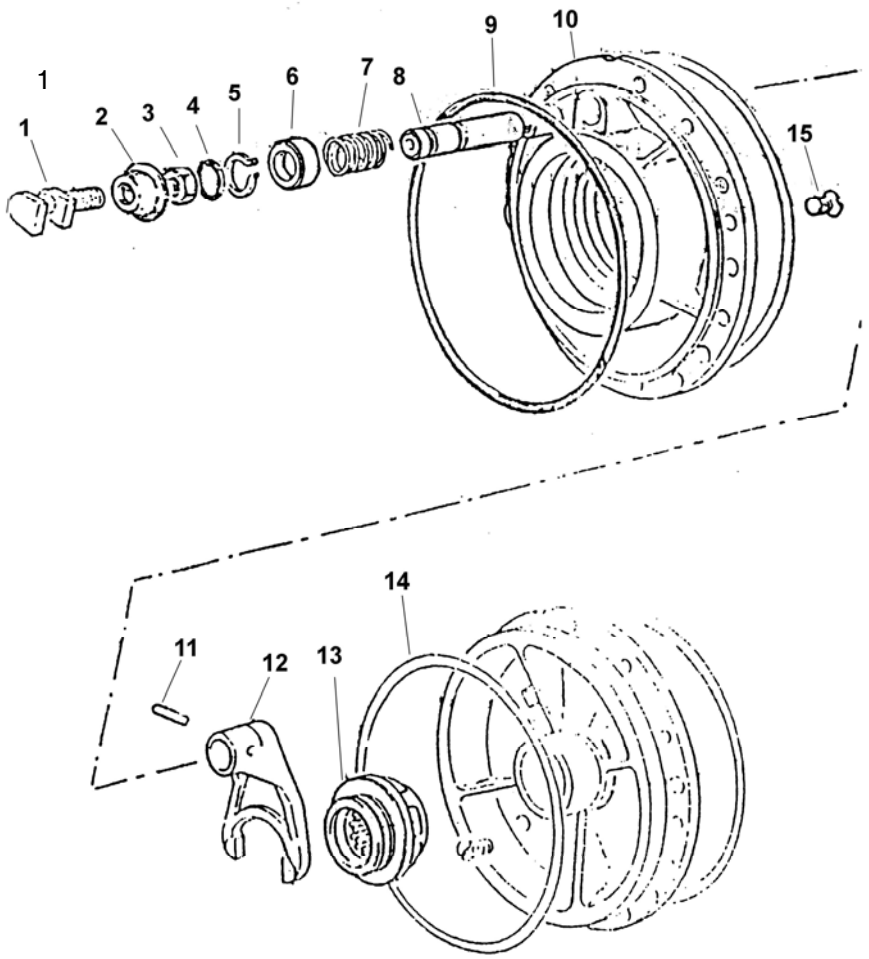


BRAKES

SL NO	PART NO	DESCRIPTION	QTY
	4256140M91	Assy. Brake – (4 Plate)	2
1	4256142M91	Assy. Actuator	2
2	1860956M01	Reaction Pin	1
3	3613538M01	Disc	4
4	4256143M01	Disc	8

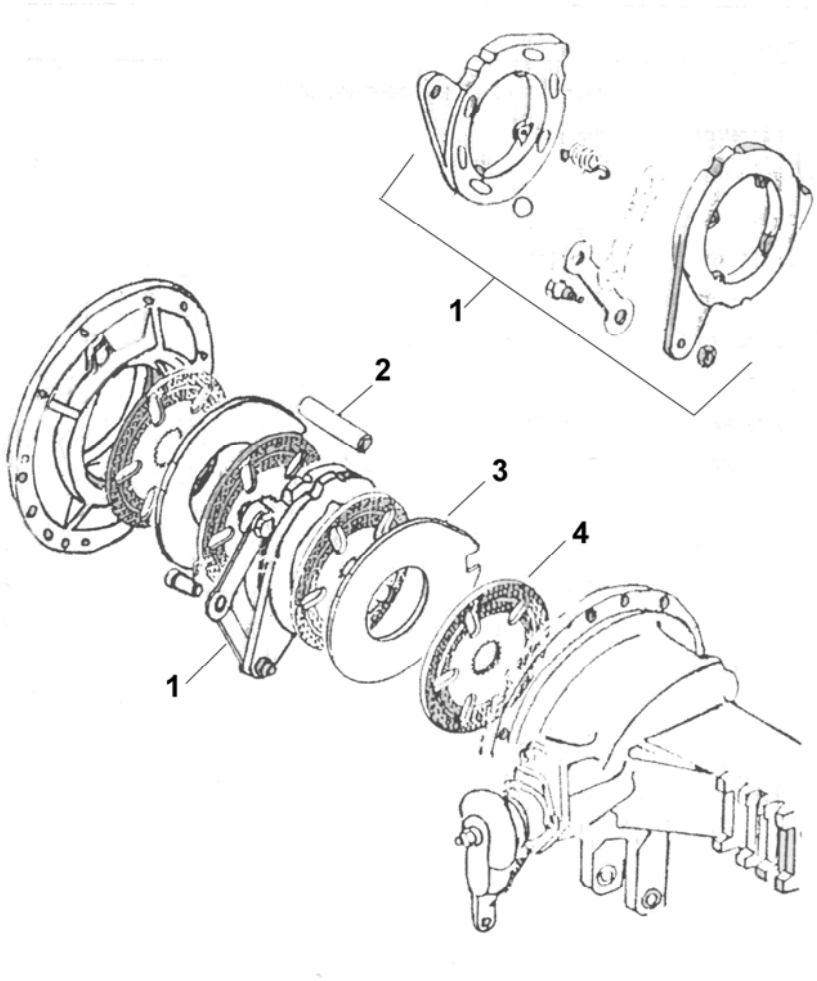


WET BRAKES LINKAGES

SL NO	PART NO	DESCRIPTION	QTY
1	1667224 M01	Bracket RH	1
2	1860960 M02	Gasket	2
3	0362463 X01	Bolt	1
4	0376720 X01	Lock Washer	1
5	0362 455 X01	Bolt	2
6	0376 720 X01	Lock Washer	2
7	3697832M01	Lever RH	1
8	3697 831 M01	Lever LH	1
9	1861676 M91	Rod	2
10	0195348 M01	Pin	2
11	0354068 X01	Cotter Pin	2
12	1860959 M01	Seal	2
13	1865003 M01	Trunnion	2
14	1865002 M02	Collar	2
15	0363571 X01	Nut	2
16	1860970 M01	Bracket LH	1
17	0363459 X01	Pin	2
18	0375091 X01	Pin	2
9	0362 463 X01	Bolt	1
20	0376 720 X01	Lock Washer	1
21	0362 455 X01	Bolt	2
22	0376 720 X01	Lock Washer	2
25	1868691 M01	Spring	2
26	3701000 M01	Bracket	2

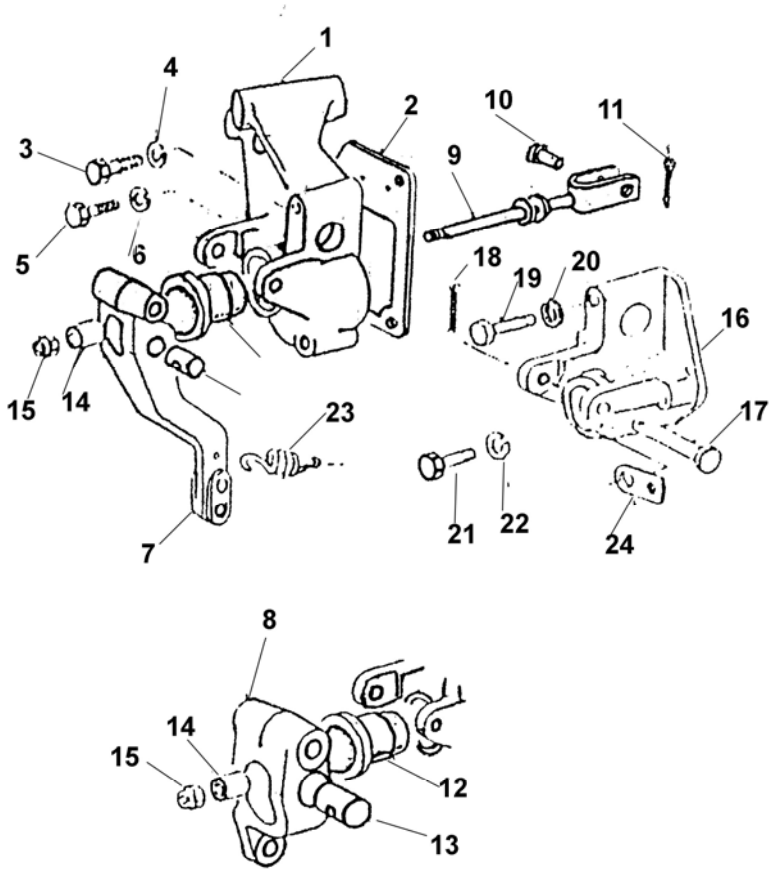


BRAKE CONTROLS(OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	4246 772 M91	Assy. Brake Pedal R.H.	1
2	4246 771 M91	Assy. Brake Pedal L.H.	1
3	0716 733 M01	Spacer - Pedal Shaft	3
4.	0716 732 M01	Spacer - Pedal Locking	1
5.	0716 731 M01	Stud 1	
6.	0390 331 X01	Nut Hex	2
7.	0716 723 M91	Rod Assy. Brake	2
8.	0716 734 M91	Assy - Cross Shaft	1
9.	0716 737 M01	Spacer Cross Shaft	1
10.	1440 366 M01	Key Woodruff	1
11.	0716 727 M01	Arm L.H.	1
12.	0716 725 M91	Assy. Relay Lever R.H.	1
NI	0195910M01	Bush 1	
13.	3019 206 X01	Clevis Pin	4
14.	0390 734 X01	Washer	4
15.	1442 993 X01	Cotter Pin	4
16.	0713 459 M01	Special Washer	1
17.	0713 940 M01	Stud 1	
18.	1441 303 X01	Nut	2
19.	1442 378 X01	Bolt	1
20.	0339 643 X01	Nut	1
21.	0339 369 X01	Washer Lock	1
22.	0881 471 M01	Anchor	2
23.	0339 721 X01	Bolt	2

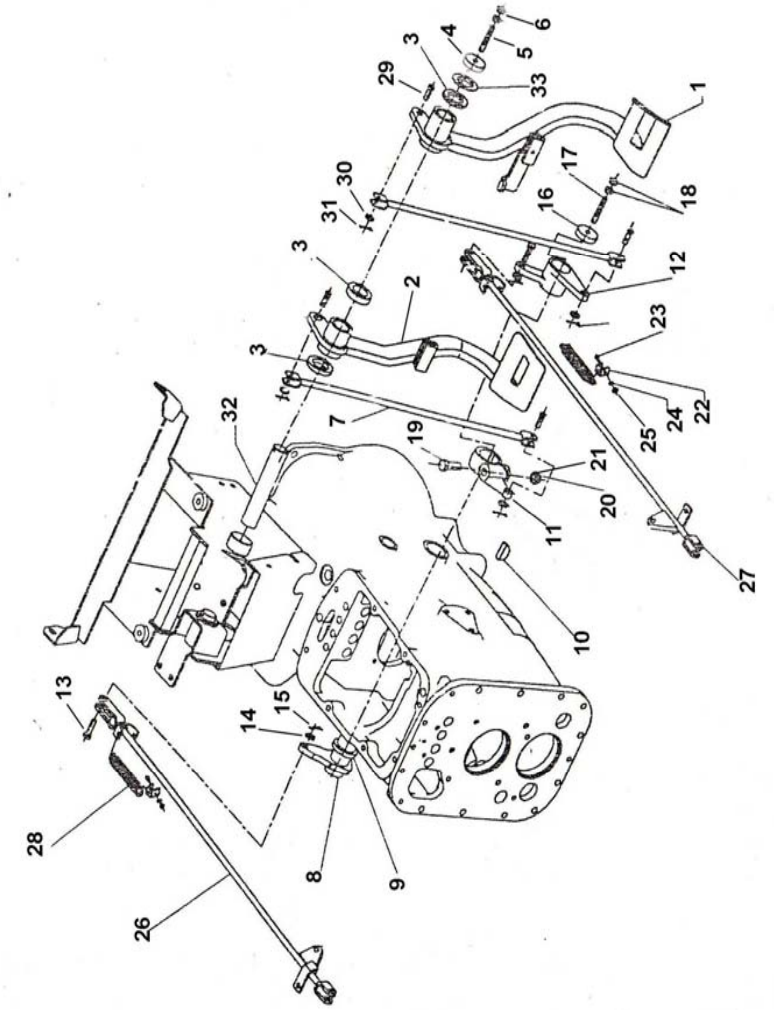

SL NO	PART NO	DESCRIPTION	QTY
24.	0390 469 X01	Washer Lock	2
25.	0390 995 X01	Nut Hex	2
26.	0716 738 M91	Assy. Brake Rod R.H. (Complete)	1
27.	0716 739 M91	Assy. Brake Rod L.H. (Complete)	1
28.	1868 691 M01	Spring - Return	2
29.	0832 813 M01	Clevis Pin	4
30.	0353 755 X01	Washer	4
31.	1442 967 X01	Cotter Pin	4
32.	0716 728 M91	Assy.Shaft Pedal	1
33.	0717 006 M01	Shim	AR

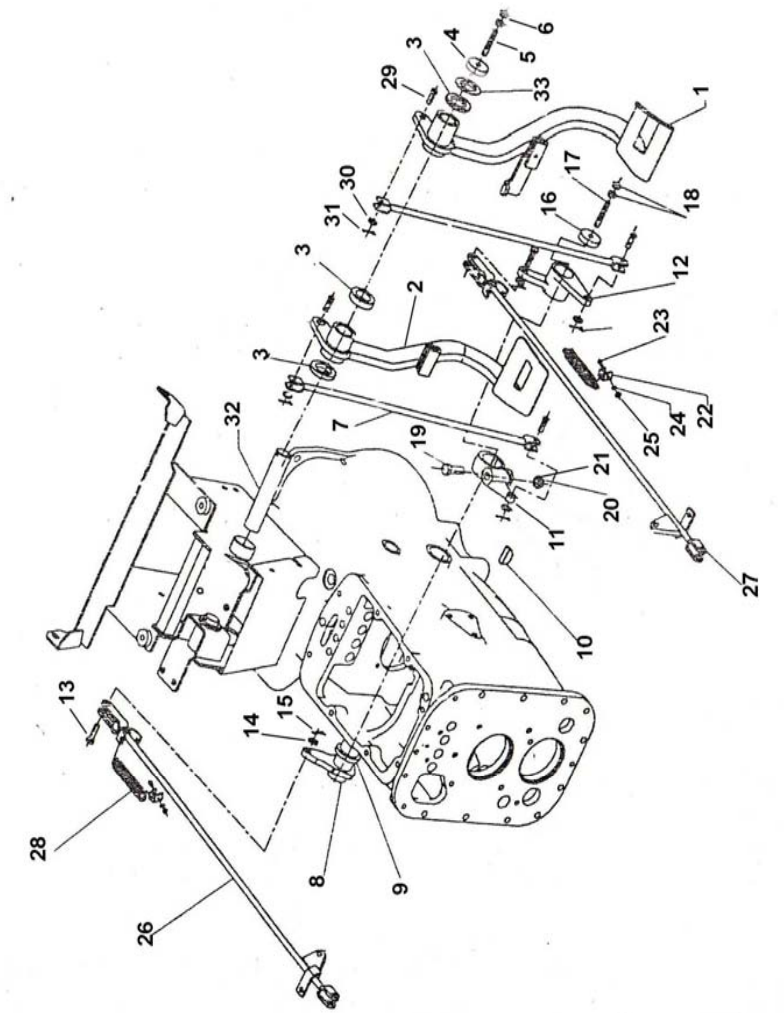

CLUTCH CONTROLS(OIB)

SL NO	PART NO	DESCRIPTION	QTY
1	0717 573 M91	Assy. Clutch Pedal	1
2	0716 722 M01	Arm Clutch	1
3	0716 718 M91	Rod Assembly Clutch	1
4.	3019 206 X01	Pin Clevis	2
5.	0390 734 X01	Flat Washer	2
6.	1442 993 X01	Pin Cotter	2
7.	0716 733 M01	Spacer	2
8.	0717 006 M01	Shim	AR
9.	1442378X01	Bolt 1442378 X01	1
10.	0339643X01	Nut 0339369X01	1
11.	0716 728 M91	Assembly Shaft Pedal	1
NI	0339 369 X01	Washer	1

