


9.1.6.2 Graphical display


The ETU776 trip unit equipped with a fixed-mounted graphical display as standard. This display enables a text output with a maximum of 8 lines or the graphical representation of characteristics.

It is used both to display data as well as to parameterize the trip unit and the metering function. The display is operated via the operating keys provided on the trip unit.

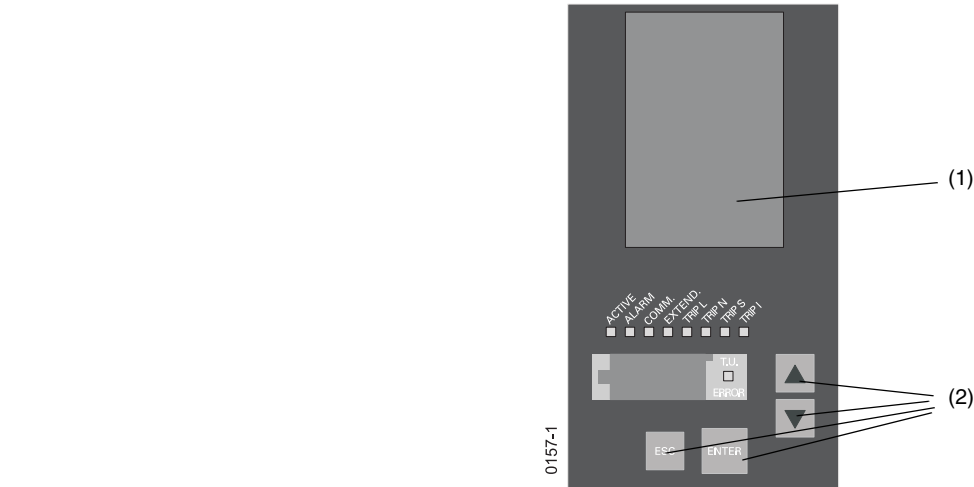

- (1) Graphical display
- (2) Operating keys


Display overview

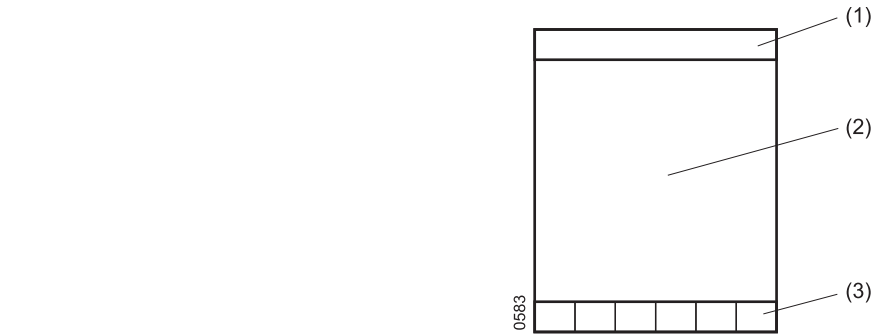

- (1) Menu title
- (2) 8-line alphanumeric display or graphical representation of characteristics
- (3) Status line

Status line


The status line shows, by means of bold symbols, which actions the operator can carry out and which settings are currently active at this moment.

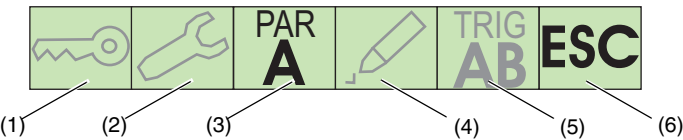

- (1) Access with password only
- (2) Maintenance required
- (3) Set parameter set for protective functions
- (4) Editing option
- (5) Set trigger
- (6) Possible actions by the operator

Representation of bar diagrams

The measured values for some parameters are displayed both as numerical values and graphically in the form of a bar diagram.

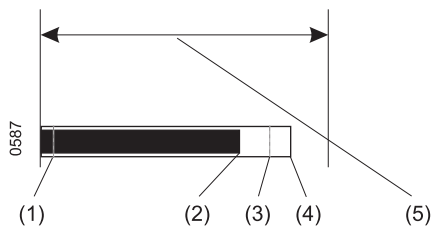


- (1) Lowest measured value
- (2) Present measured value
- (3) Current measured value
- (4) 100% of the measured parameter
- (5) Width of display


The markings for the lowest and highest measured value are automatically updated during the measurement.

Display during operation

After the supply voltage is applied, the display switches from the "power up screen" to the operational screen after approximately 5 seconds. It shows the currents in the three phases and in the neutral conductor as numerical values and in the form of a bar diagram. The background illumination of the display is automatically switched off after approximately 1 minute. It can be switched on again by pressing any button.

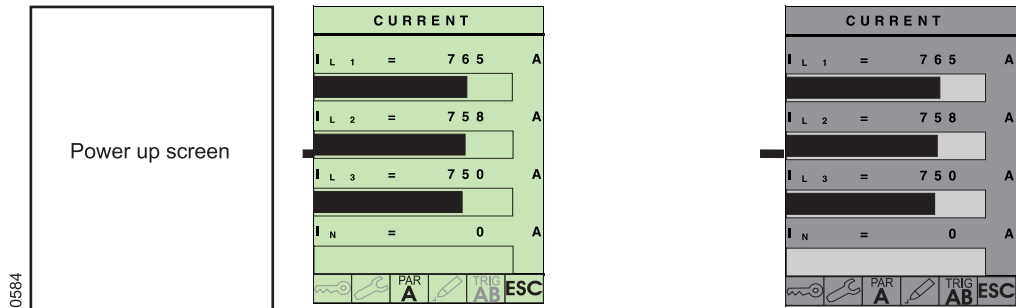

Polling the main menu

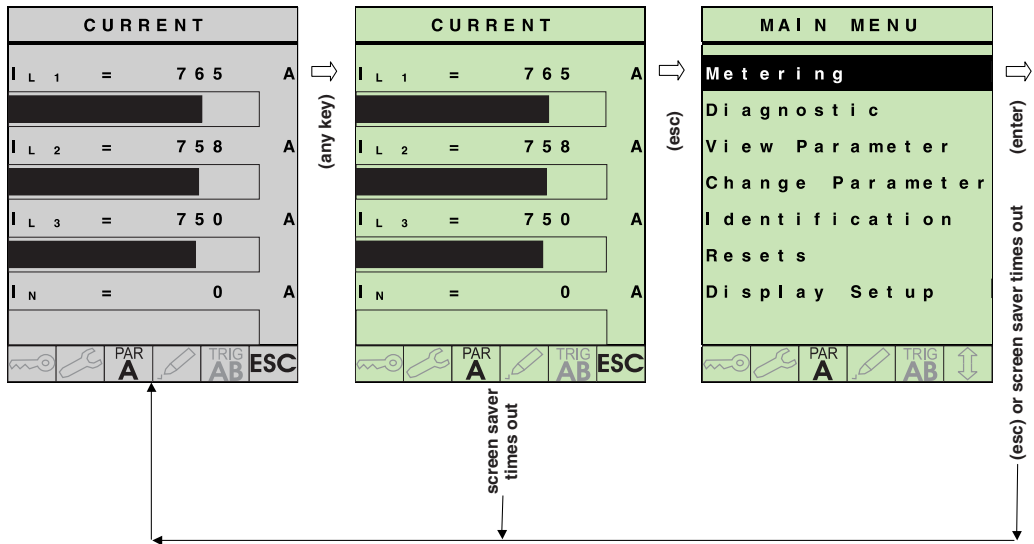


Navigating in the menu structure

Use the operating keys to navigate in the menu structure.


Button functions	
▲ ▼	Shift the marking
ENTER	Select the marked menu item
ESC	Switch back to the previous menu

Selection of a menu item

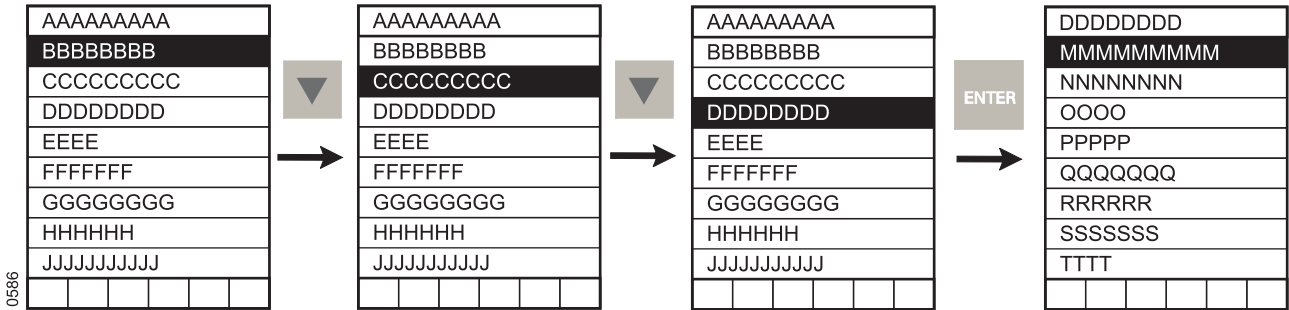


Displaying measured values


Example 1: Displaying the currents

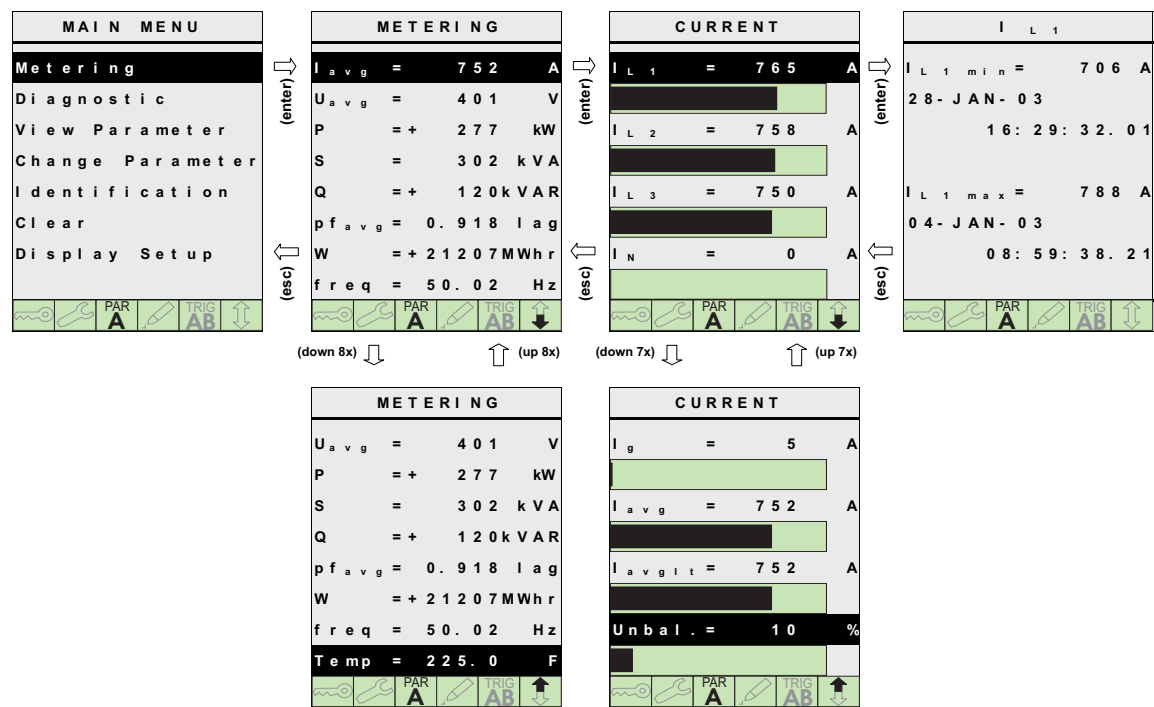

Example 2: Displaying the frequency

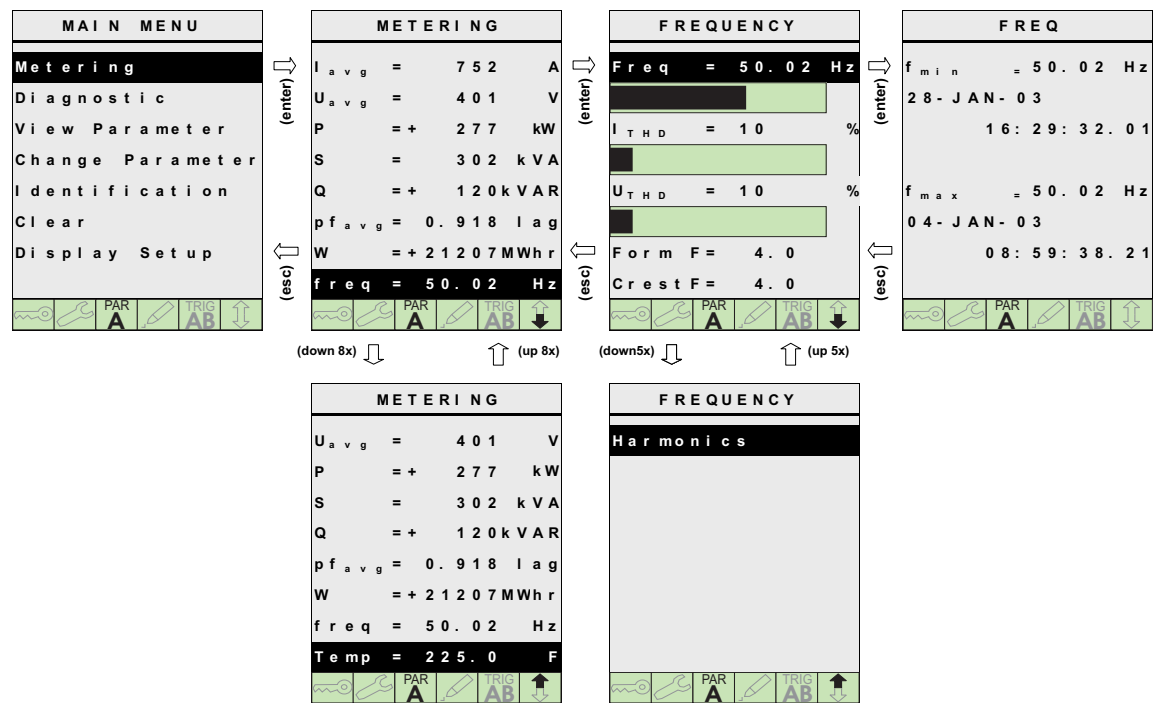


Example 3: Displaying harmonics

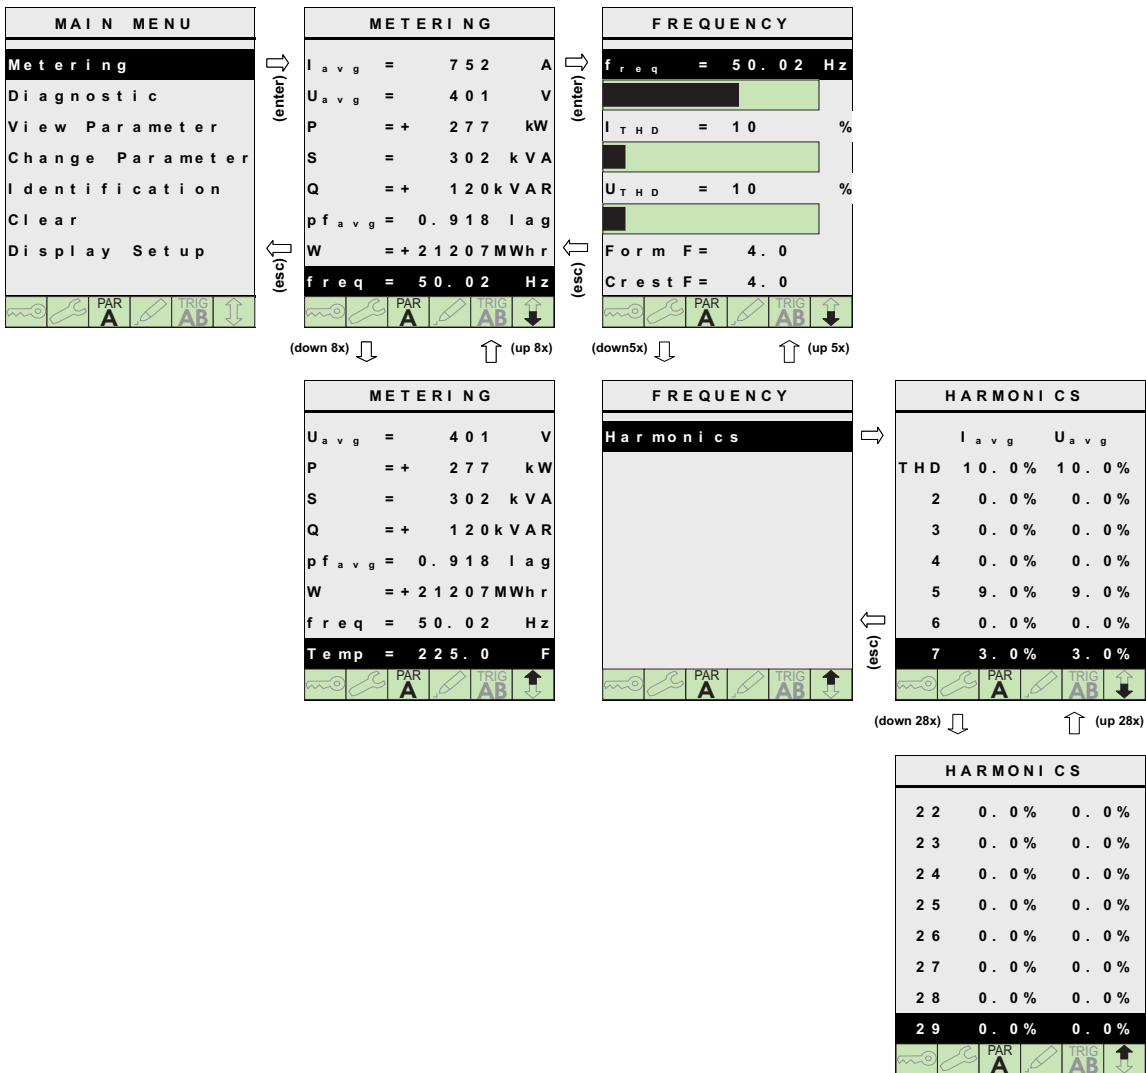


Displaying parameters

Example 4: Displaying parameters parameter settings

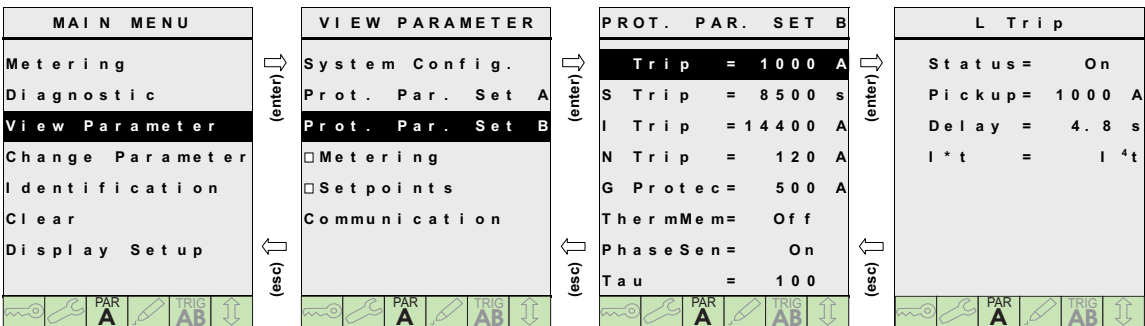


Example 5: Displaying active power

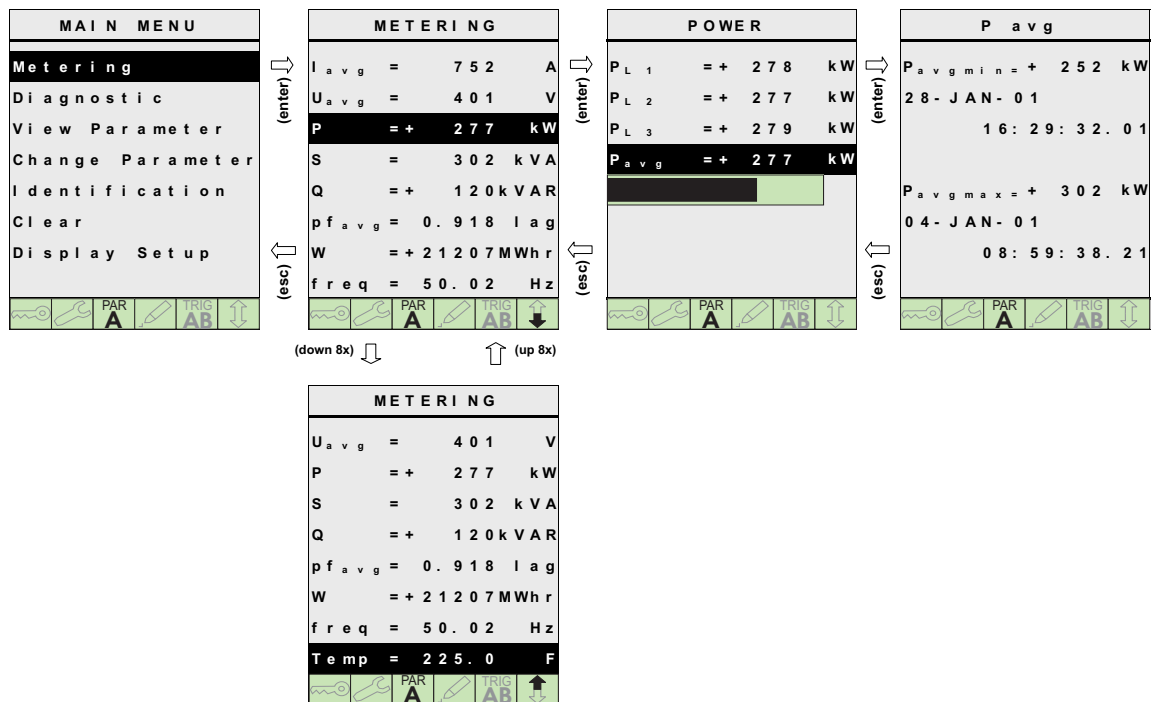


Calling up diagnostic information

Example 6: Querying maintenance information

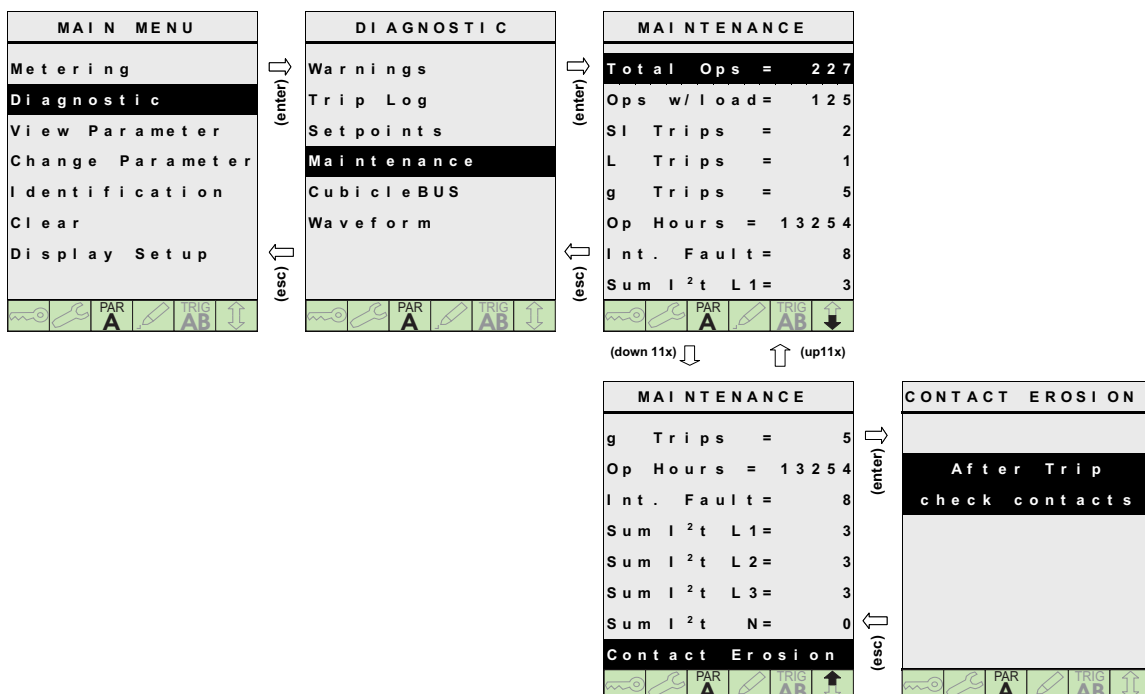


Example 7: Adjusting representation of characteristics



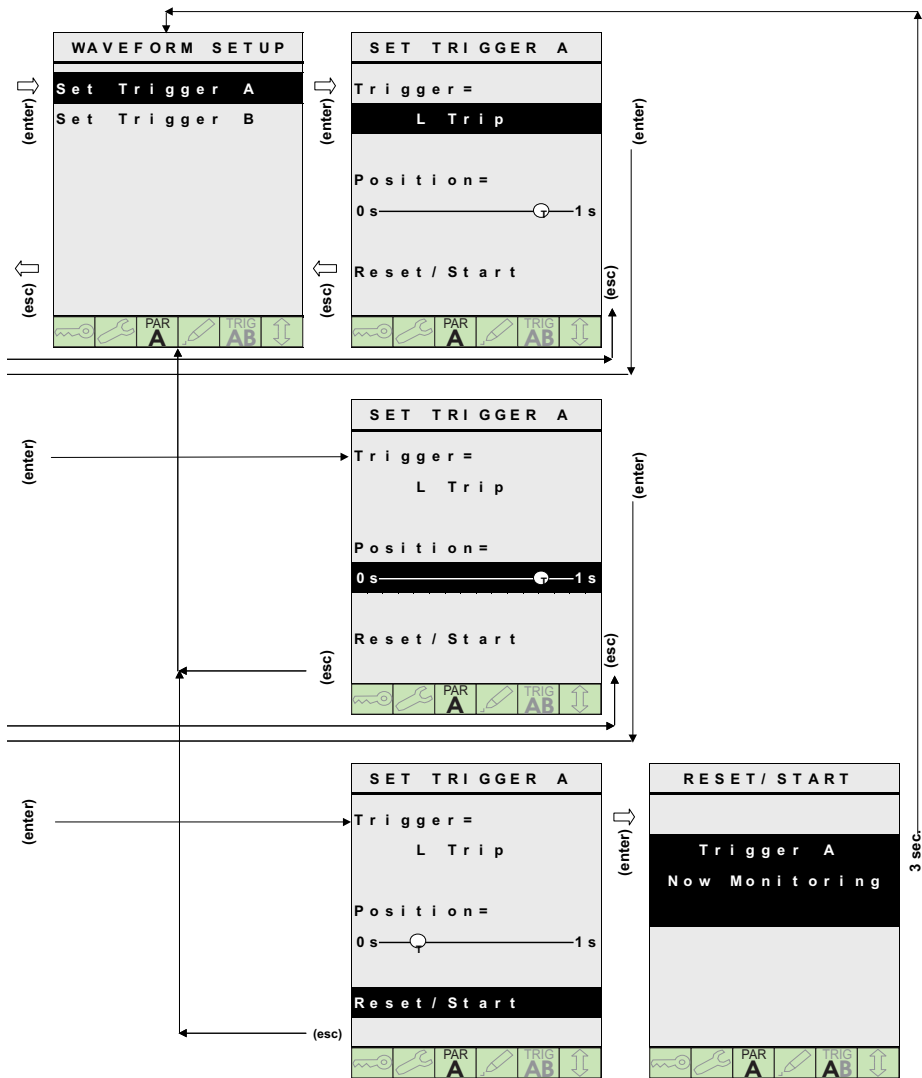







Example 8: Selecting event for displaying characteristics



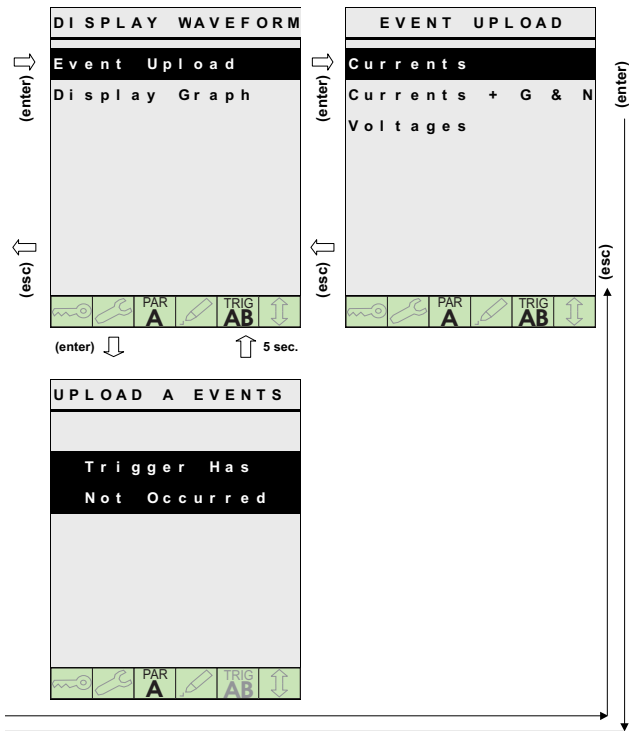

Example 9: Displaying characteristics

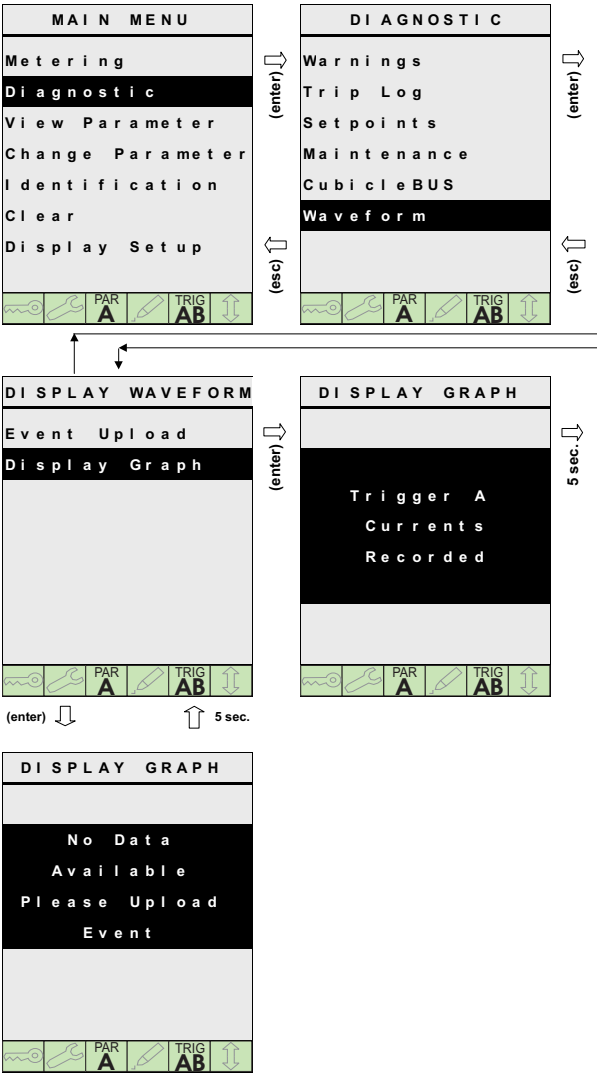


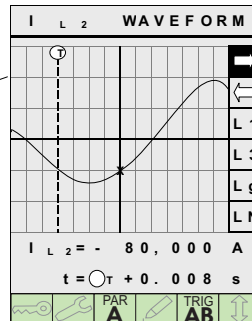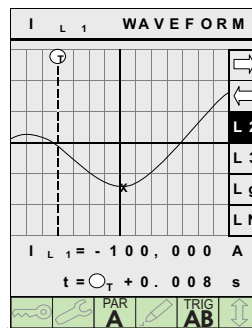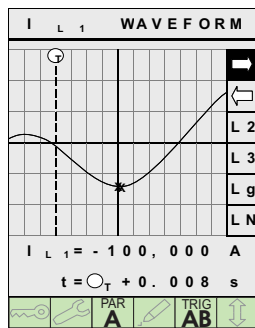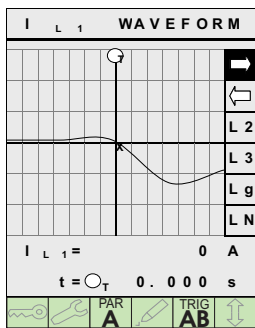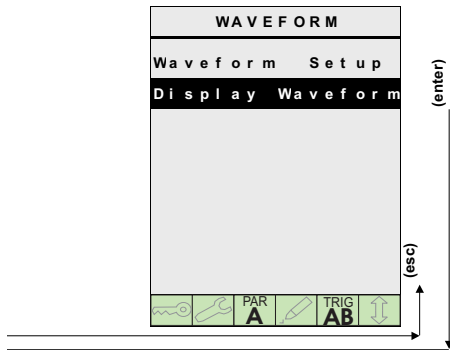

(esc) goes to "DISPLAY WAVEFORM" menu


Changing parameters



Example 10: Setting protection parameters

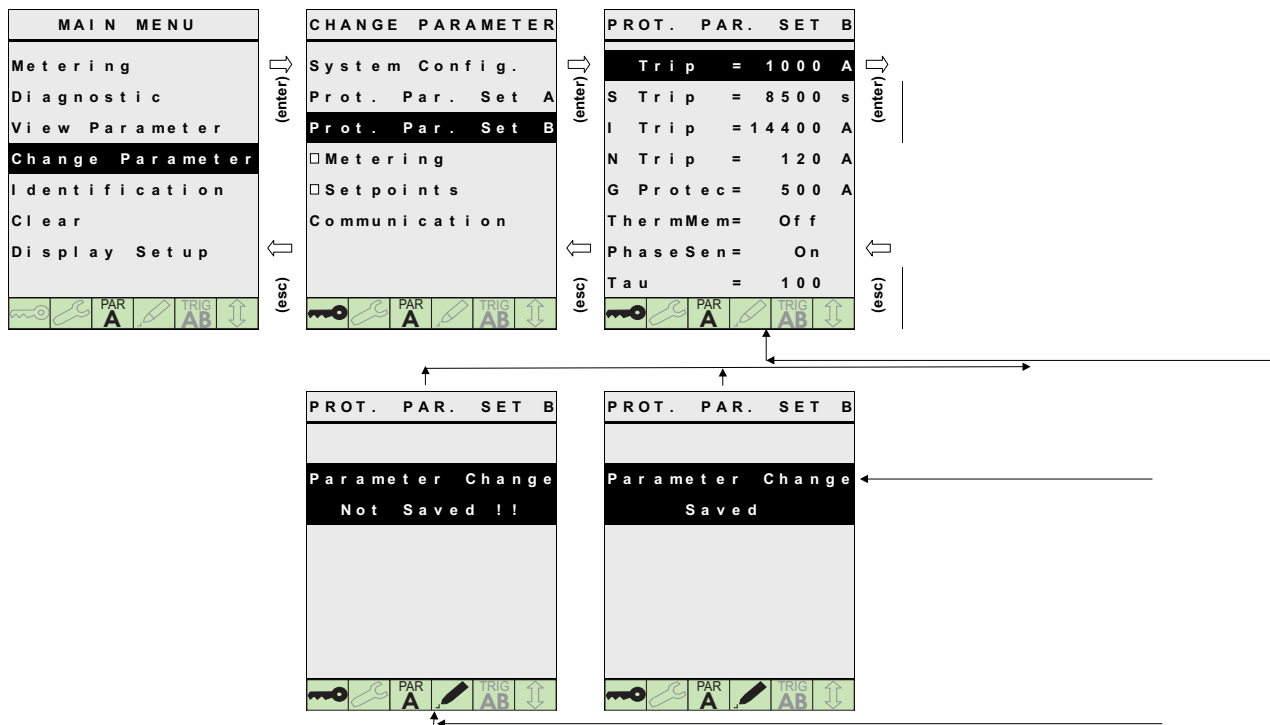

Settings the display


Example 11: Entering password

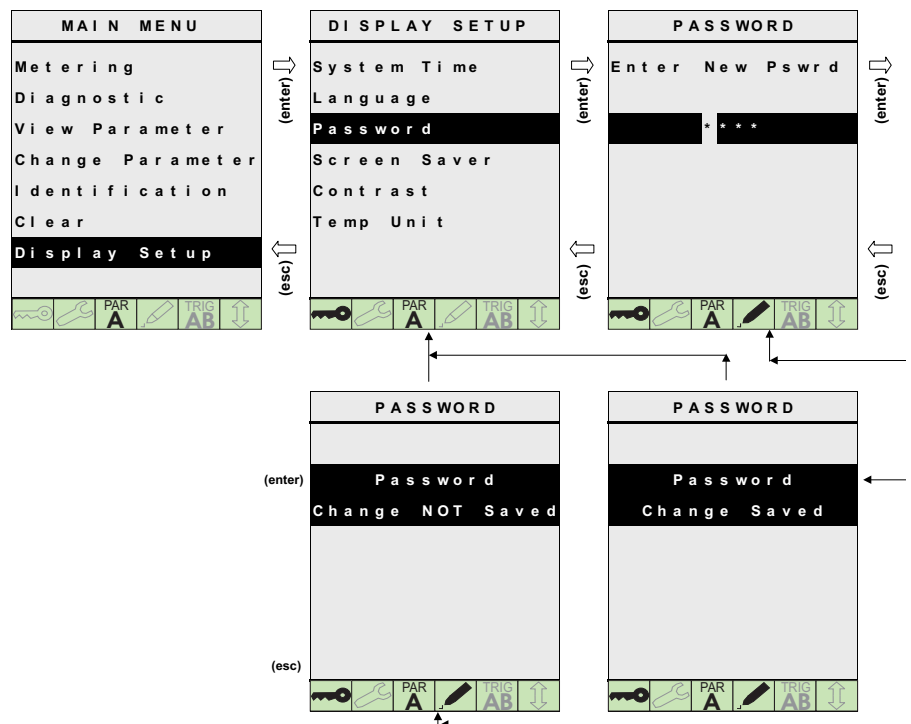

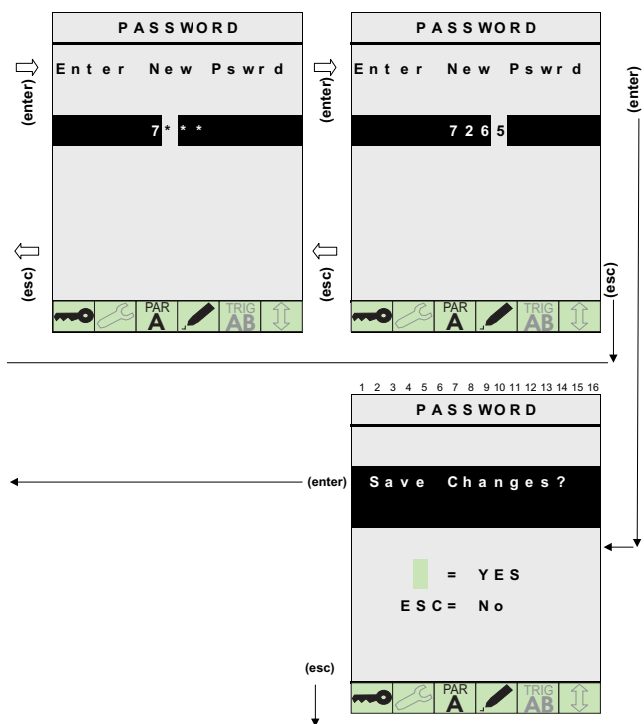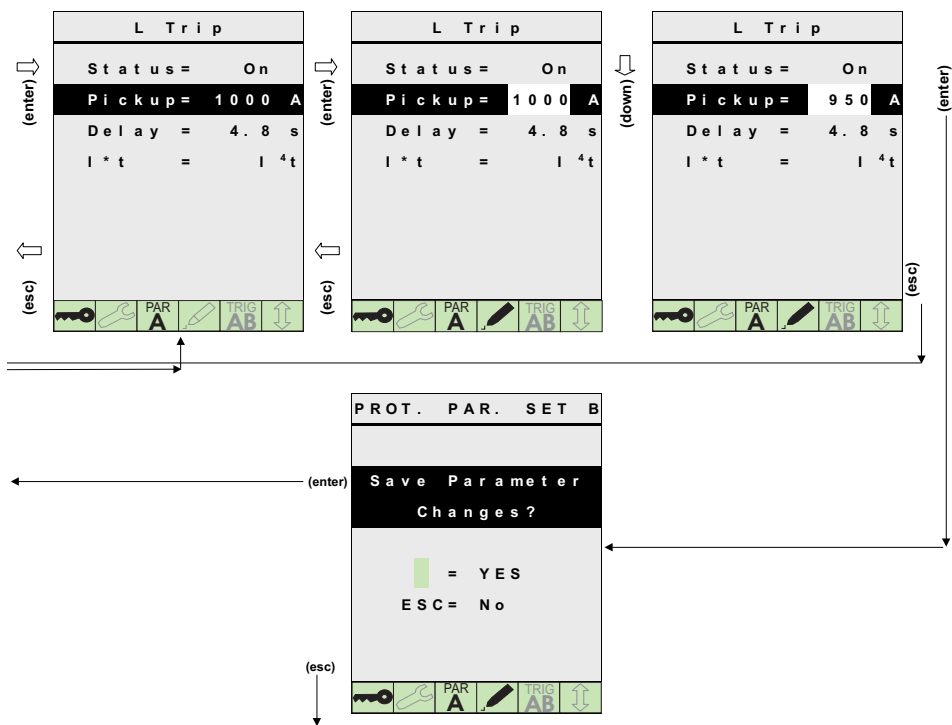

Identifications

Example 12: Identifications

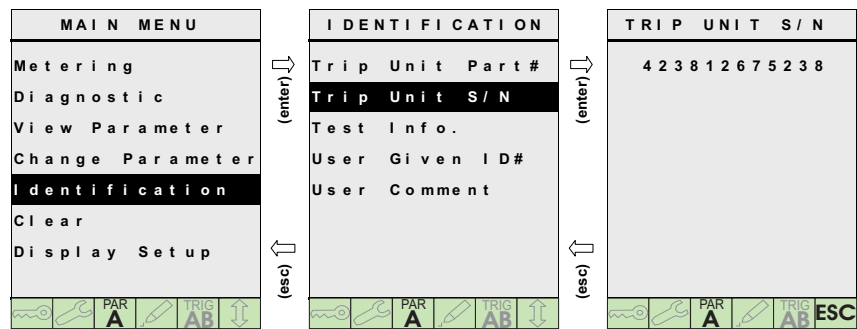

Resetting

Example 13: Resetting the measured minimum and maximum values

