



PT2
PT1
BV BOX
DJ
RS
MCPA
R1
NRV
SMGR
EP2
EP1
CR
RGCP
VEAD
HORN
A9 I/L
SA9 I/L
CP1
CP1
CP1
CDC
MR1
MR2
MR3
MR4
CDC
AIR INTECK
C2R BP
C3W DV
C2R SA9
M VEF
E /VEF
DUPLEX CHECK VALVE
SANDER
WIPPER
MR EQ
FP
D24B

MR CHARGING -- WAG5/WAG7 LOCO


SETTING VALUE


QPDJ— 4.5 >5.5 KG/CM^2
RGCP CLOSE IN CP CKT
8.5KG/CM2/ / 8 KG/CM^2
RGCP OPEN IN CP CKT
– 10 KG/CM2 / 9.5 KG/CM^2
MR SV – 10.5 KG/CM^2
CP SV – 11.5 KG/CM^2
MCPA SV – 8.5 KG/CM^2
D24B / C2N – 6KG/CM^2
DUPLEX CHECK VALVE -- 5KG/CM^2

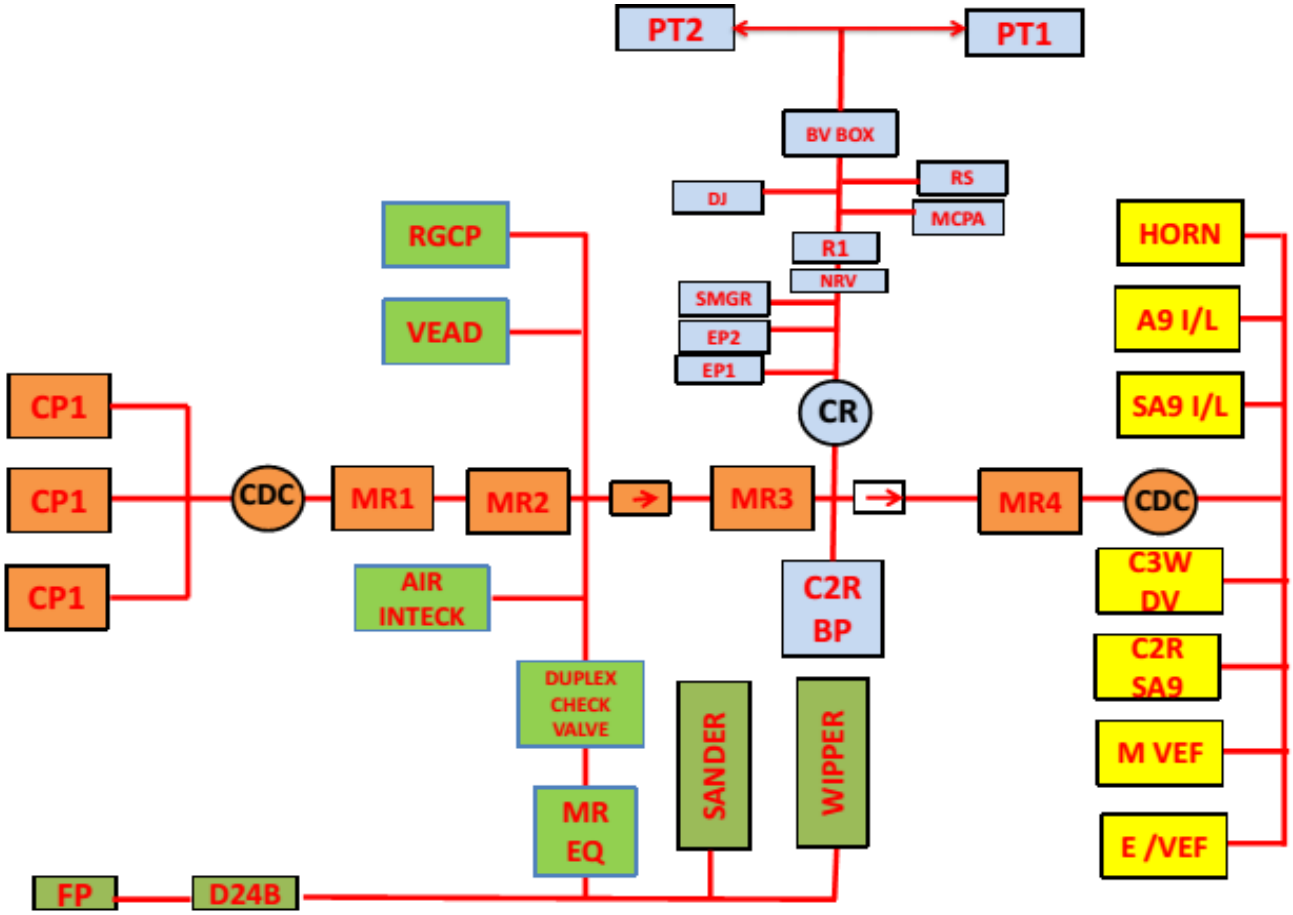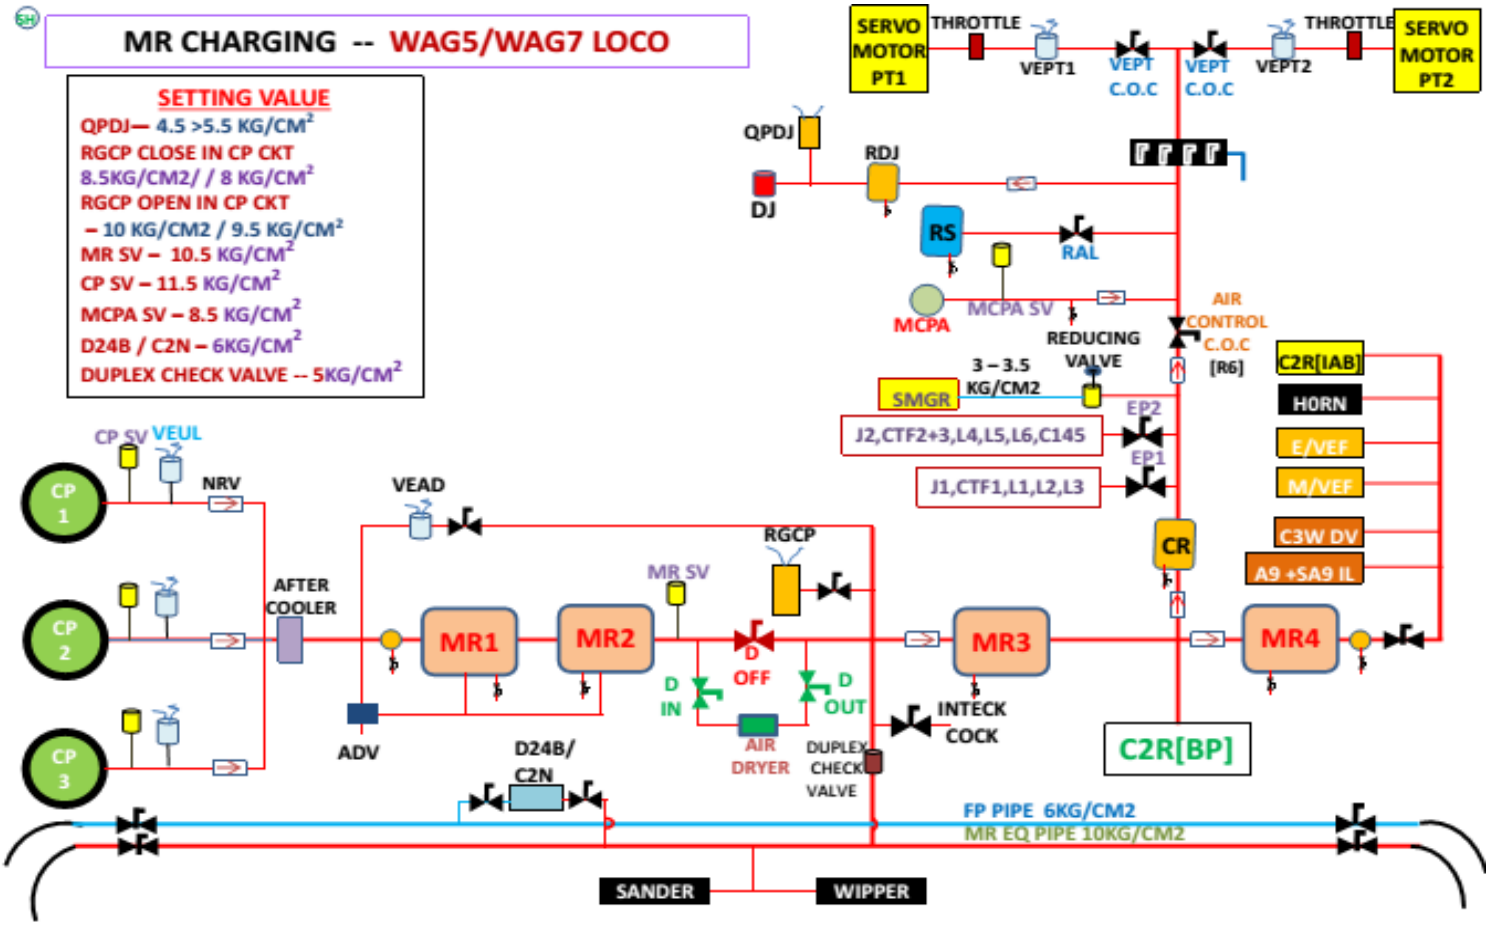


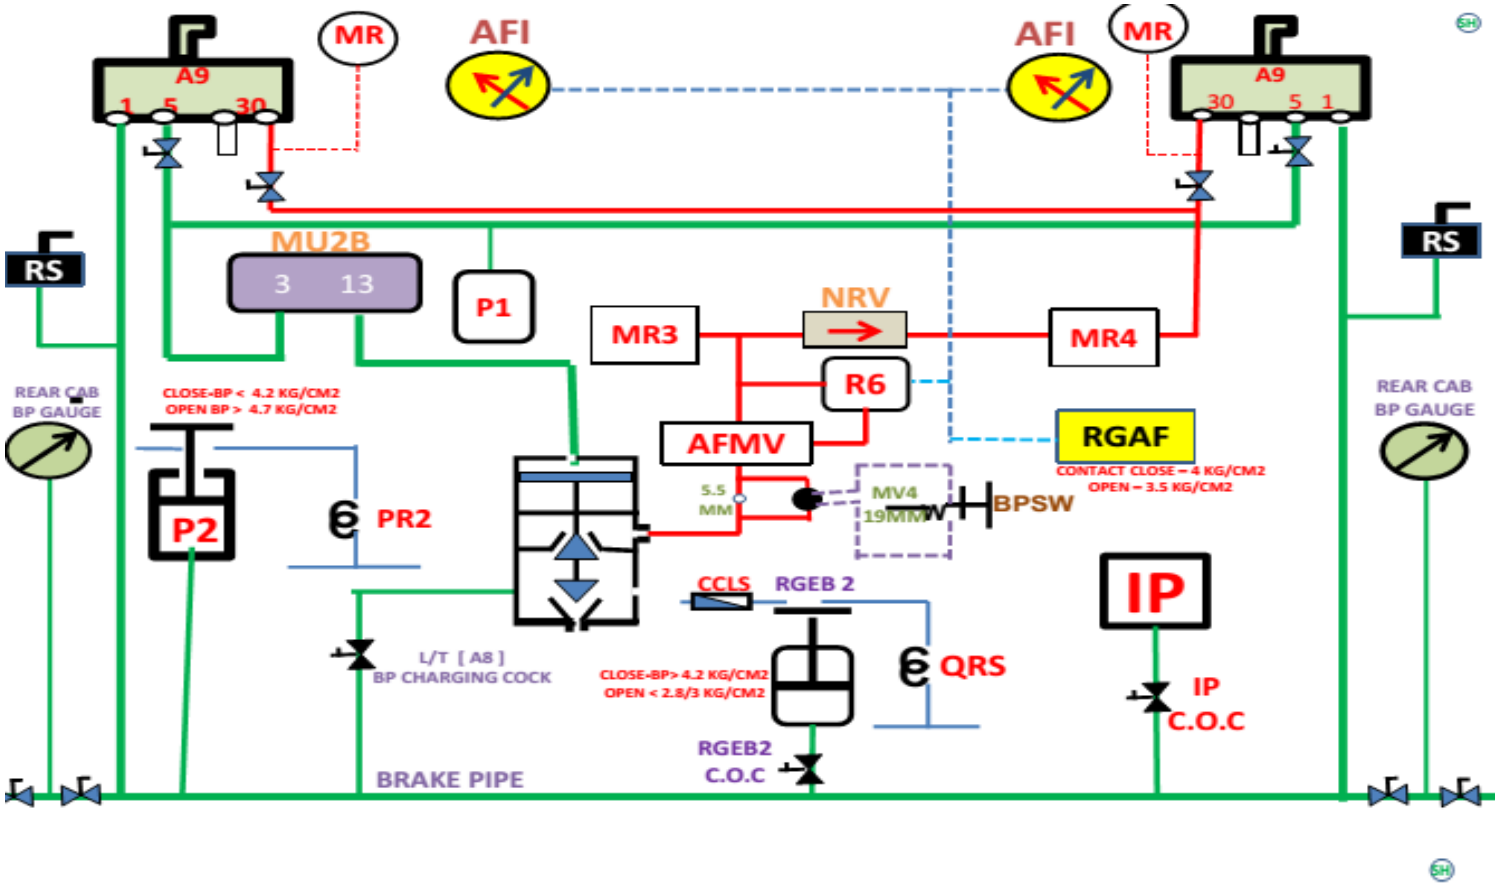


Block diagram of discharging of BP on loco

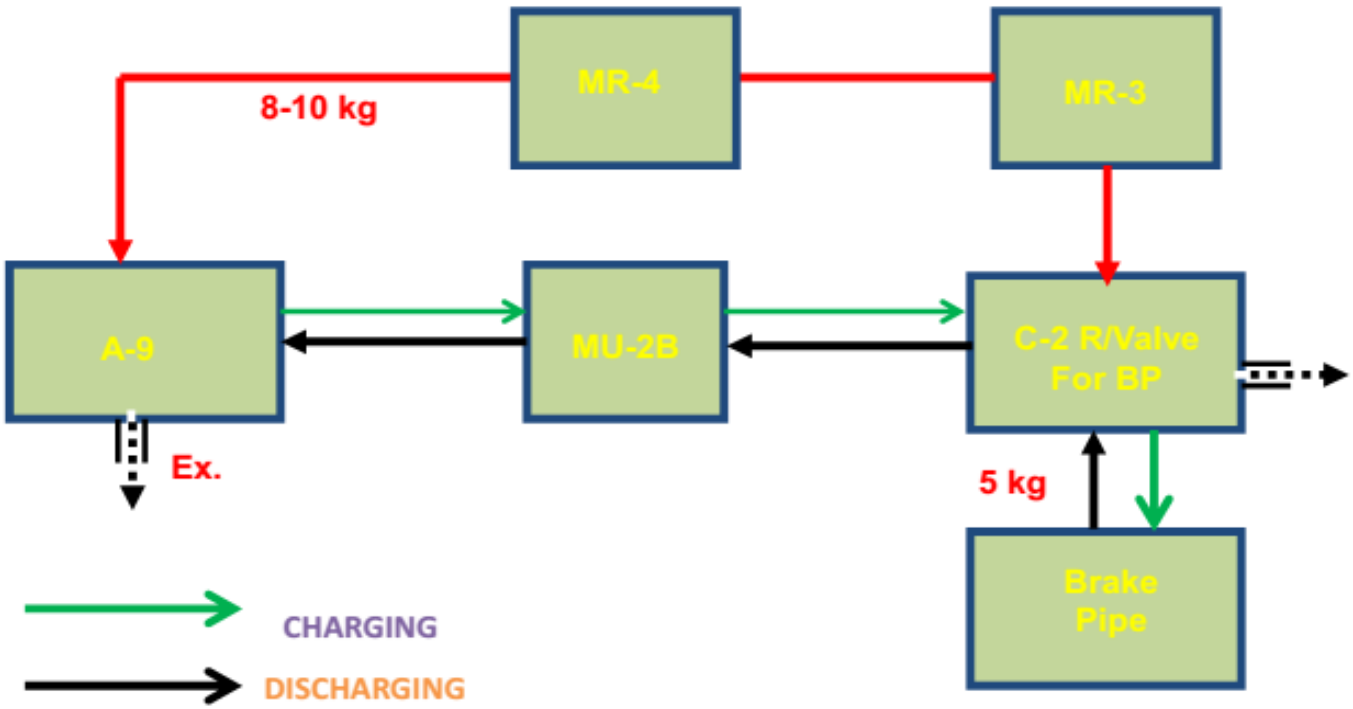


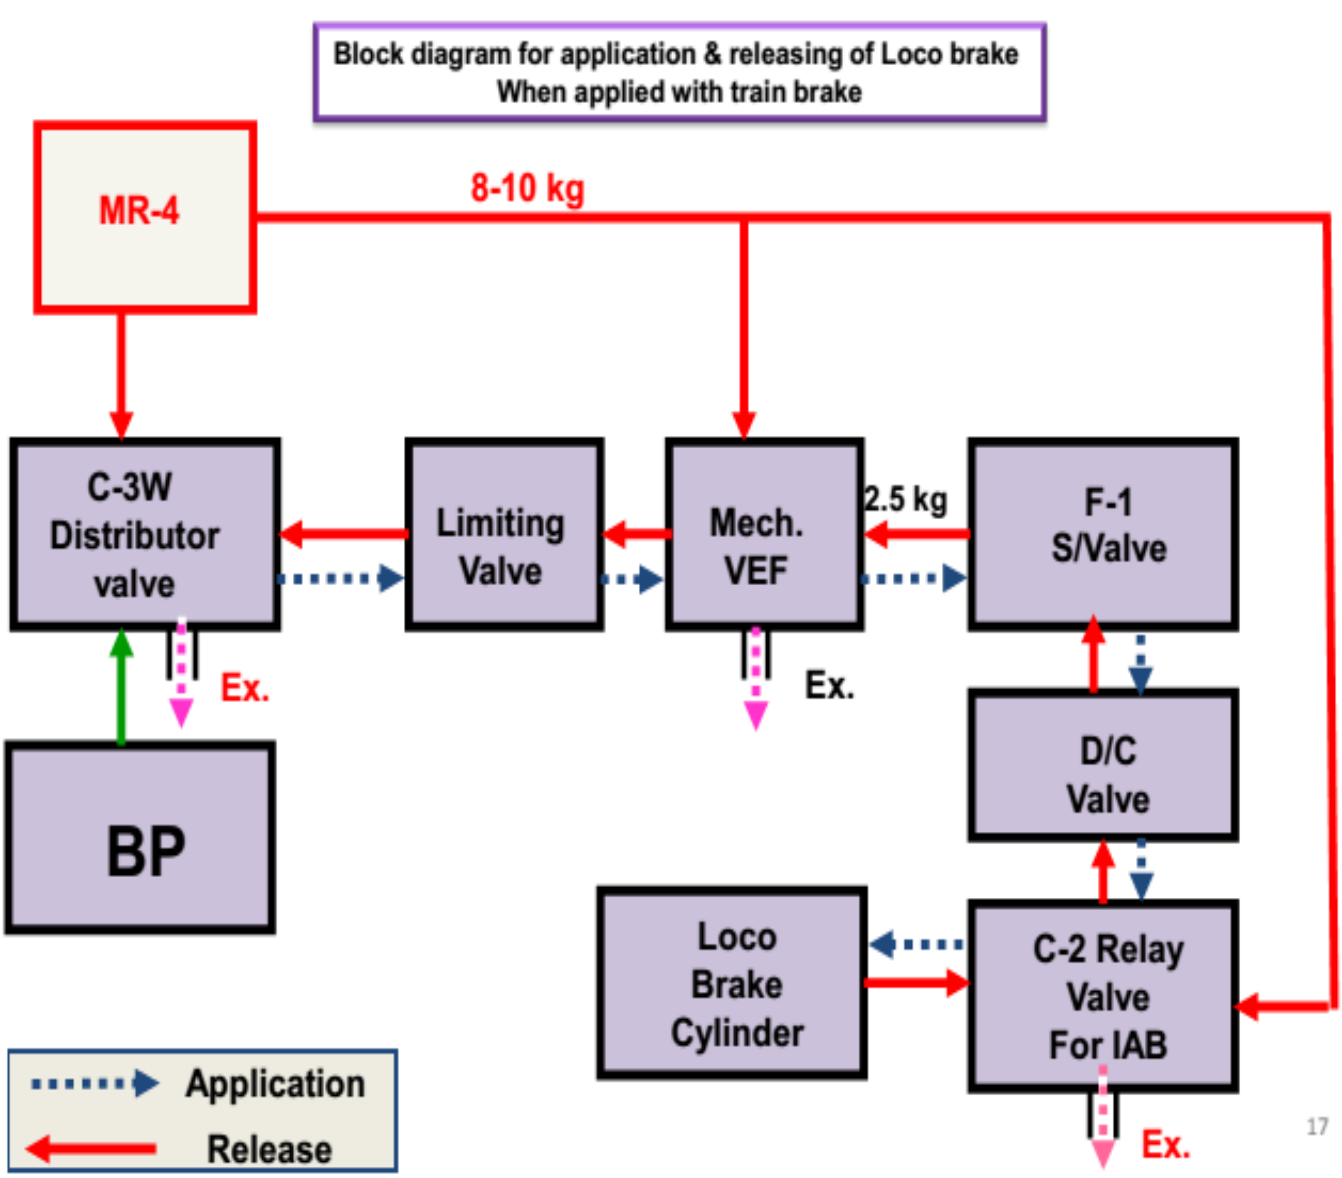
Block diagram for application & releasing of Loco brake
When applied with train brake
MR-4
8-10 kg
C-3W
Distributor
valve
Limiting
Valve
Mech.
VEF
2.5 kg
F-1
S/Valve
Ex.
Ex.
BP
D/C
Valve
Loco
Brake
Cylinder
C-2 Relay
Valve
For IAB
Ex.
Application
Release

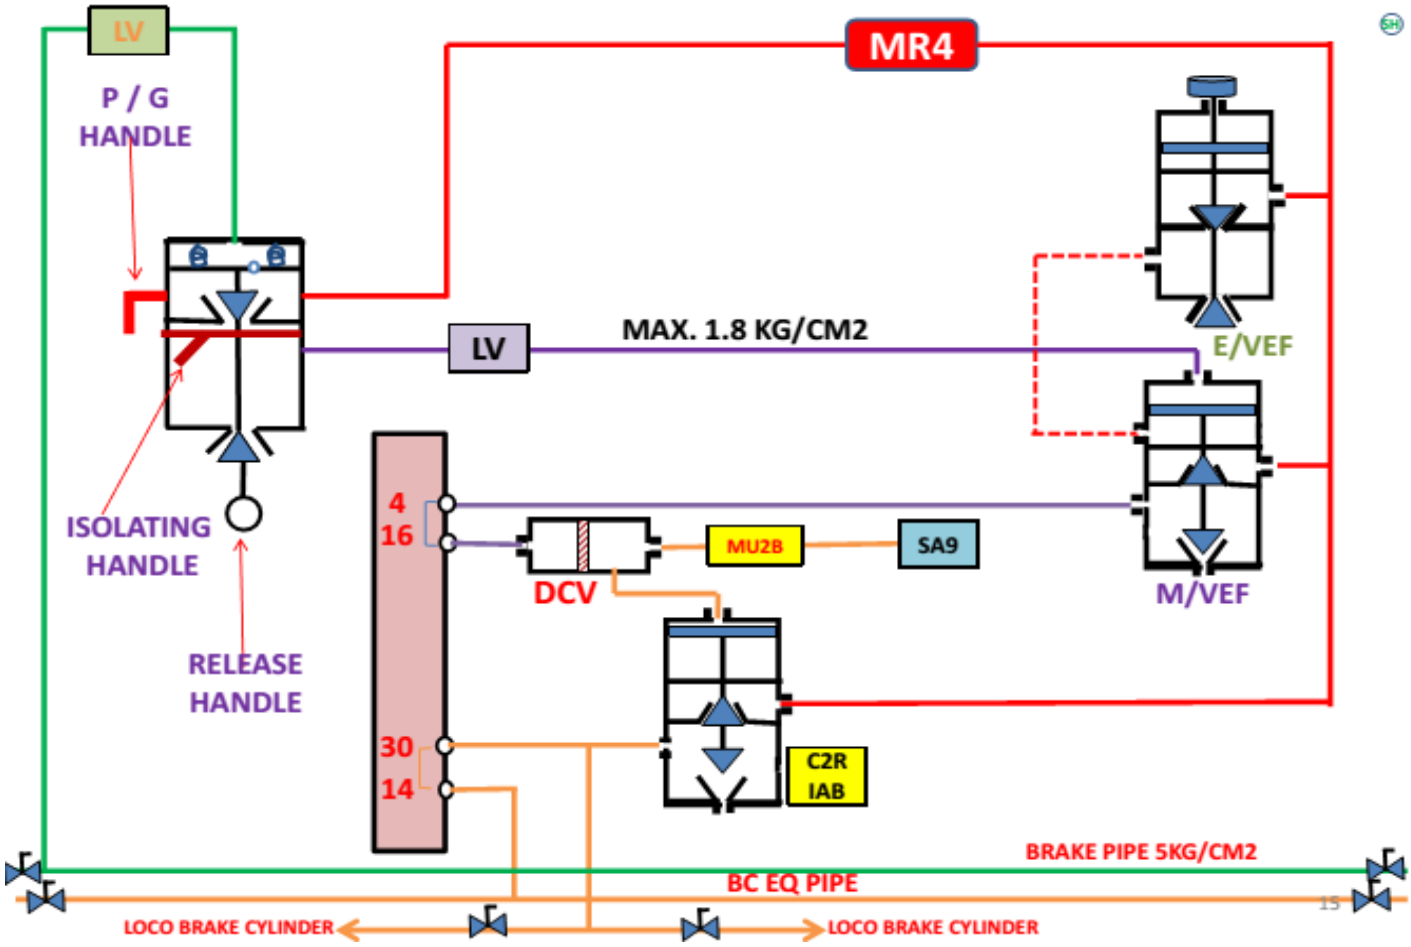
LV
P / G
HANDLE
MR4
LV
MAX. 1.8 KG/CM2
E/VEF
ISOLATING
HANDLE
RELEASE
HANDLE
4
16
DCV
MU2B
SA9
M/VEF
30
14
C2R
IAB
BRAKE PIPE 5KG/CM2
BC EQ PIPE
LOCO BRAKE CYLINDER
LOCO BRAKE CYLINDER

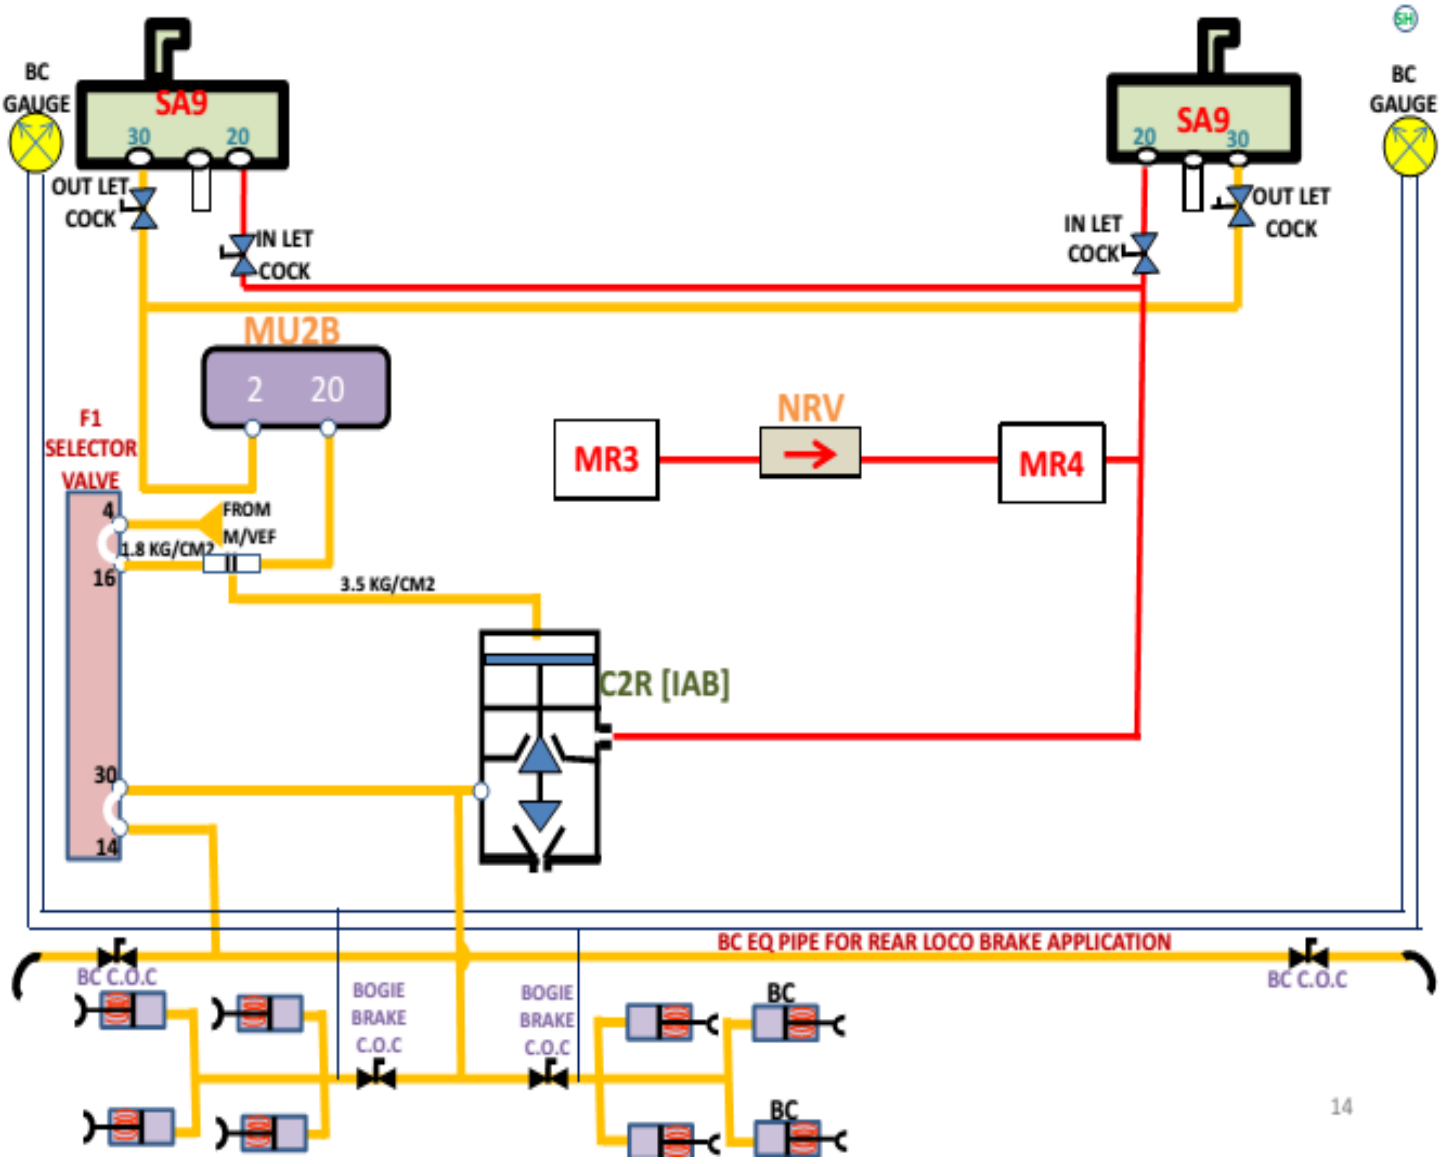
BC GAUGE
SA9
30
20
OUT LET COCK
IN LET COCK
SA9
20
30
IN LET COCK
OUT LET COCK
BC GAUGE
MU2B
2
20
F1 SELECTOR VALVE
4
16
30
14
FROM M/VEF
1.8 KG/CM2
3.5 KG/CM2
MR3
NRV
MR4
C2R [IAB]
BC EQ PIPE FOR REAR LOCO BRAKE APPLICATION
BC C.O.C
BOGIE BRAKE C.O.C
BOGIE BRAKE C.O.C
BC C.O.C
BC
BC

BLOCK DIAGRAM OF APPLICATION & RELEASING OF IAB

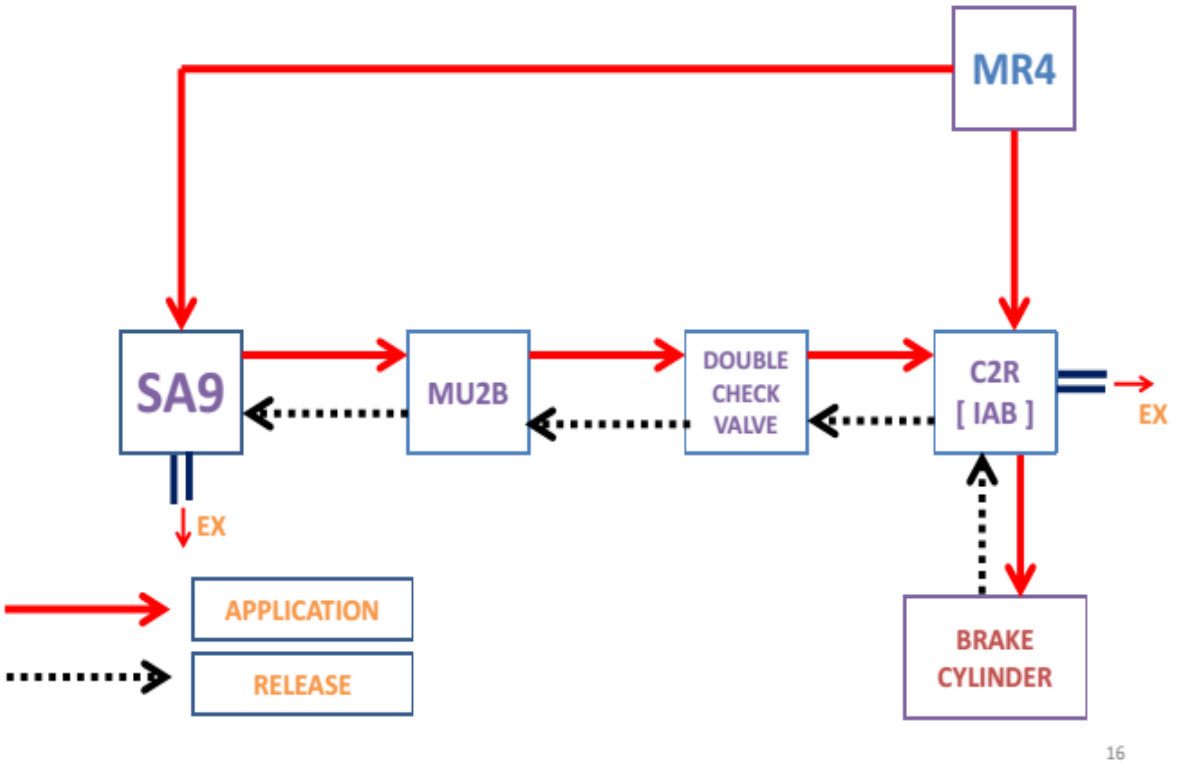

CONDITIONS OF BP CHARGING TRAIN.

1. MR PRESSURE 8-9.5 KG/CM2
2. A9 I/L& O/L COC OPEN IN DRIVING CAB AND CLOSE IN REAR CAB.
3. A9 HANDLE IN RELEASE POSITION IN BOTH CAB.
4. RS SHOULD BE CLOSED.
5. MU2B IN LEAD.
6. L&T(A8) COC SHOULD BE OPEN.
7. LOAD SIDE ADD .BP ANGLE COC OPEN.
8. MR4 ISOLATING OPEN.
9. NO LEAKAGE IN LOCO OR TRAIN.
10. BP ANGLE CLOSE IN FRONT OF LOCO AND REAR OF TRAIN.
    OTHER BP ANGLE COC IN BETWEEN TRAIN OPEN.