


Start-up

1. Use the USB flash drive included in the machine's accessory package and insert it into your computer to access its contents. Search for the file named "wifi.cfg" within the drive.


2. Open the "wifi.cfg" file using Notepad; this action resembles the example displayed on the right. Enter your WiFi network name (SSID) and password in the following format:
- ssid=your_WiFi_network_name
- password=your_WiFi_password
Example:
- ssid= WiFi NAME
- password= WiFi Password

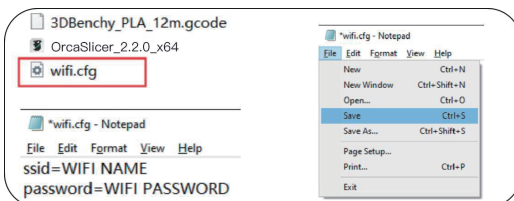




3. After entering your WiFi info, save the "wifi.cfg" file, ensuring it remains in the USB's root directory.

*Please make sure you type in the correct WiFi info.




4. Power on the machine, enter the system and then plug the USB port into one of the two USB ports on the right side of the machine. Once inserted, pause for 15-20 seconds before continuing.

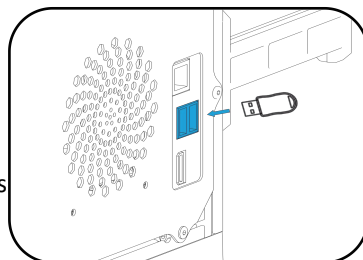


5. Press the knob to select 'Show IP' and wait for 5-10s. The IP address of your home network will appear. If 127.0.0.1 appears, we need to check if the Wi-Fi account and password in the USB drive's files are correct, or if the USB drive is properly inserted, and then restart the machine to perform the above actions again.

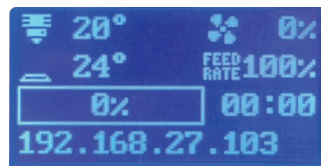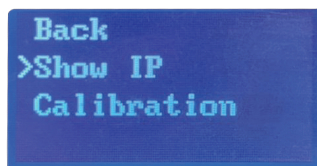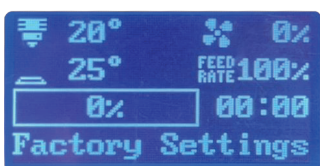


6. After the machine is connected to Wi-Fi, press the knob again to select the auto-calibration function, the machine will automatically calibrate and then restart.

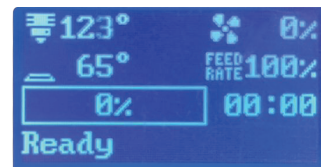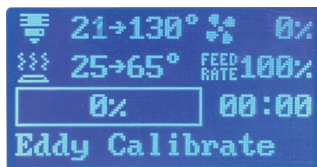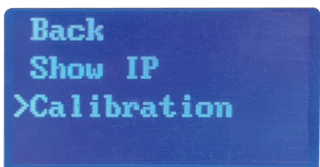

Fill Filament





Use the scissors in the accessory kit to cut off the end of the filament at a 45° angle.

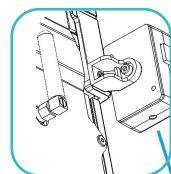



Steps to insert filament: Insert the filament into the hole of the filament runout sensor until it reaches the end. When the consumables cannot be inserted any further, complete the step of inserting filament.

Make sure the filament are loaded correctly & are engaged with the extruder gears.



Select the "Load Fil" function, the heating block will heat up, reach the specified temperature value, the E-axis extrusion motor starts to rotate, the E-axis motor rotation process can check whether the consumables have been loaded, confirm the extrusion normal, the loading of consumables step is completed.

After completing the consumables procedure, if no consumables appear in the nozzle, repeat the preceding operations.

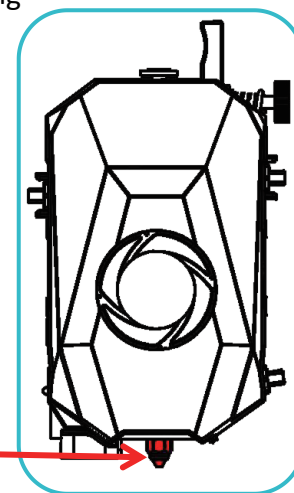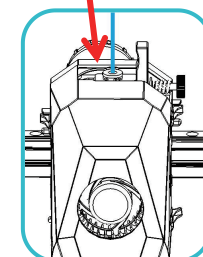

Please keep it clean

After the nozzle is loaded with the required filament, it is essential to check if there is any leftover filament on the nozzle. If there is leftover filament on the nozzle, the return to zero reset will be inaccurate, and the nozzle will scratch the PEI plate, which damages both the nozzle and the PEI plate, significantly reducing print quality and performance.

Enable camera

Attentions:

1. WIFI must use 2.4G band signal.
2. Pay attention to the strength of the WIFI signal, the router connected without obstacles in a. The straight line distance from the machine should not exceed 10m.
3. Make sure the wifi name and password are correct.
4. computer or cell phone must be used with the printer is the same network wifi
5. If the printer display does not show the IP address, or show the IP address "172.0.0.1", please recheck the wifi. Please recheck the name and password in the wifi.cfg file to make sure they are correct. And try "show IP" several times.
6. If you want to change the WiFi network, please re-enter the name and password of the WiFi network you want to connect to in the wifi.cfg file. If you want to change the WiFi network, please re-enter the name and password in the wifi.cfg file.




In the event of a missing configuration file, follow these quick steps to generate a new one:

1. Right-click on your desktop and select "New" > "Text Document" to create a new TXT file.
2. Rename this file to "wifi.cfg" with a lowercase "cfg" extension.
3. Confirm the file extension change by clicking "Yes" when prompted, effectively creating your new .cfg file.




Enable camera

After the machine successfully connects to the network, operate "Show ip" on the screen to obtain the machine's network IP. We need to enter the IP address in the web interface within the same LAN to log in to mainsail (accessible from both mobile devices and computers). Please follow the steps below to enable the camera.

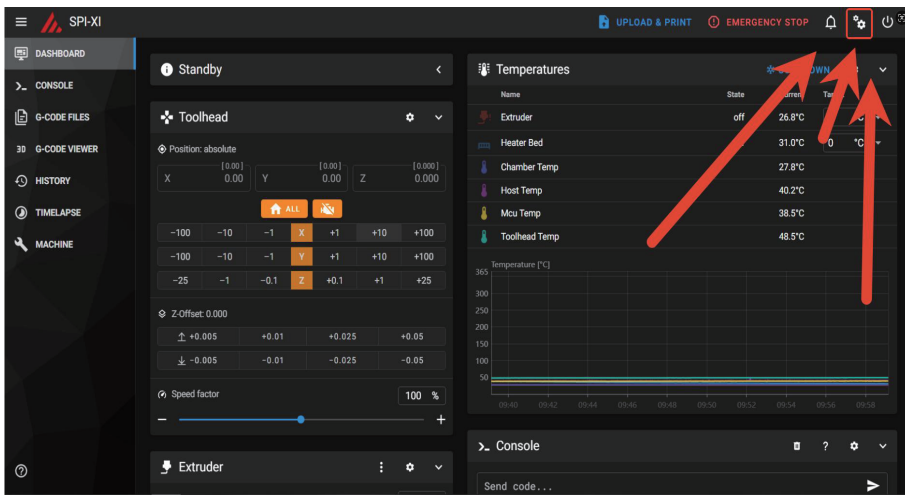

03

Enable camera

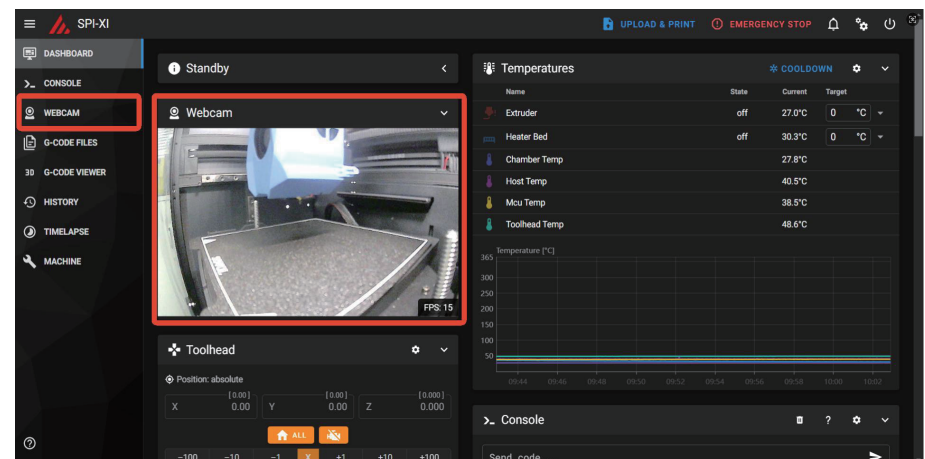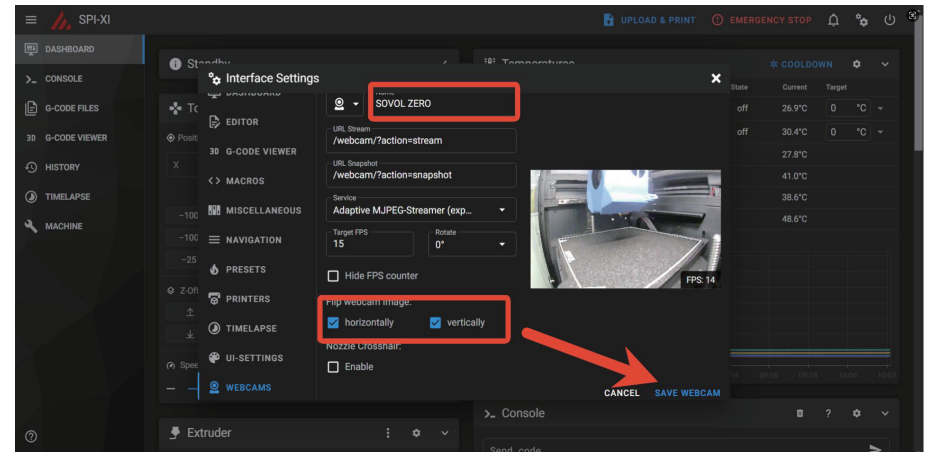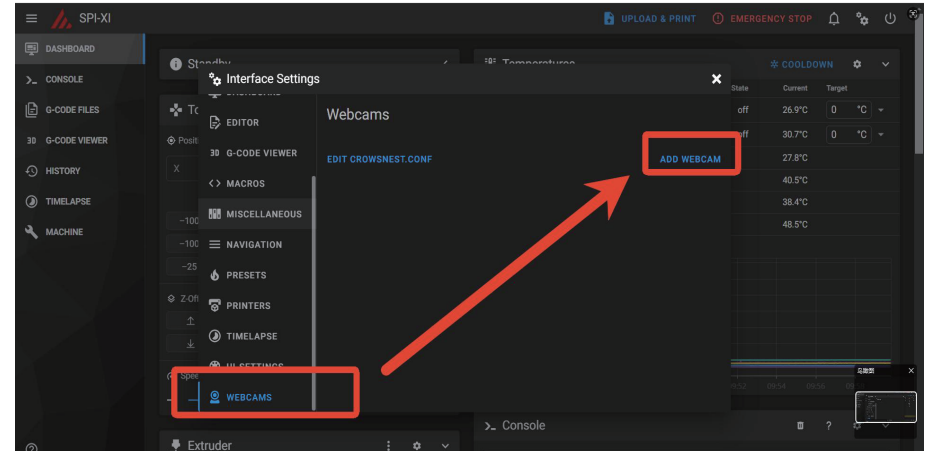

04