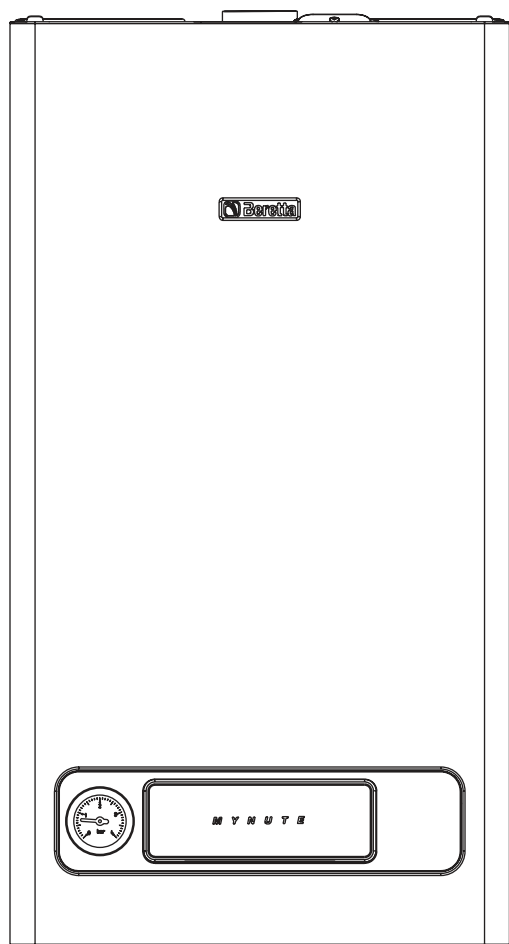


Mynute S 24 C.S.I.
Mynute S 28 C.S.I.
Mynute S 35 C.S.I.
Mynute S 24 C.A.I. E
Mynute S 28 C.A.I. E
Mynute S 28 R.S.I.
Mynute S 35 R.S.I.



EN INSTALLER AND USER MANUAL

F MANUEL D'INSTALLATION ET D'UTILISATION

ES INSTRUCCIONES DE INSTALACIÓN Y USO

PT INSTRUÇÕES PARA INSTALAÇÃO E USO

HU TELEPÍTÉSI ÉS HASZNÁLATI KÉZIKÖNYV

RO MANUAL DE INSTALARE ȘI UTILIZARE

DE INSTALLATIONS- UND BEDIENUNGSANLEITUNG

SL PRIROČNIK ZA MONTAŽO IN UPORABO

 **Beretta**

EN

Mynute S complies with the basic requirements of the following Directives:

- Gas Appliance Directive 2009/142/EEC;
 - Efficiency Directive 92/42/EEC;
 - Electromagnetic Compatibility Directive 2004/108/EEC;
 - Low Voltage Directive 2006/95/EEC
- therefore it bears the EC marking

EN

Installer manual-User manual.....	3
Technical data.....	13
Control panel.....	118
Appliance functional elements.....	120
Hydraulic circuit.....	124
Wiring diagrams.....	128
Circulator residual head.....	134

F

Mynute S est conforme aux prescriptions essentielles des Directives suivantes:

- Directive Gaz 2009/142/CEE;
 - Directive Rendements 92/42/CEE;
 - Directive Compatibilité électromagnétique 2004/108/CEE;
 - Directive Basse tension 2006/95/CEE,
- et peut donc être estampillée CE.

F

Manuel d'installation-Manuel de l'utilisateur.....	18
Données techniques.....	28
Panneau de commande.....	118
Éléments fonctionnels de la chaudière.....	120
Circuit hydraulique.....	124
Schémas électriques.....	128
Prévalence résiduelle du circulateur.....	134

ES

Mynute S es conforme a los requisitos esenciales de las siguientes Directivas:

- Directiva Gas 2009/142/CEE;
 - Directiva Rendimientos 92/42/CEE;
 - Directiva Compatibilidad Electromagnética 2004/108/CEE;
 - Directiva baja tensión 2006/95/CEE
- y por lo tanto es titular del marcado CE

ES

Manual para el instalador - Manual para el usuario.....	33
Datos técnicos.....	42
Panel de mandos.....	118
Elementos funcionales del aparato.....	120
Circuito hidráulico.....	124
Esquemas eléctricos.....	128
Altura de carga residual del circulador.....	134

PT

A **Mynute S** é conforme aos requisitos essenciais das seguintes Directivas:

- Directiva gás 2009/142/CEE;
 - Directiva Rendimentos 92/42/CEE;
 - Directiva Compatibilidade Electromagnética 2004/108/CEE;
 - Directiva baixa tensão 2006/95/CEE
- portanto, é titular de marcação CE

PT

Manual do instalador-Manual do utilizador.....	47
Dados técnicos.....	56
Painel de comando.....	118
Elementos funcionais do aparelho.....	120
Circuito hidráulico.....	124
Esquemas eléctricos.....	128
Prevalência residual do circulador.....	134

HU

Mynute S megfelel az alábbi irányelvek lényegi követelményeinek:

- Gáz irányelv 2009/142/EGK
 - Hatásfok irányelv 92/42/EGK;
 - Elektromágneses összeférhetőség irányelv 2004/108/EGK;
 - Kisfeszültség irányelv 2006/95/EGK
- így feljogosított a CE jelzésre

HU

Telepítési kézikönyv -felhasználói kézikönyv.....	61
Műszaki adatok.....	70
Vezérlő panel.....	118
A készülék funkcionális részei.....	120
Vízkeringetés.....	124
Elektromos rajzok.....	128
Keringetőszivattyú maradék emelő magassága.....	134

RO

Mynute S este conformă cu cerințele esențiale ale următoarelor Directive:

- Directiva gaze 2009/142/CEE;
 - Directiva randament 92/42/CEE;
 - Directiva de Compatibilitate Electromagnetică 2004/108/CEE;
 - Directiva joasă tensiune 2006/95/CEE
- și ca urmare beneficiază de marca CE

RO

Manual de instalare și utilizare.....	75
Date tehnice.....	86
F Panoul de comenzi.....	118
Elementele funcționale ale aparatului.....	120
Circuitul hidraulic.....	124
Schemele electrice.....	128
Prevalența reziduală a circulatorului.....	134

DE

Mynute S entspricht den grundlegenden Anforderungen der folgenden Richtlinien:

- Gas-Richtlinie 2009/142/EWG;
 - Wirkungsgrad-Richtlinie 92/42/EWG;
 - Elektromagnetischen Verträglichkeit 2004/108/EWG;
 - Niederspannungsrichtlinie 2006/95/EWG
- Deshalb trägt es die CE-Kennzeichnung.

DE

Installateurshandbuch - Anwenderhandbuch.....	90
Technische Daten.....	99
Bedienfeld.....	118
Kesselbestandteile.....	120
Wasserkreis.....	124
Schaltpläne.....	128
Restförderhöhe der Umwälzvorrichtung.....	134

SL

Mynute S je skladen z bistvenimi zahtevami naslednjih direktiv:

- Plinska direktiva 2009/142/EGS,
 - Direktiva o izkoristkih 92/42/EGS,
 - Direktiva o elektromagnetni združljivosti 2004/108/EGS;
 - Direktiva o nizki napetosti 2006/95/EGS
- zato ima pravico do oznake CE

SL

Priročnik za montažo - Priročnik za uporabo.....	104
Tehnični podatki.....	113
Krmilna plošča.....	118
Sestavni deli naprave.....	120
Hidravlični sistem.....	124
Električne sheme.....	128
Preostala črpalna višina črpalke.....	134



0694
0694BT1921

EN INSTALLER

1 - GENERAL SAFETY DEVICES

-  Our boilers are built in our plants and checked down to the smallest detail in order to protect users and fitters from injury. After working on the product, qualified personnel must check the electrical wiring, in particular the stripped part of conductors, which must not stick out from the terminal board, avoiding possible contact with live parts of such conductor.
-  This instruction manual, together with the user manual, are integral parts of the product: make sure that they remain with the appliance, even if it is transferred to another owner or user, or moved to another heating system. In case of loss or damage, please contact your local Technical Assistance Service for a new copy.
-  Boiler installation and any other assistance and maintenance operation must be carried out by qualified personnel according to current local and national regulations.
-  The installer must instruct the user about the operation of the appliance and about essential safety regulations.
-  This boiler must only be used for the application it was designed for. The manufacturer declines all contractual and non-contractual liability for injury to persons or animals or damage to property deriving from errors made during installation, adjustment and maintenance and from improper use.
-  After removing the packaging, make sure the content is in good conditions and complete. Otherwise, contact the dealer from who you purchased the appliance.
-  The safety valve outlet must be connected to a suitable collection and venting system. The manufacturer declines all liability for any damage caused due to any intervention carried out in the safety valve.
-  Dispose of all the packaging materials in the suitable containers at the corresponding collection centres.
-  Dispose of waste being careful not harm human health and without employing procedures or methods which may damage the environment.
-  C.A.I. models: the ventilation openings are vital for correct combustion.

During installation, inform the user that:

- in the event of water leaks, the water supply must be shut off and the Technical Assistance Service must be contacted immediately
- the operation pressure of the hydraulic system must be within 1 and 2 bar, and therefore, must not exceed 3 bar. If necessary, reset the pressure as indicated in the paragraph entitled "Filling the system"
- if the boiler has not been used for a long time, it is recommended that the Technical Assistance Service performs, at least, the following operations:
 - turn "off" the main switch of the appliance and the general switch of the system
 - close the gas and water taps on both the heating and domestic hot water circuits
 - drain the heating and domestic hot water circuits to prevent freezing
- boiler maintenance must be carried out at least once a year. This should be booked in advance with the Technical Assistance Service.

For safety, always remember that:

-  The boiler should not be used by children or unassisted disabled people.

In some parts of the manual, some symbols are used:

-  WARNING = for actions requiring special care and adequate preparation
-  FORBIDDEN = for actions THAT MUST NOT be performed

-  It is dangerous to activate electrical devices or appliances, such as switches, home appliances, etc., if you smell gas or fumes. In the event of gas leaks, ventilate the room opening doors and windows; close the gas general tap; contact the qualified personnel from the Technical Assistance Service immediately
-  Do not touch the boiler while barefoot or if parts of your body are wet or damp
-  Before cleaning operations, disconnect the boiler from the main power supply by turning "OFF" the two position system switch and the main control panel switch
-  Do not modify safety and adjustment devices without the manufacturer's permission and relative instructions
-  Do not pull, disconnect or twist the electric cables coming out of the boiler even when it is disconnected from the main power supply
-  Avoid covering or reducing the size of ventilation openings of the installation room
-  Do not leave inflammable containers and substances in the installation room
-  Keep packaging materials out of reach of children.
-  C.A.I. models: do not cover or reduce the size of the ventilation openings in the room where the boiler is installed. The ventilation openings are vital for correct combustion.

2 - BOILER DESCRIPTION

Mynute S C.A.I. E is a wall-mounted type B11BS boiler for heating and the production of domestic hot water. This type of appliance cannot be installed in bedrooms, bathrooms or showers, or in rooms with open flues without adequate ventilation.

The Mynute S C.A.I. E boiler is fitted with the following safety devices:

- Safety valve and water pressure switch intervening in cases of insufficient or excessive water pressure (max 3 bar-min 0.7 bar).
- Temperature limit thermostat intervening by putting the boiler into safety stop if the temperature in the system exceeds the limit according to current local and national regulations
- Fumes thermostat intervenes by blocking the boiler into a safety standstill status if there is a spillage of combustion products in the hood; it is located on the right hand tile of the vent-damper draught breaker device Intervention of safety devices indicates a potentially dangerous boiler malfunction; contact the technical assistance service immediately.

The flue gas thermostat not only intervenes for a fault in the combustion products outlet system, but also with various atmospheric conditions. One can therefore try to start up the boiler again after waiting a short while (see first ignition section).

-  Repeated intervention of the fumes thermostat signifies evacuation of combustion products into the boiler room with possibly incomplete combustion and formation of carbon monoxide, **a highly dangerous condition. Call the technical assistance service immediately.**

-  The boiler must never be put into service, not even temporarily, if the safety devices are not working or have been mis-handled.

-  Safety devices must be replaced by the technical assistance service, using original manufacturer parts only; see the spare parts catalogue supplied with the boiler.

After repairs carry out a trial ignition.

Mynute S C.S.I. is a C-type wall-mounted boiler for heating and production of domestic hot water: according to the flue gas outlet device, the boiler is classified in categories B22P, B52P, C12, C22, C32, C42, C52, C62, C82, C92, C12x, C32x, C42x, C52x, C62x,

C82x, C92x.

In configuration B22P and B52P (when installed indoors), the appliance cannot be installed in bedrooms, bathrooms, showers or where there are open fireplaces without a proper air flow. The room where the boiler is installed must have proper ventilation.

In configuration C, the appliance can be installed in any type of room and there are no limitations due to ventilation conditions or room volume.

Mynute S R.S.I. is a Type C wall-mounted boiler that can function in various mode:

MODE A

Heating only without any external storage tank connected.

The boiler does not supply domestic hot water.

MODE B

Heating only with a thermostatically controlled external storage tank connected: in this condition, with every heat request from the storage tank thermostat, the boiler supplies hot water for the preparation of the domestic hot water.

MODE C

Heating only, with the connection of an external storage tank (accessory kit available upon request) (managed by a temperature probe) for preparing domestic hot water. When connecting the storage tank not supplied by us, make sure that the NTC probe has the following characteristics: 10 kOhm at 25°C, B 3435 ±1%

3 - INSTALLATION REGULATIONS

3.1 Installation regulations

Installation must be carried out by qualified personnel.

Always comply with national and local regulations.

POSITION

Mynute S C.A.I. E: class B appliances cannot be installed in bedrooms, bathrooms or showers, or in rooms with open flues without adequate ventilation. It is imperative that the room in which a gas appliance is installed has a sufficient inflow of air to supply the quantity of air necessary for normal combustion and ensure proper ventilation of the room itself. Natural direct ventilation with external air must be provided for via

- permanent openings in the walls of the room in which the appliance is installed leading outdoors. These openings must be made in such a way as to ensure that the orifices on both the internal and external side of the wall cannot be obstructed or be reduced in effective diameter, the orifices themselves must be protected with metal grilles or similar means and must be situated near floor level and in a location that does not interfere with the function of the flue exhaust system (where this position is not possible, the diameter of the ventilation openings must be increased by at least 50%),
- while single or multiple branched the ventilation ducts may be used.

The ventilation air must be sourced directly from outside the building, away from sources of pollution. Indirect ventilation, with air drawn from rooms next to the room in which the appliance is installed, is permitted, provided that the limitations indicated by current local regulations. The room in which the boiler is to be installed must be adequately ventilated in compliance with applicable legislation. Detailed prescriptions for the installation of the flue, gas piping and ventilation ducting are given in current local regulations. The aforementioned regulations also prohibit the installation of electric fans and extractors in the room in which the appliance is installed. The boiler must have a fixed outward leading exhaust duct with a diameter not smaller than the exhaust hood collar. Before fitting the exhaust outlet connector to the flue, check that the flue has adequate draught and has no restrictions and that the exhausts of no other appliances are connected to the same flue pipe. When connecting to a pre-existing flue pipe, check that the latter is perfectly clean, as deposits may detach from the wall of the pipe during use and obstruct the passage of the flue gases, creating a situation of severe danger for the user.

Mynute S can be installed indoors (fig. 2).

The boiler has protection that guarantees correct operation with a temperature range from 0°C to 60°C.

To take advantage of protections, the appliance must be able to

start up, since any lockout condition (for example, absence of gas or electrical supply, or safety intervention) deactivates the protections.

MINIMUM DISTANCES

In order to have access to the boiler to perform regular maintenance operations, respect the minimum spaces foreseen for installation (fig. 3).

For correct appliance positioning:

- do not place it on a cooker or other cooking device
- do not leave inflammable products in the room where the boiler is installed
- heat sensitive walls (for example, wooden walls) must be protected with proper insulation.

IMPORTANT

Before installation, wash every system piping carefully in order to remove any residues that may impair the operation of the appliance.

Under the safety valve, install a water collecting funnel with the corresponding discharge in the event of leaks due to the overpressure of the heating system. The domestic hot water circuit does not need a safety valve, but make sure that the pressure of waterworks does not exceed 6 bar. In case of doubts, install a pressure reducer.

Prior to ignition, make sure that the boiler is designed to operate with the gas available; this can be checked by the message on the packaging and the adhesive label indicating the gas type.

It is very important to highlight that in some cases the smoke pipes are under pressure and therefore, the connections of several elements must be airtight.

ANTI-FREEZE SYSTEM

The boiler is fitted as standard with an automatic anti-freeze system that activates when the temperature of the water in the primary circuit falls below 6 °C. This system is always active, guaranteeing boiler protection to an outdoor temperature level of -3 °C. To take advantage of this protection (based on burner operation), the boiler must be able to switch itself on; any lockout condition (e.g. lack of gas/electricity supply, or safety device intervention) therefore deactivates the protection. The anti-freeze protection is also active when the boiler is on standby. In normal operation conditions, the boiler can protect itself against freezing. If the machine is left unpowered for long periods in areas where temperatures may fall below 0 °C, and you do not want to drain the heating system, you are advised to add a specific, good quality anti-freeze liquid to the primary circuit. Carefully follow the manufacturer's instructions with regards not only the percentage of anti-freeze liquid to be used for the minimum temperature at which you want to keep the machine circuit, but also the duration and disposal of the liquid itself.

For the domestic hot water part, we recommend you drain the circuit. The boiler component materials are resistant to ethylene glycol based anti-freeze liquids.

3.2 Securing the boiler to the wall and hydraulic connections

To fasten the boiler to the wall, use the cardboard template (fig. 4-5) in the packaging. The position and size of the hydraulic connections are indicated below:

A	CH return	3/4"
B	CH delivery	3/4"
C	gas connection	3/4"
D	DHW output	1/2" (for C.A.I./C.S.I.) - 3/4" (for R.S.I.)
E	DHW input	1/2" (for C.A.I./C.S.I.) - 3/4" (for R.S.I.)

In case of replacement of Beretta boilers from previous type, there is an adaptation kit of hydraulic connections available.

3.3 Electric connection

The boilers leave the factory completely wired with the power cable already connected and they only need the connection of the room thermostat (AT) to be carried out in the specific terminals.

To access the terminal board:

- turn off the system general switch
- undo the fixing screws (A) of the shell (fig. 6)
- move forward and then upwards the shell base to unhook it from the chassis

- turn the instrument panel upside down
- remove the terminal board cover (fig. 8)
- insert the cable of the possible T.A. (fig. 9)

The room thermostat must be connected as indicated on the wiring diagram.

⚠ Room thermostat input in safety low voltage (24 Vdc).

The connection to the mains supply must be carried out through a separation device with an omnipolar opening of at least 3.5mm (EN 60335-1, category III).

The appliance operates with an alternating current of 230 Volt/50 Hz and an electrical power of 125W for 24 C.S.I. - 127W for 28 C.S.I. - 28 R.S.I. - 80W for 24-28 C.A.I. E - 172W for 35 C.S.I. and 35 R.S.I. (and complies with the standard EN 60335-1).

⚠ It is compulsory to carry out connection with an efficient earth circuit, according to national and local legislation.

⚠ It is advisable to comply with neutral phase connection (L-N).

⚠ The earth wire must be a couple of centimetres longer than the others.

⚠ Do not use gas and/or water pipes to earth electrical appliance.

The manufacturer declines liability for any damage if the appliance was not connected to an earth circuit.

Use the power cable supplied to connect the boiler to the mains power supply.

If the power cable is replaced, use a cable type HAR H05V2V2-F, 3 x 0.75 mm², with max. outside diameter 7 mm.

3.4 Gas connection

Before connecting the appliance to the gas network, check that:

- national and local regulations are complied
- the gas type is the one suitable for the appliance
- the piping is clean.

The gas pipe must be installed outdoor. If the pipe goes through the wall, it must go through the central opening, in the lower part of the template. It is advisable to install a filter of suitable dimensions on the gas line if the distribution network had solid particles.

Once the appliance has been installed check that connections are sealed according to current installation regulations.

3.5 Fumes exhaustion and air suction (Mynute S C.S.I. - Mynute S R.S.I.)

For fumes exhaustion, refer to the current local and national regulations. Always comply with local standards of the Fire Department, the Gas Company and with possible municipal dispositions.

The release of combustion products is assured by a centrifugal fan placed inside the combustion chamber and its correct operation is constantly checked by a pressure switch. The boiler is supplied without the flue gas outlet/air suction kit, since it is possible to use the accessories for appliance with a forced draught sealed chamber that better adapts to the installation characteristics.

It is essential for flue gas release and the restoration of boiler combustion air to use certified pipes and that connection is carried out correctly as indicated by the instructions supplied with the flue gas accessories. With only one smoke pipe you can connect more pieces of appliance provided that every piece of appliance is sealed chamber type.

“FORCED OPEN” INSTALLATION (TYPE B22P/B52P)

Fumes outlet duct Ø 80 mm (fig. 10a)

The fumes outlet duct can be aimed in the most suitable direction for installation needs. To install follow the instructions supplied with the kit.

⚠ In this configuration, the boiler is connected to the Ø 80 mm fumes outlet duct by means of a Ø 60-80 mm adaptor.

In this case, the combustion supporting air is taken from the room in which the boiler is installed, which must be a suitable and ventilated technical room.

⚠ Non-insulated fumes outlet ducts are potential sources of danger.

When necessary, the flue gas flange (F) must be removed using a screwdriver as a lever.

The boiler automatically adapts ventilation according to the type of installation and the length of the duct.

24 C.S.I.			
Pipe length ø 80 [m]	Flue gas flange (F)	Load losses for each bend (m)	
		45°	90°
up to 3	Ø 42	1,2	1,7
from 3 to 8	Ø 44 (**)		
from 8 to 14	Ø 46		
from 14 to 20	not installed		
28 C.S.I. - 28 R.S.I.			
Pipe length ø 80 [m]	Flue gas flange (F)	Load losses for each bend (m)	
		45°	90°
up to 1	Ø 41	1,2	1,7
from 1 to 4	Ø 43 (**)		
from 4 to 8	Ø 45		
from 8 to 20	not installed		
35 C.S.I. - 35 R.S.I.			
Pipe length ø 80 [m]	Flue gas flange (F)	Load losses for each bend (m)	
		45°	90°
up to 5	Ø 49 (**)	1,2	1,7
from 5 to 12	not installed		

(**) fitted in boiler

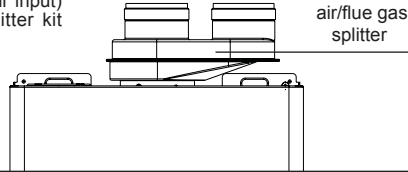
CONCENTRIC OUTLETS (ø 60-100)

The boiler has been designed to be connected to concentric outlet/suction pipes and with the opening for air suction (E) closed (fig. 10b). The concentric outlets can be placed in the most suitable direction according to room requirements, complying with the maximum lengths indicated in the table. For installation, follow the instructions supplied with the kit. According to the length of the pipes used, it is necessary to insert a flange, selecting one from those contained in the boiler (see the following table). When necessary, the flue gas flange (F) must be removed using a screwdriver as a lever. The table indicates the permitted linear lengths. According to the length of the pipes used, it is necessary to insert a flange, selecting one from those contained in the boiler (see the following table).

24 C.S.I.			
Pipe length ø 60-100 [m]	Flue gas flange (F)	Load losses for each bend (m)	
		45°	90°
up to 0,85	Ø 42	1	1,5
from 0,85 to 2	Ø 44 (**)		
from 2 to 3	Ø 46		
from 3 to 4,25	not installed		
28 C.S.I. - 28 R.S.I.			
Pipe length ø 60-100 [m]	Flue gas flange (F)	Load losses for each bend (m)	
		45°	90°
up to 0,85	Ø 41	1	1,5
from 0,85 to 1,7	Ø 43 (**)		
from 1,7 to 2,7	Ø 45		
from 2,7 to 3,4	not installed		
35 C.S.I. - 35 R.S.I.			
Pipe length ø 60-100 [m]	Flue gas flange (F)	Load losses for each bend (m)	
		45°	90°
up to 0,85	Ø 49 (**)	1	1,5
from 0,85 to 2,3	not installed		


(**) fitted in boiler

To direct the outlets in the most suitable installation way (right air input) there is an air/flue gas splitter kit available.



reduced concentric bend kit

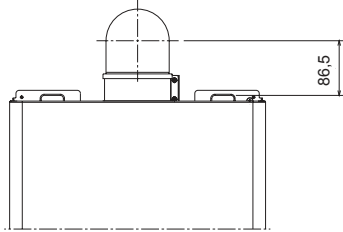⚠ If it is necessary to install Mynute S on existing systems (replacement of Ciao N/Mynute range), there is a "reduced concentric bend" kit that allows boiler positioning while keeping the same flue gas hole.



Pipe length with reduced bend [m]	Flue gas flange (F)		Load losses for each bend (m)	
	Mynute S 20 C.S.I.	Mynute S 24 C.S.I.	45°	90°
up to 1.85	Ø 41	Ø 44	1	1.5
from 1.85 to 4.25	Ø 43	no flange		

TWIN OUTLETS (Ø 80) (fig. 11)

Twin outlets can be placed in the most suitable direction according to the room requirements.

⚠ The air inlet adaptor must be correctly oriented, it is therefore necessary to fix it using the appropriate screws, so that the locating tab does not interfere with the casing.

When necessary, the flue gas flange (F) must be removed using a screwdriver as a lever. The table indicates the permitted linear lengths. According to the length of the pipes used, it is necessary to insert a flange, selecting one from those contained in the boiler (see the following table).

24 C.S.I.				
Pipe length Ø 80 [m]	Flue gas flange (F)	Load losses for each bend (m)		
		45°	90°	
up to 3,5+3,5	Ø 42	1,2	1,7	
from 3,5+3,5 to 9,5+9,5	Ø 44 (**)			
from 9,5+9,5 to 14+14	Ø 46			
from 14+14 to 20+20	not installed			
28 C.S.I. - 28 R.S.I.				
Pipe length Ø 80 [m]	Flue gas flange (F)	Load losses for each bend (m)		
		45°	90°	
up to 1+1	Ø 41	1,2	1,7	
from 1+1 to 5+5	Ø 43 (**)			
from 5+5 to 8+8	Ø 45			
from 8+8 to 14,5+14,5	not installed			
35 C.S.I. - 35 R.S.I.				
Pipe length Ø 80 [m]	Flue gas flange (F)	Load losses for each bend (m)		
		45°	90°	
up to 4+4	Ø 49 (**)	1,2	1,7	
from 4+4 to 8+8	not installed			

(**) fitted in boiler

B22P/B52P Suction indoors and discharge outdoors

C12-C12x Discharge via concentric wall outlet. The pipes may leave the boiler independently, but the outlets must be concentric or sufficiently close together to be subjected to similar wind conditions (within 50 cm)

C22 Discharge via concentric outlet in common smoke pipe (suction and discharge in the same pipe)

C32-C32x Discharge via concentric roof outlet. Outlets as for C12

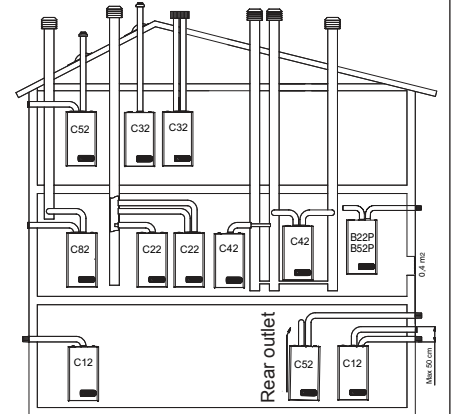
C42-C42x Discharge and suction in common separate smoke pipes, but subjected to similar wind conditions

C52-C52x Separate discharge and suction lines on wall or roof and in areas with different pressures. The discharge and suction lines must never be positioned on opposite walls

C62-C62x Discharge and suction lines using pipes marketed and certified separately (1856/1)

C82-C82x Discharge via single or common smoke pipe and wall suction line

C92-C92x Discharge on roof (similar to C32) and air suction from a single existing smoke pipe



3.5 Fumes exhaustion and air suction (Mynute S C.A.I. E)

Observe applicable legislation regarding flue gas exhaustion.

The exhaust system must be made using rigid ducting, the joints between elements must be hermetically sealed and all components must be resistant to heat, condensation and mechanical stress and vibration.

Non insulated outlet pipes are potential sources of danger.

The apertures for the combustion air must be realised in compliance with applicable legislation. If condensation forms, the exhaust duct must be insulated.

Figure 12 shows a top-down view of the boiler with the dimensions for the flue gas exhaust outlet.

Flue gas safety system

The boiler features a system monitoring that flue gases are correctly exhausted which arrests the boiler in the event of a fault: flue gas thermostat, fig. 11b. To restore normal operation, turn the function selector to (3 fig. 1a), wait a few seconds, then turn the function selector into the desired position.

If the fault persists, call a qualified technical from the Technical Support Service. The flue gas exhaustion monitoring system must never be bypassed or rendered inoperable. Use only original replacement parts when replacing the whole system or faulty system components.

3.6 Filling the heating system (fig. 13)

Once the hydraulic connections have been carried out, fill the heating system. This operation must be carried out with cold system following this instructions:

- turn by two or three turns the automatic relief valve cap (I)
- make sure the cold water inlet tap is open
- turn on the filling tap (L fig. 13 for C.A.I. - C.S.I. - external for R.S.I.) until the pressure indicated by the water pressure gauge is between 1 and 1.5 bar.

Once filling is complete, close the filling tap.

The boiler has an efficient air separator so no manual intervention is needed. The burner switches on only if the air relief phase is finished.

3.7 Emptying the heating system

To empty the system, proceed as follow:

- switch off the boiler
- loose the boiler outlet tap (M)
- empty the lowest points of the system.

3.8 Emptying the domestic hot water (only for C.A.I. - C.S.I. model)

When there is risk of frost, the domestic hot water system must be emptied in the following way:

- close the main tap of the water mains
- open all the hot and cold water taps
- empty the lowest points.

WARNING

When carrying out the discharge of the safety valve (N), it must be connected to a suitable collection system. The manufacturer is not responsible for possible damages due to safety valve operation.

4 - IGNITION AND OPERATION

4.1 Preliminary checks

First ignition is carried out by competent personnel from an authorised Technical Assistance Service Beretta.

Before starting up the boiler, check:

- that the supply networks data (electric, water, gas) corresponds to the label data
- that piping leaving the boiler is covered by thermal insulation sheath
- that flue gas extraction and air suction pipes work correctly
- that conditions for regular maintenance are guaranteed if the boiler is placed inside or between furniture
- the seal of the fuel adduction system
- that fuel capacity corresponds to values requested by the boiler
- that the fuel supply system has the correct capacity for the necessary capacity to the boiler and that it has all the safety and control devices prescribed by current regulations.

4.2 Appliance ignition

To start-up the boiler it is necessary to carry out the following operations:

- power the boiler
- open the gas tap present in the system to allow fuel flow
- turn the mode selector (3 - fig. 1a) to the desired position:

Mynute S C.A.I. E - C.S.I.:

Summer mode: turning the selector to the symbol summer  (fig. 2a) the traditional function of only domestic hot water is activated. If there is a domestic hot water request the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon

Winter mode: by turning the mode selector within the area marked + and - (fig. 2b), the boiler provides domestic hot water and heating. If there is a heat request, the boiler switches on and the digital monitor indicates the heating water temperature, the icon to indicate heating and the flame icon (fig. 3a). If there is a domestic hot water request, the boiler switches on and the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon (fig. 4a)

Pre-heating (faster hot water): rotate the domestic hot water temperature adjustment knob (4 - fig. 1a) to the  symbol (fig. 5a), to activate the pre-heating function. This function keeps the water in the domestic hot water exchanger hot, to reduce standby times when a request is made. When the pre-heating function is enabled, the monitor indicates the delivery temperature of the heating water or the domestic hot water, according to the current request. During burner ignition following a pre-heating request, the monitor indicates the **P** symbol (fig. 5b).

To deactivate the pre-heating function, rotate the domestic hot water temperature adjustment knob back to the  symbol. Bring the domestic hot water temperature adjustment knob back to the required position. This function cannot be activated when the boiler is OFF: function selector (3 fig. 1a) on  OFF.

Mynute S R.S.I.:

Summer mode (only with the external water tank connected): turning the selector to the symbol summer  (fig. 2a) the traditional function of only domestic hot water is activated and the boiler supplies water at the temperature set on the external storage tank. If there is a domestic hot water request the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon

Winter mode: by turning the mode selector within the area marked + and - (fig. 2b), the boiler provides hot water for heating and - if connected to an external storage tank - domestic hot water. If there is a heat request, the boiler switches on and the digital monitor indicates the heating water temperature, the icon to indicate heating

and the flame icon (fig. 3a). If there is a domestic hot water request, the boiler switches on and the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon (fig. 4a).

Adjust the room thermostat to the required temperature (~20°C)

Mynute S C.A.I. E - C.S.I.: Adjustment of domestic hot water temperature

To adjust domestic water temperature (bathrooms, showers, kitchen, etc.), turn the knob with symbol  (fig. 2b) within the area marked + and -.

The boiler is standby status until, after a heat request, the burner switches on and the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon.

The boiler will be in function until the adjusted temperature is reached, afterwards it will be in "standby" again.

Mynute S R.S.I.: Adjustment of the domestic hot water temperature

CASE A heating only - adjustment does not apply

CASE B heating only + external storage tank with thermostat - adjustment does not apply.

CASE C heating only + external storage tank with probe - to adjust the temperature of the domestic hot water in the storage tank, turn the knob-but with the symbol clockwise to increase water temperature and anti-clockwise to lower it.

The boiler is standby status until, after a heat request, the burner switches on and the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon. The boiler will be in function until the adjusted temperature is reached, afterwards it will be in "standby" again.

Environment Automatic Adjustment System Function (S.A.R.A.) fig. 7a

By setting the heating water temperature selector to the area marked by AUTO - temperature value from 55 to 65°C - the S.A.R.A. self-adjusting system is activated: the boiler varies the delivery temperature according to the closing signal of the room thermostat. When the temperature set with the heating water temperature selector is reached, a 20 minutes count begins. If during this period the room thermostat still requests heat, the value of the set temperature automatically increases by 5 °C.

When the new value is reached, other 20 minutes count begins.

If during this period the room thermostat still requests heat, the value of the set temperature automatically increases by 5 °C.

This new temperature value is the result of the temperature set manually with the heating water temperature selector and the increase of +10 °C of the S.A.R.A function. After the second cycle the temperature value should be kept at the set value +10°C until the request of the room thermostat is satisfied.

4.3 Switching off

Temporary switching off

In case of absence for short periods of time, set the mode selector (3 - fig. 1a) to  (OFF).

In this way (leaving the electricity and fuel supplies enabled), the boiler is protected by the following systems:

- Anti-frost device: when the temperature of the water in the boiler falls below 5°C, the circulator and, if necessary, the burner are activated at minimum output levels to bring the water temperature back to the values for safety (35°C). During the anti-frost cycle, the symbol  appears on the digital monitor.
- Circulator anti-blocking function: an operation cycle is activated every 24 hours.
- DHW Antifreeze (only when connected to an external storage tank with probe): the function is activated if the temperature measured by the storage tank probe drops below 5° C. A heat request is generated in this phase with the ignition of the burner at minimum power, which is maintained until the water temperature reaches 55° C. During the anti-frost cycle, the symbol  appears on the digital monitor.

Long period switching off

In case of absence for long periods of time, set the mode selector (3 - fig. 1a) to  (OFF).

Then, close the gas tap present on the system. In this case, anti-frost device is deactivated: empty the systems, in case of risk of frost.

4.4 Light signals and faults

The operating status of the boiler is shown on the digital display, below is a list of the types of displays.

To restore operation (deactivate alarms):

Faults A 01-02-03

Position the function selector to  (OFF), wait 5-6 seconds then set it to the required position  (summer mode) or  (winter mode). If the reset attempts do not reactivate the boiler, contact the Technical Assistance Centre.

Fault A 04

In addition to the fault code, the digital display shows the symbol . Check the pressure value indicated by the water gauge:

if it is less than 0.3 bar, position the function selector to  (OFF) and adjust the filling tap (L fig. 13 for C.A.I. - C.S.I. - external for R.S.I.) until the pressure reaches a value between 1 and 1.5 bar. Then position the mode selector to the desired position  (summer) or  (winter).

If pressure drops are frequent, request the intervention of the Technical Assistance Service.

Fault A 06 (only C.A.I. - C.S.I.)

The boiler operates normally but cannot reliably maintain a constant domestic hot water temperature, which remains set at around 50°C. Contact the Technical Assistance Centre.

Fault A 07

Contact the Technical Assistance Centre.

BOILER STATUS	DISPLAY
Stand-by	-
OFF status	OFF
ACF module lockout alarm	A01  
ACF electrical fault alarm	A01  
Limit thermostat alarm	A02 
Air pressure switch alarm (C.S.I. models) Fumes thermostat (C.A.I. models)	A03 
H2O pressure switch alarm	A04  
NTC domestic water fault (R.S.I. only with external storage heater with probe)	A06 
NTC heating fault	A07 
Parasite flame	A11 
Electric calibration min and max heating	ADJ 
Transient awaiting ignition	88°C flashing
Air pressure switch intervention (C.S.I. models) Fumes thermostat intervention (C.A.I. models)	 flashing
H2O pressure switch intervention	  flashing
Preheating Function active (only C.S.I.)	P
Preheating heat request (only C.S.I.)	P flashing
External probe present	
Domestic water heat request	60°C 
Heating heat request	80°C 
Anti-freeze heat request	
Flame present	

4.5 Adjustments

The boiler has already been adjusted by the manufacturer. If it is necessary to adjust it again, for example after extraordinary maintenance, after replacement of gas valve or after gas conversion, carry out the following procedure.

 The maximum output adjustment must be carried out in the sequence indicated exclusively by qualified personnel.

- remove the shell unscrewing the fixing screws A (fig. 6)

- unscrew by two turns the screw of the pressure test point downstream the gas valve and connecting the pressure gauge
- disconnect the compensation inlet of the air distribution box (only C.S.I. and R.S.I. models)

4.5.1 Mynute S C.A.I. E - C.S.I.: Maximum power and minimum domestic hot water adjustment

- Fully open the hot water tap
- on the control panel:
- set the mode selector to  (summer) (fig. 2a)
- turn the domestic hot water temperature selector to its maximum (fig. 8a)
- power the boiler setting the system main switch to "on"
- check that the pressure on the pressure gauge is stable; or with a milliammeter in series to the modulator, make sure that the modulator supplies the maximum available current (120 mA for G20 and 165 mA for LPG).
- carefully prise out the protection cap of the adjustment screws, using a screwdriver (fig. 15)
- with a fork spanner CH10 use the adjustment nut of the maximum output in order to obtain the value indicated in table "Technical data"
- disconnect the modulator faston
- wait until the pressure on the pressure gauge is stable at minimum value
- paying attention not to press the internal shaft, use an Allen spanner to turn the red adjustment screw for domestic hot water minimum temperature regulation, calibrating it until the pressure gauge reads the value indicated in the table "Technical data"
- reconnect the modulator faston
- close the domestic hot water tap
- carefully refit the protection cap of the adjustment screws.

Mynute S R.S.I.: Maximum and minimum power adjustment

- Set the function selector to  (winter) (fig. 2b)
- Remove the housing and access the card
- Insert the jumpers JP1 and JP2
- Bring the trimmer P2 to the maximum value, using a screwdriver (turn clockwise)
- Power the boiler setting the system main switch to "on"
- Check the pressure on the pressure gauge is stable; or, with a milliammeter in series to the modulator, make sure the modulator supplies the maximum available current (120 mA for G20 and 165 mA for LPG)
- Use a screwdriver to carefully prise out the protection cap of the adjustment screws
- With a fork spanner CH10, use the adjustment nut of the maximum output in order to obtain the value indicated in the table "Technical data"
- Disconnect the modulator faston
- Wait until the pressure on the pressure gauge is stable at minimum value
- Use an Allen spanner to set the red adjustment screw at the minimum output, calibrating it until the pressure gauge shows the value indicated in the table "Technical data"
- Reconnect the modulator faston
- Disconnect the boiler from the power supply
- Remove the jumpers JP1 and JP2
- Carefully refit the protection cap of the adjustment screws.

4.5.2 Minimum and maximum heating electric adjustment

 The "electric adjustment" function is activated and deactivated exclusively by the jumper (JP1) (fig. 16).

ADJ  appears on the display to indicate that the calibration procedure is underway.

The function can be enabled in the following way:

- by powering the card with the jumper JP1 inserted and the mode selector in winter position, independently from the possible presence of other operation request.
- by inserting the jumper JP1, with the mode selector in winter position, without heat request in progress.

 By activating the function the burner is ignited through simulation of heat request in heating.

To perform calibration operations, proceed as follow:

- switch off the boiler
- remove the shell and access the card
- insert the jumper JP1 (fig. 16) to enable the knobs placed on the control panel to the minimum and maximum heating adjustment functions.
- make sure that the mode selector is in winter position (see section 4.2).
- power the boiler

⚠ **Electric card in voltage (230 Volt)**

- turn the heating water temperature adjustment knob B (fig. 17) until it reaches the minimum heating value as indicated in the multigas table
- insert the jumper JP2 (fig. 16)
- turn the domestic hot water temperature adjustment knob C (fig. 17) until it reaches the maximum heating value as indicated in the multigas table
- remove the jumper JP2 to store the maximum heating value
- remove the jumper JP1 to store the heating minimum value and to get out the calibration procedure
- reconnect the compensation inlet to the air distribution box (only C.S.I. and R.S.I. models)

Disconnect the pressure gauge and retighten the pressure test point screw.

⚠ To finish the calibration function without storing the set values, proceed as follows:

- a) set the mode selector to position  (OFF)
- b) remove power supply voltage
- c) remove JP1/JP2

⚠ The calibration function is automatically finished, without storing minimum and maximum values, after 15 minutes of its activation.

⚠ The function is automatically finished also in case of definitive stop or lockout.
Also in this case, function conclusion DOES NOT provide values storing.

Note

To calibrate only maximum heating, it is possible to remove the jumper JP2 (to store the maximum) and then get out from the function, without storing the minimum, setting the mode selector to  (OFF) or removing the voltage from the boiler.

⚠ After each intervention on the adjustment element of the gas valve, seal it with sealing varnish.

When adjustment is complete:

- restore set temperature with the room thermostat to the desired temperature
- set the heating water temperature selector to the desired position
- close the instrument panel
- pull the shell back in place.

4.6 Gas conversion operations

Conversion from a family gas to other family gas can be performed easily also when the boiler is installed.

The boiler is designed to operate with methane gas (G20) according to the product label.

It is possible to convert the boilers from one gas type to another by using the appropriate kit supplied upon request:

- Methane conversion kit
- LPG conversion kit

For disassembly refer to instructions below:

- remove power supply from the boiler and close the gas tap
- remove the components to access to the internal parts of the boiler (fig. 19)
- disconnect the spark plug cable connection
- slide off the lower cable grommet from the seat of the air distribution box (only C.S.I. and R.S.I. models)
- remove the burner fixing screws and remove the latter with the spark plug attached and corresponding cables
- using a socket or fork spanner, remove the nozzles and the washers and replace them with the ones in the kit
- if the conversion is from methane gas to LPG, mount the flange contained in the kit and fix it to the burner with the supplied screws
- if the conversion is from LPG to natural gas, remove the flange from the burner.

⚠ **Use and assemble the washers contained in the kit also in case of manifolds without washers.**

- reinsert the burner in the combustion chamber and tighten the screws fixing it to the gas manifold
- place the cable grommet with the spark plug cable in its seat in the air distribution box (only C.S.I. and R.S.I. models)
- restore connection of the spark plug cable
- refit the combustion chamber cover and the cover of the air distribution box (only C.S.I. and R.S.I. models)
- overturn the control instrument panel towards the boiler front part
- open the card cover
- on the control card (fig. 16):
- if the conversion is from methane gas to LPG, insert the jumper in position JP3
- if the conversion is from LPG to methane gas, remove the jumper from position JP3
- reposition the components previously removed
- restore voltage to the boiler and reopen the gas tap (with boiler in operation, check correct seal of the gas feeding circuit connections).

⚠ Conversion must be carried out by qualified personnel.

⚠ After conversion, adjust the boiler again following the indications in specific section and apply the new identification label contained in the kit.

5 - MAINTENANCE

To ensure product characteristics and efficiency remain intact and to comply with prescriptions of current regulations, it is necessary to render the appliance to systematic checks at regular intervals.

Control frequency depends on the installation and use conditions, but it is therefore necessary an annual check-up by the authorised personnel from the Technical Assistance Service.

Turn off the appliance to carry out the maintenance of the structure near the flue exhaust connections or devices, and their accessories. Once the interventions are finished a qualified technician must check that the pipes and the devices work correctly.

IMPORTANT: before carrying out any cleaning or maintenance operation of the appliance, use the appliance and system switch to interrupt power supply and close the gas supply turning the tap placed on the boiler.

Do not clean the appliance or its parts with inflammable substances (e.g. petrol, alcohol, etc.).

Do not clean panels, painted parts and plastic parts with paint thinner. Panel cleaning must be carried out only with soapy water.

5.1 Check the combustion parameters

Mynute S C.A.I.:

To carry out the combustion analysis, proceed as follows:

- open the hot water tap to its maximum output
- set the mode selector to summer  and the domestic hot water temperature selector to the maximum value (fig. 8a).
- insert the flue gas sampling connector in the straight section of pipe after the hood outlet.
The hole for inserting the gas analysis probe must be made in the straight section of pipe after the hood outlet, compliance with applicable legislation (fig. 18).
Insert the flue gas analysis probe completely.
- power the boiler.

Mynute S C.S.I.:

To carry out the combustion analysis, proceed as follows:

- open the hot water tap to its maximum output
- set the mode selector to summer  and the domestic hot water temperature selector to the maximum value (fig. 8a).
- remove the screw of the combustion analysis inlet cover (fig. 18) and insert the probes
- power the boiler

Mynute S R.S.I.:

- switch off the boiler
- set the function selector to winter mode
- remove the housing and access the card
- insert the jumpers JP1 and JP2
- use a screwdriver to prise open the plug on the control panel

- bring the trimmer P2 to the maximum value, using a screwdriver (turn clockwise)
- remove the screw of the combustion analysis inlet cover (fig. 18) and insert the probes
- power the boiler

The appliance works at maximum output and it is possible to check combustion.

After analysis is complete:

- close the hot water tap
- remove the probe from the analyser and close the combustion analysis inlet fastening carefully the screw previously removed.

USER

1A GENERAL WARNINGS

The instruction manual is an integral part of the product and it must therefore be kept carefully and must accompany the appliance; if the manual is lost or damaged, another copy must be requested from the Technical Assistance Service.

-  Boiler installation and any other assistance and maintenance operation must be carried out by qualified personnel according to current local and national regulations.
-  For installation, it is advisable to contact specialised personnel.
-  The boiler must only be used for the application foreseen by the manufacturer. The manufacturer shall not be liable for any damage to persons, animals or property due to errors in installation, calibration, maintenance or due to improper use.
-  The safety and automatic adjustment devices must not be modified, during the system life cycle, by the manufacturer or supplier.
-  This appliance produces hot water, therefore it must be connected to a heating system and/or a domestic hot water mains, compatible with its performance and output.
-  In case of water leakage, close the water supply and contact the Technical Assistance Service immediately.
-  In case of absence for long periods time, close the gas supply and switch off the electrical supply main switch. In case of risk of frost, empty the boiler.
-  From time to time check that the operating pressure of the hydraulic system does not decrease under 1 bar.
-  In case of failure and/or malfunctioning, deactivate the appliance, and do not try to repair or intervene directly on it.
-  Appliance maintenance must be carried out at least once a year: program it with the Technical Assistance Service will avoid wasting time and money.
-  C.A.I. models: the ventilation openings are vital for correct combustion.

Boiler use requires to strictly observe some basic safety rules:

-  Do not use the appliance in any manner other than its intended purpose.
-  It is dangerous to touch the appliance with wet or damp body parts and/or in bare feet.
-  Under no circumstances cover the intake grids, dissipation grids and ventilation vents in the installation room with cloths, paper or any other material.
-  Do not activate electrical switches, telephone or any other object that causes sparks if there is a smell of gas. Ventilate the room by opening doors and windows and close the gas central tap.
-  Do not place anything in the boiler.
-  Do not perform any cleaning operation if the appliance is not disconnected from the main power supply.
-  Do not cover or reduce ventilation opening of the room where the generator is installed.
-  Do not leave containers and inflammable products in the installation room.
-  Do not attempt to repair the appliance in case of failure and/or malfunctioning.
-  It is dangerous to pull or twist the electric cables.
-  Children or unskilled persons must not use the appliance.
-  Do not intervene on sealed elements.
-  C.A.I. models: do not cover or reduce the size of the ventilation openings in the room where the boiler is installed. The ventilation openings are vital for correct combustion.

For better use, remember that:

- a periodic external cleaning with soapy water not only improves its aesthetic aspect but also preserves panelling from corrosion, extending its life cycle;
- if the wall-mounted boiler is enclosed in pendant furniture, leave at least 5 cm for ventilation and maintenance;

- installation of an room thermostat will favour a greater comfort, a more rational use of the heat and energy saving; the boiler can also be connected to a programming clock in order to manage ignition and switching off during the day or week.

2A IGNITION

First ignition must be carried out by personnel from the Technical Assistance Service. At the same time, if it is necessary to put the appliance in service again, carefully follow the described operations. To start-up the boiler it is necessary to carry out the following operations:

- power the boiler
- open the gas tap present in the system to allow fuel flow
- turn the mode selector (3 - fig. 1a) to the desired position:

Mynute S C.A.I. E - C.S.I.:

Summer mode: turning the selector to the symbol summer  (fig. 2a) the traditional function of only domestic hot water is activated. If there is a domestic hot water request the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon

Winter mode: by turning the mode selector within the area marked + and - (fig. 2b), the boiler provides domestic hot water and heating. If there is a heat request, the boiler switches on and the digital monitor indicates the heating water temperature, the icon to indicate heating and the flame icon (fig. 3a). If there is a domestic hot water request, the boiler switches on and the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon (fig. 4a)

Pre-heating (faster hot water): rotate the domestic hot water temperature adjustment knob (4 - fig. 1a) to the  symbol (fig. 5a), to activate the pre-heating function. This function keeps the water in the domestic hot water exchanger hot, to reduce standby times when a request is made. When the pre-heating function is enabled, the monitor indicates the delivery temperature of the heating water or the domestic hot water, according to the current request. During burner ignition following a pre-heating request, the monitor indicates the **P** symbol (fig. 5b). To deactivate the pre-heating function, rotate the domestic hot water temperature adjustment knob back to the  symbol. Bring the domestic hot water temperature adjustment knob back to the required position. This function cannot be activated when the boiler is OFF: function selector (3 fig. 1a) on  OFF.

Mynute S R.S.I.:

Summer mode (only with the external water tank connected): turning the selector to the symbol summer  (fig. 2a) the traditional function of only domestic hot water is activated and the boiler supplies water at the temperature set on the external storage tank. If there is a domestic hot water request the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon

Winter mode: by turning the mode selector within the area marked + and - (fig. 2b), the boiler provides hot water for heating and - if connected to an external storage tank - domestic hot water. If there is a heat request, the boiler switches on and the digital monitor indicates the heating water temperature, the icon to indicate heating and the flame icon (fig. 3a). If there is a domestic hot water request, the boiler switches on and the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon (fig. 4a).

Adjust the room thermostat to the required temperature (~20°C)

Mynute S C.A.I. E - C.S.I.: Adjustment of domestic hot water temperature

To adjust domestic water temperature (bathrooms, showers, kitchen, etc.), turn the knob with symbol  (fig. 2b) within the area marked + and -.

The boiler is standby status until, after a heat request, the burner switches on and the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon. The boiler will be in function until the adjusted temperature is reached, afterwards it will be in "standby" again.

Mynute S R.S.I.: Adjustment of the domestic hot water temperature

CASE A heating only - adjustment does not apply

CASE B heating only + external storage tank with thermostat - ad-

justment does not apply.

CASE C heating only + external storage tank with probe - to adjust the temperature of the domestic hot water in the storage tank, turn the knob-but with the symbol clockwise to increase water temperature and anti-clockwise to lower it.

The boiler is standby status until, after a heat request, the burner switches on and the digital display shows the hot water system temperature, the icon to indicate the hot water supply and the flame icon. The boiler will be in function until the adjusted temperature is reached, afterwards it will be in "standby" again.

Environment Automatic Adjustment System Function (S.A.R.A.) fig. 7a

By setting the heating water temperature selector to the area marked by AUTO - temperature value from 55 to 65°C - the S.A.R.A. self-adjusting system is activated: the boiler varies the delivery temperature according to the closing signal of the room thermostat. When the temperature set with the heating water temperature selector is reached, a 20 minutes count begins. If during this period the room thermostat still requests heat, the value of the set temperature automatically increases by 5 °C.

When the new value is reached, other 20 minutes count begins.

If during this period the room thermostat still requests heat, the value of the set temperature automatically increases by 5 °C.

This new temperature value is the result of the temperature set manually with the heating water temperature selector and the increase of +10 °C of the S.A.R.A function.

After the second cycle the temperature value should be kept at the set value +10°C until the request of the room thermostat is met.

3A SWITCHING OFF

Temporary switching off

In case of absence for short periods of time, set the mode selector (3 - fig. 1a) to  (OFF).

In this way (leaving the electricity and fuel supplies enabled), the boiler is protected by the following systems:

- **Anti-frost device:** when the temperature of the water in the boiler falls below 5°C, the circulator and, if necessary, the burner are activated at minimum output levels to bring the water temperature back to the values for safety (35°C). During the anti-frost cycle, the symbol  appears on the digital monitor.
- **Circulator anti-blocking function:** an operation cycle is activated every 24 hours.
- **DHW Antifreeze (only when connected to an external storage tank with probe):** the function is activated if the temperature measured by the storage tank probe drops below 5° C. A heat request is generated in this phase with the ignition of the burner at minimum power, which is maintained until the water temperature reaches 55° C. During the anti-frost cycle, the symbol  appears on the digital monitor.

Long period switching off

In case of absence for long periods of time, set the mode selector (3 - fig. 1a) to  (OFF).

Then, close the gas tap present on the system. In this case, anti-frost device is deactivated: empty the systems, in case of risk of frost.

4A CONTROLS

At the beginning of the heating season, and occasionally during use, make sure the hydrometer-thermohydrometer indicates cold system pressure values between 0.6 and 1.5 bar: this avoids system noise levels due to the presence of air. In case of insufficient water circulation, the boiler will switch off. Under no circumstances, water pressure must be below 0.5 bar (red field).

If this condition is checked, it is necessary to restore water pressure in the boiler proceeding as follows:

- set the mode selector (3 - fig. 1a) to  (OFF)
 - turn on the filling tap (L fig. 13 for C.A.I. - C.S.I. - external for R.S.I.) until the pressure value is between 1 and 1.5 bar.
- Carefully close the tap. Replace the mode selector on the initial position. If pressure drop is frequent, contact the Technical Assistance Service.

5A LIGHT SIGNALS AND FAULTS

The operating status of the boiler is shown on the digital display, below is a list of the types of displays.

BOILER STATUS	DISPLAY
Stand-by	-
OFF status	OFF
ACF module lockout alarm	A01  
ACF electrical fault alarm	A01  
Limit thermostat alarm	A02 
Air pressure switch alarm (C.S.I. models) Fumes thermostat (C.A.I. models)	A03 
H2O pressure switch alarm	A04  
NTC domestic water fault (R.S.I only with external storage heater with probe)	A06 
NTC heating fault	A07 
Parasite flame	A11 
Electric calibration min and max heating	ADJ 
Transient awaiting ignition	88°C flashing
Air pressure switch intervention (C.S.I. models) Fumes thermostat intervention (C.A.I. models)	 flashing
H2O pressure switch intervention	  flashing
Preheating Function active (only C.S.I.)	P
Preheating heat request (only C.S.I.)	P flashing
External probe present	
Domestic water heat request	60°C 
Heating heat request	80°C 
Anti-freeze heat request	
Flame present	

To restore operation (deactivate alarms):

Faults A 01-02-03

Position the function selector to  (OFF), wait 5-6 seconds then set it to the required position  (summer mode) or  (winter mode). If the reset attempts do not reactivate the boiler, contact the Technical Assistance Centre.

Fault A 04

In addition to the fault code, the digital display shows the symbol . Check the pressure value indicated by the water gauge:

if it is less than 0.3 bar, position the function selector to  (OFF) and adjust the filling tap (L fig. 13 for C.A.I. - C.S.I. - external for R.S.I.) until the pressure reaches a value between 1 and 1.5 bar. Then position the mode selector to the desired position  (summer) or  (winter).

If pressure drops are frequent, request the intervention of the Technical Assistance Service.

Fault A 06 (only C.A.I. - C.S.I.)

The boiler operates normally but cannot reliably maintain a constant domestic hot water temperature, which remains set at around 50°C. Contact the Technical Assistance Centre.

Fault A 07

Contact the Technical Assistance Centre.

TECHNICAL DATA

DESCRIPTION			Mynute S 24 C.S.I.	Mynute S 28 C.S.I.	Mynute S 35 C.S.I.
Heating	Heat input	kW	26,00	30,00	37,60
		kcal/h	22.360	25.800	32.336
	Maximum heat output (80/60°)	kW	24,21	27,90	34,93
		kcal/h	20.817	23.994	30.040
	Minimum heat input	kW	11,20	12,70	12,90
		kcal/h	9.632	10.922	11.094
	Minimum heat output (80°/60°)	kW	9,73	11,00	10,82
		kcal/h	8.370	9.458	9.308
DHW	Heat input	kW	26,00	30,00	37,60
		kcal/h	22.360	25.800	32.336
	Maximum heat output	kW	24,21	27,90	34,93
		kcal/h	20.817	23.994	30.040
	Minimum heat input	kW	9,80	10,50	12,90
		kcal/h	8.428	9.030	11.094
	Minimum heat output	kW	8,52	9,09	10,82
		kcal/h	7.324	7.820	9.308
	Useful efficiency (Pn max - Pn min)	%	93,1 - 86,9	93,0-86,6	92,9-83,9
	Efficiency 30% (47° return)	%	92,4	91,9	92,5
	Combustion performance	%	93,5	93,3	93,0
	Electric power	W	125	127	172
	Category		II2H3+	II2H3+	II2H3P
	Country of destination		-	-	-
	Power supply voltage	V - Hz	230-50	230-50	230-50
	Degree of Protection	IP	X5D	X5D	X5D
Pressure drops on flue with burner on	%	6,54	6,68	7,00	
Pressure drops on flue with burner off	%	0,10	0,08	0,03	
Heating operation					
Pressure - maximum temperature	bar	3 - 90	3 - 90	3 - 90	
Minimum pressure for standard operation	bar	0,25 - 0,45	0,25 - 0,45	0,25 - 0,45	
Selection field of heating water temperature	°C	40/80	40/80	40/80	
Pump: maximum head available	mbar	300	300	300	
for system capacity	l/h	1.000	1.000	1.000	
Membrane expansion tank	l	9	9	10	
Expansion tank pre-charge	bar	1	1	1	
DHW operation					
Maximum pressure	bar	6	6	6	
Minimum pressure	bar	0,15	0,15	0,15	
Hot water quantity with Δt 25°C	l/min	13,9	16,0	20,0	
with Δt 30°C	l/min	11,6	13,3	16,7	
with Δt 35°C	l/min	9,9	11,4	14,3	
DHW minimum output	l/min	2	2	2	
Selection field of DHW temperature	°C	37/60	37/60	37/60	
Flow regulator	l/min	10	12	15	
Gas pressure					
Methane gas nominal pressure (G20)	mbar	20	20	20	
LPG liquid gas nominal pressure (G30)	mbar	28-30	28-30	-	
LPG liquid gas nominal pressure (G31)	mbar	37	37	37	
Hydraulic connections					
Heating input - output	Ø	3/4"	3/4"	3/4"	
DHW input-output	Ø	1/2"	1/2"	1/2"	
Water tank delivery - output	Ø	-	-	-	
Gas input	Ø	3/4"	3/4"	3/4"	
Boiler dimensions					
Height	mm	740	740	780	
Width	mm	400	400	505	
Depth of housing	mm	332	332	328	
Boiler weight	kg	33	33	41	
Flow rate (G20)					
Air capacity	Nm³/h	42,996	45,899	59,357	
Flue gas capacity	Nm³/h	45,604	48,907	63,129	
Mass flow of flue gas (max-min)	gr/s	15,52-18,07	16,59-17,98	21,431-23,549	
Flow rate (G30)					
Air capacity	Nm³/h	42,330	43,539	-	
Flue gas capacity	Nm³/h	44,235	45,738	-	
Mass flow of flue gas (max-min)	gr/s	15,69-16,91	16,20-17,23	-	

DESCRIPTION		Mynute S 24 C.S.I.	Mynute S 28 C.S.I.	Mynute S 35 C.S.I.
Flow rate (G31)				
Air capacity	Nm ³ /h	43,085	44,449	58,957
Flue gas capacity	Nm ³ /h	45,093	46,767	60,415
Mass flow of flue gas (max-min)	gr/s	15,95-16,77	16,52-17,59	20,578-23,206
Fan performance				
Residual head of boiler without pipes	Pa	110	150	110
Concentric flue gas discharge pipes				
Diameter	mm	60-100	60-100	60-100
Maximum length	m	4,25	3,40	2,30
Drop due to insertion of a 45°/90° bend	m	1 - 1,5	1 - 1,5	1 - 1,5
Hole in wall (diameter)	mm	105	105	105
Separate flue gas discharge pipes				
Diameter	mm	80	80	80
Maximum length	m	20 + 20	14,5+14,5	8+8
Losses for a 45°/90° bend	m	1,2 - 1,7	1,2 - 1,7	1,2 - 1,7
Installation B22P-B52P				
Diameter	mm	80	80	80
Maximum length of drainage pipe	m	20	20	12
NOx class		2	3	3
Emission values at max. and min. rate of gas G20*				
Maximum - Minimum CO s.a. less than	ppm	70-100	100-120	100-200
CO ₂	%	6,8-2,5	7,4-2,9	7,1-2,2
NOx s.a. lower than	ppm	150-110	140-40	140-100
Flue gas temperature	°C	124-98	139-112	148-113

* Check performed with concentric pipe ø 60-100, length 0.85m - water temperature 80-60°C

DESCRIPTION			Mynute S 24 C.A.I. E	Mynute S 28 C.A.I. E	Mynute S 28 R.S.I.	Mynute S 35 R.S.I.
Heating	Heat input	kW	26,70	31,90	30,00	37,60
		kcal/h	22.962	27.434	25.800	32.336
	Maximum heat output (80/60°)	kW	24,11	28,97	27,90	34,93
		kcal/h	20.735	24.910	23.994	30.040
	Minimum heat input	kW	10,40	10,70	12,70	12,90
		kcal/h	8.944	9.202	10.922	11.094
	Minimum heat output (80°/60°)	kW	8,89	9,14	11,00	10,82
		kcal/h	7.647	7.859	9.458	9.308
DHW	Heat input	kW	26,70	31,90	-	-
		kcal/h	22.962	27.434	-	-
	Maximum heat output	kW	24,11	28,97	-	-
		kcal/h	20.735	24.910	-	-
	Minimum heat input	kW	10,40	10,70	-	-
		kcal/h	8.944	9.202	-	-
	Minimum heat output	kW	8,89	9,14	-	-
		kcal/h	7.647	7.859	-	-
	Useful efficiency (Pn max - Pn min)	%	90,3-85,5	90,8-85,4	93,0-86,6	92,9-83,9
	Efficiency 30% (47° return)	%	88,6	89,7	91,9	92,5
	Combustion performance	%	90,9	91,3	93,3	93,0
	Electric power	W	80	80	127	172
	Category		II2H3+	II2H3+	II2H3+	II2H3P
	Country of destination		-	-	-	-
	Power supply voltage	V - Hz	230-50	230-50	230-50	230-50
	Degree of Protection	IP	X5D	X5D	X5D	X5D
Pressure drops on flue with burner on	%	9,07	8,66	6,68	7,00	
Pressure drops on flue with burner off	%	0,30	0,28	0,08	0,03	
Heating operation						
Pressure - maximum temperature	bar	3 - 90	3 - 90	3 - 90	3 - 90	
Minimum pressure for standard operation	bar	0,25 - 0,45	0,25 - 0,45	0,25 - 0,45	0,25 - 0,45	
Selection field of heating water temperature	°C	40/80	40/80	40/80	40/80	
Pump: maximum head available	mbar	300	300	300	300	
for system capacity	l/h	1.000	1.000	1.000	1.000	
Membrane expansion tank	l	9	9	9	10	
Expansion tank pre-charge	bar	1	1	1	1	
DHW operation						
Maximum pressure	bar	6	6	-	-	
Minimum pressure	bar	0,15	0,15	-	-	
Hot water quantity with Δt 25°C	l/min	13.8	16.6	-	-	


DESCRIPTION		Mynute S 24 C.A.I. E	Mynute S 28 C.A.I. E	Mynute S 28 R.S.I.	Mynute S 35 R.S.I.
with Δt 30°C	l/min	11,5	13,8	-	-
with Δt 35°C	l/min	9,9	11,9	-	-
DHW minimum output	l/min	2	2	-	-
Selection field of DHW temperature	°C	37/60	37/60	-	-
Flow regulator	l/min	10	12	-	-
Gas pressure					
Methane gas nominal pressure (G20)	mbar	20	20	20	20
LPG liquid gas nominal pressure (G30)	mbar	28-30	28-30	28-30	-
LPG liquid gas nominal pressure (G31)	mbar	37	37	37	37
Hydraulic connections					
Heating input - output	Ø	3/4"	3/4"	3/4"	3/4"
DHW input-output	Ø	1/2"	1/2"	-	-
Water tank delivery - output	Ø	-	-	3/4"	3/4"
Gas input	Ø	3/4"	3/4"	3/4"	3/4"
Boiler dimensions					
Height	mm	740	740	740	780
Width	mm	400	450	400	505
Depth of housing	mm	332	332	332	328
Boiler weight	kg	30	32	32	39
Flow rate (G20)					
Air capacity	Nm ³ /h	43,514	55,616	45,899	59,357
Flue gas capacity	Nm ³ /h	46,191	58,815	48,907	63,129
Mass flow of flue gas (max-min)	gr/s	15,71-14,99	20,06-18,36	16,59-17,98	21,431-23,549
Flow rate (G30)					
Air capacity	Nm ³ /h	46,447	52,610	43,539	-
Flue gas capacity	Nm ³ /h	48,404	54,948	45,738	-
Mass flow of flue gas (max-min)	gr/s	17,17-17,09	19,49-16,98	16,20-17,23	-
Flow rate (G31)					
Air capacity	Nm ³ /h	51,927	54,290	44,449	58,957
Flue gas capacity	Nm ³ /h	50,445	56,755	46,767	60,415
Mass flow of flue gas (max-min)	gr/s	17,86-16,36	20,08-17,43	16,52-17,59	20,578-23,206
Fan performance					
Residual head of boiler without pipes	Pa	-	-	150	110
Concentric flue gas discharge pipes					
Diameter	mm	-	-	60-100	60-100
Maximum length	m	-	-	3,40	2,30
Drop due to insertion of a 45°/90° bend	m	-	-	1 - 1,5	1 - 1,5
Hole in wall (diameter)	mm	-	-	105	105
Separate flue gas discharge pipes					
Diameter	mm	-	-	80	80
Maximum length	m	-	-	14,5+14,5	8+8
Losses for a 45°/90° bend	m	-	-	1,2 - 1,7	1,2 - 1,7
Installation B22P-B52P					
Diameter	mm	-	-	80	80
Maximum length of drainage pipe	m	-	-	20	12
Flue gas exhaust pipes					
Diameter	mm	130	140	-	-
NOx class		2	3	3	3
Emission values at max. and min. rate of gas G20*					
Maximum - Minimum CO s.a. less than	ppm	90-80	110-80	100-120	100-200
CO ₂	%	6,9-2,8	6,5-2,4	7,4-2,9	7,1-2,2
NOx s.a. lower than	ppm	160-120	170-110	140-40	140-100
Flue gas temperature	°C	132-97	130-87	139-112	148-113

* C.A.I. models: check performed with pipe ø 130 (24 C.A.I. E) - ø 140 (28 C.A.I. E), length 0,5m - water temperature 80-60°C
C.S.I. models: check performed with concentric pipe ø 60-100, length 0,85m - water temperature 80-60°C

Multigas table

DESCRIPTION		Methane gas (G20)	Butane (G30)	Propane (G31)
Lower Wobbe index (at 15°C-1013 mbar)	MJ/m³S	45,67	80,58	70,69
Net Calorific Value	MJ/m³S	34,02	116,09	88
Supply nominal pressure	mbar (mm W.C.)	20 (203,9)	28 - 30 (285,5 - 305,9)	37 (377,3)
Supply minimum pressure	mbar (mm W.C.)	13,5 (137,7)	-	-
Mynute S 24 C.S.I.				
Diaphragm (number of holes)	n°	12	12	12
Diaphragm (diameter of holes)	mm	1,35	0,76	0,76
Heating maximum gas capacity	Sm³/h	2,75		
	kg/h		2,05	2,02
DHW maximum gas capacity	Sm³/h	2,75		
	kg/h		2,05	2,02
Heating minimum gas capacity	Sm³/h	1,18		
	kg/h		0,88	0,87
DHW minimum gas capacity	Sm³/h	1,04		
	kg/h		0,77	0,76
Maximum pressure downstream CH valve	mbar	9,80	27,80	35,80
	mm W.C.	99,93	283,48	365,06
Maximum pressure downstream DHW valve	mbar	9,80	27,80	35,80
	mm W.C.	99,93	283,48	365,06
Minimum pressure downstream CH valve	mbar	2,00	5,70	7,60
	mm W.C.	20,39	58,12	77,50
Minimum pressure downstream DHW valve	mbar	1,50	4,80	5,80
	mm W.C.	15,30	48,95	59,14
Mynute S 28 C.S.I.				
Diaphragm (number of holes)	n°	13	13	13
Diaphragm (diameter of holes)	mm	1,35	0,78	0,78
Heating maximum gas capacity	Sm³/h	3,17		
	kg/h		2,36	2,33
DHW maximum gas capacity	Sm³/h	3,17		
	kg/h		2,36	2,33
Heating minimum gas capacity	Sm³/h	1,34		
	kg/h		1,00	0,99
DHW minimum gas capacity	Sm³/h	1,11		
	kg/h		0,83	0,82
Maximum pressure downstream CH valve	mbar	11,30	28,00	36,00
	mm W.C.	115,23	285,52	367,10
Maximum pressure downstream DHW valve	mbar	11,30	28,00	36,00
	mm W.C.	115,23	285,52	367,10
Minimum pressure downstream CH valve	mbar	2,25	5,20	6,80
	mm W.C.	22,94	53,03	69,34
Minimum pressure downstream DHW valve	mbar	1,60	3,60	4,80
	mm W.C.	16,32	36,71	48,95
Mynute S 35 C.S.I.				
Diaphragm (number of holes)	n°	16	-	16
Diaphragm (diameter of holes)	mm	1,4	-	0,8
Heating maximum gas capacity	Sm³/h	3,98	-	
	kg/h			2,92
DHW maximum gas capacity	Sm³/h	3,98	-	
	kg/h			2,92
Heating minimum gas capacity	Sm³/h	1,36	-	
	kg/h			1,00
DHW minimum gas capacity	Sm³/h	1,36	-	
	kg/h			1,00
Maximum pressure downstream CH valve	mbar	9,60	-	35,00
	mm W.C.	97,89	-	356,90
Maximum pressure downstream DHW valve	mbar	9,60	-	35,00
	mm W.C.	97,89	-	356,90
Minimum pressure downstream CH valve	mbar	1,10	-	4,40
	mm W.C.	11,22	-	44,87
Minimum pressure downstream DHW valve	mbar	1,10	-	4,40
	mm W.C.	11,22	-	44,87

DESCRIPTION		Methane gas (G20)	Butane (G30)	Propane (G31)
Mynute S 24 C.A.I. E				
Diaphragm (number of holes)	n°	12	12	12
Diaphragm (diameter of holes)	mm	1,35	0,77	0,77
Heating maximum gas capacity	Sm³/h	2,82		
	kg/h		2,10	2,07
DHW maximum gas capacity	Sm³/h	2,82		
	kg/h		2,10	2,07
Heating minimum gas capacity	Sm³/h	1,10		
	kg/h		0,82	0,81
DHW minimum gas capacity	Sm³/h	1,10		
	kg/h		0,82	0,81
Maximum pressure downstream CH valve	mbar	10,10	28,00	36,00
	mm W.C.	102,99	285,52	367,10
Maximum pressure downstream DHW valve	mbar	10,10	28,00	36,00
	mm W.C.	102,99	285,52	367,10
Minimum pressure downstream CH valve	mbar	1,70	4,70	6,10
	mm W.C.	17,34	47,93	62,20
Minimum pressure downstream DHW valve	mbar	1,70	4,70	6,10
	mm W.C.	17,34	47,93	62,20
Mynute S 28 C.A.I. E				
Diaphragm (number of holes)	n°	14	14	14
Diaphragm (diameter of holes)	mm	1,35	0,77	0,77
Heating maximum gas capacity	Sm³/h	3,37		
	kg/h		2,51	2,48
DHW maximum gas capacity	Sm³/h	3,37		
	kg/h		2,51	2,48
Heating minimum gas capacity	Sm³/h	1,13		
	kg/h		0,84	0,83
DHW minimum gas capacity	Sm³/h	1,13		
	kg/h		0,84	0,83
Maximum pressure downstream CH valve	mbar	10,40	28,00	36,00
	mm W.C.	106,05	285,52	367,10
Maximum pressure downstream DHW valve	mbar	10,40	28,00	36,00
	mm W.C.	106,05	285,52	367,10
Minimum pressure downstream CH valve	mbar	1,40	3,80	4,80
	mm W.C.	14,28	38,75	48,95
Minimum pressure downstream DHW valve	mbar	1,40	3,80	4,80
	mm W.C.	14,28	38,75	48,95
Mynute S 28 R.S.I.				
Diaphragm (number of holes)	n°	13	13	13
Diaphragm (diameter of holes)	mm	1,35	0,78	0,78
Heating maximum gas capacity	Sm³/h	3,17		
	kg/h		2,36	2,33
Heating minimum gas capacity	Sm³/h	1,34		
	kg/h		1,00	0,99
Maximum pressure downstream CH valve	mbar	11,30	28,00	36,00
	mm W.C.	115,23	285,52	367,10
Minimum pressure downstream CH valve	mbar	2,25	5,20	6,80
	mm W.C.	22,94	53,03	69,34
Mynute S 35 R.S.I.				
Diaphragm (number of holes)	n°	16	-	16
Diaphragm (diameter of holes)	mm	1,4	-	0,8
Heating maximum gas capacity	Sm³/h	3,98	-	
	kg/h			2,92
Heating minimum gas capacity	Sm³/h	1,36	-	
	kg/h			1,00
Maximum pressure downstream CH valve	mbar	9,60	-	35,00
	mm W.C.	97,89	-	356,90
Minimum pressure downstream CH valve	mbar	1,10	-	4,40
	mm W.C.	11,22	-	44,87

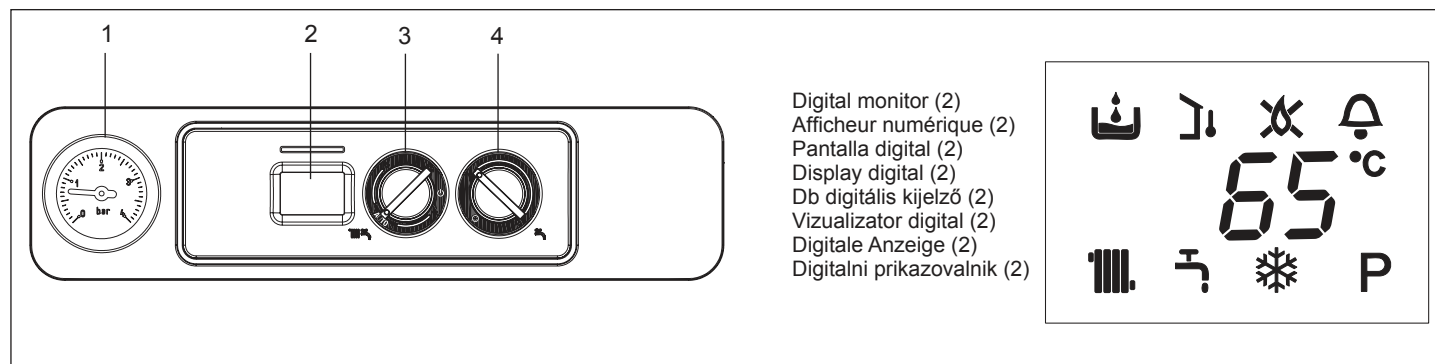**[EN] Control panel**

- 1 Hydrometer
- 2 Digital monitor indicating the operating temperature and irregularity codes
- 3 Mode selector:
 - ⏻ Off/Alarm reset, Summer,
 - ❄️ Winter/Heating water temperature adjustment
- 4 🚿 Domestic hot water temperature adjustment
 - ☺️ Pre-heating function (faster hot water) (only for C.S.I. models)

Description of the icons

- 🔥 System loading - this icon is visualised together with irregularity code A 04
- 🌡️ Heat-adjustment: indicates the connection to an external probe
- 🔥 Flame failure - this icon is visualised together with irregularity code A 01
- ⚠️ Irregularity: indicates any operating irregularities, together with an alarm code
- 🔥 Heating operation
- 🚿 Domestic hot water operation
- ❄️ Anti-freeze: indicates that the anti-freeze cycle has been activated
- P Pre-heating (faster hot water): indicates that a pre-heating cycle has been activated (the burner is ON) (only for C.S.I. models)
- 65° Heating/domestic hot water temperature or operating irregularity

[F] Panneau de commande

- 1 Hydromètre
- 2 Afficheur numérique qui signale la température de fonctionnement et les codes d'anomalie
- 3 Sélecteur de fonction :
 - ⏻ Éteint (OFF)/Réarmement des alarmes, Été,
 - ❄️ Hiver/Réglage de la température de l'eau du chauffage
- 4 🚿 Réglage de la température de l'eau sanitaire
 - ☺️ Fonction préchauffage (eau chaude plus rapidement) (uniquement pour les modèles C.S.I.)

Description des icônes

- 🔥 Chargement du système: cette icône est affichée avec le code d'anomalie A 04
- 🌡️ Régulation thermique: cette icône indique la connexion à une sonde extérieure
- 🔥 Blocage de flamme: cette icône est affichée avec le code d'anomalie A 01
- ⚠️ Anomalie: cette icône indique une quelconque anomalie de fonctionnement et est affichée avec un code d'alarme
- 🔥 Fonctionnement en mode chauffage
- 🚿 Fonctionnement en mode sanitaire
- ❄️ Antigel : cette icône indique que le cycle antigel
- P Préchauffage (eau chaude plus rapidement) est en cours : cela indique que un cycle de préchauffage est en cours (le brûleur est allumé) (uniquement les modèles C.S.I.)
- 65° Température en mode chauffage/sanitaire ou anomalie de fonctionnement

[ES] Panel de mandos

- 1 Hidrómetro
- 2 Pantalla digital que indica la temperatura de funcionamiento y los códigos de anomalía
- 3 Selector de función:
 - ⏻ Apagado (OFF)/Reset alarmas, Verano,
 - ❄️ Invierno/Regulación temperatura agua calefacción
- 4 🚿 Regulación de la temperatura agua sanitaria
 - ☺️ Función precalentamiento (agua caliente más rápido) (sólo para modelos C.S.I.)

Descripción de los iconos

- 🔥 Carga de la instalación, este icono se visualiza junto con el código de la anomalía A 04
- 🌡️ Termorregulación: indica la conexión a una sonda exterior
- 🔥 Bloqueo de la llama, este icono se visualiza junto con el código de la anomalía A 01
- ⚠️ Anomalía: indica cualquier anomalía de funcionamiento y se visualiza junto con un código de alarma
- 🔥 Funcionamiento en modo calentamiento
- 🚿 Funcionamiento en modo sanitario
- ❄️ Anticongelante: indica que el ciclo anticongelante está funcionando
- P Precalentamiento (agua caliente más rápido): indica que el ciclo de precalentamiento está en curso (el quemador está encendido) (sólo para modelos C.S.I.)
- 65° Temperatura calentamiento/sanitario o bien anomalía de funcionamiento

[PT] Painel de comando

- 1 Hidrómetro
- 2 Display digital que sinaliza a temperatura de funcionamento e os códigos de anomalia
- 3 Selector de função:
 - ⏻ Desligado (OFF)/Reset alarmes, Verão,
 - ❄️ Inverno/Regulação da temperatura água aquecimento
- 4 🚿 Regulação da temperatura água sanitário
 - ☺️ Função préchauffage (eau chaude plus rapidement) (apenas para modelos C.S.I.)

Descrição dos ícones

- 🔥 Carregamento da instalação, este ícone é exibido junto com o código de anomalia A 04
- 🌡️ Termo-regulação: indica a conexão à uma sonda externa
- 🔥 Bloqueio da chama, este ícone é exibido junto com o código de anomalia A 01
- ⚠️ Anomalia: indica uma anomalia de funcionamento qualquer e é exibida junto com um código de alarme de
- 🔥 Funcionamento em aquecimento
- 🚿 Funcionamento em sanitário
- ❄️ Anti-congelante: indica que está em curso o ciclo anti-congelante
- P Pré-aquecimento (água quente mais rápida): indica que está em curso um ciclo de pré-aquecimento (o queimador está ligado) (apenas para modelos C.S.I.)
- 65° Temperatura aquecimento/sanitário ou anomalia de funcionamento

[HU] Vezérlő panel

- 1 Víznyomásmérő
- 2 Digitális kijelző, amelyről leolvasható az üzemi hőmérséklet és a hibakódok
- 3 Funkciókapcsoló:  Kikapcsolás (OFF)/Riasztó Reset (újraindítás),
 Nyár,
 Tél/Fűtési hőmérséklet vizének beállítása
- 4  Használati melegvíz hőmérsékletének beállítása
 Előmelegítő funkció (gyorsabb melegvíz-előállítás) (csak a C.S.I. modellek esetén)

Az ikonok magyarázata

-  Berendezés töltése: az ikon az A 04-es hibakóddal együtt jelenik meg
-  Hőszabályozás: a külső érzékelőhöz való kapcsolódást jelzi
-  Lángőr: az ikon az A 01-es hibakóddal együtt jelenik meg
-  Hiba: üzemhibát jelez; a riasztás kóddal együtt jelenik meg
-  Fűtés üzemmód
-  Használati meleg víz üzemmód
-  Fagymentesítés: jelzi, hogy a fagymentesítő funkció be van kapcsolva
-  Előmelegítés (gyorsabb melegvíz-előállítás): jelzi, hogy az előmelegítő funkció be van kapcsolva (az égőfej üzemel) (csak a C.S.I. modellek esetén)
- 65° Fűtési/használati meleg víz hőmérséklete vagy üzemhiba

[RO] Panoul de comenzi

- 1 Hidrometru
- 2 Vizualizator digital care semnalizează temperatura de funcționare și codurile anomalie
- 3 Selector de funcții:  Stins (OFF)/Reset alarme,
 Vară,
 Iarnă/Reglarea temperatură apă încălzire
- 4  Reglare temperatură apă menajeră
 Funcție preîncălzire (mod de producere apă caldă mai rapid) (doar pentru modelele C.S.I.)

Descrierea pictogramelor

-  Încărcare instalație, această pictogramă este vizualizată împreună cu codul anomalie A 04
-  Termoreglare: afișează conectarea la o sondă externă
-  Blocare flacără, această pictogramă este vizualizată împreună cu codul anomalie A 01
-  Anomalie: indică orice anomalie în funcționare și este vizualizată împreună cu un cod de alarmă
-  Funcționare în mod de încălzire
-  Funcționare apă caldă menajeră
-  Anti-îngheț: indică faptul că este în funcțiune ciclul anti-îngheț
-  Preîncălzire (mod de producere apă caldă mai rapid): indică faptul că este în desfășurare un ciclu de preîncălzire (arzătorul este aprins) (doar pentru modelele C.S.I.)
- 65° Temperatură încălzire/apă caldă menajeră sau anomalie în funcționare

[DE] Bedienfeld

- 1 Hydrometer
- 2 Digitale Anzeige für Betriebstemperatur und Störungscode
- 3 Funktionswahlschalter:  Aus (OFF)/Reset Alarme,
 Sommer,
 Winter/Einstellung der Wassertemperatur der Heizung
- 4  Einstellung der Temperatur des Sanitärwassers
 Vorwärm-Funktion (schneller warmes Wasser) (nur bei C.S.I. Modellen)

Beschreibung der Symbole

-  Befüllen der Anlage: dieses Symbol wird zusammen mit dem Störungscode A 04 angezeigt
-  Temperaturregelung: gibt die Verbindung zu einem externen Fühler
-  Störabschaltung der Flamme: dieses Symbol wird zusammen mit dem Störungscode A 01 angezeigt
-  Störung: bezeichnet eine beliebige Funktionsstörung und wird zusammen mit einem Alarmcode angezeigt
-  Heizbetrieb
-  Sanitärbetrieb
-  Frostschutz: gibt an, dass ein Frostschutzzyklus läuft
-  Vorwärmung (schneller warmes Wasser): gibt an, dass ein Vorwärmzyklus läuft (der Brenner ist eingeschaltet) (nur bei C.S.I. Modellen)
- 65° Temperatur Heizung/Sanitär oder Funktionsstörung

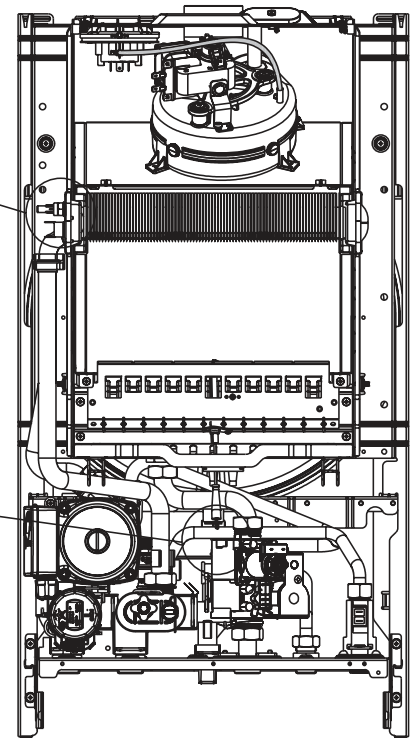
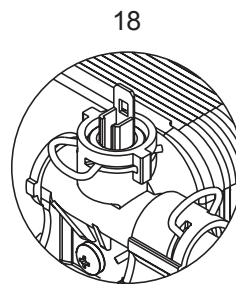
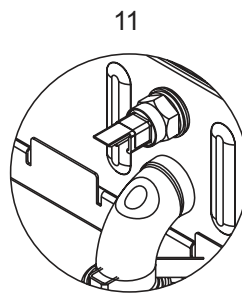
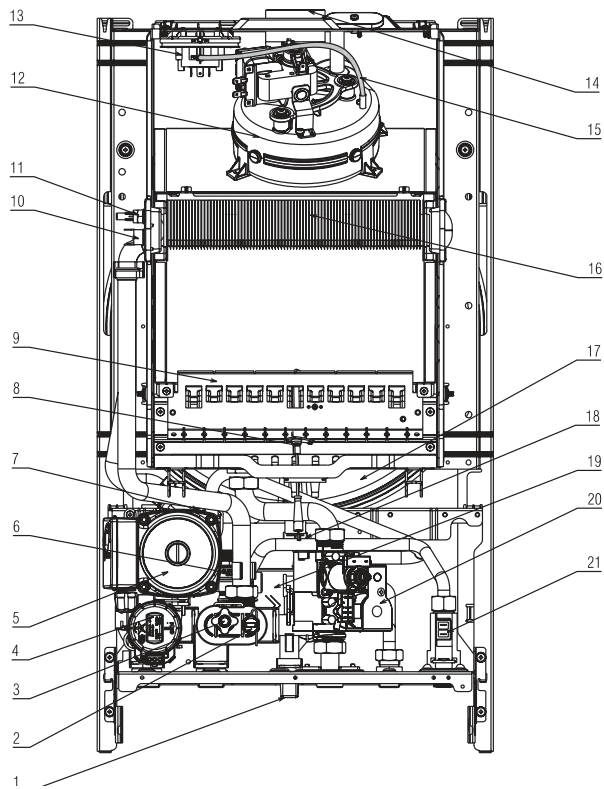
[SL] Krmilna plošča

- 1 Hidrometer
- 2 Digitalni prikazovalnik za prikaz delovne temperature in kod napak
- 3 Izbirno stikalo funkcij:  Izklp (OFF)/Resetiranje alarmov,
 Poletje,
 Zima/Regulacija temperature vode za ogrevanje
- 4  Regulacija temperature sanitarne vode
 Funkcija predgrevanja (hitrejša priprava tople vode) (samo pri C.S.I.modelih)




Opis ikon

-  Polnjenje sistema, ta ikona se pojavi skupaj s kodo napake A 04
-  Toplotna regulacija: označuje povezavo z zunanjim tipalom
-  Prekinitev plamena, ta ikona se pojavi skupaj s kodo napake A 01
-  Napaka: označuje vsako napako v delovanju in se pojavi skupaj s kodo alarma
-  Delovanju ogrevanja in
-  Delovanju priprave sanitarne vode
-  Zaščita pred zamrznitvijo: označuje, da deluje zaščita pred zamrznitvijo
-  Predgrevanje (hitrejša priprava tople vode): označuje, da je v teku ciklus predgrevanja (gorilnik deluje) (samo s C.S.I.modeli)
- 65° Temperatura ogrevanja/sanitarne vode ali napaka v delovanju


Mynute S 24 - 28 C.S.I.




Mynute S 28 R.S.I.

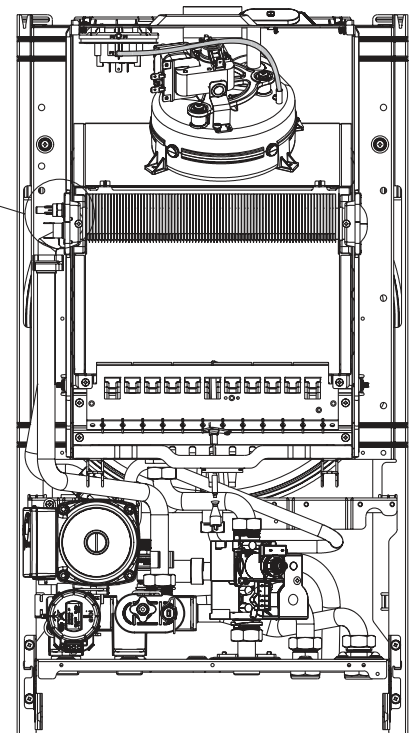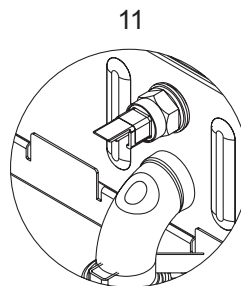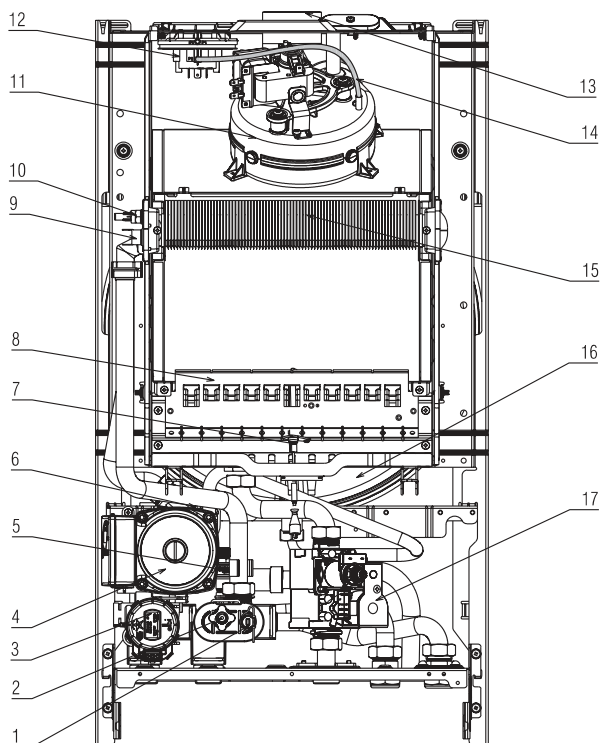


Mynute S 24 - 28 C.A.I. E

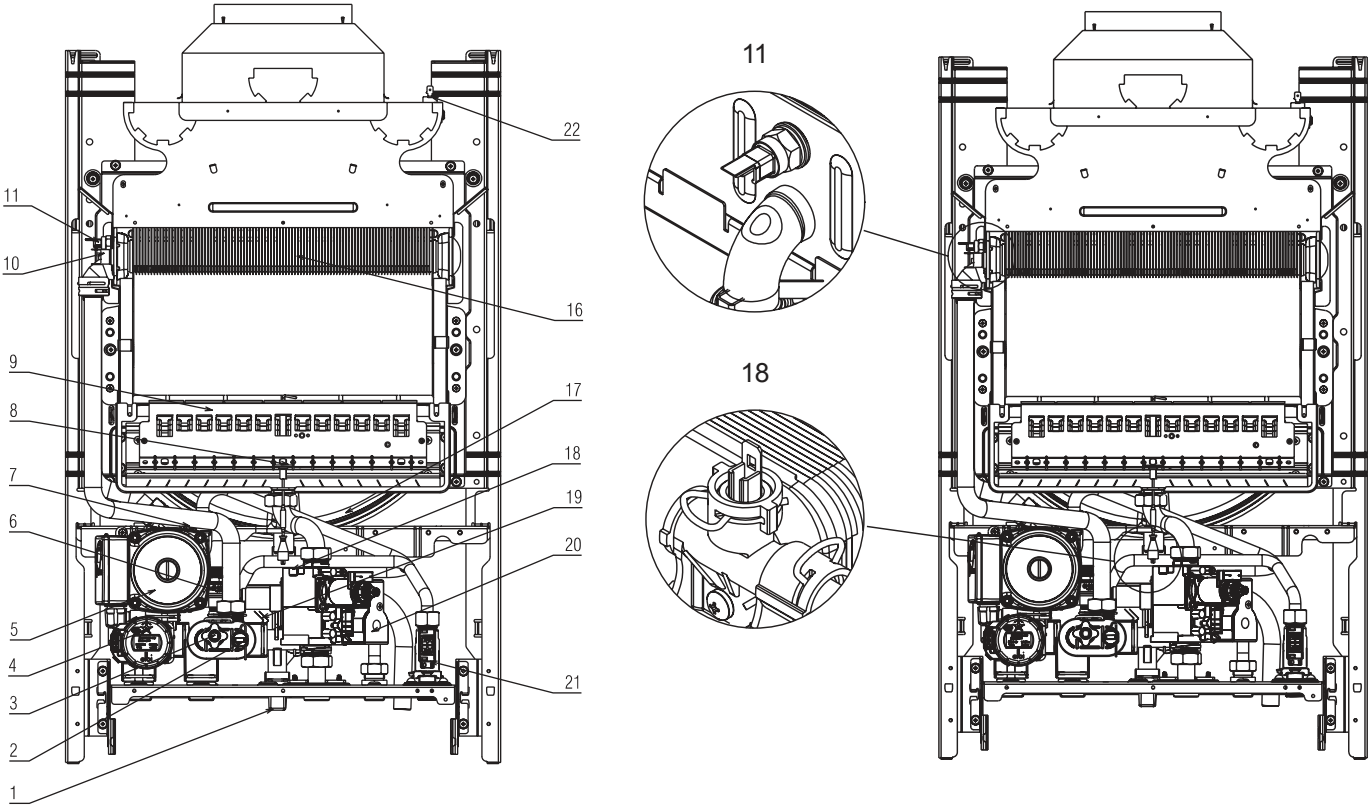

Mynute S 35 C.S.I.

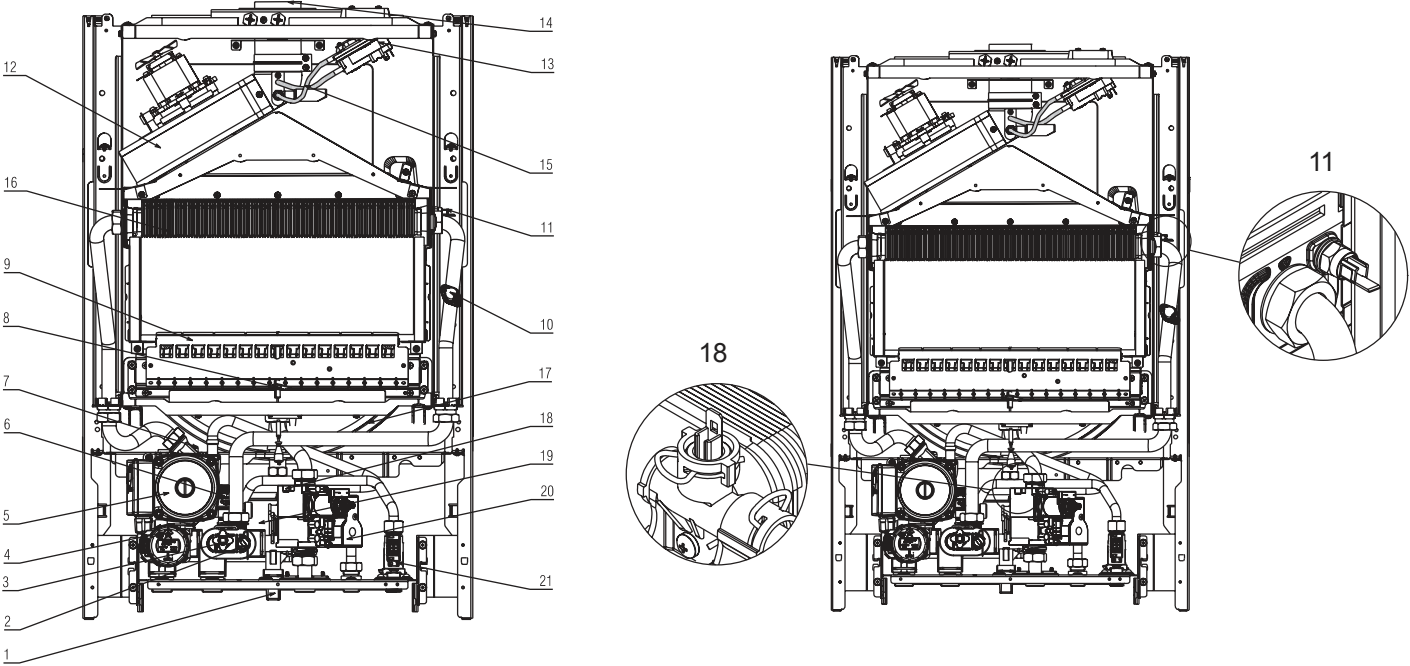

Mynute S 35 R.S.I.

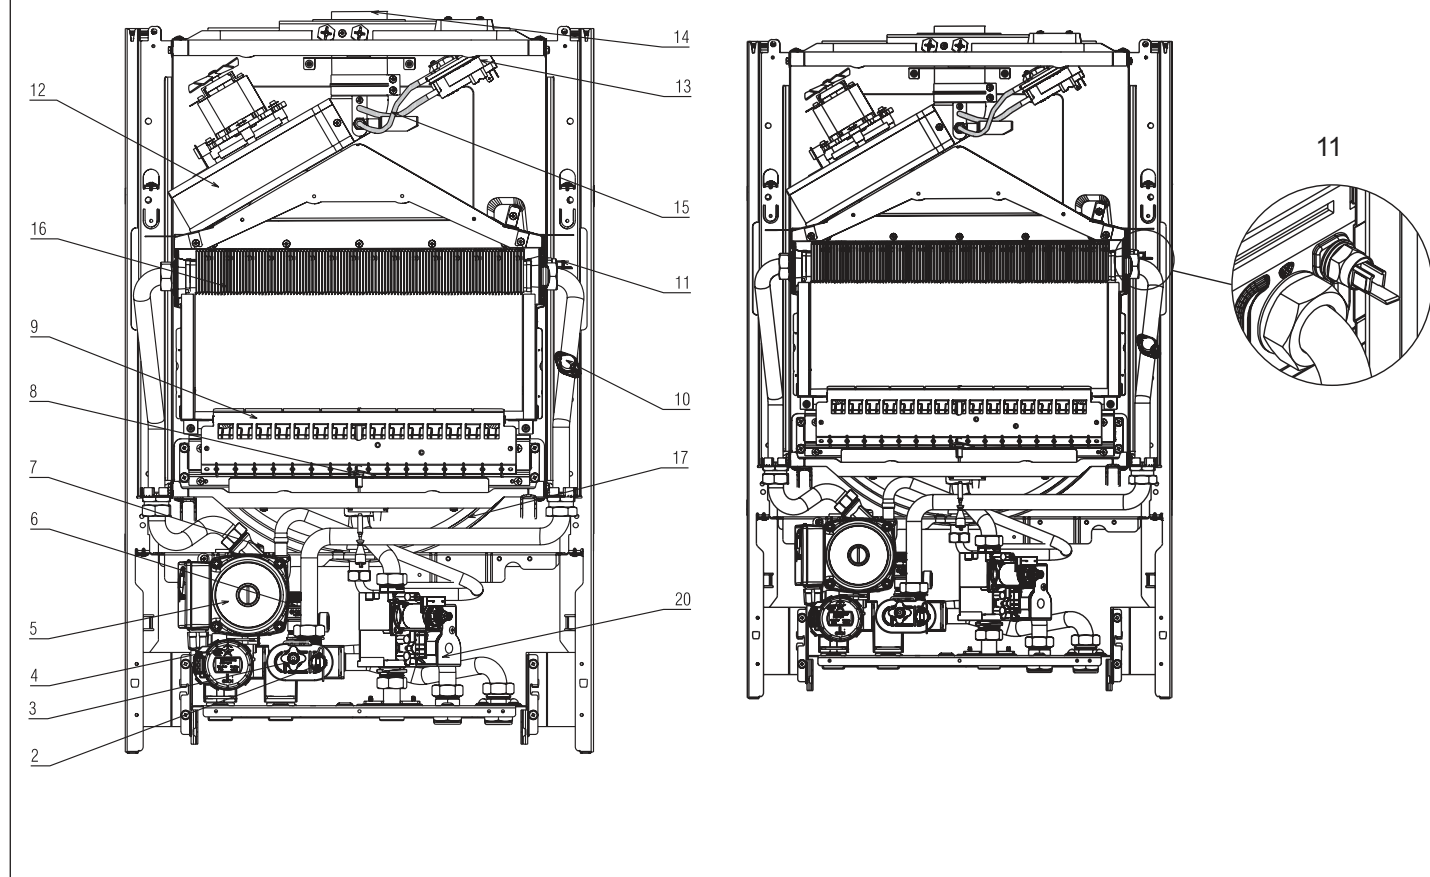**[EN] BOILER FUNCTIONAL ELEMENTS**

- 1 Filling tap
- 2 Water pressure switch
- 3 Drain tap
- 4 3-way valve
- 5 Circulation pump
- 6 Safety valve
- 7 Air vent valve
- 8 Flame ignition-detection electrode
- 9 Burner
- 10 Limit thermostat
- 11 Primary NTC probe
- 12 Fan
- 13 Flue gas pressure switch
- 14 Flue gas flange
- 15 Depression measurement pipe
- 16 Heat exchanger
- 17 Expansion tank
- 18 Domestic hot water NTC probe
- 19 Domestic hot water exchanger
- 20 Gas valve
- 21 Flow switch
- 22 Fumes thermostat

[F] ÉLÉMENTS FONCTIONNELS DE LA CHAUDIÈRE

- 1 Robinet de remplissage
- 2 Interrupteur de pression d'eau
- 3 Robinet de vidange
- 4 Soupape à trois voies
- 5 Pompe de circulation
- 6 Soupape de sécurité
- 7 Soupape d'aération
- 8 Électrode de détection d'allumage de flamme
- 9 Brûleur
- 10 Thermostat limite
- 11 Sonde NTC primaire
- 12 Ventilateur
- 13 Interrupteur de pression de gaz de cheminée
- 14 Bride de gaz de cheminée
- 15 Tuyau de mesure de dépression
- 16 Échangeur thermique
- 17 Vase d'expansion
- 18 Sonde NTC d'eau chaude domestique
- 19 Échangeur d'eau chaude domestique
- 20 Vanne de gaz
- 21 Interrupteur de flux
- 22 Thermostat de fumées

[ES] ELEMENTOS FUNCIONALES DE LA CALDERA

- 1 Tapa de llenado
- 2 Regulador de presión de agua
- 3 Tapa de drenaje
- 4 Válvula de 3 vías
- 5 Bomba de circulación
- 6 Válvula de seguridad
- 7 Válvula de purga de aire
- 8 Encendido de la llama-electrodo detectado
- 9 Quemador
- 10 Termostato límite
- 11 Sonda NTC primario
- 12 Ventilador
- 13 Regulador de presión de gas
- 14 Brida de conducto de gas
- 15 Tubo de medición de depresión
- 16 Intercambiador de calor
- 17 Tanque de expansión
- 18 Sonda NTC de agua caliente sanitaria
- 19 Intercambiador de agua caliente sanitaria
- 20 Válvula de gas
- 21 Interruptor de flujo
- 22 Termostato de humos

[PT] ELEMENTOS FUNCIONAIS DA CALDEIRA

- 1 Tampa de enchimento
- 2 Interruptor de pressão da água
- 3 Tampa de drenagem
- 4 Válvula de 3 vias
- 5 Bomba de circulação
- 6 Válvula de segurança
- 7 Válvula do respiradouro
- 8 Eléctrodo de detecção de ignição de chama
- 9 Queimador
- 10 Termóstato de limite
- 11 Sonda NTC primária
- 12 Ventilador
- 13 Interruptor de pressão dos gases da chaminé
- 14 Flange dos gases da chaminé
- 15 Cano de medição da depressão
- 16 Trocador de calor
- 17 Tanque de expansão
- 18 Sonda NTC de água quente doméstica
- 19 Trocador de água quente doméstica
- 20 Válvula de gás
- 21 Interruptor de fluxo
- 22 Termóstato de fumos

[HU] KAZÁN FUNKCIONÁLIS ELEMENK

1. Feltöltő csap
2. Víz nyomáskapcsoló
3. Leeresztő csap
4. Háromjáratú szelep
5. Keringtető szivattyú
6. Biztonsági szelep
7. Légtelenítő szelep
8. Láng gyújtó-lángór elektróda
9. Égő
10. Határoló termosztát
11. Elsődleges NTC szonda
12. Ventilátor
13. Füstgáz nyomáskapcsoló
14. Füstgáz perem
15. Nyomáscsökkenés mérő cső
16. Hőcserélő
17. Tárgulási tartály
18. Használati melegvíz NTC szonda
19. Háztartási melegvíz hőcserélő
20. Gázszelep
21. Áramláskapcsoló
22. Füstgáz termosztát

[RO] ELEMENTE FUNCȚIONALE CAZAN

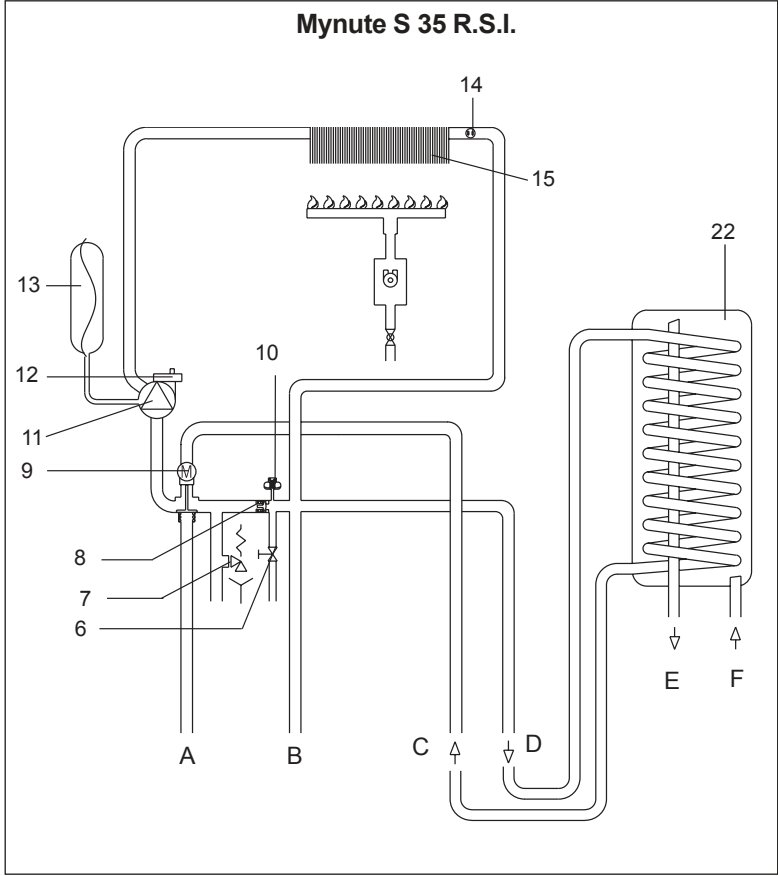
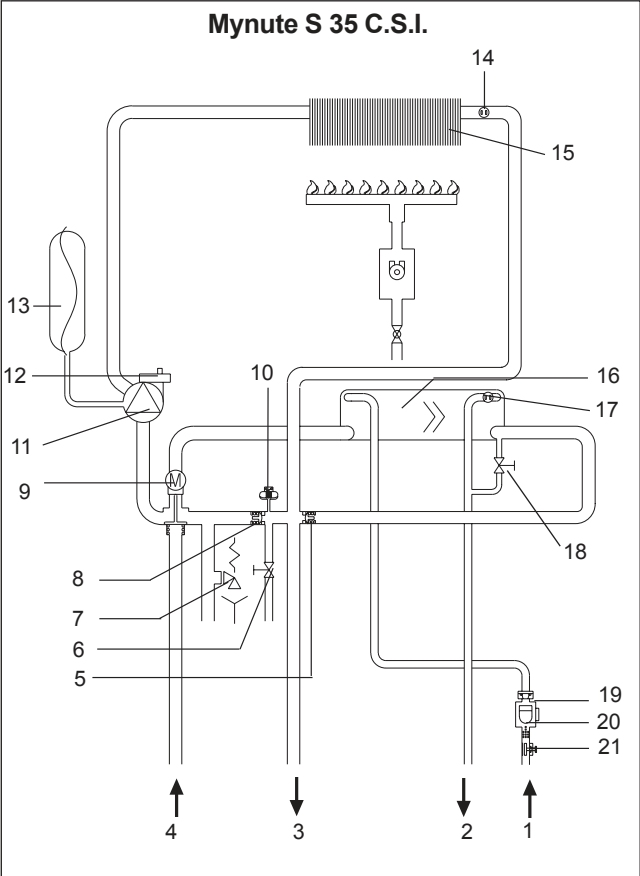
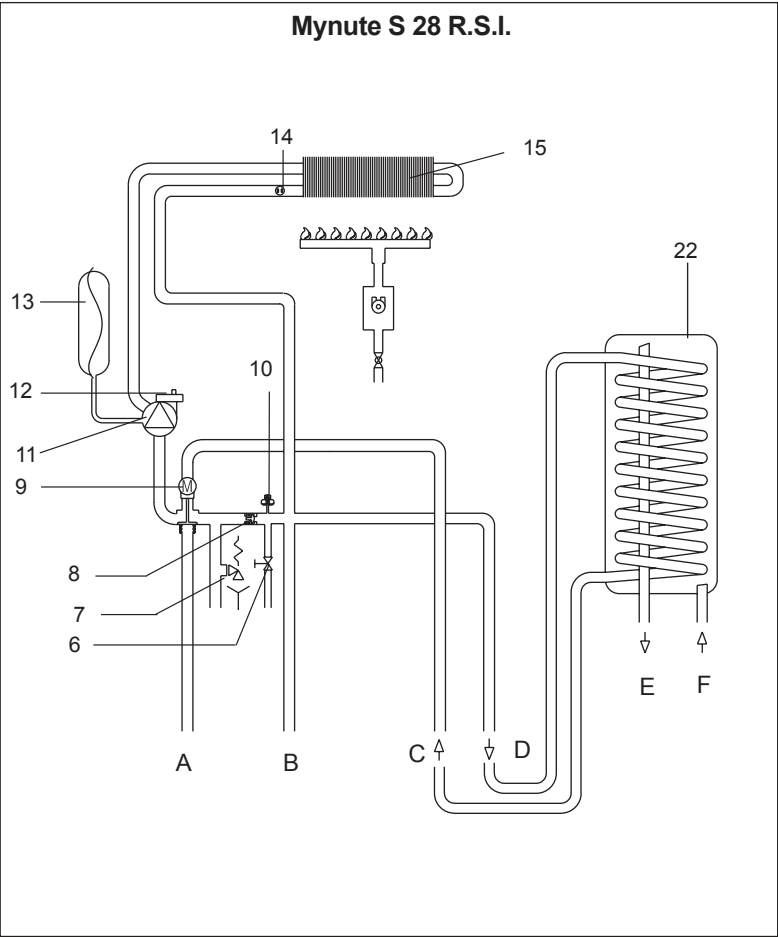
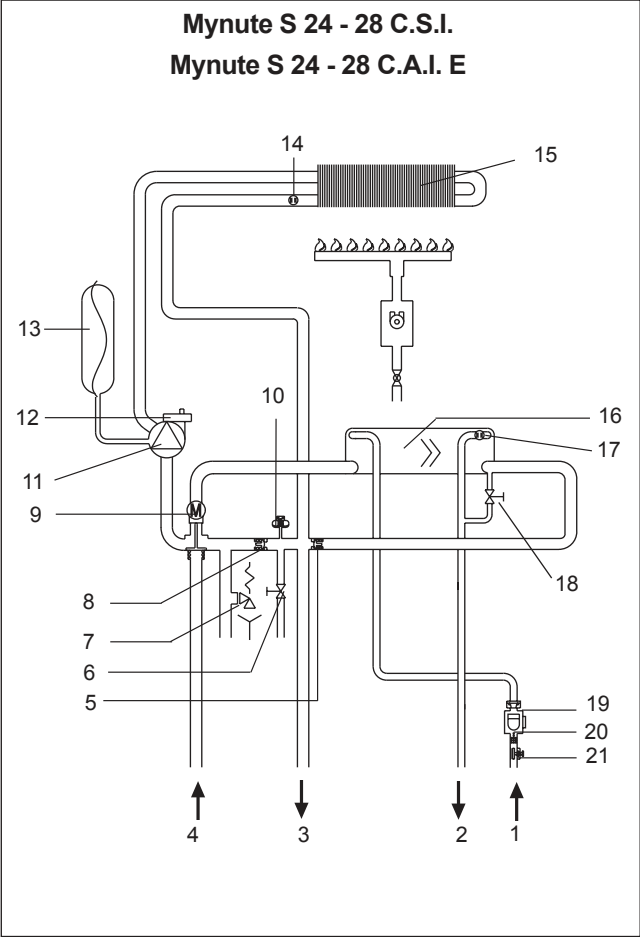
- 1 Robinet umplere
- 2 Robinet golire
- 3 Vană cu 3 căi
- 4 Valvă siguranță
- 5 Sondă NTC circ. menajer
- 6 Pompă circulație
- 7 Supapă suprapresiune
- 8 Arzător
- 9 Electrood aprindere-detectare flacără
- 10 Termostat limitator
- 11 Sondă NTC circ. primar
- 12 Ventilator
- 13 Tub detectare depresiurizare
- 14 Flanșă gaze ardere
- 15 Presostat gaze diferențială
- 16 Vas expansiune
- 17 Schimbător
- 18 Presostat încălzire
- 19 Valvă gaz
- 20 Schimbător circuit de apă caldă menajeră
- 21 Fluxostat

[DE] ELEMENTE FÜR DEN KESSELBETRIEB

- 1 Füllhahn
- 2 Wasserdruckschalter
- 3 Ablasshahn
- 4 3-Wege-Ventil
- 5 Zirkulationspumpe
- 6 Sicherheitsventil
- 7 Entlüftungsventil
- 8 Zündelektrode/Flammenwächter
- 9 Brenner
- 10 Begrenzungs thermostat
- 11 NTC-Primärkreisfühler
- 12 Gebläse
- 13 Abgasdruckschalter
- 14 Abgasflansch
- 15 Unterdruckmessrohr
- 16 Wärmetauscher
- 17 Ausdehnungsgefäß
- 18 NTC-Brauchwarmwasserfühler
- 19 Brauchwarmwassertaucher
- 20 Gasventil
- 21 Strömungswächter
- 22 Abgastermostat

[SL] SESTAVNI DELI KOTLA

- 1 Priključek za polnjenje
- 2 Tlačno stikalo vode
- 3 Priključek za polnjenje
- 4 Tripotni ventil
- 5 Pretočna črpalka
- 6 Varnostni ventil
- 7 Odzračevalni ventil
- 8 Elektroda za nadzor prisotnosti plamena
- 9 Gorilnik
- 10 Termostat najvišje temperature
- 11 Primarno NTC tipalo
- 12 Ventilator
- 13 Tlačno stikalo dimnih plinov
- 14 Prirobnica dimovoda
- 15 Cev za meritev podtlaka
- 16 Toplotni izmenjevalnik
- 17 Raztezna posoda
- 18 NTC tipalo tople sanitarne vode
- 19 Izmenjevalnik tople sanitarne vode
- 20 Ventil plina
- 21 Stikalo pretoka
- 22 Termostat dimnih plinov



[EN] HYDRAULIC CIRCUIT

- A Heating return
- B Heating delivery
- C Water tank return
- D Water tank delivery
- E Hot water outlet
- F Cold water inlet
- 1 DHW input
- 2 DHW output
- 3 Heating delivery
- 4 Heating return
- 5 Non return valve
- 6 Drain tap
- 7 Safety valve
- 8 By-pass
- 9 3-way valve
- 10 Water pressure switch
- 11 Circulator
- 12 Air vent valve
- 13 Expansion tank
- 14 Primary NTC probe
- 15 Heat exchanger
- 16 Domestic hot water exchanger
- 17 Domestic hot water NTC probe
- 18 Filling tap
- 19 Delivery limiter
- 20 Flow switch
- 21 Filter
- 22 Water tank (available on request)

[PT] CIRCUITO HIDRÁULICO

- A Retorno do aquecimento
- B Descarga do aquecimento
- C Retorno do boiler
- D Descarga do boiler
- E Saída da água quente
- F Entrada da água fria
- 1 Entrada DHW
- 2 Saída DHW
- 3 Entrega de aquecimento
- 4 Retorno de aquecimento
- 5 Válvula de não retorno
- 6 Tampa de drenagem
- 7 Válvula de segurança
- 8 By-pass
- 9 Válvula de 3 vias
- 10 Interruptor de pressão da água
- 11 Circulador
- 12 Válvula do respiradouro
- 13 Tanque de expansão
- 14 Sonda NTC primária
- 15 Trocador de calor
- 16 Trocador de água quente doméstica
- 17 Sonda NTC de água quente doméstica
- 18 Válvula de enchimento
- 18 Limitador de envio
- 20 Interruptor de fluxo
- 21 Filtro
- 22 Boiler (que pode ser fornecido a pedido)

[DE] HYDRAULIKKREIS

- A Heizungsrückkehr
- B Heizungsdruckleitung
- C Boilerrückkehr
- D Boilerdruckleitung
- E Ausgang warmes Wasser
- F Eingang kaltes Wasser
- 1 BWW-Eingang
- 2 BWW-Ausgang
- 3 Heizungsvorlauf
- 4 Heizungsrücklauf
- 5 Rückschlagventil
- 6 Ablasshahn
- 7 Sicherheitsventil
- 8 By-pass
- 9 3-Wege-Ventil
- 10 Wasserdruckschalter
- 11 Zirkulationspumpe
- 12 Entlüftungsventil
- 13 Ausdehnungsgefäß
- 14 NTC-Primärkreisfühler
- 15 Wärmetauscher
- 16 Brauchwarmwassertaucher
- 17 NTC-Brauchwarmwasserfühler
- 18 Füllventil
- 19 Zuflussbegrenzer
- 20 Strömungswächter
- 21 Filter
- 22 Kessel (auf Anfrage lieferbar)

[F] CIRCUIT HYDRAULIQUE

- A Retour du chauffage
- B Refoulement du chauffage
- C Retour du réservoir d'eau
- D Refoulement du réservoir d'eau
- E Sortie d'eau chaude
- F Entrée d'eau froide
- 1 Entrée DHW
- 2 Sortie DHW
- 3 Amenée de chaleur
- 4 Retour de chaleur
- 5 Clapet de non-retour
- 6 Robinet de vidange
- 7 Soupape de sécurité
- 8 By-pass
- 9 Soupape à trois voies
- 10 Interrupteur de pression d'eau
- 11 Pompe
- 12 Soupape d'aération
- 13 Vase d'expansion
- 14 Sonde NTC primaire
- 15 Échangeur thermique
- 16 Échangeur d'eau chaude domestique
- 17 Sonde NTC d'eau chaude domestique
- 18 Robinet de remplissage
- 19 Limiteur de distribution
- 20 Interrupteur de flux
- 21 Filtre
- 22 Réservoir d'eau (disponible sur demande)

[HU] HIDRAULIKUS KÖR

- A Fűtés visszatérő ág
- B Fűtés előremenő ág
- C Tároló visszatérő ág
- D Tároló előremenő ág
- E Meleg víz kimenet
- F Hideg víz bemenet
- 1. Használati melegvíz bemenet
- 2. Használati melegvíz kimenet
- 3. Fűtés előremenő
- 4. Fűtés visszatérő
- 5. Visszacsapó szelep
- 6. Leeresztő csap
- 7. Biztonsági szelep
- 8. By-pass
- 9. Háromjártatú szelep
- 10. Víz nyomáskapcsoló
- 11. Keringtető
- 12. Légtelenítő szelep
- 13. Táglási tartály
- 14. Elsődleges NTC szonda
- 15. Hőcserélő
- 16. Használati melegvíz hőcserélő
- 17. Használati melegvíz NTC szonda
- 18. Vízfeltöltő csap
- 19. Előremenő határoló
- 20. Áramláskapcsoló
- 21. Szűrő
- 22. Tároló (külön megrendelésre)

[SL] HIDRAVLICNA VEJA

- A Povratni vod ogrevanja
- B Dvižni vod ogrevanja
- C Voda iz grelnika sanitarne vode
- D Voda v grelnik sanitarne vode
- E Izhod tople vode
- F Vhod hladne vode
- 1 Vstop sanitarne vode
- 2 Izstop sanitarne vode
- 3 Dvižni vod ogrevanja
- 4 Povratni vod ogrevanja
- 5 Enosmerni ventil
- 6 Priključek za praznjenje
- 7 Varnostni ventil
- 8 Obvod
- 9 Tripotni ventil
- 10 Tlačno stikalo vode
- 11 Črpalka
- 12 Odzračevalni ventil
- 13 Raztezna posoda
- 14 Primarno NTC tipalo
- 15 Toplotni izmenjevalnik
- 16 Izmenjevalnik tople sanitarne vode
- 17 NTC tipalo tople sanitarne vode
- 18 Ventil za polnjenje
- 19 Regulator pretoka
- 20 Stikalo pretoka
- 21 Filter
- 22 Grelnik sanitarne vode (dodatna oprema)

[ES] CIRCUITO HIDRÁULICO

- A Retorno calefacción
- B Alimentación calefacción
- C Retorno interacumulador
- D Alimentación interacumulador
- E Salida agua caliente
- F Entrada agua fría
- 1 Entrada DHW
- 2 Salida DHW
- 3 Ida calefacción
- 4 Retorno calefacción
- 5 Válvula antirretorno
- 6 Tapa de drenaje
- 7 Válvula de seguridad
- 8 By-pass
- 9 Válvula de 3 vías
- 10 Regulador de presión de agua
- 11 Circulador
- 12 Válvula de purga de aire
- 13 Tanque de expansión
- 14 Sonda NTC primario
- 15 Intercambiador de calor
- 16 Intercambiador de agua caliente sanitaria
- 17 Sonda NTC de agua caliente sanitaria
- 18 Grifo de llenado
- 19 Limitador de salida
- 20 Interruptor de flujo
- 21 Filtro
- 22 Interacumulador (opcional)

[RO] CIRCUIT HIDRAULIC

- A Retur incalzire
- B Tur incalzire
- C Retur boiler acumulare
- D Tur boiler acumulare
- E Iesire apa calda
- F Intrare apa rece
- 1 Intrare ACM
- 2 Intrare ACM
- 3 Tur încălzire
- 4 Retur încălzire
- 5 Robinet anti-retur
- 6 Robinet de golire
- 7 Supapă de siguranță
- 8 By-pass
- 9 Vană cu 3 căi
- 10 Presostat apă
- 11 Pompă de circulație
- 12 Vană de evacuare aer
- 13 Vas de expansiune
- 14 Sondă NTC încălzire
- 15 Schimbător de căldură
- 16 Schimbător de căldură ACM
- 17 Sondă NTC ACM
- 18 Robinet umplere
- 19 Limitator de debit
- 20 Fluxostat
- 21 Filtu
- 22 Boiler acumulare (disponibil la cerere)

					
N. 00000000000				European Directive 92/42/ EEC: η =	
230 V ~ 50 Hz	W	Qn =			
		Pn =		NOx:	
 Pms =	T= °C			set at: calibrado: engestellt auf: réglage:	
****				dostosowane do:	

					
				0694/00	
N. 00000000000				European Directive 92/42/ EEC: η =	
230 V ~ 50 Hz	W	Qn =		D: l/min	
 Pmw =	bar T= °C	Pn =		NOx:	
 Pms =	bar T= °C			set at: calibrado: engestellt auf: réglage:	
****				dostosowane do:	

[EN] SERIAL NUMBER PLATE

-  Domestic hot water operation
-  Heating function
- Qn** Nominal capacity
- Pn** Nominal power
- IP** Protection level
- Pmw** Domestic hot water maximum pressure
- Pms** Heating maximum pressure
- T** Temperature
- η** Working efficiency
- D** Specific capacity
- NOx** NOx Value class

[F] PLAQUE D'IMMATRICULATION

-  Fonction sanitaire
-  Fonction chauffage
- Qn** Débit thermique
- Pn** Puissance thermique
- IP** Degré de protection
- Pmw** Pression d'exercice maximum sanitaire
- Pms** Pression maximum chauffage
- T** Température
- η** Rendement
- D** Débit spécifique
- NOx** Classe NOx

[ES] TARJETA DE LA MATRÍCULA

-  Función sanitaria
-  Función calefacción
- Qn** Potencia máxima nominal
- Pn** Potencia máxima útil
- IP** Grado de protección
- Pmw** Presión máxima agua sanitaria
- Pms** Presión máxima calefacción
- T** Temperatura
- η** Rendimiento
- D** Caudal específico
- NOx** Clase NOx

[PT] ETIQUETA MATRÍCULA

-  Função sanitária
-  Função aquecimento
- Qn** Capacidade térmica
- Pn** Potência térmica
- IP** Grau de protecção
- Pmw** Máxima pressão de exercício sanitário
- Pms** Máxima pressão de aquecimento
- T** Temperatura
- η** Rendimento
- D** Vazão específica
- NOx** Classe NOx

[HU] REGISZTRÁCIÓS CÍMKE

-  Használati melegvíz funkció
-  Fűtési funkció
- Qn** Hőterhelés
- Pn** Hőteljesítmény
- IP** Védelmi fok
- Pmw** Használati melegvíz maximális nyomása
- Pms** Fűtés maximális nyomása
- T** Hőmérséklet
- η** Hatásfok
- D** Specifikus terhelés
- NOx** NOx osztály

[RO] ETICHETĂ MATRICOLĂ

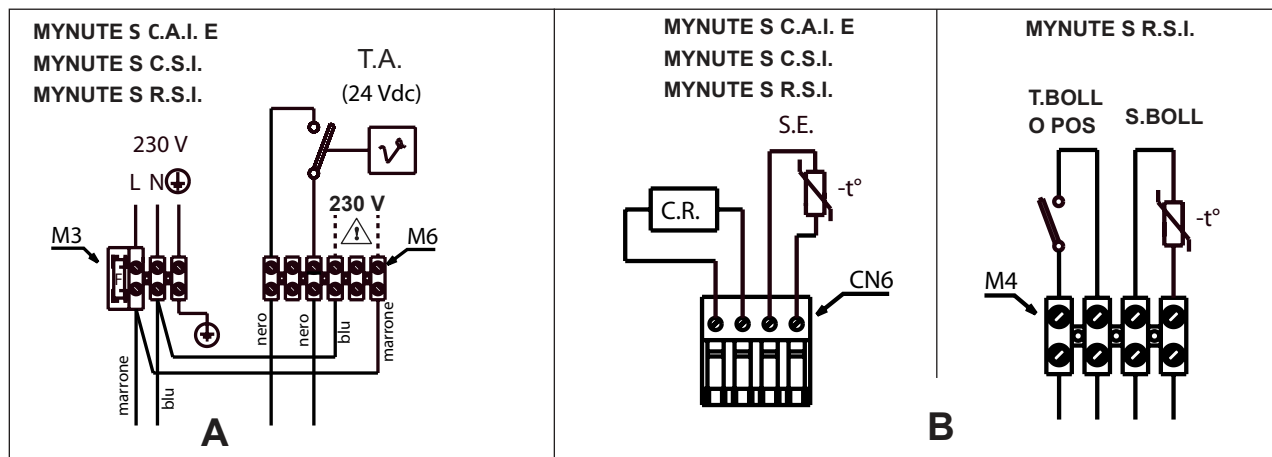
-  Funcție apă menajeră
-  Funcție încălzire
- Qn** Capacitate termică
- Pn** Putere termică
- IP** Grad de protecție
- Pmw** Presiune maximă de funcționare circ. menajer
- Pms** Presiune maximă încălzire
- T** Temperatură
- η** Randament
- D** Capacitate specifică
- NOx** Clasă NOx

[DE] KENNSCHILD

-  Funktion Sanitär
-  Funktion Heizung
- Qn** Wärmedurchsatz
- Pn** Wärmeleistung
- IP** Schutzart
- Pmw** Maximaler Betriebsdruck Sanitär
- Pms** Maximaler Druck Heizung
- T** Temperatur
- η** Leistung
- D** Spezifischer Durchsatz
- NOx** Klasse NOx

[SL] TABLICA SERIJSKE ŠTEVILKE

-  Funkcija sanitarne vode
-  Funkcija ogrevanja
- Qn** Toplotna zmogljivost
- Pn** Toplorna moč
- IP** Stopnja zaščite
- Pmw** Maksimalni delovni tlak sanitarne vode
- Pms** Minimalni tlak ogrevanja
- T** Temperatura
- η** Izkoristek
- D** Specifična zmogljivost
- NOx** Razred NOx



[EN] ROOM THERMOSTAT CONNECTION

A The room thermostat (24Vdc) should be connected as indicated in the diagram

Warning

TA input in safety low voltage.

T.A. Room thermostat

marrone: brown

blu: blue

nero: black

B Low voltage devices should be connected to connector as shown in the figure.

CN6 Remote control (C.R.) - External probe (S.E.)

M4 Boiler thermostat (T.BOLL) or domestic water time programmer (POS) - Storage tank (S.BOLL.)

⚠ In the configuration boiler+external storage tank with probe (CASE C), add a U-bolt on the T.BOLL O POS input of terminal board M4.

[F] RACCORDEMENT THERMOSTAT AMBIANT

A Le thermostat ambiant (24Vdc) doit être raccordé comme indiqué sur le schéma

Attention

Entrée T.A. en basse tension de sécurité.

Thermostat ambiant T.A

marron : Brown

bleu : Blue

noir : Black

B Des dispositifs basse tension doivent être raccordés au connecteur comme indiqué sur la figure.

CN6 Commande à distance (C.R.) - Sonde externe (S.E.)

M4 Thermostat de chaudière (T.BOLL) ou programmeur horaire d'eau sanitaire (POS) - Réservoir de stockage (S.BOLL.)

⚠ En configuration chaudière+réservoir d'accumulation extérieur avec sonde (CAS C), ajouter un cavalier sur l'entrée T.BOLL ou POS du bornier M4.

[ES] CONEXIÓN DE TERMOSTATO AMBIENTE

A El termostato ambiente (24Vdc) debe conectarse al conector como se indica en el diagrama

Atención

Entrada TA en baja tensión de seguridad.

T.A. Termostato ambiente

marrón: brown

azul: blue

negro: black

B Los dispositivos de baja tensión deben conectarse al conector como se muestra en la figura. CN6 Control remoto (C.R.) - Sonda externa (S.E.)

M4 Termostato del quemador (T.BOLL) o programador de tiempo de agua sanitaria (POS) - Tanque de almacenamiento (S.BOLL.)

⚠ En la configuración de la caldera+el tanque de acumulación con sonda (CASE C), agregue un tornillo a U en la entrada T.BOLL O POS de la regleta de conexión M4.

[PT] CONEXÃO DO TERMÓSTATO AMBIENTE

A termóstato ambiente (24 Vcc) deve ser conectado como indicado no diagrama

Advertência

TA entrada em baixa tensão de segurança.

T.A. Termóstato ambiente

marrom: brown

azul: blue

preto: black

B Os dispositivos de baixa tensão devem ser conectados ao conector como mostra a figura. CN6 Controle remoto (C.R.) - Sonda externa (S.E.) M4 Termóstato da caldeira (T.BOLL) ou programador de tempo de água sanitária (POS) - Tanque de armazenamento (S.BOLL.)

⚠ Na configuração caldeira+depósito de armazenamento externo com sonda (CASO C), adicione uma forquilha na entrada T.BOLL O POS da régua de terminais M4.

[HU] KÖRNYEZETI TERMOSZTÁT CSATLAKOZÓ

A Környezeti termosztátot (24Vdc) a diagrammon megadottaknak megfelelően kell csatlakoztatni Figyelem

TA input biztonsági alacsony feszültségen.

T.A. Környezeti termosztát

barna: brown

kék: blue

fekete: black

B Alacsonyfeszültségű eszközöket a csatlakozóra úgy kell rácsatlakoztatni, ahogy az az ábrán látható.

CN6 Távfvezérlés (C.R.) - Külső szonda (S.E.) M4 Kazán termosztát vagy használati víz időprogramozója (POS) - Tároló tartály (S.BOLL.)

⚠ A kazán + külső tároló tartály érzékelővel konfigurációban (C ESET), helyezzen egy U-alakú rögzítőt a T.BOLL O POS inputra az M4 sorkapcsra.

[RO] CUPLAREA TERMOSTATULUI DE AMBIANȚĂ

A Termostatul de ambient (24Vdc) trebuie conectat după cum este indicat în imagine

Atenție

intrare TA în tensiune joasă de siguranță.

T.A. Termostat de ambient marrone: maro

blu: albastru nero: negru

B Dispozitivele de joasă tensiune trebuie conectate după cum este indicat în imagine. CN6 Comandă la distanță (C.R.) - Sondă externă (S.E.)

M4 Termostat boiler (T.BOLL) sau programator orar ACM (POS) - Sondă boiler (S.BOLL.)

⚠ În configurația centrală + boiler extern cu sondă (CAZUL C), adăugați o bridă în formă de U pe intrarea T.BOLL O POS a bornei de conexiuni M4.

[DE] ANSCHLUSS DES RAUMTHERMOSTATS

A Der Raumthermostat (24V DC) muss wie im Diagramm angegeben angeschlossen werden

Achtung

T.A. Raumthermostat-Eingang mit Sicherheitskleinspannung.

T.A. Raumthermostat

braun: brown

blau: blue

schwarz: black

B Niederspannungsgeräte müssen wie in der Abbildung dargestellt angeschlossen werden. CN6 Fernsteuerung (C.R.) - Außenfühler (S.E.) M4 Kesselthermostat (T.BOLL) - Boiler (S.BOLL.)

⚠ In der Konfiguration Kessel+externer Speicher mit Fühler (FALL C) einen Bügelbolzen auf den T.BOLL O POS Eingang der Klemmleiste M4 hinzufügen.

[SL] POVEZAVA S SOBNI TERMOSTATOM

A Sobni termostat (24Vdc) mora biti povezan, kot je prikazano v shemi

Pozor

Vhod ST z varnostno nizko napetostjo.

S.T. Sobni termostat

rjava: brown

modra: blue

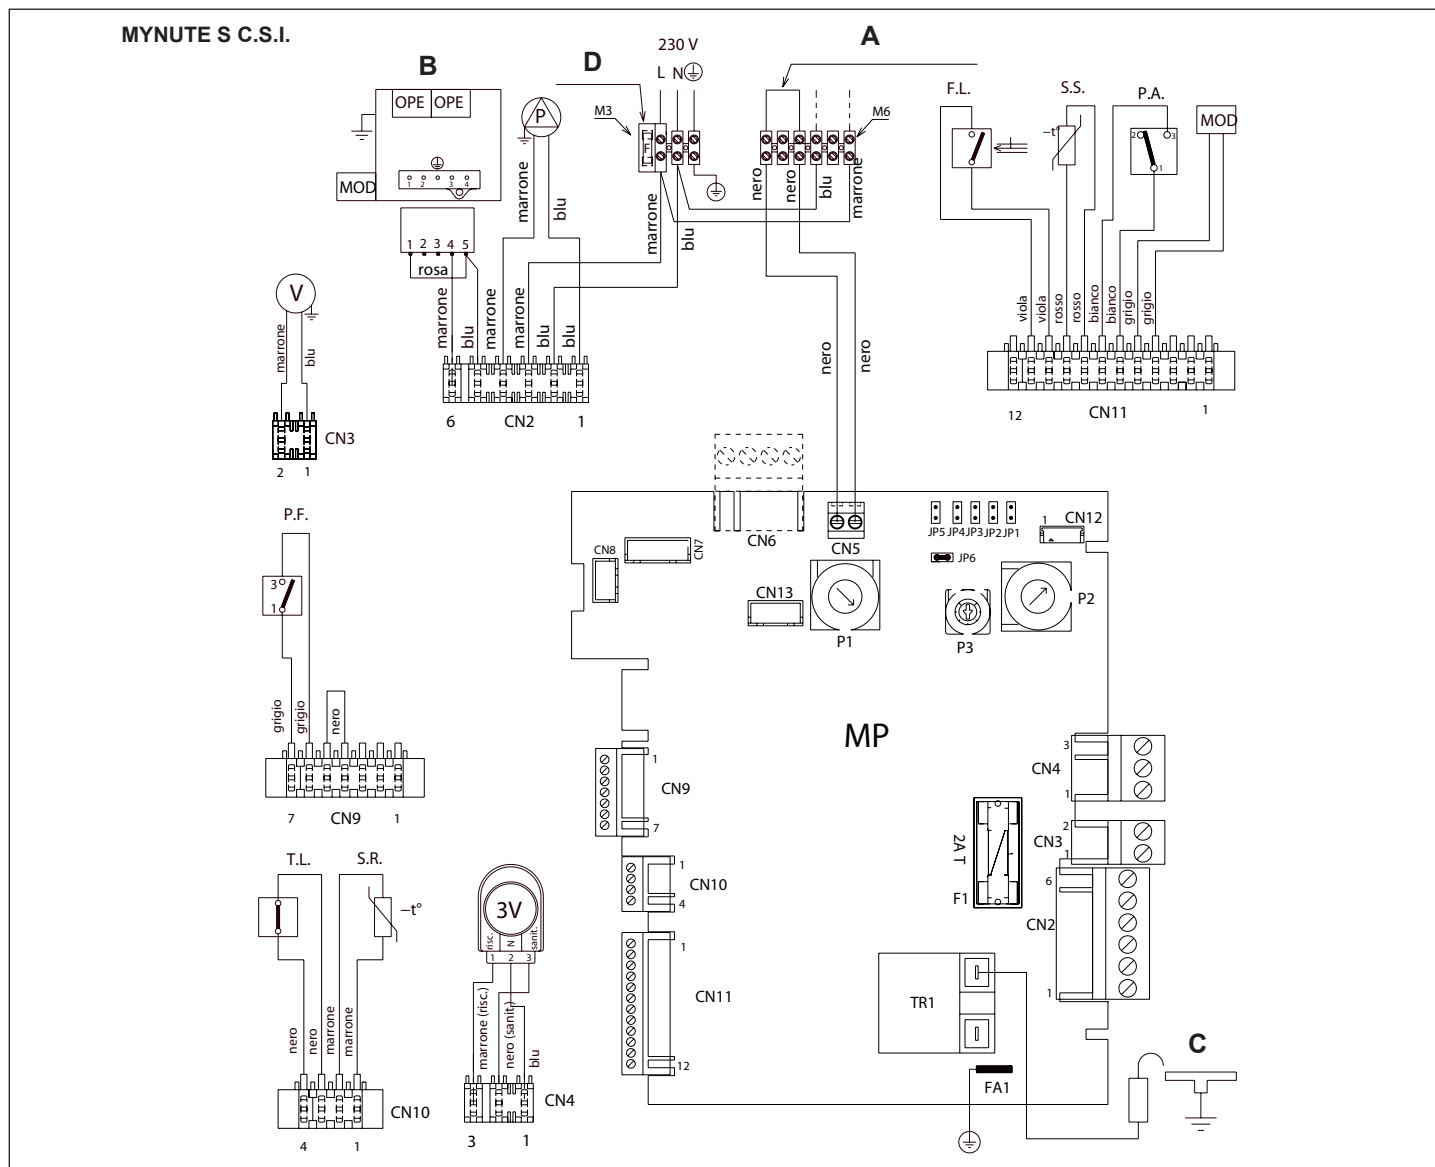
črna: black

B Nizkonapetostne naprave se mora povezati s spojnikom, kot je prikazano na sliki.

CN6 Daljinsko upravljanje (C.R.) - Zunanje tipalo (S.E.)

M4 Termostat kotla (T.BOLL) - Hranilnik (S.BOLL.)

⚠ V kombinaciji s kotlom + zunanjim hranilnikom toplote s tipalom (PRIMER C), na T.BOLL O POS vhoda priključne plošče M4 namestite U streme.

**[EN] "L-N" Polarisation is recommended**

Blu=Blue / Marrone=Brown / Nero=Black / Rosso=Red /
Bianco=White / Viola=Violet / Grigio=Grey /

A = 24V Low voltage room thermostat jumper

B = Gas valve

C = I/D electrode

D = Fuse 3.15A F

MP Control card with digital display and integrated ignition transformer

P1 Potentiometer to select off - summer - winter – reset / temperature heating

P2 Potentiometer to select domestic hot water set point

P3 Potentiometer to select temperature regulation curve

JP1 Bridge to enable knobs for calibration

JP2 Bridge to reset the heating timer and log maximum electrical heating in calibration

JP3 Bridge to select MTN - LPG

JP4 Absolute domestic hot water thermostat selector

JP5 Bridge to select heating operation only (not used)

JP6 Flow switch management enabling

CN1÷CN13 Connectors

F1 Fuse 2A T

F External fuse 3.15A F

M3-M6 Terminal board for external connections

T.A. Room thermostat

E.A./R. Ignition/Detection electrode

TR1 Remote ignition transformer

V Fan

P.F. Flue gas pressure switch

S.R. Primary circuit temperature probe (NTC)

T.L. Limit thermostat

OPE Gas valve operator

P Pompe

3V 3-way servomotor valve

F.L. Domestic hot water flow switch

S.S. Domestic hot water circuit temperature probe (NTC)

PA Heating pressure switch (water)

MOD Modulator

[F] Polarisation "L-N" recommandée

Bleu=Blue / Marron=Brown / Noir=Black / Rouge=Red /
Blanc=White / Violet=Violet / Gris=Grey /

A = Shunt de thermostat ambiant basse tension 24V

B = Vanne de gaz

C = Électrode I/D

D = Fusible 3.15A F

MP Carte de commande avec affichage numérique et transformateur d'allumage intégré

P1 Potentiomètre pour sélectionner off - été - hiver - réinitialisation/chauffage température

P2 Potentiomètre pour sélectionner le point de consigne de l'eau chaude domestique

P3 Potentiomètre pour sélectionner la courbe de régulation de température

JP1 Étrier pour activer les boutons d'étalonnage

JP2 Étrier pour réinitialiser le timer du chauffage et enregistrer le chauffage électrique maximum dans le calibrage

JP3 Étrier pour sélectionner MTN - LPG

JP4 Sélecteur de thermostat d'eau chaude domestique absolu

JP5 Étrier pour sélectionner le fonctionnement du chauffage uniquement (non utilisé)

JP6 Activation de la gestion de l'interrupteur de flux

CN1÷CN13 Connecteurs

F1 Fusible 2A T

F Fusible externe 3.15A F

M3-M6 Carte à bornes pour connexions extérieures

T.A. Thermostat ambiant

E.A./R. Électrode d'allumage/détection

TR1 Transformateur d'allumage distant

V Ventilateur

P.F. Interrupteur de pression de gaz de cheminée

S.R. Sonde de température de circuit primaire (NTC)

T.L. Thermostat Limite

OPE Opérateur de soupape de gaz

P Pompe

3V Soupape servomoteur à trois voies

F.L. Interrupteur de flux d'eau chaude domestique

S.S. Sonde de température de circuit d'eau chaude domestique (NTC)

PA Interrupteur de pression de chauffage (eau)

MOD Modulateur

[ES] "L-N" Polarización recomendada

Blu=Azul / Marrone=Marrón / Nero=Negro / Rosso=Rojo /
Bianco=Blanco / Viola=Violeta / Grigio=Gris /

A = Puente de termostato ambiental de tensión baja de 24V

B = Válvula de gas

C = Electrodo I/D

D = Fusible 3.15A F

MP Placa de control con pantalla digital y transformador de encendido integrado

P1 Potenciometro para seleccionar OFF - verano - invierno – reiniciar / temperatura calefacción

P2 Potenciometro para seleccionar el punto de ajuste del agua caliente sanitaria

P3 Potenciometro para seleccionar la curva de regulación de la temperatura

JP1 Puente para habilitar los botones para calibración

JP2 Puente para reiniciar el sincronizador de calefacción y guardar los datos de calibración de la calefacción eléctrica máxima

JP3 Puente para seleccionar MTN - LPG

JP4 Selector de termostato de agua caliente sanitaria absoluto

JP5 Puente para seleccionar sólo el funcionamiento de la calefacción (no utilizado)

JP6 Habilitación de gestión del interruptor de flujo

CN1÷CN13 Conectores

F1 Fusible 2A T

F Fusible externo 3.15A F

M3-M6 Tablero de terminales para conexiones externas

T.A. Termostato ambiente

E.A./R. Encendido/Detección electrodo

TR1 Transformador de encendido remoto

V Ventilador

P.F. Regulador de presión de gas

S.R. Sonde de temperatura de circuito primario (NTC)

T.L. Termostato límite

OPE Operador de válvula de gas

P Bomba

3V Válvula de 3 vías con servomotor

F.L. Interruptor de flujo de agua caliente sanitaria

S.S. Sonda de temperatura del circuito de agua caliente sanitaria (NTC)

PA Regulador de presión (agua caliente)

MOD Modulador

[PT] A polarização “L-N” é recomendada

Azul=Blue / Marrom=Brown / Preto=Black / Vermelho=Red / Branco=White / Violeta=Violet / Cinza=Grey /
 A = 24 V Jumper do termóstato ambiente de baixa tensão
 B = Válvula de gás
 C = Eléctrodo I/D
 D = Fusível 3,15 A F
 MP Cartão de controlo com ecrã digital e transformador integrado de ignição
 P1 Potenciômetro para seleccionar desligado - verão - inverno - reset / temperatura de aquecimento
 P2 Potenciômetro para seleccionar o ponto de ajuste da água quente doméstica
 P3 Potenciômetro para seleccionar a curva de regulação da temperatura
 JP1 Ponte para habilitar os manipuladores para calibração
 JP2 Ponte para zerar o temporizador de aquecimento e gravar o aquecimento eléctrico máximo na calibragem
 JP3 Ponte para seleccionar MTN - LPG
 JP4 Selector absoluto do termóstato da água quente doméstica
 JP5 Ponte para seleccionar somente operação de aquecimento (não utilizada)
 JP6 Habilitação do gerenciamento do interruptor de fluxo CN1÷CN13 Conectores
 F1 Fusível 2 A T
 F Fusível externo 3,15 A F
 M3-M6 Quadro de terminais para conexões externas
 T.A. Termóstato ambiente
 E.A./R. Eléctrodo de detecção/ignição
 TR1 Transformador de ignição remoto
 V Ventilador
 P.F. Interruptor de pressão dos gases da chaminé
 S.R. Sonda de temperatura do circuito primário (NTC)
 T.L. Termóstato de limite
 OPE Operador da válvula de gás
 P Bomba
 3V Válvula de 3 vias do servo-motor
 F.L. Interruptor de fluxo da água quente doméstica
 S.S. Sonda de temperatura do circuito de água quente doméstica (NTC)
 PA Interruptor de pressão de aquecimento (água)
 MOD Modulador

[HU] “L-N” Polarizálás ajánlott

Blu=Kék / Marrone=Barna / Nero=Fekete / Rosso=Vörös / Bianco=Fehér / Viola=Lila / Grigio=Szürke /
 A = 24V Alacsony feszültségű környezeti termosztát jumper
 B = Gázszelep
 C = I/D elektróda
 D = Biztosíték 3.15A F
 MP Vezérlőkártya digitális kijelzővel és integrált gyújtás transzformátor
 P1 Potméter az off - nyár - tél - reset / fűtési hőmérséklet kiválasztásához
 P2 Potméter a használati melegvíz beállított érték kiválasztásához
 P3 Potméter a hőmérséklet szabályozási görbe kiválasztásához
 JP1 Híd, amivel beiktathatók a gombok a kalibráláshoz
 JP2 A kalibrálási maximális elektromos fűtés log és fűtési időzítőt reszetelő híd
 JP3 MTN-LPG kiválasztó híd
 JP4 Abszolút használati melegvíz termosztát-szabályozó
 JP5 Híd, amivel kiválasztható csak a fűtési művelet (nincs használatban)
 JP6 Áramláskapcsoló kezelés beiktatása
 CN1÷CN13 Csatlakozók
 F1 Biztosíték 2A T
 F Külső Biztosíték 3.15A F
 M3-M6 Kapocslemez a külső csatlakozásokhoz
 T.A. Szobatermosztát
 E.A./R. Gyújtó/Lángőrelektroda
 TR1 Távoli gyújtó átalakító
 V Ventilátor
 P.F. Füstgáz nyomáskapcsoló
 S.R. Elsődleges kör hőmérséklet érzékelő (NTC)
 T.L. Határoló termosztát
 OPE Gázszelep operátor
 P Szivattyú
 3V 3-járatú szervomotor szelep
 F.L. Használati melegvíz áramláskapcsoló
 S.S. Használati melegvíz kör hőmérséklet szonda (NTC)
 PA Fűtési nyomáskapcsoló (víz)
 MOD Modulátor

[RO] Se recomandă polarizarea "L-N"

Bleumarín=Blu / Maron=Brown / Negru=Black / Roşu=Red / Alb=White / Violet=Violet / Gri=Grey /
 B = Valvă gaz
 A = Punte termostat ambianță joasă tensiune 24V
 C = Electrod A/R
 D = Rezistență 3.15A F
 MP Placă de comandă cu afișaj digital și transformator de aprindere integrat
 P1 Potențometru selectare curbe termoreglare / temperatură încălzire
 P2 Potențometru selectare set point circuit menajer
 P3 Potențometru selectare curbe termoreglare
 JP1 Punte abilitare manete/bușoane ptr calibrare
 JP2 Punte resetare timer încălzire și memorizare valoarea maximă electrică la încălzire în momentul calibrării
 JP3 Punte selectare MTN - GPL
 JP4 Selector termostate circuit menajer absolute
 JP5 Punte selectare funcționare numai încălzire (neutilizată)
 JP6 Abilitare gestiune fluxostat (neutilizată)
 CN1÷CN13 Conectori ptr conectare
 F1 Rezistență 2A T
 F Rezistență externă 3.15A F
 M3 Cutie borne ptr conexiuni externe
 T.A. Termostat ambianță/climă
 E.A./R. Electrode aprindere / detectare
 TR1 Transformator aprindere telecomandat
 V Ventilator
 P.F. Presostat gaze
 S.R. Sondă (NTC) temperatură circuit primar
 T.L. Termostat limitator
 OPE Operator valvă gaz
 P Pompă
 3V Servomotor vană cu 3 căi
 F.L. Fluxostat circ. menajer
 S.S. Sondă (NTC) temperatură circuit menajer
 PA Presostat încălzire (apă)
 MOD Modulador

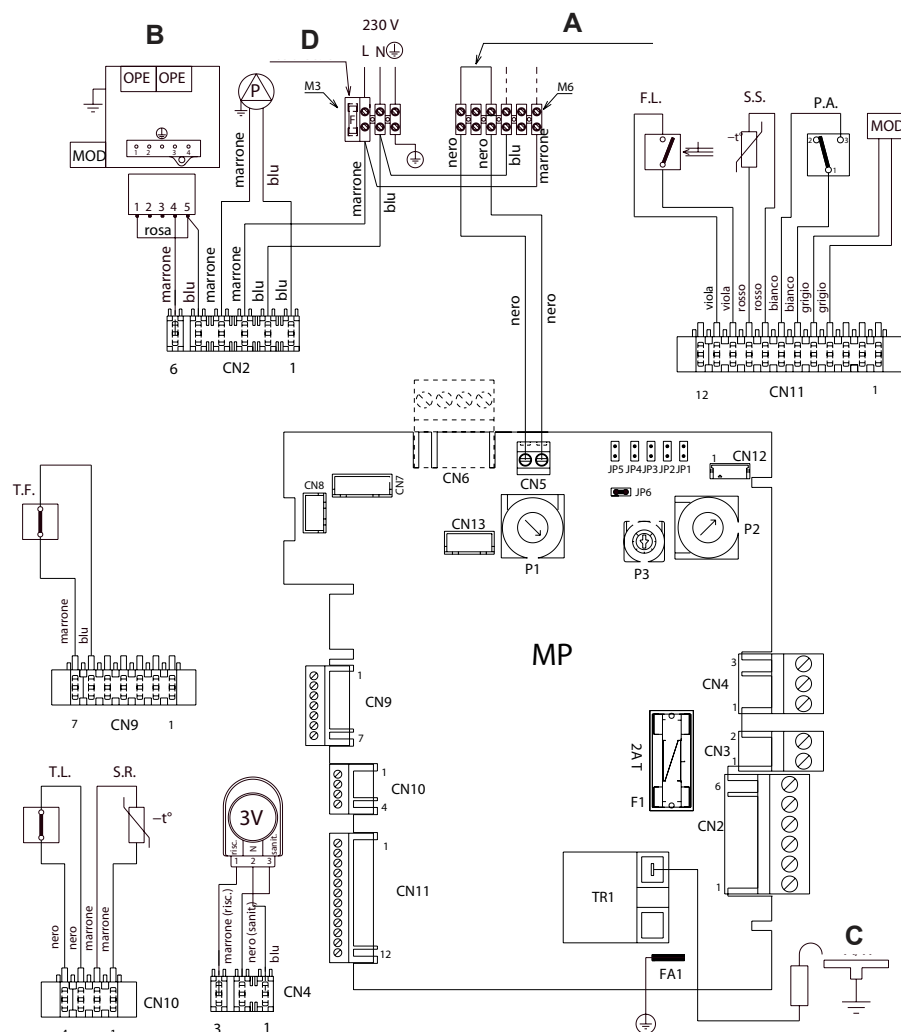
[DE] “L-N” Polarisierung wird empfohlen

Blu=Blau / Marrone=Braun / Nero=Schwarz / Rosso=Rot / Bianco=Weiß / Viola=Violett / Grigio=Grau /
 A = 24V Niederspannung Raumthermostat-Drahtbrücke
 B = Gasventil
 C = Zündelektrode/Flammenüberwachung
 D = Schmelzsicherung 3.15A F
 MP Steuerkarte mit Digitalanzeige und integriertem Zündtransformator
 P1 Potentiometer für Auswahl Aus - Sommer - Winter – Rückstellung / Heizungstemperatur
 P2 Potentiometer für die Auswahl des BWW-Sollwerts
 P3 Potentiometer für die Auswahl der Heizkurve
 JP1 Drahtbrücke für die Aktivierung der Stellknöpfe
 JP2 Drahtbrücke für die Rückstellung der Heizzeitschaltuhr und Log-Datenerfassung maximale Elektroheizung bei der Einstellung
 JP3 Drahtbrücke für die Auswahl MTN - FLÜSSIGGAS
 JP4 Absoluter Wahlschalter für BWW-Thermostat
 JP5 Drahtbrücke für Auswahl nur Heizbetrieb (nicht verwendet)
 JP6 Strömungswächter für Betriebsaktivierung
 CN1÷CN13 Verbinder
 F1 Schmelzsicherung 2A T
 F Externe Sicherung 3.15A F
 M3-M6 Klemmleiste für externe Anschlüsse
 T.A. Raumthermostat
 E.A./R. Zündelektrode/Flammenüberwachung
 TR1 Fernzündtransformator
 V Gebläse
 P.F. Abgasdruckschalter
 S.R. Primärkreistemperaturfühler (NTC)
 T.L. Begrenzungsthermostat
 OPE Gasstellglied
 P Pumpe
 3V 3-Wege Stellantriebsventil
 F.L. BWW-Strömungswächter
 S.S. BWW-Kreis Temperaturfühler (NTC)
 PA Heizwasserdruckschalter
 MOD Modulador

[SL] Priporočljiva je “L-N” polarizacija

Blu=Modra / Marrone=Rjava / Nero=Črna / Rosso=Rdeča / Bianco=Bela / Viola=Vijolična / Grigio=Siva /
 A = 24V Mostiček nizkonapetostnega sobnega termostata
 B = Ventil plina
 C = I/D elektroda
 D = Varovalka 3.15A F
 MP Krmilna kartica z digitalnim prikazovalnikom in integriranim transformatorjem vžiga
 P1 Potenciometer za izbiro izklop - poletje - zima – reset / temperatura ogrevanja
 P2 Potenciometer za izbiro nastavitve temperature sanitarne vode
 P3 Potenciometer za izbiro krivulje temperaturne regulacije
 JP1 Mostiček za vklop gumbov kalibriranja
 JP2 Mostiček za ponastavitev časovnika ogrevanja in vklop maksimalnega električnega segrevanja med kalibriranjem
 JP3 Mostiček za izbiro MTN - LPG
 JP4 Izbiro stikalo absolutne tople sanitarne vode
 JP5 Mostiček za izbiro delovanja samo ogrevanja (ni v uporabi)
 JP6 Vklp upravljanja stikala pretoka
 CN1÷CN13 Spojniki
 F1 Varovalka 2A T
 F Zunanja varovalka 3.15A F
 M3-M6 Prikluček za zunanje povezave
 S.T. Sobni termostat
 E.A./R. Elektroda za vžig/nadzor plamena
 TR1 Transformator za vžig
 V Ventilator
 P.F. Tlačno stikalo pretoka plina
 S.R. Tipalo temperature primarne veje (NTC)
 T.L. Termostat najvišje temperature
 OPE Krmilnik plinskega ventila
 P Črpalka
 3V Servomotor tripotnega ventila
 F.L. Pretočno stikalo tople sanitarne vode
 S.S. Tipalo temperature tople sanitarne vode (NTC)
 PA Tlačni ventil ogrevanja (vode)
 MOD Modulador

MYNUTE S C.A.I. E

**[EN] "L-N" Polarisation is recommended**

Blu=Blue / Marrone=Brown / Nero=Black / Rosso=Red/
Bianco=White / Viola=Violet / Grigio=Grey /

A = 24V Low voltage room thermostat jumper

B = Gas valve

C = I/D electrode

D = Fuse 3.15A F

MP Control card with digital display and integrated ignition transformer

P1 Potentiometer to select off - summer - winter – reset / temperature heating

P2 Potentiometer to select domestic hot water set point

P3 Potentiometer to select temperature regulation curve

JP1 Bridge to enable knobs for calibration

JP2 Bridge to reset the heating timer and log maximum electrical heating in calibration

JP3 Bridge to select MTN - LPG

JP4 Absolute domestic hot water thermostat selector

JP5 Bridge to select heating operation only (not used)

JP6 Flow switch management enabling

F1 Fuse 2A T

F External fuse 3.15A F

M3-M6 Terminal board for external connections

T.A. Room thermostat

E.A./R. Ignition/Detection electrode

TR1 Remote ignition transformer

T.F. Fumes thermostat

S.R. Primary circuit temperature probe (NTC)

T.L. Limit thermostat

OPE Gas valve operator

P Pump

3V 3-way servomotor valve

F.L. Domestic hot water flow switch

S.S. Domestic hot water circuit temperature probe (NTC)

PA Heating pressure switch (water)

MOD Modulator

CN1÷CN13 Connectors

[F] Polarisation "L-N" recommandée

Bleu=Blue / Marron=Brown / Noir=Black / Rosso=Red /
Rouge=Red / Blanc=White / Violet=Violet /
Gris=Grey /

A = Shunt de thermostat ambiant basse tension 24V

B = Vanne de gaz

C = Électrode I/D

D = Fusible 3.15A F

MP Carte de commande MP avec affichage numérique et transformateur d'allumage intégré

P1 Potentiomètre pour sélectionner off - été - hiver -

réinitialisation/chauffage température

P2 Potentiomètre pour sélectionner le point de

consigne de l'eau chaude domestique

P3 Potentiomètre pour sélectionner la courbe de

régulation de température

JP1 Étrier pour activer les boutons d'étalonnage

JP2 Étrier pour réinitialiser le timer du chauffage et

enregistrer le chauffage électrique maximum dans

le calibrage

JP3 Étrier pour sélectionner MTN - LPG

JP4 Sélecteur de thermostat d'eau chaude domestique

absolu

JP5 Étrier pour sélectionner le fonctionnement du

chauffage uniquement (non utilisé)

JP6 Activation de la gestion de l'interrupteur de flux

F1 Fusible 2A T

F Fusible externe 3.15A F

M3-M6 Carte à bornes pour connexions extérieures

T.A. Thermostat ambiant

E.A./R. Électrode d'allumage/détection

TR1 Transformateur d'allumage distant

T.F. Thermostat de fumées

S.R. Sonde de température de circuit primaire (NTC)

T.L. Thermostat Limite

OPE Opérateur de soupape de gaz

P Pompe

3V Soupape servomoteur à trois voies

F.L. Interrupteur de flux d'eau chaude domestique

S.S. Sonde de température de circuit d'eau chaude

domestique (NTC)

PA Interrupteur de pression de chauffage (eau)

MOD Modulateur

CN1÷CN13 Connecteurs

[ES] "L-N" Polarización recomendada

Blu=Azul / Marrone=Marrón / Nero=Negro /
Rosso=Rojo / Bianco=Blanco / Viola=Violeta /
Grigio=Gris /

A = Puente de termostato ambiente de tensión baja de 24V

B = Válvula de gas

C = Electrodo I/D

D = Fusible 3.15A F

MP Placa de control con pantalla digital y transformador de encendido integrado

P1 Potenciómetro para seleccionar OFF - verano -

invierno – reiniciar / temperatura calefacción

P2 Potenciómetro para seleccionar el punto de ajuste del agua caliente sanitaria

P3 Potenciómetro para seleccionar la curva de regulación de la temperatura

JP1 Puente para habilitar los botones para calibración

JP2 Puente para reiniciar el sincronizador de calefacción y cumplir con la calibración de la calefacción eléctrica máxima

JP3 Puente para seleccionar MTN - LPG

JP4 Selector de termostato de agua caliente sanitario absoluto

JP5 Puente para seleccionar sólo el funcionamiento de la calefacción (no utilizado)

JP6 Habilitación de gestión del interruptor de flujo

F1 Fusible 2A T

F Fusible externo 3.15A F

M3-M6 Tablero de terminales para conexiones externas

T.A. Termostato ambiente

E.A./R. Encendido/Detección electrodo

TR1 Transformador de encendido remoto

T.F. Termostato de humos

S.R. Sonda de temperatura de circuito primario (NTC)

T.L. Termostato límite

OPE Operador de válvula de gas

P Bomba

3V Válvula de 3 vías con servomotor

F.L. Interruptor de flujo de agua caliente sanitaria

S.S. Sonda de temperatura del circuito de agua caliente sanitaria (NTC)

PA Regulador de presión (agua caliente)

MOD Modulador

CN1÷CN13 Conectores

[PT] A polarização "L-N" é recomendada

Azul=Blue / Marrom=Brown / Preto=Black / Vermelho=Red / Branco=White / Violeta=Violet / Cinza=Grey /

A = 24 V Jumper do termostato ambiente de baixa tensão

B = Válvula de gás

C = Eléctrodo I/D

D = Fusível 3,15 A F

MP Cartão de controlo com ecrã digital e transformador integrado de ignição

P1 Potenciômetro para seleccionar desligado - verão - inverno - reset / temperatura de aquecimento

P2 Potenciômetro para seleccionar o ponto de ajuste da água quente doméstica

P3 Potenciômetro para seleccionar a curva de regulação da temperatura

JP1 Ponte para habilitar os manipuladores para calibração

JP2 Ponte para zerar o temporizador de aquecimento e gravar o aquecimento eléctrico máximo na calibragem

JP3 Ponte para seleccionar MTN - LPG

JP4 Selector absoluto do termostato da água quente doméstica

JP5 Ponte para seleccionar somente operação de aquecimento (não utilizada)

JP6 Habilitação do gerenciamento do interruptor de fluxo

F1 Fusível 2 A T

F Fusível externo 3,15 A F

M3-M6 Quadro de terminais para conexões externas

T.A. Termostato ambiente

E.A./R. Eléctrodo de detecção/ignição

TR1 Transformador de ignição remoto

T.F. Termostato de fumos

S.R. Sonda de temperatura do circuito primário (NTC)

T.L. Termostato de limite

OPE Operador da válvula de gás

P Bomba

3V Válvula de 3 vias do servo-motor

F.L. Interruptor de fluxo da água quente doméstica

S.S. Sonda de temperatura do circuito de água quente doméstica (NTC)

PA Interruptor de pressão de aquecimento (água)

MOD Modulador

CN1÷CN13 Conectores

[HU] "L-N" Polarizálás ajánlott

Blu=Kék / Marrone=Barna / Nero=Fekete / Rosso=Vörös / Bianco=Fehér / Viola=Lila / Grigio=Szürke /

A = 24V Alacsony feszültségű szobatermosztát át-hidalás

B = Gázszелеp

C = I/D elektróda

D = Biztosíték 3.15A F

MP Vezérlőkártya digitális kijelzővel és integrált gyújtás átalakítóval

P1 Potméter az off - nyár - tél - reset / fűtési hőmérséklet kiválasztásához

P2 Potméter a használati melegvíz beállított érték kiválasztásához

P3 Potméter a hőmérsékletszabályozási görbe kiválasztásához

JP1 Híd, amivel beiktathatóak a gombok a kalibrálásához

JP2 A kalibrálási maximális elektromos fűtés log és fűtési időzítőt resetelő híd

JP3 MTN-LPG kiválasztó híd

JP4 Abszolút használati melegvíz termosztát-szabályozó

JP5 Híd, amivel kiválasztható csak a fűtési művelet (nincs használatban)

JP6 Áramláskapcsoló kezelés beiktatása

F1 Biztosíték 2A T

F Külső Biztosíték 3.15A F

M3-M6 Szorító csavar a külső csatlakozásokhoz

T.A. Szobatermosztát

E.A./R. Gyújtó/Lángóelektróda

TR1 Távoli gyújtás transzformátor

T.F. Füstgáz termosztát

S.R. Elsődleges kör hőmérséklet érzékelő (NTC)

T.L. Határoló termosztát

OPE Gázszелеp operátor

P Szivattyú

3V 3-járatú szervomotor szelep

F.L. Használati melegvíz áramláskapcsoló

S.S. Használati melegvíz kör hőmérséklet szonda (NTC)

PA Fűtési nyomáskapcsoló (víz)

MOD Modulátor

CN1÷CN13 Csatlakozók

[RO] Se recomandă polarizarea "L-N"

Albastru=Blue / Maro=Brown / Negru=Black / Roșu=Red / Alb=White / Mov=Violet / Gri=Grey / Portocaliu=Orange

A = Jumper termostat de ambient de joasă tensiune 24V

B = Vană gaz

C = Electrode I/D

D = Siguranță fuzibilă 3.15A F

MP Placă de comandă

P1 Potențometru selectare off - vară - iarnă - reset / temperatură încălzire

P2 Potențometru selectare punct setat circuit ACM

P3 Potențometru selectare curbe termoreglare

JP1 Jumper abilitare butoane pentru calibrare

JP2 Jumper resetare timer încălzire și memorizare valoarea maximă electrică la încălzire în momentul calibrării

JP3 Jumper selectare MTN - GPL

JP4 Selector termostat absolut circuit ACM

JP5 Jumper selectare funcționare doar încălzire cu pre-dispoziție pentru boiler extern cu termostat sau sondă

JP6 neutilizat

F1 Siguranță fuzibilă 2A T

F Siguranță fuzibilă externă 3.15A F

M3 Bornă pentru conexiuni externe: 230V

M4 Morsettiera per collegamenti esterni: sonda bollitore/termostato bollitore o programmatore orario sanitario (POS)

T.A. Termostat de ambient

E.A./R. Electrode aprindere / relevare flacără

TR1 Transformator de aprindere la distanță

V Ventilator

P.F. Presostat fum

S.R. Sondă (NTC) temperatură circuit principal

T.L. Termostat limită

OPE Operator vană gaz

P Pompă

3V Servomotor vană cu 3 căi

T.BOLL. Termostat boiler

POS programator orar ACM

S.BOLL. Sondă boiler

PA Presostat încălzire (apă)

MOD Modulador

CN1÷CN13 Conectori

[DE] "L-N" Polarisierung wird empfohlen

Blu=Blau / Marrone=Braun / Nero=Schwarz / Rosso=Rot / Bianco=Weiß / Viola=Violett / Grigio=Grau /

A = 24V Niederspannung Raumthermostat-Drahtbrücke

B = Gasventil

C = Zündelektrode/Flammenüberwachung

D = Schmelzsicherung 3.15A F

MP Steuerkarte mit Digitalanzeige und integriertem Zündtransformator

P1 Potentiometer für Auswahl Aus - Sommer - Winter - Rückstellung / Heizungs temperatur

P2 Potentiometer für die Auswahl des BWW-Sollwerts

P3 Potentiometer für die Auswahl der Heizkurve

JP1 Drahtbrücke für die Aktivierung der Stellknöpfe

JP2 Drahtbrücke für die Rückstellung der Heizzeitschaltuhr und Log maximale Elektroheizung bei der Einstellung

JP3 Drahtbrücke für die Auswahl MTN - FLÜSSIG-GAS

JP4 Absoluter Wahlschalter für BWW-Thermostat

JP5 Drahtbrücke für Auswahl nur Heizbetrieb (nicht verwendet)

JP6 Strömungswächter für Betriebsaktivierung

F1 Schmelzsicherung 2A T

F Externe Sicherung 3.15A F

M3-M6 Klemmleiste für externe Anschlüsse

T.A. Raumthermostat

E.A./R. Zündelektrode/Flammenüberwachung

TR1 Fernzündtransformator

T.F. Abgasthermostat

S.R. Primärkreistemperaturfühler (NTC)

T.L. Begrenzungsthermostat

OPE Gasstellglied

P Pumpe

3V 3-Wege Stellantriebsventil

F.L. BWW-Strömungswächter

S.S. BWW-Kreis Temperaturfühler (NTC)

PA Heizwasserdruckschalter

MOD Modulador

CN1÷CN13 Verbinder

[SL] Priporočljiva je "L-N" polarizacija

Blu=Modra / Marrone=Rjava / Nero=Črna / Rosso=Rdeča / Bianco=Bela / Viola=Vijolična / Grigio=Siva /

A = 24V Mostiček nizkonapetostnega sobnega termostata

B = Ventil plina

C = I/D elektroda

D = Varovalka 3.15A F

MP Krmilna kartica z digitalnim prikazovalnikom in integriranim transformatorjem vžiga

P1 Potenciometer za izbiro izklop - poletje - zima - reset / temperatura ogrevanja

P2 Potenciometer za izbiro nastavitve temperature sanitarne vode

P3 Potenciometer za izbiro krivulje temperaturne regulacije

JP1 Mostiček za vklop gumbov kalibriranja

JP2 Mostiček za ponastavitev časovnika ogrevanja in vklop maksimalnega električnega segrevanja med kalibriranjem

JP3 Mostiček za izbiro MTN - LPG

JP4 Izbirno stikalo absolutne tople sanitarne vode

JP5 Mostiček za izbiro delovanja samo ogrevanja (ni v uporabi)

JP6 Vkllop upravljanja stikala pretoka

F1 Varovalka 2A T

F Zunanja varovalka 3.15A F

M3-M6 Priključek za zunanje povezave

S.T. Sobni termostat

E.A./R. Elektroda za vžig/nadzor plamena

TR1 Transformator za vžig

T.F. Termostat dimnih plinov

S.R. Tipalo temperature primarne veje (NTC)

T.L. Termostat najvišje temperature

OPE Krmilnik plinskega ventila

P Črpalka

3V Servomotor tripotnega ventila

F.L. Pretočno stikalo tople sanitarne vode

S.S. Tipalo temperature tople sanitarne vode (NTC)

PA Tlačni ventil ogrevanja (vode)

MOD Modulador

CN1÷CN13 Spojniki

[PT] “L-N” - A polarização “L-N” é recomendada

Azul=Blue / Marrom=Brown / Preto=Black / Vermelho=Red/ Branco=White / Violeta=Violet / Cinza=Grey / Alaranjado=Orange
 A = 24 V Jumper do termostato ambiente de baixa tensão
 B = Válvula de gás
 C = Eléctrodo I/D
 D = Fusível 3,15 A F
 MP Cartão de controlo com ecrã digital e transformador integrado de ignição
 P1 Potenciômetro para seleccionar desligado - verão - inverno - reset / temperatura de aquecimento
 P2 Potenciômetro para seleccionar o ponto de ajuste da água quente doméstica
 P3 Potenciômetro para seleccionar a curva de regulação da temperatura
 JP1 Ponte para habilitar os manípulos para calibração
 JP2 Ponte para zerar o temporizador de aquecimento e gravar o aquecimento eléctrico máximo na calibragem
 JP3 Ponte para seleccionar MTN - LPG
 JP4 Selector absoluto do termostato da água quente doméstica
 JP5 Ponte para selecção de função de somente aquecimento com provisão para caldeira externa com termostato ou sonda
 JP6 não utilizado
 F1 Fusível 2 A T
 F Fusível externo 3,15 A F
 M3-M4-M6 Quadro de terminais para conexões externas
 T.A. Termostato ambiente
 E.A./R. Eléctrodo de detecção/ignição
 TR1 Transformador de ignição remoto
 V Ventilador
 P.F. Interruptor de pressão dos gases da chaminé
 S.R. Sonda de temperatura do circuito primário (NTC)
 T.L. Termostato de limite
 OPE Operador da válvula de gás
 P Bomba
 3V Válvula de 3 vias do servo-motor
 T.BOLL Termostato do tanque de água
 S.BOLL. Tanque de armazenamento
 PA Interruptor de pressão de aquecimento (água)
 MOD Modulador
 CN1+CN13 Conectores

[HU] “L-N” - “L-N” Polarizálás ajánlott

Blu=Kék / Marrone=Barna / Nero=Fekete / Rosso=Vörös / Bianco=Fehér / Viola=Lila / Grigio=Szürke / Arancione=Narancs
 A = 24V Alacsony feszültségű környezeti termosztát jumper
 B = Gázszелеp
 C = I/D elektróda
 D = Biztosíték 3.15A F
 MP Vezérlőkártya digitális kijelzővel és integrált gyújtás transzformátorral
 P1 Potméter az off - nyár - tél - reset / fűtési hőmérséklet kiválasztásához
 P2 Potméter a használati melegvíz beállított érték kiválasztásához
 P3 Potméter a hőmérséklet szabályozási görbe kiválasztásához
 JP1 Híd, amivel beiktathatók a gombok a kalibráláshoz
 JP2 A kalibrálási maximális elektromos fűtés log és fűtési időzítőt reszettelő híd
 JP3 MTN-LPG kiválasztó híd
 JP4 Abszolút használati melegvíz termosztát-szabályozó
 JP Jumper a csak fűtő funkció választáshoz, kialakítva külső kazánhoz termosztáttal vagy szondával
 JP6 nincs használva
 F1 Biztosíték 2A T
 F Külső Biztosíték 3.15A F
 M3-M4-M6 Kapocsleéc a külső csatlakozásokhoz
 T.A. Szobatermosztát
 E.A./R. Gyújtó/Lángőrelektroda
 TR1 Távoli gyújtás átvitel
 V Ventilátor
 P.F. Füstgáz nyomáskapcsoló
 S.R. Elsődleges kör hőmérséklet érzékelő (NTC)
 T.L. Határoló termosztát
 OPE Gázszелеp operátor
 P Szivattyú
 3V 3-járatú szervomotor szelep
 T.BOLL Vízartály termosztát
 S.Boll Tároló tartály
 PA Fűtési nyomáskapcsoló (víz)
 MOD Modulátor
 CN1+CN13 Csatlakozók

[RO] Se recomandă polarizarea “L-N”

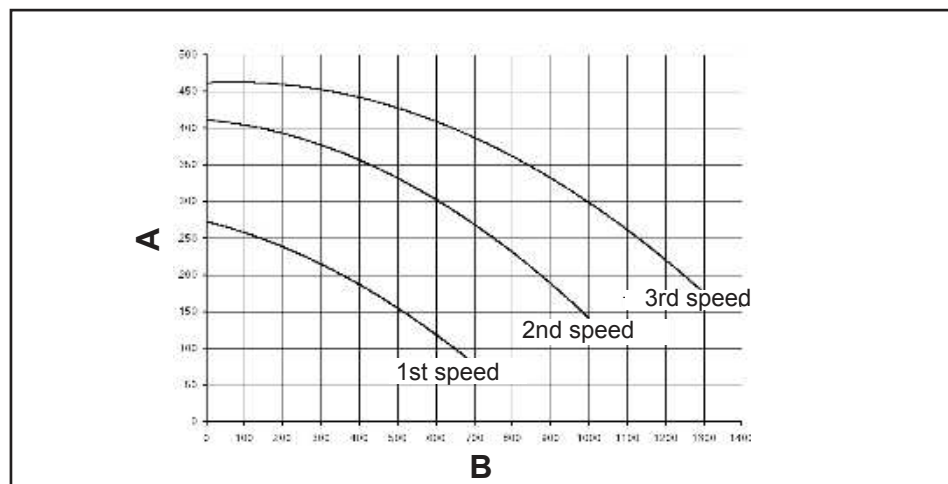
Bleumarín=Blu / Maron=Brown / Negru=Black / Roşu=Red/ Alb=White / Violet=Violet / Gri=Grey / B = Valvă gaz
 A = Punte termostat ambianță joasă tensiune 24V
 C = Electrod A/R
 D = Rezistență 3.15A F
 MP Placă de comandă cu afişaj digital şi transformator de aprindere integrat
 P1 Potențometru selectare off - vară - iarnă – reset / temperatură încălzire
 P2 Potențometru selectare set point circuit menajer
 P3 Potențometru selectare curbe termoreglare
 JP1 Punte abilitare manete/buşoane ptr calibrare
 JP2 Punte resetare timer încălzire şi memorizare valoarea maximă electrică la încălzire în momentul calibrării
 JP3 Punte selectare MTN - GPL
 JP4 Selector termostate circuit menajer absolute
 JP5 Punte selectare funcționare numai încălzire (neutilizată)
 JP6 Abilitare gestiune fluxostat (neutilizată)
 CN1+CN13 Conectori ptr conectare
 F1 Rezistență 2A T
 F Rezistență externă 3.15A F
 M3 Cutie borne ptr conexiuni externe
 T.A. Termostat ambianță/climă
 E.A./R. Electrod aprindere / detectare
 TR1 Transformator aprindere telecomandat
 V Ventilator
 P.F. Presostat gaze
 S.R. Sondă (NTC) temperatură circuit primar
 T.L. Termostat limitator
 OPE Operator valvă gaz
 P Pompă
 3V Servomotor vană cu 3 căi
 F.L. Fluxostat circ. menajer
 S.S. Sondă (NTC) temperatură circuit menajer
 PA Presostat încălzire (apă)
 MOD Modulador

[DE] “L-N” - “L-N” Polarisierung wird empfohlen

Blu=Blau / Marrone=Braun / Nero=Schwarz / Rosso=Rot/ Bianco=Weiß / Viola=Violett / Grigio=Grau / Grigio=Grau / Arancione=Orange
 A = 24V Niederspannung Raumthermostat-Drahtbrücke
 B = Gasventil
 C = Zündelektrode/Flammenüberwachung
 D = Schmelzsicherung 3.15A F
 MP Steuerkarte mit Digitalanzeige und integriertem Zündtransformator
 P1 Potentiometer für Auswahl Aus - Sommer - Winter – Rückstellung / Heizungstemperatur
 P2 Potentiometer für die Auswahl des BWV-Sollwerts
 P3 Potentiometer für die Auswahl der Heizkurve
 JP1 Drahtbrücke für die Aktivierung der Stellknöpfe
 JP2 Drahtbrücke für die Rückstellung der Heizzeitschaltuhr und Log maximale Elektroheizung bei der Einstellung
 JP3 Drahtbrücke für die Auswahl MTN - FLÜSSIGAS
 JP4 Absoluter Wahlschalter für BWV-Thermostat
 JP5 Drahtbrücke für die Auswahl reiner Heizbetrieb mit Vorrüstung für externen Boiler mit Thermostat oder Fühler
 JP6 nicht verwendet
 F1 Schmelzsicherung 2A T
 F Externe Sicherung 3.15A F
 M3M4-M6 Klemmleiste für externe Anschlüsse
 T.A. Raumthermostat
 E.A./R. Zündelektrode/Flammenüberwachung
 TR1 Fernzündtransformator
 V Gebläse
 P.F. Abgasdruckschalter
 S.R. Primärkreistemperaturfühler (NTC)
 T.L. Begrenzungsthermostat
 OPE Gasstellglied
 P Pumpe
 3V 3-Wege Stellantriebsventil
 T.BOLL Boilerthermostat
 S.BOLL. Boiler
 PA Heizwasserdruckschalter
 MOD Modulador
 CN1+CN13 Verbinder

[SL] “L-N” - Priporoča se “L-N” polarizacija

Blu=Modra / Marrone=Rjava / Nero=Črna / Rosso=Rdeča / Bianco=Bela / Viola=Vijolična / Grigio=Siva / Arancione=Oranžna
 A = 24V Mostiček nizkonapetostnega sobnega termostata
 B = Ventil plina
 C = I/D elektroda
 D = Varovalka 3.15A F
 MP Krmilna kartica z digitalnim prikazovalnikom in integriranim transformatorjem vžiga
 P1 Potenciometer za izbiro izklop - poletje - zima – reset / temperatura ogrevanja
 P2 Potenciometer za izbiro nastavitve temperature sanitarne vode
 P3 Potenciometer za izbiro krivulje temperaturne regulacije
 JP1 Mostiček za vklop gumbov kalibriranja
 JP2 Mostiček za ponastavitev časovnika ogrevanja in vklop maksimalnega električnega segrevanja med kalibriranjem
 JP3 Mostiček za izbiro MTN - LPG
 JP4 Izbirno stikalo absolutne tople sanitarne vode
 JP5 Mostiček za izbiro delovanja samo ogrevanja, s priključkom za zunanji hranilnik s termostatom ali tipalom
 JP6 ni v uporabi
 F1 Varovalka 2A T
 F Zunanja varovalka 3.15A F
 M3-M4-M6 Priključek za zunanje povezave
 S.T. Sobni termostat
 E.A./R. Elektroda za vžig/nadzor plamena
 TR1 Transformator za vžig
 V Ventilator
 P.F. Tlačno stikalo pretoka plina
 S.R. Tipalo temperature primarne veje (NTC)
 T.L. Termostat najvišje temperature
 OPE Krmilnik plinskega ventila
 P Črpalka
 3V Servomotor tripotnega ventila
 T.BOLL Termostat hranilnika vode
 S.BOLL. Hranilnik
 PA Tlačni ventil ogrevanja (vode)
 MOD Modulador
 CN1+CN13 Spojniki



[F] Prévalence résiduelle du circulateur

A= Débit (l/h)

B= Prévalence (m C.A.)

La prévalence résiduelle pour l'installation de chauffage est représentée en fonction du débit dans le graphique ci-contre.

Le dimensionnement des tuyaux de l'installation de chauffage doit être effectué en considérant la valeur de la prévalence résiduelle disponible. Il faut prendre en compte que la chaudière fonctionne correctement s'il y a une circulation d'eau suffisante dans l'échangeur de l'installation de chauffage.

Dans ce but, la chaudière est équipée d'un by-pass automatique qui règle un débit d'eau correct dans l'échangeur de chauffage, dans n'importe quelle condition de l'installation.

First speed = première vitesse

Second speed = deuxième vitesse

Third speed = troisième vitesse

[ES] Altura de carga residual del circulador

A= Caudal (l/h)

B= Altura de carga (m C.A.)

La altura de carga residual para la instalación de calefacción está representada, en función del caudal, por el gráfico de al lado.

El tamaño de las tuberías de la instalación de calefacción debe calcularse considerando el valor de la altura de carga residual disponible.

Se debe tener presente que la caldera funciona correctamente si el intercambiador de la calefacción tiene suficiente circulación de agua.

Por ello, la caldera está equipada con un by-pass automático que regula el caudal correcto de agua en el intercambiador de calefacción en cualquier condición de la instalación.

First speed = primera velocidad

Second speed = segunda velocidad

Third speed = tercera velocidad

[EN] Circulator residual head

A= Capacity (l/h)

B= Head (m A.C.)

The residual head for the heating system is represented, according to capacity, in the next graph. Heating system piping dimensioning must be carried out bearing in mind the value of the available residual head.

Bear in mind that the boiler operates correctly if water circulation in the heat exchanger is sufficient. To this aim, the boiler is equipped with an automatic by-pass that adjusts water capacity properly in the heat exchanger in any system conditions.

First speed

Second speed

Third speed

[PT] Prevalência residual do circulador

A= Vazão (l/h)

B= Prevalência (m C.A.)

A prevalência residual para a instalação de aquecimento é representada, em função da vazão, pelo gráfico ao lado.

O dimensionamento das tubagens da instalação de aquecimento deve ser executado considerando o valor da prevalência residual disponível.

Considere-se que a caldeira funciona correctamente se no permutador do aquecimento existe uma circulação de água suficiente.

Para essa finalidade a caldeira possui um by-pass automático que regula uma correcta vazão de água no permutador de aquecimento em qualquer condição da instalação.

First speed = primeira velocidade

Second speed = segunda velocidade

Third speed = terceira velocidade

[HU] Keringtőszivattyú maradék emelő magassága

A= Hozam (áramlási mennyiség) (l/h)

B= Emelő magasság (m C.A.)

A fűtőrendszer maradék emelőmagasságát a hozam függvényében az oldalsó grafikon szemlélteti. A fűtőrendszer csőveinek a méretezését a rendelkezésre álló maradék emelő magasság értékét szem előtt tartva kell meghatározni.

Vegye figyelembe, hogy a kazán akkor működik megfelelően, ha a fűtőrendszer hőcserélőjében a keringő víz mennyisége elegendő.

Épp ezért, a kazán el van látva egy automata by-pass szeleppel, ami a rendszer bármiféle állapotában gondoskodik fűtőrendszer hőcserélőjében a megfelelő vízhozam biztosításáról.

First speed = harmadik sebességfokozat

Second speed = második sebességfokozat

Third speed = első sebességfokozat

[RO] Prevalență reziduală circulator

A= debit (l/h)

B= prevalență (m C.A.)

Prevalență reziduală în instalația de încălzire este reprezentată - în funcție de debit - în graficul alăturat.

Dimensiunea tuburilor instalației de încălzire trebuie să fie aleasă având în vedere valoarea de prevalență reziduală disponibilă.

Amintiți-vă că instalația funcționează corect dacă în schimbătorul de căldură circulația apei se face în mod corect, eficient.

În acest scop, cazanul este dotat cu un by-pass automat care reglează debitul de apă în schimbătorul de căldură, în orice situație s-ar afla instalația.

First speed = a treia viteză

Second speed = a doua viteză

Third speed = prima viteză

[DE] Restförderhöhe der Umwälzvorrichtung

A= Durchsatz (l/h)

B= Förderhöhe (m C.A.)

Die Restförderhöhe für die Heizanlage wird in Abhängigkeit vom Durchsatz in der nebenstehenden Grafik dargestellt.

Die Bemessung der Leitungen der Heizanlage muss unter Berücksichtigung des Wertes der verfügbaren Restförderhöhe ausgeführt werden. Man beachte, dass der Kessel richtig funktioniert, wenn im Wärmetauscher der Heizung eine ausreichende Wasserzirkulation erfolgt.

Zu diesem Zweck ist der Kessel mit einem automatischen Bypass ausgestattet, der die Einstellung des richtigen Wasserdurchsatzes im Wärmetauscher der Heizung bei beliebigen Bedingungen der Anlage ermöglicht.

First speed = erste Geschwindigkeit

Second speed = zweite Geschwindigkeit

Third speed = dritte Geschwindigkeit

[SL] Preostala črpalna višina črpalke

A= Zmogljivost (l/h)

B= Črpalna višina (m C.A.)

Preostala črpalna višina ogrevalnega sistema je glede na zmogljivost predstavljena z diagramom ob strani.

Dimenzioniranje cevi ogrevalnega sistema se mora izvesti z upoštevanjem vrednosti preostale črpalne višine, ki je na voljo. Upoštevajte, da kotel deluje pravilno, če je v toplotnem izmenjevalniku kotla zadosten pretok vode.

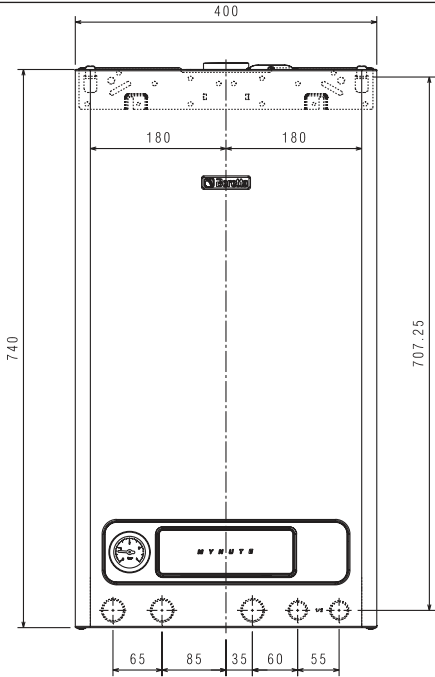
Za ta namen je kotel opremljen s samodejnim obtočnim vodom, ki poskrbi za reguliranje pravilnega pretoka vode v toplotnem izmenjevalniku ogrevanja ne glede na stanje sistema.

First speed = prva rýchlost'


Second speed = druga rýchlost'

Third speed = tretja rýchlost'



Mynute S 24 - 28 C.S.I.
Mynute S 28 R.S.I.



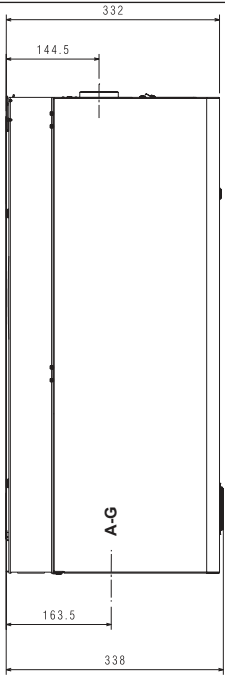- [EN] A-G = Water-Gas
[F] A-G = Eau - Gaz
[ES] A-G = Agua-Gas
[PT] A-G = Água-Gás
[HU] A-G = Víz-Gáz
[RO] A-G = Apa-Gaz
[DE] A-G = Wasser-Gas
[SL] A-G = Voda-Plin



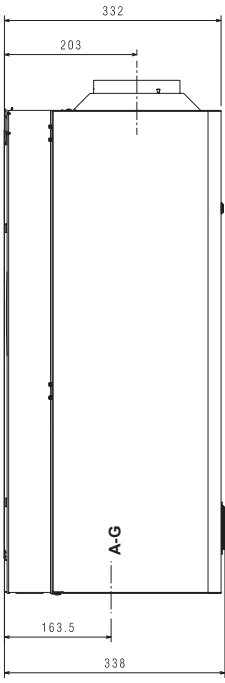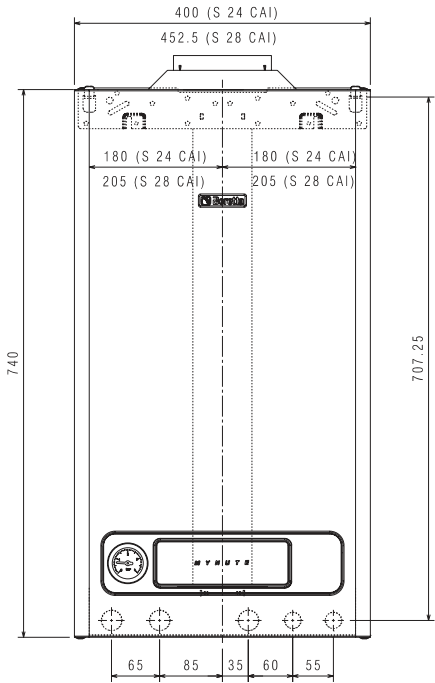Mynute S 24 C.A.I. E
Mynute S 28 C.A.I. E



Mynute S 35 C.S.I.
Mynute S 35 R.S.I.


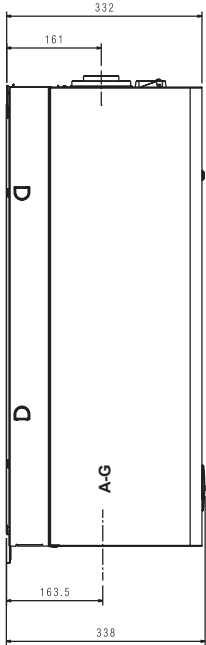
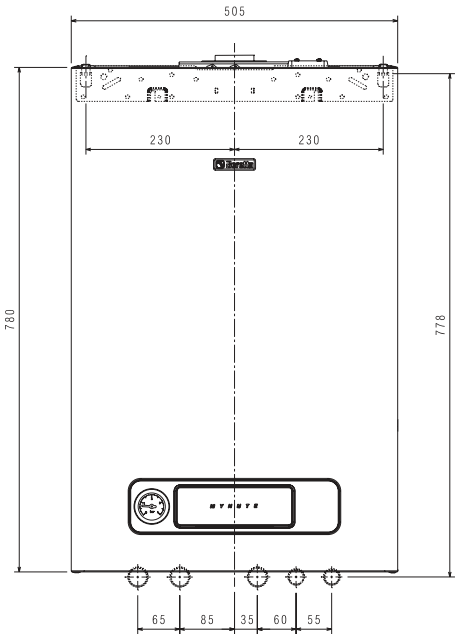



fig. 1

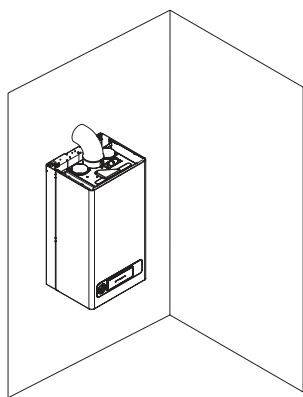Mynute S C.S.I. - R.S.I.




[EN] Indoor installation
[F] Installation à l'intérieur
[ES] Instalación en el interior
[PT] Instalação no interior

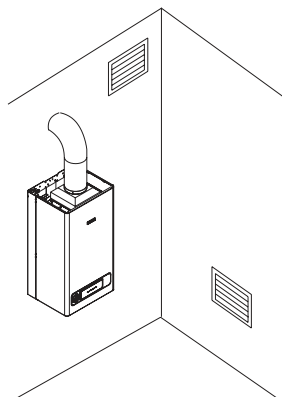Mynute S C.A.I. E




[HU] Beltéri telepítés
[RO] Instalație în interior
[DE] Installation im Innenbereich
[SL] Unutrašnja instalacija

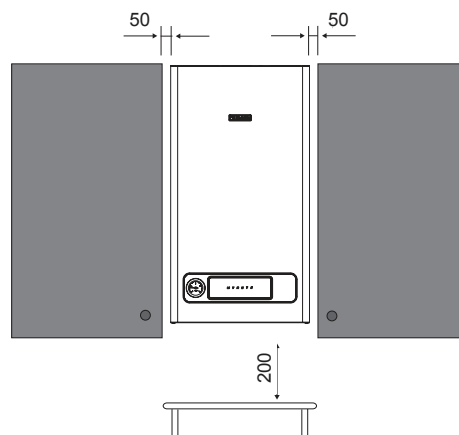fig. 2



[EN] measurement in mm
[F] mesures en mm
[ES] medidas en mm
[PT] medidas em mm
[HU] méretek mm-ben
[RO] măsură în mm
[DE] Abmessungen in mm
[SL] mere u mm

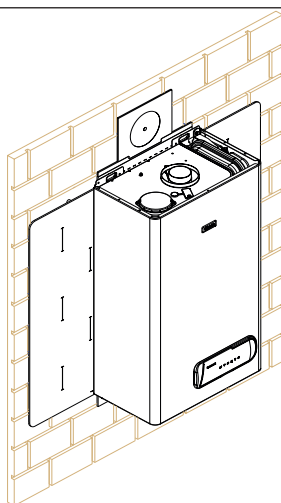fig. 3



[EN] gas tap
[F] robinet à gaz
[ES] grifo gas
[PT] válvula de gás
[HU] gázcsap
[RO] robinet gaz
[DE] Gasventil
[SL] ventil za gas

fig. 4


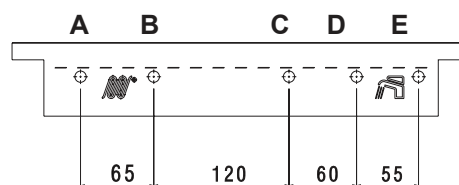


fig. 5

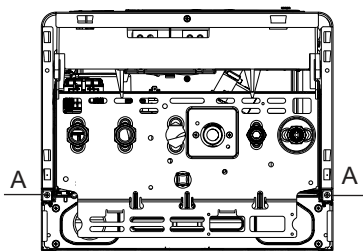**Mynute S 24 - 28 C.S.I.
Mynute S 24 - 28 C.A.I. E
Mynute S 28 R.S.I.**



**Mynute S 35 C.S.I.
Mynute S 35 R.S.I.**

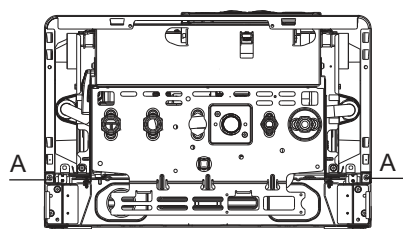


fig. 6

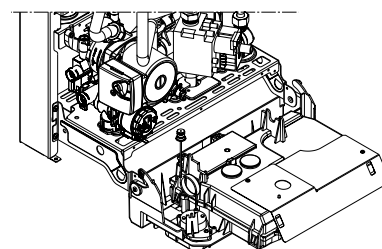


fig. 7


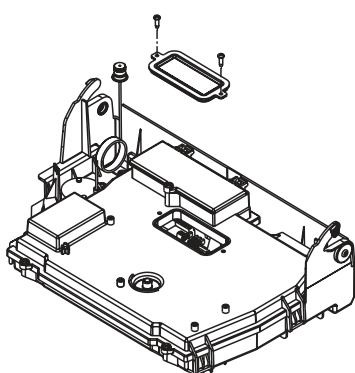


fig. 8

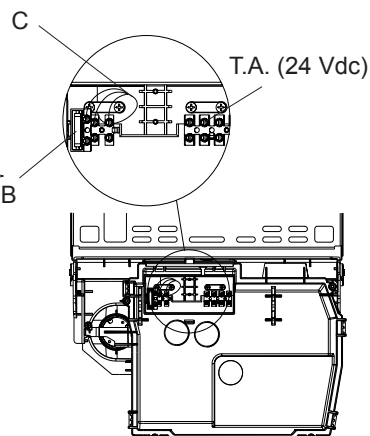

[EN] B = Fuse C = Supply T.A. =Room thermostat
[F] B = Fusible C = Alimentation T.A. =Thermostat d'ambiance
[ES] B = Fusible C = Alimentación T.A. =Termostato ambiente
[PT] B = Fusível C = Alimentação T.A. =Termóstato ambiente
[HU] B = Olvadóbiztosíték C = Táplálás T.A. =Szobatermosztát
[RO] B = Rezistență C = Alimentare T.A. =Termostat climă
[DE] B = Sicherung C = Stromversorgung T.A. =Raumthermostat
[SL] B = Osigurač C = Izvor napajanja T.A. =Sobni termostat

fig. 9

**Mynute S 24 - 28 C.S.I.
Mynute S 28 R.S.I.**

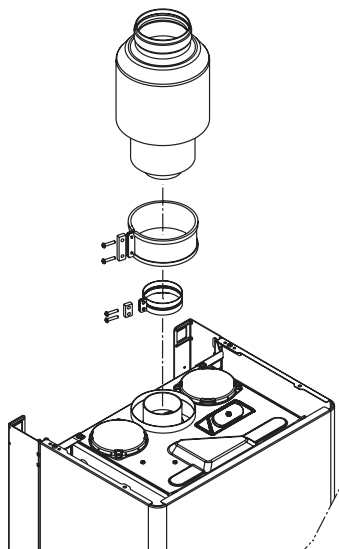


fig. 10a

**Mynute S 35 C.S.I.
Mynute S 35 R.S.I.**

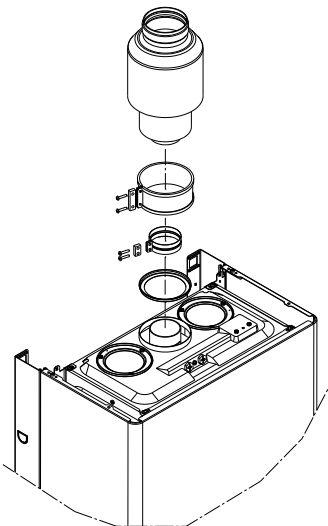


fig. 10a

**Mynute S 24 - 28 C.S.I.
Mynute S 28 R.S.I.**

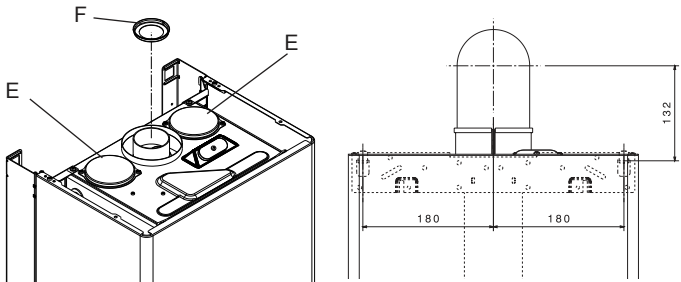


fig. 10b

**Mynute S 35 C.S.I.
Mynute S 35 R.S.I.**

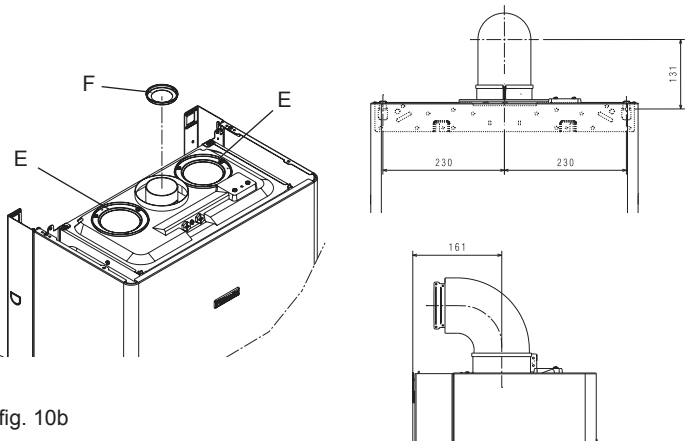


fig. 10b

**Mynute S 24 - 28 C.S.I.
Mynute S 28 R.S.I.**

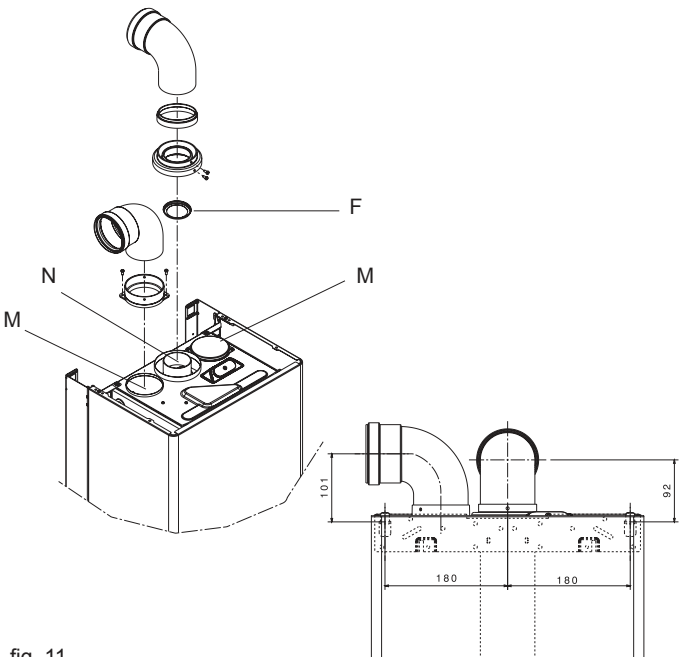


fig. 11

**Mynute S 35 C.S.I.
Mynute S 35 R.S.I.**

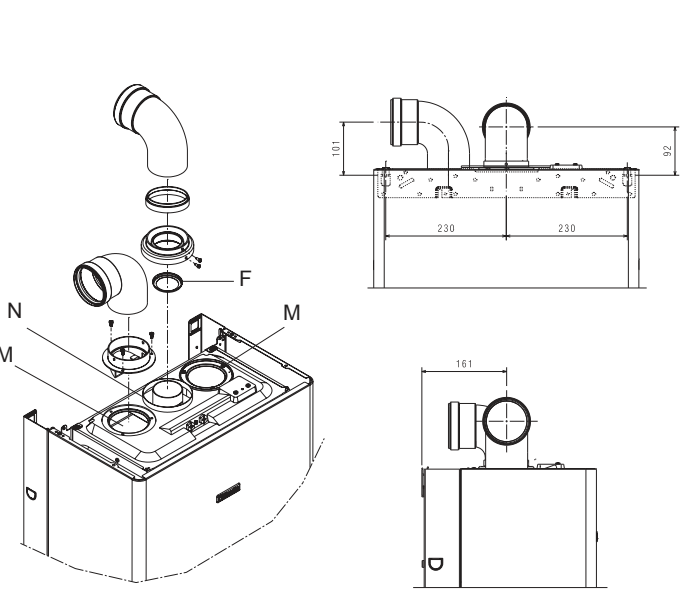


fig. 11

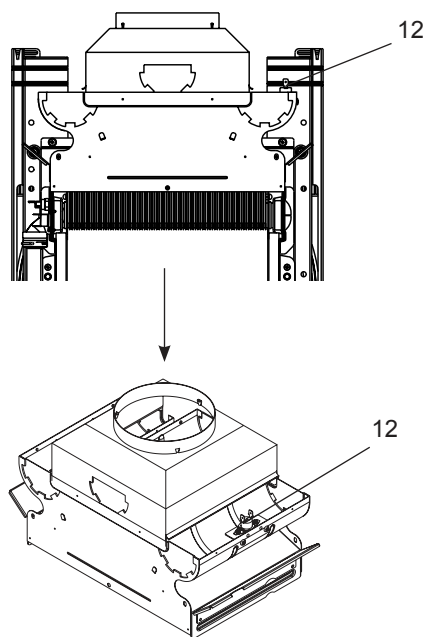
Mynute S 24 - 28 C.A.I. E

fig. 11b




Mynute S 24 - 28 C.S.I.
Mynute S 28 R.S.I.

Mynute S 35 C.S.I.
Mynute S 35 R.S.I.
**Mynute S 24 - 28 C.A.I. E**

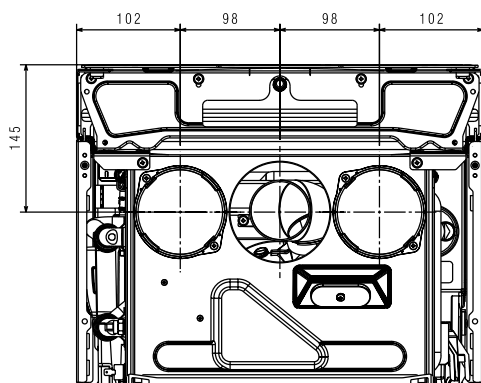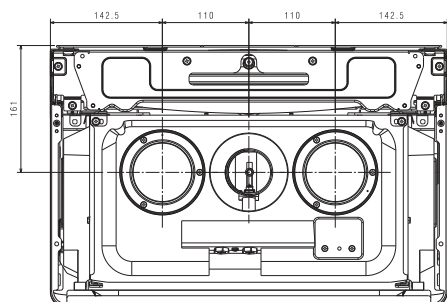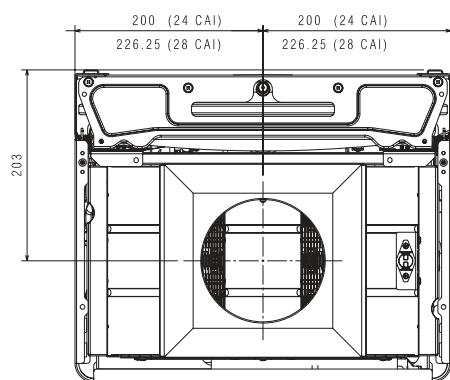fig. 12

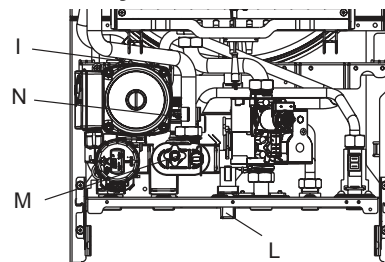
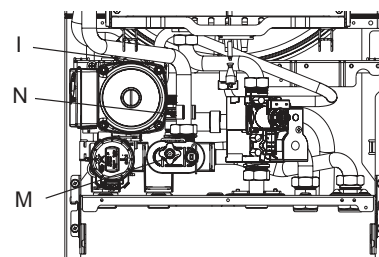
Mynute S C.A.I. E - C.S.I.**Mynute S R.S.I.**

fig. 13

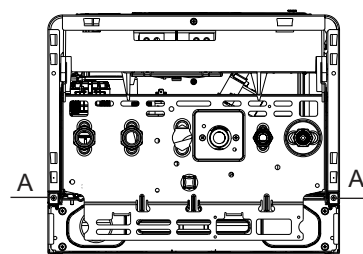


fig. 14

[EN] A - COMPENSATION TAP / B - PRESSURE TUBE / C - SAFETY CAP / D - FASTON CONNECTORS / E - MAXIMUM POWER ADJUSTING NUT / F - ALLEN SPANNER FOR ADJUSTING THE DOMESTIC HOT WATER MINIMUM

[F] A - PRISE DE COMPENSATION (MODÈLE C.S.I.) / B - PRISE DE PRESSION EN AVAL DU ROBINET DE GAZ / C - CAPUCHON DE PROTECTION / D - RACCORDEMENTS FASTON / E - ÉCROU DE RÉGLAGE DE LA PUISSANCE MAXIMUM / F - VIS A SIX PANS CREUX POUR LE RÉGLAGE DU MINIMUM SANITAIRE

[ES] A - TOMA DE COMPENSACIÓN (MODELO C.S.I.) / B - TOMA DE PRESIÓN SITUADA DESPUÉS DE LA VÁLVULA GAS / C - CAPUCHÓN DE PROTECCIÓN / D - CONEXIONES FASTON / E - TUERCA DE REGULACIÓN MÁXIMA POTENCIA / F - TORNILLO ALLEN PARA LA REGULACIÓN DEL MÍNIMO SANITARIO

[PT] A - TOMADA DE COMPENSAÇÃO (MODELO C.S.I.) / B - TOMADA DE PRESSÃO A JUSANTE DA VÁLVULA DE GÁS / C - CAPUZ DE PROTEÇÃO / D - JUNÇÕES FASTON / E - PORÇA DE REGULAÇÃO POTÊNCIA MÁXIMA / F - PARAFUSO ALLEN PARA A REGULAÇÃO DO MÍNIMO SANITÁRIO

[HU] A - KOMPENZÁCIÓS CSŐ / B - A GÁZSZELEP LEGALACSONYABB NYOMÁSÁNAK CSATLAKOZÓJA / C - VÉDŐSAPKA / D - GYORS-CSATLAKOZÓK / E - MAXIMÁLIS TELJESÍTMÉNY-BEÁLLÍTÓ ANYACSAVAR / F - IMBUSZKULCS A HÁZTARTÁSI MELEG VÍZ MINIMUMÉRTÉKÉNEK BEÁLLÍTÁSÁHOZ

[RO] A - ROBINET DE COMPENSARE / B - TUB PRESIUNE / C - DOP SIGURANȚĂ / D - CONECTORI FASTON / E - PIULIȚĂ REGLARE PUTERE MAXIMĂ / F - ȘURUB CU LOCAȘ HEXAGONAL PENTRU REGLAREA CANTITĂȚII MINIME DE APĂ CALDĂ MENAJERĂ

[DE] A - DER KOMPENSATIONANSCHLUSS (NUR C.S.I.N.) / B - DER MESSDRUCKANSCHLUSS HINTER DES GASVENTILS / C - DAS SCHUTZKÄPPCHEN / D - DIE FASTONANSCHLÜSSE / E - DIE REGELMUTTER EINES LEISTUNGSMAXIMUM / F - IMBUS ZUR EINSTELLUNG DES SANITÄREN MINIMUMS

[SL] A - KOMPENZACIJSKI PRIKLJUČEK (SAMO C.S.I.) / B - MERILNI PRIKLJUČEK PRED VENTILOM PLINA / C - ZAŠČITNI POKROVČEK / D - SPONKI FASTON / E - MATICA ZA NASTAVITEV NAJVEČJE MOČI / F - IMBUS VIJAK ZA REGULACIJO MINIMALNE TEMPERATURE SANITARNE VODE


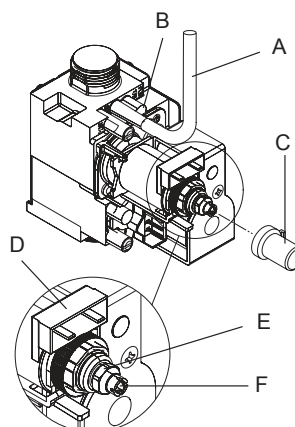
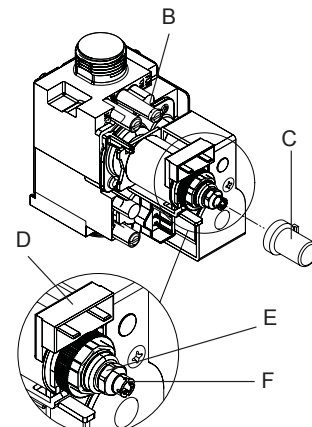
Mynute S C.S.I. - R.S.I.**Mynute S C.A.I. E**

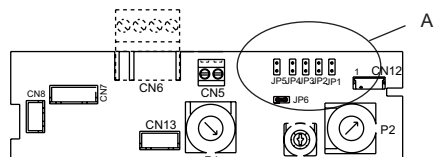fig. 15



[EN]
JP1 Bridge to enable function calibration
JP2 Bridge to adjust maximum heating
JP3 Bridge to select MTN-LPG

[F]
JP1 Shunt activation fonction de réglage
JP2 Shunt réglage de chauffage maximum
JP3 Shunt sélection MTN-GPL

[ES]
JP1 Puente habilitación función regulación
JP2 Puente regulación de la máxima calefacción
JP3 Puente selección MTN - GLP

[PT]
JP1 Ponte habilitação função calibragem
JP2 Ponte regulação máximo aquecimento
JP3 Ponte selecção MTN-GPL

[HU]
JP1 Kalibráló funkció jumperje
JP2 Maximális fűtés beállításának jumperje
JP3 Metángáz-GPL (cseppfolyósított szénhidrogén-gáz) kiválasztás jumperje


[RO]
JP1 Punte abilitare funcţionare calibrare
JP2 Punte reglare val. maximă încălzire
JP3 Punte selectare MTN - GPL

[DE]
JP1 Überbrückung zur Aktivierung der Einstellfunktion
JP2 Überbrückung zur Einstellung des Maximums Heizung
JP3 Überbrückung zur Auswahl von MTN - Flüssiggas

[SL]
JP1 Mostiček za vklop funkcije umerjanja
JP2 Mostiček za reguliranje maksimalnega ogrevanja
JP3 Mostiček za izbiro selezione METAN-UTEKOČINJENI


fig. 16

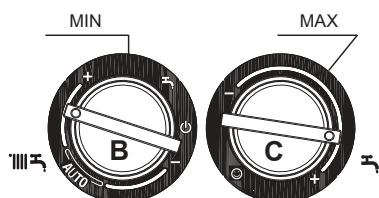Mynute S C.A.I. E - C.S.I.



[EN] MIN heating minimum calibration
 MAX heating maximum calibration
 [F] MIN. réglage de chauffage minimum
 MAX. réglage de chauffage maximum
 [ES] MIN regulación mínima calefacción
 MAX regulación máxima calefacción
 [PT] MIN. calibragem mínimo aquecimento
 MAX. calibragem máximo aquecimento

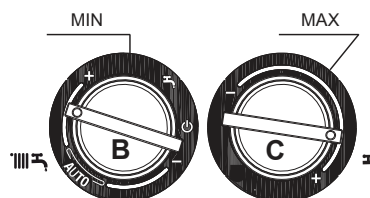
Mynute S R.S.I.




[HU] MIN minimum fűtés beállítása
 MAX maximum fűtés beállítása
 [RO] MIN calibrare val. minimă încălzire
 MAX calibrare val. maximă încălzire
 [DE] MIN Einstellung des Minimums Heizung
 MAX Einstellung des Maximums Heizung
 [SL] MIN umerjanje minimalnega ogrevanja
 MAX umerjanje maksimalnega ogrevanja

fig. 17

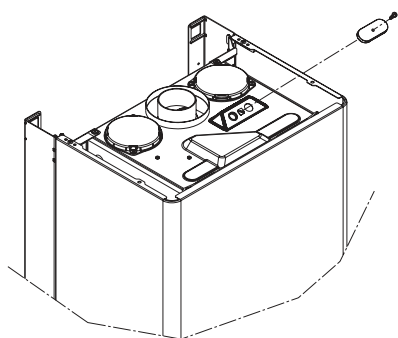Mynute S 24 - 28 C.S.I. Mynute S 28 R.S.I.



Mynute S 35 C.S.I. Mynute S 35 R.S.I.

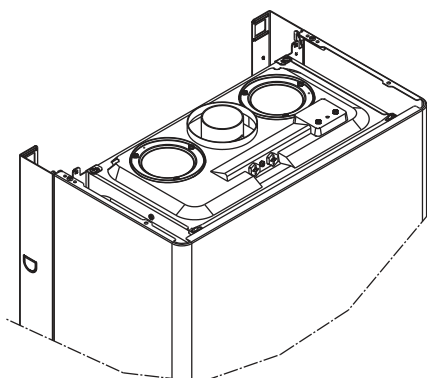

Mynute S 24 - 28 C.A.I. E



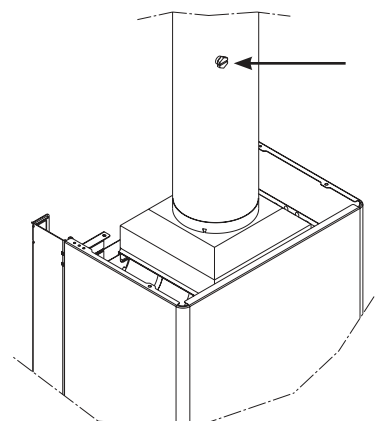


fig. 18

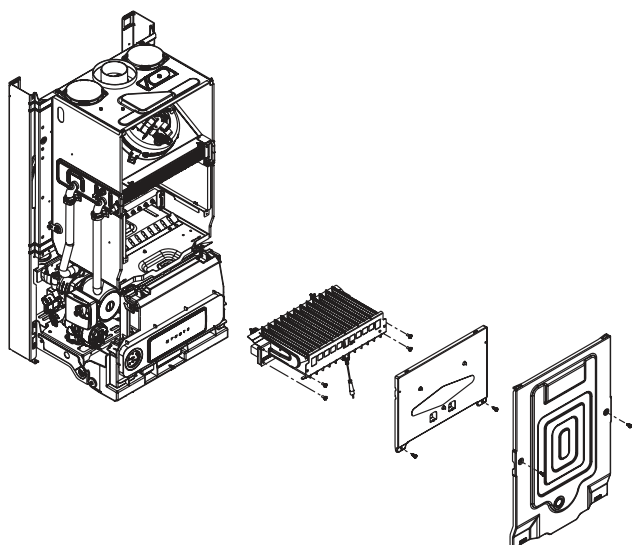**Mynute S 24 - 28 C.S.I.
Mynute S 28 R.S.I.**



Mynute S 24 - 28 C.A.I. E

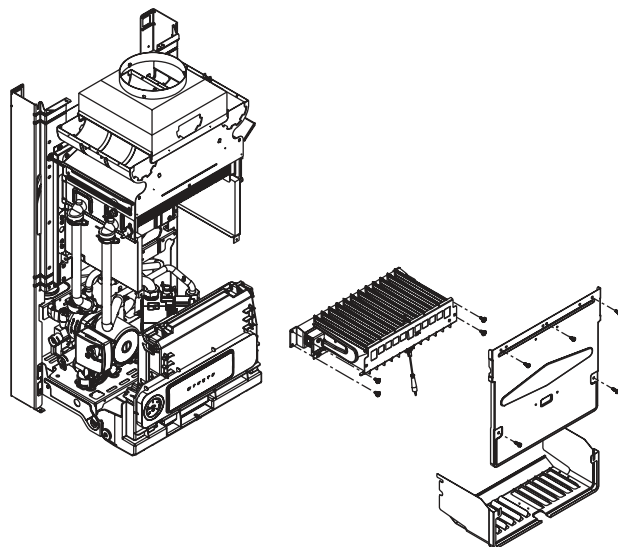

**Mynute S 35 C.S.I.
Mynute S 35 R.S.I.**




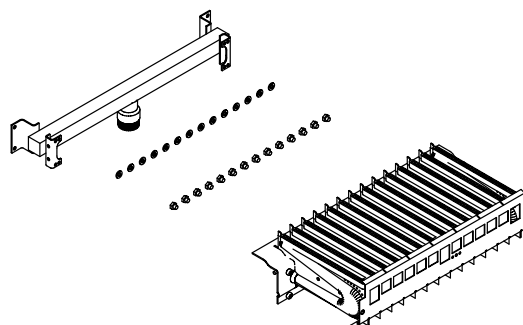
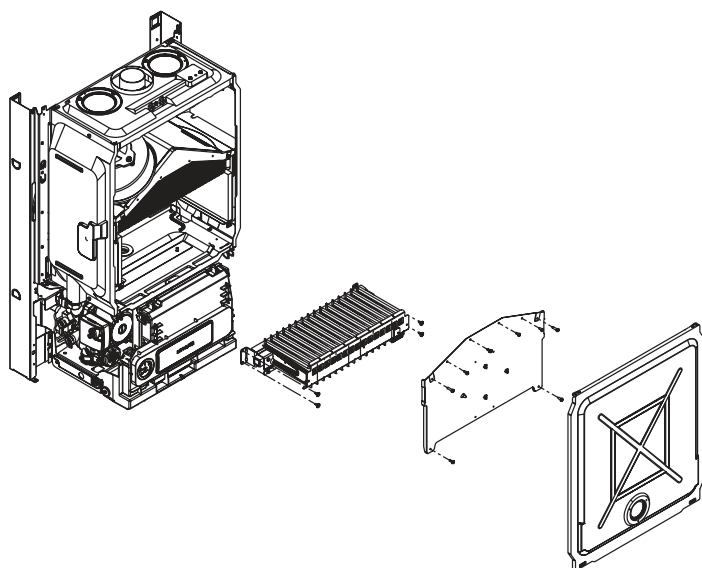
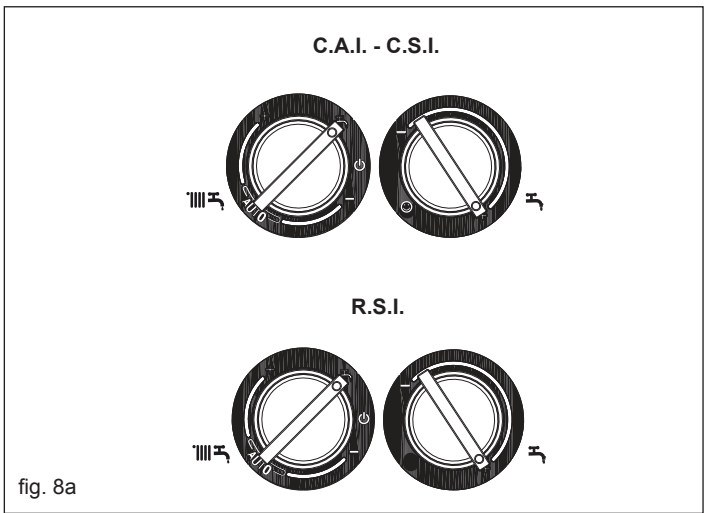
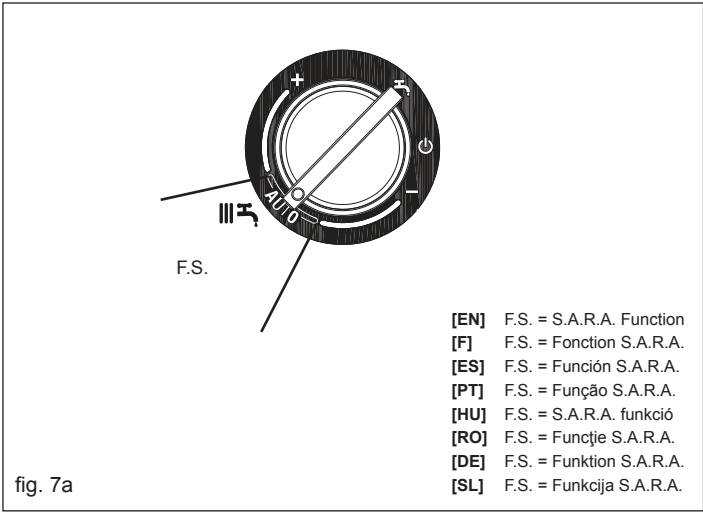
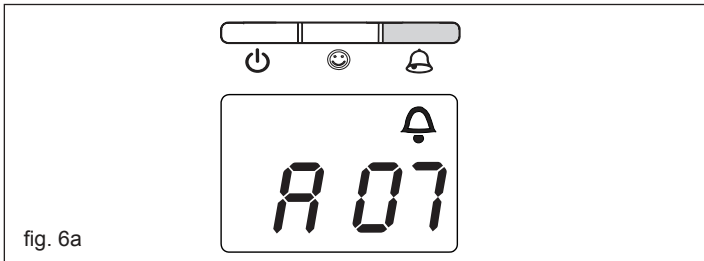
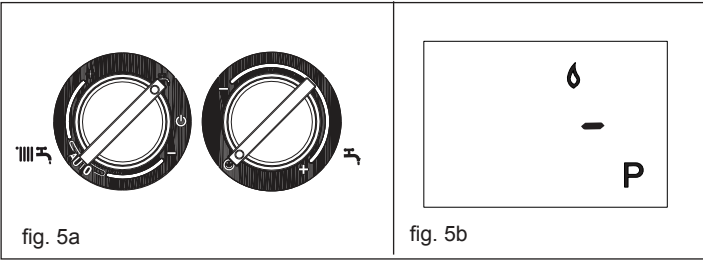
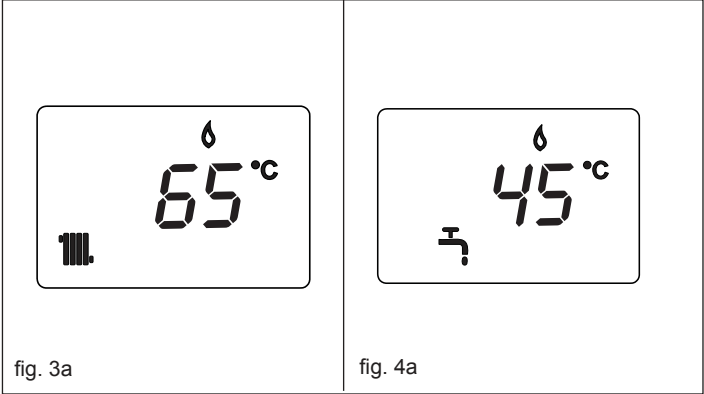


fig. 19

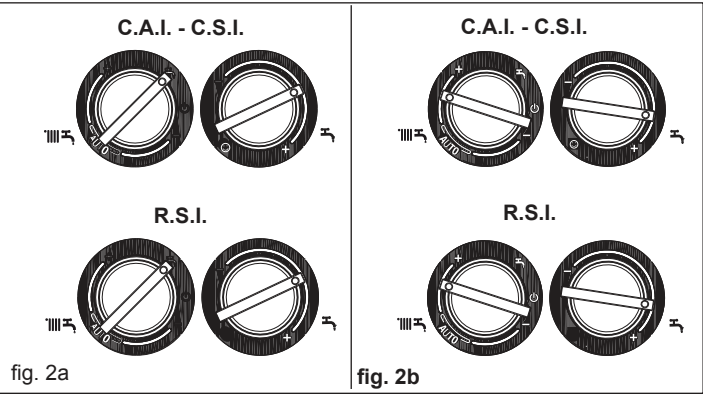

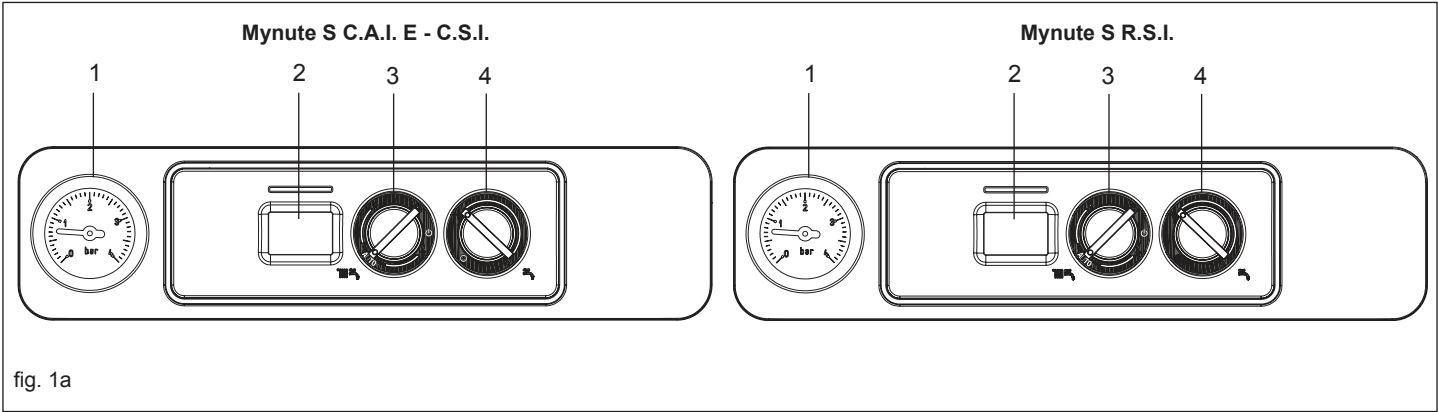



Via Risorgimento, 13
23900 Lecco (LC)
Italy