

How to Use Range Extender





RJ Tech Limited
sales@rjtech-offroad.com

Range Extender


Operation Instructions

1.1 Structure of the Range Extender

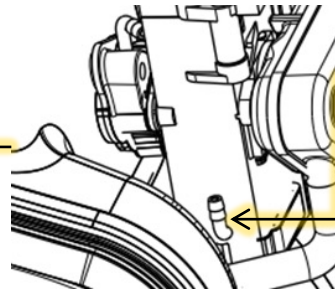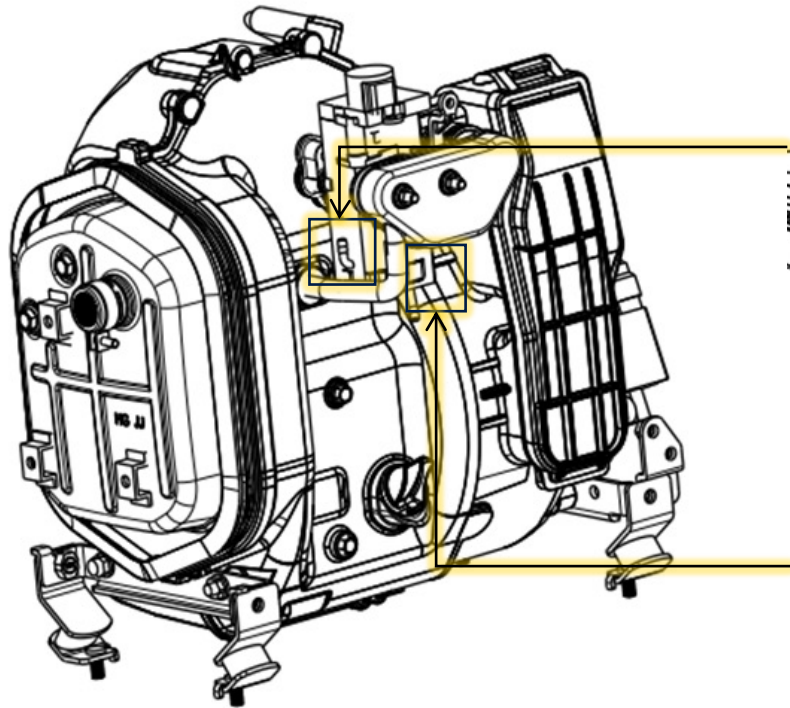

① Vent Pipe

Used to release air inside the high-pressure fuel pump, ensuring the pump operates normally.

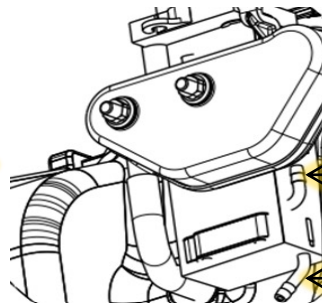

② Fuel Inlet Pipe

Delivers fuel from the fuel tank to the injector.

③ Fuel Return Pipe



Returns excess fuel back to the tank, reducing fuel consumption.

Range Extender

Operation Instructions

1.2 How to Use Range Extender


- ① **Mounting Bolt**
- ② **Mounting Nut**
- Install the range extender assembly on the main vehicle or trailer. As shown, secure it to the rear of the vehicle/trailer with four bolts and nuts.
- Clean dust and debris from the range extender surface using a brush or soft cloth.
- Fill the fuel tank, loosen the fuel pump bleed screw, and manually prime the pump to expel air from the fuel line.
- Add engine oil. Ensure the fuel pump has sufficient lubrication and do not exceed the maximum mark on the dipstick.
- Verify the generator electrical connections are correct and secure.
- Operate the range extender only when the vehicle is fully stopped on a level surface.
- Ensure sufficient fuel level in the tank.
- Connect the main vehicle and trailer plugs properly (see page 26).
- After the main vehicle is powered on, the range extender can be started (auto-start when battery voltage drops below 64.5 V).
- When the battery voltage approaches full charge, the range extender will shut down automatically and stop power output.

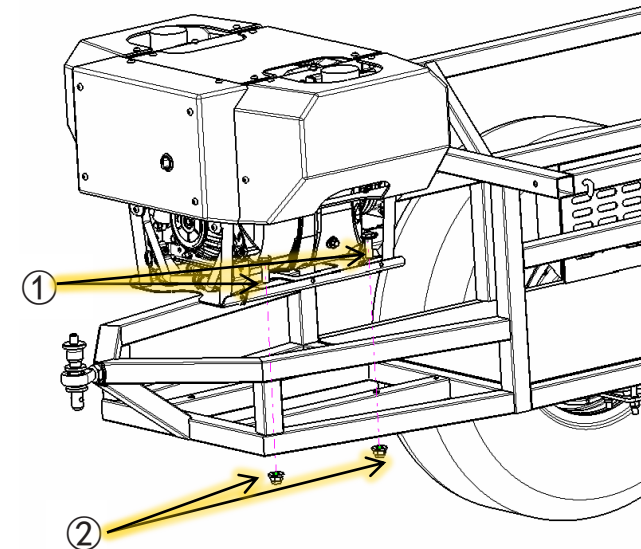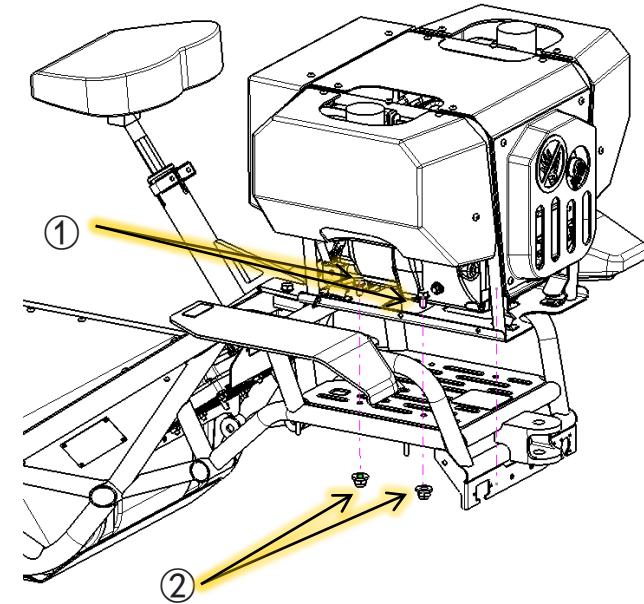

Range Extender

Operation Instructions

1.3 How to Use Range Extender

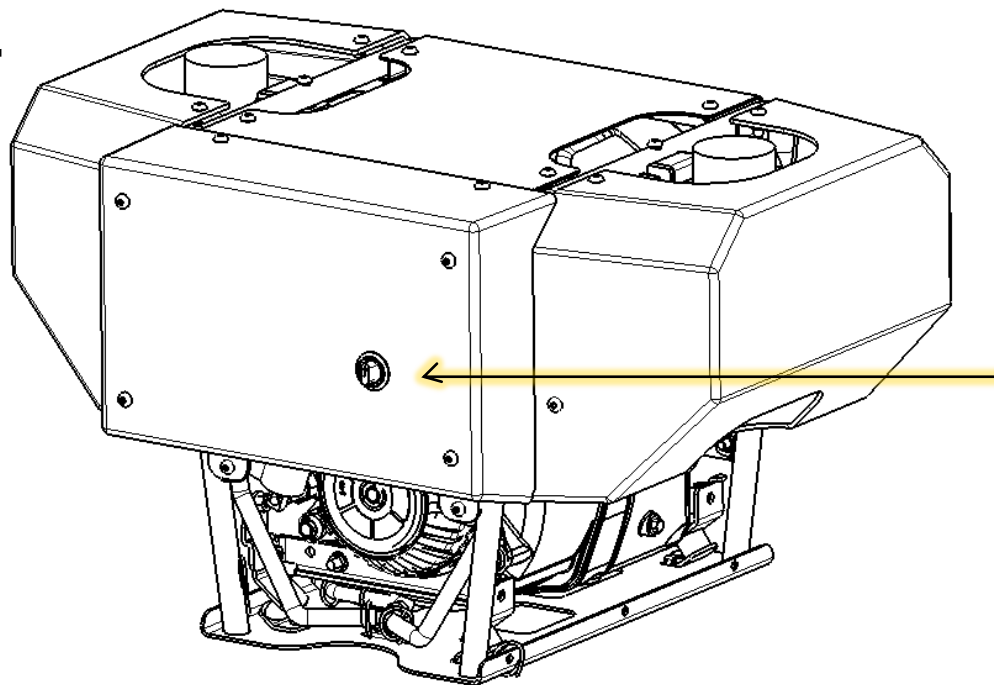

① “Start” Selector

- Turn left: OFF
- Center: Auto start mode
- Turn right: Manual start mode

Note:

(1) Turn off the range extender when encountering dangerous situations.

Range Extender

Operation Instructions

1.4 How to Use Range Extender

- Do not touch the range extender during operation to avoid burns.
- Use high-quality gasoline (92# or above). Do not mix gasoline with other fuels; keep it clean.
- Before refueling, allow the fuel to settle. Filter carefully during refueling and keep the container clean.
- Before first use, fill with SG15W-40 gasoline engine oil.
- Do not use contaminated oil. Do not exceed the upper dipstick mark when filling, and do not allow oil level to fall below the lower mark during operation.
- Inspect generator wiring for aging and replace promptly if necessary.