

Trusses and their ground supports

TN now has one horizontal top chord at 224.25 in (18 ft 8 1/4 in) above datum.
The hip-cap roof remains separate; its roof load allowance is retained.
N1 / U-W is the existing full-height ground column beside the loading door.
The upper east jamb bears on TN; no ground column is added in the garage opening.



Columns appear in multiple wall views but occur ONCE in the global model.
Shared posts carry combined actions; reactions are not arbitrarily divided in half.
T1 is supported by TE and TW, not by new ground columns beneath T1.
All wall images are native PyNite views filtered from the solved global model.
They are not independently solved frames with invented supports at cut edges.

Model assumptions: fixed bases, moment-connected frame members and offset links.
The nine foundations, connections and site wind/seismic loads still need design.
This is a preliminary analytical model, not a construction-ready design.

Global second-order partial member screen: 0.834
Steel model weight: 9,322 lb. Export replay: 70 load combinations verified.
Screen excludes the 125 psf storage sensitivity and is not a complete code check.



TN Full wall elevation

Flat upper chord axis: 18 ft 8 1/4 in
Lower chord axis: 9 ft 7 in
Overall chord run: 23 ft 5 1/2 in

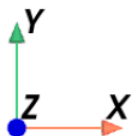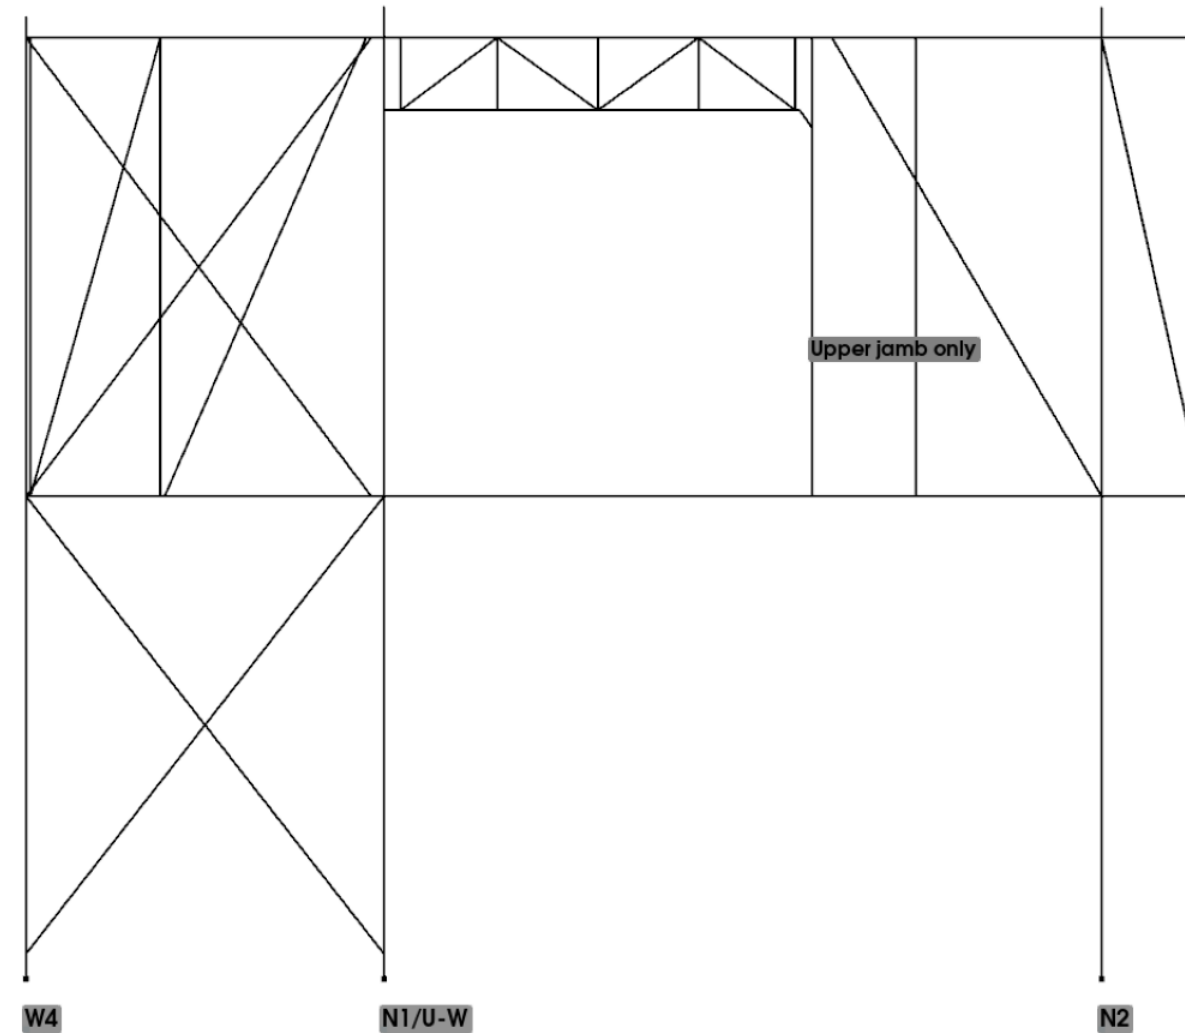



Actual ground supports shown. Shared columns occur once in the global model.
Fixed-base analytical assumption; foundations and connections not designed.

TE Full wall elevation

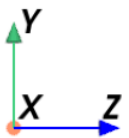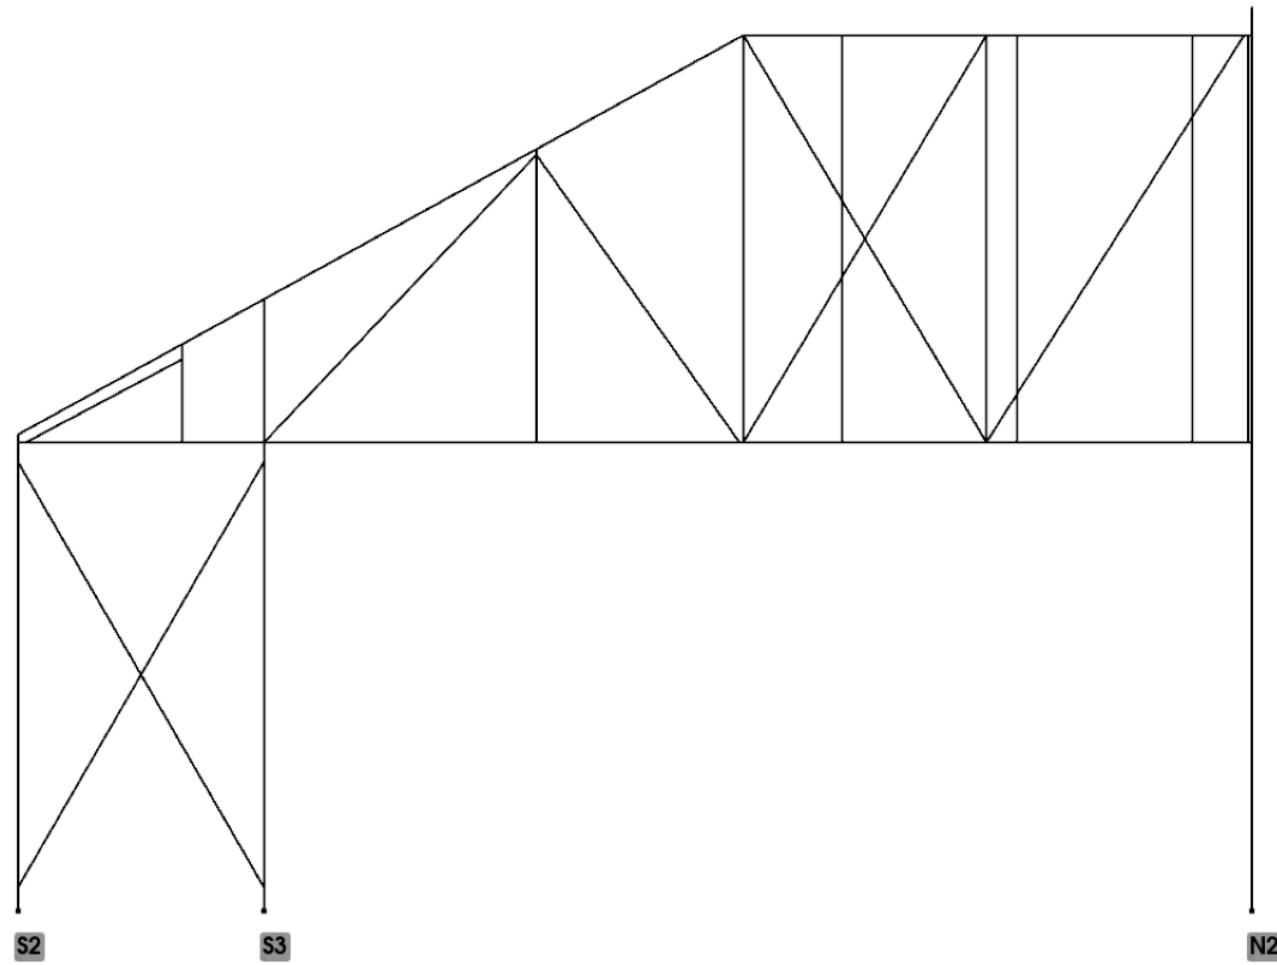



Actual ground supports shown. Shared columns occur once in the global model.
Fixed-base analytical assumption; foundations and connections not designed.

TW Full wall elevation

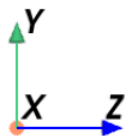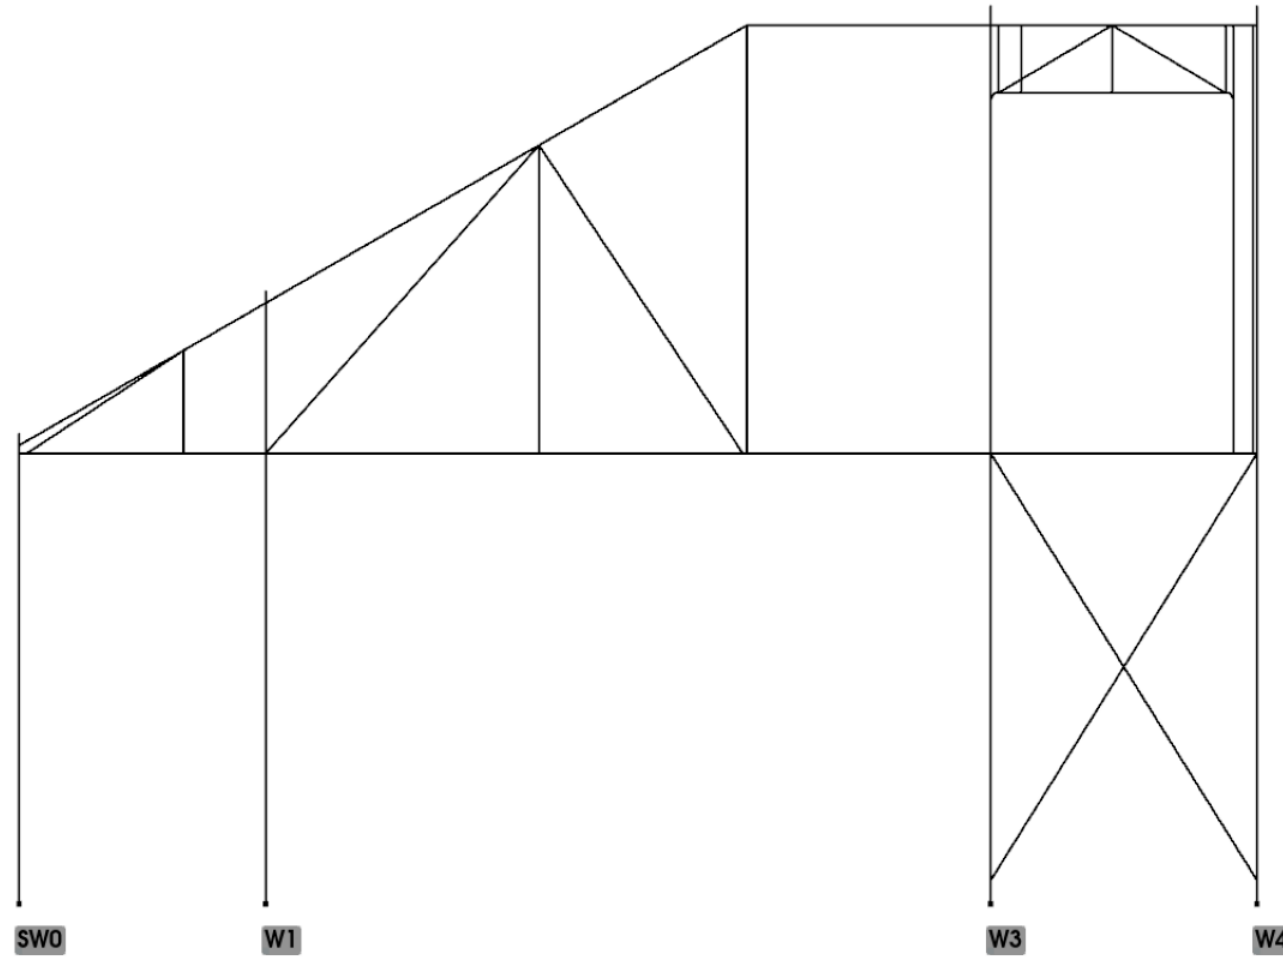



Actual ground supports shown. Shared columns occur once in the global model.
Fixed-base analytical assumption; foundations and connections not designed.

TS Full wall elevation

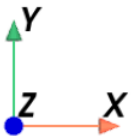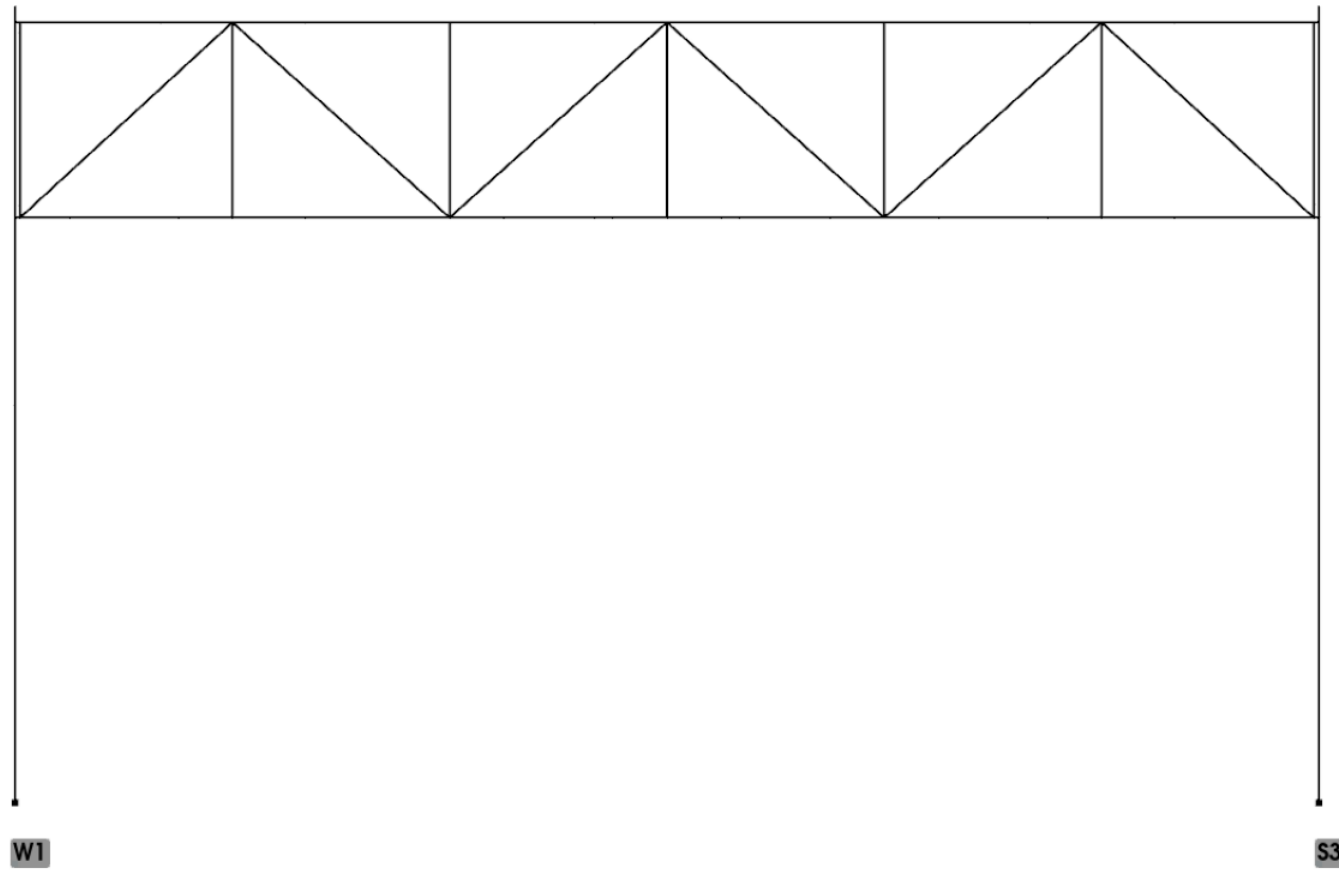


Actual ground supports shown. Shared columns occur once in the global model.
Fixed-base analytical assumption; foundations and connections not designed.

T1 Global support path

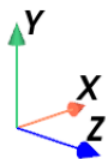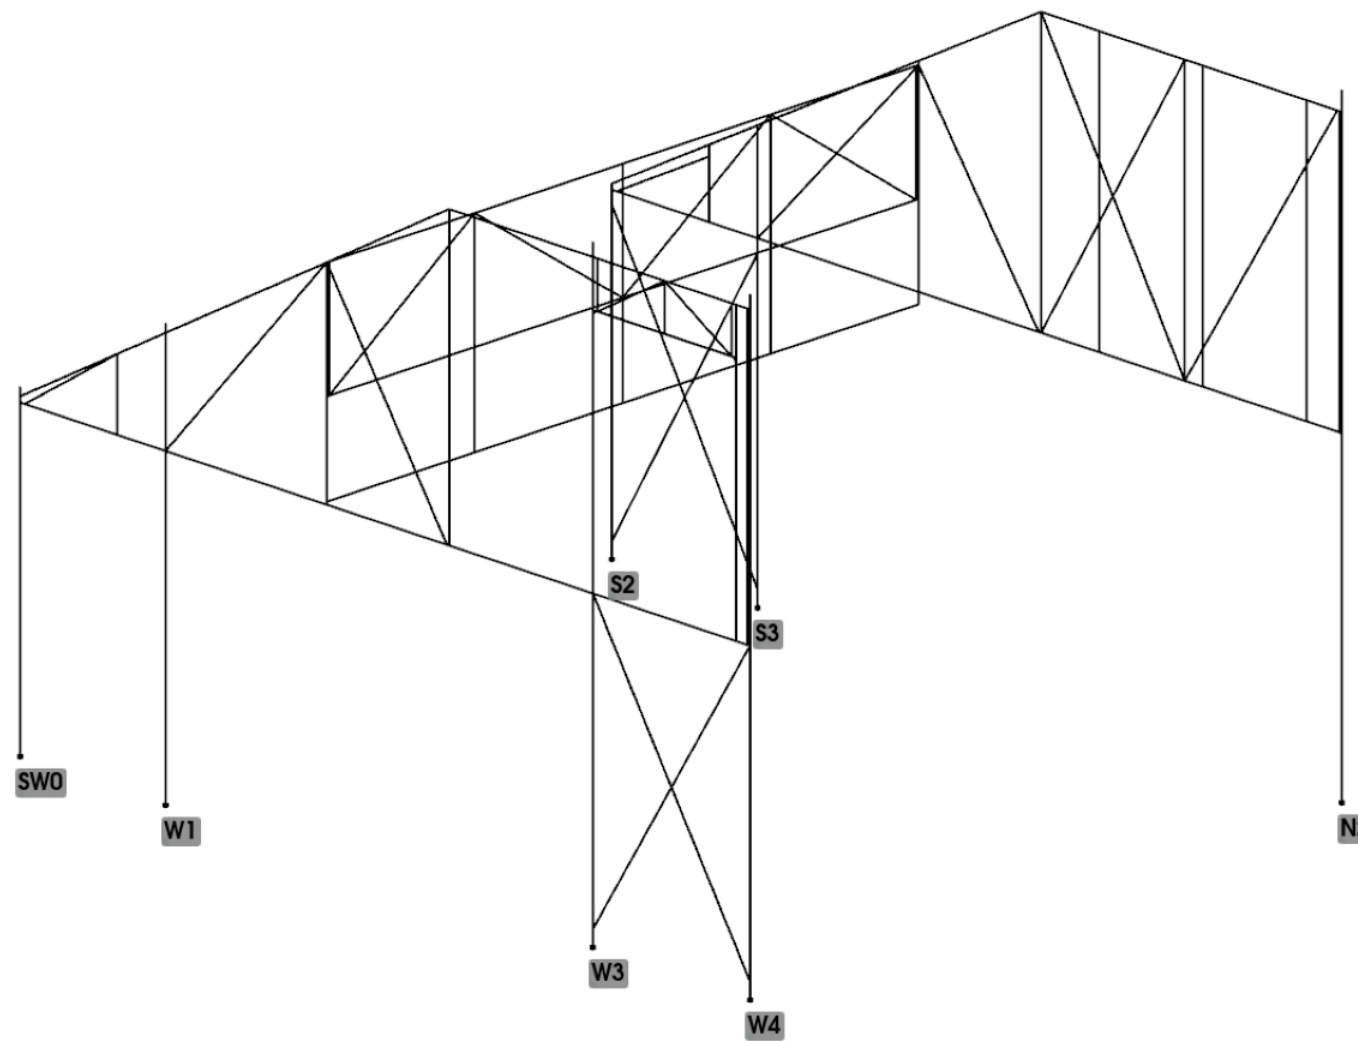

T1 bears on TE and TW; those trusses transfer its load to the ground columns.
No new posts beneath T1. This is a filtered 3D view of the globally solved frame.

ALL Global support path

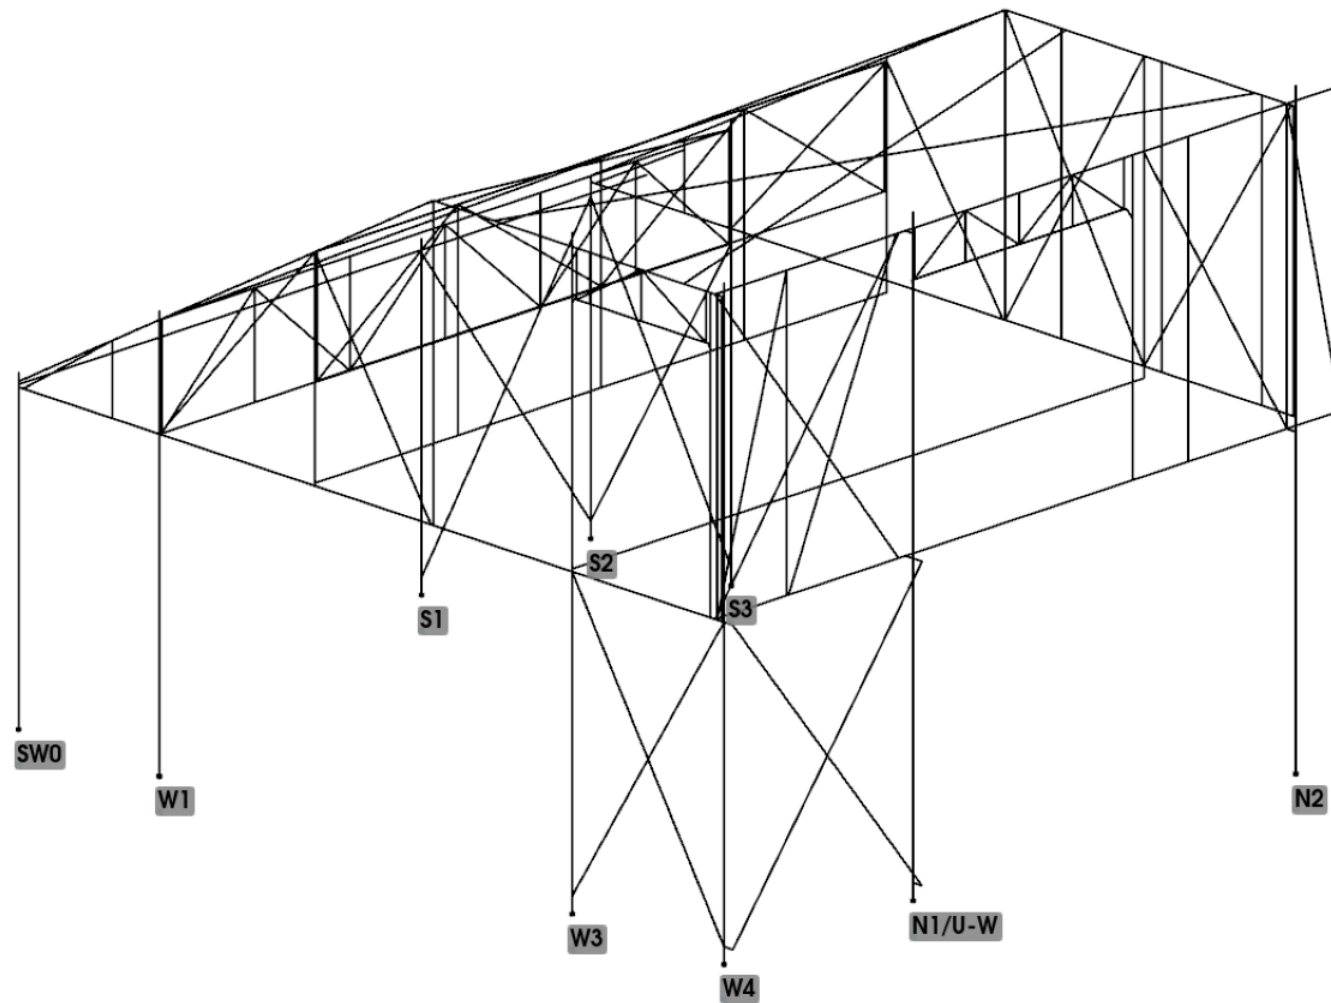

Actual ground supports shown. Shared columns occur once in the global model.
Fixed-base analytical assumption; foundations and connections not designed.

Total column reactions — service storage patches

Ground column	Vertical reaction (lb)
W1	9,857
W3	8,842
W4	2,076
S1	770
S2	2,019
N2	14,360
S3	9,781
SW0	-1,276
N1 / U-W	3,050

Positive = upward support reaction on the frame (compression into foundation).
Negative = downward hold-down reaction (uplift tendency). Values include all attached members.
See CSV for every force and moment component and every load combination.