

HLK-LD2450 User Guide


Content

1. Wire connection


1.1 Pin introduction



1.2 Wire connection tutorial


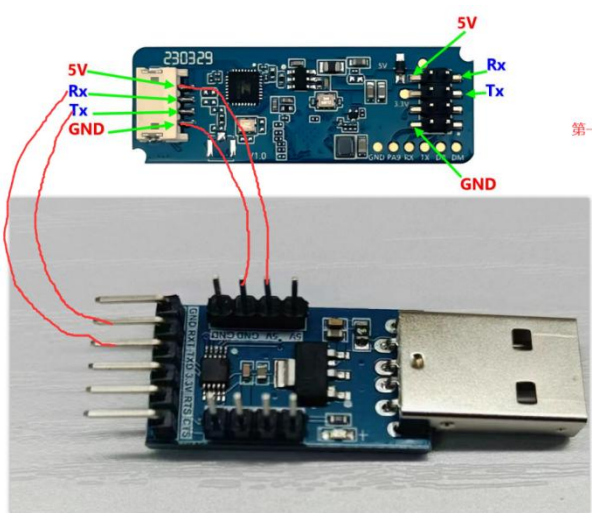


第一种接线方式

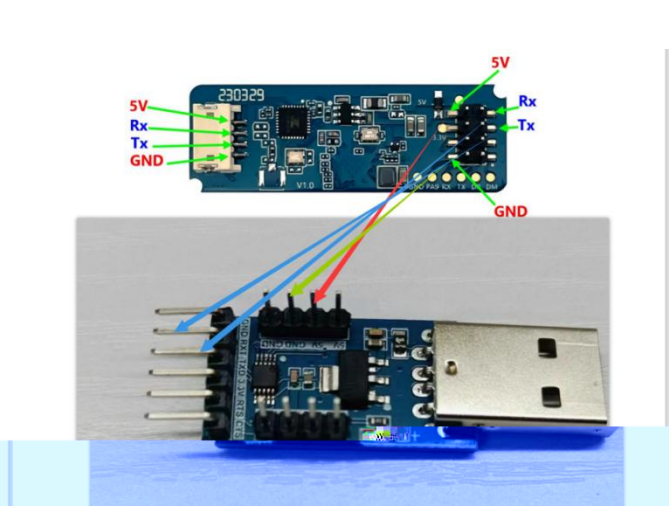


2. Test whether the module is working properly


2.1 Install the driver file

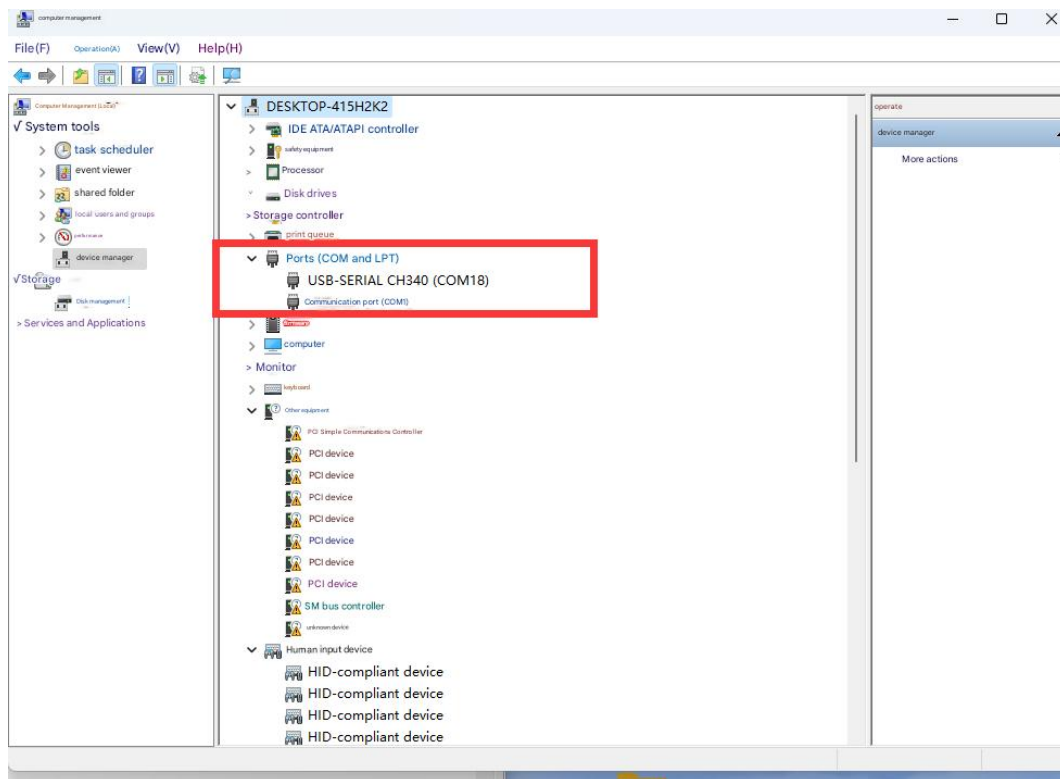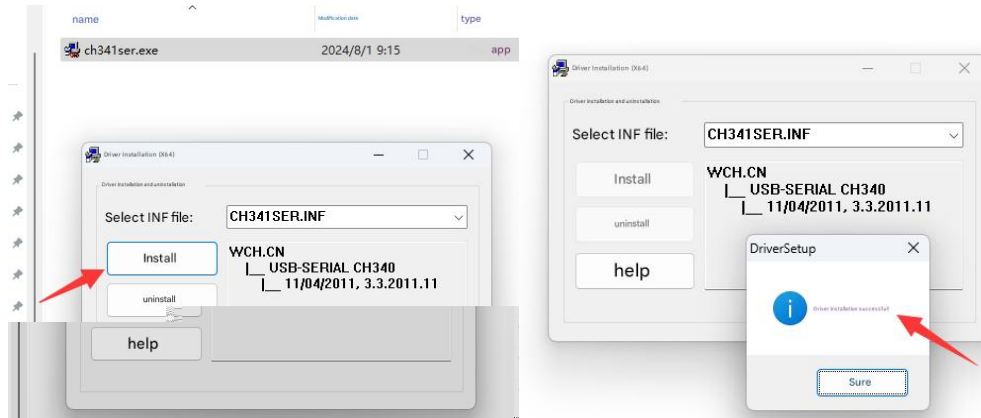

2.2 View serial port data


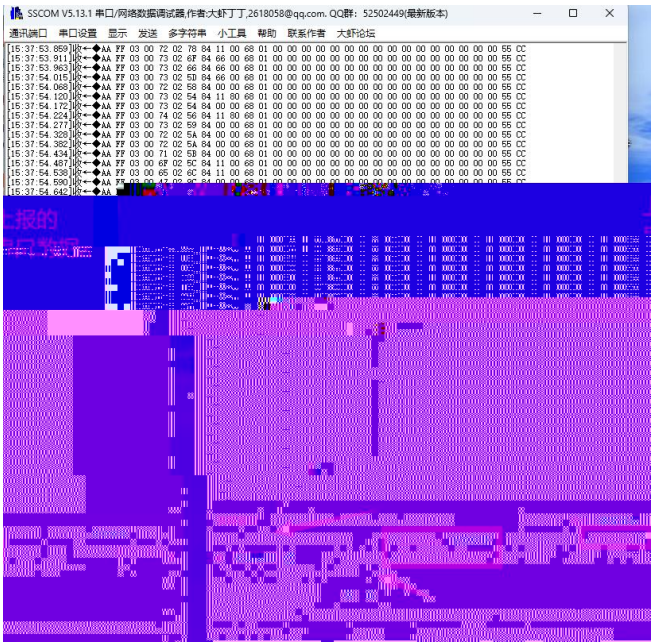




2.3 Test whether the data sent back is normal

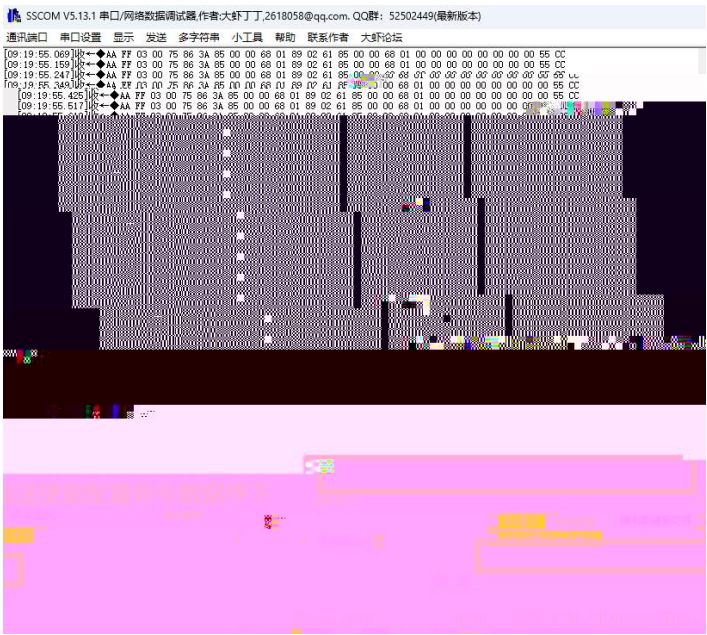


3. Simple test



3.1 Using host computer

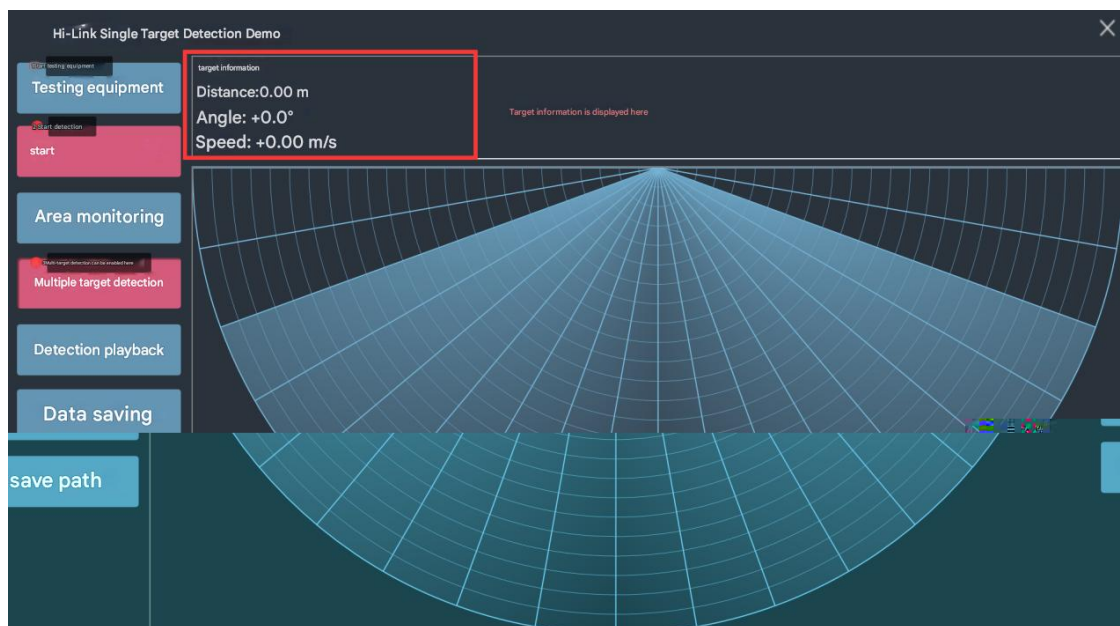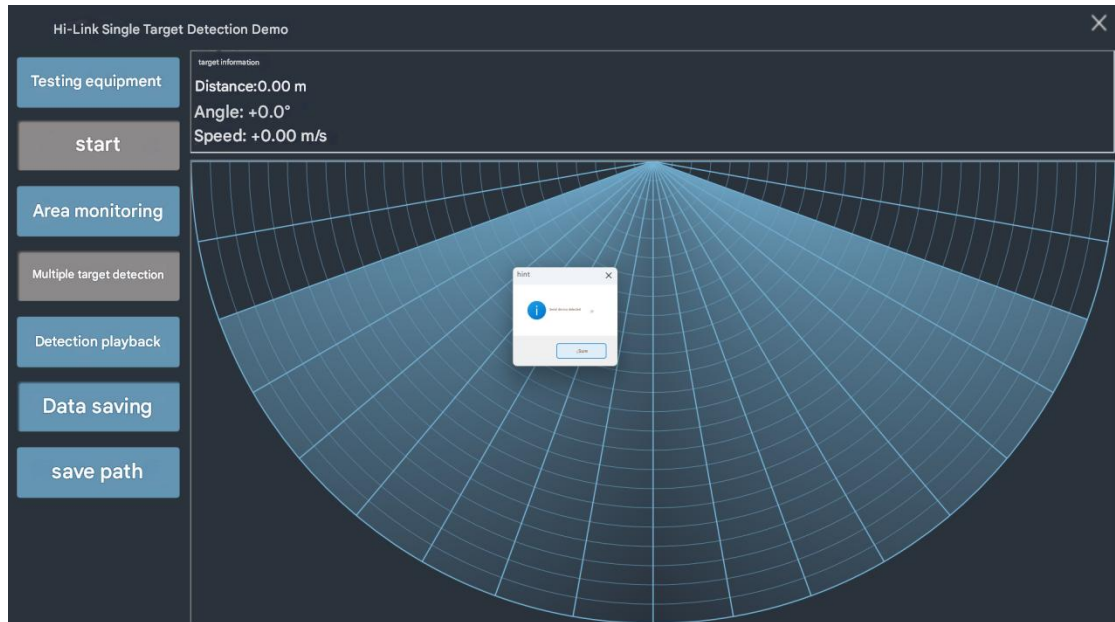


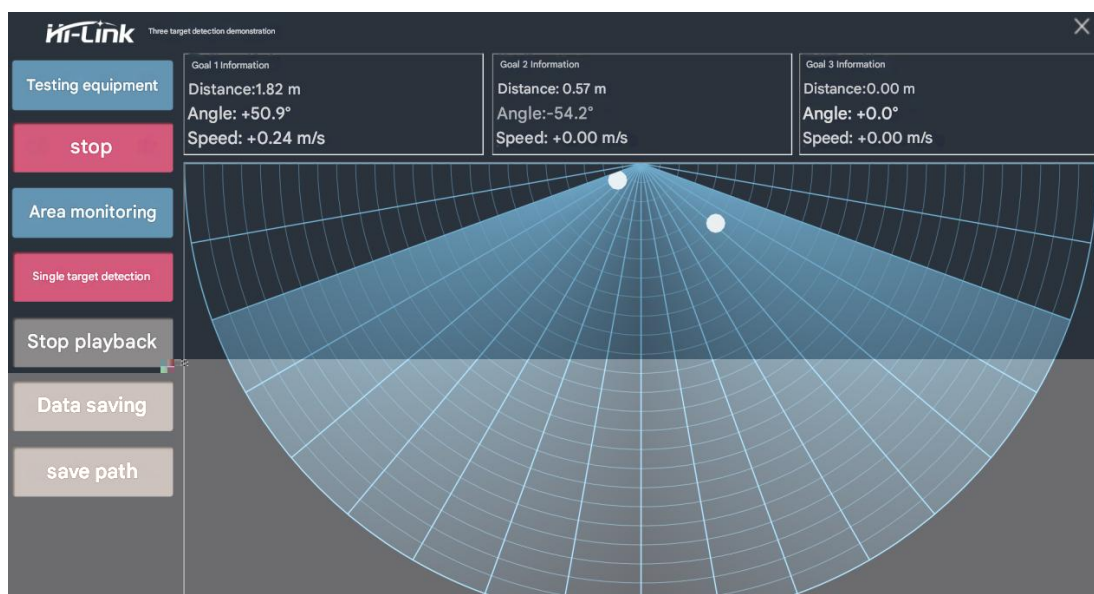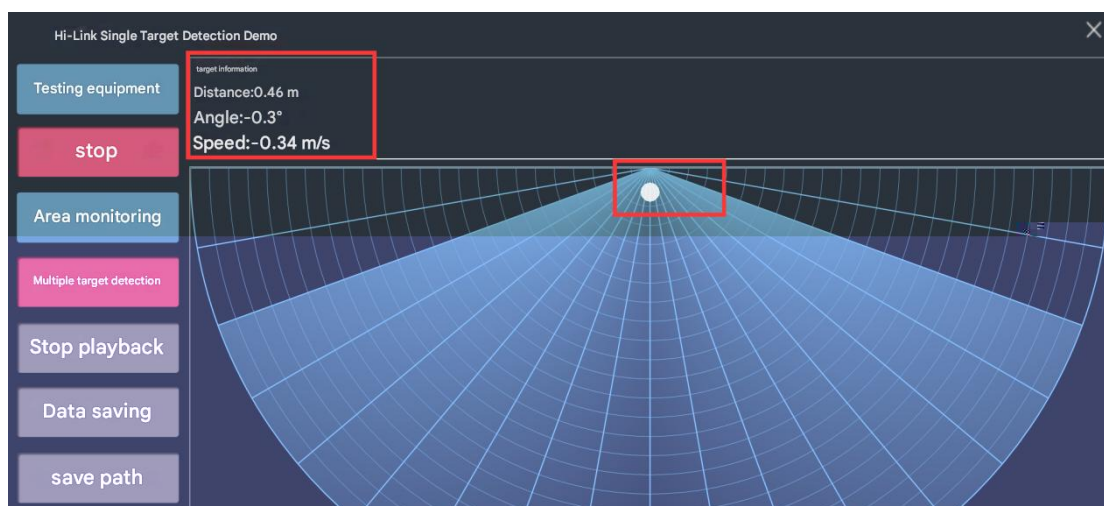


3.2 Using Mobile App

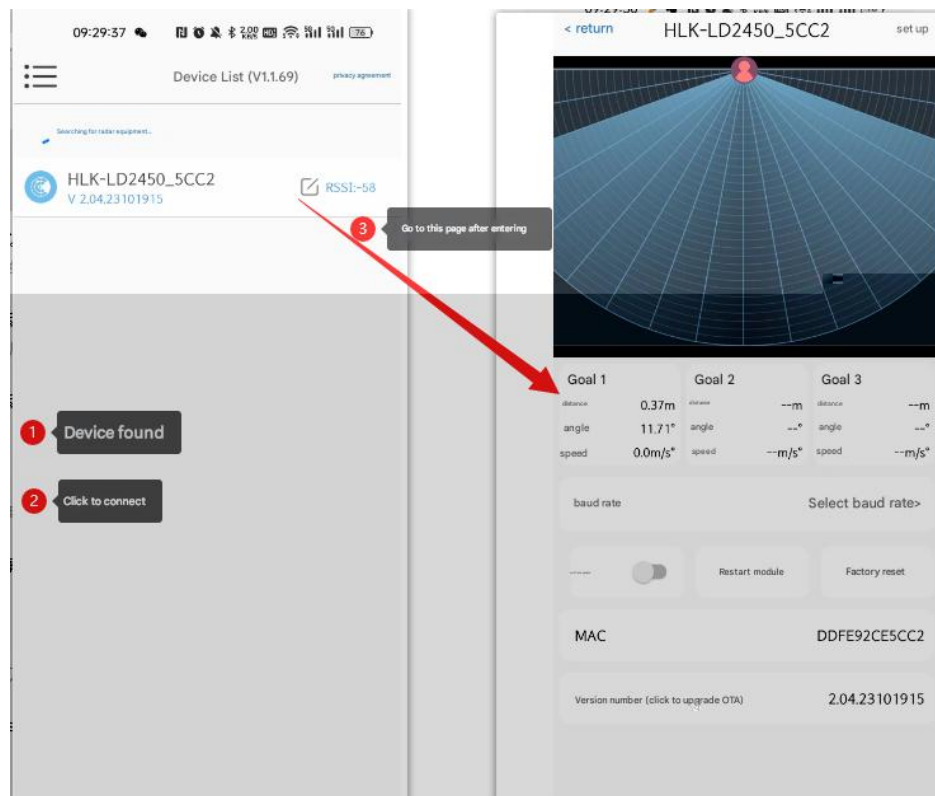

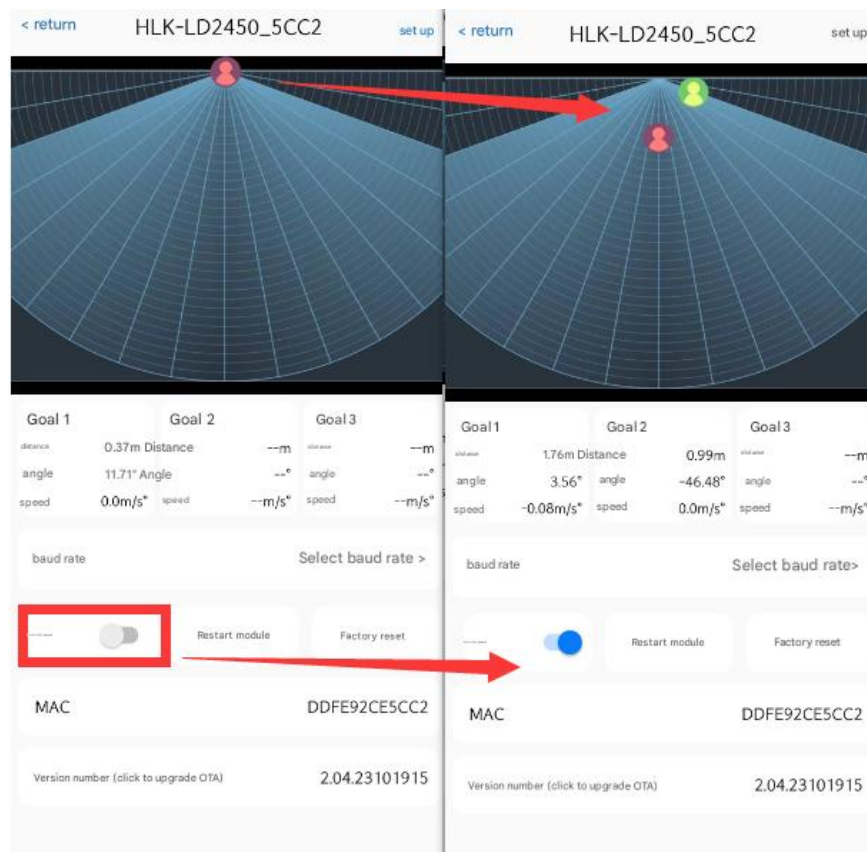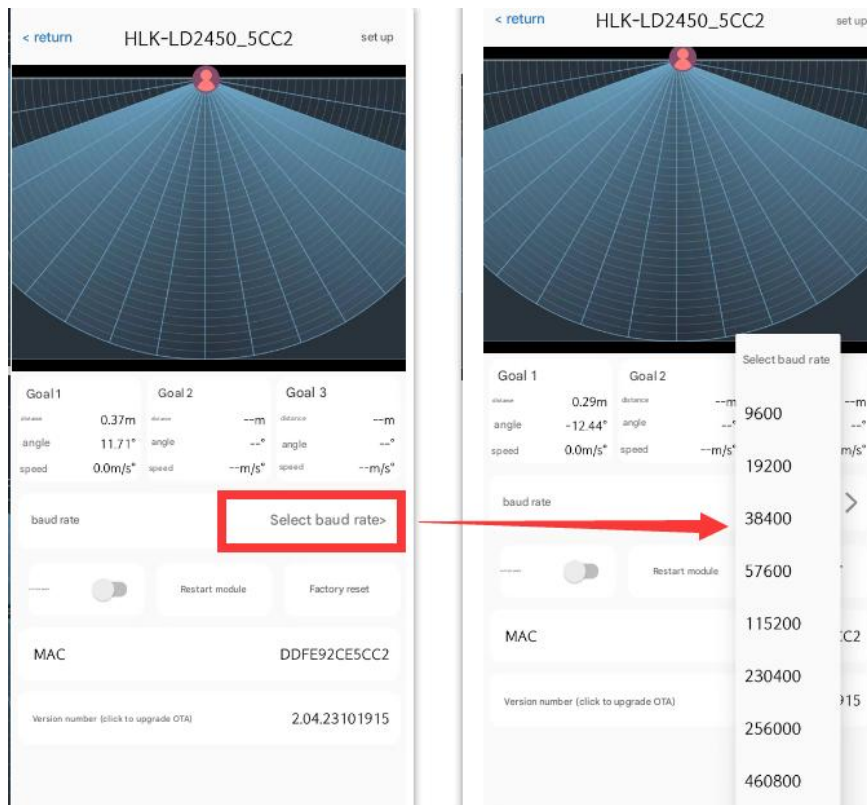

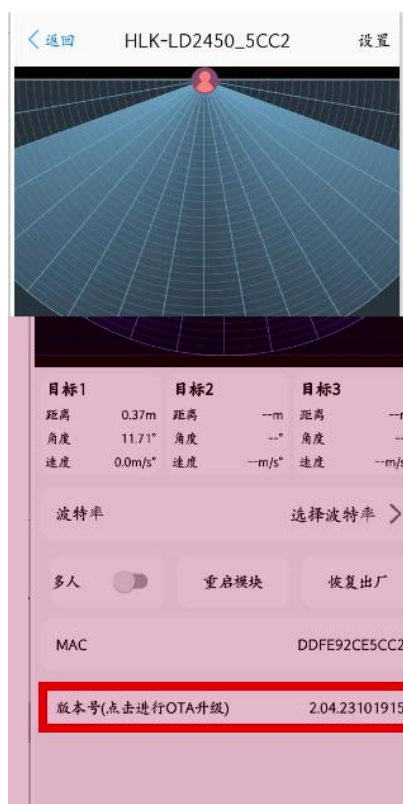

< return HLK-LD2450_5CC2 set up

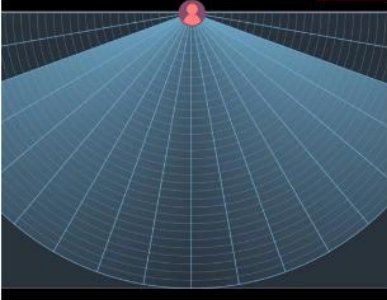

Goal 1

Goal 2

Goal 3

distance	0.37m	distance	--m	distance	--m
angle	11.71°	angle	--°	angle	--°
speed	0.0m/s*	speed	--m/s*	speed	--m/s*


baud rate Select baud rate >

☐ Restart module Factory reset

MAC DDFE92CE5CC2

Version number (click to upgrade OTA) 2.04.23101915

< return Parameter settings

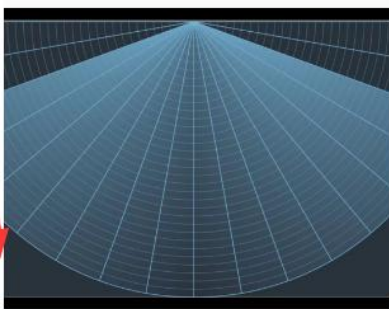

Turn off detection ☒ Area detection ☐ Area filtering ☐


Area 1 (x:0m,y:0m,w:0m,h:0m) ☐

Area 2 (x:0m,y:0m,w:0m,h:0m) ☐

Area 3 (x:0m,y:0m,w:0m,h:0m) ☐

submit

< return Parameter settings

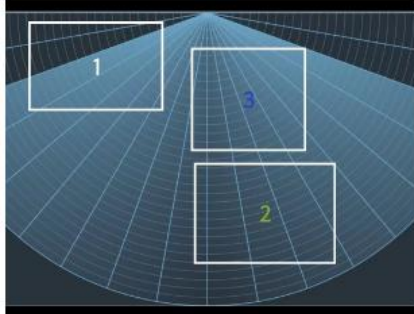

Turn off detection ☐ Area detection ☐ Area filtering ☒


Area 1 (x:1.1m,y:0.5m,w:3.2m,h:2.1m) ☒

Area 2 (x:5.0m,y:3.9m,w:3.4m,h:2.4m) ☒

Area 3 (x:4.9m,y:1.2m,w:2.8m,h:2.4m) ☒

submit

< return Parameter settings

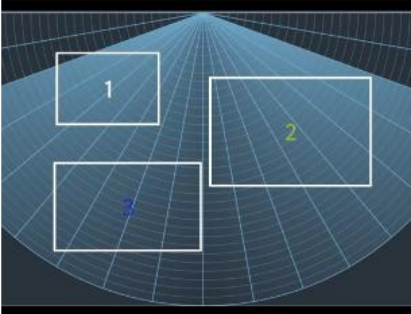

Turn off detection ☐ Area detection ☒ Area filtering ☐

Area 1 (x:1.8m,y:1.3m,w:2.5m,h:1.7m) ☒

Area 2 (x:4.9m,y:1.8m,w:3.8m,h:2.6m) ☒

Area 3 (x:1.8m,y:3.9m,w:3.5m,h:2.1m) ☒


submit

The area detection and area filtering functions can be set separately. Please


note that these two functions cannot be set to take effect at the same time.

4. Frequently asked questions

4.1 Failed to open the serial port device?

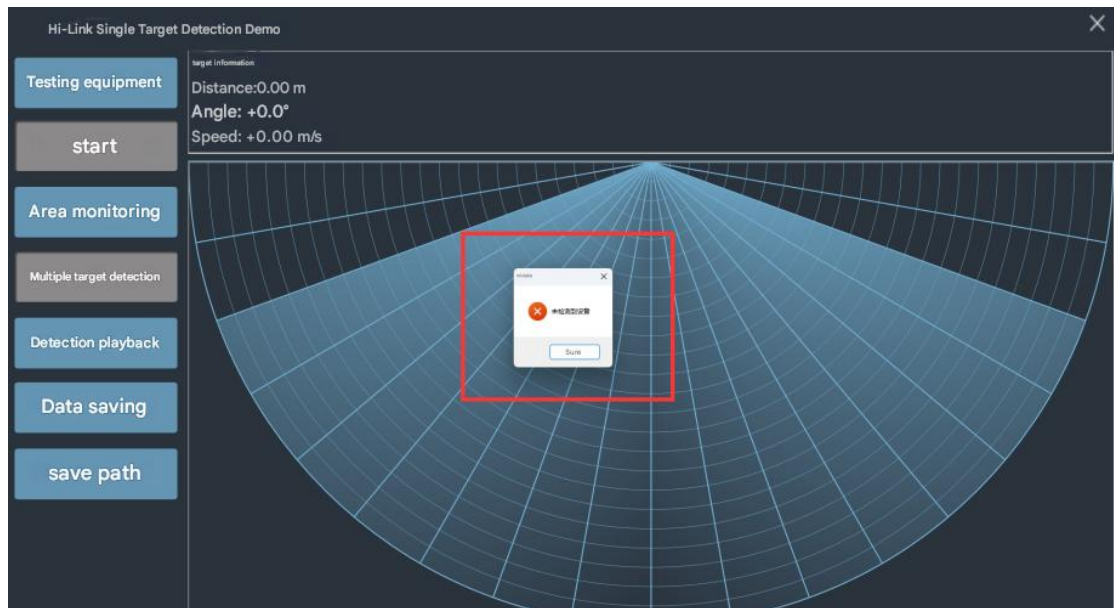

4.2 Why is there no parameter setting page when using the software, and it shows that only the OTA function is supported?

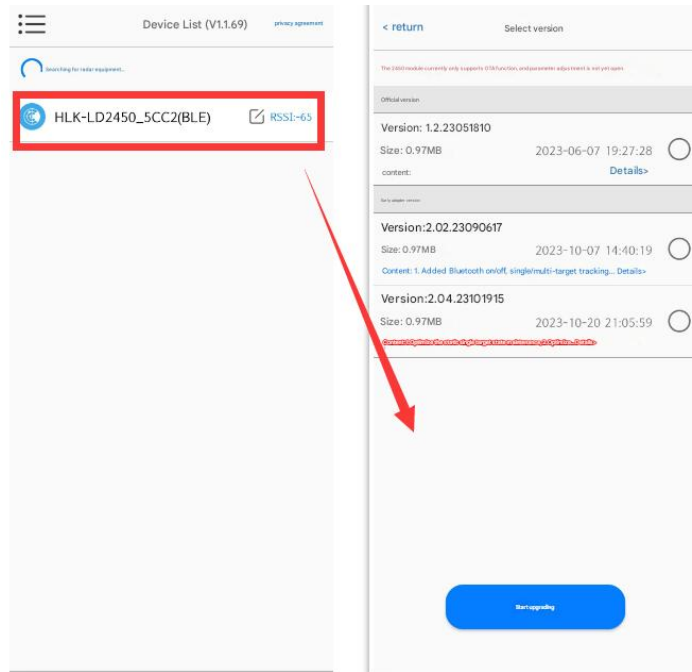

4.3 Why is this data always 68 01?


SSCOM V5.13.1 Serial port/network data debugger, author: Da Xia 小, 2618058@qq.com, QQ group: 52502449 (latest version)

Time	Direction	Data
09:19:55.069	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.159	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.247	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.349	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.425	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.517	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.618	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.692	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.781	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.870	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:55.960	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.048	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.137	→	AA FF 03 00 75 86 3A 85 00 00 68 01 89 02 61 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.226	→	AA FF 03 00 75 86 3A 85 00 00 68 01 76 02 54 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.315	→	AA FF 03 00 75 86 3A 85 00 00 68 01 63 02 47 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.404	→	AA FF 03 00 75 86 3A 85 00 00 68 01 4F 02 3B 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.493	→	AA FF 03 00 75 86 3A 85 00 00 68 01 3D 02 2F 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.582	→	AA FF 03 00 75 86 3A 85 00 00 68 01 28 02 2A 85 18 80 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.671	→	AA FF 03 00 75 86 3A 85 00 00 68 01 12 02 2C 85 18 80 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.760	→	AA FF 03 00 75 86 3A 85 00 00 68 01 FB 01 32 85 18 80 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.849	→	AA FF 03 00 75 86 3A 85 00 00 68 01 E4 01 35 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:56.938	→	AA FF 03 00 75 86 3A 85 00 00 68 01 CF 01 36 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:57.027	→	AA FF 03 00 75 86 3A 85 00 00 68 01 BA 01 38 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:57.116	→	AA FF 03 00 75 86 3A 85 00 00 68 01 A6 01 39 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:57.205	→	AA FF 03 00 75 86 3A 85 00 00 68 01 92 01 3A 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:57.295	→	AA FF 03 00 75 86 3A 85 00 00 68 01 83 01 1D 85 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:57.383	→	AA FF 03 00 75 86 3A 85 00 00 68 01 77 01 FB 84 00 00 68 01 00 00 00 00 00 00 00 00 55 CC
09:19:57.472	→	AA FF 03 00 75 86 3A 85 00 00 68 01 6E 01 D5 84 00 00 68 01 00 00 00 00 00 00 00 00 55 CC

4.4 What is the purpose of the 2450 antenna? Can it be left unconnected?

4.5 How to turn Bluetooth on or off?

5. Module test installation

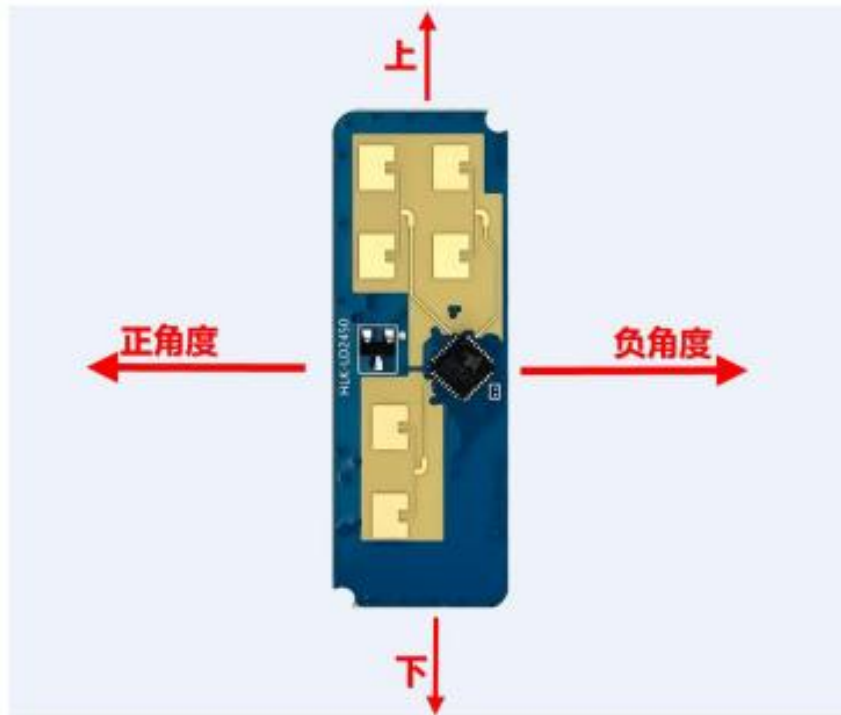

6. 2450 coordinate calculation method



收←◆

			</						

←◆

收←◆

