

ANYTRON

Any-002

User manual

Rev. 1.0 – 2015.12.11

PUBLIC



[Table of Contents]

I. Introduction of system and its installation	7
1. Certification status and safety	7
1-1 Certification status.....	7
1-2 Emergency measure.....	7
1-3 Legal force of this document	7
2. Product Specifications.....	8
2-1 Press Station.....	8
2-1.1 Specifications.....	8
2-2 Digital Press	8
2-2.1 Specifications.....	8
3. Composition of equipment.....	10
3-1 Name of equipment and explanation.....	10
3-1.1 Press Station	10
3-1.2 Printer.....	12
3-2 Consumable Parts.....	13
4. Components list.....	14
5. Requirements for installation.....	15
5-1 Environment for installation and caution	15
5-1.1 When installing	15
5-1.2 When using	15
5-2 Power requirement	15

5-3 PC requirement.....	15
6. Installation.....	16
6-1 Hardware Installation.....	16
6-1.1 Cable.....	16
6-2 Software Installation.....	17
6-2.1 Printer driver installation.....	17
6-2.1.1 1 In case of connection by USB	17
6-2.1.2 In case of connecting by Ethernet	19
6-2.2 RIP program installaiton.....	22
6-3 Inquiry and Download.....	22
7. Installation check	23
7-1 Power check	23
7-2 Interface check.....	23
7-3 Printing test pattern.....	23
II. How to use Any-002 system	24
1. Information about media which can be supported	24
2. Operation of hardware	24
2-1 Operation of hardware	24
2-1.1 Installation of roll label	24
2-1.2 How to use sensor.....	26
2-1.2.1 Explanation on sensor module	26
2-1.2.2 How to tune the sensor	27
2-1.2.2.1 How to use GAP pre-cut media	27

2-1.2.2.2 How to use blackmark pre-cut media	28
2-1.3 How to use the cutter.....	28
2-2 Printer control pannel.....	29
2-3 Caution.....	29
3. Software operation.....	31
3-1 How to use basic Illustrator for ANY-002	31
3-1.1 Measurement of layout size	28
3-2 How to use printer driver.....	32
3-2.1 Setting roll paper driver	32
3-3 Roll paper printing.....	33
3-3.1 Overview.....	33
3-3.2 Print setting by paper.....	33
3-3.3 Printing rule depending on length of image	34
3-3.4 Caution.....	34
3-4 Pre-cut roll media printing.....	34
3-4.1 Overview.....	34
3-4.2 Error and risk factor.....	35
3-4.2.1 Occurring error	35
3-4.2.2 Caution... ..	35
3-4.3 Understanding of pre-cut roll media printing	35
3-4.4 How to set driver for using pre-cut roll	36
3-4.5 Error correction	36
3-4.5.1 Full Bleed.....	36

3-4.5.2 '1M Measurement' method	37
3-5 How to use Anycomm	38
3-5.1 Overview.....	38
3-5.2 Installation and execution	38
3-5.2.1 Cable connection	38
3-5.2.2 2 Installation of Serial to USB driver	39
3-5.2.3 Program execution	39
3-5.3 How to use	40
3-5.3.1 Paper saving function	41
3-5.3.1.1 Continuous paper	41
3-5.3.1.2 2 Pre-cut paper	42
3-5.3.2 Counter function	42
III. Any-002 System maintenance	43
1. Maintenance	43
1-1 Overview.....	43
1-2 Checking consumables replacement cycle and replacement	43
1-2.1 Checking consumables replacement cycle	43
1-2.2 Replacement of consumables	44
1-2.2.1 Replacement of toner and cartridge	44
1-2.2.2 Replacement of image drum	44
1-2.2.3 Replacing the Transfer Belt Unit	47
1-2.2.4 Fuser replacement	49
1-3 Cleaning	51

1-3.1 Clean the LED HEAD	51
1-3.2 Cutter cleaning	51
1-4 Consumables purchase	52
1-5 Inquiry and download	52
2. Problem diagnosis and solution	53
2-1 Error type according to error message and explanation	53
2-1.1 Occurrence of paper jam	53
2-1.2 Error code table	53
3. Warranty period and policy	63
3-1 Warranty period and policy	63
3-2 A/S and inquiry	63

I. Introduction of system and its installation

1. Certification status and safety

1-1 Certification status



1-2 Emergency measure

※ How to manage toner powder

- 1) If swallowed toner powder, let him/her drink cold water a little and consult doctor. Do not induce vomiting.
- 2) If inhaled during breathing, move the patient outside so as to breath in fresh air and consult doctor.
- 3) If powder entered eyes, wash eyes with running water for more than 15 minutes while opening eyes and consult doctor.
- 4) If powder is spilled out, wash well with cold water and soup so as for skin or clothes not to be contaminated.
- 5) When toner powder touched skin or clothes, it may not be eliminated if it is contacted with hot water.

1-3 Legal force of this document

- This manual does not have any legal binding and we inform you that there would be no legal problem even though it is changed in our own discretion without additional notice.

2. Product specifications

2-1 Press Station

2-1.1 Specifications

Press Station		
Maximum diameter of installed media rolls (Includes paper tube size)		370mm
Diameter of the core insides		3inch(76.2mm)
Media width	Min.	2.76inch(70mm)
	Max.	8.5inch(215.9mm)
	Continuous paper – No adjustment	Beginning 3M ± 0.7 mm After 3M ± 0.2 mm
	Continuous paper - Adjustable	Beginning 3M ± 0.7 mm After 3M ± 0.4 mm
Dimension (HxWxD)		1150x580x505mm
Weight		85kg
Power		AC 100~240, 50/60Hz, 2.5A

2-2 Digital Press

2-2.1 Specifications

Digital Press		
Printing speed	Plain paper	Max. 7.7m/min
Operating environment (Paper sheet)	Temperature	10°C - 32°C
	Humidity	20 – 80% RH
Operation environment (Continuous paper)	Temperature	17°C - 27°C
	Humidity	40 - 60% RH
Media weight		64 – 250 gsm
Warm-up time		35 sec
First page printing time		9 sec
Resolution		600x600dpi 600x1200dpi
Printable length		200 meters
Printable area (width)		208 mm
Paper size	Min.	3 x 5 inch
	Max.	8.5 x 4800 inch

	Continuous paper width	8.5inch (215mm)
Margin of error	Cut sheet	± 0.4 mm
	Continuous paper – No adjustment	Beginning 3M ± 0.8 mm After 3M ± 0.2 mm
	Continuous paper - Adjustable	Beginning 3M ± 0.7 mm After 3M ± 0.4 mm
Standard memory configuration		256MB
HDD		160GB
Aftermarket supplies	RFID lock-out for toner	Yes
	Image drum with unique lockouts	Yes
Printer language		PCL5c
Dimension (HxWxD)		389x435x546mm
Weight		28kg(Includes consumables)
Interface		High-speed USB/Ethernet
Power		AC 100~120/220~240V, 50/60Hz
Driver/Utility		Windows Server 2008, XP, VISTA(32&64bit), Windows 7, 8, 8.1, 10(32&64bit)

3. Composition of equipment

3-1 Name of equipment and explanation


3-1.1 Press Station



Image	Name	Explanation
	Unwinder	Part to mount roll paper. Unwinder releases paper to feed the printer, and allows the paper to keep constant tension
	Media guide	 Guide for paper moving from the feeding roller to the printer. If you move fixing lever to 'LOCK' position after completing paper installation and alignment as shown above, you can fix paper.


	Feeder	Transfer the paper to the printer
	Cutter	Cuts continuous paper upon completion of printing
	Sensor	The sensor for sensing the Gap, Black mark , and Backside black mark
	Feed roller Fixed Lever	It is locking system to fix feed roller. If installing paper and moving relevant lever to "LOCK" position, you cannot move paper backwards. To move paper backwards, you have to change lever to 'OPEN' position.
	Cut button	Button for operating the cutter
	Power	On/off button for the station and printer

3-1.2 Printer

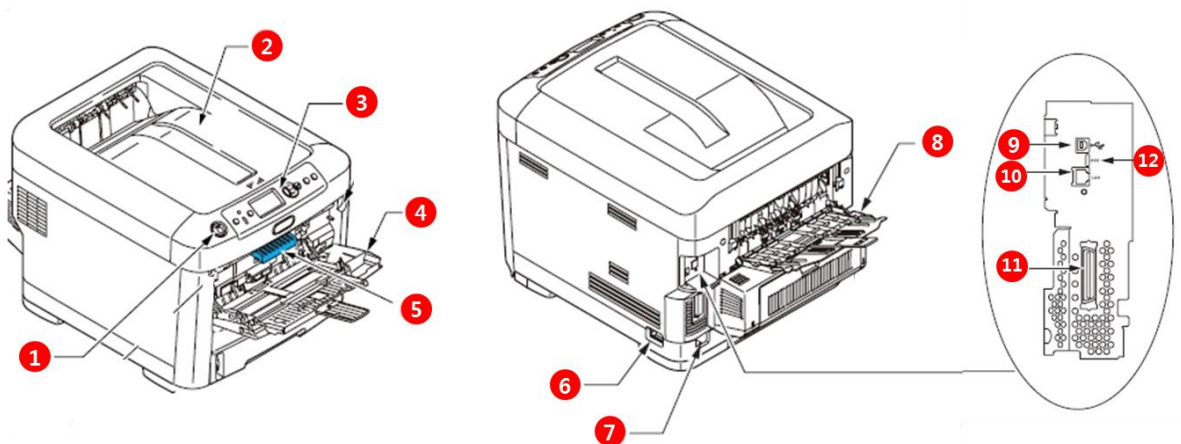


No	Name	Explanation
①	Top cover release button	The top cover is opened by pressing the button
②	Top cover	The cover is opened by pressing the button 1
③	Operator panel	Menu-based control and LCD panel
④	Multi-purpose tray	Tray for using continuous media
⑤	Front cover release lever	The front cover is opened by pulling the lever
⑥	On/Off switch	Printer power switch
⑦	AC power socket	Connection for printer power cable
⑧	Rear stacker	Tray that accepts and stacks printed continuous media as it is released.
⑨	USB interface	Interface that directly connects a PC with the printer
⑩	Network interface	Interface to use the printer via a network
⑪	ACC interface	
⑫	Parallel interface	

3-2 Consumable Parts

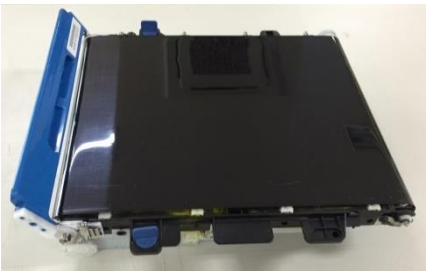No.	Photograph	Item	Q'ty (EA)
1		Toner	4
2		Image Drum	4
3		Fuser unit	1
4		Belt unit	1

4. Component List

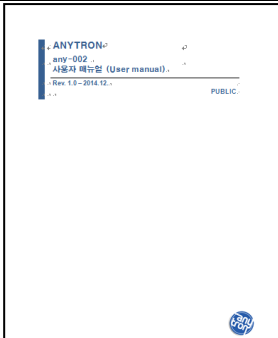No.	Photograph	Item	Q'ty
1		Any-002 (Printer Station, Digital printer, start consumable set)	1
2		Power cable	1
3		Serial to USB cable	1
4		USB cable(A to B)	1
5		Ethernet cable (Direct cable)	1
6		User manual	1

7		Wrench set	1
8		Driver installation CD	1

5. Requirement for installation

5-1 Environment for installation and caution

5-1.1 When installing

- Install it in safe place where there is no risk of falling.
- Do not install in the place of high temperature or humidity. There may be risk of not operating normally or electric shock.
- Do not use loose socket or damaged power code. It may cause electric shock or fire.
- Connect power code to socket or multi outlet having grounding terminal.

5-1.2 When using

- Check and repair should be carried out only by specialist.
- Do not dismantle discretionally and give shock.
- Do not use around things to which magnet is attached or keep together with them.
- Use it in the places without electromagnetic interference.
- Do not place things on the product that is heavy or has risk of spilling over.
- Do not use chemicals or cleanser to clean product.
- Use program provided or acknowledged only by Valloy Anytron Support team.

5-2 Power requirement

- AC 100~ 120V/220~ 240V, 50/60Hz (Possible to select)

5-3 PC requirement

- Window7 (32& 64bit), Window8 (32& 64bit), Window8.1 (32& 64bit)
- CPU: above i3, HDD: above 100GB, RAM: above 4GB

6. Installation

6-1 Hardware installation

6-1.1 Cable

- Connect cable suitable for use to rear of printer as shown in the picture.

①Print using USB cable: In case that condition of network is unstable or capacity of file to be printed is very big, printer can process file at a faster speed than Ethernet.

②Print using Ethernet: Time that print processes file may differ depending on condition of network.



- Connect power cable of station.




※ If station power is OFF, then power of printer is also OFF regardless of printer switch ON/OFF.





6-2 Software installation

6-2.1 Printer driver installation



6-2.1.1 In case of connection by USB

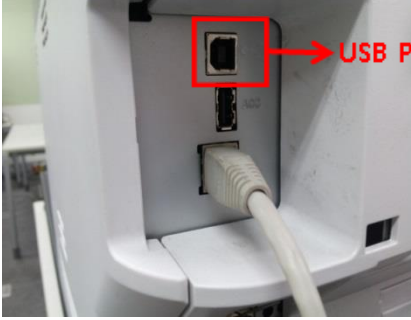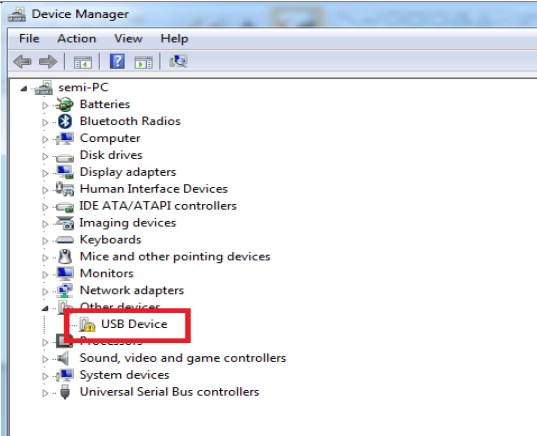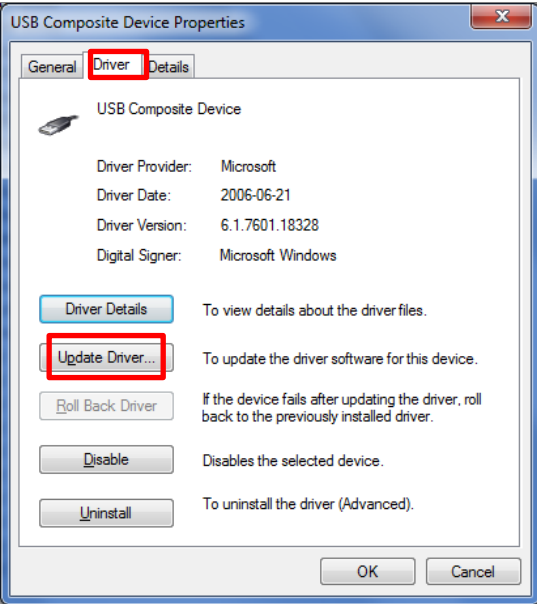1.		Connect USB cable to printer and PC respectively.
2.		After executing [Device Manager], double click 'USB Device'
3.		After clicking [Driver], click [Update Driver]

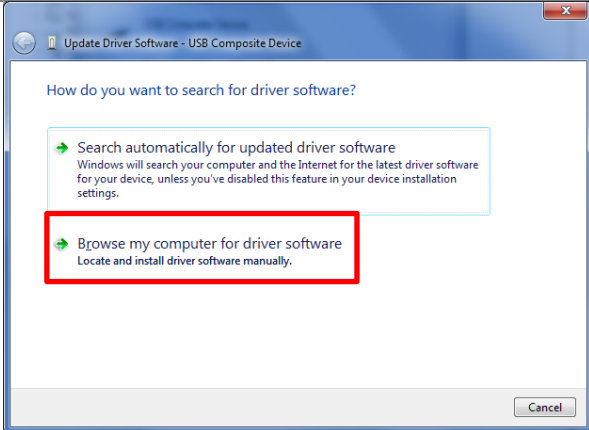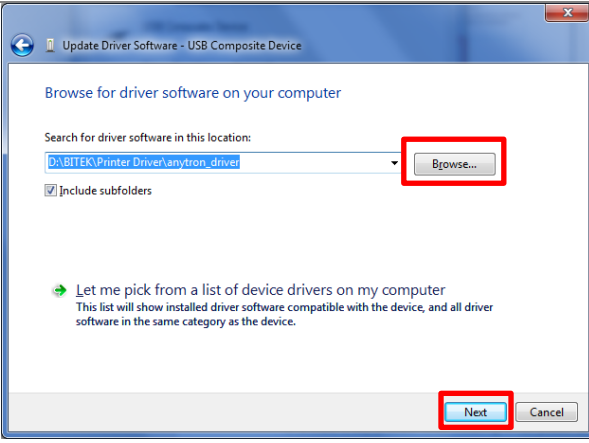
4.		Click [Brows my computer for driver software]
5.		Seek for [anytron_driver] by clicking [Browse] If checks [Include subfolders] and presses [Next], all installations would be completed.

※ If there is any problem when installing driver, please send E-mail to support@valloy.net, then you can get remote service.

6-2.1.2 In case of connecting by Ethernet

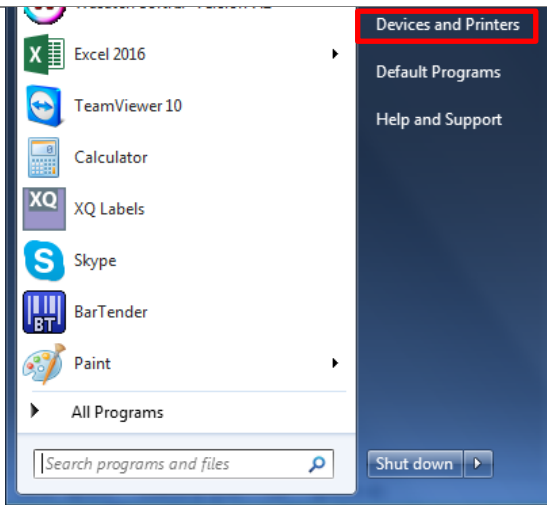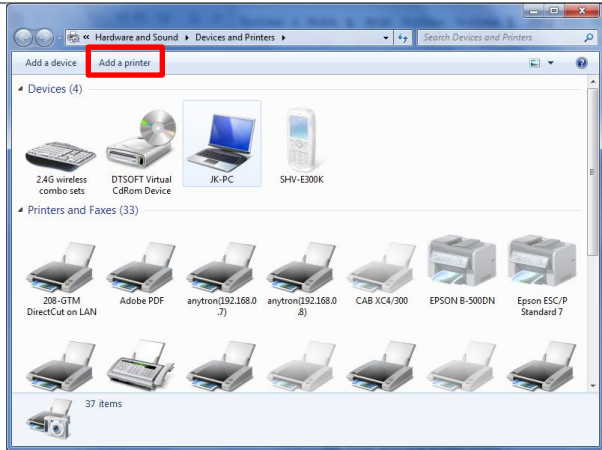
1		Connect LAN cable to printer as shown in the picture. (Direct cable is for connecting printer with sharer or hub, and Cross cable is for connecting printer with PC directly.)
2.		Execute [Device and Printers] at start menu.
3.		Click [Add a Printer] at activated Window.

4.

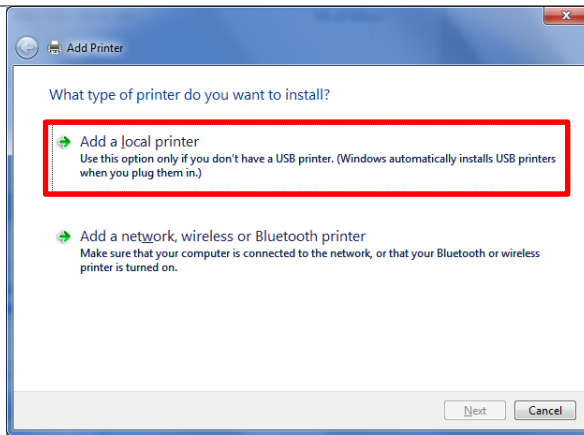


Click the [Add a local printer]

5.

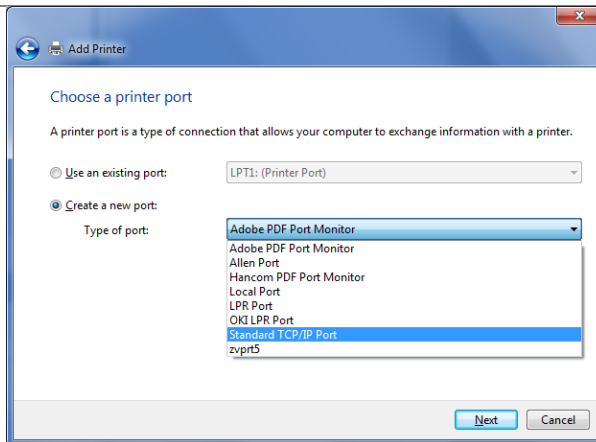


After selecting [Standard TCP/IP Port] of [Create a new port], click [Next].

6.

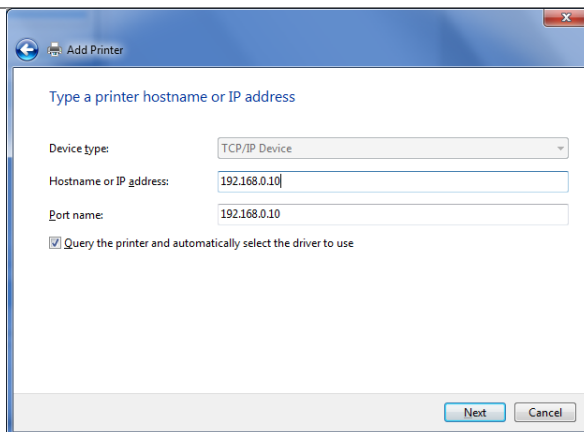


Input IP address of printer and click [Next]

7.

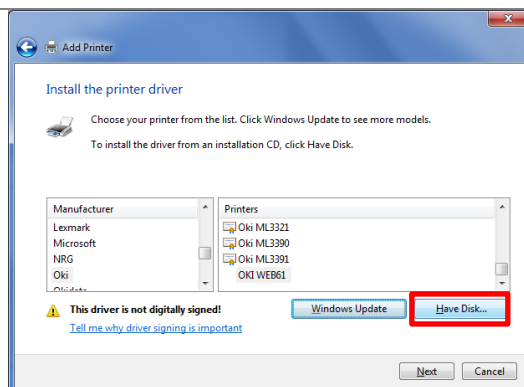


Click [Have Disk]

8.

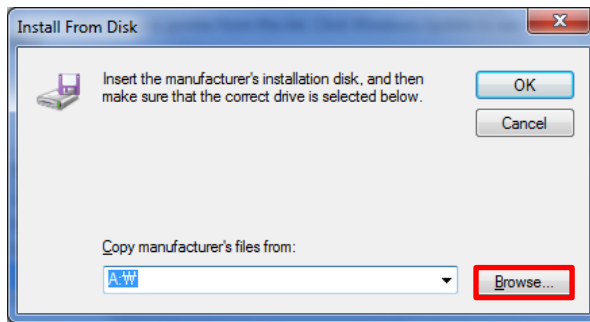


Insert Anytron CD into computer and click [Browse].
(You can download at website)

9.

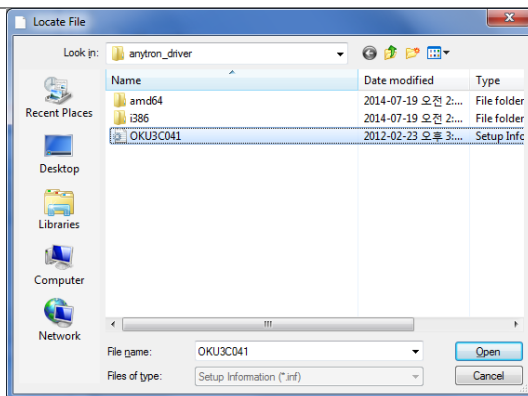


Click [Computer] among location to be sought and
select [anytron_driver] at [Anytron] media device.
Thereafter click [Open]

10.




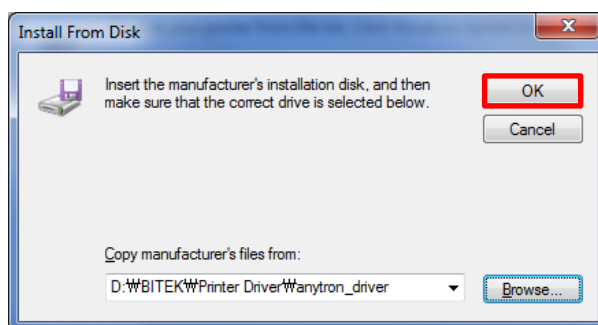


Click [OK]

11.

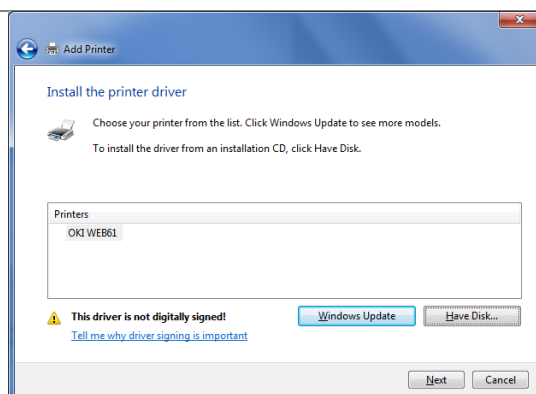

Check OKI WEB61 and click

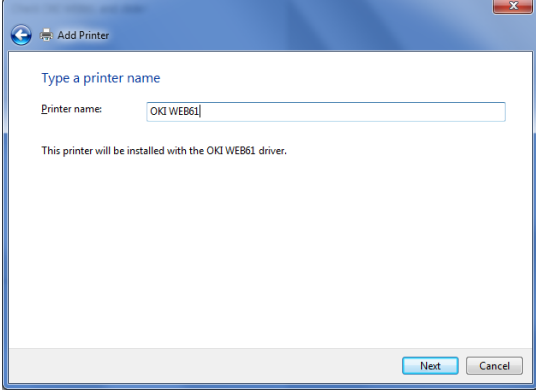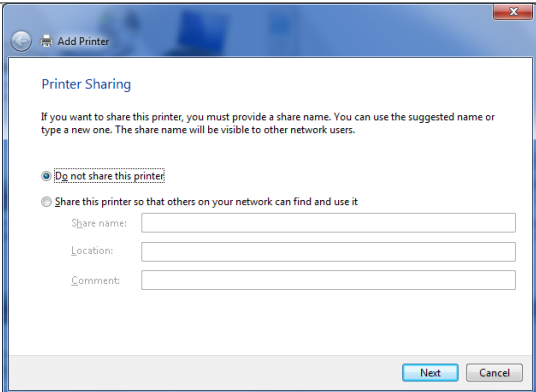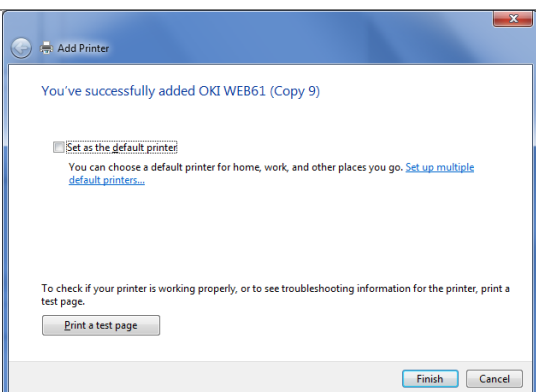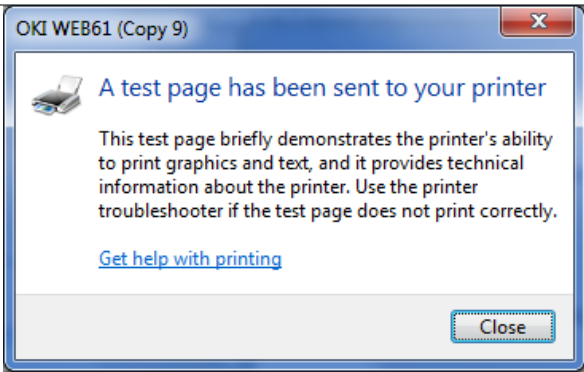12.		Input printer name and click [Next]
13.		Select [Do not share this printer] and click [Next]
14.		Select [Set to default printer] and click [Confirming test page] to check connection. (A4 paper should be fed in Tray 1)
15.		After checking test page printing, press [Close] and [Finish] to complete installation.

※ If there is any problem when installing driver, please send E-mail to support@valloy.net, then you can get remote service.

6-2.2 RIP program installation

- ※ Please refer to separate RIP manual.

6-3 Inquiry and download

- You can download printer driver and utility, manual stated below website.
- If you have any inquiry, please send E-mail to below address.

Arrow Systems Inc.

T - (888) 697-2749

E - Support@arrsys.com

7. Installation check

7-1 Power check

- When switching on the equipment, check whether it makes 'beep' sound.
- Check whether "Ready to print" is displayed on LCD window of printer.
- Check whether light of cut button and sensor is on as shown as below picture.





7-2 Interface check

- When pressing print, paper is transmitted automatically (Normal)
- When print is completed, paper is cut automatically at station (Normal)

7-3 Print test pattern

- Check whether LCD window of printer displays 'Ready to print'.
- Click 'Top' or 'Bottom' button on operating panel of printer.
- Select 'Printer information' on LCD window of printer and click 'Enter' key.
- Select 'Demo page' on LCD window of printer and click 'Enter' key.
- Select 'Execute' on LCD window of printer and click 'Enter' key.
- Demo page will be printed in Tray 1.

II. How to use Any-002 system

1. Information about media which can be supported


Classification	Kind of media	Remark
Media which can be	- Paper: Art paper, Glossy paper, Vellum paper and	Silver PET is limited

supported	Kraft paper - Film: PET, PP, Teslin and PVC - Other: Transfer media	only for printing K(black).
Media which cannot be supported	PE, media of which surface contains metal series (Golden paper, silver paper, etc.)	
This information is limited only to the papers that are verified by Arrow Systems, Inc..		

2. Operation of hardware

2-1 Operation of hardware

2-1.1 Installation of roll label

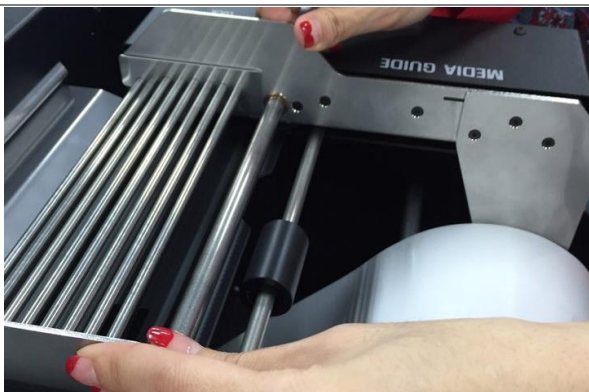
1.		Install media at Unwinder as shown in picture
2.		Install Unwinder equipped with media on equipment
3.		Adjust media guide to match width of media

4.		Fix media guide by moving media guide fixing unit to LOCK.
5.		Fix feed roller by moving feeder fixing unit to LOCK
6.		Install media through the route as shown in picture
7.		Media installation is completed.

2-1.2 How to use sensor

2-1.2.1 Explanation on sensor module

- Any-002 supports 3 types of sensing mode which is designed to support pre-cut paper.

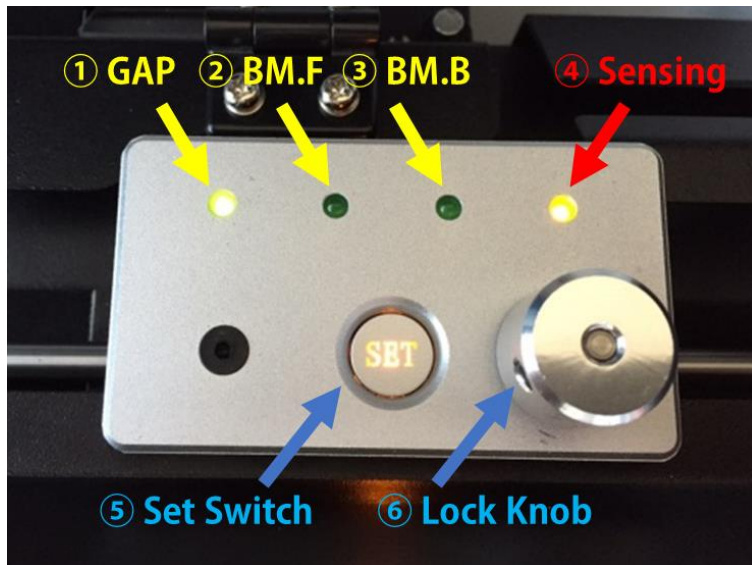


- ① GAP sensing mode LED
- ② Front black mark sensing mode LED
- ③ Rear black mark sensing mode LED
- ④ Sensing check LED: LED is on when sensor is located on gap of pre-cut or black mark
- ⑤ SET switch: It supports 3 movements.
 - Pressing for one second: It changes sensing mode. It also saves teaching value while using automatic sensing mode.
 - Pressing for 3 seconds: Selected sensing mode enters 'Auto Teaching' mode.
 - Pressing for 5 seconds: Sensor is initialized.
- ⑥ Sensor module fixing knob

2-1.2.2 How to tune the sensor

- Before using the installed sensor(media), you have to check the sensor works normally on Pre-cut media.


- If you turn off and turn on the power, the sensor value is initialized.

2-1.2.2.1 How to use GAP pre-cut media

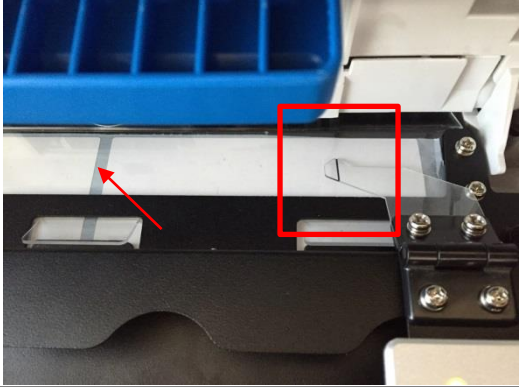1.		- Black line that marked on plastic guide of left photo, is guide for sensor position. - Move the sensor guide line of sensor to pre-cut media. - Pay attention to the sensor guide line should not be placed on separated gap section of liner.
2.		- Press the SET button (1 second) to select the sensing mode among GAP, Front Black mark and Back Black mark that user wants to. - Select the GAP sensing mode which is first one of left LED. (If there was existing setting value, initialize the value as pressing the SET button of sensor for 5 seconds before using.) <i>* Sensor initialization in case of power ON/OFF</i>
3.		- Press the SET button for 3 seconds to enter the Auto Teaching mode. - After pressing the SET button for 3 seconds, move the media up and down to sensor detects the GAP. - Sensing works normally if you hear a Beep sound. - At this time, press the SET button one time to save the sensing value, then sensor tuning is complete.

4.		- To check the sensor tuning normally, when you move the media to up and down if the sensor is on the GAP, the right LED will be on. Also you have to check if the sensor is on the label, the LED is off or not.
----	---	---

2-1.2.2.2 How to use black mark pre-cut media

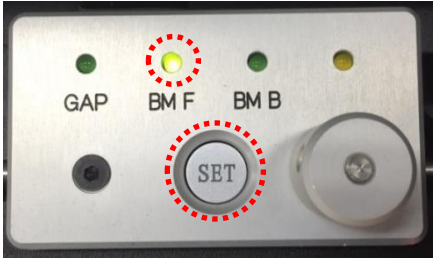1.		- This is the sensor guide line which is marked on left photo. - Move the sensor and place the sensor guide line on the black mark.
2.		- Press the SET button (1 second) to select the sensing mode among GAP, Front Black mark and Back Black mark that user wants to. - Set the mode to BM F mode (second left). (If there was existing setting value, initialize the value as pressing the SET button of sensor for 5 seconds before using.) <i>* Sensor initialization in case of power ON/OFF</i>
3.		- Press the SET button for 3 seconds to enter the Auto Teaching mode. - After pressing the SET button for 3 seconds, move the media up and down to sensor detects the black mark. - Sensing works normally if you hear a Beep sound.

		- At this time, press the SET button one time to save the sensing value, then sensor tuning is complete.
4.		- To check the sensor tuning normally, when you move the media to up and down if the sensor is on the black mark, the right LED will be on. Also you have to check if the sensor is on the label, the LED is off or not.


2-1.3 How to use cutter

- There is a button of CUTTER&SENSOR Module as shown in the picture below.
- This button is cut button and it works by double pressing.

※ If the cutter is working under the media is already installed, to remove the piece of cut media is hard. So the cutter is not working by one click.



2-2 Printer control pannel

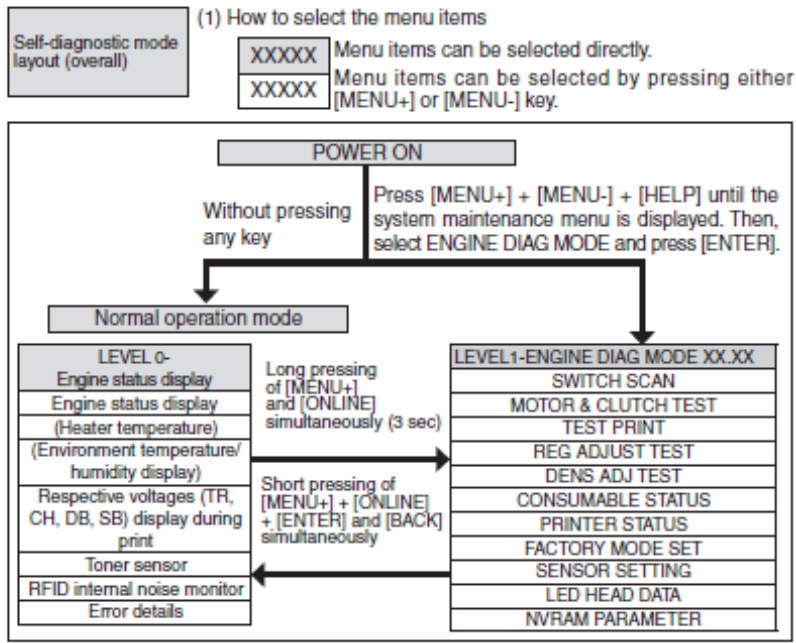


2-3 Caution

- Maximum roll width is 215mm.
- To make the straightness of printing, the media should be installed as following the media guide properly. After installing the media, place the guide lever on Lock.
- Do not press the cutting button over double clicks after installing the media, because it is not easy to remove the piece of cut media.
- Please check the printer power is on before using, and check the connection of cables.
- If the sensor doesn't be tuned correctly, you cannot get good output of pre-cut roll media. Thus, the sensor tuning has to be done correctly.


3. Software operation

3-1 How to use basic Illustrator for ANY-002

3-1.1 Measurement of layout size

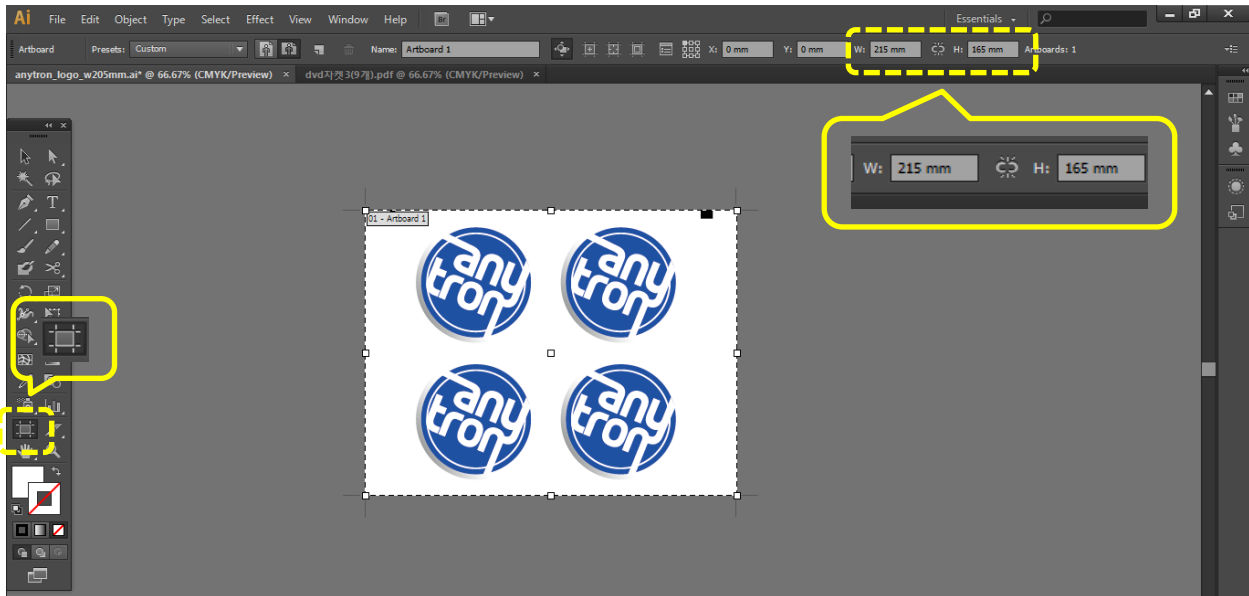




- artboard icon: Check the layout size



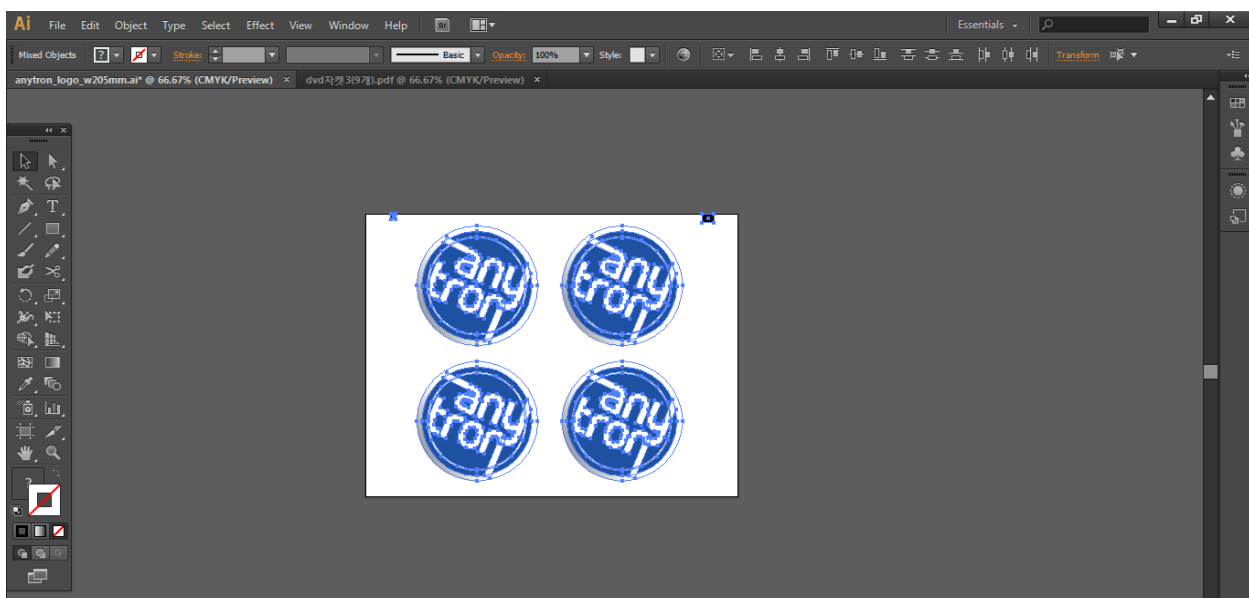


- Shortcut key (Ctrl + a): Image whole select (+ Arrow keys: change the image position)

3-2 How to use printer driver

3-2.1 Setting roll paper driver

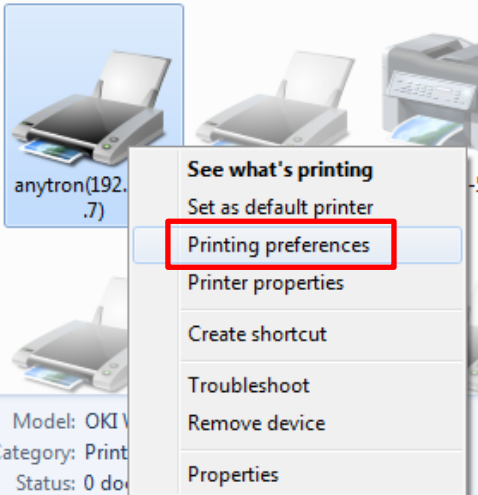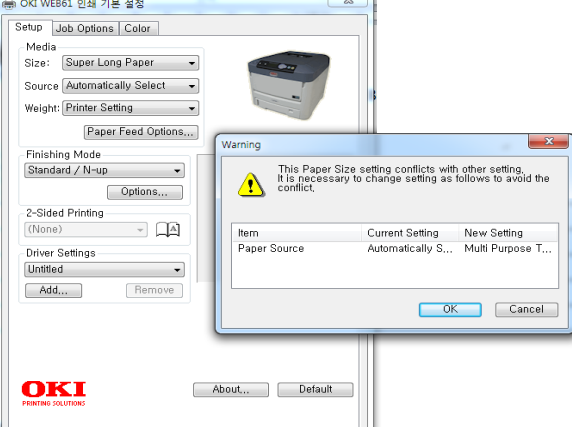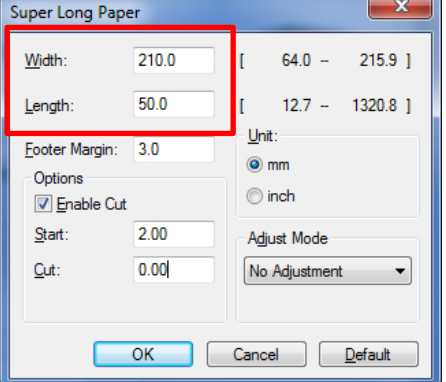1.		Click right button of mouse at WEB61 driver of [Device and Printer] and then click 'Printing preferences'.
2.		You have to set size as 'Super long paper' at 'Print basic setting'. Change method of paper feeding by clicking [OK] at message box to be opened at that time.
3.		Input size of image layout in Width and Length respectively. <i>*In order to confirm size of layout, please refer to 3-1 'Basic method of using Illustrator for ANY-002' on page 28.</i>

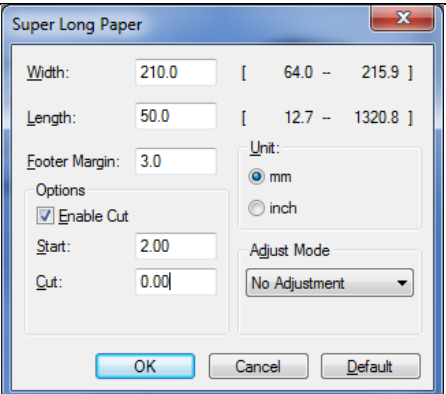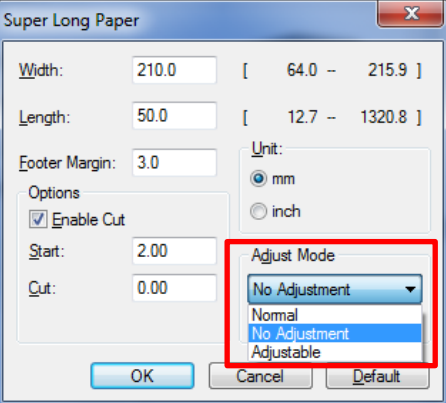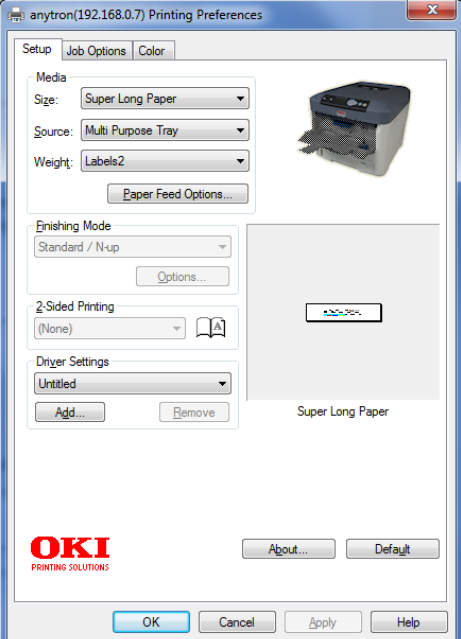
4.		'Footer Margin' means gap between images to print, 'Start' means starting point of printing image and 'Cut' means cutting point after working is completed. <i>*There is no difference whether you select 'Enable Cut' mode or not.</i>
5.		Select 'No Adjustment' mode when using common continuous paper
		Driver setting for common roll paper is fully completed.

3-3 Roll paper printing

3-3.1 Overview


- In order to get best printing quality, you have to apply different setting each type of a paper. Also, Web 61 has printing rule depending on length of image.

3-3.2 Print setting by paper

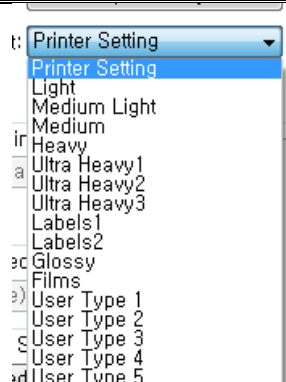Kind of media weight	Kind of media	Print setting	Remark
	Paper(Art paper, Glossy paper, Kraft paper, Color paper etc.)	Labels2 or Glossy	
	PET, PP(Avery)	Films	
	PVC(Avery)	Labels2	

※Information about supported paper and print setting is limited to that which is verified by Arrow Systems, Inc.

3-3.3 Printing rule depending on length of image

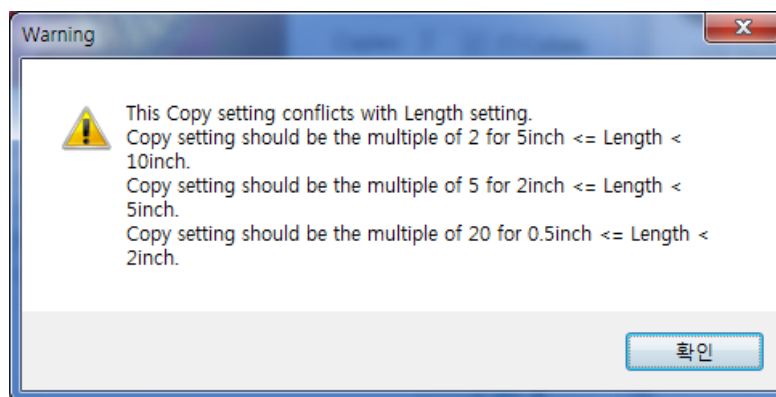

- In WEB 61, number of images to be printed changes depending on length of image. For example, in case that length of image is 100mm, it is printed in multiple of 5 according to above mentioned printing rule. Therefore, even though you input '9' as number of printing, 5 (5x1) images are printed, which is multiple of 5. This is also applied equally to 'Adjust mode' which is used at the time of pre-cut media printing. When printing image of 100mm, position is corrected once every time when sensing occurs 5times.

3-3.4 Caution

- When printing in the mode which does not match paper, quality of printing may be decreased, i.e. toner is not fused firmly or bending or bubble appears. Therefore, before you input printing, please check set value certainly that depends on paper to be used.
- Consumables, such as drum or fuser may be damaged if you test paper which is not specified in manual.

3-4 Pre-cut roll media printing

3-4.1 Overview

Normal procedure to make label is to print image by printer first and proceed with post-processing work (Cutting). However, as cost for purchasing and operating post-process machine and burden caused by additional working hour increases, printing process where pre-cut roll media (pre-cut label) is used, gets lime light as a new method to replace existing one. In ANY-002, we provide 'sensor' which can detect gap of pre-cut roll media or pre-printed black mark and 'software setting'.

3-4.2 Error and risk factor

3-4.2.1 Occurring error

Currently, error that may occur when pre-cut roll media is printed by ANY-002 is as follows.

Firstly, error of approx. $\pm 0.3\text{mm}$ which may occur due to shaking of station during print

Secondly, $\pm 0.3\text{mm}$ error of roll media itself which may occur during the process of pre-cut roll media being made.

Thirdly, error of $\pm 0.5\text{mm}$ which may occur from software,

Therefore, error of pre-cut which may occur in equipment is designated as approx. 1mm in total.

3-4.2.2 Caution

There exist several risk factors as below when using pre-cut label.


- During print, label may attach to consumables like drum, fuser and belt.

- ▶ 'Paper jam error' is displayed on LCD window of printer.
- ▶ Label attached to consumables is to be eliminated using remover of adhesive.
- ▶ Printing quality may be affected even though label attached to consumables is removed.
 - Adhesive flowed minutely from cut label may affect quality of print.
- ▶ It can be cause of contamination of drum.

3-4.3 Understanding of pre-cut roll media printing

When you print pre-cut roll media, it is very important to exactly measure size of vertical gap of label in order to print on exact position. It is very difficult that pre-cut roll media is manufactured without error in size of all gaps. Therefore, two methods are adopted currently in ANY-002 to adjust this kind of error, i.e. "Full Bleed method" that image is printed larger by approx. 1mm compared with actual label and "1M measurement method" that average error of gaps is applied which exist in 1M pre-cut roll media. For further details, please refer to 3-4.5 as explained below.

3-4.4 How to set printer driver for using pre-cut roll

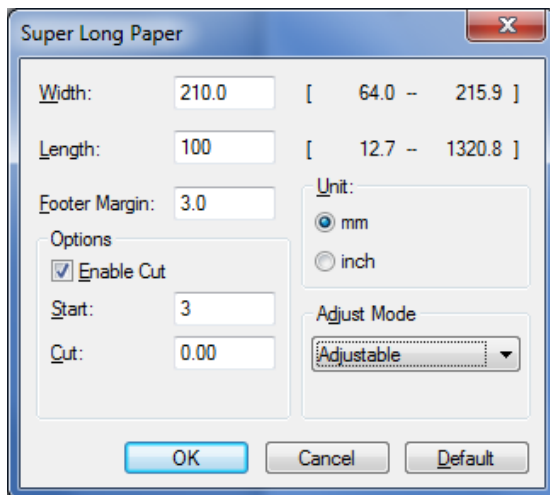


- Width: Input width of paper
- Length: Input length of one label in pre-cut roll media to be printed
- Footer margin: Input length of vertical gap of paper to be printed
- Start: Input starting point of image to be printed
- Adjust mode: You have to select "Adjustable" without fail when using pre-cut roll media

3-4.5 Error correction

In ANY-002, two methods are used to correct error that may occur from software, i.e. "Full Bleed method" and "1M Measurement method". Error that left/right and top/bottom is twisted can be corrected through "Full Bleed method", however apart from this, if exact footer margin is not inputted in driver, printed image may be going up or going down gradually.


3-4.5.1 Full Bleed

Full Bleed means a method to print image, enlarging width and length of image by 0.5mm~ 1mm. When you use this method, software setting needs to be changed as below.

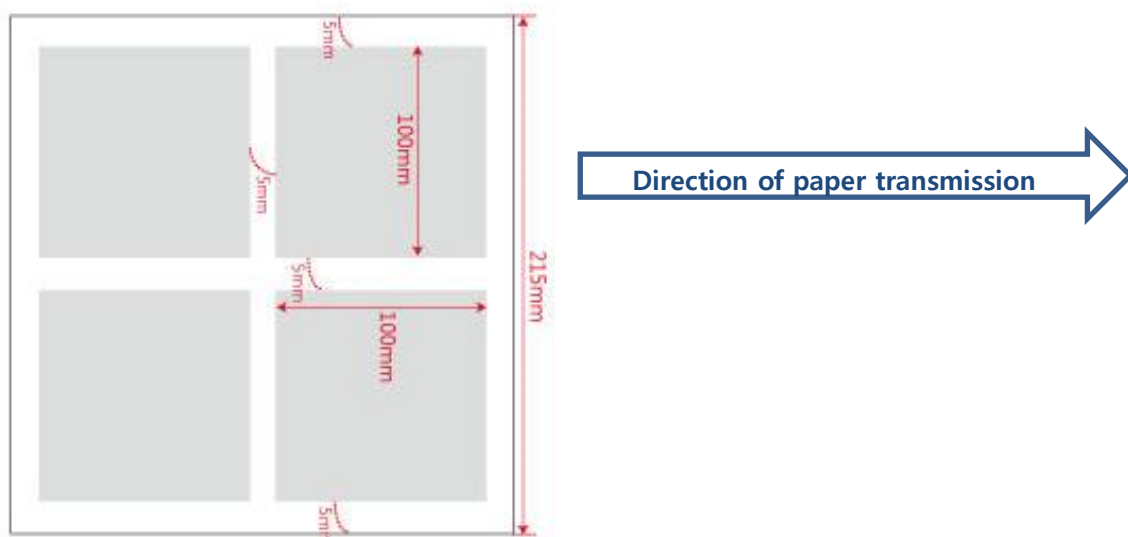

- Total width of paper: 215mm
- Width of each label x length: 100x 100mm
- Width of each gap: Left 5mm, center 5mm, right 5mm
- Margin between upper and lower label (Footer margin): 5mm

※This is optional size of paper for setting pre-cut roll label. Actual setting value should be changed depending on size of label to be used.

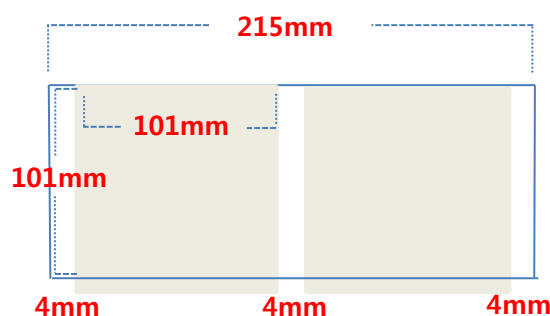

Supposing that information about pre-cut label paper to be printed is same as above picture, in order to use 'Full Bleed' method, width and length of image is to be enlarged by approx. 1mm. Therefore, size of each image becomes to be 100+1= 101mm in width and 100+1= 101mm in length. Because size of image is increased by 1mm respectively, the size of gap should be decreased by 1mm each, i.e. width and length of each gap becomes 4mm. Also, vertical gap of label (footer margin) shall be 4mm, which is size decreased by 1mm, because length of image is also increased by 1mm.

3-4.5.2 '1M Measurement' method

Set up a standard in pre-cut roll label as below so as for total length of adding that of labels and gaps together to be approx. 1M.

Ex) 100x 100mm label 10EA, gap between label and label: 3mm



- Measure total length from first label to last label using ruler.
 - ▶ Theoretically, total length should be 1027mm [(100mmx 10) + (Gap size 3mmx 9)].
- However, if length of all gaps is not exactly 3mm, actual total length could be more or less than 1027mm.
- Supposing that actual length measured by ruler is 1028mm, if deducting total length of 10 labels (100mmx 10= 1000mm) from actual length, there would remain certain value, which is actual value of 9 gaps.

$$1028\text{mm} - 1000\text{mm} = 28\text{mm} \quad \blacktriangleleft \text{Value of adding length of 9 gaps together}$$

- There exist only 9 gaps in total in 10 labels. Because value of adding length of 9 gaps together is 28mm, 28mm should be divided by 9 to get the size of one gap. $28/9 = 3.111$

$$28 / 9 = 3.111$$

- Therefore, actual size of gap is 3.1mm, not 3mm.
- Input 3.1mm obtained in this method as footer margin of driver.

3-5 How to use Anycomm

3-5.1 Overview

- When printing with WEB61 equipment, about 800mm of blank space remains after completion of printing. Therefore, the program for preventing this is Anycomm which is specially designed to save paper by reducing such blank. Also, you can check amount of label which is currently printed through counter function of Anycomm software.

3-5.2 Installation and execution

3-5.2.1 Cable connection


- Connect Serial port to station as shown in below picture.
- Connect USB port to PC.



3-5.2.2 Installation of Serial to USB driver

(Driver download and installation: Refer to CD or website download www.anytron.net)

- In general, driver is installed automatically in the system. However, if it is not installed, you have to do it manually. To check whether it is recognized normally, enter 'Device Manager' and check whether 'USB Serial Port' is displayed as shown in below picture.

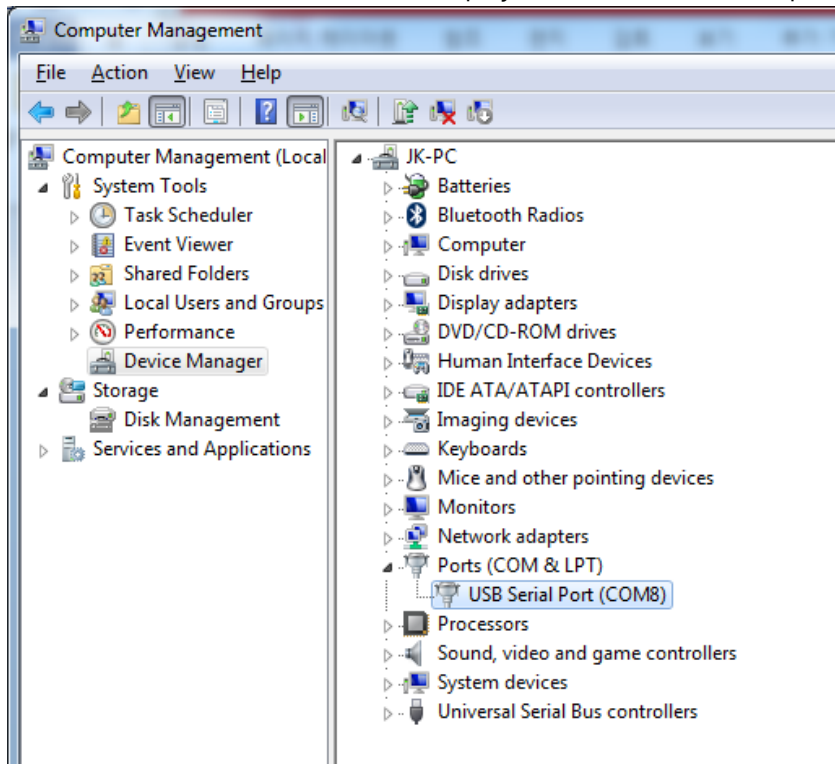


3-5.2.3 Program execution


- Execute Anycomm program by double clicking. (You can download it from CD or website)

3-5.3 How to use

- When Anycomm is executed, window appears as shown below. Select COM port confirmed at 'Device Manager' and click 'Open'

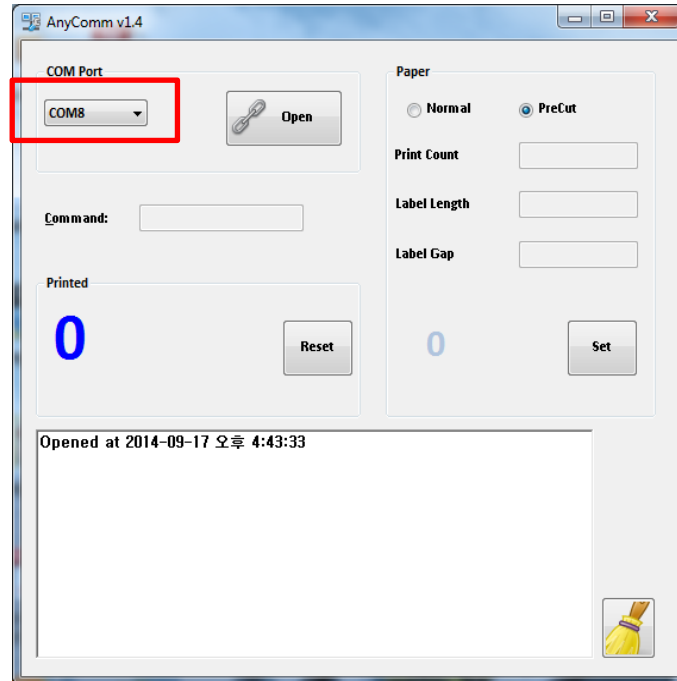

- To check whether it is executed normally, input 'ver' in Command column and click 'enter', then you can confirm current F/W version.

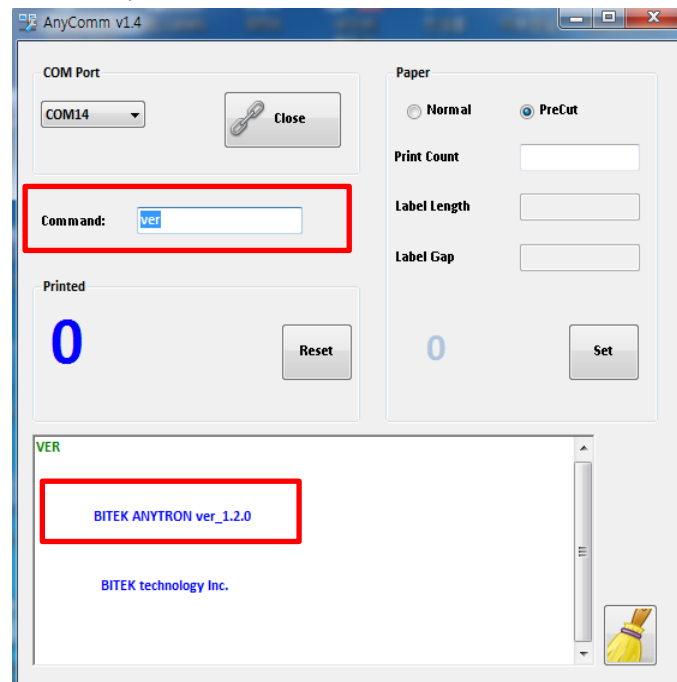


3-5.3.1 Paper saving function

- To reduce blank space of paper generated last after printing in ANY002, Anycomm software is

used.


3-5.3.1.1 Continuous paper (Normal mode)

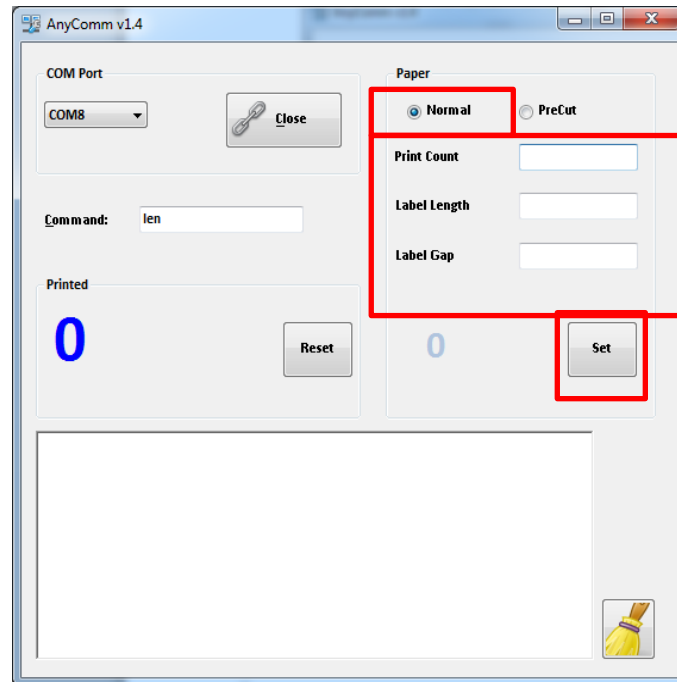

- Click check box 'Normal' on the right of screen.
- Input number of printing in 'Print Count' column.
- Input image length (layout length) in "Label length" column.
- Input gap between labels (gap between images) in 'Label gap' column.
- When input of information about label to be printed is completed, click 'Set' button.
- When clicking Set button, information about amount of cutting, label length and gap distance is displayed.


※Caution: If total length of printing is less than 200mm, it is not supported under 'Normal mode'.

3-5.3.1.2 Pre-cut media (PreCut mode)

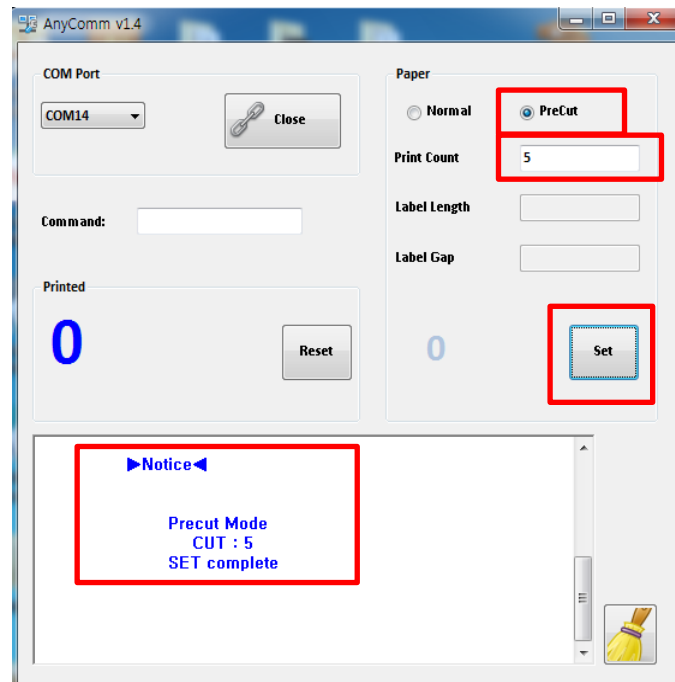

- Click check box 'Precut' on the right of screen.
- Input amount of printing in 'Print Count' column and click 'Set' button below.
- When clicking 'Set' button, message saying 'SET complete' is displayed at bottom of screen.

3-5.3.2 Counter function

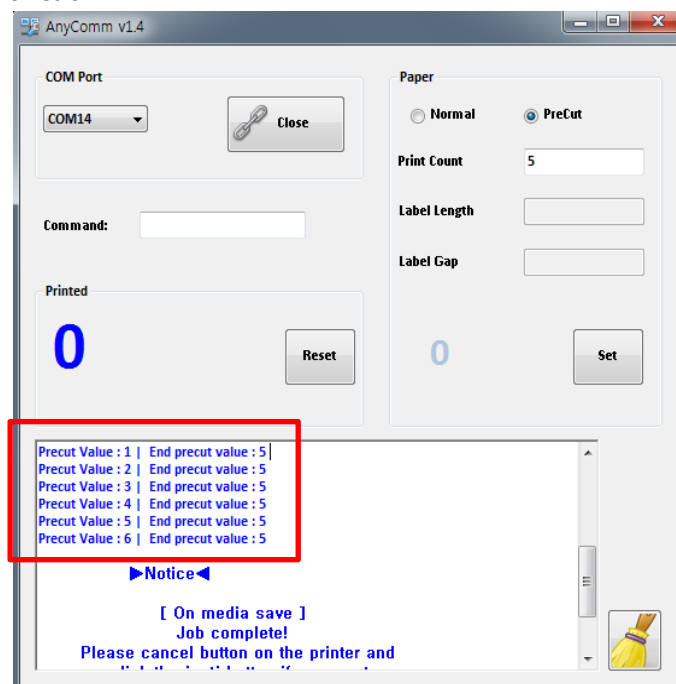

- You can check amount (Counting) which is printed respectively in pre-cut roll label as shown above.

※Caution: Counting function is not provided under 'Normal Mode' (Amount of printing is indicated in

percentage).

III. Any-002 system maintenance

1. Maintenance

1-1 Overview

- Maintenance is very important because consumables are important factor which affects quality. Also, change should be done at replacement time because its lifespan is limited.

1-2 Checking consumables replacement cycle and replacement

1-2.1 Checking consumables replacement cycle

1		If printer is connected through network, you can check residual quantity of consumables by inputting IP in internet address window. Next is method to check on LCD window of printer.
2		Press menu (^) button on panel under [Ready to Print] condition, select [Configuration] among [Function] and click 'Enter'.
3		Select [Supplier Life] and click 'Enter'.

4		Select consumables which you want to check and click 'Enter'.
5		You can check residual quantity of Cyan Drum as shown below..

1-2.2 Replacement of consumables


- Use only genuine consumables if you wish to get best quality and function from relevant hardware. If you use other product than genuine one, it may affect function of printer and furthermore guarantee may be null and void.
- You have to turn off power of printer when replacing consumables. Our company is not responsible for any problem caused by replacing consumables without turning off power of printer.

1-2.2.1 Replacement of toner cartridge


- If message saying "Short of toner" is displayed on LCD window or color fades while printing, open upper cover first and tap cartridge slightly several times so as for toner powder to be evenly distributed. In this way, you can use toner cartridge as much as possible.
- To prevent toner waste and error of toner sensor, do not replace toner cartridge until message saying "No toner" is displayed.
- Caution: Toner used for this printer is very minute dry powder. Toner is contained in cyan, Magenta, yellow, K(black) cartridge respectively. If toner powder is spilled out, clean it by sweeping softly. If it is not cleaned well, clean it thoroughly with cloth adding cold water. Do not use hot water or other kind of liquid in any case. Stain does not easily wash out.

1-2.2.2 Replacement of image drum

- Caution: Handle it with care because it is very sensitive to static electricity.
 - Warning: Fuser is very hot if power of printer is ON. Label is clearly attached on this area. Do not touch.
- 1) Press 'cover release' and open top cover of printer completely.
 - 2) Check the position of 4 toner cartridges (a) and image drum (b) respectively. When installing it, you have to install it again in same order.

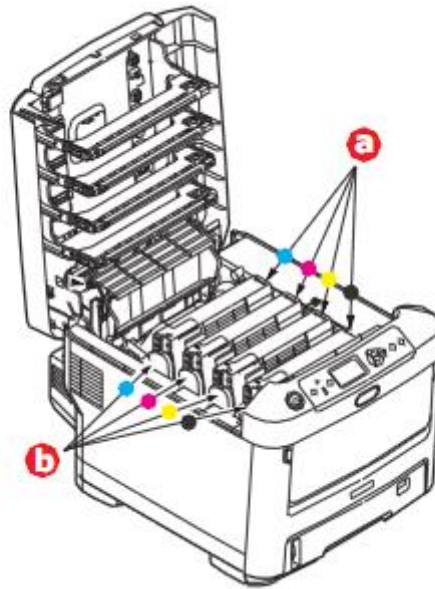

- 3) Holding it by its top center, lift the image drum, complete with its toner cartridge, up and out of the printer.

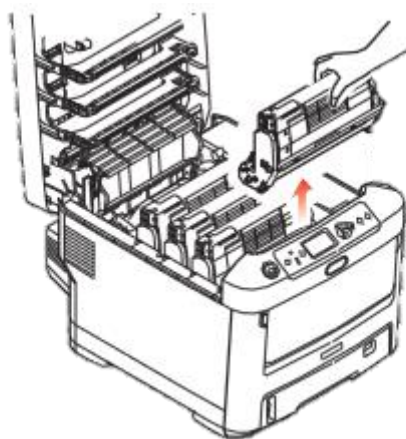


- 4) Put the assembly down gently onto a piece of paper to prevent toner from marking your furniture and to avoid damaging the green drum surface.

CAUTION: The green image drum surface at the base of the ID unit is very delicate and light


sensitive.

Do not touch it and do not expose it to normal room light for more than 5 minutes. If the drum unit needs to be out of the printer for longer than this, please wrap the cartridge inside black plastic bag to keep it away from light. Never expose the drum to direct sunlight or very bright room lighting.


- 5) With the colored toner release lever (1) to the right, pull the lever towards you. This will release the bond between the toner cartridge and the image drum unit.

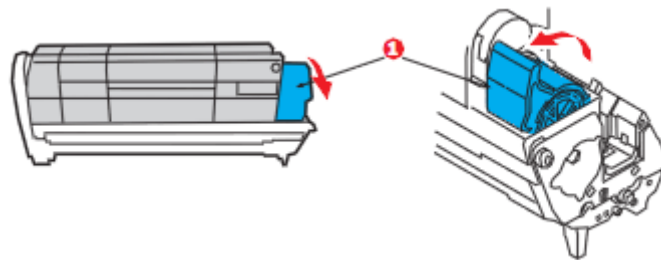


- 6) Lift the right-hand end of the toner cartridge (1) and then draw the cartridge to the right to release the left-hand end as shown (2), and withdraw the toner cartridge out of the image drum cartridge. Please the cartridge on a piece of paper to avoid marking your furniture.

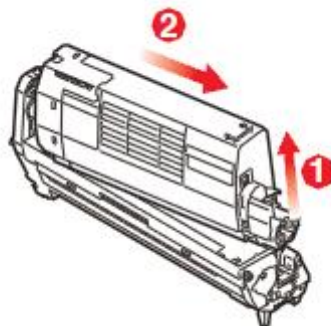


- 7) Take the new image drum cartridge out of its packaging and place it on the piece of paper where the old cartridge was placed. Keep it the same way round as the old unit. Pack the old cartridge inside the packaging material for disposal.
- 8) Place the toner cartridge onto the new image drum cartridge as shown. Push the left end in first, and then lower the right end in. (It is not necessary to fit a new toner cartridge at this time unless the remaining toner level is very low.)

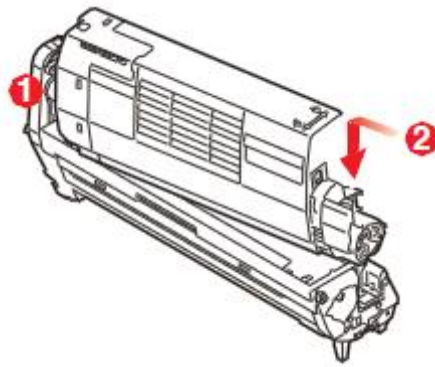

- 9) Push the colored release lever away from you to lock the toner cartridge onto the new image drum unit and release toner into it.

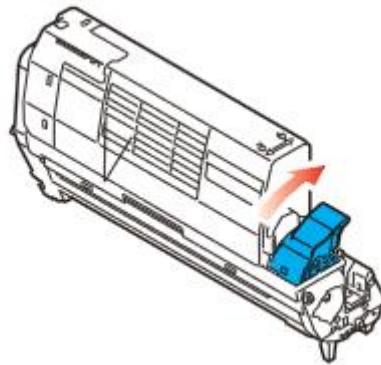

- 10) Holding the complete assembly by its top centre, lower it into place in the printer, locating the peg sat each end into their slots in the sides of the printer cavity.

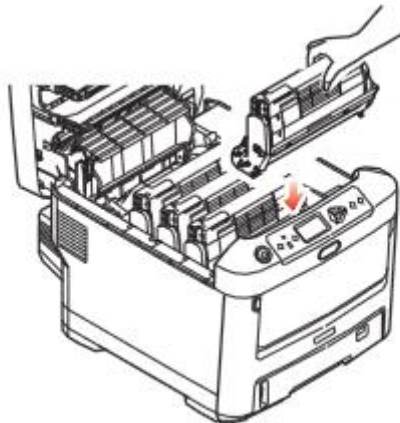


- 11) Finally, close the top cover and press down firmly at both sides so that the cover latches closed.

1-2.2.3 Replacing the Transfer Belt Unit


- The belt unit is located under the four image drums.

- Switch off the printer and allow the fuser to cool about 10 minutes before opening the cover.

- 1) Press the cover release and open the printer's top cover fully.
- 2) Note the positions of the four toner cartridge (a) and image drums (b). It is essential that they go back in the same order.

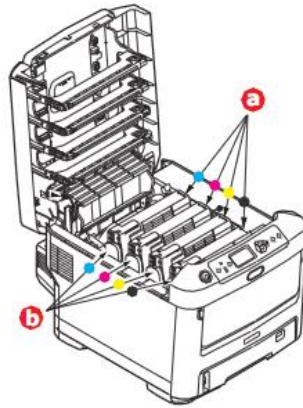


- 3) Lift each of the image drum units out of the printer and place them in a safe place away from direct sources of heat and light.

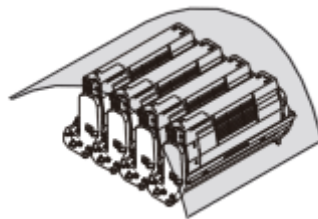


CAUTION: The green image drum surface at the base of each cartridge is very delicate and light sensitive. Do not touch it and do not expose it to normal room light for more than 5 minutes. If the drum unit needs to be out of the printer for longer than this, please wrap the cartridge inside a black plastic bag to keep it away from light. Never expose the drum to direct sunlight or very bright room lighting.

- 4) Locate the two fasteners (a) at each side of the belt and the lifting bar (b) at the front end.

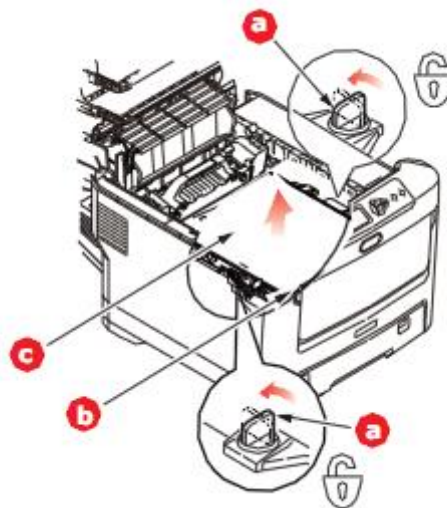

- 5) Turn the two fasteners 90° to the left. This will release the belt from the printer chassis.
- 6) Pull the lifting bar (b) upwards so that the belt tilts up towards the front, and withdraw the belt unit (c) from the printer.
- 7) Lower the new belt unit into place, with the lifting bar at the front and the drive gear towards the rear of the printer. Locate the drive gear into the gear inside the printer by the rear left corner of the unit and lower the belt unit flat inside the printer.

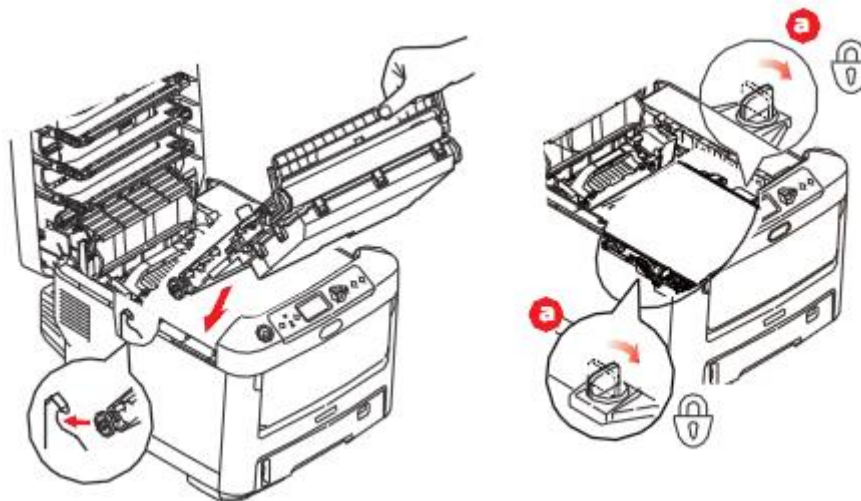

- 8) Turn the two fasteners(a) 90° to the right until they lock. This will secure the belt unit in place.
- 9) Replace the four image drums, complete with their toner cartridges, into the printer in the same sequence as they came out: cyan (nearest the rear), magenta, yellow and black (nearest the front).
- 10) Finally, close the top cover and press down firmly at both sides so that the cover latches closed.

1-2.2.4 Fuser replacement


- The fuser is located inside the printer just behind the four image drum units.

WARNING1: If the printer has recently been powered on, some fuser components will be very hot.


Handle the fuser with extreme care, holding it only by its handle, which will only be mildly warm to the touch. A warning label clearly indicates the area. If in doubt, switch the printer off and wait at least 10 minutes for the fuser to cool before opening the printer cover.

WARNING2: If you need Fuser unit not used more than a month, you should keep it after installing lock unit (orange color). If you don't install lock unit and keep it more than a month, the fuser roller can be modified.


- 1) Press the cover release and open the printer's top cover fully.
- 2) Identify the fuser handle (a) on the top of the fuser unit.

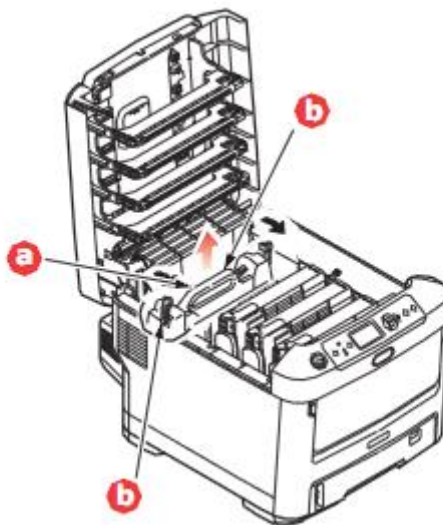

- 3) Pull the two fuser retaining levers (b) towards the front of the printer so that they are fully upright.
- 4) Holding the fuser by its handle (a), lift the fuser straight up and out of the printer. If the fuser is still warm, place it on a flat surface which will not be damaged by heat.
- 5) Remove the new fuser from its packaging and remove the transit material.
- 6) Holding the new fuser by its handle, make sure that it is the correct way round. The retaining levers (b) should be fully upright, and the two locating lugs (c) should be towards you.

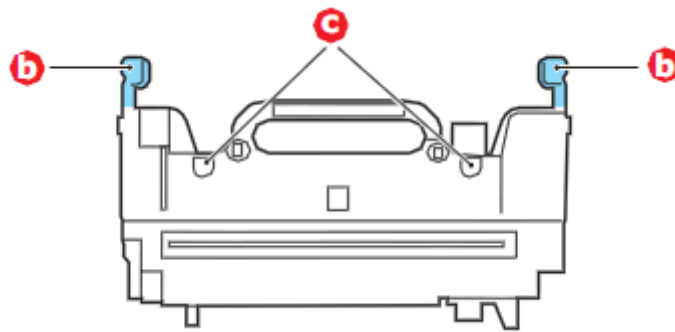

- 7) Lower the fuser into the printer, locating the two lugs (c) into their slots in the metal partition which separates the fuser area from the image drums.
- 8) Push the two retaining levers (b) towards the rear of the printer to lock the fuser in place.

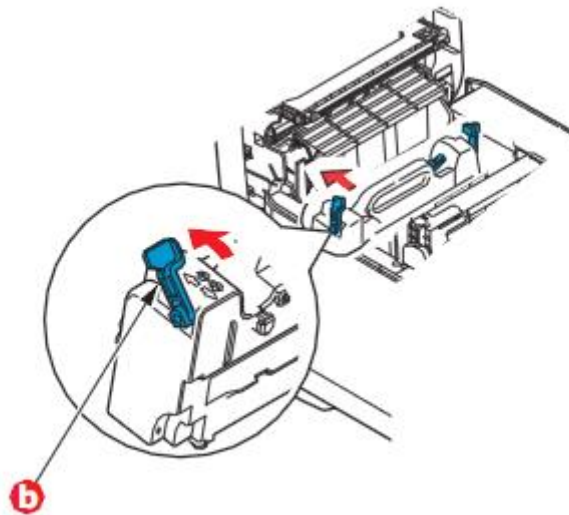

- 9) Finally, close the top cover and press down firmly at both sides so that the cover latches closed.

1-3 Cleaning


1-3.1 Clean the LED HEAD

- Clean the LED heads when printing does not come out clearly, has white lines or when text is blurred.

There is no need to switch off the printer to clean the lens.

※ CAUTION: DO not use methyl alcohol or other solvents on the LED head as damage to the lens surface will occur.

- 1) Press the cover release and open the printer's top cover fully.
- 2) Gently wipe the LED head surface with a clean, lint free cloth.

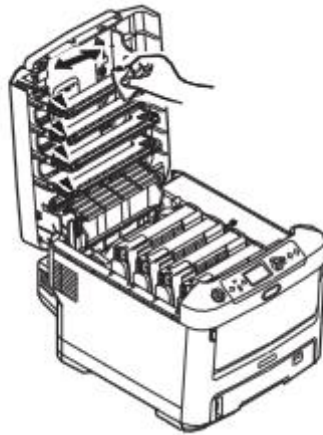

- 3) Close the top cover and press down firmly at both sides so that the cover latches closed.

1-3.2 Cutter cleaning

A glue can stick to the cutter when you cut many labels and the label cannot be cut because of glue. You can open the cover and using an adhesive removal to remove the glue as follows.

※ If the printer has recently been powered on, there is damage to the control board, fuse and Potentiometer, motor etc. Please turn off the power when you start to work.

A warning label clearly indicates the area. If in doubt, switch the printer off and wait at least 10 minutes for the fuser to cool before opening the printer cover.

1.



Loosen screw indicated in the picture using hexagonal wrench. (Hexagonal wrench: 3")

2.		Raise paper guide as shown in the picture.
3.		You can check cutter if separating feeder structure. Under this condition, eliminate adhesive substance attached to blade, using remover of adhesive and assemble it again. <i>※Cutter is very sharp, so wear glove certainly during work and carry out work with care.</i>

1-4 Consumables purchase

- Refer to Anytron homepage, www.anytronlabel.com

1-5 Inquiry and download

- Refer to Anytron homepage, www.anytronlabel.com

2. Problem diagnosis and solution

2-1 Error type based on error message and explanation

2-1.1 Occurrence of paper jam



- Phenomenon: 'Paper jam' message displayed on LCD window

- Cause

- ① Paper is hanged within printer
- ② Paper touches paper inlet of printer too closely or end of paper touches paper outlet while paper being discharged

- Solution

Solution for problem ①

- a. Open top cover by pressing button on upper part of printer as shown below and eliminate remaining paper.



- b. Close top cover.

※ If label is attached to consumables, such as drum, fuser or belt, you can eliminate it using remover of adhesive. However, in some cases, even though label is eliminated cleanly, it may affect quality of printing.

Solution for problem ②

- a. Press 'Reset' button on the right of printer as shown in below picture.



- b. If you want to proceed with previous work again, press 'online' button and if you want to cancel, press 'cancel' button.

2-1.2 Error code table

Message	Cause	Error		Action to take
POWER OFF/ON 001: Error	Abnormal condition of the CPU (board or insufficient supply of power)	Is the error display reproduced?	Yes Yes	Turn the power OFF/ON. Replace the CU board. (Replace the EEPROM.)
POWER OFF/ON 002: Error ~ 011: Error	Abnormal condition of the CPU	Is it displayed only on particular file? Is the error display reproduced?	Yes No Yes	Check the output file. Reinstall/replace the ROM or the RAM Replace the CU board (including the EEPROM).
SERVICE CALL 020: Error	CU ROM Hash Check Error (GDI Model)	Is the error display reproduced?	Yes	Turn the power OFF/ON. Replace the CU board.
SERVICE CALL 020: Error ~ 025: Error	CU ROM Hash Check Error (PDL Model)	Program ROM installing state	No Yes No	Reinstall the program ROM. Replace the program ROM. Replace the CU board (including the EEPROM).
SERVICE CALL 030: Error	CU RAM Check Error	Is the error display reproduced?	Yes	Turn the power OFF/ON. Replace the CU board. (Replace the EEPROM.)
SERVICE CALL 031: Error	CU Option ROM Check Error	Is the RAM DIMM normally installed?	No Yes	Reinstall the RAM DIMM. Replace the RAM DIMM.

		Is the error corrected after replacing the RAM DIMM?	No	Replace the CU board. (Replace the EEPROM.)
SERVICE CALL 031: Error	CU slot 1 DIMM RAM Error: 031	Is the RAM DIMM normally installed?	No	Reinstall the RAM DIMM.
032: Error	CU slot 2 DIMM RAM Error: 032	Is the error corrected after replacing the RAM DIMM?	Yes No	Replace the RAM DIMM. Replace the CU board. (Replace the EEPROM.)
SERVICE CALL 036: Error	Slot 1 RAM Specification Non-conforming: 036	Is the RAM DIMM a genuine product?	No	Reinstall the RAM DIMM.
037: Error	Slot 2 RAM Specification Non-conforming: 037	Is the error corrected after replacing the RAM DIMM?	Yes No	Replace the RAM DIMM. Replace the CU board. (Replace the EEPROM.)
SERVICE CALL 040: Error	CU EEPROM Error	Is the error display reproduced?	No	Turn the power OFF/ON. Replace the CU board.
SERVICE CALL 041: Error	CU Flash Error CU Board Flash ROM Error: GDI	Is the error display reproduced?	Yes	Turn the power OFF/ON Replace the CU board.
SERVICE CALL 042: Error ~ 045: Error	Flash File System Error	Failure in accessing the Flash ROM installed on the CU board		Turn the power OFF/ON Replace the CU board.
POWER OFF/ON 048: Error xx	PS+PCL ROM is installed on a Non-PS model.	Is the ROM installed a prescribed one?	Yes No	Replace the program ROM. Replace the ROM with one specified.
SERVICE CALL 049: Error xx	Wrong Type of CU Wrong CU ROM Model	Is the ROM installed a prescribed one?	Yes No	Replace the program ROM. Replace the ROM with a prescribed one.
SERVICE CALL 051:Error	CU Board CU fan Error	Is the connector connection of the CU fan normal? Is the error corrected after replacing the fan?	No Yes NO	Correctly reinstall the fan. Replace the fan. Replace the CU board.
SERVICE CALL 052: Error	The image process of the DMA could not be found. Driver Data Error	Reinstallation of the driver. Does the error occur repeatedly?	Yes	Turn the power OFF/ON. Replace the CU board.
SERVICE CALL 060: Error	Parallel Interface Driver Error	Does the error occur repeatedly?	Yes	Turn the power OFF/ON. Replace the CU board. (Replace the EEPROM.)
SERVICE CALL 062: Error	USB Driver Error	Does the error occur repeatedly?	Yes	Turn the power OFF/ON Replace the CU board. (Replace the EEPROM.)
SERVICE CALL 063: Error	Network Communication Error H/W I/F problem between CU and NIC	Does the error occur repeatedly?	Yes	Turn the power OFF/ON. Replace the network card (C9600) Replace the CU board. (Replace the EEPROM.)
SERVICE CALL 067:Error 068:Error	Interface Monitor Error			
SERVICE CALL	CANT_HAPPEN PS			Turn the power OFF/ON.

070: Error	Firmware Problem	Does the error occur repeatedly?	Yes	Replace the CU board. (Replace the EEPROM.)
POWER OFF/ON 072: Error xx	Engine I/F Error Error in Connection between PU and CU.	Is the CU correctly installed? Is the error corrected after replacing the CU board?	No Yes No	Correctly reinstall the CU. Replace the CU board. Replace the PU board.
POWER OFF/ON 073: Error xx ~ 075: Error xx	Problem in video image found (incorrect data receipt)	Does the problem occur repeatedly?	Yes	Reprint after changing the PC to a one with higher specification or lowering the resolution. Replace the main board CU/board.
POWER OFF/ON 073: Error xxxxxxx	Video Error A problem is found during image data processing. (abnormal data receipt)	Is the CU correctly installed? Does the error occur again? Is the CU correctly installed?	No Yes Yes No Yes	Correctly reinstall the CU. Reprint after changing the PC to a one with higher specification or lowering the resolution. Replace the CU board. Correctly reinstall the CU. Replace the CU board.
POWER OFF/ON 074: Error xxxxxxx 075: Error xxxxxxx	Video error during image data preparation	Is the CU correctly installed?	No Yes	Correctly reinstall the CU. Replace the CU board.
SERVICE CALL 081: Error	Parameter Consistency Examination Error	Reading from and writing on EEPROM or Flash cannot be done normally.	Yes	Turn the power OFF/ON. Replace the CU board if the symptom is not resolved.
SERVICE CALL 104: Error	Reading/writing error is detected after turning on the power and completing the Engine EEPROM setup examination.	Does the error occur again?	Yes	Turn the power OFF/ON. Replace the PU board.
SERVICE CALL 105: Error	It is detected that the EEPROM is missing after turning on the power.	Check for whether the EEPROM is installed or not Does the error occur again?	Yes Yes	Install or reinstall the EEPROM. Replace the PU board.
SERVICE CALL 106: Error	Engine Control Logic Error	Does the error occur again?	Yes Yes	Restart the printer. Replace the PU board.
SERVICE CALL 106: Error ~ 117: Error	An option unit of a different model is installed. 111: Duplex printing device 112: Tray 2 113: Tray 3 114: Tray 4 115: Tray 5 116: finisher 117: Inverter	Is the right option of the relevant model installed?	No Yes	Check the option of the relevant model at the installation joint part and turn on the power again. If the error is not corrected, replace the option unit.
SERVICE CALL	HVPS I/F Error	Is the cable between the PU	No	Correctly connect it again.

121: Error		board and the HVPS unit properly connected? Is the contact point defective?	Yes No	Check the connection with the HVPS. Replace the HVPS.
SERVICE CALL 122: Error	LVPS Fan Error	Is the LVPS fan (front right side at the bottom) operating? Is the fan connector correctly connected?	No Yes No Yes	Check the connection of the fan connector. Replace the PU board. Replace the fan motor. Replace the PU board.
SERVICE CALL 123: Error	Ambient Humidity Abnormality/No Humidity Sensor Connected	Does the error occur again?	Yes	Turn the power OFF/ON. Replace the control panel.
SERVICE CALL 124: Error	Ambient Temperature Abnormality	Does the error occur again?	Yes	Turn the power OFF/ON. Replace the control panel.
SERVICE CALL 125: Error	MPT Home Location Error Detection	Is the error message displayed after reapplying the power?	Yes	Replace the MPT.
SERVICE CALL 126: Error	Dew condensation (moisture) on the equipment detected	It can easily happen when the equipment is brought in from outdoor area. Does the error occur again when the power is turned on after leaving the unit in room temperature for 2 hours to a quarter of a day?	Yes	Reapply the power after leaving the unit alone. Replace the control panel.
SERVICE CALL 127: Error	Fuser Exhaust Fan Error	Is the connection of the Fan Connector normal? Does the error occur again?	No Yes No	Normally connect it again. Replace the fan motor. Replace the PU board.
SERVICE CALL 127: Error	Engine Fan Error	01: Fuser Fan Error 02: Power Fan Error 03: PU, Motor Fan Error 04: Belt Fan Error 05: ID Fan Error 06: Top Cover Fan Error		Connect the relevant Fan Connector again. If the situation does not change, replace the Fan.
SERVICE CALL 128: Error	Fuser Cooling Fan Error	Is the connection of the Fan Connector normal? Does the error occur again?	No Yes No	Normally connect it again. Replace the fan motor. Replace the PU board.
SERVICE CALL 131: Error ~ 134: Error	Occurrence of LED Head Error (131=Y, 132=M 133=C, 134=K)	Is the LED head correctly installed? Is the LED HEAD FUSE disconnected? Does the error occur again?	No Yes No Yes	Reinstall the LED HEAD Unit. Check the LED HEAD FUSE. Check/replace the FUSE. Turn on the power again. Replace the LED HEAD Unit.
SERVICE CALL 140: Error ~ 142: Error	Up/Down Location Detection Error of ID (140=Y, 141=M, 142=C)	Is there anything which stands in the way when installing the Drum? Does the error occur again?	Yes No Yes	Reinstall the Drum. Turn on the power again. Check the operation of the ID Up/Down Motor.
SERVICE CALL	Toner Supply Switch	Is the Drum correctly	No	Reinstall the Drum.

144: Error ~ 147: Error	Error The locking lever of the new toner does not lock. (144=Y, 145=M, 146=C, 147=K)	installed? Is the Toner Locking Lever Error Message displayed? Does the error occur after replacing the ID?	Yes Yes No	Set up the locking lever again. Replace the Toner Supply Unit. Replace the ID.
SERVICE CALL 150: Error ~ 153: Error	The fuse of the Drum does not blow. (150=Y, 151=M, 152=C, 153=K)	Is the Drum correctly installed? Does the error occur again? Is the error corrected after replacing the PRT board?	No Yes Yes No	Reinstall the Drum. Turn on the power again. Replace the PU board after checking the cable. Replace the PU board.
SERVICE CALL 154: Error	The fuse of the Transfer Belt does not blow.	Is the Transfer Belt correctly installed? Does the error occur again?	No Yes Yes	Reinstall the Transfer Belt. Turn on the power again. Replace the PU board after checking the cable.
SERVICE CALL 155: Error	The fuse of the Fuser does not blow.	Is the fuser correctly installed? Does the error occur again?	No Yes Yes	Reinstalled the connector of the fuser after cleaning. Turn on the power again. Replace the PU board after checking the cable.
SERVICE CALL 160: Error ~ 163: Error	Toner Sensor Detection Defect (160=Y, 161=M, 162=C, 163=K) It does not occur under factory default condition.	Is the Toner Cartridge installed? Is the fixing lever of the Toner fixed? Does the error occur again?	No No Yes	Turn the Fixing Lever of the Toner which is used to install the Toner Cartridge to the fixing position. . Turn on the power again. Replace the toner sensor.
SERVICE CALL 167: Error	Thermister Error	Is the error displayed? Does the error occur again?	Yes Yes	Turn on the power again. Turn on the power again after leaving the unit for 30 minutes.
SERVICE CALL 168: Error	Compensation (Serve) Thermister Error	Is the error displayed? Is the error displayed?	Yes Yes	Turn on the power again. Turn on the power again after leaving the unit for 30 minutes.
SERVICE CALL 169: Error	Top (Serve) Thermister Error	Is the error displayed? Does the error occur again?	Yes Yes	Turn on the power again. Turn on the power again after leaving the unit for 30 minutes.
SERVICE CALL 170: Error 171: Error	Short circuit or disconnection of the Fuser Thermister detected	Does the error occur again?	Yes	Turn on the power again after 30 minutes. Replace the fuser.
SERVICE CALL 172: Error 173: Error	Temperature abnormality (High or Low Temperature) of the Fuser Thermister detected	Does the error occur again?	Yes	Turn on the power again after 30 minutes. Replace the fuser. Replace the LVPS.
SERVICE CALL 174: Error	Short circuit of the Backup Roller Thermister (High Temperature) detected	Does the error occur again?	Yes	Turn on the power again after 30 minutes. Replace the fuser.

SERVICE CALL 175: Error	Short circuit of the Backup Roller Thermister (Low Temperature) detected	Does the error occur again?	Yes	Turn on the power again after 30 minutes. Replace the fuser.
SERVICE CALL 176: Error 177: Error	Temperature Abnormality (High or Low Temperature) of the Backup Roller Thermister detected	Does the error occur again?	Yes Yes	Turn on the power again after 30 minutes. Replace the fuser. Replace the LVPS.
SERVICE CALL 181: Error 182: Error	Option Device I/F Error (181=Duplex Printing Device 182=Option Tray)	Does the error occur again?	Yes	Turn on the power again. . Check the connection part of the connector. Replace the option device.
POWER OFF/ON 190: Error	System Memory Overflow	Does the error occur again?	Yes	Turn on the power again. Install more RAM DIMMs.
SERVICE CALL 200: Error ~ 202: Error	PU Firmware Download Error	An error occurred while recording the PU Firmware		Retry download after turning on the power again. (This error does not occur while the system is in use as this work is not done.)
POWER OFF/ON 209: Down Load Error	User Media Table Download Failure	Download of the user media table type failed.		Retry download after turning on the power again. (This error does not occur if the procedure is not completed in general.)
POWER OFF/ON 203: Error 204: Error 207: Error 208: Error 214: Error F0C: Error F0D: Error FFE: Error FFF: Error	Occurrence of an Error in CU Program ROM (The errors from 203 to 214 do not occur during general use.)	CU program error occurred.		Turn off the power. Check the connection between the CU board and the PU board. Turn on the power again.
SERVICE CALL 220: Error	Occurrence of an error in Printer Statistics Collection Setup	Is the HDD removed?	Yes	Install the existing HDD.
SERVICE CALL 230: Error	RFID Reader not installed. 84xx: Toner TAG	RFID reader device error Does the error occur again?	Yes Yes	Check the connection with the RFID R/W board. Replace the RFID R/W board. Replace the PU board.
SERVICE CALL 231: Error	TAG Interface Error	TAG interface error occurred. 01: Short error 02: TAG communication error		Reinstall the Toner Cartridge and Image Drum correctly. Check the connection between the CU/PU boards and the Toner Sensor Board.
SERVICE CALL 231: Error	RFID Reader I/F Connection Error	RFID reader device connection error occurred. 01: Communication error between the RFID Reader and		01: Same as the error 230. 02: Replace the RFID R/W board. 03: Check the antenna cable connection.

		the PU board. 02: Wireless circuit error of the RFID Reader. 03: Communication error between the RFID Reader and the Tag Chip. 04: RFID Tag error occurred (4 chips)		04: Check the quantity of the RFID Tags.
SERVICE CALL 240: Error ~ 245: Error 247: Error 248: Error	Engine Program Memory Error	240: Flash memory hardware error 241: Duplex Flash memory error 242: Option tray 2 Flash error 243: Option Tray 3 Flash error 244: Option Tray 4 Flash error 245: Option Tray 5 Flash error 247: Sub-CPU Flash error 248: Inverter Flash error		If the error occurs after reapplying the power, replace the PCB of the unit.
SERVICE CALL 250: Error	Security File Deletion Error SD Card Error	An error detected while deleting an encrypted file. Did the user allow deletion of the HDD?	Yes Yes	Notify the user of deletion of the encrypted file. Recover the HDD to the initial state. ADMIN MENU → HDD.
SERVICE CALL 251: Error	Classified Disk Deletion Error SD Card Security Error	An error is detected while deleting the disk. Does the error occur again?	Yes	Turn on the power again. Replace the HDD.
SERVICE CALL 256: Error 257: Error	SD Card Error			
SDRAM ERROR	CU Board (SP2) DCON Access Error	Does the error occur again?	Yes	Turn on the power again. Replace the PU board.
xxxxxxxxx CRC CHECK NG()	PU Download Data CRC Check Error	A CRC check error is detected after downloading the PU data (PU firmware, user paper data).		Re-execute download after turning on the power again. (This error does not occur during general use as no download work is carried out.)
LOADER VERSION xx xx	PU Board Flash ROM Hash Check Error	Does the error occur again?	Yes	Turn on the power again. Replace the PU board.
WDT ERROR	PU Firmware Tangle	Does the error occur again?	Yes	Turn on the power again. . Replace the PU board.
Communication Error	IF Error between the PU and the CU	Is the CU board correctly installed? Does the error occur again?	No Yes No	Reinstall the CU board. Replace the CU board. Replace the PU board.
Close the Cover Top Cover Open Please see HELP for details	Top Cover of the Printer Open Error: 310	Check if the top cover is open. Check if the cover switch is normal.	Yes	Close the top cover. Replace the cover switch.
Reset Fuser	The fuser is not			Check the installation state of the

Fuser Error Please see HELP for details	detected when the power is turned on or the cover is closed. Error: 320	Is the error repeatedly displayed?	Yes	fuser and turn OFF/On the power again after reinstalling it. Replace the fuser.
Check Paper Paper thickness error TRAY Please see HELP for details	The sensor value is out of the standard value when there is no paper. (It occurs only in Factory Mode.) 323: Error	Is there foreign substance on the thickness sensor? Is the error corrected when the tray is pulled out and pushed in to make the paper to be detected again? Is the error corrected when the power is turned OFF/ON?	Yes	Remove the foreign substance and clean the unit.
Check Paper Paper thickness error TRAY Please see HELP for details	The deviation of the sensor output is out of the specification. (It only occurs in Factory Mode.) 324: Error	Is there foreign substance on the thickness sensor? Is the error corrected when the tray is pulled out and pushed in to make the paper to be detected again? Is the error corrected when the power is turned OFF/ON?	Yes	Remove the foreign substance and clean the unit.
Check Paper Paper thickness error TRAY Please see HELP for details	The detected value of the media is out of the specification. 325: Error	Aren't media of different types mixed? Aren't two sheets fed at once?		Remove the media (paper) of the different type.
Check Paper Paper thickness error TRAY Please see HELP for details	The detected value of the U-Heavy mode (very thick paper) media is out of the specification. 326: Error	Aren't media of different types mixed?		Remove the media (paper) of the different type.
Reset the belt Please see HELP for details	The belt is not detected when the power is turned on or the cover is closed. 330: Error			Check whether the belt is correctly installed. If the error occurs repeatedly, replace the belt.
Reset the image drum Please see HELP for details	The belt is not detected when the power is turned on or the cover is closed. 340~343: Error			Re-install it after removing the Drum. Turn the power OFF/ON. If the error occurs repeatedly, replace the Drum.
Replace with a new drum Drum Life Near End COLOR Please see HELP for details	The Drum has taken the last count. 350: Y 351: M 352: C 353: K	Is the message displayed right after replacing the Drum?	Yes	Check the life of the Drum. Replace the Drum.
Replace with a new fuser Fuser	Life of the Fuser (It occurs if the life of the	Is the message displayed right after replacing the	Yes	Check the service life of the Drum. Replace the Drum.

Life Near End COLOR Please see HELP for details	Fuser is turned off continuously. 354: Error	Drum?		
Replace with a new belt Belt Life Near End COLOR Please see HELP for details	Warning for the belt life. When the cover is opened and closed, 20 sheets can be printed. 355: Error	Is the message displayed right after replacing the belt?	Yes	Check the belt life. Replace the belt.
Replace with a new double- side printer unit Please see HELP for details	It occurs when the duplex printing device is pulled out of the body. 360: Error	Is the error corrected when the duplex printing device is re-installed?	No	Replace the duplex printing device or the PU board.
Check Duplex Please see HELP for details	Paper is caught in the duplex printing device after the paper is reversed. 370: Error	Check that the paper is caught in the duplex printing device.		Remove the paper caught. Check by replacing the duplex printing device.
Check Duplex Please see HELP for details	Paper is caught in the duplex printing device 371: Error	Check that the paper is caught in the duplex printing device.		Remove the paper caught. Check by replacing the duplex printing device.
Check Duplex Please see HELP for details	Paper is caught while being fed to the duplex printing device. 372: Error	Check the paper caught in the paper feeding part of the duplex printing device.		Remove the paper caught. Check by replacing the duplex printing device.
Open cover Paper Jam COVER	Paper is caught while being fed from Tray 1, 2, 3, 4, or 5. 380: Error	Check the paper feeding part of the designated tray.		Remove the paper caught. Replace the relevant tray.
Open cover Paper Jam Top cover Please see HELP for details	Paper is caught between the Black Drum and the Fuser. 381: Error	Check that the paper is caught between the Y Drum and the Fuser. Check the load of the fuser.	Yes Yes	Remove the paper caught. Replace the fuser.
Open cover Paper Jam Top cover Please see HELP for details	Paper is caught in the fuser or between the fuser and the discharge part. 382: Error	Check that the paper is caught in the fuser or between Y ID and the fuser. Check whether the sensor of the discharge part is normal.	No	Remove the paper caught. Replace the sensor of the discharge part.
Open cover Paper Jam Top cover Please see HELP for details	Occurrence of paper jam in the inlet part of the duplex printing device 383: Error			Remove the paper caught in the inlet part or the inside of the duplex printing device.
Open cover Paper Jam Top cover	Paper is caught somewhere in the paper moving route.			Remove the paper caught.

Please see HELP for details				
Open cover Paper Jam Top cover Please see HELP for details	Paper is caught between the Tray and the Black ID. 391~395:Error	Check that paper is caught between the vicinity of the tray and the Y ID. Check whether the Paper IN1 Sensor is normal.	Yes No	Remove the paper caught. Replace the IN1 Sensor.
Open cover Paper Paper size error TRAY Please see HELP for details	Wrong paper size detected (different by 45 mm or more from the set value) 400: Error	Is the paper of the user designated size? Is the paper of a standard size?	Yes Yes No	No action is required. Adjust the Tray Paper Guide. Replace the Paper Size Plate (PXC PWB).
Change Toner COLOR Please see HELP for details	Little Toner is left. 410: Y 411: M 412: C 413:K	Isn't there little relevant toner? Is the relevant Toner Sensor normal?	Yes No	Replace with a new toner. Replace the relevant Toner Sensor.
Remove Paper Stacker	The paper discharge tray is full.	Is the discharge tray full of paper? Check the Stacker Full Sensor of the Discharge Tray.	Yes No	Empty the paper in the discharge tray. Replace the Stacker Full Sensor.
Insert paper MP Tray MEDIA SIZE Please see HELP for details	There is no paper in the MP Tray, the unit is out of the range, or the printer is out of paper. 490: Error	Check that there is not enough paper in the MP Tray.	Yes	Put paper in the MP Tray.
Insert paper TRAY MEDIA SIZE Please see HELP for details	It is detected that there is no paper in the Tray 1, 2, 3, 4, or 5. 491~495: Error	Check whether there is paper in the relevant Tray. Check the No Paper Sensor of the relevant Tray.	No	Put paper in. Replace the Sensor.
Replace Fuser	The life of the fuser counter is near its end.			Check the life of the fuser and replace the fuser.
Tray Paper Almost Finished	Insufficiency of paper detected.	Less than 30 sheets of the supplied paper are left.		Feed the paper. Check the Near End Sensor.
File system access error <n> 901: Error 902: Error 903: Error 904: Error	Recording in the HDD not possible. 901: Short circuit 902: Disconnection 903: High Temperature 904: Low Temperature	Isn't the operation method wrong? Does the error occur again?	Yes	Check the instructions in the manual. HDD failure, Replace the HDD. Replace the Belt Thermister. Turn on the power after 30 minutes.
SERVICE CALL 905:Error 906:Error	Short Circuit of the Prime Thermister			Replace the fuser. Replace the main board.
SERVICE CALL 907: Error 908: Error	High Temperature Error of Prime Thermister (907) Low Temperature Error			Replace the fuser. Replace the main board.

	of the Hurray Thermister (908)			
POWER OFF/ON 910: Error ~ 914: Error	GDDC Error	910: Tray 1 GDDC Error 911: Tray 2 GDDC Error 912: Tray 3 GDDC Error 913: Tray 4 GDDC Error 914: Tray 5 GDDC Error		Check whether the Tray is correctly installed. Replace the Tray Motor.
POWER OFF/ON 917: Error	Belt Slit Sensor Error	Is the belt rotates normally? Is the error displayed after the power is turned OFF/ON?	Yes	Check the Belt installation state and re-install it. Replace the Belt.
SERVICE CALL 918: Error	Duplex Printing Device Fan Caution Display detected	Duplex Printing Device internal fan error Does the error occur when the power is turned on again?	Yes Yes	Check whether the Duplex Printing Device is normally installed. Check whether the FAN is normally installed. Replace the fan.
POWER OFF/ON 923: Error	Image Drum Lock Error	Check whether the Drum correctly operates. Is the error displayed again after turning the power?	Yes Yes	Check whether the Drum is correctly installed. Replace the Drum. Replace the Drum Motor.
SERVICE CALL 928: Error	Fuser Motor Lock Error	Does the fuser normally operate? Does the error occur again?	Yes Yes	Check whether the Fuser is correctly installed. Replace the Fuser. Replace the Fuser Motor.
POWER OFF/ON 919: Error	The 24 V power of the Duplex Printing Device is abnormal.	24 V power is not supplied to the Duplex Printing Device.		Check whether the Duplex Printing Device is correctly installed and install it again. Check the connector of the Duplex Printing Device.
POWER OFF/ON 920: Y 921: M 922: C 923: K	Drum Lock Error	The relevant ID does not rotate properly. Is the error displayed after the power is OFF/ON?	Yes	Check whether the relevant ID is correctly installed and install it again. Replace the relevant ID. Replace the relevant ID Motor.
SERVICE CALL 924: Tray 2 925: Tray 3 926: Tray 4 927: Tray 5	24 V power is not supplied to each relevant Tray.	24 V power is not properly supplied to each relevant Tray.		Check the installation state and the connector of each Tray.
POWER OFF/ON 928: Error	Fuser Motor Lock Error	Dose the Fuser properly rotate?		Check whether the Fuser is correctly installed and install it again. Replace the Fuser. Replace the Fuser Motor.
POWER OFF/ON 929:Error	Used Toner Return Motor Lock Error	Check whether the Used Toner Return Motor rotates normally.		Check the Return Driving System of the Used Toner and, if no problem is found, replace the Used Toner Motor.
POWER OFF/ON	Relevant CPU Clock	The frequency of the relevant		Check the connection of the

930: Sub CPU 931: Duplex CPU 932: Inverter CPU 933: Tray 2 CPU 934: Tray 3 CPU 935: Tray 4 CPU 936: Tray 5 CPU	Frequency Error	CPU Clock is not correct.		relevant PCB or replace the PCB. 930: S2M PCB 931: V72-2 932: V72-3 933: V72-1 Tray 2 934: V72-1 Tray 3 935: V72-1 Tray 4 936: V72-1 Tray 5
POWER OFF/ON 930: Error	Duplex-CPU Clock Frequency Error	The frequency of the Sub-CPU Clock is not correct.		Check the connection of the S2M PCB. Replace the S2M PCB.
POWER OFF/ON 940: Error	Used Toner Return Error	Check the mechanical structure of the Used Toner Return and the operation of Duct and ID.		Check whether the Basket Assembly is correctly operating to allow the gears transfer the power. Check whether the magnet of the gear is not missing. Replace the HAL IC PCB. Replace the Duct Assembly.
Software no authorized 001	Keychip Inspection Error	ASP PCB Keychip is missing or Keychip error		Turn the power OFF/ON. Replace the Keychip.
Software no authorized 002	Uncertified HDD Reproduction	The ASP PCB HDD is not a genuine product.		Turn the power OFF/ON. Replace the HDD.
Software no authorized 003	Uncertified Program Specification	The ASP PCB HDD program is not a right one.		Turn the power OFF/ON. Replace the HDD.
Software no authorized 004	EEPROM Error	The ASP PCB EEPROM is missing or an error is detected.		Turn the power OFF/ON. Replace the EEPROM.
POWER OFF/ON	Belt Temperature Abnormality	Is the HVPS cable from the Belt Thermister correctly connected?	No	Check the cable.
SERVICE CALL 980: Error	An error occurred as paper is caught in the Fuser.	Is paper caught or rolled up in the Fuser?		Turn the power off. Replace the Fuser.
SERVICE CALL 983: Error	Error of Installing Same Toner Cartridges	Two or more of same toners are found.		Check the installed Toner Cartridges and properly install them.
SERVICE CALL 990: Error	Occurrence of Used Toner Sensor Error	Is the K Toner Cartridge installed? Does the error occur repeatedly?	No Yes	Install the K Toner Cartridge. Check the cable connection and replace the board.

3. Warranty period and policy

3-1 Warranty period and Policy

- Customers can receive a free service for one year from the date of purchase when the product is failed while using.
- However, if the product is failed by customer's mistake or natural disasters, we inform that it will be serviced at a cost even within the free service period.

3-2 A/S and inquiry

- If you need any more information on the product and A/S service, visit our home page at www.anytronlabel.com , or contact us by [phone] or [email].

Arrow Systems, Inc. Support

T - (888) 697-2749

E - Support@arrsys.com

End of Document