
PFV2 Profiler - Parameter set

PROFILING **F**LOAT **V**ECTOR **2**

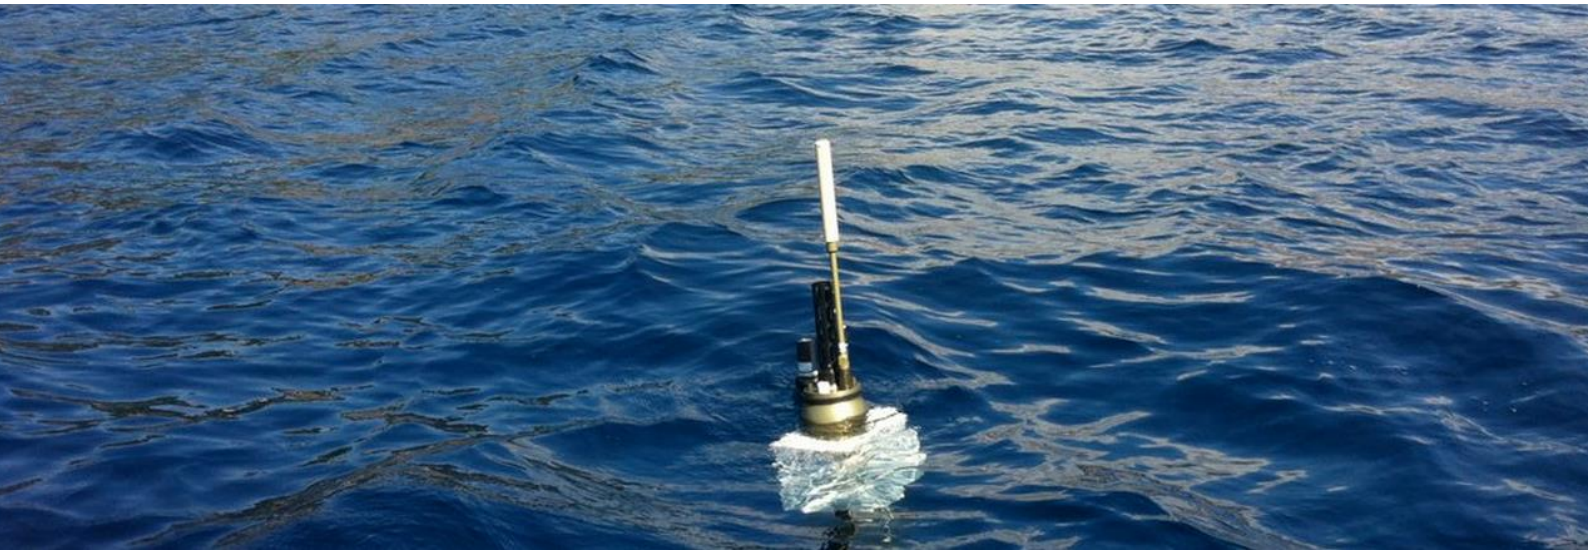

NT000068_PFV2_Parameters_Set
Revision 2.1 (2025-02-21)

Table of contents

Table of contents 2
1. Revision history 5
2. Parameter setting 6
2.1 Configuration file 6
2.2 List of parameters 6
<MISSION> 6
<PRESSURE_DETECTION> 6
<INITIALIZATION> 6
<LOOPxx> 7
<CYCLExx> 7
<LOOPxx> 8
<SETTING> 8
<END_OF_LIFE> 9
<TECHNICAL-BUOYANCY_RED> 10
<TECHNICAL-DESCENT> 10
<TECHNICAL-DRIFT> 10
<TECHNICAL-REPOSITIONING> 10
<TECHNICAL-ASCENT> 11
<TECHNICAL-EMERGENCE> 11
<TECHNICAL-IN_AIR> 12
<TECHNICAL-TREATMENT> 12
<TECHNICAL-TRANSMISSION> 12
<TECHNICAL-EMERGENCY_ASCENT> 13
<TECHNICAL-END_OF_LIFE> 13
<TECHNICAL-LOGGER> 13
<TECHNICAL-SECURITY> 14
<TECHNICAL-HYDRAULIC> 15
<SENSORS-SENSORxx> 15
<ICE> 19
<SELFTEST> 21
<ALARMS> 21
3. Float installation 23

3.1. Ballasting 23
3.2. Self-test 23
3.3. "Floating" deployment of float 23
3.3.1. "Pressure detection" deployment 23
4. Setting a mission 24
4.1. “LOOP” meaning 24
4.2. “CYCLE” meaning 24
4.3. Case 1: maintaining the profile depth 25
4.4. Case 2: maintaining the profile duration (depth reached) 25
4.5. Case 3: maintaining the profile duration (depth not reached) 26
4.6. Case 4: maintaining measurement depth and surface synchronization 27
4.7. Case 5: maintaining surface synchronization (depth not reached) 28
4.8. Case 6: maintaining surface synchronisation (depth reached) 28
5. Surface management 30
5.1. Buoyancy reduction 30
Secure mode 30
Fast mode 31
5.2. Awaiting the end of ascent 32
5.3. Emergence 32
5.4. Transmission 33
6. Navigation 34
6.1. Descent 34
6.2. Repositioning during drift 34
6.3. Ascent 36
7. Management of degraded modes 37
7.1. Grounding 37
7.1.1. Scenario 1: Escape mode – Setpoint correction 38
7.1.2. Scenario 3: Early surface mode – Ascent immediately 38
7.2. Hanging (only if “Ice detection” enabled) 39
7.3. Braking during descent 40
7.4. Braking on exceeding max. pressure 41
8. End of life 41
8.1. "Emergency" ascent 42
8.2. “End of life” mode 42

9. Standard sensors 44
9.1. Concept of zone 44
9.2. Power supply control 45
9.2.1. None (0) 45
9.2.2 Continuous (1) 45
9.2.3 Pulsed (2) 45
9.2.4 Spot sampling (3) 46
9.3 Acquisition rate 47
9.4 Data processing 48
9.4.2 Decimation of measurements 48
9.4.3 Raw (0x00) 49
9.4.4 Raw decimated (0x80) 49
9.4.5 Arithmetic mean decimated (0x81) 50
9.5 Surface acquisition 50
9.6 Common specific parameters 51
9.7 Identification of sensors 52
10 Extended features 53
10.1 Ascent with "ice detection" 53

1. Revision history

Revision	Release date	Notes	Author
1.0	2024-04-15	Draft	D. NOGRE
2.0	2025-01-17	Original	D.NOGRE

2. Parameter setting

2.1 Configuration file

Parameter setting of the float is performed using a configuration file "setting_update.xml". This file is organized in nodes. Each section contains keys from P0 to Px.

2.2 List of parameters

Each parameter is controlled by an access right:

- "S" : Standard – Access for all users
- "E" : Expert – Access is protected by the expert password
- "A" : Admin – Access is also protected but by the administrator password

<MISSION>
<SETTING>
<MISSION …>

No.	Comment	Limitation	Access rights
0	Reference day of the 1st cycle (days)	[0-40]	S

P0: Corresponds to the relative day (from his deployment day) before the first profile without taking account the cycle period.
When setting the reference day, it is recommended to allow enough time between the deployment and reach of profiling depth. Using a reference day of at least 2 will ensure the first profile to be completed.
If reference day is set to 0 or 1, float will probably not have enough time to reach Profile pressure target. In that case, float will shorten descent to stay in compliance with hour at surface.

<PRESSURE_DETECTION>
<SETTING>
<MISSION>
<PRESSURE_DETECTION>

No.	Comment	Limitation	Access rights
0	Period of pressure monitoring (s)	[30-1800(30mn)]	A
1	Threshold of pressure to start mission (dbar)	[1.0-100.0]	A
2	Maximum number of days before starting mission (days)	[1-365]	A

Please refer to the chapter - "Pressure detection" deployment.

<INITIALIZATION>
<SETTING>
<MISSION>
<INITIALIZATION …>

No.	Comment	Limitation	Access rights
0	Waiting at surface before starting mission (s)	[0-86400]	S

P0: To prevent from trying to sink while still on deck, the float waits for this time before commanding the buoyancy engine to start the descent. After disconnection of the PC, followed by removal of the magnet, the float waits for this delay before beginning the descent.

<LOOPxx>
<SETTING>
<MISSION>
<LOOPxx …>

No.	Comment	Limitation	Access rights
0	Repetition's number of this same loop	[0-65535]	S

Please refer to the chapter - "LOOP" meaning.

<CYCLExx>
<SETTING>
<MISSION>
<LOOPxx>
<CYCLExx …>

No.	Comment	Limitation	Access rights
0	Number of cycles	[0-65535]	S
1	Period of cycle (s)	[0-1728000(480h)]	S
2	Expected hour at surface	hh:mm:ss	S

Please refer to the chapter - "CYCLE" meaning.

<SETTING>
<MISSION>
<LOOPxx>
<CYCLExx>
<TRANSMISSION01 …>

No.	Comment	Limitation	Access rights
0	Enable/disable transmission session	[True/False]	S

P0: If this parameter is 'True', an SBD session will take place at the start of the cycle. This session is used to check whether a change of mission or technical parameters has been correctly processed by the float and whether the new parameters are effective for the cycle.

<SETTING>
<MISSION>
<LOOPxx>
<CYCLExx>
<BUOYANCY_RED …>

No.	Comment	Limitation	Access rights
0	Mode of buoyancy reduction 0: SECURE 1: FAST	[0-1]	E

P0: Please refer to the chapter - Buoyancy reduction.

<SETTING>
<MISSION>
<LOOPxx>
<CYCLExx>
<DESC_PARK …>

No.	Comment	Limitation	Access rights
0	Expected depth (dbar)	[0.0-2020.0]	S
1	Mean speed on descent (cm/s)	[0.5-100.0]	E

Please refer to the chapter - Descent.

<SETTING>
<MISSION>
<LOOPxx>
<CYCLExx>
<PARK_DRIFT …>

No.	Comment	Limitation	Access rights
0	Minimum duration in drift (s)	[0-1728000(480h)]	S
1	Tolerance of positioning (dbar)	[0.0-200.0]	E
2	Tolerance of repositioning (dbar)	[0.0-100.0]	E

Please refer to the chapter - Repositioning during drift.

<SETTING>
<MISSION>
<LOOPxx>
<CYCLExx>
<DESC_PROF …>

No.	Comment	Limitation	Access rights
0	Expected depth (dbar)	[0.0-2020.0]	S
1	Mean speed on descent (cm/s)	[0.5-100.0]	E

Please refer to the chapter - Descent.

<SETTING>
<MISSION>
<LOOPxx>
<CYCLExx>
<PROF_DRIFT …>

No.	Comment	Limitation	Access rights
0	Minimum duration in drift (s)	[0-1728000(480h)]	S
1	Tolerance of positioning (dbar)	[0.0-200.0]	E
2	Tolerance of repositioning (dbar)	[0.0-100.0]	E

Please refer to the chapter - Repositioning during drift.

<SETTING>

<MISSION>
<LOOPxx>
<CYCLExx>
<ASCENT …>

No.	Comment	Limitation	Access rights
0	Expected depth (Optional – set to 0 if only one ascent phase)	[0.0-2020.0]	S
1	Mean speed on ascent (cm/s)	[0.5-100.0]	E

Please refer to the chapter - **Ascent**.

<SETTING>
<MISSION>
<LOOPxx>
<CYCLExx>
<IN_AIR …>

No.	Comment	Limitation	Access rights
0	Cycle periodicity (1/x where x=number of the cycle)	[0-250]	S
1	Duration of waiting at surface (s)	[0-3600(1h)]	S

Please refer to the chapter - **Surface acquisition**.

<SETTING>
<MISSION>
<LOOPxx>
<CYCLExx>
<END_OF_CYCLE …>

No.	Comment	Limitation	Access rights
0	Waiting at the end of the cycle (s)	[0-21600(6h)]	S

<END_OF_LIFE>
<SETTING>
<MISSION>
<END_OF_LIFE …>

No.	Comment	Limitation	Access rights
0	Periodicity of the GPS/transmission session (s)	[0-432000(120h)]	S

Please refer to the chapter - **End of life**.

<TECHNICAL-BUOYANCY_RED>
<SETTING>
<TECHNICAL>
<BUOYANCY_RED …>

No.	Comment	Limitation	Access rights
0	1st threshold of the buoyancy reduction (dbar)	[1.0-20.0]	E
1	2nd threshold of the buoyancy reduction (dbar)	[1.0-25.0]	E
2	Period of pressure monitoring (s)	[10-3600(1h)]	E
3	Volume of SV activation (cm3)	[1.0-50.0]	E

Please refer to the chapter - Buoyancy reduction.

<TECHNICAL-DESCENT>
<SETTING>
<TECHNICAL>
<DESCENT>
<MIN …> / <MAX …>

No.	Comment	Limitation	Access rights
0	Mean speed (cm/s)	[0.5-100.0]	A
1	Min speed (cm/s)	[0.5-100.0]	A
2	Period of pressure monitoring (s)	[10-3600]	A
3	Volume of SV activation (cm3)	[1.0-50.0]	A

<TECHNICAL-DRIFT>
<SETTING>
<TECHNICAL>
<DRIFT …>

No.	Comment	Limitation	Access rights
0	Period of pressure monitoring (s)	[60-86400]	E

<TECHNICAL-REPOSITIONING>
<SETTING>
<TECHNICAL>
<REPOSITIONING …>

No.	Comment	Limitation	Access rights
0	Speed stabilization (cm/s)	[0.1-100.0]	A

<SETTING>
<TECHNICAL>
<REPOSITIONING>
<MIN …> / <MAX …>

No.	Comment	Limitation	Access rights

0	Tolerance in pressure of expected depth (dbar)	[0.5-100.0]	A
1	Period of pressure monitoring (s)	[10-3600]	A
2	Maximum volume of SV activation (cm3)	[1.0-50.0]	A
3	Maximum volume of PUMP activation (cm3)	[1.0-50.0]	A

<TECHNICAL-ASCENT>

<SETTING>

<TECHNICAL>

<ASCENT …>

No.	Comment	Limitation	Access rights
0	Tolerance in pressure of expected depth (dbar) ***(NOT USED by ARVOR 2)***	[0.0-100.0]	E

<SETTING>

<TECHNICAL>

<ASCENT>

<SURFACE …>

No.	Comment	Limitation	Access rights
0	Threshold of pressure considering that the surface has been reached (dbar)	[3.0-50.0]	E
1	Waiting delay once surface reached (s)	[0-3600]	E

Please refer to the chapter - Ascent.

<SETTING>

<TECHNICAL>

<ASCENT>

<MIN …> / <MAX …>

No.	Comment	Limitation	Access rights
0	Mean speed (cm/s)	[0.5-100.0]	A
1	Min speed (cm/s)	[0.5-100.0]	A
2	Period of pressure monitoring (s)	[10-3600]	A
3	Volume of PUMP activation (cm3)	[1.0-50.0]	A

<TECHNICAL-EMERGENCE>

<SETTING>

<TECHNICAL>

<EMERGENCE …>

No.	Comment	Limitation	Access rights
0	Volume of pumping increasing buoyancy	[200.0-800.0]	E

Please refer to the chapter - Emergence.



<TECHNICAL-IN_AIR>
<SETTING>
<TECHNICAL>
<IN_AIR …>

No.	Comment	Limitation	Access rights
0	Volume of pumping increasing buoyancy to make acquisition in air	[0.0-800.0]	E

Please refer to the chapter - Surface acquisition.

<TECHNICAL-TREATMENT>
<SETTING>
<TECHNICAL>
<TREATMENT …>

No.	Comment	Limitation	Access rights
0	Timeout of sensors data treatment before transmission (s)	[0-86400]	A

P0: The timeout is the maximum amount of time allowed for sensor data processing to complete its task.

<TECHNICAL-TRANSMISSION>
<SETTING>
<TECHNICAL>
<TRANSMISSION …>

No.	Comment	Limitation	Access rights
0	GPS: Time-out of session (s)	[300-21600]	E
1	GPS: Volume of pumping in case of acquisition failure (cm3)	[50.0-800.0]	E
2	IRIDIUM: Time-out of 1st connection (s)	[300-21600]	E
3	IRIDIUM: Time-out of session (s)	[300-86400]	E
4	Enable/disable GZ compression on all files sent	[True/False]	E
5	Number of sending tries before quarantining a file	[5-100]	E

Please refer to the chapter - Transmission.

<SETTING>
<TECHNICAL>
<TRANSMISSION>
<RUDICS …> ONLY FOR RUDICS VECTOR

No.	Comment	Limitation	Access rights
0	Maximum size of transmit files (KB)	[1-20]	A
1	Reset RUDICS connection before retrieving remote control commands	[True/False]	A

<SETTING>
<TECHNICAL>
<TRANSMISSION>
<SBD …> ONLY FOR SBD VECTOR

No.	Comment	Limitation	Access rights
0	Resend setting file one remote control commands receiving	[True/False]	E

P0: When this parameter is set to 'true', the configuration will be retransmitted each time the profiler will receive new parameters.

<TECHNICAL-EMERGENCY_ASCENT>
<SETTING>
<TECHNICAL>
<EMERGENCY_ASCENT …>

No.	Comment	Limitation	Access rights
0	Min speed (cm/s)	[0.5-100.0]	E
1	Volume of PUMP activation (cm3)	[1.0-50.0]	E

Please refer to the chapter - "Emergency" ascent.

<TECHNICAL-END_OF_LIFE>
<SETTING>
<TECHNICAL>
<END_OF_LIFE>
<SCHEDULER …>

No.	Comment	Limitation	Access rights
0	Enable/disable the automatic "end of life at bottom"	[True/False]	E
1	Minimum number of cycles realized	[100-65535]	A
2	Minimum number of days at sea	[365-65535]	A
3	Number of detections confirming the "end of life"	[0-255]	A

P0: The parameter enables or disables the automatic "end of life at bottom". The function is conditioned by 3 parallel criteria as follows:

- a minimum number of cycles completed (P1)
- a minimum duration at sea (P2)
- several 'end of life' confirmations to check battery depletion (P3)

<TECHNICAL-LOGGER>
<SETTING>
<TECHNICAL>
<LOGGER …>

No.	Comment	Limitation	Access rights
0	Event logger level 0: Project information 1: Technical information 2: Endurance information	[0-2]	E
1	Reporting of pressure during navigation Bit 0: On descent Bit 1: On drift Bit 2: On ascent	b00000xxx	E
2	Reporting of sensors treatment 0: Treated data only	[0-1]	E

	1: All data		
3	Reporting of ISA measures	[True/False]	E

WARNING: Increasing the depth of the various loggers will have an impact on the cost of Iridium.

P0: This parameter gives more or less depth to the recording of events in the log. This event logger is an encrypted file that only nke can decode. (0: less detailed, 2: more detailed)

P1: The parameter permits to report all the information of pressure get during the navigation (descent 'and'/'or' drift 'and'/'or' ascent).

P2: This setting gives more detail on the processing of sensor data. Please refer to the documentation "NT000069_PFV2_File_Management". (set to 0 = event type 9000, set to 1 = Event type 9002).

P3: This setting reports all samples acquired for the ISA detection (with a maximum of 50 samples). Please refer to the documentation "NT000069_PFV2_File_Management" – Event type 2006 (50 samples max = 500 Bytes).

<TECHNICAL-SECURITY>

<SETTING>

<TECHNICAL>

<SECURITY …>

No.	Comment	Limitation	Access rights
0	Surface pressure (dbar)	[1.0-50.0]	E
1	Min delay between pressure to compute speed (s)	[10-300]	A
2	Volume of PUMP activation on descent braking (cm3)	[1.0-50.0]	E
3	Volume of PUMP activation on emergency braking (cm3)	[1.0-50.0]	E
4	Braking factor to stop ascent on aborted profile	[1.0-20.0]	E

P0: Defines the pressure considering that the float is at surface. CAUTION: This parameter is used in different task of the firmware and has to be modify with precaution.

P1: Defines the minimum delay between 2 samples of pressure to refresh the speed of the float.

P2: Defines the volume of pump activation if a high speed on descent has been detected – <ALARMS-THRESHOLD-P10>.

P3: Defines the volume of pump activation if the pressure goes over the limit depth - <ALARMS-THRESHOLD-P2>.

P4: When the profile is aborted on ascent, a pump activation corresponding to the volume of the last activation multiplied by the factor is applied in aim to invert the buoyancy.

<SETTING>

<TECHNICAL>

<SECURITY>

<GROUNDING …>

No.	Comment	Limitation	Access rights
0	Volume of SV at surface before considering a grounding (cm3)	[1.0-1600.0]	E
1	Volume of SV on descent before considering a grounding (cm3)	[10.0-200.0]	E
2	Speed of stabilization on descent (cm/s)	[0.1-100.0]	A
3	Behaviour on grounding in "descent to parking" or "parking drift" 0: Pressure switch 1: Stay grounded	[0-2]	E

	2: Immediate ascent		
4	Behaviour on grounding in “descent to profile” or “profile drift” 0: Pressure switch 1: Stay grounded 2: Immediate ascent	[0-2]	E
5	Minimum pressure before allowing switch on depth setpoint (dbar)	[50.0-1000.0]	E
6	Offset pressure of depth setpoint (dbar)	[0.0-200.0]	E

Please refer to the chapter - Grounding.

<TECHNICAL-HYDRAULIC>
<SETTING>
<TECHNICAL>
<HYDRAULIC …>

No.	Comment	Limitation	Access rights
0	Multiplier coefficient of hydraulic algorithm	[0.1-5.0]	A

<SETTING>
<TECHNICAL>
<HYDRAULIC>
<SV …>

No.	Comment	Limitation	Access rights
0	Minimum duration of SV activation (ms)	[10.0-50.0]	A
1	SV efficiency (%)	[10-190]	A

<SETTING>
<TECHNICAL>
<HYDRAULIC>
<PUMP …>

No.	Comment	Limitation	Access rights
0	Minimum duration of PUMP activation (ms)	[10.0-50.0]	A
1	PUMP efficiency (%)	[10-190]	A

<SENSORS-SENSORxx>
<SETTING>
<SENSORS>
<SENSORxx …>

No.	Comment	Limitation	Access rights
0	Enable/disable the sensor	[True/False]	S
1	Format of treated data	Value depending on each sensor	E
2	Datation frequency of treated data	[0-65535] *(Forced to “1” for RUDICS transmission)*	E

P0: Enable or disable the sensor for acquisition.

P1: Defines the format of the data transmitted – Please refer to the documentation "NT000069_PFV2_File_Management_rev2" – Chapter "Sensor data file" - "Data format".

P2: Defines the frequency of datation in the data transmitted. (0: No date, 1: The date on each sensor's data, 15: The date every 15th sensor's data).

<SETTING>
<SENSORS>
<SENSORxx>
<DESCENT …>

No.	Comment	Limitation	Access rights
0	Enable/disable acquisition on "descent to parking"	[True/False]	S
1	Enable/disable acquisition on "descent to profile"	[True/False]	S

P0: Enable or disable the sensor for acquisition on descent to parking.

P1: Enable or disable the sensor for acquisition on descent to profile.

<SETTING>
<SENSORS>
<SENSORxx>
<ASCENT …>

No.	Comment	Limitation	Access rights
0	Enable/disable acquisition on "ascent"	[True/False]	S

P0: Enable or disable the sensor for acquisition on ascent.

<SETTING>
<SENSORS>
<SENSORxx>
<DESCENT> / <ASCENT>
<ZONE1 …>

No.	Comment	Limitation	Access rights
0	Zone 1 - Pressure threshold between zone 1 and zone 2	[0.1-2200.0]	S
1	Zone 1 - Sampling period (s)	[0.0-864000(240h)]	S
2	Zone 1 - Acquisition type 0 : None 1 : Continu 2 : Pulsed 3 : Spot sampling	[0-3]	S
3	Zone 1 - Processing type 00 : Raw 80 : Raw decimated 81 : Average decimated	[00/80/81]	S
4	Zone 1 - Slice thickness (dbar)	[0.01-1000.0]	S
5	Zone 1 - Number of samples in spot sampling mode per slice	[1-65535]	S

Please refer to the chapter - Standard sensors.

<SETTING>
<SENSORS>
<SENSORxx>
<DESCENT> / <ASCENT>
<ZONE2 …>

No.	Comment	Limitation	Access rights
0	Zone 2 - Pressure threshold between zone 2 and zone 3	[0.1-2200.0]	S
1	Zone 2 - Sampling period (s)	[0.0-864000(240h)]	S
2	Zone 2 - Acquisition type 0 : None 1 : Continu 2 : Pulsed 3 : Spot sampling	[0-3]	S
3	Zone 2 - Processing type 00 : Raw 80 : Raw decimated 81 : Average decimated	[00/80/81]	S
4	Zone 2 - Slice thickness (dbar)	[0.01-1000.0]	S
5	Zone 2 - Number of samples in spot sampling mode per slice	[1-65535]	S

Please refer to the chapter - Standard sensors.

<SETTING>
<SENSORS>
<SENSORxx>
<DESCENT> / <ASCENT>
<ZONE3 …>

No.	Comment	Limitation	Access rights
0	Zone 3 - Pressure threshold between zone 3 and zone 4	[0.1-2200.0]	S
1	Zone 3 - Sampling period (s)	[0.0-864000(240h)]	S
2	Zone 3 - Acquisition type 0 : None 1 : Continu 2 : Pulsed 3 : Spot sampling	[0-3]	S
3	Zone 3 - Processing type 00 : Raw 80 : Raw decimated 81 : Average decimated	[00/80/81]	S
4	Zone 3 - Slice thickness (dbar)	[0.01-1000.0]	S
5	Zone 3 - Number of samples in spot sampling mode per slice	[1-65535]	S

Please refer to the chapter - Standard sensors.

<SETTING>
<SENSORS>
<SENSORxx>

<DESCENT> / <ASCENT>
<ZONE4 …>

No.	Comment	Limitation	Access rights
0	Zone 4 - Pressure threshold between zone 4 and zone 5	[0.1-2200.0]	S
1	Zone 4 - Sampling period (s)	[0.0-864000(240h)]	S
2	Zone 4 - Acquisition type 0 : None 1 : Continu 2 : Pulsed 3 : Spot sampling	[0-3]	S
3	Zone 4 - Processing type 00 : Raw 80 : Raw decimated 81 : Average decimated	[00/80/81]	S
4	Zone 4 - Slice thickness (dbar)	[0.01-1000.0]	S
5	Zone 4 - Number of samples in spot sampling mode per slice	[1-65535]	S

Please refer to the chapter - Standard sensors.

<SETTING>
<SENSORS>
<SENSORxx>
<DESCENT> / <ASCENT>
<ZONE5 …>

No.	Comment	Limitation	Access rights
1	Zone 5 - Sampling period (s)	[0.0-864000(240h)]	S
2	Zone 5 - Acquisition type 0 : None 1 : Continu 2 : Pulsed 3 : Spot sampling	[0-3]	S
3	Zone 5 - Processing type 00 : Raw 80 : Raw decimated 81 : Average decimated	[00/80/81]	S
4	Zone 5 - Slice thickness (dbar)	[0.01-1000.0]	S
5	Zone 5 - Number of samples in spot sampling mode per slice	[1-65535]	S

Please refer to the chapter - Standard sensors.

<SETTING>
<SENSORS>
<SENSORxx>
<PARK_DRIFT>

No.	Comment	Limitation	Access rights
0	Sampling period (s)	[0.0-864000(240h)]	S

<SETTING>

<SENSORS>
<SENSORxx>
<PROF_DRIFT>

No.	Comment	Limitation	Access rights
0	Sampling period (s)	[0.0-864000(240h)]	S

Please refer to the chapter - Standard sensors.

<SETTING>
<SENSORS>
<SENSORxx>
<IN_AIR>

No.	Comment	Limitation	Access rights
0	Sampling period (s)	[0.0-3600.0(1h)]	S
1	Acquisition type 0 : None 1 : Continu 2 : Pulsed	[0-2]	S

Please refer to the chapter - Surface acquisition.

<SETTING>
<SENSORS>
<SENSORxx>
<TECHNICAL >

No.	Comment	Limitation	Access rights
0	Warmup delay (s)	Depends on sensor	A
1	Power-off delay (s)	Depends on sensor	A
2	Theorical delay between 2 samples (s)	Depends on sensor	E
3	Index of 1st sample valid	Depends on sensor	E

<SETTING>
<SENSORS>
<SENSOR>
<SPECIFIC > Parameter setting specific to SBE41 sensor.

No.	Comment	Limitation	Access rights
0	"Cut-off" pressure (dbar)	[0.0-100.0]	E

<ICE>
<SETTING>
<ICE>

No.	Comment	Limitation	Access rights
0	Key validating the option activation	32bits	E
1	Enable/disable ice detection	[True/False]	S

2	Monthly calendar activation	12bits with: - BIT11 = January - BIT… = … - BIT0 = December	S
3	Breakup period (days)	[0-365]	S
4	Period of 1st forcing ascent (days)	[1-365]	S
5	Period of next forcing ascent (days)	[0-365]	S
6	Depth for "slow down" speed of ascent (dbar)	[100.0-500.0]	S
7	“Slow down” speed (cm/s)	[0.5-100.0]	S

Please refer to the documentation “NT000075_PFV2_Under_Ice_Capabilities”

<SETTING>

<ICE>

<ISA>

No.	Comment	Limitation	Access rights
0	Enable/disable ISA detection	[True/False]	S
1	Collection starting depth (dbar)	[0.0-300.0]	S
2	Collection stopping depth (dbar)	[0.0-300.0]	S
3	Median temperature threshold (°C)	[(-100.0)-100.0]	S
4	Successive detections counter threshold	[0-255]	S

Please refer to the documentation “NT000075_PFV2_Under_Ice_Capabilities”

<SETTING>

<ICE>

<HANGING>

No.	Comment	Limitation	Access rights
0	Enable/disable hanging detection	[True/False]	S
1	Maximum volume before considering a hanging (cm3)	[100.0-850.0]	E
2	Speed stabilization (cm/s)	[0.1-100.0]	E
3	Pressure delta to flow back (dbar)	[0.0-50.0]	E

Please refer to the documentation “NT000075_PFV2_Under_Ice_Capabilities”

<SETTING>

<ICE>

<SAT_MASK>

No.	Comment	Limitation	Access rights
0	Enable/disable satellite mask detection	[True/False]	S

Please refer to the documentation “NT000075_PFV2_Under_Ice_Capabilities”

<SELFTEST>
<SETTING>
<SELFTEST>

No.	Comment	Limitation	Access rights
0	Minimum voltage of battery (V)	[4.0-18.0]	A
1	Minimum external pressure (dbar)	[(-100.0)-2100.0]	A
2	Maximum external pressure (dbar)	[100.0-2100.0]	A
3	Minimum internal pressure (mbar)	[10.0-2000.0]	A
4	Maximum internal pressure (mbar)	[10.0-2000.0]	A
5	Minimum internal temperature (°C)	[(-40.0)-85.0]	A
6	Maximum internal temperature (°C)	[(-40.0)-85.0]	A
7	Minimum internal relative humidity (%RH)	[0.0-100.0]	A
8	Maximum internal relative humidity (%RH)	[0.0-100.0]	A

<ALARMS>
<SETTING>
<ALARMS>
<THRESHOLD>

No.	Comment	Limitation	Access rights
0	Minimum voltage of battery (V)	[4.0-18.0]	E
1	Minimum external pressure (dbar)	[(-100.0)-2100.0]	E
2	Maximum external pressure (dbar)	[100.0-2100.0]	E
3	Minimum internal pressure (mbar)	[10.0-2000.0]	E
4	Maximum internal pressure (mbar)	[10.0-2000.0]	E
5	Minimum internal temperature (°C)	[(-40)-85.0]	E
6	Maximum internal temperature (°C)	[(-40)-85.0]	E
7	Minimum internal relative humidity (%RH)	[0.0-100.0]	E
8	Maximum internal relative humidity (%RH)	[0.0-100.0]	E
9	Gap between 2 consecutive pressure requests (dbar)	[0.0-50.0]	E
10	Maximum speed on descent (cm/s)	[0.0-1000.0]	E

P9: The difference is measured between 2 consecutive pressure measurements during navigation. To deactivate the alarm and conserve energy at the same time, set the parameter to 0.

P10: The alarm secures the float if it dives too quickly. Please refer to <SETTING-ALARMS-END_OF_LIFE-P10> for more detail.

<SETTING>

<ALARMS>

<END_OF_LIFE>

No.	Comment	Limitation	Access rights
0	Detection of minimum battery voltage	[True/False]	E
2	Detection of maximum external pressure	[True/False]	E
4	Detection of maximum internal pressure	[True/False]	E
10	Detection of maximum speed on descent	[True/False]	E
21	Detection of insulation voltage	[True/False]	E

Some of the "End Of Life" requests just above, are directly associated to the alarm thresholds.

The detections and associated actions are different from each other:
P0:
'True' = The float will enter 'End Of Life' mode when the battery voltage is measured below the <SETTING-ALARMS-THRESHOLD-P0> parameter.
'False' = An alarm will be returned but the float will continue its mission.

P2:
'True' = The float will enter 'End Of Life' mode when the pressure is measured above the <SETTING-ALARMS-THRESHOLD-P2> parameter.
'False' = An alarm will be returned but the float will continue its mission after falling back below the threshold with several activations of the <SETTING-TECHNICAL-SECURITY-P3> pump.

P4:
'True' = The float will enter 'End Of Life' mode when the internal pressure is measured over the <SETTING-ALARMS-THRESHOLD-P4> parameter.
'False' = An alarm will be returned but the float will continue its mission.

P10:
'True' = The float will enter 'End Of Life' mode when the speed on descent is measured above the <SETTING-ALARMS-THRESHOLD-P10> parameter.
'False' = An alarm will be returned but the float will continue its mission after falling back below the threshold with several activations of the <SETTING-TECHNICAL-SECURITY-P2> pump.

3. Float installation

3.1.Ballasting

The float can be deployed with the bladder either empty or full. The float automatically inflates its bladder before the mission. In that case, the float is in "floating" deployment.

3.2.Self-test


Before the mission starts, the float performs a system self-test. His result is sent by Iridium link.

3.3."Floating" deployment of float

3.3.1. "Pressure detection" deployment

For pressure detection to work, the float must be in a “sinking” condition. It must be able to sink from the surface to the pressure activation threshold when deployed.

The pressure activation starts with a successful self-test. The float enters a pressure test phase during which it monitors the pressure periodically. When the pressure exceeds the detection threshold, the float increases its buoyancy to reach the surface and starts the mission.

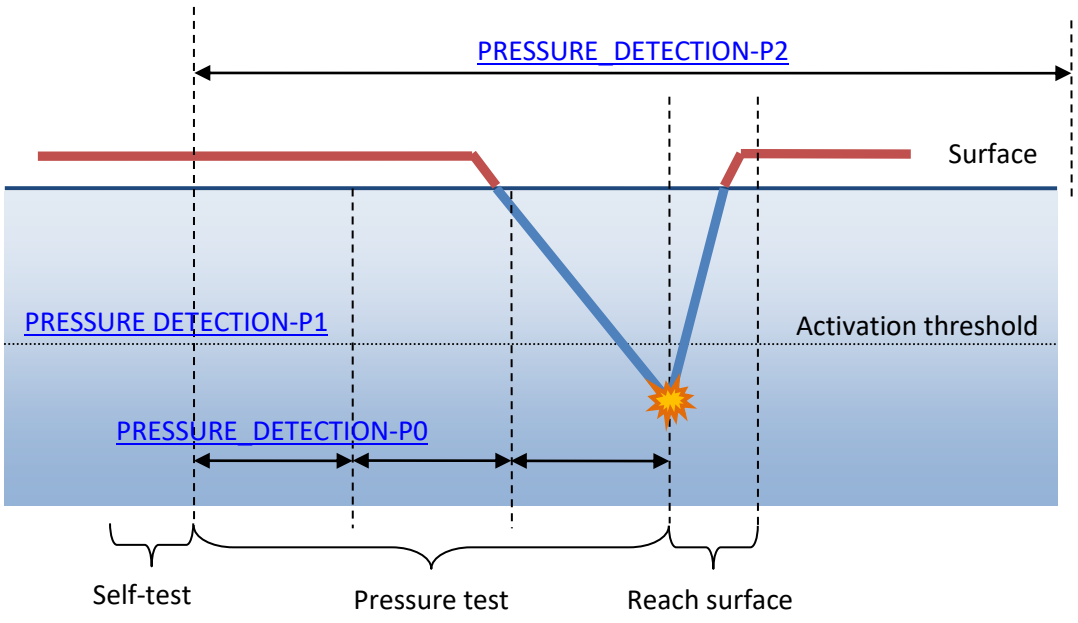


In case the pressure test phase fails, the float will engage the mission after a maximum duration.

When the mission starts (end of pressure test succeed or fails) the arming state sets to “pressure detection” is switched to “standard” state automatically.

4. Setting a mission

To define the mission, the configuration introduces the notions of "LOOP" and "CYCLE".

A loop includes one or more cycles. The interest of this loop is that the different pattern of cycles can be repeated. And by different sets of parameters, the float can perform a wide range of cycling.

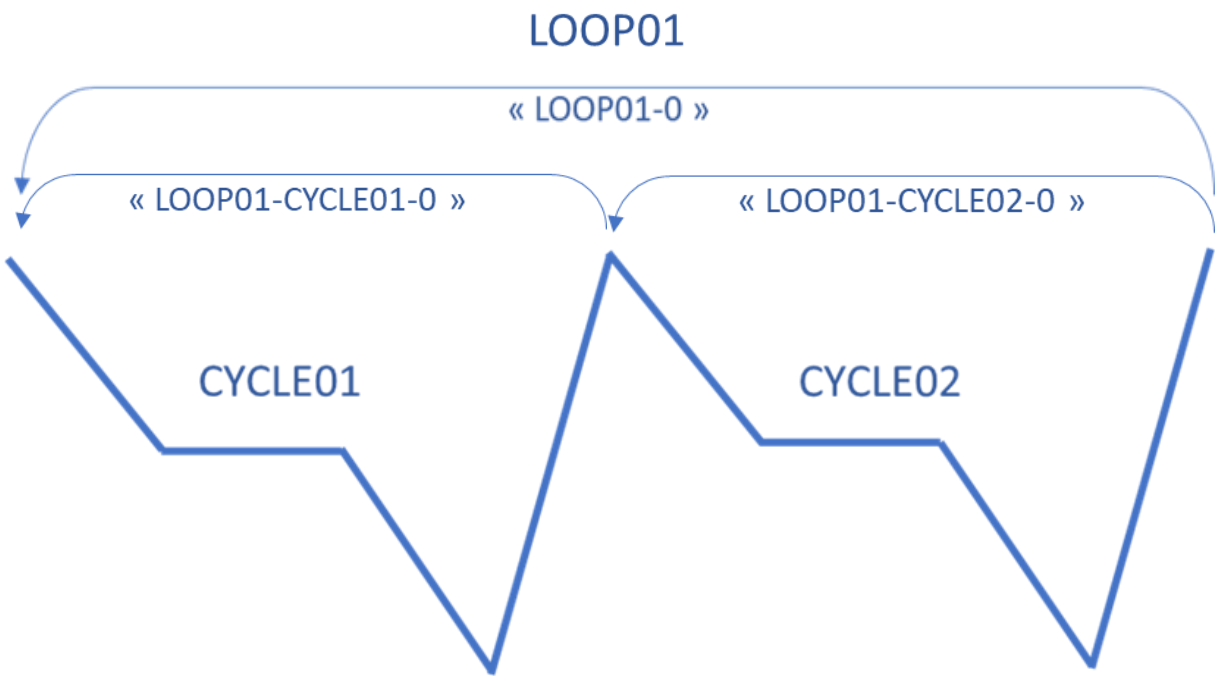

4.1. "LOOP" meaning

As its name suggests, a loop is a function that repeats one or more cycles.

- LOOPxx-P0: Defined the number of "LOOP" repeats.


4.2. "CYCLE" meaning

A cycle is defined as the execution of a profile followed by a session at the surface (GPS, transmission...)

- LOOPxx-CYCLExx-P0: Number of repeats of the same cycle before switching to the next.


Its operation is based on 2 parameters:

- LOOPxx-CYCLExx-P1: Cycle period
- LOOPxx-CYCLExx-P2: Expected hour at surface

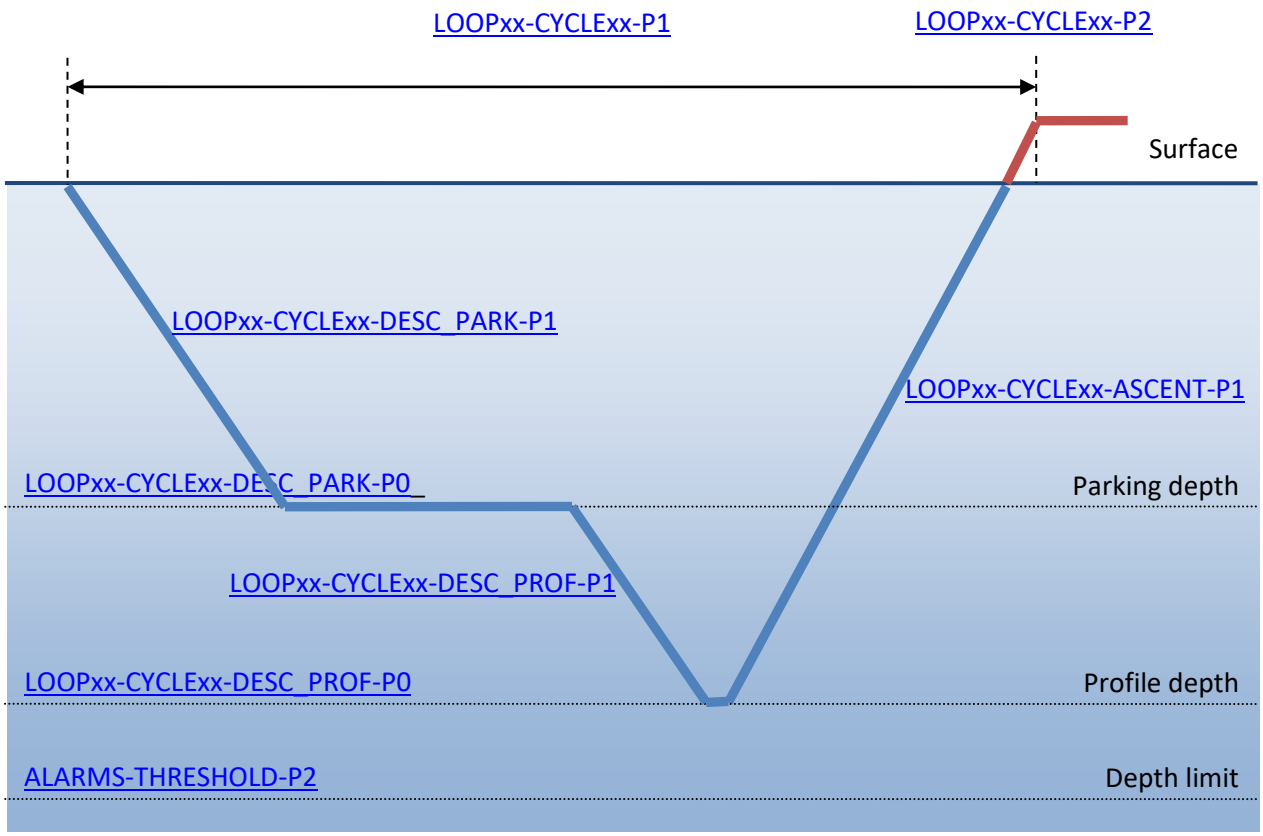


4.3.Case 1: maintaining the profile depth

The profile is performed to observe the profile depth. Drift phases are not considered.

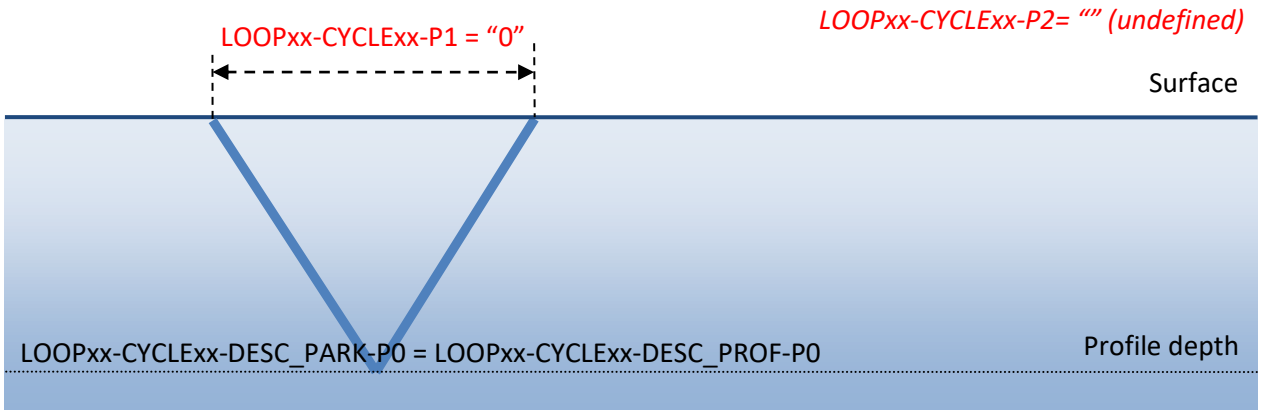


4.4.Case 2: maintaining the profile duration (depth reached)

The profile is performed with standby at parking depth to observe the profile duration.

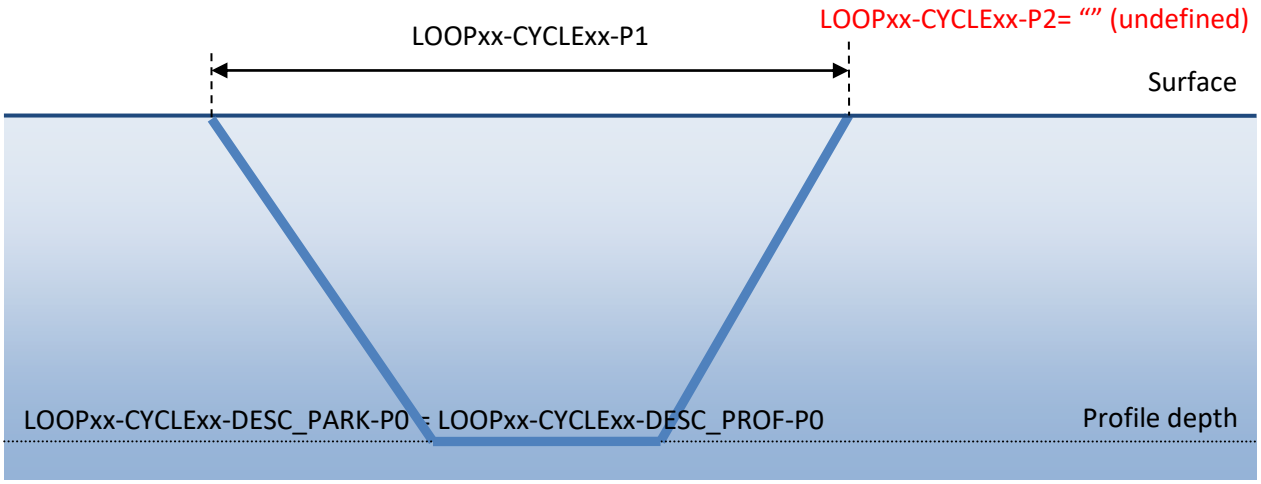


4.5.Case 3: maintaining the profile duration (depth not reached)

If the profile cannot be performed within the time allocated, the ascent is anticipated to observe the profile duration.

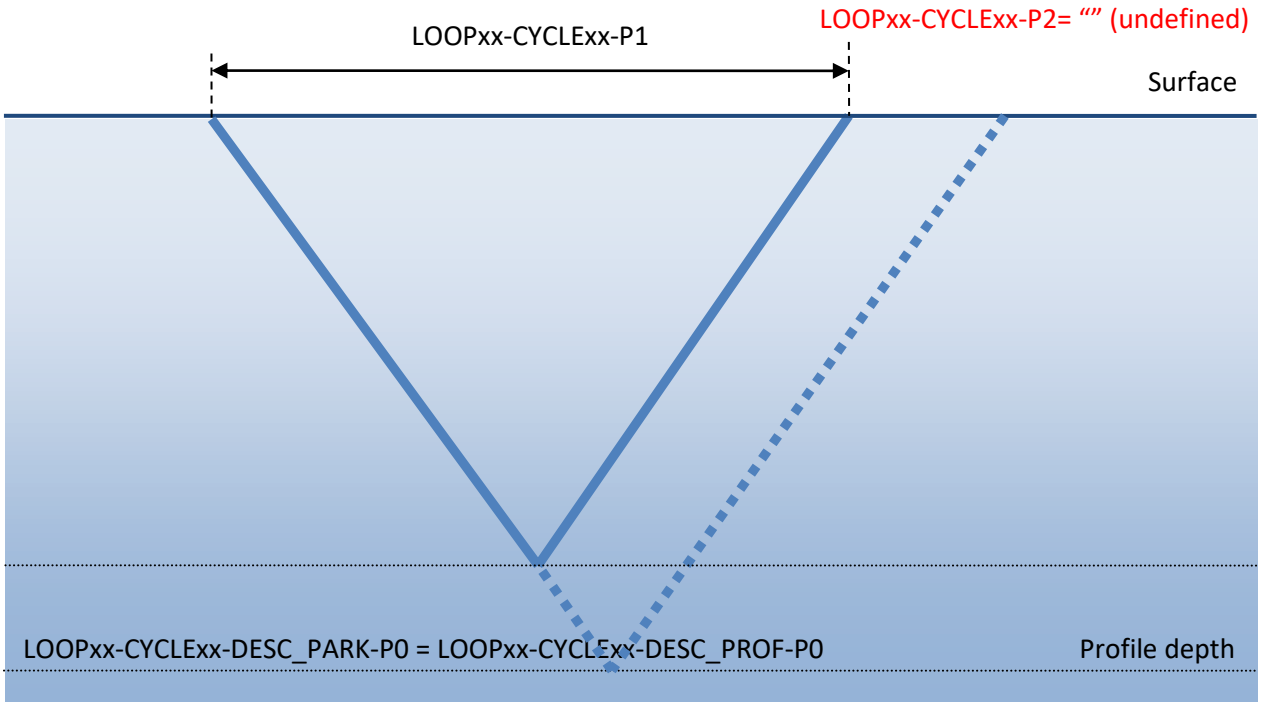


4.6.Case 4: maintaining measurement depth and surface synchronization

The profile is performed with standby at parking depth to observe the time of presence at the surface and the measurement depth.

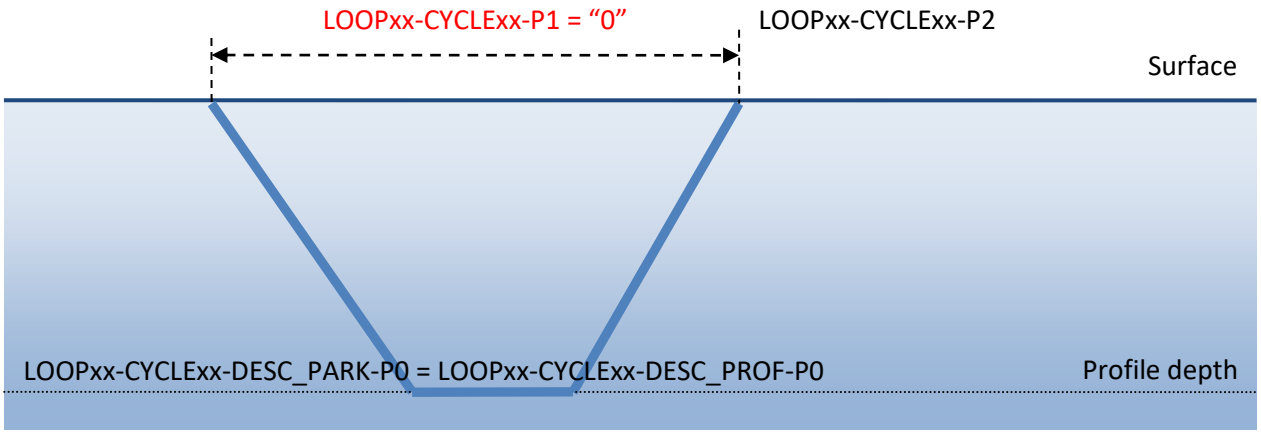


If the time of presence at the surface is already past, the time of presence at the surface is postponed to the following day.

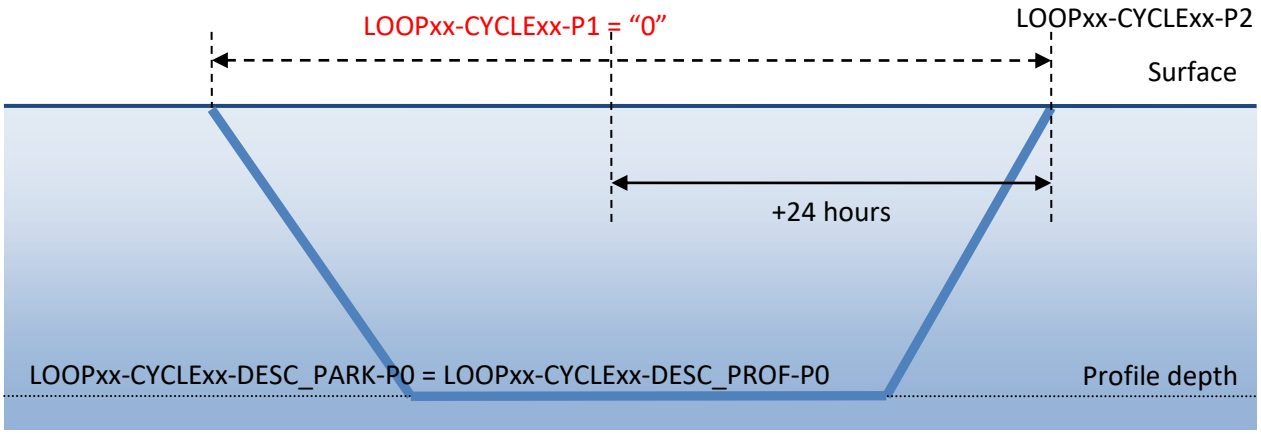


4.7.Case 5: maintaining surface synchronization (depth not reached)

If the profile cannot be performed within the time allocated, the ascent is anticipated to observe the time of presence at the surface.

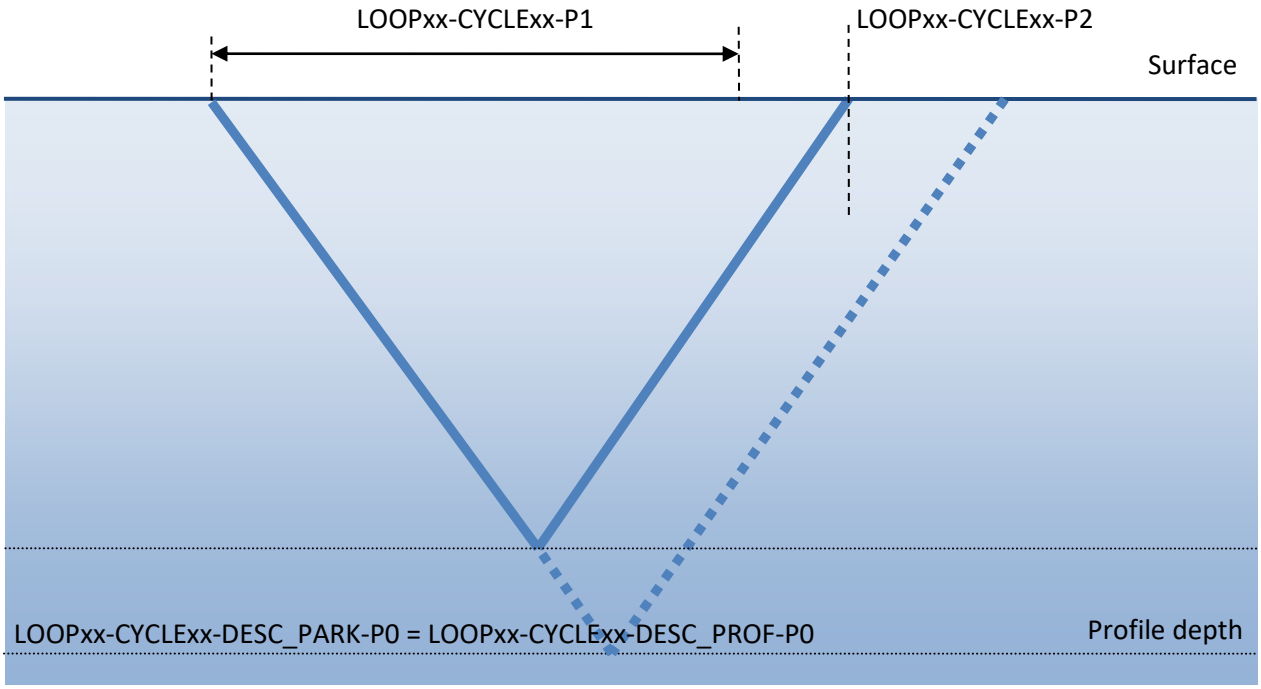


4.8.Case 6: maintaining surface synchronisation (depth reached)

The profile is performed with standby at parking depth to observe the time of presence at the surface and the minimum duration.

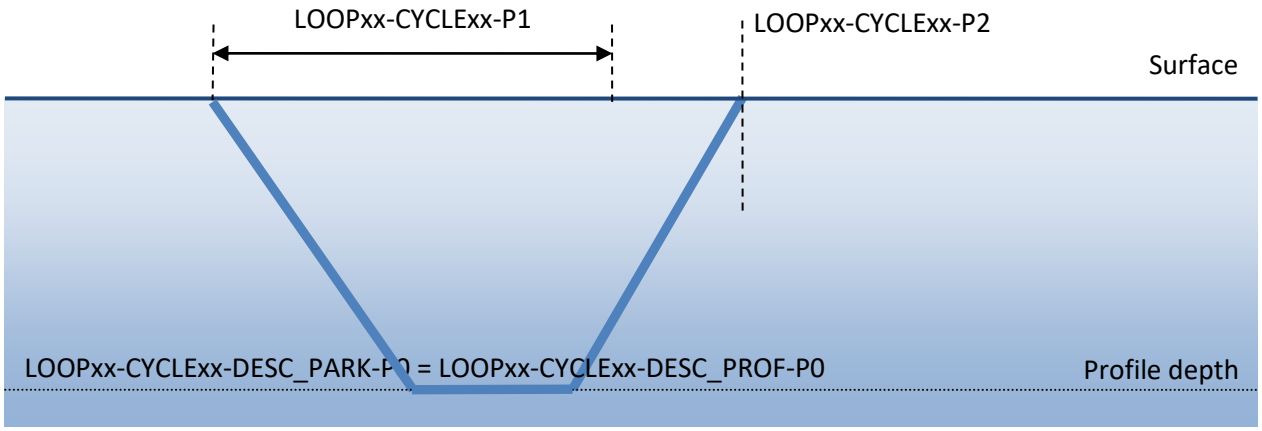

If the profile cannot be performed while observing the time of presence at the surface and the minimum duration, the time of presence at the surface is postponed to:

- 24 hours if “LOOPxx-CYCLExx-P1” is modulo 24 hours
- “LOOPxx-CYCLExx-P1” if “LOOPxx-CYCLExx-P1” is not modulo 24 hours

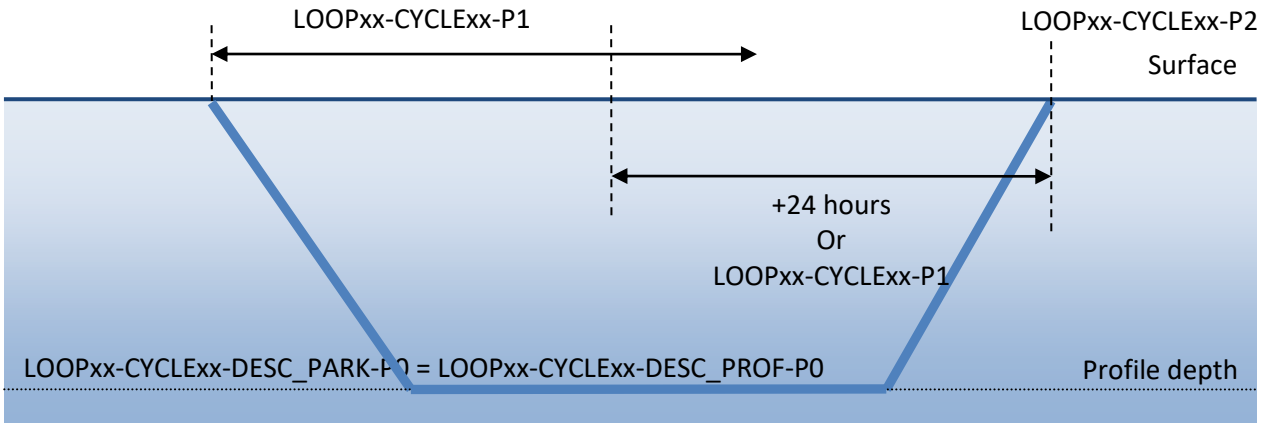

5. Surface management

5.1.Buoyancy reduction

The buoyancy reduction consists in decreasing the buoyancy of the float following a session at the surface, until sinking is detected.


Two modes are proposed:

- "SECURE" mode
- "FAST" mode

Secure mode

The operation is as follows:


- Buoyancy reduction in two stages:
  - "Lump sum" phase corresponding to the transfer of the ¾ of the previous volume expected to sink (permanent SV opening)
  - "Complementary" phase respecting a waiting delay between each new activation to reach:
    - Threshold 1 by a standard opening duration of SV
    - Threshold 2 by a modulated opening duration of SV
- During this phase, only fast pressure request permits to check the thresholds.

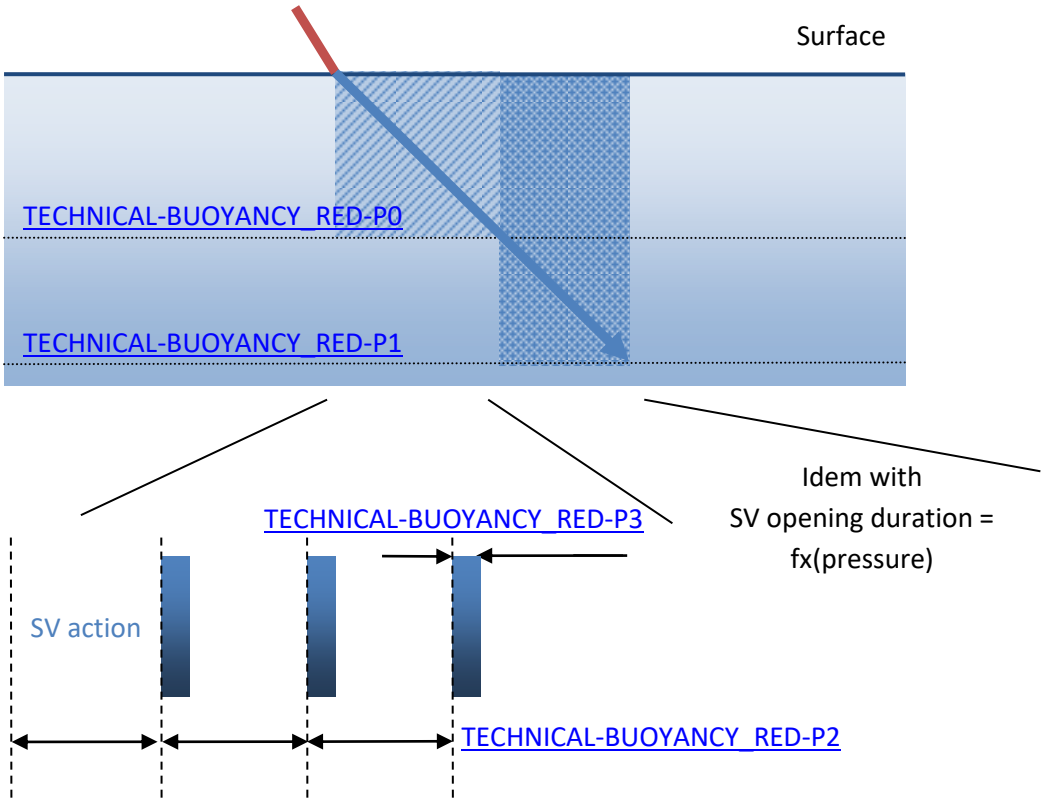

Fast mode

The operation is as follows:

- Buoyancy reduction in two stages:
  - "Quick" phase up to threshold 1 (permanent SV opening)
  - "Standard" phase up to threshold 2 (modulated SV opening)
- During both phases, pressure monitoring is active (active CTD mode). If the threshold is exceeded, the SV is closed immediately.
- The modulation of SV opening in the "standard" phase consists in performing SV activations (variable duration) spaced from one another (the shorter and more spaced SV actions are, the more precise the detection of sinking will be).

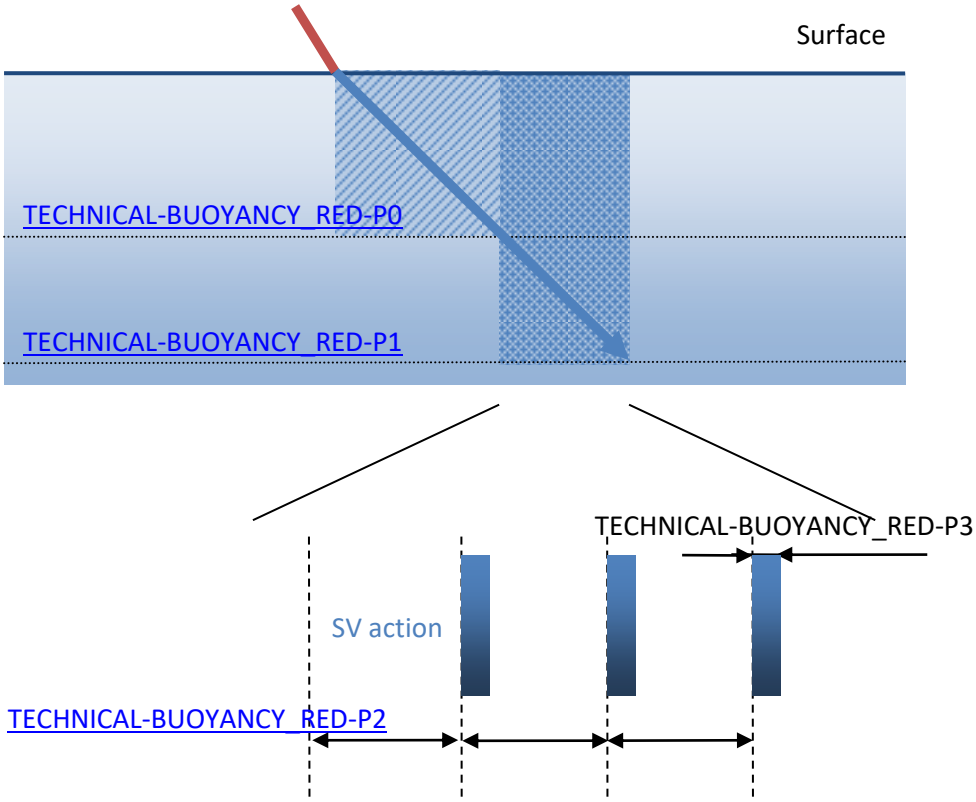


Before initiating the buoyancy reduction, the system performs the external pressure offset. This stage may be conditioned by the success of at least one of the surface actions.

5.2.Awaiting the end of ascent

Awaiting the end of ascent consists in allowing the ascending float to continue its course for few minutes following the detection of the approaching surface.

During this waiting period:

- No hydraulic action takes place
- Sensors are still in acquisition mode

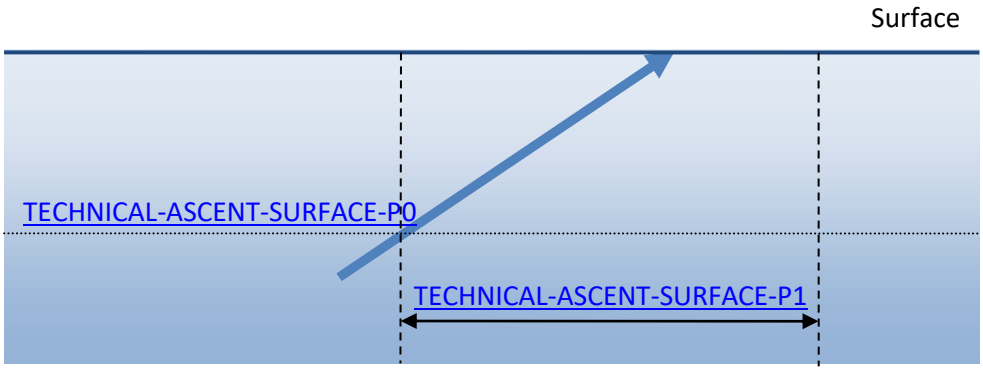


5.3.Emergence

The emergence consists in providing sufficient buoyancy to the float to perform a session at the surface.


The operation is as follows:

- A fixed pump action takes place during the time spent at the surface
- A second action takes place if a failure occurs on acquisition of GNSS valid fix

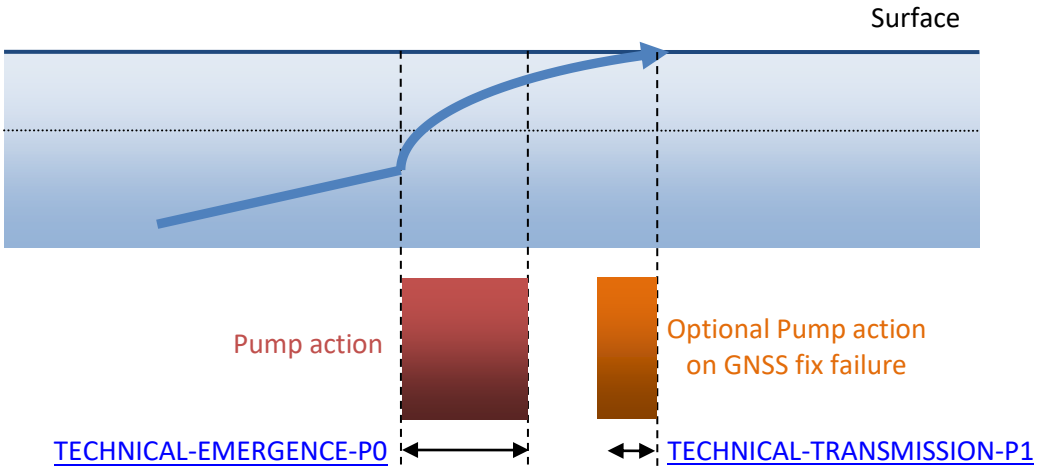


5.4.Transmission

The transmission phase consists of acquiring a geographical position and then transmitting all the data from the cycle by satellite, along with any previous cycles that have not been transmitted.

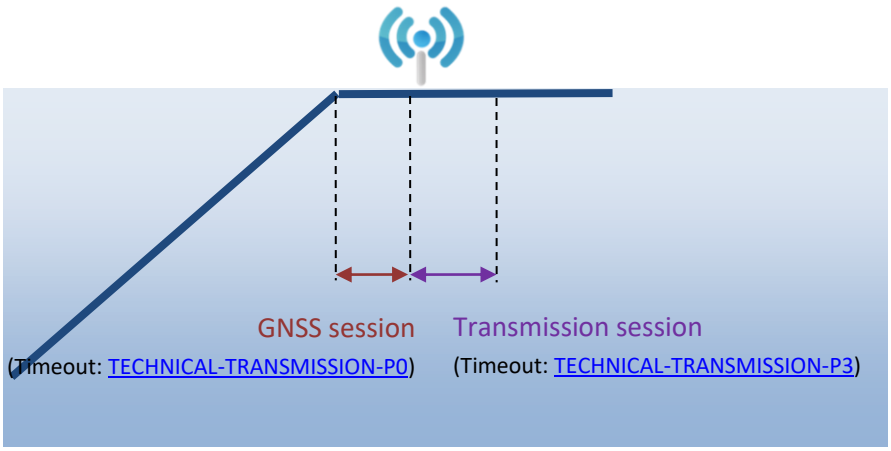

--- Figure 1. Typical transmission session ---

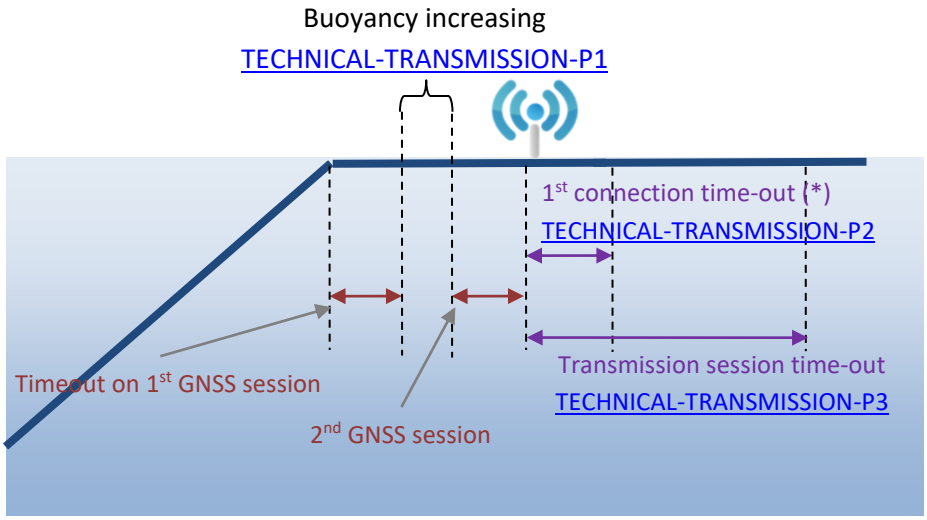

--- Figure 2. Transmission session with GNSS failure ---

(*) If no transmission is successful during the "1st connection" period, the transmission is interrupted. In the opposite case, the timeout is redefined as the time-out of the transmission session.


6. Navigation

6.1.Descent

The descent consists in reaching a set depth by respecting the expected mean speed while controlling the navigation speed of the float.

The operation is as follows:

- Rate of descent monitoring at fixed time intervals
- SV actions modulated over time
- End of descent when approaching the set point

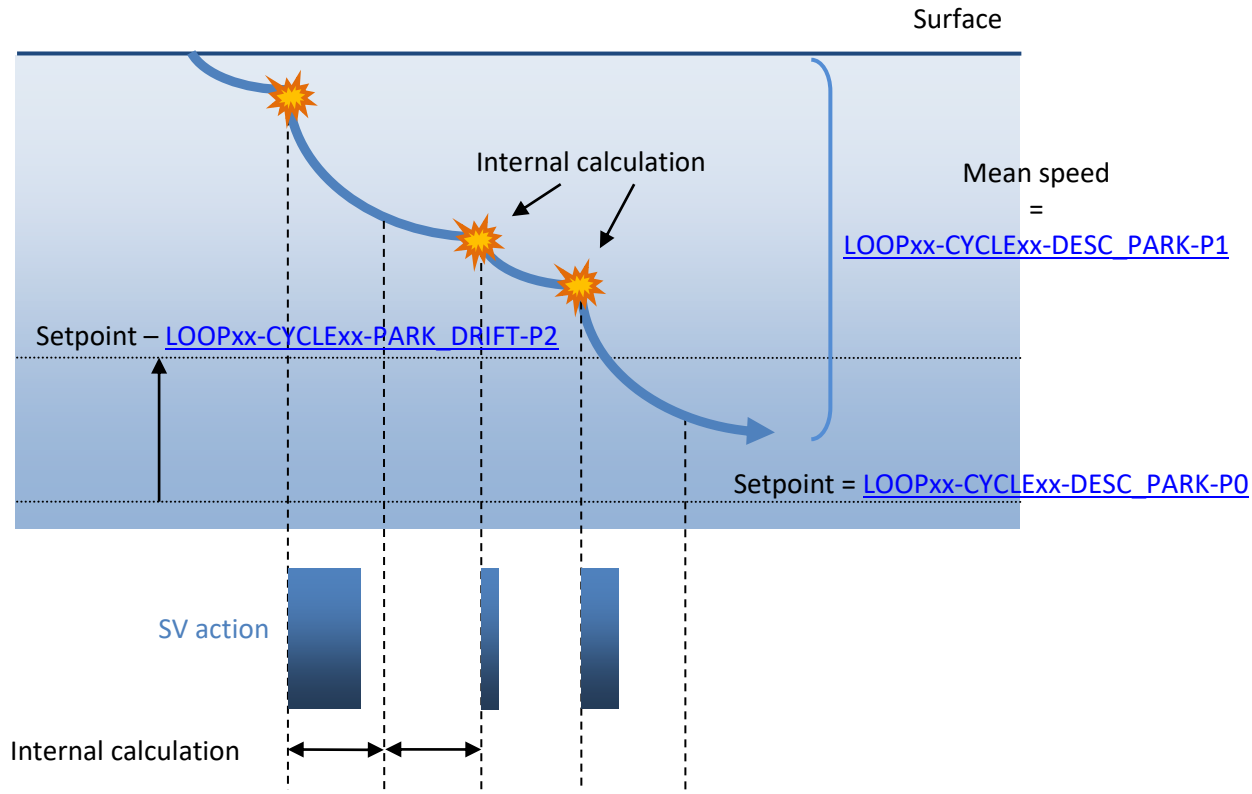

Same strategy applied for the “descent to profile” phase by using the parameters LOOPxx-CYCLExx-DESC_PROF-P0 and LOOPxx-CYCLExx-DESC_PROF-P1.


6.2.Repositioning during drift


Repositioning during drift consists in maintaining the float around a set depth.

The operation is as follows:

- Pressure monitoring at fixed time intervals
- Repositioning if the current pressure deviates from the set point by more than the repositioning tolerance

- Repositioning completed when the current position is deviated from the set point by less than the positioning tolerance

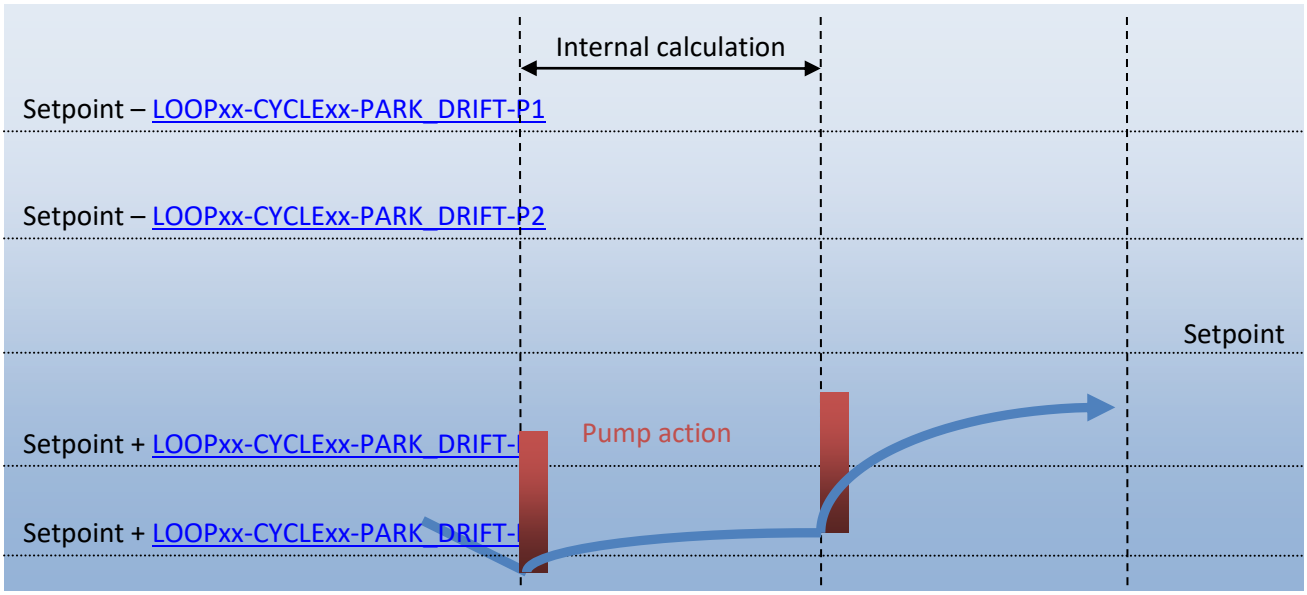

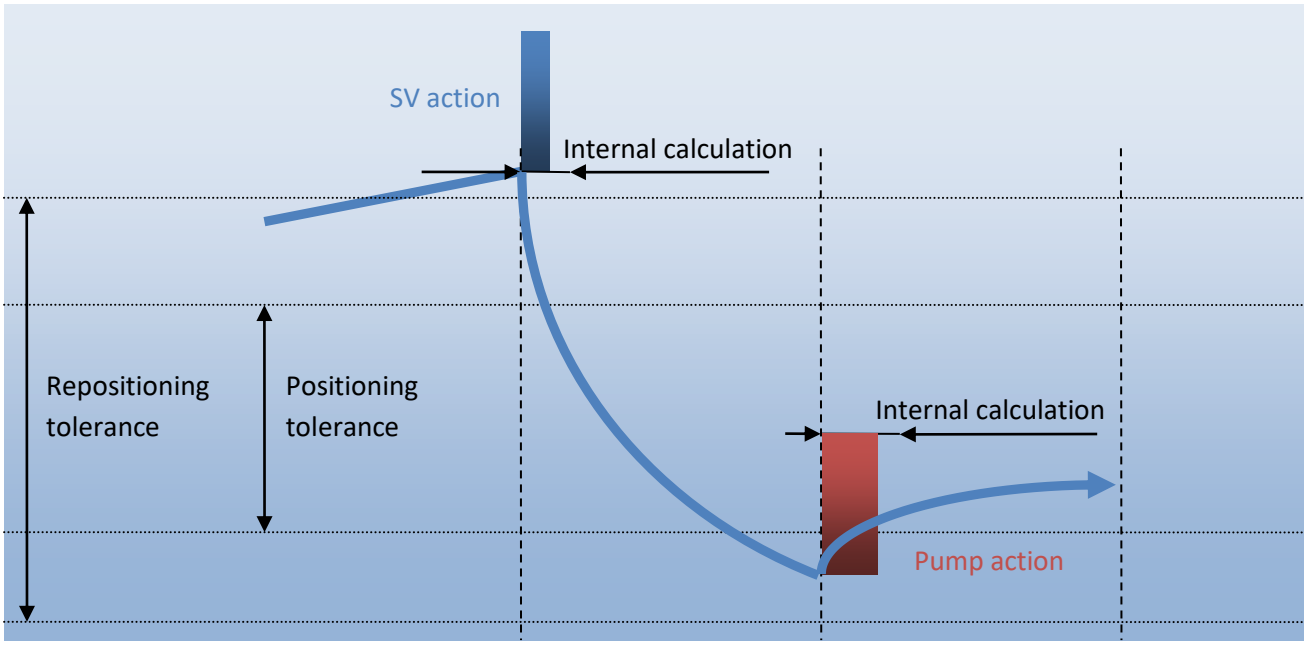


6.3.Ascent

The ascent consists in reaching a set depth while controlling the navigation speed of the float.

The operation is as follows:

- Rate of ascent monitoring at fixed time intervals
- Fixed pump actions
- End of ascent when approaching the set point

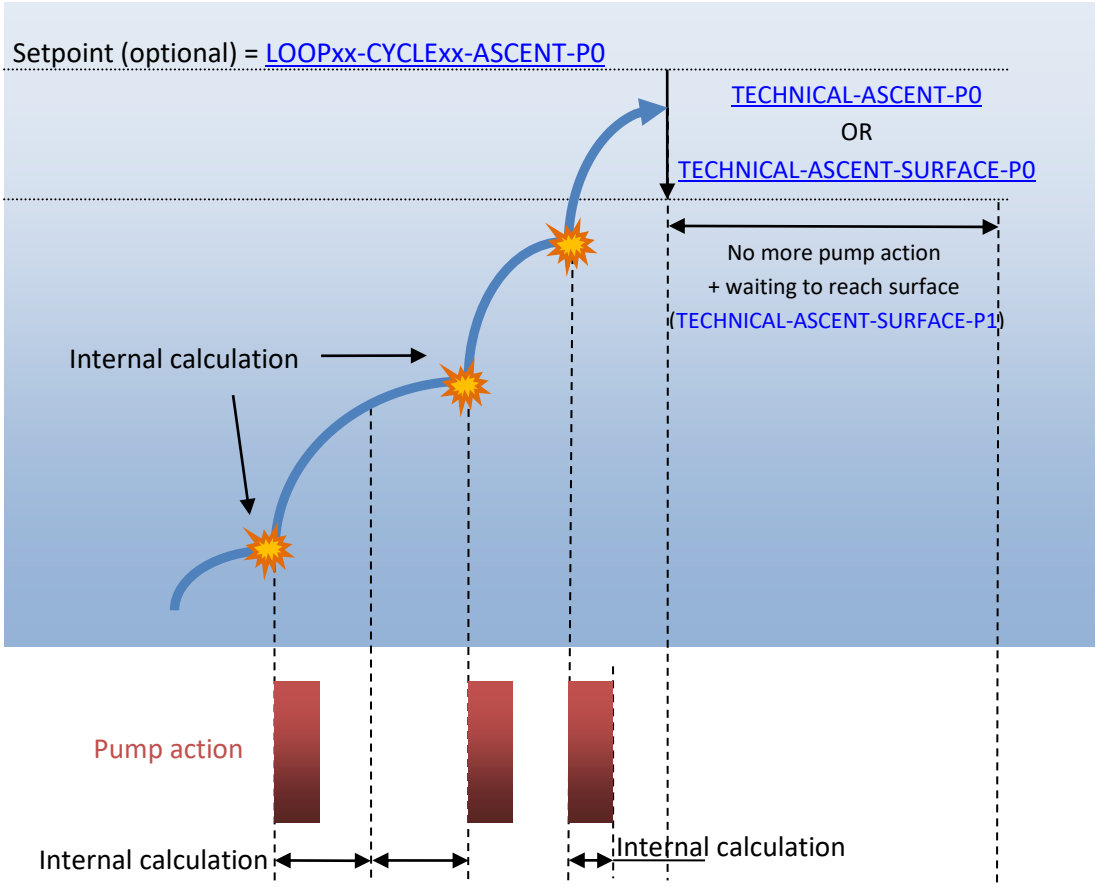


7. Management of degraded modes

7.1.Grounding

The grounding during the descent consists in detecting the absence of movement of the float despite a large displacement of oil to descend.

The operation is as follows:


- A safety task monitors the travel speed of the float and detects stabilisations less than TECHNICAL-SECURITY-GROUNDING-P2
- When stabilisation is detected, the cumulative volume of oil is compared with a threshold TECHNICAL-SECURITY-GROUNDING- P1
- Upon detection of grounding:
    - **Scenario "1": Escape mode - Set point correction**
      The pre-programmed drift depth is disregarded. The pressure at the time of grounding minus an offset (TECHNICAL-SECURITY-GROUNDING-P6) is taken as the new value for the drift pressure. The float adjusts its buoyancy to reach this new drift depth. The drift depth stays unchanged for the subsequent cycles. If the grounding pressure is lower than the programmed threshold (TECHNICAL-SECURITY-GROUNDING-P5), the float remains on the seabed until the ascent time.
    - **Scenario "2": Static mode – Stay on seabed**
      The float remains where it is until the ascent time. The pressure at the time of grounding becomes the ascent profile start pressure for the current cycle. The ascent profile start pressure stays unchanged for the subsequent cycles.
    - **Scenario "3": Early surface mode – Ascent immediately**
      The float starts to ascent immediately to reach the surface.

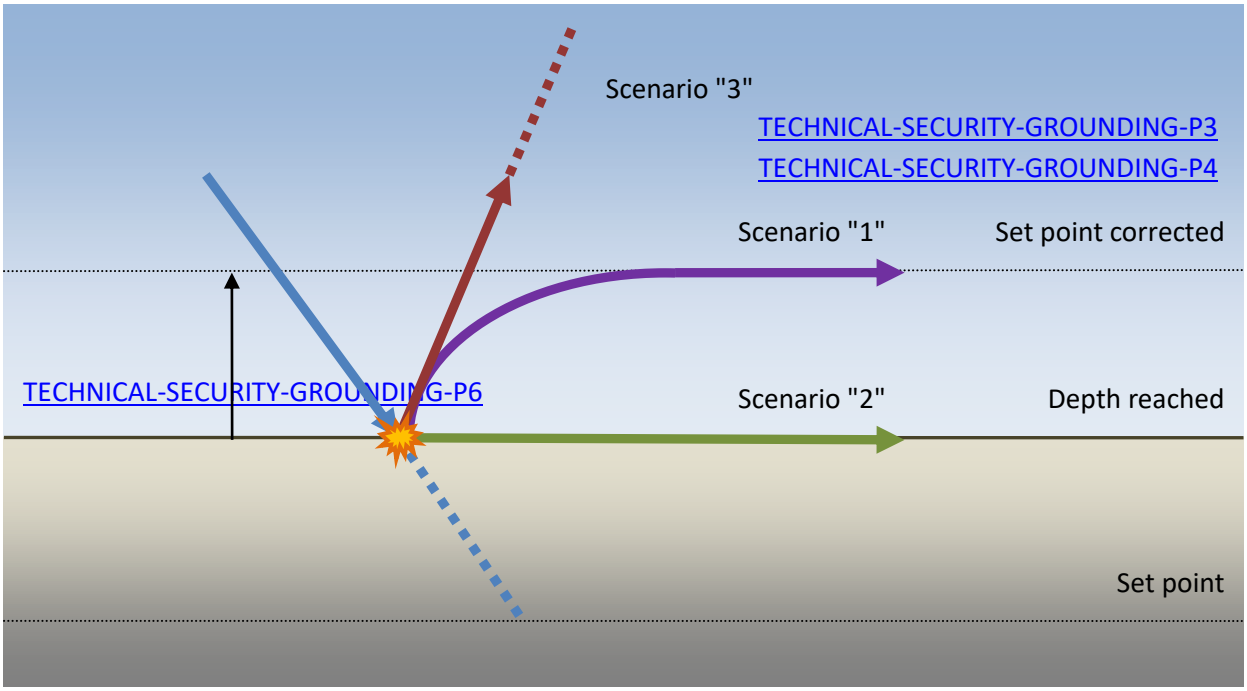

The strategy to adopt in case of grounding is configured for descent to parking depth and parking drift stages by TECHNICAL-SECURITY-GROUNDING-P3.
The strategy to adopt in case of grounding is configured for descent to profile depth and profile depth drift stages by TECHNICAL-SECURITY-GROUNDING-P4.


7.1.1. Scenario 1: Escape mode – Setpoint correction

In this configuration, the profiler corrects its parking depth to continue to dive during parking drift stage.

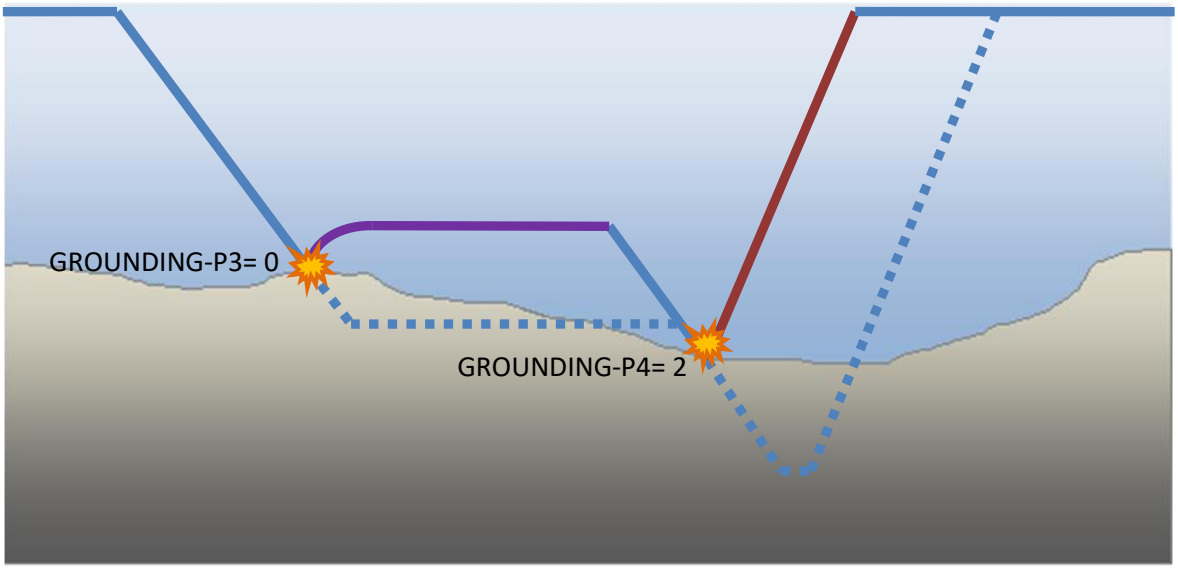

7.1.2. Scenario 3: Early surface mode – Ascent immediately

In this configuration, the profiler stops the descent stage and start the ascent stage when encountering the ground.

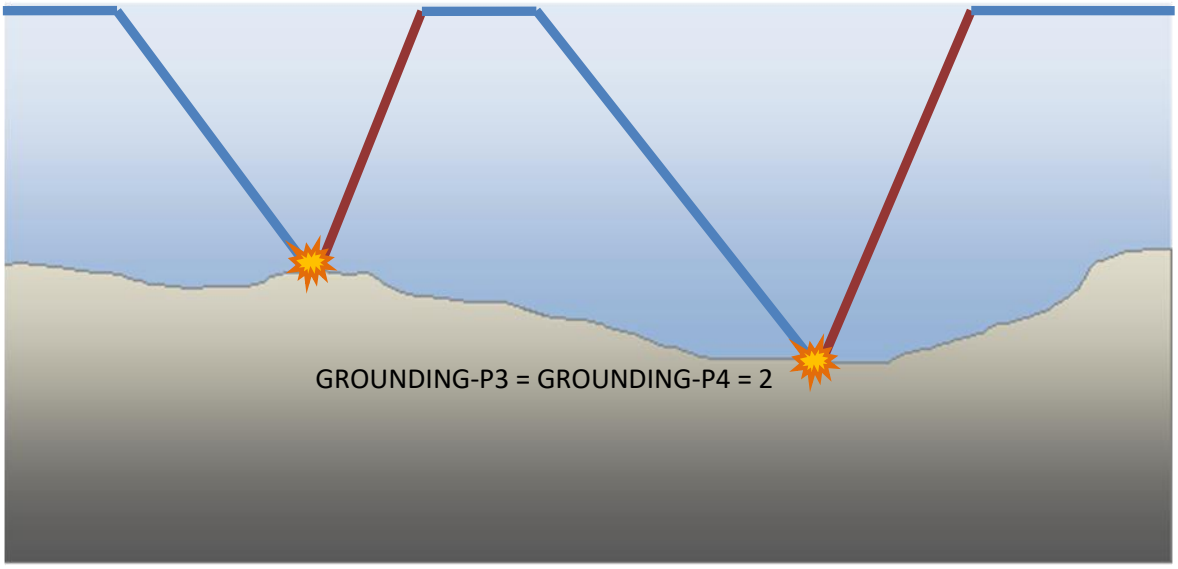


7.2.Hanging (only if “Ice detection” enabled)

The hanging during the ascent consists in detecting the absence of movement of the float despite a large displacement of oil to ascend.

The operation is as follows:

- A safety task monitors the travel speed of the float and detects stabilisations less than ICE-HANGING-P2
- When stabilisation is detected, the cumulative volume of oil is compared with a threshold ICE-HANGING-P1
- Upon detection of hanging during ascent, the navigation continues without performing any emergence.

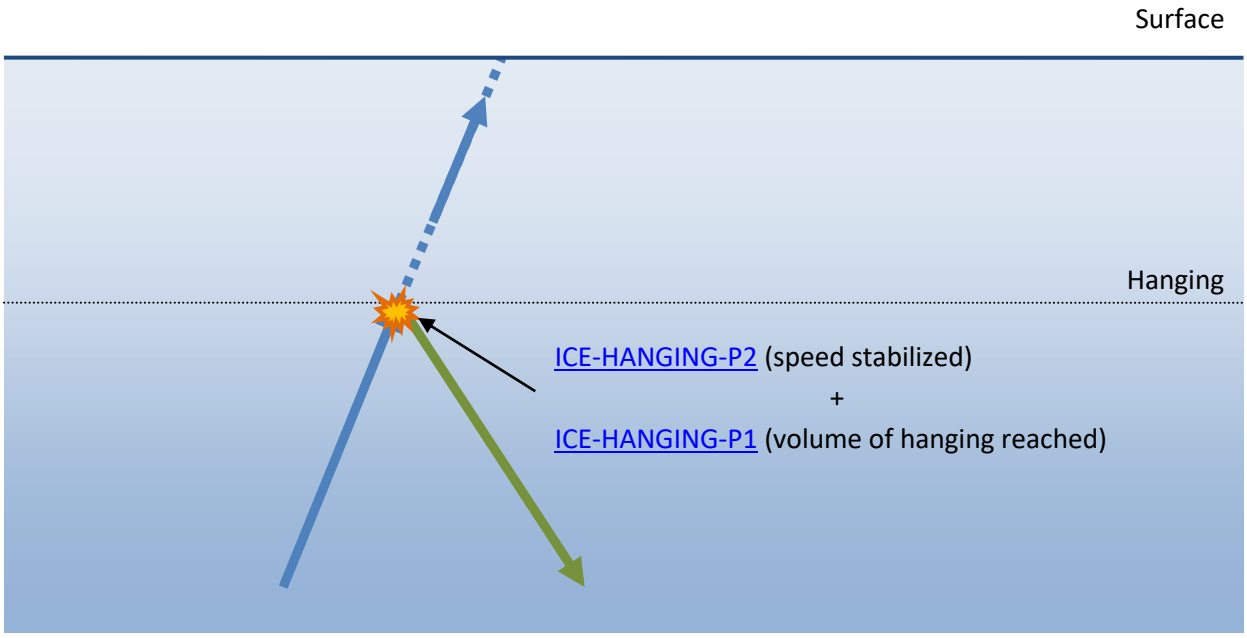


Note: When the hanging is not activated, the float will abort the ascent after few hours (ex: 48 hours for a theorical ascent delay for 9cm/s with a coefficient of security of 8).

7.3.Braking during descent

Braking during descent consists in performing pump actions to slow down the sinking of the float if the speed limit is exceeded.

The operation is as follows:

- A safety task monitors the travel speed of the float and detects high speeds
- In case of abnormal speed, a fixed pump action takes place

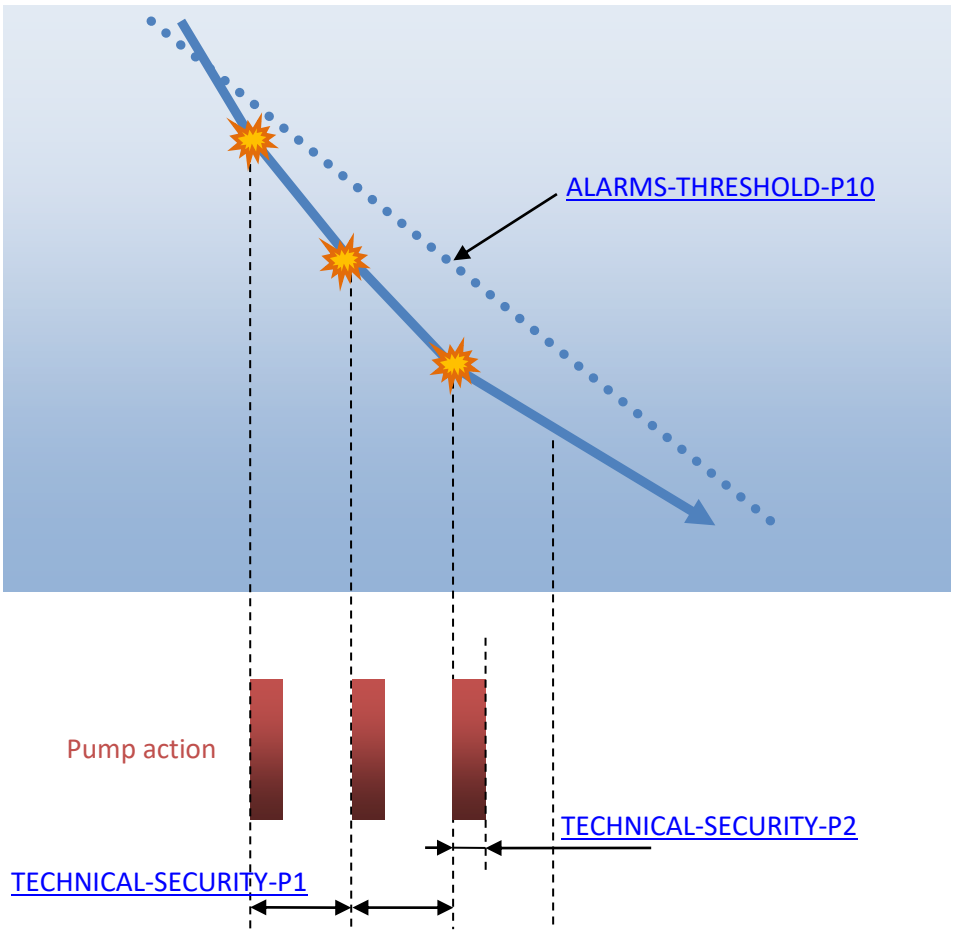


7.4.Braking on exceeding max. pressure

This braking on descent consists of a rapid pumping action to stop the float exceeding its maximum pressure before starting an emergency ascent.

The operation is as follows:

- A safety task monitors the travel depth of the float and checks the pressure.
- In case of the maximum pressure reached, a fixed pump action takes place and the float switches into end of life mode.

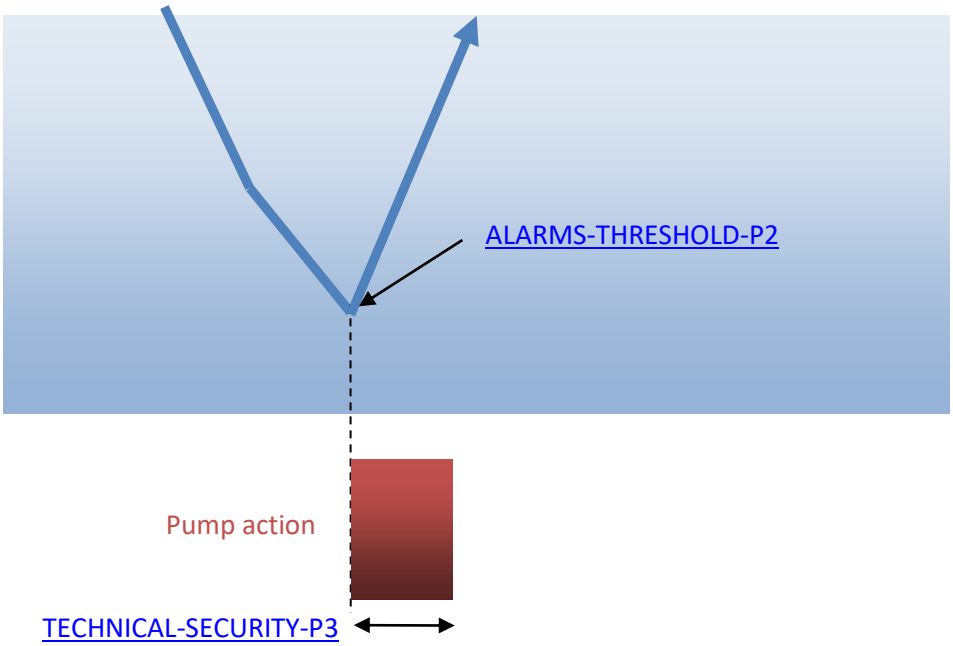

8. End of life

End of life can occur due to:

- At the end of the programmed maximum number of cycles
- In case of serious technical issue (user selectable event)
- Forced by remote control

The events that will trigger this procedure can be chosen from a list.

The (optional) alarms that can trigger this procedure are as follows:

- Low battery voltage
- High external pressure
- High internal pressure
- High descent speed
- External pressure no longer responding
- Detection of water inside the float


The (not modifiable) alarms that can trigger this procedure are as follows:

- Invalid CTD setting
- RTC error
- External pressure sensor fault (communication loss)

8.1."Emergency" ascent

The "Emergency" ascent is the first step of the “end of life” mode and consists in bringing the float back to the surface before switching to the “end of life” mode.


This ascent is called "emergency" because it implies that a critical event occurred while the float was in navigation mode. The float is then placed in maximum buoyancy state to reach the surface as quickly as possible.

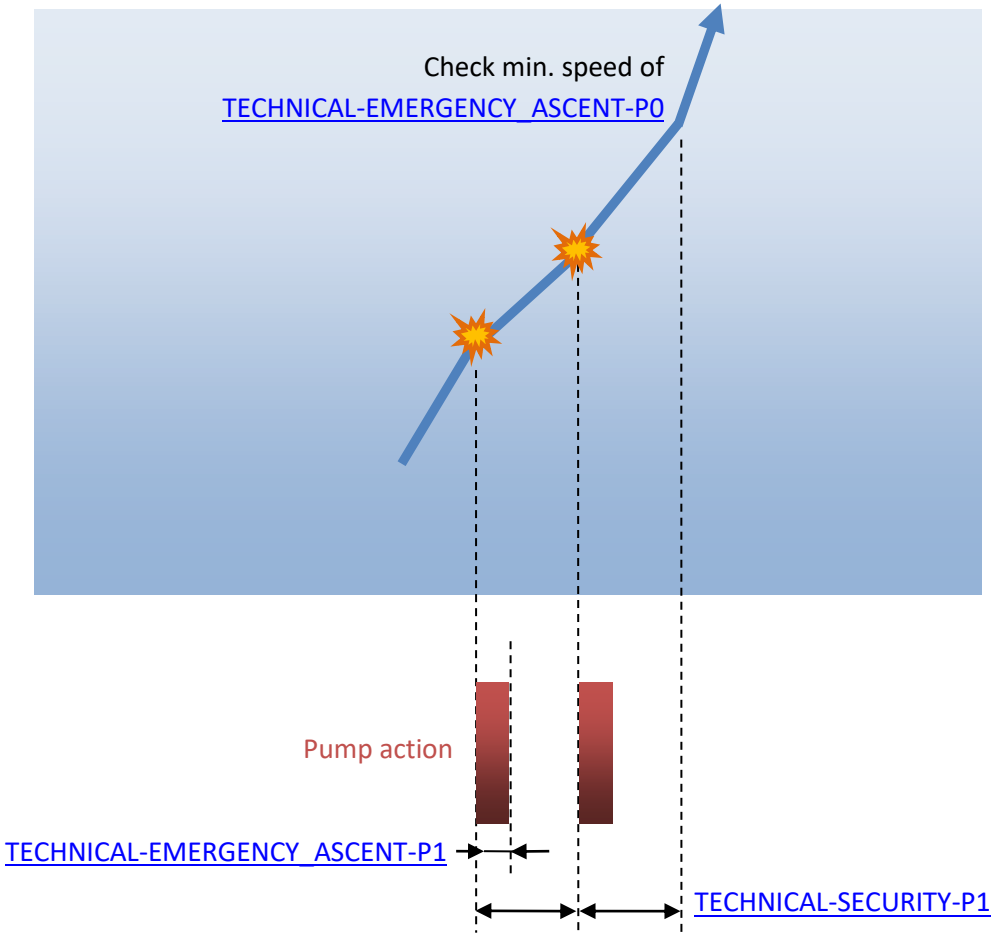

8.2.“End of life” mode

“End of Life” mode consists of acquiring the GPS position (optional) and transmitting it at regular intervals. In this phase, the float remains on the surface and reports its status with its last geographical position. This mode is also designed to facilitate recovery of the float in the

ocean.

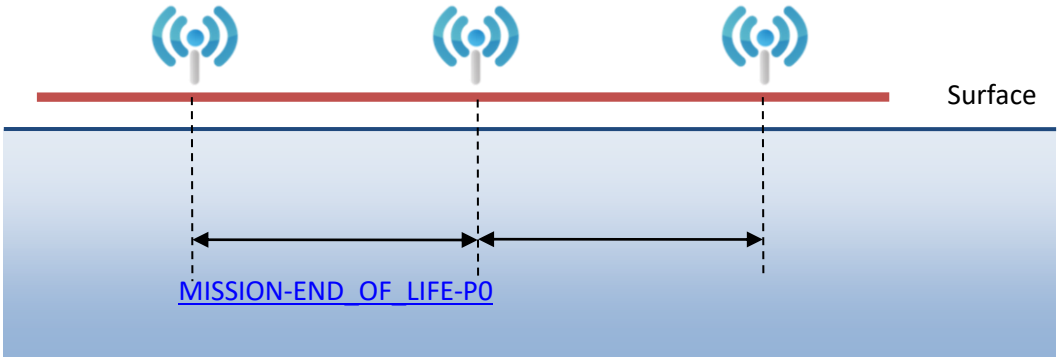


9. Standard sensors

Measurements of standard parameters can be done during descent, drift, ascent and surface phases. Each sensor is managed independently:

- Status (enabled/disabled)
- Zone separation
- Acquisition rate (per zone and per phase)
- Control type (per zone)
- Processing type (per zone)
- Section depth (per zone)
- Specific parameters

9.1. Concept of zone

The water column is divided into 5 different depth intervals to adapt the management of sensors to the experiment. These 5 zones are independent between descent and ascent. And each depth interval (zone 1 to 5) is also managed independently.

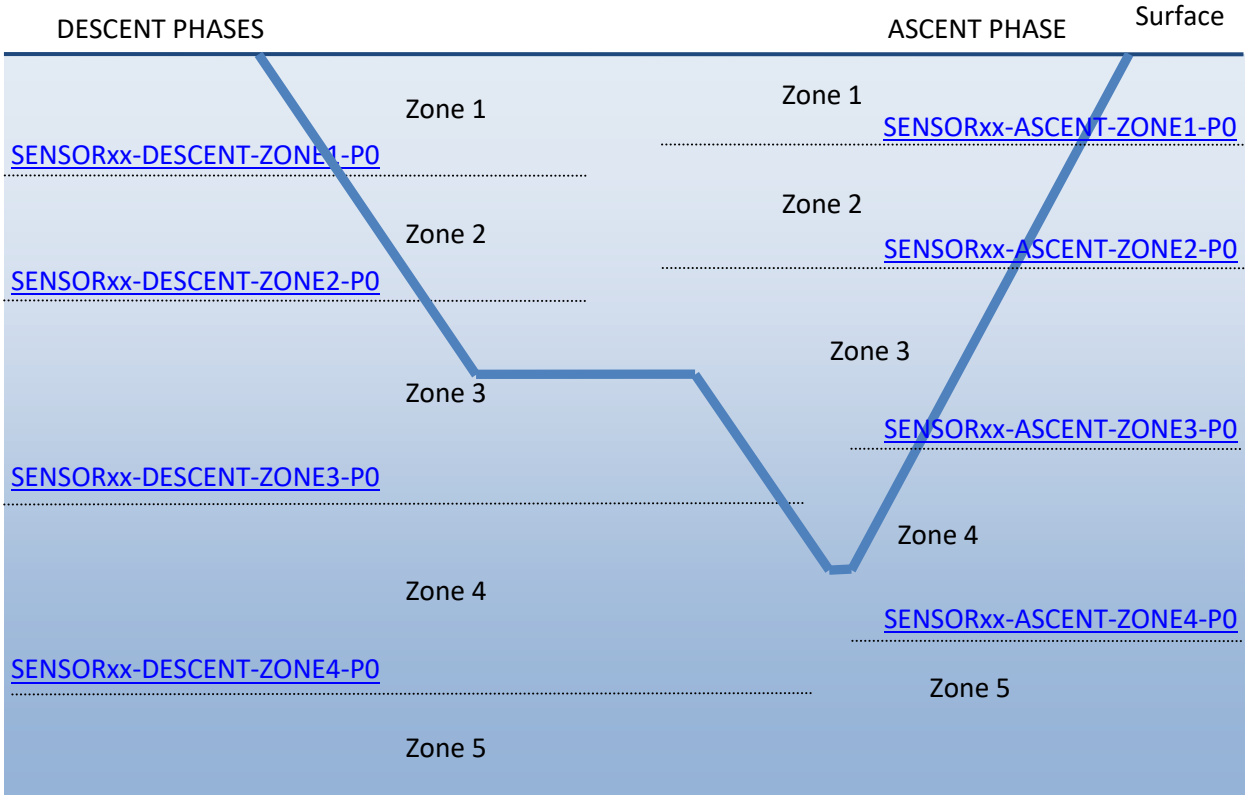

9.2.Power supply control

The type of power supply control for each sensor is managed independently according to the zone SENSORxx-DESCENT/ASCENT-ZONEx-P2 :


- None (0)
- Continuous (1)
- Pulsed (2)
- Spot sampling (3)

9.2.1. None (0)

In "none" mode, there is no power supply control. The sensor is switched off in the zone.


9.2.2 Continuous (1)

In "continuous" mode, the sensor is powered continuously.

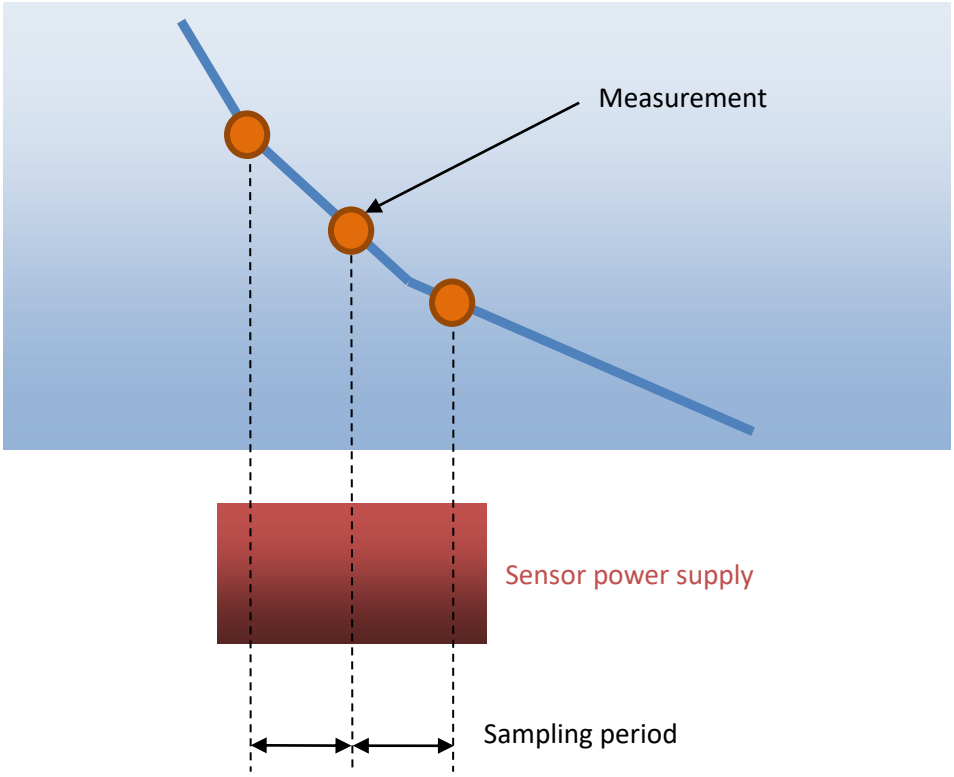


9.2.3 Pulsed (2)

In "pulsed" mode, the sensor is powered at regular intervals according to the acquisition rate. The sensor is switched off after the measurement.

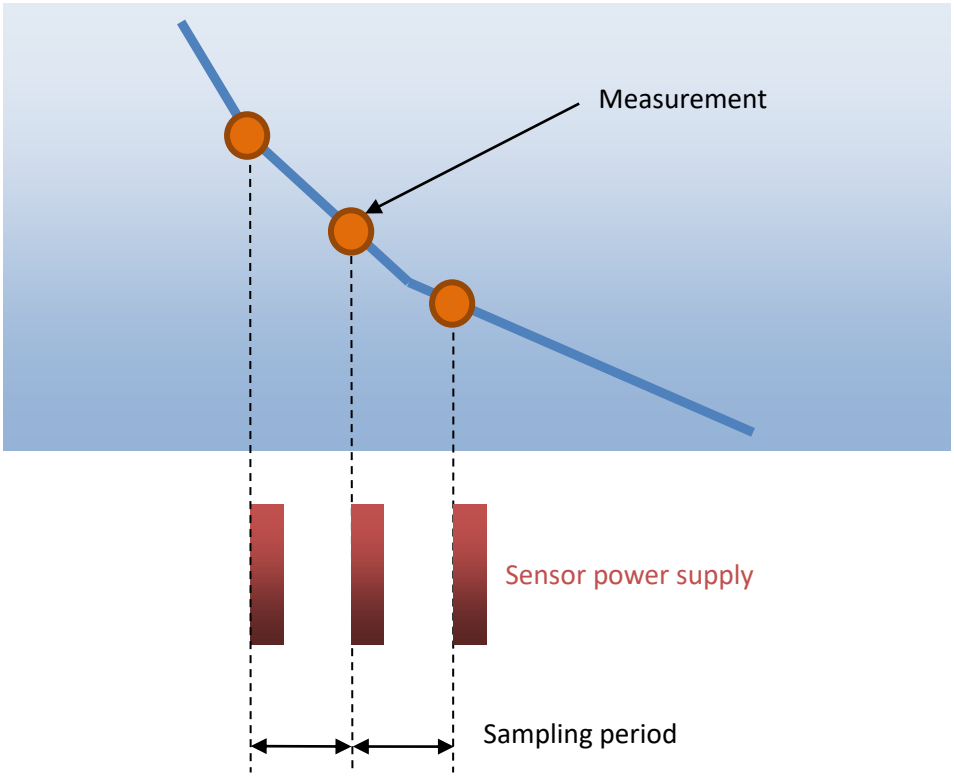

9.2.4 Spot sampling (3)

In “spot sampling” mode, the sensor is powered just before the middle of the expected slice thickness. The sensor acquires few samples (SENSORxx-DESCENT/ASCENT-ZONEx-P5) and then is powered off.

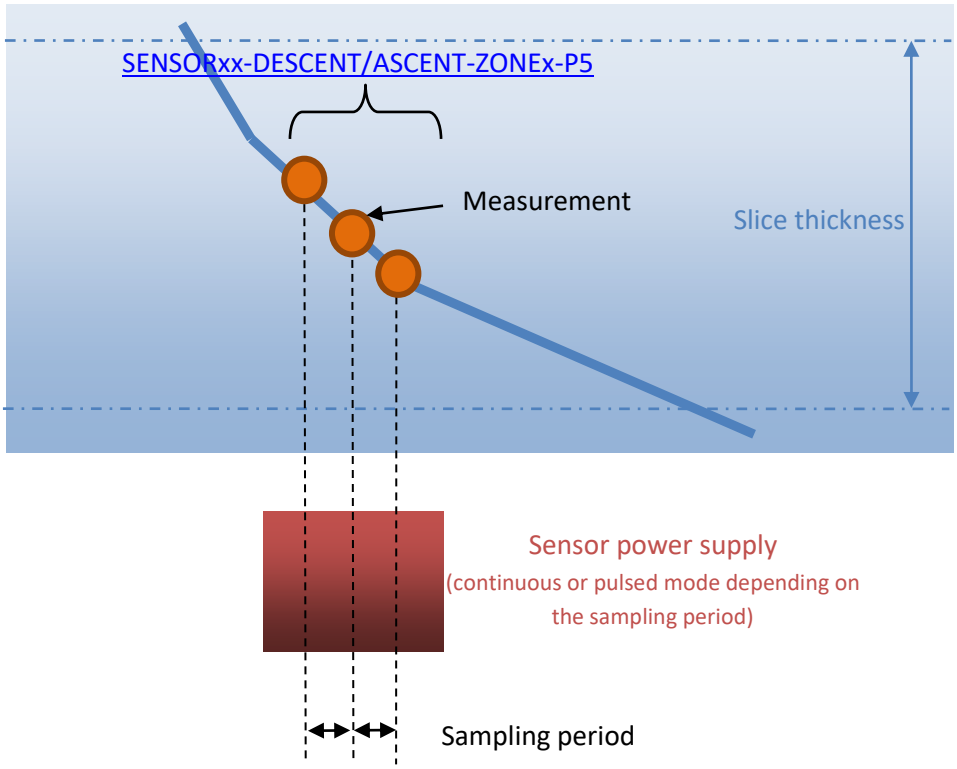


9.3 Acquisition rate

The acquisition rates of each sensor are managed independently according to the navigation phase:

- Descent to "parking" drift depth
- Drift at "parking" depth
- Descent to "profil" depth
- Drift at "profil" depth
- Ascent to surface
- Surface for “in air measurement”

It is possible to disable the acquisition in the phase by setting the rate at "0" seconds.

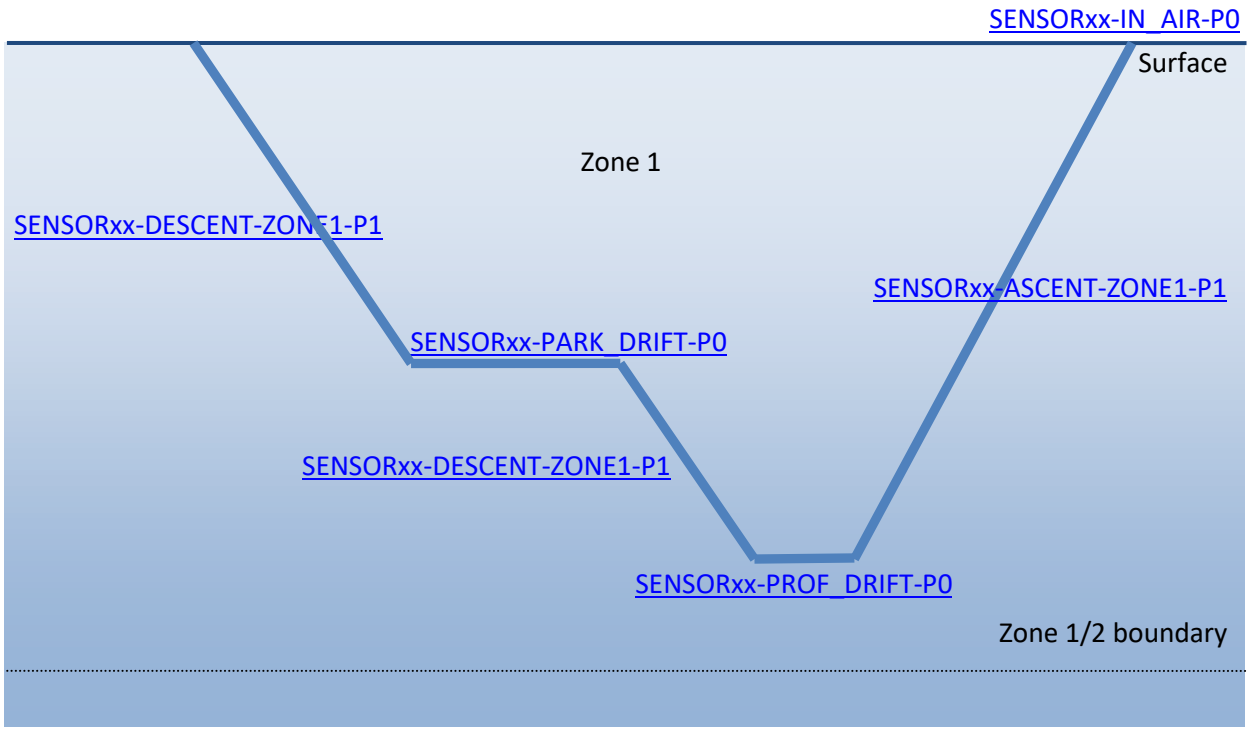

Note: Parameters not applicable if the "Spot sampling" mode is selected.

9.4 Data processing

The data of each sensor can be processed independently according to each zone SENSORxx-DESCENT/ASCENT-ZONEx-P3:

- Raw (0x00)
- Raw decimated (0x80)
- **Arithmetic mean decimated (0x81) → Usual configuration**

Note: Some restrictions on data processing are implemented on the float:


- During descent and ascent stages all data processing are available
- During drift stages data processing is fixed to raw processing
- During surface stage data processing is fixed to raw processing

9.4.2 Decimation of measurements

When a type of processing is configured, the various points acquired can be decimated (according to pressure) so as not to influence the processing (in case the points are badly distributed over the water column).


Decimation consists in keeping a single point per decimation depth. Decimation depth is selected automatically by the system according to the slice thickness SENSORxx-DESCENT/ASCENT-ZONEx-P4:

- Depth of 0.01 dbar for slice thickness of less than 1 dbar
- Depth of 0.1 dbar for slice thickness of between 1 (included) and 2 dbar
- Depth of 0.2 dbar for slice thickness between 2 (included) and 5 dbar
- Depth of 0.5 dbar for slice thickness of 5 dbar (included) or more

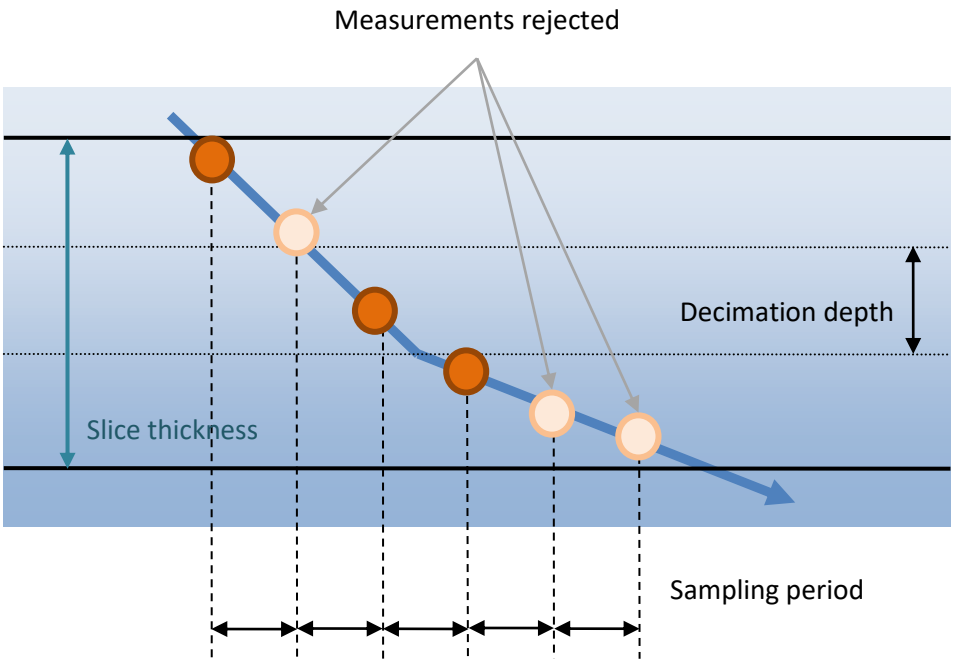


9.4.3 Raw (0x00)

In "raw" mode, the acquired data are retrieved without decimation.

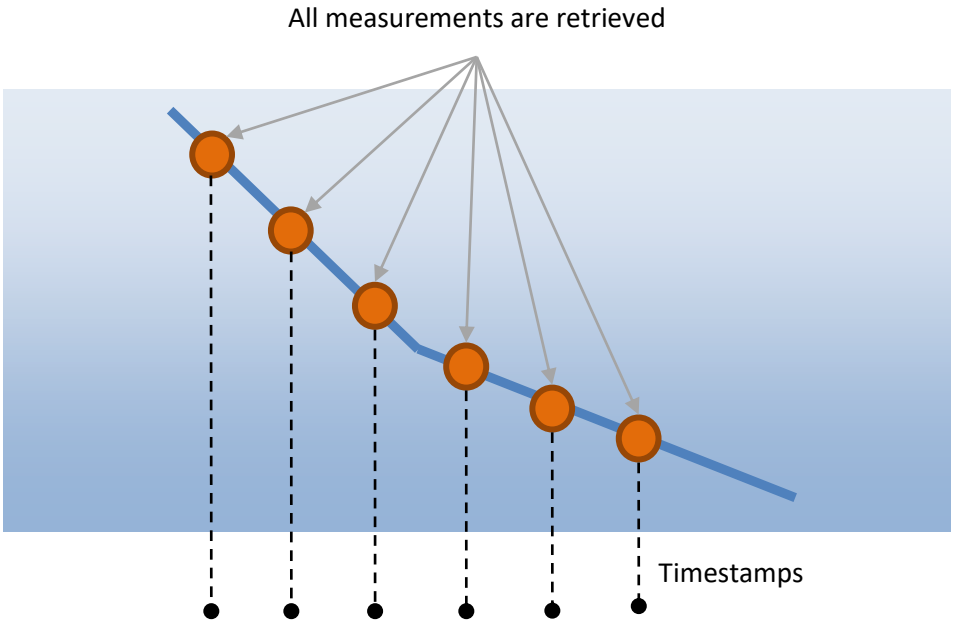


9.4.4 Raw decimated (0x80)

In “raw decimated” mode, the acquired data are decimated according to the section depth. In this case, decimation depth is equal to the slice thickness.
The lowest slice thickness is 0.01 dbar.

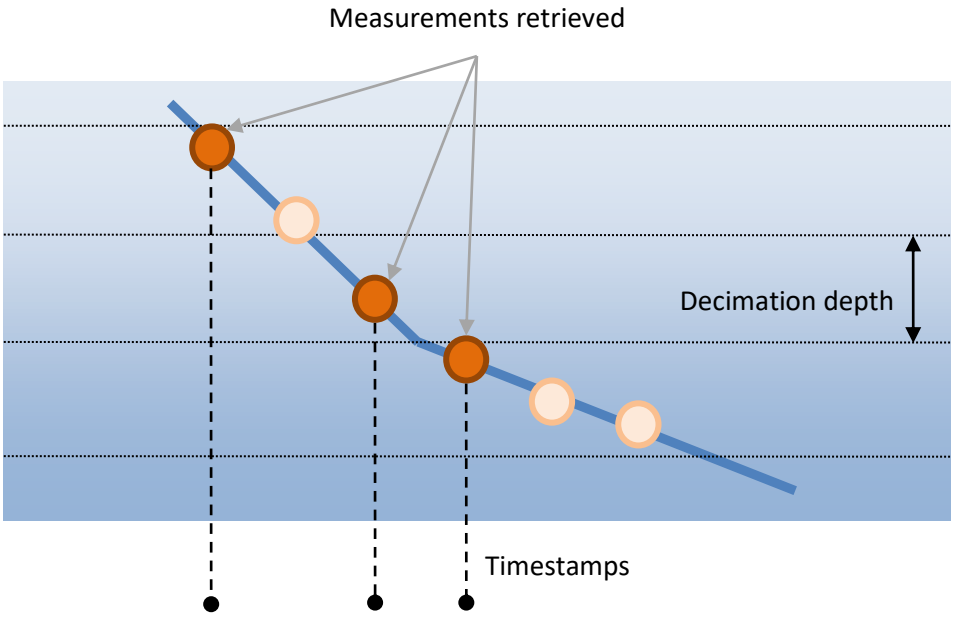

9.4.5 Arithmetic mean decimated (0x81)

In "average" mode, the decimated data for the section are averaged and the calculated measurement is time-stamped. The lowest slice thickness is 0.01 dbar.

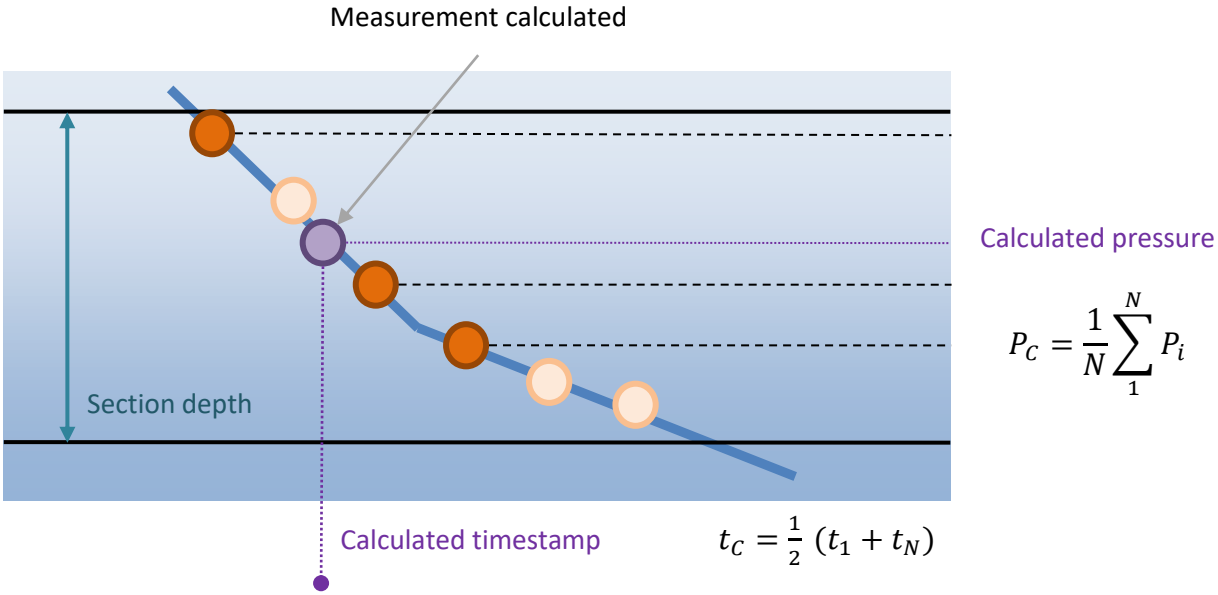


9.5 Surface acquisition

In-air measurements can be achieved during the surface stage after the float had inflated its external bladder. This feature allows post correction of sensor's data.

This function can be activated by sensor and the surface sampling period set independently by sensor while the total acquisition time is common to all sensors.
The phase is not mandatory in every cycle. It is possible to create a cycle frequency for the execution of this phase:
Cycle periodicity = 1 / LOOPxx-CYCLExx-IN_AIR-P0.

- P0 = 0 ➔ No "in air" phase
- P0 = 1 ➔ "In air" phase on each cycle
- P0 = x ➔ "In air" phase every "x" cycles


Note: During surface acquisition stage, the power supply control mode is defined by SENSORxx-IN_AIR-P1.

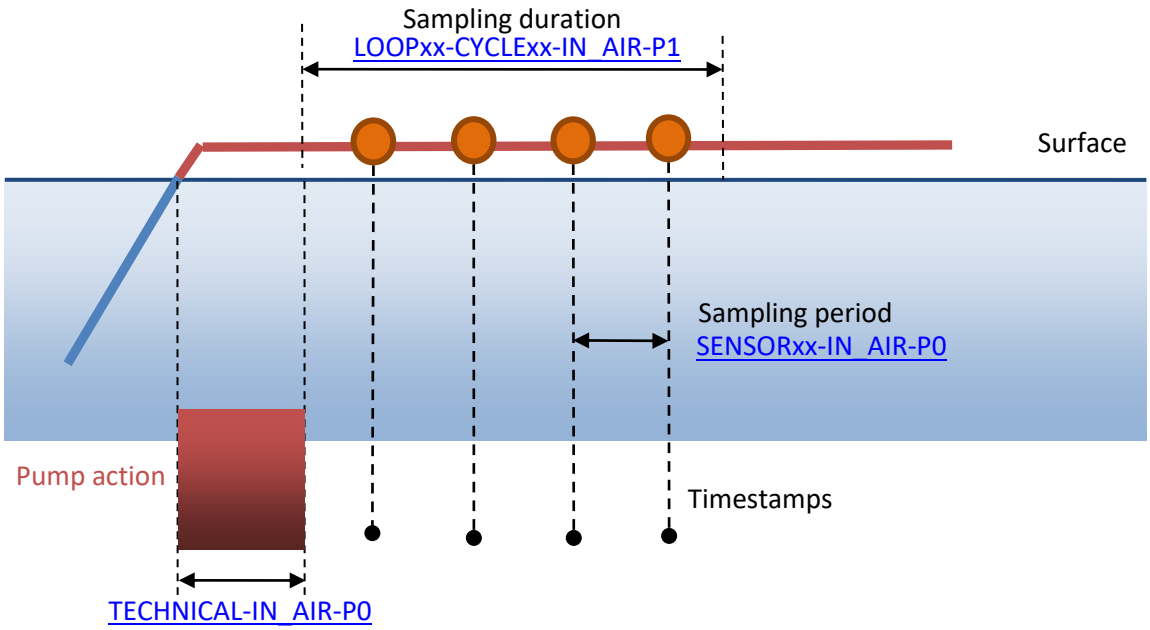

9.6 Common specific parameters

The specific parameters of each sensor are managed independently according to the set of standard parameters:

- Warm-up time required by the sensor before taking measurements
- Shut down time required for the sensor to stop
- Measurement filtering index before considering that the measurements are correct

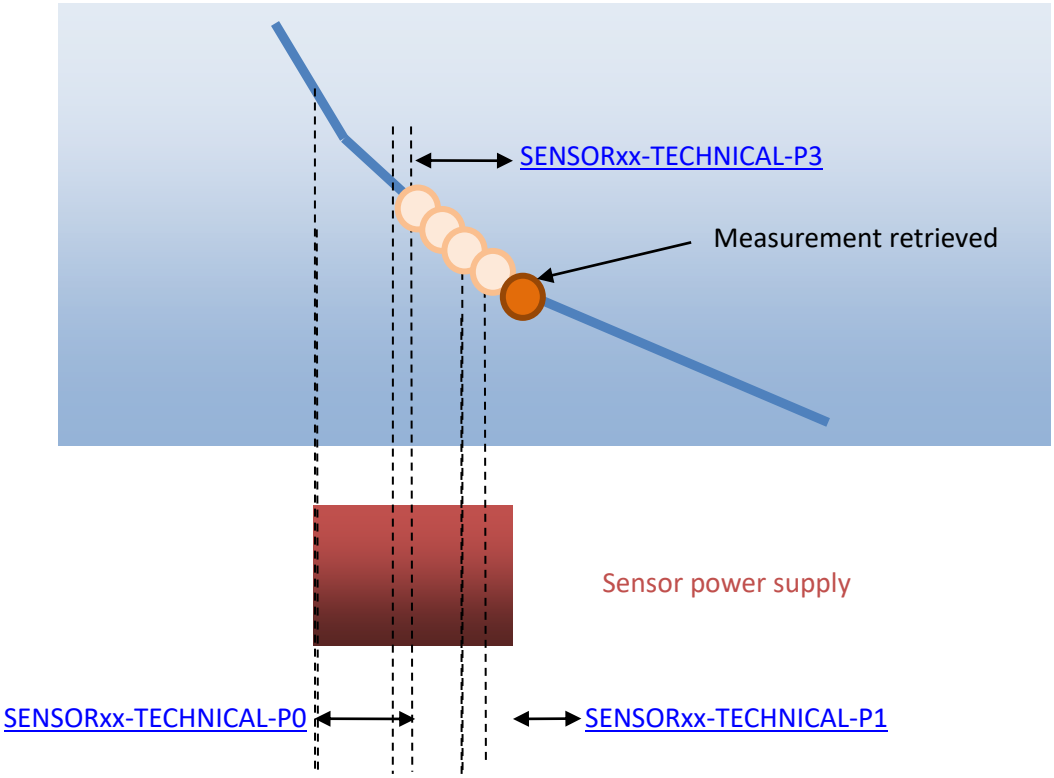

9.7 Identification of sensors

Following sensors can be embedded on float:

- SENSOR01: SBE41
- SENSOR02: Aanderaa4330
- SENSOR03: RBRargo3


10 Extended features

10.1 Ascent with "ice detection"

This type of pattern consists in dividing the ascent in different stages to allow the "measurement" to detect the presence of ice and to abort the pattern/cycle.

The operation is as follows:

- Stage 1: "Standard" ascent to the deceleration depth
- Stage 2: "Slow" ascent to ice detection test depth
- Stage 3: Waiting for ice detection
- Stage 4: Two possibilities
    - Scenario A: abort by the "ice detection" and switch to the next cycle
    - Scenario B: the ascent resumes

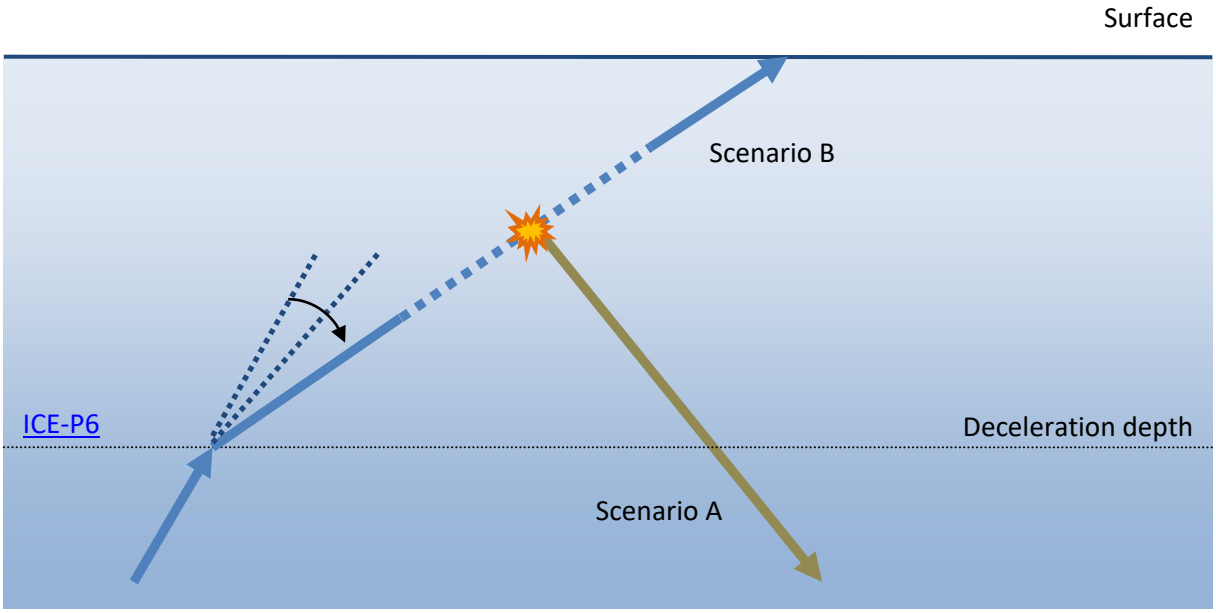

nke Instrumentation
6, rue Gutenberg
ZI de Kerandré
56700 Hennebont
FRANCE
Phone: +33 (0)2 97 36 10 12

www.nke-instrumentation.com

