

Troubleshooting Guide

Problem	Cause	Remedy
System or Supervisor LED is not lit	No power to the Gateway	Confirm the outlet has power. Confirm all power supply and outlet connects are fully plugged in.
Connection Status LED is not lit*	No Cellular Connection	Reset Gateway via Reset Switch. Reset Gateway by powering down (instructions for this process are on the Gateway's faceplate)
Battery Enabled LED is not lit	Battery back-up switch is in the "OFF" position	Move the switch to the "ON" position
Battery Charging LED is not lit	See FAQs	See FAQs

* During the initial installation of the Gateway it can take up to 10 minutes to make a cellular connection in some locations. If, after 10 minutes the Connection Status LED does not light, follow the recommended actions.
If this does not work contact the H2O Support Team

Cell (610) 213-0158	Contact H2O Support for any Questions Mon - Fri 8:30AM - 6:00PM ET	Toll-Free (877) 532-5253
------------------------	---	-----------------------------

FAQS

Q: The Battery Charging LED is not lit, is this a problem?

A: No, the Battery Charging LED only illuminates while the battery is charging. Depending on the level of charge in the battery at the time of installation, this LED may or may not be illuminated during the installation process.

Q: How will I know the Gateway is communicating properly with the cloud and I'm ready to install Nodes?

A: The System Power, Supervisor Power, and Connected LEDs will be illuminated. If all three LEDs are not illuminated within ten (10) minutes of plugging the Gateway in, please contact the H2O Support Team.

Q: How quickly will I see information on the Dashboard?

A: Once you begin installing the Nodes. The Dashboard refreshes about every five minutes so there may be a small delay between installing a Node and data beginning to populate the Dashboard.

Q: The Gateway operates on 110v, what happens if I have a power failure?

A: The Gateway is equipped with a battery back-up system which automatically switches on whenever there is an interruption of power. Once the power is restored, the Gateway automatically switches back to 110v and the battery begins to recharge.


Q: How long will the battery charge last?

A: On average the battery will operate the Gateway for up to six hours. This is enough time for the Gateway to safely power down until power is restored.

For further resources, scan the QR code for additional installation videos and guides.




LeakAlertor® Wireless PRO
GATEWAY
INSTALLATION GUIDE

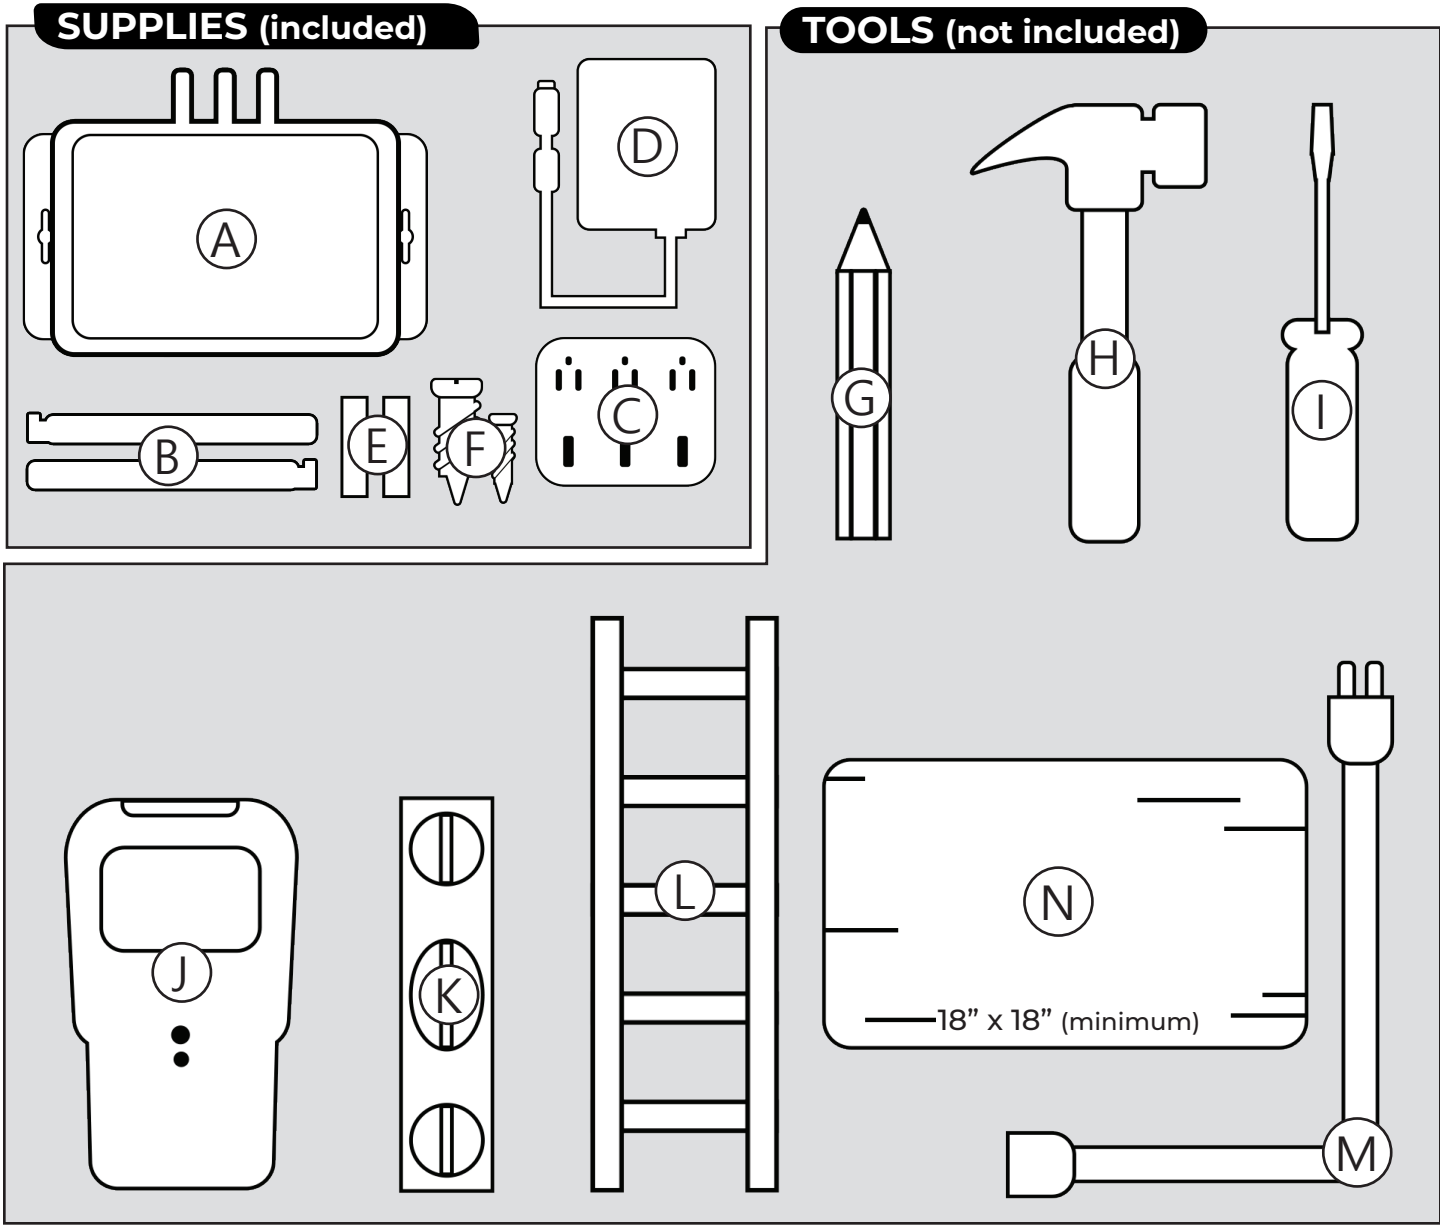

(A) Gateway	(B) LTE Antennas (2)	(C) Surge Protector
(D) Power Supply	(E) Strain Relief (4)	(F) Drywall Anchors & Screws (2)
(G) Pencil	(H) Hammer	(I) Phillips Screwdriver
(J) Studfinder	(K) Level	(L) Ladder
(M) Extension Cord	(N) Backing Board (only if installing over brick/concrete)	

Understanding the Gateway

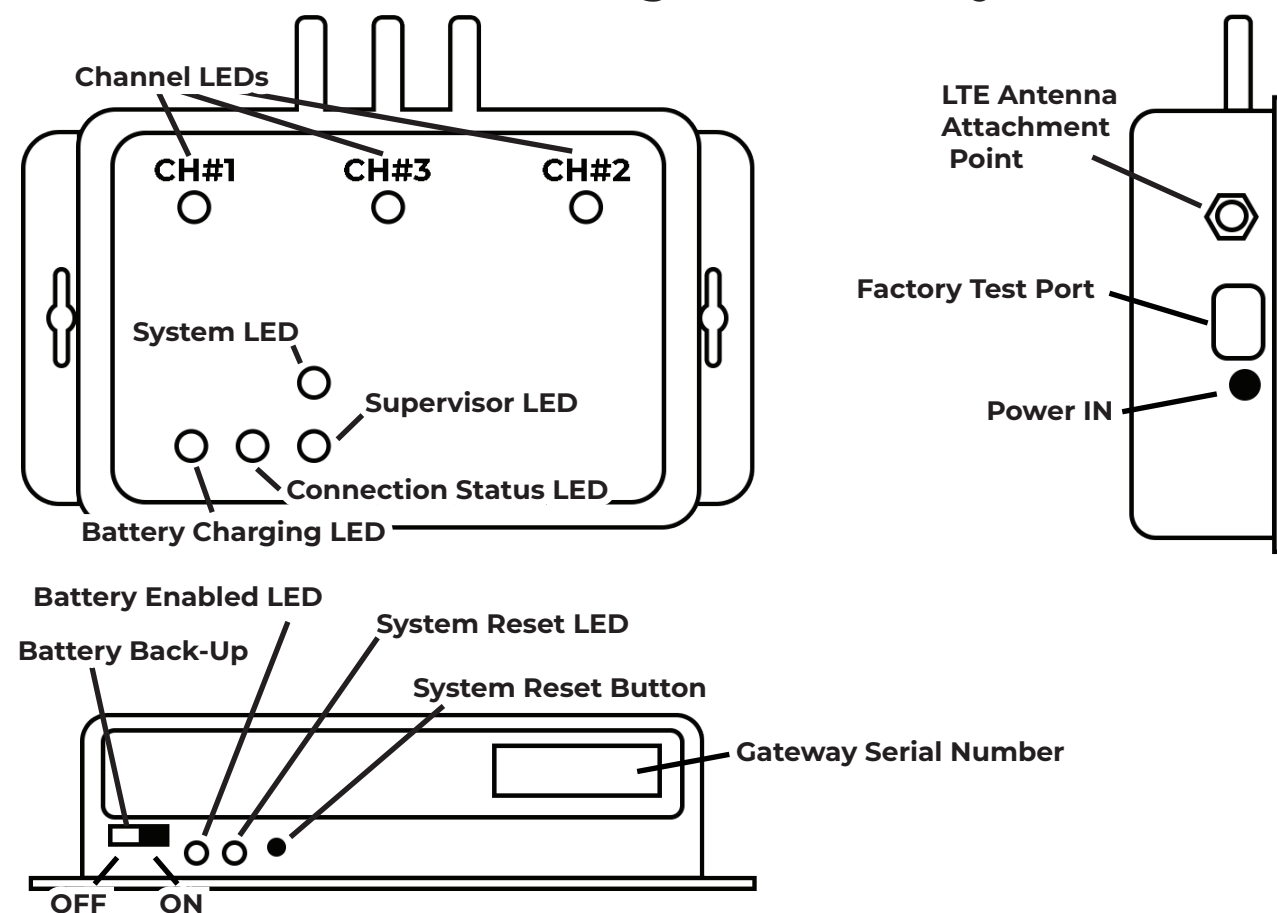

1 Determine Optimal Location and Orientation

Gateway Should Be:

- Centrally located within the building.
- Access to a 110v outlet (extension cord may be used).
- No other devices should be plugged into the outlet.

Gateway Should NOT Be Located In:

- Basements, IDF's/MDF's (Electrical/IT closets)
- Publicly accessible locations if possible
- Locations which are humid or lack climate control
- Mounted on a common wall with an elevator


Notes: THE GATEWAY IS NOT DESIGNED FOR OUTDOOR USE. DO NOT INSTALL ON A CEILING. FOR MULTIPLE GATEWAY AND/OR REPEATER INSTALLATIONS PLEASE CONTACT H2O STAFF FOR MOUNTING LOCATIONS.

2 Set the Wall Anchors

- Place the Drywall Anchors (F) between wall studs, *do NOT drive the mounting screws into a stud*.
- Allow 12-18 inches of clearance around the Gateway (A).
- Place shoulder height or higher on the wall.
- Use the Gateway body as a template in marking where to place the anchors, ensuring the Gateway is level upon installation.
- Set the Drywall Anchors (F), and thread the Mounting Screws (F) halfway in.

3 Preparing and Installing the Gateway

- Thread the LTE antennas (B) onto the Gateway (A), *finger tight only*.
- Move the Battery back-up switch to the “ON” position.
- Place the Gateway (A) on the mounting screws, tighten the screws, and turn the LTE antennas (B) to point up, as shown.

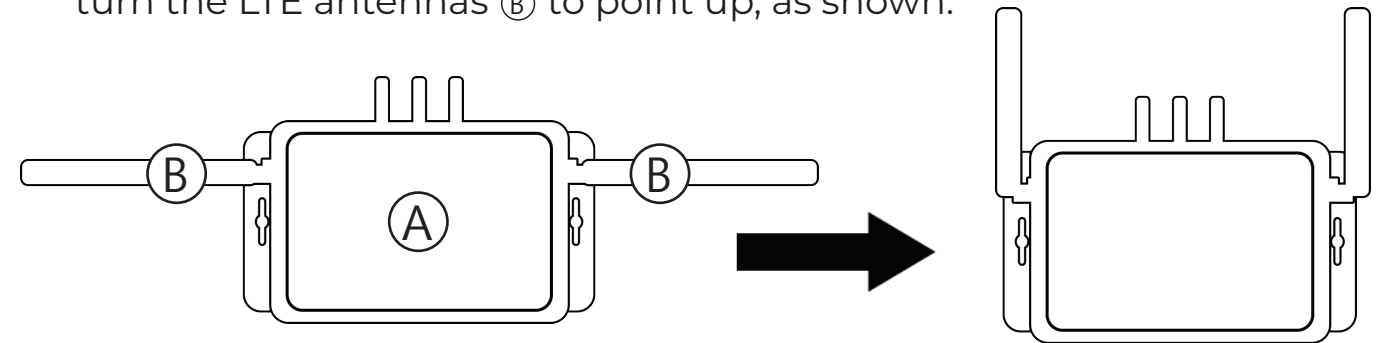

- Plug the Surge Protector (C) into the outlet, plug the Power Supply (D) into the Surge Protector (C), and then plug the Power Supply (D) into the Gateway (A), shown in Illustration A for further clarification. (If using an extension cord, plug the cord into the surge protector and the power supply into the cord)

4 Completing the Installation

- The Gateway (A) will take a few minutes to power up and connect to the cloud through its cellular connection. No action is needed by the installer at this time. Once all three confirmation LEDs are lit, you may begin installing Nodes.
- Secure the Power Supply (D) line with the included Strain Reliefs (E) to reduce the weight of the Power Supply (D) or cord from disconnecting the power supply from the Gateway (A), as shown in Illustration A.


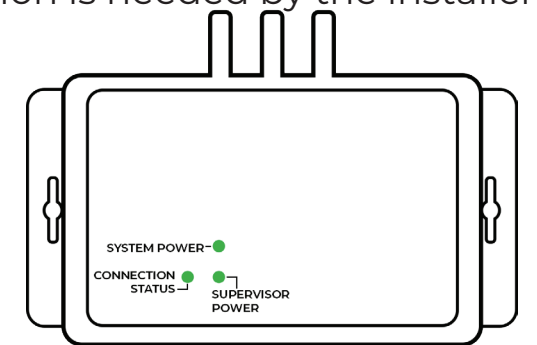


Illustration A

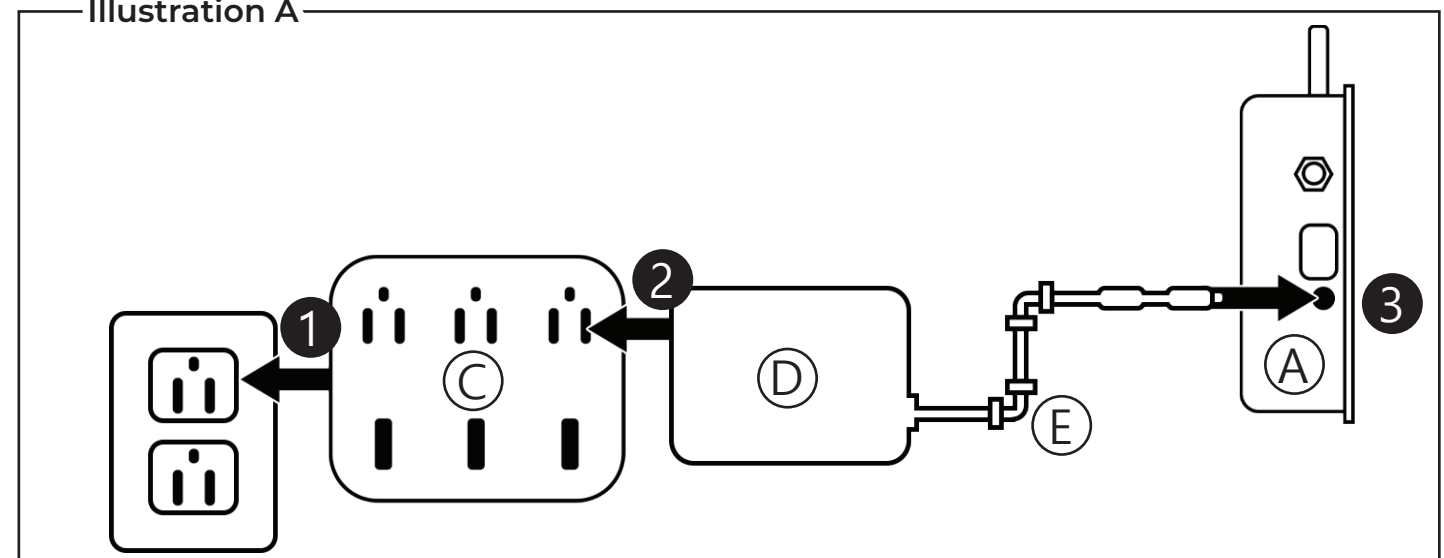

i The Reset Wand is packed with the Gateway, however it is only used on the Node. We recommend keeping the wand near the Gateway after Node installation is complete to make it easier to locate the wand when needed.