



Main interface

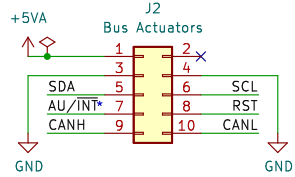


* The AU pin can be configured to emit an interruption in I2C mode when the sensor is not connected to the Actuators Bus


USB

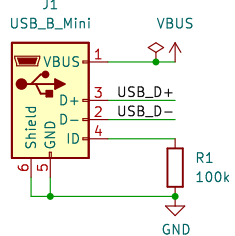

STLINK

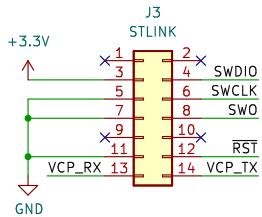


CAN interface

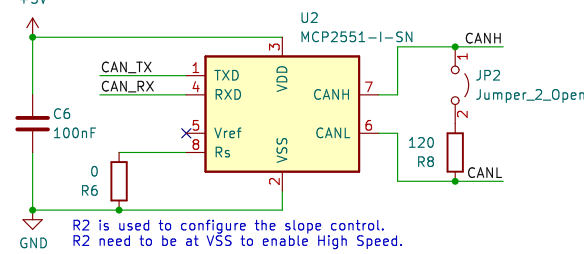

R2 is used to configure the slope control. R2 need to be at VSS to enable High Speed.

Inertial Measurement Unit

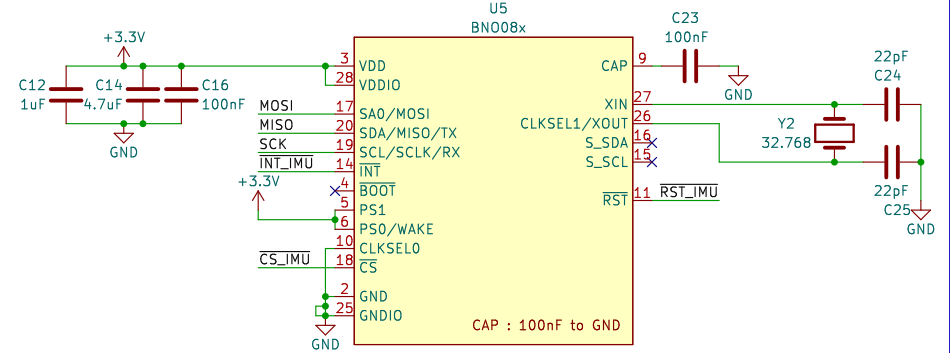

CAP : 100nF to GND

STM32

