


(Example Control Panel)

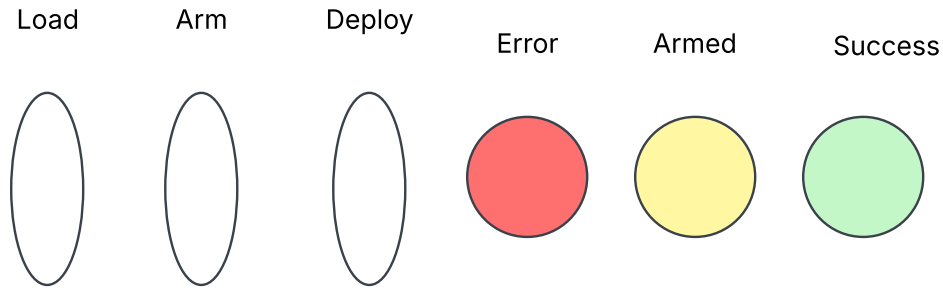

Inputs

- ☐ Drone Presence Sensor(s)
- ☐ Drone Module Sensor(s) Fault
- ☐ Armed Switch
- ☐ Deployment Switch
- ☐ Load Switch

Outputs

- ☐ Error Light
- ☐ Armed Light
- ☐ Success Light
- ☐ Drone Module ON(Sensors)
- ☐ Release Process ON
- ☐ Servo Held in Load Position

