




- Expand “DesignKit” Folder and “bfu5xx_v2_lib_BFU520W_schematic” cell.
- Open “layout” file.

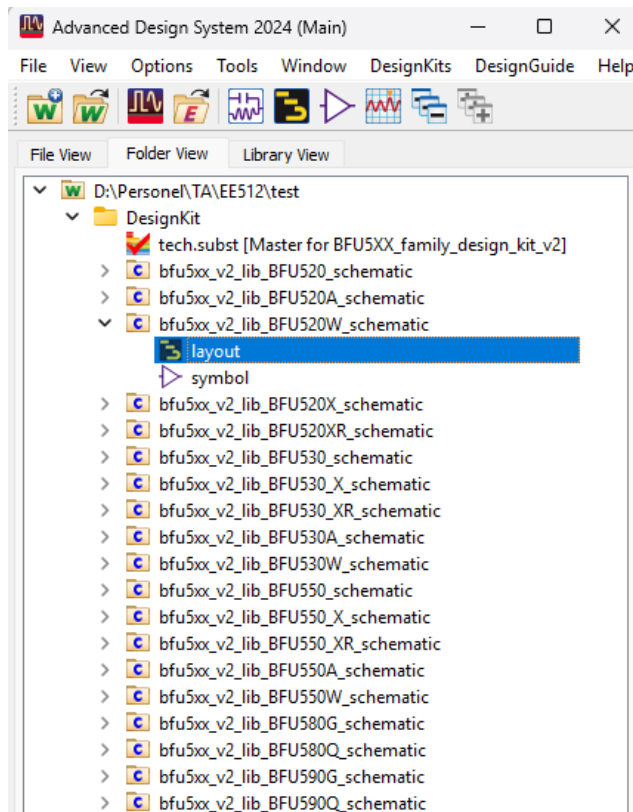

- Select the pins and pads that are on “cond2” layer.
- Check the layer property tab and make sure that the layer is “cond2:drawing”.

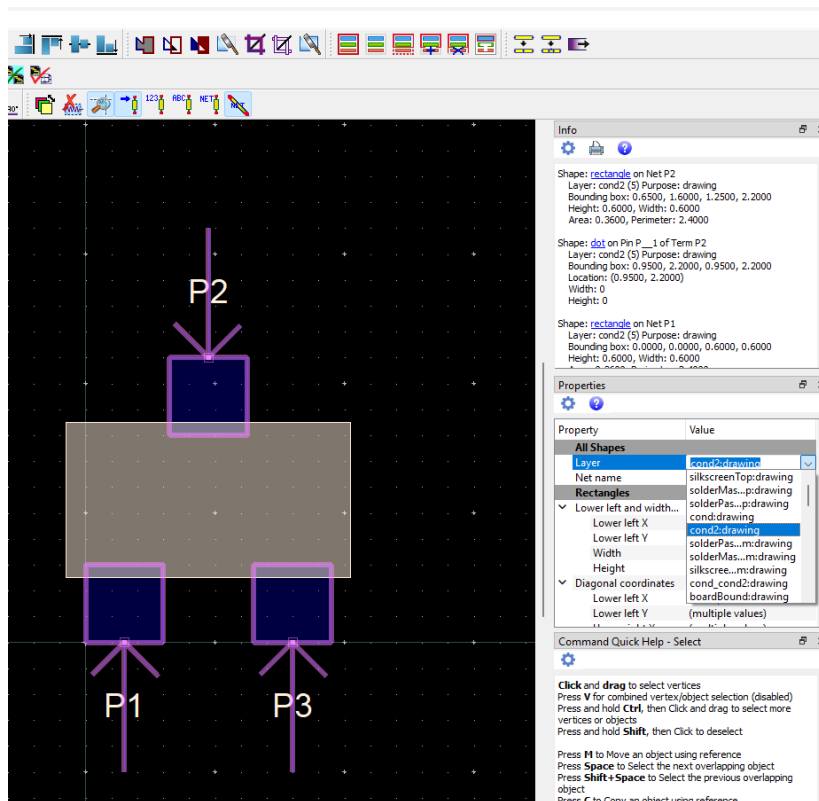

- Now you can change a component's layer according to the layers available in the workspace.
- Pick "cond:drawing" and press enter.

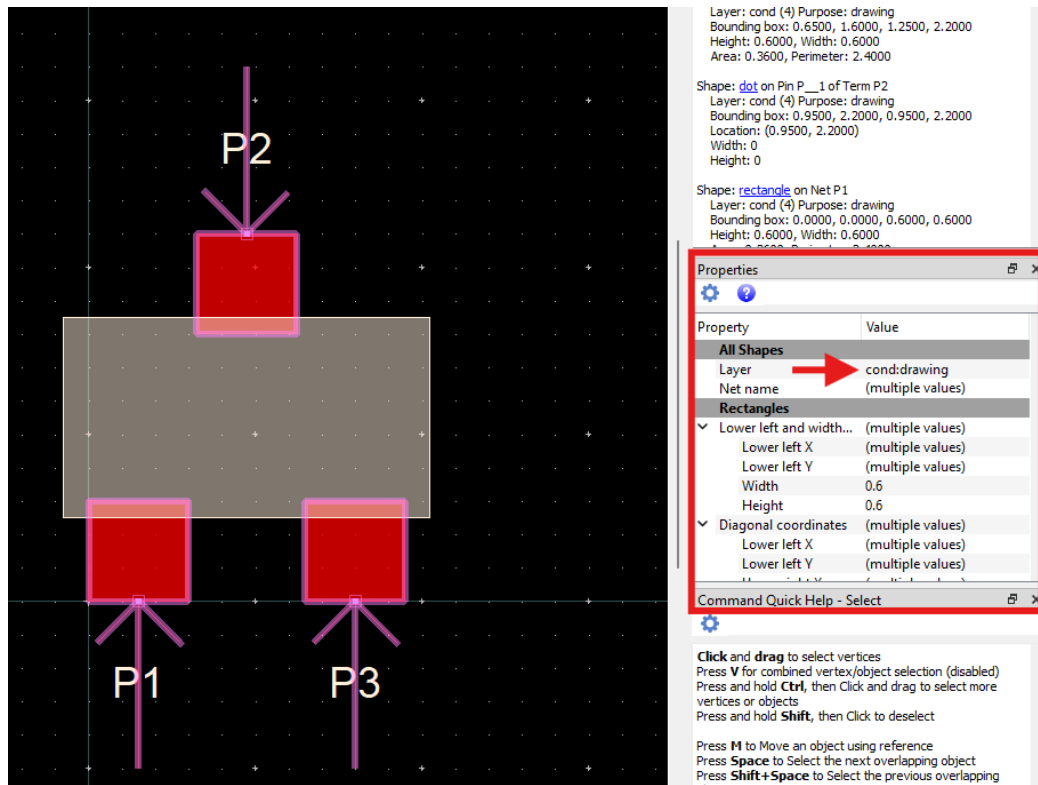

- Component view should change. Save the file and close it.
- Once you call this layout view into your design, the modified version should appear.