

EducoWater-Smart Plug / Pump WiFi

*Multi-Application Controller for
Pools/Aquarium:*

() pH; () ORP; () Temperature; () 4 Timers

Hydroponics:

() EC; () TDS; () Salinity; () Temperature; () 4 Timers

Solar / HVAC / Thermal Systems:

() Temperature

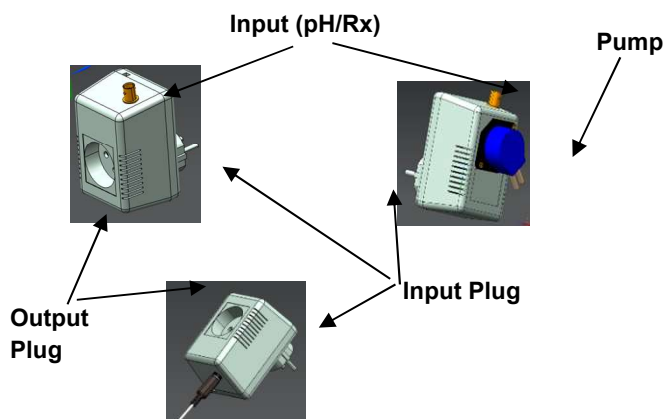


Fig. 1a General View Socket modules



Fig. 1b General View Pumps modules 180ml and 500ml

Product Description

EducoWater Smart is a multifunction Wi-Fi controller designed for water treatment, hydroponics, aquariums, swimming pools, solar thermal systems, HVAC applications, and general process automation.

EducoWater Smart according to the specific type supports 5 different sensor technologies:

- pH
- ORP / Redox
- Digital temperature sensors (DS18B20)
- Analog NTC temperature
- EC / TDS / Salinity

The modules have integrated connections for peristaltic pumps or electrical outlets.

Its compact and robust design facilitates seamless installation and reliable operation.

The 180 ml/min and 500 ml/min pump modules are supplied with an external power adapter and provide the same functionality and control features as the other modules, ensuring full system compatibility and seamless integration.

Each control channel includes an independent **time modulation timer** ().

This allows cyclic ON/OFF modulation of the control output, useful for applications such as:

Installation:

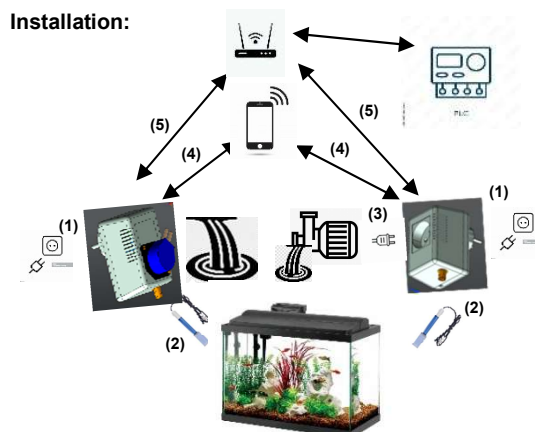


Fig. 2 Typical Installation Smart Plug/Pump

1. Plug the Device into the Grid Socket

Insert the EducoWater Smart Plug into a standard 220V/110V wall socket. The device powers on automatically.

2. Connect the Actuator (only for Plug version)

Plug your actuator (e.g., dosing pump, solenoid valve, UV system) into the front power socket of the Smart Plug. The connected device will be controlled according to the logic you configure (ON/OFF or automatic mode).

3. Connect the Sensor

Attach the sensor to the connector located on the top of the device. Ensure the sensor is properly calibrated and immersed in the solution to be measured.

4. Connect a Mobile Device

Use your smartphone or tablet to access the device's interface. This can be done by connecting directly to the device's local hotspot or through your home Wi-Fi network.

5. Connect to Wi-Fi (Optional)

For remote monitoring and control, connect the device to your Wi-Fi network. Follow the on-screen instructions in the mobile interface to configure your network credentials.

6. PLC / SCADA Connection (Optional)

Connect the PLC, HMI, or SCADA system to the same network as the EducoWater device. Communication is available through the integrated **Modbus TCP Server** interface, allowing external controllers such as **Siemens S7-1200/S7-1500**, **Schneider Electric Modicon**, and other Modbus TCP compatible systems to read and write device registers.

Wi-Fi Connection: Direct Mode.

The system can connect to any device that supports Wi-Fi connectivity, such as smartphones, tablets, or PCs.

The device creates its own Wi-Fi access point. Simply connect your device to the EducoWater Smart Plug's network to access the interface without requiring an internet connection.


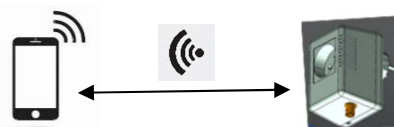


Fig. 3 Direct mode WiFi connection


(6)

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

-Open the Wi-Fi settings on your smartphone, tablet, or PC and look for a Wi-Fi network named **EducoAP_XXXXX** (the "XXXXX" is a unique identifier for your device).

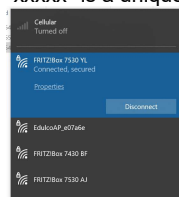

-Select the network and connect — no internet is required.
-Once connected, open your web browser (for an example Internet Explorer or Google) and enter the device's local IP address **192.168.4.1** to access the control interface. Default Password is "**123456789**"

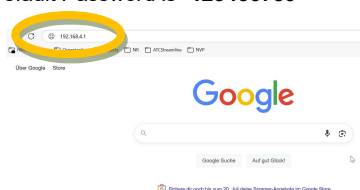

Studios Web Page Interface



Fig.4 Web Page Interface

This is the main page that opens by default when accessing the device.

At the top, the navigation bar provides quick access to the following pages:

- **Monitor** – Shows system status.
- **Sensors** – Sensor type definition and Calibration.
- **Settings** – Configure logic hysteresis and setpoints.
- **Timer** – Set ON/OFF cycles for actuator time modulation.
- **Relays** – hw relay configuration
- **WiConfig** – Manage Wi-Fi setup (Access Point or Station mode).
- **Manual** – Select manual, timer, or automatic mode for controlling the system.
- **Sentinel** – Safety monitoring with min/max thresholds, persistence time and alarm detection
- **Reporter** – Automatic status and alarm reports via email, with configurable schedules
- **NetSky** – AI-assisted diagnostics, smart suggestions and system interaction
- **About** – Displays system information and useful links.

Monitor Page

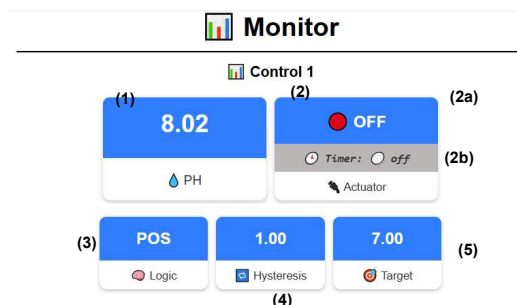


Fig.4 Monitor Page

This page displays the current status of the device, including:

- (1)Current sensor reading (pH/ Redox/ Temperature)
- (2)Current state of the actuator (ON/OFF)

-(2a) Actuator Status

-(2b) Timer status

Note: The actuator will be ON **only** if the control logic is active (e.g., pH below the threshold in positive logic) **and** the timer is either disabled or currently in its ON phase.

This allows **time-based modulation** of the actuator using the timer function, even when the control condition remains continuously true.

(3)Regulation logic (Negative: actuator tries to reduce the current value till the set point; Positive: actuator tries to increase the current value till the set point)

(4)Hysteresis (range of no action across the set point)

(5)Set point setpoint

Sensors

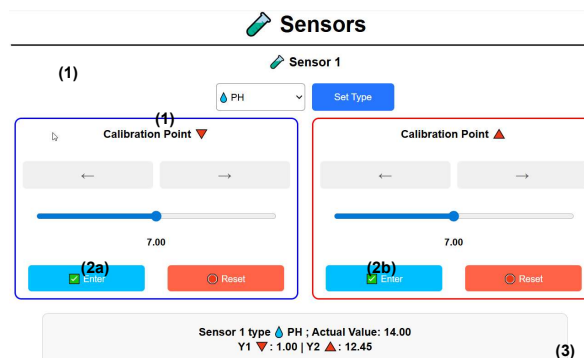


Fig.5 Sensors Page

The Calibrator section is used to calibrate the connected sensor (pH or Redox). It consists of two main elements:

(1) Sensor Type Setting

Allows selecting the type of sensor to calibrate (pH Redox or temperature).

(2a) Calibration Input Area (Low Point)

Used to enter the reference value of the low-point calibration solution. Press **Enter** to save the current reading. Press **Reset** to restore the default calibration values

(2b) Calibration Input Area (High Point)

Used to enter the reference value of the high-point calibration solution. Press **Enter** to save the current reading. Press **Reset** to restore the default calibration values

(3) Message Box

Displays the current sensor status, including:
The sensor type (Temperature, pH, or Redox).
The current reading from the sensor.

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

The calibration points (High and Low) and their associated values

How to Perform a Calibration

To perform the calibration, it is recommended to use two buffer solutions that are as different as possible in order to achieve the most accurate results. The calibration should be done at the high and low points of the sensor.

You can also perform a single-point calibration if only one reference value is available or if a simplified procedure is preferred.

Settings

Fig.6 Settings Page

This page allows the user to configure the control behavior through the following sections:

(1) Logic Setting Controls

Define whether the actuator works in Negative (tries to reduce the value) or Positive logic (tries to increase the value).

(2) Hysteresis Setting Controls

Set the hysteresis range around the set point where no action is taken, avoiding rapid ON/OFF toggling.

(3) Target Setting Controls

Define the desired set point for the sensor (e.g., target pH or Redox value).

(4) The selected settings are immediately reflected in the status panel below, as shown in the figure.

By pushing the buttons in each section, the configuration can be adjusted in real time.

Timers

Fig.7 Timers Page

In the **Timers Page**, it is possible to configure the timer-based control of the actuator:

(1) Enable or disable

To activate or deactivate the timer, use the dropdown menu at the top, and press the "Timer Activation" button to apply the selected state.

(2) Set the **TON** time (the ON duration) using the scroll bars and adjustment buttons.

(3) Set the **TOFF** time (the OFF duration) in the same way.

After adjusting the values, press the "Set TON/TOFF" button to apply the configuration.

(4) The **Status Panel** at the bottom of the page provides a clear summary:

-(4a) The first row shows the current timer settings: whether it is **Active** or **Not Active**, and the configured **TON** and **TOFF** times.

-(4b) The second row displays the **current state of the relay** (ON or OFF), based on the timer cycle and control condition.

Relays

Fig.8 Outputs Page

(1) In this section you can select which physical relay on the board is assigned to each control.

By selecting the forbidden symbol (⊘), the hardware relay is released from any control and becomes available for other assignments.

(2) Hardware relay association status panel.

WiConfig

Fig.9 WiFi configuration Page

The WiFi Configurator allows the device to connect to a private WiFi network for access via a local router or even through the internet worldwide.

(1) WiFi Credentials Input

In this section, you can enter the credentials (SSID and Password) of your private WiFi network.

By pressing the Save button, the device will attempt to connect to the router using the provided information.

(2) Access Point Status and Information

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

This section displays information related to the device's Access Point mode. When the device operates as an Access Point, it shows the SSID (network name) being broadcast, the IP address to be used for connection, and other relevant connection parameters. This allows direct configuration without requiring an external WiFi network.

(3) Station Mode Configuration and Status

This section allows you to save the credentials (SSID and Password) of your private WiFi network (router). Once saved, the device will attempt to connect to the specified network. The panel displays the current connection status. When successfully connected, the assigned IP address will be shown.

At this point, the web interface can be accessed from any device connected to the same WiFi network by entering the shown IP address in a browser.

By pressing the clean button (🧹) is possible to cancel the stored (🔑) credentials.


To connect the device to a local WiFi router:

(a)-Enter the **SSID** and **Password** of your private WiFi network in the designated fields.

(b)-Press the **Save** button to initiate the connection process.


Once connected, the system will automatically obtain an **IP address** from the router (c). This IP address will be displayed in the **message section**.

After the connection is established, any device (such as a smartphone, tablet, or PC) connected to the **same WiFi network** can access the **Studios Web Page Interface** using a standard web browser.

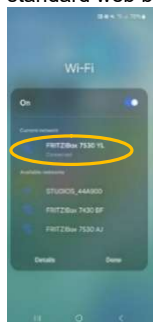

Simply enter the assigned IP address into the browser's address bar, as shown in the example.

Multiple devices can connect to and interact with the StudiosManager interface **simultaneously**.

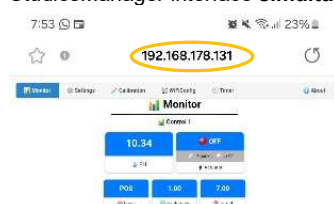

"Email Contacts"

The WiFi Configurator allows the device to connect to a private WiFi network for access via a local router or even through the internet worldwide.

The WiFi Configurator allows the device to connect to a private WiFi network for access via a local router or worldwide through the internet.

(I) In this section you can define the **recipient email address** used by all advanced functions such as **Sentinel**, **NetSky**, and **Reporter**, which are described in the following sections.

(II) Here you can configure the **sender email account (SMTP/IMAP service)** used to send notifications.

By default, the system is preconfigured with the **edulcowater.mailer@gmail.com**, which is limited to **5 emails**. For **privacy reasons** and **unlimited usage**, it is recommended to configure your **own email account** by following the guide below in the next "**Note**" chapter.

(III) The **status panel** reflects the current state of the **email configuration and settings**.

NOTE: How to create a private gmail sender email

📧 Email Configuration (Gmail Setup)

To allow your EducoWater device to send alert messages via Gmail, you need to create a dedicated Gmail account and enable a special **App Password**.

Follow these steps carefully:

1 Create a Gmail account

It is recommended to use a dedicated account (for example: **edulcowater.alerts@gmail.com**) instead of your personal one.

2 Enable 2-Step Verification

-Go to <https://myaccount.google.com/security>

-In the section "**Signing in to Google**", click **2-Step Verification**

-Follow the steps to activate it (you'll need your phone).

3 Generate an App Password

After 2-Step Verification is enabled:

-Return to the same security page

-Click **App passwords** (or go directly to

<https://myaccount.google.com/apppasswords>)

-Sign in if requested

-Under **Select App**, choose **Mail**

-Under **Select Device**, choose **Other (Custom name)** and type:

"MyEducoWaterSender"

-Click **Generate**

4 Copy the generated password

A yellow window will appear with a 16-character password, for example:

"abcd efgh ijkl mnop"

Copy it **without spaces** → "abcdefghijklmnop"

5 Enter your credentials in the EducoWater web interface

-Open the configuration page

-In the field **Sender**, type your Gmail address (e.g. **edulcowater.alerts@gmail.com**)

-In the field **Pass**, paste the 16-character App Password (without spaces)

-Press **Save**

6 Restart or reconnect the Email service

The device will store your credentials in memory and automatically reconnect to Gmail's SMTP server.

⚠ Important Notes

-Regular Gmail passwords **do not work**. You must use the App Password.

-Do **not share** the App Password with others.

-If you change or delete it from your Google account, generate a new one and re-enter it in the device.

-Each App Password can be revoked anytime from your Google

Account → **Security** → **App Passwords**.

Remote Access (Worldwide):

If **port forwarding** is configured on your router, the system

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

can also be accessed **remotely from anywhere in the world**. Please consult your internet service provider or router documentation for instructions on how to enable and configure port forwarding.

As an example u can find one explaining link for the FritzBox router
<https://www.youtube.com/watch?v=uSC1-iWqibE>

In the following picture there is an illustration of all the possible ways to access the device.

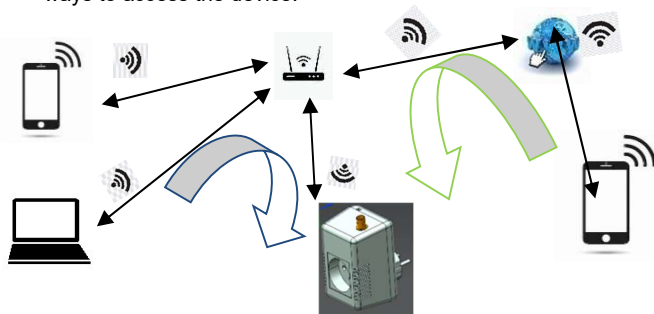


Fig.10 Remote mode WiFi connection

Manual System Settings

System Manual Control

(1) **Manual Mode** [Set Mode]

(2) **Manual Mode** [ON] [OFF]

Timer Mode

(3a) **Ton** [Set Ton/Toff]

(3b) **Toff** [Set Ton/Toff]

(4) **Manual** [Actuator Off]

Fig.11 WiFi configuration Page

The **Manual System Settings** page allows you to manage the system in **Manual**, **Timer**, or **Automatic** mode. You can switch between these modes to control the system's operation as needed.

(1) System Mode Selection:

It is possible to select the desired operating mode: **Manual**, **Timer**, **Automatic** or **Smart Home** mode. In **Manual** mode, you can manually control parameters such as temperature, pH, or Redox. In **Timer** mode, you can set ON/OFF cycles for actuators, and in **Automatic** mode, the system will automatically regulate parameters based on predefined set points. In **Smart Home** mode relay will be driven only by http cpmmands as per appendix.

(ex. `curl -X POST http://192.168.178.132/smartcommand -d "cmd=setsmarthomestatus&status=on"`)

(2) Manual Mode Settings:

In **Manual** mode, it is possible to set the status of the actuator by pressing the **ON** and **OFF** buttons.

(3) Timer Mode Settings:

In **Timer** mode, you can set the ON and OFF times for the actuators:

(3a) **Set Ton**: Set the ON time for the actuator (how long the device should remain active).

(3b) **Set Toff**: Set the OFF time for the actuator (how long the device should remain inactive).

(4) Status Panel:

The **Status Panel** displays the current **System Mode** and the **actuator status** (ON or OFF) in real-time.

For an example in **Smart home** mode after a command request like in the picture

```
MINGW64/c/Fabiano/05_Projects/03_Studios/94_Manuals
$ curl -X POST http://192.168.178.170/smartcommand -d "cmd=setsmarthomestatus&status=on"
```

the control panel will show values like in the following illustration. Actuator status countdown before to declare the system disconnected connection status and last IP requestor are shown.

Smart Home

Actuator On [09:59] | Connected [192.168.178.90]

Sentinel

Sentinel 1

(1) **Min** [6.00] **Max Limits** [8.00]

(2) **Warning time** [00:05 h]

(3) **Notification Interval** [00:30 h]

(4) **Active** [pH 3.00 | pH 9.00 | 00:10 h | 00:30 h]

Sentinel 2

Fig.12 Sentinel Page

The Sentinel function continuously monitors a control value and sends alert emails to the address configured in the WiFi Configurator whenever the value goes out of the allowed limits. It is designed to detect abnormal conditions and notify you reliably, avoiding false alarms.

(1) Limits configuration

Using the up and down arrows, you can set the minimum and maximum allowed values.

If the measured value goes outside these limits, the condition is considered out of range.

(2) Timing configuration

Warning Time: the time that the value must remain out of limits before it is considered a real alarm (filters short spikes).

Notification Interval: how often the alarm email is repeated if the alarm condition persists.

(3) Activation and save

With the activation button, the Sentinel can be set **ACTIVE** or **NOT ACTIVE**.

When active, the Sentinel starts monitoring using the configured limits and timings.

(4) Status panel

The status panel reflects the current Sentinel configuration and

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

state, showing whether it is active and how it is operating.

If the monitored value **returns within the configured limits**, the Sentinel automatically sends a **recovery email** to inform that the alarm condition has been resolved.

This guarantees a **complete notification cycle**: alarm raised → alarm cleared.

Below one example of Alarm notification and alarm resolved notification

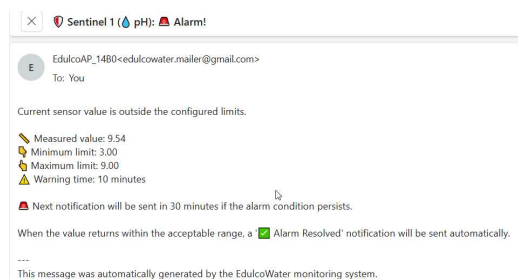


Fig.13 Sentinel Alarm notification email

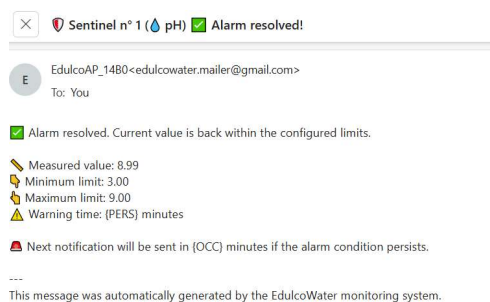


Fig.14 Sentinel Alarm resolved notification email

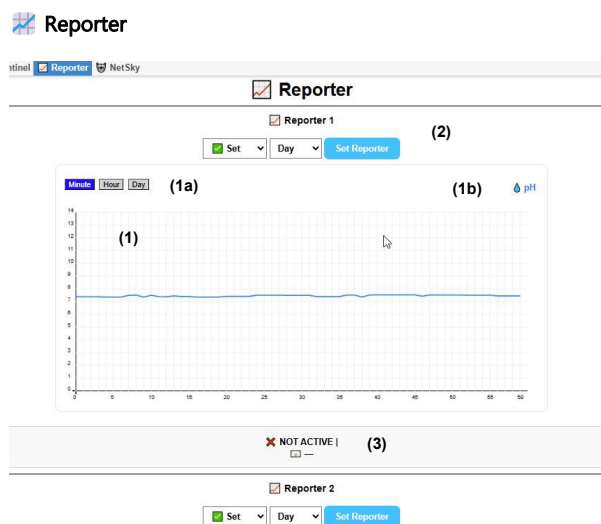


Fig.15 Reporter Page

In this page you can monitor, in real time, the trend of the selected control value (pH, Redox, Temperature, etc.) and review its history over the last minute, hour, or day. You can also configure the Reporter to send periodic reports

by email, according to your selected settings (recipient email is defined in the WiFi Configurator).

(1) Trend Graph

Here you can view the recorded values of the control.

(1a) Display range selector: choose the visualization interval (minute / hour / day).

(1b) Legend: indicates the control type and what is being plotted.

(2) Report Settings

Select the desired report type and configure whether you want the report to be sent according to your chosen schedule/settings.

(3) Status Panel

The status panel reflects the current reporting state, including the data collection progress (%) before the next report is sent to the email configured in the WiFi Configurator.

In the following pictures an example of the reporting email and of the reported data in excell file format

Fig.16 Reporter Email notification

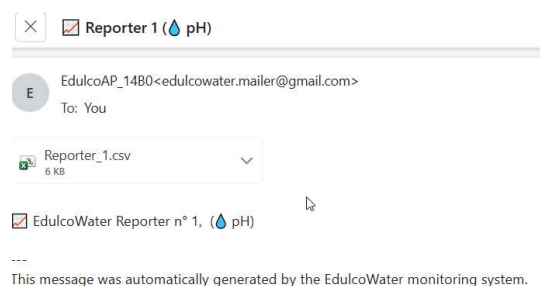


Fig.17 Excell data reported example

#	TYPE: pH	Average	ValMin	ValMax
1	12/13/2025 15:21	777	777	777
2	12/14/2025 15:21	777	777	777
3	12/15/2025 15:21	777	777	777
4	12/16/2025 15:21	774	774	774
5	12/17/2025 15:21	774	774	774
6	12/18/2025 15:21	777	777	777
7	12/19/2025 15:21	775	774	777
8	12/20/2025 15:21	774	774	774
9	12/21/2025 15:21	775	774	776
10	12/22/2025 15:21	776	776	776
11	12/23/2025 15:21	776	776	777
12	12/24/2025 15:21	777	777	777
13	12/25/2025 15:21	777	777	777
14	12/26/2025 15:21	777	777	777
15	12/27/2025 15:21	777	777	777
16	12/28/2025 15:21	777	777	777
17	12/29/2025 15:21	777	777	777
18	12/30/2025 15:21	777	777	777
19	12/31/2025 15:21	777	777	777
20	1/1/2026 15:21	777	777	777
21	1/2/2026 15:21	777	777	777
22	1/3/2026 15:21	777	777	777
23	1/4/2026 15:21	777	777	777
24	1/5/2026 15:21	777	777	777
25	1/6/2026 15:21	776	776	776
26	1/7/2026 15:21	776	776	776
27	1/8/2026 15:21	775	775	775
28	1/9/2026 15:21	775	775	775

NetSky

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

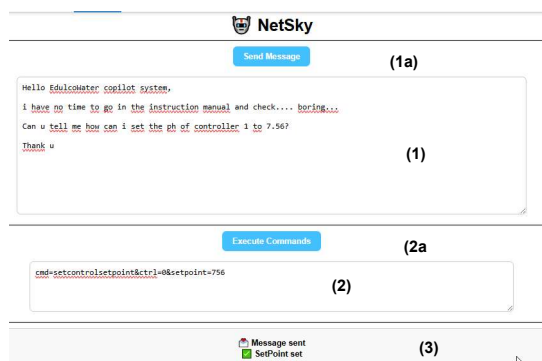


Fig.18 NetSky Page

NetSky is the first system on the market to integrate an AI Copilot assistant directly into the device. By writing a message as shown in the example, you can receive intelligent assistance for diagnostics, user manuals, and other device-related information.

(1) Email Message

In this field you can write your request or description of the issue.

The message will be analyzed by the Copilot system to provide targeted assistance.

(1a) Send Button

Press the button to send the message by email and receive support from the NetSky Copilot system.


(2) Prompt commands

In this field you can copy and paste commands the NetSky system suggests to u.

(2a) Commands Execution Button

Press the button to set the copied and pasted commands in order to adjust the EduLcoWater according to your needs.

Fig.19 NetSky Email response

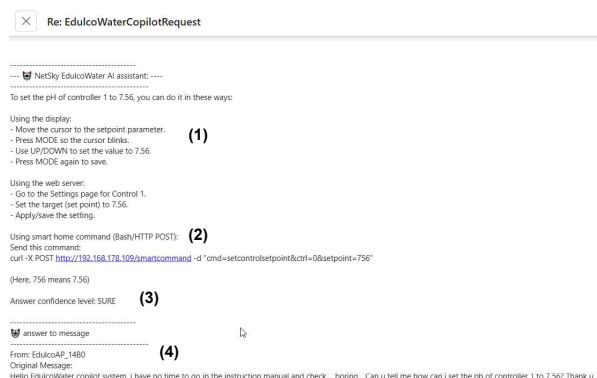

In the reply email, the following sections are included:

(1) Explanation

Explanatory text with direct reference to the commands shown on the display and their meaning.

(2) Bash / Control Commands

Examples of executable commands (e.g. for Smart Home integration) that can be copied and used directly.

(3) Confidence Level

An indication of the confidence level of the response, meaning how reliable the system considers the proposed solution (yeah... it's still growing 🌱).

(4) Request Details

Information related to the original request message, for traceability and context.

About

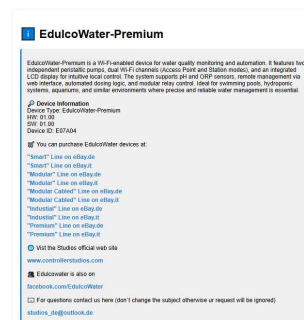


Fig.20 About Page

The About section provides a brief description of the product and useful resources for further support or information.

Product Overview Useful Links like e commerce company web site and email for technical support

Hw electrical data:

Description	Rating
Power consumption	3W
Power supply	220V/110v 5A
Output (Smart Plug)	220V/110v 5A
Output (Smart Pump)	60ml/min / 180ml / 500ml
WiFi Range (1)(2)	10mt

Sensors and Controls Ratings

Description	Rating
Ph range	0.01-14.00
Ph error	±0,01
Ph resolution	±0,01
Ph Control algorithm	ON-OFF with Adjustable Hyster and Logic
Redox range	-1800/1800 mV
Redox error	±1 mV
Redox resolution	±1 mV
Redox Control algorithm	ON-OFF with Adjustable Hyster and Logic
Temp Range	5°C-70°C
Temp error	±1 °C
Temp resolution	±0.1°C
Temp Control algorithm	ON-OFF with Adjustable Hyster and Logic
EC Range	10 – 20,000 µS/cm
EC error	±10 µS/cm
EC resolution	±1 µS/cm (10–2,000 µS/cm), ±10 µS/cm (2,000–20,000 µS/cm)
EC Control algorithm	ON-OFF with Adjustable Hyster and Logic
TDS Range	6 – 12,800 ppm
TDS error	±7 ppm
TDS resolution	1 ppm (6–1,280 ppm), 10 ppm (1,280–12,800 ppm)
TDS Control algorithm	ON-OFF with Adjustable Hyster and Logic
Salinity Range	6 – 11,000 ppm
Salinity error	±6 ppm

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EdulcoWater Smart Actuators Reference Manual

 Salinity resolution	1 ppm (6–1,100 ppm), 10 ppm (1,100–11,000 ppm)
 Salinity Control algorithm	ON-OFF with Adjustable Hyster and Logic
 Timer Range	1 second – 24 hours
 Timer Resolution	1 second
 Timer Accuracy	±10 sec/day
 Timer Function	Cyclic ON/OFF output modulation

(1) The range can be extended in **Access Point mode** by using any standard WiFi repeater, and in **Station mode** through any router, whether connected to the internet or not.

(2) This device supports WPA/WPA2. It does not support WPA3. When using routers or mesh systems with mixed WPA2/WPA3 mode, connection issues may occur. In such cases, configure the access point to **WPA2 only** or use a repeater that supports WPA2.

Mechanical Overall Dimensions x/y/z (mm)

Smart Plug: 66x93x93

Smart Pump-60ml: 66x93x116

Smart Pump-180ml: 85x90x100

Smart Pump-500ml: 10x120x125

Markings: CE

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

SMART HOME FUNCTIONS

Using Smart Home Commands

The Smart Home commands of the EducoWater Premium system are designed to enable seamless integration with external platforms such as Amazon Alexa, Node-RED, Home Assistant, or any custom automation system that supports HTTP POST requests. These commands allow full remote access to the control logic, timers, calibration functions, and system configuration.

In the example shown below, a command is executed using a bash terminal to interact with the device through its local IP address.

See the figure below for a real example of sending a command from Bash (Linux/macOS/Windows terminal with curl).

To run a command from the terminal:

Open a terminal or command prompt on your PC or smart device.

Type the provided curl command as shown in the examples.

Replace the IP address with your device's actual IP (in the example it was **192.168.178.130** but u can get your own in the WiFiConfiguration page panel statu).

Press ENTER to send the command.

MINGW64:/c/Fabiano/05_Projects/03_Studios/53_Edulcowater-Smart/70_Manuals

```
DAQUFAB@K123716H1 MINGW64 /c/Fabiano/05_Projects/03_Studios/53_Edulcowater-Smart/70_Manuals
$ curl -X POST http://192.168.178.130/smartcommand -d "cmd=getdeviceabout"
% Total % Received % Xferd Average Speed Time Time Time
100 177 100 159 100 18 1715 194 --:-- --:-- --:-- 1923{"deviceType":"EducoWater-Premium","hwVersion":"01.00","swVersion":"01.00","deviceId":"E07A04","ssid":"Educo_asdf","password":"123456789","ip":"192.168.4.1"}
DAQUFAB@K123716H1 MINGW64 /c/Fabiano/05_Projects/03_Studios/53_Edulcowater-Smart/70_Manuals
$ |
```

Implemented Commands

The following pages describe in detail all the GET and SET commands currently implemented in the system.

Each command includes a description, required parameters, limitations, example responses, and a working Bash curl example.

GET Commands

-  **getdeviceabout** — Retrieve general device information
-  **getcontrolstatus** — Get the configuration and live status of a control channel
-  **getcalstatus** — Retrieve calibration data and the current sensor value
-  **getsystemstatus** — Get the operating mode, manual status, and system timer configuration

SET Commands

-  **setsystemmode** — Set the operating mode to Manual, Timer, Automatic, or SmartHome
-  **setcontroltype** — Set a supported control type for a compatible control channel
-  **setcontrolhyster** — Define the control hysteresis value
-  **setcontrollogik** — Configure direct or inverse control logic
-  **setcontrolsetpoint** — Define the control setpoint
-  **settimeractivation** — Enable or disable a timer block
-  **settontoff** — Set the timer ON and OFF durations
-  **resetcalibration** — Reset a supported sensor calibration point
-  **setsmarthomestatus** — Turn the Smart Home manual output ON or OFF
-  **setsystemtimer** — Set the global system timer ON and OFF durations

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

1) GET DEVICE ABOUT

Description

This command retrieves general information about the EducoWater device. It returns the device identity, firmware and hardware versions, and Access Point network information.

Required Parameters

none

Limitations

a) None

Response

```
{ "deviceType": "EducoWater-Plattform", "hwVersion": "01.00", "swVersion": "01.00", "deviceId": "A1B2C3", "ssid": "EDULCO_1",
  "password": "mypassword", "ip": "192.168.4.1" }
```

Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=getdeviceabout"
```

2) GET CONTROL STATUS

Description

This command retrieves the current status and configuration of a specific control channel. It returns control metadata (type and linked sensor), current measured value, control settings (setpoint, hysteresis, logic), actuator status, and the associated timer status (if used).

Required Parameters

ctrl: Control index (must be 0)

Limitations

a) Only control 0 is supported

Response

```
{ "ctrl": 0, "type": "ph", "active": true, "logic": false, "setpoint": 703, "hysteresis": 25 }
```

Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=getcontrolstatus&ctrl=0"
```

3) GET CALIBRATION STATUS

Description

This command retrieves the calibration data and current measurement value of a specified sensor. It returns the raw calibration points stored in EEPROM, along with the current sensor reading and sensor type.

Required Parameters

sensor: Sensor index 0

Limitations

a) Only sensor index 0

Response

```
{ "sensor": 0, "type": 3, "value": 977, "calX1": 709, "calY1": 100, "calX2": -644, "calY2": 1245 }
```

Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=getcalstatus&sensor=0"
```

4) GET SYSTEM STATUS

Description

This command retrieves the current global operating status of the device. It returns information about the working mode, manual control status, and system timer configuration. This command is useful for remote monitoring and smart home integration.

Required Parameters

None.

Limitations

None.

Response

```
{ "mode": "Automatic", "manual": false, "timer": { "active": true, "timeOn": 300, "timeOff": 120 } }
```

Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=getsystemstatus"
```

Exception

This command is available only on models that support Manual mode.

5) SET SYSTEM MODE (Working Mode)

Description

This command sets the global working mode of the device. The system mode defines how the device controls the output:

- Manual // Timer Mode // Automatic Mode // SmartHome

Required Parameters

mode : Desired system mode (string, case-sensitive); "Manual", "Timer", "Automatic", "SmartHome"

Limitations

- a) mode must be exactly one of: "Manual", "Timer", "Automatic" "SmartHome"
- b) If mode is missing → the command returns an error.

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

✓ Response

✓ System mode updated to <mode> // ✗ Failed to set system mode

💡 Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=setsystemmode&mode=Manual"
```

⚠ Exception

This command is available only on models that support Manual mode.

6) 🚀 SET CONTROL TYPE

📄 Description

This command sets the sensor type associated with a specific control index. Supported types are **pH ORP and Temperature**.

📋 Required Parameters

ctrl: Control index 0 // type: Desired type "ph" "orp" "ntc" "ec" "tds" "sal" "diff" "avg"

⚠ Limitations

- a) Only control index 0 or 3 supported
- b) Type must be exactly "ph" "orp" "ntc" "ec" "tds" "sal" "diff" "avg"

✓ Response

✓ Control type set // ✗ Failed to set control type

💡 Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=setcontrolype&ctrl=0&type=ntc"
```

⚠ Exception

Available control channels and supported control types depend on the device model. A control type can be assigned only to a channel compatible with the corresponding sensor or input. Refer to the model-specific control compatibility table for the supported channel/type combinations.

7) 🌀 SET CONTROL HYSTERESIS

📄 Description

This command sets the hysteresis value for a specific control channel. The hysteresis defines the tolerance band around the setpoint to prevent fast toggling of the output.

📋 Required Parameters

ctrl: Control index 0 //hysteresis: Value in ADC units (integer)

⚠ Limitations

- a) Only control index 0 supported
- b) Hysteresis must be a positive integer

✓ Response

✓ Hysteresis set // ✗ Failed to set hysteresis

💡 Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=setcontrolhyster&ctrl=0&hysteresis=49"
```

8) 🧠 SET CONTROL LOGIC

📄 Description

This command sets the logic mode of a control channel. The logic determines how the relay output reacts relative to the setpoint: **true** → Direct logic; **false** → Inverse logic The exact switching behavior depends on the configured control type (pH, ORP, etc.).

📋 Required Parameters

ctrl: Control index 0 //logic: "true" or "false"

⚠ Limitations

- a) Only control index 0 supported
- b) Logic must be "true" or "false"

✓ Response

✓ Logic set // ✗ Failed to set logic

💡 Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=setcontrollogik&ctrl=0&logic=false"
```

9) 🎯 SET CONTROL SETPOINT

📄 Description

This command sets the target setpoint value for a specific control channel.

📋 Required Parameters

ctrl: Control index (must be 0) // setpoint: Desired setpoint value (integer)

⚠ Limitations

- a) Only control index 0 supported
- b) Setpoint must be a valid integer in ADC range

✓ Response

✓ SetPoint set // ✗ Failed to set SetPoint

💡 Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=setcontrolsetpoint&ctrl=0&setpoint=704"
```

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

10) SET TIMER ACTIVATION

Description

This command activates or deactivates a timer block. Useful for enabling/disabling periodic logic based on time cycles.

Required Parameters

timer: Timer index 0 // active: "true" or "false"

Limitations

- a) Timer index must be 0
- b) Active must be "true" or "false"

Response

✓ Timer activation set // ✗ Failed to set timer activation

Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=settimeractivation&timer=0&active=false"
```

11) SET TIMER TON/TOFF

Description

This command sets the ON (TON) and OFF (TOFF) durations in seconds for a selected timer. The timer runs cyclically: ON for ton seconds; OFF for toff seconds

Required Parameters

timer: Timer index 0 // ton: Duration in seconds for ON state // toff: Duration in seconds for OFF state

Limitations

- a) ton and toff must be between 1 and 64859 seconds
- b) Command accepted only if device is in TIMER mode

Response

✓ TON and TOFF set // ✗ Failed to set TON or TOFF

Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=settontoff&timer=0&ton=180&toff=240"
```

12) RESET CALIBRATION

Description

This command resets a specific calibration point of a sensor to its default value. It is typically used to restore factory calibration or to restart the calibration procedure. Each sensor uses two calibration points, identified by the parameter calpoint.

Required Parameters

sensor: Sensor index 0 // calpoint: 0 → First calibration point; 1 → Second calibration point

Limitations

- a) Only valid sensor indexes are accepted by the firmware.

Response

✓ Calibration reset to default // ✗ Reset failed

Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=resetcalibration&sensor=0&calpoint=1"
```

Exception

This command does not apply to control types that do not support two-point calibration, such as ntc, temp, diff, and avg. It is available only for sensors and control types that support calibration points.

13) SET SMART HOME MODE

Description

This command sets the device in Smart Home mode. It is used to turn the manual control output ON or OFF from a smart home master like "home Assistant"

Required Parameters

status : Desired Relay state (string, case-sensitive); "on" → Relay output ON, "off" → Relay output OFF.

Limitations

- a) status must be exactly "on" or "off".
- b) If status is missing → the command returns an error.

Response

✓ Manual status updated // { "error": "Missing status parameter" }

Example (bash curl)

```
curl -X POST http://192.168.178.170/smartcommand -d "cmd=setsmarthomestatus&status=on"
```

Exception

This command is available only for controls that include and support the Manual control page.

14) SET SYSTEM TIMER

Description

This command sets the global system timer ON and OFF durations. The system timer is used when the device operates in Timer mode, causing the output to switch cyclically between ON and OFF states.

Required Parameters

timeon : ON duration in seconds (integer) // timeoff : OFF duration in seconds (integer)

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

⚠ Limitations

- a) Both parameters are required; missing values will return an error.
- b) Valid time ranges depend on the internal firmware logic.

✅ Response

- ✅ Timer updated // { "error": "Missing timeon/timeoff parameters" }

💡 Example (bash curl)

```
curl -X POST http://192.168.178.130/smartcommand -d "cmd=setsystemtimer&timeon=300&timeoff=120"
```

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

PLC FUNCTIONS: MODBUS TCP REFERENCE


Using PLC commands

The PLC functions of the EducoWater system are designed to enable seamless integration with industrial automation systems, **PLCs**, **HMIs**, **SCADA systems**, and other devices supporting the **Modbus TCP protocol**.

EducoWater operates as a **Modbus TCP Server (Slave)**, while the connected PLC or automation controller operates as the **Modbus TCP Client (Master)**. This allows external automation systems, including **Schneider Electric Modicon M221/M241/M262** and **Siemens S7-1200/S7-1500 PLCs**, to read process values and device status and to write control parameters directly through the Ethernet/Wi-Fi network.

The Modbus TCP interface uses **TCP port 502**, **Unit ID / Slave ID 1**, and Holding Registers. **FC03 (Read Holding Registers)** is used for reading; **FC06 (Write Single Register)** for writing one register; and **FC16 / 0x10 (Write Multiple Registers)** for writing multiple consecutive registers.

For development, commissioning, and diagnostic purposes, it is not necessary to have a physical PLC available. The Modbus TCP interface can be tested using any standard Modbus TCP Master/Client testing software, such as the Modbus Tester **ModbusTester 3.2.0** shown in the figure below and available at this link <https://www.modbustester.com/>

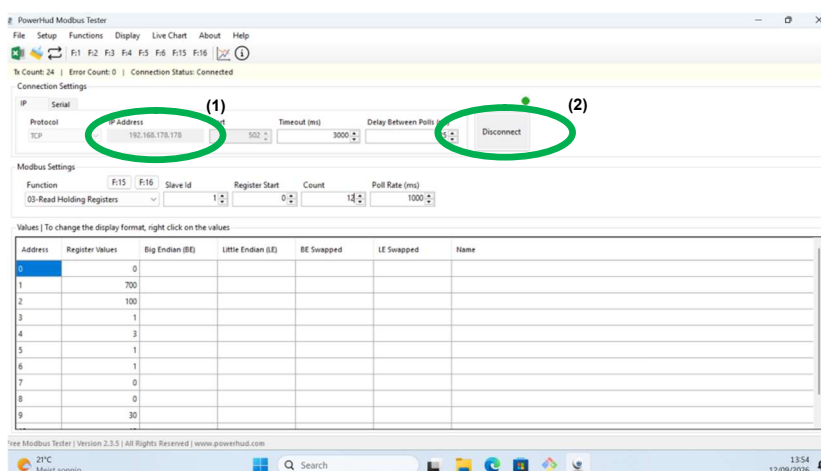

Once the Modbus testing software has been installed, launch the application and configure the connection using the IP address of the **EducoWater device (1)**

The EducoWater device and the **PLC**, or the PC running the PLC/Modbus Master simulator, must be connected to the **same local network/router**.

Enter the EducoWater IP address, select **Modbus TCP**, set the communication port to **502** and the **Unit ID to 1**, then press **Connect (2)** to establish the connection with the device.

Once connected, the PLC or Modbus testing software can read and write the parameters exposed by EducoWater through the Modbus TCP interface.

MODBUS TCP REGISTER MAP

The EducoWater Industrial Modbus TCP interface provides **60 Holding Registers**, addressed from 0 to 59. The first **48 registers** are divided into **4 control blocks of 12 consecutive registers**. Registers **48–49 are reserved**, and registers **50–59** contain **system parameters**.

Addressing Note: The protocol addresses below are zero-based. In 4xxxx notation, address 0 corresponds to 40001, address 1 to 40002, and so on.

The following **Control Registers Table** provides a complete overview of all Modbus control registers available in EducoWater, including register addresses, access permissions, data types, units, descriptions, and compatibility with the various EducoWater device models

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual



Control Registers Table

Register	Address	Control	Parameter	Description	Access	Device Compatibility
0	40001	0	ActReadVal	Current value read from the sensor associated with the control.	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
1	40002	0	Set_Point	Control setpoint used by the regulation logic.	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
2	40003	0	Set_Hyster	Hysteresis value applied around the configured setpoint.	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
3	40004	0	CtrlSt	Current control/relay output state. 0 = OFF, 1 = ON.	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
4	40005	0	type	Type of control/sensor associated with the control channel.	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
5	40006	0	Active	Enables/disables the control. 0 = Disabled, 1 = Enabled.	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
6	40007	0	Set_PosLogik	Control logic configuration / operating direction.	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
7	40008	0	HwRelay	Hardware relay associated with the control. Index 0–3.	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
8	40009	0	Timer.Active	Enables/disables the control timer. 0 = Disabled, 1 = Enabled.	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
9	40010	0	Timer.OnSeconds	Timer ON duration in seconds.	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
10	40011	0	Timer.OffSeconds	Timer OFF duration in seconds.	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
11	40012	0	Timer.ElapsedTime	Current elapsed timer time.	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
12	40013	1	ActReadVal	Same as for control 0 register 0	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
13	40014	1	Set_Point	Same as for control 0 register 1	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
14	40015	1	Set_Hyster	Same as for control 0 register 2	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
15	40016	1	CtrlSt	Same as for control 0 register 3	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
16	40017	1	type	Same as for control 0 register 4	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
17	40018	1	Active	Same as for control 0 register 5	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
18	40019	1	Set_PosLogik	Same as for control 0 register 6	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
19	40020	1	HwRelay	Same as for control 0 register 7	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
20	40021	1	Timer.Active	Same as for control 0 register 8	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
21	40022	1	Timer.OnSeconds	Same as for control 0 register 9	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
22	40023	1	Timer.OffSeconds	Same as for control 0 register 10	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
23	40024	1	Timer.ElapsedTime	Same as for control 0 register 11	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-SENS-EC-TEMP
24	40025	2	ActReadVal	Same as for control 0 register 0	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
25	40026	2	Set_Point	Same as for control 0 register 1	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
26	40027	2	Set_Hyster	Same as for control 0 register 2	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
27	40028	2	CtrlSt	Same as for control 0 register 3	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
28	40029	2	type	Same as for control 0 register 4	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
29	40030	2	Active	Same as for control 0 register 5	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
30	40031	2	Set_PosLogik	Same as for control 0 register 6	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

31	40032	2	HwRelay	Same as for control 0 register 7	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
32	40033	2	Timer.Active	Same as for control 0 register 8	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
33	40034	2	Timer.OnSeconds	Same as for control 0 register 9	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
34	40035	2	Timer.OffSeconds	Same as for control 0 register 10	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
35	40036	2	Timer.ElapsedTime	Same as for control 0 register 11	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-EC-TEMP; SMART-SENS-EC-TEMP
36	40037	3	ActReadVal	Same as for control 0 register 0	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
37	40038	3	Set_Point	Same as for control 0 register 1	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
38	40039	3	Set_Hyster	Same as for control 0 register 2	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
39	40040	3	CtrlSt	Same as for control 0 register 3	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
40	40041	3	type	Same as for control 0 register 4	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
41	40042	3	Active	Same as for control 0 register 5	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
42	40043	3	Set_PosLogik	Same as for control 0 register 6	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
43	40044	3	HwRelay	Same as for control 0 register 7	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
44	40045	3	Timer.Active	Same as for control 0 register 8	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
45	40046	3	Timer.OnSeconds	Same as for control 0 register 9	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
46	40047	3	Timer.OffSeconds	Same as for control 0 register 10	R/W	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
47	40048	3	Timer.ElapsedTime	Same as for control 0 register 11	R	INDUSTRIAL; MODULAR; PREMIUM; SMART-PLUG-PH-RX; SMART-SENS-PH-RX
48	40049	--	--	Reserved for future	--	ALL
49	40050	--	--	Reserved for future	--	ALL
50	40051	--	REG_SYSTEM_MODE	System mode: 0 = Manual, 1 = Timer, 2 = Automatic, 3 = SmartHome.	R/W	ALL
51	40052	--	REG_MANUAL_STATUS	General manual command status. 0 = OFF, 1 = ON.	R/W	ALL
52	40053	--	REG_SYSTEM_TIMER_STATUS	Current system timer status.	R	ALL
53	40054	--	REG_SYSTEM_TIMER_ON_SECONDS	System timer ON duration in seconds.	R/W	ALL
54	40055	--	REG_SYSTEM_TIMER_OFF_SECONDS	System timer OFF duration in seconds.	R/W	ALL
55	40056	--	REG_SYSTEM_TIMER_ELAPSED	Current elapsed time of the system timer.	R	ALL
56	40057	--	REG_SMARTHOME_STATUS	Smart Home status. 0 = OFF, 1 = ON.	R/W	ALL
57	40058	--	REG_SMARTHOME_CONNECTED	Smart Home connection status.	R	ALL
58	40059	--	REG_HW_TYPE	EducoWater application hardware type.	R	ALL
59	40060	--	REG_UNIT_ID	Modbus Unit ID. Current value: 1.	R	ALL

Implemented Commands

A brief explanation and practical examples are also provided for the supported Modbus functions:

- **FC06 – Write Single Register**
- **FC16 – Write Multiple Registers**

These examples can be used both for testing with a Modbus Master simulator and as a reference when configuring the communication with the actual PLC.

GET Commands

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

1. **FC03 – Read Holding Registers — Read one or more holding registers**
2. **FC06 – Write Single Register — Write a value to a single holding register.**
3. **FC16 – Write Multiple Registers — Write values to multiple holding registers in a single transaction.**

1) **FC03 Read Holding Registers**

- **Description**

The **FC03 – Read Holding Registers** function is used by the PLC or Modbus TCP Master to read one or more Holding Registers from the EducoWater device as per registers description in table “**Control Registers Table**”

- **Required Parameters**

EducoWater IP Address: Device local IP address;

TCP Port: **502**

Unit ID: **1**

Function Code: **03** – Read Holding Registers

Start Address: First register to be read

Quantity: Number of consecutive registers to read

- **Limitations**

- a) The requested Start Address must correspond to a valid EducoWater Holding Register.
- b) The requested address range must remain within the available Modbus Register Map.
- c) Registers 48 and 49 are reserved for future implementation.
- d) FC03 is a **read-only operation** and cannot be used to modify register values.

- **Response**

When the request is successfully executed, EducoWater returns the current value of each requested Holding Register.

For example, reading **Control 0** starting from Address 0 with a Quantity of 12 returns the complete Control 0 register block:

ActReadVal, Set_Point, Set_Hyster, CtrlSt, type, Active, Set_PosLogik, HwRelay, Timer.Active, Timer.OnSeconds, Timer.OffSeconds, and Timer.ElapsedTime.

Example – Modbus TCP Master

The screenshot shows the PowerHud Modbus Tester interface. The 'Connection Settings' section is configured with IP Address 192.168.178.178, Port 502, and Timeout 3000 ms. The 'Modbus Settings' section shows Function 03-Read Holding Registers, Slave ID 1, Register Start 0, Count 12, and Poll Rate 1000 ms. Below these settings is a table titled 'Values | To change the display format, right click on the values'.

Address	Register Values	Big Endian (BE)	Little Endian (LE)	BE Swapped	LE Swapped	Name
0	0					
1	700					
2	100					
3	1					
4	3					
5	1					
6	1					
7	0					
8	0					
9	30					

2) **FC06 Write Single Register**

- **Description**

The **FC06 – Write Single Register** function is used by the PLC or Modbus TCP Master to write a value to a single Holding Register of the EducoWater device as per registers description in table “**Control Registers Table**”.

Only registers identified as **Read/Write (R/W)** can be modified using this function.

- **Required Parameters**

EducoWater IP Address: Device local IP address;

TCP Port: **502**

Unit ID: **1**

Function Code: **06** – Write Single Register

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

Register Address: Address of the Holding Register to be written

Value: New value to be assigned to the selected register

- ⚠ Limitations

- The requested Register Address must correspond to a valid EducoWater Holding Register.
- The selected register must be identified as Read/Write (R/W) in the Modbus Register Map.
- Registers identified as Read Only (R) cannot be modified using FC06.
- The written value must comply with the valid range and format defined for the selected register.


- ✅ Response

When the request is successfully executed, EducoWater writes the requested value to the selected Holding Register and returns a confirmation of the operation.

For example, writing to Address 1 modifies the Set_Point parameter of Control 0.

The updated value can subsequently be verified by executing an FC03 – Read Holding Registers request on the same register.

- 💡 Example – Modbus TCP Master

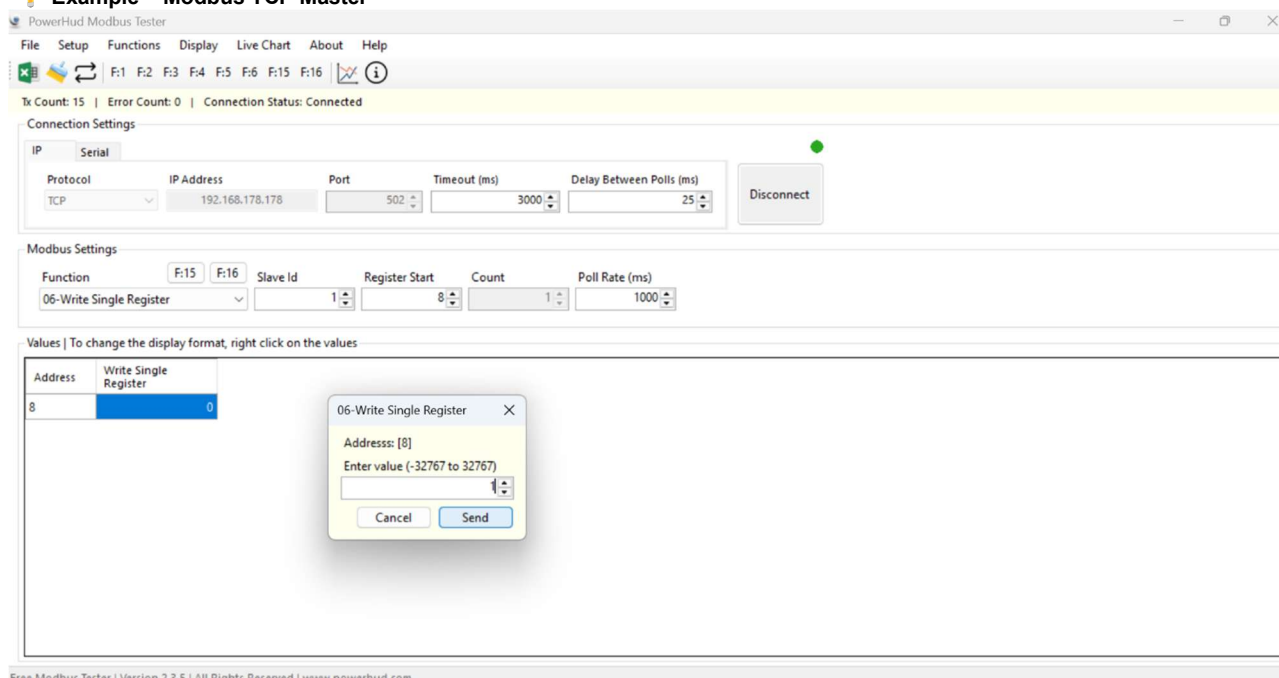

3) FC16 Write Multiple Registers

- 📖 Description

The **FC16 – Write Multiple Registers** function is used by the PLC or Modbus TCP Master to write multiple consecutive Holding Registers of the EducoWater device within a single Modbus TCP request, as per registers description in table “**Control Registers Table**”. Only registers identified as Read/Write (R/W) can be modified.

- 📋 Required Parameters

EducoWater IP Address: **Device local IP address**;

TCP Port: **502**

Unit ID: **1**

Function Code: **16 (0x10)** – Write Multiple Registers

Start Address: Address of the first Holding Register to be written

Quantity: Number of consecutive registers to be written

Values: Values to be assigned to the selected consecutive registers

- ⚠ Limitations

- The requested Start Address must correspond to a valid EducoWater Holding Register.
- The complete requested address range must remain within the available Modbus Register Map.
- Registers identified as Read Only (R) cannot be modified.
- Each written value must comply with the valid range and format defined for its corresponding register.
- The selected register range must contain only registers that are valid for the requested write operation.

- ✅ Response

When the request is successfully executed, EducoWater writes the requested values to the selected consecutive Holding Registers and returns a confirmation containing the starting address and the number of registers written.

For example, FC16 can be used to update multiple consecutive parameters of a Control block within a single Modbus transaction.

The updated values can subsequently be verified by executing an FC03 – Read Holding Registers request over the same address range.

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual

- Example – Modbus TCP Master

PowerHud Modbus Tester

File Setup Functions Display Live Chart About Help

Tx Count: 8 | Error Count: 0 | Connection Status: Connected

Connection Settings

IP Serial

Protocol TCP IP Address 192.168.178.178 Port 502 Timeout (ms) 3000 Delay Between Polls (ms) 25

Disconnect

Modbus Settings

Function F:15 F:16 Slave Id Register Start Count Poll Rate (ms)

16-Write Multiple Registers 1 8 2 1000

Values | To change the display format, right click on the values

Address	Write Multiple Register
8	0
9	1

16-Write Multiple Registers

Address: [9]

Enter value (-32767 to 32767)

Cancel Send

Free Modbus Tester | Version 3.0.0.1 | 8/10/2010 | Dinko Drazanovic | www.powerhud.com

Document Name	Rev	Description
EDULCOWATER SMART	2.0	EducoWater Smart Actuators Reference Manual