YAMAHA

PSR-S950
PSR-S750

Digital Workstation

Data List / Daten-Liste / Liste des données / Lista de datos

Voice List 2
Voice-Liste
Liste des voix
Lista de voces

Mega Voice Map 21
Sound-Zuordnungen der Mega Voices
Carte des voix Mega
Mapa de Mega Voice

Drum/key Assignment List 23
Liste der Tastenzuordnungen der Schlaginstrumente
Liste d'assignation instrument de batterie/touche du clavier
Lista de asignación de teclas/batería

Style List 35
Liste der Styles
Liste des styles
Lista de estilos

Multi Pad Bank List 38
Multi-Pad-Bank-Liste
Liste des banques multi-pads
Lista de bancos de Multi Pad

Direct Access Chart 39
Tabelle Direktzugriff
Feuille d'accès direct
Gráfico de acceso directo

Chord Types Recognized in the Fingered Mode 41
Im Fingered-Modus erkannte Akkordarten
Types d'accords reconnus en mode Fingered
Tipos de acordes reconocidos en el modo Fingered (digitado)

Effect Type List 42
Liste der Effekttypen
Liste des types d'effet
Lista de tipos de efecto

Effect Parameter List 48
Liste der Effektparameter
Liste des paramètres d'effets
Lista de parámetros de efectos

Effect Data Assign Table 60
Effektdaten-Zuordnungstabelle
Tableau d'assignation des données d'effets
Tabla de asignación de datos para efectos

Vocal Harmony Parameter List (PSR-S950) 63
Liste der Vokalharmonie-Parameter (PSR-S950)
Liste des paramètres liés à l'harmonie vocale (PSR-S950)
Lista de parámetros de armonía vocal (PSR-S950)

Parameter Chart 69
Parametertabelle
Tableau des paramètres
Gráfico de parámetros

MIDI Data Format 79
MIDI-Datenformat
Format des données MIDI
Formato de datos MIDI

Song System Exclusive Message List 96
Liste der System-Exclusive-Meldungen der Songs
Liste des messages exclusifs au système demorceaux
Lista de mensajes exclusivos del sistema de canciones

Song Meta Event List 96
Liste der Meta-Events der Songs
Liste des métaévénements des morceaux
Lista de meta-eventos de canciones

MIDI Implementation Chart 97
MIDI-Implementierungstabelle
Tableau d'implémentation MIDI
Gráfico de implementacíon MIDI

EN
DE
FR
ES

U.R.G., Digital Musical Instruments Division

© 2012 Yamaha Corporation

208PO-A0

PSR-S950

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Piano	ConcertGrand	0	115	1	Live!
	PopGrand	104	5	1	Live!
	RockPiano	104	4	1	Live!
	AmbientPiano	104	3	1	Live!
	CocktailPiano	104	0	4	Live!
	MIDIGrand	104	0	3	Live!
	MIDIGrandPad	104	1	3	Live!
	MIDIGrandSyn	104	1	1	Live!
	PianoOrchestra	104	2	1	Live!
	Harpsichord	8	32	113	S.Articulation!
	GrandPiano	0	113	1	Live!
	WarmGrand	0	114	1	Live!
	BrightPiano	0	112	2	Live!
	OctavePiano1	0	113	4	Live!
	OctavePiano2	0	114	4	Live!
	HonkyTonk	0	112	4	Regular
	GrandHarpsi	0	113	7	Live!
E.Piano	SparkleStack	0	121	6	Cool!
	SweetDX	104	0	6	Cool!
	BalladDX	0	124	6	Cool!
	DX Dynamics	0	123	6	Cool!
	BalladBells	104	2	6	Cool!
	SuitcaseEP	0	118	5	Cool!
	VintageEP	0	116	5	Regular
	CP80	0	113	3	Regular
	MidnightDX	104	1	6	Cool!
	DreamDX	104	3	6	Cool!
	GalaxyEP	0	114	5	Cool!
	TremoloEP	0	113	5	Cool!
	StageEP	0	117	5	Regular
	SmoothTine	0	119	6	Regular
	ElectricPiano	0	119	5	Cool!
	Clavi	0	112	8	Regular
	WahClavi	0	113	8	Regular
	PhaseClavi	0	115	8	Regular
Strings	ConcertStrings	8	32	50	S.Articulation!
	StudioStrings	8	32	49	S.Articulation!
	Strings	0	117	50	Live!
	MovieStrings	0	123	49	Regular
	TremoloStrings	0	113	45	Regular
	Violin	0	113	41	Sweet!
	Pizzicato	0	113	46	Live!
	Spiccato	0	120	49	Regular
	OrchestralHarp	104	1	47	Regular
	TheatreOrchestra	104	1	50	Regular
	Strings f	0	119	49	Regular
	Strings mf	0	118	49	Regular
	Strings p	0	117	49	Regular
	Allegro	0	122	50	Live!
	TremoloBowing	8	34	49	S.Articulation!
	DiscoStrings1	0	123	50	Regular
	DiscoStrings2	0	124	50	Regular
	DynamicStrings	0	124	49	Regular
	MellowHarp	104	0	47	Regular
	SymphonicUnison	104	0	50	Regular
	SynthStrings1	0	112	51	Regular
	SynthStrings2	0	113	51	Regular
	Spiccato	8	33	49	S.Articulation!
	Tutti	0	120	50	Regular
	OrchestraHit	0	112	56	Regular
	Mandolin	0	114	26	Sweet!
	Hackbrett	104	2	47	Regular
	Zither1	104	1	16	Regular
	Zither2	104	0	16	Regular
	Banjo	104	0	106	Regular
	Watariyat	0	125	49	Regular
	Er Hu	0	113	111	Regular
	Kanoun	0	113	108	Regular
	Oud	0	113	106	Regular
	Pi Pa	0	119	106	Regular

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Strings	Sitar1	104	0	105	Regular
	Sitar2	0	113	105	Regular
	Koto	0	112	108	Regular
	Shamisen	0	112	107	Regular
	Hackbrett2	0	113	47	Regular
	ChamberStrings	0	112	50	Regular
	SoloViolin	0	112	41	Regular
	Viola	0	112	42	Regular
	Cello	0	112	43	Regular
	Contrabass	0	112	44	Regular
	Fiddle	0	112	111	Regular
	OberStrings	0	113	52	Regular
	Banjo2	0	112	106	Regular
Guitar&Bass	StageLead	8	38	6	S.Articulation!
	OverdriveWah	8	39	6	S.Articulation!
	VintageSpring	8	54	4	S.Articulation!
	LiteChorus	8	53	4	S.Articulation!
	BluesyNight	8	55	4	S.Articulation!
	ConcertGuitar	8	32	1	S.Articulation!
	SteelGuitar	8	32	2	S.Articulation!
	ElectroAcoustic	8	35	1	S.Articulation!
	JazzVintage	8	38	7	S.Articulation!
	JazzArtist	8	39	7	S.Articulation!
	GrungeGuitar	8	40	6	S.Articulation!
	PureVintage	8	42	6	S.Articulation!
	Slapback	104	0	28	Cool!
	ClassicStack	8	41	6	S.Articulation!
	MetalMaster	0	120	31	Regular
	FlamencoGtr	8	33	1	S.Articulation!
	12StringGtr	0	113	26	Live!
	SemiAcoustic	8	33	7	S.Articulation!
	SmoothJazzGtr	8	35	7	S.Articulation!
	PedalSteelAmp	8	52	4	S.Articulation!
	RockLegend	8	34	6	S.Articulation!
	CrunchGtr	8	33	6	S.Articulation!
	VintageAmp	8	40	4	S.Articulation!
	SingleCoilClean	8	39	4	S.Articulation!
	GuitarHero	8	32	6	S.Articulation!
	NylonGuitar	8	34	1	S.Articulation!
	FolkGuitar	8	33	2	S.Articulation!
	JazzClean	8	32	7	S.Articulation!
	SlideJazz	104	0	27	Cool!
	PedalSteel	8	36	4	S.Articulation!
	VintageLead	0	125	28	Cool!
	HalfDrive	8	37	4	S.Articulation!
	BluesGuitar	0	117	30	Cool!
	WarmElectric	8	32	4	S.Articulation!
	HeavyRock	8	32	5	S.Articulation!
	DynamicNylon	0	116	25	Regular
	DynamicSteel	0	116	26	Live!
	WarmSolid	8	33	4	S.Articulation!
	CleanSolid	8	34	4	S.Articulation!
	PedalSteel	0	115	28	Regular
	SlideSolid	0	110	28	Cool!
	70sSolidGtr	8	38	4	S.Articulation!
	CleanElectric	8	35	4	S.Articulation!
	ChorusSolid	0	107	28	Cool!
	SlideClean	0	117	29	Cool!
	SlideNylon	0	117	25	Regular
	SlideSteel	0	118	26	Live!
	JazzSoloGtr	0	116	27	Cool!
	HardFlamenco	0	118	25	Regular
	AlohaGuitar	0	118	27	Regular
	PowerLead	0	115	31	Cool!
	Feedbacker	8	33	5	S.Articulation!
	FunkGuitar	0	116	29	Cool!
	HeavyStack	0	114	31	Regular
	CrunchGuitar	0	113	31	Regular
	ClassicalGtr	0	115	25	Regular
	SteelGuitar	0	117	26	Live!

PSR-S950

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Guitar&Bass	JazzGuitar	0	115	27	Cool!
	DynamicMute	0	118	29	Cool!
	MutedGuitar	0	119	29	Cool!
	VintageAmp	0	115	30	Regular
	VintageStrum	0	126	28	Regular
	VintageOpen	0	123	28	Regular
	SlapSolid	0	108	28	Cool!
	CleanGuitar	0	112	28	Cool!
	NylonMute	0	119	25	Regular
	SteelMute	0	120	26	Live!
	OctaveGuitar	0	113	27	Regular
	BalladSolid	0	109	28	Cool!
	VintageMutedGt	0	115	29	Regular
	VintageRound	104	1	34	Cool!
	VintagePick	104	1	35	Regular
	VintageFlat	104	2	34	Cool!
	VintageMute	104	3	34	Cool!
	HalfMute	0	115	34	Cool!
	AcousticBass	0	112	33	Regular
	VintagePickMute	104	0	35	Cool!
	VintageDyno	104	2	35	Cool!
	FretlessBass	0	112	36	Cool!
	SlapBass	0	112	37	Regular
	ElectricBass	0	114	34	Cool!
	PickBass	0	112	35	Regular
	MellowFinger	0	112	34	Regular
	RockBass	0	114	35	Regular
	FusionBass	0	113	37	Regular
	DynoPickBass	0	113	35	Cool!
	SuperFretless	0	113	36	Regular
	FunkBass	0	112	38	Regular
	LoBass	104	0	40	Regular
	DarkBass	104	1	40	Regular
	MoonBass	104	0	39	Regular
	KickBass	104	1	39	Regular
	ClubBass	104	2	39	Regular
	FatPulse	104	2	40	Regular
	WazzoSaw	104	3	81	Regular
	DeepPoint	104	3	39	Regular
	TightBass	104	3	40	Regular
	Competitor	104	4	39	Regular
	1o1Sub	104	5	39	Regular
	LittleBassSynth	104	6	39	Regular
	TeknoBass	104	7	39	Regular
	PercPunch	104	8	39	Regular
	SquareBass	104	4	40	Regular
	TranceBass	104	9	39	Regular
	SubCutBass	104	5	40	Regular
	DynoAcidBass	104	10	39	Regular
	MiniSub	104	6	40	Regular
	FatSineRes	104	11	39	Regular
	BalladBass	104	7	40	Regular
	VeloMaster	104	17	82	Regular
	SubBass	0	114	40	Regular
	HardBass	0	114	39	Regular
	ResoBass	0	112	39	Regular
	HouseBass	0	116	39	Regular
	BigDrone	0	118	39	Regular
	TB Bass	0	117	40	Regular
	Bass&Cymbal	0	114	33	Regular
Saxophone	Saxophone	8	32	83	S.Articulation!
	BigBandSax	8	35	83	S.Articulation!
	JazzTenor	0	125	67	Sweet!
	PopTenor	0	127	67	Sweet!
	BalladTenor	0	126	67	Sweet!
	SopranoSax	0	113	65	Sweet!
	AltoSax	0	114	66	Sweet!
	TenorSax	0	117	67	Sweet!
	RockSax	8	33	83	S.Articulation!
	GrowlSax	0	111	67	Sweet!

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Saxophone	SaxSection	0	116	67	Live!
	SaxSectionSoft	0	121	67	Live!
	SaxSectionHard	0	122	67	Live!
	SaxAppeal	0	123	67	Live!
	BigBandSaxes	0	110	67	Regular
	BigBandUnison	0	109	67	Regular
	BigBandOctave	0	108	67	Regular
	Moonlight	0	115	72	Regular
	BalladSection	0	119	67	Regular
	BaritoneSax	0	112	68	Regular
Flute&Woodwind	OrchFlute	104	0	74	Sweet!
	OrchOboe	104	0	69	Sweet!
	OrchClarinet	104	0	72	Live!
	GermanClarinet	104	2	72	Regular
	OrchBassoon	104	0	71	Sweet!
	Flutes&Oboes	104	2	74	Regular
	Clarinet&Flutes	104	1	72	Regular
	Clarinet&Oboe	104	1	69	Regular
	DoubleReeds	104	2	69	Regular
	OrchWoodwind	104	1	71	Regular
	ClassicalFlute	0	115	74	Sweet!
	Oboe	0	113	69	Sweet!
	Clarinet	0	114	72	Sweet!
	EnglishHorn	0	112	70	Regular
	Bassoon	0	112	71	Regular
	Flute	0	114	74	Sweet!
	Piccolo	0	112	73	Regular
	PanFlute	0	113	76	Sweet!
	AltoFlutes	104	1	74	Regular
	FluteEnsemble	0	116	74	Regular
	Nay	0	114	78	Regular
	Di Zi	0	118	74	Regular
	Sheng	0	116	110	Regular
	Shakuhachi	0	112	78	Regular
	Bagpipe	0	112	110	Regular
	Recorder	0	112	75	Regular
	EthnicFlute	0	112	76	Regular
	PanFlute	0	113	74	Regular
	Ocarina	0	112	80	Regular
	Whistle	0	112	79	Regular
	Clarinet	0	112	72	Regular
	Oboe	0	112	69	Regular
	Flute	0	112	74	Regular
Organ	WhiterBars	8	32	30	S.Articulation!
	AllBarsOut	8	32	31	S.Articulation!
	JazzRotary	8	32	114	S.Articulation!
	ClassicBars	8	34	30	S.Articulation!
	Organ-a-Gogo	104	0	17	Cool!
	CurvedBars	0	121	17	Cool!
	EvenBars	0	111	17	Cool!
	VintageFast	0	127	17	Cool!
	RotorOrgan	0	117	19	Cool!
	JazzOrgan	0	117	17	Cool!
	RockRotary	8	33	114	S.Articulation!
	ProgRockOrgan	8	33	30	S.Articulation!
	Hold It Fast	0	111	18	Cool!
	R&B Tremolo	0	111	19	Cool!
	Organ	0	118	19	Cool!
	OrganAccomp1	0	108	18	Regular
	OrganAccomp2	0	107	18	Regular
	OrganAccomp3	0	106	18	Regular
	OrganAccomp4	0	105	18	Regular
	OrganAccomp5	0	104	18	Regular
	PipeOrgan	0	112	20	Regular
	ChapelOrgan1	0	113	20	Regular
	ChapelOrgan2	0	114	20	Regular
	ChapelOrgan3	0	115	20	Regular
	MellowDraw	0	115	18	Regular
	Harmonium Double	0	114	21	Regular
	Harmonium Triple	0	115	21	Regular

PSR-S950

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Organ	TwoChannels	0	109	18	Cool!
	EuroOrgan	0	118	17	Regular
	FullRocker	0	115	19	Cool!
	BallroomOrgan	0	115	4	Regular
	FullTheatre	0	127	19	Regular
	SweetTheatre	0	126	19	Regular
	Tibia Full	104	5	18	Regular
	Tibia 16&4	104	8	17	Regular
	Tibia 8&4	104	9	17	Regular
	Vox&Tibia	104	10	17	Regular
	Tibia 8	104	6	18	Regular
	Vox 8	104	7	18	Regular
	Tpt&Kinura	0	125	18	Regular
	WhiterBarsSlow	104	1	18	Cool!
	WhiterBarsFast	104	0	18	Cool!
	AllBarsOutSlow	104	1	19	Cool!
	AllBarsOutFast	104	0	19	Cool!
	AllBarsPhase	104	2	19	Cool!
	JazzSlow	0	126	18	Cool!
	JazzFast	0	127	18	Cool!
Trumpet	Trumpet	8	32	65	S.Articulation!
	SilverTrumpet	8	33	65	S.Articulation!
	GoldenTrumpet	8	34	65	S.Articulation!
	GoldenTrumpet	0	122	57	Sweet!
	BigBandTrumpet	8	37	65	S.Articulation!
	Trombone	0	117	58	Sweet!
	Cornet	0	119	57	Sweet!
	FlugelHorn	0	118	57	Sweet!
	MutedTrumpet	0	114	60	Sweet!
	TrumpetFall	8	38	65	S.Articulation!
	SilverTrumpet	0	121	57	Sweet!
	MellowTrumpet	0	120	57	Sweet!
	Trumpet	0	115	57	Sweet!
	TrumpetShake	8	35	65	S.Articulation!
	AlpBass	0	113	34	Regular
	Tuba	104	0	59	Regular
	BaritoneHorn	0	113	59	Regular
	BaritoneHit	0	114	59	Regular
Brass	BigBandBrass	8	37	57	S.Articulation!
	SmoothBrass	8	36	57	S.Articulation!
	DynamicBrass	0	127	62	Regular
	PowerBrass	0	121	63	Regular
	AccentBrass	0	109	62	Regular
	FrenchHorns	0	112	61	Live!
	SymphonyBrass	0	119	61	Regular
	Brass f	0	108	62	Regular
	Brass mf	0	110	62	Regular
	Brass p	0	111	62	Regular
	BrassFalls f	8	34	57	S.Articulation!
	BrassFalls mf	8	35	57	S.Articulation!
	BrassBand	0	123	57	Regular
	SoftHorns	0	117	61	Regular
	SoftTrombones	0	118	61	Regular
	BrassShake	8	32	57	S.Articulation!
	AccentFalls	8	38	57	S.Articulation!
	Sforzando	0	105	62	Regular
	SforzandoFall	0	107	62	Regular
	SymphonyHorns	0	115	61	Live!
	BrassDynamics	0	106	62	Regular
	PopBrass	0	117	63	Live!
	HyperBrass	0	118	63	Live!
	SmallBrass	0	120	61	Live!
	BallroomBrass	0	113	60	Regular
	OctaveBrass	0	116	63	Live!
	OberBrass	0	113	64	Regular
	ThinthBrass	104	0	63	Regular
	BrassProfit	104	1	63	Regular
	SlowPWMBrass	104	2	63	Regular
	FastPWMBrass	104	6	63	Regular
	SoftVeloBrass	0	120	63	Regular

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Brass	80sBrass	0	113	63	Regular
	AnalogBrass	0	112	64	Regular
	SoftAnalog	0	114	64	Regular
	FunkyAnalog	0	115	63	Regular
	TechnoBrass	0	114	63	Regular
	OberHorns	0	115	64	Regular
	FatSynthBrass	0	116	64	Regular
Accordion	Harmonica	0	112	23	Sweet!
	BluesHarp	0	114	23	Regular
	FrenchMusette	0	119	22	Regular
	MasterAccord	0	118	22	Regular
	JazzAccordion	0	120	22	Regular
	TangoAccordion	0	114	24	Regular
	Cassotto	104	0	22	Regular
	FullRegister	104	2	22	Regular
	Steirisch	0	117	22	Regular
	Cajun	104	3	22	Regular
	ModernHarp	0	113	23	Regular
	Clari8'&4'	104	1	22	Regular
	Bandoneon	0	113	24	Regular
	MasterBass	0	122	22	Regular
	MusetteBass	0	123	22	Regular
	AccordionBass	0	121	22	Regular
	TangoBass	0	115	24	Regular
	FullRegBass	104	5	22	Regular
	CajunBass	104	6	22	Regular
Choir&Pad	GospelVoices	0	116	53	Live!
	Humming	0	118	53	Live!
	HahChoir	0	114	53	Regular
	SweetHeaven	0	118	89	Regular
	DreamHeaven	0	121	89	Regular
	Mmh	0	117	53	Live!
	GothicVox	0	113	54	Regular
	BellHeaven	0	119	89	Regular
	PanHeaven	0	120	89	Regular
	ProHeaven	0	122	89	Regular
	CrossPhase	104	1	102	Regular
	GalaxyPad	104	3	89	Regular
	NightMotion	104	4	89	Regular
	MorningDew	104	0	95	Regular
	Aerosphere	104	1	95	Regular
	NewAtmosphere	104	4	90	Regular
	VPSoft	104	0	90	Regular
	HotSwell	104	2	96	Regular
	DarkFatSaw	104	2	90	Regular
	VaporPad	104	1	90	Regular
	SpaceRider	104	1	96	Regular
	PearlsPad	104	2	89	Regular
	BreathPad	104	0	92	Regular
	NobleMan	104	1	89	Regular
	DouxFlange	104	3	96	Regular
	LightPad	104	2	52	Regular
	ButterStrings	104	2	51	Regular
	MediumTunePad	104	0	51	Regular
	NylonPad	104	0	100	Regular
	DarkLight	104	3	90	Regular
	AnaDayz	104	3	52	Regular
	BrightPadTrance	104	4	91	Regular
	OctStrings	104	4	51	Regular
	ChillinChords	104	6	52	Regular
	BrightPopPad	104	3	51	Regular
	PremiumPad	104	0	52	Regular
	SoftEnsemble	104	1	51	Regular
	80sPad	104	1	52	Regular
	BrightPadClassic	104	3	91	Regular
	AmbientPad	104	0	89	Regular
	BrightFatSaw	104	5	91	Regular
	TranceMW	104	0	96	Regular
	EarlyDigital	104	0	94	Regular
	Bellsphere	104	5	89	Regular

PSR-S950

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Choir&Pad	SixthSense	104	2	102	Regular
	PercPad	104	0	102	Regular
	SuperDarkPad	0	119	90	Regular
	AnalogPad	0	120	90	Regular
	DarkAngelPad	0	121	90	Regular
	LitePad	0	122	90	Regular
	PopPad	0	112	91	Regular
	GloriousPhase	0	114	91	Regular
	AnalogSwell	0	119	96	Regular
	Skydiver	0	112	102	Regular
	HipaStrings	0	114	96	Regular
	BrightSawPad	0	113	91	Regular
	BigOctavePad	0	115	91	Regular
	GoldenAge	0	115	89	Regular
	Solaris	0	114	95	Regular
	Insomnia	0	113	95	Regular
	Mediterrain	0	114	100	Regular
	OberSweep	0	115	96	Regular
	TimeTravel	0	116	89	Regular
	Bubblespace	0	113	102	Regular
	MagicBell	8	32	121	S.Articulation!
	MellowPad	0	117	96	Regular
	NeoWarmPad	0	115	90	Regular
	CyberPad	0	113	100	Regular
	BrightOber	0	113	96	Regular
	DarkPad	0	118	96	Regular
Synth&FX	ClubLead	104	3	63	Regular
	HPFDance	104	0	91	Regular
	DetunedSawOct	104	8	82	Regular
	DancyHook	104	9	82	Regular
	VinalogSaw	104	3	82	Regular
	TalkModLead	104	0	88	Regular
	SubLead	104	0	81	Regular
	SoftSaw	104	16	82	Regular
	FusionLead	104	15	82	Regular
	BleepLead	104	0	85	Regular
	Oxygen	0	122	82	Regular
	Matrix	0	123	82	Regular
	WireLead	0	120	82	Regular
	SoftR&B	0	119	81	Regular
	EarlyLead	0	118	82	Regular
	LektroCodes	104	2	85	Regular
	SimpleComp	104	12	82	Regular
	BalladComp	104	6	89	Regular
	HeavenBell	104	0	101	Regular
	BrightPadBell	104	7	89	Regular
	SoftSquare	104	5	81	Regular
	WildPWM	104	4	81	Regular
	DetunedVintage	104	1	85	Regular
	PWMLead	104	1	82	Regular
	BrassyLead	104	5	63	Regular
	PunchLead	104	7	82	Regular
	FlangeFilter	104	2	82	Regular
	MouthLead	104	0	82	Regular
	ResonantClavi	104	2	91	Regular
	ResonanceComp	104	4	63	Regular
	TrancePerc	104	5	82	Regular
	Chordmaster	104	13	82	Regular
	DigitalSeq	104	2	88	Regular
	AnalogSeq	104	3	88	Regular
	TranceSeq1	104	4	88	Regular
	TranceSeq2	104	5	88	Regular
	TranceSeq3	104	1	91	Regular
	PercSeqFS	104	6	88	Regular
	PercSeqFM1	104	7	88	Regular
	PercSeqFM2	104	8	88	Regular
	SynthSticks	104	0	107	Regular
	SazFeeze	104	0	98	Regular
	EasternAir	104	1	98	Regular
	Xtune	104	1	88	Regular

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Synth&FX	PitchFall	104	0	104	Regular
	PercSeqSaw	104	11	82	Regular
	PercSeqHipa	104	9	88	Regular
	Attack	104	4	82	Regular
	PWMPercussion	104	6	82	Regular
	Nomad	104	1	105	Regular
	ChorusSawLead	104	10	82	Regular
	FaaatComp	104	4	52	Regular
	FatSawHook	104	7	52	Regular
	TechGlide	104	14	82	Regular
	DanceChords	104	5	52	Regular
	DanceHook	0	112	87	Regular
	OctaveHook	0	113	87	Regular
	HipaLead	0	118	85	Regular
	PunchyHook	0	127	82	Regular
	CryingLead	0	114	88	Regular
	HipLead	0	113	81	Regular
	HopLead	0	117	81	Regular
	TechLead	0	117	85	Regular
	Tekkline	0	116	85	Regular
	SoftMini	0	124	81	Regular
	TranceLead	0	121	81	Regular
	FireWire	0	116	82	Regular
	Analogon	0	115	82	Regular
	Skyline	0	115	85	Regular
	OrbitSine	0	126	81	Regular
Perc&Drum	Vibraphone	0	112	12	Regular
	JazzVibes	0	113	12	Regular
	Vibes&Flutes	0	114	12	Regular
	Marimba	0	112	13	Regular
	Xylophone	0	112	14	Regular
	Vibes&JazzGtr	8	33	12	S.Articulation!
	Celesta	0	112	9	Regular
	Glockenspiel	0	112	10	Regular
	SteelDrums	0	112	115	Regular
	TubularBells	0	112	15	Regular
	Kalimba	0	112	109	Regular
	Dulcimer	0	112	16	Regular
	Timpani	0	112	48	Regular
	StackBell	104	8	89	Regular
	NiceBell	104	9	89	Regular
	MusicBox	0	112	11	Regular
	RealDrums	127	0	92	Drums
	AcousticKit	127	0	90	Drums
	RockKit	127	0	91	Drums
	PowerKit1	127	0	88	Drums
	PowerKit2	127	0	89	Drums
	BrushKit	127	0	41	Drums
	AnalogT8Kit	127	0	59	Drums
	AnalogT9Kit	127	0	60	Drums
	BreakKit	127	0	58	Drums
	HipHopKit	127	0	57	Drums
	DanceKit	127	0	28	Drums
	StudioKit	127	0	87	Drums
	HitKit	127	0	5	Drums
	JazzKit	127	0	33	Drums
	PopLatinKit	126	0	44	SFX Kit
	RoomKit	127	0	9	Drums
	ElectroKit	127	0	25	Drums
	AnalogKit	127	0	26	Drums
	SymphonyKit	127	0	49	Drums
	CubanKit	126	0	41	SFX Kit
	TurkishKit	126	0	68	SFX Kit
	ArabicKit1	126	0	37	SFX Kit
	ArabicMixtureKit	126	0	65	SFX Kit
	IndianKit	126	0	115	SFX Kit
	ChineseKit	126	0	125	SFX Kit
	ChineseMixture Kit	127	0	128	SFX Kit
	SFX Kit1	126	0	1	SFX Kit
	SFX Kit2	126	0	2	SFX Kit

PSR-S950

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Perc&Drum	NoisesKit	126	0	9	SFX Kit
OrganFlutes	OrganFlutes	0	126	17	OrganFlutes
	USDSmile	0	126	17	OrganFlutes
	ReggaeBars	0	126	17	OrganFlutes
	WarmTheatre	0	126	17	OrganFlutes
	OrganPops	0	126	17	OrganFlutes
	RockOrgan	0	126	17	OrganFlutes
	SoulPercussion	0	126	17	OrganFlutes
	GospelTruth	0	126	17	OrganFlutes
	PadOrgan	0	126	17	OrganFlutes
	FullOrgan	0	126	17	OrganFlutes
	StringBars	0	126	17	OrganFlutes
	LatinSpin	0	126	17	OrganFlutes
	ShadyBars	0	126	17	OrganFlutes
	FunkOrgan	0	126	17	OrganFlutes
	BalladOrgan	0	126	17	OrganFlutes
	RichBars	0	126	17	OrganFlutes
	TrumpetBars	0	126	17	OrganFlutes
	SoulBars	0	126	17	OrganFlutes
	ClariBars	0	126	17	OrganFlutes
	JazzSquabble	0	126	17	OrganFlutes

PSR-S950 (Category: Legacy)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Piano	BalladStack	0	114	3	Regular
	MIDIGrand	0	112	3	Regular
	Harpsichord	0	112	7	Live!
E.Piano	HyperTines	0	113	6	Regular
	VenusEP	0	114	6	Regular
	SuperDX	0	117	6	Regular
	PolarisEP	0	115	5	Regular
	DX Modern	0	112	6	Regular
	NewTines	0	116	6	Regular
	JazzChorus	0	118	6	Regular
	PhaseEP	0	120	5	Regular
	ModernEP	0	115	6	Regular
	FunkEP	0	112	5	Regular
	ChorusBell	0	120	6	Regular
	StereoClavi	0	114	8	Regular
Strings	Harp	0	112	47	Regular
	SlowStrings	0	113	50	Regular
	StringFalls	0	121	49	Regular
	AnalogStrings	0	112	52	Regular
	Strings	0	112	49	Regular
	OrchStrings	0	113	49	Regular
	Symphonic	0	114	49	Regular
	ConcertoStrings	0	115	49	Regular
	BowStrings	0	116	49	Regular
	TremoloStrings	0	112	45	Regular
	Pizzicato	0	112	46	Regular
	Orchestra	0	116	50	Live!
	Orch&Flute	0	119	50	Regular
	Orch&Oboe	0	121	50	Regular
	Orch&Horns	0	118	50	Regular
	Marcato	0	115	50	Regular
	StringQuartet	0	114	50	Regular
	Sitar3	0	112	105	Regular
Guitar&Bass	TremoloSolid	0	111	28	Cool!
	ElectricGtr	0	114	29	Cool!
	60sClean	0	117	28	Regular
	FolkGuitar	0	112	26	Regular
	MutedGuitar	0	112	29	Regular
	FunkGuitar	0	113	29	Regular
	SolidChord	0	121	28	Regular
	SolidGuitar	0	118	28	Regular
	CampfireGtr	0	115	26	Regular
	Electric12Str	0	119	28	Regular
	DXJazzGuitar	0	117	27	Regular
	SmoothLead	0	119	27	Regular
	PowerChord	0	117	31	Regular
	RockGuitar	0	116	30	Regular
	VodooLead	0	116	31	Regular
	TremoloGuitar	0	113	28	Regular
	WahGuitar	0	122	28	Regular
	LeadGuitar	0	114	30	Regular
	18String	0	119	26	Regular
	ChorusGuitar	0	124	28	Regular
	VintageTrem	0	120	28	Regular
	DeepChorus	0	114	28	Regular
	BrightClean	0	116	28	Regular
	DistortionGtr	0	112	31	Regular
	OverdriveGtr	0	112	30	Regular
	FeedbackGtr	0	113	30	Regular
	WarmSolid	104	2	28	Cool!
	CleanSolid	104	3	28	Cool!
	GuitarHero	104	0	31	Cool!
	70sSolidGtr	104	1	28	Cool!
	HalfDrive	104	0	30	Cool!
	HeavyRock	104	1	31	Cool!
	ClickBass	0	115	39	Regular
	PunchyBass	0	117	39	Regular
	AnalogBass	0	112	40	Regular
	DX FunkBass	0	113	38	Regular
	DrySynthBass	0	116	40	Regular

PSR-S950 (Category: Legacy)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Guitar&Bass	80sSynthBass	0	115	40	Regular
	HiQBass	0	113	39	Regular
Saxophone	Saxophone	104	0	67	Sweet!
	GrowlSax	0	118	67	Regular
	SopranoSax	0	112	65	Regular
	AltoSax	0	112	66	Regular
	TenorSax	0	112	67	Regular
	SaxStack	0	124	67	Regular
	WoodwindsEns	0	113	67	Regular
	SaxyMood	0	120	67	Regular
Organ	Trumpet 8	0	124	17	Regular
	Kinura 8	0	123	17	Regular
	Trumpet 16&8	0	124	18	Regular
	FullRocker2	104	3	19	Cool!
	Tibia 8&4 Acmp	0	122	17	Regular
	Tibia 8 Acmp	0	122	18	Regular
	Vox 8 Acmp	0	123	18	Regular
	Vox&Tibia Acmp	0	125	17	Regular
	Tibia 16&4 Acmp	0	114	17	Regular
	Tibia Full Acmp	0	114	18	Regular
	DanceOrgan	0	113	18	Regular
	ClickOrgan	0	112	18	Regular
	ReedOrgan	0	112	21	Regular
	RotarySwitch	0	110	18	Cool!
	RotaryDrive	0	116	19	Regular
	GospelOrgan	0	119	17	Regular
	PurpleOrgan	0	114	19	Regular
	RockOrgan1	0	112	19	Regular
	RockOrgan2	0	119	19	Regular
	RockOrgan3	0	113	19	Regular
	60sOrgan	0	116	18	Regular
	JazzOrgan1	0	112	17	Regular
	JazzOrgan2	0	113	17	Regular
	JazzOrgan3	0	120	17	Regular
	DrawbarOrgan1	0	120	18	Regular
	DrawbarOrgan2	0	115	17	Regular
	BrightDraw	0	116	17	Regular
	PercOrgan	0	119	18	Regular
	ElectricOrgan	0	118	18	Regular
Trumpet	Tuba	0	112	59	Regular
	MutedTrumpet	0	112	60	Regular
	FlugelHorn	0	113	57	Regular
	SoloTrombone	0	112	58	Regular
	JazzTrumpet	0	116	57	Regular
	Trombone	0	116	58	Regular
	SoftTrombone	0	115	58	Regular
	SoloTrumpet	0	112	57	Regular
	MellowTrombone	0	114	58	Regular
Brass	SoftBrass	0	123	62	Regular
	Sforzando	0	125	62	Regular
	SmallBrass	0	117	62	Regular
	BrassSection	0	112	62	Regular
	HybridComp	0	119	63	Regular
	NaturalBrass	0	124	62	Regular
	BrightBrass	0	120	62	Regular
	Hybrihorn	0	113	61	Regular
	HighBrass	0	115	62	Regular
	BigBandBrass	0	113	62	Regular
	PopBrass	0	118	62	Regular
	BrassCombo	0	115	67	Regular
	BreathBrass	0	116	61	Regular
	BigBrass	0	121	62	Regular
	MellowBrass	0	116	62	Regular
	Hybripad	0	114	61	Regular
	FullHorns	0	114	62	Regular
	SmoothTrombone	0	118	58	Regular
	TrumpetEns	0	122	62	Regular
	MellowHorns	0	119	62	Regular
	BrassHit	0	126	62	Regular
	SynthBrass	0	112	63	Regular

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Brass	TbnSection	0	113	58	Regular
Accordion	Musette	0	112	22	Regular
	Accordion	0	116	22	Regular
	SmallAccordion	0	115	22	Regular
	BallroomAcc	0	112	24	Regular
	SoftAccordion	0	114	22	Regular
	TuttiAccordion	0	113	22	Regular
Choir&Pad	Sunbeam	0	123	89	Regular
	UuhChoir	0	115	53	Regular
	HahPad	0	116	95	Regular
	Voices	0	113	55	Regular
	Choir	0	112	53	Regular
	AirChoir	0	112	55	Regular
	VoxHumana	0	112	54	Regular
	PsychoPad	0	118	102	Regular
	FarEast	0	112	98	Regular
	Disclosure	0	116	90	Regular
	Mystery	0	113	98	Regular
	Sirius	0	114	102	Regular
	S&H Groove	0	115	102	Regular
	VeloAshrami	0	116	102	Regular
	EveningStars	0	117	102	Regular
	AngelVibes	0	114	99	Regular
	GlassPad	0	114	94	Regular
	DX Pad	0	112	93	Regular
	Symbiont	0	113	89	Regular
	DarkMoon	0	113	90	Regular
	Ionosphere	0	115	95	Regular
	Millennium	0	117	89	Regular
	Atmosphere	0	112	100	Regular
	Equinox	0	112	95	Regular
	Fantasia	0	112	89	Regular
	Stargate	0	114	89	Regular
	Area51	0	112	90	Regular
	DigitalPad	0	115	94	Regular
	Dunes	0	114	90	Regular
	Messenger	0	116	96	Regular
	Wave2001	0	112	96	Regular
	XenonPad	0	112	92	Regular
Synth&FX	Adrenaline	0	113	85	Regular
	ProLead	0	113	84	Regular
	FunkyLead	0	121	82	Regular
	Portatone	0	112	85	Regular
	Stardust	0	112	99	Regular
	AeroLead	0	112	84	Regular
	MiniLead	0	114	81	Regular
	SunBell	0	113	99	Regular
	HiBias	0	116	81	Regular
	VinylLead	0	115	81	Regular
	PanLead	0	122	81	Regular
	StringBells	0	124	89	Regular
	Padbells	0	126	89	Regular
	BigTune	0	118	90	Regular
	TrumpetSaw	0	125	82	Regular
	Paraglide	0	114	85	Regular
	Robolead	0	124	82	Regular
	Fargo	0	119	82	Regular
	BigLead	0	113	82	Regular
	Warp	0	117	82	Regular
	Impact	0	113	88	Regular
	UnderHeim	0	112	88	Regular
	CrystalEyes	0	125	89	Regular
	MelodyMaker	0	117	90	Regular
	AttackSaw	0	126	82	Regular
	PercSquare	0	123	81	Regular
	SquareLead	0	112	81	Regular
	SawLead	0	112	82	Regular
	PopLead	0	120	81	Regular
	BrightMini	0	125	81	Regular
	Blaster	0	114	82	Regular

PSR-S950 (Category: Legacy)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Synth&FX	TinyLead	0	118	81	Regular
Perc&Drum	ArabicKit2	126	0	36	SFX Kit
	RockKit	127	0	17	Drums
	StandardKit1	127	0	1	Drums
	StandardKit2	127	0	2	Drums

PSR-S950 (Category: StyleVoices)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Strings	SmallStrings	8	0	49	MegaVoice
	LargeStrings	8	0	50	MegaVoice
Guitar&Bass	SingleCoil	8	3	4	MegaVoice
	JazzGuitar	8	0	7	MegaVoice
	NylonGuitar	8	0	1	MegaVoice
	SteelGuitar	8	0	2	MegaVoice
	12StringGtr	8	1	3	MegaVoice
	HiStringGtr	8	0	3	MegaVoice
	SolidGuitar1	8	1	4	MegaVoice
	SolidGuitar2	8	2	4	MegaVoice
	CleanGuitar	8	0	4	MegaVoice
	OverdriveGtr	8	0	5	MegaVoice
	DistortionGtr	8	0	6	MegaVoice
	VintageRound	8	1	18	MegaVoice
	VintageFlat	8	2	18	MegaVoice
	VintagePick	8	1	19	MegaVoice
	AcousticBass	8	0	17	MegaVoice
	ElectricBass	8	0	18	MegaVoice
	PickBass	8	0	19	MegaVoice
	FretlessBass	8	0	20	MegaVoice
Brass	TenorSax	8	0	83	MegaVoice
	Trumpet	8	0	65	MegaVoice
	Brass	8	0	57	MegaVoice

PSR-S750

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Piano	GrandPiano	0	113	1	Live!
	WarmGrand	0	114	1	Live!
	BrightPiano	0	112	2	Live!
	BalladStack	0	114	3	Regular
	MIDIGrand	0	112	3	Regular
	OctavePiano1	0	113	4	Live!
	OctavePiano2	0	114	4	Live!
	HonkyTonk	0	112	4	Regular
	Harpsichord	8	32	113	S.Articulation!
	GrandHarpsi	0	113	7	Live!
E.Piano	SparkleStack	0	121	6	Cool!
	SweetDX	104	0	6	Cool!
	DX Dynamics	0	123	6	Cool!
	GalaxyEP	0	114	5	Cool!
	BalladDX	0	124	6	Cool!
	SuitcaseEP	0	118	5	Cool!
	CP80	0	113	3	Regular
	TremoloEP	0	113	5	Cool!
	StageEP	0	117	5	Regular
	VintageEP	0	116	5	Regular
	HyperTines	0	113	6	Regular
	VenusEP	0	114	6	Regular
	SuperDX	0	117	6	Regular
	PolarisEP	0	115	5	Regular
	DX Modern	0	112	6	Regular
	ElectricPiano	0	119	5	Cool!
	NewTines	0	116	6	Regular
	SmoothTine	0	119	6	Regular
	Clavi	0	112	8	Regular
	WahClavi	0	113	8	Regular
	PhaseClavi	0	115	8	Regular
Strings	ConcertStrings	8	32	50	S.Articulation!
	StudioStrings	8	32	49	S.Articulation!
	Strings	0	117	50	Live!
	MovieStrings	0	123	49	Regular
	TremoloStrings	0	113	45	Regular
	Violin	0	113	41	Sweet!
	Pizzicato	0	113	46	Live!
	Spiccato	0	120	49	Regular
	DiscoStrings1	0	123	50	Regular
	DiscoStrings2	0	124	50	Regular
	Strings f	0	119	49	Regular
	Strings mf	0	118	49	Regular
	Strings p	0	117	49	Regular
	DynamicStrings	0	124	49	Regular
	TremoloBowing	8	34	49	S.Articulation!
	Allegro	0	122	50	Live!
	Tutti	0	120	50	Regular
	OrchestraHit	0	112	56	Regular
	Mandolin	0	114	26	Sweet!
	Harp	0	112	47	Regular
	Watariyat	0	125	49	Regular
	Er Hu	0	113	111	Regular
	Kanoun	0	113	108	Regular
	Oud	0	113	106	Regular
	Pi Pa	0	119	106	Regular
	Sitar1	104	0	105	Regular
	Sitar2	0	113	105	Regular
	Banjo	0	112	106	Regular
	Koto	0	112	108	Regular
	Shamisen	0	112	107	Regular
	SynthStrings1	0	112	51	Regular
	SynthStrings2	0	113	51	Regular
	OberStrings	0	113	52	Regular
	SoloViolin	0	112	41	Regular
	Viola	0	112	42	Regular
	Cello	0	112	43	Regular
	Contrabass	0	112	44	Regular
	Fiddle	0	112	111	Regular
	ChamberStrings	0	112	50	Regular

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Strings	Hackbrett	0	113	47	Regular
	Spiccato	8	33	49	S.Articulation!
Guitar&Bass	ConcertGuitar	8	32	1	S.Articulation!
	SteelGuitar	8	32	2	S.Articulation!
	FlamencoGtr	8	33	1	S.Articulation!
	12StringGtr	0	113	26	Live!
	PedalSteel	8	36	4	S.Articulation!
	WarmSolid	8	33	4	S.Articulation!
	CleanSolid	8	34	4	S.Articulation!
	GuitarHero	8	32	6	S.Articulation!
	70sSolidGtr	8	38	4	S.Articulation!
	HeavyRock	8	32	5	S.Articulation!
	NylonGuitar	8	34	1	S.Articulation!
	FolkGuitar	8	33	2	S.Articulation!
	DynamicNylon	0	116	25	Regular
	DynamicSteel	0	116	26	Live!
	HalfDrive	8	37	4	S.Articulation!
	VintageLead	0	125	28	Cool!
	BluesGuitar	0	117	30	Cool!
	WarmElectric	8	32	4	S.Articulation!
	CleanElectric	8	35	4	S.Articulation!
	SlideNylon	0	117	25	Regular
	SlideSteel	0	118	26	Live!
	SlideSolid	0	110	28	Cool!
	SlideClean	0	117	29	Cool!
	PedalSteel	0	115	28	Regular
	AlohaGuitar	0	118	27	Regular
	HardFlamenco	0	118	25	Regular
	JazzSoloGtr	0	116	27	Cool!
	ClassicalGtr	0	115	25	Regular
	SteelGuitar	0	117	26	Live!
	TremoloSolid	0	111	28	Cool!
	ChorusSolid	0	107	28	Cool!
	BalladSolid	0	109	28	Cool!
	DynamicMute	0	118	29	Cool!
	ElectricGtr	0	114	29	Cool!
	PowerLead	0	115	31	Cool!
	Feedbacker	8	33	5	S.Articulation!
	CleanGuitar	0	112	28	Cool!
	SlapSolid	0	108	28	Cool!
	FunkGuitar	0	116	29	Cool!
	JazzGuitar	0	115	27	Cool!
	VintageOpen	0	123	28	Regular
	VintageStrum	0	126	28	Regular
	VintageAmp	0	115	30	Regular
	VintageMutedGt	0	115	29	Regular
	NylonMute	0	119	25	Regular
	SteelMute	0	120	26	Live!
	HeavyStack	0	114	31	Regular
	CrunchGuitar	0	113	31	Regular
	MutedGuitar	0	119	29	Cool!
	OctaveGuitar	0	113	27	Regular
	ElectricBass	0	114	34	Cool!
	AcousticBass	0	112	33	Regular
	DynoPickBass	0	113	35	Cool!
	FretlessBass	0	112	36	Cool!
	SlapBass	0	112	37	Regular
	MellowFinger	0	112	34	Regular
	RockBass	0	114	35	Regular
	SuperFretless	0	113	36	Regular
	PickBass	0	112	35	Regular
	FusionBass	0	113	37	Regular
	FunkBass	0	112	38	Regular
	LoBass	104	0	40	Regular
	DarkBass	104	1	40	Regular
	MoonBass	104	0	39	Regular
	KickBass	104	1	39	Regular
	ClubBass	104	2	39	Regular
	FatPulse	104	2	40	Regular
	WazzoSaw	104	3	81	Regular

PSR-S750

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Guitar&Bass	DeepPoint	104	3	39	Regular
	TightBass	104	3	40	Regular
	Competitor	104	4	39	Regular
	1o1Sub	104	5	39	Regular
	LittleBassSynth	104	6	39	Regular
	TeknoBass	104	7	39	Regular
	PercPunch	104	8	39	Regular
	SquareBass	104	4	40	Regular
	TranceBass	104	9	39	Regular
	SubCutBass	104	5	40	Regular
	DynoAcidBass	104	10	39	Regular
	MiniSub	104	6	40	Regular
	FatSineRes	104	11	39	Regular
	BalladBass	104	7	40	Regular
	VeloMaster	104	17	82	Regular
	SubBass	0	114	40	Regular
	HardBass	0	114	39	Regular
	ResoBass	0	112	39	Regular
	HouseBass	0	116	39	Regular
	BigDrone	0	118	39	Regular
	TB Bass	0	117	40	Regular
	Bass&Cymbal	0	114	33	Regular
Saxophone	Saxophone	8	32	83	S.Articulation!
	BigBandSax	8	35	83	S.Articulation!
	JazzTenor	0	125	67	Sweet!
	PopTenor	0	127	67	Sweet!
	SopranoSax	0	113	65	Sweet!
	BalladTenor	0	126	67	Sweet!
	AltoSax	0	114	66	Sweet!
	TenorSax	0	117	67	Sweet!
	RockSax	8	33	83	S.Articulation!
	GrowlSax	0	111	67	Sweet!
	SaxSection	0	116	67	Live!
	SaxSectionSoft	0	121	67	Live!
	SaxSectionHard	0	122	67	Live!
	SaxAppeal	0	123	67	Live!
	BigBandSaxes	0	110	67	Regular
	BigBandUnison	0	109	67	Regular
	BigBandOctave	0	108	67	Regular
	Moonlight	0	115	72	Regular
	BalladSection	0	119	67	Regular
	BaritoneSax	0	112	68	Regular
Flute&Woodwind	Flute	0	114	74	Sweet!
	Clarinet	0	114	72	Sweet!
	Oboe	0	113	69	Sweet!
	EnglishHorn	0	112	70	Regular
	Bassoon	0	112	71	Regular
	PanFlute	0	113	76	Sweet!
	ClassicalFlute	0	115	74	Sweet!
	Nay	0	114	78	Regular
	Di Zi	0	118	74	Regular
	Sheng	0	116	110	Regular
	Piccolo	0	112	73	Regular
	Flute	0	112	74	Regular
	Clarinet	0	112	72	Regular
	Oboe	0	112	69	Regular
	FluteEnsemble	0	116	74	Regular
	Whistle	0	112	79	Regular
	Shakuhachi	0	112	78	Regular
	Bagpipe	0	112	110	Regular
	Recorder	0	112	75	Regular
	Ocarina	0	112	80	Regular
	PanFlute	0	113	74	Regular
	EthnicFlute	0	112	76	Regular
Organ	JazzRotary	8	32	114	S.Articulation!
	CurvedBars	0	121	17	Cool!
	EvenBars	0	111	17	Cool!
	VintageFast	0	127	17	Cool!
	RotorOrgan	0	117	19	Cool!
	JazzOrgan	0	117	17	Cool!

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Organ	RockRotary	8	33	114	S.Articulation!
	Hold It Fast	0	111	18	Cool!
	R&B Tremolo	0	111	19	Cool!
	Organ	0	118	19	Cool!
	JazzSlow	0	126	18	Cool!
	JazzFast	0	127	18	Cool!
	TwoChannels	0	109	18	Cool!
	FullRocker	0	115	19	Cool!
	EuroOrgan	0	118	17	Regular
	OrganAccomp1	0	108	18	Regular
	OrganAccomp2	0	107	18	Regular
	OrganAccomp3	0	106	18	Regular
	OrganAccomp4	0	105	18	Regular
	OrganAccomp5	0	104	18	Regular
	FullTheatre	0	127	19	Regular
	SweetTheatre	0	126	19	Regular
	BallroomOrgan	0	115	4	Regular
	Harmonium Double	0	114	21	Regular
	Harmonium Triple	0	115	21	Regular
	ChapelOrgan1	0	113	20	Regular
	ChapelOrgan2	0	114	20	Regular
	ChapelOrgan3	0	115	20	Regular
	PipeOrgan	0	112	20	Regular
	Tibia 16&4 Acmp	0	114	17	Regular
	Tibia Full Acmp	0	114	18	Regular
	MellowDraw	0	115	18	Regular
Trumpet	Trumpet	8	32	65	S.Articulation!
	SilverTrumpet	8	33	65	S.Articulation!
	GoldenTrumpet	8	34	65	S.Articulation!
	BigBandTrumpet	8	37	65	S.Articulation!
	TrumpetFall	8	38	65	S.Articulation!
	Cornet	0	119	57	Sweet!
	FlugelHorn	0	118	57	Sweet!
	MutedTrumpet	0	114	60	Sweet!
	Trumpet	0	115	57	Sweet!
	Trombone	0	117	58	Sweet!
	TrumpetShake	8	35	65	S.Articulation!
	GoldenTrumpet	0	122	57	Sweet!
	SilverTrumpet	0	121	57	Sweet!
	MellowTrumpet	0	120	57	Sweet!
	BaritoneHorn	0	113	59	Regular
	BaritoneHit	0	114	59	Regular
	AlpBass	0	113	34	Regular
	Tuba	0	112	59	Regular
Brass	BigBandBrass	8	37	57	S.Articulation!
	SmoothBrass	8	36	57	S.Articulation!
	DynamicBrass	0	127	62	Regular
	PowerBrass	0	121	63	Regular
	AccentBrass	0	109	62	Regular
	FrenchHorns	0	112	61	Live!
	SymphonyBrass	0	119	61	Regular
	Brass f	0	108	62	Regular
	Brass mf	0	110	62	Regular
	Brass p	0	111	62	Regular
	BrassFalls f	8	34	57	S.Articulation!
	BrassFalls mf	8	35	57	S.Articulation!
	BrassBand	0	123	57	Regular
	SoftHorns	0	117	61	Regular
	SoftTrombones	0	118	61	Regular
	BrassShake	8	32	57	S.Articulation!
	AccentFalls	8	38	57	S.Articulation!
	Sforzando	0	105	62	Regular
	SforzandoFall	0	107	62	Regular
	SymphonyHorns	0	115	61	Live!
	BrassDynamics	0	106	62	Regular
	PopBrass	0	117	63	Live!
	HyperBrass	0	118	63	Live!
	SmallBrass	0	120	61	Live!
	BallroomBrass	0	113	60	Regular
	OctaveBrass	0	116	63	Live!

PSR-S750

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Brass	ThinthBrass	104	0	63	Regular
	BrassProfit	104	1	63	Regular
	SlowPWMBrass	104	2	63	Regular
	FastPWMBrass	104	6	63	Regular
	OberBrass	0	113	64	Regular
	SoftVeloBrass	0	120	63	Regular
	80sBrass	0	113	63	Regular
	AnalogBrass	0	112	64	Regular
	SoftAnalog	0	114	64	Regular
	FunkyAnalog	0	115	63	Regular
	TechnoBrass	0	114	63	Regular
	OberHorns	0	115	64	Regular
	FatSynthBrass	0	116	64	Regular
Accordion	FrenchMusette	0	119	22	Regular
	MasterAccord	0	118	22	Regular
	JazzAccordion	0	120	22	Regular
	TangoAccordion	0	114	24	Regular
	Steirisch	0	117	22	Regular
	Harmonica	0	112	23	Sweet!
	ModernHarp	0	113	23	Regular
	BluesHarp	0	114	23	Regular
	Bandoneon	0	113	24	Regular
	Musette	0	112	22	Regular
	MasterBass	0	122	22	Regular
	MusetteBass	0	123	22	Regular
	AccordionBass	0	121	22	Regular
	TangoBass	0	115	24	Regular
Choir&Pad	GospelVoices	0	116	53	Live!
	Humming	0	118	53	Live!
	HahChoir	0	114	53	Regular
	SweetHeaven	0	118	89	Regular
	DreamHeaven	0	121	89	Regular
	Mmh	0	117	53	Live!
	GothicVox	0	113	54	Regular
	BellHeaven	0	119	89	Regular
	PanHeaven	0	120	89	Regular
	ProHeaven	0	122	89	Regular
	CrossPhase	104	1	102	Regular
	GalaxyPad	104	3	89	Regular
	NightMotion	104	4	89	Regular
	MorningDew	104	0	95	Regular
	Aerosphere	104	1	95	Regular
	NewAtmosphere	104	4	90	Regular
	VPSoft	104	0	90	Regular
	HotSwell	104	2	96	Regular
	DarkFatSaw	104	2	90	Regular
	VaporPad	104	1	90	Regular
	SpaceRider	104	1	96	Regular
	PearlsPad	104	2	89	Regular
	BreathPad	104	0	92	Regular
	NobleMan	104	1	89	Regular
	DouxFlange	104	3	96	Regular
	LightPad	104	2	52	Regular
	ButterStrings	104	2	51	Regular
	MediumTunePad	104	0	51	Regular
	NylonPad	104	0	100	Regular
	DarkLight	104	3	90	Regular
	AnaDayz	104	3	52	Regular
	BrightPadTrance	104	4	91	Regular
	OctStrings	104	4	51	Regular
	ChillinChords	104	6	52	Regular
	BrightPopPad	104	3	51	Regular
	PremiumPad	104	0	52	Regular
	SoftEnsemble	104	1	51	Regular
	80sPad	104	1	52	Regular
	BrightPadClassic	104	3	91	Regular
	AmbientPad	104	0	89	Regular
	BrightFatSaw	104	5	91	Regular
	TranceMW	104	0	96	Regular
	EarlyDigital	104	0	94	Regular

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Choir&Pad	Bellsphere	104	5	89	Regular
	SixthSense	104	2	102	Regular
	PercPad	104	0	102	Regular
	SuperDarkPad	0	119	90	Regular
	AnalogPad	0	120	90	Regular
	DarkAngelPad	0	121	90	Regular
	LitePad	0	122	90	Regular
	PopPad	0	112	91	Regular
	GloriousPhase	0	114	91	Regular
	AnalogSwell	0	119	96	Regular
	Skydiver	0	112	102	Regular
	HipaStrings	0	114	96	Regular
	BrightSawPad	0	113	91	Regular
	BigOctavePad	0	115	91	Regular
	GoldenAge	0	115	89	Regular
	Solaris	0	114	95	Regular
	Insomnia	0	113	95	Regular
	Mediterrain	0	114	100	Regular
	OberSweep	0	115	96	Regular
	TimeTravel	0	116	89	Regular
	Bubblespace	0	113	102	Regular
	MagicBell	8	32	121	S.Articulation!
	MellowPad	0	117	96	Regular
	NeoWarmPad	0	115	90	Regular
	CyberPad	0	113	100	Regular
	BrightOber	0	113	96	Regular
	DarkPad	0	118	96	Regular
Synth&FX	ClubLead	104	3	63	Regular
	HPFDance	104	0	91	Regular
	DetunedSawOct	104	8	82	Regular
	DancyHook	104	9	82	Regular
	VinalogSaw	104	3	82	Regular
	TalkModLead	104	0	88	Regular
	SubLead	104	0	81	Regular
	SoftSaw	104	16	82	Regular
	FusionLead	104	15	82	Regular
	BleepLead	104	0	85	Regular
	Oxygen	0	122	82	Regular
	Matrix	0	123	82	Regular
	WireLead	0	120	82	Regular
	SoftR&B	0	119	81	Regular
	EarlyLead	0	118	82	Regular
	LektroCodes	104	2	85	Regular
	SimpleComp	104	12	82	Regular
	BalladComp	104	6	89	Regular
	HeavenBell	104	0	101	Regular
	BrightPadBell	104	7	89	Regular
	SoftSquare	104	5	81	Regular
	WildPWM	104	4	81	Regular
	DetunedVintage	104	1	85	Regular
	PWMLead	104	1	82	Regular
	BrassyLead	104	5	63	Regular
	PunchLead	104	7	82	Regular
	FlangeFilter	104	2	82	Regular
	MouthLead	104	0	82	Regular
	ResonantClavi	104	2	91	Regular
	ResonanceComp	104	4	63	Regular
	TrancePerc	104	5	82	Regular
	Chordmaster	104	13	82	Regular
	DigitalSeq	104	2	88	Regular
	AnalogSeq	104	3	88	Regular
	TranceSeq1	104	4	88	Regular
	TranceSeq2	104	5	88	Regular
	TranceSeq3	104	1	91	Regular
	PercSeqFS	104	6	88	Regular
	PercSeqFM1	104	7	88	Regular
	PercSeqFM2	104	8	88	Regular
	SynthSticks	104	0	107	Regular
	SazFeeze	104	0	98	Regular
	EasternAir	104	1	98	Regular

PSR-S750

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Synth&FX	Xtune	104	1	88	Regular
	PitchFall	104	0	104	Regular
	PercSeqSaw	104	11	82	Regular
	PercSeqHipa	104	9	88	Regular
	Attack	104	4	82	Regular
	PWMPercussion	104	6	82	Regular
	Nomad	104	1	105	Regular
	ChorusSawLead	104	10	82	Regular
	FaaatComp	104	4	52	Regular
	FatSawHook	104	7	52	Regular
	TechGlide	104	14	82	Regular
	DanceChords	104	5	52	Regular
	DanceHook	0	112	87	Regular
	OctaveHook	0	113	87	Regular
	HipaLead	0	118	85	Regular
	PunchyHook	0	127	82	Regular
	CryingLead	0	114	88	Regular
	HipLead	0	113	81	Regular
	HopLead	0	117	81	Regular
	TechLead	0	117	85	Regular
	Tekkline	0	116	85	Regular
	SoftMini	0	124	81	Regular
	TranceLead	0	121	81	Regular
	FireWire	0	116	82	Regular
	Analogon	0	115	82	Regular
	Skyline	0	115	85	Regular
	OrbitSine	0	126	81	Regular
Perc&Drum	Vibraphone	0	112	12	Regular
	JazzVibes	0	113	12	Regular
	Vibes&Flutes	0	114	12	Regular
	Marimba	0	112	13	Regular
	Xylophone	0	112	14	Regular
	SteelDrums	0	112	115	Regular
	Celesta	0	112	9	Regular
	Glockenspiel	0	112	10	Regular
	MusicBox	0	112	11	Regular
	TubularBells	0	112	15	Regular
	StackBell	104	8	89	Regular
	NiceBell	104	9	89	Regular
	Kalimba	0	112	109	Regular
	Dulcimer	0	112	16	Regular
	Timpani	0	112	48	Regular
	PowerKit1	127	0	88	Drums
	PowerKit2	127	0	89	Drums
	StandardKit1	127	0	1	Drums
	StandardKit2	127	0	2	Drums
	BrushKit	127	0	41	Drums
	AnalogT8Kit	127	0	59	Drums
	AnalogT9Kit	127	0	60	Drums
	BreakKit	127	0	58	Drums
	HipHopKit	127	0	57	Drums
	DanceKit	127	0	28	Drums
	StudioKit	127	0	87	Drums
	HitKit	127	0	5	Drums
	SymphonyKit	127	0	49	Drums
	RockKit	127	0	17	Drums
	JazzKit	127	0	33	Drums
	PopLatinKit	126	0	44	SFX Kit
	CubanKit	126	0	41	SFX Kit
	ArabicKit1	126	0	37	SFX Kit
	ArabicMixtureKit	126	0	65	SFX Kit
	IndianKit	126	0	115	SFX Kit
	ChineseKit	126	0	125	SFX Kit
	ChineseMixture Kit	127	0	128	SFX Kit
	RoomKit	127	0	9	Drums
	ElectroKit	127	0	25	Drums
	AnalogKit	127	0	26	Drums
	SFX Kit1	126	0	1	SFX Kit
	SFX Kit2	126	0	2	SFX Kit
	ArabicKit2	126	0	36	SFX Kit

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
OrganFlutes	JazzDraw!	0	126	17	OrganFlutes
	BluesOrgan!	0	126	17	OrganFlutes
	SixteenOne!	0	126	17	OrganFlutes
	EvenBars!	0	126	17	OrganFlutes
	PopOrgan!	0	126	17	OrganFlutes
	RockingOrg!	0	126	17	OrganFlutes
	Percussive!	0	126	17	OrganFlutes
	GospelOrg!	0	126	17	OrganFlutes
	PadOrgan!	0	126	17	OrganFlutes
	FullRanks!	0	126	17	OrganFlutes

PSR-S750 (Category: Legacy)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Piano	Harpsichord	0	112	7	Live!
E.Piano	JazzChorus	0	118	6	Regular
	PhaseEP	0	120	5	Regular
	ModernEP	0	115	6	Regular
	FunkEP	0	112	5	Regular
	ChorusBell	0	120	6	Regular
	StereoClavi	0	114	8	Regular
Strings	SlowStrings	0	113	50	Regular
	StringFalls	0	121	49	Regular
	AnalogStrings	0	112	52	Regular
	Strings	0	112	49	Regular
	OrchStrings	0	113	49	Regular
	Symphonic	0	114	49	Regular
	ConcertoStrings	0	115	49	Regular
	BowStrings	0	116	49	Regular
	TremoloStrings	0	112	45	Regular
	Pizzicato	0	112	46	Regular
	Orchestra	0	116	50	Live!
	Orch&Flute	0	119	50	Regular
	Orch&Oboe	0	121	50	Regular
	Orch&Horns	0	118	50	Regular
	Marcato	0	115	50	Regular
	StringQuartet	0	114	50	Regular
	Sitar3	0	112	105	Regular
Guitar&Bass	60sClean	0	117	28	Regular
	FolkGuitar	0	112	26	Regular
	MutedGuitar	0	112	29	Regular
	FunkGuitar	0	113	29	Regular
	SolidChord	0	121	28	Regular
	SolidGuitar	0	118	28	Regular
	CampfireGtr	0	115	26	Regular
	Electric12Str	0	119	28	Regular
	DXJazzGuitar	0	117	27	Regular
	SmoothLead	0	119	27	Regular
	PowerChord	0	117	31	Regular
	RockGuitar	0	116	30	Regular
	VodooLead	0	116	31	Regular
	TremoloGuitar	0	113	28	Regular
	WahGuitar	0	122	28	Regular
	LeadGuitar	0	114	30	Regular
	18String	0	119	26	Regular
	ChorusGuitar	0	124	28	Regular
	VintageTrem	0	120	28	Regular
	DeepChorus	0	114	28	Regular
	BrightClean	0	116	28	Regular
	DistortionGtr	0	112	31	Regular
	OverdriveGtr	0	112	30	Regular
	FeedbackGtr	0	113	30	Regular
	WarmSolid	104	2	28	Cool!
	CleanSolid	104	3	28	Cool!
	GuitarHero	104	0	31	Cool!
	70sSolidGtr	104	1	28	Cool!
	HalfDrive	104	0	30	Cool!
	HeavyRock	104	1	31	Cool!
	ClickBass	0	115	39	Regular
	PunchyBass	0	117	39	Regular
	AnalogBass	0	112	40	Regular
	DX FunkBass	0	113	38	Regular
	DrySynthBass	0	116	40	Regular
	80sSynthBass	0	115	40	Regular
	HiQBass	0	113	39	Regular
Saxophone	Saxophone	104	0	67	Sweet!
	GrowlSax	0	118	67	Regular
	SopranoSax	0	112	65	Regular
	AltoSax	0	112	66	Regular
	TenorSax	0	112	67	Regular
	SaxStack	0	124	67	Regular
	WoodwindsEns	0	113	67	Regular
	SaxyMood	0	120	67	Regular
Organ	DanceOrgan	0	113	18	Regular

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Organ	ClickOrgan	0	112	18	Regular
	ReedOrgan	0	112	21	Regular
	RotarySwitch	0	110	18	Cool!
	RotaryDrive	0	116	19	Regular
	GospelOrgan	0	119	17	Regular
	PurpleOrgan	0	114	19	Regular
	RockOrgan1	0	112	19	Regular
	RockOrgan2	0	119	19	Regular
	RockOrgan3	0	113	19	Regular
	60sOrgan	0	116	18	Regular
	JazzOrgan1	0	112	17	Regular
	JazzOrgan2	0	113	17	Regular
	JazzOrgan3	0	120	17	Regular
	DrawbarOrgan1	0	120	18	Regular
	DrawbarOrgan2	0	115	17	Regular
	BrightDraw	0	116	17	Regular
	PercOrgan	0	119	18	Regular
	ElectricOrgan	0	118	18	Regular
Trumpet	MutedTrumpet	0	112	60	Regular
	FlugelHorn	0	113	57	Regular
	SoloTrombone	0	112	58	Regular
	JazzTrumpet	0	116	57	Regular
	Trombone	0	116	58	Regular
	SoftTrombone	0	115	58	Regular
	SoloTrumpet	0	112	57	Regular
	MellowTrombone	0	114	58	Regular
Brass	SoftBrass	0	123	62	Regular
	Sforzando	0	125	62	Regular
	SmallBrass	0	117	62	Regular
	BrassSection	0	112	62	Regular
	HybridComp	0	119	63	Regular
	NaturalBrass	0	124	62	Regular
	BrightBrass	0	120	62	Regular
	Hybrihorn	0	113	61	Regular
	HighBrass	0	115	62	Regular
	BigBandBrass	0	113	62	Regular
	PopBrass	0	118	62	Regular
	BrassCombo	0	115	67	Regular
	BreathBrass	0	116	61	Regular
	BigBrass	0	121	62	Regular
	MellowBrass	0	116	62	Regular
	Hybripad	0	114	61	Regular
	FullHorns	0	114	62	Regular
	SmoothTrombone	0	118	58	Regular
	TrumpetEns	0	122	62	Regular
	MellowHorns	0	119	62	Regular
	BrassHit	0	126	62	Regular
	SynthBrass	0	112	63	Regular
	TbnSection	0	113	58	Regular
Accordion	Accordion	0	116	22	Regular
	SmallAccordion	0	115	22	Regular
	BallroomAcc	0	112	24	Regular
	SoftAccordion	0	114	22	Regular
	TuttiAccordion	0	113	22	Regular
Choir&Pad	Sunbeam	0	123	89	Regular
	UuhChoir	0	115	53	Regular
	HahPad	0	116	95	Regular
	Voices	0	113	55	Regular
	Choir	0	112	53	Regular
	AirChoir	0	112	55	Regular
	VoxHumana	0	112	54	Regular
	PsychoPad	0	118	102	Regular
	FarEast	0	112	98	Regular
	Disclosure	0	116	90	Regular
	Mystery	0	113	98	Regular
	Sirius	0	114	102	Regular
	S&H Groove	0	115	102	Regular
	VeloAshrami	0	116	102	Regular
	EveningStars	0	117	102	Regular
	AngelVibes	0	114	99	Regular

PSR-S750 (Category: Legacy)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Choir&Pad	GlassPad	0	114	94	Regular
	DX Pad	0	112	93	Regular
	Symbiont	0	113	89	Regular
	DarkMoon	0	113	90	Regular
	Ionosphere	0	115	95	Regular
	Millennium	0	117	89	Regular
	Atmosphere	0	112	100	Regular
	Equinox	0	112	95	Regular
	Fantasia	0	112	89	Regular
	Stargate	0	114	89	Regular
	Area51	0	112	90	Regular
	DigitalPad	0	115	94	Regular
	Dunes	0	114	90	Regular
	Messenger	0	116	96	Regular
	Wave2001	0	112	96	Regular
	XenonPad	0	112	92	Regular
Synth&FX	Adrenaline	0	113	85	Regular
	ProLead	0	113	84	Regular
	FunkyLead	0	121	82	Regular
	Portatone	0	112	85	Regular
	Stardust	0	112	99	Regular
	AeroLead	0	112	84	Regular
	MiniLead	0	114	81	Regular
	SunBell	0	113	99	Regular
	HiBias	0	116	81	Regular
	VinylLead	0	115	81	Regular
	PanLead	0	122	81	Regular
	StringBells	0	124	89	Regular
	Padbells	0	126	89	Regular
	BigTune	0	118	90	Regular
	TrumpetSaw	0	125	82	Regular
	Paraglide	0	114	85	Regular
	Robolead	0	124	82	Regular
	Fargo	0	119	82	Regular
	BigLead	0	113	82	Regular
	Warp	0	117	82	Regular
	Impact	0	113	88	Regular
	UnderHeim	0	112	88	Regular
	CrystalEyes	0	125	89	Regular
	MelodyMaker	0	117	90	Regular
	AttackSaw	0	126	82	Regular
	PercSquare	0	123	81	Regular
	SquareLead	0	112	81	Regular
	SawLead	0	112	82	Regular
	PopLead	0	120	81	Regular
	BrightMini	0	125	81	Regular
	Blaster	0	114	82	Regular
	TinyLead	0	118	81	Regular

PSR-S750 (Category: StyleVoices)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Strings	SmallStrings	8	0	49	MegaVoice
	LargeStrings	8	0	50	MegaVoice
Guitar&Bass	NylonGuitar	8	0	1	MegaVoice
	SteelGuitar	8	0	2	MegaVoice
	12StringGtr	8	1	3	MegaVoice
	HiStringGtr	8	0	3	MegaVoice
	SolidGuitar1	8	1	4	MegaVoice
	SolidGuitar2	8	2	4	MegaVoice
	CleanGuitar	8	0	4	MegaVoice
	OverdriveGtr	8	0	5	MegaVoice
	DistortionGtr	8	0	6	MegaVoice
	AcousticBass	8	0	17	MegaVoice
	ElectricBass	8	0	18	MegaVoice
	PickBass	8	0	19	MegaVoice
	FretlessBass	8	0	20	MegaVoice
Brass	TenorSax	8	0	83	MegaVoice
	Trumpet	8	0	65	MegaVoice
	Brass	8	0	57	MegaVoice

PSR-S950/S750 (Category: GM&XG)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Piano	GrandPiano	0	0	1	Regular
	GrndPianoKSP	0	1	1	Regular
	MellowGrPno	0	18	1	Regular
	PianoStrings	0	40	1	Regular
	Dream	0	41	1	Regular
	BrightPiano	0	0	2	Regular
	BritePnoKSP	0	1	2	Regular
	ElecGrandPno	0	0	3	Regular
	ElecGrPnoKSP	0	1	3	Regular
	DetunedCP80	0	32	3	Regular
	LayeredCP1	0	40	3	Regular
	LayeredCP2	0	41	3	Regular
	Honkytonk	0	0	4	Regular
	HonkytonkKSP	0	1	4	Regular
	El.Piano1	0	0	5	Regular
	El.Piano1KSP	0	1	5	Regular
	MellowEP1	0	18	5	Regular
	ChorusEP1	0	32	5	Regular
	HardEl.Piano	0	40	5	Regular
	VXfadeEl.P1	0	45	5	Regular
	60sEl.Piano1	0	64	5	Regular
	El.Piano2	0	0	6	Regular
	El.Piano2KSP	0	1	6	Regular
	ChorusEP2	0	32	6	Regular
	DXEPHard	0	33	6	Regular
	DXLegend	0	34	6	Regular
	DXPhaseEP	0	40	6	Regular
	DX+AnalogEP	0	41	6	Regular
	DXKotoEP	0	42	6	Regular
	VXfadeEl.P2	0	45	6	Regular
	Harpsichord	0	0	7	Regular
	Harpsi.KSP	0	1	7	Regular
	Harpsichord2	0	25	7	Regular
	Harpsichord3	0	35	7	Regular
	Clavi.	0	0	8	Regular
	Clavi.KSP	0	1	8	Regular
	Clavi.Wah	0	27	8	Regular
	PulseClavi.	0	64	8	Regular
	PierceClavi.	0	65	8	Regular
ChromaticPerc	Celesta	0	0	9	Regular
	Glockenspiel	0	0	10	Regular
	MusicBox	0	0	11	Regular
	Orgel	0	64	11	Regular
	Vibraphone	0	0	12	Regular
	VibesKSP	0	1	12	Regular
	HardVibes	0	45	12	Regular
	Marimba	0	0	13	Regular
	MarimbaKSP	0	1	13	Regular
	SineMarimba	0	64	13	Regular
	Balimba	0	97	13	Regular
	LogDrums	0	98	13	Regular
	Xylophone	0	0	14	Regular
	TubularBells	0	0	15	Regular
	ChurchBells	0	96	15	Regular
	Carillon	0	97	15	Regular
	Dulcimer	0	0	16	Regular
	Dulcimer2	0	35	16	Regular
	Cimbalom	0	96	16	Regular
	Santur	0	97	16	Regular
Organ	DrawbarOrgan	0	0	17	Regular
	DetDrawOrgan	0	32	17	Regular
	60sDrawOrg1	0	33	17	Regular
	60sDrawOrg2	0	34	17	Regular
	70sDrawOrg1	0	35	17	Regular
	DrawbarOrg2	0	36	17	Regular
	60sDrawOrg3	0	37	17	Regular
	EvenBarOrg	0	38	17	Regular
	16+2'2_3Org	0	40	17	Regular
	OrganBass	0	64	17	Regular
	70sDrawOrg2	0	65	17	Regular

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Organ	CheezyOrgan	0	66	17	Regular
	DrawbarOrg3	0	67	17	Regular
	Perc.Organ	0	0	18	Regular
	70sPercOrg1	0	24	18	Regular
	DetPercOrgan	0	32	18	Regular
	LightOrgan	0	33	18	Regular
	Perc.Organ2	0	37	18	Regular
	RockOrgan	0	0	19	Regular
	RotaryOrgan	0	64	19	Regular
	SlowRotary	0	65	19	Regular
	FastRotary	0	66	19	Regular
	ChurchOrgan	0	0	20	Regular
	ChurchOrgan3	0	32	20	Regular
	ChurchOrgan2	0	35	20	Regular
	NotreDame	0	40	20	Regular
	OrganFlute	0	64	20	Regular
	Trem.OrganFl	0	65	20	Regular
	ReedOrgan	0	0	21	Regular
	PuffOrgan	0	40	21	Regular
	Accordion	0	0	22	Regular
	AccordIt	0	32	22	Regular
	Harmonica	0	0	23	Regular
	Harmonica2	0	32	23	Regular
	TangoAccord	0	0	24	Regular
	TangoAccord2	0	64	24	Regular
Guitar	NylonGuitar	0	0	25	Regular
	NylonGuitar2	0	16	25	Regular
	NylonGuitar3	0	25	25	Regular
	VelGtrHarmo	0	43	25	Regular
	Ukulele	0	96	25	Regular
	SteelGuitar	0	0	26	Regular
	SteelGuitar2	0	16	26	Regular
	12StrGuitar	0	35	26	Regular
	Nylon&Steel	0	40	26	Regular
	Steel&Body	0	41	26	Regular
	Mandolin	0	96	26	Regular
	JazzGuitar	0	0	27	Regular
	MellowGuitar	0	18	27	Regular
	JazzAmp	0	32	27	Regular
	CleanGuitar	0	0	28	Regular
	ChorusGuitar	0	32	28	Regular
	MutedGuitar	0	0	29	Regular
	FunkGuitar1	0	40	29	Regular
	MuteSteelGtr	0	41	29	Regular
	FunkGuitar2	0	43	29	Regular
	JazzMan	0	45	29	Regular
	Overdriven	0	0	30	Regular
	GuitarPinch	0	43	30	Regular
	Distortion	0	0	31	Regular
	FeedbackGtr	0	40	31	Regular
	FeedbackGtr2	0	41	31	Regular
	GtrHarmonics	0	0	32	Regular
	GtrFeedback	0	65	32	Regular
	GtrHarmonic2	0	66	32	Regular
Bass	AcousticBass	0	0	33	Regular
	JazzRhythm	0	40	33	Regular
	VXUprghtBass	0	45	33	Regular
	FingerBass	0	0	34	Regular
	FingerDark	0	18	34	Regular
	FlangeBass	0	27	34	Regular
	Bass&DistEG	0	40	34	Regular
	FingerSlap	0	43	34	Regular
	FingerBass2	0	45	34	Regular
	Mod.Bass	0	65	34	Regular
	PickBass	0	0	35	Regular
	MutePickBass	0	28	35	Regular
	FretlessBass	0	0	36	Regular
	Fretless2	0	32	36	Regular
	Fretless3	0	33	36	Regular
	Fretless4	0	34	36	Regular

PSR-S950/S750 (Category: GM&XG)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Bass	Syn.Fretless	0	96	36	Regular
	SmthFretless	0	97	36	Regular
	SlapBass1	0	0	37	Regular
	ResonantSlap	0	27	37	Regular
	PunchThumb	0	32	37	Regular
	SlapBass2	0	0	38	Regular
	Velo.Sw.Slap	0	43	38	Regular
	SynthBass1	0	0	39	Regular
	SynBass1Dark	0	18	39	Regular
	FastResoBass	0	20	39	Regular
	AcidBass	0	24	39	Regular
	ClaviBass	0	35	39	Regular
	TechnoBass	0	40	39	Regular
	Orbiter	0	64	39	Regular
	SquareBass	0	65	39	Regular
	RubberBass	0	66	39	Regular
	Hammer	0	96	39	Regular
	SynthBass2	0	0	40	Regular
	MellowSyBass	0	6	40	Regular
	SequenceBass	0	12	40	Regular
	ClickSynBass	0	18	40	Regular
	SynBass2Dark	0	19	40	Regular
	SmoothSyBass	0	32	40	Regular
	ModulrSyBass	0	40	40	Regular
	DXBass	0	41	40	Regular
	XWireBass	0	64	40	Regular
Strings	Violin	0	0	41	Regular
	SlwAtkViolin	0	8	41	Regular
	Viola	0	0	42	Regular
	Cello	0	0	43	Regular
	Contrabass	0	0	44	Regular
	Trem.Strings	0	0	45	Regular
	SlwAtTremStr	0	8	45	Regular
	SuspenseStr	0	40	45	Regular
	PizzicatoStr	0	0	46	Regular
	Orch.Harp	0	0	47	Regular
	YangChin	0	40	47	Regular
	Timpani	0	0	48	Regular
Ensemble	Strings1	0	0	49	Regular
	StereoStrngs	0	3	49	Regular
	SlwAtkStrngs	0	8	49	Regular
	ArcoStrings	0	24	49	Regular
	60'sStrings	0	35	49	Regular
	Orchestra	0	40	49	Regular
	Orchestra2	0	41	49	Regular
	TremOrchstra	0	42	49	Regular
	Velo.Strings	0	45	49	Regular
	Strings2	0	0	50	Regular
	S.SlowStrngs	0	3	50	Regular
	LegatoStrngs	0	8	50	Regular
	WarmStrings	0	40	50	Regular
	Kingdom	0	41	50	Regular
	70'sStrings	0	64	50	Regular
	Strings3	0	65	50	Regular
	SynStrings1	0	0	51	Regular
	ResoStrings	0	27	51	Regular
	SynStrings4	0	64	51	Regular
	SynStrings5	0	65	51	Regular
	SynStrings2	0	0	52	Regular
	ChoirAahs	0	0	53	Regular
	StereoChoir	0	3	53	Regular
	ChoirAahs2	0	16	53	Regular
	MellowChoir	0	32	53	Regular
	ChoirStrings	0	40	53	Regular
	VoiceOohs	0	0	54	Regular
	SynthVoice	0	0	55	Regular
	SynthVoice2	0	40	55	Regular
	Choral	0	41	55	Regular
	AnalogVoice	0	64	55	Regular
	OrchestraHit	0	0	56	Regular

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Ensemble	OrchestrHit2	0	35	56	Regular
	Impact	0	64	56	Regular
Brass	Trumpet	0	0	57	Regular
	Trumpet2	0	16	57	Regular
	BriteTrumpet	0	17	57	Regular
	WarmTrumpet	0	32	57	Regular
	Trombone	0	0	58	Regular
	Trombone2	0	18	58	Regular
	Tuba	0	0	59	Regular
	Tuba2	0	16	59	Regular
	MutedTrumpet	0	0	60	Regular
	FrenchHorn	0	0	61	Regular
	Fr.HornSolo	0	6	61	Regular
	FrenchHorn2	0	32	61	Regular
	HornOrchestr	0	37	61	Regular
	BrassSection	0	0	62	Regular
	Tp&TbSection	0	35	62	Regular
	BrassSect2	0	40	62	Regular
	HighBrass	0	41	62	Regular
	MellowBrass	0	42	62	Regular
	SynthBrass1	0	0	63	Regular
	QuackBrass	0	12	63	Regular
	ResoSynBrass	0	20	63	Regular
	PolyBrass	0	24	63	Regular
	SynthBrass3	0	27	63	Regular
	JumpBrass	0	32	63	Regular
	AnaVelBrass1	0	45	63	Regular
	AnalogBrass1	0	64	63	Regular
	SynthBrass2	0	0	64	Regular
	SoftBrass	0	18	64	Regular
	SynthBrass4	0	40	64	Regular
	ChoirBrass	0	41	64	Regular
	AnaVelBrass2	0	45	64	Regular
	AnalogBrass2	0	64	64	Regular
Reed	SopranoSax	0	0	65	Regular
	AltoSax	0	0	66	Regular
	SaxSection	0	40	66	Regular
	HyperAltoSax	0	43	66	Regular
	TenorSax	0	0	67	Regular
	BreathyTenor	0	40	67	Regular
	SoftTenorSax	0	41	67	Regular
	TenorSax2	0	64	67	Regular
	BaritoneSax	0	0	68	Regular
	Oboe	0	0	69	Regular
	EnglishHorn	0	0	70	Regular
	Bassoon	0	0	71	Regular
	Clarinet	0	0	72	Regular
Pipe	Piccolo	0	0	73	Regular
	Flute	0	0	74	Regular
	Recorder	0	0	75	Regular
	PanFlute	0	0	76	Regular
	BlownBottle	0	0	77	Regular
	Shakuhachi	0	0	78	Regular
	Whistle	0	0	79	Regular
	Ocarina	0	0	80	Regular
Synth.Lead	SquareLead	0	0	81	Regular
	SquareLead2	0	6	81	Regular
	LMSquare	0	8	81	Regular
	Hollow	0	18	81	Regular
	Shroud	0	19	81	Regular
	Mellow	0	64	81	Regular
	SoloSine	0	65	81	Regular
	SineLead	0	66	81	Regular
	SawtoothLead	0	0	82	Regular
	SawtoothLd2	0	6	82	Regular
	ThickSaw	0	8	82	Regular
	DynamicSaw	0	18	82	Regular
	DigitalSaw	0	19	82	Regular
	BigLead	0	20	82	Regular
	HeavySynth	0	24	82	Regular

PSR-S950/S750 (Category: GM&XG)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Synth.Lead	WaspySynth	0	25	82	Regular
	PulseSaw	0	40	82	Regular
	Dr.Lead	0	41	82	Regular
	VelocityLead	0	45	82	Regular
	Seq.Analog	0	96	82	Regular
	CalliopeLead	0	0	83	Regular
	PureLead	0	65	83	Regular
	ChiffLead	0	0	84	Regular
	Rubby	0	64	84	Regular
	CharangLead	0	0	85	Regular
	DistortedLd	0	64	85	Regular
	WireLead	0	65	85	Regular
	VoiceLead	0	0	86	Regular
	SynthAahs	0	24	86	Regular
	VoxLead	0	64	86	Regular
	FifthsLead	0	0	87	Regular
	BigFive	0	35	87	Regular
	Bass&Lead	0	0	88	Regular
	Big&Low	0	16	88	Regular
	Fat&Perky	0	64	88	Regular
	SoftWhirl	0	65	88	Regular
Synth.Pad	NewAgePad	0	0	89	Regular
	Fantasy	0	64	89	Regular
	WarmPad	0	0	90	Regular
	ThickPad	0	16	90	Regular
	SoftPad	0	17	90	Regular
	SinePad	0	18	90	Regular
	HornPad	0	64	90	Regular
	RotaryStrngs	0	65	90	Regular
	PolySynthPad	0	0	91	Regular
	PolyPad80	0	64	91	Regular
	ClickPad	0	65	91	Regular
	AnalogPad	0	66	91	Regular
	SquarePad	0	67	91	Regular
	ChoirPad	0	0	92	Regular
	Heaven	0	64	92	Regular
	Itopia	0	66	92	Regular
	CCPad	0	67	92	Regular
	BowedPad	0	0	93	Regular
	Glacier	0	64	93	Regular
	GlassPad	0	65	93	Regular
	MetallicPad	0	0	94	Regular
	TinePad	0	64	94	Regular
	PanPad	0	65	94	Regular
	HaloPad	0	0	95	Regular
	SweepPad	0	0	96	Regular
	Shwimmer	0	20	96	Regular
	Converge	0	27	96	Regular
	PolarPad	0	64	96	Regular
	Celestial	0	66	96	Regular
Synth.Effect	Rain	0	0	97	Regular
	ClaviPad	0	45	97	Regular
	HarmoRain	0	64	97	Regular
	AfricanWind	0	65	97	Regular
	Carib	0	66	97	Regular
	SoundTrack	0	0	98	Regular
	Prologue	0	27	98	Regular
	Ancestral	0	64	98	Regular
	Crystal	0	0	99	Regular
	SynthDr.Comp	0	12	99	Regular
	Popcorn	0	14	99	Regular
	TinyBells	0	18	99	Regular
	RoundGlocken	0	35	99	Regular
	GlockenChime	0	40	99	Regular
	ClearBells	0	41	99	Regular
	ChorusBells	0	42	99	Regular
	SynthMallet	0	64	99	Regular
	SoftCrystal	0	65	99	Regular
	LoudGlocken	0	66	99	Regular
	ChristmasBel	0	67	99	Regular

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Synth.Effect	VibeBells	0	68	99	Regular
	DigitalBells	0	69	99	Regular
	AirBells	0	70	99	Regular
	BellHarp	0	71	99	Regular
	Gamelimba	0	72	99	Regular
	Atmosphere	0	0	100	Regular
	WarmAtmos.	0	18	100	Regular
	HollwRelease	0	19	100	Regular
	NylonElPiano	0	40	100	Regular
	NylonHarp	0	64	100	Regular
	HarpVox	0	65	100	Regular
	Atmos.Pad	0	66	100	Regular
	Planet	0	67	100	Regular
	Brightness	0	0	101	Regular
	FantasyBells	0	64	101	Regular
	Smokey	0	96	101	Regular
	Goblins	0	0	102	Regular
	GoblinsSynth	0	64	102	Regular
	Creeper	0	65	102	Regular
	RingPad	0	66	102	Regular
	Ritual	0	67	102	Regular
	ToHeaven	0	68	102	Regular
	Night	0	70	102	Regular
	Glisten	0	71	102	Regular
	BellChoir	0	96	102	Regular
	Echoes	0	0	103	Regular
	Echoes2	0	8	103	Regular
	EchoPan	0	14	103	Regular
	EchoBells	0	64	103	Regular
	BigPan	0	65	103	Regular
	SynthPiano	0	66	103	Regular
	Creation	0	67	103	Regular
	StarDust	0	68	103	Regular
	Reso&Panning	0	69	103	Regular
	Sci-Fi	0	0	104	Regular
	Starz	0	64	104	Regular
Ethnic	Sitar	0	0	105	Regular
	DetunedSitar	0	32	105	Regular
	Sitar2	0	35	105	Regular
	Tambra	0	96	105	Regular
	Tamboura	0	97	105	Regular
	Banjo	0	0	106	Regular
	MutedBanjo	0	28	106	Regular
	Rabab	0	96	106	Regular
	Gopichant	0	97	106	Regular
	Oud	0	98	106	Regular
	Shamisen	0	0	107	Regular
	Koto	0	0	108	Regular
	Taisho-kin	0	96	108	Regular
	Kanoon	0	97	108	Regular
	Kalimba	0	0	109	Regular
	Bagpipe	0	0	110	Regular
	Fiddle	0	0	111	Regular
	Shanai	0	0	112	Regular
	Shanai2	0	64	112	Regular
	Pungi	0	96	112	Regular
	Hichiriki	0	97	112	Regular
Percussive	TinkleBell	0	0	113	Regular
	Bonang	0	96	113	Regular
	Altair	0	97	113	Regular
	GamelanGongs	0	98	113	Regular
	StereoGamlan	0	99	113	Regular
	RamaCymbal	0	100	113	Regular
	AsianBells	0	101	113	Regular
	Agogo	0	0	114	Regular
	SteelDrums	0	0	115	Regular
	GlassPerc.	0	97	115	Regular
	ThaiBells	0	98	115	Regular
	Woodblock	0	0	116	Regular
	Castanets	0	96	116	Regular

PSR-S950/S750 (Category: GM&XG)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Percussive	TaikoDrum	0	0	117	Regular
	GranCassa	0	96	117	Regular
	MelodicTom	0	0	118	Regular
	MelodicTom2	0	64	118	Regular
	RealTom	0	65	118	Regular
	RockTom	0	66	118	Regular
	SynthDrum	0	0	119	Regular
	AnalogTom	0	64	119	Regular
	ElectroPerc.	0	65	119	Regular
	Rev.Cymbal	0	0	120	Regular
SoundEffect	GtrFretNoise	0	0	121	Regular
	BreathNoise	0	0	122	Regular
	Seashore	0	0	123	Regular
	BirdTweet	0	0	124	Regular
	TelephonRing	0	0	125	Regular
	Helicopter	0	0	126	Regular
	Applause	0	0	127	Regular
	Gunshot	0	0	128	Regular
	CuttingNoise	64	0	1	Regular
	CuttingNoiz2	64	0	2	Regular
	StringSlap	64	0	4	Regular
	Fl.KeyClick	64	0	17	Regular
	Shower	64	0	33	Regular
	Thunder	64	0	34	Regular
	Wind	64	0	35	Regular
	Stream	64	0	36	Regular
	Bubble	64	0	37	Regular
	Feed	64	0	38	Regular
	Dog	64	0	49	Regular
	Horse	64	0	50	Regular
	BirdTweet2	64	0	51	Regular
	Ghost	64	0	55	Regular
	Maou	64	0	56	Regular
	PhoneCall	64	0	65	Regular
	DoorSqueak	64	0	66	Regular
	DoorSlam	64	0	67	Regular
	ScratchCut	64	0	68	Regular
	ScratchSplit	64	0	69	Regular
	WindChime	64	0	70	Regular
	TelphonRing2	64	0	71	Regular
	CarEngineIgn	64	0	81	Regular
	CarTiresSqel	64	0	82	Regular
	CarPassing	64	0	83	Regular
	CarCrash	64	0	84	Regular
	Siren	64	0	85	Regular
	Train	64	0	86	Regular
	JetPlane	64	0	87	Regular
	Starship	64	0	88	Regular
	Burst	64	0	89	Regular
	RollrCoaster	64	0	90	Regular
	Submarine	64	0	91	Regular
	Laugh	64	0	97	Regular
	Scream	64	0	98	Regular
	Punch	64	0	99	Regular
	Heartbeat	64	0	100	Regular
	FootSteps	64	0	101	Regular
	MachineGun	64	0	113	Regular
	LaserGun	64	0	114	Regular
	Explosion	64	0	115	Regular
	Firework	64	0	116	Regular

PSR-S950/S750 (Category: GM2)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Piano	GrandPiano	121	0	1	Regular
	GrandPianoW	121	1	1	Regular
	GrandPianoD	121	2	1	Regular
	BrightPiano	121	0	2	Regular
	BrightPianoW	121	1	2	Regular
	ElecGrandPno	121	0	3	Regular
	ElecGrandPW	121	1	3	Regular
	Honkytonk	121	0	4	Regular
	HonkytonkW	121	1	4	Regular
	El.Piano1	121	0	5	Regular
	DetunedEP1	121	1	5	Regular
	EP1VeloMix	121	2	5	Regular
	60'sEl.Piano	121	3	5	Regular
	El.Piano2	121	0	6	Regular
	DetunedEP2	121	1	6	Regular
	EP2VeloMix	121	2	6	Regular
	EPLegend	121	3	6	Regular
	EPPhase	121	4	6	Regular
	Harpsichord	121	0	7	Regular
	Harpsi.OctMx	121	1	7	Regular
	HarpsichordW	121	2	7	Regular
	Harpsi.KOff	121	3	7	Regular
	Clavi.	121	0	8	Regular
	PulseClavi.	121	1	8	Regular
ChromaticPerc	Celesta	121	0	9	Regular
	Glockenspiel	121	0	10	Regular
	MusicBox	121	0	11	Regular
	Vibraphone	121	0	12	Regular
	VibraphoneW	121	1	12	Regular
	Marimba	121	0	13	Regular
	MarimbaW	121	1	13	Regular
	Xylophone	121	0	14	Regular
	TubularBells	121	0	15	Regular
	ChurchBells	121	1	15	Regular
	Carillon	121	2	15	Regular
	Dulcimer	121	0	16	Regular
Organ	DrawbarOrgan	121	0	17	Regular
	DetDrawOrgan	121	1	17	Regular
	It60'sOrgan	121	2	17	Regular
	DrawbarOrg2	121	3	17	Regular
	Perc.Organ	121	0	18	Regular
	DetPercOrgan	121	1	18	Regular
	Perc.Organ2	121	2	18	Regular
	RockOrgan	121	0	19	Regular
	ChurchOrgan	121	0	20	Regular
	ChrchOrgOctM	121	1	20	Regular
	DetChurchOrg	121	2	20	Regular
	ReedOrgan	121	0	21	Regular
	PuffOrgan	121	1	21	Regular
	Accordion	121	0	22	Regular
	Accordion2	121	1	22	Regular
	Harmonica	121	0	23	Regular
	TangoAccord	121	0	24	Regular
Guitar	NylonGuitar	121	0	25	Regular
	Ukulele	121	1	25	Regular
	NylonGtrKOff	121	2	25	Regular
	NylonGuitar2	121	3	25	Regular
	SteelGuitar	121	0	26	Regular
	12StrGuitar	121	1	26	Regular
	Mandolin	121	2	26	Regular
	Steel&Body	121	3	26	Regular
	JazzGuitar	121	0	27	Regular
	PedlSteelGtr	121	1	27	Regular
	CleanGuitar	121	0	28	Regular
	DetCleanGtr	121	1	28	Regular
	MidToneGtr	121	2	28	Regular
	MutedGuitar	121	0	29	Regular
	FunkGuitar	121	1	29	Regular
	MutedV-SwGtr	121	2	29	Regular
	JazzMan	121	3	29	Regular

PSR-S950/S750 (Category: GM2)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Guitar	Overdriven	121	0	30	Regular
	GuitarPinch	121	1	30	Regular
	Distortion	121	0	31	Regular
	FeedbackGtr	121	1	31	Regular
	DstRhythmGtr	121	2	31	Regular
	GtrHarmonics	121	0	32	Regular
	GtrFeedback	121	1	32	Regular
Bass	AcousticBass	121	0	33	Regular
	FingerBass	121	0	34	Regular
	FingerSlap	121	1	34	Regular
	PickBass	121	0	35	Regular
	FretlessBass	121	0	36	Regular
	SlapBass1	121	0	37	Regular
	SlapBass2	121	0	38	Regular
	SynthBass1	121	0	39	Regular
	WarmSyBass	121	1	39	Regular
	ResoSynhBass	121	2	39	Regular
	ClaviBass	121	3	39	Regular
	Hammer	121	4	39	Regular
	SynthBass2	121	0	40	Regular
	AttackBass	121	1	40	Regular
	RubberBass	121	2	40	Regular
	AttackPulse	121	3	40	Regular
Strings	Violin	121	0	41	Regular
	SlwAtkViolin	121	1	41	Regular
	Viola	121	0	42	Regular
	Cello	121	0	43	Regular
	Contrabass	121	0	44	Regular
	Trem.Strings	121	0	45	Regular
	PizzicatoStr	121	0	46	Regular
	Orch.Harp	121	0	47	Regular
	YangChin	121	1	47	Regular
	Timpani	121	0	48	Regular
Ensemble	Strings1	121	0	49	Regular
	StringsBrass	121	1	49	Regular
	60'sStrings	121	2	49	Regular
	Strings2	121	0	50	Regular
	SynStrings1	121	0	51	Regular
	SynStrings3	121	1	51	Regular
	SynStrings2	121	0	52	Regular
	ChoirAahs	121	0	53	Regular
	ChoirAahs2	121	1	53	Regular
	VoiceOohs	121	0	54	Regular
	Humming	121	1	54	Regular
	SynthVoice	121	0	55	Regular
	AnalogVoice	121	1	55	Regular
	OrchestraHit	121	0	56	Regular
	BassHitPlus	121	1	56	Regular
	6thHit	121	2	56	Regular
	EuroHit	121	3	56	Regular
Brass	Trumpet	121	0	57	Regular
	DarkTpSoft	121	1	57	Regular
	Trombone	121	0	58	Regular
	Trombone2	121	1	58	Regular
	BriteTrombon	121	2	58	Regular
	Tuba	121	0	59	Regular
	MutedTrumpet	121	0	60	Regular
	MuteTrumpet2	121	1	60	Regular
	FrenchHorn	121	0	61	Regular
	FrenchHorn2	121	1	61	Regular
	BrassSection	121	0	62	Regular
	BrassSect2	121	1	62	Regular
	SynthBrass1	121	0	63	Regular
	SynthBrass3	121	1	63	Regular
	AnaSynBrass1	121	2	63	Regular
	JumpBrass	121	3	63	Regular
	SynthBrass2	121	0	64	Regular
	SynthBrass4	121	1	64	Regular
	AnaSynBrass2	121	2	64	Regular
Reed	SopranoSax	121	0	65	Regular

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Reed	AltoSax	121	0	66	Regular
	TenorSax	121	0	67	Regular
	BaritoneSax	121	0	68	Regular
	Oboe	121	0	69	Regular
	EnglishHorn	121	0	70	Regular
	Bassoon	121	0	71	Regular
	Clarinet	121	0	72	Regular
Pipe	Piccolo	121	0	73	Regular
	Flute	121	0	74	Regular
	Recorder	121	0	75	Regular
	PanFlute	121	0	76	Regular
	BlownBottle	121	0	77	Regular
	Shakuhachi	121	0	78	Regular
	Whistle	121	0	79	Regular
	Ocarina	121	0	80	Regular
Synth.Lead	SquareLead	121	0	81	Regular
	SquareLead2	121	1	81	Regular
	SineLead	121	2	81	Regular
	SawtoothLead	121	0	82	Regular
	SawtoothLd2	121	1	82	Regular
	SawPulseLead	121	2	82	Regular
	DoublSawLead	121	3	82	Regular
	Seq.Analog	121	4	82	Regular
	CalliopeLead	121	0	83	Regular
	ChiffLead	121	0	84	Regular
	CharangLead	121	0	85	Regular
	WireLead	121	1	85	Regular
	VoiceLead	121	0	86	Regular
	FifthsLead	121	0	87	Regular
	Bass&Lead	121	0	88	Regular
	SoftWhirl	121	1	88	Regular
Synth.Pad	NewAgePad	121	0	89	Regular
	WarmPad	121	0	90	Regular
	SinePad	121	1	90	Regular
	PolySynthPad	121	0	91	Regular
	ChoirPad	121	0	92	Regular
	ItopiaPad	121	1	92	Regular
	BowedPad	121	0	93	Regular
	MetallicPad	121	0	94	Regular
	HaloPad	121	0	95	Regular
	SweepPad	121	0	96	Regular
Synth.Effect	Rain	121	0	97	Regular
	SoundTrack	121	0	98	Regular
	Crystal	121	0	99	Regular
	SynthMallet	121	1	99	Regular
	Atmosphere	121	0	100	Regular
	Brightness	121	0	101	Regular
	Goblins	121	0	102	Regular
	Echoes	121	0	103	Regular
	EchoBell	121	1	103	Regular
	EchoPan	121	2	103	Regular
	Sci-Fi	121	0	104	Regular
Ethnic	Sitar	121	0	105	Regular
	Sitar2	121	1	105	Regular
	Banjo	121	0	106	Regular
	Shamisen	121	0	107	Regular
	Koto	121	0	108	Regular
	TaishoKoto	121	1	108	Regular
	Kalimba	121	0	109	Regular
	Bagpipe	121	0	110	Regular
	Fiddle	121	0	111	Regular
	Shanai	121	0	112	Regular
Percussive	TinkleBell	121	0	113	Regular
	Agogo	121	0	114	Regular
	SteelDrums	121	0	115	Regular
	Woodblock	121	0	116	Regular
	Castanets	121	1	116	Regular
	TaikoDrum	121	0	117	Regular
	ConcertBD	121	1	117	Regular
	MelodicTom	121	0	118	Regular

PSR-S950/S750 (Category: GM2)

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Percussive	MelodicTom2	121	1	118	Regular
	SynthDrum	121	0	119	Regular
	RhythmBoxTom	121	1	119	Regular
	ElectricDrum	121	2	119	Regular
	Rev.Cymbal	121	0	120	Regular
SoundEffect	GtrFretNoise	121	0	121	Regular
	GtrCutNoise	121	1	121	Regular
	StringSlap	121	2	121	Regular
	BreathNoise	121	0	122	Regular
	Fl.KeyClick	121	1	122	Regular
	Seashore	121	0	123	Regular
	Rain	121	1	123	Regular
	Thunder	121	2	123	Regular
	Wind	121	3	123	Regular
	Stream	121	4	123	Regular
	Bubble	121	5	123	Regular
	BirdTweet	121	0	124	Regular
	Dog	121	1	124	Regular
	HorseGallop	121	2	124	Regular
	BirdTweet2	121	3	124	Regular
	TelephonRing	121	0	125	Regular
	TelRing2	121	1	125	Regular
	DoorCreaking	121	2	125	Regular
	Door	121	3	125	Regular
	Scratch	121	4	125	Regular
	WindChime	121	5	125	Regular
	Helicopter	121	0	126	Regular
	CarEngine	121	1	126	Regular
	CarStop	121	2	126	Regular
	CarPass	121	3	126	Regular
	CarCrash	121	4	126	Regular
	Siren	121	5	126	Regular
	Train	121	6	126	Regular
	Jetplane	121	7	126	Regular
	Starship	121	8	126	Regular
	BurstNoise	121	9	126	Regular
	Applause	121	0	127	Regular
	Laughing	121	1	127	Regular
	Screaming	121	2	127	Regular
	Punch	121	3	127	Regular
	HeartBeat	121	4	127	Regular
	Footsteps	121	5	127	Regular
	Gunshot	121	0	128	Regular
	MachineGun	121	1	128	Regular
	Lasergun	121	2	128	Regular
	Explosion	121	3	128	Regular
Drum	StandardSet	120	0	1	Drums
	RoomSet	120	0	9	Drums
	PowerSet	120	0	17	Drums
	ElectroSet	120	0	25	Drums
	AnalogSet	120	0	26	Drums
	JazzSet	120	0	33	Drums
	BrushSet	120	0	41	Drums
	OrchestraSet	120	0	49	Drums
	SFXSet	120	0	57	SFX Kit

PSR-S950	PSR-S750	MSB	LSB	PC# (1-128)	Voice Name	Velocity Switch Points (under B5)								above C6	above C8
O	O	8	0	1	Mega NylonGuitar	1–20	21–40	41–60	61–75	76–90	91–105	106–120	121–127	1–127	1–127
						open soft	open med	open hard	dead	mute	hammer	slide	harmonics	strum noise	fret noise
O	O	8	0	2	Mega SteelGuitar	1–20	21–40	41–60	61–75	76–90	91–105	106–120	121–127	1–127	1–127
						open soft	open med	open hard	dead	mute	hammer	slide	harmonics	strum noise	fret noise
O	O	8	0	3	Mega HiStringGtr	1–89					90–127			1–127	1–127
						soft					hard			strum noise	fret noise
O	O	8	1	3	Mega 12StringGtr	1–71				72–115			116–127	1–127	1–127
					Element1 (Steel)	soft				med			hard		
					Element2 (HiString)	1–89					90–127			strum noise	fret noise
						soft					hard				
O	O	8	0	4	Mega CleanGuitar	1–20	21–40	41–60	61–75	76–90	91–105	106–120	121–127	1–127	1–127
						open soft	open hard	slap	dead	mute	hammer	slide	pick harmonics	strum noise	fret noise
O	O	8	1	4	Mega SolidGuitar1	1–20	21–40	41–60	61–75	76–90	91–105	106–120	121–127	1–127	1–127
						open soft	open hard	slap	dead	mute	hammer	slide	pick harmonics	strum noise	fret noise
O	O	8	2	4	Mega SolidGuitar2	1–20	21–40	41–60	61–75	76–90	91–105	106–120	121–127	1–127	1–127
						open soft	open med	open hard	dead	mute	hammer	slide	pick harmonics	strum noise	fret noise
O	—	8	3	4	Mega SingleCoil	1–20	21–40	41–60	61–75	76–90	91–105	106–120	121–127	1–127	1–127
						open soft	open med	open hard	dead	mute	hammer	slide	pick harmonics	strum noise	fret noise
O	O	8	0	5	Mega OverdriveGtr	1–55				56–120			121–127	1–127	
						open				mute			pick harmonics	EFX	
O	—	8	0	6	Mega DistortionGtr	1–55				56–120			121–127	1–127	
						open				mute			pick harmonics	EFX	
O	O	8	0	7	Mega JazzGuitar	1–20	21–40	41–60	61–75	76–90	91–105	106–120	121–127	1–127	1–127
						open soft	open med	open hard	dead soft	dead hard	hammer	slide	pick harmonics	strum noise	fret noise
O	O	8	0	17	Mega AcousticBass	1–60			61–80	81–120			121–127	1–127	
						open soft			open hard	dead			harmonics	EFX	
O	O	8	0	18	Mega ElectricBass	1–60			61–80	81–120			121–127	1–127	
						open soft			open hard	dead			slap	EFX	
O	—	8	1	18	Mega VintageRound	1–60			61–80	81–120			121–127	1–127	
						open soft			open hard	dead			harmonics	EFX	
O	—	8	2	18	Mega VintageFlat	1–60			61–80	81–120			121–127	1–127	
						open soft			open hard	dead			harmonics	EFX	
O	O	8	0	19	Mega PickBass	1–40			41–80	81–120			121–127	1–127	
						open			mute	dead			harmonics	EFX	
O	—	8	1	19	Mega VintagePick	1–40			41–80	81–120			121–127	1–127	
						open			mute	dead			harmonics	EFX	
O	O	8	0	20	Mega FretlessBass	1–80				81–120			121–127	1–127	
						open				dead			harmonics	EFX	

: No Sound

PSR-S950	PSR-S750	MSB	LSB	PC# (1-128)	Voice Name	Velocity Switch Points (under B5)								above C6	above C8
O	O	8	0	49	**Mega SmallStrings**	1–20	21–40	41–60	61–80	81–95		96–110	111–120	121–127		
						p	**mf**	**f**	**legato**	**spicato f**		**spicato ff**	**tremolo**	**glissando down**		
O	O	8	0	50	**Mega LargeStrings**	1–20	21–40	41–60	61–80	81–95		96–110	111–120	121–127		
						p	**mf**	**f**	**legato**	**spicato f**		**spicato ff**	**tremolo**	**glissando down**		
O	O	8	0	57	**Mega Brass**	1–20	21–40	41–60	61–80	81–90	91–100	101–110	111–120	121–127		
						p	**mf**	**f**	**attack**	**scoops**	**shake**	**falls fast mf**	**falls fast f**	**glissando up**		
O	O	8	0	65	**Mega Trumpet**	1–20	21–40	41–60	61–80	81–100		101–110	111–120	121–127	1–127	1–127
						mf	**f**	**ff**	**legato**	**straight**		**shake**	**falls**	**glissando up**	**valve noise**	**breath noise**
O	O	8	0	83	**Mega TenorSax**	1–20	21–40	41–60	61–80	81–100		101–127			1–127	1–127
						mp	**mf**	**f**	**legato**	**growl**		**falls**			**valve noise (C6–B6 key on noise, C7–B7 key off noise)**	**breath noise**

: No Sound

Drum Kit

	StandardKit1 (Legacy)	StandardKit2 (Legacy)	HitKit	RoomKit
PSR-S950	O	O	O	O
PSR-S750	O	O	O	O

Bank Select MSB (0-127)	127	127	127	127
Bank Select LSB (0-127)	0	0	0	0
Program Change (0-127)	0	1	4	8
Program Change (1-128)	1	2	5	9

MIDI		Keyboard Note	StandardKit1 (Legacy)	Key Off (*1)	Alternate Group (*2)	StandardKit2 (Legacy)	Key Off (*1)	Alternate Group (*2)	Hit Kit	Key Off (*1)	Alternate Group (*2)	Room Kit	Key Off (*1)	Alternate Group (*2)
Note#	Note													
13	C#-1	C#0	Surdo Mute		3									
14	D-1	D0	Surdo Open		3									
15	D#-1	D#0	Hi Q											
16	E-1	E0	Whip Slap											
17	F-1	F0	Scratch H		4									
18	F#-1	F#0	Scratch L		4									
19	G-1	G0	Finger Snap											
20	G#-1	G#0	Click Noise											
21	A-1	A0	Metronome Click											
22	A#-1	A#0	Metronome Bell											
23	B-1	B0	Seq Click L											
24	C0	C1	Seq Click H											
25	C#0	C#1	Brush Tap											
26	D0	D1	Brush Swirl	●										
27	D#0	D#1	Brush Slap											
28	E0	E1	Brush Tap Swirl	●										
29	F0	F1	Snare Roll	●										
30	F#0	F#1	Castanet											
31	G0	G1	Snare Soft			Snare Soft 2			Snare Electro					
32	G#0	G#1	Sticks											
33	A0	A1	Kick Soft						Kick Tight L					
34	A#0	A#1	Open Rim Shot			Open Rim Shot H Short			Snare Pitched					
35	B0	B1	Kick Tight						Kick Wet					
36	C1	C2	Kick			Kick Short			Kick Tight H					
37	C#1	C#2	Side Stick			Side Stick Light			Stick Ambient					
38	D1	D2	Snare			Snare Short			Snare Ambient			Snare Snappy		
39	D#1	D#2	Hand Clap											
40	E1	E2	Snare Tight			Snare Tight H			Snare Tight 2			Snare Tight Snappy		
41	F1	F2	Floor Tom L						Hybrid Tom 1			Tom Room 1		
42	F#1	F#2	Hi-Hat Closed		1				Hi-Hat Closed 2		1			
43	G1	G2	Floor Tom H						Hybrid Tom 2			Tom Room 2		
44	G#1	G#2	Hi-Hat Pedal		1				Hi-Hat Pedal 2		1			
45	A1	A2	Low Tom						Hybrid Tom 3			Tom Room 3		
46	A#1	A#2	Hi-Hat Open		1				Hi-Hat Open 2		1			
47	B1	B2	Mid Tom L						Hybrid Tom 4			Tom Room 4		
48	C2	C3	Mid Tom H						Hybrid Tom 5			Tom Room 5		
49	C#2	C#3	Crash Cymbal 1											
50	D2	D3	High Tom									Tom Room 6		
51	D#2	D#3	Ride Cymbal 1											
52	E2	E3	Chinese Cymbal											
53	F2	F3	Ride Cymbal Cup											
54	F#2	F#3	Tambourine						Tambourine Light					
55	G2	G3	Splash Cymbal											
56	G#2	G#3	Cowbell											
57	A2	A3	Crash Cymbal 2											
58	A#2	A#3	Vibraslap											
59	B2	B3	Ride Cymbal 2											
60	C3	C4	Bongo H											
61	C#3	C#4	Bongo L											
62	D3	D4	Conga H Mute											
63	D#3	D#4	Conga H Open											
64	E3	E4	Conga L											
65	F3	F4	Timbale H											
66	F#3	F#4	Timbale L											
67	G3	G4	Agogo H											
68	G#3	G#4	Agogo L											
69	A3	A4	Cabasa											
70	A#3	A#4	Maracas											
71	B3	B4	Samba Whistle H	●										
72	C4	C5	Samba Whistle L	●										
73	C#4	C#5	Guiro Short											
74	D4	D5	Guiro Long	●										
75	D#4	D#5	Claves											
76	E4	E5	Wood Block H											
77	F4	F5	Wood Block L											
78	F#4	F#5	Cuica Mute											
79	G4	G5	Cuica Open											
80	G#4	G#5	Triangle Mute		2									
81	A4	A5	Triangle Open		2									
82	A#4	A#5	Shaker											
83	B4	B5	Jingle Bells											
84	C5	C6	Bell Tree											
85	C#5	(C#6)												
86	D5	(D6)												
87	D#5	(D#6)												
88	E5	(E6)												
89	F5	(F6)												
90	F#5	(F#6)												
91	G5	(G6)												

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1　　No Sound

	RockKit (Legacy)	ElectroKit	AnalogKit	DanceKit
PSR-S950	O	O	O	O
PSR-S750	O	O	O	O

Bank Select MSB (0-127)			**127**			**127**			**127**			**127**		
Bank Select LSB (0-127)			**0**			**0**			**0**			**0**		
Program Change (0-127)			**16**			**24**			**25**			**27**		
Program Change (1-128)			**17**			**25**			**26**			**28**		
MIDI		**Keyboard Note**	**RockKit (Legacy)**	**Key Off (*1)**	**Alternate Group (*2)**	**ElectroKit**	**Key Off (*1)**	**Alternate Group (*2)**	**AnalogKit**	**Key Off (*1)**	**Alternate Group (*2)**	**DanceKit**	**Key Off (*1)**	**Alternate Group (*2)**
Note#	**Note**													
13	C#-1	C#0										Kick Dance 1		
14	D-1	D0										Kick Dance 2		
15	D#-1	D#0												
16	E-1	E0												
17	F-1	F0										Scratch Dance 1	●	
18	F#-1	F#0										Scratch Dance 2	●	
19	G-1	G0												
20	G#-1	G#0												
21	A-1	A0										Dance Perc 1		
22	A#-1	A#0										Reverse Dance 1		
23	B-1	B0										Dance Perc 2		
24	C0	C1										Hi Q Dance 1		
25	C#0	C#1										Snare Analog 3		
26	D0	D1										Vinyl Noise	●	
27	D#0	D#1										Snare Analog 4		
28	E0	E1				Reverse Cymbal	●		Reverse Cymbal	●		Reverse Cymbal	●	
29	F0	F1										Reverse Dance 2	●	
30	F#0	F#1				Hi Q 2			Hi Q 2			Hi Q 2		
31	G0	G1	Snare Noisy			Snare Snappy Electro			Snare Noisy 4			Snare Techno		
32	G#0	G#1										Snare Dance 1		
33	A0	A1				Kick 3			Kick 3			Kick Techno Q		
34	A#0	A#1										Rim Gate		
35	B0	B1	Kick 2			Kick Gate			Kick Analog Short			Kick Techno L		
36	C1	C2	Kick Gate			Kick Gate Heavy			Kick Analog			Kick Techno		
37	C#1	C#2							Side Stick Analog			Side Stick Analog		
38	D1	D2	Snare Rock			Snare Noisy 2			Snare Analog			Snare Clap		
39	D#1	D#2										Dance Clap		
40	E1	E2	Snare Rock Tight			Snare Noisy 3			Snare Analog 2			Snare Dry		
41	F1	F2	Tom Rock 1			Tom Electro 1			Tom Analog 1			Tom Analog 1		
42	F#1	F#2							Hi-Hat Closed Analog		1	Hi-Hat Closed 3		1
43	G1	G2	Tom Rock 2			Tom Electro 2			Tom Analog 2			Tom Analog 2		
44	G#1	G#2							Hi-Hat Closed Analog 2		1	Hi-Hat Closed Analog 3		1
45	A1	A2	Tom Rock 3			Tom Electro 3			Tom Analog 3			Tom Analog 3		
46	A#1	A#2							Hi-Hat Open Analog		1	Hi-Hat Open 3		1
47	B1	B2	Tom Rock 4			Tom Electro 4			Tom Analog 4			Tom Analog 4		
48	C2	C3	Tom Rock 5			Tom Electro 5			Tom Analog 5			Tom Analog 5		
49	C#2	C#3							Crash Analog			Crash Analog		
50	D2	D3	Tom Rock 6			Tom Electro 6			Tom Analog 6			Tom Analog 6		
51	D#2	D#3												
52	E2	E3												
53	F2	F3												
54	F#2	F#3										Tambourine Analog		
55	G2	G3												
56	G#2	G#3							Cowbell Analog			Cowbell Dance		
57	A2	A3												
58	A#2	A#3										Vibraslap Analog		
59	B2	B3										Ride Analog		
60	C3	C4										Bongo Analog H		
61	C#3	C#4										Bongo Analog L		
62	D3	D4							Conga Analog H			Conga Analog H		
63	D#3	D#4							Conga Analog M			Conga Analog M		
64	E3	E4							Conga Analog L			Conga Analog L		
65	F3	F4												
66	F#3	F#4												
67	G3	G4												
68	G#3	G#4												
69	A3	A4												
70	A#3	A#4							Maracas 2			Maracas 2		
71	B3	B4												
72	C4	C5												
73	C#4	C#5												
74	D4	D5												
75	D#4	D#5							Claves 2			Claves 2		
76	E4	E5										Dance Perc 3		
77	F4	F5										Dance Perc 4	●	
78	F#4	F#5				Scratch H 2			Scratch H 2			Dance Breath 1		
79	G4	G5				Scratch L 2			Scratch L 2			Dance Breath 2	●	
80	G#4	G#5												
81	A4	A5												
82	A#4	A#5												
83	B4	B5												
84	C5	C6												
85	C#5	(C#6)												
86	D5	(D6)												
87	D#5	(D#6)												
88	E5	(E6)												
89	F5	(F6)												
90	F#5	(F#6)												
91	G5	(G6)												

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1　　No Sound

	JazzKit	BrushKit	SymphonyKit	HipHopKit
PSR-S950	O	O	O	O
PSR-S750	O	O	O	O

Bank Select MSB (0-127)			**127**			**127**			**127**			**127**		
Bank Select LSB (0-127)			**0**			**0**			**0**			**0**		
Program Change (0-127)			**32**			**40**			**48**			**56**		
Program Change (1-128)			**33**			**41**			**49**			**57**		
MIDI		**Keyboard Note**	**JazzKit**	**Key Off (*1)**	**Alternate Group (*2)**	**BrushKit**	**Key Off (*1)**	**Alternate Group (*2)**	**SymphonyKit**	**Key Off (*1)**	**Alternate Group (*2)**	**HipHopKit**	**Key Off (*1)**	**Alternate Group (*2)**
Note#	**Note**													
13	C#-1	C#0												
14	D-1	D0												
15	D#-1	D#0												
16	E-1	E0												
17	F-1	F0												
18	F#-1	F#0												
19	G-1	G0										Hi-Hat Closed T8 2		4
20	G#-1	G#0										Tom T8 3		
21	A-1	A0										Hi-Hat Open T8 2		4
22	A#-1	A#0										Tom T8 6		
23	B-1	B0										Crash T8		
24	C0	C1										Triangle Mute		1
25	C#0	C#1										Triangle Open		1
26	D0	D1										Bell Tree		
27	D#0	D#1										Tambourine RX5		
28	E0	E1										Tambourine RX5 2		
29	F0	F1										Kick HipHop 9		
30	F#0	F#1										Hi-Hat Closed Tek		3
31	G0	G1	Snare Jazz H			Brush Slap 2						Kick Gate		
32	G#0	G#1										Hi-Hat Open Lo-Fi		3
33	A0	A1							Kick Soft 2			Kick Gran Casa Open		
34	A#0	A#1				Open Rim Shot Light						Hi-Hat Reverse Drum&Bass		
35	B0	B1							Gran Cassa			Kick HipHop 1		
36	C1	C2	Kick Jazz			Kick Jazz			Gran Cassa Mute			Kick Analog CR		
37	C#1	C#2	Side Stick Light			Side Stick Light						Snare Analog Sm Rim		
38	D1	D2	Snare Jazz L			Brush Slap 3			Band Snare			Snare HipHop 1		
39	D#1	D#2										Snare Clappy		
40	E1	E2	Snare Jazz M			Brush Tap 2			Band Snare 2			Snare HipHop 2		
41	F1	F2				Tom Brush 1								
42	F#1	F#2										Hi-Hat Closed Hip		2
43	G1	G2				Tom Brush 2						Low Tom		
44	G#1	G#2										Hi-Hat Pedal Hip		2
45	A1	A2				Tom Brush 3						Mid Tom L		
46	A#1	A#2										Hi-Hat Open Hip		2
47	B1	B2				Tom Brush 4						High Tom		
48	C2	C3				Tom Brush 5						Ride Cymbal 3		
49	C#2	C#3							Hand Cymbal			Crash Cymbal 3		
50	D2	D3				Tom Brush 6						Shaker 2		
51	D#2	D#3							Hand Cymbal Short			Scratch Bass Drum Forward		
52	E2	E3										Scratch Bass Drum Reverse		
53	F2	F3										Kick HipHop 2		
54	F#2	F#3										Snare HipHop Rim 2		
55	G2	G3										HipHop Clap 2		
56	G#2	G#3										HipHop Snap 1		
57	A2	A3							Hand Cymbal 2			Snare HipHop 3		
58	A#2	A#3										Electric Clap 2		
59	B2	B3							Hand Cymbal Short 2			Kick Hip Deep		
60	C3	C4										Kick HipHop 3		
61	C#3	C#4										Snare HipHop Rim 3		
62	D3	D4										Snare HipHop 5		
63	D#3	D#4										Electric Clap 1		
64	E3	E4										Handbell H		
65	F3	F4										Kick HipHop 4		
66	F#3	F#4										HipHop Clap 3		
67	G3	G4										HipHop Snap 2		
68	G#3	G#4										Snare HipHop Rim 5		
69	A3	A4										HipHop flex 1		
70	A#3	A#4										HipHop flex 2		
71	B3	B4										Shaker 2		
72	C4	C5										Kick HipHop 5		
73	C#4	C#5										Snare HipHop Rim 4		
74	D4	D5										Snare HipHop 6		
75	D#4	D#5										Snare HipHop 11		
76	E4	E5										Kick HipHop 10		
77	F4	F5										Snare HipHop 7		
78	F#4	F#5										HipHop Clap 5		
79	G4	G5										Conga H Tip		
80	G#4	G#5										Conga H Heel		
81	A4	A5										Conga H Open		
82	A#4	A#5										Conga L Open 1		
83	B4	B5										Conga L Open 2		
84	C5	C6										Kick HipHop 8		
85	C#5	(C#6)										HipHop Clap 6		
86	D5	(D6)										Snare T8 1		
87	D#5	(D#6)										Snare T8 1 H		
88	E5	(E6)										HipHop Clap 7		
89	F5	(F6)										Tom T8 1		
90	F#5	(F#6)										Hi-Hat Closed T8 2		
91	G5	(G6)										Tom T8 2		

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1　　No Sound

	BreakKit	AnalogT8Kit	AnalogT9Kit	StudioKit
PSR-S950	O	O	O	O
PSR-S750	O	O	O	O

Bank Select MSB (0-127)			127			127			127			127		
Bank Select LSB (0-127)			0			0			0			0		
Program Change (0-127)			57			58			59			86		
Program Change (1-128)			58			59			60			87		
MIDI		**Keyboard Note**	**BreakKit**	**Key Off (*1)**	**Alternate Group (*2)**	**AnalogT8Kit**	**Key Off (*1)**	**Alternate Group (*2)**	**AnalogT9Kit**	**Key Off (*1)**	**Alternate Group (*2)**	**StudioKit**	**Key Off (*1)**	**Alternate Group (*2)**
Note#	**Note**													
13	C#-1	C#0												
14	D-1	D0												
15	D#-1	D#0												
16	E-1	E0												
17	F-1	F0												
18	F#-1	F#0												
19	G-1	G0				Snare Hammer			Snare Drum&Bass 1					
20	G#-1	G#0	Snare Break 8			Kick ZapHard			Kick Break 2					
21	A-1	A0	Snare Break 9			Snare Garg L			Snare Distortion					
22	A#-1	A#0	Hi-Hat Closed Break 1	●		Kick TekPower			Kick TekPower					
23	B-1	B0	Hi-Hat Closed Break 2	●		Kick Slimy			Kick Distortion RM					
24	C0	C1	Kick Break Deep			Kick T8 1			Kick T9 2					
25	C#0	C#1	Snare Hip			Snare Analog CR			Snare Analog CR					
26	D0	D1	Snare Lo-Fi			Snare T8 4			Snare T9 5					
27	D#0	D#1	Snare Clappy			Snare Clap Analog			Clap Analog Sm					
28	E0	E1	Snare LdwH Mono			Snare T8 3			Snare T9 Gate					
29	F0	F1	Snare Rock Roll	●		Tom T8 5			Snare Rock Roll	●				
30	F#0	F#1	Snare Gate 1			Snare T8 5			Snare T9 3					
31	G0	G1	Snare Mid			Kick T8 3			Snare T9 4			Snare Studio L		
32	G#0	G#1	Snare Break Rim			Snare T8 4			Snare T9 Gate					
33	A0	A1	Kick Break Heavy			Kick T8 2			Kick T9 4			Kick Amb H		
34	A#0	A#1	Snare Hip Rim 4			Snare T8 3			Snare T9 5					
35	B0	B1	Kick Break 2			T8 Kick Bass			Kick T9 1			Kick Amb L		
36	C1	C2	Kick Break 1			Kick T8 1			Kick T9 3			Kick Studio		
37	C#1	C#2	Snare Hip Rim 1			Snare T8 Rim			Snare T9 Rim					
38	D1	D2	Snare Break 3			Snare T8 2			Snare T9 1			Snare Studio M		
39	D#1	D#2	Snare Break 1			Clap T9			Clap T9					
40	E1	E2	Snare Break 2			Snare T8 1			Snare T9 2			Snare Studio L		
41	F1	F2	Tom Break 1			Tom T8 1			Tom T9 1					
42	F#1	F#2	Hi-Hat Closed Rock Soft		1	Hi-Hat Closed T8		1	Hi-Hat Closed T9		1			
43	G1	G2	Tom Break 2			Tom T8 2			Tom T9 2					
44	G#1	G#2	Hi-Hat Pedal Rock		1	Hi-Hat Pedal T8		1	Hi-Hat Pedal T9		1			
45	A1	A2	Tom Break 3			Tom T8 3			Tom T9 3					
46	A#1	A#2	Hi-Hat Half Open Rock		1	Hi-Hat Open T8		1	Hi-Hat Open T9		1			
47	B1	B2	Tom Break 4			Tom T8 4			Tom T9 4					
48	C2	C3	Tom Break 5			Tom T8 6			Tom T9 5					
49	C#2	C#3	Crash Cymbal 2			Crash T8			Crash T9					
50	D2	D3	Tom Break 6			Tom T8 7			Tom T9 6					
51	D#2	D#3	Ride Cymbal 3			Ride T9			Ride T9					
52	E2	E3	Chinese Cymbal 2			Chinese Cymbal 2			Chinese Cymbal 2					
53	F2	F3	Ride Cymbal Cup 2			Ride Cymbal Cup 2			Ride Cymbal Cup 2					
54	F#2	F#3	Tambourine 1 Hit			Tambourine RX5			Tambourine RX5					
55	G2	G3	Crash Cymbal 3						Crash Cymbal 3					
56	G#2	G#3	Cowbell 1			Cowbell T8			Cowbell 1					
57	A2	A3				Crash Cymbal 4			Crash Cymbal 4					
58	A#2	A#3	Cowbell RX11						Cowbell T8					
59	B2	B3				Ride Cymbal 3			Ride Cymbal 3					
60	C3	C4				Conga T8 5			Conga T8 5					
61	C#3	C#4				Conga T8 4			Conga T8 4					
62	D3	D4	Conga H Tip			Conga T8 3			Conga Tip					
63	D#3	D#4	Conga H Open Slap			Conga T8 2			Conga Open Slap					
64	E3	E4	Conga H Open			Conga T8 1			Conga Open					
65	F3	F4	Bongo 2 H											
66	F#3	F#4	Bongo 2 L											
67	G3	G4	Conga Open			Glass H			Analog Click					
68	G#3	G#4				Glass L			Conga T8 1					
69	A3	A4												
70	A#3	A#4	Maracas Slur			Maracas T8			Maracas Slur					
71	B3	B4	Timbale H			FxGun 2	●		FxGun 2	●				
72	C4	C5	Timbale L			FxGun 1	●		FxGun 1	●				
73	C#4	C#5	Scratch H 2	●		Analog Shaker H	●		Scratch H 2	●				
74	D4	D5	Scratch Down	●		Analog Shaker L	●		Scratch Down	●				
75	D#4	D#5	Clave			Clave T8			Hi Q 3					
76	E4	E5				Hi Q 1			Hi Q 1					
77	F4	F5				Hi Q 2			Hi Q 2					
78	F#4	F#5	Scratch L			Scratch L			Scratch L					
79	G4	G5	Scratch L 2			Scratch L 2			Scratch L 2					
80	G#4	G#5												
81	A4	A5												
82	A#4	A#5	Kick Break 3			Analog Shaker			Analog Shaker					
83	B4	B5	Kick Break 4			Sleigh Bell			Sleigh Bell					
84	C5	C6	Kick Break 5	●										
85	C#5	(C#6)	Kick Break 6			Snare Hip 1			Snare Piccolo					
86	D5	(D6)	Kick Break 7			Snare Hip 2			Snare T8 5					
87	D#5	(D#6)	Hi-Hat Closed Break 3			Snare Hip Gate			Snare Rock Roll Distortion					
88	E5	(E6)	Snare Break 4			Snare Break 1			Snare Brush Mute					
89	F5	(F6)	Snare Break 5			Kick Blip			Kick Blip Hard					
90	F#5	(F#6)	Snare Break 6			Snare FX 1			Snare Jungle 1					
91	G5	(G6)	Snare Break 7			Kick FxHammer			Kick Sustain					

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1 No Sound

	PowerKit1	PowerKit2	AcousticKit	RockKit2
PSR-S950	O	O	O	O
PSR-S750	O	O	—	—

Bank Select MSB (0-127)			**127**			**127**			**127**			**127**		
Bank Select LSB (0-127)			**0**			**0**			**0**			**0**		
Program Change (0-127)			**87**			**88**			**89**			**90**		
Program Change (1-128)			**88**			**89**			**90**			**91**		
MIDI		**Keyboard Note**	**PowerKit1**	**Key Off (*1)**	**Alternate Group (*2)**	**PowerKit2**	**Key Off (*1)**	**Alternate Group (*2)**	**AcousticKit**	**Key Off (*1)**	**Alternate Group (*2)**	**RockKit2**	**Key Off (*1)**	**Alternate Group (*2)**
Note#	**Note**													
13	C#-1	C#0												
14	D-1	D0												
15	D#-1	D#0												
16	E-1	E0												
17	F-1	F0												
18	F#-1	F#0												
19	G-1	G0												
20	G#-1	G#0												
21	A-1	A0												
22	A#-1	A#0												
23	B-1	B0												
24	C0	C1												
25	C#0	C#1												
26	D0	D1												
27	D#0	D#1												
28	E0	E1												
29	F0	F1							Snare Roll Acoustic	●		Snare Roll Rock	●	
30	F#0	F#1												
31	G0	G1	Snare Soft Power 1			Snare Soft Power 2			Snare Soft Acoustic			Snare Soft Rock		
32	G#0	G#1												
33	A0	A1	Kick Amb+			Kick Amb+			Kick Soft Acoustic			Kick Soft Rock		
34	A#0	A#1	Open Rim Power 1			Open Rim Power 2			Rim Acoustic			Rim Rock		
35	B0	B1	Kick Power Open			Kick Power Open			Kick Close Acoustic			Kick Rock Heavy		
36	C1	C2	Kick Power Closed			Kick Power Closed			Kick Open Acoustic			Kick Rock		
37	C#1	C#2	Side Stick Power			Side Stick Power			Stick Acoustic			Stick Rock		
38	D1	D2	Snare Power			Snare Power Snappy			Snare Acoustic			Snare Rock		
39	D#1	D#2	Hand Clap Power			Hand Clap Power			Hand Clap Power			Hand Clap Power		
40	E1	E2	Snare Rough			Snare Loose			Snare Rough Acoustic			Snare Dry Rock		
41	F1	F2	Tom Power 1			Tom Power 1			Tom Acoustic 1			Tom Rock 1		
42	F#1	F#2	Hi-Hat Closed Power		1	Hi-Hat Closed Power+Edge		1	Hi-Hat Closed Acoustic		1	Hi-Hat Closed Rock		1
43	G1	G2	Tom Power 2			Tom Power 2			Tom Acoustic 2			Tom Rock 2		
44	G#1	G#2	Hi-Hat Pedal Power		1	Hi-Hat Pedal Power		1	Hi-Hat Pedal Acoustic		1	Hi-Hat Pedal Rock		1
45	A1	A2	Tom Power 3			Tom Power 3			Tom Acoustic 3			Tom Rock 3		
46	A#1	A#2	Hi-Hat Open Power		1	Hi-Hat Open Power		1	Hi-Hat Open Acoustic		1	Hi-Hat Open ROCK		1
47	B1	B2	Tom Power 4			Tom Power 4			Tom Acoustic 4			Tom Rock 4		
48	C2	C3	Tom Power 5			Tom Power 5			Tom Acoustic 5			Tom Rock 5		
49	C#2	C#3							Crash Cymbal Acoustic 1					
50	D2	D3	Tom Power 6			Tom Power 6			Tom Acoustic 6			Tom Rock 6		
51	D#2	D#3							Ride Cymbal Acoustic 1					
52	E2	E3							Chinese Cymbal Acoustic					
53	F2	F3							Ride Cymbal Acoustic					
54	F#2	F#3												
55	G2	G3							Splash Cymbal Acoustic					
56	G#2	G#3												
57	A2	A3							Crash Cymbal Acoustic 2					
58	A#2	A#3												
59	B2	B3							Ride Cymbal Acoustic 2					
60	C3	C4												
61	C#3	C#4												
62	D3	D4												
63	D#3	D#4												
64	E3	E4												
65	F3	F4												
66	F#3	F#4												
67	G3	G4												
68	G#3	G#4												
69	A3	A4												
70	A#3	A#4												
71	B3	B4												
72	C4	C5												
73	C#4	C#5												
74	D4	D5												
75	D#4	D#5												
76	E4	E5												
77	F4	F5												
78	F#4	F#5												
79	G4	G5												
80	G#4	G#5												
81	A4	A5												
82	A#4	A#5												
83	B4	B5												
84	C5	C6												
85	C#5	(C#6)												
86	D5	(D6)												
87	D#5	(D#6)												
88	E5	(E6)												
89	F5	(F6)												
90	F#5	(F#6)												
91	G5	(G6)												

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1　　No Sound

	RealDrums	ChineseMixKit
PSR-S950	O	O
PSR-S750	—	O

Bank Select MSB (0-127)			**127**			**127**		
Bank Select LSB (0-127)			**0**			**0**		
Program Change (0-127)			**91**			**127**		
Program Change (1-128)			**92**			**128**		
MIDI		**Keyboard Note**	**RealDrums**	**Key Off (*1)**	**Alternate Group (*2)**	**ChineseMixKit**	**Key Off (*1)**	**Alternate Group (*2)**
Note#	**Note**							
13	C#-1	C#0						
14	D-1	D0						
15	D#-1	D#0						
16	E-1	E0						
17	F-1	F0						
18	F#-1	F#0						
19	G-1	G0						
20	G#-1	G#0						
21	A-1	A0						
22	A#-1	A#0						
23	B-1	B0						
24	C0	C1						
25	C#0	C#1						
26	D0	D1	Brush Swirl 2	●				
27	D#0	D#1						
28	E0	E1						
29	F0	F1	Snare Roll Rock	●				
30	F#0	F#1						
31	G0	G1	SnareTight					
32	G#0	G#1						
33	A0	A1	Kick Genuine					
34	A#0	A#1	Rim Real					
35	B0	B1	Kick Real 1					
36	C1	C2	Kick Real 2					
37	C#1	C#2	Stick Real					
38	D1	D2	Snare Real 1					
39	D#1	D#2	Clap Power					
40	E1	E2	Snare Real 2					
41	F1	F2	Tom Real 1					
42	F#1	F#2	Hi-Hat Closed Real		1			
43	G1	G2	Tom Real 2					
44	G#1	G#2	Hi-Hat Pedal Real		1			
45	A1	A2	Tom Real 3					
46	A#1	A#2	Hi-Hat Open Real		1			
47	B1	B2	Tom Real 4					
48	C2	C3	Tom Real 5					
49	C#2	C#3	Crash Cymbal Real 1					
50	D2	D3	Tom Real 6					
51	D#2	D#3	Ride Cymbal Real 1					
52	E2	E3	CHINE CYM Real					
53	F2	F3	Ride Cup Real					
54	F#2	F#3						
55	G2	G3	Splash Cymbal Real					
56	G#2	G#3						
57	A2	A3	Crash Cymbal Real 2					
58	A#2	A#3						
59	B2	B3	Ride Cymbal Real 2					
60	C3	C4						
61	C#3	C#4						
62	D3	D4						
63	D#3	D#4						
64	E3	E4						
65	F3	F4						
66	F#3	F#4						
67	G3	G4				Dagu Mute		4
68	G#3	G#4				Zhongcha Mute		5
69	A3	A4				Dagu Heavy		4
70	A#3	A#4				Zhongcha Open		5
71	B3	B4				Paigu Middle	●	
72	C4	C5				Paigu Low	●	
73	C#4	C#5				Xiaocha Mute		6
74	D4	D5				Bangu	●	
75	D#4	D#5				Xiaocha Open		6
76	E4	E5				Bangzi		
77	F4	F5				Muyu Low		
78	F#4	F#5				Zhongluo Mute		7
79	G4	G5				Muyu Mid-Low		
80	G#4	G#5				Zhongluo Open		7
81	A4	A5				Muyu Middle		
82	A#4	A#5				Xiaoluo Open		
83	B4	B5				Muyu Mid-High		
84	C5	C6				Muyu High		
85	C#5	(C#6)						
86	D5	(D6)						
87	D#5	(D#6)						
88	E5	(E6)						
89	F5	(F6)						
90	F#5	(F#6)						
91	G5	(G6)						

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1　　No Sound

Drum Kit (SFX Kit)

	SFXKit1	SFXKit2	NoisesKit	ArabicKit2
PSR-S950	O	O	O	O
PSR-S750	O	O	—	O

Bank Select MSB (0-127)			126			126			126			126		
Bank Select LSB (0-127)			0			0			0			0		
Program Change (0-127)			0			1			8			35		
Program Change (1-128)			1			2			9			36		
MIDI		Keyboard Note	SFXKit1	Key Off (*1)	Alternate Group (*2)	SFXKit2	Key Off (*1)	Alternate Group (*2)	NoisesKit	Key Off (*1)	Alternate Group (*2)	ArabicKit2	Key Off (*1)	Alternate Group (*2)
Note#	Note													
13	C#-1	C#0												
14	D-1	D0												
15	D#-1	D#0												
16	E-1	E0												
17	F-1	F0												
18	F#-1	F#0												
19	G-1	G0												
20	G#-1	G#0												
21	A-1	A0												
22	A#-1	A#0												
23	B-1	B0												
24	C0	C1										Nakarazan Dom		
25	C#0	C#1										Cabasa		
26	D0	D1										Nakarazan Edge		
27	D#0	D#1										Hager Dom		
28	E0	E1										Hager Edge		
29	F0	F1										Bongo H		
30	F#0	F#1										Bongo L		
31	G0	G1										Conga H Mute		
32	G#0	G#1										Conga H Open		
33	A0	A1										Conga L		
34	A#0	A#1										Zagrouda H		
35	B0	B1										Zagrouda L	●	
36	C1	C2	Cutting Noise	●		Phone Call	●		White Noise	●		Kick Soft		
37	C#1	C#2	Cutting Noise 2	●		Door Squeak	●		Pink Noise	●				
38	D1	D2				Door Slam	●		White Noise Down 1	●		Snare Soft		
39	D#1	D#2	String Slap	●		Scratch Cut	●		Pink Noise Down 1	●		Arabic Hand Clap		
40	E1	E2				Scratch H 3	●		White Noise Down 2	●		Snare		
41	F1	F2				Wind Chime	●		Pink Noise Down 2	●				
42	F#1	F#2				Telephone Ring 2	●		White Noise Up 2	●				
43	G1	G2							White Noise Up 1	●				
44	G#1	G#2							Pink Noise Up	●				
45	A1	A2							White Noise Up Release	●				
46	A#1	A#2							Pink Noise Up Release	●				
47	B1	B2							White Noise Up LFO	●				
48	C2	C3							Pink Noise Up LFO	●				
49	C#2	C#3												
50	D2	D3												
51	D#2	D#3												
52	E2	E3	Flute Key Click	●		Car Engine Ignition	●					Crash Cymbal 2		
53	F2	F3				Car Tires Squeal	●					Duhulla Dom		
54	F#2	F#3				Car Passing	●							
55	G2	G3				Car Crash	●					Duhulla Tak		
56	G#2	G#3				Siren	●							
57	A2	A3				Train	●					Duhulla Sak		
58	A#2	A#3				Jet Plane	●					Claves		
59	B2	B3				Starship	●					Doff Dom		
60	C3	C4				Burst	●					Katem Dom		
61	C#3	C#4				Roller Coaster	●					Katem Tak		
62	D3	D4				Submarine	●					Katem Sak		
63	D#3	D#4										Katem Tak		
64	E3	E4										Doff Tak		
65	F3	F4										Tabla Dom		
66	F#3	F#4										Tabla Tak1		
67	G3	G4										Tabla Tik		
68	G#3	G#4	Shower	●		Laugh	●					Tabla Tak2		
69	A3	A4	Thunder	●		Scream	●					Tabla Sak		
70	A#3	A#4	Wind	●		Punch	●					Tabla Roll of Edge	●	
71	B3	B4	Stream	●		Heart Beat	●					Tabla Flam		
72	C4	C5	Bubble	●		Foot Steps	●					Sagat 1		
73	C#4	C#5	Feed	●								Tabel Dom		
74	D4	D5										Sagat 3		
75	D#4	D#5										Tabel Tak		
76	E4	E5										Sagat 2		
77	F4	F5										Rik Dom		
78	F#4	F#5										Rik Tak 2		
79	G4	G5										Rik Finger 1		
80	G#4	G#5										Rik Tak 1		
81	A4	A5										Rik Finger 2		
82	A#4	A#5										Rik Brass Tremolo	●	
83	B4	B5										Rik Sak		
84	C5	C6	Dog	●		Machine Gun	●					Rik Tik		
85	C#5	(C#6)	Horse	●		Laser Gun	●							
86	D5	(D6)	Bird Tweet 2	●		Explosion	●							
87	D#5	(D#6)				Firework	●							
88	E5	(E6)												
89	F5	(F6)												
90	F#5	(F#6)	Ghost	●										
91	G5	(G6)	Maou	●										

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1 No Sound

	ArabicKit1	CubanKit	PopLatinKit	ArabicMixKit
PSR-S950	O	O	O	O
PSR-S750	O	O	O	O

Bank Select MSB (0-127)			**126**			**126**			**126**			**126**		
Bank Select LSB (0-127)			**0**			**0**			**0**			**0**		
Program Change (0-127)			**36**			**40**			**43**			**64**		
Program Change (1-128)			**37**			**41**			**44**			**65**		
MIDI		**Keyboard Note**	**ArabicKit1**	**Key Off (*1)**	**Alternate Group (*2)**	**CubanKit**	**Key Off (*1)**	**Alternate Group (*2)**	**PopLatinKit**	**Key Off (*1)**	**Alternate Group (*2)**	**ArabicMixKit**	**Key Off (*1)**	**Alternate Group (*2)**
Note#	**Note**													
13	C#-1	C#0	Zarb Back mf						Cajon Low			Conga Analog H		
14	D-1	D0	Zarb Tom f						Cajon Slap			Conga Analog M		
15	D#-1	D#0	Zarb Eshareh						Cajon Tip			Conga Analog L		
16	E-1	E0	Zarb Whipping						Claves High			Vibraslap		
17	F-1	F0	Tombak Tom f						Claves Low			Kick Techno L		
18	F#-1	F#0	Neghareh Tom f						Hand Clap			Side Stick Arabic Mix		
19	G-1	G0	Tombak Back f									Snare Techno		
20	G#-1	G#0	Neghareh Back f						Finger Snap			Guiro Long	●	
21	A-1	A0	Tombak Snap f						Castanet			Kick Techno Q		
22	A#-1	A#0	Neghareh Pelang f			Conga H Tip			Conga H Tip			Open Rim Shot		
23	B-1	B0	Tombak Trill	●		Conga H Heel			Conga H Heel			Funk Snare 2		
24	C0	C1	Khaligi Clap 1			Conga H Open			Conga H Open			Kick Arabic Mix		
25	C#0	C#1	Arabic Zalgouta Open	●		Conga H Mute			Conga H Mute			Funk Snare 1		
26	D0	D1	Khaligi Clap 2			Conga H Slap Open			Conga H Slap Open			Snare Arabic Mix		
27	D#0	D#1	Arabic Zalgouta Close			Conga H Slap			Conga H Slap			Hand Clap		
28	E0	E1	Arabic Hand Clap			Conga H Slap Mute			Conga H Slap Mute			Snare		
29	F0	F1	Tabel Tak 1			Conga L Tip			Conga L Tip			Tom Electro 1		
30	F#0	F#1	Sagat 1			Conga L Heel			Conga L Heel			Hi-Hat Closed Arabic Mix		1
31	G0	G1	Tabel Dom			Conga L Open			Conga L Open			Tom Electro 2		
32	G#0	G#1	Sagat 2			Conga L Mute			Conga L Mute			Hi-Hat Half Arabic Mix		1
33	A0	A1	Tabel Tak 2			Conga L Slap Open			Conga L Slap Open			Tom Electro 3		
34	A#0	A#1	Sagat 3			Conga L Slap			Conga L Slap			Hi-Hat Open Arabic Mix		1
35	B0	B1	Riq Tik 3			Conga L Slide	●		Conga L Slide	●		Tom Electro 4		
36	C1	C2	Riq Tik 2			Bongo H Open 1 Finger			Bongo H Open 1 finger			Tom Electro 5		
37	C#1	C#2	Riq Tik Hard 1			Bongo H Open 3 Finger			Bongo H Open 3 finger			Crash Cymbal 1		
38	D1	D2	Riq Tik 1			Bongo H Rim			Bongo H Rim			Tom Electro 6		
39	D#1	D#2	Riq Tik Hard 2			Bongo H Tip			Bongo H Tip			Hi-Hat Open 3		1
40	E1	E2	Riq Tik Hard 3			Bongo H Heel			Bongo H Heel			Reverse Cymbal	●	
41	F1	F2	Riq Tish			Bongo H Slap			Bongo H Slap			Timbale L		
42	F#1	F#2	Riq Snouj 2			Bongo L Open 1 Finger			Bongo L Open 1 finger			Conga H Open		
43	G1	G2	Riq Roll	●		Bongo L Open 3 Finger			Bongo L Open 3 finger			Timbale H		
44	G#1	G#2	Riq Snouj 1			Bongo L Rim			Bongo L Rim			Conga H Mute		
45	A1	A2	Riq Sak			Bongo L Tip			Bongo L Tip			Tambourine		
46	A#1	A#2	Riq Snouj 3			Bongo L Heel			Bongo L Heel			Conga L		
47	B1	B2	Riq Snouj 4			Bongo L Slap			Bongo L Slap			Cowbell		
48	C2	C3	Riq Tak 1			Timbale L Open			Timbale L Open			Claves		
49	C#2	C#3	Riq Brass 1									Bongo H		
50	D2	D3	Riq Tak 2									Wood Block H		
51	D#2	D#3	Riq Brass 2									Bongo L		
52	E2	E3	Riq Dom									Wood Block L		
53	F2	F3	Katem Tak Doff			Paila L			Paila L			Kurdish Dohol Low f		
54	F#2	F#3	Katem Dom			Timbale H Open			Timbale H Open			Cabasa		
55	G2	G3	Katem Sak 1									Kurdish Dohol High f		
56	G#2	G#3	Katem Tak 1									Shaker		
57	A2	A3	Katem Sak 2									Snap 1		
58	A#2	A#3	Katem Tak 2									Maracas		
59	B2	B3	Daholla Sak 2			Paila H			Paila H			Snap 2		
60	C3	C4	Daholla Sak 1			Cowbell Top			Cowbell Top			Khaligi Twaisat 3		4
61	C#3	C#4	Daholla Tak 1						Cowbell 1			Khaligi Twaisat 1		4
62	D3	D4	Daholla Dom						Cowbell 2			Khaligi Twaisat 2		4
63	D#3	D#4	Daholla Tak 2						Cowbell 3			Khaligi Twaisat 5 Open		4
64	E3	E4	Tablah Prok			Guiro Short			Guiro Short			Khaligi Twaisat 4 Open		4
65	F3	F4	Tablah Dom 2			Guiro Long	●		Guiro Long	●		Khaligi Tablah Small Dom		3
66	F#3	F#4	Tablah Roll of Edge	●					Metal Guiro Short			Khaligi Tar Barashim Group Dom		
67	G3	G4	Tablah Tak Finger 4						Metal Guiro Long	●		Khaligi Tablah Small Snap		
68	G#3	G#4	Tablah Tak Trill 1			Tambourine			Tambourine			Khaligi Tar Barashim Group Sak		
69	A3	A4	Tablah Tak Finger 3						Tambourim Open			Khaligi Tablah Small Sak		3
70	A#3	A#4	Tablah Tak Trill 2						Tambourim Mute			Khaligi Tar Barashim Group Tak		
71	B3	B4	Tablah Tak Finger 2						Tambourim Tip			Khaligi Tablah Small Tik		3
72	C4	C5	Tablah Tak Finger 1			Maracas			Maracas			Khaligi Tablah Big Dom 1		
73	C#4	C#5	Tablah Tik 2			Shaker			Shaker			Khaligi Tar Segal Dom		
74	D4	D5	Tablah Tik 4			Cabasa			Cabasa			Khaligi Tablah Big Tak 1		
75	D#4	D#5	Tablah Tik 3						Cuica Mute			Khaligi Tar Segal Tak		
76	E4	E5	Tablah Tik 1						Cuica Open			Khaligi Tablah Big Sak 1		
77	F4	F5	Tablah Tak 3						Cowbell High 1			Tablah Dom 1		
78	F#4	F#5	Tablah Tak 1						Cowbell High 2			Tablah Tak 1		
79	G4	G5	Tablah Tak 4						Shekere			Tablah Tremolo	●	
80	G#4	G#5	Tablah Tak 2						Shekere Tone			Tablah Tak 2		
81	A4	A5	Tablah Sak 2						Triangle Mute		1	Tablah Tik 1		
82	A#4	A#5	Tablah Tremolo	●					Triangle Open		1	Tablah Sak 1		
83	B4	B5	Tablah Sak 1									Tablah Tik 3		
84	C5	C6	Tablah Dom 1									Tablah Tik 2		
85	C#5	(C#6)												
86	D5	(D6)												
87	D#5	(D#6)												
88	E5	(E6)												
89	F5	(F6)												
90	F#5	(F#6)												
91	G5	(G6)												

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1 No Sound

	TurkishKit	IndianKit	ChineseKit
PSR-S950	O	O	O
PSR-S750	—	O	O

Bank Select MSB (0-127)			126			126			126		
Bank Select LSB (0-127)			0			0			0		
Program Change (0-127)			67			114			124		
Program Change (1-128)			68			115			125		
MIDI		Keyboard Note	TurkishKit	Key Off (*1)	Alternate Group (*2)	IndianKit	Key Off (*1)	Alternate Group (*2)	ChineseKit	Key Off (*1)	Alternate Group (*2)
Note#	Note										
13	C#-1	C#0	Asma Davul Left Side								
14	D-1	D0	Asma Davul Right Side								
15	D#-1	D#0	Asma Davul Side Body			Indian Hand Clap					
16	E-1	E0	Asma Davul Both Sides			Dafli Open					
17	F-1	F0	Koltuk Davul Open Flam			Dafli Slap		1			
18	F#-1	F#0	Koltuk Davul Teke Open			Dafli Rim		1			
19	G-1	G0	Koltuk Davul Tek Open			Duff Open					
20	G#-1	G#0	Koltuk Davul Dum			Duff Slap					
21	A-1	A0	Bendir Teke Open Flam			Duff Rim					
22	A#-1	A#0	Bendir Teke Dead			Hatheli Long		2			
23	B-1	B0	Bendir Tek Dead			Hatheli Short		2	Da Cha	●	
24	C0	C1	Bendir Teke			Baya ge		3	Da Gu mp	●	2
25	C#0	C#1	Bendir Tek			Baya ke		3	Da Gu rim	●	
26	D0	D1	Bendir Slap		2	Baya ghe		3	Da Gu f	●	2
27	D#0	D#1	Bendir Dum		2	Baya ka		3	Da Gu hand	●	2
28	E0	E1	Zil Right Close		3	Tabla na		4	Da Gu roll	●	2
29	F0	F1	Zil Right Open		3	Tabla tin		4	Pai Gu 4	●	
30	F#0	F#1	Zil Left Close		4	Tablabaya dha		3	Pai Gu 4 High	●	
31	G0	G1	Zil Left Open		4	Dhol 1 Open			Pai Gu 3	●	
32	G#0	G#1	Tef Teke Flam		5	Dhol 1 Slap		5	Pai Gu 3 High	●	
33	A0	A1	Tef Tek Mute		5	Dhol 1 Mute		5	Pai Gu 2	●	
34	A#0	A#1	Tef Teke Damped			Dhol 1 Open Slap		5	Pai Gu 2 High	●	
35	B0	B1	Tef Tek Mute Medium			Dhol 1 Roll			Pai Gu 1	●	
36	C1	C2	Tef Dum Mute			Dandia Short		6	Luo High 1	●	
37	C#1	C#2	Tef Cymbal		9	Dandia Long		6	Gong batter	●	
38	D1	D2	Tef Cymbal Mute		9	Chutki			Jin Luo	●	
39	D#1	D#2	Tef Tremolo	●		Chipri			Luo High 2	●	
40	E1	E2	Tef Shake 1			Khanjira Open			Luo Mid-Low	●	5
41	F1	F2	Tef Shake 2			Khanjira Slap			Luo	●	
42	F#1	F#2	Tef Tek Flam			Khanjira Mute			Jin Luo Low	●	5
43	G1	G2	Tef Full Open			Khanjira Bendup			Da Cha	●	5
44	G#1	G#2	Tef Teke Open Short			Khanjira Benddown			Da Cha effect	●	5
45	A1	A2	Tef Tek Open Short			Dholak 1 Open			Zhong Cha	●	
46	A#1	A#2	Tef Tek Open			Dholak 1 Mute		7	Xiao Cha effect	●	1
47	B1	B2	Tef Dum Open			Dholak 1 Slap		7	Xiao Cha	●	1
48	C2	C3	Hollo Finger Dead			Dhol 2 Open			Mang Luo Low	●	
49	C#2	C#3	Hollo Slap			Dhol 2 Slap		8	Mang Luo Mid	●	
50	D2	D3	Hollo Dum			Dhol 2 Rim		8	Qing	●	
51	D#2	D#3	Kasik		1	Mridangam na		9	Finger Bell	●	
52	E2	E3	Kasik Flam		1	Mridangam din		9	Luo big	●	
53	F2	F3	Bass Darbuka Tek Dead			Mridangam ki		9	Mu Yu Low	●	
54	F#2	F#3	Bass Darbuka Tek Flam			Mridangam ta		9	Mu Yu Mid-Low	●	
55	G2	G3	Bass Darbuka Teke			Mridangam Chapu		9	Mu Yu Mid	●	
56	G#2	G#3	Bass Darbuka Teke Other Finger			Mridangam Lo Closed		10	Mu Yu High	●	
57	A2	A3	Bass Darbuka Teke Index Finger			Mridangam Lo Open		10	Nan Bang Zi roll	●	3
58	A#2	A#3	Bass Darbuka Tek			Chimta Normal		11	Nan Bang Zi	●	3
59	B2	B3	Bass Darbuka Slap			Chimta Ring		11	Ban Gu	●	4
60	C3	C4	Bass Darbuka Slap Medium		7	Dholki Hi Open		12	Ban	●	4
61	C#3	C#4	Bass Darbuka Dum		7	Dholki Hi Mute		12	Ban Gu roll	●	4
62	D3	D4	Darbuka Roll Close	●	6	Dholki Lo Open		13	Chinese Opera Voice 1	●	
63	D#3	D#4	Darbuka Roll Open	●	6	Dholki Hi Slap		12	Chinese Opera Voice 2	●	
64	E3	E4	Darbuka Teke Damped Flam			Dholki Lo Slide		13	Chinese Opera Voice 3	●	
65	F3	F4	Darbuka Tek Dead			Khol Open		14	Yun Luo F4	●	
66	F#3	F#4	Darbuka Tek Damped			Khol slide			Yun Luo F#4	●	
67	G3	G4	Darbuka Teke Open Flam			Khol Mute		14	Yun Luo G4	●	
68	G#3	G#4	Darbuka Teke Open			Manjira Open		15	Yun Luo G#4	●	
69	A3	A4	Darbuka Teke Other Finger 1			Manjira Close		15	Yun Luo A4	●	
70	A#3	A#4	Darbuka Teke Index Finger 1			Jhanji Open		16	Yun Luo A#4	●	
71	B3	B4	Darbuka Tek 1			Jhanji Close		16	Yun Luo B4	●	
72	C4	C5	Darbuka Teke Other Finger 2			Mondira Open		17	Yun Luo C5	●	
73	C#4	C#5	Darbuka Teke Index Finger 2			Mondira Close		17	Yun Luo C#5	●	
74	D4	D5	Darbuka Tek 2			Indian Bhangra Scat 1			Yun Luo D5	●	
75	D#4	D#5	Darbuka Slap Medium			Indian Bhangra Scat 2			Yun Luo D#5	●	
76	E4	E5	Darbuka Slap		8	Indian Bhangra Scat 3			Yun Luo E5	●	
77	F4	F5	Darbuka Dum		8	indian Bhangra Scat 4			Yun Luo F5	●	
78	F#4	F#5	Bongo Tek Roll	●		Khomokh Normal			Yun Luo F#5	●	
79	G4	G5	Bongo Flam			Khomokh Mute			Yun Luo G5	●	
80	G#4	G#5	Bongo Tek Flam			Khomokh mltatk			Yun Luo G#5	●	
81	A4	A5	Bongo Tek			Thavil Open			Yun Luo A5	●	
82	A#4	A#5	Bongo Slap			Thavil Slap			Yun Luo A#5	●	
83	B4	B5	Bongo Flam Hi			Thavil Mute			Yun Luo B5	●	
84	C5	C6	Bongo Dum			Khartaal			Yun Luo C6	●	
85	C#5	(C#6)				Dholak 2 Open		18			
86	D5	(D6)				Dholak 2 Slide		18			
87	D#5	(D#6)				Dholak 2 Rim 1					
88	E5	(E6)				Dholak 2 Rim 2					
89	F5	(F6)				Dholak 2 Ring					
90	F#5	(F#6)				Dholak 2 Slap					
91	G5	(G6)									

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1 No Sound

GM2 Drum Kit

	StandardSet	RoomSet	PowerSet
PSR-S950	O	O	O
PSR-S750	O	O	O

Bank Select MSB (0-127)			126			126			126		
Bank Select LSB (0-127)			0			0			0		
Program Change (0-127)			0			1			2		
Program Change (1-128)			1			2			3		
MIDI		Keyboard Note	StandardSet	Key Off (*1)	Alternate Group (*2)	RoomSet	Key Off (*1)	Alternate Group (*2)	PowerSet	Key Off (*1)	Alternate Group (*2)
Note#	Note										
13	C#-1	C#0									
14	D-1	D0									
15	D#-1	D#0									
16	E-1	E0									
17	F-1	F0									
18	F#-1	F#0									
19	G-1	G0									
20	G#-1	G#0									
21	A-1	A0									
22	A#-1	A#0									
23	B-1	B0									
24	C0	C1									
25	C#0	C#1									
26	D0	D1									
27	D#0	D#1	High Q			High Q			High Q		
28	E0	E1	Slap			Slap			Slap		
29	F0	F1	Scratch Push		7	Scratch Push		7	Scratch Push		7
30	F#0	F#1	Scratch Pull		7	Scratch Pull		7	Scratch Pull		7
31	G0	G1	Sticks			Sticks			Sticks		
32	G#0	G#1	Square Click			Square Click			Square Click		
33	A0	A1	Metronome Click			Metronome Click			Metronome Click		
34	A#0	A#1	Metronome Bell			Metronome Bell			Metronome Bell		
35	B0	B1	Acoustic Bass Drum			Acoustic Bass Drum			Acoustic Bass Drum		
36	C1	C2	Bass Drum 1			Bass Drum 1			Power Kick Drum		
37	C#1	C#2	Side Stick								
38	D1	D2	Acoustic Snare			Acoustic Snare			Power Snare Drum		
39	D#1	D#2	Hand Clap								
40	E1	E2	Electric Snare			Electric Snare			Electric Snare		
41	F1	F2	Low Floor Tom			Room Low Tom 2			Power Low Tom 2		
42	F#1	F#2	Closed Hi-hat		1	Closed Hi-hat		1	Closed Hi-hat		1
43	G1	G2	High Floor Tom			Room Low Tom 1			Power Low Tom 1		
44	G#1	G#2	Pedal Hi-hat		1	Pedal Hi-hat		1	Pedal Hi-hat		1
45	A1	A2	Low Tom			Room Mid Tom 2			Power Mid Tom 2		
46	A#1	A#2	Open Hi-hat		1	Open Hi-hat		1	Open Hi-hat		1
47	B1	B2	Low-Mid Tom			Room Mid Tom 1			Power Mid Tom 1		
48	C2	C3	High Mid Tom			Room Hi Tom 2			Power Hi Tom 2		
49	C#2	C#3	Crash Cymbal 1								
50	D2	D3	High Tom			Room Hi Tom 1			Power Hi Tom 1		
51	D#2	D#3	Ride Cymbal 1								
52	E2	E3	Chinese Cymbal								
53	F2	F3	Ride Bell			Ride Bell			Ride Bell		
54	F#2	F#3	Tambourine								
55	G2	G3	Splash Cymbal								
56	G#2	G#3	Cowbell								
57	A2	A3	Crash Cymbal 2								
58	A#2	A#3	Vibra-slap			Vibra-slap			Vibra-slap		
59	B2	B3	Ride Cymbal 2								
60	C3	C4	High Bongo			High Bongo			High Bongo		
61	C#3	C#4	Low Bongo			Low Bongo			Low Bongo		
62	D3	D4	Mute Hi Conga			Mute Hi Conga			Mute Hi Conga		
63	D#3	D#4	Open Hi Conga			Open Hi Conga			Open Hi Conga		
64	E3	E4	Low Conga			Low Conga			Low Conga		
65	F3	F4	High Timbale			High Timbale			High Timbale		
66	F#3	F#4	Low Timbale			Low Timbale			Low Timbale		
67	G3	G4	High Agogo			High Agogo			High Agogo		
68	G#3	G#4	Low Agogo			Low Agogo			Low Agogo		
69	A3	A4	Cabasa								
70	A#3	A#4	Maracas								
71	B3	B4	Short Whistle		2	Short Whistle		2	Short Whistle		2
72	C4	C5	Long Whistle		2	Long Whistle		2	Long Whistle		2
73	C#4	C#5	Short Guiro		3	Short Guiro		3	Short Guiro		3
74	D4	D5	Long Guiro		3	Long Guiro		3	Long Guiro		3
75	D#4	D#5	Claves								
76	E4	E5	Hi Wood Block			Hi Wood Block			Hi Wood Block		
77	F4	F5	Low Wood Block			Low Wood Block			Low Wood Block		
78	F#4	F#5	Mute Cuica		4	Mute Cuica		4	Mute Cuica		4
79	G4	G5	Open Cuica		4	Open Cuica		4	Open Cuica		4
80	G#4	G#5	Mute Triangle		5	Mute Triangle		5	Mute Triangle		5
81	A4	A5	Open Triangle		5	Open Triangle		5	Open Triangle		5
82	A#4	A#5	Shaker								
83	B4	B5	Jingle Bell			Jingle Bell			Jingle Bell		
84	C5	C6	Bell Tree								
85	C#5	(C#6)	Castanets			Castanets			Castanets		
86	D5	(D6)	Mute Surdo		6	Mute Surdo		6	Mute Surdo		6
87	D#5	(D#6)	Open Surdo		6	Open Surdo		6	Open Surdo		6
88	E5	(E6)									
89	F5	(F6)									
90	F#5	(F#6)									
91	G5	(G6)									

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1 No Sound

	ElectronicSet	AnalogSet	JazzSet
PSR-S950	O	O	O
PSR-S750	O	O	O

Bank Select MSB (0-127)			126			126			126		
Bank Select LSB (0-127)			0			0			0		
Program Change (0-127)			3			8			35		
Program Change (1-128)			4			9			36		
MIDI		Keyboard Note	ElectronicSet	Key Off (*1)	Alternate Group (*2)	AnalogSet	Key Off (*1)	Alternate Group (*2)	JazzSet	Key Off (*1)	Alternate Group (*2)
Note#	Note										
13	C#-1	C#0									
14	D-1	D0									
15	D#-1	D#0									
16	E-1	E0									
17	F-1	F0									
18	F#-1	F#0									
19	G-1	G0									
20	G#-1	G#0									
21	A-1	A0									
22	A#-1	A#0									
23	B-1	B0									
24	C0	C1									
25	C#0	C#1									
26	D0	D1									
27	D#0	D#1	High Q			High Q			High Q		
28	E0	E1	Slap			Slap			Slap		
29	F0	F1	Scratch Push		7	Scratch Push		7	Scratch Push		7
30	F#0	F#1	Scratch Pull		7	Scratch Pull		7	Scratch Pull		7
31	G0	G1	Sticks			Sticks			Sticks		
32	G#0	G#1	Square Click			Square Click			Square Click		
33	A0	A1	Metronome Click			Metronome Click			Metronome Click		
34	A#0	A#1	Metronome Bell			Metronome Bell			Metronome Bell		
35	B0	B1	Acoustic Bass Drum			Acoustic Bass Drum			Acoustic Bass Drum		
36	C1	C2	Electric Bass Drum			Analog Bass Drum			Jazz Kick 2		
37	C#1	C#2				Analog Rim Shot			Jazz Kick 1		
38	D1	D2	Electric Snare 1			Analog Snare 1			Power Snare Drum		
39	D#1	D#2									
40	E1	E2	Electric Snare 2			Electric Snare			Electric Snare		
41	F1	F2	Electric Low Tom 2			Analog Low Tom 2			Power Low Tom 2		
42	F#1	F#2	Closed Hi-hat		1	Analog CHH 1		1	Closed Hi-hat		1
43	G1	G2	Electric Low Tom 1			Analog Low Tom 1			Power Low Tom 1		
44	G#1	G#2	Pedal Hi-hat		1	Analog CHH 2		1	Pedal Hi-hat		1
45	A1	A2	Electric Mid Tom 2			Analog Mid Tom 2			Power Mid Tom 2		
46	A#1	A#2	Open Hi-hat		1	Analog OHH		1	Open Hi-hat		1
47	B1	B2	Electric Mid Tom 1			Analog Mid Tom 1			Power Mid Tom 1		
48	C2	C3	Electric Hi Tom 2			Analog Hi Tom 2			Power Hi Tom 2		
49	C#2	C#3				Analog Cymbal					
50	D2	D3	Electric Hi Tom 1			Analog Hi Tom 1			Power Hi Tom 1		
51	D#2	D#3									
52	E2	E3	Reverse Cymbal								
53	F2	F3	Ride Bell			Ride Bell			Ride Bell		
54	F#2	F#3									
55	G2	G3									
56	G#2	G#3				Analog Cowbell					
57	A2	A3									
58	A#2	A#3	Vibra-slap			Vibra-slap			Vibra-slap		
59	B2	B3									
60	C3	C4	High Bongo			High Bongo			High Bongo		
61	C#3	C#4	Low Bongo			Low Bongo			Low Bongo		
62	D3	D4	Mute Hi Conga			Analog High Conga			Mute Hi Conga		
63	D#3	D#4	Open Hi Conga			Analog Mid Conga			Open Hi Conga		
64	E3	E4	Low Conga			Analog Low Conga			Low Conga		
65	F3	F4	High Timbale			High Timbale			High Timbale		
66	F#3	F#4	Low Timbale			Low Timbale			Low Timbale		
67	G3	G4	High Agogo			High Agogo			High Agogo		
68	G#3	G#4	Low Agogo			Low Agogo			Low Agogo		
69	A3	A4									
70	A#3	A#4				Analog Maracas					
71	B3	B4	Short Whistle		2	Short Whistle		2	Short Whistle		2
72	C4	C5	Long Whistle		2	Long Whistle		2	Long Whistle		2
73	C#4	C#5	Short Guiro		3	Short Guiro		3	Short Guiro		3
74	D4	D5	Long Guiro		3	Long Guiro		3	Long Guiro		3
75	D#4	D#5				Analog Claves					
76	E4	E5	Hi Wood Block			Hi Wood Block			Hi Wood Block		
77	F4	F5	Low Wood Block			Low Wood Block			Low Wood Block		
78	F#4	F#5	Mute Cuica		4	Mute Cuica		4	Mute Cuica		4
79	G4	G5	Open Cuica		4	Open Cuica		4	Open Cuica		4
80	G#4	G#5	Mute Triangle		5	Mute Triangle		5	Mute Triangle		5
81	A4	A5	Open Triangle		5	Open Triangle		5	Open Triangle		5
82	A#4	A#5									
83	B4	B5	Jingle Bell			Jingle Bell			Jingle Bell		
84	C5	C6									
85	C#5	(C#6)	Castanets			Castanets			Castanets		
86	D5	(D6)	Mute Surdo		6	Mute Surdo		6	Mute Surdo		6
87	D#5	(D#6)	Open Surdo		6	Open Surdo		6	Open Surdo		6
88	E5	(E6)									
89	F5	(F6)									
90	F#5	(F#6)									
91	G5	(G6)									

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1 No Sound

	BrushSet	OrchestraSet	SFXSet
PSR-S950	O	O	O
PSR-S750	O	O	O

Bank Select MSB (0-127)			**126**			**126**			**126**		
Bank Select LSB (0-127)			**0**			**0**			**0**		
Program Change (0-127)			**36**			**37**			**38**		
Program Change (1-128)			**37**			**38**			**39**		
MIDI		**Keyboard Note**	**BrushSet**	**Key Off (*1)**	**Alternate Group (*2)**	**OrchestraSet**	**Key Off (*1)**	**Alternate Group (*2)**	**SFXSet**	**Key Off (*1)**	**Alternate Group (*2)**
Note#	**Note**										
13	C#-1	C#0									
14	D-1	D0									
15	D#-1	D#0									
16	E-1	E0									
17	F-1	F0									
18	F#-1	F#0									
19	G-1	G0									
20	G#-1	G#0									
21	A-1	A0									
22	A#-1	A#0									
23	B-1	B0									
24	C0	C1									
25	C#0	C#1									
26	D0	D1									
27	D#0	D#1	High Q			Closed Hi-hat 2		1			
28	E0	E1	Slap			Pedal Hi-hat		1			
29	F0	F1	Scratch Push		7	Open Hi-hat 2		1			
30	F#0	F#1	Scratch Pull		7	Ride Cymbal 1					
31	G0	G1	Sticks			Sticks					
32	G#0	G#1	Square Click			Square Click					
33	A0	A1	Metronome Click			Metronome Click					
34	A#0	A#1	Metronome Bell			Metronome Bell					
35	B0	B1	Acoustic Bass Drum			Concert BD 2					
36	C1	C2	Jazz Kick 2			Concert BD 1					
37	C#1	C#2	Jazz Kick 1			Analog Rim Shot					
38	D1	D2	Electric Snare 1			Concert SD 1					
39	D#1	D#2	Brush Tap			Castanets			High Q		
40	E1	E2	Brush Slap			Concert SD 2			Slap		
41	F1	F2	Brush Swirl			Timpani F			Scratch Push		7
42	F#1	F#2	Closed Hi-hat		1	Timpani F#			Scratch Pull		7
43	G1	G2	Electric Low Tom 1			Timpani G			Sticks		
44	G#1	G#2	Pedal Hi-hat		1	Timpani G#			Square Click		
45	A1	A2	Electric Mid Tom 2			Timpani A			Metronome Click		
46	A#1	A#2	Open Hi-hat		1	Timpani A#			Metronome Bell		
47	B1	B2	Electric Mid Tom 1			Timpani B			Guitar Fret	●	
48	C2	C3	Electric Hi Tom 2			Timpani c			Guitar Cutting Noise Up	●	
49	C#2	C#3				Timpani c#			Guitar Cutting Noise Down	●	
50	D2	D3	Electric Hi Tom 1			Timpani d			String Slap of Double Bass	●	
51	D#2	D#3				Timpani d#			Fl.Key Click	●	
52	E2	E3	Reverse Cymbal			Timpani e			Laughing	●	
53	F2	F3	Ride Bell			Timpani f			Scream	●	
54	F#2	F#3							Punch	●	
55	G2	G3							Heart Beat	●	
56	G#2	G#3				Analog Cowbell			Footsteps 1	●	
57	A2	A3				Concert Cymbal 2			Footsteps 2	●	
58	A#2	A#3	Vibra-slap			Vibra-slap			Applause	●	
59	B2	B3				Concert Cymbal 1			Door Creaking	●	
60	C3	C4	High Bongo			High Bongo			Door	●	
61	C#3	C#4	Low Bongo			Low Bongo			Scratch	●	
62	D3	D4	Mute Hi Conga			Analog High Conga			Wind Chimes	●	
63	D#3	D#4	Open Hi Conga			Analog Mid Conga			Car-Engine	●	
64	E3	E4	Low Conga			Analog Low Conga			Car-Stop	●	
65	F3	F4	High Timbale			High Timbale			Car-Pass	●	
66	F#3	F#4	Low Timbale			Low Timbale			Car-Crash	●	
67	G3	G4	High Agogo			High Agogo			Siren	●	
68	G#3	G#4	Low Agogo			Low Agogo			Train	●	
69	A3	A4							Jetplane	●	
70	A#3	A#4				Analog Maracas			Helicopter	●	
71	B3	B4	Short Whistle		2	Short Whistle		2	Starship	●	
72	C4	C5	Long Whistle		2	Long Whistle		2	Gun Shot	●	
73	C#4	C#5	Short Guiro		3	Short Guiro		3	Machine Gun	●	
74	D4	D5	Long Guiro		3	Long Guiro		3	Lasergun	●	
75	D#4	D#5				Analog Claves			Explosion	●	
76	E4	E5	Hi Wood Block			Hi Wood Block			Dog	●	
77	F4	F5	Low Wood Block			Low Wood Block			Horse-Gallop	●	
78	F#4	F#5	Mute Cuica		4	Mute Cuica		4	Birds	●	
79	G4	G5	Open Cuica		4	Open Cuica		4	Rain	●	
80	G#4	G#5	Mute Triangle		5	Mute Triangle		5	Thunder	●	
81	A4	A5	Open Triangle		5	Open Triangle		5	Wind	●	
82	A#4	A#5							Seashore	●	
83	B4	B5	Jingle Bell			Jingle Bell			Stream	●	
84	C5	C6							Bubble	●	
85	C#5	(C#6)	Castanets			Castanets					
86	D5	(D6)	Mute Surdo		6	Mute Surdo		6			
87	D#5	(D#6)	Open Surdo		6	Open Surdo		6			
88	E5	(E6)				Applause	●				
89	F5	(F6)									
90	F#5	(F#6)									
91	G5	(G6)									

*1 Key Off: Keys marked "●" stop sounding the instant they are released.
*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

Same as StandardKit1 No Sound

PSR-S950

Category	Style Name
Pop&Rock	60sSuperGroup
	RetroSoul
	80sPowerRock
	80sPopRock
	80sGuitarPop
	HardRock
	BritRockPop
	Live8Beat
	Classic8Beat
	Cool8Beat
	60sVintageRock
	60sPianoPop
	60sVintagePop
	80sSynthRock
	80sPop
	6-8Rock
	90sRockBallad
	ContempRockBld
	ChartPianoShfl
	ChartRockShfl
	StandardRock
	ContempRock
	AcousticRock
	FunkPopRock
	PowerRock
	60sPopRock
	60s8Beat
	60sGuitarPop
	70s8Beat
	90sGuitarPop
	VintageGtrPop
	Uptempo8Beat
	8BeatModern
	WestCoastPop
	SoftRock
	BritPop
	BritPopSwing
	BubblegumPop
	RockShuffle
	Unplugged
	KoolShuffle
	JazzPop
	Classic16Beat
	ChartGuitarPop
	ScandPopShuffle
Ballad	R&BSlowBallad
	IndustrialChill
	80sAnalogBallad
	Modern16BtBld
	Acoustic8BtBld
	ModernPopBld
	SoulR&B
	70sGlamPiano
	70sChartBallad
	ChilloutCafe
	ChillPerformer
	CoudyBay
	NightWalk
	Play4Sofa
	AngelSun
	90sCoolBallad
	80sSmoothBld
	R&BSoulBallad
	8BeatBallad1
	8BeatBallad2
	PowerBallad
	EpicBallad
	80sEPBallad
	PopGtrBallad
	EPBallad
	Chillout1
	Chillout2
	80sBoyBand
	ContempPopBld
	PopWaltz
	6-8SlowRock
	6-8Modern
	6-8Orchestral
	12-8Ballad
	OrganBallad
	PianoBallad
	AnalogBallad
	EasyBallad
	16BeatBallad

Category	Style Name
Ballad	NewR&BBallad
	LoveSong
	GuitarSerenade
Dance	ClubMixDJ
	FrenchDJ
	ReggaetonDJ
	MinimalElectro
	PercussiveTrance
	NatureHipHop
	GlobalDJ's
	Ibiza2010
	Dancefloor
	Dancehall
	FunkDisco
	80sSynthDisco
	SynthPop
	Clubdance1
	Clubdance2
	70sDisco1
	70sDisco2
	70sDiscoFunk
	80sDisco
	90sDisco
	Electronica
	FunkyHouse
	ClubBeat
	RetroClub
	ModChartPop
	DreamDance
	TrancePop
	DiscoTeens
	EuroTrance
	CelticTrance
	USChartHit
	MellowHipHop
	ModernHipHop
	USHipHop
	ClassicHipHop
	NewHipHop
	EuroHipHop
	TripHop
	ChartPop1
	ChartPop2
	ClubHouse
	RetroPop
	Garage
	DiscoPhilly
	DiscoHouse
	PopR&B
	NewR&B
	ChartR&B
	6-8Trance
	Groundbeat
Swing&Jazz	CoolSwing
	BigBandSwing
	ModBigBandShfl
	ModBigBandBld
	ModernBigBand
	InstrumentalJazz
	AcousticJazz
	CoolPianoJazz
	JazzGuitarClub
	ClassicBigBand
	DreamyBallad
	MidnightSwing
	JazzWaltzSlow
	JazzWaltzMed
	JazzWaltzFast
	CoolJazzBallad
	ModernJazzBld
	EasyListening
	MORSwing
	Bebop
	OrchestraSwing1
	OrchestraSwing2
	OrchBigBand1
	OrchBigBand2
	MoonlightBallad
	BigBandFast1
	BigBandFast2
	JazzClub
	OrganCombo
	AfroCuban
	Dixieland

Category	Style Name
Swing&Jazz	Charleston
	FrenchJazz
	Ragtime
	Five-Four
	OrganGroove
	JumpJive
R&B	FunkPop
	DetroitBeat
	70sChartSoul
	ModernShuffle
	BluesRock
	JazzFunk
	LiveSoulBand
	6-8Soul
	MotorCity
	SlowBlues
	GospelSwing
	GospelSisters
	SouthernGospel
	GospelBrothers
	SoulBrothers
	WorshipSlow
	WorshipMed
	WorshipFast
	Worship6-8
	FranklySoul
	60sRock&Roll
	Rock&Roll1
	Rock&Roll2
	Rock&RollShfl
	OldiesR&R
	Skiffle
	Twist
	PianoBoogie
	ShuffleBlues
	BlueberryBlues
	DetroitPop1
	DetroitPop2
	Soul
	LovelyShuffle
	KoolFunk
Country	70sCountryPop
	70sChartCntry
	EasyCountry
	CountryHits
	CountryBallad
	ModBluegrass
	Bluegrass
	Hoedown
	ModCountryBld1
	ModCountryBld2
	NewCountry
	CountryShuffle
	CntrySing-along
	CountryStrum
	CountryWaltz
	Country8Beat
	Country2-4
	CountryTwoStep
	CountrySwing
	CountryPop
	CountryRockBld
	ModernCntryPop
	CountryRock
	CountryBrothers
	FolkPop
	FingerPickin
Latin	BrazilianBossa
	TangoFlamenco
	RumbaFlamenco1
	SalsaGranCiclon
	CubanChaCha
	Batucada
	BrazilianSamba
	BossaNova
	Axe
	SambaReggae
	Bomba
	Salsa
	Guijira
	CubanSon
	BoleroLento
	Merengue
	Bachata

PSR-S950

Category	Style Name
Latin	RumbaFlamenco2
	Cumbia
	Forro
	Joropo
	Parranda
	Reggaeton
	Danzon
	Calypso
	FastBossa
	OrchestralBossa
	SlowBossa
	OrganBossa
	PopBossa
	LatinPartyPop
	SheriffReggae
	HappyReggae
	PopLatinBallad
	PopLatin
	LatinDisco
	RockChaCha
	Beguine
	GuitarRumba
	RumbaIsland
Ballroom	VienneseWaltz
	EnglishWaltz
	Slowfox
	Foxtrot
	Quickstep
	Tango
	Samba
	ChaChaCha
	Rumba
	Pasodoble
	OrganSamba
	OrganChaCha
	OrganQuickstep
	OrganRumba
	OrganSwing
	Jive
	Swingfox
	9-8Waltz
Movie&Show	MovieSoundtrack
	EtherealMovie
	Blockbuster
	Sci-fiMarch
	SecretService
	RomanticBallet
	GreenFantasia
	BaroqueAir
	AniFantasy
	WildWest
	MovieSwing1
	MovieSwing2
	MovieBallad
	MovieDisco
	SaturdayNight
	OrchestralBolero
	OrchestralMarch
	PopClassics
	Moonlight6-8
	ClassicPianoBld
	AnimationBallad
	BroadwayBallad
	70sTVTheme
	TapDanceSwing
	MoviePanther
	Showtune
	French50s
	ChristmasShuffle
	ChristmasSwing
	ChristmasWaltz
Entertainer	DiscoFoxRock
	DiscoFox
	MallorcaParty
	SchlagerFever
	AlpenSchlager
	GermanRock
	SchlagerFox
	SchlagerWaltz
	AlpBallad1
	AlpBallad2
	Schlager6-8
	SchlagerPolka
	ScandShuffle

Category	Style Name
Entertainer	SchlagerSamba
	SchlagerShuffle
	SchlagerItalia
	SchlagerRock
	SchlagerAlp
	SchlagerPop
	SchlagerBeat
	SchlagerRumba
	ScandSlowRock
	ScandBugg
	ScandCountry1
	ScandCountry2
	EuroPopOrgan
	70sFrenchHit
	PartyPolka
	Tijuana
	PubPiano
	8BeatAdria
	PolkaPop
	DiscoHands
World	USMarchingBand
	SaeidyPop
	MalfufFunk
	ModCeltic4-4
	ModCeltic6-8
	BohemianWaltz
	ZitherPolka
	Sirtaki
	IrishHymn1
	IrishHymn2
	ArabicEuro
	Laff
	WehdaSaghira
	Duranguense
	ModernDangdut1
	ModernDangdut2
	Keroncong
	Bhajan
	Bhangra
	Xi Qing Luo Gu
	Jing Ju Jie Zou
	Grupera
	Zouk
	Flamenco
	SpanishPaso
	PopFlamenco
	FrenchMusette
	ItalianMazurka
	TurkishEuro1
	TurkishEuro2
	Saeidy
	OrientalPop
	IrishDance
	HighlandWaltz
	ItalianWaltz
	FrenchWaltz
	ScandWaltz
	MariachiWaltz
	GermanWaltz
	OberWalzer
	OberPolka
	ItalianPolka
	Tarantella
	Reel
	Jig
	ScottishPolka
	Hawaiian
	Norteno
	HullyGully
	USMarch
	GermanMarch
	6-8March

PSR-S750

Category	Style Name
Pop&Rock	HardRock
	PowerRock
	StandardRock
	AcousticRock
	BritRockPop
	Live8Beat
	Classic8Beat
	Cool8Beat
	8BeatModern
	Uptempo8Beat
	VintageGtrPop
	60sVintagePop
	60sVintageRock
	80sPop
	90sRockBallad
	ChartRockShfl
	ContempRock
	FunkPopRock
	BritPop
	BritPopSwing
	60s8Beat
	60sGuitarPop
	60sPopRock
	70s8Beat
	90sGuitarPop
	Unplugged
	SoftRock
	ChartGuitarPop
	BubblegumPop
	RockShuffle
	WestCoastPop
	Classic16Beat
	JazzPop
	KoolShuffle
Ballad	ModernPopBld
	SoulR&B
	R&BSoulBallad
	PopGtrBallad
	ChilloutCafe
	70sGlamPiano
	80sEPBallad
	90sCoolBallad
	8BeatBallad1
	8BeatBallad2
	16BeatBallad1
	16BeatBallad2
	70sPopBallad
	80sBoyBand
	Chillout
	EasyBallad
	EPBallad
	PowerBallad
	EpicBallad
	AnalogBallad
	6-8SlowRock
	6-8Modern
	6-8Orchestral
	12-8Ballad
	LoveSong
	OrganBallad
	PianoBallad
	GuitarBallad
	NewR&BBallad
	GuitarSerenade
	PopWaltz
Dance	Electronica
	FunkyHouse
	ClubBeat
	RetroClub
	ModChartPop
	70sDisco1
	70sDisco2
	70sDiscoFunk
	DiscoPhilly
	80sDisco
	DreamDance
	TrancePop
	DiscoTeens
	RetroPop
	USChartHit
	MellowHipHop
	ClassicHipHop
	NewHipHop
	EuroHipHop

PSR-S750

Category	Style Name
Dance	TripHop
	Ibiza2004
	Ibiza2002
	EuroTrance
	6-8Trance
	LatinDJ's
	FrenchHouse
	ClubHouse
	DiscoHouse
	House
	HipHopGroove
	ChartPop1
	ChartPop2
	PopR&B
	NewR&B
	ChartR&B
Swing&Jazz	ModBigBandShfl
	ModernBigBand
	ClassicBigBand
	JazzGuitarClub
	ModernJazz
	AcousticJazz
	CoolJazzBallad
	ModernJazzBld
	EasyListening
	Bebop
	OrchBigBand1
	BigBandFast1
	OrchestraSwing1
	OrchestraSwing2
	MORSwing
	OrchBigBand2
	BigBandFast2
	JazzWaltzMed
	JazzWaltzFast
	MidnightSwing
	FrenchJazz
	Five-Four
	OrganGroove
	JazzClub
	JumpJive
	Ragtime
	Dixieland
	Charleston
	40sBigBand
	BigBandShuffle
R&B	ModernShuffle
	BluesRock
	SoulBrothers
	FranklySoul
	JazzFunk
	6-8Soul
	MotorCity
	SlowBlues
	Rock&Roll
	Rock&RollShfl
	Skiffle
	OldiesR&R
	Soul
	DetroitPop1
	DetroitPop2
	GospelSwing
	GospelSisters
	WorshipSlow
	WorshipMed
	WorshipFast
	Worship6-8
	PianoBoogie
	ShuffleBlues
	R&BBallad
	LovelyShuffle
	KoolFunk
	BlueberryBlues
	60sRock&Roll
	Twist
Country	70sCountryPop
	70sChartCntry
	EasyCountry
	CountryHits
	Country8Beat
	Bluegrass
	Hoedown
	ModCountryBld1
	ModCountryBld2

Category	Style Name
Country	NewCountry
	CountryShuffle
	CntrySing-along
	CountryStrum
	CountryBallad
	CountryWaltz
	Country2-4
	CountryTwoStep
	CountryBrothers
	CountrySwing
	CountryPop
	FolkPop
	FingerPickin
Latin	LatinPartyPop
	BrazilianSamba
	BossaNova
	FastBossa
	Guijira
	Bomba
	Salsa
	CubanSon
	Axe
	SambaReggae
	Forro
	Joropo
	Parranda
	Reggaeton
	Merengue
	Bachata
	Cumbia
	RumbaFlamenco
	Danzon
	Calypso
	BoleroLento
	GuitarRumba
	OrchestralBossa
	SlowBossa
	PopBossa
	SheriffReggae
	HappyReggae
	PopLatin
	LatinDisco
	RockChaCha
	Beguine
	RumbaIsland
	PopMambo
Ballroom	VienneseWaltz
	EnglishWaltz
	Slowfox
	Foxtrot
	Quickstep
	Tango
	Pasodoble
	Samba
	ChaChaCha
	Rumba
	Jive
	Swingfox
	OrganChaCha
	OrganSwing
	OrganSamba
	OrganQuickstep
	9-8Waltz
Movie&Show	Sci-fiMarch
	SecretService
	AnimationBallad
	70sTVTheme
	WildWest
	BaroqueAir
	Moonlight6-8
	PopClassics
	OrchestralBolero
	OrchestralMarch
	MovieDisco
	SaturdayNight
	MovieSwing
	MovieBallad
	TapDanceSwing
	BroadwayBallad
	ClassicPianoBld
	ChristmasShuffle
	ChristmasSwing
	ChristmasWaltz
	Showtune

Category	Style Name
Movie&Show	MoviePanther
Entertainer	GermanRock
	DiscoFox
	SchlagerFox
	AlpBallad1
	AlpBallad2
	ScandShuffle
	ScandCountry1
	ScandCountry2
	ScandSlowRock
	ScandBugg
	SchlagerPolka
	Schlager6-8
	SchlagerSamba
	SchlagerShuffle
	SchlagerAlp
	SchlagerRock
	SchlagerItalia
	SchlagerPop
	SchlagerBeat
	SchlagerRumba
	EuroPopOrgan
	70sFrenchHit
	PubPiano
	PartyPolka
	PolkaPop
	Tijuana
	Carnival
	8BeatAdria
	DiscoHands
World	BohemianWaltz
	Flamenco
	SpanishPaso
	PopFlamenco
	FrenchMusette
	IrishHymn
	IrishDance
	Sirtaki
	GermanWaltz
	OrientalPop
	ArabicEuro
	Saeidy
	Laff
	WehdaSaghira
	Duranguense
	ModernDangdut1
	ModernDangdut2
	Keroncong
	Bhajan
	Bhangra
	Xi Qing Luo Gu
	Jing Ju Jie Zou
	Grupera
	OberPolka
	OberWalzer
	ItalianPolka
	ItalianMazurka
	Hawaiian
	HighlandWaltz
	ItalianWaltz
	FrenchWaltz
	ScandWaltz
	MariachiWaltz
	Reel
	Jig
	ScottishPolka
	Tarantella
	Zouk
	USMarch
	6-8March
	GermanMarch
	Norteno
	HullyGully

PSR-S950

Order	Bank Name
1	E.Gtr16BtCut1
2	E.Gtr16BtCut2
3	E.Gtr16BtCut3
4	FunkyGtr16Bt1
5	FunkyGtr16Bt2
6	FunkyGtr16Bt3
7	DiscoGuitar
8	E.Gtr16BtShfl1
9	E.Gtr16BtShfl2
10	E.Gtr16BtPick
11	SteelTriplet1
12	SteelTriplet2
13	E.Gtr8BtShfl
14	SteelGuitar6-8
15	E.Guitar6-8
16	SteelGtrPick1
17	SteelGtrPick2
18	SteelGtrPick3
19	SteelGtrPick4
20	NylonGtrPick
21	NylonAccomp
22	NylonBossa1
23	NylonBossa2
24	FlamencoGtr
25	A.GtrAccomp
26	Steel8BtStrum1
27	Steel8BtStrum2
28	SteelBsChdSlow
29	SteelBsChdFast
30	ReggaeAccomp
31	E.Gtr8BtStrm1
32	E.Gtr8BtStrm2
33	E.GtrRock1
34	E.GtrRock2
35	OrganBlues
36	BoogieLoops
37	LatinKeys
38	BaroqueStrings
39	StringsArpeggio
40	StrRun&Fall
41	TrumpetSwing
42	BrassSwing
43	BigBandSwing1
44	BigBandSwing2
45	BigBandSwing3
46	JazzGtrSwing
47	Brass8Beat
48	BrassChords1
49	BrassChords2
50	BrassChords3
51	Falls
52	SynthBrassSlide
53	OrchestraHit
54	Classical
55	Comedy
56	AttentionDuo
57	Fanfare
58	PianoGlissando
59	Gong&Chime
60	DrumEndings
61	PianoArp16Bt
62	PianoArp8Bt
63	HeavenArpegio
64	TwinkleArpegio
65	TechSeq1
66	TechSeq2
67	TranceSeq1
68	TranceSeq2
69	Harpeggio1
70	Harpeggio2
71	LatinPerc1
72	LatinPerc2
73	LatinPerc3
74	LatinPerc4
75	LatinPerc5
76	Conga&Bongo1
77	CarnivalDeRio
78	LatinPop
79	Rumba&Soca
80	SambaPerc
81	Oriental1
82	Oriental2
83	Oriental3
84	Oriental4
85	Oriental5
86	Oriental6
87	Oriental7
88	Oriental8
89	ArabicPerc1
90	ArabicPerc2
91	SnarePlay1
92	SnarePlay2
93	Cajon1
94	Cajon2
95	Shaker&Tamb
96	Timbales&Tom
97	EthnicPerc
98	BigBells
99	MagicBells
100	XmasLoops
101	PowerToms
102	PowerSnares
103	CrashCymbals
104	PowerKit1
105	PowerKit2
106	DanceKit
107	LatinKit1
108	LatinKit2
109	LatinKit3
110	Conga&Bongo2
111	DanceMix1
112	DanceMix2
113	BreakBeatz
114	DJ-BasicSet
115	DJ-SFX
116	HipHop1
117	HipHop2
118	HeavyShuffle
119	NewR&B
120	ScratchBank
121	Breathing
122	IndianKit
123	ChineseKit1
124	ChineseKit2
125	TurkishPerc1
126	TurkishPerc2

PSR-S750

Order	Bank Name
1	E.Gtr16BtCut1
2	E.Gtr16BtCut2
3	E.Gtr16BtCut3
4	FunkyGtr16Bt1
5	FunkyGtr16Bt2
6	FunkyGtr16Bt3
7	DiscoGuitar
8	E.Gtr16BtShfl1
9	E.Gtr16BtShfl2
10	E.Gtr16BtPick
11	SteelTriplet1
12	SteelTriplet2
13	E.Gtr8BtShfl
14	SteelGuitar6-8
15	E.Guitar6-8
16	SteelGtrPick1
17	SteelGtrPick2
18	SteelGtrPick3
19	SteelGtrPick4
20	NylonGtrPick
21	NylonAccomp
22	NylonBossa1
23	NylonBossa2
24	FlamencoGtr
25	A.GtrAccomp
26	Steel8BtStrum1
27	Steel8BtStrum2
28	SteelBsChdSlow
29	SteelBsChdFast
30	ReggaeAccomp
31	E.Gtr8BtStrm1
32	E.Gtr8BtStrm2
33	E.GtrRock1
34	E.GtrRock2
35	OrganBlues
36	BoogieLoops
37	LatinKeys
38	BaroqueStrings
39	StringsArpeggio
40	StrRun&Fall
41	TrumpetSwing
42	BrassSwing
43	BigBandSwing1
44	BigBandSwing2
45	BigBandSwing3
46	Brass8Beat
47	BrassChords1
48	BrassChords2
49	BrassChords3
50	Breathing
51	Falls
52	SynthBrassSlide
53	OrchestraHit
54	Classical
55	Comedy
56	AttentionDuo
57	Fanfare
58	PianoGlissando
59	Gong&Chime
60	DrumEndings
61	PianoArp16Bt
62	PianoArp8Bt
63	HeavenArpegio
64	TwinkleArpegio
65	TechSeq1
66	TechSeq2
67	TranceSeq1
68	TranceSeq2
69	Harpeggio1
70	Harpeggio2
71	LatinPerc1
72	LatinPerc2
73	LatinPerc3
74	LatinPerc4
75	LatinPerc5
76	Conga&Bongo1
77	CarnivalDeRio
78	LatinPop
79	Rumba&Soca
80	SambaPerc
81	Oriental1
82	Oriental2
83	Oriental3
84	Oriental4
85	Oriental5
86	Oriental6
87	Oriental7
88	Oriental8
89	ArabicPerc1
90	ArabicPerc2
91	SnarePlay1
92	SnarePlay2
93	Cajon1
94	Cajon2
95	Shaker&Tamb
96	Timbales&Tom
97	EthnicPerc
98	BigBells
99	MagicBells
100	XmasLoops
101	PowerToms
102	PowerSnares
103	CrashCymbals
104	PowerKit1
105	PowerKit2
106	DanceKit
107	LatinKit1
108	LatinKit2
109	LatinKit3
110	Conga&Bongo2
111	DanceMix1
112	DanceMix2
113	BreakBeatz
114	DJ-BasicSet
115	DJ-SFX
116	HipHop1
117	HipHop2
118	HeavyShuffle
119	NewR&B
120	ScratchBank
121	IndianKit
122	ChineseKit1
123	ChineseKit2


Operation: [DIRECT ACCESS] button + button listed below		Function of the accessed LCD display			
STYLE CONTROL	[ACMP]	FUNCTION	STYLE SETTING/SPLIT POINT/ CHORD FINGERING	CHORD FINGERING	—
	[AUTO FILL IN]			STYLE SETTING	
	[OTS LINK]				
	[BREAK]				
	INTRO [I]				
	INTRO [II]				
	INTRO [III]				
	MAIN VARIATION [A]				
	MAIN VARIATION [B]				
	MAIN VARIATION [C]				
	MAIN VARIATION [D]				
	ENDING/rit. [I]				
	ENDING/rit. [II]				
	ENDING/rit. [III]				
	[SYNC START]			SPLIT POINT	
	[SYNC STOP]			STYLE SETTING	
	[START/STOP]				
STYLE	[POP & ROCK]	FUNCTION	STYLE SETTING/SPLIT POINT/ CHORD FINGERING	STYLE SETTING	—
	[BALLAD]				
	[DANCE]				
	[SWING & JAZZ]				
	[R & B]				
	[COUNTRY]				
	[LATIN]				
	[BALLROOM]				
	[MOVIE & SHOW]				
	[ENTERTAINER]				
	[WORLD]				
	[EXPANSION/USER]				
SONG	[SELECT]	FUNCTION	SONG SETTING	—	—
	[SCORE]				
	[LYRICS/TEXT]				
	[TR1]				
	[TR2]				
	[EXTRA TR]				
	[GUIDE]				
	[REPEAT]				
	[▶▶] (FF)				
	[◀◀] (REW)				
	[▶ / ❚❚] (PLAY/PAUSE)				
	[■] (STOP)				
	[REC]				
[TAP TEMPO]		FUNCTION	UTILITY	CONFIG 1	TAP
TEMPO	[+]		STYLE SETTING/SPLIT POINT/ CHORD FINGERING	STYLE SETTING	—
	[–]				
[METRONOME]			UTILITY	CONFIG 1	METRONOME
[FADE IN/OUT]					FADE IN/OUT
TRANSPOSE	[+]	FUNCTION	CONTROLLER	KEYBOARD/PANEL	TRANSPOSE ASSIGN
	[–]				
UPPER OCTAVE	[+]	MIXING CONSOLE	TUNE	—	—
	[–]				
MULTI PAD	[SELECT]	MULTIPAD	MULTI PAD EDIT	—	—
	[STOP]				
	[1]				
	[2]				
	[3]				
	[4]				
[DEMO]		FUNCTION	UTILITY	OWNER	—
[FUNCTION]		FUNCTION	MIDI	PRESET	—
[MIXING CONSOLE]		MIXING CONSOLE	VOL/VOICE	—	—
[BALANCE]					
[CHANNEL ON/OFF]					
[USB]		FUNCTION	UTILITY	MEDIA	—
[USB AUDIO PLAYER]		AUDIO	—	—	—
[DIRECT ACCESS]		—	—	—	—
TAB	[▶]	—	—	—	—
	[◀]	—	—	—	—
[ENTER]		—	—	—	—
[EXIT]		MAIN	—	—	—
DATA ENTRY DIAL		—	—	—	—
VOICE	PART SELECT [LEFT]	FUNCTION	REGIST SEQUENCE/FREEZE/ VOICE SET	VOICE SET	LEFT
	PART SELECT [RIGHT 1]				RIGHT 1
	PART SELECT [RIGHT 2]				RIGHT 2
	PART ON/OFF [LEFT]				LEFT
	PART ON/OFF [RIGHT 1]				RIGHT 1
	PART ON/OFF [RIGHT 2]				RIGHT 2
	[LEFT HOLD]		STYLE SETTING/SPLIT POINT/ CHORD FINGERING	SPLIT POINT	—
	[PIANO]	FUNCTION	REGIST SEQUENCE/FREEZE/ VOICE SET	VOICE SET	—
	[E.PIANO]				
	[STRINGS]				
	[GUITAR & BASS]				
	[SAXOPHONE]				
	[FLUTE & WOODWIND]				
	[ORGAN]				
	[TRUMPET]				
	[BRASS]				
	[ACCORDION & HARMONICA]				
	[CHOIR & PAD]				

Direct Access Chart / Tabelle Direktzugriff / Feuille d'accès direct / Gráfico de acceso directo

Operation: [DIRECT ACCESS] button + button listed below		Function of the accessed LCD display			
VOICE	[SYNTH. & FX]	FUNCTION	REGIST SEQUENCE/FREEZE/ VOICE SET	VOICE SET	—
	[PERC. & DRUM KIT]				
	[ORGAN FLUTES]				
	[EXPANSION/USER]				
VOICE CONTROL	[HARMONY/ECHO]	FUNCTION	HARMONY/ECHO	—	—
	[TOUCH]		CONTROLLER	KEYBOARD/PANEL	TOUCH RESPONSE
	[SUSTAIN]	MIXING CONSOLE	EFFECT	—	—
	[MONO]		TUNE	—	—
	[DSP]		EFFECT	—	—
	[VARI.]			—	—
[MUSIC FINDER]		MUSIC FINDER	MUSIC FINDER SEARCH 1	—	—
ONE TOUCH SETTING	[1]	OTS INFORMATION	—	—	—
	[2]				
	[3]				
	[4]				
[MIC SETTING/VOCAL HARMONY] (PSR-S950)		MIC SETTING/VOCAL HARMONY	VOCAL HARMONY TYPE	—	—
REGISTRATION MEMORY	REGIST BANK [+]	FUNCTION	REGIST SEQUENCE/FREEZE/ VOICE SET	REGISTRATION SEQUENCE	—
	REGIST BANK [–]				
	[FREEZE]			FREEZE	—
	[MEMORY]			REGISTRATION SEQUENCE	—
	[1]	REGIST INFORMATION	—	—	—
	[2]				
	[3]				
	[4]				
	[5]				
	[6]				
	[7]				
	[8]				
PEDAL	FOOT PEDAL 1	FUNCTION	CONTROLLER	FOOT PEDAL	—
	FOOT PEDAL 2				
MODULATION		FUNCTION	CONTROLLER	KEYBOARD/PANEL	MODULATION WHEEL
PITCH BEND		MIXING CONSOLE	TUNE	—	—

* The cursor position differs depending on the current keyboard part.

Chord Types Recognized in the Fingered Mode / Im Fingered-Modus erkannte Akkordarten / Types d'accords reconnus en mode Fingered / Tipos de acordes reconocidos en el modo Fingered (digitado)

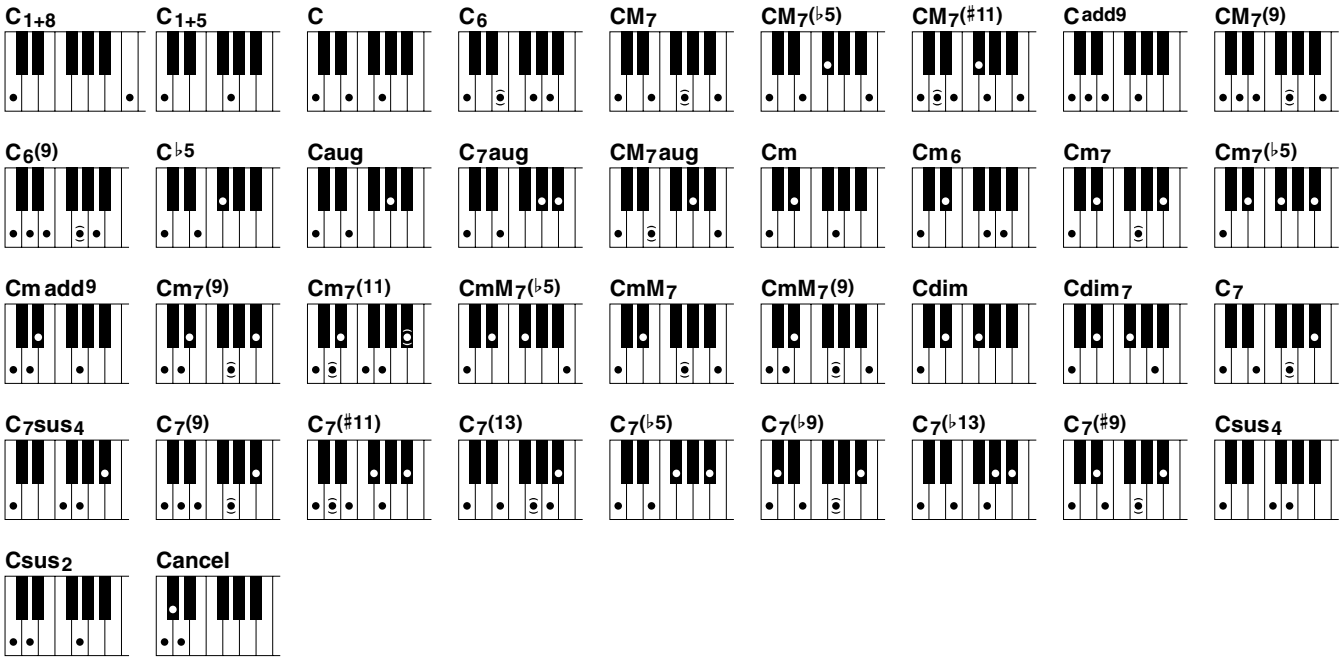

Chord Name [Abbreviation]	Normal Voicing	Display for root "C"
1+8	1+8	C1+8
1+5	1+5	C1+5
Major [M]	1+3+5	C
Sixth [6]	1+(3)+5+6	C6
Major seventh [M7]	1+3+(5)+7	CM7
Major seventh flatted fifth [M7♭5]	1+3+♭5+7	CM7(♭5)
Major seventh add sharp eleventh [M7(♯11)]	1+(2)+3+♯4+5+7	CM7(♯11)
Add ninth [(9)]	1+2+3+5	Cadd9
Major seventh ninth [M7_9]	1+2+3+(5)+7	CM7(9)
Sixth ninth [6_9]	1+2+3+(5)+6	C6(9)
Flatted fifth [(♭5)]	1+3+♭5	C♭5
Augmented [aug]	1+3+♯5	Caug
Seventh augmented [7aug]	1+3+♯5+♭7	C7aug
Major seventh augmented [M7aug]	1+(3)+♯5+7	CM7aug
Minor [m]	1+♭3+5	Cm
Minor sixth [m6]	1+♭3+5+6	Cm6
Minor seventh [m7]	1+♭3+(5)+♭7	Cm7
Minor seventh flatted fifth [m7♭5]	1+♭3+♭5+♭7	Cm7(♭5)
Minor add ninth [m(9)]	1+2+♭3+5	Cm add9
Minor seventh ninth [m7(9)]	1+2+♭3+(5)+♭7	Cm7(9)
Minor seventh eleventh [m7(11)]	1+(2)+♭3+4+5+(♭7)	Cm7(11)
Minor major seventh flatted fifth [mM7♭5]	1+♭3+♭5+7	CmM7(♭5)
Minor major seventh [mM7]	1+♭3+(5)+7	CmM7
Minor major seventh ninth [mM7(9)]	1+2+♭3+(5)+7	CmM7(9)
Diminished [dim]	1+♭3+♭5	Cdim
Diminished seventh [dim7]	1+♭3+♭5+6	Cdim7
Seventh [7]	1+3+(5)+♭7	C7
Seventh suspended fourth [7sus4]	1+4+5+♭7	C7sus4
Seventh ninth [7(9)]	1+2+3+(5)+♭7	C7(9)
Seventh add sharp eleventh [7(♯11)]	1+(2)+3+♯4+5+♭7	C7(♯11)
Seventh add thirteenth [7(13)]	1+3+(5)+6+♭7	C7(13)
Seventh flatted fifth [7♭5]	1+3+♭5+♭7	C7(♭5)
Seventh flatted ninth [7(♭9)]	1+♭2+3+(5)+♭7	C7(♭9)
Seventh add flatted thirteenth [7(♭13)]	1+3+5+♭6+♭7	C7(♭13)
Seventh sharp ninth [7(♯9)]	1+♯2+3+(5)+♭7	C7(♯9)
Suspended fourth [sus4]	1+4+5	Csus4
One plus two plus five [sus2]	1+2+5	Csus2
cancel	1+♭2+2	Cancel

* Notes in parentheses can be omitted.

Reverb Block

PSR-S950	PSR-S750	Type	Description	MSB	LSB
O	O	BASIC HALL	Reverb simulating the acoustics of a hall. Standard setting.	1	21
O	O	LIGHT HALL	Reverb simulating the acoustics of a hall. Light setting.	1	22
O	O	BALLAD HALL	Reverb simulating the acoustics of a hall. For ballad type music.	1	19
O	O	PIANO HALL	Reverb simulating the acoustics of a hall. For piano sound.	1	20
O	O	HALL1	Reverb simulating the acoustics of a hall.	1	0
O	O	HALL2		1	16
O	O	HALL3		1	17
O	O	HALL4		1	18
O	O	HALL5		1	1
O	O	HALL M		1	6
O	O	HALL L		1	7
O	O	ATMO HALL	A unique long reverb with atmosphere.	1	23
O	O	VOCAL HALL1	Reverb suitable for vocals.	1	27
O	O	VOCAL HALL2		1	28
O	O	ACOSTIC ROOM	Reverb simulating the acoustics of a room. Standard setting.	2	20
O	O	DRUMS ROOM	Reverb simulating the acoustics of a room. For drum sounds.	2	21
O	O	PERC ROOM	Reverb simulating the acoustics of a room. For percussion sounds.	2	22
O	O	ROOM1	Reverb simulating the acoustics of a room.	2	16
O	O	ROOM2		2	17
O	O	ROOM3		2	18
O	O	ROOM4		2	19
O	O	ROOM5		2	0
O	O	ROOM6		2	1
O	O	ROOM7		2	2
O	O	ROOM S		2	5
O	O	ROOM M		2	6
O	O	ROOM L		2	7
O	O	STAGE1	Reverb suitable for a solo instrument.	3	16
O	O	STAGE2		3	17
O	O	STAGE3		3	0
O	O	STAGE4		3	1
O	O	PLATE1	Reverb simulating a plate reverb unit.	4	16
O	O	PLATE2		4	17
O	O	PLATE3		4	0
O	O	GM PLATE		4	7
O	O	TUNNEL	Simulates a cylindrical space expanding to left and right.	17	0
O	O	CANYON	A hypothetical acoustic space which extends without limit.	18	0
O	O	BASEMENT	A bit of initial delay followed by reverb with a unique resonance.	19	0
O	O	LARGE HALL	Reverb simulating the acoustics of a hall.	1	2
O	O	MEDIUM HALL		1	3
O	O	WARM ROOM	Reverb simulating the acoustics of a warm room.	2	3
O	O	WHITE ROOM	A unique short reverb with a bit of initial delay.	16	0
O	O	WOODY ROOM	Reverb simulating the acoustics of a wood-built room.	2	4
O	O	RICH PLATE	Reverb simulating a rich plate reverb unit.	4	1
O	O	NO EFFECT	No effect.	0	0

Chorus Block

PSR-S950	PSR-S750	Category	Type	Description	MSB	LSB
O	O	REVERB	HALL1	Reverb simulating the acoustics of a hall.	1	0
O	O		HALL2		1	16
O	O		HALL3		1	17
O	O		HALL4		1	18
O	O		HALL5		1	1
O	O		HALL M		1	6
O	O		HALL L		1	7
O	O		ATMO HALL	A unique long reverb with atmosphere.	1	23
O	O		ACOSTIC ROOM	Reverb simulating the acoustics of a room. Standard setting.	2	20
O	O		DRUMS ROOM	Reverb simulating the acoustics of a room. For drum sounds.	2	21
O	O		PERC ROOM	Reverb simulating the acoustics of a room. For percussion sounds.	2	22
O	O		ROOM1	Reverb simulating the acoustics of a room.	2	16
O	O		ROOM2		2	17
O	O		ROOM3		2	18
O	O		ROOM4		2	19
O	O		ROOM5		2	0
O	O		ROOM6		2	1
O	O		ROOM7		2	2
O	O		ROOM S		2	5
O	O		ROOM M		2	6
O	O		ROOM L		2	7
O	O		STAGE1	Reverb suitable for a solo instrument.	3	16
O	O		STAGE2		3	17
O	O		STAGE3		3	0
O	O		STAGE4		3	1
O	O		PLATE1	Reverb simulating a plate reverb unit.	4	16
O	O		PLATE2		4	17
O	O		PLATE3		4	0
O	O		GM PLATE		4	7

PSR-S950	PSR-S750	Category	Type	Description	MSB	LSB
O	O	DELAY	TEMPO DELAY1	Tempo-synchronized delay.	21	0
O	O		TEMPO DELAY2		21	16
O	O		TEMPO ECHO	Tempo-synchronized echo.	21	8
O	O		TEMPO CROSS1	Tempo-synchronized cross delay.	22	0
O	O		TEMPO CROSS2		22	16
O	O		TEMPO CROSS3		22	17
O	O		TEMPO CROSS4		22	18
O	O	ER/KARAOKE	KARAOKE1	Echo for karaoke.	20	0
O	O		KARAOKE2		20	1
O	O		KARAOKE3		20	2
O	–		ER1	This effect isolates only the early reflection components of the reverb.	9	0
O	–		ER2		9	1
O	O	CHORUS	CHORUS1	Conventional chorus program with rich, warm chorusing.	66	17
O	O		CHORUS2		66	8
O	O		CHORUS3		66	16
O	O		CHORUS4		66	1
O	O		CHORUS5		65	2
O	O		CHORUS6		65	0
O	O		CHORUS7		65	1
O	O		CHORUS8		65	8
O	O		CHORUS FAST		65	16
O	O		CHORUS LITE		65	17
O	O		GM CHORUS1		65	3
O	O		GM CHORUS2		65	4
O	O		GM CHORUS3		65	5
O	O		GM CHORUS4		65	6
O	O		FB CHORUS		65	7
O	O		CELESTE1	A 3-phase LFO adds modulation and spaciousness to the sound.	66	0
O	O		CELESTE2		66	2
O	O		SYMPHONIC1	Adds more stages to the modulation of Celeste.	68	16
O	O		SYMPHONIC2		68	0
O	O		ENS DETUNE1	Chorus effect without modulation, created by adding a slightly pitch-shifted sound.	87	0
O	O		ENS DETUNE2		87	16
O	O	FLANGER	FLANGER1	Creates a sound similar to that of a jet airplane.	67	8
O	O		FLANGER2		67	16
O	O		FLANGER3		67	17
O	O		FLANGER4		67	1
O	O		FLANGER5		67	0
O	O		GM FLANGER		67	7
O	–		T_FLANGER	Tempo-synchronized flanger.	107	0
O	O	PHASER	PHASER1	Cyclically modulates the phase to add modulation to the sound.	72	0
O	–		PHASER2		72	8
O	–		PHASER3		72	19
O	–		T_PHASER1	Tempo-synchronized phaser.	108	0
O	–		T_PHASER2		108	16
O	O		EP PHASER1	Cyclically modulates the phase to add modulation to the sound. For electric piano.	72	17
O	O		EP PHASER2		72	18
O	O		EP PHASER3		72	16
O	–	PITCH CHANGE	PITCH CHG1	Changes the pitch of the input signal.	80	16
O	–		PITCH CHG2		80	0
O	–		PITCH CHG3		80	1
O	–	ROTARY SP	DUAL ROT BRT	Simulates a rotary speaker.	99	16
O	–		DUAL ROT WRM		99	17
O	–		DUAL ROT SP1		99	0
O	–		DUAL ROT SP2		99	1
O	–		ROTARY SP1		69	16
O	–		ROTARY SP2		71	17
O	–		ROTARY SP3		71	18
O	–		ROTARY SP4		70	17
O	O		ROTARY SP5		66	18
O	–		ROTARY SP6		69	0
O	–		ROTARY SP7		71	22
O	–		2WAY ROT SP		86	0
O	–	TREMOLO	TREMOLO1	Rich Tremolo effect with both volume and pitch modulation.	70	16
O	–		TREMOLO2		71	19
O	–		TREMOLO3		70	0
O	–		EP TREMOLO		70	18
O	–		GT TREMOLO1		71	20
O	–		GT TREMOLO2		70	19
O	–		VIBE VIBRATE	Vibraphone effect.	119	0
O	–		T_TREMOLO	Tempo-synchronized rich Tremolo effect with both volume and pitch modulation.	120	0
O	–	SPATIAL	AUTO PAN1	Several panning effects that automatically shift the sound position (left, right, front, back).	71	16
O	–		AUTO PAN2		71	0
O	–		AUTO PAN3		71	1
O	–		EP AUTOPAN		71	21
O	–		T_AUTO PAN1	Tempo-synchronized auto pan.	121	0
O	–		T_AUTO PAN2		121	1
O	O	–	NO EFFECT	No effect.	0	0

DSP1 – 4 Block

LCD Block Name	XG Block Name
DSP1	XG Variation Block
DSP2	XG Insertion1 Block
DSP3	XG Insertion2 Block
DSP4	XG Insertion3 Block

PSR-S950: DSP1–4, PSR-S750: DSP1	PSR-S750: DSP2–4	Category	Type	Description	MSB	LSB
O	O	REVERB	HALL1	Reverb simulating the acoustics of a hall.	1	0
O	O		HALL2		1	16
O	O		HALL3		1	17
O	O		HALL4		1	18
O	O		HALL5		1	1
O	O		HALL M		1	6
O	O		HALL L		1	7
O	O		ATMO HALL	A unique long reverb with atmosphere.	1	23
O	O		ACOSTIC ROOM	Reverb simulating the acoustics of a room. Standard setting.	2	20
O	O		DRUMS ROOM	Reverb simulating the acoustics of a room. For drum sounds.	2	21
O	O		PERC ROOM	Reverb simulating the acoustics of a room. For percussion sounds.	2	22
O	O		ROOM1	Reverb simulating the acoustics of a room.	2	16
O	O		ROOM2		2	17
O	O		ROOM3		2	18
O	O		ROOM4		2	19
O	O		ROOM5		2	0
O	O		ROOM6		2	1
O	O		ROOM7		2	2
O	O		ROOM S		2	5
O	O		ROOM M		2	6
O	O		ROOM L		2	7
O	O		STAGE1	Reverb suitable for a solo instrument.	3	16
O	O		STAGE2		3	17
O	O		STAGE3		3	0
O	O		STAGE4		3	1
O	O		PLATE1	Reverb simulating a plate reverb unit.	4	16
O	O		PLATE2		4	17
O	O		PLATE3		4	0
O	O		GM PLATE		4	7
O	–		TUNNEL	Simulates a cylindrical space expanding to left and right.	17	0
O	–		CANYON	A hypothetical acoustic space which extends without limit.	18	0
O	–		BASEMENT	A bit of initial delay followed by reverb with a unique resonance.	19	0
O	–		WHITE ROOM	A unique short reverb with a bit of initial delay.	16	0
O	O	DELAY	DELAY LCR1	Produces three delayed sounds: L, R and C (center).	5	16
O	O		DELAY LCR2		5	0
O	O		DELAY LR	Produces two delayed sounds: L and R. Two feedback delays are provided.	6	0
O	O		ECHO	Two delayed sounds (L and R), and independent feedback delays for L and R.	7	0
O	O		CROSS DELAY1	The feedback of the two delayed sounds is crossed.	8	0
O	O		CROSS DELAY2		8	16
O	O		TEMPO DELAY1	Tempo-synchronized delay.	21	0
O	O		TEMPO DELAY2		21	16
O	O		TEMPO ECHO	Tempo-synchronized echo.	21	8
O	O		TEMPO CROSS1	Tempo-synchronized cross delay.	22	0
O	O		TEMPO CROSS2		22	16
O	O		TEMPO CROSS3		22	17
O	O		TEMPO CROSS4		22	18
O	O	ER/KARAOKE	KARAOKE1	Echo for karaoke.	20	0
O	O		KARAOKE2		20	1
O	O		KARAOKE3		20	2
O	–		ER1	This effect isolates only the early reflection components of the reverb.	9	0
O	–		ER2		9	1
O	–		GATE REVERB1	Simulation of gated reverb.	10	0
O	–		GATE REVERB2		10	16
O	–		REVERS GATE	Simulation of gated reverb played back in reverse.	11	0
O	O	CHORUS	CHORUS1	Conventional chorus program with rich, warm chorusing.	66	17
O	O		CHORUS2		66	8
O	O		CHORUS3		66	16
O	O		CHORUS4		66	1
O	O		CHORUS5		65	2
O	O		CHORUS6		65	0
O	O		CHORUS7		65	1
O	O		CHORUS8		65	8
O	O		CHORUS FAST		65	16
O	O		CHORUS LITE		65	17
O	O		GM CHORUS1		65	3
O	O		GM CHORUS2		65	4
O	O		GM CHORUS3		65	5
O	O		GM CHORUS4		65	6
O	O		FB CHORUS		65	7
O	O		CELESTE1	A 3-phase LFO adds modulation and spaciousness to the sound.	66	0
O	O		CELESTE2		66	2
O	O		SYMPHONIC1	Adds more stages to the modulation of Celeste.	68	16
O	O		SYMPHONIC2		68	0
O	O		ENS DETUNE1	Chorus effect without modulation, created by adding a slightly pitch-shifted sound.	87	0
O	O		ENS DETUNE2		87	16

PSR-S950: DSP1–4, PSR-S750: DSP1	PSR-S750: DSP2–4	Category	Type	Description	MSB	LSB
O	–	CHORUS	AMB CHORUS	Chorus which added early refrection sound.	65	9
O	–		AMB CELESTE	Celeste which added early refrection sound.	66	9
O	–		AMB SYMPHO	Symphonic which added early refrection sound.	68	9
O	O	FLANGER	FLANGER1	Creates a sound similar to that of a jet airplane.	67	8
O	O		FLANGER2		67	16
O	O		FLANGER3		67	17
O	O		FLANGER4		67	1
O	O		FLANGER5		67	0
O	O		GM FLANGER		67	7
O	–		V_FLANGER	A simulation of an analog flanger effect. The LFO has a random setting.	104	0
O	–		T_FLANGER	Tempo-synchronized flanger.	107	0
O	–		DYN FLANGER	Dynamically controlled flanger.	110	0
O	–		AMB FLANGER	Flanger which added early refrection sound.	67	9
O	O	PHASER	PHASER1	Cyclically modulates the phase to add modulation to the sound.	72	0
O	–		PHASER2		72	8
O	–		PHASER3		72	19
O	–		T_PHASER1	Tempo-synchronized phaser.	108	0
O	–		T_PHASER2		108	16
O	O		EP PHASER1	Cyclically modulates the phase to add modulation to the sound. For electric piano.	72	17
O	O		EP PHASER2		72	18
O	O		EP PHASER3		72	16
O	–		DYN PHASER	Dynamically controlled phaser.	111	0
O	–	DISTORTION	V_DIST WARM	Distortion which simulates the sound of a vintage tube, fuzz effect, etc.	98	22
O	–		V_DIST CLS H		98	23
O	–		V_DIST CLS S		98	20
O	–		V_DIST METAL		98	24
O	–		V_DIST CRUNC		98	18
O	–		V_DIST BLUES		98	21
O	–		V_DIST EDGY		98	19
O	–		V_DIST SOLID		98	25
O	–		V_DST CLEAN1		98	17
O	–		V_DST CLEAN2		98	26
O	–		V_DIST TWIN		98	16
O	–		V_DIST ROCA		103	18
O	–		V_DST JZ CLN		98	27
O	–		V_DST FUSION		103	19
O	–		ST AMP SOLID	Stereo amp simulator.	75	29
O	–		ST AMP CRUNC		75	30
O	–		ST AMP BLUES		75	28
O	–		ST AMP CLEAN		75	27
O	–		ST AMP HARP		75	31
O	–		V_DIST HARD	Distortion which simulates the sound of a vintage tube, fuzz effect, etc.	98	0
O	–		V_DIST SOFT		98	2
O	O		DIST HARD1	Hard-edge distortion.	75	16
O	O		DIST HARD2		75	22
O	O		DIST SOFT1	Soft, warm distortion.	75	17
O	O		DIST SOFT2		75	23
O	O		DIST HEAVY	Heavy distortion.	73	0
O	O		OVERDRIVE	Adds mild distortion to the sound.	74	0
O	–		ST DIST	Stereo distortion.	73	8
O	–		ST OD	Stereo overdrive.	74	8
O	–		ST DIST HARD	Hard-edge stereo distortion.	75	18
O	–		ST DIST SOFT	Soft, warm soft distortion.	75	19
O	O		AMP SIM1	A simulation of a guitar amp.	75	0
O	–		AMP SIM2		75	1
O	O		ST AMP1	Stereo amp simulator.	75	20
O	O		ST AMP2		75	21
O	O		ST AMP3		75	8
O	O		ST AMP4		75	24
O	O		ST AMP5		75	25
O	O		ST AMP6		75	26
O	–	DISTORTION+ (Distortion/Overdrive mixed with other effects)	DST+DELAY1	Distortion and Delay are connected in series.	95	16
O	–		DST+DELAY2		95	0
O	–		OD+DELAY1		95	17
O	–		OD+DELAY2		95	1
O	–		CMP+DST+DLY1	Compressor, Distortion and Delay are connected in series.	96	16
O	–		CMP+DST+DLY2		96	0
O	–		CMP+OD+DLY1	Compressor, Overdrive and Delay are connected in series.	96	17
O	–		CMP+OD+DLY2		96	1
O	–		V_DST H+DLY	V Distortion Hard and Delay are connected in series.	98	1
O	–		V_DST S+DLY	V Distortion Soft and Delay are connected in series.	98	3
O	–		DST+TDLY	Distortion and Tempo Delay are connected in series.	100	0
O	–		OD+TDLY	Overdrive and Tempo Delay are connected in series.	100	1
O	–		COMP+DIST1	Since a Compressor is included in the first stage, steady distortion can be produced regardless of changes in input level.	73	16
O	–		COMP+DIST2		73	1
O	–		CMP+DST+TDL	Compressor, Distortion and Tempo Delay are connected in series.	101	0
O	–		CMP+OD+TDLY1		101	1
O	–		CMP+OD+TDLY2		101	16
O	–		CMP+OD+TDLY3		101	17
O	–		CMP+OD+TDLY4		101	18
O	–		CMP+OD+TDLY5		101	19
O	–		CMP+OD+TDLY6		101	20

PSR-S950: DSP1–4, PSR-S750: DSP1	PSR-S750: DSP2–4	Category	Type	Description	MSB	LSB
O	–	DISTORTION+ (Distortion/Overdrive mixed with other effects)	V_DST H+TDL1	V Distortion Hard and Tempo Delay are connected in series.	103	0
O	–		V_DST H+TDL2		103	17
O	–		V_DST S+TDL1	V Distortion Soft and Tempo Delay are connected in series.	103	1
O	–		V_DST S+TDL2		103	16
O	–	REAL DIST	MLT DS SOLO	Multi effector for guitar. Setting for guitar solo.	95	32
O	–		MLT DS BASIC	Multi effector for guitar. Setting for basic distortion.	95	33
O	–		MLT OD CHO	Multi effector for guitar. Setting for overdrive & chorus.	95	34
O	–		MLT CR WAH	Multi effector for guitar. Setting for crunch & wah.	95	35
O	–		MLT OLD DLY	Multi effector for guitar. Setting for vintage delay.	95	36
O	–		VINTAGE ECHO	Multi effector for guitar. Setting for vintage echo.	95	37
O	–		ST AMP DS	Stereo distortion for guitar. Setting for distortion sound.	96	32
O	–		ST AMP OD	Stereo distortion for guitar. Setting for overdrive sound.	96	33
O	–		ST AMP VT	Stereo distortion for guitar. Setting for vintage sound.	96	34
O	–		ST AMP HV	Stereo distortion for guitar. Setting for heavy sound.	96	35
O	–		AMP1 CLASSIC	British combo amp simulator. Setting for classic sound.	97	32
O	–		AMP1 TOP BST	British combo amp simulator. Setting for "TOP BOOST" sound.	97	33
O	–		AMP1 CUSTOM	British combo amp simulator. Setting for custom sound.	97	34
O	–		AMP1 HEAVY	British combo amp simulator. Setting for heavy sound.	97	35
O	–		AMP2 BLUES	British stack amp simulator. Setting for blues sound.	98	32
O	–		AMP2 HEAVY1	British stack amp simulator. Setting for heavy sound 1.	98	33
O	–		AMP2 HEAVY2	British stack amp simulator. Setting for heavy sound 2.	98	34
O	–		AMP2 CLEAN	British stack amp simulator. Setting for clean sound.	98	35
O	–		AMP2 DRT CLN	British stack amp simulator. Setting for crunch sound.	98	36
O	–	PITCH CHANGE	PITCH CHG1	Changes the pitch of the input signal.	80	16
O	–		PITCH CHG2		80	0
O	–		PITCH CHG3		80	1
O	O	WAH AUTO	AUTO WAH1	Cyclically modulates the center frequency of a wah filter.	78	16
O	O		AUTO WAH2		78	0
O	–		AT.WAH+DST1	Distortion can be applied to the output of Auto Wah.	78	17
O	–		AT.WAH+DST2		78	1
O	–		AT.WH+DST HD		78	21
O	–		AT.WH+DST HV		78	23
O	–		AT.WH+DST LT		78	25
O	–		AT.WAH+OD1	Overdrive distortion can be applied to the output of Auto Wah.	78	18
O	–		AT.WAH+OD2		78	2
O	–		AT.WH+OD HD		78	22
O	–		AT.WH+OD HV		78	24
O	–		AT.WH+OD LT		78	26
O	O		TEMPO AT.WAH	Tempo-synchronized Auto Wah.	79	0
O	–		T_AT.WH+DST	Tempo-synchronized Auto Wah. Distortion can be applied to the output.	79	1
O	–		T_A.WH+DSTHD		79	21
O	–		T_A.WH+DSTHV		79	23
O	–		T_A.WH+DSTLT		79	25
O	–		T_AT.WH+OD	Tempo-synchronized Auto Wah. Overdrive distortion can be applied to the output.	79	2
O	–		T_A.WH+OD HD		79	22
O	–		T_A.WH+OD HV		79	24
O	–		T_A.WH+OD LT		79	26
O	O	WAH TCH/PDL (Touch Wah/Pedal Wah)	TOUCH WAH1	Changes the center frequency of a wah filter according to the input level.	82	0
O	O		TOUCH WAH2		82	8
O	–		TOUCH WAH3		82	20
O	–		TC.WH+DST1	Distortion can be applied to the output of Touch Wah.	82	16
O	–		TC.WH+DST2		82	1
O	–		TC.WH+DST HD		82	21
O	–		TC.WH+DST HV		82	23
O	–		TC.WH+DST LT		82	25
O	–		TC.WAH+OD1	Overdrive distortion can be applied to the output of Touch Wah.	82	17
O	–		TC.WAH+OD2		82	2
O	–		TC.WAH+OD HD		82	22
O	–		TC.WAH+OD HV		82	24
O	–		TC.WAH+OD LT		82	26
O	–		WH+DST+DLY1	Wah, Distortion and Delay are connected in series.	97	16
O	–		WH+DST+DLY2		97	0
O	–		WH+DST+TDLY	Wah, Distortion and Tempo Delay are connected in series.	102	0
O	–		WH+OD+DLY1	Wah, Overdrive and Delay are connected in series.	97	17
O	–		WH+OD+DLY2		97	1
O	–		WH+OD+TDLY1	Wah, Overdrive and Tempo Delay are connected in series.	102	1
O	–		WH+OD+TDLY2		102	16
O	O		CLAVI TC.WAH	Clavinet Touch Wah	82	18
O	O		EP TC.WAH	EP Touch Wah	82	19
O	–		PEDAL WAH	Changes the center frequency of a wah filter according to "Pedal Control" parameter. (See Effect Parameter List.)	122	0
O	–		PEDAL WH+DST	Distortion can be applied to the output of Pedal Wah.	122	1
O	–		P.WH+DIST HD		122	21
O	–		P.WH+DIST HV		122	23
O	–		P.WH+DIST LT		122	25
O	–		PEDAL WH+OD	Overdrive distortion can be applied to the output of Pedal Wah.	122	2
O	–		P.WH+OD HD		122	22
O	–		P.WH+OD HV		122	24
O	–		P.WH+OD LT		122	26

PSR-S950: DSP1–4, PSR-S750: DSP1	PSR-S750: DSP2–4	Category	Type	Description	MSB	LSB
O	O	DYNAMIC	COMP MED	Compressor with medium setting.	83	16
O	O		COMP HEAVY	Compressor with heavy setting.	83	17
O	–		COMP MELODY	Compressor for the Melody part.	105	16
O	–		COMP BASS	Compressor for the Bass part.	105	17
O	–		MBAND COMP	Multi-band compressor that allows you to adjust the compression effect for individual frequency bands.	105	0
O	O		COMPRESSOR	Holds down the output level when a specified input level is exceeded. A sense of attack can also be added to the sound.	83	0
O	O		NOISE GATE	Gates the input when the input signal falls below a specified level.	84	0
O	–	ROTARY SP	DUAL ROT BRT	Simulates a rotary speaker.	99	16
O	–		DUAL ROT WRM		99	17
O	–		DUAL ROT SP1		99	0
O	–		DUAL ROT SP2		99	1
O	O		ROTARY SP1		69	16
O	O		ROTARY SP2		71	17
O	O		ROTARY SP3		71	18
O	O		ROTARY SP4		70	17
O	O		ROTARY SP5		66	18
O	O		ROTARY SP6		69	0
O	O		ROTARY SP7		71	22
O	–		2WAY ROT SP		86	0
O	–		DST+ROT SP	Distortion and rotary speaker connected in series.	69	1
O	–		DST+2ROT SP	Distortion and 2-way rotary speaker connected in series.	86	1
O	–		OD+ROT SP	Overdrive and rotary speaker connected in series.	69	2
O	–		OD+2ROT SP	Overdrive and 2-way rotary speaker connected in series.	86	2
O	–		AMP+ROT SP	Amp simulator and rotary speaker connected in series.	69	3
O	–		AMP+2ROT SP	Amp simulator and 2-way rotary speaker connected in series.	86	3
O	O	TREMOLO	TREMOLO1	Rich Tremolo effect with both volume and pitch modulation.	70	16
O	O		TREMOLO2		71	19
O	O		TREMOLO3		70	0
O	O		EP TREMOLO		70	18
O	O		GT TREMOLO1		71	20
O	O		GT TREMOLO2		70	19
O	O		VIBE VIBRATE	Vibraphone effect.	119	0
O	O		T_TREMOLO	Tempo-synchronized rich Tremolo effect with both volume and pitch modulation.	120	0
O	O	SPATIAL	AUTO PAN1		71	16
O	O		AUTO PAN2		71	0
O	–		AUTO PAN3		71	1
O	O		EP AUTOPAN		71	21
O	O		T_AUTO PAN1	Tempo-synchronized auto pan.	121	0
O	–		T_AUTO PAN2	Tempo-synchronized auto pan.	121	1
O	O	EQ/ENHANCER	EQ DISCO	Equalizer effect that boosts both high and low frequencies, as is typical in most disco music.	76	16
O	O		EQ TEL	Equalizer effect that cuts both high and low frequencies, to simulate the sound heard through a telephone receiver.	76	17
O	O		2BAND EQ	A stereo EQ with adjustable LOW and HIGH. Ideal for drum Parts.	77	0
O	O		3BAND EQ	A mono EQ with adjustable LOW, MID, and HIGH equalization.	76	0
O	O		ST 3BAND EQ	A stereo EQ with adjustable LOW, MID, and HIGH equalization.	76	18
O	O		HM ENHANCE1	Adds new harmonics to the input signal to make the sound stand out.	81	16
O	O		HM ENHANCE2		81	0
O	–	MISC	VCE CANCEL	Attenuates the vocal part of a CD or other source.	85	0
O	–		AMBIENCE	Blurs the stereo positioning of the sound to add spatial width.	88	0
O	–		TALKING MOD	Adds a vowel sound to the input signal.	93	0
O	–		LOOP FX1	Degrades the audio quality of the input signal.	94	16
O	–		LOOP FX2		94	17
O	–		LO-FI		94	0
O	–		LO-FI DRUM1	Degrades the audio quality of the input signal. Ideal for drum sounds.	94	18
O	–		LO-FI DRUM2		94	19
O	O		LO-FI DRUM3		76	19
O	O		LO-FI DRUM4		76	20
O	–		DYN FILTER	Dynamically controlled filter.	109	0
O	–		DYN RINGMOD	Dynamically controlled Ring Modulator.	112	0
O	–		RING MOD	An effect that modifies the pitch by applying amplitude modulation to the frequency of the input.	113	0
O	–		ISOLATOR	Controls the level of a specified frequency band of the input signal.	115	0
O (*)	–	–	NO EFFECT	No effect.	0	0
O	O	–	THRU	Bypass without applying an effect.	64	0

(*) DSP1 Only

- Parameters marked with a ● in the "Control" column can be controlled from an AC1 (assignable controller 1) etc. However, these only affect insertion type effects.
- The "Table" column indicates the corresponding table number in the Effect Data Assign Table.
- Parameter 10 Dry/Wet only affects insertion type effects.

REVERB

REVERB
BASIC HALL, LIGHT HALL, HALL1, HALL2, HALL3, HALL4, HALL5, HALL M, HALL L, ATMO HALL, VOCAL HALL1, VOCAL HALL2, ACOSTIC ROOM, DRUMS ROOM, PERC ROOM, ROOM1, ROOM2, ROOM3, ROOM4, ROOM5, ROOM6, ROOM7, ROOM S, ROOM M, ROOM L, STAGE1, STAGE2, STAGE3, STAGE4, PLATE1, PLATE2, PLATE3, GM PLATE

No.	Parameter	Display	Value	Table	Control
1	Reverb Time	0.3s – 30.0s	0 – 69	table#4	
2	Diffusion	0 – 10	0 – 10		
3	Initial Delay	0.1ms – 200.0ms (192step)	0 – 127	table#5	
		0.1ms – 99.3ms (96step)	0 – 63		
		0.1ms – 99.3ms (48step)	0 – 63		
4	HPF Cutoff	Thru, 22Hz – 8.0kHz	0 – 52	table#3	
5	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Reverb Delay	0.1ms – 200.0ms (192step)	0 – 127	table#5	
		0.1ms – 99.3ms (96step)	0 – 63		
		0.1ms – 99.3ms (48step)	0 – 63		
12	Density	0 – 4 (192step, 96step)	0 – 4		
		0 – 2 (48step)	0 – 2		
13	ER/Reverb Balance	E63>R – E=R – E<R63	1 – 127		
14	High Damp	0.1 – 1.0	1 – 10		
15	Feedback Level	-63 – 0 – +63	1 – 127		
16					

REVERB
BALLAD HALL, PIANO HALL, LARGE HALL, MEDIUM HALL, WARM ROOM, WOODY ROOM, RICH PLATE

No.	Parameter	Display	Value	Table	Control
1	Reverb Time	0.3s – 30.0s	0 – 69	table#4	
2	Diffusion	0 – 10	0 – 10		
3	Initial Delay	0.1ms – 200.0ms	0 – 127	table#5	
4	HPF Cutoff	Thru, 22Hz – 8.0kHz	0 – 52	table#3	
5	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13					
14	High Damp	0.1 – 1.0	1 – 10		
15					
16					

REVERB
TUNNEL, CANYON, BASEMENT, WHITE ROOM

No.	Parameter	Display	Value	Table	Control
1	Reverb Time	0.3s – 30.0s	0 – 69	table#4	
2	Diffusion	0 – 10	0 – 10		
3	Initial Delay	0.1ms – 200.0ms (192step)	0 – 127	table#5	
		0.1ms – 99.3ms (96step)	0 – 63		
4	HPF Cutoff	Thru, 22Hz – 8.0kHz	0 – 52	table#3	
5	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
6	Width	0.5m – 30.2m (192step)	0 – 104	table#11	
		0.5m – 10.2m (96step)	0 – 37		
7	Height	0.5m – 30.2m (192step)	0 – 104	table#11	
		0.5m – 20.2m (96step)	0 – 73		
8	Depth	0.5m – 30.2m	0 – 104	table#11	
9	Wall Vary	0 – 30	0 – 30		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Reverb Delay	0.1ms – 200.0ms (192step)	0 – 127	table#5	
		0.1ms – 99.3ms (96step)	0 – 63		
12	Density	0 – 4	0 – 4		
13	ER/Reverb Balance	E63>R – E=R – E<R63	1 – 127		
14	High Damp	0.1 – 1.0	1 – 10		
15	Feedback Level	-63 – 0 – +63	1 – 127		
16					

DELAY

DELAY
DELAY LCR1, DELAY LCR2

No.	Parameter	Display	Value	Table	Control
1	Lch Delay	0.1ms – 1638.3ms (96step)	1 – 16383		
		0.1ms – 1486.0ms (48step)	1 – 14860		
2	Rch Delay	0.1ms – 1638.3ms (96step)	1 – 16383		
		0.1ms – 1486.0ms (48step)	1 – 14860		
3	Cch Delay	0.1ms – 1638.3ms (96step)	1 – 16383		
		0.1ms – 1486.0ms (48step)	1 – 14860		
4	Feedback Delay	0.1ms – 1638.3ms (96step)	1 – 16383		
		0.1ms – 1486.0ms (48step)	1 – 14860		
5	Feedback Level	-63 – 0 – +63	1 – 127		
6	Cch Level	0 – 127	0 – 127		
7	High Damp	0.1 – 1.0	1 – 10		
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

DELAY
DELAY LR

No.	Parameter	Display	Value	Table	Control
1	Lch Delay	0.1ms – 1638.3ms (96step)	1 – 16383		
		0.1ms – 1486.0ms (48step)	1 – 14860		
2	Rch Delay	0.1ms – 1638.3ms (96step)	1 – 16383		
		0.1ms – 1486.0ms (48step)	1 – 14860		
3	Feedback Delay 1	0.1ms – 1638.3ms (96step)	1 – 16383		
		0.1ms – 1486.0ms (48step)	1 – 14860		
4	Feedback Delay 2	0.1ms – 1638.3ms (96step)	1 – 16383		
		0.1ms – 1486.0ms (48step)	1 – 14860		
5	Feedback Level	-63 – 0 – +63	1 – 127		
6	High Damp	0.1 – 1.0	1 – 10		
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

DELAY
ECHO

No.	Parameter	Display	Value	Table	Control
1	Lch Delay1	0.1ms – 1486.0ms (96step)	1 – 14860		
		0.1ms – 743.0ms (48step)	1 – 7430		
2	Lch Feedback Level	-63 – 0 – +63	1 – 127		
3	Rch Delay1	0.1ms – 1486.0ms (96step)	1 – 14860		
		0.1ms – 743.0ms (48step)	1 – 7430		
4	Rch Feedback Level	-63 – 0 – +63	1 – 127		
5	High Damp	0.1 – 1.0	1 – 10		
6	Lch Delay2	0.1ms – 1486.0ms (96step)	1 – 14860		
		0.1ms – 743.0ms (48step)	1 – 7430		
7	Rch Delay2	0.1ms – 1486.0ms (96step)	1 – 14860		
		0.1ms – 743.0ms (48step)	1 – 7430		
8	Delay2 Level	0 – 127	0 – 127		
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

DELAY
CROSS DELAY1, CROSS DELAY2

No.	Parameter	Display	Value	Table	Control
1	L->R Delay	0.1ms – 1486.0ms (96step)	1 – 14860		
		0.1ms – 743.0ms (48step)	1 – 7430		
2	R->L Delay	0.1ms – 1486.0ms (96step)	1 – 14860		
		0.1ms – 743.0ms (48step)	1 – 7430		
3	Feedback Level	-63 – 0 – +63	1 – 127		
4	Input Select	L, R, L&R	0 – 2		
5	High Damp	0.1 – 1.0	1 – 10		
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

DELAY
TEMPO DELAY1, TEMPO DELAY2, TEMPO ECHO

No.	Parameter	Display	Value	Table	Control
1	Delay Time	64th/3 – 4thx6	0 – 19	table#14	
2	Feedback Level	-63 – 0 – +63	1 – 127		
3	Feedback High Dump	0.1 – 1.0	1 – 10		
4	L/R Diffusion	-63ms – 0ms – 63ms	1 – 127		
5	Lag	-63ms – 0ms – 63ms	1 – 127		
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40		
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58		
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

DELAY
TEMPO CROSS1, TEMPO CROSS2, TEMPO CROSS3, TEMPO CROSS4

No.	Parameter	Display	Value	Table	Control
1	Delay Time L>R	64th/3 – 4thx6	0 – 19	table#14	
2	Delay Time R>L	64th/3 – 4thx6	0 – 19	table#14	
3	Feedback Level	-63 – 0 – +63	1 – 127		
4	Input Select	L, R, L&R	0 – 2		
5	Feedback High Dump	0.1 – 1.0	1 – 10		
6	Lag	-63ms – 0ms – 63ms	1 – 127		
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40		
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58		
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

ER/KARAOKE

ER/KARAOKE
KARAOKE1, KARAOKE2, KARAOKE3

No.	Parameter	Display	Value	Table	Control
1	Delay Time	0.1ms – 400.0ms	0 – 127	table#7	
2	Feedback Level	-63 – 0 – +63	1 – 127		
3	HPF Cutoff	Thru, 22Hz – 8.0kHz	0 – 52	table#3	
4	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
5					
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Density	0 – 3	0 – 3		
12					
13					
14					
15					
16					

ER/KARAOKE
ER1, ER2

No.	Parameter	Display	Value	Table	Control
1	Type	S-H, L-H, Rdm, Rvs, Plt, Spr	0 – 5		
2	Room Size	0.1 – 20.0	0 – 127	table#6	
3	Diffusion	0 – 10	0 – 10		
4	Initial Delay	0.1ms – 200.0ms	0 – 127	table#5	
5	Feedback Level	-63 – 0 – +63	1 – 127		
6	HPF Cutoff	Thru, 22Hz – 8.0kHz	0 – 52	table#3	
7	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Liveness	0 – 10	0 – 10		
12	Density	0 – 3	0 – 3		
13	High Damp	0.1 – 1.0	1 – 10		
14					
15					
16					

ER/KARAOKE
GATE REVERB1, GATE REVERB2, REVERS GATE

No.	Parameter	Display	Value	Table	Control
1	Type	TypeA, TypeB	0 – 1		
2	Room Size	0.1 – 20.0	0 – 127	table#6	
3	Diffusion	0 – 10	0 – 10		
4	Initial Delay	0.1ms – 200.0ms	0 – 127	table#5	
5	Feedback Level	-63 – 0 – +63	1 – 127		
6	HPF Cutoff	Thru, 22Hz – 8.0kHz	0 – 52	table#3	
7	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Liveness	0 – 10	0 – 10		
12	Density	0 – 3	0 – 3		
13	High Damp	0.1 – 1.0	1 – 10		
14					
15					
16					

CHORUS

CHORUS
CHORUS1, CHORUS2, CHORUS3, CHORUS4, CHORUS5, CHORUS6, CHORUS7, CHORUS8,
CHORUS FAST, CHORUS LITE, GM CHORUS1, GM CHORUS2, GM CHORUS3, GM CHORUS4, FB CHORUS, CELESTE1, CELESTE2

ROTARY SP
ROTARY SP5

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Feedback Level	-63 – 0 – +63	1 – 127		
4	Delay Offset	0.0ms – 50ms	0 – 127	table#2	
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14					
15	Input Mode	mono, stereo	0 – 1		
16					

CHORUS
SYMPHONIC1, SYMPHONIC2

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Delay Offset	0.0ms – 50ms	0 – 127	table#2	
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14					
15					
16					

CHORUS
ENS DETUNE1, ENS DETUNE2

No.	Parameter	Display	Value	Table	Control
1	Detune	-50cent – 0cent – +50cent	14 – 114		
2	Lch Init Delay	0.0ms – 50ms	0 – 127	table#2	
3	Rch Init Delay	0.0ms – 50ms	0 – 127	table#2	
4					
5					
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
12	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
13	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
14	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
15					
16					

CHORUS
AMB CHORUS, AMB CELESTE

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Feedback Level	-63 – 0 – +63	1 – 127		
4	Delay Offset	0.0ms – 50ms	0 – 127	table#2	
5	LFO AMod Depth	0 – 127	0 – 127		
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13					
14	Ambience	0 – 127	0 – 127		
15					
16	Conect Mode	Amb->Cho, Cho->Amb	0 – 1		

CHORUS
AMB SYMPHONIC

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Delay Offset	0.0ms – 50ms	0 – 127	table#2	
4					
5					
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13					
14	Ambience	0 – 127	0 – 127		
15					
16	Conect Mode	Amb->Sym, Sym->Amb	0 – 1		

FLANGER

FLANGER
FLANGER1, FLANGER2, FLANGER3, FLANGER4, FLANGER5, GM FLANGER

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Feedback Level	-63 – 0 – +63	1 – 127		
4	Delay Offset	0.0ms – 50ms	0 – 127	table#2	
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14	LFO Phase Difference	-180deg – 0deg – +180deg (resolution=3deg.)	4 – 124		
15					
16					

FLANGER
V_FLANGER

No.	Parameter	Display	Value	Table	Control
1	LFO Freq	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	LFO Wave	Triangle, Sine, Random	0 – 2		
4	Delay Offset	0.09ms – 36.21ms	0 – 139	table#19	
5	Feedback Level	-100% – 0% – +100%	0 – 200		
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	EQ Mid Frequency	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width	0.1 – 12.0	1 – 120		
14	Modulation Phase	-180deg – 0deg – +180deg	0 – 16	table#20	
15	Feedback High Damp	0.1 – 1.0	1 – 10		
16	Analog Feel	0 – 10	0 – 10		

FLANGER
T_FLANGER

No.	Parameter	Display	Value	Table	Control
1	LFO Freq	16th – 4thx16	5 – 29	table#14	
2	LFO Depth	0 – 127	0 – 127		
3	Feedback Level	-63 – 0 – +63	1 – 127		
4	Delay Offset	0.0ms – 50ms	0 – 127	table#2	
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14	LFO Phase Difference	-180deg – 0deg – +180deg	4 – 124		
15					
16					

FLANGER
DYN FLANGER

No.	Parameter	Display	Value	Table	Control
1	Sensitivity	0 – 127	0 – 127		●
2	Delay Time Offset	0 – 127	0 – 127		
3	Feedback Level	-63 – 0 – +63	1 – 127		
4	Attack Time	0.3ms – 227ms	0 – 127	table#16	
5	Release Time	2.6ms – 2171.4ms	0 – 127	table#17	
6	Release Curve	0 – 127	0 – 127		
7	Direction	Up, Down	0 – 1		
8	Dyna Threshold Level	0 – 127	0 – 127		
9	Dyna Level Offset	0 – 127	0 – 127		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

FLANGER
AMB FLANGER

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Feedback Level	-63 – 0 – +63	1 – 127		
4	Delay Offset	0.0ms – 50ms	0 – 127	table#2	
5					
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13					
14	LFO Phase Difference	-180deg – 0deg – +180deg (resolution=3deg.)	4 – 124		
15	Ambience	0 – 127	0 – 127		
16	Conect Mode	Amb->Flg, Flg->Amb	0 – 1		

PHASER

PHASER
PHASER1, EP PHASER1, EP PHASER2, EP PHASER3

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Phase Shift Offset	0 – 127	0 – 127		
4	Feedback Level	-63 – 0 – +63	1 – 127		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Stage	4 – 22 (96step)	4 – 22		
		4 – 12 (48step)	4 – 12		
12	Diffusion	mono, stereo	0 – 1		
13					
14					
15					
16					

PHASER
PHASER2, PHASER3

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Phase Shift Offset	0 – 127	0 – 127		
4	Feedback Level	-63 – 0 – +63	1 – 127		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Stage	3 – 11	3 – 11		
12					
13	LFO Phase Difference	-180deg – 0deg – +180deg (resolution=3deg.)	4 – 124		
14					
15					
16					

PHASER
T_PHASER1, T_PHASER2

No.	Parameter	Display	Value	Table	Control
1	LFO Freq	16th – 4thx16	5 – 29	table#14	
2	LFO Depth	0 – 127	0 – 127		
3	Phase Shift Offset	0 – 127	0 – 127		
4	Feedback Level	-63 – 0 – +63	1 – 127		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Stage	3 – 11	3 – 11		
12					
13	LFO Phase Difference	-180deg – 0deg – +180deg	4 – 124		
14					
15					
16					

PHASER
DYN PHASER

No.	Parameter	Display	Value	Table	Control
1	Sensitivity	0 – 127	0 – 127		●
2	Dyna Level Offset	0 – 127	0 – 127		
3	Feedback Level	-63 – 0 – +63	1 – 127		
4	Attack Time	0.3ms – 227ms	0 – 127	table#16	
5	Release Time	2.6ms – 2171.4ms	0 – 127	table#17	
6	Release Curve	0 – 127	0 – 127		
7	Direction	Up, Down	0 – 1		
8	Dyna Threshold Level	0 – 127	0 – 127		
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Stage	4, 5, 6	4 – 6		
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

DISTORTION/DISTORTION+

DISTORTION
V_DIST WARM, V_DIST CLS H, V_DIST CLS S, V_DIST METAL, V_DIST CRUNC, V_DIST BLUES, V_DIST EDGY, V_DIST SOLID, V_DST CLEAN1, V_DST CLEAN2, V_DIST TWIN, V_DST JZ CLN, V_DIST HARD, V_DIST SOFT

No.	Parameter	Display	Value	Table	Control
1	Overdrive	0% – 100%	0 – 100		
2	Device	Transistor, Vintage Tube, Dist1, Dist2, Fuzz	0 – 4		
3	Speaker	Flat, Stack, Combo, Twin, Radio, Megaphone	0 – 5		
4	Presence	0 – 20	0 – 20		
5	Output Level	0% – 100%	0 – 100		
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13					
14					
15					
16					

DISTORTION
V_DIST ROCA, V_DST FUSION

DISTORTION+
V_DST H+TDL1, V_DST H+TDL2, V_DST S+TDL1, V_DST S+TDL2

No.	Parameter	Display	Value	Table	Control
1	Overdrive	0% – 100%	0 – 100		
2	Device	Transistor, Vintage Tube, Dist1, Dist2, Fuzz	0 – 4		
3	Speaker	Flat, Stack, Combo, Twin, Radio, Megaphone	0 – 5		
4	Presence	0 – 20	0 – 20		
5	Output Level	0% – 100%	0 – 100		
6	Delay Time	64th/3 – 4thx6	0 – 19	table#14	
7	Delay Feedback Level	-63 – 0 – +63	1 – 127		
8	L/R Diffusion	-63ms – 0ms – 63ms	1 – 127		
9	Lag	-63ms – 0ms – 63ms	1 – 127		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Delay Mix	0 – 127	0 – 127		
12	Feedback High Dump	0.1 – 1.0	1 – 10		
13					
14					
15					
16					

DISTORTION
ST AMP SOLID, ST AMP CRUNC, ST AMP BLUES, ST AMP CLEAN, ST AMP HARP, ST DIST HARD, ST DIST SOFT, ST AMP1, ST AMP2, ST AMP3, ST AMP4, ST AMP5, ST AMP6

No.	Parameter	Display	Value	Table	Control
1	Drive	0 – 127	0 – 127		●
2	AMP Type	Off, Stack, Combo, Tube	0 – 3		
3	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
4	Output Level	0 – 127	0 – 127		
5					
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Edge (Clip Curve)	0 – 127 (mild – sharp)	0 – 127		
12					
13					
14					
15					
16					

DISTORTION
DIST HARD1, DIST HARD2, DIST SOFT1, DIST SOFT2, AMP SIM1

No.	Parameter	Display	Value	Table	Control
1	Drive	0 – 127	0 – 127		●
2	AMP Type	Off, Stack, Combo, Tube	0 – 3		
3	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
4	Output Level	0 – 127	0 – 127		
5					
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Edge (Clip Curve)	0 – 127 (mild – sharp)	0 – 127		
12					
13					
14					
15					
16					

DISTORTION
DIST HEAVY, OVERDRIVE

No.	Parameter	Display	Value	Table	Control
1	Drive	0 – 127	0 – 127		●
2	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
3	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
4	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
5	Output Level	0 – 127	0 – 127		
6					
7	EQ Mid Frequency	100Hz – 10.0kHz	14 – 54	table#3	
8	EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
9	EQ Mid Width	0.1 – 12.0	1 – 120		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Edge (Clip Curve)	0 – 127 (mild – sharp)	0 – 127		
12					
13					
14					
15					
16					

DISTORTION
ST DIST, ST OD

No.	Parameter	Display	Value	Table	Control
1	Drive	0 – 127	0 – 127		●
2	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
3	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
4	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
5	Output Level	0 – 127	0 – 127		
6					
7	EQ Mid Frequency	100Hz – 10.0kHz	14 – 54	table#3	
8	EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
9	EQ Mid Width	0.1 – 12.0	1 – 120		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Edge (Clip Curve)	0 – 127	0 – 127		
12					
13					
14					
15					
16					

DISTORTION
AMP SIM2

No.	Parameter	Display	Value	Table	Control
1	Drive	0 – 127	0 – 127		●
2	AMP Type	Off, Stack, Combo, Tube, Crunch, Hi gain, British	0 – 6		
3	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
4	Output Level	0 – 127	0 – 127		
5					
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11					
12					
13					
14					
15					
16					

DISTORTION+
DST+DELAY1, DST+DELAY2, OD+DELAY1, OD+DELAY2

No.	Parameter	Display	Value	Table	Control
1	Lch Delay Time	0.1ms – 1638.3ms	1 – 16383		
2	Rch Delay Time	0.1ms – 1638.3ms	1 – 16383		
3	Delay Feedback Time	0.1ms – 1638.3ms	1 – 16383		
4	Delay Feedback Level	-63 – 0 – +63	1 – 127		
5	Delay Mix	0 – 127	0 – 127		
6	Dist Drive	0 – 127	0 – 127		
7	Dist Output Level	0 – 127	0 – 127		
8	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
9	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13					
14					
15					
16					

DISTORTION+
CMP+DST+DLY1, CMP+DST+DLY2, CMP+OD+DLY1, CMP+OD+DLY2

No.	Parameter	Display	Value	Table	Control
1	Delay Time	0.1ms – 1638.3ms	1 – 16383		
2	Delay Feedback Level	-63 – 0 – +63	1 – 127		
3	Delay Mix	0 – 127	0 – 127		
4	Dist Drive	0 – 127	0 – 127		
5	Dist Output Level	0 – 127	0 – 127		
6	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
7	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Comp. Attack	1ms – 40ms	0 – 19	table#8	
12	Comp. Release	10ms – 680ms	0 – 15	table#9	
13	Comp. Threshold	-48dB – -6dB	79 – 121		
14	Comp. Ratio	1.0 – 20.0	0 – 7	table#10	
15					
16					

DISTORTION+
V_DST H+DLY, V_DST S+DLY

No.	Parameter	Display	Value	Table	Control
1	Overdrive	0% – 100%	0 – 100		
2	Device	Transistor, Vintage Tube, Dist1, Dist2, Fuzz	0 – 4		
3	Speaker	Flat, Stack, Combo, Twin, Radio, Megaphone	0 – 5		
4	Presence	0 – 20	0 – 20		
5	Output Level	0% – 100%	0 – 100		
6	Delay Time L	0.1ms – 1638.3ms	1 – 16383		
7	Delay Time R	0.1ms – 1638.3ms	1 – 16383		
8	Delay Feedback Time	0.1ms – 1638.3ms	1 – 16383		
9	Delay Feedback Level	-63 – 0 – +63	1 – 127		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Delay Mix	0 – 127	0 – 127		
12	Feedback High Dump	0.1 – 1.0	1 – 10		
13					
14					
15					
16					

DISTORTION+
DST+TDLY, OD+TDLY

No.	Parameter	Display	Value	Table	Control
1	Delay Time	64th/3 – 4thx6	0 – 19	table#14	
2	Delay Feedback Level	-63 – 0 – +63	1 – 127		
3	Delay Mix	0 – 127	0 – 127		
4	Dist Drive	0 – 127	0 – 127		
5	Dist Output Level	0 – 127	0 – 127		
6	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
7	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
8	L/R Diffusion	-63ms – 0ms – 63ms	1 – 127		
9	Lag	-63ms – 0ms – 63ms	1 – 127		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13					
14					
15					
16					

DISTORTION+
COMP+DIST1, COMP+DIST2

No.	Parameter	Display	Value	Table	Control
1	Drive	0 – 127	0 – 127		●
2	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
3	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
4	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
5	Output Level	0 – 127	0 – 127		
6					
7	EQ Mid Frequency	100Hz – 10.0kHz	14 – 54	table#3	
8	EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
9	EQ Mid Width	0.1 – 12.0	1 – 120		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Edge (Clip Curve)	0 – 127 (mild – sharp)	0 – 127		
12	Attack	1ms – 40ms	0 – 19	table#8	
13	Release	10ms – 680ms	0 – 15	table#9	
14	Threshold	-48dB – -6dB	79 – 121		
15	Ratio	1.0 – 20.0	0 – 7	table#10	
16					

DISTORTION+
CMP+DST+TDL, CMP+OD+TDLY1, CMP+OD+TDLY2, CMP+OD+TDLY3, CMP+OD+TDLY4, CMP+OD+TDLY5, CMP+OD+TDLY6

No.	Parameter	Display	Value	Table	Control
1	Delay Time	64th/3 – 4thx6	0 – 19	table#14	
2	Delay Feedback Level	-63 – 0 – +63	1 – 127		
3	Delay Mix	0 – 127	0 – 127		
4	Dist Drive	0 – 127	0 – 127		
5	Dist Output Level	0 – 127	0 – 127		
6	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
7	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
8	L/R Diffusion	-63ms – 0ms – 63ms	1 – 127		
9	Lag	-63ms – 0ms – 63ms	1 – 127		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Comp. Attack	1ms – 40ms	0 – 19	table#8	
12	Comp. Release	10ms – 680ms	0 – 15	table#9	
13	Comp. Threshold	-48dB – -6dB	79 – 121		
14	Comp. Ratio	1.0 – 20.0	0 – 7	table#10	
15					
16					

REAL DIST

REAL DIST
MLT DS SOLO, MLT DS BASIC, MLT OD CHO, MLT CR WAH, MLT OLD DLY, VINTAGE ECHO

No.	Parameter	Display	Value	Table	Control
1	Comp. Sustain	Off, 0.1 – 10.0	0 – 100		
2	Wah Sw	Off, Wah Pedal, Auto+ Full, Auto+ Mid, Auto+ Light, Auto- Full, Auto- Mid, Auto- Light	0 – 7		
3	Wah Pedal	0 – 127	0 – 127		●
4	Dist Sw	Off, Overdrive, Distortion1, Distortion2, Clean, Crunch, Higain, Modern	0 – 7		
5	Dist Drive	0.0 – 10.0	0 – 100		
6	Dist EQ	High Boost, Mid Boost, Mid Cut 1, Mid Cut 2, Mid Cut 3, Low Cut 1, Low Cut 2, High Cut, High/Low	0 – 8		
7	Dist Tone	0.0 – 10.0	0 – 100		
8	Dist Presence	0.0 – 10.0	0 – 100		
9	Output	0 – 127	0 – 127		
10					
11	SP Type	Off, Stack, Twin, Tweed, Oldies, Modern, Mean, Soft, Small, Dip1, Dip2, Metal, Light	0 – 12		
12	LFO Speed	0.1Hz – 9.925Hz	0 – 127	table#27	
13	Phaser Sw	Off, Standard, Wide, Vibe, Tremolo	0 – 4		
14	Delay Sw	Off, Delay M, Echo1 M, Echo2 M, Chorus M, Dl Chorus M, Flanger1 M, Flanger2 M, Flanger3 M, Delay St, Echo1 St, Echo2 St, Chorus St, Dl Chorus St, Flanger1 St, Flanger2 St, Flanger3 St	0 – 16		
15	Delay Ctrl	0 – 127	0 – 127		
16	Delay Time	0 – 127	0 – 127		

REAL DIST
ST AMP DS, ST AMP OD, ST AMP VT, ST AMP HV

No.	Parameter	Display	Value	Table	Control
1	Comp. Sw	Off, On	0 – 1		
2	Comp. Sustain	0.0 – 10.0	0 – 100		
3	Comp. Level	0.0 – 10.0	0 – 100		
4	Dist Type	Overdrive, Distortion1, Distortion2, Clean, Crunch, Higain, Modern	1 – 7		
5	Dist Drive	0.0 – 10.0	0 – 100		
6	Dist EQ	High Boost, Mid Boost, Mid Cut 1, Mid Cut 2, Mid Cut 3, Low Cut 1, Low Cut 2, High Cut, High/Low	0 – 8		
7	Dist Tone	0.0 – 10.0	0 – 100		
8	Dist Presence	0.0 – 10.0	0 – 100		
9	Output	0 – 127	0 – 127		
10					●
11	SP Type	Off, Stack, Twin, Tweed, Oldies, Modern, Mean, Soft, Small, Dip1, Dip2, Metal, Light	0 – 12		
12					
13					
14					
15					
16					

REAL DIST
AMP1 CLASSIC, AMP1 TOP BST, AMP1 CUSTOM, AMP1 HEAVY

No.	Parameter	Display	Value	Table	Control
1	Mode	Bright, Top Boost	0 – 1		
2	Normal	0.0 – 10.0	0 – 100		
3	Brilliant	0.0 – 10.0	0 – 100		
4	Bass	0.0 – 10.0	0 – 100		
5					
6	Treble	0.0 – 10.0	0 – 100		
7	Cut	0.0 – 10.0	0 – 100		
8					
9	Output	0 – 127	0 – 127		
10					●
11	SP Type	Off, BS 4x12, AC 2x12, AC 1x12, AC 4x10, BC 2x12, AM 4x12, YC 4x12, JC 2x12, OC 2x12, OC 1x8	0 – 10		
12	SP Air	0 – 2	0 – 2		
13	Mic Position	Center, Edge	0 – 1		
14					
15					
16					

REAL DIST
AMP2 BLUES, AMP2 HEAVY1, AMP2 HEAVY2, AMP2 CLEAN, AMP2 DRT CLN

No.	Parameter	Display	Value	Table	Control
1	Sensitivity	High, Low	0 – 1		
2	PreAmp	0.0 – 10.0	0 – 100		
3					
4	Bass	0.0 – 10.0	0 – 100		
5	Middle	0.0 – 10.0	0 – 100		
6	Treble	0.0 – 10.0	0 – 100		
7	Presence	0.0 – 10.0	0 – 100		
8	Master	0.0 – 10.0	0 – 100		
9	Output	0 – 127	0 – 127		
10					●
11	SP Type	Off, BS 4x12, AC 2x12, AC 1x12, AC 4x10, BC 2x12, AM 4x12, YC 4x12, JC 2x12, OC 2x12, OC 1x8	0 – 10		
12	SP Air	0 – 2	0 – 2		
13	Mic Position	Center, Edge	0 – 1		
14					
15					
16					

PITCH CHANGE

PITCH CHANGE
PITCH CHG1, PITCH CHG2

No.	Parameter	Display	Value	Table	Control
1	Pitch	-24 – 0 – +24	40 – 88		
2	Initial Delay	0.1ms – 400.0ms	0 – 127	table#7	
3	Fine 1	-50 – 0 – +50	14 – 114		
4	Fine 2	-50 – 0 – +50	14 – 114		
5	Feedback Level	-63 – 0 – +63	1 – 127		
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Pan 1	L63 – C – R63	1 – 127		
12	Output Level 1	0 – 127	0 – 127		
13	Pan 2	L63 – C – R63	1 – 127		
14	Output Level 2	0 – 127	0 – 127		
15					
16					

PITCH CHANGE
PITCH CHG3

No.	Parameter	Display	Value	Table	Control
1	Pitch	-24 – 0 – +24	40 – 88		
2	Initial Delay	0.1ms – 400.0ms	0 – 127	table#7	
3	Fine 1	-50cent – 0cent – +50cent	14 – 114		
4	Fine 2	-50cent – 0cent – +50cent	14 – 114		
5	Feedback Level	-63 – 0 – +63	1 – 127		
6					
7					
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Pan 1	L63 – C – R63	1 – 127		
12	Output Level 1	0 – 127	0 – 127		
13	Pan 2	L63 – C – R63	1 – 127		
14	Output Level 2	0 – 127	0 – 127		
15					
16					

WAH AUTO

WAH AUTO
AUTO WAH1, AUTO WAH2

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Cutoff Frequency Offset	0 – 127	0 – 127		●
4	Resonance	1.0 – 12.0	10 – 120		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive (w/o 48step)	0 – 127	0 – 127		
12					
13					
14					
15					
16					

WAH AUTO
AT.WAH+DST1, AT.WAH+DST2, AT.WH+DST HD, AT.WH+DST HV, AT.WH+DST LT, AT.WAH+OD1, AT.WAH+OD2, AT.WH+OD HD, AT.WH+OD HV, AT.WH+OD LT

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3	Cutoff Frequency Offset	0 – 127	0 – 127		●
4	Resonance	1.0 – 12.0	10 – 120		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive	0 – 127	0 – 127		
12	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
13	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
14	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
15	Output Level	0 – 127	0 – 127		
16					

WAH AUTO
TEMPO AT.WAH

No.	Parameter	Display	Value	Table	Control
1	LFO Freq	16th – 4thx16	5 – 29	table#14	
2	LFO Depth	0 – 127	0 – 127		
3	Cutoff Frequency Offset	0 – 127	0 – 127		●
4	Resonance	1.0 – 12.0	10 – 120		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive (w/o 48step)	0 – 127	0 – 127		
12					
13					
14					
15					
16					

WAH AUTO
T_AT.WH+DST, T_A.WH+DSTHD, T_A.WH+DSTHV, T_A.WH+DSTLT, T_AT.WH+OD, T_A.WH+OD HD, T_A.WH+OD HV, T_A.WH+OD LT,

No.	Parameter	Display	Value	Table	Control
1	LFO Freq	16th – 4thx16	5 – 29	table#14	
2	LFO Depth	0 – 127	0 – 127		
3	Cutoff Frequency Offset	0 – 127	0 – 127		●
4	Resonance	1.0 – 12.0	10 – 120		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive	0 – 127	0 – 127		
12	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
13	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
14	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
15	Output Level	0 – 127	0 – 127		
16					

WAH TCH/PDL

WAH TCH/PDL
TOUCH WAH1

No.	Parameter	Display	Value	Table	Control
1	Sensitivity	0 – 127	0 – 127		
2	Cutoff Frequency Offset	0 – 127	0 – 127		●
3	Resonance	1.0 – 12.0	10 – 120		
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive (w/o 48step)	0 – 127	0 – 127		
12					
13					
14					
15					
16					

WAH TCH/PDL
TOUCH WAH2, TOUCH WAH3, TC.WH+DST HD, TC.WH+DST HV, TC.WH+DST LT, CLAVI TC.WAH, EP TC.WAH

No.	Parameter	Display	Value	Table	Control
1	Sensitivity	0 – 127	0 – 127		
2	Cutoff Frequency Offset	0 – 127	0 – 127		●
3	Resonance	1.0 – 12.0	10 – 120		
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive (w/o 48step)	0 – 127	0 – 127		
12	Dist EQ Low Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	Dist EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
14	LPF Cutoff (w/o 48step)	1.0kHz – 18kHz, Thru	34 – 60	table#3	
15	Output Level (w/o 48step)	0 – 127	0 – 127		
16	Release	10ms – 680ms	52 – 67	table#12	

WAH TCH/PDL
TC.WH+DST1, TC.WH+DST2

No.	Parameter	Display	Value	Table	Control
1	Sensitivity	0 – 127	0 – 127		
2	Cutoff Frequency Offset	0 – 127	0 – 127		●
3	Resonance	1.0 – 12.0	10 – 120		
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive	0 – 127	0 – 127		
12					
13					
14					
15					
16					

WAH TCH/PDL
TC.WAH+OD1, TC.WAH+OD2, TC.WAH+OD HD, TC.WAH+OD HV, TC.WAH+OD LT

No.	Parameter	Display	Value	Table	Control
1	Sensitivity	0 – 127	0 – 127		
2	Cutoff Frequency Offset	0 – 127	0 – 127		●
3	Resonance	1.0 – 12.0	10 – 120		
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive	0 – 127	0 – 127		
12	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
13	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
14	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
15	Output Level	0 – 127	0 – 127		
16	Release	10ms – 680ms	52 – 67	table#12	

WAH TCH/PDL
WH+DST+DLY1, WH+DST+DLY2, WH+OD+DLY1, WH+OD+DLY2

No.	Parameter	Display	Value	Table	Control
1	Delay Time	0.1ms – 1638.3ms	1 – 16383		
2	Delay Feedback Level	-63 – 0 – +63	1 – 127		
3	Delay Mix	0 – 127	0 – 127		
4	Dist Drive	0 – 127	0 – 127		
5	Dist Output Level	0 – 127	0 – 127		
6	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
7	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Wah Sensitivity	0 – 127	0 – 127		
12	Wah Cutoff Freq Offset	0 – 127	0 – 127		
13	Wah Resonance	1.0 – 12.0	10 – 120		
14	Wah Release	10ms – 680ms	52 – 67	table#12	
15					
16					

WAH TCH/PDL
WH+DST+TDLY, WH+OD+TDLY1, WH+OD+TDLY2

No.	Parameter	Display	Value	Table	Control
1	Delay Time	64th/3 – 4thx6	0 – 19	table#14	
2	Delay Feedback Level	-63 – 0 – +63	1 – 127		
3	Delay Mix	0 – 127	0 – 127		
4	Dist Drive	0 – 127	0 – 127		
5	Dist Output Level	0 – 127	0 – 127		
6	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
7	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
8	L/R Diffusion	-63ms – 0ms – 63ms	1 – 127		
9	Lag	-63ms – 0ms – 63ms	1 – 127		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11	Wah Sensitivity	0 – 127	0 – 127		
12	Wah Cutoff Freq Offset	0 – 127	0 – 127		
13	Wah Resonance	1.0 – 12.0	10 – 120		
14	Wah Release	10ms – 680ms	52 – 67	table#12	
15					
16					

WAH TCH/PDL
PEDAL WAH

No.	Parameter	Display	Value	Table	Control
1	Pedal Control	0 – 127	0 – 127		●
2	Depth	0 – 127	0 – 127		
3	Cutoff Frequency Offset	0 – 127	0 – 127		
4	Resonance	1.0 – 12.0	10 – 120		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive (w/o 48step)	0 – 127	0 – 127		
12					
13					
14					
15					
16					

WAH TCH/PDL
PEDAL WH+DST, P.WH+DIST HD, P.WH+DIST HV, P.WH+DIST LT, PEDAL WH+OD, P.WH+OD HD, P.WH+OD HV, P.WH+OD LT

No.	Parameter	Display	Value	Table	Control
1	Pedal Control	0 – 127	0 – 127		●
2	Depth	0 – 127	0 – 127		
3	Cutoff Frequency Offset	0 – 127	0 – 127		
4	Resonance	1.0 – 12.0	10 – 120		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	Drive	0 – 127	0 – 127		
12	Dist EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
13	Dist EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
14	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
15	Output Level	0 – 127	0 – 127		
16					

DYNAMIC

DYNAMIC
COMP MED, COMP HEAVY, COMPRESSOR

No.	Parameter	Display	Value	Table	Control
1	Attack	1ms – 40ms	0 – 19	table#8	
2	Release	10ms – 680ms	0 – 15	table#9	
3	Threshold	-48dB – -6dB	79 – 121		
4	Ratio	1.0 – 20.0	0 – 7	table#10	
5	Output Level	0 – 127	0 – 127		
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

DYNAMIC
COMP MELODY, COMP BASS, MBAND COMP

No.	Parameter	Display	Value	Table	Control
1	Type	Normal, Low, Mid, High, Low/High, Low/Mid, Mid/High, Full Bit, Wild, Attacky, Low End, Hard, Basic	0 – 12		
2	Threshold Offset	-32 – +32	32 – 96		●
3	Low Gain Offset	-63 – 0 – +63	1 – 127		
4	Mid Gain Offset	-63 – 0 – +63	1 – 127		
5	High Gain Offset	-63 – 0 – +63	1 – 127		
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

DYNAMIC
NOISE GATE

No.	Parameter	Display	Value	Table	Control
1	Attack	1ms – 40ms	0 – 19	table#8	
2	Release	10ms – 680ms	0 – 15	table#9	
3	Threshold	-72dB – -30dB	55 – 97		
4	Output Level	0 – 127	0 – 127		
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

ROTARY SP

ROTARY SP
DUAL ROT BRT, DUAL ROT WRM, DUAL ROT SP1, DUAL ROT SP2

No.	Parameter	Display	Value	Table	Control
1	Rotor Speed Slow	0.00Hz – 2.65Hz	0 – 63	table#1	
2	Horn Speed Slow	0.00Hz – 2.65Hz	0 – 63	table#1	
3	Rotor Speed Fast	2.69Hz – 39.7Hz	64 – 127	table#1	
4	Horn Speed Fast	2.69Hz – 39.7Hz	64 – 127	table#1	
5	Slow-Fast Time of R	0 – 127	0 – 127		
6	Slow-Fast Time of H	0 – 127	0 – 127		
7	Drive Low	0 – 127	0 – 127		
8	Drive High	0 – 127	0 – 127		
9	Low/High Balance	L63>H – L=H – L<H63	1 – 127		
10					
11	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
12	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
13	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
14	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
15	Mic L-R Angle	0deg – 180deg	0 – 60		
16	Speed Control	Slow, Fast	0 – 1		●

ROTARY SP
ROTARY SP1, ROTARY SP6

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	
2	LFO Depth	0 – 127	0 – 127		
3					
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14					
15					
16					

ROTARY SP
ROTARY SP2, ROTARY SP3, ROTARY SP7

TREMOLO
TREMOLO2, GT TREMOLO1

SPATIAL
AUTO PAN1, AUTO PAN2, EP AUTOPAN

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	●
2	L/R Depth	0 – 127	0 – 127		
3	F/R Depth	0 – 127	0 – 127		
4	PAN Direction	L<->R, L->R, L<-R, Lturn, Rturn, L/R	0 – 5		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10					
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14					
15					
16					

ROTARY SP
ROTARY SP4

TREMOLO
TREMOLO1, TREMOLO3, EP TREMOLO, GT TREMOLO2

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	●
2	AM Depth	0 – 127	0 – 127		
3	PM Depth	0 – 127	0 – 127		
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10					
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14	LFO Phase Difference	-180deg – 0deg – +180deg (resolution=3deg.)	4 – 124		
15	Input Mode	mono, stereo	0 – 1		
16					

ROTARY SP
2WAY ROT SP

No.	Parameter	Display	Value	Table	Control
1	Rotor Speed	0.00Hz – 39.7Hz	0 – 127	table#1	●
2	Drive Low	0 – 127	0 – 127		
3	Drive High	0 – 127	0 – 127		
4	Low/High	L63>H – L=H – L<H63	1 – 127		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10					
11	Crossover Frequency	100Hz – 10.0kHz	14 – 54	table#3	
12	Mic L-R Angle	0deg – 180deg (resolution=3deg.)	0 – 60		
13					
14					
15					
16					

ROTARY SP
DST+ROT SP, OD+ROT SP

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	●
2	LFO Depth	0 – 127	0 – 127		
3					
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11					
12					
13					
14	Drive	0 – 127	0 – 127		
15	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
16	Output Level	0 – 127	0 – 127		

ROTARY SP
DST+2ROT SP, OD+2ROT SP

No.	Parameter	Display	Value	Table	Control
1	Rotor Speed	0.00Hz – 39.7Hz	0 – 127	table#1	●
2	Drive Low	0 – 127	0 – 127		
3	Drive High	0 – 127	0 – 127		
4	Low/High Balance	L63>H – L=H – L<H63	1 – 127		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10					
11	Crossover Frequency	100Hz – 10.0kHz	14 – 54	table#3	
12	Mic L-R Angle	0deg – 180deg	0 – 60		
13					
14	Drive	0 – 127	0 – 127		
15	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
16	Output Level	0 – 127	0 – 127		

ROTARY SP
AMP+ROT SP

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	●
2	LFO Depth	0 – 127	0 – 127		
3	AMP Type	Off, Stack, Combo, Tube	0 – 3		
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11					
12					
13					
14	Drive	0 – 127	0 – 127		
15	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
16	Output Level	0 – 127	0 – 127		

ROTARY SP
AMP+2ROT SP

No.	Parameter	Display	Value	Table	Control
1	Rotor Speed	0.00Hz – 39.7Hz	0 – 127	table#1	●
2	Drive Low	0 – 127	0 – 127		
3	Drive High	0 – 127	0 – 127		
4	Low/High Balance	L63>H – L=H – L<H63	1 – 127		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10					
11	Crossover Frequency	100Hz – 10.0kHz	14 – 54	table#3	
12	Mic L-R Angle	0deg – 180deg	0 – 60		
13	AMP Type	Off, Stack, Combo, Tube (AMPSIM only)	0 – 3		
14	Drive	0 – 127	0 – 127		
15	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3	
16	Output Level	0 – 127	0 – 127		

TREMOLO

TREMOLO
VIBE VIBRATE

No.	Parameter	Display	Value	Table	Control
1	Vibrate Speed	0.00Hz – 39.7Hz	0 – 127	table#1	
2	Vibrate Depth (AM)	0 – 127	0 – 127		
3	Vibrate Depth (PM)	0 – 127	0 – 127		
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14	LFO Phase Difference	-180deg – 0deg – +180deg (resolution=3deg.)	4 – 124		
15	Input Mode	mono, stereo	0 – 1		
16	Vibrate SW	Off, On	0 – 1		●

TREMOLO
T_TREMOLO

No.	Parameter	Display	Value	Table	Control
1	LFO Freq	16th – 4thx16	5 – 29	table#14	●
2	AM Depth	0 – 127	0 – 127		
3	PM Depth	0 – 127	0 – 127		
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10					
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14	LFO Phase Difference	-180deg – 0deg – +180deg (resolution=3deg.)	4 – 124		
15	Input Mode	mono, stereo	0 – 1		
16					

SPATIAL

SPATIAL
AUTO PAN3

No.	Parameter	Display	Value	Table	Control
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1	●
2	L/R Depth	0 – 127	0 – 127		
3	F/R Depth	0 – 127	0 – 127		
4	PAN Direction	L<->R, L->R, L<-R, Lturn, Rturn, L/R	0 – 5		
5	LFO Wave	0 – 28	0 – 28		
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10					
11	EQ Mid Frequency	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width	0.1 – 12.0	1 – 120		
14					
15	Input Mode	mono, stereo	0 – 1		
16					

SPATIAL
T_AUTO PAN1

No.	Parameter	Display	Value	Table	Control
1	LFO Freq	16th – 4thx16	5 – 29	table#14	●
2	L/R Depth	0 – 127	0 – 127		
3	F/R Depth	0 – 127	0 – 127		
4	PAN Direction	L<->R, L->R, L<-R, Lturn, Rturn, L/R	0 – 5		
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10					
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120		
14					
15					
16					

SPATIAL
T_AUTO PAN2

No.	Parameter	Display	Value	Table	Control
1	LFO Freq	16th – 4thx16	5 – 29	table#14	●
2	L/R Depth	0 – 127	0 – 127		
3	F/R Depth	0 – 127	0 – 127		
4	PAN Direction	L<->R, L->R, L<-R, Lturn, Rturn, L/R	0 – 5		
5	LFO Wave	0 – 28	0 – 28		
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10					
11	EQ Mid Frequency	100Hz – 10.0kHz	14 – 54	table#3	
12	EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
13	EQ Mid Width	0.1 – 12.0	1 – 120		
14					
15	Input Mode	mono, stereo	0 – 1		
16					

EQ/ENHANCER

EQ/ENHANCER
EQ DISCO, EQ TEL, 3BAND EQ, ST 3BAND EQ

MISC
LO-FI DRUM3, LO-FI DRUM4

No.	Parameter	Display	Value	Table	Control
1	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
2	EQ Mid Frequency	100Hz – 16.0kHz	14 – 58	table#3	
3	EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76		
4	EQ Mid Width	0.1 – 12.0	1 – 120		
5	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
6	EQ Low Frequency	50Hz – 2.0kHz	8 – 40	table#3	
7	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
8					
9					
10					
11					
12					
13					
14					
15	Input Mode	mono, stereo	0 – 1		
16					

EQ/ENHANCER
2BAND EQ

No.	Parameter	Display	Value	Table	Control
1	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
2	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
3	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
4	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

EQ/ENHANCER
HM ENHANCE1, HM ENHANCE2

No.	Parameter	Display	Value	Table	Control
1	HPF Cutoff	500Hz – 16.0kHz	28 – 58		
2	Drive	0 – 127	0 – 127		
3	Mix Level	0 – 127	0 – 127		
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

MISC

MISC
VCE CANCEL

No.	Parameter	Display	Value	Table	Control
1					
2					
3					
4					
5					
6					
7					
8					
9					
10					
11	Low Adjust	0 – 26	0 – 26		
12	High Adjust	0 – 26	0 – 26		
13					
14					
15					
16					

MISC
AMBIENCE

No.	Parameter	Display	Value	Table	Control
1	Delay Time	0.0ms – 50ms	0 – 127	table#2	
2	Output Phase	normal, inverse	0 – 1		
3					
4					
5					
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13					
14					
15					
16					

MISC
LOOP FX1

No.	Parameter	Display	Value	Table	Control
1	Vowel	a, i, u, e, o	0 – 4		●
2	Move speed	1 – 62	1 – 62		
3	Drive	0 – 127	0 – 127		
4	Output Level	0 – 127	0 – 127		
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

MISC
LOOP FX2, LO-FI DRUM1, LO-FI DRUM2

No.	Parameter	Display	Value	Table	Control
1	Sampling Freq Control	44.1kHz – 345Hz	0 – 127	table#13	
2	Word Length	1 – 127	1 – 127		
3	Output Gain	-6dB – +36dB	0 – 42		
4	LPF Cutoff	63Hz – 18kHz, Thru	10 – 60	table#3	
5	Filter Type	Thru, PowerBass, Radio, Tel, Clean, Low	0 – 5		
6	LPF Resonance	1.0 – 12.0	10 – 120		
7	Bit Assign	0 – 6	0 – 6		
8	Emphasis	Off, On	0 – 1		
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		●
11					
12					
13					
14					
15	Input Mode	mono, stereo	0 – 1		
16					

MISC
DYN FILTER

No.	Parameter	Display	Value	Table	Control
1	Filter Type	LPF (12dB), LPF (18dB), LPF (24dB), HPF, BPF, BEF	0 – 5		
2	Sensitivity	0 – 127	0 – 127		●
3	Dyna Level Offset	0 – 127	0 – 127		
4	Resonance	-16 – +111	0 – 127		
5	Attack Time	0.3ms – 227ms	0 – 127	table#16	
6	Release Time	2.6ms – 2171.4ms	0 – 127	table#17	
7	Release Curve	0 – 127	0 – 127		
8	Direction	Up, Down	0 – 1		
9	Dyna Threshold Level	0 – 127	0 – 127		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

MISC
DYN RINGMOD

No.	Parameter	Display	Value	Table	Control
1	Sensitivity	0 – 127	0 – 127		●
2	HPF Cutoff Frequency	Thru, 22Hz – 8.0kHz	0 – 52	table#3	
3	LPF Cutoff Frequency	1.0kHz – 18kHz, Thru	34 – 60	table#3	
4	Attack Time	0.3ms – 227ms	0 – 127	table#16	
5	Release Time	2.6ms – 2171.4ms	0 – 127	table#17	
6	Release Curve	0 – 127	0 – 127		
7	Direction	Up, Down	0 – 1		
8	Dyna Threshold Level	0 – 127	0 – 127		
9	Dyna Level Offset	0 – 127	0 – 127		
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

MISC
RING MOD

No.	Parameter	Display	Value	Table	Control
1	OSC Freqency Course	0.7Hz – 5kHz	0 – 127	table#18	●
2	OSC Freqency Fine	0 – 127	0 – 127		
3	LFO Wave	Triangle, Sine	0 – 1		
4	LFO Depth	0 – 127	0 – 127		
5	LFO Freq	0.00Hz – 39.7Hz	0 – 127	table#1	
6	HPF Cutoff Frequency	Thru, 22Hz – 8.0kHz	0 – 52	table#3	
7	LPF Cutoff Frequency	1.0kHz – 18kHz, Thru	34 – 60	table#3	
8					
9					
10	Dry/Wet	D63>W – D=W – D<W63	1 – 127		
11					
12					
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76		
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76		

MISC
ISOLATOR

No.	Parameter	Display	Value	Table	Control
1	On/Off SW	Off, On	0 – 1		●
2	Low Level	0 – 127	0 – 127		
3	Mid Level	0 – 127	0 – 127		
4	High Level	0 – 127	0 – 127		
5	Low Mute	Off, On	0 – 1		
6	Mid Mute	Off, On	0 – 1		
7	High Mute	Off, On	0 – 1		
8					
9					
10					
11					
12					
13					
14					
15					
16					

NO EFFECT

No.	Parameter	Display	Value	Table	Control
1					
2					
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

THRU

THRU

No.	Parameter	Display	Value	Table	Control
1					
2					
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

Effect Data Assign Table / Effektdaten-Zuordnungstabelle / Tableau d'assignation des données d'effets / Tabla de asignación de datos para efectos

table#1
LFO Frequency

Data	Value	Data	Value	Data	Value	Data	Value
0	0.00	32	1.35	64	2.69	96	8.41
1	0.04	33	1.39	65	2.78	97	8.75
2	0.08	34	1.43	66	2.86	98	9.08
3	0.13	35	1.47	67	2.94	99	9.42
4	0.17	36	1.51	68	3.03	100	9.76
5	0.21	37	1.56	69	3.11	101	10.1
6	0.25	38	1.60	70	3.20	102	10.8
7	0.29	39	1.64	71	3.28	103	11.4
8	0.34	40	1.68	72	3.37	104	12.1
9	0.38	41	1.72	73	3.45	105	12.8
10	0.42	42	1.77	74	3.53	106	13.5
11	0.46	43	1.81	75	3.62	107	14.1
12	0.51	44	1.85	76	3.70	108	14.8
13	0.55	45	1.89	77	3.87	109	15.5
14	0.59	46	1.94	78	4.04	110	16.2
15	0.63	47	1.98	79	4.21	111	16.8
16	0.67	48	2.02	80	4.37	112	17.5
17	0.72	49	2.06	81	4.54	113	18.2
18	0.76	50	2.10	82	4.71	114	19.5
19	0.80	51	2.15	83	4.88	115	20.9
20	0.84	52	2.19	84	5.05	116	22.2
21	0.88	53	2.23	85	5.22	117	23.6
22	0.93	54	2.27	86	5.38	118	24.9
23	0.97	55	2.31	87	5.55	119	26.2
24	1.01	56	2.36	88	5.72	120	27.6
25	1.05	57	2.40	89	6.06	121	28.9
26	1.09	58	2.44	90	6.39	122	30.3
27	1.14	59	2.48	91	6.73	123	31.6
28	1.18	60	2.52	92	7.07	124	33.0
29	1.22	61	2.57	93	7.40	125	34.3
30	1.26	62	2.61	94	7.74	126	37.0
31	1.30	63	2.65	95	8.08	127	39.7

table#2
Modulation Delay Offset

Data	Value	Data	Value	Data	Value	Data	Value
0	0.0	32	3.2	64	6.4	96	9.6
1	0.1	33	3.3	65	6.5	97	9.7
2	0.2	34	3.4	66	6.6	98	9.8
3	0.3	35	3.5	67	6.7	99	9.9
4	0.4	36	3.6	68	6.8	100	10.0
5	0.5	37	3.7	69	6.9	101	11.1
6	0.6	38	3.8	70	7.0	102	12.2
7	0.7	39	3.9	71	7.1	103	13.3
8	0.8	40	4.0	72	7.2	104	14.4
9	0.9	41	4.1	73	7.3	105	15.5
10	1.0	42	4.2	74	7.4	106	17.1
11	1.1	43	4.3	75	7.5	107	18.6
12	1.2	44	4.4	76	7.6	108	20.2
13	1.3	45	4.5	77	7.7	109	21.8
14	1.4	46	4.6	78	7.8	110	23.3
15	1.5	47	4.7	79	7.9	111	24.9
16	1.6	48	4.8	80	8.0	112	26.5
17	1.7	49	4.9	81	8.1	113	28.0
18	1.8	50	5.0	82	8.2	114	29.6
19	1.9	51	5.1	83	8.3	115	31.2
20	2.0	52	5.2	84	8.4	116	32.8
21	2.1	53	5.3	85	8.5	117	34.3
22	2.2	54	5.4	86	8.6	118	35.9
23	2.3	55	5.5	87	8.7	119	37.5
24	2.4	56	5.6	88	8.8	120	39.0
25	2.5	57	5.7	89	8.9	121	40.6
26	2.6	58	5.8	90	9.0	122	42.2
27	2.7	59	5.9	91	9.1	123	43.7
28	2.8	60	6.0	92	9.2	124	45.3
29	2.9	61	6.1	93	9.3	125	46.9
30	3.0	62	6.2	94	9.4	126	48.4
31	3.1	63	6.3	95	9.5	127	50.0

table#3
EQ Frequency

Data	Value	Data	Value
0	THRU(20)	32	800
1	22	33	900
2	25	34	1.0k
3	28	35	1.1k
4	32	36	1.2k
5	36	37	1.4k
6	40	38	1.6k
7	45	39	1.8k
8	50	40	2.0k
9	56	41	2.2k
10	63	42	2.5k
11	70	43	2.8k
12	80	44	3.2k
13	90	45	3.6k
14	100	46	4.0k
15	110	47	4.5k
16	125	48	5.0k
17	140	49	5.6k
18	160	50	6.3k
19	180	51	7.0k
20	200	52	8.0k
21	225	53	9.0k
22	250	54	10.0k
23	280	55	11.0k
24	315	56	12.0k
25	355	57	14.0k
26	400	58	16.0k
27	450	59	18.0k
28	500	60	THRU(20.0k)
29	560		
30	630		
31	700		

table#4
Reverb time

Data	Value	Data	Value	Data	Value
0	0.3	32	3.5	64	17.0
1	0.4	33	3.6	65	18.0
2	0.5	34	3.7	66	19.0
3	0.6	35	3.8	67	20.0
4	0.7	36	3.9	68	25.0
5	0.8	37	4.0	69	30.0
6	0.9	38	4.1		
7	1.0	39	4.2		
8	1.1	40	4.3		
9	1.2	41	4.4		
10	1.3	42	4.5		
11	1.4	43	4.6		
12	1.5	44	4.7		
13	1.6	45	4.8		
14	1.7	46	4.9		
15	1.8	47	5.0		
16	1.9	48	5.5		
17	2.0	49	6.0		
18	2.1	50	6.5		
19	2.2	51	7.0		
20	2.3	52	7.5		
21	2.4	53	8.0		
22	2.5	54	8.5		
23	2.6	55	9.0		
24	2.7	56	9.5		
25	2.8	57	10.0		
26	2.9	58	11.0		
27	3.0	59	12.0		
28	3.1	60	13.0		
29	3.2	61	14.0		
30	3.3	62	15.0		
31	3.4	63	16.0		

table#5
Delay Time (0.1 – 200.0 [ms])

Data	Value	Data	Value	Data	Value	Data	Value
0	0.1	32	50.5	64	100.8	96	151.2
1	1.7	33	52.0	65	102.4	97	152.8
2	3.2	34	53.6	66	104.0	98	154.4
3	4.8	35	55.2	67	105.6	99	155.9
4	6.4	36	56.8	68	107.1	100	157.5
5	8.0	37	58.3	69	108.7	101	159.1
6	9.5	38	59.9	70	110.3	102	160.6
7	11.1	39	61.5	71	111.9	103	162.2
8	12.7	40	63.1	72	113.4	104	163.8
9	14.3	41	64.6	73	115.0	105	165.4
10	15.8	42	66.2	74	116.6	106	166.9
11	17.4	43	67.8	75	118.2	107	168.5
12	19.0	44	69.4	76	119.7	108	170.1
13	20.6	45	70.9	77	121.3	109	171.7
14	22.1	46	72.5	78	122.9	110	173.2
15	23.7	47	74.1	79	124.4	111	174.8
16	25.3	48	75.7	80	126.0	112	176.4
17	26.9	49	77.2	81	127.6	113	178.0
18	28.4	50	78.8	82	129.2	114	179.5
19	30.0	51	80.4	83	130.7	115	181.1
20	31.6	52	81.9	84	132.3	116	182.7
21	33.2	53	83.5	85	133.9	117	184.3
22	34.7	54	85.1	86	135.5	118	185.8
23	36.3	55	86.7	87	137.0	119	187.4
24	37.9	56	88.2	88	138.6	120	189.0
25	39.5	57	89.8	89	140.2	121	190.6
26	41.0	58	91.4	90	141.8	122	192.1
27	42.6	59	93.0	91	143.3	123	193.7
28	44.2	60	94.5	92	144.9	124	195.3
29	45.7	61	96.1	93	146.5	125	196.9
30	47.3	62	97.7	94	148.1	126	198.4
31	48.9	63	99.3	95	149.6	127	200.0

table#6
Room Size

Data	Value	Data	Value	Data	Value	Data	Value
0	0.1	32	5.1	64	10.1	96	15.1
1	0.3	33	5.3	65	10.3	97	15.3
2	0.4	34	5.4	66	10.4	98	15.5
3	0.6	35	5.6	67	10.6	99	15.6
4	0.7	36	5.7	68	10.8	100	15.8
5	0.9	37	5.9	69	10.9	101	15.9
6	1.0	38	6.1	70	11.1	102	16.1
7	1.2	39	6.2	71	11.2	103	16.2
8	1.4	40	6.4	72	11.4	104	16.4
9	1.5	41	6.5	73	11.5	105	16.6
10	1.7	42	6.7	74	11.7	106	16.7
11	1.8	43	6.8	75	11.9	107	16.9
12	2.0	44	7.0	76	12.0	108	17.0
13	2.1	45	7.2	77	12.2	109	17.2
14	2.3	46	7.3	78	12.3	110	17.3
15	2.5	47	7.5	79	12.5	111	17.5
16	2.6	48	7.6	80	12.6	112	17.6
17	2.8	49	7.8	81	12.8	113	17.8
18	2.9	50	7.9	82	12.9	114	18.0
19	3.1	51	8.1	83	13.1	115	18.1
20	3.2	52	8.2	84	13.3	116	18.3
21	3.4	53	8.4	85	13.4	117	18.4
22	3.5	54	8.6	86	13.6	118	18.6
23	3.7	55	8.7	87	13.7	119	18.7
24	3.9	56	8.9	88	13.9	120	18.9
25	4.0	57	9.0	89	14.0	121	19.1
26	4.2	58	9.2	90	14.2	122	19.2
27	4.3	59	9.3	91	14.4	123	19.4
28	4.5	60	9.5	92	14.5	124	19.5
29	4.6	61	9.7	93	14.7	125	19.7
30	4.8	62	9.8	94	14.8	126	19.8
31	5.0	63	10.0	95	15.0	127	20.0

table#7
Delay Time (0.1 – 400.0 [ms])

Data	Value	Data	Value	Data	Value	Data	Value
0	0.1	32	100.9	64	201.6	96	302.4
1	3.2	33	104.0	65	204.8	97	305.5
2	6.4	34	107.2	66	207.9	98	308.7
3	9.5	35	110.3	67	211.1	99	311.8
4	12.7	36	113.5	68	214.2	100	315.0
5	15.8	37	116.6	69	217.4	101	318.1
6	19.0	38	119.8	70	220.5	102	321.3
7	22.1	39	122.9	71	223.7	103	324.4
8	25.3	40	126.1	72	226.8	104	327.6
9	28.4	41	129.2	73	230.0	105	330.7
10	31.6	42	132.4	74	233.1	106	333.9
11	34.7	43	135.5	75	236.3	107	337.0
12	37.9	44	138.6	76	239.4	108	340.2
13	41.0	45	141.8	77	242.6	109	343.3
14	44.2	46	144.9	78	245.7	110	346.5
15	47.3	47	148.1	79	248.9	111	349.6
16	50.5	48	151.2	80	252.0	112	352.8
17	53.6	49	154.4	81	255.2	113	355.9
18	56.8	50	157.5	82	258.3	114	359.1
19	59.9	51	160.7	83	261.5	115	362.2
20	63.1	52	163.8	84	264.6	116	365.4
21	66.2	53	167.0	85	267.7	117	368.5
22	69.4	54	170.1	86	270.9	118	371.7
23	72.5	55	173.3	87	274.0	119	374.8
24	75.7	56	176.4	88	277.2	120	378.0
25	78.8	57	179.6	89	280.3	121	381.1
26	82.0	58	182.7	90	283.5	122	384.3
27	85.1	59	185.9	91	286.6	123	387.4
28	88.3	60	189.0	92	289.8	124	390.6
29	91.4	61	192.2	93	292.9	125	393.7
30	94.6	62	195.3	94	296.1	126	396.9
31	97.7	63	198.5	95	299.2	127	400.0

table#8
Compressor Attack Time

Data	Value
0	1
1	2
2	3
3	4
4	5
5	6
6	7
7	8
8	9
9	10
10	12
11	14
12	16
13	18
14	20
15	23
16	26
17	30
18	35
19	40

table#9
Compressor Release Time

Data	Value
0	10
1	15
2	25
3	35
4	45
5	55
6	65
7	75
8	85
9	100
10	115
11	140
12	170
13	230
14	340
15	680

table#10
Compressor Ratio

Data	Value
0	1.0
1	1.5
2	2.0
3	3.0
4	5.0
5	7.0
6	10.0
7	20.0

table#11
Reverb Width; Depth; Height

Data	Value	Data	Value	Data	Value	Data	Value
0	0.5	32	8.8	64	17.6	96	27.5
1	0.8	33	9.1	65	17.9	97	27.8
2	1.0	34	9.4	66	18.2	98	28.1
3	1.3	35	9.6	67	18.5	99	28.5
4	1.5	36	9.9	68	18.8	100	28.8
5	1.8	37	10.2	69	19.1	101	29.2
6	2.0	38	10.4	70	19.4	102	29.5
7	2.3	39	10.7	71	19.7	103	29.9
8	2.6	40	11.0	72	20.0	104	30.2
9	2.8	41	11.2	73	20.2		
10	3.1	42	11.5	74	20.5		
11	3.3	43	11.8	75	20.8		
12	3.6	44	12.1	76	21.1		
13	3.9	45	12.3	77	21.4		
14	4.1	46	12.6	78	21.7		
15	4.4	47	12.9	79	22.0		
16	4.6	48	13.1	80	22.4		
17	4.9	49	13.4	81	22.7		
18	5.2	50	13.7	82	23.0		
19	5.4	51	14.0	83	23.3		
20	5.7	52	14.2	84	23.6		
21	5.9	53	14.5	85	23.9		
22	6.2	54	14.8	86	24.2		
23	6.5	55	15.1	87	24.5		
24	6.7	56	15.4	88	24.9		
25	7.0	57	15.6	89	25.2		
26	7.2	58	15.9	90	25.5		
27	7.5	59	16.2	91	25.8		
28	7.8	60	16.5	92	26.1		
29	8.0	61	16.8	93	26.5		
30	8.3	62	17.1	94	26.8		
31	8.6	63	17.3	95	27.1		

table#12
Wah Release Time

Data	Value
52	10
53	15
54	25
55	35
56	45
57	55
58	65
59	75
60	85
61	100
62	115
63	140
64	170
65	230
66	340
67	680

table#13
LO-FI Sampling Frequency Control

Data	Value	Data	Value	Data	Value	Data	Value
0	44.1k	32	1.34k	64	678.0	96	455.0
1	22.1k	33	1.30k	65	668.0	97	450.0
2	14.7k	34	1.26k	66	658.0	98	445.0
3	11.0k	35	1.23k	67	649.0	99	441.0
4	8.8k	36	1.19k	68	639.0	100	437.0
5	7.4k	37	1.16k	69	630.0	101	432.0
6	6.3k	38	1.13k	70	621.0	102	428.0
7	5.5k	39	1.10k	71	613.0	103	424.0
8	4.9k	40	1.08k	72	604.0	104	420.0
9	4.4k	41	1.05k	73	596.0	105	416.0
10	4.0k	42	1.03k	74	588.0	106	412.0
11	3.7k	43	1.00k	75	580.0	107	408.0
12	3.4k	44	980.0	76	573.0	108	405.0
13	3.2k	45	959.0	77	565.0	109	401.0
14	2.9k	46	938.0	78	558.0	110	397.0
15	2.8k	47	919.0	79	551.0	111	394.0
16	2.6k	48	900.0	80	544.0	112	390.0
17	2.5k	49	882.0	81	538.0	113	387.0
18	2.3k	50	865.0	82	531.0	114	383.0
19	2.2k	51	848.0	83	525.0	115	380.0
20	2.1k	52	832.0	84	519.0	116	377.0
21	2.0k	53	817.0	85	513.0	117	374.0
22	1.92k	54	802.0	86	507.0	118	371.0
23	1.84k	55	788.0	87	501.0	119	368.0
24	1.76k	56	774.0	88	496.0	120	364.0
25	1.70k	57	760.0	89	490.0	121	361.0
26	1.63k	58	747.0	90	485.0	122	359.0
27	1.58k	59	735.0	91	479.0	123	356.0
28	1.52k	60	723.0	92	474.0	124	353.0
29	1.47k	61	711.0	93	469.0	125	350.0
30	1.42k	62	700.0	94	464.0	126	347.0
31	1.38k	63	689.0	95	459.0	127	345.0

table#14
Tempo

Data	Value	Data	Value	Data	Value
0	64th/3	32	4thX19	64	4thX51
1	64th.	33	4thX20	65	4thX52
2	32th	34	4thX21	66	4thX53
3	32th/3	35	4thX22	67	4thX54
4	32th.	36	4thX23	68	4thX55
5	16th	37	4thX24	69	4thX56
6	16th/3	38	4thX25	70	4thX57
7	16th.	39	4thX26	71	4thX58
8	8th	40	4thX27	72	4thX59
9	8th/3	41	4thX28	73	4thX60
10	8th.	42	4thX29	74	4thX61
11	4th	43	4thX30	75	4thX62
12	4th/3	44	4thX31	76	4thX63
13	4th.	45	4thX32	77	4thX64
14	2nd	46	4thX33		
15	2nd/3	47	4thX34		
16	2nd.	48	4thX35		
17	4thX4	49	4thX36		
18	4thX5	50	4thX37		
19	4thX6	51	4thX38		
20	4thX7	52	4thX39		
21	4thX8	53	4thX40		
22	4thX9	54	4thX41		
23	4thX10	55	4thX42		
24	4thX11	56	4thX43		
25	4thX12	57	4thX44		
26	4thX13	58	4thX45		
27	4thX14	59	4thX46		
28	4thX15	60	4thX47		
29	4thX16	61	4thX48		
30	4thX17	62	4thX49		
31	4thX18	63	4thX50		

table#15
LFO Depth

Data	Value (%)	Data	Value (%)	Data	Value (%)	Data	Value (%)
0	0.00	32	25.20	64	50.39	96	75.59
1	0.78	33	25.98	65	51.17	97	76.37
2	1.56	34	26.76	66	51.95	98	77.15
3	2.34	35	27.54	67	52.73	99	77.93
4	3.13	36	28.32	68	53.52	100	78.71
5	3.91	37	29.10	69	54.30	101	79.49
6	4.69	38	29.88	70	55.08	102	80.27
7	5.47	39	30.66	71	55.86	103	81.05
8	6.25	40	31.45	72	56.64	104	81.84
9	7.03	41	32.23	73	57.42	105	82.62
10	7.81	42	33.01	74	58.20	106	83.40
11	8.59	43	33.79	75	58.98	107	84.18
12	9.38	44	34.57	76	59.77	108	84.96
13	10.16	45	35.35	77	60.55	109	85.74
14	10.94	46	36.13	78	61.33	110	86.52
15	11.72	47	36.91	79	62.11	111	87.30
16	12.50	48	37.70	80	62.89	112	88.09
17	13.28	49	38.48	81	63.67	113	88.87
18	14.06	50	39.26	82	64.45	114	89.65
19	14.84	51	40.04	83	65.23	115	90.43
20	15.63	52	40.82	84	66.02	116	91.21
21	16.41	53	41.60	85	66.80	117	91.99
22	17.19	54	42.38	86	67.58	118	92.77
23	17.97	55	43.16	87	68.36	119	93.55
24	18.75	56	43.95	88	69.14	120	94.34
25	19.53	57	44.73	89	69.92	121	95.12
26	20.31	58	45.51	90	70.70	122	95.90
27	21.09	59	46.29	91	71.48	123	96.68
28	21.88	60	47.07	92	72.27	124	97.46
29	22.66	61	47.85	93	73.05	125	98.24
30	23.44	62	48.63	94	73.83	126	99.02
31	24.22	63	49.41	95	74.61	127	100.00

table#16
Dyna Attack Time (ms)

Data	Value	Data	Value	Data	Value	Data	Value
0	0.3	32	54.0	64	112	96	170
1	0.9	33	56.0	65	114	97	172
2	1.8	34	58.0	66	116	98	174
3	2.7	35	60.0	67	118	99	176
4	3.6	36	61.0	68	120	100	178
5	5.4	37	63.0	69	121	101	180
6	7.2	38	65.0	70	123	102	181
7	9.0	39	67.0	71	125	103	183
8	10.0	40	69.0	72	127	104	185
9	12.0	41	70.0	73	129	105	187
10	14.0	42	72.0	74	130	106	189
11	16.0	43	74.0	75	132	107	190
12	18.0	44	76.0	76	134	108	192
13	20.0	45	78.0	77	136	109	194
14	21.0	46	80.0	78	138	110	196
15	23.0	47	81.0	79	140	111	198
16	25.0	48	83.0	80	141	112	200
17	27.0	49	85.0	81	143	113	201
18	29.0	50	87.0	82	145	114	203
19	30.0	51	89.0	83	147	115	205
20	32.0	52	90.0	84	149	116	207
21	34.0	53	92.0	85	150	117	209
22	36.0	54	94.0	86	152	118	210
23	38.0	55	96.0	87	154	119	212
24	40.0	56	98.0	88	156	120	214
25	41.0	57	100.0	89	158	121	216
26	43.0	58	101.0	90	160	122	218
27	45.0	59	103.0	91	161	123	220
28	47.0	60	105.0	92	163	124	221
29	49.0	61	107.0	93	165	125	223
30	50.0	62	109.0	94	167	126	225
31	52.0	63	110.0	95	169	127	227

table#17
Dyna Release Time (ms)

Data	Value	Data	Value	Data	Value	Data	Value
0	2.6	32	86.8	64	369.1	96	1064.0
1	3.0	33	91.2	65	390.8	97	1085.7
2	3.4	34	95.5	66	412.5	98	1107.4
3	3.9	35	99.8	67	434.2	99	1129.1
4	4.3	36	104.2	68	456.0	100	1150.8
5	4.7	37	108.5	69	477.7	101	1172.5
6	5.2	38	112.9	70	499.4	102	1194.3
7	5.6	39	117.2	71	521.1	103	1216.0
8	6.0	40	121.6	72	542.8	104	1237.7
9	6.5	41	125.9	73	564.5	105	1259.4
10	6.9	42	130.2	74	586.2	106	1281.1
11	7.3	43	134.6	75	608.0	107	1302.8
12	7.8	44	138.9	76	629.7	108	1346.3
13	8.2	45	143.3	77	651.4	109	1389.7
14	8.6	46	147.6	78	673.1	110	1433.1
15	13.0	47	152.0	79	694.8	111	1476.6
16	17.3	48	156.3	80	716.5	112	1520.0
17	21.7	49	160.6	81	738.3	113	1563.4
18	26.0	50	165.0	82	760.0	114	1606.8
19	30.4	51	169.3	83	781.7	115	1650.3
20	34.7	52	173.7	84	803.4	116	1693.7
21	39.0	53	178.0	85	825.1	117	1737.1
22	43.4	54	182.4	86	846.8	118	1780.6
23	47.7	55	186.7	87	868.5	119	1824.0
24	52.1	56	195.4	88	890.3	120	1867.4
25	56.4	57	217.1	89	912.0	121	1910.8
26	60.8	58	238.8	90	933.7	122	1954.3
27	65.1	59	260.5	91	955.4	123	1997.7
28	69.4	60	282.2	92	977.1	124	2041.1
29	73.8	61	304.0	93	998.8	125	2084.6
30	78.1	62	325.7	94	1020.5	126	2128.0
31	82.5	63	347.4	95	1042.3	127	2171.4

table#18
Ring Mod OSC Freq Course (Hz)

Data	Value	Data	Value	Data	Value	Data	Value
0	0.5	32	25.6	64	151	96	895
1	1.5	33	27.1	65	160	97	946
2	2.0	34	28.6	66	169	98	1.00k
3	2.5	35	30.3	67	179	99	1.05k
4	3.5	36	32.0	68	189	100	1.11k
5	4.0	37	33.8	69	200	101	1.18k
6	4.5	38	35.8	70	211	102	1.24k
7	5.5	39	37.8	71	223	103	1.32k
8	6.0	40	40.0	72	236	104	1.39k
9	6.5	41	42.2	73	249	105	1.47k
10	7.5	42	44.7	74	264	106	1.55k
11	8.0	43	47.2	75	279	107	1.64k
12	8.4	44	49.9	76	295	108	1.74k
13	8.9	45	52.7	77	311	109	1.84k
14	9.4	46	55.8	78	329	110	1.94k
15	9.9	47	58.9	79	348	111	2.05k
16	10.5	48	62.3	80	368	112	2.17k
17	11.1	49	65.9	81	389	113	2.29k
18	11.7	50	69.6	82	411	114	2.43k
19	12.4	51	73.6	83	435	115	2.56k
20	13.1	52	77.8	84	459	116	2.71k
21	13.9	53	82.3	85	486	117	2.87k
22	14.7	54	87.0	86	513	118	3.03k
23	15.5	55	91.9	87	543	119	3.20k
24	16.4	56	97.2	88	574	120	3.39k
25	17.3	57	102	89	607	121	3.58k
26	18.3	58	108	90	641	122	3.79k
27	19.4	59	114	91	678	123	4.00k
28	20.5	60	121	92	717	124	4.23k
29	21.7	61	128	93	757	125	4.47k
30	22.9	62	135	94	801	126	4.73k
31	24.2	63	143	95	846	127	5.00k

table#19
V-Flanger Delay Offset

Data	Value	Data	Value
0	0.1	70	6.4
1	0.1	71	6.7
2	0.1	72	7.0
3	0.2	73	7.4
4	0.2	74	7.7
5	0.2	75	8.1
6	0.2	76	8.5
7	0.2	77	9.0
8	0.3	78	9.4
9	0.3	79	9.9
10	0.3	80	10.3
11	0.3	81	10.7
12	0.4	82	11.2
13	0.4	83	11.6
14	0.4	84	12.1
15	0.4	85	12.5
16	0.4	86	12.9
17	0.5	87	13.4
18	0.5	88	13.8
19	0.5	89	14.2
20	0.5	90	14.7
21	0.6	91	15.1
22	0.6	92	15.6
23	0.6	93	16.0
24	0.7	94	16.4
25	0.7	95	16.9
26	0.7	96	17.3
27	0.8	97	17.8
28	0.8	98	18.2
29	0.8	99	18.6
30	0.9	100	19.1
31	0.9	101	19.5
32	1.0	102	20.0
33	1.0	103	20.4
34	1.1	104	20.8
35	1.1	105	21.3
36	1.2	106	21.7
37	1.2	107	22.2
38	1.3	108	22.6
39	1.4	109	23.0
40	1.4	110	23.5
41	1.5	111	23.9
42	1.6	112	24.4
43	1.7	113	24.8
44	1.8	114	25.2
45	1.8	115	25.7
46	1.9	116	26.1
47	2.0	117	26.5
48	2.1	118	27.0
49	2.3	119	27.4
50	2.4	120	27.9
51	2.5	121	28.3
52	2.6	122	28.7
53	2.7	123	29.2
54	2.9	124	29.6
55	3.0	125	30.1
56	3.2	126	30.5
57	3.3	127	30.9
58	3.5	128	31.4
59	3.7	129	31.8
60	3.9	130	32.3
61	4.1	131	32.7
62	4.3	132	33.1
63	4.5	133	33.6
64	4.7	134	34.0
65	5.0	135	34.5
66	5.2	136	34.9
67	5.5	137	35.3
68	5.8	138	35.8
69	6.0	139	36.2

table#20
V-Flanger Modulation Phase

Data	Value
0	-180
1	-158
2	-135
3	-113
4	-90
5	-68
6	-45
7	-23
8	0
9	23
10	45
11	68
12	90
13	113
14	135
15	158
16	180

table#21
VCM Flanger Speed

Data	Value	Data	Value	Data	Value	Data	Value	Data	Value
0	0.040	52	0.189	104	0.589	156	1.808	208	5.552
1	0.042	53	0.195	105	0.599	157	1.851	209	5.720
2	0.045	54	0.197	106	0.615	158	1.893	210	5.804
3	0.047	55	0.202	107	0.626	159	1.935	211	5.972
4	0.050	56	0.208	108	0.636	160	1.977	212	6.056
5	0.053	57	0.210	109	0.652	161	2.019	213	6.224
6	0.055	58	0.216	110	0.668	162	2.061	214	6.309
7	0.058	59	0.221	111	0.683	163	2.103	215	6.477
8	0.060	60	0.226	112	0.704	164	2.145	216	6.645
9	0.063	61	0.231	113	0.715	165	2.187	217	6.813
10	0.066	62	0.237	114	0.725	166	2.250	218	6.897
11	0.068	63	0.242	115	0.747	167	2.292	219	7.066
12	0.071	64	0.247	116	0.757	168	2.334	220	7.234
13	0.074	65	0.252	117	0.778	169	2.397	221	7.402
14	0.076	66	0.258	118	0.789	170	2.460	222	7.570
15	0.079	67	0.263	119	0.810	171	2.502	223	7.738
16	0.081	68	0.268	120	0.831	172	2.565	224	7.907
17	0.084	69	0.273	121	0.852	173	2.608	225	8.075
18	0.087	70	0.281	122	0.862	174	2.671	226	8.243
19	0.089	71	0.287	123	0.883	175	2.733	227	8.411
20	0.092	72	0.292	124	0.904	176	2.776	228	8.580
21	0.095	73	0.300	125	0.925	177	2.860	229	8.748
22	0.097	74	0.308	126	0.946	178	2.902	230	9.000
23	0.100	75	0.313	127	0.967	179	2.986	231	9.168
24	0.102	76	0.321	128	0.988	180	3.028	232	9.337
25	0.105	77	0.326	129	1.009	181	3.112	233	9.589
26	0.108	78	0.334	130	1.030	182	3.154	234	9.757
27	0.110	79	0.342	131	1.051	183	3.238	235	10.00
28	0.113	80	0.347	132	1.072	184	3.323		
29	0.116	81	0.357	133	1.093	185	3.365		
30	0.118	82	0.363	134	1.125	186	3.449		
31	0.121	83	0.373	135	1.146	187	3.533		
32	0.124	84	0.379	136	1.167	188	3.617		
33	0.126	85	0.389	137	1.199	189	3.701		
34	0.129	86	0.400	138	1.220	190	3.785		
35	0.131	87	0.405	139	1.251	191	3.869		
36	0.134	88	0.415	140	1.272	192	3.953		
37	0.137	89	0.426	141	1.304	193	4.037		
38	0.139	90	0.431	142	1.335	194	4.122		
39	0.145	91	0.442	143	1.367	195	4.206		
40	0.147	92	0.452	144	1.409	196	4.290		
41	0.150	93	0.463	145	1.430	197	4.374		
42	0.152	94	0.473	146	1.451	198	4.500		
43	0.158	95	0.484	147	1.493	199	4.584		
44	0.160	96	0.494	148	1.514	200	4.668		
45	0.163	97	0.505	149	1.556	201	4.752		
46	0.168	98	0.515	150	1.577	202	4.879		
47	0.171	99	0.526	151	1.619	203	5.005		
48	0.173	100	0.536	152	1.661	204	5.131		
49	0.179	101	0.547	153	1.682	205	5.215		
50	0.181	102	0.563	154	1.724	206	5.341		
51	0.187	103	0.573	155	1.766	207	5.467		

table#22
VCM Phaser Speed

Data	Value	Data	Value	Data	Value	Data	Value	Data	Value
0	0.100	52	0.271	104	0.694	156	1.767	208	4.500
1	0.103	53	0.276	105	0.704	157	1.808	209	4.584
2	0.105	54	0.281	106	0.715	158	1.829	210	4.668
3	0.108	55	0.287	107	0.725	159	1.872	211	4.752
4	0.110	56	0.289	108	0.747	160	1.893	212	4.837
5	0.113	57	0.294	109	0.758	161	1.935	213	4.921
6	0.116	58	0.300	110	0.768	162	1.977	214	5.047
7	0.118	59	0.308	111	0.789	163	2.000	215	5.131
8	0.121	60	0.310	112	0.799	164	2.040	216	5.215
9	0.124	61	0.318	113	0.810	165	2.082	217	5.299
10	0.126	62	0.323	114	0.831	166	2.124	218	5.383
11	0.129	63	0.329	115	0.841	167	2.145	219	5.551
12	0.131	64	0.334	116	0.862	168	2.187	220	5.636
13	0.134	65	0.342	117	0.873	169	2.229	221	5.720
14	0.137	66	0.347	118	0.894	170	2.271	222	5.804
15	0.139	67	0.357	119	0.904	171	2.313	223	5.888
16	0.142	68	0.363	120	0.925	172	2.355	224	6.056
17	0.145	69	0.368	121	0.936	173	2.397	225	6.140
18	0.147	70	0.373	122	0.957	174	2.439	226	6.224
19	0.150	71	0.379	123	0.967	175	2.503	227	6.393
20	0.152	72	0.389	124	0.988	176	2.544	228	6.477
21	0.155	73	0.394	125	1.000	177	2.587	229	6.561
22	0.158	74	0.400	126	1.030	178	2.629	230	6.729
23	0.160	75	0.410	127	1.051	179	2.671	231	6.813
24	0.163	76	0.415	128	1.062	180	2.734	232	6.981
25	0.166	77	0.426	129	1.083	181	2.776	233	7.066
26	0.168	78	0.431	130	1.104	182	2.860	234	7.234
27	0.171	79	0.442	131	1.125	183	2.902	235	7.318
28	0.173	80	0.447	132	1.146	184	2.944	236	7.486
29	0.179	81	0.457	133	1.167	185	2.986	237	7.654
30	0.181	82	0.463	134	1.188	186	3.028	238	7.774
31	0.184	83	0.473	135	1.209	187	3.070	239	7.907
32	0.187	84	0.478	136	1.230	188	3.154	240	8.075
33	0.192	85	0.489	137	1.251	189	3.196	241	8.159
34	0.195	86	0.499	138	1.272	190	3.280	242	8.327
35	0.200	87	0.510	139	1.304	191	3.323	243	8.496
36	0.202	88	0.515	140	1.325	192	3.365	244	8.664
37	0.205	89	0.526	141	1.346	193	3.449	245	8.832
38	0.210	90	0.536	142	1.367	194	3.491	246	9.000
39	0.213	91	0.547	143	1.410	195	3.575	247	9.168
40	0.218	92	0.557	144	1.430	196	3.659	248	9.337
41	0.221	93	0.568	145	1.451	197	3.701	249	9.505
42	0.226	94	0.578	146	1.472	198	3.785	250	9.673
43	0.229	95	0.589	147	1.493	199	3.827	251	9.841
44	0.234	96	0.599	148	1.535	200	3.911	252	10.00
45	0.237	97	0.610	149	1.556	201	3.995		
46	0.242	98	0.620	150	1.577	202	4.080		
47	0.247	99	0.631	151	1.619	203	4.122		
48	0.250	100	0.641	152	1.640	204	4.206		
49	0.255	101	0.652	153	1.682	205	4.290		
50	0.260	102	0.668	154	1.703	206	4.374		
51	0.265	103	0.683	155	1.724	207	4.458		

table#23
VCM Wah Speed

Data	Value	Data	Value	Data	Value	Data	Value	Data	Value
0	0.100	52	0.302	104	0.883	156	2.608	208	7.654
1	0.103	53	0.308	105	0.904	157	2.671	209	7.823
2	0.105	54	0.315	106	0.935	158	2.734	210	7.991
3	0.108	55	0.321	107	0.946	159	2.776	211	8.159
4	0.110	56	0.326	108	0.967	160	2.818	212	8.327
5	0.113	57	0.334	109	0.988	161	2.902	213	8.496
6	0.116	58	0.342	110	0.999	162	2.944	214	8.748
7	0.118	59	0.347	111	1.020	163	3.028	215	8.916
8	0.121	60	0.357	112	1.051	164	3.070	216	9.084
9	0.124	61	0.363	113	1.072	165	3.154	217	9.253
10	0.126	62	0.368	114	1.093	166	3.196	218	9.505
11	0.129	63	0.379	115	1.115	167	3.280	219	9.673
12	0.131	64	0.384	116	1.136	168	3.336	220	9.841
13	0.134	65	0.394	117	1.157	169	3.407	221	10.09
14	0.137	66	0.405	118	1.188	170	3.491	222	10.26
15	0.139	67	0.410	119	1.209	171	3.575	223	10.51
16	0.142	68	0.421	120	1.241	172	3.659	224	10.77
17	0.145	69	0.426	121	1.262	173	3.701	225	10.93
18	0.147	70	0.436	122	1.293	174	3.785	226	11.10
19	0.152	71	0.447	123	1.314	175	3.869	227	11.44
20	0.155	72	0.457	124	1.346	176	3.953	228	11.61
21	0.157	73	0.463	125	1.367	177	4.037	229	11.94
22	0.163	74	0.473	126	1.409	178	4.122	230	12.11
23	0.166	75	0.484	127	1.430	179	4.206	231	12.45
24	0.168	76	0.494	128	1.451	180	4.290	232	12.62
25	0.173	77	0.505	129	1.493	181	4.374	233	12.95
26	0.176	78	0.515	130	1.514	182	4.500	234	13.29
27	0.179	79	0.526	131	1.556	183	4.584	235	13.46
28	0.184	80	0.536	132	1.598	184	4.668	236	13.79
29	0.187	81	0.547	133	1.619	185	4.795	237	13.96
30	0.189	82	0.563	134	1.661	186	4.879	238	14.30
31	0.195	83	0.573	135	1.703	187	4.963	239	14.64
32	0.200	84	0.584	136	1.724	188	5.090	240	14.97
33	0.202	85	0.599	137	1.766	189	5.173	241	15.31
34	0.208	86	0.610	138	1.808	190	5.299	242	15.65
35	0.210	87	0.620	139	1.851	191	5.383	243	15.98
36	0.216	88	0.636	140	1.872	192	5.552	244	16.32
37	0.221	89	0.652	141	1.914	193	5.636	245	16.65
38	0.226	90	0.662	142	1.956	194	5.720	246	16.99
39	0.231	91	0.673	143	1.999	195	5.888	247	17.33
40	0.234	92	0.694	144	2.040	196	5.972	248	17.66
41	0.239	93	0.704	145	2.082	197	6.140	249	18.00
42	0.244	94	0.725	146	2.124	198	6.224	250	18.34
43	0.250	95	0.736	147	2.166	199	6.393	251	18.84
44	0.255	96	0.747	148	2.229	200	6.477	252	19.18
45	0.260	97	0.768	149	2.250	201	6.665	253	19.51
46	0.265	98	0.778	150	2.313	202	6.813	254	20.00
47	0.271	99	0.799	151	2.355	203	6.897		
48	0.276	100	0.820	152	2.397	204	7.066		
49	0.284	101	0.831	153	2.460	205	7.234		
50	0.289	102	0.852	154	2.502	206	7.402		
51	0.294	103	0.873	155	2.566	207	7.570		

table#24
VCM Comp Level

Data	Value	Data	Value	Data	Value	Data	Value
0	-∞	52	-35.10dB	104	-17.04dB	156	-6.47dB
1	-138.0dB	53	-34.61dB	105	-16.79dB	157	-6.31dB
2	-120.0dB	54	-34.12dB	106	-16.54dB	158	-6.14dB
3	-109.4dB	55	-33.64dB	107	-16.30dB	159	-5.98dB
4	-101.9dB	56	-33.17dB	108	-16.06dB	160	-5.81dB
5	-96.12dB	57	-32.71dB	109	-15.82dB	161	-5.65dB
6	-91.37dB	58	-32.26dB	110	-15.58dB	162	-5.49dB
7	-87.36dB	59	-31.81dB	111	-15.34dB	163	-5.33dB
8	-83.88dB	60	-31.37dB	112	-15.11dB	164	-5.17dB
9	-80.81dB	61	-30.94dB	113	-14.88dB	165	-5.01dB
10	-78.06dB	62	-30.52dB	114	-14.65dB	166	-4.86dB
11	-75.58dB	63	-30.10dB	115	-14.42dB	167	-4.70dB
12	-73.31dB	64	-29.69dB	116	-14.19dB	168	-4.54dB
13	-71.23dB	65	-29.29dB	117	-13.97dB	169	-4.39dB
14	-69.29dB	66	-28.89dB	118	-13.75dB	170	-4.23dB
15	-67.50dB	67	-28.50dB	119	-13.53dB	171	-4.08dB
16	-65.81dB	68	-28.11dB	120	-13.31dB	172	-3.93dB
17	-64.23dB	69	-27.73dB	121	-13.09dB	173	-3.78dB
18	-62.75dB	70	-27.36dB	122	-12.88dB	174	-3.63dB
19	-61.34dB	71	-26.99dB	123	-12.67dB	175	-3.48dB
20	-60.00dB	72	-26.62dB	124	-12.46dB	176	-3.33dB
21	-58.73dB	73	-26.26dB	125	-12.25dB	177	-3.18dB
22	-57.52dB	74	-25.91dB	126	-12.04dB	178	-3.04dB
23	-56.36dB	75	-25.56dB	127	-11.83dB	179	-2.89dB
24	-55.25dB	76	-25.21dB	128	-11.63dB	180	-2.75dB
25	-54.19dB	77	-24.87dB	129	-11.43dB	181	-2.60dB
26	-53.16dB	78	-24.54dB	130	-11.23dB	182	-2.46dB
27	-52.18dB	79	-24.20dB	131	-11.03dB	183	-2.31dB
28	-51.23dB	80	-23.88dB	132	-10.83dB	184	-2.17dB
29	-50.32dB	81	-23.55dB	133	-10.63dB	185	-2.03dB
30	-49.43dB	82	-23.23dB	134	-10.44dB	186	-1.89dB
31	-48.58dB	83	-22.92dB	135	-10.24dB	187	-1.75dB
32	-47.75dB	84	-22.61dB	136	-10.05dB	188	-1.61dB
33	-46.95dB	85	-22.30dB	137	-9.86dB	189	-1.47dB
34	-46.17dB	86	-21.99dB	138	-9.67dB	190	-1.34dB
35	-45.42dB	87	-21.69dB	139	-9.48dB	191	-1.20dB
36	-44.68dB	88	-21.39dB	140	-9.29dB	192	-1.06dB
37	-43.97dB	89	-21.10dB	141	-9.11dB	193	-0.93dB
38	-43.27dB	90	-20.81dB	142	-8.92dB	194	-0.79dB
39	-42.60dB	91	-20.52dB	143	-8.74dB	195	-0.66dB
40	-41.94dB	92	-20.23dB	144	-8.56dB	196	-0.53dB
41	-41.29dB	93	-19.95dB	145	-8.38dB	197	-0.39dB
42	-40.67dB	94	-19.67dB	146	-8.20dB	198	-0.26dB
43	-40.05dB	95	-19.40dB	147	-8.02dB	199	-0.13dB
44	-39.45dB	96	-19.13dB	148	-7.85dB	200	0.00dB
45	-38.87dB	97	-18.86dB	149	-7.67dB		
46	-38.30dB	98	-18.59dB	150	-7.50dB		
47	-37.74dB	99	-18.32dB	151	-7.32dB		
48	-37.19dB	100	-18.06dB	152	-7.15dB		
49	-36.65dB	101	-17.80dB	153	-6.98dB		
50	-36.12dB	102	-17.55dB	154	-6.81dB		
51	-35.61dB	103	-17.29dB	155	-6.64dB		

table#25
VCM Comp Attack Time

Data	Value	Data	Value	Data	Value	Data	Value
0	0.022ms	52	1.759ms	104	9.844ms	156	27.09ms
1	0.023ms	53	1.844ms	105	10.09ms	157	27.53ms
2	0.024ms	54	1.931ms	106	10.33ms	158	27.97ms
3	0.025ms	55	2.021ms	107	10.57ms	159	28.41ms
4	0.026ms	56	2.113ms	108	10.82ms	160	28.86ms
5	0.028ms	57	2.207ms	109	11.07ms	161	29.31ms
6	0.031ms	58	2.304ms	110	11.33ms	162	29.77ms
7	0.035ms	59	2.404ms	111	11.59ms	163	30.23ms
8	0.039ms	60	2.506ms	112	11.85ms	164	30.70ms
9	0.045ms	61	2.611ms	113	12.11ms	165	31.17ms
10	0.051ms	62	2.718ms	114	12.38ms	166	31.64ms
11	0.059ms	63	2.828ms	115	12.66ms	167	32.12ms
12	0.068ms	64	2.941ms	116	12.93ms	168	32.60ms
13	0.077ms	65	3.056ms	117	13.21ms	169	33.09ms
14	0.088ms	66	3.174ms	118	13.50ms	170	33.58ms
15	0.101ms	67	3.295ms	119	13.78ms	171	34.07ms
16	0.114ms	68	3.418ms	120	14.07ms	172	34.57ms
17	0.129ms	69	3.544ms	121	14.37ms	173	35.08ms
18	0.146ms	70	3.673ms	122	14.67ms	174	35.59ms
19	0.163ms	71	3.805ms	123	14.97ms	175	36.10ms
20	0.182ms	72	3.940ms	124	15.27ms	176	36.62ms
21	0.203ms	73	4.077ms	125	15.58ms	177	37.14ms
22	0.225ms	74	4.217ms	126	15.90ms	178	37.67ms
23	0.249ms	75	4.361ms	127	16.21ms	179	38.20ms
24	0.274ms	76	4.507ms	128	16.53ms	180	38.73ms
25	0.301ms	77	4.656ms	129	16.86ms	181	39.27ms
26	0.330ms	78	4.807ms	130	17.18ms	182	39.82ms
27	0.360ms	79	4.962ms	131	17.52ms	183	40.36ms
28	0.393ms	80	5.120ms	132	17.85ms	184	40.92ms
29	0.426ms	81	5.281ms	133	18.19ms	185	41.48ms
30	0.462ms	82	5.445ms	134	18.53ms	186	42.04ms
31	0.500ms	83	5.611ms	135	18.88ms	187	42.61ms
32	0.539ms	84	5.781ms	136	19.23ms	188	43.18ms
33	0.580ms	85	5.954ms	137	19.59ms	189	43.75ms
34	0.623ms	86	6.130ms	138	19.95ms	190	44.33ms
35	0.668ms	87	6.309ms	139	20.31ms	191	44.92ms
36	0.716ms	88	6.491ms	140	20.68ms	192	45.51ms
37	0.765ms	89	6.677ms	141	21.05ms	193	46.10ms
38	0.816ms	90	6.865ms	142	21.42ms	194	46.70ms
39	0.869ms	91	7.057ms	143	21.80ms	195	47.31ms
40	0.924ms	92	7.252ms	144	22.18ms	196	47.91ms
41	0.982ms	93	7.450ms	145	22.57ms	197	48.53ms
42	1.041ms	94	7.651ms	146	22.96ms	198	49.15ms
43	1.103ms	95	7.855ms	147	23.36ms	199	49.77ms
44	1.167ms	96	8.063ms	148	23.75ms	200	50.40ms
45	1.233ms	97	8.274ms	149	24.16ms		
46	1.301ms	98	8.489ms	150	24.56ms		
47	1.372ms	99	8.706ms	151	24.97ms		
48	1.444ms	100	8.927ms	152	25.39ms		
49	1.520ms	101	9.151ms	153	25.81ms		
50	1.597ms	102	9.379ms	154	26.23ms		
51	1.677ms	103	9.610ms	155	26.66ms		

table#26
VCM Comp Release Time

Data	Value	Data	Value	Data	Value	Data	Value
0	10.88ms	52	46.94ms	104	155.10ms	156	335.36ms
1	10.90ms	53	48.34ms	105	157.88ms	157	339.54ms
2	10.94ms	54	49.76ms	106	160.70ms	158	343.74ms
3	11.00ms	55	51.22ms	107	163.54ms	159	347.96ms
4	11.10ms	56	52.70ms	108	166.40ms	160	352.22ms
5	11.22ms	57	54.20ms	109	169.30ms	161	356.50ms
6	11.36ms	58	55.74ms	110	172.22ms	162	360.80ms
7	11.54ms	59	57.30ms	111	175.16ms	163	365.14ms
8	11.74ms	60	58.88ms	112	178.14ms	164	369.50ms
9	11.96ms	61	60.50ms	113	181.14ms	165	373.88ms
10	12.22ms	62	62.14ms	114	184.16ms	166	378.30ms
11	12.50ms	63	63.80ms	115	187.22ms	167	382.74ms
12	12.80ms	64	65.50ms	116	190.30ms	168	387.20ms
13	13.14ms	65	67.22ms	117	193.40ms	169	391.70ms
14	13.50ms	66	68.96ms	118	196.54ms	170	396.22ms
15	13.88ms	67	70.74ms	119	199.70ms	171	400.76ms
16	14.30ms	68	72.54ms	120	202.88ms	172	405.34ms
17	14.74ms	69	74.36ms	121	206.10ms	173	409.94ms
18	15.20ms	70	76.22ms	122	209.34ms	174	414.56ms
19	15.70ms	71	78.10ms	123	212.60ms	175	419.22ms
20	16.22ms	72	80.00ms	124	215.90ms	176	423.90ms
21	16.76ms	73	81.94ms	125	219.22ms	177	428.60ms
22	17.34ms	74	83.90ms	126	222.56ms	178	433.34ms
23	17.94ms	75	85.88ms	127	225.94ms	179	438.10ms
24	18.56ms	76	87.90ms	128	229.34ms	180	442.88ms
25	19.22ms	77	89.94ms	129	232.76ms	181	447.70ms
26	19.90ms	78	92.00ms	130	236.22ms	182	452.54ms
27	20.60ms	79	94.10ms	131	239.70ms	183	457.40ms
28	21.34ms	80	96.22ms	132	243.20ms	184	462.30ms
29	22.10ms	81	98.36ms	133	246.74ms	185	467.22ms
30	22.88ms	82	100.54ms	134	250.30ms	186	472.16ms
31	23.70ms	83	102.74ms	135	253.88ms	187	477.14ms
32	24.54ms	84	104.96ms	136	257.50ms	188	482.14ms
33	25.40ms	85	107.22ms	137	261.14ms	189	487.16ms
34	26.30ms	86	109.50ms	138	264.80ms	190	492.22ms
35	27.22ms	87	111.80ms	139	268.50ms	191	497.30ms
36	28.16ms	88	114.14ms	140	272.22ms	192	502.40ms
37	29.14ms	89	116.50ms	141	275.96ms	193	507.54ms
38	30.14ms	90	118.88ms	142	279.74ms	194	512.70ms
39	31.16ms	91	121.30ms	143	283.54ms	195	517.88ms
40	32.22ms	92	123.74ms	144	287.36ms	196	523.10ms
41	33.30ms	93	126.20ms	145	291.22ms	197	528.34ms
42	34.40ms	94	128.70ms	146	295.10ms	198	533.60ms
43	35.54ms	95	131.22ms	147	299.00ms	199	538.90ms
44	36.70ms	96	133.76ms	148	302.94ms	200	544.22ms
45	37.88ms	97	136.34ms	149	306.90ms		
46	39.10ms	98	138.94ms	150	310.88ms		
47	40.34ms	99	141.56ms	151	314.90ms		
48	41.60ms	100	144.22ms	152	318.94ms		
49	42.90ms	101	146.90ms	153	323.00ms		
50	44.22ms	102	149.60ms	154	327.10ms		
51	45.56ms	103	152.34ms	155	331.22ms		

table#27
EgMultiFx LFO Freq

Data	Value	Data	Value
0	0.1Hz	64	1.009Hz
1	0.103Hz	65	1.051Hz
2	0.105Hz	66	1.093Hz
3	0.11Hz	67	1.125Hz
4	0.113Hz	68	1.167Hz
5	0.118Hz	69	1.22Hz
6	0.124Hz	70	1.262Hz
7	0.129Hz	71	1.304Hz
8	0.131Hz	72	1.346Hz
9	0.137Hz	73	1.409Hz
10	0.142Hz	74	1.451Hz
11	0.147Hz	75	1.514Hz
12	0.152Hz	76	1.556Hz
13	0.158Hz	77	1.619Hz
14	0.166Hz	78	1.682Hz
15	0.171Hz	79	1.745Hz
16	0.176Hz	80	1.808Hz
17	0.184Hz	81	1.872Hz
18	0.192Hz	82	1.956Hz
19	0.197Hz	83	2.019Hz
20	0.205Hz	84	2.103Hz
21	0.213Hz	85	2.166Hz
22	0.221Hz	86	2.25Hz
23	0.229Hz	87	2.334Hz
24	0.237Hz	88	2.418Hz
25	0.247Hz	89	2.502Hz
26	0.255Hz	90	2.608Hz
27	0.265Hz	91	2.692Hz
28	0.276Hz	92	2.776Hz
29	0.284Hz	93	2.902Hz
30	0.294Hz	94	2.986Hz
31	0.308Hz	95	3.112Hz
32	0.318Hz	96	3.238Hz
33	0.329Hz	97	3.365Hz
34	0.342Hz	98	3.491Hz
35	0.352Hz	99	3.617Hz
36	0.368Hz	100	3.743Hz
37	0.379Hz	101	3.869Hz
38	0.394Hz	102	4.037Hz
39	0.41Hz	103	4.164Hz
40	0.426Hz	104	4.332Hz
41	0.442Hz	105	4.5Hz
42	0.457Hz	106	4.668Hz
43	0.473Hz	107	4.837Hz
44	0.489Hz	108	5.005Hz
45	0.51Hz	109	5.173Hz
46	0.526Hz	110	5.383Hz
47	0.547Hz	111	5.552Hz
48	0.568Hz	112	5.804Hz
49	0.589Hz	113	5.972Hz
50	0.61Hz	114	6.224Hz
51	0.631Hz	115	6.393Hz
52	0.657Hz	116	6.645Hz
53	0.673Hz	117	6.897Hz
54	0.704Hz	118	7.15Hz
55	0.725Hz	119	7.402Hz
56	0.757Hz	120	7.738Hz
57	0.789Hz	121	7.991Hz
58	0.81Hz	122	8.327Hz
59	0.841Hz	123	8.58Hz
60	0.873Hz	124	8.916Hz
61	0.904Hz	125	9.253Hz
62	0.946Hz	126	9.589Hz
63	0.978Hz	127	9.925Hz

Vocal Harmony Type List

Type Name	Default Setting of Vocal Harmony On/Off	Default Setting of Vocal Effect On/Off	Description	MSB	LSB
StandardDuet	On	Off	Standard setting for lead vocal plus 1 harmony part. Useful for many music genres.	12	0
StandardTrio	On	Off	Standard setting for lead vocal plus 2 harmony parts. Useful for many music genres.	12	1
StandardQuartet	On	Off	Standard setting for lead vocal plus 3 harmony parts. Useful for many music genres.	12	2
StudioVocals	On	On	Good for studio productions with suitable EQ setting and less Reverb.	12	33
JazzyQuartet	On	Off	Good for Bass, Tenor and Alto singers; for Jazz repertoire. You will hear additional 6th notes.	12	3
SchlagerTrio	On	On	Good for standard Schlager repertoire with simple harmony chords.	12	4
Destiny'sPop	On	On	Good for female singers with lead vocal plus 2 harmony parts above; for female Pop and R&B repertoire.	12	5
VocalDoubler	Off	On	Use this preset to overdub your singing in real time. Turn the [VOCAL HARMONY] button on to add harmony parts with Vocal Doubler effect.	12	34
VocoderVH	On	Off	Standard vocoder setting; ideal for controlling with "UPPER" part.	12	6
VocoderMONO	On	Off	Standard vocoder setting; ideal for controlling with "UPPER" part. You can play mono (single-note) melodies.	12	7
Rock&Roll	Off	On	Good for Rock&Roll songs from the 50's and 60's with typical delay sound. Turn the [VOCAL HARMONY] button on to add harmony parts with Blues chords.	12	35
TempoCross	Off	On	Tempo Cross Delay on lead vocal. Turn the [VOCAL HARMONY] button on to add harmony parts; good for Pop songs or special show effects.	12	36
HeavyVoice	Off	On	Good for Rock and Pop with overdriven vocal. Turn the [VOCAL HARMONY] button on to add Harm.1 with 1 octave down.	12	37
TelephoneChoir	On	On	Typical LoFi vocal ensemble; use as old fashioned ensemble sound or exciting effect in Rock, Pop and Jazz.	12	38
LikeThe80s	On	On	Good for 80's Pop with typical reverb image.	12	39
Gramophone	On	On	Typical 30's vocal ensemble; use as old fashioned gramophone sound.	12	40
PokerPhaser	On	On	Good for modern Pop songs using phaser effect for lead vocal.	12	41
DetuneVoice	On	Off	Lead vocal plus two additional detuned harmony parts for exciting detuned sound.	12	8
PerfectFourth	On	On	Quartet singing only perfect fourths; parallel movement of all parts.	12	9
SingCMajorScale	On	Off	Sing C major scale and the harmony parts will create suitable chord notes based on the C major scale. You can edit the key root and type by "Harmony Assign" setting.	12	10
BalladChoir	On	On	Good for Ballad backing vocals with long reverb.	12	11
ChurchChoir	On	On	Good for standard church songs and christmas songs with long reverb; recommended for Bass, Tenor and Alto voice.	12	12
GregorianChoir	On	On	Good for rubato Gregorian-chant-type monophonic songs with large reverb; parallel movement of all parts.	12	13
GospelChoir	On	On	Good for Gospel songs with long reverb on harmony parts and minor 7th feel.	12	14
CosmicChoir	On	On	Extreme phasing vocals; useful for exciting effects in Dance and Modern Music.	12	42
AlpenGirls	On	On	Good for male singer with 2 female harmony parts above lead vocal.	12	15
CountryRock	On	On	Typical Country Rock quartet; recommended range is tenor/alto.	12	16
R&BDiva	On	On	Good for female alto singer for R&B repertoire; also useable with Tenor lead vocal.	12	17
ClosedPopChicks	On	On	Good for female singers with two harmony parts below. Change volume of Harm.3 for an additional (3rd) part below.	12	18
QueenOfPop	Off	On	Good for Pop and R&B songs using Tempo Delay. Turn the [VOCAL HARMONY] button on to add 2nd Voice.	12	43
Bob->Mary	On	On	Male singer can sound like Female voice with long romantic reverb. Use "BALANCE" on the VOCAL HARMONY EDIT display to add a male duet partner.	12	19
Mary->Bob	On	Off	Female singer can sound like Male voice with short reverb. Use "BALANCE" on the VOCAL HARMONY EDIT display to add a female duet partner.	12	20
FlangingVocals	Off	On	Useful for modern Pop, Rock and Dance music.	12	44
JazzySisters	On	On	Good for Bass and Tenor Singers. Harmony parts add 3 female Jazz singers.	12	21
QuartetOnStage	On	On	Good for Rock and Pop Music. Harmony parts make up a quartet.	12	22
DelayedHarmony	On	On	Useful in several genres with a tempo-synced delay choir as background.	12	45
KidsChoir	On	Off	Want to be a child again? Use this preset type and sing with your friends...	12	23
ChorusChoir	On	On	The chorus effect adds a rich and exciting characteristics to your voice and the harmony parts.	12	46
BohemianVocode	On	On	Tempo flanging Vocoder Type; good for Rock or Pop songs and Intros.	12	47
RobotVoice	On	On	Do you want to sound like a robot? This is the setting. Use Harm.3 for variation.	12	48
ChordalXG	On	Off	CHORDAL type setting of previous Vocal Harmony system.	90	0
DetuneXG	On	Off	DETUNE type setting of previous Vocal Harmony system.	91	0
ChromaticXG	On	Off	CHROMATIC type setting of previous Vocal Harmony system.	92	0
VocoderXG	On	Off	VOCODER type setting of previous Vocal Harmony system.	89	0
Thru	-	-	Bypass without any harmonies and effects.	64	0

Chordal Type List

Type Name	Description
2Abv&1Blw.Simple	Harmony based on 3-tone chord, 2 above and 1 below; suitable for backing chorus parts. Basically it generates harmonies within an octave.
1Abv&2Blw.Simple	Harmony based on 3-tone chord, 1 above and 2 below; suitable for backing chorus parts. Basically it generates harmonies within an octave.
1Abv&2Blw.Open	Harmony based on 3 total tones from chords and scales, 1 above and 2 below; it can produce a feeling of movement. Basically it generates open harmonies of an octave or more.
1Abv&2Blw.OpenPara	Harmony based on 3 total tones from chords and scales, 1 above and 2 below; it can produce a feeling of movement. Basically it generates open harmonies of an octave or more. It includes the effect of creating parallel motion of a half tone in certain conditions.
1Abv&2Blw.OpenBlues	Harmony based on 3 total tones from chords and scales, 1 above and 2 below; it can produce a feeling of movement. Basically it generates open harmonies of an octave or more. Since it adds a major second as a scale tone to harmony during 7th chords, it provides a passing tone during 7th chords—suitable for 3-tone chord blues or for country rock in major keys. There are cases where it is not suitable during 7th chord in minor keys.
1Abv&1Blw+UnsD.Simple	Harmony suitable for a trio based on 2-tone chord, 1 above and 1 below (+ Oct. below the input pitch); it is suitable for backing chorus parts.
3Blw.Closed	Harmony based on 3 total tones from chords and scales, 3 below; it can produce a feeling of movement. Basically it generates harmonies within an octave. It is unsuitable for low input pitch, because the harmonies are low.
3Blw.ClosedPara	Harmony based on 3 total tones from chords and scales, 3 below; it can produce a feeling of movement. Basically it generates harmonies within an octave. It is unsuitable for low input pitch, because the harmonies are low. It includes the effect of creating parallel motion of a half tone in certain conditions.
3Blw.ClosedBlues	Harmony based on 3 total tones from chords and scales, 3 below; it can produce a feeling of movement. Basically it generates harmonies within an octave. It is unsuitable for low input pitch, because the harmonies are low. Because it adds the major second as the scale tone to harmony during 7th chord, it provides a passing tone during 7th chords—suitable for 3-tone chord blues in major keys or for country rock. There are cases where it is not suitable during 7th chord in minor keys.
2Blw+Bass.Chordal	Harmony based on 3-tone chord, 2 below and a chord root; it is suited for backing chorus parts.
2Blw+UnsD.Modal	Harmony suitable for a trio based on 2 total tones from chords and scales, 2 below (+ Oct. below the input pitch); it can produce a feeling of movement.
2Blw+UnsD.ModalBlues	Harmony suitable for a trio based on 2 total tones from chords and scales, 2 below (+ Oct. below the input pitch); it can produce a feeling of movement. Because it adds a major second as a scale tone to harmony during 7th chords, it provides a passing tone during 7th chords—suitable for 3-tone chord blues or for country rock in major keys. There are cases where it is not suitable during 7th chord in minor keys.
1Blw+UnsD+Bass	Harmony suitable for a duet based on 1 total tone from chord and scale, the nearby 1 below (+ Oct. below the input pitch and chord root); it can produce a feeling of movement.
1Blw.Far+UnsD+Bass	Harmony suitable for a duet based on 1-tone chord, 1 below, (priority on character) (+ Oct. below the input pitch and chord root). This setting skillfully expresses the chord character.
3Abv.Jazz	Harmony based on 3 total tones from chords and scales, 3 above; it can produce a feeling of movement. Basically it generates harmonies within an octave. It is suitable for low pitched vocals.
3Abv.Chordal	Harmony based on 3-tone chord, 3 above; it is suitable for backing chorus parts. It is also good for low pitched vocals.
3Abv.JazzPara	Harmony based on 3 total tones from chords and scales, 3 above; it handles a major triad as add 6th chord. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. Basically it generates harmonies within an octave. It includes the effect of creating parallel motion of a half tone in certain conditions. It is suitable for low pitched vocals.
3Abv.JazzBluesPara	Harmony based on 3 total tones from chords and scales, 3 above; it handles a major triad as add 6th chord. Since it handles the major second as a scale tone in major triads, it can also provide passing tones. Because it adds a major second as a scale tone to harmony during 7th chords, it provides a passing tone during 7th chords—suitable for 3-tone chord blues or for country rock in major keys. Basically it generates harmonies within an octave. It includes the effect of creating parallel motion of a half tone in certain conditions. There are cases where it is not suitable during 7th chord in minor keys. It is suitable for low pitched vocals.
2Abv&1Blw.WideH	Harmony based on 3 total tones from chords and scales, 2 above and 1 below; it can produce a feeling of movement. Basically it generates open harmonies of an octave or more. It is suitable for low pitched vocals.
2Abv&1Blw.forDuo	Harmony based on 3 total tones from chords and scales, 2 above and 1 below; it can produce a feeling of movement. Because it combines elements suited for duets, HARM. 1, 2 and 3 can be independently selected for use for duets. It can also be used for octave transposing. Basically, the highest tone (HARM.1) is an octave above the lowest tone (HARM.3), and this tone (HARM.1 or HARM.3) handles the major second as the scale tone in major triads. (You should be careful, however, depending on the song.) It is suited for low pitched vocals in situations where all harmonies are used for a quartet.
2Abv&1Blw.Jazz	Harmony based on 3 total tones from chords and scales, 2 above and 1 below; it handles a major triad as add 6th chord. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. Basically, the highest tone (HARM.1) is an octave above the lowest tone (HARM.3). Each of its tones is treated as an element, so it can be used for duets or trios. It is suitable for low pitched vocals.
2Abv&1Blw.WideL	Harmony based on 3 total tones from chords and scales, 2 above and 1 below; it can produce a feeling of movement. Its harmony range tends to be lower than that of Wide H. Basically it generates open harmonies of an octave or more. It is suitable for low pitched vocals.
2Abv+UnsD.Modal6th	Harmony suitable for a trio based on 2 total tones from chords and scales, 2 above (+ Oct. below the input pitch); it handles a major triad as add 6th chord. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. It is suitable for low pitched vocals.
2Abv+Bass.Modal6th	Harmony suitable for a trio based on 2 total tones from chords and scales, 2 above (+ chord root); it handles a major triad as add 6th chord. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. It is suitable for low pitched vocals.
UnsU+1Abv+Bass.Open	Harmony suitable for a duet based on 1 total tone from chord and scale, the nearby 1 above (+ Oct. below the input pitch and chord root); it can produce a feeling of movement.
1Abv&2Blw.Jazz	Harmony based on 3 total tones from chords and scales, 1 above and 2 below; it can produce a feeling of movement. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. Basically it is a closed harmony within an octave.
1Abv&2Blw.80s	Harmony based on 3 total tones from chords and scales, 1 above and 2 below; it can produce a feeling of movement. Because it handles the major second as a scale tone in major triads, it can also provide passing tone. With priority on the chord's character, it is good for broadening the sound in which Maj7 and m7 chords are often used. Basically it generates closed harmonies within an octave.
1Abv&2Blw.Blues	Harmony based on 3 total tones from chords and scales, 1 above and 2 below; it can produce a feeling of movement. Since it handles the major second as a scale tone in major triads, it can also provide passing tones. Because it adds the major second as a scale tone to harmony during 7th chords, it provides a passing tone during 7th chords—suitable for 3-tone chord blues in major keys or for country rock. Basically it generates closed harmonies within an octave.
1Abv&2Blw.ChordalBlues	Harmony based on 3 total tones from chords and scales, 1 above and 2 below; it can produce a feeling of movement. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. Because it adds the major second as a scale tone to harmony during 7th chords, it provides a passing tone during 7th chords—suitable for 3-tone chord blues in major keys or for country rock. With priority on the chord's character, it is good for broadening the sound in which Maj7 and m7 chords are often used. Basically it generates closed harmonies within an octave.
1Abv&2Blw.Chordal	Harmony based on tone chords and scale tones used as duet, 1 above and 2 below; it can produce a feeling of movement. HARM.1 is a tone above and nearest the input pitch. HARM.2, tone which is below the input pitch and nearest the input pitch, handles a major triad as add 6th chord. HARM.3 is harmony with priority on the chord character of the lower notes. Because it handles the major second as a scale tone in major triads, it can also provide passing tones.
1Abv&2Blw.Wide	Harmony based on 3 total tones from chords and scales, 1 above and 2 below; it can produce a feeling of movement. It handles a major triad as add 6th chord. Since it handles the major second as a scale tone, it can also provide passing tones. Basically it generates open harmonies of an octave or more.
1Abv&2Blw.WideBlues	Harmony based on 3 total tones from chords and scales, 1 above and 2 below; it can produce a feeling of movement. Since it handles a major triad as add 6th chord, and handles the major second as a scale tone, it can also provide passing tones. Because it adds the major second as a scale tone to harmony during 7th chords, it provides a passing tone during 7th chords—suitable for 3-tone chord in major keys or for country rock. Basically it generates open harmonies of an octave or more.
1Abv&1Blw+Bass	Harmony based on tone chords and scale tones used as duet, 1 above and 1 below; (+ chord root); it can produce a feeling of movement. HARM.1 is a tone above and nearest the input pitch. HARM.2, tone which is below the input pitch and nearest the input pitch, handles a major triad as add 6th chord, and since it handles the major second as a scale tone in major triads, it can provide passing tones.
1Abv&1Blw+UnsD.Modal6th	Harmony suitable for a trio based on 2 total tones from chords and scales, a above and below (+ Oct. below the input pitch); it can produce a feeling of movement. Because it handles a major triad as add 6th chord, and handles the major second as a scale tone, it can provide passing tones.
1Abv&1Blw+Bass.Modal6th	Harmony based on tone chords and scale tones used as duet, 1 above and 1 below (+ chord root); it can produce a feeling of movement. HARM.1 is harmony of above tone with priority on the chord character. HARM.2, harmony near the below side, handles a major triad as add 6th chord, and since it handles the major second as a scale tone, it can provide passing tones. Because it handles the major second as a scale tone in major triads, it can also provide passing tones.
3Blw.Jazz	Harmony based on 3 total tones from chords and scales, 3 below; it handles a major triad as add 6th chord. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. Basically it generates harmonies within an octave. It is suitable for high pitched vocals.
3Blw.JazzBlues	Harmony based on 3 total tones from chords and scales, 3 below; it handles a major triad as add 6th chord. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. Because it adds the major second as a scale tone to harmony during 7th chords, it provides a passing tone during 7th chords—suitable for 3-tone chord blues or for country rock in major keys. Basically it generates harmonies within an octave. It is suitable for high pitched vocals.
2Blw+UnsD.Modal6th	Harmony suitable for a trio based on 2 total tones from chords and scales, 2 below (+ Oct. below input pitch); it handles a major triad as add 6th chord. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. Basically it generates harmonies within an octave. It is suitable for high pitched vocals.
2Blw+Bass.Modal6th	Harmony suitable for a trio based on 2 total tones from chords and scales, 2 below (+ chord root); it handles a major triad as add 6th chord. Because it handles the major second as a scale tone in major triads, it can also provide passing tones. Basically it generates harmonies within an octave. It is suitable for high pitched vocals.
ScaleDiatonic	This generates harmonies based on the scale specified by the KEY ROOT/TYPE value and the degree specified by the DEGREE value. The harmonies are not dependent on a chord. If there are many notes, the chord feeling intensifies, so it is suitable for use as duets, fixed at a third above. This setting is good for modal church music or modal jazz.
Parallel	This can reproduce harmonies for which semitone pitches are fixed 4th build or diminished sounds, for example. This setting is good, for example, in modal jazz scales (when you want to eliminate chordal feeling) or in progressive music.

Vocal Effect Type List

Type Name		Description	MSB	LSB
ROMANTIC REV	(Romantic Reverb)	Long reverb for vocal part. Romantic image.	1	0
80sPOP REV	(80s'Pop Reverb)	Long reverb for vocal part. 80's pop image.	1	16
ROOM		Reverb simulating the acoustics of a room.	2	0
STAGE	(Concert Stage)	Reverb simulating the concert stage.	3	0
PLATE		Reverb simulating a plate reverb unit.	4	0
VCL DOUBLE	(Vocal Doubler)	Immediate delay with center focused feeling.	5	16
SPREAD	(Stereo Spread)	Immediate delay with spread feeling.	5	17
DELAY		Produces simple delayed sounds: L,R, and C (center).	5	0
SHORT DELAY		Produces short delayed sound with narrow image.	5	1
R&R DELAY	(Rock&Roll Delay)	Produces slap back echo sound. Good for Rock&Roll music.	5	18
CROSS DELAY		The feedback of the two delayed sounds is crossed.	8	0
TEMPO DELAY		Tempo-synchronized delay.	21	0
TEMPO CROSS	(Tempo Cross Delay)	Tempo-synchronized cross delay.	22	0
CHORUS	(Chorus)	Conventional chorus program with rich, warm chorusing.	66	0
EQ HI-FI		Equalizer effect that boosts both high and low frequencies.	76	16
EQ TEL		Equalizer effect that cuts both high and low frequencies.	76	0
GRAMOPHONE		Produces Lo-Fi sound with gramophone image.	94	0
ROBOT		Produces Lo-Fi sound with robotic image.	94	16
OVERDRIVEN		Produces overdriven sound. Good for rock and dance music.	98	0
SCREAM&SHOUT		Produces heavy distorted sound.	98	16
TEMPO FLANGE	(Tempo Flanger)	Tempo-synchronized flanger.	107	0
TEMPO PHASER		Tempo-synchronized phaser.	108	0
TEMPO A.PAN	(Tempo Auto Pan)	Tempo-synchronized auto pan.	121	0
NO EFFECT		No effect.	0	0

Harmony Assign Parameters

Parameter	Value	Description
TRANS.MODE *These are effective only when Vocoder or Vocoder-Mono is selected in Mode.	0	Assigns the harmony to the octave range centered around the pitch of the played note.
	Auto	Assigns the harmony to the same octave range as the vocal (microphone) input.
	-3	Assigns the harmony to a range roughly 3 octaves below the pitch of the played note.
	-2	Assigns the harmony to a range roughly 2 octaves below the pitch of the played note.
	-1	Assigns the harmony to a range roughly 1 octave below the pitch of the played note.
	+1	Assigns the harmony to a range roughly 1 octave above the pitch of the played note.
	+2	Assigns the harmony to a range roughly 2 octaves above the pitch of the played note.
	+3	Assigns the harmony to a range roughly 3 octaves above the pitch of the played note.
SESSION TABLE *These are effective only when a Chordal Type other than Scale Diatonic or Parallel is selected.	Normal	The chord designation is used as shown. This is for general use in conventional music genres.
	Simple	Tends to add a simpler harmony. Use this when you need simple accompaniment.
	R&R	Tends to add harmony with a strong major 6th in both major and minor triads. This is good with rock 'n' roll music.
	UrbanA	Tends to add harmony with a strong major 6th to the major triad and a minor 7th to the minor triad. This is good for a sophisticated, urban feel.
	UrbanB	Tends to add harmony with a strong major 7th to the major triad and a minor 7th to the minor triad. This is good for a sophisticated, urban feel.
	Blues7	Tends to add harmony with a strong minor 7th. This is good for blues music.
	UrbanC	Tends to add harmony with a strong major 9th to both the major and minor triads. This is good for a sophisticated, urban feel.
KEY ROOT *These are effective only When the Chordal Type parameter is set to ScaleDiatonic.	Determines the root key for the transposition. Refer to the Reference Manual.	
KEY TYPE *These are effective only When the Chordal Type parameter is set to ScaleDiatonic.	Determines the scale type for the transposition. Refer to the Reference Manual.	

Vocal Effect Parameter List

Table..... Indicates the corresponding table number in the Effect Data Assign Table.

ROMANTIC REV, 80sPOP REV, ROOM, STAGE, PLATE

No.	Parameter	Display	Value	Table
1	Reverb Time	0.3s – 30.0s	0 – 69	table#4
2	Diffusion	0 – 10	0 – 10	
3	Initial Delay	0.1ms – 99.3ms	0 – 63	table#5
4	HPF Cutoff	Thru, 22Hz – 8.0kHz	0 – 52	table#3
5	LPF Cutoff	1.0kHz – 18kHz, Thru	34 – 60	table#3
6				
7				
8				
9				
10				
11	Reverb Delay	0.1ms – 99.3ms	0 – 63	table#5
12	Density	0 – 4	0 – 4	
13	ER/Reverb Balance	E63>R – E=R – E<R63	1 – 127	
14	High Damp	0.1 – 1.0	1 – 10	
15	Feedback Level	-63 – 0 – +63	1 – 127	
16				

VCL DOUBLE, SPREAD, DELAY, SHORT DELAY, R&R DELAY

No.	Parameter	Display	Value	Table
1	Lch Delay	0.1ms – 1638.3ms	1 – 16383	
2	Rch Delay	0.1ms – 1638.3ms	1 – 16383	
3	Cch Delay	0.1ms – 1638.3ms	1 – 16383	
4	Feedback Delay	0.1ms – 1638.3ms	1 – 16383	
5	Feedback Level	-63 – 0 – +63	1 – 127	
6	Cch Level	0 – 127	0 – 127	
7	High Damp	0.1 – 1.0	1 – 10	
8				
9				
10				
11				
12				
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76	
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76	

CROSS DELAY

No.	Parameter	Display	Value	Table
1	L->R Delay	0.1ms – 1486.0ms	1 – 14860	
2	R->L Delay	0.1ms – 1486.0ms	1 – 14860	
3	Feedback Level	-63 – 0 – +63	1 – 127	
4	Input Select	L, R, L&R	0 – 2	
5	High Damp	0.1 – 1.0	1 – 10	
6				
7				
8				
9				
10				
11				
12				
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76	
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76	

TEMPO DELAY

No.	Parameter	Display	Value	Table
1	Delay Time	64th/3 – 4thx6	0 – 19	table#14
2	Feedback Level	-63 – 0 – +63	1 – 127	
3	Feedback High Dump	0.1 – 1.0	1 – 10	
4	L/R Diffusion	-63ms – 0ms – 63ms	1 – 127	
5	Lag	-63ms – 0ms – 63ms	1 – 127	
6				
7				
8				
9				
10				
11				
12				
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76	
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76	

TEMPO CROSS

No.	Parameter	Display	Value	Table
1	Delay Time L>R	64th/3 – 4thx6	0 – 19	table#14
2	Delay Time R>L	64th/3 – 4thx6	0 – 19	table#14
3	Feedback Level	-63 – 0 – +63	1 – 127	
4	Input Select	L, R, L&R	0 – 2	
5	Feedback High Dump	0.1 – 1.0	1 – 10	
6	Lag	-63ms – 0ms – 63ms	1 – 127	
7				
8				
9				
10				
11				
12				
13	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	
14	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76	
15	EQ High Frequency	500Hz – 16.0kHz	28 – 58	
16	EQ High Gain	-12dB – 0dB – +12dB	52 – 76	

CHORUS

No.	Parameter	Display	Value	Table
1	LFO Frequency	0.00Hz – 39.7Hz	0 – 127	table#1
2	LFO Depth	0 – 127	0 – 127	
3	Feedback Level	-63 – 0 – +63	1 – 127	
4	Delay Offset	0.0ms – 50ms	0 – 127	table#2
5				
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76	
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76	
10				
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76	
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120	
14				
15	Input Mode	mono, stereo	0 – 1	
16				

EQ HI-FI, EQ TEL

No.	Parameter	Display	Value	Table
1	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76	
2	EQ Mid Frequency	100Hz – 16.0kHz	14 – 58	table#3
3	EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76	
4	EQ Mid Width	0.1 – 12.0	1 – 120	
5	EQ High Gain	-12dB – 0dB – +12dB	52 – 76	
6	EQ Low Frequency	50Hz – 2.0kHz	8 – 40	table#3
7	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3
8				
9				
10				
11				
12				
13				
14				
15	Input Mode	mono, stereo	0 – 1	
16				

GRAMOPHONE, ROBOT

No.	Parameter	Display	Value	Table
1	Sampling Freq Control	44.1kHz – 345Hz	0 – 120	table#13
2	Word Length	1 – 127	1 – 120	
3	Output Gain	-6dB – +36dB	0 – 42	
4	LPF Cutoff	63Hz – 18kHz, Thru	10 – 60	table#3
5	Filter Type	Thru, PowerBass, Radio, Tel, Clean, Low	0 – 5	
6	LPF Resonance	1.0 – 12.0	10 – 120	
7	Bit Assign	0 – 6	0 – 6	
8	Emphasis	Off, On	0 – 1	
9				
10				
11				
12				
13				
14				
15	Input Mode	mono, stereo	0 – 1	
16				

OVERDRIVEN, SCREAM&SHOUT

No.	Parameter	Display	Value	Table
1	Overdrive	0% – 100%	0 – 100	
2	Device	Transistor, Vintage Tube, Dist1, Dist2, Fuzz	0 – 4	
3	Speaker	Flat, Stack, Combo, Twin, Radio, Megaphone	0 – 5	
4	Presence	0 – 20	0 – 20	
5	Output Level	0% – 100%	0 – 100	
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				

TEMPO FLANGE

No.	Parameter	Display	Value	Table
1	LFO Freq	16th – 4thx16	5 – 29	table#14
2	LFO Depth	0 – 127	0 – 127	
3	Feedback Level	-63 – 0 – +63	1 – 127	
4	Delay Offset	0.0ms – 50ms	0 – 127	table#2
5				
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76	
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76	
10				
11	EQ Mid Frequency (w/o 48step)	100Hz – 10.0kHz	14 – 54	table#3
12	EQ Mid Gain (w/o 48step)	-12dB – 0dB – +12dB	52 – 76	
13	EQ Mid Width (w/o 48step)	0.1 – 12.0	1 – 120	
14	LFO Phase Difference	-180deg – 0deg – +180deg	4 – 124	
15				
16				

TEMPO PHASER

No.	Parameter	Display	Value	Table
1	LFO Freq	16th – 4thx16	5 – 29	table#14
2	LFO Depth	0 – 127	0 – 127	
3	Phase Shift Offset	0 – 127	0 – 127	
4	Feedback Level	-63 – 0 – +63	0 – 127	
5				
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76	
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76	
10				
11	Stage	3 – 11	3 – 11	
12				
13	LFO Phase Difference	-180deg – 0deg – +180deg	4 – 124	
14				
15				
16				

TEMPO A.PAN

No.	Parameter	Display	Value	Table
1	LFO Freq	16th – 4thx16	5 – 29	table#14
2	L/R Depth	0 – 127	0 – 127	
3	F/R Depth	0 – 127	0 – 127	
4	PAN Direction	L<->R, L->R, L<-R, Lturn, Rturn, L/R	0 – 5	
5	LFO Wave	0 – 28	0 – 28	
6	EQ Low Frequency	32Hz – 2.0kHz	4 – 40	table#3
7	EQ Low Gain	-12dB – 0dB – +12dB	52 – 76	
8	EQ High Frequency	500Hz – 16.0kHz	28 – 58	table#3
9	EQ High Gain	-12dB – 0dB – +12dB	52 – 76	
10				
11	EQ Mid Frequency	100Hz – 10.0kHz	14 – 54	table#3
12	EQ Mid Gain	-12dB – 0dB – +12dB	52 – 76	
13	EQ Mid Width	0.1 – 12.0	1 – 120	
14				
15	Input Mode	mono, stereo	0 – 1	
16				

NO EFFECT

No.	Parameter	Display	Value	Table
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				

Pitch Correct Parameters

Parameter	Description
OFF	The input sound is not pitch corrected. Since the harmony has a more natural sound, this setting is good for duets, etc.
SOFT1	The input sound is almost without pitch correction. Since the pitches of the harmony are more accurate, this setting is good for backing chorus parts, etc.
SOFT2	The input sound is slightly pitch corrected. Since the harmony has a more natural sound, this setting is good for duets, etc.
HARD	The input sound is pitch corrected. Since the pitches of the harmony are more accurate, this setting is good for backing chorus parts, etc.

Vocal Harmony Edit (Detail) Parameters

Parameter	Value	Description
LEAD PITCH DETECT SPEED/ HARM. PITCH DETECT SPEED	15(Fast)	This setting responds even more quickly to pitch changes, and even if the vocal is slightly off pitch, the harmony easily follows; however, sensitivity is high.
	14	This setting responds even more quickly to pitch changes, and sensitivity of pitch detection is slightly high.
	13	This setting responds quickly to pitch changes, and sensitivity of pitch detection is slightly high.
	12	This setting responds a little quickly to pitch changes, and sensitivity of pitch detection is slightly high.
	11	This setting responds a little quickly to pitch changes, and sensitivity of pitch detection is slightly low.
	10	This setting responds a little quickly to pitch changes, and pitch detection is moderately precise.
	9	This setting responds fairly quickly to pitch changes, and even if the vocal is slightly off pitch, the harmony easily follows.
	8	This setting responds a little quickly to pitch changes, and sensitivity of pitch detection is slightly high.
	7	This setting responds a little quickly to pitch changes, and sensitivity of pitch detection is slightly low.
	6	This setting responds a little quickly to pitch changes, and pitch detection is moderately precise.
	5	This setting responds a little quickly to pitch changes, and even if the vocal is slightly off pitch, the harmony easily follows.
	4(Normal)	This setting responds relatively quickly to pitch changes, and pitch detection is moderately precise.
	3	This setting responds relatively quickly to pitch changes, and even if the vocal is slightly off pitch, the harmony easily follows.
	2	This setting responds relatively slowly to pitch changes, and even if the vocal is slightly off pitch, the harmony easily follows.
	1(Slow)	This setting responds most slowly to pitch changes, and even if the vocal is slightly off pitch, the harmony easily follows.
	as Mic Setting	This setting gives priority to the speed which is set on the VOCAL page of the MIC SETTING display.
HARMONY EFFECT	Cmp&EQ Solid	This compresses strong peaks and consonant sounds, etc.
	Cmp&EQ Wide	This is a well-balanced EQ setting covering a wide range. It also compress strong peaks for a narrower dynamic range.
	Cmp&EQ Mid	An EQ setting which emphasizes the mid range, it also compresses strong peaks for a narrower dynamic range.
	Cmp&EQ Lite	This EQ setting has a light feel, while emphasizing the bass range. It also compresses strong peaks for a narrower dynamic range.
	Cmp&EQ Heavy	This EQ setting has a heavy feel. It also uses compresses strong peaks for a narrower dynamic range.
	Cmp&EQ HiLo	This EQ setting emphasizes the treble and bass ranges. It also compresses strong peaks for a narrower dynamic range.
	Cmp&EQ Hi	This EQ setting emphasizes the treble range. It also compresses strong peaks for a narrower dynamic range.
	Cmp	This compresses strong peaks for a narrower dynamic range.
	EQ Wide	This is a well-balanced EQ setting which covers a wide spectrum range.
	EQ Mid	This EQ setting emphasizes the mid range.
	EQ Lite	This EQ setting has a light feeling, while emphasizing the bass range.
	EQ Heavy	This EQ setting has a heavy feeling.
	EQ HiLo	This EQ setting emphasizes the treble and bass ranges.
	EQ Hi	This EQ setting emphasizes the treble range.
	Female Lite	This setting is suited for female vocalists. It attenuates the bass range and provides a light image.
	Female	This setting is suited for female vocalists.
	Lite	This setting is suited for male vocalists. It attenuates the bass range and provides a light image.
	Basic	This setting is suited for male vocalists.
	Thru	This is a bypass setting. It has no harmony effect.
HARMONY STABILITY	Stable	This has a relatively stable sound with little harmony motion.
	Dynamic	This tends to add harmony with motion according to the input sound.
LEAD VIBRATO DEPTH	This specifies the vibrato depth of the lead sound.	
HARM. VIBRATO DEPTH	This specifies the vibrato depth of the harmony sound.	
VIBRATO SPEED	It specifies the vibrato speed of both the lead and harmony sounds.	
VIBRATO DELAY	It specifies the vibrato delay of both the lead and harmony sounds.	

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
Main																	
SongFile	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Song	–	
StyleFile	O	O	X	X	X	O	X	–	X	–	X	X	X	O	Style	–	
MultiPad File	O	O	X	X	X	X	X	–	X	–	X	O	X	O	Multi Pad	–	
Right1 VoiceFile	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Right2 VoiceFile	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Left VoiceFile	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
PartSelect	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
PartOnOff (Right1)	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
PartOnOff (Right2)	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
PartOnOff (Left)	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Style	–	
RegistrationBankFile	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Audio Player File	O	O	X	X	X	X	X	–	X	–	X	X	X	O	AUDIO	–	
File System																	
CharacterSelect	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	One setting for all the Name related pop-up window.
Song																	
Track1, 2 On/Off	O	O	X	X	X	X	X	–	O	Guide Setting	X	X	X	X	–	–	Setting is linked to Channel on/off.
ExtraTracks On/Off	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	Setting is linked to Channel on/off.
A-B Repeat	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Synchro Start	O	O	X	X	X	X	X	–	X	–	X	X	X	O	SONG	–	
StartStop	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel On/Off	O	O	X	X	X	X	X	–	X	–	X	X	X	O	SONG	–	
Menu > Function > SongSetting																	
Guide Mode	O	O	O	X	X	X	X	–	O	Guide Setting	X	X	X	X	–	–	Reset to its default setting when song data doesn't include this data.
Repeat Mode	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Phrase Mark Repeat	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Track1 Channel	O	O	O	X	X	X	X	–	O	–	X	X	X	X	–	–	Set by recording. Different from one of the Track2.
Track2 Channel	O	O	O	X	X	X	X	–	O	–	X	X	X	X	–	–	Set by recording. Different from one of the Track2.
Auto Ch Set	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Lyrics Language	O	O	O	X	X	X	X	–	O	Lyrics Language	X	X	X	X	–	–	
QuickStart	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
PAT On/Off	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Tempo																	
Master Tempo	O	O	X	X	X	X	X	–	O	TEMPO	O	X	X	O	Tempo	–	
Menu > Function > Digital Rec Menu > Song Creator																	
REC Mode																	
Rec Start	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
PunchInAt	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Rec End	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
PunchOutAt	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Pedal Punch In/Out	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel > Quantize																	
Channel	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Size	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Strength	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel > Track Delete																	
Track Delete	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel > Track Mix																	
Source1	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Source2	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Destination	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel > Channel Transpose																	
CHANNEL TRANSPOSE	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
REC Mode > Channel > Setup																	
Setup Select	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel > Chd/1-16/SysEx./Lyric > Filter																	
Main Filter	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Control Change Filter	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Style Filter	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Lyric/Text																	
BackGround (Panel Setting)	–	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
BackGround (Song Setting)	–	O	X	X	X	X	X	–	O	Lyrics Setting	X	X	X	X	–	–	Reset to the background selected last via the panel operation with Factory Reset.
Text File (Panel Setting)	O	O	X	X	X	X	X	–	X	–	X	X	X	O	TEXT	–	
Viewer Mode	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Text Sw																	
Text Size	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
SCORE SW																	
Left on/off	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Right on/off	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Lyric on/off	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Pedal on/off	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Chord on/off	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
NoteName on/off	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Fingering on/off	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Size	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Left ch.	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Right ch.	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
KeySignature	O	O	X	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Quantize	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
NoteName	O	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
ColorNote	–	O	O	X	X	X	X	–	O	Score Setting	X	X	X	X	–	–	
Recording data																	
Song XG data	O	O	X	X	X	X	X	X	O	–	X	X	X	X	–	–	
Style																	
AccompanimentOnOff	O	O	X	X	X	X	X	–	X	–	X	O (On)	X	O	Style	–	
OTSLink	O	O	X	X	X	O (On)	X	–	X	–	X	X	X	X	–	–	
AutoFillIn	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Section	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Style	–	
SynchroStart	O	O	X	X	X	X	X	–	X	–	X	O (On)	X	O	Style	–	
SynchroStop	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Style	–	
StartStop	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Menu > Function > StyleSetting/SplitPoint/Chord Fingering																	
Style Setting																	
StopAcmp	O	O	O	X	X	X	X	–	X	–	X	X	X	O	Style	–	
OTSLinkTiming	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
SynchroStopWindow	O	O	O	X	X	X	X	–	X	–	X	X	X	O	Style	–	
StyleTouch	O	O	O	X	X	X	X	–	X	–	X	X	X	O	Style	–	
SectionSet	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Tempo Hold	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Part On/Off	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
SplitPoint																	
SplitPoint (Left)	O	O	O	X	X	X	X	–	X	–	X	X	X	O	Style	Split Point	
SplitPoint (Style)	O	O	O	X	X	X	X	–	O	Guide Setting	X	X	X	O	Style	Split Point	
Chord Fingering																	
FingeringType	O	O	O	X	X	X	X	–	X	–	X	X	X	O	Style	Fingering	
Chord Root Note	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Chord Root Type	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Menu > Function > Digital Rec Menu > Style Creator																	
BASIC																	
Section	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Pattern Length	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
Tempo	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
Beat	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
Assembly																	
Source Pattern	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Section	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Play Type	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Groove > Groove																	
Original Beat	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Beat Converter	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Swing	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Fine	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Groove > Dynamics																	
Channel	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Accent Type	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Strength	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Expand/Comp.	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Boost/Cut	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel > Quantize																	
Channel	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Size	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Strength	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel > Velocity Change																	
Channel	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Boost/Cut	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel > Bar Copy																	
Channel	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Source Top	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Source Last	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Destination	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
Channel > Bar Clear																	
Channel	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Source Top	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Source Last	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Channel > Remove Event																	
Channel	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Event	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Parameter																	
Channel	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Source Root	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
Source Chord	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
NTR	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
NTT	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
NTT BASS	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
High Key	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
Note Limit Low	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
Note Limit High	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
RTR	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
Edit > Filter																	
Main Filter	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Control Change Filter	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
MusicFinder																	
SortBy	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
SortOrder	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Style Tempo	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Information Display SW	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Search 1/2 display																	
Music	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Keyword	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Style	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Beat	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
SearchArea	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Tempo (Low)	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Tempo (High)	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Genre	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Search Result	O	O	X	X	X	O	X	–	X	–	X	X	X	X	–	–	
Record (=Property settings)	O	O	X	X	X	O	X	–	X	–	X	X	X	X	–	–	
Recording data																	
SFF data	O	O	X	X	X	X	X	–	X	–	O	X	X	X	–	–	
MultiPad																	
Multi Pad ContentsName	O	O	X	X	X	X	X	–	X	–	X	X	O	X	–	–	
Sync Start	O	O	X	X	X	X	X	–	X	–	X	X	X	O	MultiPad	–	
Audio Link																	
Audio Level	O	O	X	X	X	X	X	–	X	–	X	X	O	X	–	–	
Menu > Function > Digital Rec Menu > Multi Pad Creator																	
Record																	
Repeat	O	O	X	X	X	X	X	–	X	–	X	X	O	X	–	–	
Chord Match	O	O	X	X	X	X	X	–	X	–	X	X	O	X	–	–	
Edit > Filter																	
Main Filter	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Control Change Filter	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Recording data																	
Multi Pad Data	O	O	X	X	X	X	X	–	X	–	X	X	O	X	–	–	
Voice																	
LeftHold	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Style	–	
VoiceEffect																	
Touch Response On Off	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Voice	–	
Harmony/Echo	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Harmony	–	
Poly/Mono (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Poly/Mono (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Poly/Mono (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Panel Sustain	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Voice	–	
DSP (Right1)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
DSP (Right2)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
DSP (Left)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Style	–	
Variation (Right1)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
Variation (Right2)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
Variation (Left)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Style	–	
Voice Open/Save > Voice Set																	
Voice (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Voice (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Voice (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
COMMON																	
Volume for Balance (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Volume for Balance (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Volume for Balance (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Touch Sense Depth (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Touch Sense Depth (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Touch Sense Depth (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
COMMON																	
Touch Sense Offset (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Touch Sense Offset (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Touch Sense Offset (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Octave for Right1	O	O	X	X	X	X	O	Voice	X	–	X	O	X	O	Voice	–	
Octave for Right2	O	O	X	X	X	X	O	Voice	X	–	X	O	X	O	Voice	–	
Octave for Left	O	O	X	X	X	X	O	Voice	X	–	X	O	X	O	Style	–	
CONTROLLER																	
MW Low Pass Filter Control (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW Low Pass Filter Control (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW Low Pass Filter Control (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
MW Amplitude Control (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW Amplitude Control (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW Amplitude Control (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
MW LFO PMOD Depth (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW LFO PMOD Depth (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW LFO PMOD Depth (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
MW LFO FMOD Depth (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW LFO FMOD Depth (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW LFO FMOD Depth (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
MW LFO AMOD Depth (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW LFO AMOD Depth (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
MW LFO AMOD Depth (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
SOUND																	
EG Attack (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
EG Attack (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
EG Attack (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
EG Decay (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
EG Decay (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
EG Decay (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
EG Release (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
EG Release (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
EG Release (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Vibrato Depth (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Vibrato Depth (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Vibrato Depth (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Vibrato Speed (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Vibrato Speed (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Vibrato Speed (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Vibrato Delay (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Vibrato Delay (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Vibrato Delay (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
EFFECT/EQ																	
Panel Sustain (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Panel Sustain (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Panel Sustain (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
DSP Type (Right1)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
DSP Type (Right2)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
DSP Type (Left)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Style	–	
DSP Variation Value (Right1)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
DSP Variation Value (Right2)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
DSP Variation Value (Left)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Style	–	
EQ Low Freq (Right1)	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Voice	–	
EQ Low Freq (Right2)	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Voice	–	
EQ Low Freq (Left)	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Style	–	
EQ High Freq (Right1)	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Voice	–	
EQ High Freq (Right2)	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Voice	–	
EQ High Freq (Left)	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Style	–	

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
OrganFlute > Footage																	
Organ Flutes Footage (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Footage (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Footage (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	
Organ Flutes Type (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
OrganFlute > Footage																	
Organ Flutes Type (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ FlutesType (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	
Organ Vib On/Off (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Vib On/Off (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Vib On/Off (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	
Organ Vib Depth (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Vib Depth (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Vib Depth (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Organ Vib Speed (Right1)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Vib Speed (Right2)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Vib Speed (Left)	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
OrganFlute > Volume/Attack																	
Organ Flutes Attack Footage (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Attack Footage (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Attack Footage (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	
Organ Flutes Attack Mode (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Attack Mode (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Attack Mode (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	
Organ Flutes Attack length (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Attack length (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Attack length (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	
Organ Flutes Response (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Response (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Response (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	
Organ Flutes Volume (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Volume (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Organ Flutes Volume (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	
Mic																	
VocalHarmonyOnOff	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
TalkOnOff	–	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Mic EffectOnOff	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
VHType	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
VHParameters	–	O	X	X	O	X	X	–	O	VH/MIC	X	X	X	X	–	Mic.Setting	
Main > Mic Setting																	
User Memory	–	O	O	X	O	X	X	–	X	–	X	X	X	X	–	–	
Mic Setting > Vocal																	
Mic On/Off	–	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
EQ Low Freq.	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ Low Gain	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ Mid Freq.	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ Mid Gain	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ High Freq.	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ High Gain	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Noise Gate SW	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Noise Gate TH	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Compressow SW	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Compressor TH	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Compressor RAT	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Compressor OUT	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Pitch Detect Vocal Type	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Pitch Detect BackGround Noise Cut	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Pitch Detect Speed	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
Mic Setting. > Talk																	
Talk Setting Volume	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Talk Setting Pan	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Talk Setting ReverbDepth	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Talk Setting ChorusDepth	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Talk Setting TotalVolumeAttenuator	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ Low Freq.	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ Low Gain	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ Mid Freq.	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ Mid Gain	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ High Freq.	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
EQ High Gain	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Noise Gate SW	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Noise Gate TH	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Compressow SW	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Compressor TH	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Compressor RAT	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Compressor OUT	–	O	X	X	O	X	X	–	X	–	X	X	X	X	–	–	
Main > VocalHarmony Setting																	
VocalHarmony > SETUP																	
VH Song Channel Mute	–	O	X	X	X	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
VH Song Channel	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
VH Keyboard	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
VH Chord Detect	–	O	X	X	X	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
VocalHarmony > Overview																	
Harmony Mode	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Chordal Type	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Balance	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Vocal Effect Type	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Vocal Effect Depth (LEAD)	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Vocal Effect Depth (Harmony)	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Reverb Depth	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Chorus Depth	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
VocalHarmony > Overview > Harmony Assign Popup																	
Transepose Mode	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Session Table	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Key Root	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Key Type	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
VocalHarmony > Part																	
Pitch Correcnt	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Lead Transpose	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Lead Detune	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Lead Formant Shift	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Lead Volume	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Lead Pan	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Lead Octave	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony1 Transpose	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony1 Detune	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony1 Formant Shift	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony1 Volume	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony1 Pan	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony1 Degree	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony2 Transpose	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony2 Detune	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony2 Formant Shift	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony2 Volume	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony2 Pan	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony2 Degree	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony3 Transpose	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony3 Detune	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony3 Formant Shift	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony3 Volume	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony3 Pan	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony3 Degree	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
VocalHarmony > Detail																	
Lead Pitch Detect Speed	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony Pitch Detect Speed	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Lead Vibrato Depth	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony Vibrato Depth	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Vibrato Speed	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Vibrato Delay	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony Effect	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
Harmony Stbility	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	
VocalEffect Parameter																	
Effect Parameter (#1 – #16)	–	O	X	X	O	X	X	–	X	–	X	X	X	O	VH/MIC	Mic.Setting	

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
Main > Mixing Console > Voice																	
Volume																	
Offset Volume Song	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Song	–	
Offset Volume Style	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Style	–	
Volume M.Pad	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	MultiPad	–	
Volume Mic	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
Volume Left	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Style	–	
Volume Right1	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Volume Right2	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Part Volume Song	O	O	X	X	X	X	X	–	O	Volume	X	X	X	X	–	–	
Part Volume Style	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
Keyboard Volume	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Voice	–	
X-Fade (The volume balance between the MIDI Song and Audio Song)	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
PanPot																	
Offset PanPot Song	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Offset PanPot Style	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Style	–	
PanPot M.Pad	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Multi Pad	–	
PanPot Mic	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
PanPot Left	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Style	–	
PanPot Right1	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
PanPot Right2	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Part PanPot Song	O	O	X	X	X	X	X	–	O	Pan	X	X	X	X	–	–	
Part PanPot Style	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
Voice																	
Voice (Right1)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Voice (Right2)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Voice (Left)	O	O	X	X	X	X	O	–	O	Keyboard Voice	X	O	X	O	Style	–	
Voice (Style Part)	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
Voice (Song Part)	O	O	X	X	X	X	X	–	O	Voice	X	X	X	X	–	–	
Main > Mixing Console > Filter																	
Brightness																	
Brightness Song Part	O	O	X	X	X	X	X	–	O	Filter	X	X	X	X	–	–	
Brightness Style Part	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
Brightness Right1	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Brightness Right2	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Brightness Left	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Harmonic Content																	
Harmonic Content Song Part	O	O	X	X	X	X	X	–	O	Filter	X	X	X	X	–	–	
Harmonic Content Style Part	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
Harmonic Content Right1	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Harmonic Content Right2	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Harmonic Content Left	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Main > Mixing Console > Tune																	
Octave																	
Octave Right1	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Octave Right2	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Octave Left	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Tune																	
Tune Right1	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Tune Right2	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Tune Left	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Style	–	
Portamento Time																	
Portamento Time Right1	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Portamento Time Right2	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Voice	–	
Portamento Time Left	O	O	X	X	X	X	O	Voice	O	Keyboard Voice	X	O	X	O	Style	–	
Pitch Bend Range																	
Pitch Bend Range Right1	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Pitch Bend Range Right2	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Voice	–	
Pitch Bend Range Left	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Style	–	
Transpose																	
Master Transpose	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Transpose	–	
Song Transpose	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Transpose	–	
Keyboard Transpose	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Transpose	–	
Main > Mixing Console > EQ																	
MasterEQ Type	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	Master EQ	
MasterEQ Parameter	O	O	X	X	O	X	X	–	X	–	X	X	X	X	–	Master EQ	
EQ Low Gain																	
EQ Low Gain Style Part	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
EQ Low Gain Song Part	O	O	X	X	X	X	X	–	O	EQ	X	X	X	X	–	–	
EQ Low Gain Multi Pad	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Multi Pad	–	
EQ Low Gain Right1	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Voice	–	
EQ Low Gain Right2	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Voice	–	
EQ Low Gain Left	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Style	–	
EQ Low Gain																	
EQ Low Gain Style (Offset)	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Style	–	
EQ Low Gain Song (Offset)	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
EQ High Gain																	
EQ High Gain Style Part	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
EQ High Gain Song Part	O	O	X	X	X	X	X	–	O	EQ	X	X	X	X	–	–	
EQ High Gain Multi Pad	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Multi Pad	–	
EQ High Gain Right1	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Voice	–	
EQ High Gain Right2	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Voice	–	
EQ High Gain Left	O	O	X	X	X	X	O	EQ	O	Keyboard Voice	X	O	X	O	Style	–	
EQ High Gain Style (Offset)	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Style	–	
EQ High Gain Song (Offset)	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Main > Mixing Console > Effect																	
Reverb Type																	
Reverb Type	O	O	X	X	X	X	X	–	O	Effect	O	X	X	O	Style/Song	Reverb Type	
Reverb Return Level	O	O	X	X	X	X	X	–	O	Effect	O	X	X	O	Style/Song	Reverb Return Level	
Reverb Depth																	
Reverb Depth Style Part	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
Reverb Depth Song Part	O	O	X	X	X	X	X	–	O	Effect	X	X	X	X	–	–	
Reverb Depth Multi Pad	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Multi Pad	–	
Reverb Depth Mic	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
Reverb Depth Right1	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
Reverb Depth Right2	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
Reverb Depth Left	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Style	–	
Reverb Depth Style (Offset)	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Style	–	
Reverb Depth Song (Offset)	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Chorus Type																	
Chorus Type	O	O	X	X	X	X	X	–	O	Effect	O	X	X	O	Style/Song	–	
Chorus Return Level	O	O	X	X	X	X	X	–	O	Effect	O	X	X	O	Style/Song	Chorus Return Level	
Chorus Depth																	
Chorus Depth Style Part	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
Chorus Depth Song Part	O	O	X	X	X	X	X	–	O	Effect	X	X	X	X	–	–	
Chorus Depth Multi Pad	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Multi Pad	–	
Chorus Depth Mic	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
Chorus Depth Right1	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
Chorus Depth Right2	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
Chorus Depth Left	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Style	–	
Chorus Depth Style (Offset)	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Style	–	
Chorus Depth Song (Offset)	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
DSP Type																	
DSP1 (Variation) Type	O	O	X	X	X	X	X	–	O	Effect	O	X	X	O	Style/Song	–	
DSP1 (Variation) Return Level	O	O	X	X	X	X	X	–	O	Effect	O	X	X	O	Style/Song	DSP1 Return Level	
DSP2Type	O	O	X	X	X	X	X	–	O	Effect	X	X	X	O	Voice/Style/ Song	–	
DSP3Type	O	O	X	X	X	X	X	–	O	Effect	X	X	X	O	Voice/Style/ Song	–	
DSP4Type	–	O	X	X	X	X	X	–	O	Effect/Mic	X	X	X	O	Voice/Style/ Song/ VH/MIC	Mic.Setting	
DSP4Type	O	–	X	X	X	X	X	–	O	Effect	X	X	X	O	Voice/Style/ Song	–	
DSP Depth																	
DSP Depth Style Part	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
DSP Depth Song Part	O	O	X	X	X	X	X	–	O	Effect	X	X	X	X	–	–	
DSP Depth Right1	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
DSP Depth Right2	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
DSP Depth Left	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Style	–	
DSP Depth Mic	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	–	
InsertionType																	
Ins.Type (Right1)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
Ins.Type (Right2)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Voice	–	
Ins.Type (Left)	O	O	X	X	X	X	O	Effect	O	Keyboard Voice	X	O	X	O	Style	–	
Ins.Type (Song)	O	O	X	X	X	X	X	–	O	Effect	X	X	X	X	–	–	
Ins.Type (Mic)	–	O	X	X	X	X	X	–	O	VH/MIC	X	X	X	O	VH/MIC	Mic.Setting	
Effect Parameter (Reverb/Chorus/DSP1-4)	O	–	X	X	O	X	X	–	O	Effect	X	X	X	X	–	–	
Effect Parameter (Reverb/Chorus/DSP1-3)	–	O	X	X	O	X	X	–	O	Effect	X	X	X	X	–	–	
Effect Parameter (DSP4)	–	O	X	X	O	X	X	–	O	VH/MIC	X	X	X	X	–	Mic.Setting	
Main > Channel > Channel OnOffPopup																	
ChannelOnOff (Song)	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Song	–	
ChannelOnOff (Style)	O	O	X	X	X	X	X	–	X	–	O	X	X	O	Style	–	
MIDI																	
MIDI Template																	
Template No.	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Preset Template Name	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
Menu > Function > MIDI																	
System																	
Local Control	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Clock	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Transmit Clock	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Receive Transpose	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Receive Start/Stop	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
SysEx Transmit	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
SysEx Receive	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Chord SysEx Transmit	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Chord SysEx Receive	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Transmit																	
Part Select	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Ch (for each part)	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Filter (for each part)	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Receive																	
CH Select	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Part Select	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Filter (for each channel)	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Bass (On Bass Note)																	
Bass (On Bass Note)	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Chord Detect																	
Chord Detect	O	O	X	O	X	X	X	–	X	–	X	X	X	X	–	–	
Menu > Function > Master Tune/Scale Tune																	
Master Tune																	
MasterTune	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Scale Tune																	
Scale	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Scale	–	
Tune	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Scale	–	
BaseNote	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Scale	–	
Part Select (Right1/Right2, Left, Style, Multi Pad)	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Scale	–	
Menu > Function > Controller																	
Foot Pedal																	
PedalFunction	O	O	X	X	X	X	X	X	X	X	X	X	X	O	Pedal	–	
PedalSettings	O	O	X	X	X	X	X	X	X	X	X	X	X	O	Pedal	–	
PedalPolarity	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Keyboard/Panel																	
Touch Response	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Touch ResponseOffLevel	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Voice	–	
Touch Response Part OnOff	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Voice	–	
ModulationWheelPartOnOff	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Voice	–	
TransposeAssign	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Menu > Function > Regist.Sequence/Freeze/VoiceSet																	
Regist Sequence																	
RegistSequenceData	O	O	X	X	X	X	X	–	X	–	X	X	X	O	–	–	Memorized as a single Registration Bank file.
RegistSequenceEnable	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Regist (+) Pedal	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Regist (-) Pedal	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
SequenceEnd	O	O	X	X	X	X	X	–	X	–	X	X	X	O	–	–	Memorized as a single Registration Bank file.
Freeze Group																	
FreezeGroupSetting	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
VoiceSet																	
VoiceSet Group Right1 OnOff	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
VoiceSet Group Right2 OnOff	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
VoiceSet Group Left OnOff	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Menu > Function > Harmony/Echo																	
Type	O	O	X	X	X	X	O	Harmony	O	Keyboard Voice	X	O	X	O	Harmony	–	
Volume	O	O	X	X	X	X	O	Harmony	O	Keyboard Voice	X	O	X	O	Harmony	–	
Speed	O	O	X	X	X	X	O	Harmony	O	Keyboard Voice	X	O	X	O	Harmony	–	
Assign	O	O	X	X	X	X	O	Harmony	O	Keyboard Voice	X	O	X	O	Harmony	–	
ChordNoteOnly	O	O	X	X	X	X	O	Harmony	O	Keyboard Voice	X	O	X	O	Harmony	–	
TouchLimit	O	O	X	X	X	X	O	Harmony	O	Keyboard Voice	X	O	X	O	Harmony	–	
Menu > Function > Utility																	
Configration1																	
FadeInTime	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
FadeOutTime	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
FadeOutHoldTime	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
MetronomeVolume	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
MetronomeSound	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
TimeSignature	O	O	X	X	X	X	X	–	O	–	O	X	X	X	–	–	
ParameterLock	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	

Parameter Chart / Parametertabelle / Tableau des paramètres / Gráfico de parámetros

Parameter	PSR-S750	PSR-S950	System				Voice Set	Voice Set Group	Song		Style		Multi Pad	Registration		Param Lock Group	Note
			Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS		Regist	Freeze Group		
Configration1																	
TapCountPercussion	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Style	–	
TapCountVelocity	O	O	X	X	X	X	X	–	O	Keyboard Voice	X	O	X	O	Style	–	
Auto Power Off	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Configration2																	
DisplayVoiceNumber	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
VoiceCategory Button Options	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Display Style Tempo	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Popup Display Time	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
ScreenOut																	
Monitor Type	–	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	Cannot be reset with Factory Reset.
ScreenContent	–	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	Cannot be reset with Factory Reset.
Media																	
SongAutoOpen	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Format	O	O	–	–	–	–	–	–	–	–	–	–	–	–	–	–	
Property	O	O	–	–	–	–	–	–	–	–	–	–	–	–	–	–	
Owner																	
Language	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	Cannot be reset with Factory Reset.
OwnerName	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	Cannot be reset with Factory Reset.
MainPicture	–	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	Cannot be reset with Factory Reset.
SystemReset																	
FactoryResetSetting	O	–	X	X	X	X	X	–	X	–	X	X	X	X	–	–	Language and Owner Name Data are not reset.
FactoryResetSetting	–	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	Language, Owner Name, Main Picture BackGround, Lyrics Picture BackGround and Video Out related parameters are not reset.
Registration																	
FreezeOnOff (Panel SW)	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
RegistMemory Contents	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
RegistNumber	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
RegistContentsName	O	O	X	X	X	X	X	–	X	–	X	X	X	O	–	–	
OTS																	
OTSNumber	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Master Volume Fade In/Out																	
Fade in/out	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Metronome																	
StartStop	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
Transpose																	
Transpose	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Transpose	–	
Upper Octave																	
UpperOctave	O	O	X	X	X	X	X	–	X	–	X	X	X	O	Voice	–	
Direct Access																	
Direct Access	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	
USB Audio																	
Audio Volume	O	O	O	X	X	X	X	–	X	–	X	X	X	O	AUDIO	–	
Audio Player Repeat Mode	O	O	O	X	X	X	X	–	X	–	X	X	X	X	–	–	
Audio Time Stretch	–	O	X	X	X	X	X	–	X	–	X	X	X	O	AUDIO	–	
Audio Pitch Shift	–	O	X	X	X	X	X	–	X	–	X	X	X	O	AUDIO	–	
Audio Vocal Cancel	–	O	X	X	X	X	X	–	X	–	X	X	X	O	AUDIO	–	
A-B Repeat	O	O	X	X	X	X	X	–	X	–	X	X	X	X	–	–	

Many MIDI messages listed in the MIDI Data Format are expressed in decimal numbers, binary numbers and hexadecimal numbers. Hexadecimal numbers may include the letter “H” as a suffix. Also, “n” can freely be defined as any whole number.
To enter data/values, refer to the table below.

Decimal	Hexadecimal	Binary
0	00	0000 0000
1	01	0000 0001
2	02	0000 0010
3	03	0000 0011
4	04	0000 0100
5	05	0000 0101
6	06	0000 0110
7	07	0000 0111
8	08	0000 1000
9	09	0000 1001
10	0A	0000 1010
11	0B	0000 1011
12	0C	0000 1100
13	0D	0000 1101
14	0E	0000 1110
15	0F	0000 1111
16	10	0001 0000
17	11	0001 0001
18	12	0001 0010
19	13	0001 0011
20	14	0001 0100
21	15	0001 0101
22	16	0001 0110
23	17	0001 0111
24	18	0001 1000
25	19	0001 1001
26	1A	0001 1010
27	1B	0001 1011
28	1C	0001 1100
29	1D	0001 1101
30	1E	0001 1110
31	1F	0001 1111

Decimal	Hexadecimal	Binary
32	20	0010 0000
33	21	0010 0001
34	22	0010 0010
35	23	0010 0011
36	24	0010 0100
37	25	0010 0101
38	26	0010 0110
39	27	0010 0111
40	28	0010 1000
41	29	0010 1001
42	2A	0010 1010
43	2B	0010 1011
44	2C	0010 1100
45	2D	0010 1101
46	2E	0010 1110
47	2F	0010 1111
48	30	0011 0000
49	31	0011 0001
50	32	0011 0010
51	33	0011 0011
52	34	0011 0100
53	35	0011 0101
54	36	0011 0110
55	37	0011 0111
56	38	0011 1000
57	39	0011 1001
58	3A	0011 1010
59	3B	0011 1011
60	3C	0011 1100
61	3D	0011 1101
62	3E	0011 1110
63	3F	0011 1111

Decimal	Hexadecimal	Binary
64	40	0100 0000
65	41	0100 0001
66	42	0100 0010
67	43	0100 0011
68	44	0100 0100
69	45	0100 0101
70	46	0100 0110
71	47	0100 0111
72	48	0100 1000
73	49	0100 1001
74	4A	0100 1010
75	4B	0100 1011
76	4C	0100 1100
77	4D	0100 1101
78	4E	0100 1110
79	4F	0100 1111
80	50	0101 0000
81	51	0101 0001
82	52	0101 0010
83	53	0101 0011
84	54	0101 0100
85	55	0101 0101
86	56	0101 0110
87	57	0101 0111
88	58	0101 1000
89	59	0101 1001
90	5A	0101 1010
91	5B	0101 1011
92	5C	0101 1100
93	5D	0101 1101
94	5E	0101 1110
95	5F	0101 1111

Decimal	Hexadecimal	Binary
96	60	0110 0000
97	61	0110 0001
98	62	0110 0010
99	63	0110 0011
100	64	0110 0100
101	65	0110 0101
102	66	0110 0110
103	67	0110 0111
104	68	0110 1000
105	69	0110 1001
106	6A	0110 1010
107	6B	0110 1011
108	6C	0110 1100
109	6D	0110 1101
110	6E	0110 1110
111	6F	0110 1111
112	70	0111 0000
113	71	0111 0001
114	72	0111 0010
115	73	0111 0011
116	74	0111 0100
117	75	0111 0101
118	76	0111 0110
119	77	0111 0111
120	78	0111 1000
121	79	0111 1001
122	7A	0111 1010
123	7B	0111 1011
124	7C	0111 1100
125	7D	0111 1101
126	7E	0111 1110
127	7F	0111 1111

- Except the table above, for example 144-159 (decimal)/9nH/1001 0000-1001 1111 (binary) denotes the Note On Message for each channel (1-16). 176-191/BnH/1011 0000-1011 1111 denotes the Control Change Message for each channel (1-16). 192-207/CnH/ 1100 0000-1100 1111 denotes the Program Change Message for each channel (1-16). 240/F0H/1111 0000 denotes the start of a System Exclusive Message. 247/F7H/1111 0111 denotes the end of a System Exclusive Message.
- aaH (hexadecimal)/0aaaaaaa (binary) denotes the data address. The address contains High, Mid, and Low.
- bbH/0bbbbbbb denotes the byte count.
- ccH/0ccccccc denotes the check sum.
- ddH/0ddddddd denotes the data/value.

MIDI CHANNEL MESSAGE (1)

[MIDI] [Song Creator]

MIDI Events	Status byte	1st Data byte			2nd Data byte			Voice		MIDI Reception					MIDI Transmission					PLAY		REC
	Status	Data	(HEX)	Parameter	Data	(HEX)	Parameter	Regular/ Drum/ Organ Voice	Mic/Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
Key Off [GM1] [GM2]	8nH (n: Channel Number)	kk		Key no. (0-127)	vv		Velocity (0-127)	O	O (Harmony Channel/ Melody Channel)	O	O	O	O	O	X	X	O	O	X	O	X	X
Key On [GM1] [GM2]	9nH (n: Channel Number)	kk		Key no. (0-127)	vv		Key On: vv=1-127 Key Off: vv=0	O	O (Harmony Channel/ Melody Channel)	O	O	O	O	O	●	O	O	O	●	O	X	O
Control Change	BnH	0	(00H)	Bank Select MSB [GM2]	0 8 8 64 120 121 126 127	(00H) (08H) (08H) (40H) (78H) (79H) (7EH) (7FH)	Normal Mega Voice SA Voice SFX Voice GM2 Rhythm GM2 Normal SFX Kit Drum Kit	O	X	O	O	O (Right1)	O	O	●	O	●	●	X	O	O	O
		1	(01H)	Modulation [GM1] [GM2]	0-127	(00H...7FH)	Data	O	X	O	O	O (All Keyboard parts)	O	O	●	O	O	O	●	O	O	O
		5	(05H)	Portamento Time [GM2]	0-127	(00H...7FH)	Data	O (Except Organ Flutes)	X	O	O	O (All Keyboard parts)	X	O	●	O	X	O	X	O	O	O
		6	(06H)	Data Entry MSB [GM2]	0-127	(00H...7FH)	Data	O	O (Harmony Channel/ Melody Channel)	O	O	O (All Keyboard parts)	O	O	●	O	O	O	X	O	X	O
		7	(07H)	Main Volume [GM1] [GM2]	0-127	(00H...7FH)	Data	O	O (A/D Part Receive Channel)	O	O	O (All Keyboard parts)	O	O	●	O	●	●	X	O	O	O
		10	(0AH)	Panpot [GM1] [GM2]	0-127	(00H...7FH)	L64...C...R63	O	O (A/D Part Receive Channel)	O	O	O (All Keyboard parts)	O	O	●	O	●	●	X	O	O	O
		11	(0BH)	Expression [GM1] [GM2]	0-127	(00H...7FH)	Data	O	X	O	O	O (All Keyboard parts)	O	O	●	●	●	●	●	O	O	O
		16	(10H)	General Purpose Controller	0-127	(00H...7FH)	Data	O	X	O	O	O (All Keyboard parts)	X	O	X	O	X	O	X	O	O	X
		32	(20H)	Bank Select LSB [GM2]	0-127	(00H...7FH)	Data	O	X	O	O	O (Right1)	O	O	●	O	●	●	X	O	O	O
		38	(26H)	Data Entry LSB [GM2]	0-127	(00H...7FH)	Data	O	X	O	O	O (All Keyboard parts)	X	O	●	O	X	O	X	O	X	O
		64	(40H)	Sustain (Damper) [GM1] [GM2]	0-127	(00H...7FH)	Data	O	O (Harmony Channel/ Melody Channel)	O	O	O (All Keyboard parts)	X	O	●	O	X	O	●	O	O	O
		65	(41H)	Portamento [GM2]	0-127	(00H...7FH)	0...63, 64...127 (OFF, ON)	O (Except Organ Flutes)	X	O	O	O (All Keyboard parts)	X	O	●	O	X	O	●	O	O	O
		66	(42H)	Sostenuto [GM2]	0-127	(00H...7FH)	0...63, 64...127 (OFF, ON)	O	X	O	O	O (All Keyboard parts)	X	O	●	O	X	O	●	O	O	O
		67	(43H)	Soft Pedal [GM2]	0-127	(00H...7FH)	0...63, 64...127 (OFF, ON)	O	X	O	O	O (All Keyboard parts)	X	O	●	O	X	O	●	O	O	O
		71	(47H)	Harmonic Content [GM2]	0-127	(00H...7FH)	-64...0...+63	O	X	O	O	O (All Keyboard parts)	O	O	●	O	●	●	X	O	O	O
		72	(48H)	Release Time [GM2]	0-127	(00H...7FH)	-64...0...+63	O	X	O	O	O (All Keyboard parts)	O	O	●	O	O	O	X	O	O	O
		73	(49H)	Attack Time [GM2]	0-127	(00H...7FH)	-64...0...+63	O	X	O	O	O (All Keyboard parts)	O	O	●	O	O	O	X	O	O	O
		74	(4AH)	Brightness [GM2]	0-127	(00H...7FH)	-64...0...+63	O	X	O	O	O (All Keyboard parts)	O	O	●	O	●	●	X	O	O	O
		75	(4BH)	Decay Time [GM2]	0-127	(00H...7FH)	-64...0...+63	O	X	O	O	O (All Keyboard parts)	O	O	X	X	X	O	X	O	O	X
		76	(4CH)	Vibrato Rate [GM2]	0-127	(00H...7FH)	-64...0...+63	O	X	O	O	O (All Keyboard parts)	O	O	X	X	X	O	X	O	O	X
		77	(4DH)	Vibrato Depth [GM2]	0-127	(00H...7FH)	-64...0...+63	O	X	O	O	O (All Keyboard parts)	O	O	X	X	X	O	X	O	O	X
		78	(4EH)	Vibrato Delay [GM2]	c	(00H...7FH)	-64...0...+63	O	X	O	O	O (All Keyboard parts)	O	O	X	X	X	O	X	O	O	X
		80	(50H)	General Purpose Controller (Articuration 1)	0-127	(00H...7FH)	0: OFF 127: ON	O (SA Voice only)	X	O	X	X	X	X	●	X	X	O	X	O	O	O
		84	(54H)	Portamento Control	0-127	(00H...7FH)	Key no. (0-127)	O	X	O	O	X	O	O	O	O	●	O	X	O	X	O
		91	(5BH)	Effect1 Depth (Reverb Send Level) [GM2]	0-127	(00H...7FH)	Data	O	O (A/D Part Receive Channel)	O	O	O (All Keyboard parts)	O	O	●	●	●	●	X	O	O	O
		93	(5DH)	Effect3 Depth (Chorus Send Level) [GM2]	0-127	(00H...7FH)	Data	O	O (A/D Part Receive Channel)	O	O	O (All Keyboard parts)	O	O	●	●	●	●	X	O	O	O

●: Transmitted via panel operations and keyboard/controller performances.

[MIDI] [Song Creator]

MIDI Events	Status byte	1st Data byte			2nd Data byte			Voice		MIDI Reception					MIDI Transmission					PLAY		REC
	Status	Data	(HEX)	Parameter	Data	(HEX)	Parameter	Regular/ Drum/ Organ Voice	Mic/Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
		94	(5EH)	Effect4 Depth (Variation Send Level)	0-127	(00H...7FH)	Data	O	X	O	O	O (All Keyboard parts)	O	O	O	O	●	●	X	O	O	X Multi Part Record-ing
		96	(60H)	RPN Increment	-	-	The data byte is ignored.	O	O (Harmony Channel/ Melody Channel)	O	O	X	O	O	X	O	X	O	X	O	X	X
		97	(61H)	RPN Decrement	-	-	The data byte is ignored.	O	O (Harmony Channel/ Melody Channel)	O	O	X	O	O	X	O	X	O	X	O	X	X
		98	(62H)	NRPN LSB	0-127	(00H...7FH)	Data	O	O (Harmony Channel/ Melody Channel)	O	O	X	O	O	●	O	O	O	X	O	O	O
		99	(63H)	NRPN MSB	0-127	(00H...7FH)	Data	O	O (Harmony Channel/ Melody Channel)	O	O	X	O	O	●	O	O	O	X	O	O	O
		100	(64H)	RPN LSB [GM2]	0-127	(00H...7FH)	Data	O	O (Harmony Channel/ Melody Channel)	O	O	O (All Keyboard parts)	O	O	●	O	O	O	X	O	O	O
		101	(65H)	RPN MSB [GM2]	0-127	(00H...7FH)	Data	O	O (Harmony Channel/ Melody Channel)	O	O	O (All Keyboard parts)	O	O	●	O	O	O	X	O	O	O
Mode Message	BnH (n: Channel Number)	120	(78H)	All Sound Off [GM2]	0	(00H)	Data	O	X	O	O	O (All Keyboard parts) (Same operation as when All Note Off)	O	O	X	O	X	O	X	O	X	X
		121	(79H)	Reset All Controllers [GM1] [GM2]	0	(00H)	Data	O	X	O	X	X	X	X	X	O	X	O	X	O	X	X
		122	(7AH)	Local Control	0 127	(00H) (7FH)	OFF ON	-	-	O					X	X	X	X	X	X	X	X
		123	(7BH)	All Note Off [GM1] [GM2]	0	(00H)	Data	O	O (Harmony Channel/ Melody Channel)	O	O	O (All Keyboard parts)	O	O	X	O	X	O	X	O	X	X
		124	(7CH)	Omni Off [GM2]	0	(00H)	Data	O	X	O (*1)	X	X	X	X	X	O	X	O	X	O	X	X
		125	(7DH)	Omni On [GM2]	0	(00H)	Data	O	X	O (*2)	X	X	X	X	X	O	X	O	X	O	X	X
		126	(7EH)	Mono [GM2]	0-16	(00H...10H)	Data	O	X	O	X	X	X	X	X	O	X	O	X	O	X	X
		127	(7FH)	Poly [GM2]	0	(00H)	Data	O	X	O	X	X	X	X	X	O	X	O	X	O	X	X
Program Change [GM1] [GM2]	CnH (n: Channel Number)	pp	(00H... 7FH)	Voice Number (0-127)	-	-	-	O	X	O	O	O (Right1)	O	O	●	O	●	●	X	O	O	O
Channel After Touch [GM1] [GM2]	DnH (n: Channel Number)	vv	(00H... 7FH)	Data	-	-	-	O	X	O	O	O (All Keyboard parts)	X	O	X	O	X	O	X	O	X	O
Polyphonic After Touch	AnH (n: Channel Number)	kk	(00H... 7FH)	Key no. (0-127)	vv	(00H...7FH)	Data	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
Pitch Bend Change [GM1] [GM2]	EnH (n: Channel Number)	cc	(00H... 7FH)	LSB	dd	(00H...7FH)	MSB	O	O (Harmony Channel/ Melody Channel)	O	O	O (All Keyboard parts)	O	O	●	O	O	O	●	O	O	O
Realtime Message	F8H MIDI Clock	-		-	-		-	-	-	O (Received when the Clock is set to MIDI, USB1, or USB2.)					O (Transmitted when the Clock is set to Internal and the Transmit Clock is set to on.)					-	-	-
	FAH Start	-		-	-		-	-	-	O (Received when the Clock is set to MIDI, USB1, or USB2.)					O (Transmitted when the Transmit Clock is set to on.)					-	-	-
	FBH Continue	-		-	-		-	-	-	X					X					-	-	-
	FCH Stop	-		-	-		-	-	-	O (Received when the Clock is set to MIDI, USB1, or USB2.)					O (Transmitted when the Transmit Clock is set to on.)					-	-	-
	FEH Active Sense [GM2]	-		-	-		-	-	-	O					O					-	-	-
	FFH System Reset	-		-	-		-	-	-	X					X					-	-	-

●: Transmitted via panel operations and keyboard/controller performances.

About Mic/Vocal Harmony column:
(HarmonyChannel/Melody Channel): The relevant parameters are received by the song part designated by the Effect's Harmony Channel Parameter or Melody Channel Parameter.
(A/D Part Receive Channel): The relevant parameters are received by the song part designated by the XG's AD Part Receive Ch.

*1: Same operation as when receiving All Note Off.
*2: Same operation as when receiving All Note Off. OMNI ON is not enabled.

Mic./Vocal Harmony

PSR-S750	X
PSR-S950	O

SA (Super Articulation)

PSR-S750	O
PSR-S950	O

[GM1] ... GM Required Parameter
[GM2] ... GM Level 2 Required Parameter

MIDI CHANNEL MESSAGE (2)

NRPN (Non Registered Parameter Number)

[MIDI] [Song Creator]

NRPN		Data Entry		Parameter	Data Range	Voice		MIDI Reception					MIDI Transmission					PLAY		REC
MSB	LSB	MSB	LSB			Regular/ Drum/ Organ Voice	Mic/Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
01H	08H	mmH	--	Vibrato Rate	mm: 00H-40H-7FH (-64...0...+63)	O	O (Harmony Channel/ Melody Channel)	O	O	X	O	O	●	O	O	O	X	O	O	O
01H	09H	mmH	--	Vibrato Depth	mm: 00H-40H-7FH (-64...0...+63)	O	O (Harmony Channel/ Melody Channel)	O	O	X	O	O	●	O	O	O	X	O	O	O
01H	0AH	mmH	--	Vibrato Delay	mm: 00H-40H-7FH (-64...0...+63)	O	O (Harmony Channel/ Melody Channel)	O	O	X	O	O	●	O	O	O	X	O	O	O
01H	20H	mmH	--	Low Pass Filter Cutoff Frequency	mm: 00H-40H-7FH (-64...0...+63)	O	X	O	X	X	O	X	X	O	X	O	X	O	O	X
01H	21H	mmH	--	Low Pass Filter Resonance	mm: 00H-40H-7FH (-64...0...+63)	O	X	O	X	X	O	X	X	O	X	O	X	O	O	X
01H	30H	mmH	--	EQ Bass Gain	mm: 00H-40H-7FH (-64...0...+63)	O	X	O	X	X	O	X	X	X	X	O	X	O	O	X
01H	31H	mmH	--	EQ Treble Gain	mm: 00H-40H-7FH (-64...0...+63)	O	X	O	X	X	O	X	X	X	X	O	X	O	O	X
01H	34H	mmH	--	EQ Bass Frequency	mm: 04H-28H (32...2.0k[Hz])	O	X	O	X	X	X	X	X	X	X	O	X	O	O	X
01H	35H	mmH	--	EQ Treble Frequency	mm: 1CH-3AH (500...16.0k[Hz])	O	X	O	X	X	X	X	X	X	X	O	X	O	O	X
01H	63H	mmH	--	EG Attack Time	mm: 00H-40H-7FH (-64...0...+63)	O	X	O	X	X	O	X	X	O	X	O	X	O	O	X
01H	64H	mmH	--	EG Decay Time	mm: 00H-40H-7FH (-64...0...+63)	O	X	O	O	X	O	O	●	O	O	O	X	O	O	O
01H	66H	mmH	--	EG Release	mm: 00H-40H-7FH (-64...0...+63)	O	X	O	X	X	O	X	X	O	X	O	X	O	O	X
14H	rrH	mmH	--	Drum Low Pass Filter Cutoff Frequency	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
15H	rrH	mmH	--	Drum Low Pass Filter Resonance	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
16H	rrH	mmH	--	Drum EG Attack Rate	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
17H	rrH	mmH	--	Drum EG Decay Rate	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
18H	rrH	mmH	--	Drum Pitch Coarse	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
19H	rrH	mmH	--	Drum Pitch Fine	rr: drum instrument note number mm: 00H-40H-7FH (-64...0...+63)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
1AH	rrH	mmH	--	Drum Level	rr: drum instrument note number mm: 00H-7FH (0...127)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
1CH	rrH	mmH	--	Drum Pan	rr: drum instrument note number mm: 00H, 01H-40H-7FH (RND, L63...C...R63)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
1DH	rrH	mmH	--	Drum Reverb Send Level	rr: drum instrument note number mm: 00H-7FH (0...127)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
1EH	rrH	mmH	--	Drum Chorus Send Level	rr: drum instrument note number mm: 00H-7FH (0...127)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
1FH	rrH	mmH	--	Drum Variation Send Level	rr: drum instrument note number mm: 00H-7FH (0...127) (Variation Connection = SYSTEM) mm: 00H, 01H-7FH (OFF, ON) (Variation Connection = INSERTION)	O (Drum only)	X	O	X	X	X	X	X	X	O	O	X	O	X	X
30H	rrH	mmH	--	Drum EQ Bass Gain	rr: drum instrument note number mm: 00H-7FH (0...127)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
31H	rrH	mmH	--	Drum EQ Treble Gain	rr: drum instrument note number mm: 00H-7FH (0...127)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
34H	rrH	mmH	--	Drum EQ Bass Frequency	rr: drum instrument note number mm: 04H-28H (32...2.0k[Hz])	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
35H	rrH	mmH	--	Drum EQ Treble Frequency	rr: drum instrument note number mm: 1CH-3AH (500...16.0k[Hz])	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

●: Transmitted via panel operations and keyboard/controller performances.

NRPN MSB: 14H-1FH (for drums) message is accepted as long as the channel is set with a drum voice.
Data Entry LSB: Ignored.

RPN (Registered Parameter Number)

[MIDI] [Song Creator]

RPN		Data Entry		Parameter	Data Range	Voice		MIDI Reception					MIDI Transmission					PLAY		REC
MSB	LSB	MSB	LSB			Regular/Drum/ Organ Voice	Mic/Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/Left)
00H	00H	mmH	--	Pitch Bend Sensitivity [GM1] [GM2]	mm: 00H-18H (0...+24[semitones])	O	O (Harmony Channel/ Melody Channel)	O	O	O (All Keyboard parts)	O	O	●	O	O	O	X	O	O	O
00H	01H	mmH	llH	Fine Tune [GM1] [GM2]	mm ll: 00H 00H -100[cent] ... mm ll: 40H 00H 0[cent] ... mm ll: 7FH 7FH 100[cent]	O	X	O	O	O (All Keyboard parts)	O	O	●	O	O	O	X	O	O	O
00H	02H	mmH	--	Coarse Tune [GM1] [GM2]	mm: 28H-40H-58H (-24...0...+24[semitones])	O	X	O	O	O (All Keyboard parts)	O	O	X	O	O	O	X	O	O	X
00H	05H	mmH	llH	Modulation Sensitivity [GM2]	mm: Specified in semitone steps ll: Specified in 100/128 cent steps	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
7FH	7FH	--	--	Null [GM2]	-	O	O	O	O	O (All Keyboard parts)	O	O	X	O	O	O	X	O	X	X

●: Transmitted via panel operations and keyboard/controller performances.

About Mic/Vocal Harmony column:
The relevant parameters are received by the song part designated by the Effect's Harmony Channel Parameter or Melody Channel Parameter.

Mic./Vocal Harmony

PSR-S750	X
PSR-S950	O

[GM1] ... GM Required Parameter
[GM2] ... GM Level 2 Required Parameter

XG PARAMETER CHANGE TABLE

* Not received when Receive System Exclusive Message Parameters is set to off.
* Not transmitted when Transmit System Exclusive Message Parameters is set to off.

MIDI Parameter Change table (XG SYSTEM)

[MIDI] [Song Creator]

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	Voice		MIDI Reception					MIDI Transmission					PLAY		REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
00	00	00 01 02 03	4	00-0F 00-0F 00-0F 00-0F	MASTER TUNE	-102.4...0...+102.3[cent] 1st bit3-0 -> bit15-12 2nd bit3-0 -> bit11-8 3rd bit3-0 -> bit7-4 4th bit3-0 -> bit3-0	*Panel setting value	O	O	O					●					O	X	X
		04	1	00-7F	MASTER VOLUME	0...127	7F	O	X	O (Available for extra parts of a song)					O					O	O	X
		05	1	00-7F	MASTER ATTENUATOR	0...127	00	X	X	X					X					X	X	X
		06	1	28-58	TRANSPOSE	-24...0...+24[semitones]	40	O	O	O (Available for extra parts of a song)					O					O	O	X
		7D	1	N	DRUM SETUP RESET	N: Drum setup number	-	O (Drum only)	X	O (Available for extra parts of a song)					O					O	X	X
		7E	1	00	XG SYSTEM ON	00=XG system ON	-	O	X	O (Available for extra parts of a song)					O					O	X	O
		7F	1	00	ALL PARAMETER RESET	00=ON	-	O	X	O (Available for extra parts of a song)					O					O	X	X

TOTAL SIZE 07
●: Transmitted via panel operations

MIDI Parameter Change table (SYSTEM INFORMATION)

[MIDI] [Song Creator]

Address (H)			Size (H)	Data (H)	Parameter	Description	Voice		MIDI Reception					MIDI Transmission					PLAY		REC
							Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
01	00	00 ... 0D 0E 0F	E 20-7F 1 1	20-7F	Model Name 1 ... Model Name 14 NOT USED NOT USED	32...127 (ASCII CHARACTER) ... 32...127 (ASCII CHARACTER)	-	-	-					O (Available only when receiving requests via MIDI)					-	-	-

TOTAL SIZE 10
Transmitted in response to Dump Request. Not received.

MIDI Parameter Change table (EFFECT1)

[MIDI] [Song Creator]

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	Voice		MIDI Reception					MIDI Transmission					PLAY		REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	PFrom panel (Right1/ Right2/ Left)
02	01	00	2	00-7F 00-7F	REVERB TYPE MSB REVERB TYPE LSB	Refer to Effect Parameter List 〃	01 (=HALL1) 00	O	O	O					●					O	O	O
		02	1	00-7F	REVERB PARAMETER 1	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		03	1	00-7F	REVERB PARAMETER 2	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		04	1	00-7F	REVERB PARAMETER 3	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		05	1	00-7F	REVERB PARAMETER 4	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		06	1	00-7F	REVERB PARAMETER 5	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		07	1	00-7F	REVERB PARAMETER 6	Refer to Effect Parameter List	Depends on Reverb Type	O	O	O					●					O	O	O
		08	1	00-7F	REVERB PARAMETER 7	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		09	1	00-7F	REVERB PARAMETER 8	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		0A	1	00-7F	REVERB PARAMETER 9	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		0B	1	00-7F	REVERB PARAMETER 10	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		0C	1	00-7F	REVERB RETURN	-∞dB...0dB...+6dB (0...64...127)	40	O	O	O					●					O	O	O
		0D	1	01-7F	REVERB PAN	L63...C...R63	40	O	O	O					O					O	O	X

TOTAL SIZE 0E

02	01	10	1	00-7F	REVERB PARAMETER 11	Refer to Effect Parameter List	Depends on Reverb Type	O	O	O					●					O	O	O
		11	1	00-7F	REVERB PARAMETER 12	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		12	1	00-7F	REVERB PARAMETER 13	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		13	1	00-7F	REVERB PARAMETER 14	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		14	1	00-7F	REVERB PARAMETER 15	〃	Depends on Reverb Type	O	O	O					●					O	O	O
		15	1	00-7F	REVERB PARAMETER 16	〃	Depends on Reverb Type	O	O	O					●					O	O	O

OTAL SIZE 06
●: Transmitted via panel operations

[MIDI] [Song Creator]

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	Voice		MIDI Reception					MIDI Transmission					PLAY		REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
02	01	20	2	00-7F 00-7F	CHORUS TYPE MSB CHORUS TYPE LSB	Refer to Effect Parameter List	41 (=CHORUS1) 00	O	O			O					●			O	O	O
		22	1	00-7F	CHORUS PARAMETER 1	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		23	1	00-7F	CHORUS PARAMETER 2	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		24	1	00-7F	CHORUS PARAMETER 3	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		25	1	00-7F	CHORUS PARAMETER 4	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		26	1	00-7F	CHORUS PARAMETER 5	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		27	1	00-7F	CHORUS PARAMETER 6	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		28	1	00-7F	CHORUS PARAMETER 7	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		29	1	00-7F	CHORUS PARAMETER 8	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		2A	1	00-7F	CHORUS PARAMETER 9	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		2B	1	00-7F	CHORUS PARAMETER 10	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		2C	1	00-7F	CHORUS RETURN	-∞dB...0dB...+6dB (0...64...127)	40	O	O			O					●			O	O	O
		2D	1	01-7F	CHORUS PAN	L63...C...R63	40	O	O			O					O			O	O	X
		2E	1	00-7F	SEND CHORUS TO REVERB	-∞dB...0dB...+6dB (0...64...127)	00	O	O			O					O			O	O	X

TOTAL SIZE 0F

02	01	30	1	00-7F	CHORUS PARAMETER 11	Refer to Effect Parameter List	Depends on Chorus Type	O	O			O					●			O	O	O
		31	1	00-7F	CHORUS PARAMETER 12	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		32	1	00-7F	CHORUS PARAMETER 13	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		33	1	00-7F	CHORUS PARAMETER 14	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		34	1	00-7F	CHORUS PARAMETER 15	〃	Depends on Chorus Type	O	O			O					●			O	O	O
		35	1	00-7F	CHORUS PARAMETER 16	〃	Depends on Chorus Type	O	O			O					●			O	O	O

TOTAL SIZE 06

[MIDI] [Song Creator]

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	Voice		MIDI Reception					MIDI Transmission					PLAY		REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
02	01	40	2	00-7F 00-7F	VARIATION TYPE MSB VARIATION TYPE LSB	Refer to Effect Parameter List 〃	05 (=DELAY L, C, R) 00	O	O			O					●			O	O	O
		42	2	00-7F 00-7F	VARIATION PARAMETER 1 MSB VARIATION PARAMETER 1 LSB	〃	Depends on Variation Type	O	O			O					●			O	O	O
		44	2	00-7F 00-7F	VARIATION PARAMETER 2 MSB VARIATION PARAMETER 2 LSB	〃	Depends on Variation Type	O	O			O					●			O	O	O
		46	2	00-7F 00-7F	VARIATION PARAMETER 3 MSB VARIATION PARAMETER 3 LSB	〃	Depends on Variation Type	O	O			O					●			O	O	O
		48	2	00-7F 00-7F	VARIATION PARAMETER 4 MSB VARIATION PARAMETER 4 LSB	〃	Depends on Variation Type	O	O			O					●			O	O	O
		4A	2	00-7F 00-7F	VARIATION PARAMETER 5 MSB VARIATION PARAMETER 5 LSB	〃	Depends on Variation Type	O	O			O					●			O	O	O
		4C	2	00-7F 00-7F	VARIATION PARAMETER 6 MSB VARIATION PARAMETER 6 LSB	〃	Depends on Variation Type	O	O			O					●			O	O	O
		4E	2	00-7F 00-7F	VARIATION PARAMETER 7 MSB VARIATION PARAMETER 7 LSB	〃	Depends on Variation Type	O	O			O					●			O	O	O
		50	2	00-7F 00-7F	VARIATION PARAMETER 8 MSB VARIATION PARAMETER 8 LSB	〃	Depends on Variation Type	O	O			O					●			O	O	O
		52	2	00-7F 00-7F	VARIATION PARAMETER 9 MSB VARIATION PARAMETER 9 LSB	〃	Depends on Variation Type	O	O			O					●			O	O	O
		54	2	00-7F 00-7F	VARIATION PARAMETER 10 MSB VARIATION PARAMETER 10 LSB	Refer to Effect Parameter List	Depends on Variation Type	O	O			O					●			O	O	O
		56	1	00-7F	VARIATION RETURN	-∞dB...0dB...+6dB (0...64...127)	40	O	O			O					●			O	O	O
		57	1	01-7F	VARIATION PAN	L63...C...R63	40	O	O			O					O			O	O	X
		58	1	00-7F	SEND VARIATION TO REVERB	-∞dB...0dB...+6dB (0...64...127)	00	O	O			O					O			O	O	X
		59	1	00-7F	SEND VARIATION TO CHORUS	-∞dB...0dB...+6dB (0...64...127)	00	O	O			O					O			O	O	X
		5A	1	00-01	VARIATION CONNECTION	INSERTION, SYSTEM	00	O	O			O					●			O	O	O
		5B	1	00-7F	VARIATION PART NUMBER	Reception: Part1...16 (0...15) Transmission: Part1...16 (0...15) AD (64) OFF (127)	7F	O	O			O					●			O	O	O
		5C	1	00-7F	MW VARIATION CONTROL DEPTH	-64...0...+63	40	O	O			O					O			O	O	X
		5D	1	00-7F	BEND VARIATION CONTROL DEPTH	-64...0...+63	40	O	O			O					O			O	O	X
		5E	1	00-7F	CAT VARIATION CONTROL DEPTH	-64...0...+63	40	O	O			O					O			O	O	X
		5F	1	00-7F	AC1 VARIATION CONTROL DEPTH	-64...0...+63	40	O	O			O					O			O	O	X
		60	1	00-7F	AC2 VARIATION CONTROL DEPTH	-64...0...+63	40	O	O			O					O			O	O	X

TOTAL SIZE 21

02	01	70	1	00-7F	VARIATION PARAMETER 11	Refer to Effect Parameter List	Depends on Variation Type	O	O			O					●			O	O	O
		71	1	00-7F	VARIATION PARAMETER 12	〃	Depends on Variation Type	O	O			O					●			O	O	O
		72	1	00-7F	VARIATION PARAMETER 13	〃	Depends on Variation Type	O	O			O					●			O	O	O
		73	1	00-7F	VARIATION PARAMETER 14	〃	Depends on Variation Type	O	O			O					●			O	O	O
		74	1	00-7F	VARIATION PARAMETER 15	〃	Depends on Variation Type	O	O			O					●			O	O	O
		75	1	00-7F	VARIATION PARAMETER 16	〃	Depends on Variation Type	O	O			O					●			O	O	O

TOTAL SIZE 06

●: Transmitted via panel operations.

MIDI Parameter Change table (MULTI EQ)

Address (H)			Size (H)	Data (H)	Parameter	Description		[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
02	40	00	1	00-04	EQ TYPE	flat, jazz, pops, rock, classic	*The MULTI EQ Parameter cannot be reset to its factory setting with XG SYSTEM ON.	O	O	O					O					O	X	X
		01	1	34-4C	EQ GAIN1	-12...0...+12[dB]		O	O	O					●					O	X	X
		02	1	04-28	EQ FREQUENCY1	32...2.0k[Hz]		O	O	O					●					O	X	X
		03	1	01-78	EQ Q1	0.1...12.0		O	O	O					●					O	X	X
		04	1	00-01	EQ SHAPE1	shelving, peaking		O	O	O					O					O	X	X
		05	1	34-4C	EQ GAIN2	-12...0...+12[dB]		O	O	O					●					O	X	X
		06	1	0E-36	EQ FREQUENCY2	100...10.0k[Hz]		O	O	O					●					O	X	X
		07	1	01-78	EQ Q2	0.1...12.0		O	O	O					●					O	X	X
		08	1		NOT USED			-	-	-					-					-	-	-
		09	1	34-4C	EQ GAIN3	-12...0...+12[dB]		O	O	O					●					O	X	X
		0A	1	0E-36	EQ FREQUENCY3	100...10.0k[Hz]		O	O	O					●					O	X	X
		0B	1	01-78	EQ Q3	0.1...12.0		O	O	O					●					O	X	X
		0C	1		NOT USED			-	-	-					-					-	-	-
		0D	1	34-4C	EQ GAIN4	-12...0...+12[dB]		O	O	O					●					O	X	X
		0E	1	0E-36	EQ FREQUENCY4	100...10.0k[Hz]		O	O	O					●					O	X	X
		0F	1	01-78	EQ Q4	0.1...12.0		O	O	O					●					O	X	X
		10	1		NOT USED			-	-	-					-					-	-	-
		11	1	34-4C	EQ GAIN5	-12...0...+12[dB]		O	O	O					●					O	X	X
		12	1	1C-3A	EQ FREQUENCY5	0.5k...16.0k[Hz]		O	O	O					●					O	X	X
		13	1	01-78	EQ Q5	0.1...12.0		O	O	O					●					O	X	X
		14	1	00-01	EQ SHAPE5	shelving, peaking		O	O	O					O					O	X	X

TOTAL SIZE 15

●: Transmitted via panel operations.

About PLAY column:
Not available when Function → Utility → Parameter Lock is checked.

MIDI Parameter Change table (EFFECT2)

Address (H)			Size (H)	Data (H)	Parameter	Description		[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
03	n	00	2	00-7F 00-7F	INSERTION EFFECT TYPE MSB INSERTION EFFECT TYPE LSB	Refer to Effect Parameter List	*The EFFECT 2 Parameter cannot be reset to its factory setting with XG SYSTEM ON.	O	O	O					●					O	O	O
		02	1	00-7F	INSERTION EFFECT PARAMETER 1	〃		O	O	O					●					O	O	O
		03	1	00-7F	INSERTION EFFECT PARAMETER 2	〃		O	O	O					●					O	O	O
		04	1	00-7F	INSERTION EFFECT PARAMETER 3	〃		O	O	O					●					O	O	O
		05	1	00-7F	INSERTION EFFECT PARAMETER 4	〃		O	O	O					●					O	O	O
		06	1	00-7F	INSERTION EFFECT PARAMETER 5	〃		O	O	O					●					O	O	O
		07	1	00-7F	INSERTION EFFECT PARAMETER 6	〃		O	O	O					●					O	O	O
		08	1	00-7F	INSERTION EFFECT PARAMETER 7	〃		O	O	O					●					O	O	O
		09	1	00-7F	INSERTION EFFECT PARAMETER 8	〃		O	O	O					●					O	O	O
		0A	1	00-7F	INSERTION EFFECT PARAMETER 9	〃		O	O	O					●					O	O	O
		0B	1	00-7F	INSERTION EFFECT PARAMETER 10	〃		O	O	O					●					O	O	O
		0C	1	00-7F	INSERTION EFFECT PART NUMBER	Reception: Part1...16 (0...15) Transmission: Part1...16 (0...15) AD (64) OFF (127)		O	O	O					●					O	O	O
		0D	1	00-7F	MW INSERTION CONTROL DEPTH	-64...0...+63		O	O	O					O					O	O	X
		0E	1	00-7F	BEND INSERTION CONTROL DEPTH	-64...0...+63		O	O	O					O					O	O	X
		0F	1	00-7F	CAT INSERTION CONTROL DEPTH	-64...0...+63		O	O	O					O					O	O	X
		10	1	00-7F	AC1 INSERTION CONTROL DEPTH	-64...0...+63		O	O	O					O					O	O	X
		11	1	00-7F	AC2 INSERTION CONTROL DEPTH	-64...0...+63		O	O	O					O					O	O	X

TOTAL SIZE 12

		20	1	00-7F	INSERTION EFFECT PARAMETER 11	Refer to Effect Parameter List		O	O	O					●					O	O	O
		21	1	00-7F	INSERTION EFFECT PARAMETER 12	〃		O	O	O					●					O	O	O
		22	1	00-7F	INSERTION EFFECT PARAMETER 13	〃		O	O	O					●					O	O	O
		23	1	00-7F	INSERTION EFFECT PARAMETER 14	〃		O	O	O					●					O	O	O
		24	1	00-7F	INSERTION EFFECT PARAMETER 15	〃		O	O	O					●					O	O	O
		25	1	00-7F	INSERTION EFFECT PARAMETER 16	〃		O	O	O					●					O	O	O

TOTAL SIZE 6

Address (H)			Size (H)	Data (H)	Parameter	Description		[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
		30	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 1 MSB INSERTION EFFECT PARAMETER 1 LSB	Refer to Effect Parameter List		O	O	O					●					O	O	O
		32	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 2 MSB INSERTION EFFECT PARAMETER 2 LSB	〃		O	O	O					●					O	O	O
		34	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 3 MSB INSERTION EFFECT PARAMETER 3 LSB	〃		O	O	O					●					O	O	O
		36	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 4 MSB INSERTION EFFECT PARAMETER 4 LSB	〃		O	O	O					●					O	O	O
		38	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 5 MSB INSERTION EFFECT PARAMETER 5 LSB	〃		O	O	O					●					O	O	O
		3A	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 6 MSB INSERTION EFFECT PARAMETER 6 LSB	〃		O	O	O					●					O	O	O
		3C	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 7 MSB INSERTION EFFECT PARAMETER 7 LSB	〃		O	O	O					●					O	O	O
		3E	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 8 MSB INSERTION EFFECT PARAMETER 8 LSB	〃		O	O	O					●					O	O	O
		40	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 9 MSB INSERTION EFFECT PARAMETER 9 LSB	〃		O	O	O					●					O	O	O
		42	2	00-7F 00-7F	INSERTION EFFECT PARAMETER 10 MSB INSERTION EFFECT PARAMETER 10 LSB	〃		O	O	O					●					O	O	O

TOTAL SIZE 14

●: Transmitted via panel operations

The second byte of the address is considered as an Insertion effect number
n: insertion effect number

PSR-S750	n = 0~2
PSR-S950	n = 0~2

For effect types that do not require MSB, the Parameters for Address 02-0B will be received and the Parameters for Address 30-42 will not be received.
For effect types that require MSB, the Parameters for Address 30-42 will be received and the Parameters for Address 02-0B will not be received.
When bulk dumps that include Effect Type data are transmitted, the parameters for addresses 02-0B will always be transmitted.
For effects that require MSB however, when a bulk dump is received, the parameters for addresses 02-0B will not be received.

MIDI Parameter Change table (SPECIAL EFFECT)

PSR-S750	X
PSR-S950	O

Address (H)			Size (H)	Data (H)	Parameter	Description		[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
04	00	00	2	00-7F 00-7F	VOCAL HARMONY TYPE MSB VOCAL HARMONY TYPE LSB	Vocal Haomony (12), Synth Vocoder (13), Vocoder XG (89), Chordal XG (90), Detune XG (91), Chromatic XG (92), Thru (0...11, 14...88, 93...127)	*The SPECIAL EFFECT Parameter cannot be reset to its factory setting with XG SYSTEM ON.	X	O	O					●					O	O	O
		02	1	00-7F	VOCAL HARMONY PARAMETER 1			X	O	O					●					O	O	O
		03	1	00-7F	VOCAL HARMONY PARAMETER 2			X	O	O					●					O	O	O
		04	1	00-7F	VOCAL HARMONY PARAMETER 3			X	O	O					●					O	O	O
		05	1	00-7F	VOCAL HARMONY PARAMETER 4			X	O	O					●					O	O	O
		06	1	00-7F	VOCAL HARMONY PARAMETER 5			X	O	O					O					O	O	O
		07	1	00-7F	VOCAL HARMONY PARAMETER 6			X	O	O					O					O	O	O
		08	1	00-7F	VOCAL HARMONY PARAMETER 7			X	O	O					●					O	O	O
		09	1	00-7F	VOCAL HARMONY PARAMETER 8			X	O	O					●					O	O	O
		0A	1	00-7F	VOCAL HARMONY PARAMETER 9			X	O	O					●					O	O	O
		0B	1	00-7F	VOCAL HARMONY PARAMETER 10			X	O	O					O					O	O	O
		0C	1	00-7F	VOCAL HARMONY PART NUMBER	ON (64), OFF (0...63, 65...127)		X	O	O					●					O	O	O
TOTAL SIZE 0D																						
		14	1	00-7F	HARMONY CHANNEL	1...16 (0...15), OFF (127)		X	O	O					●					O	O	O
TOTAL SIZE 1																						
		20	1	00-7F	VOCAL HARMONY PARAMETER 11			X	O	O					●					O	O	O
		21	1	00-7F	VOCAL HARMONY PARAMETER 12			X	O	O					●					O	O	O
		22	1	00-7F	VOCAL HARMONY PARAMETER 13			X	O	O					●					O	O	O
		23	1	00-7F	VOCAL HARMONY PARAMETER 14			X	O	O					●					O	O	O
		24	1	00-7F	VOCAL HARMONY PARAMETER 15			X	O	O					●					O	O	O
		25	1	00-7F	VOCAL HARMONY PARAMETER 16			X	O	O					●					O	O	O
TOTAL SIZE 6																						
		26	1	00-7F	VOCAL HARMONY PARAMETER 17			X	O	O					●					O	O	O
		27	1	00-7F	VOCAL HARMONY PARAMETER 18			X	O	O					●					O	O	O
		28	1	00-7F	VOCAL HARMONY PARAMETER 19			X	O	O					●					O	O	O
		29	1	00-7F	VOCAL HARMONY PARAMETER 20			X	O	O					●					O	O	O
		2A	1	00-7F	VOCAL HARMONY PARAMETER 21			X	O	O					●					O	O	O
		2B	1	00-7F	VOCAL HARMONY PARAMETER 22			X	O	O					●					O	O	O
		2C	1	00-7F	VOCAL HARMONY PARAMETER 23			X	O	O					●					O	O	O
		2D	1	00-7F	VOCAL HARMONY PARAMETER 24			X	O	O					●					O	O	O
		2E	1	00-7F	VOCAL HARMONY PARAMETER 25			X	O	O					●					O	O	O
		2F	1	00-7F	VOCAL HARMONY PARAMETER 26			X	O	O					●					O	O	O
		30	1	00-7F	VOCAL HARMONY PARAMETER 27			X	O	O					●					O	O	O
		31	1	00-7F	VOCAL HARMONY PARAMETER 28			X	O	O					●					O	O	O
		32	1	00-7F	VOCAL HARMONY PARAMETER 29			X	O	O					●					O	O	O
		33	1	00-7F	VOCAL HARMONY PARAMETER 30			X	O	O					●					O	O	O
		34	1	00-7F	VOCAL HARMONY PARAMETER 31			X	O	O					●					O	O	O
		35	1	00-7F	VOCAL HARMONY PARAMETER 32			X	O	O					●					O	O	O
		36	1	00-7F	VOCAL HARMONY PARAMETER 33			X	O	O					●					O	O	O
		37	1	00-7F	VOCAL HARMONY PARAMETER 34			X	O	O					●					O	O	O
		38	1	00-7F	VOCAL HARMONY PARAMETER 35			X	O	O					●					O	O	O
		39	1	00-7F	VOCAL HARMONY PARAMETER 36			X	O	O					●					O	O	O
		3A	1	00-7F	VOCAL HARMONY PARAMETER 37			X	O	O					●					O	O	O
		3B	1	00-7F	VOCAL HARMONY PARAMETER 38			X	O	O					●					O	O	O
		3C	1	00-7F	VOCAL HARMONY PARAMETER 39			X	O	O					●					O	O	O
		3D	1	00-7F	VOCAL HARMONY PARAMETER 40			X	O	O					●					O	O	O
		3E	1	00-7F	VOCAL HARMONY PARAMETER 41			X	O	O					●					O	O	O
		3F	1	00-7F	VOCAL HARMONY PARAMETER 42			X	O	O					●					O	O	O
		40	1	00-7F	VOCAL HARMONY PARAMETER 43			X	O	O					●					O	O	O
		41	1	00-7F	VOCAL HARMONY PARAMETER 44			X	O	O					●					O	O	O
		42	1	00-7F	VOCAL HARMONY PARAMETER 45			X	O	O					●					O	O	O
		43	1	00-7F	VOCAL HARMONY PARAMETER 46			X	O	O					●					O	O	O
		44	1	00-7F	VOCAL HARMONY PARAMETER 47			X	O	O					●					O	O	O
		45	1	00-7F	VOCAL HARMONY PARAMETER 48			X	O	O					●					O	O	O
TOTAL SIZE 20																						
04	00	60	2	00-7F 00-7F	VOCAL EFFECT TYPE MSB VOCAL EFFECT TYPE LSB			X	O	O					●					O	O	O
		62	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 1 MSB VOCAL EFFECT PARAMETER 1 LSB			X	O	O					●					O	O	O
		64	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 2 MSB VOCAL EFFECT PARAMETER 2 LSB			X	O	O					●					O	O	O
		66	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 3 MSB VOCAL EFFECT PARAMETER 3 LSB			X	O	O					●					O	O	O
		68	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 4 MSB VOCAL EFFECT PARAMETER 4 LSB			X	O	O					●					O	O	O

Address (H)			Size (H)	Data (H)	Parameter	Description		[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
		6A	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 5 MSB VOCAL EFFECT PARAMETER 5 LSB			X	O		O				●					O	O	O
		6C	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 6 MSB VOCAL EFFECT PARAMETER 6 LSB			X	O		O				●					O	O	O
		6E	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 7 MSB VOCAL EFFECT PARAMETER 7 LSB			X	O		O				●					O	O	O
		70	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 8 MSB VOCAL EFFECT PARAMETER 8 LSB			X	O		O				●					O	O	O
		72	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 9 MSB VOCAL EFFECT PARAMETER 9 LSB			X	O		O				●					O	O	O
		74	2	00-7F 00-7F	VOCAL EFFECT PARAMETER 10 MSB VOCAL EFFECT PARAMETER 10 LSB			X	O		O				O					O	O	O
		76	1	00-7F	VOCAL EFFECT SWTCH	ON (1-127), OFF (0)		X	O		O				●					O	O	O
		77	1	00-7F	VOCAL EFFECT OUTPUT LEVEL			X	O		O				O					O	O	O

TOTAL SIZE 18

04	00	7A	1	00-7F	VOCAL EFFECT PARAMETER 11			X	O		O				●					O	O	O
		7B	1	00-7F	VOCAL EFFECT PARAMETER 12			X	O		O				●					O	O	O
		7C	1	00-7F	VOCAL EFFECT PARAMETER 13			X	O		O				●					O	O	O
		7D	1	00-7F	VOCAL EFFECT PARAMETER 14			X	O		O				●					O	O	O
		7E	1	00-7F	VOCAL EFFECT PARAMETER 15			X	O		O				●					O	O	O
		7F	1	00-7F	VOCAL EFFECT PARAMETER 16			X	O		O				●					O	O	O

TOTAL SIZE 6

●: Transmitted via panel operations

MIDI Parameter Change table (MULTI PART)

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
08	nn	00	1	00-20	ELEMENT RESERVE	0...32	part10, 26=0, other parts=2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		01	1	00-7F	BANK SELECT MSB	0...127	part10=7F, other parts=00	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		02	1	00-7F	BANK SELECT LSB	0...127	00	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		03	1	00-7F	PROGRAM NUMBER	1...128	00	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		04	1	00-0F, 7F	Rcv CHANNEL	1...16, OFF	Part No.	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		05	1	00-01	MONO/POLY MODE	MONO, POLY	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		06	1	00-02	SAME NOTE NUMBER KEY ON ASSIGN	SINGLE, MULTI, INST (for Drum)	01	O	X	O	X	X	O	X	X	X	X	O	X	O	X	X
		07	1	00-03	PART MODE	NORMAL, DRUM, DRUMS1...2	part10=02, other parts=00	O	X	O	X	X	X	X	●	X	●	●	X	O	X	O
		08	1	28-58	NOTE SHIFT	-24...0...+24[semitones]	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		09 0A	2	00-0F 00-0F	DETUNE	-12.8...0...+12.7[Hz] 1st bit3-0 -> bit7-4 2nd bit3-0 -> bit3-0	08 00	O	X	O	O	X	O	O	X	X	X	O	X	O	X	X
		0B	1	00-7F	VOLUME	0...127	64	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		0C	1	00-7F	VELOCITY SENSE DEPTH	0...127	40	O	X	O	O	X	X	O	●	O	X	O	X	O	O	O
		0D	1	00-7F	VELOCITY SENSE OFFSET	0...127	40	O	X	O	O	X	X	O	●	O	X	O	X	O	O	O
		0E	1	00-7F	PAN	RND, L63...C...R63	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		0F	1	00-7F	NOTE LIMIT LOW	C-2...G8	00	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		10	1	00-7F	NOTE LIMIT HIGH	C-2...G8	7F	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		11	1	00-7F	DRY LEVEL	0...127	7F	O	X	O	O	X	O	O	X	O	●	●	X	O	O	O
		12	1	00-7F	CHORUS SEND	0...127	00	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		13	1	00-7F	REVERB SEND	0...127	28	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		14	1	00-7F	VARIATION SEND	0...127	00	O	X	O	O	X	O	O	X	X	X	O	X	O	O	O
		15	1	00-7F	VIBRATO RATE	-64...0...+63	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		16	1	00-7F	VIBRATO DEPTH	-64...0...+63	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		17	1	00-7F	VIBRATO DELAY	-64...0...+63	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		18	1	00-7F	FILTER CUTOFF FREQUENCY	-64...0...+63	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		19	1	00-7F	FILTER RESONANCE	-64...0...+63	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		1A	1	00-7F	EG ATTACK TIME	-64...0...+63	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		1B	1	00-7F	EG DECAY TIME	-64...0...+63	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		1C	1	00-7F	EG RELEASE TIME	-64...0...+63	40	O	X	O	O	X	O	O	X	X	X	O	X	O	O	X
		1D	1	28-58	MW PITCH CONTROL	-24...0...+24[semitones]	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		1E	1	00-7F	MW LOW PASS FILTER CONTROL	-9600...0...+9450[cent]	40	O	X	O	O	X	X	O	●	O	X	O	X	O	O	O
		1F	1	00-7F	MW AMPLITUDE CONTROL	-100...0...+100[%]	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		20	1	00-7F	MW LFO PMOD DEPTH	0...127	0A	O	X	O	O	X	X	O	●	O	X	O	X	O	O	O
		21	1	00-7F	MW LFO FMOD DEPTH	0...127	00	O	X	O	O	X	X	O	●	O	X	O	X	O	O	O
		22	1	00-7F	MW LFO AMOD DEPTH	0...127	00	O	X	O	O	X	X	O	●	O	X	O	X	O	O	O
		23	1	28-58	BEND PITCH CONTROL	-24...0...+24[semitones]	42	O	X	O	O	X	O	O	X	X	X	O	X	O	X	X
		24	1	00-7F	BEND LOW PASS FILTER CONTROL	-9600...0...+9450[cent]	40	O	X	O	O	X	O	O	X	X	X	O	X	O	X	X
		25	1	00-7F	BEND AMPLITUDE CONTROL	-100...0...+100[%]	40	O	X	O	O	X	O	O	X	X	X	O	X	O	X	X
		26	1	00-7F	BEND LFO PMOD DEPTH	0...127	00	O	X	O	O	X	O	O	X	X	X	O	X	O	X	X
		27	1	00-7F	BEND LFO FMOD DEPTH	0...127	00	O	X	O	O	X	O	O	X	X	X	O	X	O	X	X
		28	1	00-7F	BEND LFO AMOD DEPTH	0...127	00	O	X	O	O	X	O	O	X	X	X	O	X	O	X	X

TOTAL SIZE 29

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	Panel (Right1/ Right2/ Left)
		30	1	00-01	Rcv PITCH BEND	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		31	1	00-01	Rcv CH AFTER TOUCH (CAT)	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		32	1	00-01	Rcv PROGRAM CHANGE	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		33	1	00-01	Rcv CONTROL CHANGE	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		34	1	00-01	Rcv POLY AFTER TOUCH (PAT)	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		35	1	00-01	Rcv NOTE MESSAGE	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		36	1	00-01	Rcv RPN	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		37	1	00-01	Rcv NRPN	OFF, ON	XGmode=01, GMmode=00	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X

MIDI Data Format / MIDI-Datenformat / Format des données MIDI / Formato de datos MIDI

[MIDI] [Song Creator]

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	Voice		MIDI Reception					MIDI Transmission					PLAY		REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	Panel (Right1/ Right2/ Left)
		38	1	00-01	Rcv MODULATION	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		39	1	00-01	Rcv VOLUME	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		3A	1	00-01	Rcv PAN	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		3B	1	00-01	Rcv EXPRESSION	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		3C	1	00-01	Rcv HOLD1	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		3D	1	00-01	Rcv PORTAMENTO	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		3E	1	00-01	Rcv SOSTENUTO	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		3F	1	00-01	Rcv SOFT PEDAL	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		40	1	00-01	Rcv BANK SELECT	OFF, ON	01	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		41	1	00-7F	SCALE TUNING C	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		42	1	00-7F	SCALE TUNING C#	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		43	1	00-7F	SCALE TUNING D	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		44	1	00-7F	SCALE TUNING D#	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		45	1	00-7F	SCALE TUNING E	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		46	1	00-7F	SCALE TUNING F	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		47	1	00-7F	SCALE TUNING F#	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		48	1	00-7F	SCALE TUNING G	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		49	1	00-7F	SCALE TUNING G#	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		4A	1	00-7F	SCALE TUNING A	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		4B	1	00-7F	SCALE TUNING A#	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		4C	1	00-7F	SCALE TUNING B	-64...0...+63[cent]	40	O	X	O	O	X	O	O	●	●	●	O	X	O	O	O
		4D	1	28-58	CAT PITCH CONTROL	-24...0...+24[semitones]	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		4E	1	00-7F	CAT LOW PASS FILTER CONTROL	-9600...0...+9450[cent]	40	O	X	O	O	X	X	O	X	O	X	O	X	O	O	X
		4F	1	00-7F	CAT AMPLITUDE CONTROL	-100...0...+100[%]	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		50	1	00-7F	CAT LFO PMOD DEPTH	0...127	00	O	X	O	O	X	X	O	X	O	X	O	X	O	O	X
		51	1	00-7F	CAT LFO FMOD DEPTH	0...127	00	O	X	O	O	X	X	O	X	O	X	O	X	O	O	X
		52	1	00-7F	CAT LFO AMOD DEPTH	0...127	00	O	X	O	O	X	X	O	X	O	X	O	X	O	O	X
		53	1	28-58	PAT PITCH CONTROL	-24...0...+24[semitones]	40	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		54	1	00-7F	PAT LOW PASS FILTER CONTROL	-9600...0...+9450[cent]	40	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		55	1	00-7F	PAT AMPLITUDE CONTROL	-100...0...+100[%]	40	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		56	1	00-7F	PAT LFO PMOD DEPTH	0...127	00	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		57	1	00-7F	PAT LFO FMOD DEPTH	0...127	00	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		58	1	00-7F	PAT LFO AMOD DEPTH	0...127	00	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		59	1	00-5F	AC1 CONTROLLER NUMBER	0...95	10	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		5A	1	28-58	AC1 PITCH CONTROL	-24...0...+24[semitones]	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		5B	1	00-7F	AC1 LOW PASS FILTER CONTROL	-9600...0...+9450[cent]	40	O	X	O	O	X	X	O	X	O	X	O	X	O	O	X
		5C	1	00-7F	AC1 AMPLITUDE CONTROL	-100...0...+100[%]	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		5D	1	00-7F	AC1 LFO PMOD DEPTH	0...127	00	O	X	O	O	X	X	O	X	O	X	O	X	O	X	X
		5E	1	00-7F	AC1 LFO FMOD DEPTH	0...127	00	O	X	O	O	X	X	O	X	O	X	O	X	O	O	X
		5F	1	00-7F	AC1 LFO AMOD DEPTH	0...127	00	O	X	O	O	X	X	X	O	X	X	O	X	O	O	O
		60	1	00-5F	AC2 CONTROLLER NUMBER	0...95	11	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		61	1	28-58	AC2 PITCH CONTROL	-24...0...+24[semitones]	40	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		62	1	00-7F	AC2 LOW PASS FILTER CONTROL	-9600...0...+9450[cent]	40	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		63	1	00-7F	AC2 AMPLITUDE CONTROL	-100...0...+100[%]	40	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		64	1	00-7F	AC2 LFO PMOD DEPTH	0...127	00	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		65	1	00-7F	AC2 LFO FMOD DEPTH	0...127	00	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		66	1	00-7F	AC2 LFO AMOD DEPTH	0...127	00	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
		67	1	00-01	PORTAMENTO SWITCH	OFF, ON	00	O (Except Organ Flutes)	X	O	O	X	X	O	X	X	X	O	X	O	O	X
		68	1	00-7F	PORTAMENTO TIME	0...127	00	O	X	O	O	X	X	O	X	X	X	O	X	O	O	X
		69	1	00-7F	PITCH EG INITIAL LEVEL	-64...0...+63	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		6A	1	00-7F	PITCH EG ATTACK TIME	-64...0...+63	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		6B	1	00-7F	PITCH EG RELEASE LEVEL	-64...0...+63	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		6C	1	00-7F	PITCH EG RELEASE TIME	-64...0...+63	40	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		6D	1	01-7F	VELOCITY LIMIT LOW	1...127	01	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
		6E	1	01-7F	VELOCITY LIMIT HIGH	1...127	7F	O	X	O	O	X	X	O	X	X	X	O	X	O	X	X
TOTAL SIZE		3F																				
		70	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		71	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		72	1	00-7F	EQ BASS GAIN	-12dB...+12dB	40	O	X	O	O	X	O	O	●	●	●	●	X	O	O	O
		73	1	00-7F	EQ TREBLE GAIN	-12dB...+12dB	40	O	X	O	O	X	O	O	●	●	●	●	X	O	O	O
TOTAL SIZE		04																				
		74	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		75	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		76	1	04-28	EQ BASS FREQUENCY	32...2.0k[Hz]	0C	O	X	O	O	X	X	O	●	O	●	O	X	O	O	O
		77	1	1C-3A	EQ TREBLE FREQUENCY	500...16.0k[Hz]	36	O	X	O	O	X	X	O	●	O	●	O	X	O	O	O
		78	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		79	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		7A	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		7B	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		7C	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		7D	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		7E	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
		7F	1		NOT USED		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
TOTAL SIZE		0C																				

●: Transmitted via panel operations

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
0A	nn	40	1	00-7F	MW OFFSET LEVEL CONTROL	-100 – 100[%]	40	O	-	O	O	X	X	O	●	O	X	O	X	O	O	O
		41	1	00-7F	BEND OFFSET LEVEL CONTROL	-100 – 100[%]	40	O	-	O	X	X	X	X	X	X	X	O	X	O	O	X
		42	1	00-7F	CAT OFFSET LEVEL CONTROL	-100 – 100[%]	40	O	-	O	O	X	X	O	X	O	X	O	X	O	O	X
		43	1	00-7F	PAT OFFSET LEVEL CONTROL	-100 – 100[%]	40	O	-	O	X	X	X	X	X	X	X	O	X	O	O	X
		44	1	00-7F	AC1 OFFSET LEVEL CONTROL	-100 – 100[%]	40	O	-	O	O	X	X	O	X	O	X	O	X	O	O	X
		45	1	00-7F	AC2 OFFSET LEVEL CONTROL	-100 – 100[%]	40	O	-	O	X	X	X	X	X	X	X	O	X	O	O	X

TOTAL SIZE 06

●: Transmitted via panel operations

nn = PART NUMBER

If there is a Drum Voice assigned to the part, the following parameters are ineffective.
- BANK SELECT LSB
- PORTAMENTO
- MONO/POLY
- SCALE TUNING
- POLY AFTER TOUCH
- PITCH EG

MIDI Parameter Change table (A/D PART)

PSR-S750	X
PSR-S950	O

Address (H)			Size (H)	Data (H)	Parameter	Description		[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
10	0n	00	1	00-01	INPUT GAIN	MIC, LINE	*The A/D PART parameter cannot be reset to its factory setting with XG System On.	X	X	X					X					X	X	X
		01	1	00-7F	BANK SELECT MSB	0...127		X	X	X					X					X	X	X
		02	1	00-7F	BANK SELECT LSB	0...127		X	X	X					X					X	X	X
		03	1	00-7F	PROGRAM NUMBER	1...128		X	X	X					X					X	X	X
		04	1	00-0F, 7F	Rcv CHANNEL	1...16, OFF		X	O	O					O					O	X	X
		05	1		NOT USED			-	-	-					-					-	-	-
		06	1		NOT USED			-	-	-					-					-	-	-
		07	1		NOT USED			-	-	-					-					-	-	-
		08	1		NOT USED			-	-	-					-					-	-	-
		09	1		NOT USED			-	-	-					-					-	-	-
		0A	1		NOT USED			-	-	-					-					-	-	-
		0B	1	00-7F	VOLUME	0...127		X	O	O					●					O	X	X
		0C	1		NOT USED			-	-	-					-					-	-	-
		0D	1		NOT USED			-	-	-					-					-	-	-
		0E	1	01-7F	PAN	L63...C...R63		X	O	O					●					O	X	X
		0F	1		NOT USED			-	-	-					-					-	-	-
		10	1		NOT USED			-	-	-					-					-	-	-
		11	1	00-7F	DRY LEVEL	0...127		X	O	O					●					O	X	X
		12	1	00-7F	CHORUS SEND	0...127		X	O	O					●					O	X	X
		13	1	00-7F	REVERB SEND	0...127		X	O	O					●					O	X	X
		14	1	00-7F	VARIATION SEND	0...127		X	O	O					●					O	X	X

TOTAL SIZE 15

n: A/D Part Number (0)

MIDI Parameter Change table (DRUM SETUP)

Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	[MIDI] Voice		[MIDI] MIDI Reception					[MIDI] MIDI Transmission					[Song Creator] PLAY		[Song Creator] REC
								Regular/Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
3n	rr	00	1	00-7F	PITCH COARSE	-64...0...+63	40	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		01	1	00-7F	PITCH FINE	-64...0...+63[cent]	40	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		02	1	00-7F	LEVEL	0...127	Depends on the note	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		03	1	00-7F	ALTERNATE GROUP	OFF, 1...127	Depends on the note	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		04	1	00-7F	PAN	RND, L63...C...R63	Depends on the note	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		05	1	00-7F	REVERB SEND	0...127	Depends on the note	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		06	1	00-7F	CHORUS SEND	0...127	Depends on the note	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		07	1	00-7F	VARIATION SEND	0...127	7F	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		08	1	00-01	KEY ASSIGN	SINGLE, MULTI	00	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		09	1	00-01	Rcv NOTE OFF	OFF, ON	Depends on the note	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		0A	1	00-01	Rcv NOTE ON	OFF, ON	01	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		0B	1	00-7F	LOW PASS FILTER CUTOFF FREQUENCY	-64...0...+63	40	O Drum only)	X	O (Available only for song parts)					O					O	X	X
		0C	1	00-7F	LOW PASS FILTER RESONANCE	-64...0...+63	40	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		0D	1	00-7F	EG ATTACK RATE	-64...0...+63	40	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		0E	1	00-7F	EG DECAY1 RATE	-64...0...+63	40	O (Drum only)	X	O (Available only for song parts)					O					O	X	X
		0F	1	00-7F	EG DECAY2 RATE	-64...0...+63	40	O (Drum only)	X	O (Available only for song parts)					O					O	X	X

TOTAL SIZE 10

								[MIDI]										[Song Creator]		
Address (H)			Size (H)	Data (H)	Parameter	Description	XG Default (H)	Voice		MIDI Reception					MIDI Transmission					PLAY	REC
								Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel (Right1/ Right2/ Left)
		20	1	00-7F	EQ BASS GAIN	-12...+12[dB]	40	X	X	X					O					X	X	X
		21	1	00-7F	EQ TREBLE GAIN	-12...+12[dB]	40	X	X	X					O					X	X	X
		22	1		NOT USED		-	-	-	-					-					-	-	-
		23	1		NOT USED		-	-	-	-					-					-	-	-
		24	1	04-28	EQ BASS FREQUENCY	32...2.0k[Hz]	0C	X	X	X					O					X	X	X
		25	1	1C-3A	EQ TREBLE FREQUENCY	500...16.0k[Hz]	36	X	X	X					O					X	X	X
		26	1		NOT USED		-	-	-	-					-					-	-	-
		27	1		NOT USED		-	-	-	-					-					-	-	-
		28	1		NOT USED		-	-	-	-					-					-	-	-
		29	1		NOT USED		-	-	-	-					-					-	-	-
		2A	1		NOT USED		-	-	-	-					-					-	-	-
		2B	1		NOT USED		-	-	-	-					-					-	-	-
		2C	1		NOT USED		-	-	-	-					-					-	-	-
		2D	1		NOT USED		-	-	-	-					-					-	-	-

TOTAL SIZE 0E

n: Drum Setup Number (0-1)
rr: note number (0D-5B)

In the following cases, the instrument will initialize all Drum Setups.
- XG SYSTEM ON received
- GM SYSTEM ON received
- GM LEVEL2 SYSTEM ON received
- GS RESET received
- DRUM SETUP RESET received (only when in XG mode)

[Note]
When a part to which a Drum Setup is assigned receives a program change, the assigned Drum Setup will be initialized.
If the same Drum Setup is assigned to two or more parts, changes in Drum Setup parameters (including program changes) will apply to all parts to which it is assigned.

System Exclusive Messages (1)

[GM1] ... GM Required Parameter
[GM2] ... GM Level2 Required Parameter

* Not received when Receive System Exclusive Message Parameters is set to off.
* Not transmitted when Transmit System Exclusive Message Parameters is set to off.

System Exclusive Messages (Universal Real Time Messages)

[MIDI] [Song Creator]

MIDI Event	Data Format	Voice		MIDI Reception					MIDI Transmission					PLAY		REC
		Regular/ Drum/ Organ Voice	Mic/ Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower	PLAY	REW	From panel operations
Master Volume [GM2]	F0 7F XN 04 01 SS TT F7 11110000 F0 = Exclusive status 01111111 7F = Universal Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00000100 04 = Sub-ID #1 = Device Control Message 00000001 01 = Sub-ID #2 = Master Volume 0sssssss SS = Volume LSB 0ttttttt TT = Volume MSB 11110111 F7 = End of Exclusive	O	X	O (Available for extra parts of a song)					O					O	O	X
Master Fine Tuning [GM2]	F0 7F XN 04 03 SS TT F7 11110000 F0 = Exclusive status 01111111 7F = Universal Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00000100 04 = Sub-ID #1 = Device Control Message 00000011 03 = Sub-ID #2 = Master Fine Tuning 0sssssss SS = Fine Tuning LSB 0ttttttt TT = Fine Tuning MSB 11110111 F7 = End of Exclusive	O	X	O (Available for extra parts of a song)					O					O	X	X
Master Coarse Tuning [GM2]	F0 7F XN 04 04 00 TT F7 11110000 F0 = Exclusive status 01111111 7F = Universal Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00000100 04 = Sub-ID #1 = Device Control Message 00000100 04 = Sub-ID #2 = Master Coarse Tuning 00000000 00 0ttttttt TT = Coarse Tuning MSB 11110111 F7 = End of Exclusive	O	X	O (Available for extra parts of a song)					O					O	X	X
Reverb Parameter [GM2]	F0 7F XN 04 05 01 01 01 01 PP VV ... F7 11000000 F0 = Exclusive status 01111111 7F = Universal Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00000100 04 = Sub-ID #1 = Device Control Message 00000101 05 = Sub-ID #2 = Global Parameter Control 00000001 01 = Slot path length = 1 00000001 01 = Parameter ID width = 1 00000001 01 = Value width = 1 00000001 01 = Slot path MSB = 1 00000001 01 = Slot path LSB = 1 (Reverb) 0ppppppp PP = Parameter to be controlled. 0vvvvvvv VV = Value for the Parameter. : : 11110111 F7 = End of Exclusive Parameter (pp) / Value (vv) / Display pp=0 Reverb Type: 0...8 — 0: RoomS, 1: RoomM, 2: RoomL, 3: HallM, 4: HallL (default), 8: GM Plate pp=1 Reverb Time: 0...127 — 0...11.0s	O	O	O					O					O	O	X
Chorus Parameter [GM2]	F0 7F XN 04 05 01 01 01 01 02 PP VV ... F7 11110000 F0 = Exclusive status 01111111 7F = Universal Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00000100 04 = Sub-ID #1 = Device Control Message 00000101 05 = Sub-ID #2 = Global Parameter Control 00000001 01 = Slot path length = 1 00000001 01 = Parameter ID width = 1 00000001 01 = Value width = 1 00000001 01 = Slot path MSB = 1 00000010 02 = Slot path LSB = 2 (Chorus) 0ppppppp PP = Parameter to be controlled. 0vvvvvvv VV = Value for the Parameter : : 11110111 F7 = End of Exclusive Parameter (pp) / Value (vv) / Display pp=0 Chorus Type: 0...5 — 0: GM Chorus1, 1: GM Chorus2, 2: GM Chorus3 (default), 3: GM Chorus4, 4: FB Chorus, 5: GM Flanger pp=1 Mod Rate: 0...127 — 0...15.5Hz pp=2 Mod Depth: 0...127 pp=3 Feedback: 0...127 pp=4 Send to Reverb: 0...127	O	O	O					O					O	O	X
Channel Pressure (Aftertouch) [GM2]	F0 7F XN 09 01 0M PP RR ... F7 11110000 F0 = Exclusive status 01111111 7F = Universal Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00001001 09 = Sub-ID #1 = Controller Destination Setting 00000001 01 = Sub-ID #2 = Controller Type: 01 (Channel Pressure) 0000mmmm 0M = MIDI Channel (00-0F) 0ppppppp PP = Controlled Parameter 0rrrrrrr RR = Data : : 11110111 F7 = End of Exclusive Make sure to set both the controlled parameter and the range. Parameters not set will be restored to their default values. Control Parameter (pp) / Data (RR) / Description / Default Value pp=00 Pitch Control: 28H–58H — -24...0...+24semitones — 40H pp=01 Filter Cutoff Control: 00H–FH — -9600...0...+9450cents — 40H pp=02 Amplitude Control: 00H–FH — -100...0...+100% — 40H pp=03 LFO Pitch Depth: 00H–FH — 0...127 — 00H pp=04 LFO Filter Depth: 00H–FH — 0...127 — 00H pp=05 LFO Amplitude Depth: 00H–FH — 0...127 — 00H	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X

MIDI Data Format / MIDI-Datenformat / Format des données MIDI / Formato de datos MIDI

MIDI Event	Data Format	[MIDI] Voice: Regular/ Drum/ Organ Voice	[MIDI] Voice: Mic/ Vocal Harmony	[MIDI] MIDI Reception: Song	[MIDI] MIDI Reception: Right1/ Right2/ Left	[MIDI] MIDI Reception: Keyboard	[MIDI] MIDI Reception: Style	[MIDI] MIDI Reception: Extra	[MIDI] MIDI Transmission: Right1/ Right2/ Left	[MIDI] MIDI Transmission: M.Pad	[MIDI] MIDI Transmission: Style	[MIDI] MIDI Transmission: Song	[MIDI] MIDI Transmission: Upper Lower	[Song Creator] PLAY: PLAY	[Song Creator] PLAY: REW	[Song Creator] REC: From panel operations
Controller (Control Change) [GM2]	F0 7F XN 09 03 0M CC PP RR ... F7 11110000 F0 = Exclusive status 01111111 7F = Universal Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00001001 09 = Sub-ID #1 = Controller Destination Setting 00000011 03 = Sub-ID #2 = Controller Type: 03 (Control Change) 0000mmmm 0M = MIDI Channel (00-0F) 0ccccccc CC = Controller Number (01H-1FH, 40H-5FH) 0ppppppp PP = Controlled Parameter 0rrrrrrr RR = Range ... ... 11110111 F7 = End of Exclusive Make sure to set both the controlled parameter and the range. Parameters not set will be restored to their default values. Control Parameter (pp) / Data (RR) / Description / Default Value pp=00 Pitch Control: 28H~58H, -24...0...+24semitones, 40H pp=01 Filter Cutoff Control: 00H~7FH, -9600...0...+9450cents, 40H pp=02 Amplitude Control: 00H~7FH, -100...0...+100%, 40H pp=03 LFO Pitch Depth: 00H~7FH, 0...127, 00H pp=04 LFO Filter Depth: 00H~7FH, 0...127, 00H pp=05 LFO Amplitude Depth: 00H~7FH, 0...127, 00H	O	X	O	X	X	X	X	X	X	X	O	X	O	X	X
Key-Based Instrument Control [GM2]	F0 7F XN 0A 01 0M KK CC VV ... F7 11110000 F0 = Exclusive status 01111111 7F = Universal Real Time 0xxxnnnn XN = When N is received N=0-F, whichever is received. X = ignored 00001010 0A = Sub-ID #1 = Key-Based Instrument Control 00000001 01 = Sub-ID #2 = Controller 0000mmmm 0M = MIDI Channel (00-0F) 0kkkkkkk KK = Key Number 0ccccccc CC = Controller Number 0vvvvvvv VV = Value ... ... 11110111 F7 = End of Exclusive Make sure to set both the controlled number and the value. Control Number (CC) / Value (VV) / Description / Default value CC=07H Volume: 00H~7FH, -100...0...+100%, 40H CC=0AH Pan: 00H~7FH (absolute), L63...C...R63, (Preset value) CC=5BH Reverb Send Level: 00H~7FH (absolute), 0...Max, (Preset value) CC=5DH Chorus Send Level: 00H~7FH (absolute), 0...Max, (Preset value)	O (Drum only)	X	O	X	X	X	X	X	X	X	O	X	O	X	X

System Exclusive Messages (Universal Non-Real Time Messages)

MIDI Event	Data Format	[MIDI] Voice: Regular/ Drum/ Organ Voice	[MIDI] Voice: Mic/ Vocal Harmony	[MIDI] MIDI Reception: Song	[MIDI] MIDI Reception: Right1/ Right2/ Left	[MIDI] MIDI Reception: Keyboard	[MIDI] MIDI Reception: Style	[MIDI] MIDI Reception: Extra	[MIDI] MIDI Transmission: Right1/ Right2/ Left	[MIDI] MIDI Transmission: M.Pad	[MIDI] MIDI Transmission: Style	[MIDI] MIDI Transmission: Song	[MIDI] MIDI Transmission: Upper Lower	[Song Creator] PLAY: PLAY	[Song Creator] PLAY: REW	[Song Creator] REC: From panel operations
GM1 System On [GM1] [GM2]	F0 7E XN 09 01 F7 11110000 F0 = Exclusive status 01111110 7E = Universal Non-Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00001001 09 = Sub-ID #1 = General MIDI Message 00000001 01 = Sub-ID #2 = General MIDI On 11110111 F7 = End of Exclusive	O	-	O (Available for extra parts of a song)					O					O	X	O
GM2 System On [GM2]	F0 7E XN 09 03 F7 11110000 F0 = Exclusive status 01111110 7E = Universal Non-Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00001001 09 = Sub-ID #1=General MIDI Message 00000011 03 = Sub-ID #2=General MIDI2 On 11110111 F7 = End of Exclusive	O	-	O (Available for extra parts of a song)					O					O	X	X
General MIDI System Off [GM1] [GM2]	F0 7E XN 09 02 F7 11110000 F0 = Exclusive status 01111110 7E = Universal Non-Real Time 0xxxnnnn XN = When N is received N = 0-F, whichever is received. X = ignored 00001001 09 = Sub-ID #1 = General MIDI Message 00000010 02 = Sub-ID #2 = General MIDI Off 11110111 F7 = End of Exclusive	O	-	O (Available for extra parts of a song)					O					O	X	X
Scale/ Octave Tuning [GM2]	F0 7E XN 08 08 JJ GG MM SS ... F7 11110000 F0 = Exclusive status 01111110 7E = Universal Non-Real Time 0xxxnnnn XN = When N is received N=0-F, whichever is received. X = ignored 00001000 08 = Sub-ID #1=MIDI Tuning Standard 00001000 08 = Sub-ID #2=scale/octave tuning 1byte form 0jjjjjjj JJ = Channel/option byte1 bits 0 to 1 = channel 15 to 16 bits 2 to 6 = reserved 0ggggggg GG = Channel byte2 - bits0 to 6 = channel 8 to 14 0mmmmmmm MM = Channel byte2 - bits0 to 6 = channel 1 to 7 0sssssss SS = 12byte tuning offset of 12 semitones from C to B 00H means -64cent 40H means 0cent 7FH means +63cent ... ... 11110111 F7 = End of Exclusive	O	X	O (Available for song parts)					O					O	X	X

System Exclusive Messages (2)

* Not received when Receive System Exclusive Message Parameters is set to off.
* Not transmitted when Transmit System Exclusive Message Parameters is set to off.

System Exclusive Messages (Style)

[MIDI]

MIDI Event	Data Format	Voice		MIDI Reception					MIDI Transmission				
		Regular/Drum/ Organ Voice	Mic/Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower
Section Control	F0 43 7E 00 ss dd F7 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 01111110 7E = Style 00000000 00 = 0sssssss ss = Switch No. 00H INTRO A 01H INTRO B 02H INTRO C 03H INTRO D 08H MAIN A 09H MAIN B 0AH MAIN C 0BH MAIN D 10H FILL IN AA 11H FILL IN BB 12H FILL IN CC 13H FILL IN DD 18H BREAK FILL 20H ENDING A 21H ENDING B 22H ENDING C 23H ENDING D 0ddddddd dd = Switch On/Off 00H (Off) 7FH (On) 11110111 F7 = End of Exclusive	-	-			O						●		
Tempo Control	F0 43 7E 01 t4 t3 t2 t1 F7 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 01111110 7E = Style 00000001 01 = 0ttttttt t4 = tempo4 0ttttttt t3 = tempo3 0ttttttt t2 = tempo2 0ttttttt t1 = tempo1 11110111	-	-			O						●		
Chord Control	F0 43 7E tt d1 d2 d3 d4 F7 Type1 (tt=02) 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 01111110 7E = Style 00000010 02 = type 1 0ddddddd d1 = chord root (cr) 0ddddddd d2 = chord type (ct) 0ddddddd d3 = bass note (bn) 0ddddddd d4 = bass type (bt) 11110111 F7 = End of Exclusive cr: Chord Root 0fffnnnn fff: b or #, nnnn: note (root) 0000nnnn 0n bbb 0001nnnn 1n bb 0010nnnn 2n b 0011nnnn 3n natural 0100nnnn 4n # 0101nnnn 5n ## 0110nnnn 6n ### 0fff0111 x7 B 0fff0000 x0 reserved 0fff0001 x1 C 0fff0010 x2 D 0fff0011 x3 E 0fff0100 x4 F 0fff0101 x5 G 0fff0110 x6 A ct : Chord Type 0 - 34, 127 00000000 00 0 Maj 00000001 01 1 Maj6 00000010 02 2 Maj7 00000011 03 3 Maj7(#11) 00000100 04 4 Maj(9) 00000101 05 5 Maj7(9) 00000110 06 6 Maj6(9) 00000111 07 7 aug 00001000 08 8 min 00001001 09 9 min6 00001010 0A 10 min7 00001011 0B 11 min7b5 00001100 0C 12 min(9) 00001101 0D 13 min7(9) 00001110 0E 14 min7(11) 00001111 0F 15 minMaj7 00010000 10 16 minMaj7(9) 00010001 11 17 dim 00010010 12 18 dim7 00010011 13 19 7th 00010100 14 20 7sus4 00010101 15 21 7b5 00010110 16 22 7(9) 00010111 17 23 7(#11) 00011000 18 24 7(13) 00011001 19 25 7(b9) 00011010 1A 26 7 b13) 00011011 1B 27 7(#9) 00011100 1C 28 Maj7aug 00011101 1D 29 7aug 00011110 1E 30 1+8 00011111 1F 31 1+5 00100000 20 32 sus4 00100001 21 33 1+2+5 00100010 22 34 cc bn: On Bass Note — Same as Chord root / 127: No bass chord bt: Bass Chord — Same as Chord type / 127: No bass chord * Not received when Chord System Exclusive Message Parameters is set to off. * Not received when Transmit Chord System Exclusive Message Parameters is set to off.	-	-			O						●		
	Type2 (tt=03) 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 01111110 7E = Style 00000011 03 = type 2 0ddddddd dd = note1 0ddddddd dd = note2 0ddddddd dd = note3 : : 0ddddddd dd = note10 11110111 F7 = End of Exclusive	-	-			O						X		

●: Transmitted via panel operations

System Exclusive Messages (XG)

[MIDI]

MIDI Event	Data Format	Voice		MIDI Reception					MIDI Transmission				
		Regular/Drum/ Organ Voice	Mic/Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower
XG Parameter Changes	F0 43 1n 4C hh mm ll dd ... F7 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 0001nnnn 1n = Device Number n = always 0 (when transmit), n = 0-F (when receive) 01001100 4C = Model ID 0hhhhhhh hh = Address High 0mmmmmmm mm= Address Mid 01111111 ll = Address Low 0ddddddd dd = Data : : 11110111 F7 = End of Exclusive	* Refer to XG Parameter Change Table.		O * Refer to XG Parameter Change Table.					O * Refer to XG Parameter Change Table.				
XG Bulk Dump	F0 43 0n 4C aa bb hh mm ll dd ... dd cc F7 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 0000nnnn 0n = Device Number n = always 0 (when transmit), n=0-F (when receive) 01001100 4C = Model ID 0aaaaaaa aa = Byte Count MSB 0bbbbbbb bb = Byte Count LSB 0hhhhhhh hh = Address High 0mmmmmmm mm= Address Mid 01111111 ll = Address Low 0ddddddd dd = Data : : 0ddddddd dd = Data 0ccccccc cc = Checksum 11110111 F7 = End of Exclusive	* Refer to XG Parameter Change Table.		O * Refer to XG Parameter Change Table.					O * Refer to XG Parameter Change Table.				
XG Parameter Request	F0 43 3n 4C hh mm ll F7 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 0011nnnn 3n = Device Number n = always 0 (when transmit), n = 0-F (when receive) 01001100 4C = Model ID 0hhhhhhh hh = Address High 0mmmmmmm mm= Address Mid 01111111 ll = Address Low 11110111 F7 = End of Exclusive	-	-	O * Refer to XG Parameter Change Table.					O * Refer to XG Parameter Change Table.				
XG Dump Request	F0 43 2n 4C hh mm ll F7 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 0010nnnn 2n = Device Number n = always 0 (when transmit), n = 0-F (when receive) 01001100 4C = Model ID 0hhhhhhh hh = Address High 0mmmmmmm mm= Address Mid 01111111 ll = Address Low 11110111 F7 = End of Exclusive	-	-	O * Refer to XG Parameter Change Table.					O ** Refer to XG Parameter Change Table.				

System Exclusive Messages (Clavinova compliance)

11110000 F0 = Exclusive status
01000011 43 = YAMAHA ID
01110011 73 = Clavinova ID
: :
11110111 F7 = End of Exclusive

[MIDI]

MIDI Event	Data Format	Voice		MIDI Reception					MIDI Transmission				
		Regular/Drum/ Organ Voice	Mic/Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower
Internal Clock	F0 43 73 01 02 F7 00000001 01 = Model ID (Clavinova common ID) 00000010 02 = Internal Clock Substatus	-	-			O					X		
External Clock	F0 43 73 01 03 F7 00000001 01 = Model ID (Clavinova common ID) 00000011 03 = External Clock Substatus	-	-			O					X		
Organ Flutes data Bulk Dump	F0 43 73 01 06 0B 00 00 01 06 0n [Bulk Data] sum 01H Model ID (Clavinova common ID) 06H Bulk ID 0BH Bulk No. (Organ Flutes data Bulk Dump) 00H, 00H, 01H, 06H Data Length:16bytes 1st Channel No. 0nH 2nd Footage [1'] 00 - 08H 3rd [1 1/3'] 00 - 08H 4th [1 3/5'] 00 - 08H 5th [2'] 00 - 08H 6th [2 2/3'] 00 - 08H 7th [4'] 00 - 08H 8th [5 1/3'] 00 - 08H 9th [8'] 00 - 08H 10th [16'] 00 - 08H 11th [Attack 2'] 00 - 08H 12th [Attack 2 2/3'] 00 - 08H 13th [Attack 4'] 00 - 08H 14th Settings [Attack Length] 00 - 08H 15th [Response] 00 - 08H 16th [Attack Mode] 00 - 01H 00H: Each, 01H: First 17th [Wave Variation] 00 - 01H 00H: Sine, 01H: Vintage 18th [Volume] 01 - 09H 19th [aux] 00H 20th [aux] 00H 21th [aux] 00H 22th [aux] 00H sum Check Sum = 0-sum (BULK DATA)	O (Organ Flute)	X	O	O	X	X	O	●	X	X	O	X

●: Transmitted via panel operations

System Exclusive Messages Special Operators (Vocal Harmony Additional Parameters)

Vocal Harmony

PSR-S750	X
PSR-S950	O

[MIDI]

MIDI Event	Data Format	Voice		MIDI Reception					MIDI Transmission				
		Regular/Drum/ Organ Voice	Mic/Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower
Vocal Harmony Vocoder Part (Harmony Part (Panel))	F0 43 73 01 11 0n 50 10 dd F7 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 01110011 73 = Clavinova ID 00000001 01 = Model ID (Clavinova common ID) 00010001 11 = Special Operators 0000nnnn 0n = Channel No. (Always 00) 01010000 50 = Vocal Harmony Additional Parameter Control No. 00010000 10 = Vocoder Part Parameter No. 0ddddddd dd = data 00H: Off 01H: Upper 02H: Lower 11110111 F7 = End of Exclusive	X	O			O					●		

●: Transmitted via panel operations

System Exclusive Messages (Others)

[MIDI]

MIDI Event	Data Format	Voice		MIDI Reception					MIDI Transmission				
		Regular/Drum/ Organ Voice	Mic/Vocal Harmony	Song	Right1/ Right2/ Left	Keyboard	Style	Extra	Right1/ Right2/ Left	M.Pad	Style	Song	Upper Lower
MIDI Master Tuning	F0 43 1n 27 30 00 00 0m 0l cc F7 11110000 F0 = Exclusive status 01000011 43 = YAMAHA ID 0001nnnn 1n n= always 0 (when transmit), n=0-F (when receive) 00100111 27 = Model ID of TG100 00110000 30 = Address High 00000000 00 = Address Mid 00000000 00 = Address Low 0000mmmm 0m = Master Tune MSB 00001111 0l = Master Tune LSB 0ccccccc cc = don't care 11110111 F7 = End of Exclusive	O	O			O					X		

Song System Exclusive Message List / Liste der System-Exclusive-Meldungen der Songs / Liste des messages exclusifs au système demorceaux / Lista de mensajes exclusivos del sistema de canciones

Data Format	Parameter	Description	Note

Guide

F0 43 73 01 1F 00 cc dd F7	Guide Mode	ccH = Part Select No 00H (TRACK1=ON, TRACK2=ON) 01H (TRACK1=OFF, TRACK2=ON) 02H (TRACK1=ON, TRACK2=OFF) 03H (TRACK1=OFF, TRACK2=OFF) ddH = Mode 00H=Guide OFF 01H=Follow Lights 02H=Any Key 03H=Karao-Key 06H=Your Tempo	Entered to the song from the [SONG CREATOR] > CHANNEL > SETUP display.

Score

F0 43 73 01 50 12 00 00 dd F7	Left Part indication On/Off	00H: OFF, 7FH: ON	Entered to the song from the [SONG CREATOR] > CHANNEL > SETUP display.
F0 43 73 01 50 12 00 01 dd F7	Right Part indication On/Off	00H: OFF, 7FH: ON	
F0 43 73 01 50 12 00 02 dd F7	Lyrics indication On/Off	00H: OFF, 7FH: ON	
F0 43 73 01 50 12 00 03 dd F7	Chord indication On/Off	00H: OFF, 7FH: ON	
F0 43 73 01 50 12 00 04 dd F7	N.Name indication On/Off	00H: OFF, 7FH: ON	
F0 43 73 01 50 12 00 05 dd F7	Size designation	00H: SMALL, 02H: LARGE	
F0 43 73 01 50 12 00 06 dd F7	Left Ch	00H~0FH=CH, 7EH=OFF, 7FH=AUTO	
F0 43 73 01 50 12 00 07 dd F7	Right Ch	00H~0FH=CH, 7EH=OFF, 7FH=AUTO	
F0 43 73 01 50 12 00 08 dd F7	Quantize triplet On/Off	00H: Triplet OFF, 7FH: Triplet ON	
F0 43 73 01 50 12 00 09 dd F7	Quantize	00H: quarter, 01H: eighth, 02H: sixteenth, 03H: thirty-second	
F0 43 73 01 50 12 00 0A dd F7	NoteName	00H: ABC, 01H: FixedDo, 02H: MovableDo	
F0 43 73 01 50 12 00 0B dd F7	Color Note	00H: OFF, 7FH: ON	

Style

F0 43 73 01 51 00 00 00 03 10 00 dd F7	STYLE SPLIT POINT	dd=STYLE SPLIT POINT (Note Number)	Entered to the song from the [SONG CREATOR] > CHANNEL > SETUP display.
F0 43 73 01 51 05 00 03 04 00 00 dd dd F7	STYLE NUMBER	dd dd = Style No.	Entered when recording.
F0 43 7E 00 ss dd F7	Section Control	Refer to the MIDI Data Format.	Entered when recording.

Song Meta Event List / Liste der Meta-Events der Songs / Liste des métaévénements des morceaux / Lista de meta-eventos de canciones

Data Format	Parameter	Description	Note
FF 05 len [Data]	Lyrics	len = Data length, [Data] = Lyrics Data	
FF 51 03 t1 t2 t3	Set Tempo	t1 t2 t3 = Tempo value B7 1B 00~01 D4 C0 (Tempo 5~500)	Entered when recording.
FF 58 04 nn dd cc bb	Beat	nn = Numerator dd = Denominator (2n) cc = MIDI clock per metronome click bb = Number of thirty-second notes in MIDI quarter note	Entered when recording.
FF 59 02 sf mi	Key Signature	sf = -7 – 7 mi = 0: Major key, 1: Minor key	Entered from the [Score] > SETUP display.

YAMAHA META EVENT

FF 7F 06 43 73 0A 00 07 dd	Score Start Bar	ddH: Start form this measure dd = -100 – 1, 1 – 100	Same as ScBar entered from the [SONG CREATOR] > SYS/EX. display.
FF 7F len 43 73 0D 01 [Data]	Keyboard Voice	Voice settings for RIGHT1, 2, and LEFT	Entered to the song from the [SONG CREATOR] > CHANNEL > SETUP display.

YAMAHA XF META EVENT

FF 7F 07 43 7B 01 cr ct bn bt	Chord Name	Refer to “Chord Control” in the MIDI Data Format (System Exclusive Messages).	Entered when recording.
FF 7F 05 43 7B 03 20 08	Phrase Mark	Used as a marker for each phrase when executing Phrase Mark repeat playback.	Used when performing the Phrase Mark repeat playback.
FF 7F 04 43 7B 04 dd	Phrase Max	Maximum Phrase Number.	
FF 7F 05 43 7B 0C rr ll	Guide Track Flag	Sets the TRACK 1 and TRACK 2 parameters on the [FUNCTION] > [SONG SETTING] display. rr = TRACK1 (0: OFF, 1: 1CH~16: 16CH) ll = TRACK2 (0: OFF, 1: 1CH~16: 16CH)	Entered when recording.
FF 7F len 43 7B 21 00 pp [Data]	Lyrics Bitmap	Specifies the background picture of the Lyrics display. pp = Display type (00H: Center, 01H: Tile) [Data] = File Path	Entered to the song from the [SONG CREATOR] > CHANNEL > SETUP display.

Lyrics Bitmap is not available for the PSR-S750.

YAMAHA [Digital Keyboard] Date : 26-Apr-2012
Model PSR-S950/S750 MIDI Implementation Chart Version : 1.00

Function...		Transmitted	Recognized	Remarks
Basic	Default	1 - 16	1 - 16	
Channel	Changed	1 - 16	1 - 16	
	Default	3	3	
Mode	Messages	X	X	
	Altered	**********	X	
Note		0 - 127	0 - 127	
Number : True voice		**********	0 - 127	
Velocity	Note ON	O 9nH,v=1-127	O 9nH,v=1-127	
	Note OFF	X 9nH,v=0	X	
After	Key's	X	O	
Touch	Ch's	X	O	
Pitch Bend		O	O 0 - 24 semi	
Control Change	0,32	O	O	Bank Select
	1,5,7,10,11	O	O	
	16	X	O	General Purpose Controller
	6,38	O	O	Data Entry
	64,65,66,67	O	O	
	71,72,73,74	O	O	Sound Controller
	80	O	O	
	84	O	O	Portamento Cntrl
	91,93,94	O	O	Effect Depth
	96,97	X	O	RPN Inc,Dec
	98,99	O	O	NRPN LSB,MSB
	100,101	O	O	RPN LSB,MSB
Prog Change : True #		O 0 - 127 **********	O 0 - 127	
System Exclusive		O	O	
Common	: Song Pos.	X	X	
	: Song Sel.	X	X	
	: Tune	X	X	
System	: Clock	O	O	
Real Time	: Commands	O	O	
Aux Mes- sages	: All Sound Off	X	O (120,126,127)	
	: Reset All Cntrls	X	O (121)	
	: Local ON/OFF	X	O (122)	
	: All Notes OFF	X	O (123-125)	
	: Active Sense	O	O	
	: Reset	X	X	

Notes:

Mode 1 : OMNI ON , POLY Mode 2 : OMNI ON ,MONO O : Yes
Mode 3 : OMNI OFF, POLY Mode 4 : OMNI OFF,MONO X : No