
Direct move

The direct move tab allows you to control easily the robot and also get states informations. You can also create and save position configuration on this tab.

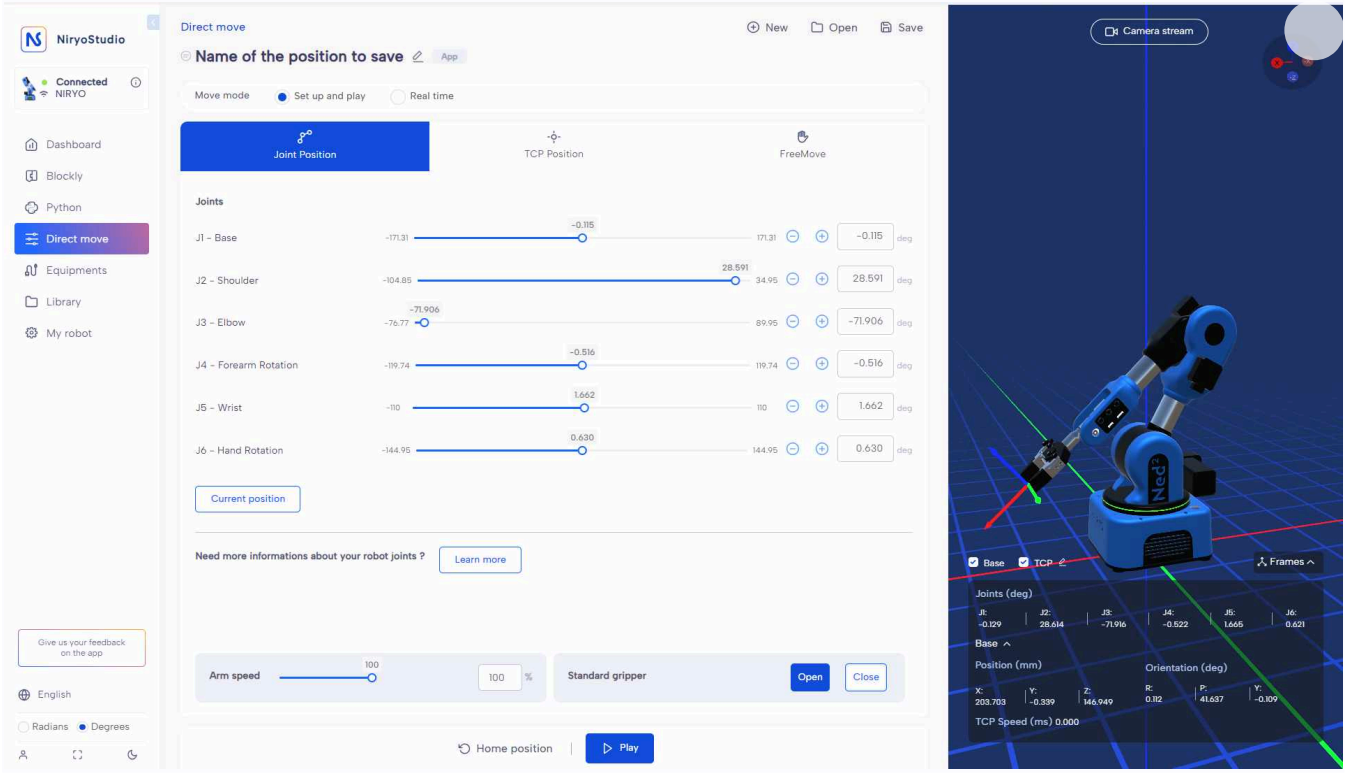

Top bar

- New : Open a New position configuration
- Open: Open a saved position configuration
- Save : Save the current position configuration (the position can then be used from programs directly)


There is 2 Movement mode available :

- **Set up and play :** You will have to set the desired value of joints/TCP position then click on the Play button to make the robot move

- **Real time :** The robot will immediately move when you change the values


Joint position

When you are in Joint position , you can directly change the angle value of each of the Ned2's joints.

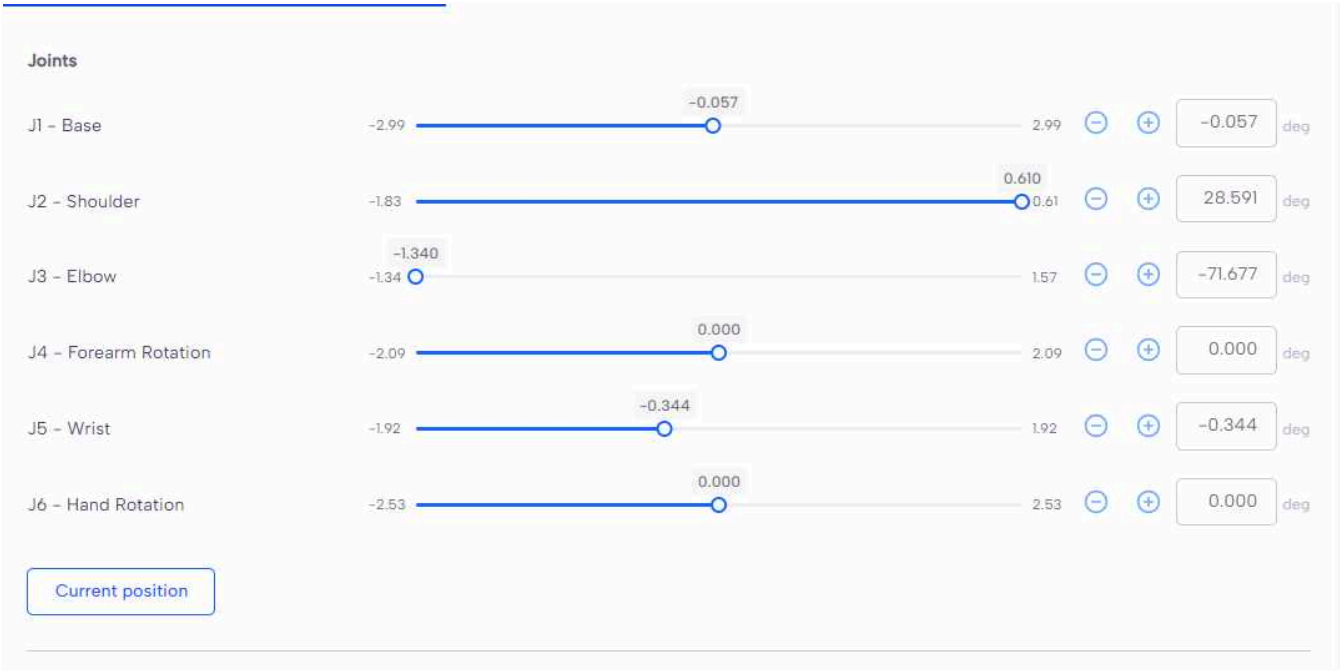


TCP position

When you are in TCP position , you change the TCP position with respect to the base frame of the robot. The robot will then compute inverse kinematic to be able to reach the given position. The computation of the inverse kinematic may not be possible for every situation. In that case , the robot will make a error sound and will not proceed the movement.

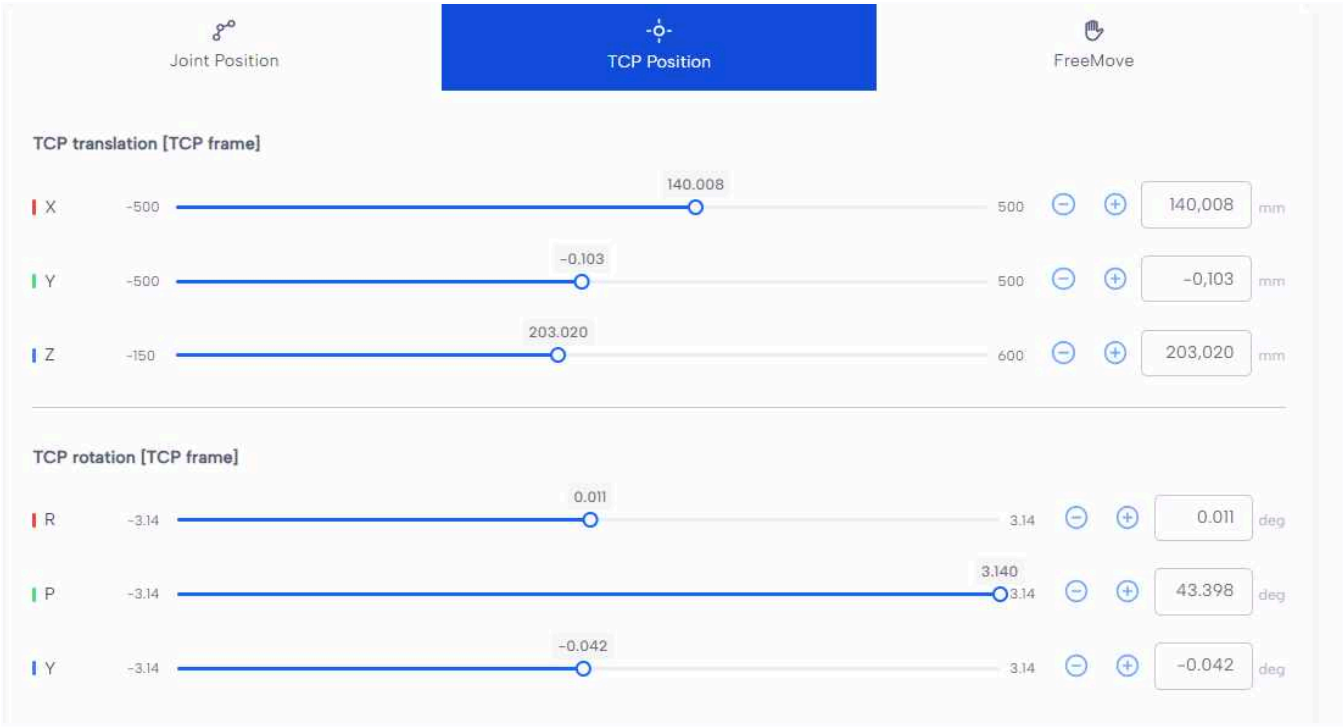

FreeMove

You can move freely the robot by holding the FREEMOTION button on the end effector of the robot. The FreeMove tab allow you to get information in real time about the states of the robot while your are moving it.

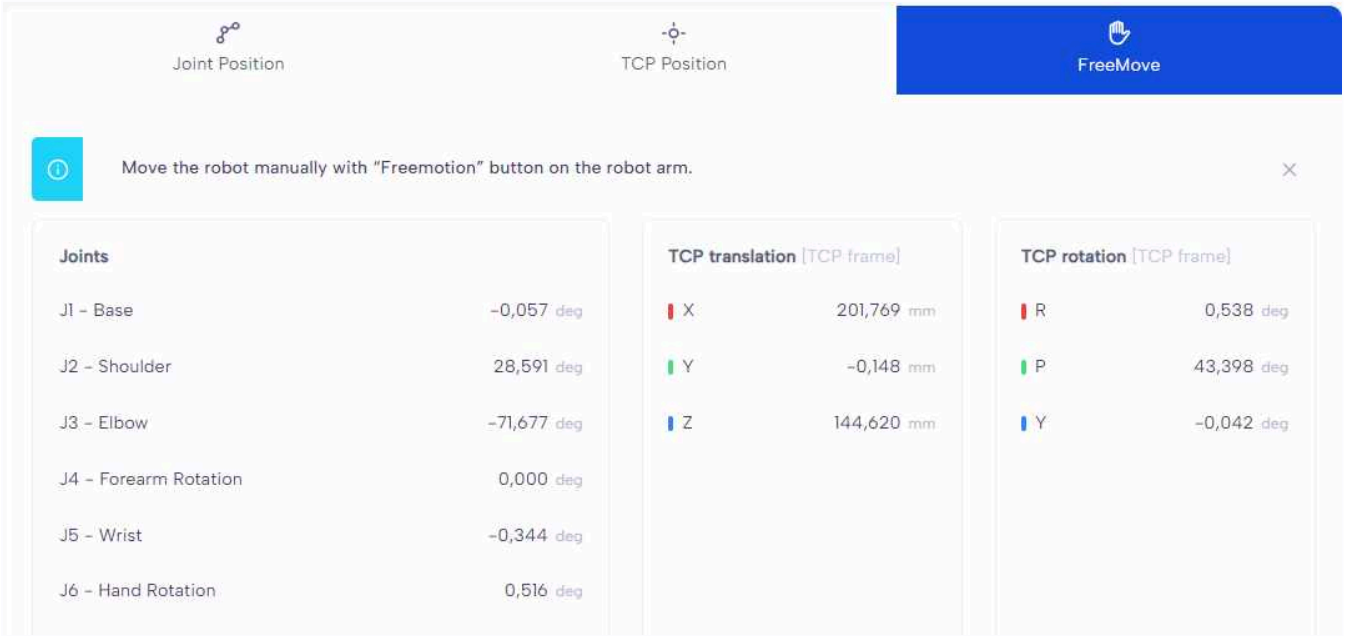

Bottom bar

On the bottom bar of the Direct move tab , you can also change the Ned2 speed ratio from 1% to 200%. If you have a tool equipped you also can quickly Open/close it.

Made with Docsie.io