
Equipment

Manage all your Niryo accessories and the robot I/O.

Accessories

On this tab of NiryoStudio you can control any accessories connected to the robot. Each one will have their specific parameters. Please check their dedicated documentation for more information on each.

> If you don't see the equipped accessories on this tab , you first have to run a **scan**.

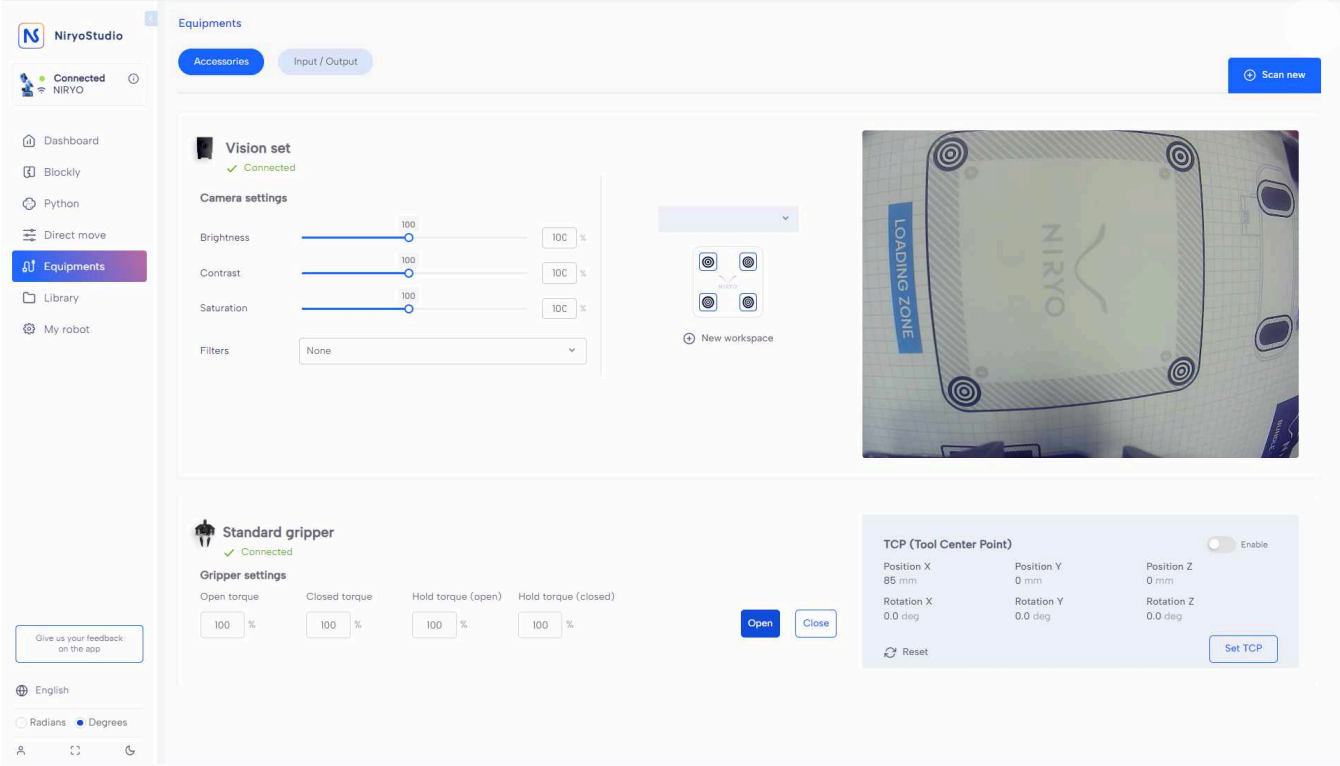


Input / Output


The Input / Output page is where you can control all the I/O of the Ned.

PIN state:

HIGH

LOW

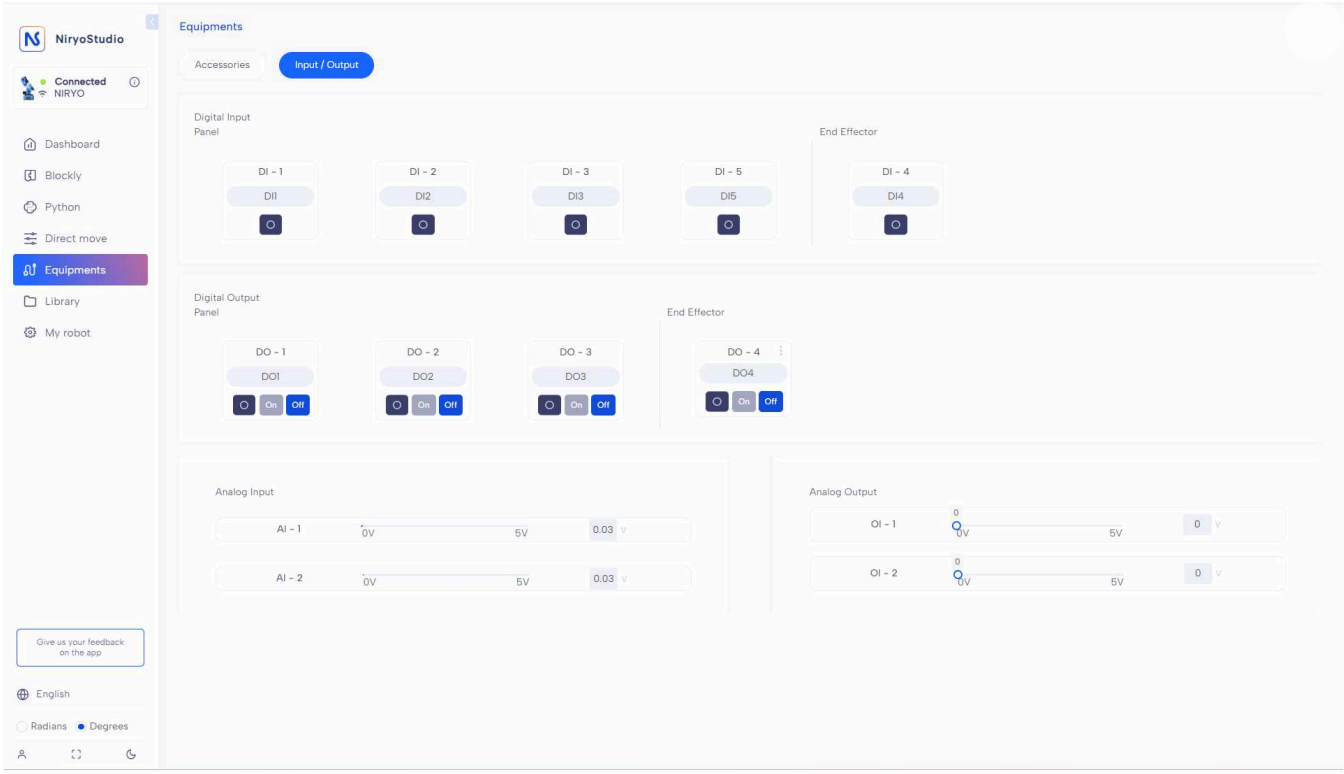

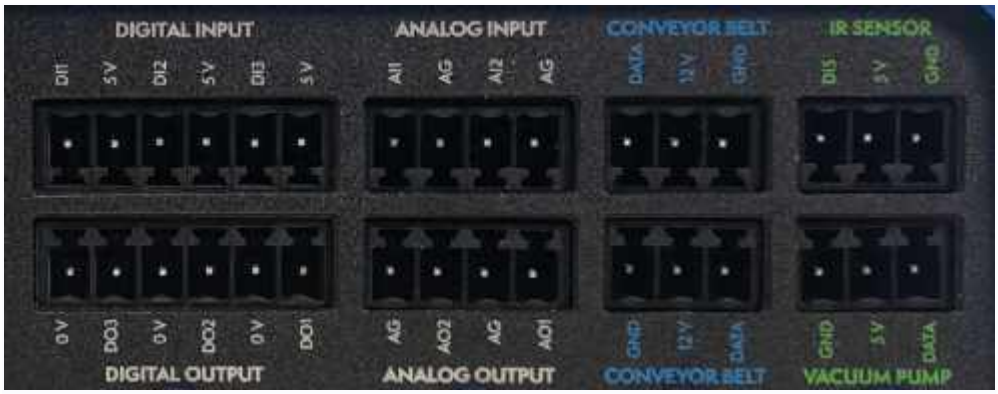

Digital Input

Digital inputs can receive 2 differents values: HIGH or LOW

> Digital Inputs are **readable** only

- **DI-1 | DI-2 | DI-3** are digital Inputs situated on the Ned's back panel that are **AVAILABLE** for any use.

- **DI-4** is digital input situated on the End Effector of the robot and is **RESERVED** for the Electromagnet of Niryo
- **DI-5** is a digital input situated on the Ned's back panel and is **RESERVED** for the IR sensor of Niryo.

Digital Output

Digital outputs can send 2 differents values: HIGH or LOW

> Digital Output are **readable and writable.**

- **DO-1 |DO-2 | DO-3** are digital Outputs situated on the Ned's back panel that are **AVAILABLE** for any use.
- **DO-4** is Digital Outputs situated on the End Effector of the Ned and is **RESERVED** for the Niryo's Electromagnet

Analog Input

Analog inputs can receive any float values from 0 to 5 .

> Analog Inputs are **readable** only

AI-1 | AI-2 are analog inputs situated on the Ned's back panel and support values up to 5V.

Analog Output

Analog outputs can send any float values from 0 to 5 .

> Analog Output are **readable and writable.**

AO-1 | AO-2 are analog outputs situated on the Ned's back panel and can send up to 5V.

Made with Docsie.io